

SERVICE MANUAL YB GENERATORS AND CONTROLS 200 kW to 350 kW

TABLE OF CONTENTS

TITLE	PAGE
Safety Precautions.....	3
Introduction.....	4
Generator.....	7
Generator Troubleshooting.....	9
Procedures.....	16
Control System.....	28
Control Operation.....	29
Engine Controls System Checkout Procedure.....	36
Controls Troubleshooting.....	38
Wiring Diagrams.....	45

ONAN RECOMMENDS THAT ALL SERVICE, INCLUDING INSTALLATION OF REPLACEMENT PARTS BE PERFORMED BY QUALIFIED PERSONNEL.

ABBREVIATIONS

To avoid repetitious use of terms or designations, abbreviations have been used as follows:

R-S-R-	Run-Stop-Remote switch on standard control panel.
R-R-R-	Run-Reset-Remote switch on Penn State control panels.
DDR	Depress during Reset. Instructions on Penn State control panels.
LOP	Low Oil Pressure
HET	High Engine Temperature
LET	Low Engine Temperature
O/S	Overspeed
O/C	Overcrank
R	Resistor/Rheostat
Q	Transistor
CR	Diode or Silicon Controlled Rectifier
K	Relay
VDC	Volts Direct Current
VAC	Volts Alternating Current
N.C.	Normally Closed
N.O.	Normally Open
TD	Time Delay

METRIC CONVERSION

Where applicable customary measurements are followed by metric equivalents. As an aid to interpretation, use the following list.

Customary Units	Metric	Symbol
° Fahrenheit	° Celsius	° C
inch	millimetre	mm
pound-foot	Newton metre	N.m

SAFETY PRECAUTIONS

The following symbols in this manual highlight conditions potentially dangerous to the operator, or equipment. Read this manual carefully. Know when these conditions can exist. Then, take necessary steps to protect personnel as well as equipment.

WARNING Onan uses this symbol throughout this manual to warn of possible personal injury.

CAUTION This symbol refers to possible equipment damage.

GUARD AGAINST ELECTRIC SHOCK

Disconnect electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling electrical equipment.

Disconnect batteries to prevent accidental engine start. Jewelry is a good conductor of electricity and should be removed before working on electrical equipment.

Use extreme caution when working on electrical components. High voltages cause injury or death.

Follow all state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician.

PROTECT AGAINST MOVING PARTS

Avoid moving parts of the unit. Loose jackets, shirts or sleeves should not be worn because of the danger of becoming caught in moving parts.

Make sure all nuts and bolts are secure. Keep power shields and guards in position.

If adjustments are made while the unit is running, use extreme caution around hot manifolds, moving parts, etc.

Do not work on this equipment when mentally or physically fatigued.

INTRODUCTION

FOREWORD

This manual provides troubleshooting and repair information for ONAN series YB generators. It is intended to provide the maintenance technician, serviceman or Onan distributor with a logical procedure to enable him to systematically locate and repair malfunctions in the generator and control systems. This information is not applicable to the prime mover; refer to the engine manufacturer's manual.

Repair information is not extensive because the plug-in solid-state printed circuit modules lend themselves more to replacement than repair. ONAN does not recommend repair of the printed circuit module, except at the factory and has initiated a return/exchange service obtainable through distributors, whereby faulty modules can be returned and exchanged for good units. For more information, contact your distributor or the ONAN service department.

This manual is divided into two sections as follows:

1. **GENERATOR** - Consists of general specifications on the YB generator, troubleshooting guides and procedures for testing and repairing the systems.
2. **CONTROLS** - Troubleshooting guides, procedures for testing and repairing the system are contained in this section. A description of the components and an analysis of the module circuitry are included.

TEST EQUIPMENT

Most of the tests outlined in this manual can be performed with—


- Simpson VOM. Model 260, 262 or equivalent.
- Kelvin or Wheatstone bridge ohmmeter.

CAUTION

An equivalent VOM to a Simpson 260 or 262 should have a maximum battery voltage of 6VDC (preferably with size AA batteries), on ranges other than R x 1. Some foreign made VOM's have outputs of 9VDC or 22.5VDC, which are sufficiently high to damage solid state devices.

CAUTION

Application of meters or high heat soldering irons to modules by other than qualified personnel can result in unnecessary and expensive damage.

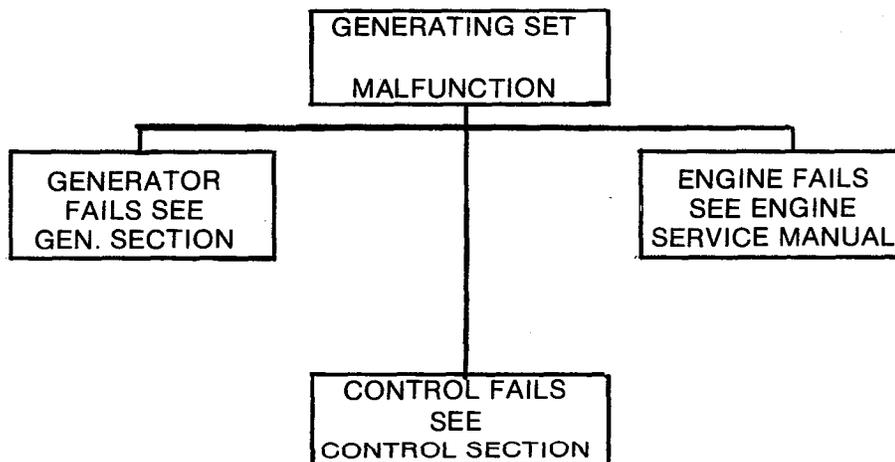

Rev.
7-75

TABLE 1. YB VOLTAGE/CURRENT OPTIONS

CODE 17	FREQ	MAXIMUM CURRENT (AMPERES)					PARALLEL WYE	SERIES WYE	SERIES DELTA	REF** XFMR TAP
		200 kW	230 kW	250 kW	300 kW	350 kW				
120/208	60 Hz	694	798	867	1041	1214	x			H3
127/220	60 Hz	656	755	820	984	1148	x			H4
139/240	60 Hz	601	692	752	902	1052	x			H5
240/416	60 Hz	347	399	434	520	607		x		H3
254/440	60 Hz	328	377	410	492	574		x		H4
277/480	60 Hz	301	346	376	451	526		x		H5
CODE 5D*										
120/240	60 Hz	601	692	752	902	1052			x	H5
CODE 6D*										
240/480	60 Hz	301	346	376	451	526			x	H5
CODE 7*										
220/380	60 Hz	380	437	475	570	665		x		H3
CODE 9X*										
347/600	60 Hz	241	277	301	361	421		x		H5
CODE 517		MAXIMUM CURRENT (AMPERES)								
		165 kW	190 kW	208 kW	250 kW	290 kW				
110/190	50 Hz	626	723	790	950	1102	x			H3
115/200	50 Hz	595	687	751	902	1046	x			H4
120/208	50 Hz	572	661	722	867	1006	x			H4
127/220	50 Hz	541	625	682	820	951	x			H5
220/380	50 Hz	313	362	395	475	551		x		H3
230/400	50 Hz	297	344	375	451	523		x		H4
240/416	50 Hz	286	330	361	434	503		x		H4
254/440	50 Hz	270	312	341	410	476		x		H5

* - Not reconnectible.

** - Adjust voltage regulator tap on TB21 terminal in control cabinet.

TABLE 2. POWER OPTIONS

GENERATOR SET	HERTZ	CONTINUOUS STANDBY		PRIME POWER	
		kW	kVA	kW	kVA
DYH	50	165	206.0	140	175.0
DFP	50	165	206.0	140	175.0
DYH	60	200	250.0	170	212.5
DFP	60	200	250.0	170	212.5
DFP	50	190	237.5	161.5	201.88
DFP	60	230	287.5	195.5	244.38
DYB	50	208	260.0	177	220.75
FT	50	208	260.0	177	220.75
DFM	50	208	260.0	177	220.75
DYB	60	250	312.5	212.5	265.6
FT	60	250	312.5	212.5	265.6
DFM	60	250	312.5	212.5	265.6
DFS	50	250	312.5	212.5	265.6
DFT	50	250	312.5	212.5	265.6
DHA	50	250	312.5	212.5	265.6
DFS	60	300	375.0	255	318.75
DFT	60	300	375.0	255	318.75
DHA	60	300	375.0	255	318.75
DFN	50	290	362.5	246.5	308.13
DFU	50	290	362.5	246.5	308.13
DHB	50	290	362.5	246.5	308.13
WF	50	290	362.5	246.5	308.13
DFN	60	350	437.5	297.5	372
DFU	60	350	437.5	297.5	372
DHB	60	350	437.5	297.5	372
WF	60	350	437.5	297.5	372

GENERATOR

GENERAL

The Onan series YB generator is a broad range, brushless, 12 wire, 3 phase unit. Available in the sizes specified in Table 1, it is reconnectable to any of the Code 17 or Code 517 voltage options. Output rating is 0.8 PF.

The broad range characteristic of the generator is that it can be operated continuously in a range of 120- to 139-volts per element and still maintain the same kilowatt output. However, because of prime mover restrictions, primary rating is generally considered to be 85 percent of continuous standby rating. See Table 2.

The 12 wires from the generator are connected to a bus-bar system, where by means of reconnection bars, the Table 1 Code 17 or Code 517 voltage options may be obtained. Refer to Figure 1. To complete the reconnection, a tap on a voltage reference transformer must be selected. Refer to Figure 2. Phase rotation is counterclockwise (ACB).

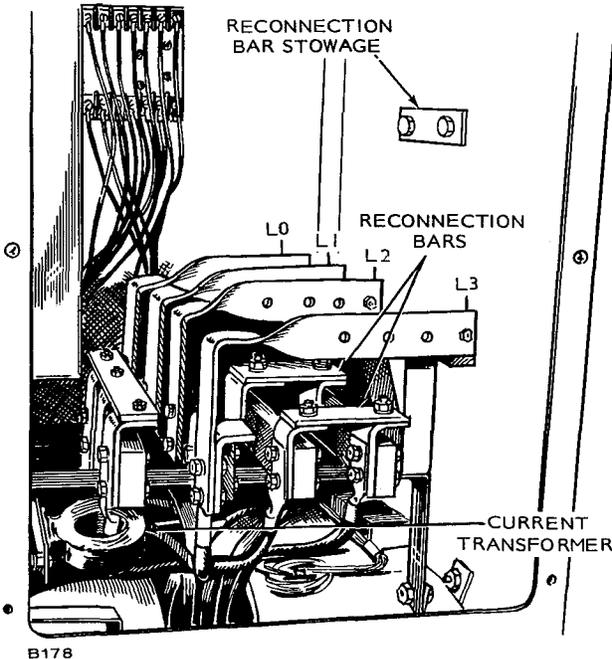


FIGURE 1. RECONNECTION SYSTEM

Excitation and voltage regulation are achieved as follows:

1. Single phase output generated in the main stator winding is fed to input of the voltage regulator (VR21).

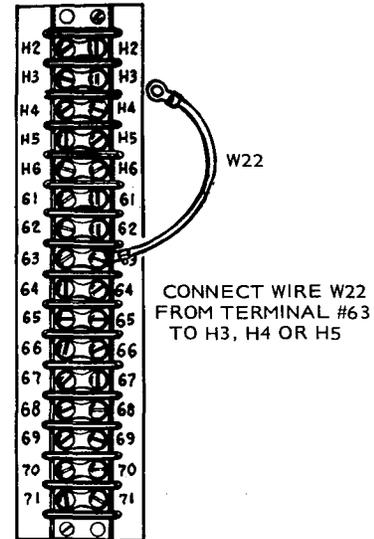


FIGURE 2. REFERENCE VOLTAGE

2. This input is compared with and adjusted to a reference voltage in the regulator, then rectified to DC.
3. This DC voltage is applied to the stationary field of the exciter which energizes the exciter armature and produces three phase AC which is again rectified to DC.
4. The DC voltage is then applied to the main alternator as field excitation current. Refer to Figure 3.

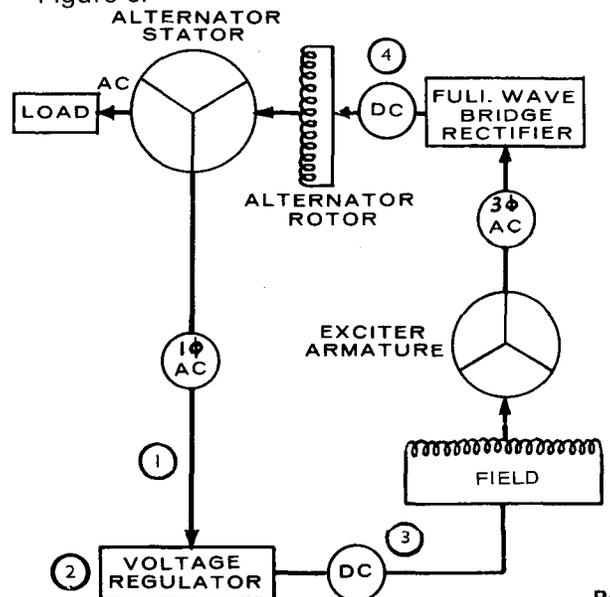


FIGURE 3. EXCITATION SCHEMATIC

Rev.
7-75

COMPONENT LOCATION

To expose the rotating rectifier assembly (Figure 7), remove grille section. Removal of the side panels behind the control box will allow access to the bus-bars and current transformers (Figure 1). Voltage regulator (VR21), reference transformer (T21), SCR (CR21) and reactor (L21) are located inside the control box. Two fasteners (1/4 turn) hold access doors closed. See Figure 4.

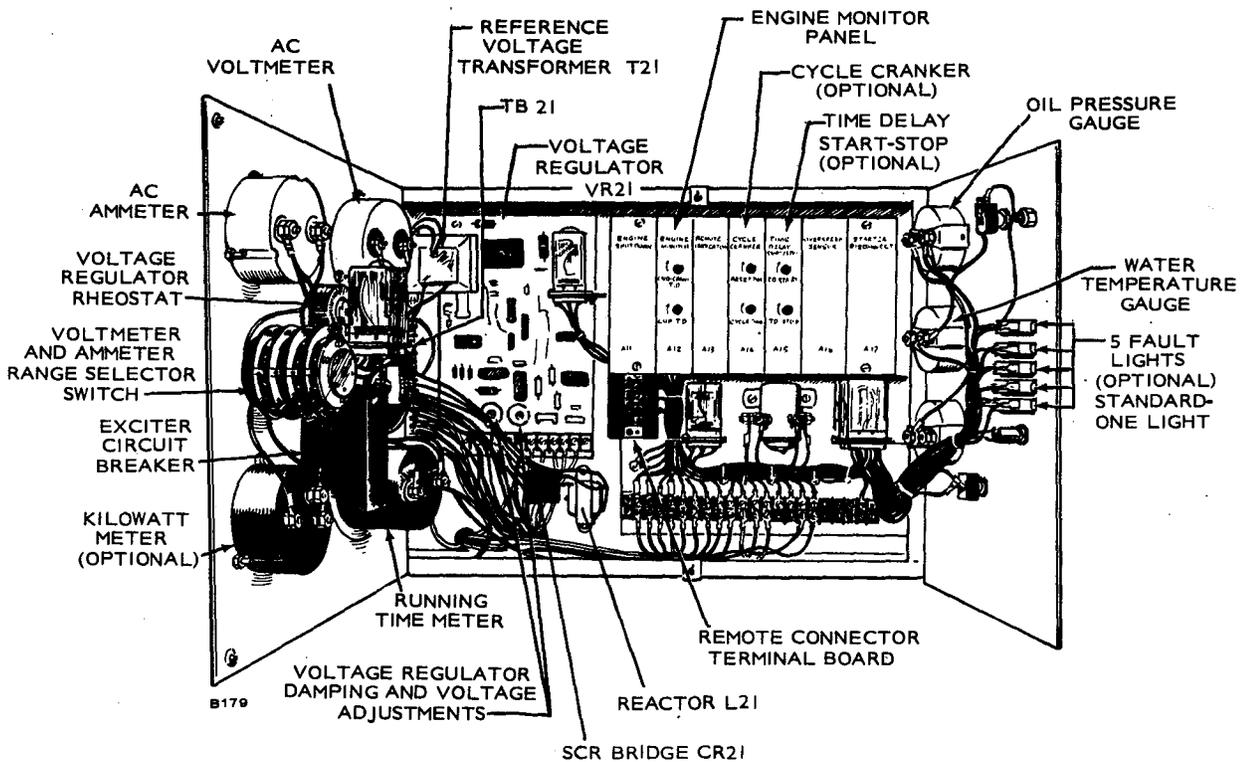


FIGURE 4. CONTROL PANEL INTERIOR

GENERATOR TROUBLESHOOTING

TROUBLESHOOTING GUIDES

- A. **CONDITION:** NO AC OUTPUT VOLTAGE
ENGINE RUNNING RATED RPM
- B. **CONDITION:** UNSTABLE OUTPUT
ENGINE RUNNING RATED RPM — NO FLUCTUATION
- C. **CONDITION:** OUTPUT VOLTAGE TOO HIGH OR LOW
- D. **CONDITION:** EXCITER CIRCUIT BREAKER TRIPS
- E. **CONDITION:** UNBALANCE GENERATOR OUTPUT VOLTAGE

PREPARATION

A few simple checks could expose the probable source of trouble or at least cut down on troubleshooting time.

1. Check all modifications, repairs, replacements performed since last satisfactory operation of set. A loose wire connection, overlooked when installing a replacement part could cause problems. An incorrect connection, an opened circuit breaker, a plug-in module or relay not secure are all potential malfunction areas to be eliminated by a visual check.
2. Unless absolutely sure that panel instruments are accurate, use portable test meters for troubleshooting.
3. Visually inspect components on VR21. Burned resistors, arcing tracks are all identifiable. Do not mark on printed circuit board modules with a pencil. Graphite lines are conductive and can cause short circuits between components.

The question and answer troubleshooting guide which follows, gives a step-by-step procedure for checking the generator, etc.

To use this guide, answer the question either “yes” or “no” then proceed to the step given in the column containing your answer. When a letter appears in the Method column, refer to that letter in the Procedure section for the recommended method for testing or repairing.


WARNING Disconnect battery cable before performing any checks on generator. Serious injury could result from inadvertent starting.

Rev.
7-75

TROUBLESHOOTING GUIDE


ITEM	A. CONDITION: NO AC OUTPUT VOLTAGE ENGINE RUNNING	YES	NO	METHOD
1.	Is the Exciter Circuit Breaker (CB21) on the meter panel in the ON position?	3	2	
2.	Switch CB21 to the ON position. Does the AC voltage build up? If voltage builds up but is high, low or unstable, or causes CB21 to trip, refer to section B, C or D of the troubleshooting guide.	—	3	
3.	Is the AC voltage measured at terminals 1 and 2 on voltage regulator (VR21) printed circuit board 5-10 volts?	6	4	
4.	Is the AC voltage measured at terminals 11 and 12 on VR21 5-10 volts?	5	7	
5.	Replace reactor assembly (L21).	—	—	
6.	Is the DC voltage measured at terminals + and - on Rectifier Bridge (CR21) 5-10 volts?	15	11	
7.	Shut down generator set. Check continuity between terminal 2 on VR21 and T8 on generator bus-bar; between terminal 1 on VR21 and T7 on generator bus-bar. Is there continuity between these connections: VR21-2 to T8 VR21-1 to T7	14 14	10 8	
8.	If discontinuity exists between VR21-1 and T7 (CB21-ON) apply a shorting jumper across CB21. Is continuity obtained?	9	10	
9.	Replace CB21.	—	—	
10.	Check for loose or broken wires on VR21, CR21, reference voltage transformer (T21), generator bus-bars and terminal Board (TB) 21 in control box. Secure or repair where necessary. If repairs have been made, restart engine. Does AC voltage now build up?	—	14	
11.	Are diodes CR1, CR2 and CR3 on CR21 assembly good? (See method D in Procedure section for checking diodes.) If faulty diode is located, replace CR21.	12	—	D
12.	Are scr's 4 and 5 in CR21 good? (See method D in Procedure section for checking diodes.) If faulty SCR's located, replace CR21.	13	—	D
13.	Fault probably lies with a defective component on VR21. Replace VR21.	—	—	
14.	Start engine. Place CB21 in OFF position. Using method prescribed under "A" in Procedure section, flash the exciter field to restore residual magnetism. Place CB21 ON. Does the AC output voltage build up?	—	15	A
15.	Shut off engine. Is the exciter field winding OK?	16	—	H
16.	Are the rotating diodes CR1 through CR6 on the exciter rotor OK?	17	—	C
17.	Is the main generator field winding OK?	18	—	E
18.	Is the exciter rotor winding OK?	19	—	G
19.	Are the generator stator windings OK?	13	—	F

A.

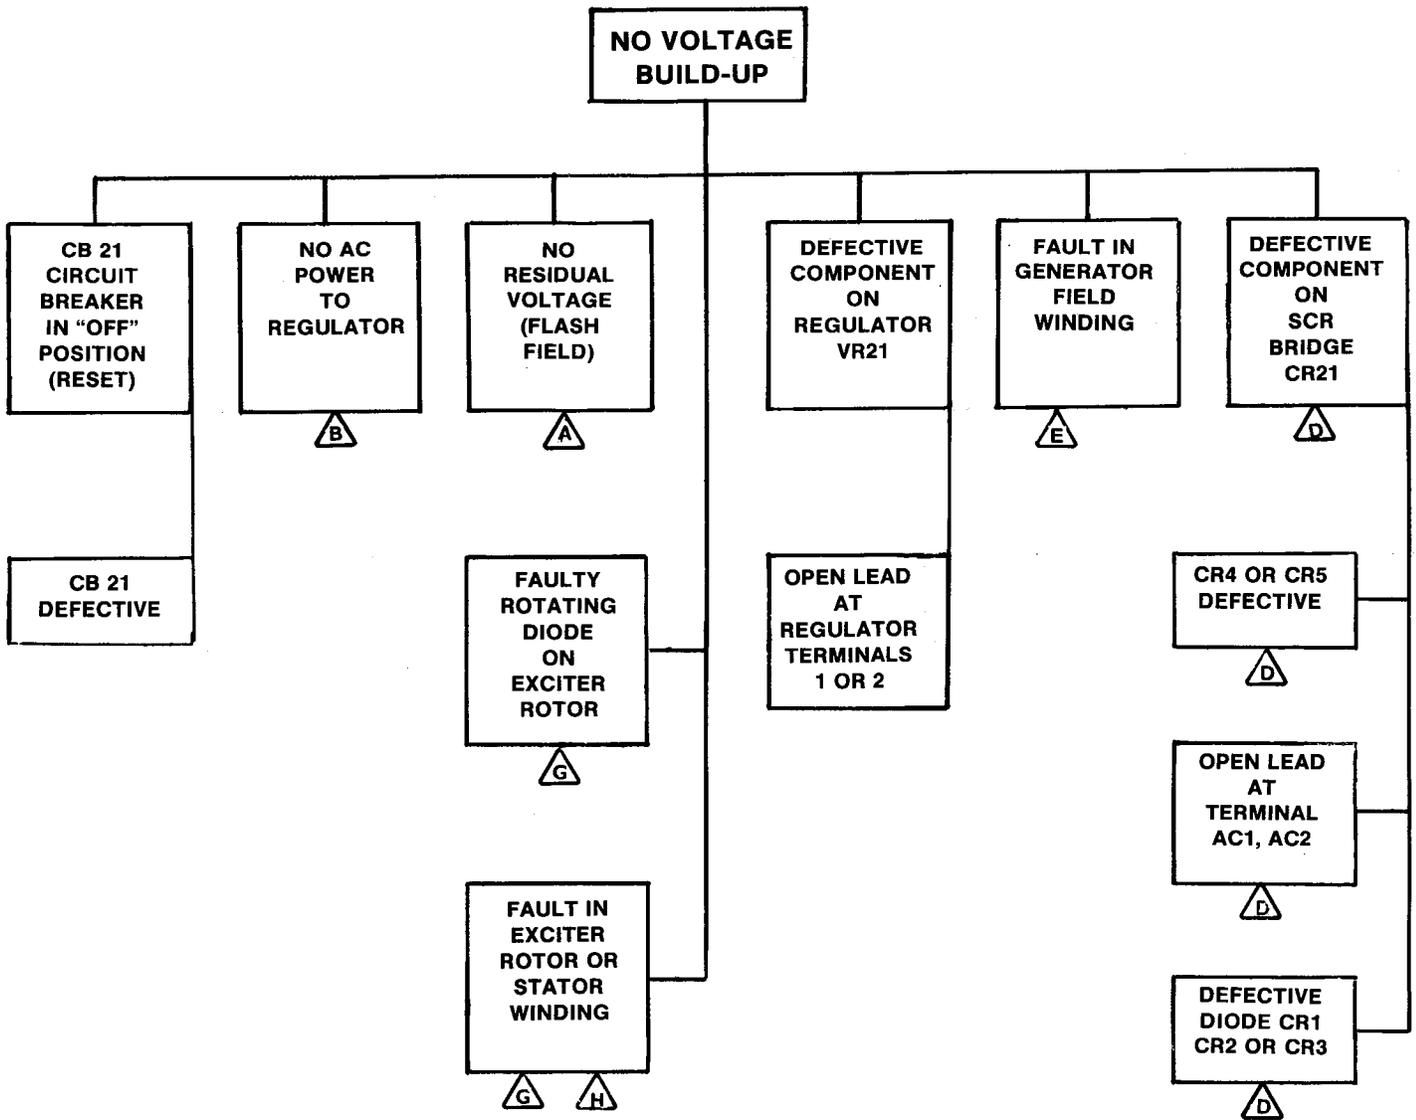

NOTE Whenever a letter appears near the box, a separate procedure, corresponding to that letter, appears at the end of this section.


ITEM	B. CONDITION: UNSTABLE OUTPUT ENGINE RUNNING 1800 RPM — NO FLUCTUATION	YES	NO	METHOD
1.	Does adjustment of R26 (damping control potentiometer) on VR21 stabilize generator voltage?	—	2	K
2.	Are there any loose or broken wires or connections at VR21 terminals?	—	3	
3.	Replace VR21.	—	—	
ITEM	C. CONDITION: OUTPUT VOLTAGE TOO HIGH OR LOW	YES	NO	METHOD
1.	Does adjustment of R21 Voltage adjust knob on the meter panel correct voltage level?	—	2	
2.	Does adjustment of R18 potentiometer on VR21 correct voltage level?	—	—	K
3.	Are rotating diodes heat sink mounting screw insulators OK?	—	—	
	If generator output voltage has been optionally reconnected at the bus, consider the following —			
4.	Is the reference transformer (T21) tap correctly connected on TB21?	5	—	I
5.	Are the reconnection bars correctly connected and secure at the generator bus?	6	—	I
6.	Replace VR21.	—	—	—

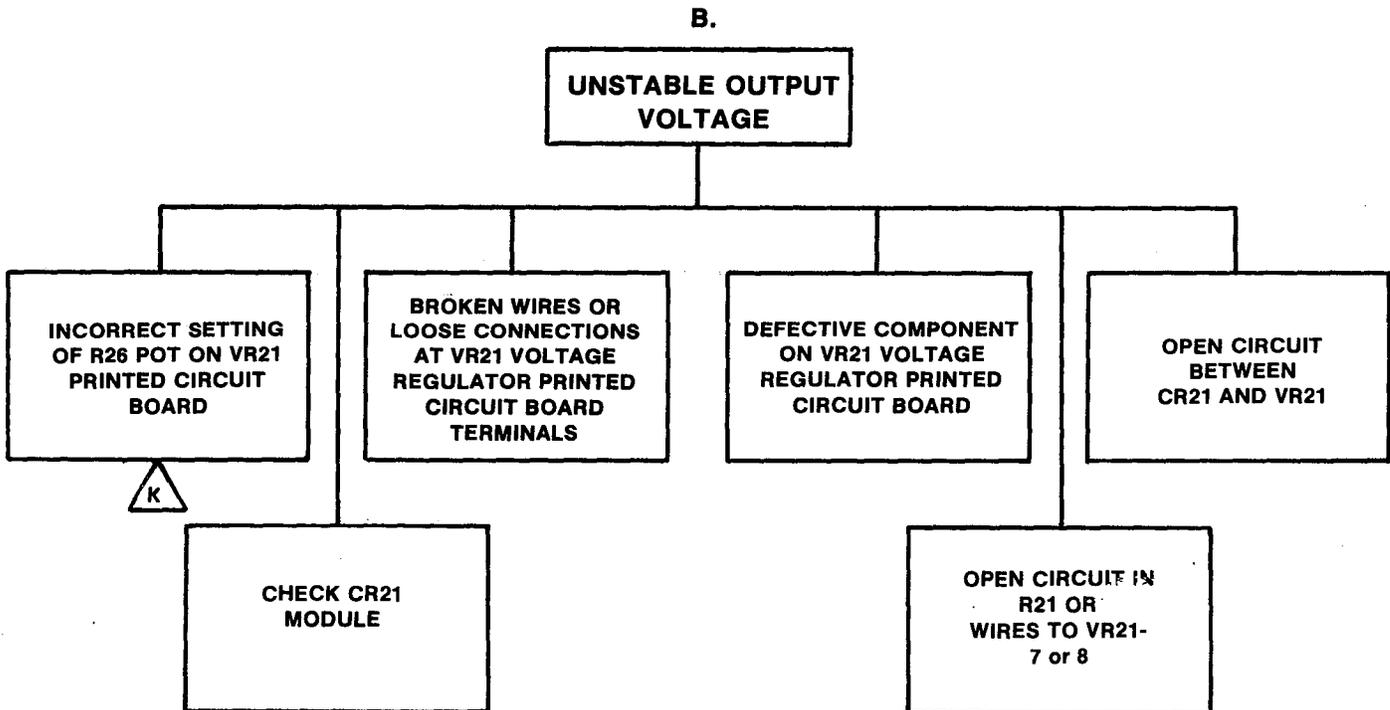

NOTE Whenever a letter appears near the box, a separate procedure, corresponding to that letter, is given at the end of this section.

Rev.
7-75


C.

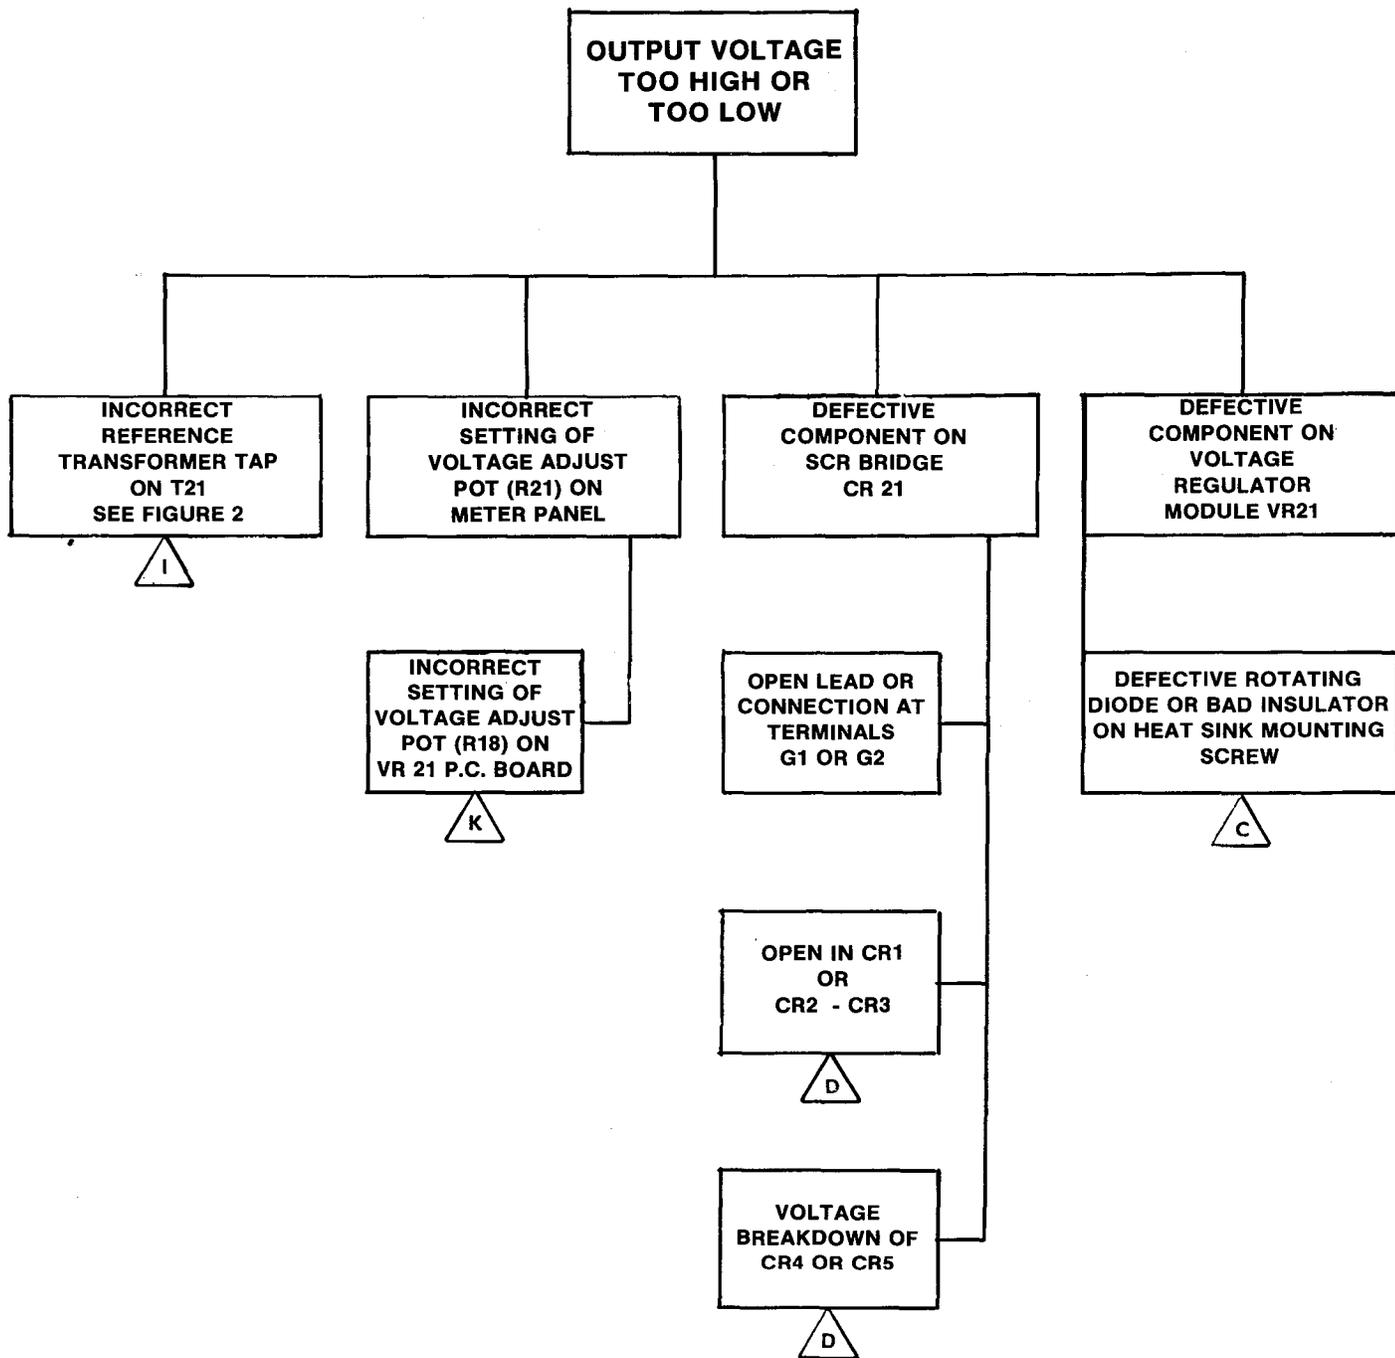

NOTE Whenever a letter appears near the box, a separate procedure, corresponding to that letter, is given at the end of this section.


ITEM	D. CONDITION: EXCITER CIRCUIT BREAKER TRIPS	YES	NO	METHOD
1.	Does AC output build up to 150% or more of rated voltage before CB21 trips?	2	6	
2.	Are there loose or broken terminals or connections at VR21?	—	3	
3.	Is diode CR3 (connected between + and - in CR21 rectifier assembly) OK?	4	—	D
4.	Are the reference voltage transformer (T21) windings and connections OK?	5	—	
5.	Replace VR21.	—	—	
6.	Does AC output build up to rated value before tripping CB21?	7	12	
7.	Are the rotating diodes CR1 through CR6 on the exciter rotor OK?	8	—	C
8.	Is the exciter stator winding OK?	9	—	H
9.	Is the generator main field winding OK?	10	—	E
10.	Is the exciter rotor winding OK?	11	—	G
11.	Replace CB21 circuit breaker.	—	—	—
12.	Test CR21 to method D. Is CR21 OK?	11	13	D
13.	Replace CR21.	—	—	
ITEM	E. CONDITION: UNBALANCED GENERATOR OUTPUT VOLTAGE	YES	NO	METHOD
1.	Remove load from generator terminals. Is output still unbalanced?	2	4	
2.	Are generator leads properly connected or grounded?	3	—	
3.	Is generator stator winding continuous?	4	—	F
4.	Is grounding procedure of generator and load correct?	5	—	
5.	Check for ground faults on load.	—	—	

D.

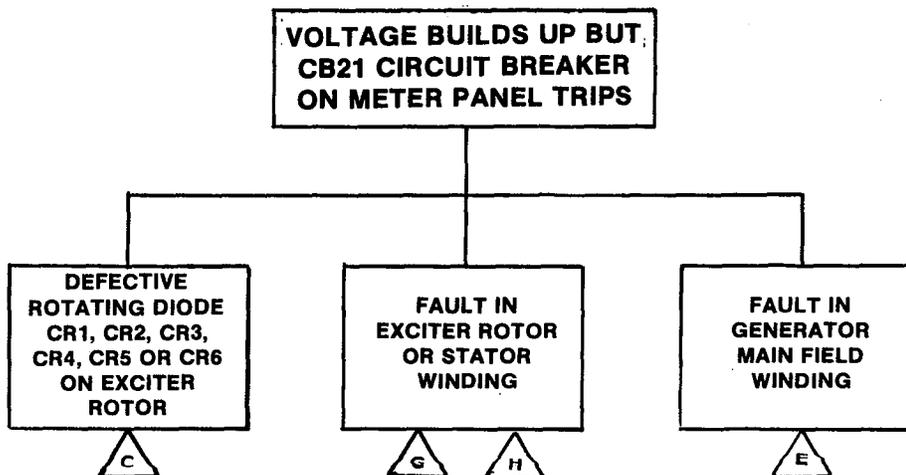


NOTE Whenever a letter appears near the box, a separate procedure, corresponding to that letter, is given at the end of this section.

E

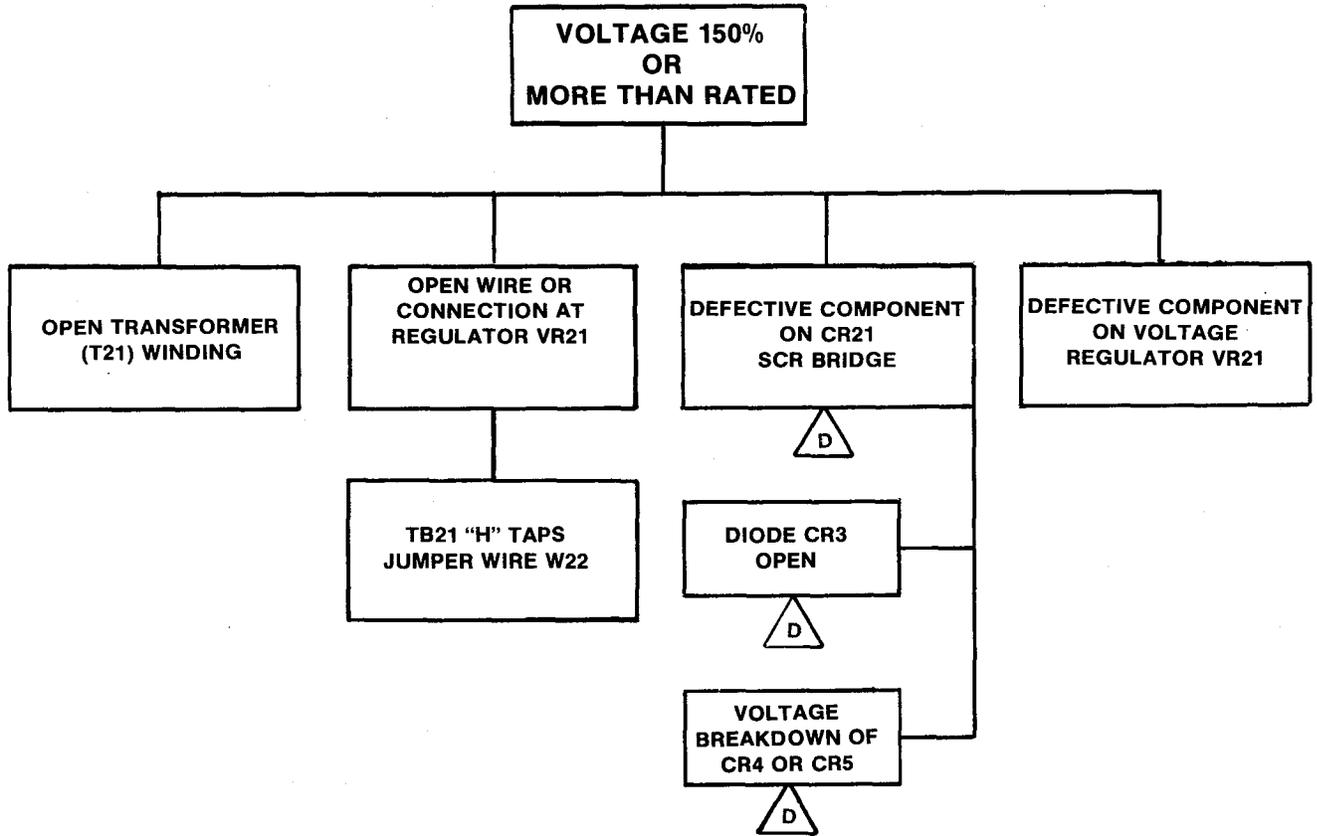

F

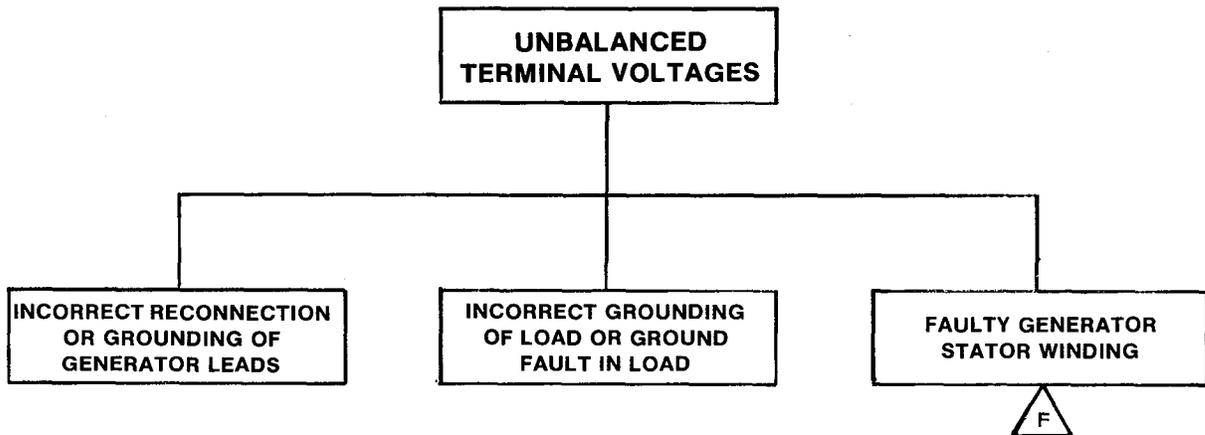

NOTE Whenever a letter appears near the box, a separate procedure, corresponding to that letter, is given at the end of this section.

PROCEDURES

[A]

FLASHING THE FIELD

If output voltage does not build up it may be necessary to restore the residual magnetism of the poles by flashing the field. Assemble a six volt supply, resistor and diode as shown in Figure 5. If a six volt supply is not available 12-volts can be used, however a 20-ohm resistor must be substituted for the 10-ohm. Start the generator set, touch positive lead to + on SCR bridge, and negative lead to the - terminal. Hold leads on terminals just long enough for voltage to build up.

CAUTION Do not keep excitation circuitry connected longer than 5-seconds or damage may occur to exciter and regulator.

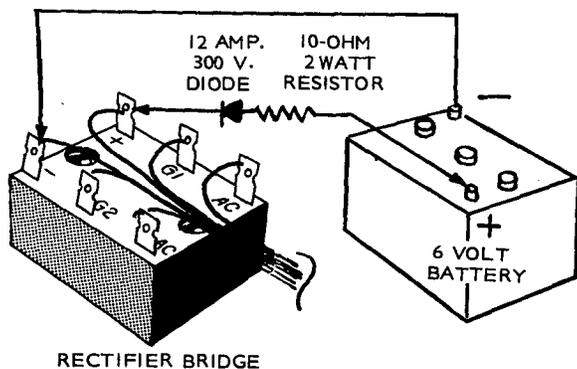


FIGURE 5. FIELD FLASHING CIRCUIT

[B]

TESTING L21 REACTOR

The L21 commutating reactor mounts inside the control box, below the VR21 Voltage Regulator.

Coils 1-2 and 3-4 are wound on the same core. Resistance between 1-2 and 3-4 should be equal. Resistance between coils (e.g. 1-4) or from any terminal to frame of the reactor should be infinity (Figure 6).

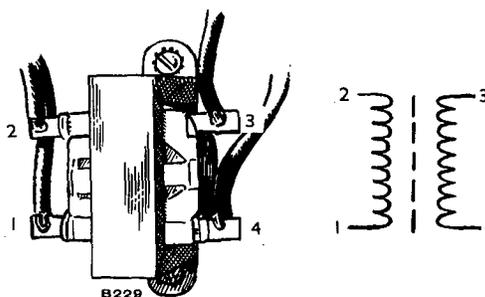


FIGURE 6. L21 REACTOR

[C]

TESTING DIODES

Six diodes labeled CR1 thru CR6 are mounted on the rotating exciter assembly as shown in Figure 7. Test diodes as follows:

1. Remove one diode at a time from heat sink. Test that diode and reinstall on heat sink before proceeding to the next one.
2. Check the resistance of the diode with an ohmmeter. Connect one lead to the top of the diode and other lead to the diode stud. Observe reading. See Figure 8.
3. Now reverse leads and again observe reading. A good diode should have a higher reading in one direction than the other. If both readings are high, or if both readings are low, diode is defective and must be replaced with a new, identical part.

CAUTION Excessive dust or dirt on diodes and other components will cause overheating and eventual failure. Keep these assemblies clean!

REPLACING RECTIFIERS (DIODES)

1. Unsolder leadwires from terminals.
2. Use proper size wrenches to hold the body while removing the nut.
3. Push the rectifier free of its mounting hole in the heat sink.
4. Insert new rectifier into its mounting hole in the heat sink. Using nut and washer provided, secure rectifier to heat sink.
5. Torque diodes on rotating exciter assembly to 15-lb. in. (1.7 N.m).
6. Solder leadwires to new rectifiers.

CAUTION Use a 40 watt soldering iron. Hold a needlenose pliers between rectifier and soldering point to prevent destructive heating. Excessive heat on these components will destroy them.


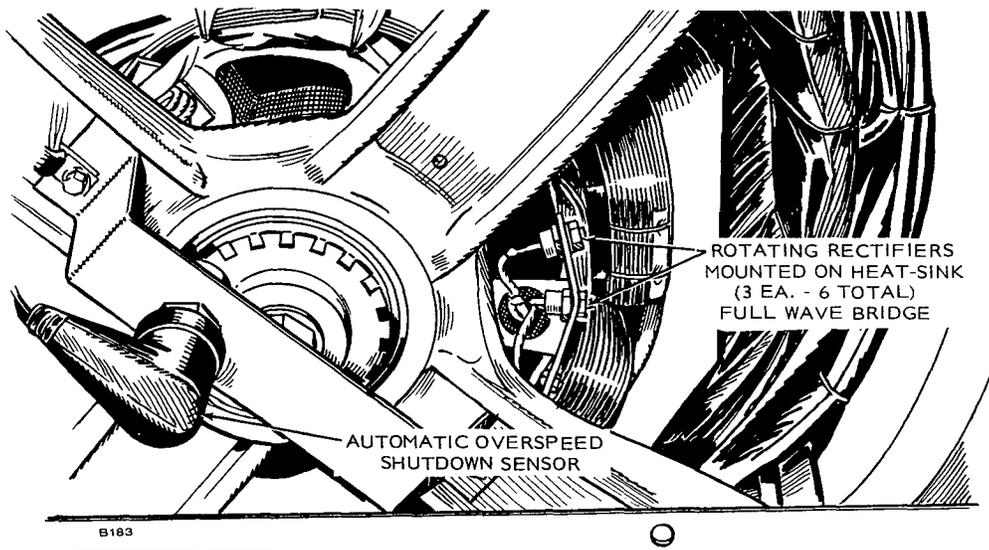


FIGURE 7. DIODE ASSEMBLY

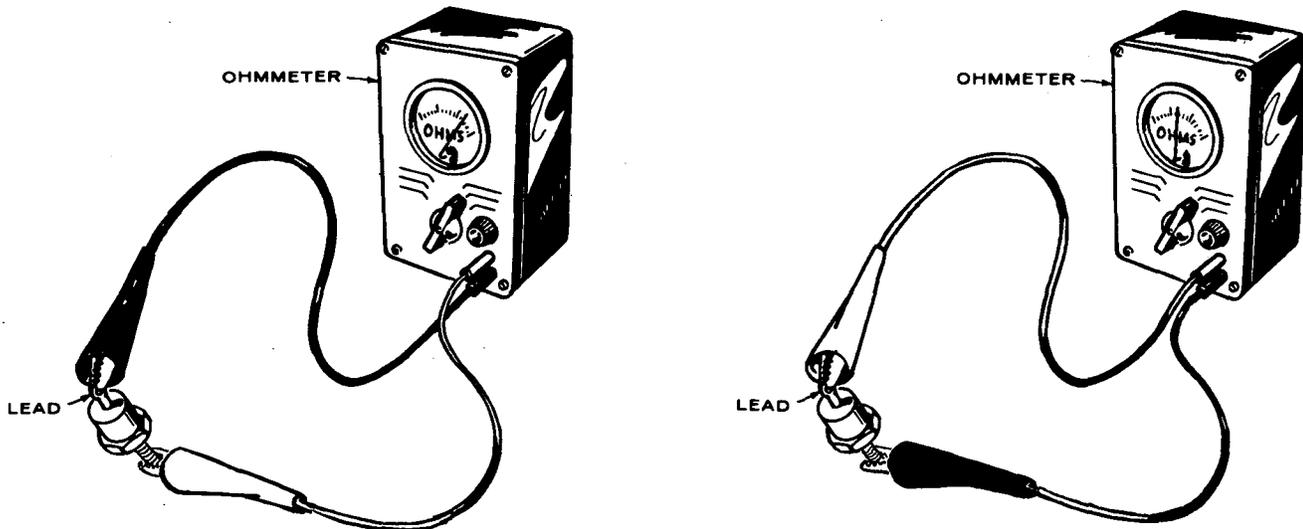

GOOD DIODE WILL HAVE HIGH RESISTANCE READING IN ONE DIRECTION AND LOW READING WHEN OHMMETER LEADS ARE REVERSED.


FIGURE 8. TESTING DIODES

[D]

TESTING SCR BRIDGE ASSEMBLY (CR21)

The SCR bridge located within the control cabinet, below the voltage regulator board, contains three diodes, CR1, CR2, and CR3, and two silicon controlled rectifiers, CR4 and CR5. These diodes and SCR's are encapsulated within an hermetically sealed box, therefore failure of any diode or SCR means the entire unit has to be replaced. See Figure 9.

Disconnect wires from SCR bridge unit prior to testing. Test unit in order shown in Table 3. Refer to Figure 10 for CR4 and CR5 test circuit. When test is complete and satisfactory, reconnect unit observing correct wiring hook-up.

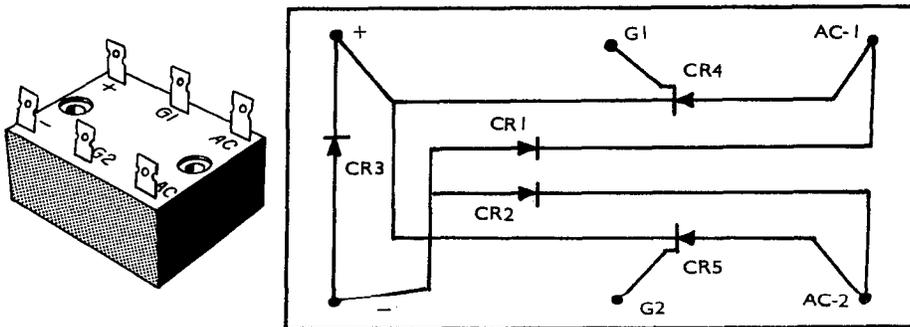

AC TERMINALS ARE GIVEN NUMERIC DESIGNATIONS FOR TEXT REFERENCE ONLY. DOES NOT APPEAR ON UNIT.

FIGURE 9. SCR BRIDGE ASSEMBLY

TABLE 3. TESTING SCR ASSEMBLY CR21

TEST	OHMMETER LEAD		RECTIFIER TERMINALS	TESTING		REMARKS	METER SCALE	
	+	-		CR	SCR			
1	X	X	+ -	CR3		Infinity	RX10K	
2	X	X	- +	CR3		6- to 50-Ohms	R X 1	
3	X	X	+ AC1		CR4	Infinity	RX10K	
4	X	X	AC1 -			Infinity	RX10K	
5	X	X	- AC1	CR1		6- to 50-Ohms	RX1	
6	X	X	+ AC2		CR5	Infinity	RX10K	
7	X	X	AC2 -	CR2		Infinity	RX10K	
8	X	X	- AC2	CR2		6- to 50-Ohms	R X 1	
	6 V Battery with Resistor + -					DC Voltmeter lead + -	DC Voltmeter Reading less than	
9*	AC1	+			CR4	AC1	+	3 Volts
10**	AC2	+			CR5	AC2	+	3 Volts

* Apply temporary jumper from AC1 to G1 to test CR4. Remove jumper, read voltmeter. See Figure 10.

** Apply temporary jumper from AC2 to G2 to test CR4. Remove jumper, read voltmeter. See Figure 10.

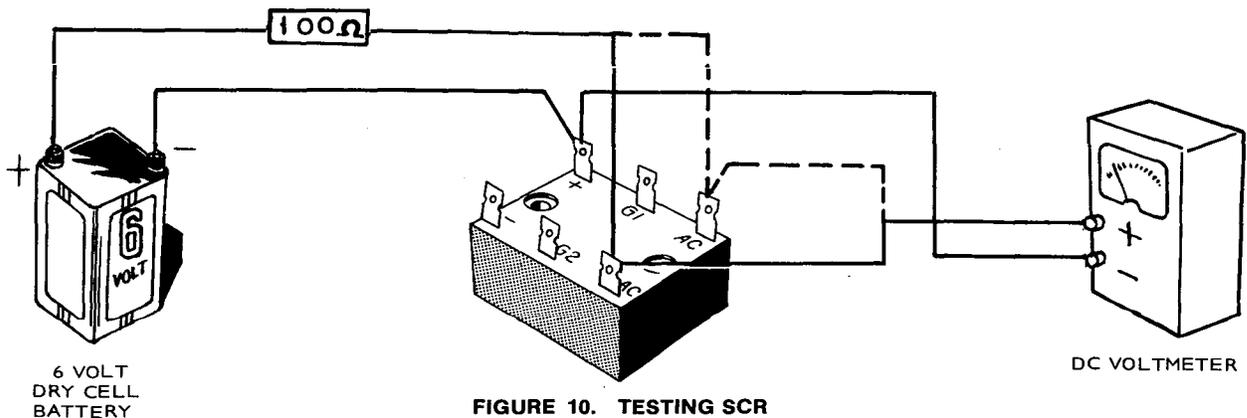


FIGURE 10. TESTING SCR

Rev.
7-75

[E]

TESTING GENERATOR ROTOR

Testing for grounds: Remove F+ and F- rotor leads from diode heat sink assemblies. Connect an ohmmeter (R x 100 Scale) between either rotor lead and the rotor shaft. A reading of less than infinity indicates a ground. See Figure 11.

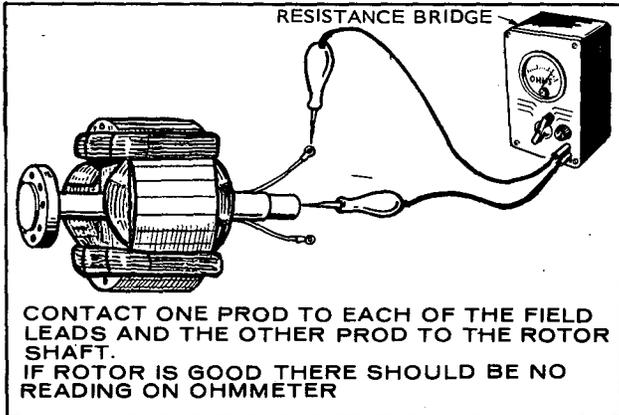


FIGURE 11. TESTING ROTOR FOR GROUNDS

Testing winding resistances: Use a Wheatstone or Kelvin bridge for this test. Remove F+ and F- rotor leads from diode heat sink assembly. Connect meter leads between F+ and F-. Resistances should be within the values specified in Table 4 at 68° F (20° C). See Figure 12.

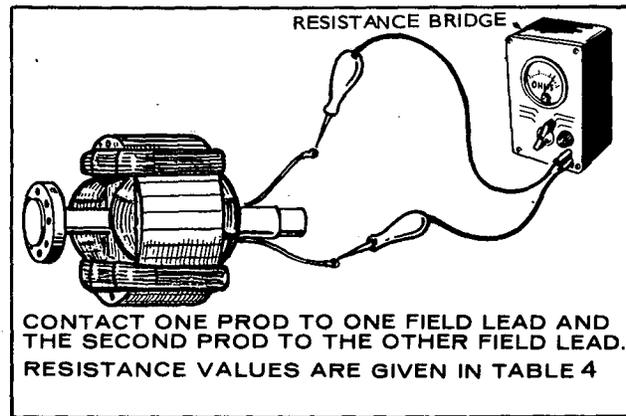


FIGURE 12. MEASURING ROTOR WINDING RESISTANCE

TABLE 4. ROTOR RESISTANCES

KW RATING AND SERIES		RESISTANCE
50 Hz	60 Hz	OHMS
165.0 DYH	200.0DYH	1.67 to 2.05
165.0 DFP	200.0 DFP	1.67 to 2.05
192.0 DFP	230.0 DFP	1.80 to 2.20
208.0 DYB	250.0 DYB	1.91 to 2.33
208.0 DFM	250.0 DYB	1.91 to 2.33
208.0 FT	250.0 FT	1.91 to 2.33
250.0 DFS	300.0 DFS	2.17 to 2.35
250.0 DFT	300.0 DFT	2.17 to 2.35
250.0 DHA	300.0 DHA	2.17 to 2.35
290.0 DFN	350.0 DFN	2.38 to 2.90
290.0 DFU	350.0 DFU	2.38 to 2.90
290.0 DHB	350.0 DHB	2.38 to 2.90
290.0 WF	350.0 WF	2.38 to 2.90

Rev.
7-75

[F]

TESTING GENERATOR STATOR

Testing for grounds: Before testing stator, disconnect control wires 4, 7, 8, 9 and 10 from TB21, isolate from each other and ground. Connect all stator output leads (T1-T12) together. Use an ohmmeter set on the R x 100 scale and measure the insulation resistance between these windings and the stator frame. A reading of less than infinity indicates a ground.

Testing for shorts: Connect an ohmmeter (R x 100 scale) between each individual winding and the other windings connected together. Repeat until all six coils have been tested. A reading of less than infinity indicates a short.

Measure resistance of windings using a Wheatstone or Kelvin bridge meter. See Figure 13. If any windings are shorted, open or grounded, replace the stator assembly. Before replacing the assembly, check the leads for broken wires or damaged insulation.

Stator output leads T4, T7, T8, T9 and T10 are interconnected (within the stator) to five stranded (#10 aircraft) control wires. These wires are labeled 4, 7, 8, 9 and 10 respectively and terminate at TB21 (terminals 61-65).

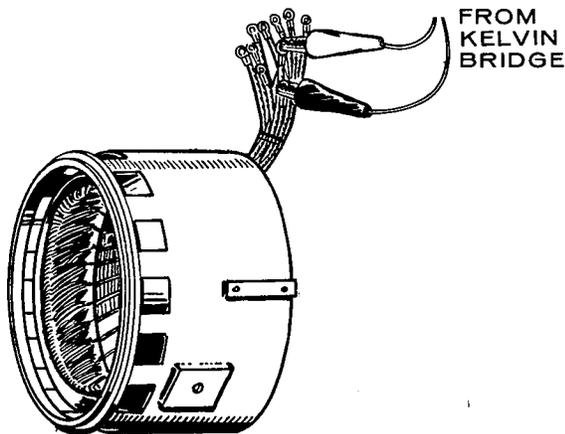


FIGURE 13. TESTING STATOR WINDINGS

TABLE 5. RESISTANCE VALUES FOR STATORS

All resistances should be within the value shown at 68° F (20° C). Use a Wheatstone or Kelvin bridge for this test. Measure between the following leads:

T1-T4	T7-T10	T3-T6
T9-T12	T2-T5	T8-T11

KW RATING		RESISTANCE
50 Hz	60 Hz	Ohms
165	200	.0047 to .0057
208	250	.0032 to .004
250	300	.0022 to .0027
290	350	.0018 to .0022

[G]

TESTING EXCITER ROTOR (ARMATURE)

Testing for grounds: Remove diodes CR1, CR2, CR3, CR4, CR5, and CR6 from diode heat sink assemblies. Using an ohmmeter (R x 100 scale) measure insulation resistance between any of the leads and the laminations (exclude the diodes from the test circuit). A reading of less than infinity indicates a ground.

Testing winding resistance: Using a Wheatstone or Kelvin bridge meter, measure resistance between leads pairs T1-T2, T2-T3 and T1-T3. Resistance should be 0.496-0.607 ohms at 20° C (68° F). See Figure 14.

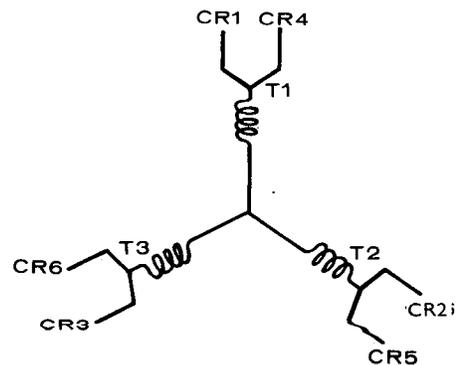


FIGURE 14. TESTING EXCITER ARMATURE

Rev.
7-75

[H]

TESTING EXCITER STATOR

Testing for grounds: Using an ohmmeter (R x 100 scale), measure the insulation resistance between either lead F1 or F2 and the laminations. A reading of less than infinity indicates a ground. See Figure 15.

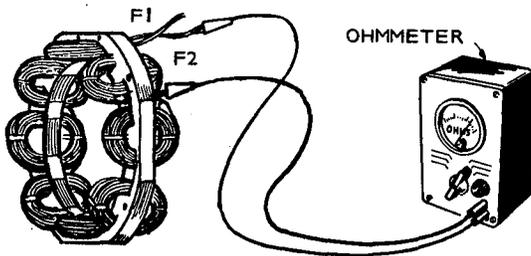


FIGURE 15. TESTING FOR GROUNDS

Testing winding resistance: Measure coil resistance between leads F1 and F2 with an ohmmeter (scale R x 1). Resistance should be 15.55 to 17.79 ohms at 68° F (20° C). See Figure 15A.

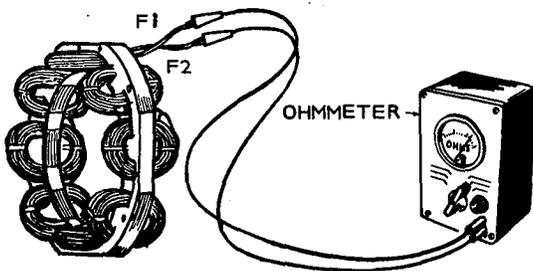


FIGURE 15A. MEASURING FIELD RESISTANCE

[I]

RECONNECTION

Figure 16 shows reconnection possibilities for the YB series generators. When reconnecting bus-bars for a different voltage, be sure to reconnect lead from terminal 63 (inside control box) to either H3, H4 or H5. See Figure 2 and 16.

NAMEPLATE VOLTAGE CODE	VOLTAGE	PHASE	FREQUENCY	CONNECT LEADS FROM TERMINAL 63 TO:	GENERATOR CONNECTION	GENERATOR CONNECTION SCHEMATIC DIAGRAM	GENERATOR CONNECTION WIRING DIAGRAM
5D 6D	120/240 240/480	3	60	H5	SERIES DELTA		
17 517	120/208 127/220 139/240 110/190 115/200 120/208 127/220	3	60 60 60 50 50 50 50	H3 H4 H5 H3 H4 H4 H5	PARALLEL WYE		
7 17 517	220/380 240/416 254/440 277/480 220/380 230/400 240/416 254/440	3	60 60 60 60 50 50 50 50	H3 H3 H4 H5 H3 H4 H4 H5	SERIES WYE		
9X	347/600	3	60	H5	SERIES WYE		

SINGLE PHASE NOTE NOT AVAILABLE

YB SERIES GENERATORS

98-2579(C)

FIGURE 16. OPTIONAL VOLTAGE CONNECTIONS

Rev.
7-75

[J]

SENSITIVITY REFERENCE CIRCUIT

YB Series regulators can be set to either a frequency sensitive or non-frequency sensitive reference. Frequency sensitive reference means the output voltage of the generator set will decrease in proportion to the frequency (prime mover speed). This decrease in output voltage will reduce the load on the prime mover, permitting it to return to rated voltage and frequency when an overload is removed. Non-frequency sensitive reference could cause the prime mover to reduce speed due to a temporary overload, then would require a further 50 percent to 60 percent load reduction to allow it to return to rated speed. This reference change is accomplished by soldering wire W1 to terminal E1 for frequency sensitivity or to terminal E2 for non-frequency sensitivity. See Figure 17.

Unless requested otherwise by purchaser, ONAN generator sets are connected at the factory to a frequency sensitive reference.

TOP SIDE OF
VOLTAGE
REGULATOR
WHEN MOUNTED

UNSOLDER THIS WIRE
FROM E1 AND CONNECT
TO E2 FOR A NON-
FREQUENCY SENSITIVE
VOLTAGE REFERENCE
CIRCUIT.

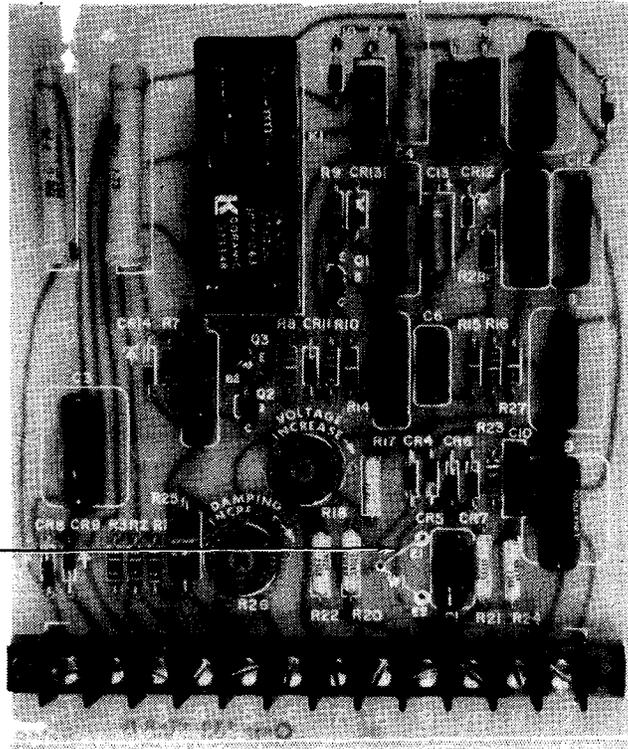


FIGURE 17. VR21 PRINTED CIRCUIT BOARD

[K]

VOLTAGE REGULATOR ADJUSTMENT

If VR21 voltage regulator printed circuit board has been replaced, it may be necessary to center the voltage adjust rheostat (R21) on meter panel.

1. Center the voltage adjust knob so pointer is in a vertical position.
2. Open meter panel doors. Start unit.
3. Using a screwdriver, turn R18 potentiometer on printed circuit board VR21 in direction shown to increase or decrease the voltage. Observe voltmeter on meter panel while making adjustment. Set voltage with no load connected to generator.

(Example: For a 120/240 volt connection, set no load voltage at approximately 246 volts).

If voltage is unstable or tends to hunt, turn R26 potentiometer on VR21 in the direction shown on printed circuit board to increase damping sensitivity (Figure 18).

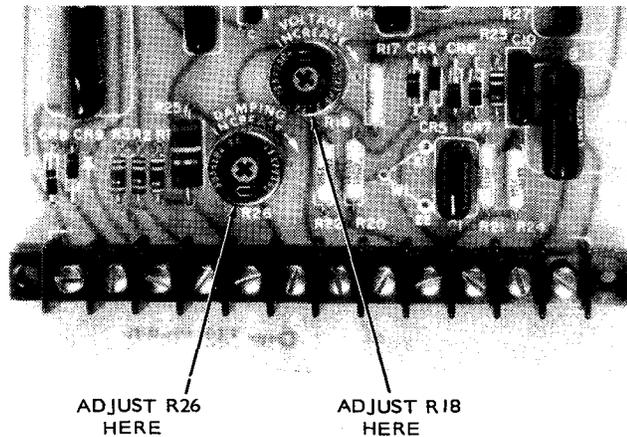


FIGURE 18. ADJUSTING VOLTAGE ON VR21

[L]

GENERATOR DISASSEMBLY

If generator testing determines that generator needs repair, remove and disassemble as follows:

1. Disconnect and remove load wires in outlet box.
2. Disconnect leadwires from control box. Check wire markings for legibility to ease assembly. Arrange leads so they can be easily withdrawn from the control box.
3. Remove generator air inlet grille and end bell cover. Disconnect and remove control box housing. Remove capscrew, washer and speed sensor wheel from rotor shaft.
4. Block the rear of the engine in place by supporting the flywheel housing. Remove capscrews securing the generator mounting bracket to the skid base. Remove the generator air outlet screen.

Step 5 applies to Models DYH and DYB only.

5. Attach an overhead hoist to the stator assembly lifting bar. Remove the capscrews securing the stator assembly to the engine flywheel housing and slide the stator back about three inches. Remove the capscrews attaching the flexible drive coupling to the engine flywheel and remove the stator assembly and rotor assembly (rotor inside the stator) from the engine.

CAUTION Do not let rotor hang unsupported by the flexible drive coupling. Rotor weight will damage the flexible drive coupling.

Proceed to step 8.

6. Attach an overhead hoist to the stator assembly lifting bar. Remove the capscrews securing the stator assembly to the engine flywheel housing and slide the stator assembly off the rotor assembly.
7. Attach hoist and sling to the rotor assembly and apply a slight lift to support the rotor. Remove capscrews securing the flexible drive coupling to the engine flywheel and remove the rotor from the engine.

8. Remove end bell from stator assembly; remove exciter field from end bell assembly if necessary.
9. Remove bearing and spacer from shaft.
10. Disconnect rotor field leads from rectifier assemblies F1 and F2 on exciter armature. Remove exciter armature.

GENERATOR ASSEMBLY

Generator assembly is the reverse of disassembly procedure:

1. Always replace bearing with a new one; apply a layer of Molykote grease Onan #524-0118 on end-bell bearing bore before inserting bearing.
2. Torque bearing capscrew to 60-70 lb. ft. (81.3 to 94.9 N.m).

Step 3 applies to models DYH and DYB only.

3. The rotor and stator must be assembled together by inserting the rotor into the stator before attaching to engine, thereby preventing damage to the flexible drive coupling. Rotate engine flywheel to approximately 45° BTDC. This will bring one tapped flywheel hole on top. Assemble drive disc to flywheel with corner marked "TOP" up. Proceed to assemble stator to flywheel housing.
4. Torque drive disc to rotor capscrews to 200-240 lb. ft. (271 to 325 N.m).
5. Torque drive disc to flywheel capscrews to 110 to 120 lb. ft. (149 to 162 N.m).
6. Torque end bell mounting stud nuts to 55 to 65 lb. ft. (75 to 88.0 N.m).
7. Torque stator mounting capscrews to 45 to 55 lb. ft. (61 to 75 N.m).
8. Adjust magnetic sensor air gap at .050- to .060-inch (1.27 to 1.52 mm).
9. Refer to parts catalog for replaceable parts and assemblies. Refer to applicable wiring diagram for reassembly.

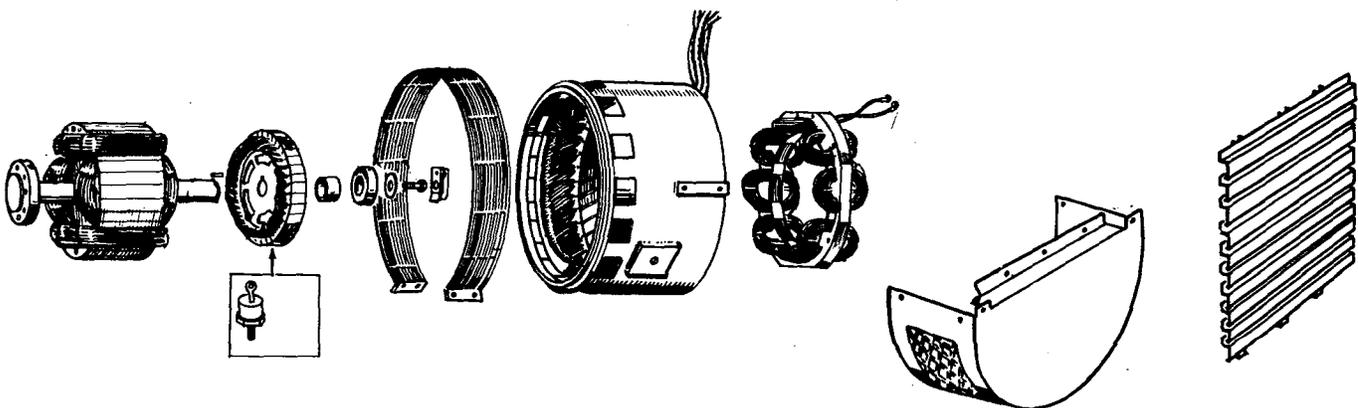


FIGURE 19. GENERATOR DISASSEMBLY

Rev.
7-75

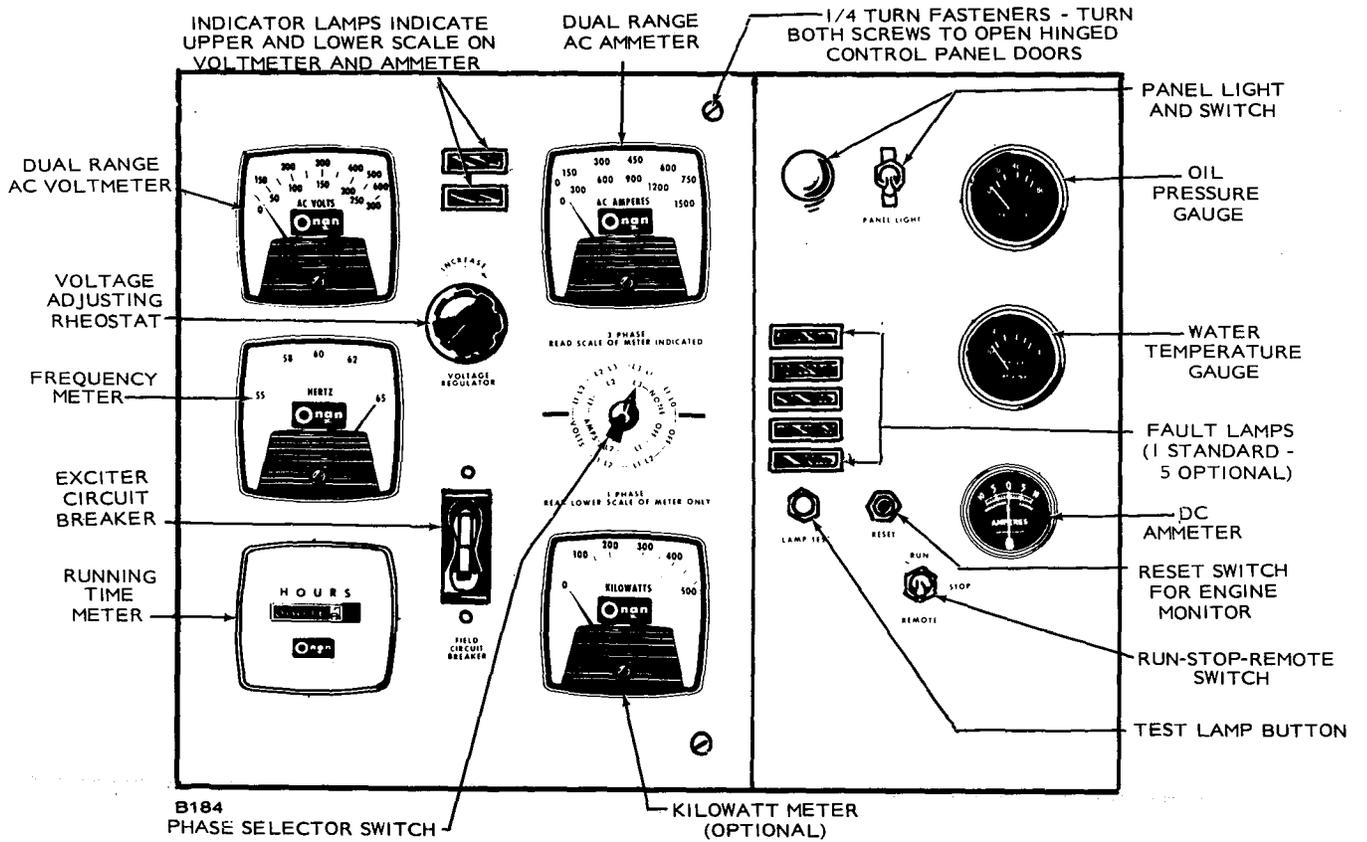


FIGURE 20. CONTROL PANEL

CONTROL SYSTEM

GENERAL

The shock-mounted control box has two doors, opening from the middle. For purposes of identifying location, left and right is considered, in this manual, when facing the control box.

The left hand door is designated the AC panel and contains the following equipment as a standard installation. See Figure 20.

1. **Dual range AC voltmeter.** Scales 50 to 300 volts and 100 to 600 volts AC.
2. **Dual range AC ammeter.** Range of meter depends upon size of generator.
3. **Voltmeter ammeter phase selector switch.** Selects the phases of the generator output to be measured by the AC voltmeter and AC ammeter, i.e., line-to-line, line-to-neutral, single phase or three phase.
4. **"Range in use" indicator lights.** Identifies high or low scale to be read on the AC ammeter or AC voltmeter.
5. **Frequency meter.** Pointer type meter indicates generator output frequency in Hertz.
6. **Running time meter.** Registers total number of hours, to one-tenth hour unit has run. Recorded time is accumulative; the meter cannot be reset to zero time.
7. **Voltage regulator.** Rheostat (R21) provides an adjustment of plus or minus 5 percent of generator output voltage.
8. **Exciter Circuit Breaker (CB21).** Provides generator exciter and regulator protection from overheating in the event of certain failure modes of the generator exciter and voltage regulator.

Optional equipment installed on the AC panel.

9. **Kilowatt meter.** Connected to a transducer mounted on the back of the control cabinet, this instrument indicates generator output in kilowatts. The transducer is connected across the phases of the generator, and to the current transformers.

10. **Governor control.** This single-pole double-throw, center-off, momentary contact switch is wired into a split-field series motor situated on top of the engine governor. Used only with a Woodward PSG Governor the switch operates the motor which adjusts the governor and therefore the engine speed.

The right hand door, designated the DC panel, contains the following equipment. See Figure 20.

1. **Oil pressure gauge.** Connected to a resistance type sender on the engine, this instrument indicates engine circulating oil pressure.
2. **Water temperature gauge.** Connected to a resistance type sender on the engine, this instrument indicates engine coolant temperature.
3. **Ammeter.** Indicates the output current of the battery charging alternator.
4. **Run-Stop-Remote switch.** Starts and stops the unit locally or from a remote location.
5. **Reset switch.** Manual reset for engine monitor after shut-down, Run-Stop-Remote switch in "Stop" position.
6. **Lamp test.** Depress to test warning lamp bulbs. Operate only while engine is running.
7. **Warning light.** Indicates "Fault in engine operation".

Optional equipment installed on the DC panel.

8. **Penn State Run-Stop/Reset-Remote switch.** Momentary contact in the depress during reset position. To reset engine monitor, hold switch in the DDR position, actuate reset switch, release and select run to start engine.
9. **Warning lights.** Eliminates the one "Fault" light and substitutes five indicator lights to give warning of:
 1. Overcrank
 2. Overspeed
 3. Low Oil Pressure
 4. High Engine Temperature
 5. Low Engine Temperature

CONTROL OPERATION

GENERAL

In emergency situations a serviceman can be faced with the problem of returning a failed generator set to service to restore vital electrical power in the minimum time (e.g., life support equipment in hospitals). The more information he has on the system the shorter is the down-time period.

This section of the manual is intended to instruct the serviceman on the operation of the relays and printed circuit modules which comprise the YB control system. Used in conjunction with the schematic diagrams at the back of the manual this information should provide the serviceman with greater understanding of the function of the system.

ENGINE CONTROL RELAYS

START DISCONNECT RELAY, K11.

When R-S-R (Run-Stop-Remote) switch is placed in the Run position, +24VDC is applied to coil terminal B of relay K11. Terminal A is connected to terminal 1 of module A17. When turned on, transistor A17-Q2 provides coil ground through A17-17 and the relay holds in. When energized, relay K11 performs the following switching actions:

1. Contacts 7 and 4 close to apply +24VDC through K14, 7-1 to Cranking module A14 to actuate K13 starter solenoid which causes the starter to turn.
2. Contacts 3 and 9 open to start the Overcrank timing sequence.
3. Contacts 8 and 2 open to allow engine starting without Low Oil Pressure shutdown.

Relay K11 will remain actuated until engine begins to run and an input of 150- to 190-Hertz is applied to A17, 21 and 22 from the magnetic speed sensor. This causes A17-Q2 to cease conducting and breaks the ground circuit to K11 coil at which time the following occurs:

1. Contacts 7 and 4 open to disconnect the +24VDC from the cranking starter circuit.
2. Contacts 3 and 9 close to terminate overcrank timer.
3. Contacts 8 and 2 close to enable Low Oil Pressure shut down circuit.

IGNITION RELAY, K12

Actuated by +24VDC, through module A11 when R-S-R switch is placed in run position. Relay A11-K1 N.C. contacts complete the circuit through module A11-20 terminal to relay K12 coil. This relay remains energized for duration of engine run.

Contacts perform the following switching actions:

1. Contacts 8 and 5 close and apply +24VDC to voltage regulator of battery charging alternator to provide excitation.
2. Contacts 4 and 7 close and apply +24VDC to —
 - a. Oil pressure gauge.
 - b. Water temperature gauge.
 - c. Water solenoid valve.
 - d. Fuel pump.
 - e. Energize K15, stop relay (not diesel).
 - f. K11-7, input to module A14.
 - g. K15(-6) to energize fuel solenoid valve (not diesel).
3. Contacts 3 and 9 open to initiate Cycle Cranker sequence.

Deactivation of relay K12 will shut down the engine.

START SOLENOID, K13

Energized by closure of K11 (7-4) through K14 (7-1) and Cranking module A14. One set of contacts only, N.O. When relay actuated, it applies +24VDC through circuit breaker B1 (on engine) to starter shift solenoid (K). When engine starts, relay contacts K11 (7-4), followed by K14 (7-1) open to deactuate K13 solenoid.

STARTER PROTECTION RELAY, K14

Energized by output of generator (190-240VAC), drops out when voltage falls to 135 VAC. When actuated contacts switch as follows:

1. Contacts K14 (9-6) close to apply +24VDC to TB11-58 then to remote station to light a "Generator on" light.
2. Contacts K14 (7-1) open to de-energize K13; act as a backup for relay K11 (7-4).

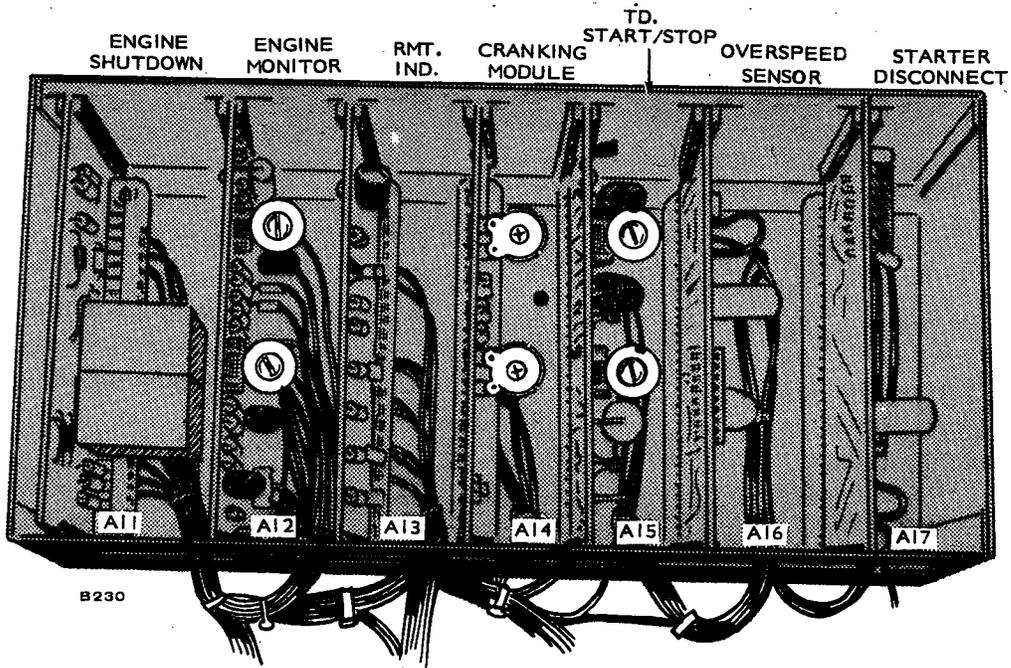


FIGURE 21. ENGINE CONTROL MODULE LOCATION

STOP RELAY, K15 (NATURAL GAS)

Energized by closure of K12 (4-7) contacts. Contact switching is as follows:

1. Contacts 7-1 and 5-2 open and remove grounds from magneto (or magnetron) primary coils.
2. Contacts 3-9 open and disconnect K1 fuel solenoid from AUX output of battery charging alternator.
3. Contacts 6-9 close and apply +24VDC to K1 fuel solenoid.

OVERSPEED RELAY K15 (DHA AND DHB ONLY)

Normally deenergized, is used as a back-up to the standard Overspeed installation. When, in the event of engine overspeed transistor A16-Q2 conducts, a ground is supplied to terminal 13 of A11 Engine Shutdown module. This causes A11-Q1 to conduct and apply 24VDC to energize K15 relay.

Closure of K15 contacts 6 and 9 applies 24VDC to K4 Air Inlet solenoid which actuates air shutters to starve the engine and induce shutdown.

Should this back-up system be actuated, manually reset air shutter doors. The engine will not start until shutters are open.

ENGINE CONTROL MODULES

ENGINE CONTROL MODULE, A11

The R-S-R switch in Run position applies +24VDC to A11-5, through N.C. contacts of A11-K1 then out of pin 20 to energize K12 ignition relay. The same +24VDC leaves the board at pin 14, goes through lamp test switch (S13) then reenters at pin 18 where it is applied to the coils of A11-K1 and A11-K2. A ground at A11-7 will actuate A11-K1 which will perform the following function:

1. N.C. contacts open to remove +24VDC from K12 coil. This will shut down the engine.
2. N.O. contacts close and apply +24VDC (from the alarm reset switch) to the alarm terminal on TB12.

A ground on A11-3 will actuate A11-K2 which will function as follows:

1. N.O. contacts close to actuate alarm and apply +24VDC through A11-19 to A12-1 to keep fault lamp lit.
2. N.O. contacts close; if a ground is present on A11-1, relay A11-K1 will actuate and initiate engine shutdown. The ground on A11-1 will act as a hold-in circuit for A11-K1 coil.

DHA and DHB only: In the event of engine Overspeed Shutdown a ground is applied to terminal 13. The resultant current flow across resistor A11-R1 will cause A11-Q1 transistor to turn ON and apply 24 VDC through terminal 9 to actuate relay K15.

Engine shutdown caused by malfunction will leave A11-K1 relay latched. Reset relay as follows:

1. Reset, Standard Installation. Place R-S-R switch in Stop position; depress reset button. Return R-S-R switch to required operational position (i.e., Run or Remote).
2. Reset, Penn State Installation. Place and hold Run-Remote-Reset switch in "Depress During Reset" position. Press reset button. Release switch and return to the required operational position.

ENGINE MONITOR MODULE, A12

R-S-R switch in Run position feeds +24VDC through A11 (pins 5 and 20) to terminal A12-20. The same +24VDC is connected to DS12-Overcrank, DS13-Overspeed and DS14-Low Oil Pressure Lights. Grounds for the fault lights are provided within the Engine Monitor module.

Start Disconnect relay K11, N.C. contacts 9-3 (open when K11 energized) are connected between A12-22 and ground. If after 75-seconds of cranking engine does not start, a potential built up on capacitor A12-C1 will discharge and cause unijunction A12-Q2 to fire. Unijunction A12-Q3 fires and turns ON A12-CR3, to apply a ground to A11-K1 relay, which energizes and stops any further starting action. A12-CR3 will also provide a ground for the Overcrank light to indicate a fault.

Engine start within 75-seconds will cause a signal from the overspeed sensor through module A16 to turn OFF transistor A17-Q2 and drop out relay K11. N.C. contacts 9-3 close and short out capacitor A12-C1 to prevent engine shutdown through Overcrank function.

With the engine running and relay K11 de-energized, low engine oil pressure will cause LOP switch to close applying a ground to pin 4. Transistor A12-Q4 will turn off, A12-CR6 will turn on and apply a ground for Low Oil Pressure light to indicate a fault. A11-K1 will cause K12 relay to shutdown the engine and set off the alarm system.

In the event of generator overspeed (i.e. rpm in excess of 2010), the output of A16-IC2 on module A16 turns on A16-Q2 which conducts and applies a ground to A12-2. This will turn on A12-08, A12-CR8 will conduct and provide a ground for the Overspeed light to indicate a fault. A11-K1 will energize to shut off K12 relay to stop the engine. The alarm will operate.

REMOTE INDICATOR MODULE, A13.

This module is used on five Fault light systems only, to light fault indicators at remote stations.

As an example, in the event of a low oil pressure shutdown a ground will be applied to A12-5. This same ground will appear at A13-1 to turn on A13-Q1 and apply +24VDC to A11-2 to light the Low Oil Pressure fault indicator at the remote station. Two extra fault lights are connected into the A13 module. DS15 High Engine Temperature and DS16 Low Engine Temperature Closure of High Engine Temperature Sensing switch applies a ground to A13-20. This starts A13-Q6 conducting which turns on CR7 to ground pin 14, and light the High Engine Temperature lamp and apply a ground to A11-K2 for the alarm system. A13-Q5 will conduct and apply +24VDC to A13-12 for the remote station light.

Closure of the Low Engine Temperature Sensing switch will apply a ground to A13-8, A13-Q4 will conduct, set-panel and remote Low Engine Temperature lights will indicate a fault. There is no alarm or engine shutdown with this fault.

CYCLE CRANKER MODULE, A14.

Available as an option the Cycle Cranker allows three crank cycles and two rest cycles of the engine starter motor, within the 75-second cranking period established by module A12.

Cycle times are adjustable. Crank cycle time is varied by A14-R4, Rest time by A14-R6. Crank time is 13- to 17-seconds, Rest time is 8- to 12-seconds. The rheostats are accessible through holes in the module plate.

When the R-S-R switch is placed in the Run position, K11 is actuated, K11 (7-4) contacts close and +24VDC is applied to terminals 3, 4 and 5 of A14. Transistor A14-Q2 turns on and causes Q3, Q4 and A5 to conduct and apply +24VDC to K13 starter relay. Capacitor A14-C2 charges and turns off A12-Q2 by turning on Q1 and allows Q3, Q4, and Q5 to turn off and de-activate K13. Capacitor A14-C2 discharges, transistor Q2 turns on and the cranking cycle is repeated until capacitor A12-C1 is charged, A12-CR3 turns on allowing relay A11-K1 to pull-in to deactivate ignition relay K12 and prevent any further cranking action.

If the engine starts within the cranking cycle time (75-seconds) relay K11 will de-energize, contacts K11 (3-9) will close and capacitor A12-C1 will be discharged setting its voltage to zero.

STANDARD CRANKER MODULE, A14A.

This module allows +24VDC to be applied to K13 Starter relay and cranking to continue until the engine starts and relay K11 is de-energized as above, within the 75-second cranking period established by module A12.

TIME DELAY START-STOP, A15.

Used only with a remote control station, this module inserts a timed delay into the Start and Stop functions. Delay times are adjustable: Start, up to 15-seconds and Stop, from 30-seconds to 5 minutes. Adjustments can be made through access holes in the module plate.

When engine start signal is initiated from a remote station, the set control panel R-S-R switch is left in 'Remote' position. Initiation of a Start signal will apply +24VDC to terminals A15-17 and A15-9. Voltage at A15-17 allows capacitor A15-C3 to charge, voltage at A15-9 prevents capacitor A15-C4 from charging. Charge time of A15-C3 is adjusted by rheostat A15-R14. Capacitor A15-C3 when charged will turn on A15-Q1 which will cause A15-CR1 to conduct and apply +24VDC to the output terminals of the module, then to distribution points in the control panel. Once the gate of A15-CR1 has been triggered, the device will continue to conduct.

Initiation of a Stop signal is really removal of the Start signal, which removed +24VDC from terminals 17 and 9 to allow capacitor A15-C4 to charge. Charge rate is adjusted by rheostat A15-R16. When A15-C4 has charged, transistor A15-Q8 will turn ON and cause the potential across capacitor A15-C6 to go more positive and bias the cathode of A15-CR1 to turn it OFF. This in turn will shut down the set.

TIME DELAY BYPASS MODULE, A15A.

Use of this module allows Start/Stop control from a remote station without the time delay advantage.

Engines fitted with turbo super chargers should be run for at least five minutes after load removal before shutdown. This allows engine temperature to stabilize and the turbo housing to cool off and prevent warping or cracking of the turbo assembly.

Control panels with the time delay will allow the set to run for five minutes before automatic shutdown.

Rev.
7-75

OVERSPEED SENSOR MODULE, A16.

The Overspeed sensor system should be considered in two sections.

1. A 20-tooth disc mounted on the generator shaft and a magnetic pick up.
2. Overspeed sensor control printed circuit module.

The output of the disc pickup device is fed into the sensor module and is used for two purposes.

1. Engine shutdown when speed reaches 2010 rpm.
2. Disconnects starter when engine speed reaches 450 to 570 rpm and reconnects starter at 10 to 30-rpm.

The 20 tooth disc rotates at engine speed and is positioned so that the teeth are in the field of the magnetic pick-up. Rotation of the disc induces a voltage in the pickup which is fed into a switching amplifier in A16-IC2, then into a multivibrator (A16-IC1) where a voltage is produced which is proportional to the input frequency. At transistor A16-Q1 the same amplifier output is supplied to A17- Starter Disconnect module.

In the event of generator overspeed, the output of the frequency-to-voltage converter (A16-IC1) switches a zener diode into the base of A16-Q2 to turn ON and provide a ground for the Overspeed fault light, alarm and engine shutdown if the engine speed reaches 2010 rpm.

DHA and DHB only: An additional function when A16-Q2 turns ON is application of a ground to terminal 13 of A11 Engine Shutdown module for air shutter operation.

START DISCONNECT MODULE, A17.

This module is responsible for disconnecting the cranking starter at an engine speed of 450- to 570-rpm to protect the starter and the engine flywheel. A 5V square wave is fed into pins 21 and 22 from the Overspeed Sensor board, then into an integrated circuit A17-IC1. A difference in time constant circuitry effectively divides A17-IC1 into two sections, one for disconnect and one for reconnect. A square wave output from A17-IC1 is fed into A17-IC2 (essentially a flip-flop circuit) from where it becomes +5VDC which is applied to an amplifier in A17-IC3 and amplified to 13V. This voltage is then connected through a zener diode to the base of transistor A17-Q2 to turn that device ON and provide a ground to energize Start/Disconnect relay K11.

Division of A17-IC1 allows a second square wave output to be applied to another amplifier in A17-IC3 from where it connects to a filter network, then into a Nand gate of A17-IC2. At an engine speed of 450- to 570- rpm (150- to 190- Hertz) the voltage output of A17-IC2 is switched to zero which causes A17-Q2 to turn OFF and disconnect the ground from K11. Deactivation of K11 will open Starter solenoid K13 and prevent the starter motor operating.

A characteristic of the Starter Disconnect circuit is that A17-IC2 will not reverse output polarity until the input is reduced to less than 10-Hertz, therefore the starter motor will not be reconnected until the engine rpm drops below 30.

Rev.
7-75

FAULT LIGHTS

For a list of the fault light options, refer to Table 6. On a standard single light installation a fault indication will be accompanied by an engine shutdown and an alarm. Pennsylvania State installations will not shut down the engine for low oil pressure or high engine temperature, otherwise the installations are the same.

With four faults lighting one lamp, troubleshooting without an Engine Tester board is a process of elimination, to first of all find which fault actually caused the indication, before that fault can be rectified.

TABLE 6. FAULT LAMP OPTIONS

SYSTEM	FAULT	FAULT LAMP	STOP ENGINE	EXTERNAL ALARM	PRE-ALARM
STANDARD SINGLE LIGHT	Overcrank Overspeed Low Oil Pressure High Engine Temperature	x x x x	x x x x	x x x x	
PENN STATE SINGLE LIGHT	Overcrank Overspeed Low Oil Pressure High Engine Temperature	x x x x	x x 	x x x x	
5 LIGHT	Overcrank Overspeed Low Oil Pressure High Engine Temperature Low Engine Temperature	x x x x x	x x x x 	x x x x 	
5 LIGHT PRE-ALARM	Overcrank Overspeed Low Oil Pressure High Engine Temperature Low Engine Temperature	x x x x x	x x * * 	x x x x 	 x x

* - With additional optional sensors.

1. OVERCRANK

If after cranking for 75 seconds the engine will not start, capacitor A12-C1 on the Engine Monitor module will charge to turn on A12-CR1, illuminate the fault light and apply a ground to pin 7 on A-11 Engine Shutdown module. This energizes A12-K1 which allows K12 to drop out and stop cranking action.

In the event an engine has been running and shuts down for a malfunction, the starter will energize (when engine rpm drops below 30) and attempt to restart the engine. After 75-seconds of cranking, the above shutdown sequence will be initiated and the cranking circuitry will be disabled.

2. OVERSPEED

Engine speed in excess of 2010 rpm will cause transistor A16-Q2 on the Overspeed Sensor module to conduct and apply a ground to pin 2 of A12 Engine Monitor module. A12-Q8 will then turn on and trigger A12-CR8 to illuminate the fault light and initiate shutdown and alarm from A11 shutdown module.

3. LOW OIL PRESSURE AND HIGH ENGINE TEMPERATURE (1-FAULT LIGHT SYSTEM)

These two controls, although performing dissimilar functions have the same result. Closure of either of these two switches connected in parallel will apply a ground to pin 4 of the A12 module. Transistor A12-Q4 will turn on causing unijunction A12-Q7 to fire and trigger A12-CR6. The fault light will illuminate. On a standard installation the alarm and engine shutdown will be initiated, but a Penn State will set off the alarm only.

FIVE LIGHT SYSTEM

On a five fault light system, High Engine Temperature switch connects to module A13-20, Low Oil Pressure switch to A12-4.

Closure of High Engine Temperature switch will apply a ground to A13-20 which will turn on A13-Q6 triggering A13-CR7, causing that device to conduct. This provides a ground path for High Engine Temperature fault light and to relay A11-K2 for engine shutdown.

Closure of the Low Oil Pressure switch has the same effect as that given for the single light system. An adjustable rheostat (A12-R11) provides a timed-delay period up to 10 seconds to allow the engine to start and oil pressure to buildup thereby preventing immediate shutdown caused by false low oil pressure.

An adjustable rheostat (A12-R11) provides a timed-delay period up to 10 seconds to allow the engine to start and oil pressure to buildup thereby preventing immediate shutdown caused by a false low oil pressure.

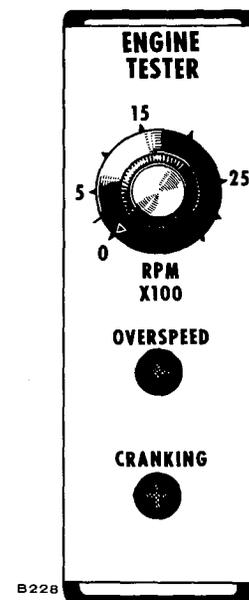


FIGURE 22. ENGINE CONTROL TESTER

ENGINE CONTROL SYSTEM CHECKOUT PROCEDURE

This checkout procedure of the Engine Control System is for use with the Engine Control Tester module. Designed to enable the serviceman to check out the complete system, the Engine Control Tester module is an indispensable tool for rapid location of faults, or final pre-start system test.

Proceed with the checkout as follows:

1. Remove front cover of engine module rack.
2. Remove Cycle Cranker module A14. See Figure 21.
3. Insert Engine Control Tester module into A14 position.
4. Set rheostat on Tester module fully counterclockwise.

Engine will not start with controls in this configuration.

5. Place R-S-R switch in Run position, depress Lamp Test switch to test fault lamps. Proceed to checkout.

	CHECKOUT	YES	NO
1.	Does Tester Cranking light go ON?	6	2
2.	Turn Tester rheostat to 2300 rpm. Does Overspeed or Fault light illuminate on both tester and panel?	3	4
3.	Replace Start-Disconnect Module A17. Return to item 1.	—	—
4.	Does Overspeed or Fault light illuminate on Tester only?	5	Reset
5.	Replace Engine Shutdown Module A11. Return to item 1.	—	—
6.	In 65- to 85- seconds does panel Overcrank or Fault light illuminate? Does Tester light go "OFF"?	8 —	— 7
7.	Replace Engine Monitor Module A12. Return to item 1.	—	—
8.	Place Run-Stop-Remote Switch to stop and depress reset switch. Does Overcrank or Fault light go "OFF"?	10	9
9.	Check reset switch.	—	—
10.	Place Run-Stop-Remote switch in Run position. Turn Tester rheostat to 650-rpm. Does Tester cranking light go "OFF"?	14	11
11.	Turn Tester rheostat to 2300-rpm. Does Overspeed or Fault light come "ON"?	13	12
12.	Replace Generator Overspeed Sensor Module A16. Return to item 10.	—	—
13.	Replace Starter Disconnect Module A17. Return to item 1.	—	—
14.	In 10- to 20- seconds, does Low Oil Pressure or Fault light come ON?	16	15
15.	Replace Engine Monitor Module A12. Return to item 8.	—	—
16.	Reset. Continue to item 17.	—	—

	CHECKOUT (Continued)	YES	NO
17.	Turn Tester rheostat to 2300-rpm. Does Tester Overspeed light come ON? Does panel Overspeed or Fault light come ON?	20 20	18 19
18.	Replace Overspeed Circuit Module A16. Return to item 16.	—	—
19.	Replace Engine Monitor Module A12. Return to item 16.	—	—
20.	Turn Tester Rheostat to 400-rpm.	—	—
21.	Reset.	—	—
22.	Slowly turn Tester rheostat knob counterclockwise. Does Overcrank or Fault light come ON below 30 rpm?	24	23
23.	Replace Starter Disconnect Module A17. Return to item 10.	—	—
24.	Ground terminal 31 on TB11. Does High Engine Temp. or Fault light go ON? Remove ground. Tester cranking light should go OFF if in the shutdown mode, but will remain ON if in Pre-Alarm mode.	26	25
25.	Replace Remote Indicator Module A13. Return to item 21.	—	—
26.	Place panel Run-Stop-Remote switch to Remote position. Rotate Tester rheostat fully counterclockwise. Jumper B+ to Remote on TB12. Does Tester Cranking light come ON after a 2- to 3- second delay?	28	27
27.	Replace Time-Delay Start/Stop Module A15.	—	—
28.	Remove Module A12. Remove B+ to Remote Jumper on TB12. Does Tester Cranking light go off after 30-seconds? Reinstall Module A12.	30	29
29.	Replace Time-Delay Start/Stop Module A15. Return to item 26.	—	—
30.	Remove Tester Module plug in Cycle Cranker Board A14. Place Run-Stop-Remote switch in Run position. Does engine crank?	—	31
31.	Replace Cycle Cranker Module A14.	—	—

CONTROLS TROUBLESHOOTING

GENERAL

Before you start the troubleshooting procedure, visually inspect all wiring and connections. Check relay plug-in receptacles for cold solder joints. Look at the engine control modules for signs of burned or damaged solid state devices and again check for cold solder joints.

This troubleshooting guide assumes that your knowledge of the electric generating set will allow you to consider the nature of the fault before proceeding

For example, your set cranks without starting; you will check fuel, fuel lines, ignition carburetion, etc. If it does not crank —

Check Batteries

- Connected properly?
- Connections secure?
- Fully charged?

Starter Connections secure?

Remote Station start switch in correct position?

A few minutes spent logically analyzing a malfunction can save hours and expense on an inoperative generating set. Consult your engine operator's manual for engine troubleshooting information. This manual will help you with your electrical control problems.

To use this guide, answer the question either "yes" or "no" then proceed to the step given in the column containing your answer.

QUESTION AND ANSWER TROUBLESHOOTING GUIDE

NOTE: Place R-S-R switch in Run position when making voltage measurements.

ITEM	A. ENGINE FAILS TO CRANK. SWITCH IN "RUN" POSITION.	YES	NO
1.	Are batteries connected properly, is voltage normal?	2	—
2.	Toggle R-S-R switch between Stop and Run. Does Relay K-11 Actuate (observe visually)?	8	3
3.	Apply temporary jumper between K-11 pin A and ground terminal. Toggle R-S-R switch. Does relay K-11 actuate?	4	5
4.	Replace Starter Disconnect module, A17.	—	—
5.	Unplug K-11. Measure voltage at relay socket Pin B. Is voltage +24VDC (R-S-R switch) in Run position?	6	7
6.	Replace K-11 relay.	—	—
7.	Check voltage at R-S-R switch terminal 6 (switch in Run position), if not +24VDC, replace switch. Check wiring between switch and K-11 relay. Repair as necessary.	—	—
8.	Does K-13 starter relay actuate? Actuation can be verified by sound or feel.	9	11
9.	Measure voltage at large terminal on starter. Is voltage +24VDC?	10	11
10.	Replace starter.	—	—
11.	Apply temporary jumper between TB-11 terminal 26 and K-13 terminal 2. Does relay actuate?	14	12
12.	Measure voltage at TB11-26. Is voltage +24VDC?	13	16
13.	Replace K-13 starter solenoid.	—	—
14.	Measure voltage at pin 1 of K-14. Starter Protection Relay. If no voltage, measure at pin 7. Is voltage +24VDC?	15	—
15.	(a) If +24VDC at pin 1, replace A14 cranker module. (b) If +24VDC at pin 7 but not at pin 1, replace K-14 Starter protection relay. (c) If no voltage at pin 7, measure voltage at pin 7 of K-11. If voltage (+24VDC) at pin 7, check wire from K-11 Pin 4 to K14 pin 7. Repair if necessary or replace K-11 relay.	—	—
16.	Toggle R-S-R switch between Run and Stop and observe K-12 relay. Does K-12 relay actuate?	19	17
17.	Apply temporary jumper from TB-11 terminal 24 to K-12 Pin B. Does relay actuate?	19	18
18.	Replace K-12 relay.	—	—

ITEM	B. ENGINE FAILS TO CRANK. SWITCH IN "REMOTE" POSITION.	YES	NO
	<p>This Guide is concerned with failure to crank in Remote only. Fault light "ON" should be solved after this malfunction, refer to section on Fault Lights.</p>		
1.	<p>Are switches in correct starting position? Set-control panel R-S-R switch to Remote? Remote station switch to Start?</p> <p>If remote station is an ONAN automatic transfer switch, the test transfer switch should be placed to NORMAL position.</p>	2	—
2.	<p>Place set control panel R-S-R switch in Run position. Does set crank and start?</p>	3	Guide A
3.	<p>Return R-S-R switch to Remote (see item 6).</p> <p>a. If remote station is an ONAN automatic transfer switch, place Test transfer switch to TEST position. Does set crank?</p> <p>b. If remote station is not an ONAN automatic transfer switch, refer to operator's manual for manual start switch. Place to START. Does set crank?</p>	4 4	5 5
4.	<p>Replace T.D. Start/Stop module A15.</p>	—	—
5.	<p>Check wiring between generator set and remote station. Repair where necessary.</p>	—	—
6.	<p>If remote station is a manual switch box proceed as follows: Return R-S-R switch to REMOTE. Apply jumper across TB-12 - B+ and TB12-RMT. After 10 seconds does engine crank?</p>	7	10
7.	<p>Apply jumper across remote station Start switch. Does engine crank?</p>	8	—
8.	<p>Replace remote station START switch.</p>	—	—
9.	<p>Check wiring between generator set and remote station. Repair where necessary.</p>	—	—
10.	<p>Replace T.D. Start/Stop module, A15.</p>	—	—

QUESTION AND ANSWER TROUBLESHOOTING GUIDE
FIVE LIGHT SYSTEM

ITEM	C. ENGINE MALFUNCTION SHUTDOWN, FAULT LIGHT "ON".	YES	NO
1.	Which of the following fault lamps is lit a. Overcrank (after 75-seconds)? b. Overspeed? c. Low Oil Pressure? d. High Engine Temperature?	2 5 10 14	— — — —
2.	Check fuel system: Are valves open? Tanks full?	— 3	— —
3.	Check Ignition system. Refer to troubleshooting section of engine manufacturer's operator's manual. Is ignition OK?	4	—
4.	Refer to Troubleshooting guide A, items 2 through 7.	—	—
5.	Check throttles for freedom of movement. Are throttle linkages binding? Governor linkage free and clear?	6	—
6.	Is injector rack movement free?	7	—
7.	Remove air cleaners. Are filters clean and dry? No fuel saturation?	8	—
8.	Restart engine. Is Governor set correctly? Woodward governors have optionally installed externally-controlled motors. Adjust governor with switch on control panel.	9	—
9.	Replace Engine Monitor module A14.	—	—
10.	Is oil at correct level?	11	—
11.	Is oil pressure sensor working correctly?	12	—
12.	Disconnect wire from TB11-30. Does light remain ON?	13	—
13.	Replace Engine Monitor module A14.	—	—
14.	Is coolant level correct? If city water cooled, is input solenoid valve open?	15	—
15.	Is radiator cooling duct free of obstruction?	16	—
16.	Are fan belts tight?	17	—
17.	Is temperature sensor OK?	18	—
18.	Is thermostat opening?	—	—
19.	Disconnect wire A11-1 from TB11-34. Does light remain ON?	20	—
20.	Replace Engine monitor module, A14.	—	—

QUESTION AND ANSWER TROUBLESHOOTING GUIDE

SINGLE LIGHT SYSTEM

ITEM	D. ENGINE MALFUNCTION SHUTDOWN. FAULT LIGHT ON.	YES	NO
1.	Are fuel valves open?	2	—
2.	Are fuel tanks full?	3	—
3.	Place R-S-R switch to Stop. Depress Reset Switch. Place Switch to run. Does Engine start and continue to run? Does engine start? Does engine start and shutdown?	— — 5	— 4 —
4.	If natural-gas operated engine check ignition. Is ignition OK (K15 relay operated)?	—	—
5.	Is the elapsed time between start and shutdown less than 5 seconds?	8	6
6.	Is the elapsed time between start and shutdown approximately 10-seconds? Penn State units, ignore this instruction.	13	7
7.	Is the elapsed time between start and shutdown approximately 75-seconds?	21	—
8.	Check throttle linkage, governor linkage for freedom of movement. Do controls operate easily, no binding?	9	—
9.	Is injector rack movement free?	10	—
10.	Remove air cleaners. Are filters clean and dry? No fuel saturation.	11	—
11.	Is governor speed control set correctly? See operator's manual for correct adjustment procedure.	12	—
12.	Replace Engine Monitor module, A14.	—	—
13.	Is oil at correct level?	14	—
14.	Is oil pressure sensor working correctly?	15	—
15.	Check water temperature gauge on instrument panel. Is temperature reading high? (i.e., full scale)	16	19
16.	Check coolant level. WARNING Bleed off block coolant pressure before attempting to remove filler cap. Severe liquid burns could result from erupting coolant. Is coolant level correct?	17	—
17.	On city water cooled units, is input valve open?	17	—
18.	On radiator cooled units, is radiator clear of obstruction?	19	—
19.	Is engine temperature thermal switch operating OK?	20	—
20.	Replace Engine Monitor Module A12.	—	—

ITEM	D. ENGINE MALFUNCTION SHUTDOWN. FAULT LIGHT ON. (Continued)	YES	NO
21.	Toggle R-S-R Switch between Stop and Run. Does relay K11 actuate (observe visually)?	—	22
22.	Apply temporary jumper between K11 pin A and ground terminal. Toggle R-S-R switch. Does relay K11 actuate?	23	24
23.	Replace Starter Disconnect module, A17.	—	—
24.	Unplug K11. Measure voltage at relay socket Pin B. Is voltage +24VDC (R-S-R switch in Run position)?	25	26
25.	Replace K11 relay.	—	—
26.	Check voltage at R-S-R switch terminal 6 (switch in Run position). If not +24VDC, replace switch. Check wiring between switch and K11 relay. Repair as necessary.	—	—

NOTES

WIRING DIAGRAMS

TITLE	PAGE
1. 300-0954 A11. Engine Shutdown Module	47
2. 300-0953 A12. Engine Monitor Module	49
3. 300-0955 A13. Remote Indicator Module.....	51
4. 300-0956 A14. Cycle Cranker Module	53
5. 300-0977 A14A. Cranker, Standard Module	55
6. 300-0973 A15. TD Start/Stop Module	57
7. 300-0987 A15A. Bypass Module	59
8. 300-0957 A16. Overspeed Sensor Module.....	61
9. 300-0958 A17. Starter Disconnect Module	63
10. 612-4558 STD YB Generator	64
11. 612-4753 YB with Governor Control	65
12. 612-4795 YB with Wattmeter and Transducer.....	66
13. 625-1245 Voltage Regulator (VR21)	67
14. 612-4546 WF with Single Light Control	68
15. 612-4547 WF with Five Light Control	69
16. 612-4548 FT with Single Light Control	70
17. 612-4549 FT with Five Light Control	71
18. 612-4645 DYH, DYB, DFT, DFU Single Light Control	72
19. 612-4754 DYH, DYB, DFT, DFU Five Light Control	73
* 20. 300-0964 A11 Engine Shutdown Module, DHA-DHB	74
* 21. 612-5048 DHA, DHB, Single Light Control	75
* 22. 612-5049 DHA, DHB, Five Light Control	76

* - Use for DHA and DHB.

A11. ENGINE SHUTDOWN MODULE

Receives signals from Engine Monitor module (A12) to apply +24VDC to alarm circuit and break circuit to de-energize relay K12 for engine shutdown.

Voltage Measurements.

Condition: R-S-R switch in Stop position.

+24VDC at pin 8 only (O-VDC when Alarm Reset switch depressed).

Condition: R-S-R switch in Run or Remote (Engine running).

Pin	1-	Light	5-	Light	+24VDC	OVDVDC	Gnd
1	X						X
2		X				X	
3		X				X	
5		X		X			
7		X		X			
8		X		X			
14		X		X			
16		X				X	
17		X		X		X	
18		X		X		X	
19		X		X		X	
20		X		X		X	
21		X					X
22		X				X	

Condition: R-S-R in Run or Remote (Engine Malfunction Shutdown)

Pin	1-	Light	5-	Light	+24VDC	OVDVDC	Gnd	Inf	LOP	HET	O/S	O/C
1		X		X			X		X	X		
2		X		X								
3		X		X		X		X	X	X		
5		X		X				X				
7		X		X		X	X				X	X
8		X		X		X						
14		X		X		X						
16		X		X		X			X			
17		X		X								
18		X		X								
19		X		X		X						
20		X		X		X						
21		X		X			X					
22		X		X		X						

Do not make measurements on any module, unless that module is first plugged into an extender board.

A12. ENGINE MONITOR MODULE

Applies signals to A11 module for alarm and engine shutdown functions. Cranking time of 75-seconds is adjusted on this board.

Voltage Measurements.

Condition: R-S-R switch in Stop position.

Pin	1-	Light	5-	Light	+24VDC	OVDC	Grnd	Inf	LOP	HET	O/S	O/C
4	X		X		X		X					
8	X		X		X		X					
22	X		X		X		X					
	X		X*		X		X			X	X	X
	X		X*		X		X			X	X	X
	X		X		X		X			X	X	X
8	X		X		X		X			X	X	X
13/14	X		X		X		X			X	X	X
18	X		X		X		X			X	X	X
20	X		X		X		X			X	X	X
21	X*		X		X		X			X	X	X
22	X		X		X		X			X	X	X

Condition: R-S-R Switch in Run or Remote — Engine Running.


Pin	1-	Light	5-	Light	+24VDC	OVDC	Grnd	Inf	LOP	HET	O/S	O/C
1	X		X		X		X					
2	X		X		X		X					
4	X		X		X		X					
5	X		X		X		X					
6	X		X		X		X					
8	X		X		X		X					
13/14	X		X		X		X					
18	X		X		X		X					
20	X		X		X		X					
21	X		X		X		X					
22	X		X		X		X					

* - Normally +24VDC.


Do not make measurements on any module unless an extender card is used. Make measurements at extender card only.

SCHEMATIC DIAGRAM

POTENTIOMETERS R1 AND R11 ARE ADJUSTABLE FROM 0 TO 90 SECONDS.

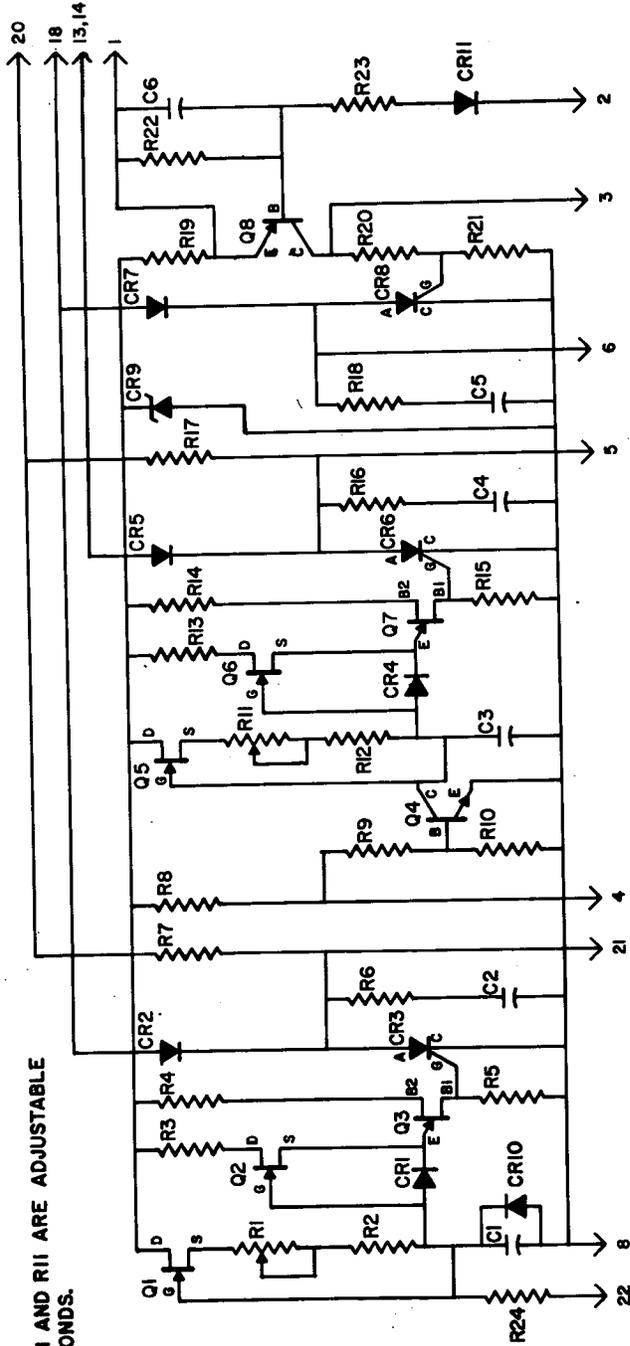


MECHANICAL ASSY

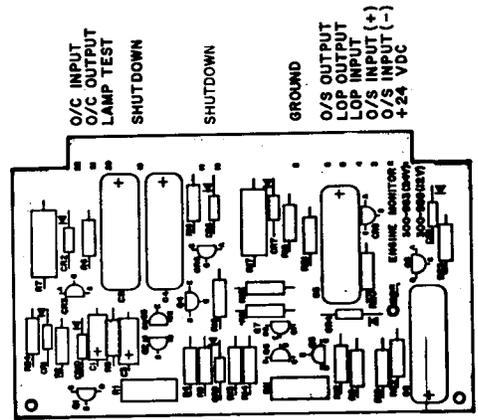

SPECIFICATIONS

- B+ POWER 24 ± 6 VDC
- LOW OIL PRESSURE TIME DELAY (TDC) 12.5 ± 2.5 SEC.
- OVERCRANK TIME DELAY (TDC) 75 ± 5 SEC.
- STORAGE TEMPERATURE -40°C TO 100°C
- OPERATING TEMPERATURE -40°C TO 80°C

DIAGRAM SYMBOL

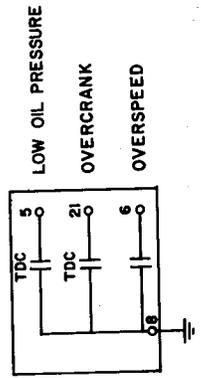

Quantity	Price	By	Per	Lot	By	Per	Lot	By	Per	Lot
Order No.	10-13-72	IC NONE	CL	CL	CL	CL	CL	CL	CL	CL
DIVISION OF ORION CORPORATION Minneapolis, Minnesota										
MODULE - ENG MONITOR(24V)										
YB 300-953										

A13. REMOTE INDICATOR MODULE

Used with five fault light systems only, to light fault indicators at remote stations

Voltage Measurements.

Condition: R-S-R switch in Stop position.

Pin	1-	Light	+24VDC	OVDC	End	Inf
1	X	X		X		
thru						
10	X	X		X		
11	X	X	X	X		
12	X	X		X		
13	X	X		X	X	
14	X	X		X		
thru						
21	X	X		X		

Condition: R-S-R Switch in Run or Remote — Engine Running.

Pin	1-	Light	+24VDC	OVDC	End	Inf	LOP	HET	O/S	O/C
1	X	X	X							
2	X	X		X						
3	X	X	X							
4	X	X		X						
5	X	X	X							
6	X	X		X						
7	X	X	X							
8	X	X	X*							
9	X	X	X*							
10	X	X	X**							
11	X	X	X**							
12	X	X	X**							
13	X	X	X	X						
14	X	X	X		X					
15	X	X	X		X					
20	X	X	X		X					

Condition: R-S-R Switch in Run or Remote — Engine Malfunction Shutdown.

Pin	1-	Light	+24VDC	OVDC	End	Inf	LOP	HET	O/S	O/C
1	X	X		X			X			
2	X	X		X			X			
3	X	X		X					X	
4	X	X		X					X	
5	X	X		X						X
6	X	X		X						X
7	X	X		X						
8	X	X	X*							
9	X	X	X*							
10	X	X	X*							
11	X	X	X*							
12	X	X	X							
13	X	X	X					X		
14	X	X	X		X					
15	X	X	X		X					
20	X	X	X		X		X			
21	X	X	X		X					

* - OVDC until engine hot.
 ** - 24VDC until engine hot.

Do not make voltage measurements on any module unless an extender card is used. Make measurements at extender card only.

A14 CYCLE CRANKING MODULE

Adjustable time limits within this module provide for 3 Crank and 2 Rest period cycles within the 75-second parameter of the overcrank set by module A12.

Cranking Cycle

Pin	+24VDC	OVD	Gnd
1	X		
2	X		
3	X		
4	X		
5	X		
7			X


Rest Cycle

Pin	+24VDC	OVD	Gnd
1		X	
2		X	
3	X		
4	X		
5	X		
7			X

Engine Running


Pin	+24VDC	OVD	Gnd
1		X	
2		X	
3		X	
4		X	
5		X	
7			X

SCHEMATIC DIAGRAM

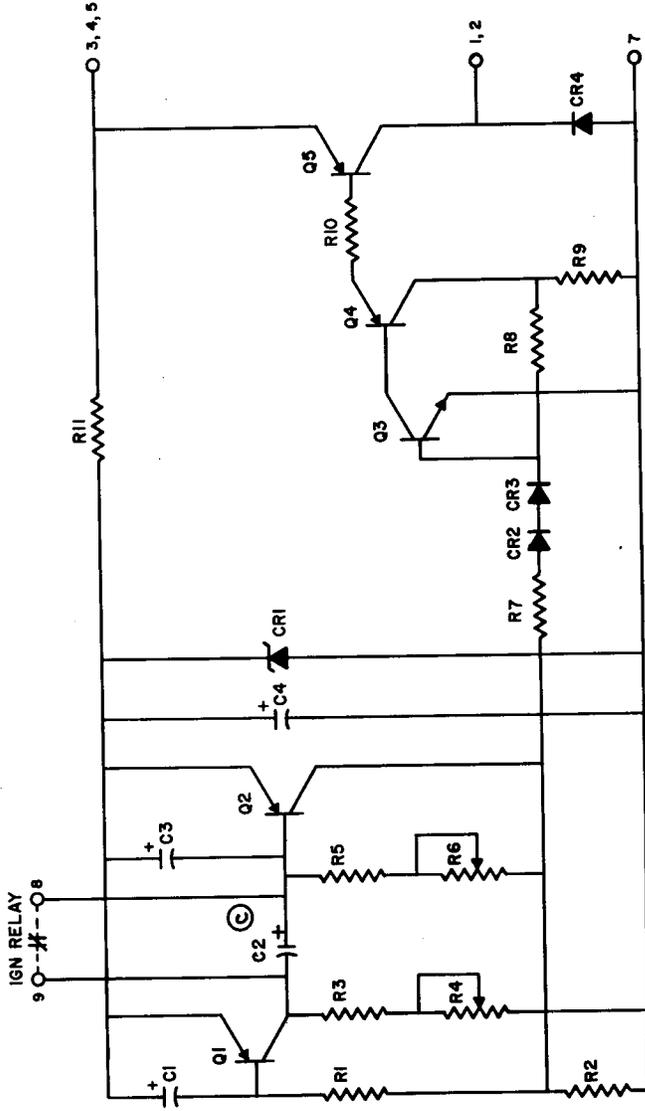

FACTORY ADJUST POTENTIOMETER R6 FOR
10-2 SEC REST TIME
FACTORY ADJUST POTENTIOMETER R4 FOR
15-2 SEC CRANK TIME


MECHANICAL ASSY

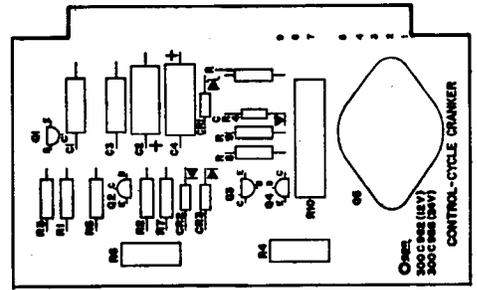

SPECIFICATIONS

- B+ POWER 24 ± 6 VDC
- CRANK TIME 15 ± 2 SEC
- REST TIME 10 ± 2 SEC
- OPERATING TEMPERATURE -40°C TO 80°C
- STORAGE TEMPERATURE -40°C TO 100°C

DIAGRAM SYMBOL

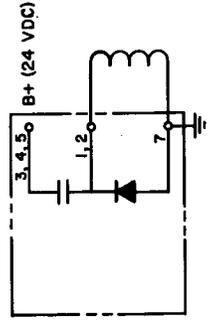

Qty	price	sp	per	ms	✓	 DIVISION OF OMRON CORPORATION Minneapolis, Minnesota	MODULE-CYCLE CRANKER(24V)	
Weld	no	bug	gd	gc	✓			
sec	branch	crank	ct	cr	✓			
DATE	12-12-72	IC-NONE						
YB							300-956	C

A14A. STANDARD CRANKING MODULE

Allows engine to crank until it either starts or the Overcrank circuit in module A12 shuts down the cranking system at 75-seconds.

Cranking Cycle

Pin	+24VDC	OVDC	Gnd
2	X		
3	X		


Engine Running

Pin	+24VDC	OVDC
2		X
3		X



SCHEMATIC DIAGRAM



MECHANICAL ASSY

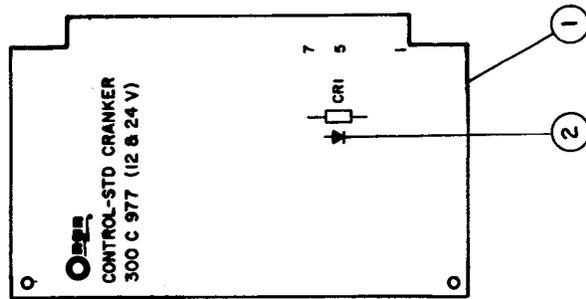

TEST DIAGRAM

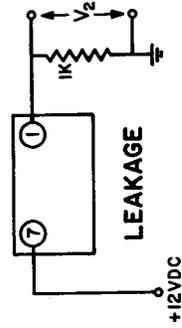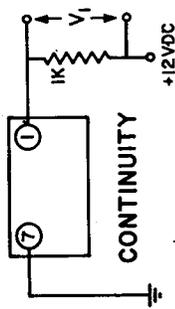

REF. DES.	ITEM	QTY	SIZE	DESCRIPTION OR MATERIAL
CRI	3	357-4	A	RECTIFIER-DIODE
	2	98-2526	A	SILKSCREEN-PC BD
	1	332-1552	D	PRINTED CIRCUIT BOARD

REF. DES.	ITEM	QTY	SIZE	DESCRIPTION OR MATERIAL
as Bushard				DIVISION OF OMAN CORPORATION Minneapolis, Minnesota
crs CDR				
DATE	11-29-72	BY	NONE	
REV	44	BY	YB	
APP				300-977

A15 TD START/STOP MODULE

Available as an option, this module allows time delayed start or stop operation from a remote station. Delay times are adjustable through rheostats, accessible from the module panel, and are clearly identified.

Voltage Measurements.

Condition: R-S-R switch in Remote, remote start switch OFF.

Pin	1- Light	5- Light	+24VDC	0VDC	Gnd
1	X	X		X	
2	X	X		X	
5	X	X			X
6	X	X			X
9	X	X		X	
12	X	X		X	
17	X	X		X	
18	X	X		X	
20	X	X			X
21	X	X		X	

Condition: R-S-R Switch in Remote, remote start switch ON, engine running.

Pin	1- Light	5- Light	+24VDC	0VDC	Gnd
1	X	X	X*		
2	X	X	X*		
5	X	X			X
6	X	X			X
9	X	X	X		
12	X	X	X*		
17	X	X	X		
18	X	X	X		
20	X	X			X
21	X	X	X		

* - These pins will remain at +24VDC until Stop TD period has elapsed, when they will drop to 0-VDC.

Condition: Engine malfunction shutdown.

Above voltages (i.e., engine running) do not change.

Do not make voltage measurements on any card unless an extender card is used. Make measurements at extender card only.

A15A. BYPASS PLUG MODULE

Standard Installation.

This module is used when delays in engine start or stop are not required, or when a time delay module is used in an Automatic Transfer Switch. A passive unit, it is only required with Remote start/stop controls.

Voltage Measurements.

Condition: R-S-R switch in Stop position.

Pin	1-	Light	5-	Light	+24VDC	0VDC	Gnd
1	X		X		X		
2	X		X		X		
6	X		X			X	
18	X		X		X		
20	X		X			X	
21	X		X				X

Condition: R-S-R Switch in Run position, engine running.

Pin	1-	Light	5-	Light	+24VDC	0VDC	Gnd
1	X		X		X		
2	X		X		X		
6	X		X				X
18	X		X			X	
20	X		X			X	
21	X		X			X	

Condition: R-S-R Switch in Run position, engine running.

Pin	1-	Light	5-	Light	+24VDC	0VDC	Gnd
1	X		X		X		
2	X		X		X		
6	X		X				X
18	X		X		X		
20	X		X				X
21	X		X		X		

Condition: R-S-R switch in either Run or Remote, engine malfunction shutdown.

No change from above Run or Remote conditions.

NOTE 1. Do not make voltage measurements unless this module is first plugged into an extender card.

2. If replacing this Bypass module, verify that —

- a. Switch S2 is open.
- b. Switch S1 is open.

A16. OVERSPEED SENSOR MODULE

Standard installation, shuts down the generator set in the event of an overspeed condition.

Voltage Measurements.

Condition: R-S-R switch in Stop position.

Pin	1- Light	5- Light	+24VDC	OVDC	Gnd	600 Hz*
1	X	X				X+
2	X	X				X+
3	X	X			X	
4	X	X			X	
5	X	X		X		
6	X	X		X		
17	X	X	X			
18	X	X	X			
19	X	X				X**
20	X	X				X**
21	X	X				X**
22	X	X				X**

* - 1800 r/min frequency.

** - Frequency amplitude 200- to 400-MVAC sine wave.


+ - Pins 1 and 2; frequency amplitude 4- to 5-VDC square wave.

Condition: R-S-R Switch in Run or Remote position, Engine Overpseed Shutdown.

Pin	1- Light	5- Light	+24VDC	OVDC	Gnd	600 Hz*	OHZ
1	X	X					X
2	X	X					X
3	X	X			X		
4	X	X			X		
5	X	X			X		
6	X	X			X		
17	X	X	X				
18	X	X	X				
19	X	X					X
20	X	X					X
21	X	X					X
22	X	X					

Do not make voltage measurement on any module unless an extender card is used. Make measurements on extender card.


SCHEMATIC

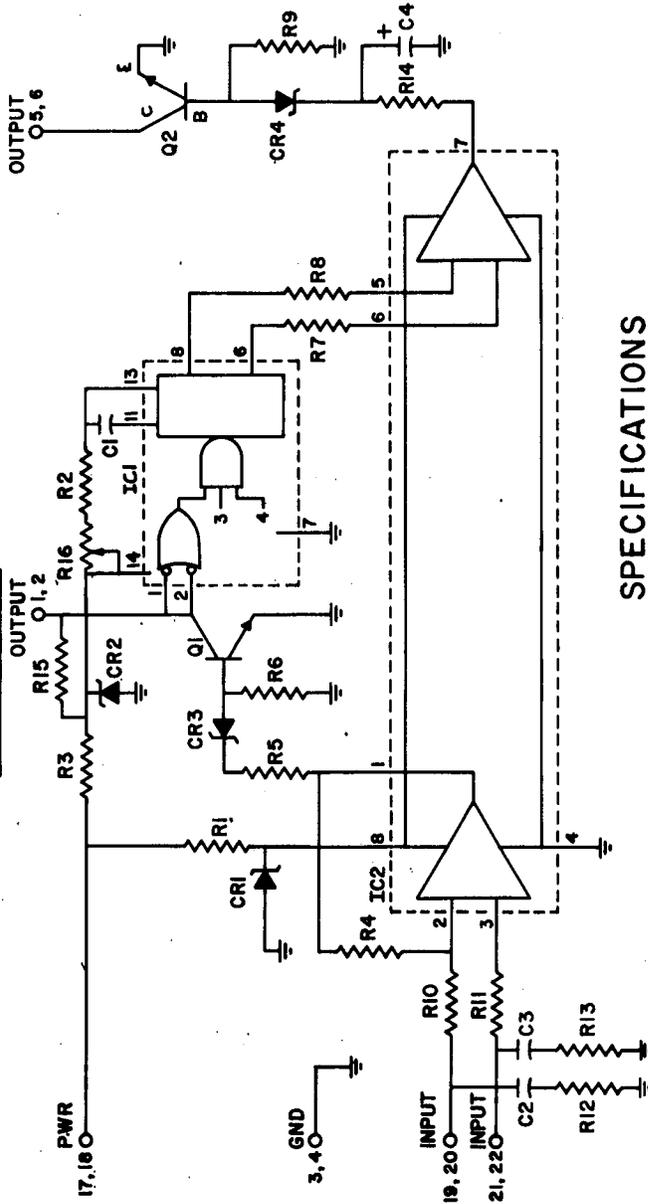


SPECIFICATIONS

INPUT VOLTAGE.....	300±100 MVAC
INPUT FREQUENCY.....	0-800 HZ
VOLTAGE B+.....	24 ±6 VDC
OUTPUT CURRENT	
OUTPUT 1, 2.....	100 MA MAX
OUTPUT 5, 6.....	100 MA MAX
OUTPUT VOLTAGE	
OUTPUT 1, 2.....	+0 VDC
OUTPUT 5, 6.....	24 ±6 VDC

MECHANICAL ASSY

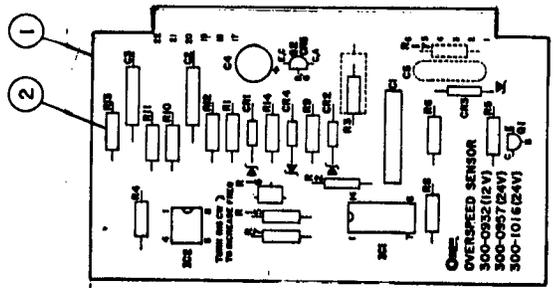

SYMBOL FOR SCHEMATIC DIAGRAM

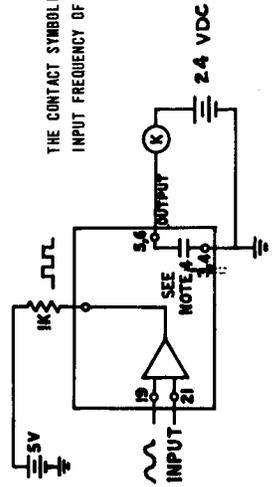

THE CONTACT SYMBOLIZES A SOLID STATE SWITCH THAT CLOSSES AT AN INPUT FREQUENCY OF 700 HZ ±30 HZ.

OMRON		DIVISION OF OMRON CORPORATION		MINNEAPOLIS, MINNESOTA	
DATE	11-10-72	REV	1	BY	YB
NO.	300-0957	REV	1	BY	C

A17. STARTER DISCONNECT MODULE

Standard installation, disconnects starter circuit at 450 to 570 Hz, reconnects starter at 0- to 30 Hz.

Voltage Measurement.

Condition: R-S-R switch in Stop position.

Pin	1-	Light	5-	Light	+24VDC	0VDC	Gnd	0- to 570 Hz*
1	X		X				X	
17	X		X				X	
19	X		X		X			
20	X		X		X			
21	X		X					X
22	X		X					X


Condition: Engine running.

Pin	1-	Light	5-	Light	+24VDC	0VDC	Gnd	600 Hz*
1	X		X		X			
17	X		X				X	
19	X		X		X			
20	X		X		X			
21	X		X					X
22	X		X					X


* - Measure with an oscilloscope. Frequency amplitude 5VDC, square wave.

Do not make voltage measurements on any module unless an extender card is used. Make measurements on extender card.


SCHEMATIC

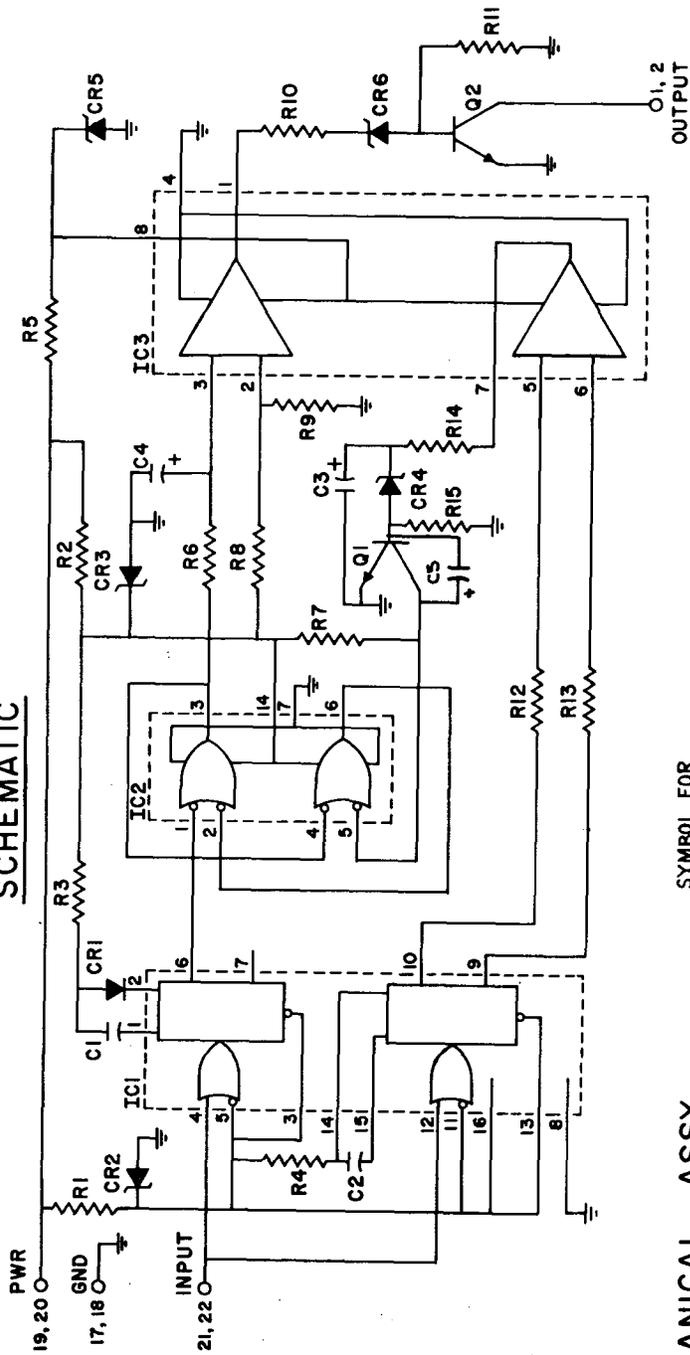

MECHANICAL ASSY

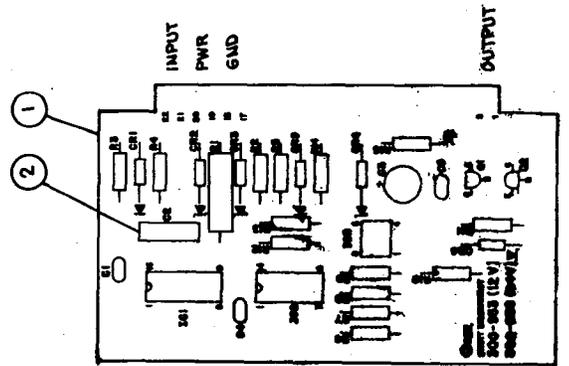

SYMBOL FOR SCHEMATIC DIAGRAM

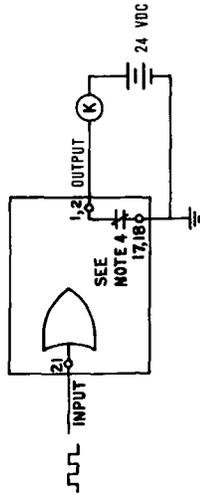

THE CONTACT SYMBOLIZES A SOLID STATE SWITCH THAT OPENS AT AN INPUT FREQUENCY OF 170 HZ \pm 20 HZ AND RECLOSES AT 10 \pm 10 HZ.

SPECIFICATIONS

INPUT VOLTAGE	5V \pm 1
INPUT FREQUENCY	0-400 HZ
B+ POWER	24 \pm 6 VDC
LOAD CURRENT	100MA MAX
LOAD VOLTAGE	24 \pm 6 VDC






Year	price	ip	pur	log	sc
week	to	log	sc	cont	ck
DATE	11-8-72	sk	—		

Origin DIVISION OF ONAN CORPORATION
 Minneapolis, Minnesota


MODULE-STARTER DISC

YB 300-0958

612-4558

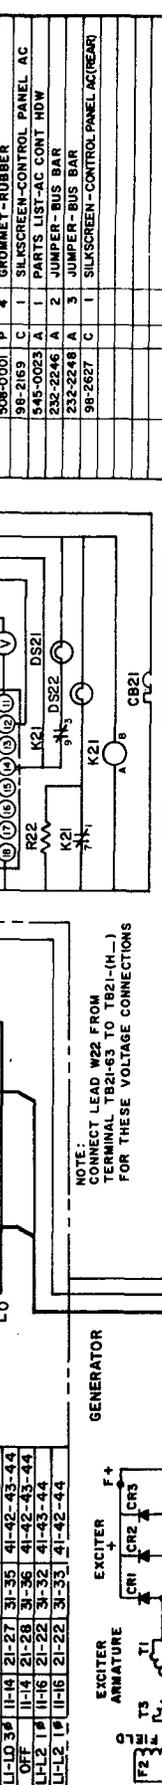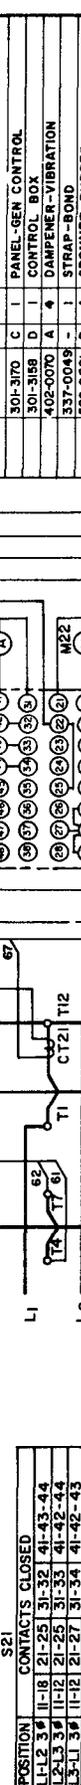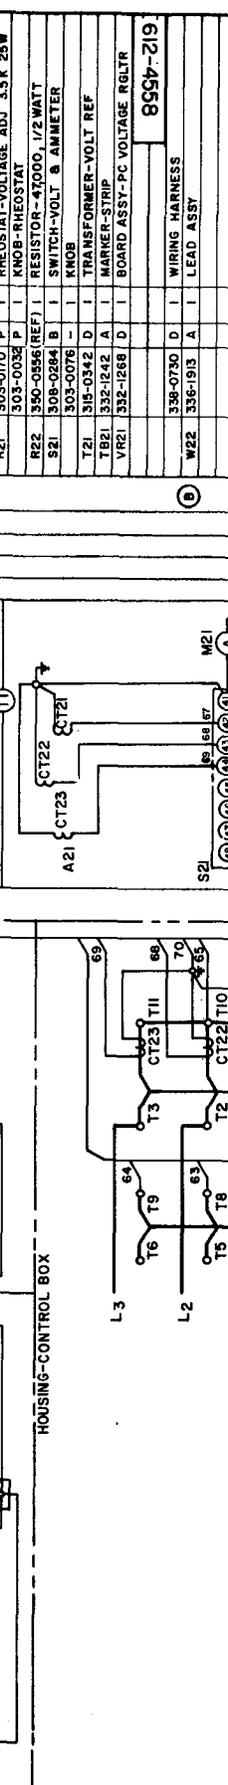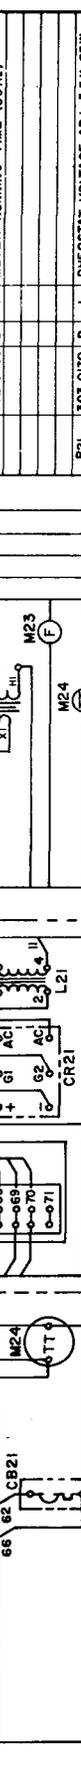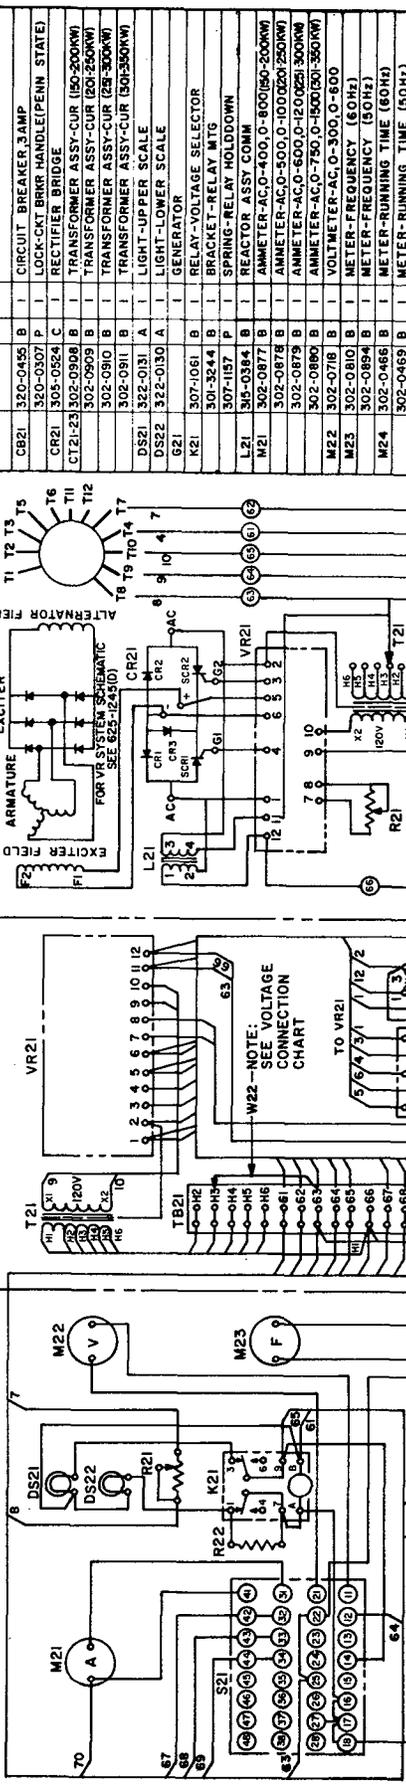


REF. DES.	PART NO.	QTY.	DESCRIPTION
CR21	320-0455	B	CIRCUIT BREAKER, 3 AMP
CR22	320-0307	P	LOCK-OUT BRKR HANDLE (PENN. STATE)
CR23	305-0524	C	RECTIFIER BRIDGE
CR24	305-0908	B	TRANSFORMER ASSY-CUR (150-200KW)
CR25	305-0909	B	TRANSFORMER ASSY-CUR (201-250KW)
CR26	305-0910	B	TRANSFORMER ASSY-CUR (251-300KW)
CR27	305-0911	B	TRANSFORMER ASSY-CUR (301-350KW)
DS21	322-0131	A	LIGHT-UPPER SCALE
DS22	322-0130	A	LIGHT-LOWER SCALE
G21	307-1061	B	GENERATOR
K21	307-1061	B	RELAY-VOLTAGE SELECTOR
K22	301-3244	B	BRACKET-RELAY MFG
K23	307-157	P	SPRING-RELAY HOLD-DOWN
L21	315-0394	B	REACTOR ASSY COMM
M21	302-0877	B	AMMETER-AC, 0-400, 0-800 (150-200KW)
M22	302-0878	B	AMMETER-AC, 0-600, 0-1200 (201-250KW)
M23	302-0879	B	AMMETER-AC, 0-750, 0-1500 (251-300KW)
M24	302-0880	B	AMMETER-AC, 0-300, 0-600
M25	302-0810	B	METER-FREQUENCY (60 HZ)
M26	302-0894	B	METER-FREQUENCY (60 HZ)
M27	302-0466	B	METER-RUNNING TIME (60 HZ)
M28	302-0469	B	METER-RUNNING TIME (50 HZ)
R21	305-0170	P	RHEOSTAT-VOLTAGE ADJ 3.3 K 25W
R22	305-0032	P	KNOB-RHEOSTAT
S21	350-0556 (REF)	I	RESISTOR-47000, 1/2 WATT
S22	308-0284	B	SWITCH-VOLT & AMMETER
S23	303-0076	-	KNOB
T21	315-0342	D	TRANSFORMER-VOLT REF
T22	332-1242	A	MARKER-STRIP
VR21	332-1268	D	BOARD ASSY-PC VOLTAGE RGLTR
W22	336-0730	D	WIRING HARNESS
W23	336-1913	A	LEAD ASSY
X21	301-3170	C	PANEL-GEN CONTROL
X22	301-3189	D	CONTROL BOX
X23	402-0070	A	DAMPENER-VIBRATION
X24	337-0049	-	STRAP-BOND
X25	508-0001	P	GROMMET-RUBBER
X26	98-2169	C	SHIMSCREEN-CONTROL PANEL AC
X27	545-0023	A	PARTS LIST-AC CONT ROW
X28	232-2246	A	JUMPER-BUS BAR
X29	232-2248	A	JUMPER-BUS BAR
X30	98-2627	C	SHIMSCREEN-CONTROL PANEL AC (REAR)

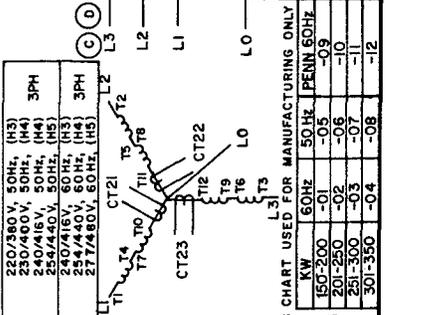

THIS CHART USED FOR MANUFACTURING ONLY

WIRE NO.	WIRE SIZE	TERMINAL	DESCRIPTION
1	200-350KW-17R/1	1	BRUSHLESS
2	200-350KW-517R/1	2	BRUSHLESS
3	3PH, 50/60HZ	3	12W RECONNECTABLE

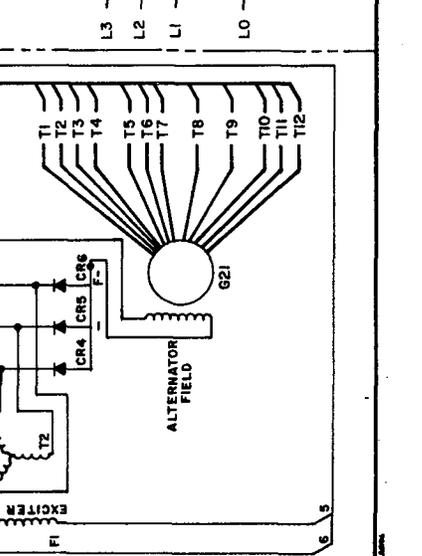

612-4558

CONTROL-GEN SET AC (WIRING DIAGRAM)

8599-219

DATE 7-30-73 BY CIP 3H CDR PAI

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

REVISION: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44

612-4753

REAR VIEW PANEL



WIRING DIAGRAM

CONTROL BOX (INSIDE)

SCHEMATIC DIAGRAM

AC CONTROL

PARTS LIST

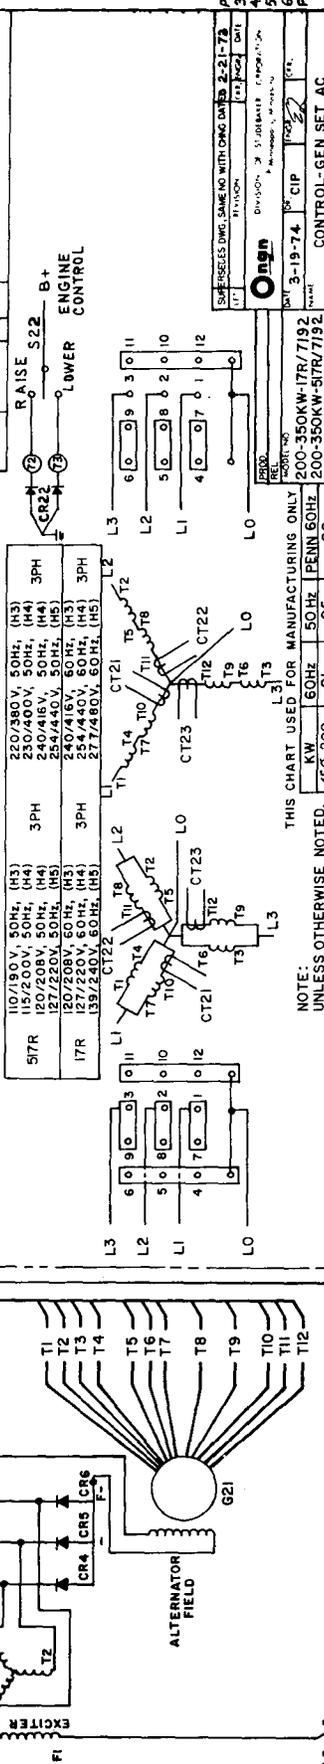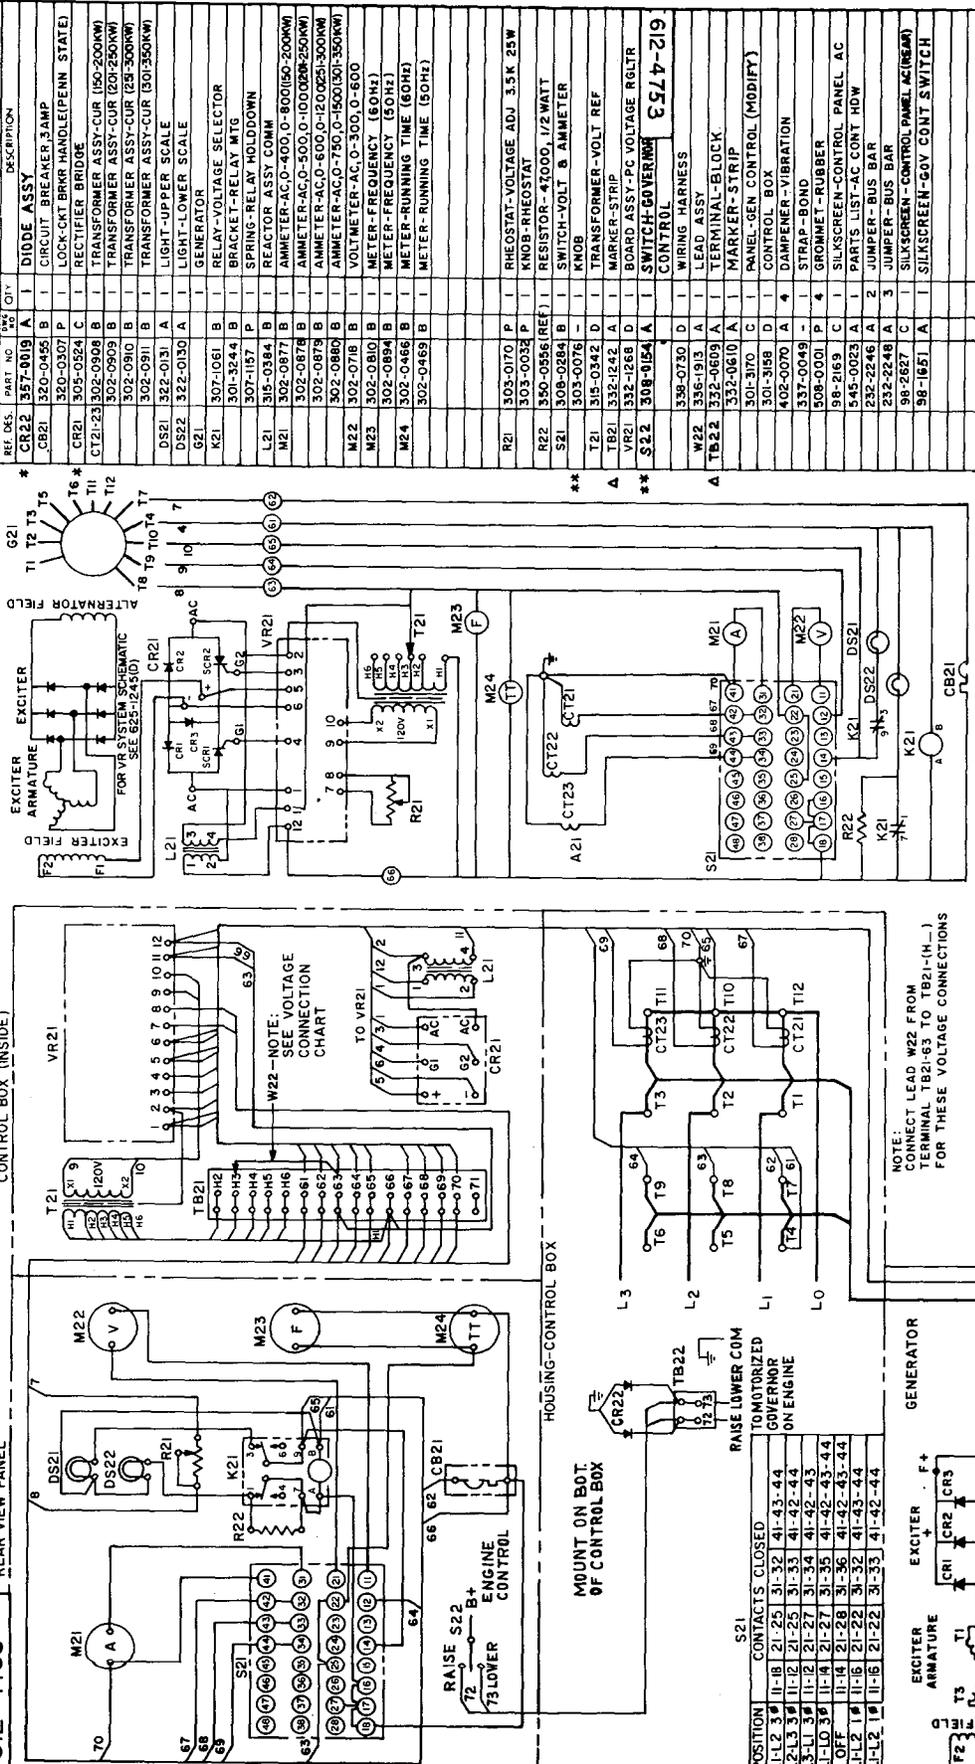

POSITION	CONTACTS CLOSED	S21
L1-L2	3#	11-18
L2-L3	3#	21-25
L3-L1	3#	31-33
L1-L0	3#	41-42-44
OFF	1#	21-27
L1-L2	1#	31-35
L1-L2	1#	41-42-43-44
L1-L2	1#	51-52
L1-L2	1#	61-62
L1-L2	1#	71-72
L1-L2	1#	81-82
L1-L2	1#	91-92
L1-L2	1#	101-102
L1-L2	1#	111-112
L1-L2	1#	121-122
L1-L2	1#	131-132
L1-L2	1#	141-142-44

REF. DES.	PART NO.	QTY	DESCRIPTION
CR22	357-0019	1	DIDDE ASSY
CB21	320-0495	1	CIRCUIT BREAKER 3AMP
CR21	320-0307	1	LOCK-GTK BRKR HANDLE(PENN STATE)
CR21	305-0524	1	RECTIFIER BRIDGE
CT21-23	302-0908	3	TRANSFORMER ASSY-CUR (150-200KW)
CR21	302-0909	1	TRANSFORMER ASSY-CUR (201-250KW)
CR21	302-0910	1	TRANSFORMER ASSY-CUR (251-300KW)
CR21	302-0911	1	TRANSFORMER ASSY-CUR (301-350KW)
DS21	322-0131	1	LIGHT-UPPER SCALE
DS22	322-0130	1	LIGHT-LOWER SCALE
G21	307-1061	1	GENERATOR
R21	301-3244	1	RELAY-VOLTAGE SELECTOR
R21	301-3244	1	RELAY-RELAY MTR
L21	305-0384	1	SPRING-RELAY HOLDDOWN
M21	302-0877	1	REACTOR ASSY COMM
M21	302-0878	1	AMMETER-AC 0-400.0-800(150-200KW)
M21	302-0879	1	AMMETER-AC 0-500.0-1000(201-250KW)
M21	302-0880	1	AMMETER-AC 0-750.0-1500(301-350KW)
M22	302-0718	1	VOLTMETER-AC 0-300.0-600
M23	302-0810	1	METER-FREQUENCY (50HZ)
M23	302-0809	1	METER-FREQUENCY (60HZ)
M24	302-0466	1	METER-RUNNING TIME (60HZ)
M24	302-0469	1	METER-RUNNING TIME (50HZ)
R21	303-0170	1	RHEOSTAT-VOLTAGE ADJ 3.5K 25W
R22	303-0034	1	KNOB-RHEOSTAT
R22	350-0556	1	RESISTOR-47000 1/2WATT
S21	308-0284	1	SWITCH-VOLT 8 AMMETER
S21	303-0076	1	KNOB
T21	315-0342	1	TRANSFORMER-VOLT REF
T21	332-1242	1	MARKER-STRIP
VR21	332-1268	1	BOARD ASSY-PC VOLTAGE RGLTR
S22	308-0154	1	SWITCH-GOVERNOR
S21	338-0730	1	WIRING HARNESS
W22	336-1913	1	LEAD ASSY
TB22	332-0610	1	TERMINAL-BLOCK
TB22	332-0610	1	MARKER-STRIP
I	301-3170	1	PANEL-GEN CONTROL (MODIFY)
I	301-3168	1	CONTROL BOX
I	402-0070	1	DAMPENER-VIBRATION
I	337-0049	1	STRAP-BOND
I	308-0001	1	GROMMET-RUBBER
I	98-2169	1	SILKSCREEN-CONTROL PANEL AC
I	545-0023	1	PARTS LIST-AC CONT HOW
I	232-2246	2	JUMPER-BUS BAR
I	232-2246	3	JUMPER-BUS BAR
I	98-2627	1	SILKSCREEN-CONTROL PANEL AC(REAM)
I	98-1651	1	SILKSCREEN-60V CONT SWITCH

REV.	DESCRIPTION	DATE
1	ISSUED	3-19-74
2	REVISED	3-19-74
3	REVISED	3-19-74
4	REVISED	3-19-74
5	REVISED	3-19-74
6	REVISED	3-19-74
7	REVISED	3-19-74
8	REVISED	3-19-74
9	REVISED	3-19-74
10	REVISED	3-19-74
11	REVISED	3-19-74
12	REVISED	3-19-74







THIS CHART USED FOR MANUFACTURING ONLY
 UNLESS OTHERWISE NOTED,
 ALL COMPONENTS ARE SHOWN
 IN THE DE-ENERGIZED
 POSITION

SEPIA FROM 612-4558

Rev. 7-75

REF. DES.	PART NO.	QTY	AC CONTROL	DESCRIPTION
A21	302-0321	C	1	WATT TRANSDUCKER
CB21	320-0455	B	1	CIRCUIT BREAKER-SAMP
CR21	320-0307	P	1	LOCK-CKT BRKR HANDLE(PENN STATE)
CT21-23	302-0524	C	1	RECTIFIER BRIDGE
DS21	302-0909	B	1	TRANSFORMER ASSY-CUR (200KW)
DS22	302-0910	B	1	TRANSFORMER ASSY-CUR (300KW)
DS23	302-0911	B	1	TRANSFORMER ASSY-CUR (350KW)
DS22	322-0130	A	1	LIGHT-LOWER SCALE
G21	307-1061	B	1	GENERATOR
K21	301-3244	B	1	RELAY-VOLTAGE SELECTOR
L21	307-1157	P	1	BRACKET-RELAY MTO
L21	315-0384	B	1	SPRING-RELAY HOLLOWDOWN
M21	302-0877	B	1	REACTOR ASSY COMM
M22	302-0878	B	1	AMMETER-AC-500.0-1000 (250KW)
M23	302-0879	B	1	AMMETER-AC-600.0-1200 (300KW)
M24	302-0880	B	1	AMMETER-AC-750.0-1500 (350KW)
M23	302-0810	B	1	VOLT METER-AC-0-300.0-600
M23	302-0894	B	1	METER-FREQUENCY (60HZ)
M24	302-0468	B	1	METER-RUNNING TIME (50HZ)
M25	302-0325	P	1	METER-FREQUENCY (60HZ)
M25	302-0327	P	1	METER-RUNNING TIME (50HZ)
M25	302-0328	P	1	WATTMETER-AC-300KW (200KW)
M25	302-0329	P	1	WATTMETER-AC-500KW (250KW)
R21	303-0170	P	1	WATTMETER-AC-500KW (300KW)
R21	303-0170	P	1	WATTMETER-AC-500KW (350KW)
R22	303-0039	P	1	RHEOSTAT-VOLTAGE ADJ. 3.5K 25W
R22	350-0556(REF)	I	1	RESISTOR-47000, 1/2 WATT
S21	308-0284	B	1	SWITCH-VOLT B AMMETER
S21	303-0076	-	1	KNOB
T21	315-0342	D	1	TRANSFORMER-VOLT REF
TB21	332-1242	A	1	MARKER-STRIP
VR21	332-1258	D	1	BOARD ASSY-PC VOLTAGE RGLTR
W22	358-0730	D	1	WIRING HARNESS
W22	336-1913	A	1	LEAD ASSY
301-3312	C	1	PANEL-GEN CONTROL	
301-3158	D	1	CONTROL BOX	
402-0070	A	4	DAMPENER-VIBRATION	
337-0049	-	1	STRAP-BOND	
508-0001	P	4	GROMMET-RUBBER	
98-2169	C	1	SILKSCREEN-CONTROL PANEL AC	
545-0023	A	1	PARTS LIST-AC CONT HDW	
232-2246	A	2	JUMPER-BUS BAR	
232-2248	A	3	JUMPER-BUS BAR	
98-2627	C	1	SILKSCREEN-CONTROL PANEL AC(REAR)	

REV. NO.	DESCRIPTION	DATE	BY
1	REVISED	11-27-74	JAR
2	REVISED	11-27-74	JAR
3	REVISED	11-27-74	JAR
4	REVISED	11-27-74	JAR
5	REVISED	11-27-74	JAR
6	REVISED	11-27-74	JAR
7	REVISED	11-27-74	JAR
8	REVISED	11-27-74	JAR
9	REVISED	11-27-74	JAR
10	REVISED	11-27-74	JAR
11	REVISED	11-27-74	JAR
12	REVISED	11-27-74	JAR
13	REVISED	11-27-74	JAR
14	REVISED	11-27-74	JAR
15	REVISED	11-27-74	JAR
16	REVISED	11-27-74	JAR
17	REVISED	11-27-74	JAR
18	REVISED	11-27-74	JAR
19	REVISED	11-27-74	JAR
20	REVISED	11-27-74	JAR
21	REVISED	11-27-74	JAR
22	REVISED	11-27-74	JAR
23	REVISED	11-27-74	JAR
24	REVISED	11-27-74	JAR
25	REVISED	11-27-74	JAR
26	REVISED	11-27-74	JAR
27	REVISED	11-27-74	JAR
28	REVISED	11-27-74	JAR
29	REVISED	11-27-74	JAR
30	REVISED	11-27-74	JAR
31	REVISED	11-27-74	JAR
32	REVISED	11-27-74	JAR
33	REVISED	11-27-74	JAR
34	REVISED	11-27-74	JAR
35	REVISED	11-27-74	JAR
36	REVISED	11-27-74	JAR
37	REVISED	11-27-74	JAR
38	REVISED	11-27-74	JAR
39	REVISED	11-27-74	JAR
40	REVISED	11-27-74	JAR
41	REVISED	11-27-74	JAR
42	REVISED	11-27-74	JAR
43	REVISED	11-27-74	JAR
44	REVISED	11-27-74	JAR
45	REVISED	11-27-74	JAR
46	REVISED	11-27-74	JAR
47	REVISED	11-27-74	JAR
48	REVISED	11-27-74	JAR
49	REVISED	11-27-74	JAR
50	REVISED	11-27-74	JAR
51	REVISED	11-27-74	JAR
52	REVISED	11-27-74	JAR
53	REVISED	11-27-74	JAR
54	REVISED	11-27-74	JAR
55	REVISED	11-27-74	JAR
56	REVISED	11-27-74	JAR
57	REVISED	11-27-74	JAR
58	REVISED	11-27-74	JAR
59	REVISED	11-27-74	JAR
60	REVISED	11-27-74	JAR
61	REVISED	11-27-74	JAR
62	REVISED	11-27-74	JAR
63	REVISED	11-27-74	JAR
64	REVISED	11-27-74	JAR
65	REVISED	11-27-74	JAR
66	REVISED	11-27-74	JAR
67	REVISED	11-27-74	JAR
68	REVISED	11-27-74	JAR
69	REVISED	11-27-74	JAR
70	REVISED	11-27-74	JAR
71	REVISED	11-27-74	JAR
72	REVISED	11-27-74	JAR
73	REVISED	11-27-74	JAR
74	REVISED	11-27-74	JAR
75	REVISED	11-27-74	JAR
76	REVISED	11-27-74	JAR
77	REVISED	11-27-74	JAR
78	REVISED	11-27-74	JAR
79	REVISED	11-27-74	JAR
80	REVISED	11-27-74	JAR
81	REVISED	11-27-74	JAR
82	REVISED	11-27-74	JAR
83	REVISED	11-27-74	JAR
84	REVISED	11-27-74	JAR
85	REVISED	11-27-74	JAR
86	REVISED	11-27-74	JAR
87	REVISED	11-27-74	JAR
88	REVISED	11-27-74	JAR
89	REVISED	11-27-74	JAR
90	REVISED	11-27-74	JAR
91	REVISED	11-27-74	JAR
92	REVISED	11-27-74	JAR
93	REVISED	11-27-74	JAR
94	REVISED	11-27-74	JAR
95	REVISED	11-27-74	JAR
96	REVISED	11-27-74	JAR
97	REVISED	11-27-74	JAR
98	REVISED	11-27-74	JAR
99	REVISED	11-27-74	JAR
100	REVISED	11-27-74	JAR

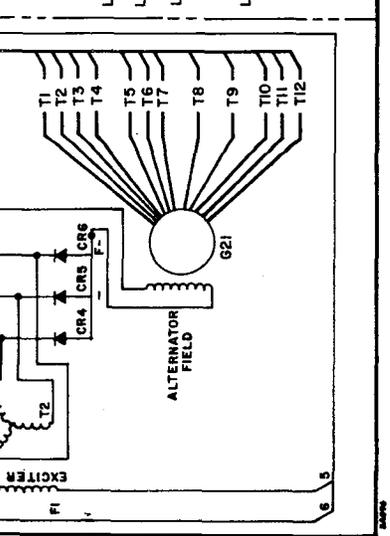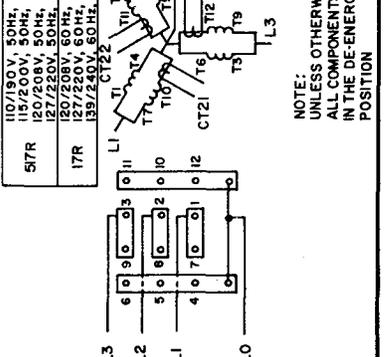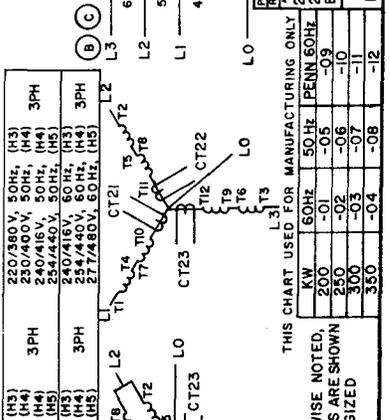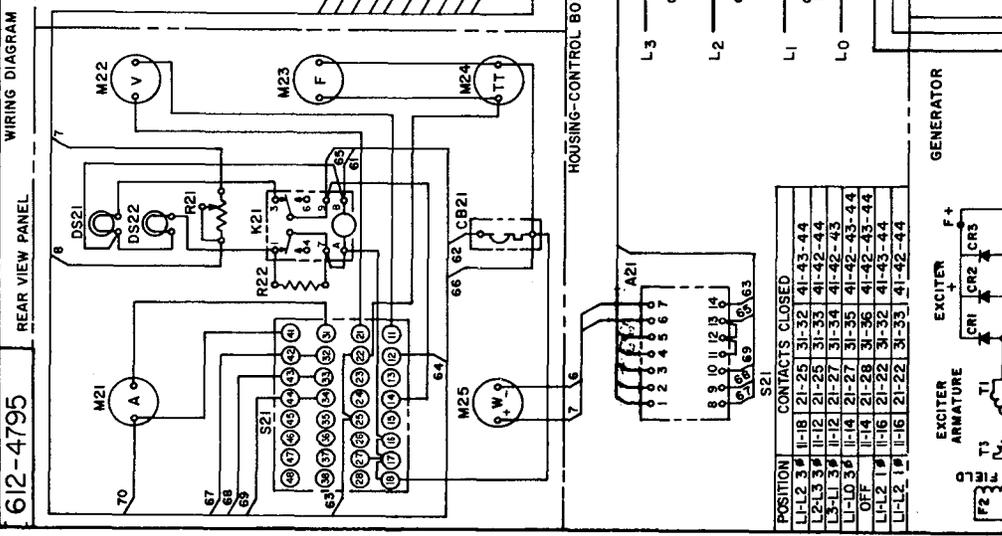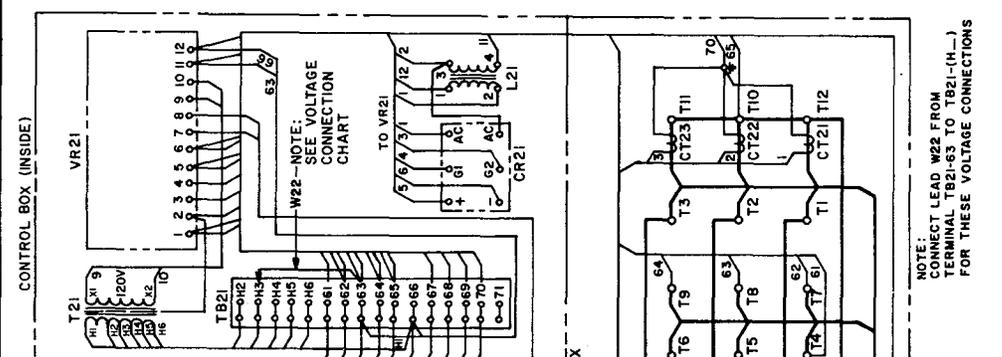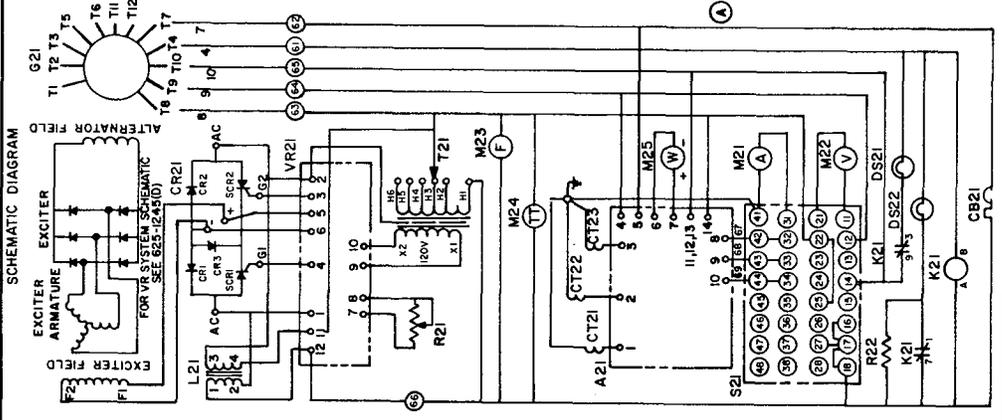


POSITION	CONTACTS CLOSED
L1-L2	1-18 21-25 31-32 41-43-44
L2-L3	1-12 21-25 31-33 41-42-44
L3-L1	1-12 21-27 31-34 41-42-43
L1-L0	1-14 21-27 31-35 41-42-43-44
OFF	1-14 21-28 31-36 41-42-43-44
L1-L2	1-16 21-22 31-32 41-43-44
L1-L3	1-16 21-22 31-33 41-42-44

POSITION	CONTACTS CLOSED
L1-L2	1-18 21-25 31-32 41-43-44
L2-L3	1-12 21-25 31-33 41-42-44
L3-L1	1-12 21-27 31-34 41-42-43
L1-L0	1-14 21-27 31-35 41-42-43-44
OFF	1-14 21-28 31-36 41-42-43-44
L1-L2	1-16 21-22 31-32 41-43-44
L1-L3	1-16 21-22 31-33 41-42-44

THIS CHART USED FOR MANUFACTURING ONLY


NOTE: UNLESS OTHERWISE NOTED, ALL COMPONENTS ARE SHOWN IN THE DE-ENERGIZED POSITION

612-4795

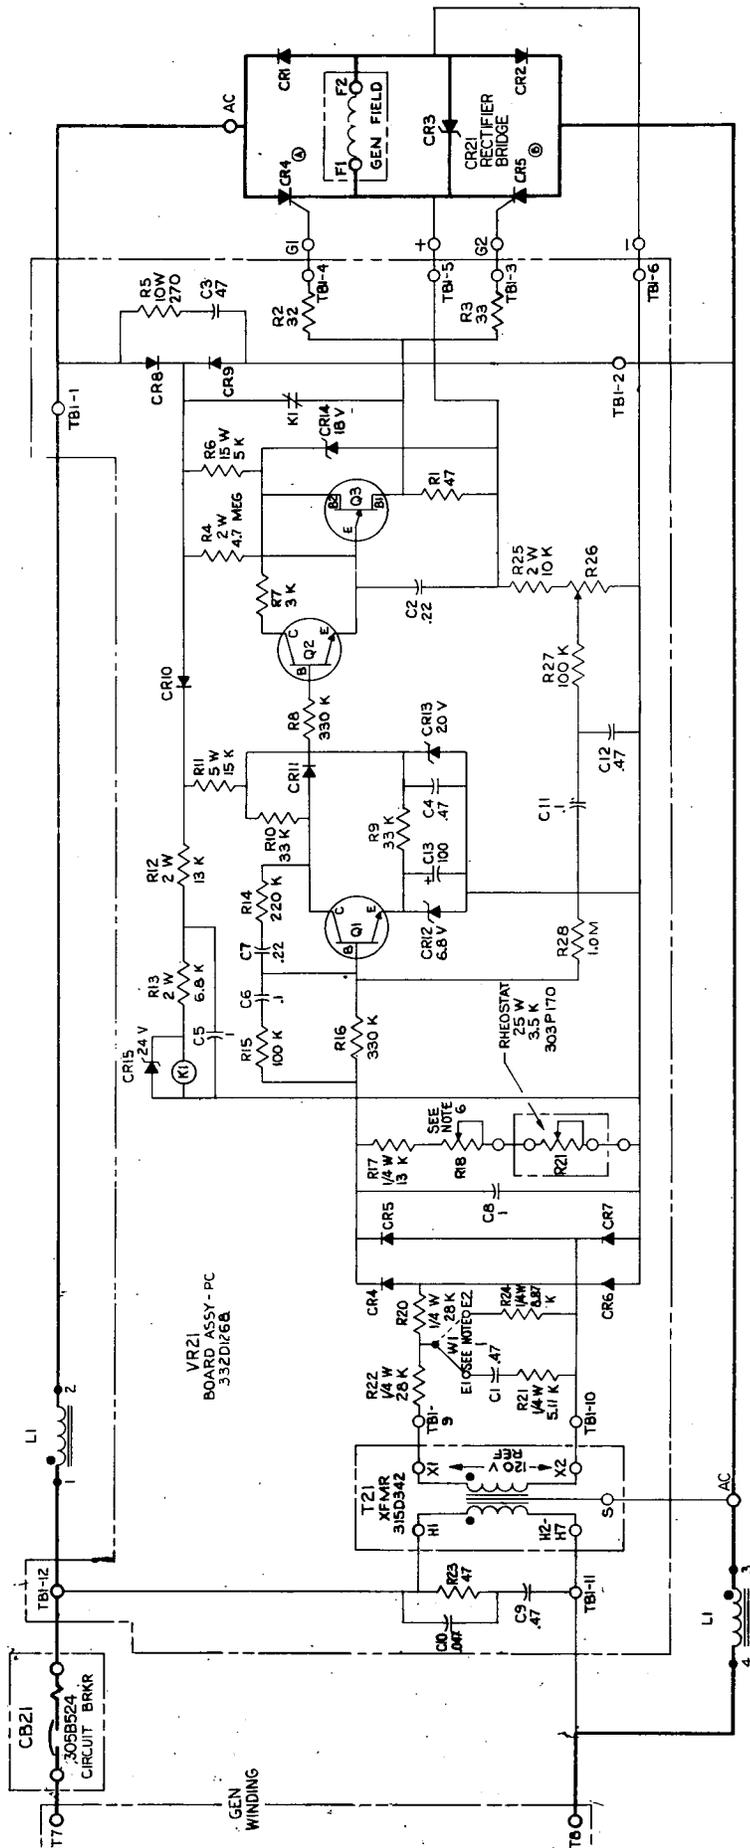

- NOTES:
1. NORMAL CONNECTION IS W TO E1 FOR VOLTAGE REFERENCE CIRCUIT SENSITIVE TO FREQUENCY. WHEN W IS CONNECTED TO E2 VOLTAGE REFERENCE CIRCUIT IS NOT SENSITIVE TO FREQUENCY.
 2. ALL PART NUMBERS AND VALUES ARE REFERENCE ONLY.
 3. ALL RESISTORS 1/2 WATT EXCEPT WHERE NOTED.
 4. ALL CAPACITOR RATING IN MICROFARADS.
 5. FOR TYPE AND RATING OF SEMI CONDUCTORS, SEE INDIVIDUAL ASSEMBLY MATERIAL LISTS.
 6. MAXIMUM RESISTANCE 2000 OHMS.

SCHEMATIC DIAG-VR SYS.
625-1245

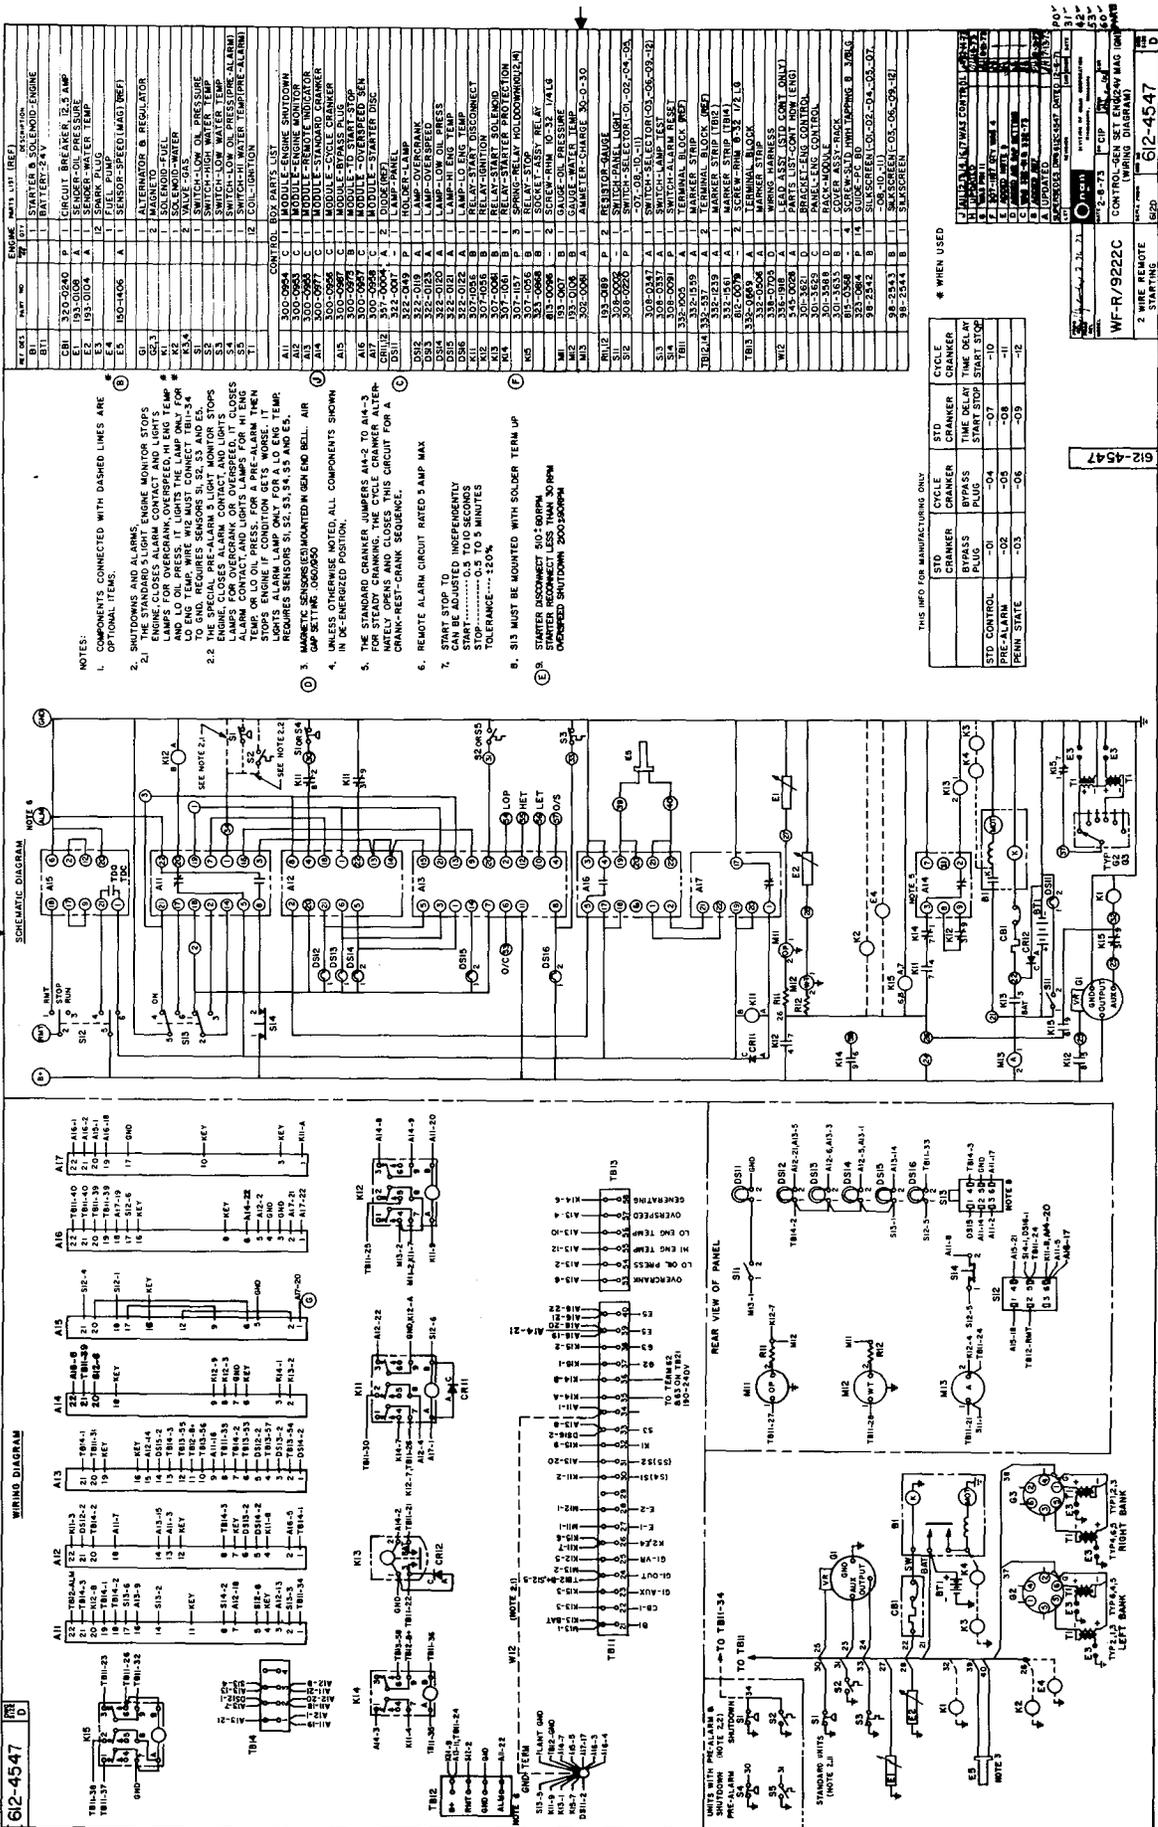


612-4547

612-4547


1. COMPONENTS CONNECTED WITH DASHED LINES ARE OPTIONAL ITEMS.
2. SHUTDOWNS AND ALARMS
 - 2.1 THE STANDARD LIGHT ENGINE MONITOR STOPS ENGINE CLOSING ALARM CONTACT AND LIGHTS LO OIL TEMP. WIRE #12 MUST CONNECT T811-54 AND LO OIL PRESS. IT LIGHTS THE LAMP ONLY FOR LO OIL TEMP.
 - 2.2 THE SPECIAL PRE-ALARM 3 LIGHT MONITOR STOPS ENGINE CLOSING ALARM CONTACT AND LIGHTS ALARM CONTACT AND LIGHTS LAMPS FOR HI OIL TEMP OR LO OIL PRESS. FOR A PRE-ALARM THEN LIGHTS ALARM LAMP ONLY FOR LO OIL TEMP. REQUIRES SENSORS S1, S2, S3, S4, S5 AND ES.
3. GAP SETTINGS: 0.060/50
4. UNLESS OTHERWISE NOTED, ALL COMPONENTS SHOWN IN DE-ENERGIZED POSITION.
5. THE STANDARD CRANKER JUMBERS A4-2 TO A14-3, A15-2 TO A16-3, AND A17-2 TO A18-3 WERE LEFT OPEN AND CLOSED THIS CIRCUIT FOR A CRANK-REST-CRANK SEQUENCE.
6. REWAVE ALARM CIRCUIT REEDED 5 AMP MAX
7. START STOP TO BE ADJUSTED INDEPENDENTLY START TO STOP 0.5 TO 5 MINUTES TOLERANCE.....150%
8. S15 MUST BE MOUNTED WITH SOLDER TERM UP
9. STARTER DISCONNECT 50% EFFICIENCY OVERSEEN SHUTDOWN 200/200RPM

WIRE NO.	WIRE COLOR	DESCRIPTION
W1	RED	STARTER & SOLENOID ENGINE
W2	RED	BATTERY-24V
W3	RED	CIRCUIT BREAKER 12.5 AMP
W4	RED	SENSOR-OIL PRESSURE
W5	RED	SENSOR-OIL TEMP
W6	RED	SPARK PLUG WIRE TEMP
W7	RED	FUEL PUMP
W8	RED	SENSOR-SPEED (W/D REEF)
W9	RED	ALTERNATOR & REGULATOR
W10	RED	SOLENOID-WATER
W11	RED	SOLENOID-FUEL
W12	RED	SOLENOID-WATER
W13	RED	SOLENOID-FUEL
W14	RED	SOLENOID-WATER
W15	RED	SOLENOID-FUEL
W16	RED	SOLENOID-WATER
W17	RED	SOLENOID-FUEL
W18	RED	SOLENOID-WATER
W19	RED	SOLENOID-FUEL
W20	RED	SOLENOID-WATER
W21	RED	SOLENOID-FUEL
W22	RED	SOLENOID-WATER
W23	RED	SOLENOID-FUEL
W24	RED	SOLENOID-WATER
W25	RED	SOLENOID-FUEL
W26	RED	SOLENOID-WATER
W27	RED	SOLENOID-FUEL
W28	RED	SOLENOID-WATER
W29	RED	SOLENOID-FUEL
W30	RED	SOLENOID-WATER
W31	RED	SOLENOID-FUEL
W32	RED	SOLENOID-WATER
W33	RED	SOLENOID-FUEL
W34	RED	SOLENOID-WATER
W35	RED	SOLENOID-FUEL
W36	RED	SOLENOID-WATER
W37	RED	SOLENOID-FUEL
W38	RED	SOLENOID-WATER
W39	RED	SOLENOID-FUEL
W40	RED	SOLENOID-WATER
W41	RED	SOLENOID-FUEL
W42	RED	SOLENOID-WATER
W43	RED	SOLENOID-FUEL
W44	RED	SOLENOID-WATER
W45	RED	SOLENOID-FUEL
W46	RED	SOLENOID-WATER
W47	RED	SOLENOID-FUEL
W48	RED	SOLENOID-WATER
W49	RED	SOLENOID-FUEL
W50	RED	SOLENOID-WATER
W51	RED	SOLENOID-FUEL
W52	RED	SOLENOID-WATER
W53	RED	SOLENOID-FUEL
W54	RED	SOLENOID-WATER
W55	RED	SOLENOID-FUEL
W56	RED	SOLENOID-WATER
W57	RED	SOLENOID-FUEL
W58	RED	SOLENOID-WATER
W59	RED	SOLENOID-FUEL
W60	RED	SOLENOID-WATER
W61	RED	SOLENOID-FUEL
W62	RED	SOLENOID-WATER
W63	RED	SOLENOID-FUEL
W64	RED	SOLENOID-WATER
W65	RED	SOLENOID-FUEL
W66	RED	SOLENOID-WATER
W67	RED	SOLENOID-FUEL
W68	RED	SOLENOID-WATER
W69	RED	SOLENOID-FUEL
W70	RED	SOLENOID-WATER
W71	RED	SOLENOID-FUEL
W72	RED	SOLENOID-WATER
W73	RED	SOLENOID-FUEL
W74	RED	SOLENOID-WATER
W75	RED	SOLENOID-FUEL
W76	RED	SOLENOID-WATER
W77	RED	SOLENOID-FUEL
W78	RED	SOLENOID-WATER
W79	RED	SOLENOID-FUEL
W80	RED	SOLENOID-WATER
W81	RED	SOLENOID-FUEL
W82	RED	SOLENOID-WATER
W83	RED	SOLENOID-FUEL
W84	RED	SOLENOID-WATER
W85	RED	SOLENOID-FUEL
W86	RED	SOLENOID-WATER
W87	RED	SOLENOID-FUEL
W88	RED	SOLENOID-WATER
W89	RED	SOLENOID-FUEL
W90	RED	SOLENOID-WATER
W91	RED	SOLENOID-FUEL
W92	RED	SOLENOID-WATER
W93	RED	SOLENOID-FUEL
W94	RED	SOLENOID-WATER
W95	RED	SOLENOID-FUEL
W96	RED	SOLENOID-WATER
W97	RED	SOLENOID-FUEL
W98	RED	SOLENOID-WATER
W99	RED	SOLENOID-FUEL
W100	RED	SOLENOID-WATER

WIRING DIAGRAM

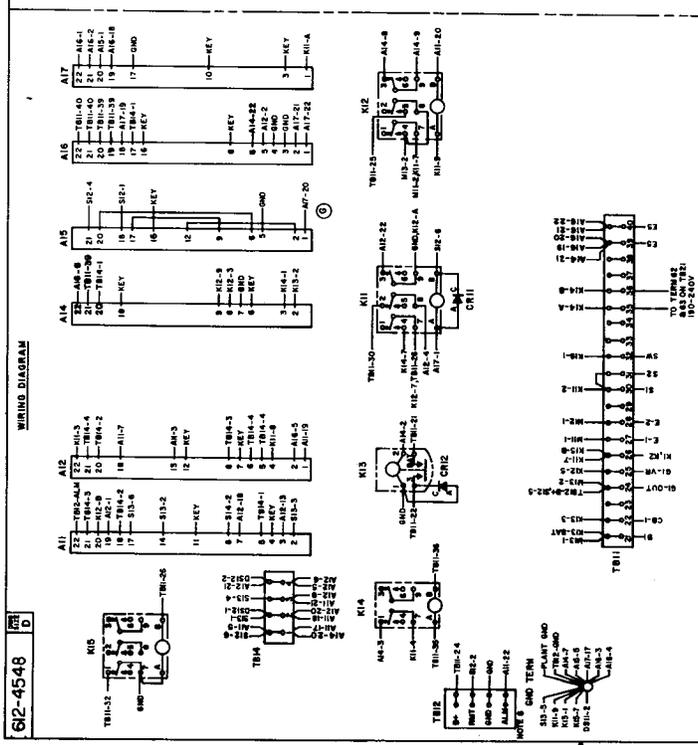

SCHEMATIC DIAGRAM

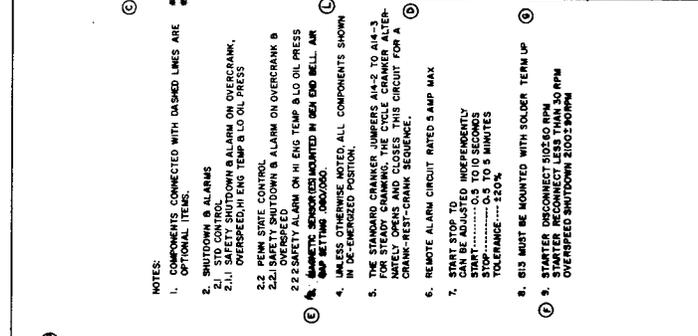


WIRE NO.	WIRE COLOR	ENGINE PART NO. (REF.)	FUNCTION
B1	BLK	STARTER & SOLENOID ENGINE	
B2	BLK	BATTERY-24V	
C1	YEL	320-0240 P	CIRCUIT BREAKER 15.5 AMP
E1	GRN	320-0240 A	SENSOR-OIL PRESSURE
E2	GRN	320-0240 A	SENSOR-WATER TEMP
E3	GRN	320-0240 A	SENSOR-WATER TEMP
E4	GRN	320-0240 A	SENSOR-WATER TEMP
E5	GRN	320-0240 A	SENSOR-SPEED (MAGNET REF)
G1	GRN	320-0240 A	ALTERNATOR & REGULATOR
G2	GRN	320-0240 A	MAGNETO IGNITION ISOLATOR
G3	GRN	320-0240 A	SOLENOID-WATER
G4	GRN	320-0240 A	SOLENOID-WATER
G5	GRN	320-0240 A	SOLENOID-WATER
G6	GRN	320-0240 A	SOLENOID-WATER
G7	GRN	320-0240 A	SOLENOID-WATER
G8	GRN	320-0240 A	SOLENOID-WATER
G9	GRN	320-0240 A	SOLENOID-WATER
G10	GRN	320-0240 A	SOLENOID-WATER
G11	GRN	320-0240 A	SOLENOID-WATER
G12	GRN	320-0240 A	SOLENOID-WATER
G13	GRN	320-0240 A	SOLENOID-WATER
G14	GRN	320-0240 A	SOLENOID-WATER
G15	GRN	320-0240 A	SOLENOID-WATER
G16	GRN	320-0240 A	SOLENOID-WATER
G17	GRN	320-0240 A	SOLENOID-WATER
G18	GRN	320-0240 A	SOLENOID-WATER
G19	GRN	320-0240 A	SOLENOID-WATER
G20	GRN	320-0240 A	SOLENOID-WATER
G21	GRN	320-0240 A	SOLENOID-WATER
G22	GRN	320-0240 A	SOLENOID-WATER
G23	GRN	320-0240 A	SOLENOID-WATER
G24	GRN	320-0240 A	SOLENOID-WATER
G25	GRN	320-0240 A	SOLENOID-WATER
G26	GRN	320-0240 A	SOLENOID-WATER
G27	GRN	320-0240 A	SOLENOID-WATER
G28	GRN	320-0240 A	SOLENOID-WATER
G29	GRN	320-0240 A	SOLENOID-WATER
G30	GRN	320-0240 A	SOLENOID-WATER
G31	GRN	320-0240 A	SOLENOID-WATER
G32	GRN	320-0240 A	SOLENOID-WATER
G33	GRN	320-0240 A	SOLENOID-WATER
G34	GRN	320-0240 A	SOLENOID-WATER
G35	GRN	320-0240 A	SOLENOID-WATER
G36	GRN	320-0240 A	SOLENOID-WATER
G37	GRN	320-0240 A	SOLENOID-WATER
G38	GRN	320-0240 A	SOLENOID-WATER
G39	GRN	320-0240 A	SOLENOID-WATER
G40	GRN	320-0240 A	SOLENOID-WATER
G41	GRN	320-0240 A	SOLENOID-WATER
G42	GRN	320-0240 A	SOLENOID-WATER
G43	GRN	320-0240 A	SOLENOID-WATER
G44	GRN	320-0240 A	SOLENOID-WATER
G45	GRN	320-0240 A	SOLENOID-WATER
G46	GRN	320-0240 A	SOLENOID-WATER
G47	GRN	320-0240 A	SOLENOID-WATER
G48	GRN	320-0240 A	SOLENOID-WATER
G49	GRN	320-0240 A	SOLENOID-WATER
G50	GRN	320-0240 A	SOLENOID-WATER
G51	GRN	320-0240 A	SOLENOID-WATER
G52	GRN	320-0240 A	SOLENOID-WATER
G53	GRN	320-0240 A	SOLENOID-WATER
G54	GRN	320-0240 A	SOLENOID-WATER
G55	GRN	320-0240 A	SOLENOID-WATER
G56	GRN	320-0240 A	SOLENOID-WATER
G57	GRN	320-0240 A	SOLENOID-WATER
G58	GRN	320-0240 A	SOLENOID-WATER
G59	GRN	320-0240 A	SOLENOID-WATER
G60	GRN	320-0240 A	SOLENOID-WATER
G61	GRN	320-0240 A	SOLENOID-WATER
G62	GRN	320-0240 A	SOLENOID-WATER
G63	GRN	320-0240 A	SOLENOID-WATER
G64	GRN	320-0240 A	SOLENOID-WATER
G65	GRN	320-0240 A	SOLENOID-WATER
G66	GRN	320-0240 A	SOLENOID-WATER
G67	GRN	320-0240 A	SOLENOID-WATER
G68	GRN	320-0240 A	SOLENOID-WATER
G69	GRN	320-0240 A	SOLENOID-WATER
G70	GRN	320-0240 A	SOLENOID-WATER
G71	GRN	320-0240 A	SOLENOID-WATER
G72	GRN	320-0240 A	SOLENOID-WATER
G73	GRN	320-0240 A	SOLENOID-WATER
G74	GRN	320-0240 A	SOLENOID-WATER
G75	GRN	320-0240 A	SOLENOID-WATER
G76	GRN	320-0240 A	SOLENOID-WATER
G77	GRN	320-0240 A	SOLENOID-WATER
G78	GRN	320-0240 A	SOLENOID-WATER
G79	GRN	320-0240 A	SOLENOID-WATER
G80	GRN	320-0240 A	SOLENOID-WATER
G81	GRN	320-0240 A	SOLENOID-WATER
G82	GRN	320-0240 A	SOLENOID-WATER
G83	GRN	320-0240 A	SOLENOID-WATER
G84	GRN	320-0240 A	SOLENOID-WATER
G85	GRN	320-0240 A	SOLENOID-WATER
G86	GRN	320-0240 A	SOLENOID-WATER
G87	GRN	320-0240 A	SOLENOID-WATER
G88	GRN	320-0240 A	SOLENOID-WATER
G89	GRN	320-0240 A	SOLENOID-WATER
G90	GRN	320-0240 A	SOLENOID-WATER
G91	GRN	320-0240 A	SOLENOID-WATER
G92	GRN	320-0240 A	SOLENOID-WATER
G93	GRN	320-0240 A	SOLENOID-WATER
G94	GRN	320-0240 A	SOLENOID-WATER
G95	GRN	320-0240 A	SOLENOID-WATER
G96	GRN	320-0240 A	SOLENOID-WATER
G97	GRN	320-0240 A	SOLENOID-WATER
G98	GRN	320-0240 A	SOLENOID-WATER
G99	GRN	320-0240 A	SOLENOID-WATER
G100	GRN	320-0240 A	SOLENOID-WATER


- NOTES:
- COMPONENTS CONNECTED WITH DASHED LINES ARE OPTIONAL ITEMS.
 - SWITCHES & ALARMS:
 - 2.1 SAFETY SHUTDOWN & ALARM ON OVERCRANK, OVERSPEED, HI ENG TEMP & LO OIL PRESS.
 - 2.2 FEW STATE CONTROL.
 - 2.3 SAFETY SHUTDOWN & ALARM ON OVERCRANK & OVERSPEED.
 - MAGNETIC SENSORS MOUNTED IN NEW END BELL, AIR GAP SETTING 0.000/0.000.
 - UNLESS OTHERWISE NOTED, ALL COMPONENTS SHOWN IN DE-ENERGIZED POSITION.
 - THE STANDARD CRANKER JUMBERS A14-2 TO A14-3 FOR STEADY CRANKING. THE CYCLE CRANKER ALTERNATELY CRANKS IN THIS CIRCUIT FOR A CRANK-REST-CRANK SEQUENCE.
 - REMOTE ALARM CIRCUIT RATED 5 AMP MAX.
 - START STOP TO CAN BE ADJUSTED INDEPENDENTLY TO 0.5 TO 5 MINUTES. STOP TOLERANCE 120%.
 - G15 MUST BE MOUNTED WITH SOLDER TERM UP.
 - STARTER DISCONNECT 500/50 RPM 50 RPM OVERSPEED SHUTDOWN 2300/300 RPM.

THIS INFO FOR MANUFACTURING ONLY

STD CRANKER	CYCLE CRANKER	STD CRANKER	CYCLE CRANKER
BYPASS	BYPASS	TIME DELAY	TIME DELAY
START STOP	START STOP	START STOP	START STOP
PERN STATE	PERN STATE	-02	-04
-01	-03	-05	-08

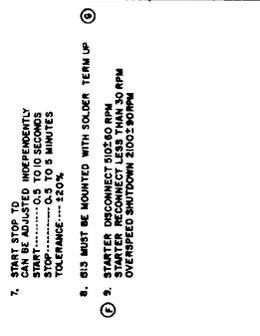

WIRE NO.	WIRE COLOR	ENGINE PART NO. (REF.)	FUNCTION
307-0216	B	RELAY-START DISCONNECT	
307-0217	B	RELAY-IGNITION	
307-0218	B	RELAY-IGNITION	
307-0219	B	RELAY-STARTER PROTECTION	
307-0220	B	SPRING-RELAY HOLD (DOWN/UP)	
307-0221	B	307-0221 B	SECRET CLASSY RELAY
307-0222	B	307-0222 B	SECRET CLASSY RELAY
307-0223	B	307-0223 B	SECRET CLASSY RELAY
307-0224	B	307-0224 B	SECRET CLASSY RELAY
307-0225	B	307-0225 B	SECRET CLASSY RELAY
307-0226	B	307-0226 B	SECRET CLASSY RELAY
307-0227	B	307-0227 B	SECRET CLASSY RELAY
307-0228	B	307-0228 B	SECRET CLASSY RELAY
307-0229	B	307-0229 B	SECRET CLASSY RELAY
307-0230	B	307-0230 B	SECRET CLASSY RELAY
307-0231	B	307-0231 B	SECRET CLASSY RELAY
307-0232	B	307-0232 B	SECRET CLASSY RELAY
307-0233	B	307-0233 B	SECRET CLASSY RELAY
307-0234	B	307-0234 B	SECRET CLASSY RELAY
307-0235	B	307-0235 B	SECRET CLASSY RELAY
307-0236	B	307-0236 B	SECRET CLASSY RELAY
307-0237	B	307-0237 B	SECRET CLASSY RELAY
307-0238	B	307-0238 B	SECRET CLASSY RELAY
307-0239	B	307-0239 B	SECRET CLASSY RELAY
307-0240	B	307-0240 B	SECRET CLASSY RELAY
307-0241	B	307-0241 B	SECRET CLASSY RELAY
307-0242	B	307-0242 B	SECRET CLASSY RELAY
307-0243	B	307-0243 B	SECRET CLASSY RELAY
307-0244	B	307-0244 B	SECRET CLASSY RELAY
307-0245	B	307-0245 B	SECRET CLASSY RELAY
307-0246	B	307-0246 B	SECRET CLASSY RELAY
307-0247	B	307-0247 B	SECRET CLASSY RELAY
307-0248	B	307-0248 B	SECRET CLASSY RELAY
307-0249	B	307-0249 B	SECRET CLASSY RELAY
307-0250	B	307-0250 B	SECRET CLASSY RELAY
307-0251	B	307-0251 B	SECRET CLASSY RELAY
307-0252	B	307-0252 B	SECRET CLASSY RELAY
307-0253	B	307-0253 B	SECRET CLASSY RELAY
307-0254	B	307-0254 B	SECRET CLASSY RELAY
307-0255	B	307-0255 B	SECRET CLASSY RELAY
307-0256	B	307-0256 B	SECRET CLASSY RELAY
307-0257	B	307-0257 B	SECRET CLASSY RELAY
307-0258	B	307-0258 B	SECRET CLASSY RELAY
307-0259	B	307-0259 B	SECRET CLASSY RELAY
307-0260	B	307-0260 B	SECRET CLASSY RELAY
307-0261	B	307-0261 B	SECRET CLASSY RELAY
307-0262	B	307-0262 B	SECRET CLASSY RELAY
307-0263	B	307-0263 B	SECRET CLASSY RELAY
307-0264	B	307-0264 B	SECRET CLASSY RELAY
307-0265	B	307-0265 B	SECRET CLASSY RELAY
307-0266	B	307-0266 B	SECRET CLASSY RELAY
307-0267	B	307-0267 B	SECRET CLASSY RELAY
307-0268	B	307-0268 B	SECRET CLASSY RELAY
307-0269	B	307-0269 B	SECRET CLASSY RELAY
307-0270	B	307-0270 B	SECRET CLASSY RELAY
307-0271	B	307-0271 B	SECRET CLASSY RELAY
307-0272	B	307-0272 B	SECRET CLASSY RELAY
307-0273	B	307-0273 B	SECRET CLASSY RELAY
307-0274	B	307-0274 B	SECRET CLASSY RELAY
307-0275	B	307-0275 B	SECRET CLASSY RELAY
307-0276	B	307-0276 B	SECRET CLASSY RELAY
307-0277	B	307-0277 B	SECRET CLASSY RELAY
307-0278	B	307-0278 B	SECRET CLASSY RELAY
307-0279	B	307-0279 B	SECRET CLASSY RELAY
307-0280	B	307-0280 B	SECRET CLASSY RELAY
307-0281	B	307-0281 B	SECRET CLASSY RELAY
307-0282	B	307-0282 B	SECRET CLASSY RELAY
307-0283	B	307-0283 B	SECRET CLASSY RELAY
307-0284	B	307-0284 B	SECRET CLASSY RELAY
307-0285	B	307-0285 B	SECRET CLASSY RELAY
307-0286	B	307-0286 B	SECRET CLASSY RELAY
307-0287	B	307-0287 B	SECRET CLASSY RELAY
307-0288	B	307-0288 B	SECRET CLASSY RELAY
307-0289	B	307-0289 B	SECRET CLASSY RELAY
307-0290	B	307-0290 B	SECRET CLASSY RELAY
307-0291	B	307-0291 B	SECRET CLASSY RELAY
307-0292	B	307-0292 B	SECRET CLASSY RELAY
307-0293	B	307-0293 B	SECRET CLASSY RELAY
307-0294	B	307-0294 B	SECRET CLASSY RELAY
307-0295	B	307-0295 B	SECRET CLASSY RELAY
307-0296	B	307-0296 B	SECRET CLASSY RELAY
307-0297	B	307-0297 B	SECRET CLASSY RELAY
307-0298	B	307-0298 B	SECRET CLASSY RELAY
307-0299	B	307-0299 B	SECRET CLASSY RELAY
307-0300	B	307-0300 B	SECRET CLASSY RELAY

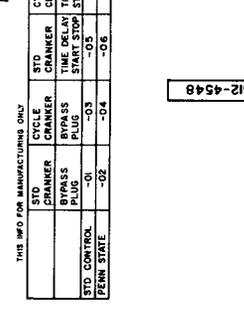

WIRE NO.	WIRE COLOR	ENGINE PART NO. (REF.)	FUNCTION
307-0216	B	RELAY-START DISCONNECT	
307-0217	B	RELAY-IGNITION	
307-0218	B	RELAY-IGNITION	
307-0219	B	RELAY-STARTER PROTECTION	
307-0220	B	SPRING-RELAY HOLD (DOWN/UP)	
307-0221	B	307-0221 B	SECRET CLASSY RELAY
307-0222	B	307-0222 B	SECRET CLASSY RELAY
307-0223	B	307-0223 B	SECRET CLASSY RELAY
307-0224	B	307-0224 B	SECRET CLASSY RELAY
307-0225	B	307-0225 B	SECRET CLASSY RELAY
307-0226	B	307-0226 B	SECRET CLASSY RELAY
307-0227	B	307-0227 B	SECRET CLASSY RELAY
307-0228	B	307-0228 B	SECRET CLASSY RELAY
307-0229	B	307-0229 B	SECRET CLASSY RELAY
307-0230	B	307-0230 B	SECRET CLASSY RELAY
307-0231	B	307-0231 B	SECRET CLASSY RELAY
307-0232	B	307-0232 B	SECRET CLASSY RELAY
307-0233	B	307-0233 B	SECRET CLASSY

612-4549 (D)

WIRING DIAGRAM

612-4549

612-4549

612-4549

612-4549

612-4549

612-4549

612-4549

612-4549








612-4549

ENGINE WIRE LIST (REF)

WIRE NO.	PART NO.	DESCRIPTION
B11	311	STARTER & SOL ENGIN ENGINE
B12	312	BATTERY 24 V
B13	313	STARTER MOTOR
B14	314	STARTER SWITCH
B15	315	STARTER RELAY
B16	316	STARTER MOTOR
B17	317	STARTER MOTOR
B18	318	STARTER MOTOR
B19	319	STARTER MOTOR
B20	320	STARTER MOTOR
B21	321	STARTER MOTOR
B22	322	STARTER MOTOR
B23	323	STARTER MOTOR
B24	324	STARTER MOTOR
B25	325	STARTER MOTOR
B26	326	STARTER MOTOR
B27	327	STARTER MOTOR
B28	328	STARTER MOTOR
B29	329	STARTER MOTOR
B30	330	STARTER MOTOR
B31	331	STARTER MOTOR
B32	332	STARTER MOTOR
B33	333	STARTER MOTOR
B34	334	STARTER MOTOR
B35	335	STARTER MOTOR
B36	336	STARTER MOTOR
B37	337	STARTER MOTOR
B38	338	STARTER MOTOR
B39	339	STARTER MOTOR
B40	340	STARTER MOTOR
B41	341	STARTER MOTOR
B42	342	STARTER MOTOR
B43	343	STARTER MOTOR
B44	344	STARTER MOTOR
B45	345	STARTER MOTOR
B46	346	STARTER MOTOR
B47	347	STARTER MOTOR
B48	348	STARTER MOTOR
B49	349	STARTER MOTOR
B50	350	STARTER MOTOR
B51	351	STARTER MOTOR
B52	352	STARTER MOTOR
B53	353	STARTER MOTOR
B54	354	STARTER MOTOR
B55	355	STARTER MOTOR
B56	356	STARTER MOTOR
B57	357	STARTER MOTOR
B58	358	STARTER MOTOR
B59	359	STARTER MOTOR
B60	360	STARTER MOTOR
B61	361	STARTER MOTOR
B62	362	STARTER MOTOR
B63	363	STARTER MOTOR
B64	364	STARTER MOTOR
B65	365	STARTER MOTOR
B66	366	STARTER MOTOR
B67	367	STARTER MOTOR
B68	368	STARTER MOTOR
B69	369	STARTER MOTOR
B70	370	STARTER MOTOR
B71	371	STARTER MOTOR
B72	372	STARTER MOTOR
B73	373	STARTER MOTOR
B74	374	STARTER MOTOR
B75	375	STARTER MOTOR
B76	376	STARTER MOTOR
B77	377	STARTER MOTOR
B78	378	STARTER MOTOR
B79	379	STARTER MOTOR
B80	380	STARTER MOTOR
B81	381	STARTER MOTOR
B82	382	STARTER MOTOR
B83	383	STARTER MOTOR
B84	384	STARTER MOTOR
B85	385	STARTER MOTOR
B86	386	STARTER MOTOR
B87	387	STARTER MOTOR
B88	388	STARTER MOTOR
B89	389	STARTER MOTOR
B90	390	STARTER MOTOR
B91	391	STARTER MOTOR
B92	392	STARTER MOTOR
B93	393	STARTER MOTOR
B94	394	STARTER MOTOR
B95	395	STARTER MOTOR
B96	396	STARTER MOTOR
B97	397	STARTER MOTOR
B98	398	STARTER MOTOR
B99	399	STARTER MOTOR
B100	400	STARTER MOTOR

NOTES:

1. COMPONENTS CONNECTED WITH DASHED LINES ARE OPTIONAL ITEMS.
2. SHUTDOWNS AND ALARMS:
 - a. ENGINE MONITOR STOPS ENGINE CLOSING ALARM CONTACT AND LIGHTS LAMP FOR OVERHEAT, OVERPRESS, HIGH TEMP, LOW OIL TEMP, WIRE WIZ MUST CONTACT TBI-1-24 TO GND. REQUIRES SENSORS S1, S2, S3 AND ES.
 - b. ENGINE CLOSING ALARM CONTACT AND LIGHTS LAMP FOR OVERHEAT OR OVERPRESS. IT CLOSING CONTACT OR LO/OIL PRESS. FOR A PRE-ALARM THEN STOPS ENGINE IF CONDITION GETS WORSE. IT REQUIRES SENSORS S1, S2, S3, S4, S5 AND ES.
3. MAINTENANCE SENSORS INDICATED IN GEN END BELL ARM CAN BE ADJUSTED INDEPENDENTLY.
4. IN DE-ENERGIZED POSITION.
5. THE STANDARD CRANKER JUMBERS A14-2 TO A14-3 FOR STEADY CRANKING, THE CYCLE CRANKER ALTERNATELY CRANKS IN THIS CIRCUIT FOR A CRANK-TEST-CRANK SEQUENCE.
6. REMOTE ALARM CIRCUIT RATED 5 AMP MAX.
7. START STOP TO CAN BE ADJUSTED INDEPENDENTLY TO 0.5 TO 0.8 MINUTES TOLERANCE +120%.
8. SIS MUST BE MOUNTED WITH SOLDER TERM UP.
9. STARTER MOTOR:
 - a. CRANK-TEST-CRANK SEQUENCE.
 - b. OVERPRESS SHUTDOWN.
 - c. OVERPRESS SHUTDOWN.

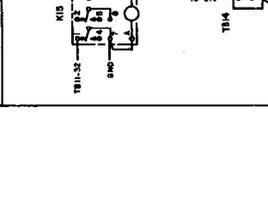
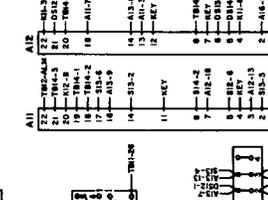
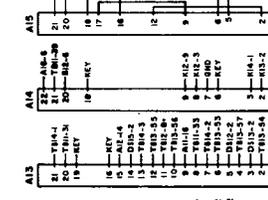
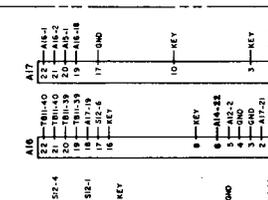
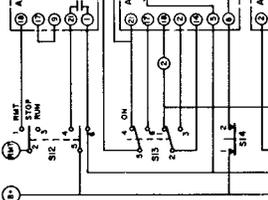
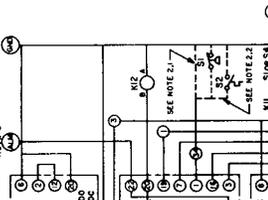
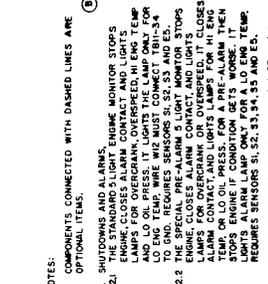


COMPONENT PARTS LIST

QTY	DESCRIPTION	REF
1	MODULE-ENGINE SHUTDOWN	A11
1	MODULE-ENGINE MONITOR	A12
1	MODULE-ENGINE MONITOR	A13
1	MODULE-STANDARD CRANKER	A14
1	MODULE-CYCLE CRANKER	A15
1	MODULE-START STOP	A16
1	MODULE-OVERPRESS/SH	A17
1	MODULE-STARTER DISC	A18
1	LAMP-PAIR	A19
1	LAMP-PAIR	A20
1	RELAY-TAMP	A21
1	RELAY-TAMP	A22
1	RELAY-TAMP	A23
1	RELAY-TAMP	A24
1	RELAY-TAMP	A25
1	RELAY-TAMP	A26
1	RELAY-TAMP	A27
1	RELAY-TAMP	A28
1	RELAY-TAMP	A29
1	RELAY-TAMP	A30
1	RELAY-TAMP	A31
1	RELAY-TAMP	A32
1	RELAY-TAMP	A33
1	RELAY-TAMP	A34
1	RELAY-TAMP	A35
1	RELAY-TAMP	A36
1	RELAY-TAMP	A37
1	RELAY-TAMP	A38
1	RELAY-TAMP	A39
1	RELAY-TAMP	A40
1	RELAY-TAMP	A41
1	RELAY-TAMP	A42
1	RELAY-TAMP	A43
1	RELAY-TAMP	A44
1	RELAY-TAMP	A45
1	RELAY-TAMP	A46
1	RELAY-TAMP	A47
1	RELAY-TAMP	A48
1	RELAY-TAMP	A49
1	RELAY-TAMP	A50
1	RELAY-TAMP	A51
1	RELAY-TAMP	A52
1	RELAY-TAMP	A53
1	RELAY-TAMP	A54
1	RELAY-TAMP	A55
1	RELAY-TAMP	A56
1	RELAY-TAMP	A57
1	RELAY-TAMP	A58
1	RELAY-TAMP	A59
1	RELAY-TAMP	A60
1	RELAY-TAMP	A61
1	RELAY-TAMP	A62
1	RELAY-TAMP	A63
1	RELAY-TAMP	A64
1	RELAY-TAMP	A65
1	RELAY-TAMP	A66
1	RELAY-TAMP	A67
1	RELAY-TAMP	A68
1	RELAY-TAMP	A69
1	RELAY-TAMP	A70
1	RELAY-TAMP	A71
1	RELAY-TAMP	A72
1	RELAY-TAMP	A73
1	RELAY-TAMP	A74
1	RELAY-TAMP	A75
1	RELAY-TAMP	A76
1	RELAY-TAMP	A77
1	RELAY-TAMP	A78
1	RELAY-TAMP	A79
1	RELAY-TAMP	A80
1	RELAY-TAMP	A81
1	RELAY-TAMP	A82
1	RELAY-TAMP	A83
1	RELAY-TAMP	A84
1	RELAY-TAMP	A85
1	RELAY-TAMP	A86
1	RELAY-TAMP	A87
1	RELAY-TAMP	A88
1	RELAY-TAMP	A89
1	RELAY-TAMP	A90
1	RELAY-TAMP	A91
1	RELAY-TAMP	A92
1	RELAY-TAMP	A93
1	RELAY-TAMP	A94
1	RELAY-TAMP	A95
1	RELAY-TAMP	A96
1	RELAY-TAMP	A97
1	RELAY-TAMP	A98
1	RELAY-TAMP	A99
1	RELAY-TAMP	A100

THIS INFO FOR MANUFACTURING ONLY

STD	CYCLE	CRANKER	STD	CRANKER
CRANKER	CRANKER	CRANKER	CRANKER	CRANKER
BYPASS	BYPASS	BYPASS	BYPASS	BYPASS
PLUS	PLUS	PLUS	PLUS	PLUS
START STOP				
STOP	STOP	STOP	STOP	STOP
CRK CONTROL				
CRK ALARM				
PRIN STATE				
-02	-02	-02	-02	-02
-03	-03	-03	-03	-03
-06	-06	-06	-06	-06
-12	-12	-12	-12	-12

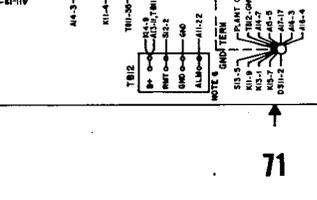
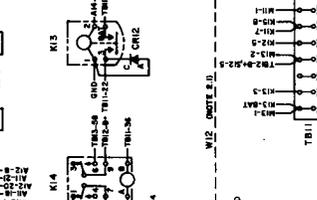
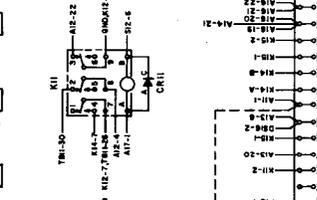
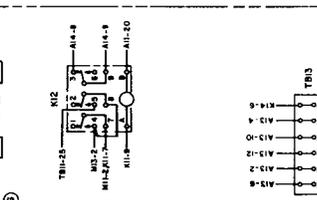
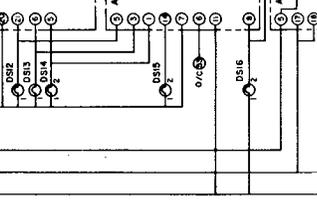
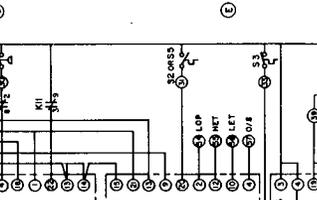
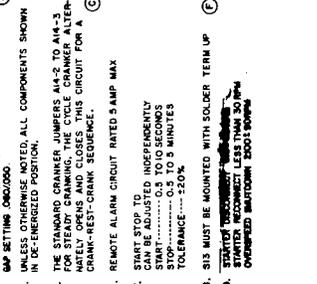


ENGINE WIRE LIST (REF)

WIRE NO.	PART NO.	DESCRIPTION
B11	311	STARTER & SOL ENGIN ENGINE
B12	312	BATTERY 24 V
B13	313	STARTER MOTOR
B14	314	STARTER SWITCH
B15	315	STARTER RELAY
B16	316	STARTER MOTOR
B17	317	STARTER MOTOR
B18	318	STARTER MOTOR
B19	319	STARTER MOTOR
B20	320	STARTER MOTOR
B21	321	STARTER MOTOR
B22	322	STARTER MOTOR
B23	323	STARTER MOTOR
B24	324	STARTER MOTOR
B25	325	STARTER MOTOR
B26	326	STARTER MOTOR
B27	327	STARTER MOTOR
B28	328	STARTER MOTOR
B29	329	STARTER MOTOR
B30	330	STARTER MOTOR
B31	331	STARTER MOTOR
B32	332	STARTER MOTOR
B33	333	STARTER MOTOR
B34	334	STARTER MOTOR
B35	335	STARTER MOTOR
B36	336	STARTER MOTOR
B37	337	STARTER MOTOR
B38	338	STARTER MOTOR
B39	339	STARTER MOTOR
B40	340	STARTER MOTOR
B41	341	STARTER MOTOR
B42	342	STARTER MOTOR
B43	343	STARTER MOTOR
B44	344	STARTER MOTOR
B45	345	STARTER MOTOR
B46	346	STARTER MOTOR
B47	347	STARTER MOTOR
B48	348	STARTER MOTOR
B49	349	STARTER MOTOR
B50	350	STARTER MOTOR
B51	351	STARTER MOTOR
B52	352	STARTER MOTOR
B53	353	STARTER MOTOR
B54	354	STARTER MOTOR
B55	355	STARTER MOTOR
B56	356	STARTER MOTOR
B57	357	STARTER MOTOR
B58	358	STARTER MOTOR
B59	359	STARTER MOTOR
B60	360	STARTER MOTOR
B61	361	STARTER MOTOR
B62	362	STARTER MOTOR
B63	363	STARTER MOTOR
B64	364	STARTER MOTOR
B65	365	STARTER MOTOR
B66	366	STARTER MOTOR
B67	367	STARTER MOTOR
B68	368	STARTER MOTOR
B69	369	STARTER MOTOR
B70	370	STARTER MOTOR
B71	371	STARTER MOTOR
B72	372	STARTER MOTOR
B73	373	STARTER MOTOR
B74	374	STARTER MOTOR
B75	375	STARTER MOTOR
B76	376	STARTER MOTOR
B77	377	STARTER MOTOR
B78	378	STARTER MOTOR
B79	379	STARTER MOTOR
B80	380	STARTER MOTOR
B81	381	STARTER MOTOR
B82	382	STARTER MOTOR
B83	383	STARTER MOTOR
B84	384	STARTER MOTOR
B85	385	STARTER MOTOR
B86	386	STARTER MOTOR
B87	387	STARTER MOTOR
B88	388	STARTER MOTOR
B89	389	STARTER MOTOR
B90	390	STARTER MOTOR
B91	391	STARTER MOTOR
B92	392	STARTER MOTOR
B93	393	STARTER MOTOR
B94	394	STARTER MOTOR
B95	395	STARTER MOTOR
B96	396	STARTER MOTOR
B97	397	STARTER MOTOR
B98	398	STARTER MOTOR
B99	399	STARTER MOTOR
B100	400	STARTER MOTOR



NOTES:

1. COMPONENTS CONNECTED WITH DASHED LINES ARE OPTIONAL ITEMS.
2. SHUTDOWNS AND ALARMS:
 - a. ENGINE MONITOR STOPS ENGINE CLOSING ALARM CONTACT AND LIGHTS LAMP FOR OVERHEAT, OVERPRESS, HIGH TEMP, LOW OIL TEMP, WIRE WIZ MUST CONTACT TBI-1-24 TO GND. REQUIRES SENSORS S1, S2, S3 AND ES.
 - b. ENGINE CLOSING ALARM CONTACT AND LIGHTS LAMP FOR OVERHEAT OR OVERPRESS. IT CLOSING CONTACT OR LO/OIL PRESS. FOR A PRE-ALARM THEN STOPS ENGINE IF CONDITION GETS WORSE. IT REQUIRES SENSORS S1, S2, S3, S4, S5 AND ES.
3. MAINTENANCE SENSORS INDICATED IN GEN END BELL ARM CAN BE ADJUSTED INDEPENDENTLY.
4. IN DE-ENERGIZED POSITION.
5. THE STANDARD CRANKER JUMBERS A14-2 TO A14-3 FOR STEADY CRANKING, THE CYCLE CRANKER ALTERNATELY CRANKS IN THIS CIRCUIT FOR A CRANK-TEST-CRANK SEQUENCE.
6. REMOTE ALARM CIRCUIT RATED 5 AMP MAX.
7. START STOP TO CAN BE ADJUSTED INDEPENDENTLY TO 0.5 TO 0.8 MINUTES TOLERANCE +120%.
8. SIS MUST BE MOUNTED WITH SOLDER TERM UP.
9. STARTER MOTOR:
 - a. CRANK-TEST-CRANK SEQUENCE.
 - b. OVERPRESS SHUTDOWN.
 - c. OVERPRESS SHUTDOWN.

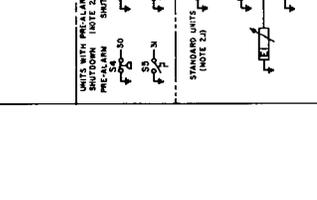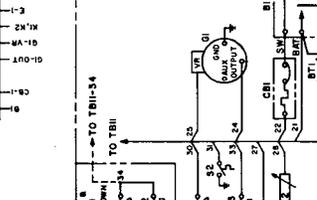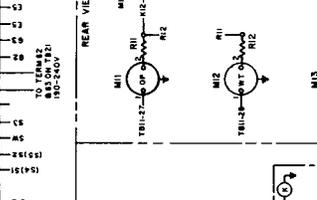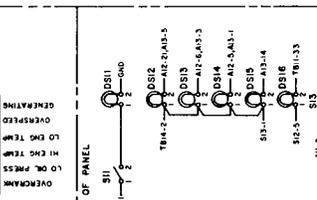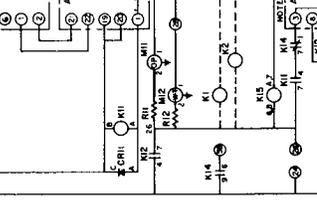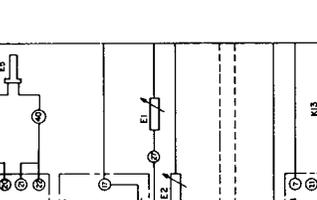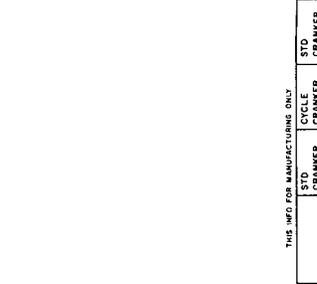

ENGINE WIRE LIST (REF)

WIRE NO.	PART NO.	DESCRIPTION
B11	311	STARTER & SOL ENGIN ENGINE
B12	312	BATTERY 24 V
B13	313	STARTER MOTOR
B14	314	STARTER SWITCH
B15	315	STARTER RELAY
B16	316	STARTER MOTOR
B17	317	STARTER MOTOR
B18	318	STARTER MOTOR
B19	319	STARTER MOTOR
B20	320	STARTER MOTOR
B21	321	STARTER MOTOR
B22	322	STARTER MOTOR
B23	323	STARTER MOTOR
B24	324	STARTER MOTOR
B25	325	STARTER MOTOR
B26	326	STARTER MOTOR
B27	327	STARTER MOTOR
B28	328	STARTER MOTOR
B29	329	STARTER MOTOR
B30	330	STARTER MOTOR
B31	331	STARTER MOTOR
B32	332	STARTER MOTOR
B33	333	STARTER MOTOR
B34	334	STARTER MOTOR
B35	335	STARTER MOTOR
B36	336	STARTER MOTOR
B37	337	STARTER MOTOR
B38	338	STARTER MOTOR
B39	339	STARTER MOTOR
B40	340	STARTER MOTOR
B41	341	STARTER MOTOR
B42	342	STARTER MOTOR
B43	343	STARTER MOTOR
B44	344	STARTER MOTOR
B45	345	STARTER MOTOR
B46	346	STARTER MOTOR
B		

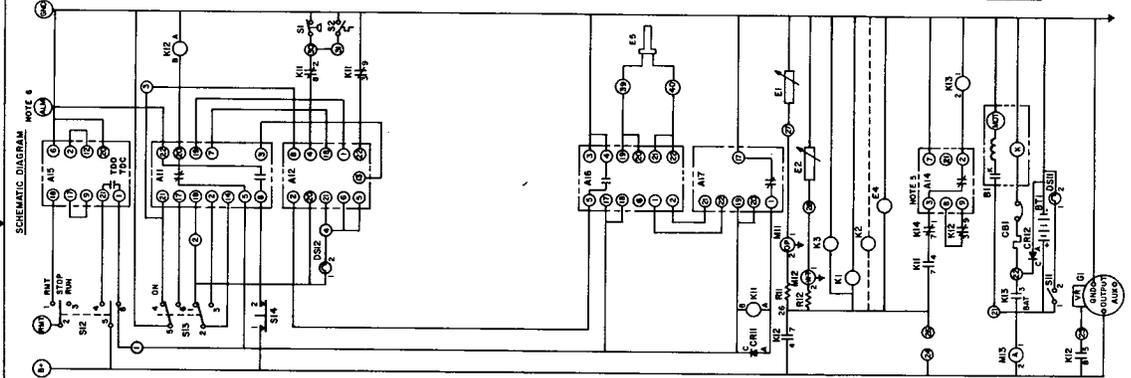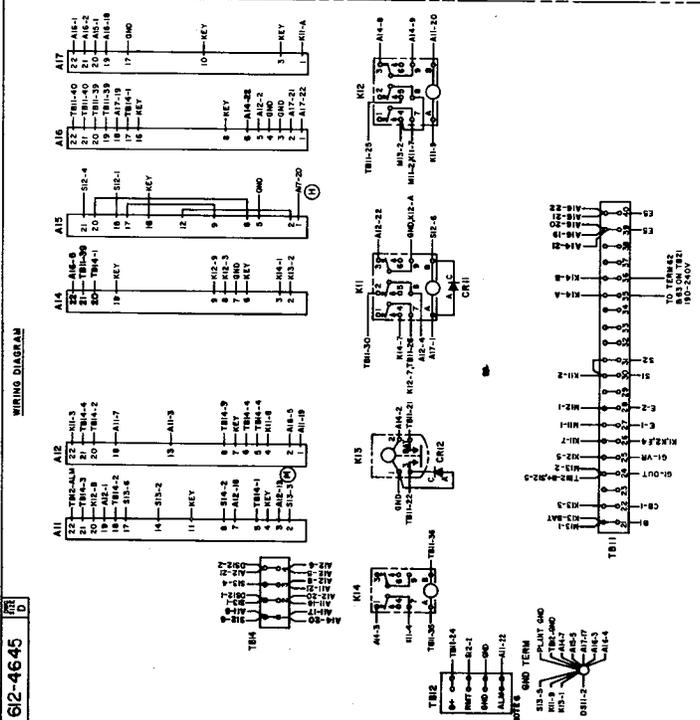

- COMPONENTS CONNECTED WITH DASHED LINES ARE OPTIONAL ITEMS.
- SHUTDOWN & ALARMS
 - 2.1 SAFETY SHUTDOWN & ALARM ON OVERCRANK, OVERSPEED, HI ENG TEMP & LO OIL PRESS
 - 2.2 PEHN STATE CONTROL
 - 2.3 SAFETY SHUTDOWN & ALARM ON OVERCRANK & OVERSPEED, HI ENG TEMP & LO OIL PRESS
 - 2.4 SAFETY SHUTDOWN & ALARM ON OVERCRANK & OVERSPEED, HI ENG TEMP & LO OIL PRESS
3. AMP SETTING 0.00/0.00.
- UNLESS OTHERWISE NOTED, ALL COMPONENTS SHOWN IN DE-ENERGIZED POSITION.
- THE STANDARD CRANKER JUMPERS A4-2 TO A4-3 FOR STEADY CRANKING, THE CYCLE CRANKER ALTERNATE CRANKING, AND THIS CIRCUIT FOR A CRANK-REST-CRANK SEQUENCE.
- REMOTE ALARM CIRCUIT RATED 5 AMP MAX
- STOP TO CAN BE ADJUSTED INDEPENDENTLY TO 0.5 TO 5 MINUTES STOP.....0.5 TO 5 MINUTES TOLERANCE---±20%
5. S3 MUST BE MOUNTED WITH SOLDER TERM UP
- STARTER DISCONNECT (SD) 50 AMP OVERSPEED SHUTDOWN POSITION

SYMBOL	DESCRIPTION	ENGINE PART LIST (REF)
B1	BATTERY-24V	STARTER & SOLAID-ENGINE
C1	CIRCUIT BREAKER 1.5 AMP	
E1	SENSOR-OIL PRESSURE	
E2	SENSOR-WATER TEMP	
E4	FUEL PUMP	
E5	SENSOR-SPEED (AFT) (REF)	
G1	ALTERNATOR & REGULATOR	
K1	SAFETY STOP (REF)	
K2	SOLENOID-WATER	
K3	SOLENOID-WATER	
S1	STOP-ENGINE STOP (REF) (DATE ONLY)	
S2	STOP-ENGINE STOP (REF)	
S3	STOP-ENGINE STOP (REF)	
S4	STOP-ENGINE STOP (REF)	
S5	STOP-ENGINE STOP (REF)	
S6	STOP-ENGINE STOP (REF)	
S7	STOP-ENGINE STOP (REF)	
S8	STOP-ENGINE STOP (REF)	
S9	STOP-ENGINE STOP (REF)	
S10	STOP-ENGINE STOP (REF)	
S11	STOP-ENGINE STOP (REF)	
S12	STOP-ENGINE STOP (REF)	
S13	STOP-ENGINE STOP (REF)	
S14	STOP-ENGINE STOP (REF)	
S15	STOP-ENGINE STOP (REF)	
S16	STOP-ENGINE STOP (REF)	
S17	STOP-ENGINE STOP (REF)	
S18	STOP-ENGINE STOP (REF)	
S19	STOP-ENGINE STOP (REF)	
S20	STOP-ENGINE STOP (REF)	
S21	STOP-ENGINE STOP (REF)	
S22	STOP-ENGINE STOP (REF)	
S23	STOP-ENGINE STOP (REF)	
S24	STOP-ENGINE STOP (REF)	
S25	STOP-ENGINE STOP (REF)	
S26	STOP-ENGINE STOP (REF)	
S27	STOP-ENGINE STOP (REF)	
S28	STOP-ENGINE STOP (REF)	
S29	STOP-ENGINE STOP (REF)	
S30	STOP-ENGINE STOP (REF)	
S31	STOP-ENGINE STOP (REF)	
S32	STOP-ENGINE STOP (REF)	
S33	STOP-ENGINE STOP (REF)	
S34	STOP-ENGINE STOP (REF)	
S35	STOP-ENGINE STOP (REF)	
S36	STOP-ENGINE STOP (REF)	
S37	STOP-ENGINE STOP (REF)	
S38	STOP-ENGINE STOP (REF)	
S39	STOP-ENGINE STOP (REF)	
S40	STOP-ENGINE STOP (REF)	
S41	STOP-ENGINE STOP (REF)	
S42	STOP-ENGINE STOP (REF)	
S43	STOP-ENGINE STOP (REF)	
S44	STOP-ENGINE STOP (REF)	
S45	STOP-ENGINE STOP (REF)	
S46	STOP-ENGINE STOP (REF)	
S47	STOP-ENGINE STOP (REF)	
S48	STOP-ENGINE STOP (REF)	
S49	STOP-ENGINE STOP (REF)	
S50	STOP-ENGINE STOP (REF)	
S51	STOP-ENGINE STOP (REF)	
S52	STOP-ENGINE STOP (REF)	
S53	STOP-ENGINE STOP (REF)	
S54	STOP-ENGINE STOP (REF)	
S55	STOP-ENGINE STOP (REF)	
S56	STOP-ENGINE STOP (REF)	
S57	STOP-ENGINE STOP (REF)	
S58	STOP-ENGINE STOP (REF)	
S59	STOP-ENGINE STOP (REF)	
S60	STOP-ENGINE STOP (REF)	
S61	STOP-ENGINE STOP (REF)	
S62	STOP-ENGINE STOP (REF)	
S63	STOP-ENGINE STOP (REF)	
S64	STOP-ENGINE STOP (REF)	
S65	STOP-ENGINE STOP (REF)	
S66	STOP-ENGINE STOP (REF)	
S67	STOP-ENGINE STOP (REF)	
S68	STOP-ENGINE STOP (REF)	
S69	STOP-ENGINE STOP (REF)	
S70	STOP-ENGINE STOP (REF)	
S71	STOP-ENGINE STOP (REF)	
S72	STOP-ENGINE STOP (REF)	
S73	STOP-ENGINE STOP (REF)	
S74	STOP-ENGINE STOP (REF)	
S75	STOP-ENGINE STOP (REF)	
S76	STOP-ENGINE STOP (REF)	
S77	STOP-ENGINE STOP (REF)	
S78	STOP-ENGINE STOP (REF)	
S79	STOP-ENGINE STOP (REF)	
S80	STOP-ENGINE STOP (REF)	
S81	STOP-ENGINE STOP (REF)	
S82	STOP-ENGINE STOP (REF)	
S83	STOP-ENGINE STOP (REF)	
S84	STOP-ENGINE STOP (REF)	
S85	STOP-ENGINE STOP (REF)	
S86	STOP-ENGINE STOP (REF)	
S87	STOP-ENGINE STOP (REF)	
S88	STOP-ENGINE STOP (REF)	
S89	STOP-ENGINE STOP (REF)	
S90	STOP-ENGINE STOP (REF)	
S91	STOP-ENGINE STOP (REF)	
S92	STOP-ENGINE STOP (REF)	
S93	STOP-ENGINE STOP (REF)	
S94	STOP-ENGINE STOP (REF)	
S95	STOP-ENGINE STOP (REF)	
S96	STOP-ENGINE STOP (REF)	
S97	STOP-ENGINE STOP (REF)	
S98	STOP-ENGINE STOP (REF)	
S99	STOP-ENGINE STOP (REF)	
S100	STOP-ENGINE STOP (REF)	


SYMBOL	DESCRIPTION	ENGINE PART LIST (REF)
A11	MODULE-ENGINE SHUTDOWN	
A12	MODULE-ENGINE SHUTDOWN	
A13	MODULE-ENGINE SHUTDOWN	
A14	MODULE-CRANKER	
A15	MODULE-CRANKER	
A16	MODULE-CRANKER	
A17	MODULE-CRANKER	
A18	MODULE-CRANKER	
A19	MODULE-CRANKER	
A20	MODULE-CRANKER	
A21	MODULE-CRANKER	
A22	MODULE-CRANKER	
A23	MODULE-CRANKER	
A24	MODULE-CRANKER	
A25	MODULE-CRANKER	
A26	MODULE-CRANKER	
A27	MODULE-CRANKER	
A28	MODULE-CRANKER	
A29	MODULE-CRANKER	
A30	MODULE-CRANKER	
A31	MODULE-CRANKER	
A32	MODULE-CRANKER	
A33	MODULE-CRANKER	
A34	MODULE-CRANKER	
A35	MODULE-CRANKER	
A36	MODULE-CRANKER	
A37	MODULE-CRANKER	
A38	MODULE-CRANKER	
A39	MODULE-CRANKER	
A40	MODULE-CRANKER	
A41	MODULE-CRANKER	
A42	MODULE-CRANKER	
A43	MODULE-CRANKER	
A44	MODULE-CRANKER	
A45	MODULE-CRANKER	
A46	MODULE-CRANKER	
A47	MODULE-CRANKER	
A48	MODULE-CRANKER	
A49	MODULE-CRANKER	
A50	MODULE-CRANKER	
A51	MODULE-CRANKER	
A52	MODULE-CRANKER	
A53	MODULE-CRANKER	
A54	MODULE-CRANKER	
A55	MODULE-CRANKER	
A56	MODULE-CRANKER	
A57	MODULE-CRANKER	
A58	MODULE-CRANKER	
A59	MODULE-CRANKER	
A60	MODULE-CRANKER	
A61	MODULE-CRANKER	
A62	MODULE-CRANKER	
A63	MODULE-CRANKER	
A64	MODULE-CRANKER	
A65	MODULE-CRANKER	
A66	MODULE-CRANKER	
A67	MODULE-CRANKER	
A68	MODULE-CRANKER	
A69	MODULE-CRANKER	
A70	MODULE-CRANKER	
A71	MODULE-CRANKER	
A72	MODULE-CRANKER	
A73	MODULE-CRANKER	
A74	MODULE-CRANKER	
A75	MODULE-CRANKER	
A76	MODULE-CRANKER	
A77	MODULE-CRANKER	
A78	MODULE-CRANKER	
A79	MODULE-CRANKER	
A80	MODULE-CRANKER	
A81	MODULE-CRANKER	
A82	MODULE-CRANKER	
A83	MODULE-CRANKER	
A84	MODULE-CRANKER	
A85	MODULE-CRANKER	
A86	MODULE-CRANKER	
A87	MODULE-CRANKER	
A88	MODULE-CRANKER	
A89	MODULE-CRANKER	
A90	MODULE-CRANKER	
A91	MODULE-CRANKER	
A92	MODULE-CRANKER	
A93	MODULE-CRANKER	
A94	MODULE-CRANKER	
A95	MODULE-CRANKER	
A96	MODULE-CRANKER	
A97	MODULE-CRANKER	
A98	MODULE-CRANKER	
A99	MODULE-CRANKER	
A100	MODULE-CRANKER	

SYMBOL	DESCRIPTION	ENGINE PART LIST (REF)
M1	SOLENOID-WATER	
M2	SOLENOID-WATER	
M3	SOLENOID-WATER	
M4	SOLENOID-WATER	
M5	SOLENOID-WATER	
M6	SOLENOID-WATER	
M7	SOLENOID-WATER	
M8	SOLENOID-WATER	
M9	SOLENOID-WATER	
M10	SOLENOID-WATER	
M11	SOLENOID-WATER	
M12	SOLENOID-WATER	
M13	SOLENOID-WATER	
M14	SOLENOID-WATER	
M15	SOLENOID-WATER	
M16	SOLENOID-WATER	
M17	SOLENOID-WATER	
M18	SOLENOID-WATER	
M19	SOLENOID-WATER	
M20	SOLENOID-WATER	
M21	SOLENOID-WATER	
M22	SOLENOID-WATER	
M23	SOLENOID-WATER	
M24	SOLENOID-WATER	
M25	SOLENOID-WATER	
M26	SOLENOID-WATER	
M27	SOLENOID-WATER	
M28	SOLENOID-WATER	
M29	SOLENOID-WATER	
M30	SOLENOID-WATER	
M31	SOLENOID-WATER	
M32	SOLENOID-WATER	
M33	SOLENOID-WATER	
M34	SOLENOID-WATER	
M35	SOLENOID-WATER	
M36	SOLENOID-WATER	
M37	SOLENOID-WATER	
M38	SOLENOID-WATER	
M39	SOLENOID-WATER	
M40	SOLENOID-WATER	
M41	SOLENOID-WATER	
M42	SOLENOID-WATER	
M43	SOLENOID-WATER	
M44	SOLENOID-WATER	
M45	SOLENOID-WATER	
M46	SOLENOID-WATER	
M47	SOLENOID-WATER	
M48	SOLENOID-WATER	
M49	SOLENOID-WATER	
M50	SOLENOID-WATER	
M51	SOLENOID-WATER	
M52	SOLENOID-WATER	
M53	SOLENOID-WATER	
M54	SOLENOID-WATER	
M55	SOLENOID-WATER	
M56	SOLENOID-WATER	
M57	SOLENOID-WATER	
M58	SOLENOID-WATER	
M59	SOLENOID-WATER	
M60	SOLENOID-WATER	
M61	SOLENOID-WATER	
M62	SOLENOID-WATER	
M63	SOLENOID-WATER	
M64	SOLENOID-WATER	
M65	SOLENOID-WATER	
M66	SOLENOID-WATER	
M67	SOLENOID-WATER	
M68	SOLENOID-WATER	
M69	SOLENOID-WATER	
M70	SOLENOID-WATER	
M71	SOLENOID-WATER	
M72	SOLENOID-WATER	
M73	SOLENOID-WATER	
M74	SOLENOID-WATER	
M75	SOLENOID-WATER	
M76	SOLENOID-WATER	
M77	SOLENOID-WATER	
M78	SOLENOID-WATER	
M79	SOLENOID-WATER	
M80	SOLENOID-WATER	
M81	SOLENOID-WATER	
M82	SOLENOID-WATER	
M83	SOLENOID-WATER	
M84	SOLENOID-WATER	
M85	SOLENOID-WATER	
M86	SOLENOID-WATER	
M87	SOLENOID-WATER	
M88	SOLENOID-WATER	
M89	SOLENOID-WATER	
M90	SOLENOID-WATER	
M91	SOLENOID-WATER	
M92	SOLENOID-WATER	
M93	SOLENOID-WATER	
M94	SOLENOID-WATER	
M95	SOLENOID-WATER	
M96	SOLENOID-WATER	
M97	SOLENOID-WATER	
M98	SOLENOID-WATER	
M99	SOLENOID-WATER	
M100	SOLENOID-WATER	


SYMBOL	DESCRIPTION	ENGINE PART LIST (REF)
R1	RELAY-START DISCONNECT	
R2	RELAY-START DISCONNECT	
R3	RELAY-START DISCONNECT	
R4	RELAY-START DISCONNECT	
R5	RELAY-START DISCONNECT	
R6	RELAY-START DISCONNECT	
R7	RELAY-START DISCONNECT	
R8	RELAY-START DISCONNECT	
R9	RELAY-START DISCONNECT	
R10	RELAY-START DISCONNECT	
R11	RELAY-START DISCONNECT	
R12	RELAY-START DISCONNECT	
R13	RELAY-START DISCONNECT	
R14	RELAY-START DISCONNECT	
R15	RELAY-START DISCONNECT	
R16	RELAY-START DISCONNECT	
R17	RELAY-START DISCONNECT	
R18	RELAY-START DISCONNECT	
R19	RELAY-START DISCONNECT	
R20	RELAY-START DISCONNECT	
R21	RELAY-START DISCONNECT	
R22	RELAY-START DISCONNECT	
R23	RELAY-START DISCONNECT	
R24	RELAY-START DISCONNECT	
R25	RELAY-START DISCONNECT	
R26	RELAY-START DISCONNECT	
R27	RELAY-START DISCONNECT	
R28	RELAY-START DISCONNECT	
R29	RELAY-START DISCONNECT	
R30	RELAY-START DISCONNECT	
R31	RELAY-START DISCONNECT	
R32	RELAY-START DISCONNECT	
R33	RELAY-START DISCONNECT	
R34	RELAY-START DISCONNECT	
R35	RELAY-START DISCONNECT	
R36	RELAY-START DISCONNECT	
R37	RELAY-START DISCONNECT	
R38	RELAY-START DISCONNECT	
R39	RELAY-START DISCONNECT	
R40	RELAY-START DISCONNECT	
R41	RELAY-START DISCONNECT	
R42	RELAY-START DISCONNECT	
R43	RELAY-START DISCONNECT	
R44	RELAY-START DISCONNECT	
R45	RELAY-START DISCONNECT	
R46	RELAY-START DISCONNECT	
R47	RELAY-START DISCONNECT	
R48	RELAY-START DISCONNECT	
R49	RELAY-START DISCONNECT	
R50	RELAY-START DISCONNECT	
R51	RELAY-START DISCONNECT	
R52	RELAY-START DISCONNECT	
R53	RELAY-START DISCONNECT	
R54	RELAY-START DISCONNECT	
R55	RELAY-START DISCONNECT	
R56	RELAY-START DISCONNECT	
R57	RELAY-START DISCONNECT	
R58	RELAY-START DISCONNECT	

300-964

SCHEMATIC DIAGRAM

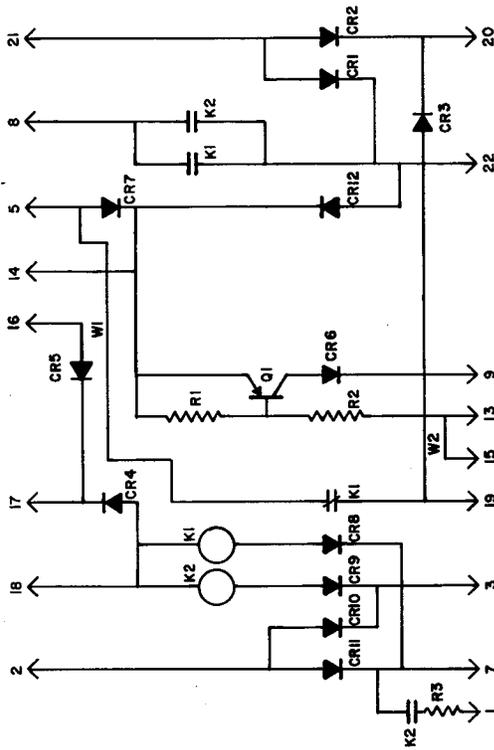

MECHANICAL ASSY

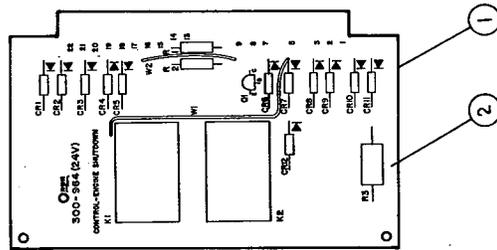

SPECIFICATIONS

- NOTES:
1. USE GOOD COMMERCIAL SOLDERING PROCEDURES WITH SN63/37 SOLDER.
 2. SOLDER JOINTS AND/OR COMPONENT LEADS (EXCEPT POTENTIOMETER LEADS) SHALL NOT PROJECT MORE THAN 3/16" BEYOND SURFACE OF BOARD.
 3. TEST AND CALIBRATE PER DWG. NO. 539-0206 (B)

300-964

ITEM	REF. DES.	QTY	UNIT	DESCRIPTION OR MATERIAL
10	W1, W2	5.0'	P	SLEEVING
9	W1, W2	5.0'	A	WIRE NO.20
8	Q1	1	A	TRANSISTOR-PNP (6533)
7	R3	1	A	RESISTOR 220 Ω, 10%, 2 W
6	R2	1	A	RESISTOR-5600 Ω, 10%, 1/2 W
5	R1	1	A	RESISTOR-10,000 Ω, 10%, 1/2 W
4	K1, K2	2	A	RELAY
3	CR1-CR12	12	A	RECTIFIER-DIODE
2		1	D	SILKSCREEN-PC 80
1		1	D	PRINTED CIRCUIT BOARD

ITEM	REF. DES.	QTY	UNIT	DESCRIPTION OR MATERIAL
10	W1, W2	5.0'	P	SLEEVING
9	W1, W2	5.0'	A	WIRE NO.20
8	Q1	1	A	TRANSISTOR-PNP (6533)
7	R3	1	A	RESISTOR 220 Ω, 10%, 2 W
6	R2	1	A	RESISTOR-5600 Ω, 10%, 1/2 W
5	R1	1	A	RESISTOR-10,000 Ω, 10%, 1/2 W
4	K1, K2	2	A	RELAY
3	CR1-CR12	12	A	RECTIFIER-DIODE
2		1	D	SILKSCREEN-PC 80
1		1	D	PRINTED CIRCUIT BOARD

REF. DES.	QTY	UNIT	DESCRIPTION OR MATERIAL
W1, W2	5.0'	P	SLEEVING
W1, W2	5.0'	A	WIRE NO.20
Q1	1	A	TRANSISTOR-PNP (6533)
R3	1	A	RESISTOR 220 Ω, 10%, 2 W
R2	1	A	RESISTOR-5600 Ω, 10%, 1/2 W
R1	1	A	RESISTOR-10,000 Ω, 10%, 1/2 W
K1, K2	2	A	RELAY
CR1-CR12	12	A	RECTIFIER-DIODE
	1	D	SILKSCREEN-PC 80
	1	D	PRINTED CIRCUIT BOARD

300-964
 612-5048 300-960
 612-5049 300-954
 TOLERANCES UNLESS OTHERWISE SPECIFIED
 ANGLES: 2
 HOLE: .001 ± .002
 THE DIMENSIONS SHOWN ARE FOR INFORMATION ONLY. THE DIMENSIONS OF THE PARTS SHALL BE AS SHOWN IN THE DRAWING.

SEPIA FROM MASTER

