

Cummins **Onan**



Parts Manual

50 Hz Australian / European Portable Generator Set

EGMBT / P4500

EGMBU / P5000e

Introduction

This parts manual applies to the European, Australian generator sets listed below. Parts are arranged in groups of related items and each illustrated part is defined by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Using the model and specification number from your generator set nameplate, select parts that apply to your set. Right and left sides are determined by facing the engine end (front) of the set. Unless otherwise noted parts are compatible Australian and European.

Generator Set Data Tables

Model Identification	Fuel	Amps	Voltage	Hertz	Watts
EGMBT P4500	Gasoline	8.3	120/240	50	4000
EGMBU P5000e	Gasoline	10.4	120/240	50	5000

* – The specification number denotes customer requested options or deviations from a standard (1A, 1B, etc.) model. The specification letter advances (A, to B, to C, etc.) with major manufacturing changes.

FOREWORD

This parts catalogue is compiled all service parts for Cummins model P4500 & P5000e. When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time.

We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Cummins distributor.

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY.....	ASSEMBLY	HEX.....	HEXAGONAL
COMP	COMPLETE	P=	PITCH (in mm)
EX.....	EXPORT (from Japan)	P.T.O. (PTO).....	POWER TAKE OFF
FIG.	FIGURE	REF.....	REFERENCE
FR.....	FRONT	R	RIGHTHAND SIDE
"	INCH	RR	REAR
INCL.	INCLUDE	STD	STANDARD
~L	LITRE	SW.....	SWITCH
L=	LENGTH (in. mm)	T=	THICKNESS (in mm)
L	LEFT-HAND SIDE	UN	UNIT
MECH	MECHANICAL	U.S.	UNDER SIZE
NO (NON)	NONE	~V	VOLTAGE
OPT.	OPTIONAL	~W	WATT
O.S.	OVER SIZE	W/	WITH
N.	INLET	W/O	WITHOUT
EX.	EXHAUST	A.C.	ALT CURRENT
IN.	INLET	D.C.	DIRECTCURRENT
		AU	AUSTRALIAN
		EU	EUROPEAN

Index

A

Accessories, **24**
Adapter, Oil Filler, **24**
Alternator, **23**
Arrestor, Spark, **17**
Assy Coil, Charger (6500 Only), **14**
Assy Control, **16**
Assy, Fan, **13**
Assy, Rotor, **23**
Assy, Starter, **11**
Assy, Stator, **23**

B

Baffle, Air, **11**
Battery Tray (6500), **21**
Bearing, Ball, **6**
Block, Cylinder, **6**
Bracket, Air Cleaner, **15 , 22**
Bracket, Battery, **21**
Bracket, Choke, **12**
Bracket, Muffler, **17**
Brushes, **23**

C

Carburetor, **12**
Camshaft, **10**
Cap, Filler, **18**
Cap, Oil Fill, **7**
Carburetor, **12**
Cleaner, Air, **15**
Clip, Spring, **6**
Clip, Wiring, **11**
Coil, Ignition, **14**
Components, Control Panel, **20**
Contact, Socket, **20**
Control Panel, **20**
Cover, Air Cleaner, **15**
Cover, Crankcase, **7**
Cover, Switch Protector, **20**

Cover, Valve, **5**
Crankcase, **6**
Crankshaft, **8**

D

Duct, Air, **7**

F

Fan, Generator Cooling, **23**
Filter, Fuel, **18**
Flywheel, **13**
Frame, **22**
Frame, Generator, **22**
Fuel Tank, **17 , 18**

G

Gasket, Air Cleaner, **12 , 15**
Gasket, Carburetor, **12**
Gasket, Cover, **5**
Gasket, Crankcase, **7**
Gasket, Cylinder Head, **5**
Gasket, Exhaust, **17**
Gasket, Manifold, **12**
Gauge, Level, **18**
Generator, **23**
Governor, **7 , 14**
Guide, Pushrod, **10**

H

Harness, Control Panel, **20**
Harness, Switch Combination, **20**
Harness, Switch Protector, **20**
Head, Cylinder, **5**
Hose, Fuel, **18**
Housing, Generator, **7 , 23**

Index

I

Insulator, Carburetor, **12**
Isolator, (Fuel Tube), **18**
Isolator, Vibration, **22**
Isolator, Vibration (Fuel Tank), **18**
Isolator, Vibration (Left), **22**
Isolator, Vibration (Right), **22**

K

Kit, Piston Ring, **9**

L

Lead, Battery, **21**
Level, Governor, **16**

M

Manifold, Exhaust, **17**
Motor, Starter, **19**
Motor, Starter (6500), **19**
Muffler, **17**

P

Panel, Control, **20**
Pin, Dowel, **7**
Pin, Piston, **9**
Piston, **9**
Plug, Spark, **5**
Protector, Muffler Side, **17**
Pushrod, **10**

R

Receptacle Duplex (GFI), **20**

Rectifier, Bridge, **20**
Regulator, Voltage, **23**
Retainer, Piston Pin, **9**
Retainer, Valve Spring(Exhaust), **10**
Rod, Connecting, **9**
Rod, Governor, **16**

S

Seal, Oil, **6**
Seal, Oil (8 x 14 x 5), **6**
Seal, Valve Stem, **10**
Shaft, Governor, **6**
Shield, Exhaust Heat, **17**
Solenoid, **19**
Speed Control, **16**
Starter, **10** , **11**
Starter, Recoil, **13**
Starter, Recoil Reel, **11**
Switch, Level, **6**
Switch, Level (Oil), **6**

T

Tank, Fuel, **18**
Tappet, **10**
Terminal, Receptacle, **23**


V

Valve, (Exhaust), **10**
Valve, (Intake), **10**
Valve, Fuel, **18**

W

Weight, Rotor Balance, **8**

Cylinder Head

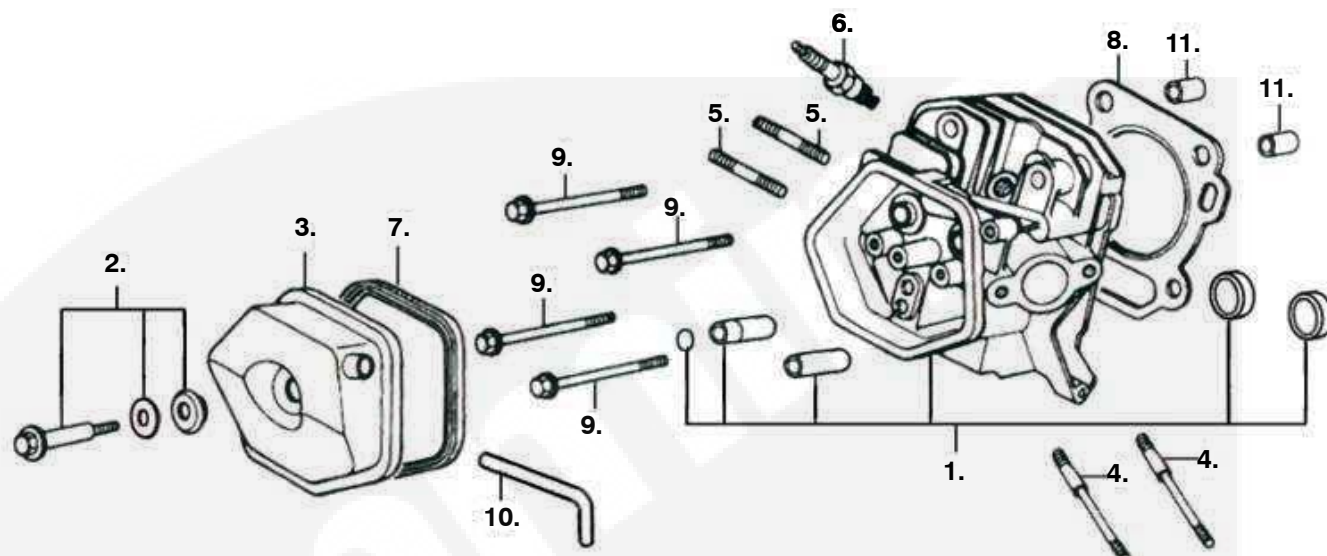


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0002	1	Head, Cylinder
2.	181-0010	1	Screw, Hex Flange Head
3.	181-0011	1	Cover, Valve
4.	181-0481	2	Stud (Intake)
5.	181-0482	2	Stud (Exhaust)
6.	181-0248	1	Plug, Spark
7.	181-0015	1	Gasket, Cover

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8.	A002L776	1	Gasket, Cylinder Head
	110-4002	1	P4500
			P5000e
9.	181-0436	4	Screw, Hex Flange Head
10.	181-0414	1	Hose, Breather
11.	181-0484	2	Pin, Dowel


* – Unless otherwise noted parts are compatible AU and EU.

Crankcase

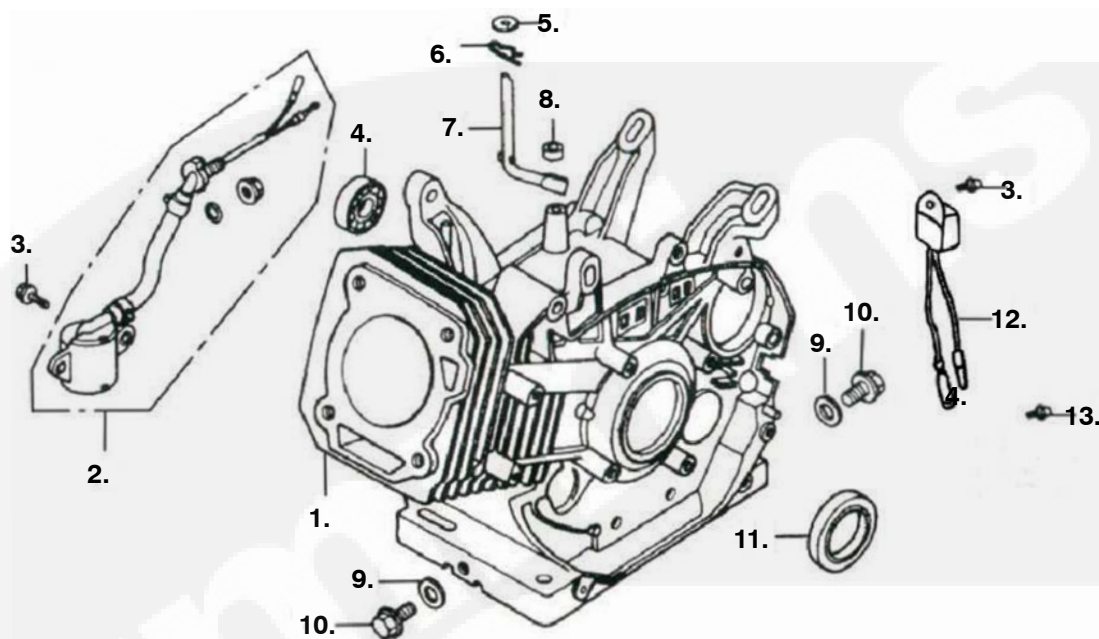

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	101-0858	1	Block, Cylinder	7.	181-0030	1	Shaft, Governor
	181-0026	1	P4500	8.	181-0488	1	Seal, Oil (8 x 14 x 5)
2.	181-0027	3	Switch, Level (Oil)	9.	181-0489	2	Washer, Sealing (12mm)
3.	181-0266	1	Screw, Hex Flanged Head	10.	181-0490	2	Plug, Drain
4.	181-0485	1	Bearing, Ball	11.	181-0491	1	Seal, Oil
5.	181-0486	1	Washer, (8mm)	12.	181-0036	1	Switch, Level
6.	181-0487	1	Clip, Spring	13.	181-0266	1	Screw, Hex Flanged Head


Crankcase Cover

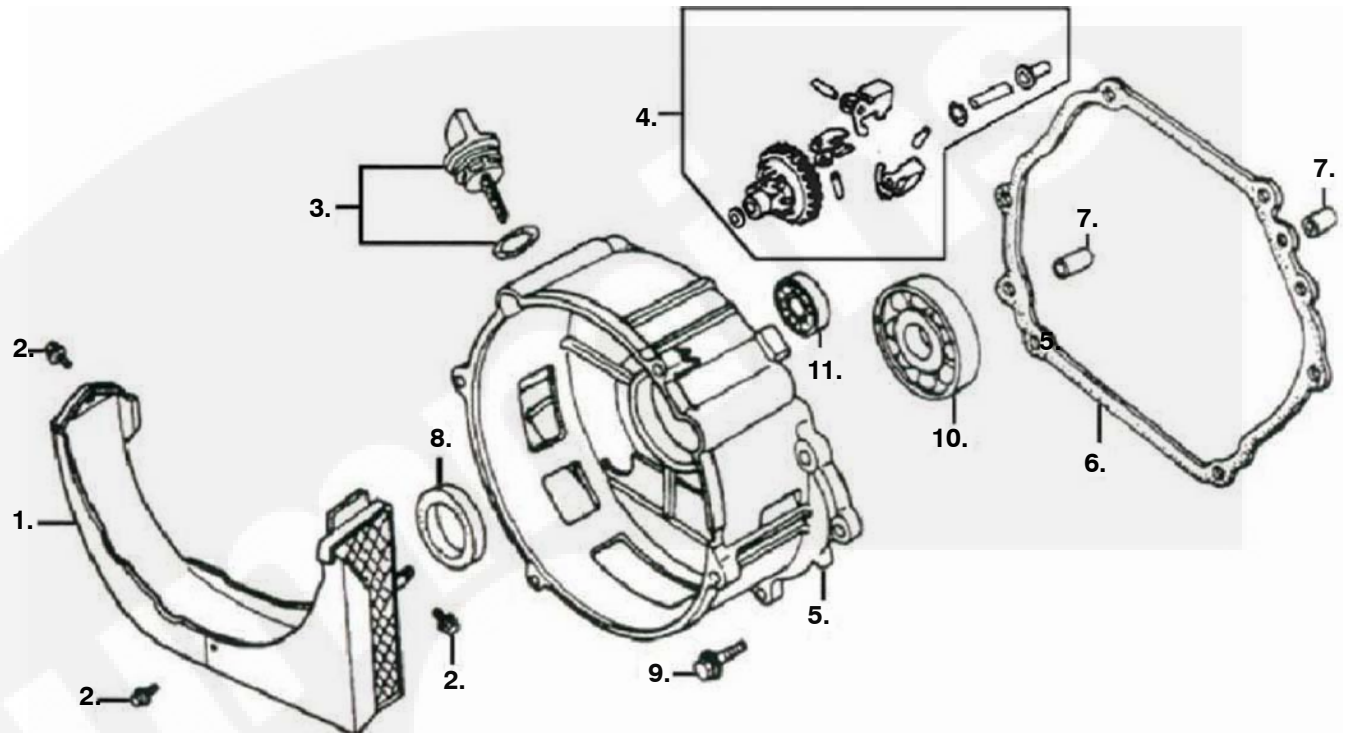

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0038	1	Duct, Air
2.	A026L008	3	Screw, Hex Flanged Head
3.	181-0039	1	Cap, Oil Fill
4.	181-0041	1	Governor
5.	181-0043	2	Housing, Generator
6.	A028W149	1	Gasket, Crankcase
7.	181-0437	2	Pin, Dowel


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8.	181-0491	1	Seal, Oil (35 x 52 x 8)
9.	A026L011	7	Screw, Hex Flanged Head (M8 x35mm)
10.	181-0497	1	Bearing, Ball
11.	181-0485	1	Bearing, Ball

Crankshaft

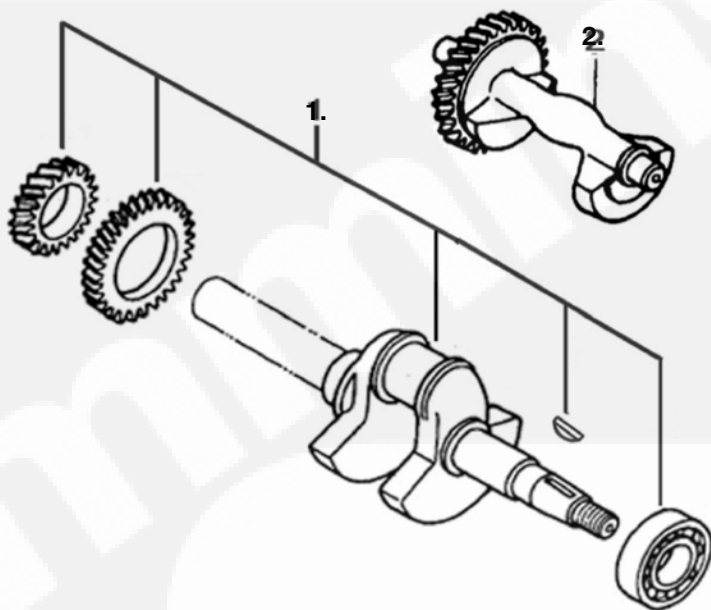

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0049	1	Crankshaft
2.	181-0055	1	Weight, Rotor Balance


Piston

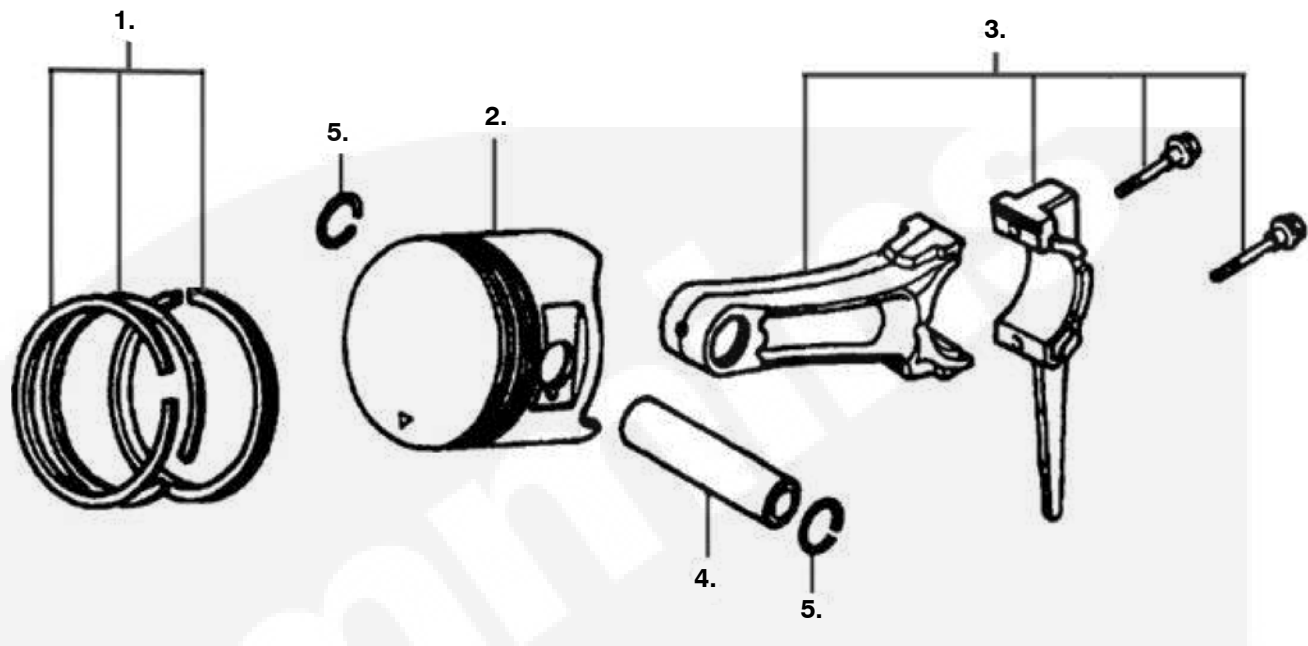

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.			Kit, Piston Ring
	181-0559	1	P4500
	181-0058	1	P5000e
2.			Piston
	181-0560	1	P4500
	112-0315	1	P5000e


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3.	181-0063	1	Rod, Connecting
4.			Pin, Piston
	181-0561		P4500
	112-0316	1	P5000e
5.	181-0067	2	Retainer, Piston Pin

Camshaft

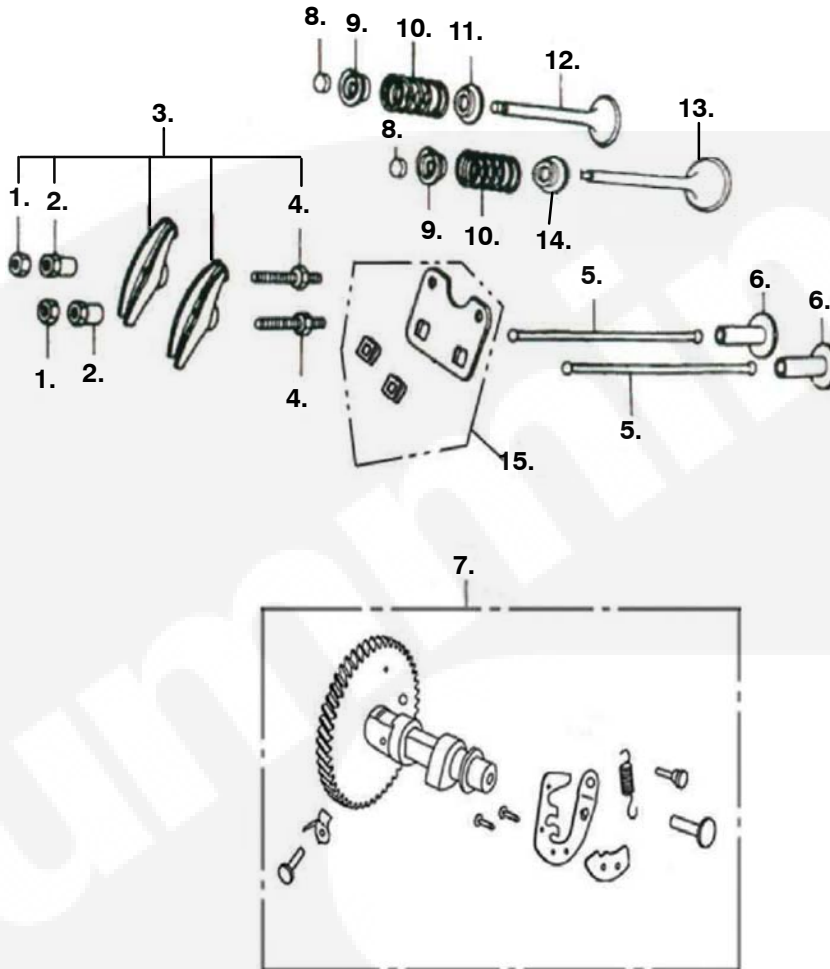


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0562	2	Nut, Pivot Adjust	8.	181-0076	2	Valve, (Exhaust)
2.	181-0563	2	Pivot, Rocker Arm	9.	181-0077	2	Retainer, Valve Spring(Exhaust)
3.	181-0499	2	Assy. Arm	10.	181-0078	2	Spring, Valve
4.	181-0590	2	Bolt, Pivot Arm	11.	181-0566	2	Seat Valve, Spring
5.	181-0292	2	Pushrod	12.	110-4091	1	Valve, (Exhaust)
6.	181-0072	2	Lifter, Valve	13.	181-0084	1	Valve, (Intake)
7.			Camshaft	14.	181-0500	1	Seal, Valve Stem
	181-0565	1	P4500	15.	181-0158	1	Guide, Pushrod
	181-0075	1	P5000e				

Starter

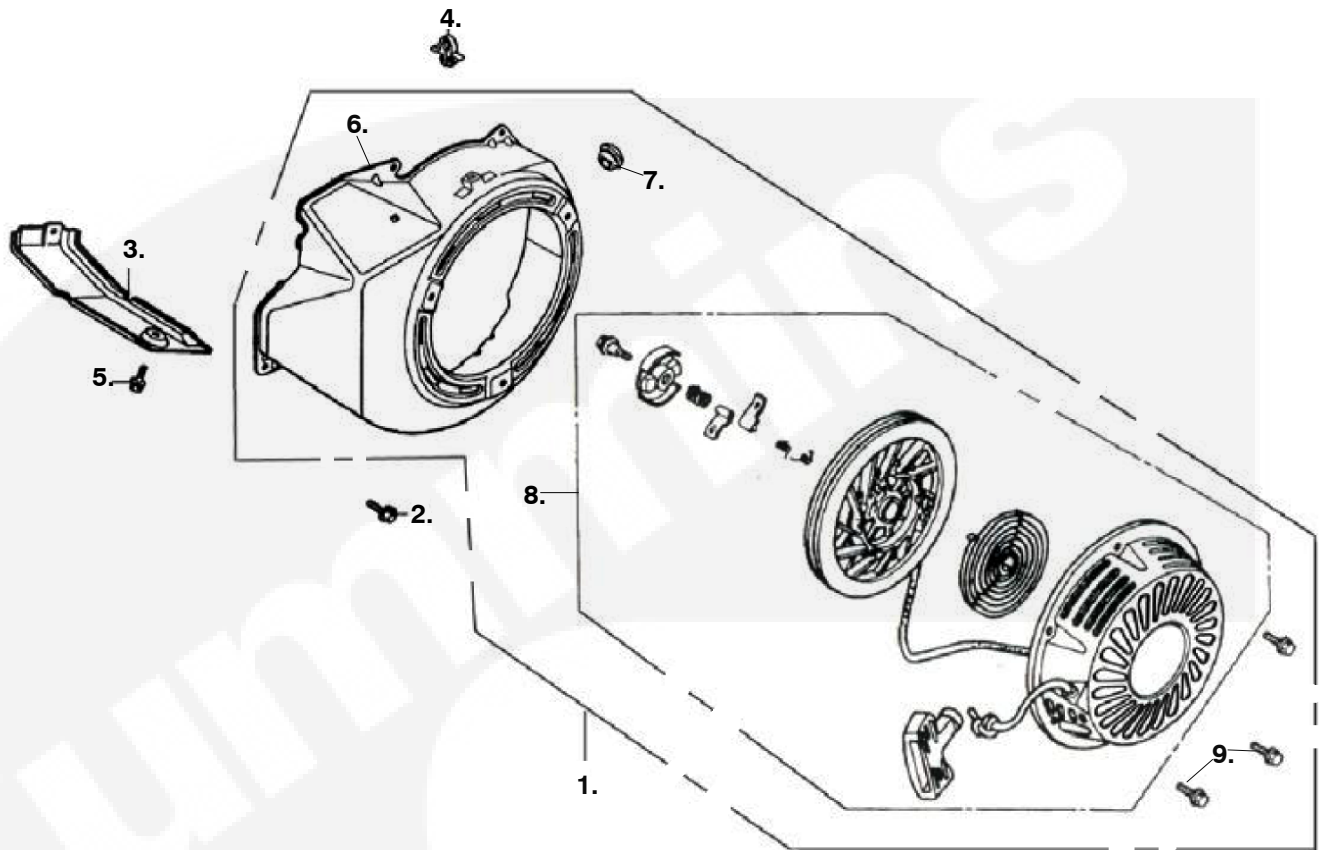


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0448	1	Starter, Recoil Reel
2.	181-0266	6	Screw, Hex Flanged Head (M6 x 12mm)
3.	181-0178	1	Baffle, Air
4.	181-0179	2	Clip, Wiring
5.	815-1577	3	Screw, Hex Flanged Head (M6 x 8mm)
6.	234-1082	1	Cover, Fan
7.	508-1312	1	Grommet, Drain Hole
8.	191-2479	1	Assy, Starter
9.	181-0311	2	Screw, Hex Flanged Head (M6 x 10mm)

Carburetor

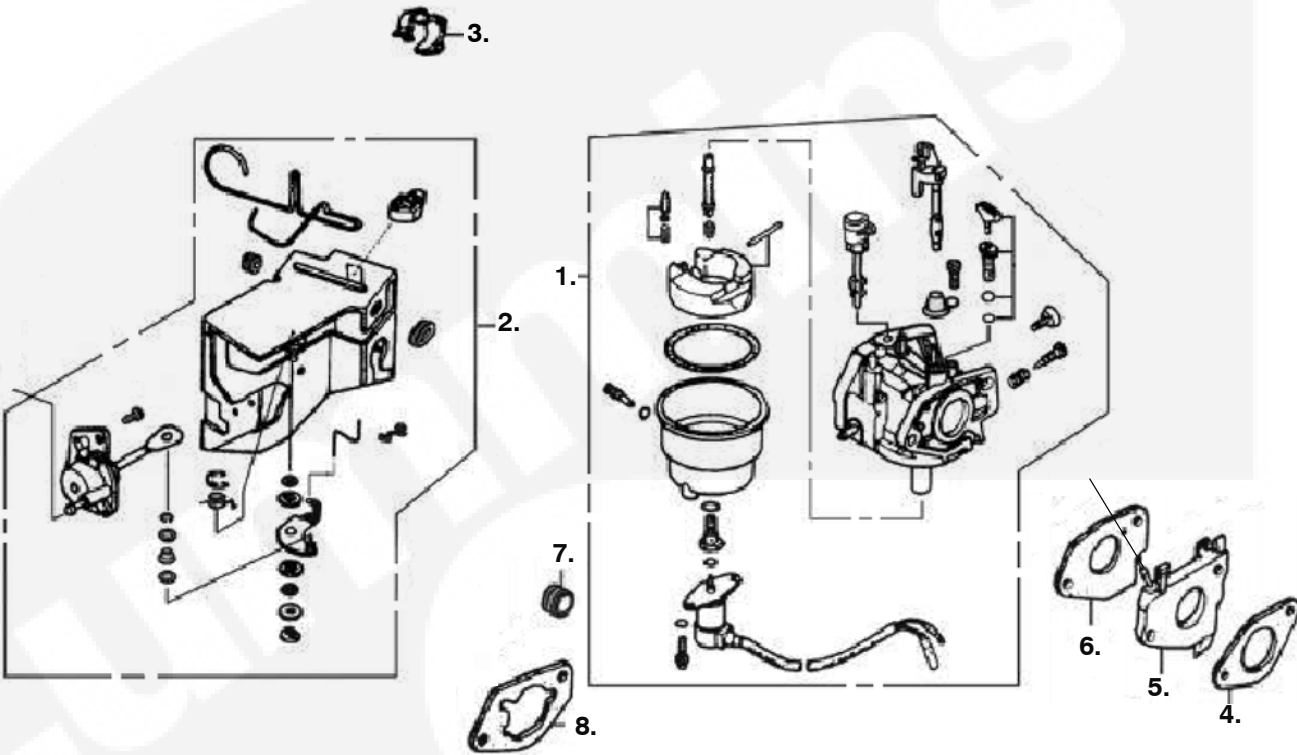


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.			Carburetor	6.			Gasket, Carburetor
	181-0567	1	P4500		A028W164	1	P4500
	181-0182	1	P5000e		146-0887	1	P5000e
2.	181-0184	1	Bracket, Choke	7.	181-0506	1	Grommet, Breather Tube
3.	181-0502	1	Clip, Wire	8.	A028W168	1	Gasket, Air Cleaner
4.	A028W166	1	Gasket, Manifold				
5.			Insulator, Carburetor				
	181-0198	1	P4500				
	333-0794	1	P5000e				

Flywheel

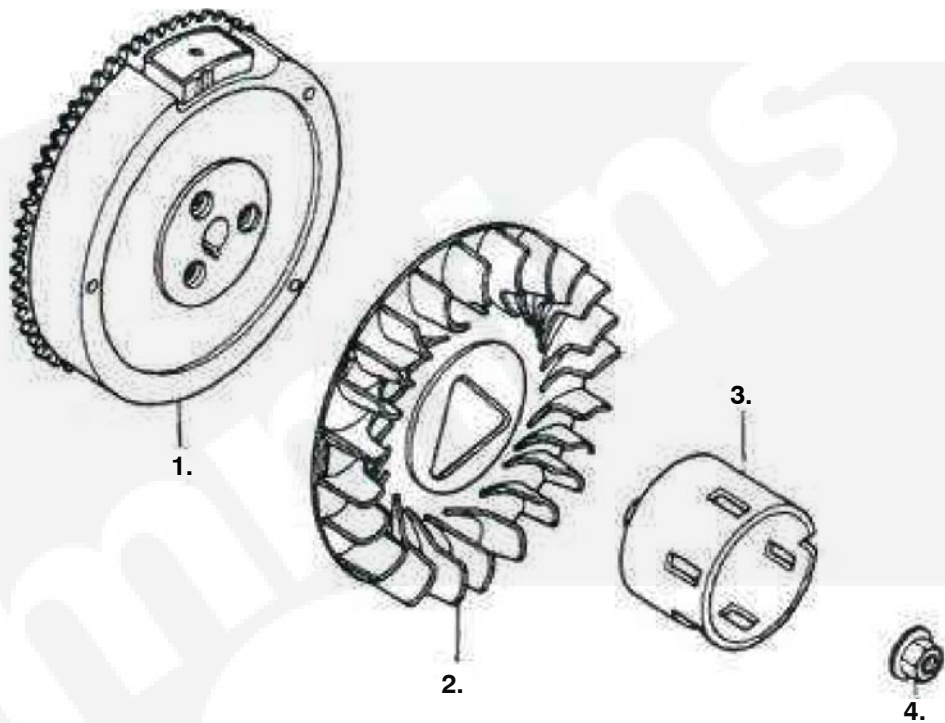


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.			Flywheel	2.	181-0207	2	Assy, Fan
	181-0205	1	P4500	3.	181-0209	1	Starter, Recoil
	104-2126	1	P5000e	4.	181-0508	1	Nut, Hex Flanged (18mm)

Ignition Components

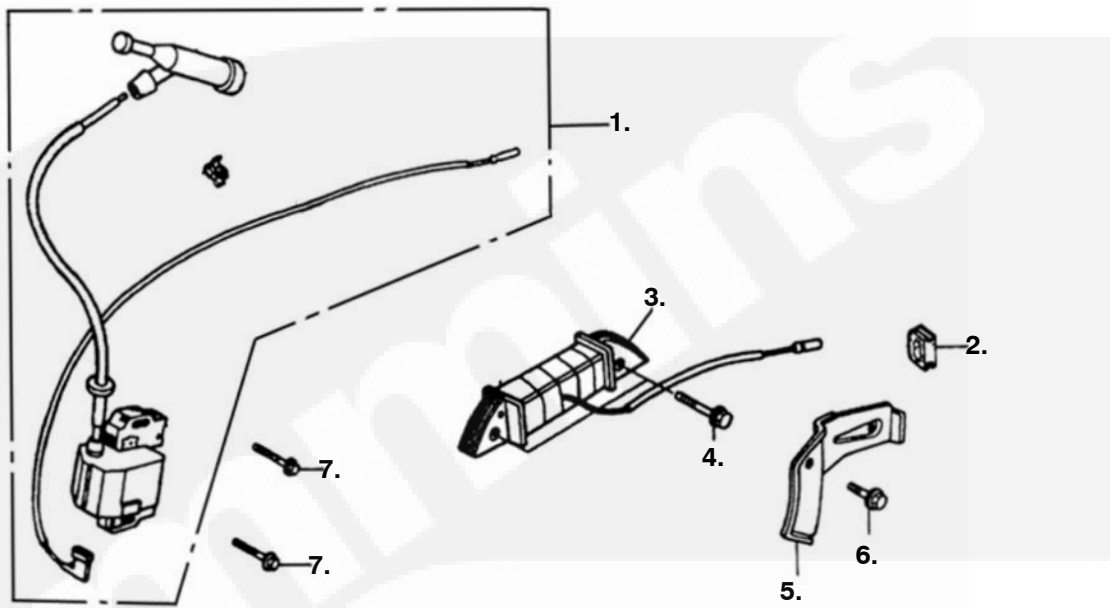

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0212	1	Coil, Ignition
2.	181-0511	1	Grommet (Genset to Engine)
3.	181-0213	1	Assy Coil, Charger (P5000e Only)
4.	181-0509	2	Screw, Hex Flanged Head (P5000e Only) (6M x 28)
5.	181-0510	1	Clip, Wiring (P5000e Only)
6.	181-0266	1	Screw, Hex Flanged Head (P5000e Only) (6M x 12)
7.	181-0338	2	Screw, Hex Flanged Head (6M x 25)


Air Cleaner

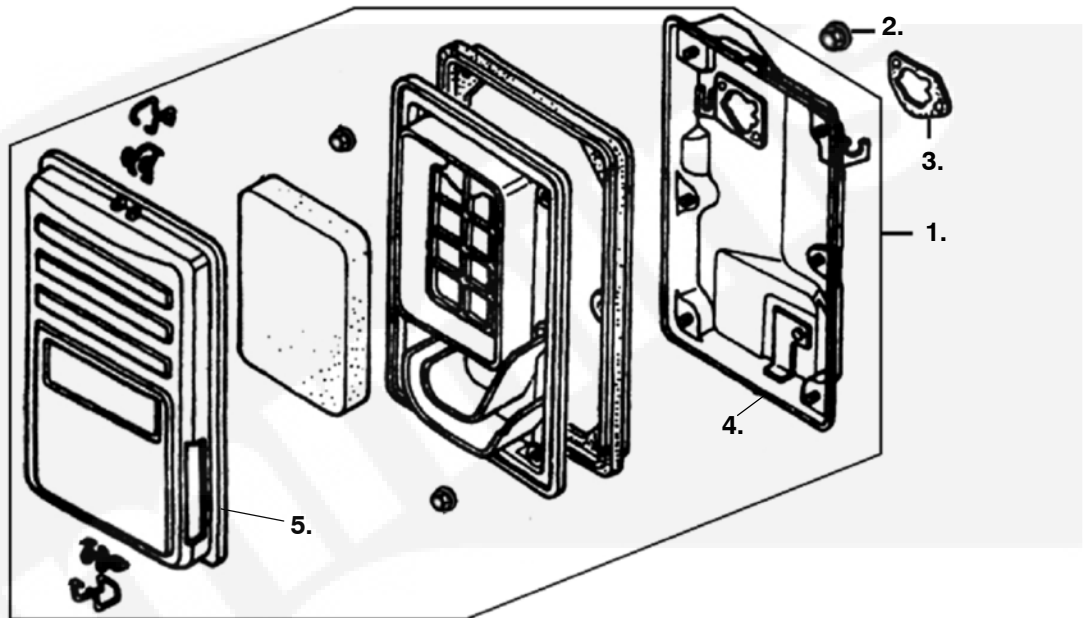

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0512	1	Cleaner, Air
2.	181-0344	2	Nut, Hex Flanged
3.	A028W168	1	Gasket, Air Cleaner
4.	181-0128	1	Bracket, Air Cleaner
5.	140-4229	1	Cover, Air Cleaner




Speed Control

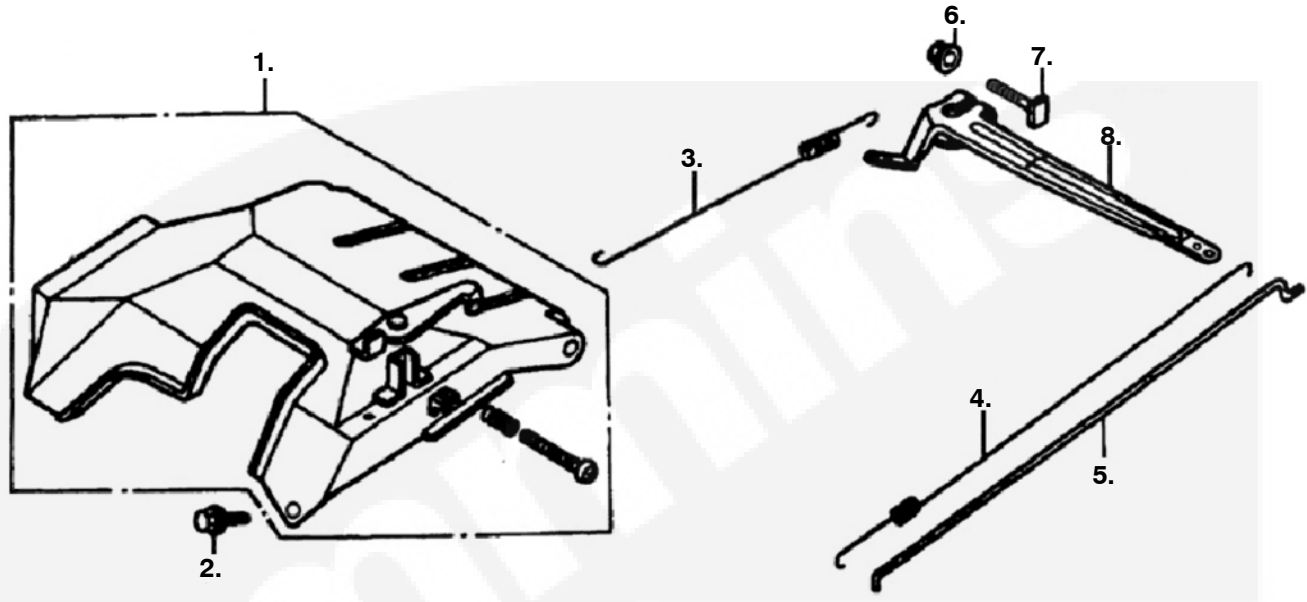

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0513	1	Assy Control	5.	181-0234	1	Rod, Governor
2.	181-0266	2	Screw, Hex Flanged Head	6.	181-0344	1	Nut, Hex Flanged Head
3.	181-0514	1	Spring Extension (Governor A)	7.	181-0452	1	Screw, Governor
4.	181-0232	1	Spring Extension (Governor B)	8.	181-0236	1	Level, Governor


Muffler

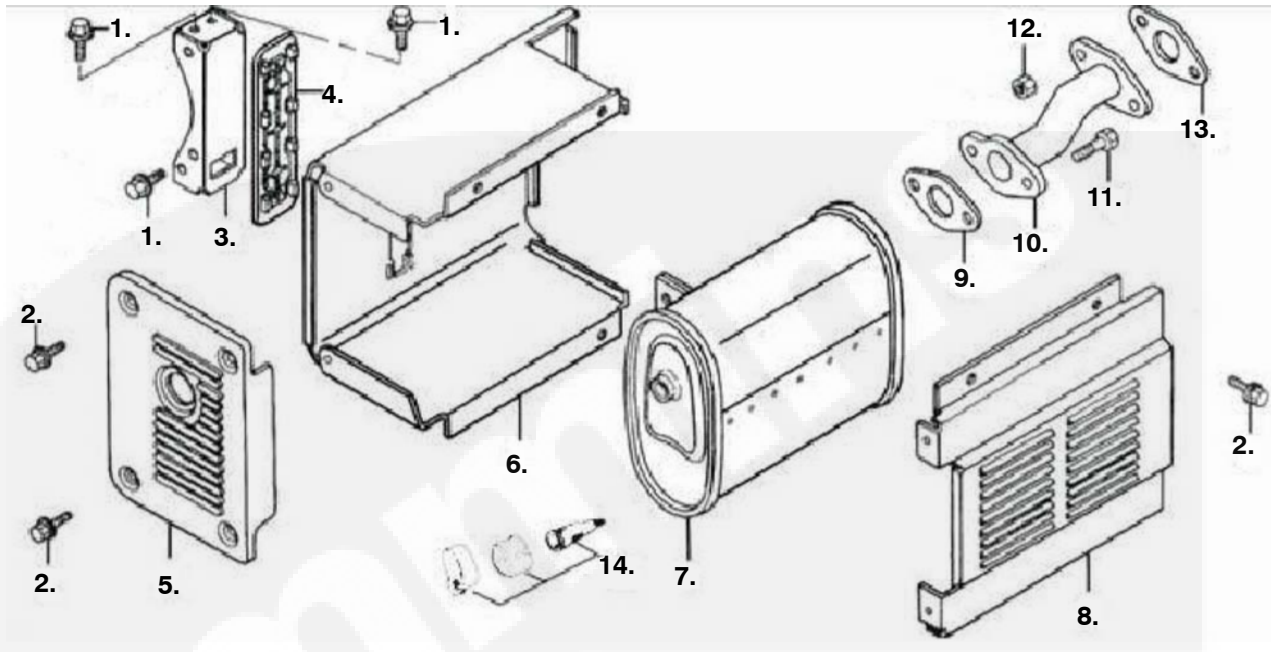

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0411	4	Screw, Hex Flanged Head
2.	181-0266	7	Screw, Hex Flanged Head
3.	181-0237	1	Bracket, Muffler
4.	181-0238	1	Seal, Air
5.	181-0239	1	Protector, Muffler Side
6.			Shield, Exhaust Heat
	155-4767	1	P4500
	181-0516	1	P5000e
7.			Muffler
	181-0572	1	P4500 EU
	A004T586	1	P4500 AU
	181-0089	1	P5000e EU / AU


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8.	181-0090	1	Shield, Exhaust Heat
9.	A028W174	1	Gasket, Exhaust
10.	181-0092	1	Manifold, Exhaust
11.	181-0093	2	Screw, Hex Flanged Head
12.	181-0455	2	Nut, Hex
13.	A028W171	2	Gasket, Exhaust
14.	181-0454	1	Arrestor, Spark

Fuel Tank

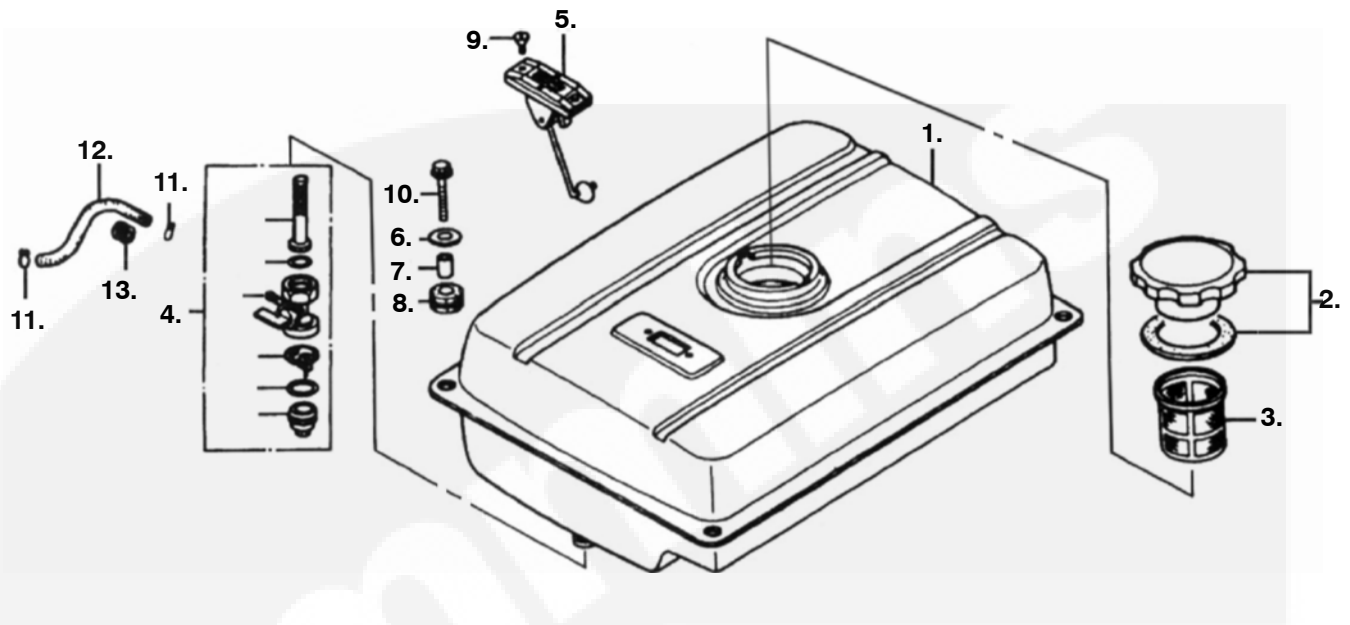

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0096	1	Tank, Fuel	8.	181-0459	4	Isolator, Vibration (Fuel Tank)
2.	181-0367	1	Cap, Filler	9.	181-0460	2	Screw, Flat Head Slotted
3.	181-0368	1	Filter, Fuel	10.	181-0338	4	Screw, Hex Flanged Head
4.	181-0457	1	Valve, Fuel	11.	181-0461	2	Clip, Retainer
5.	181-0372	1	Gauge, Level	12.	181-0462	1	Hose, Fuel
6.	181-0458	4	Washer	13.	181-0463	1	Isolator, (Fuel Tube)
7.	181-0374	4	Sleeve, Tube				


Starter Motor (P5000e)

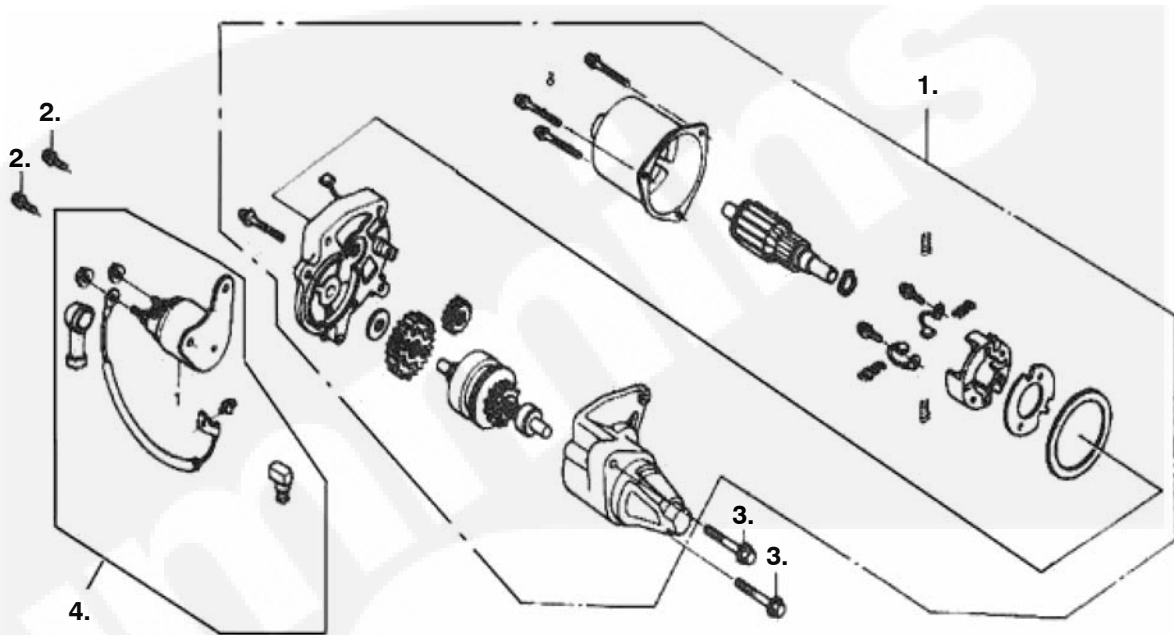

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0106	1	Motor, Starter
2.	181-0545	2	Screw, Hex Flanged Head
3.	A026L011	2	Screw, Hex Flanged Head (M8 x 35mm)
4.	181-0107	1	Solenoid




Control Panel

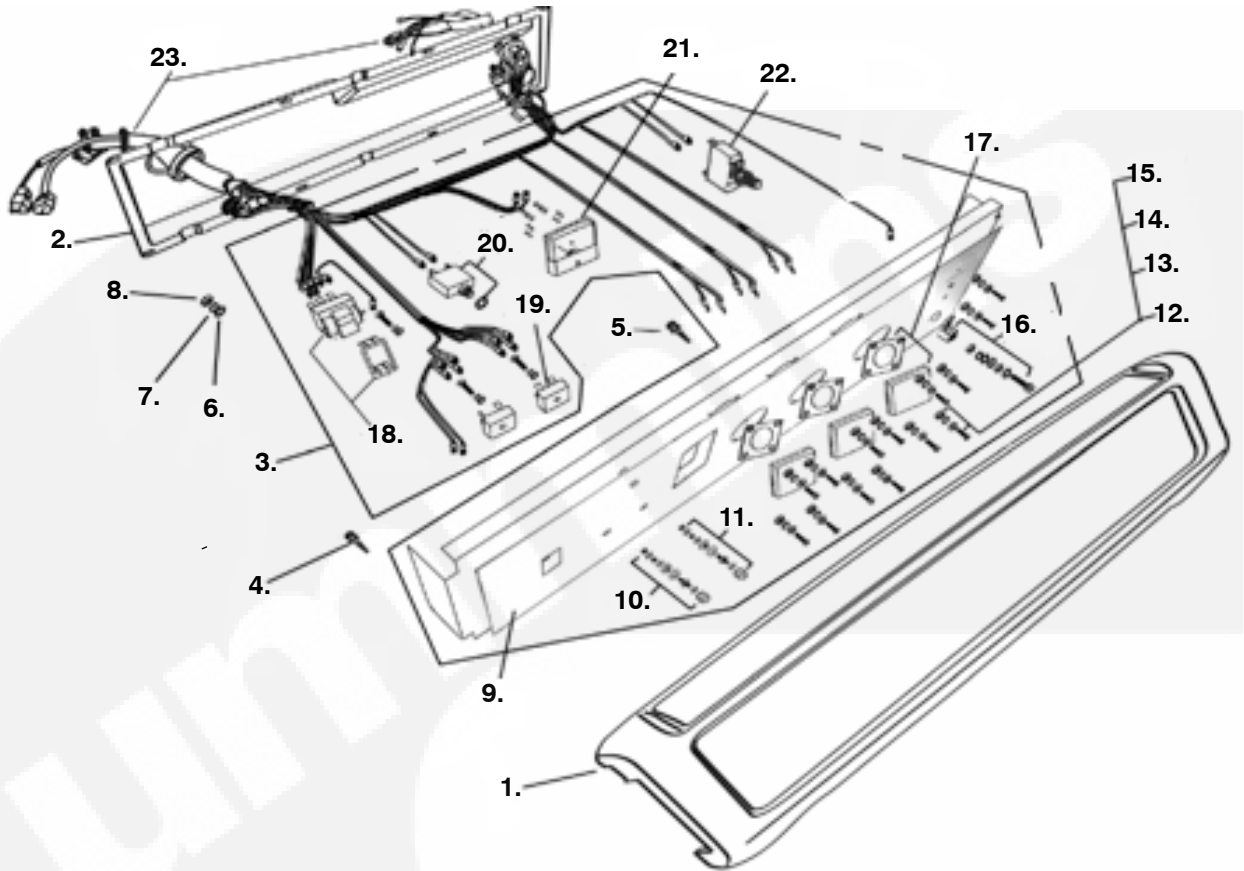

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0553	1	Panel, Control	13.	526-2356	13	Washer
2.	181-0554	1	Panel, Control	14.	850-2096	13	Washer, Spring Locking
3.			Components, Control Panel	15.	850-2297	10	Nut, Captive
	300-6440	1	P4500 EU	16.	332-4327	1	Receptacle, Terminal Ground
	A028U650	1	P4500 AU	17.			Contact, Socket
	300-6441	1	P5000e EU		181-0619	3	P4500 / P5000eEU
	A028U651	1	P5000e AU		A028U653	3	P4500 / P5000eAU
4.	870-2294	4	Nut, Captive	18.	338-5066	2	Harness, Switch Combination
5.	870-2295	2	Nut, Captive	19.	357-0160	1	Rectifier, Bridge
6.	526-2355	8	Washer (4mm)	20.	338-5067	1	Harness, Switch Protector
7.	850-2095	8	Washer, Spring Locking (4mm)	21.	302-2103	1	Meter, Voltage
8.	870-2300	8	Nut, Captive (M4)	22.			Cover, Switch Protector
9.			Label, Panel		319-7140	1	P4500
	98-8813	1	P4500 / P5000e EU		319-7141	1	P5000e
	98-8857	1	P4500 / P5000e AU	23.			Harness, Control Panel
10.	404-0313	1	Enclosure, Post Arode		A026L001	1	P4500
11.	404-0314	1	Enclosure, Post Cathode		A026L003	1	P5000e
12.	850-2024	13	Screw (M4 x 10mm)				

Battery Tray (P5000e EU / AU)

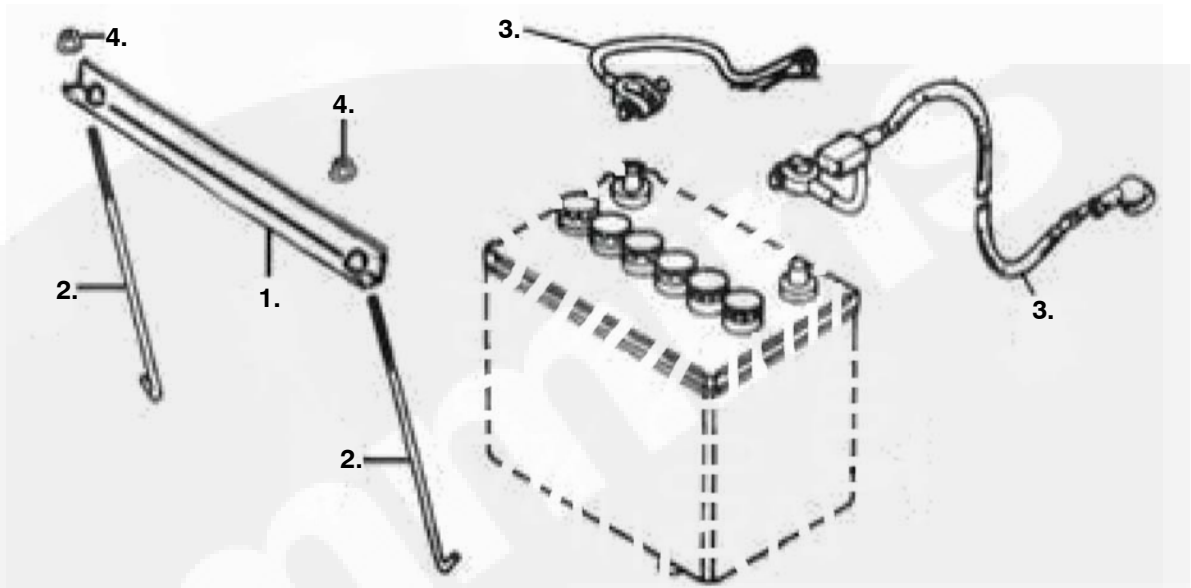


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0549	1	Bracket, Battery
2.	A006S238	2	Screw, Battery Bracket

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3.	181-0551	1	Lead, Battery
4.	181-0344	2	Nut, Hex Flanged (6mm)




Frame

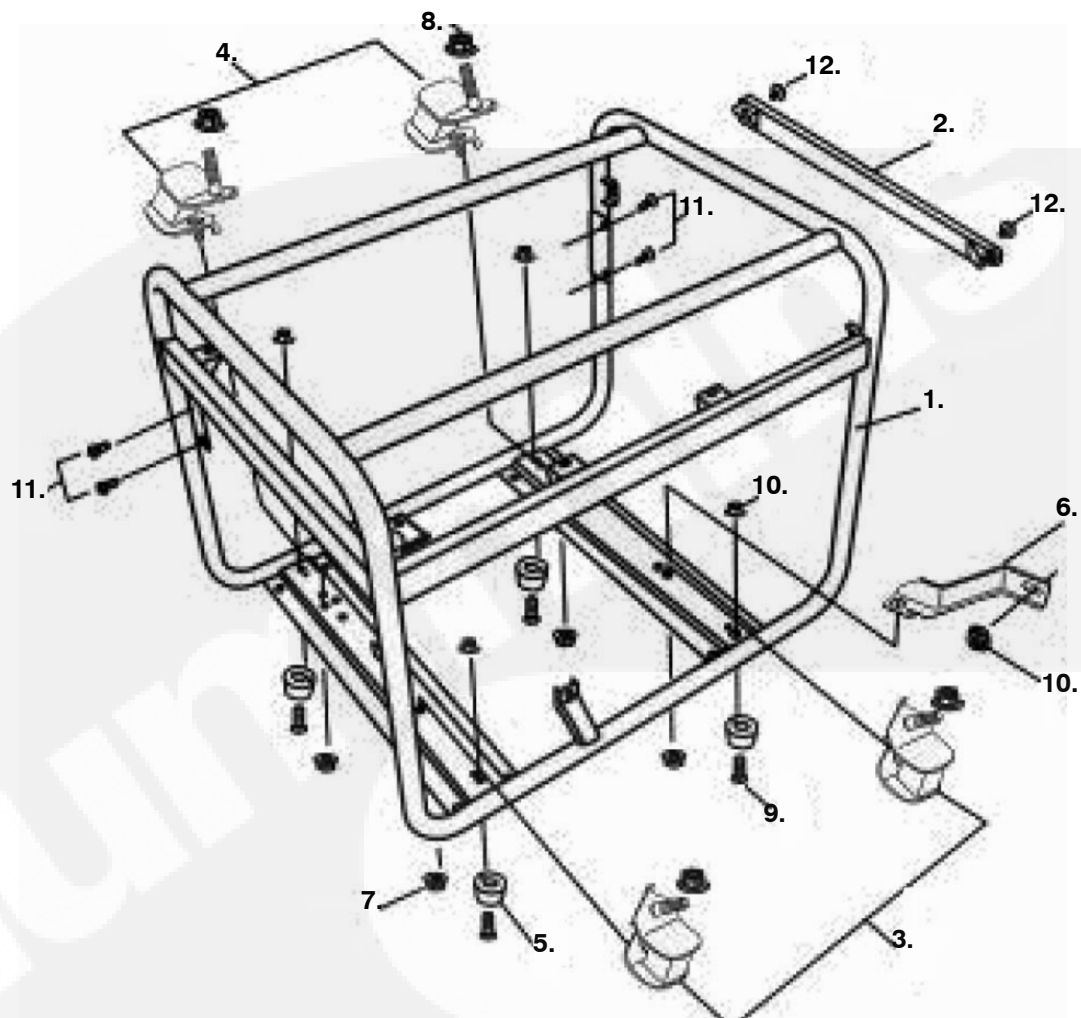


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	403-6853	1	Frame, Generator P4500	7.	181-0122	4	Nut, Hex Flanged (8mm)
	181-0532	1	P5000e	8.	181-0114	4	Nut, Hex Flanged (10mm)
2.	181-0533	1	Frame, Generator	9.	181-0252	4	Screw, Hex (M6 x 14mm)
3.	181-0535	2	Isolator, Vibration (Bottom Left)	10.	181-0344	5	Nut, Hex Flanged(M6)
4.	181-0536	2	Isolator, Vibration (Bottom Right)	11.	181-0266	4	Screw, Hex Flanged Head (6m x 12mm)
5.	181-0468	4	Isolator, Vibration	12.	181-0411	2	Screw, Hex Flanged Head (8m x 16mm)
6.	181-0128	1	Bracket, Air Cleaner				

Alternator

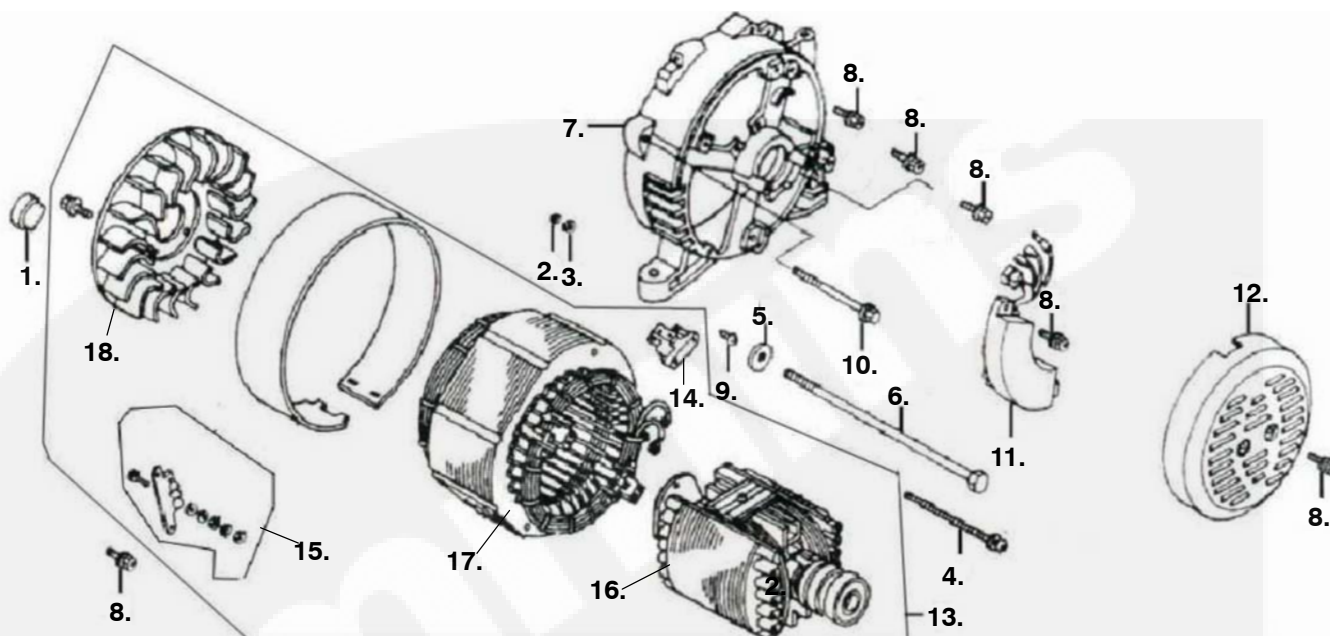

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0130	1	Grommet	11.			Regulator, Voltage
2.	181-0538	2	Nut, Hex Flanged (M5)		A026F922	1	P4500
3.	181-0539	2	Washer Spring Locking		A026F923	1	P5000e
4.			Screw, Hex Flanged Head	12.	A003N957	1	Housing, Generator
	181-0546	2	P4500				Generator
	A005X661	2	P5000e	13.			
5.	181-0541	1	Washer		191-2467	1	P4500
6.			Screw, Hex Head		191-2468	1	P5000e
	805-2028	1	P4500	14.	214-0110	1	Brushes
	A005Y167	1	P5000e	15.	332-4352	1	Terminal, Receptacle
7.	181-0150	1	Housing, Generator	16.			Assy, Rotor
8.	A026L008	9	Screw, Hex Flanged Head		201-3673	1	P4500
9.	181-0545	1	Screw, Hex Flanged Head		201-3674	1	P5000
10.			Screw, Hex Flanged Head	17.			Assy, Stator
	805-2026	4	P4500		221-3674	1	P4500
	181-0540	4	P5000e		220-4712	1	P5000e
				18.	202-0365	1	Fan, Generator Cooling

Accessories

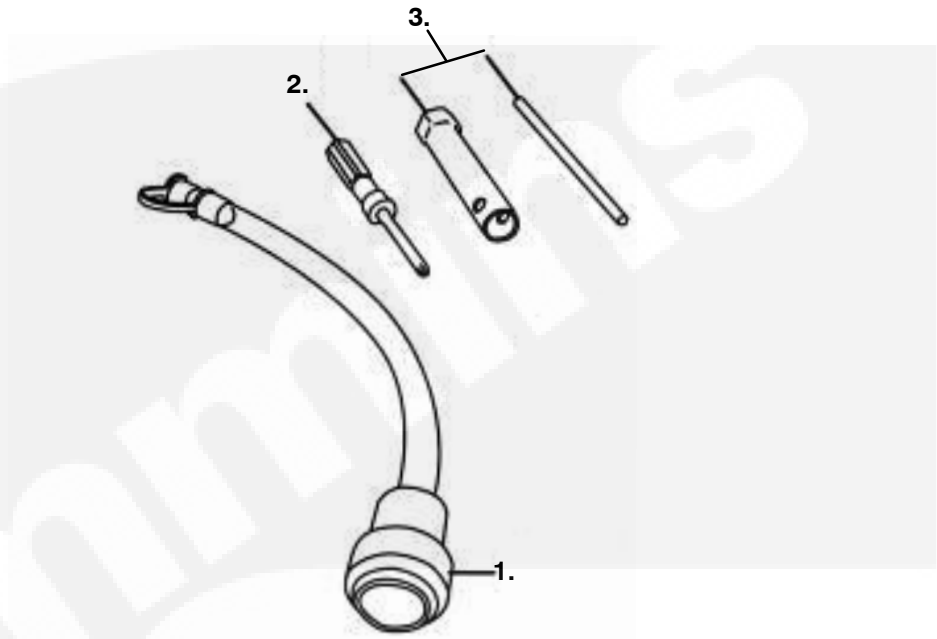

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1.	181-0582	1	Adapter, Oil Filler
2.	815-1571	1	Tool, Screwdriver
3.	167-1656	1	Tool, Spark Plug Socket

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
104-2126, 14		181-0130, 24		181-0460, 19		181-0554, 21	
110-4002, 6		181-0150, 24		181-0461, 19		181-0558, 7	
110-4091, 11		181-0158, 11		181-0462, 19		181-0559, 10	
112-0315, 10		181-0178, 12		181-0463, 19		181-0560, 10	
112-0316, 10		181-0179, 12		181-0468, 23		181-0561, 10	
146-0887, 13		181-0182, 13		181-0481, 6		181-0562, 11	
155-4767, 18		181-0184, 13		181-0482, 6		181-0563, 11	
167-1656, 25		181-0198, 13		181-0484, 6		181-0565, 11	
181-0002, 6		181-0205, 14		181-0485, 7 , 8		181-0566, 11	
181-0010, 6		181-0207, 14		181-0486, 7		181-0567, 13	
181-0011, 6		181-0209, 14		181-0487, 7		181-0572, 18	
181-0015, 6		181-0212, 15		181-0488, 7		181-0582, 25	
181-0026, 7		181-0213, 15		181-0489, 7		181-0590, 11	
181-0027, 7		181-0232, 17		181-0490, 7		181-0619, 21	
181-0030, 7		181-0234, 17		181-0491, 7 , 8		191-2467, 24	
181-0036, 7		181-0236, 17		181-0497, 8		191-2468, 24	
181-0038, 8		181-0237, 18		181-0499, 11		191-2479, 12	
181-0039, 8		181-0238, 18		181-0500, 11		201-3673, 24	
181-0041, 8		181-0239, 18		181-0502, 13		201-3674, 24	
181-0043, 8		181-0248, 6		181-0506, 13		202-0365, 24	
181-0049, 9		181-0252, 23		181-0508, 14		214-0110, 24	
181-0055, 9		181-0266, 7 , 12 , 15 , 17 , 18 , 23		181-0509, 15		220-4712, 24	
181-0058, 10		181-0292, 11		181-0510, 15		221-3674, 24	
181-0063, 10		181-0311, 12		181-0511, 15		234-1082, 12	
181-0067, 10		181-0338, 15 , 19		181-0512, 16		300-6440, 21	
181-0072, 11		181-0344, 16 , 17 , 22 , 23		181-0513, 17		300-6441, 21	
181-0075, 11		181-0367, 19		181-0514, 17		300-6533, 21	
181-0076, 11		181-0368, 19		181-0516, 18		302-2103, 21	
181-0077, 11		181-0372, 19		181-0532, 23		319-7140, 21	
181-0078, 11		181-0374, 19		181-0533, 23		319-7141, 21	
181-0084, 11		181-0411, 18 , 23		181-0535, 23		332-4327, 21	
181-0089, 18		181-0414, 6		181-0536, 23		332-4352, 24	
181-0090, 18		181-0436, 6		181-0538, 24		333-0794, 13	
181-0092, 18		181-0437, 8		181-0539, 24		338-5066, 21	
181-0093, 18		181-0448, 12		181-0540, 24		338-5067, 21	
181-0096, 19		181-0452, 17		181-0541, 24		357-0160, 21	
181-0106, 20		181-0454, 18		181-0545, 20 , 24		403-6853, 23	
181-0107, 20		181-0455, 18		181-0546, 24		404-0313, 21	
181-0114, 23		181-0457, 19		181-0549, 22		404-0314, 21	
181-0122, 23		181-0458, 19		181-0551, 22		508-1312, 12	
181-0128, 16 , 23		181-0459, 19		181-0553, 21		526-2355, 21	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
526–2356,	21						
805–2026,	24						
805–2028,	24						
815–1571,	25						
815–1577,	12						
850–2024,	21						
850–2095,	21						
850–2096,	21						
850–2297,	21						
870–2294,	21						
870–2295,	21						
870–2300,	21						
98–8813,	21						
A002L776,	6						
A003N957,	24						
A004T586,	18						
A005X661,	24						
A005Y167,	24						
A006S238,	22						
A026F922,	24						
A026F923,	24						
A026L001,	21						
A026L003,	21						
A026L008,	8 , 24						
A026L011,	8 , 20						
A028U650,	21						
A028U651,	21						
A028U653,	21						
A028W149,	8						
A028W164,	13						
A028W166,	13						
A028W168,	13 , 16						
A028W171,	18						
A028W174,	18						



Cummins **Onan**

Cummins Power Generation

1400 73rd Ave. NE
Minneapolis, MN 55432 USA

Phone 1 763 574 5000

Toll-free 1 800 888 6626

Fax 1 763 574 5298

Email www.cumminsonan.com/contact
www.cumminsonan.com

Cummins®, Onan®, the "C" logo, and "Performance you rely on." are trademarks of Cummins Inc.

©2014 Cummins Power Generation, Inc. All rights reserved.

