



Parts Manual

Performance you rely on.™



50 Hz Commercial Portable Generator Set

EGMBN / PX7500e

**For Parts Ordering and Technical Support
Please Contact**

**Cummins
50 – 52 Diagonal Road
Pooraka
South Australia 5082**


**Parts phone: 08 8368 4358
Service phone: 08 8368 4308**

HOW TO USE THIS MANUAL


Robin engines are identified by MODEL, SPECIFICATION, and CODE NUMBER. For each model there may be many different versions called specifications. Each specification will be unique in some way. The difference may only be the paint color or it may have a different type of PTO or some other significant difference.

In order to identify the correct service part number, it is important to confirm the specification and code numbers for your engine. The specification and code number together are known as the PRODUCT NUMBER.


All Robin 4 cycle engines have a Product Number label similar to the label illustrated below.

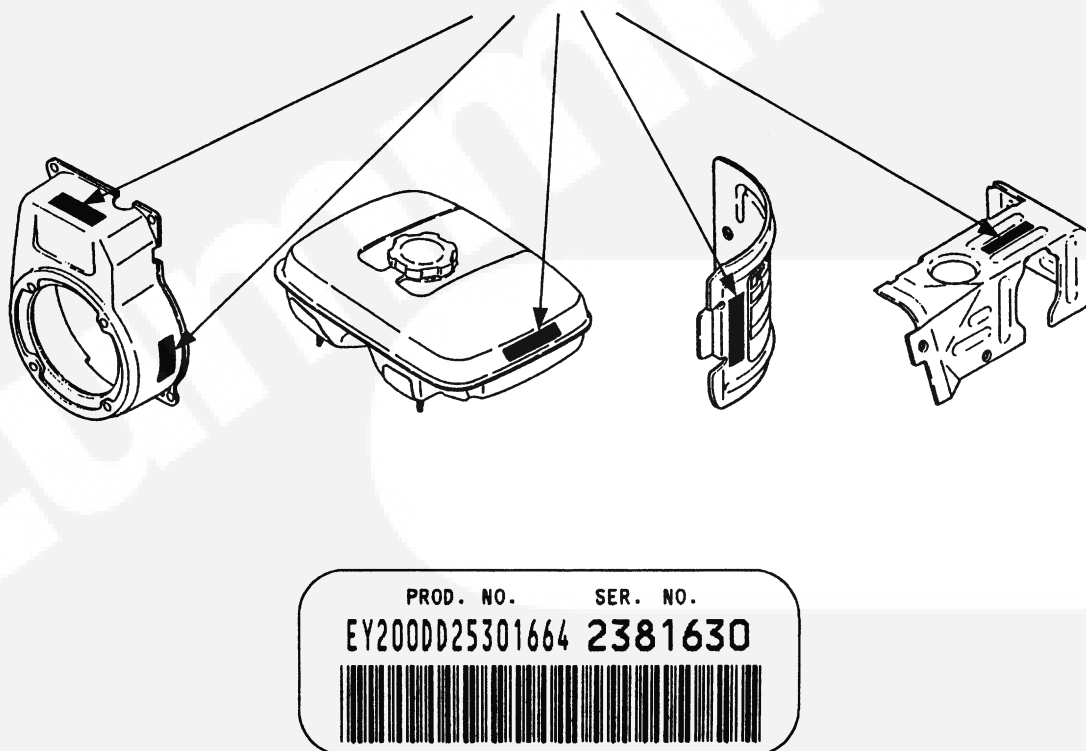

The Product Number Label has a 15 digit alphanumeric string that consists of the SPECIFICATION (SPEC) number (11 digits) and the CODE number (4 digits). Please note the illustration below:

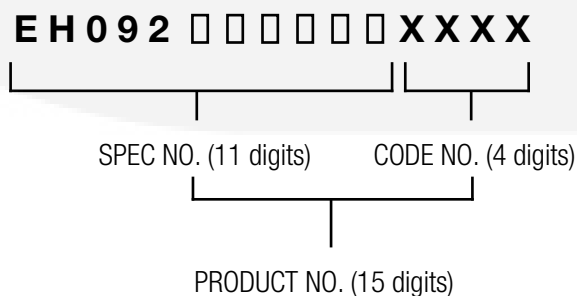

MANUAL LAYOUT

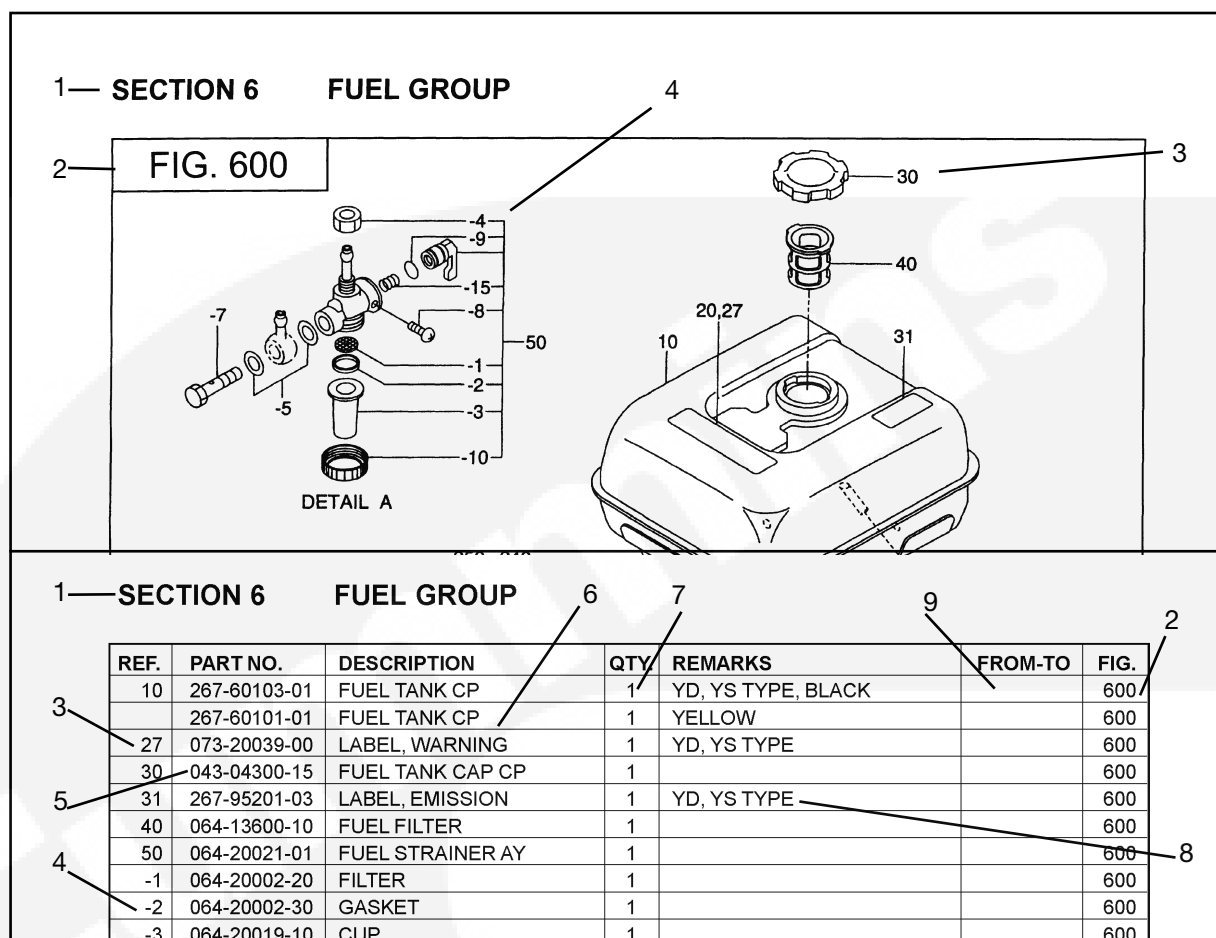

1. SECTION NAME Parts are broadly classified according to their functions. Refer to the Group Index (table of contents) for respective section name.
2. FIG. No. The FIG. number indexes the reference and part numbers to the illustration. Figure numbers that vary only in the tens place (i.e.: 700 and 710) are in a group of the same section (i.e.: Electrical Device Group).
3. REF. No . The Reference number identifies the part illustration with the corresponding part number in the part list.
4. SUBASSEMBLY SUBASSEMBLY parts of part assembly are listed below the assembly part. The subassembly part reference number is indicated by the number led by "-" such as "-1", "-2".
5. PART NUMBER It is the number assigned for sales unit. Use the PART No. when making an order.
6. DESCRIPTION It is designation of the part.
7. QTY. Quantity of each part used for each product.
8. REMARKS This gives a distinctive feature and/or a supplementary comment for the type, the specification, and the part concerned. It also shows part number(s) interchangeable for the part.
9. FROM-TO This section shows the CODE No. to indicate the history of progress in which improved parts have been introduced in the product. The FROM-TO CODE No. helps to identify PART No. being employed in the product concerned. See the examples below:
 - The part is used in the product irrespective of CODE No.
 - 2101- The part is used in the products with CODE No. of 2101 and after this number.
 - 2100 The part is used in the products with CODE No. of 2100 and before this number.

FOREWORD

This parts catalogue is compiled all service parts for Cummins model PX7500e.

When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time.

We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Cummins distributor.


INDEX OF DESCRIPTION SYMBOLS		
SYMBOL	DESCRIPTION	
AY	ASSEMBLY	HEX. HEXAGONAL
CP	COMPLETE	P= PITCH (in mm)
EX	EXPORT (from Japan)	P.T.O. (PTO) POWER TAKE OFF
FIG.	FIGURE	REF. REFERENCE
FR.	FRONT	R RIGHT HAND SIDE
"	INCH	RR REAR
INCL.	INCLUDE	STD STANDARD
~L	LITRE	SW SWITCH
L=	LENGTH (in. mm)	T= THICKNESS (in mm)
L	LEFT-HAND SIDE	UN UNIT
MECH	MECHANICAL	U.S. UNDER SIZE
NO (NON)	NONE	~V VOLTAGE
OPT.	OPTIONAL	~W WATT
O.S.	OVER SIZE	W/ WITH
N.	INLET	W/O WITHOUT
EX.	EXHAUST	A.C. ALT CURRENT
		D.C. DIRECT CURRENT

GROUP INDEX

Group Name	Page
CRANKCASE.....	6
CRANKSHAFT, PISTON	8
INTAKE, EXHAUST	10
GOVERNOR OPERATION	14
COOLING, STARTING	16
FUEL, LUBRICANT.....	20
ELECTRIC DEVICE.....	24
ACCESSORIES LABEL	32
GENERATOR.....	34
PIPE FRAME.....	36
CONTROL BOX.....	38
FUEL TANK.....	42
MUFFLER.....	44



FIG. 100

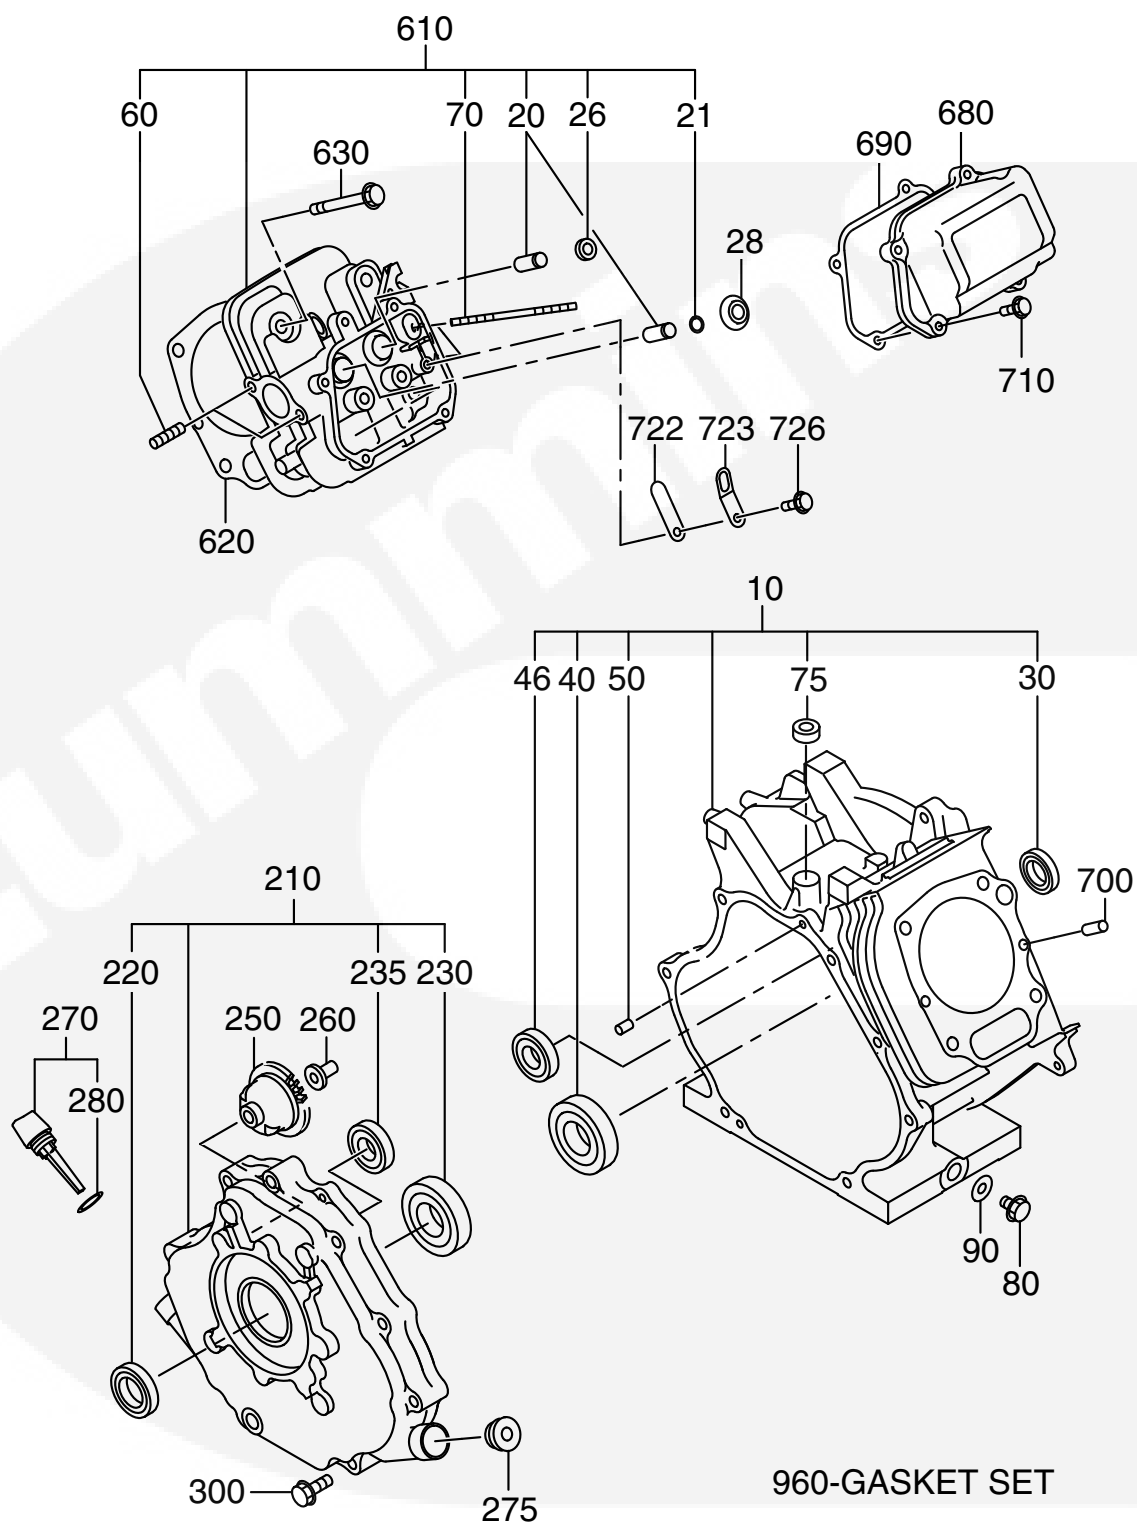


960-GASKET SET

1 CRANKCASE

REF.	PART NUMBER	PART NAME	QTY	R E M A R K S	CODE NO.	INTERCHANGE P/NO.	UNIT P	FIG.
10	267-10102-81	CRANKCASE CP	1		-			100
20	263-14211-03	VALVE GUIDE	2	6DX11DX32. 5L	-			100
21	056-51000-50	CLIP	1	10. 7DX0. 9D	-			100
26	132-07AA0-50	SEAL-INT VALVE	1		-			100
28	263-35341-03	RETAINER PLATE	1	11DX17. 3DX27DX4. 7H	-			100
30	044-03500-90	OIL SEAL	1	35DX48DX8B	-			100
40	060-03500-10	BALL BEARING	1	35DX72DX17B	-			100
46	060-01500-11	BALL BEARING	1	15DX35DX11B	-			100
50	031-00600-20	DOWEL PIN	2	6DX14. 5L	-			100
60	010-50802-90	STUD	2	M8X1. 25X30L	-			100
70	010-50603-51	STUD	2	M6X1. 0X98L	-			100
75	044-00800-10	OIL SEAL	1	8DX14DX4B	-			100
80	040-11400-30	PLUG	2	M14X1. 5X20DX12L	-			100
90	021-11400-20	GASKET	2	14. 1DX19DX2. 3T	-			100
210	267-11001-51	MAIN BEARING COVER C	1		-			100
220	044-03500-90	OIL SEAL	1	35DX48DX8B	-			100
230	060-03500-10	BALL BEARING	1	35DX72DX17B	-			100
235	060-01500-11	BALL BEARING	1	15DX35DX11B	-			100
250	267-45001-11	GOVERNOR GEAR CP	1	60DX36T N=28	-			100
260	205-41901-03	GOVERNOR SLEEVE	1	6DX9DX16DX26L	-			100
270	224-63601-01	OIL GAUGE CP	1	M22X1. 5 L=64+25	-			100
275	042-02200-10	PLUG (RUBBER)	1	22. 2DX26DX12. 5L	-			100
280	021-32000-50	GASKET	1	20DX27DX1. 5T RUBBER	-			100
300	011-00803-40	FLANGE BOLT	7	M8X1. 25X17DX38L	-			100
610	267-13003-31	CYLINDER HEAD CP	1		-			100
620	267-15001-13	GASKET (HEAD)	1	T=0. 2	-			100
630	011-01000-30	FLANGE BOLT	4	M10X1. 25X19DX65L	-			100
680	267-15501-11	ROCKER COVER CP	1		-			100
690	267-15201-13	GASKET (ROCKER COV)	1	T=0. 5	-			100
700	031-00600-20	DOWEL PIN	2	6DX14. 5L	-			100
710	011-00601-30	FLANGE BOLT	4	M6X1. 0X14DX25L	-			100
722	267-16001-13	LEAF VALVE	1		-			100
723	267-16101-13	RETAINER PLATE	1		-			100
726	011-00600-10	FLANGE BOLT	1	M6X1. 0X14DX8L	-			100
960	267-99001-27	GASKET SET	1		-			100


FIG. 200

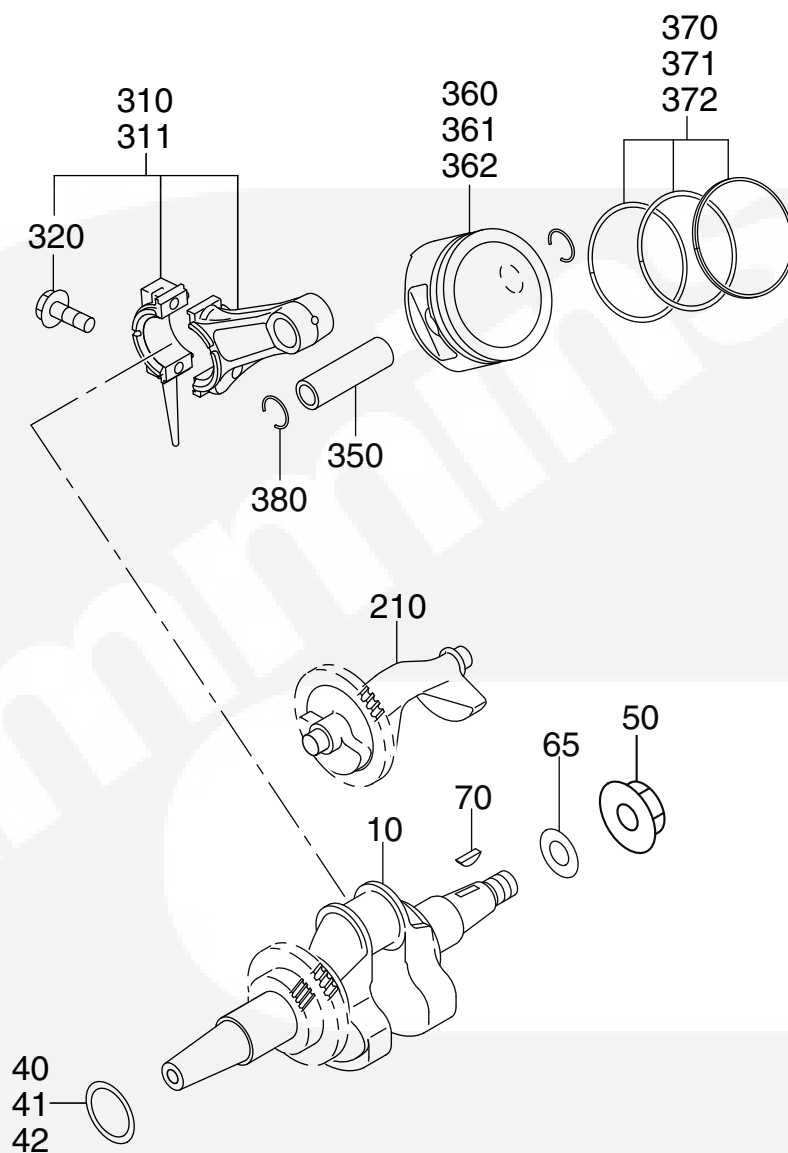

2 CRANKSHAFT, PISTON

[illegible]


FIG. 300

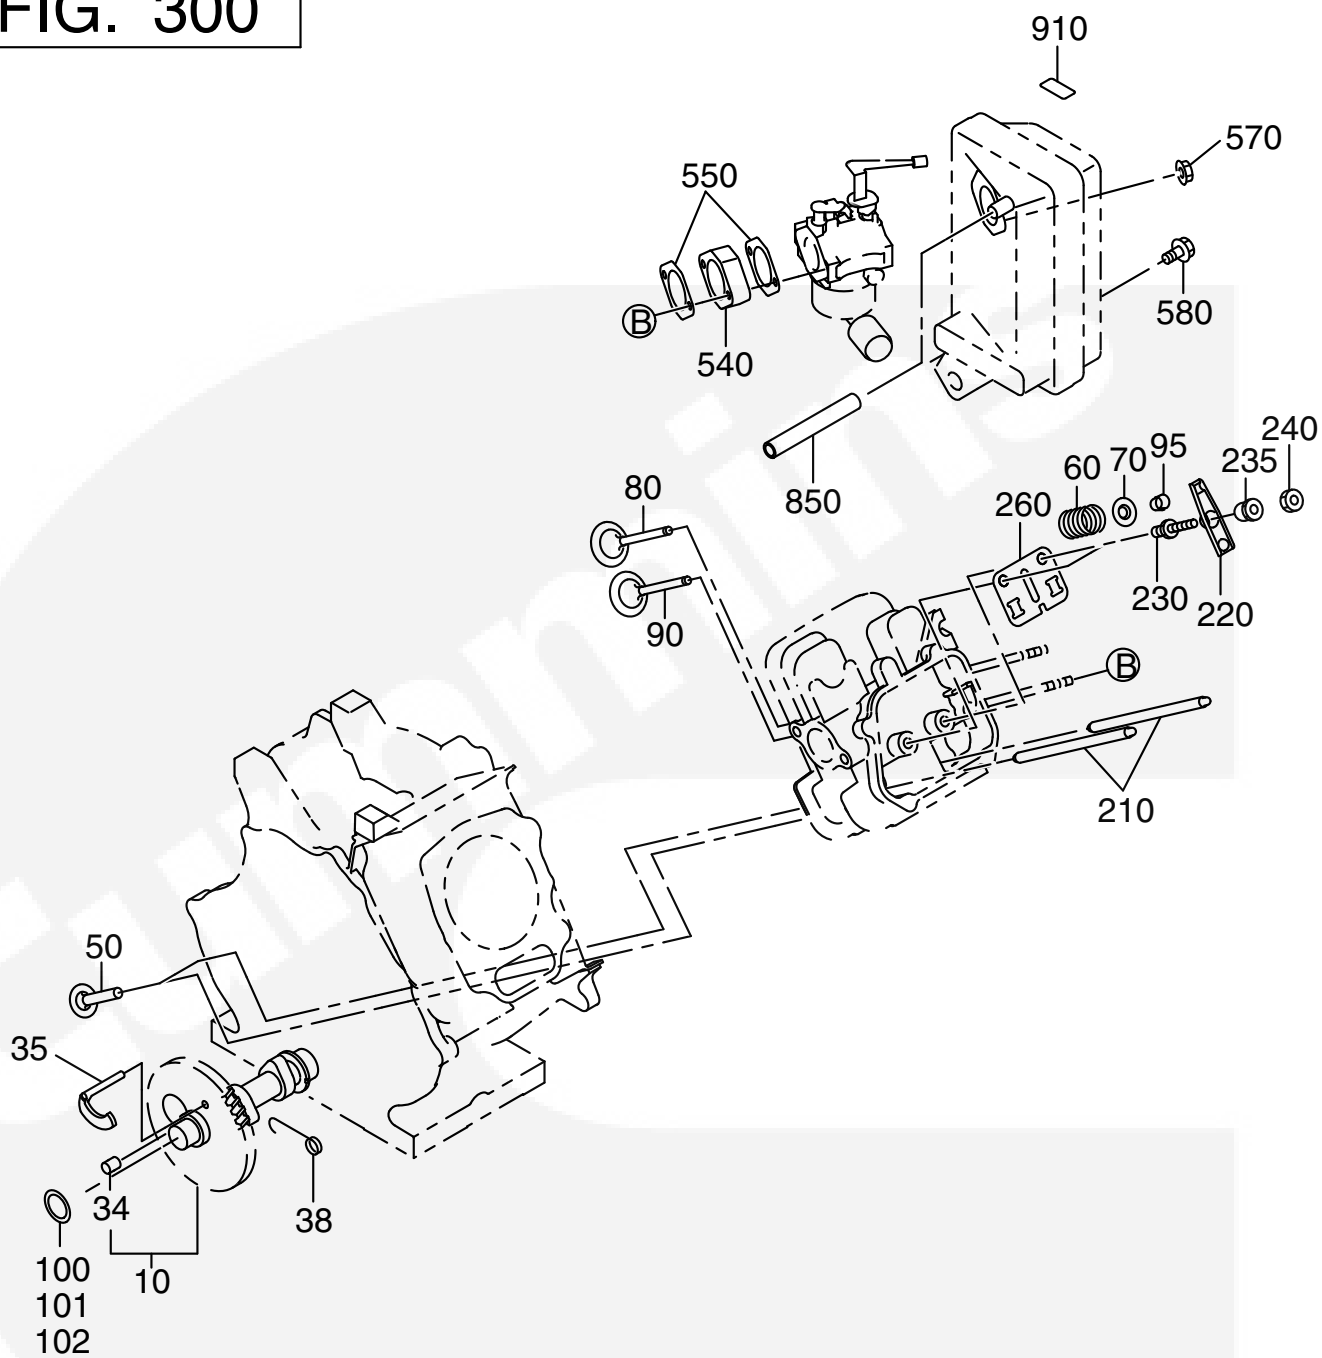

3 INTAKE, EXHAUST

[illegible]


FIG. 317

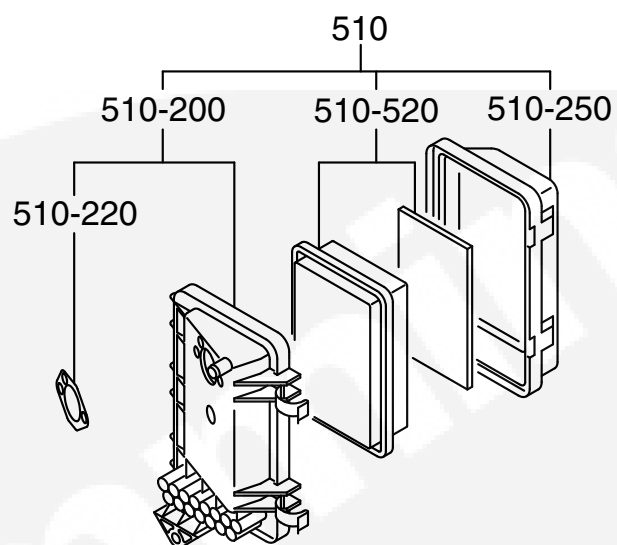

3 INTAKE, EXHAUST

[illegible]


FIG. 400

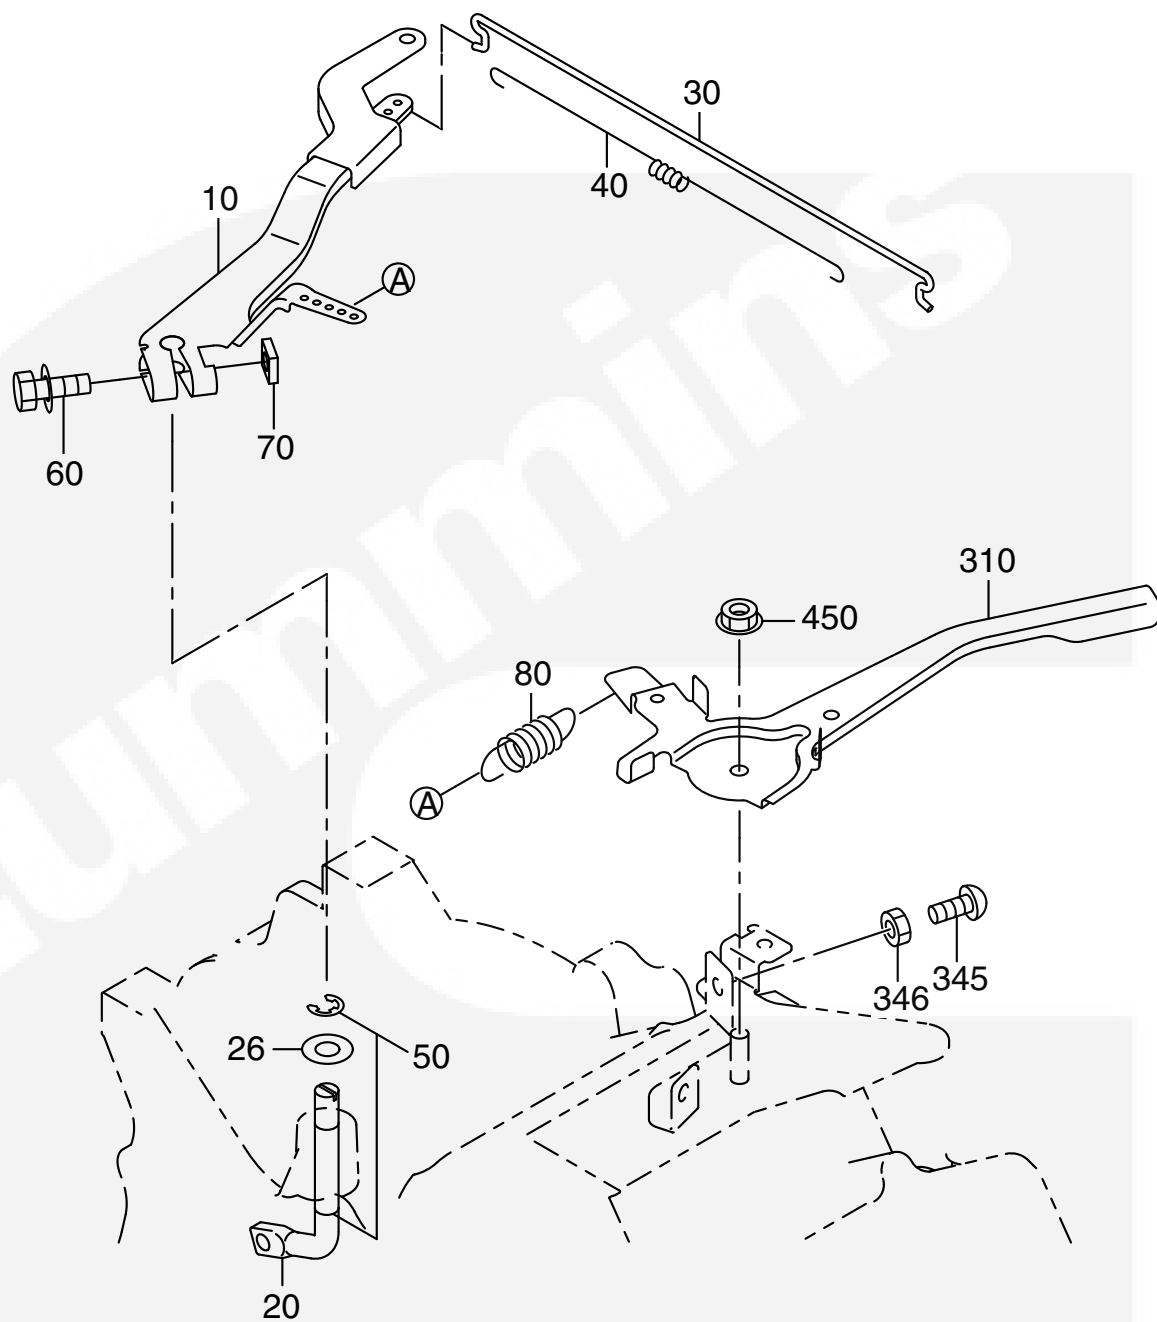

4 GOVERNOR OPERATION

[illegible]


FIG. 500

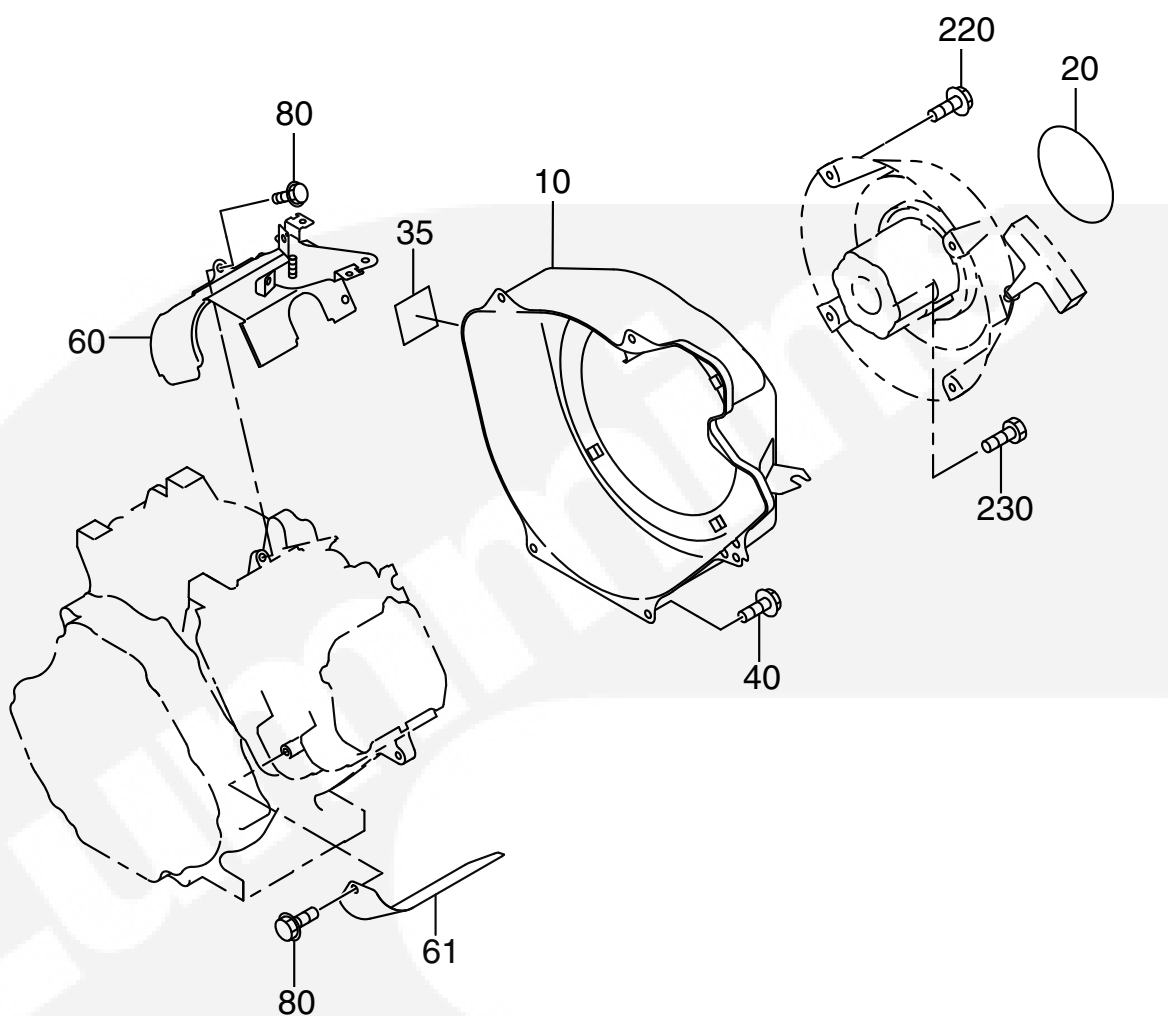

5 COOLING, STARTING

[illegible]


FIG. 520

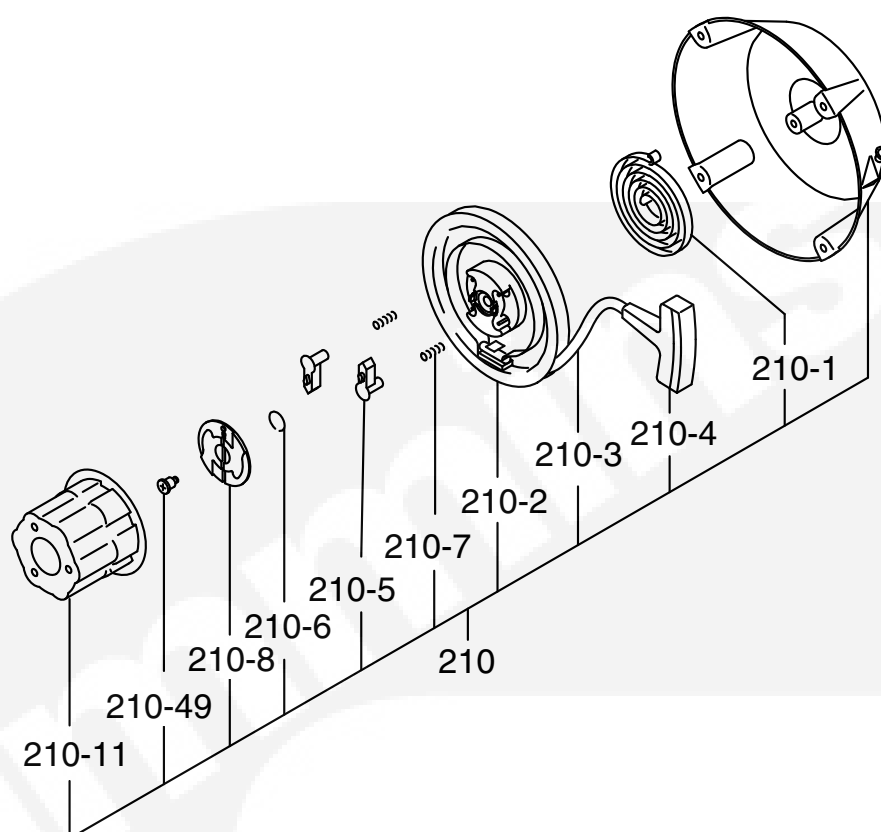

5 COOLING, STARTING

[illegible]


FIG. 600

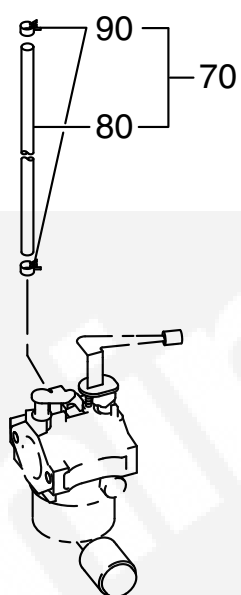

6 FUEL, LUBRICANT

[illegible]


FIG. 640

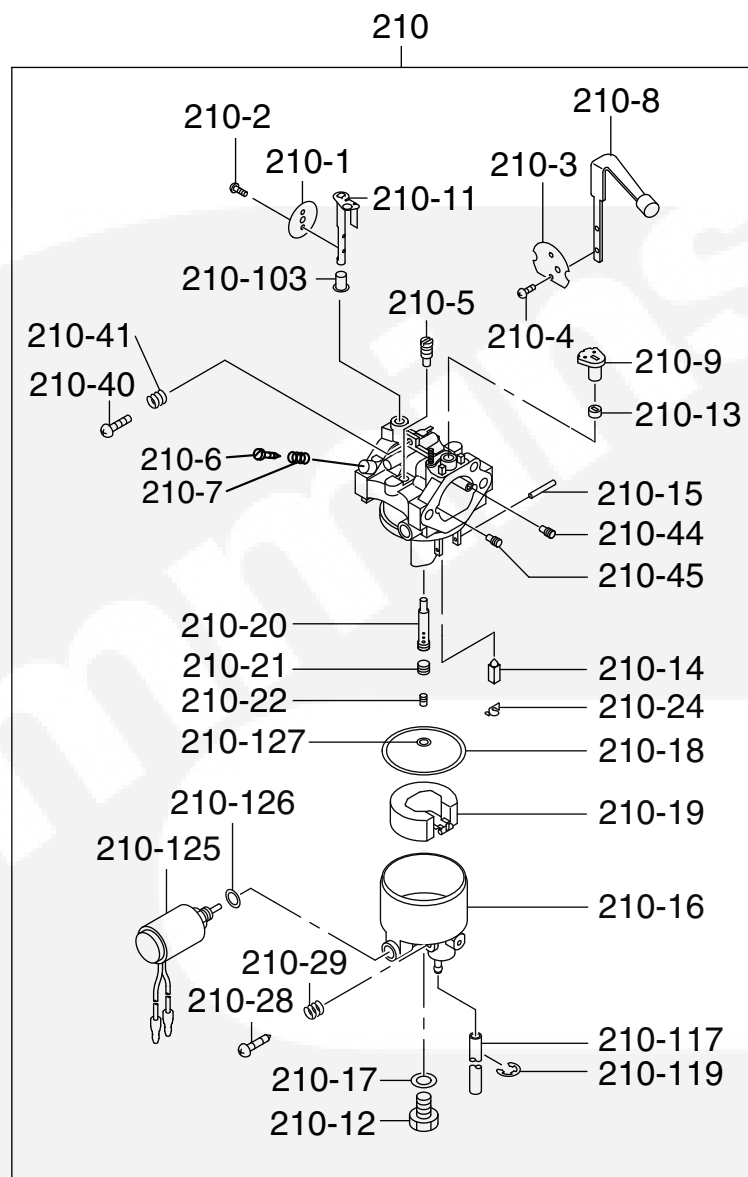

6 FUEL, LUBRICANT

REF.	PART NUMBER	PART NAME	QTY	R E M A R K S	CODE NO.	INTERCHANGE P/NO.	UNIT P	FIG.
210	267-62311-00	CARBURETOR AY	1		-			640
- 1	267-62535-08	THROTTLE VALVE	1		-			640
- 2	209-62351-08	SCREW	2		-			640
- 3	267-62526-08	CHOKE VALVE	1		-			640
- 4	237-62451-08	SCREW	2		-			640
- 5	209-62420-08	PILOT JET	1		-			640
- 6	237-62435-08	ADJUSTER	1		-			640
- 7	230-62446-08	SPRING	1		-			640
- 8	267-62521-08	CHOKE LEVER AY	1		-			640
- 9	234-62550-08	RING (CHOKE)	1		-			640
- 11	267-62530-08	THROTTLE SHAFT-A	1		-			640
- 12	248-62425-08	JET HOLDER	1		-			640
- 13	226-62550-08	RING	1		-			640
- 14	224-62312-18	NEEDLE-A	1		-			640
- 15	214-62515-08	PIN	1		-			640
- 16	267-62551-08	FLOAT BODY-A	1		-			640
- 17	248-62451-08	WASHER	1		-			640
- 18	206-62540-08	PACKING	1		-			640
- 19	234-62506-08	FLOT-A	1		-			640
- 20	267-62440-08	MAIN NOZZLE	1		-			640
- 21	246-62425-08	JET HOLDER	1		-			640
- 22	266-62401-08	MAIN JET	1		-			640
- 24	224-62569-18	CLIP	1		-			640
- 28	214-62454-08	SCREW	1		-			640
- 29	205-62447-08	SPRING	1		-			640
- 40	224-62452-08	SCREW	1		-			640
- 41	206-62446-08	SPRING	1		-			640
- 44	106-62411-08	AIR JET	1		-			640
- 45	246-62410-08	AIR JET	1		-			640
-103	267-62450-08	RING	1		-			640
-117	267-62571-08	HOSE	1		-			640
-119	138-62354-08	CLIP	1		-			640
-125	247-62562-08	SOLENOID-A	1		-			640
-126	247-62565-08	WASHER	1		-			640
-127	242-62313-08	O-RING	1		-			640


FIG. 700

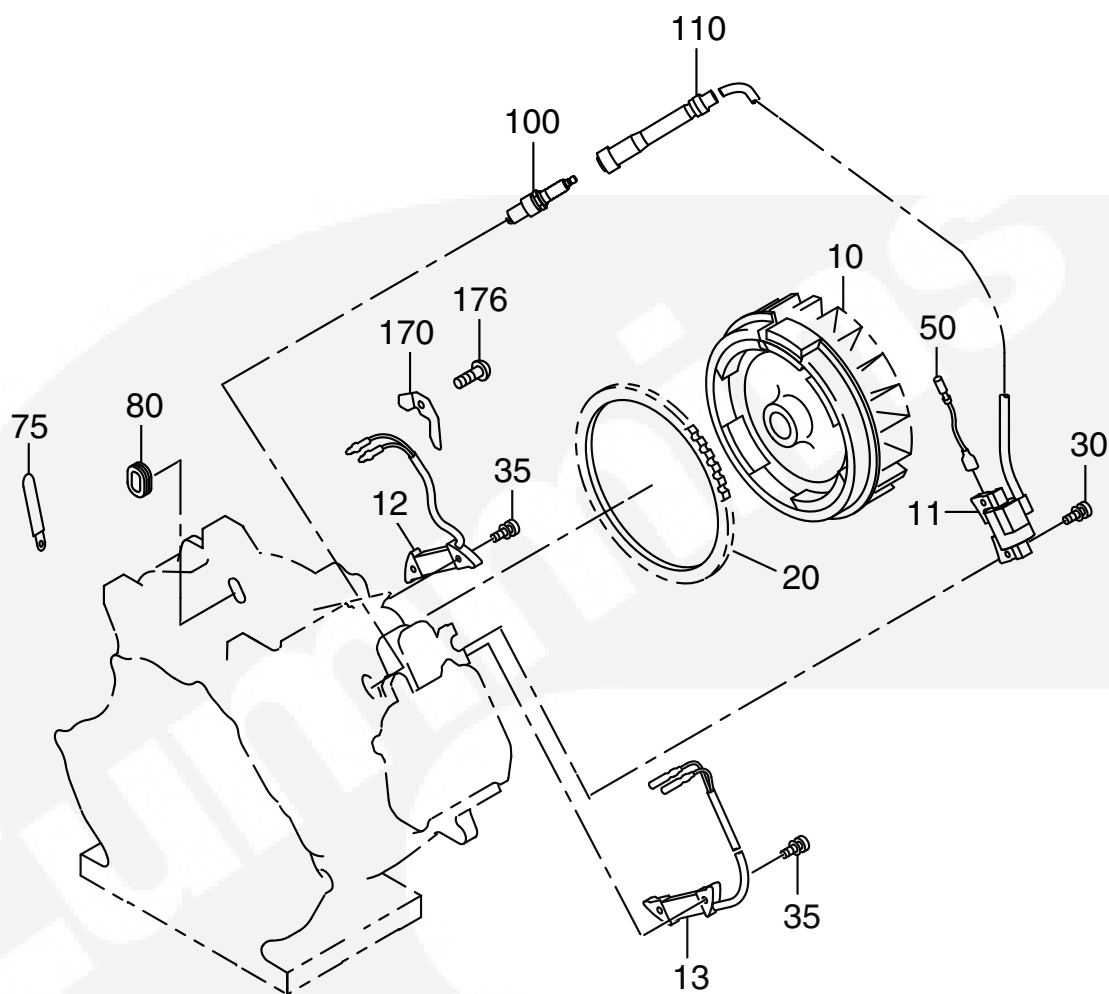

7 ELECTRIC DEVICE

[illegible]


FIG. 720

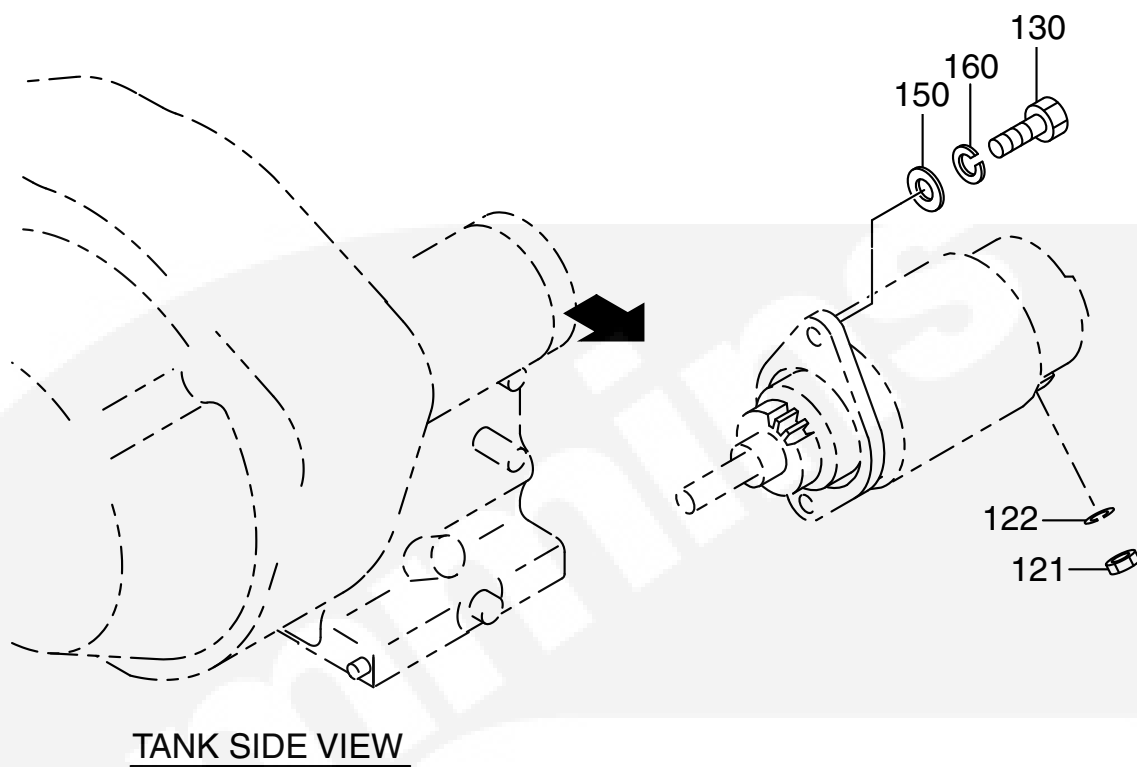

7 ELECTRIC DEVICE

[illegible]


FIG. 730

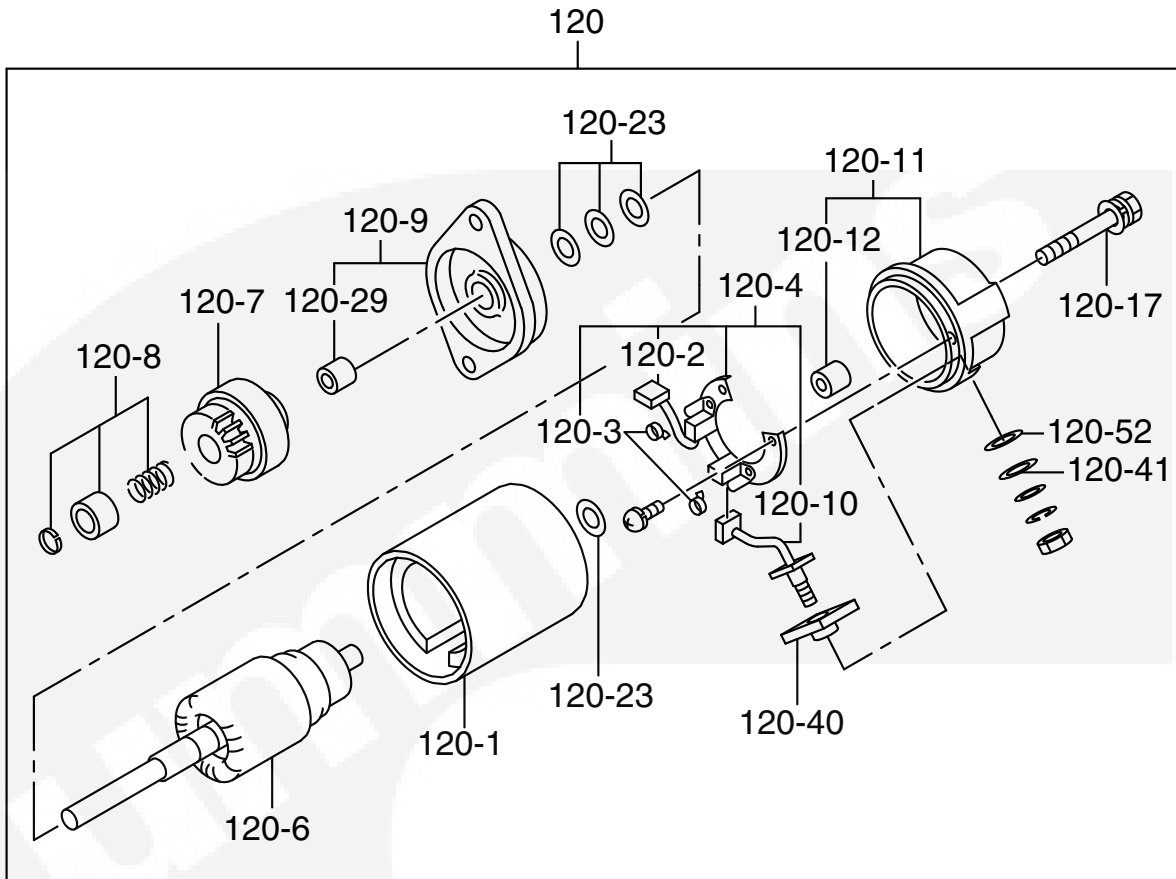

7 ELECTRIC DEVICE

[illegible]


FIG. 770

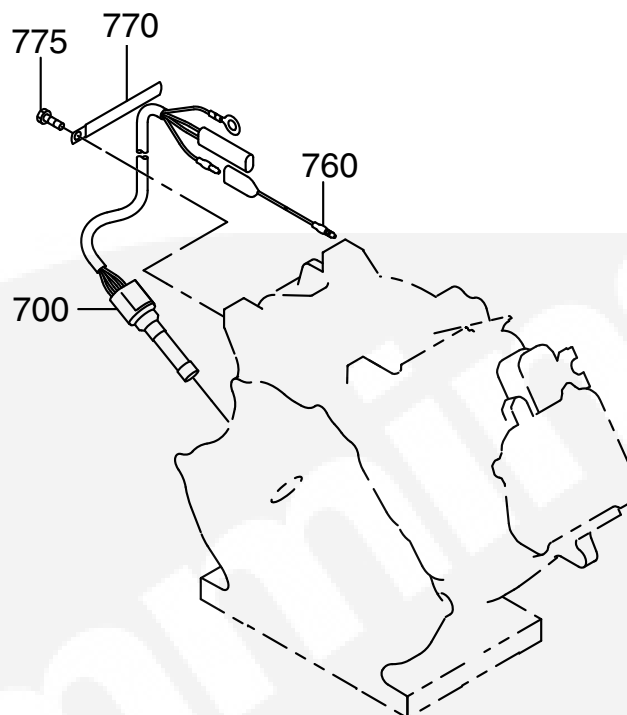

7 ELECTRIC DEVICE

[illegible]


FIG. 900

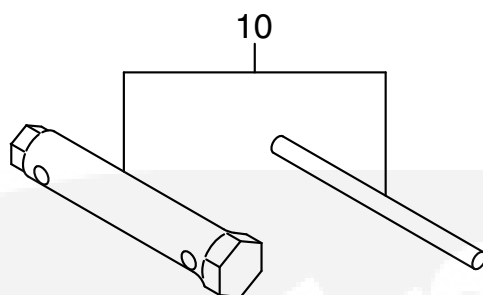

9 ACCESSORIES LABEL

[illegible]


FIG. 2200

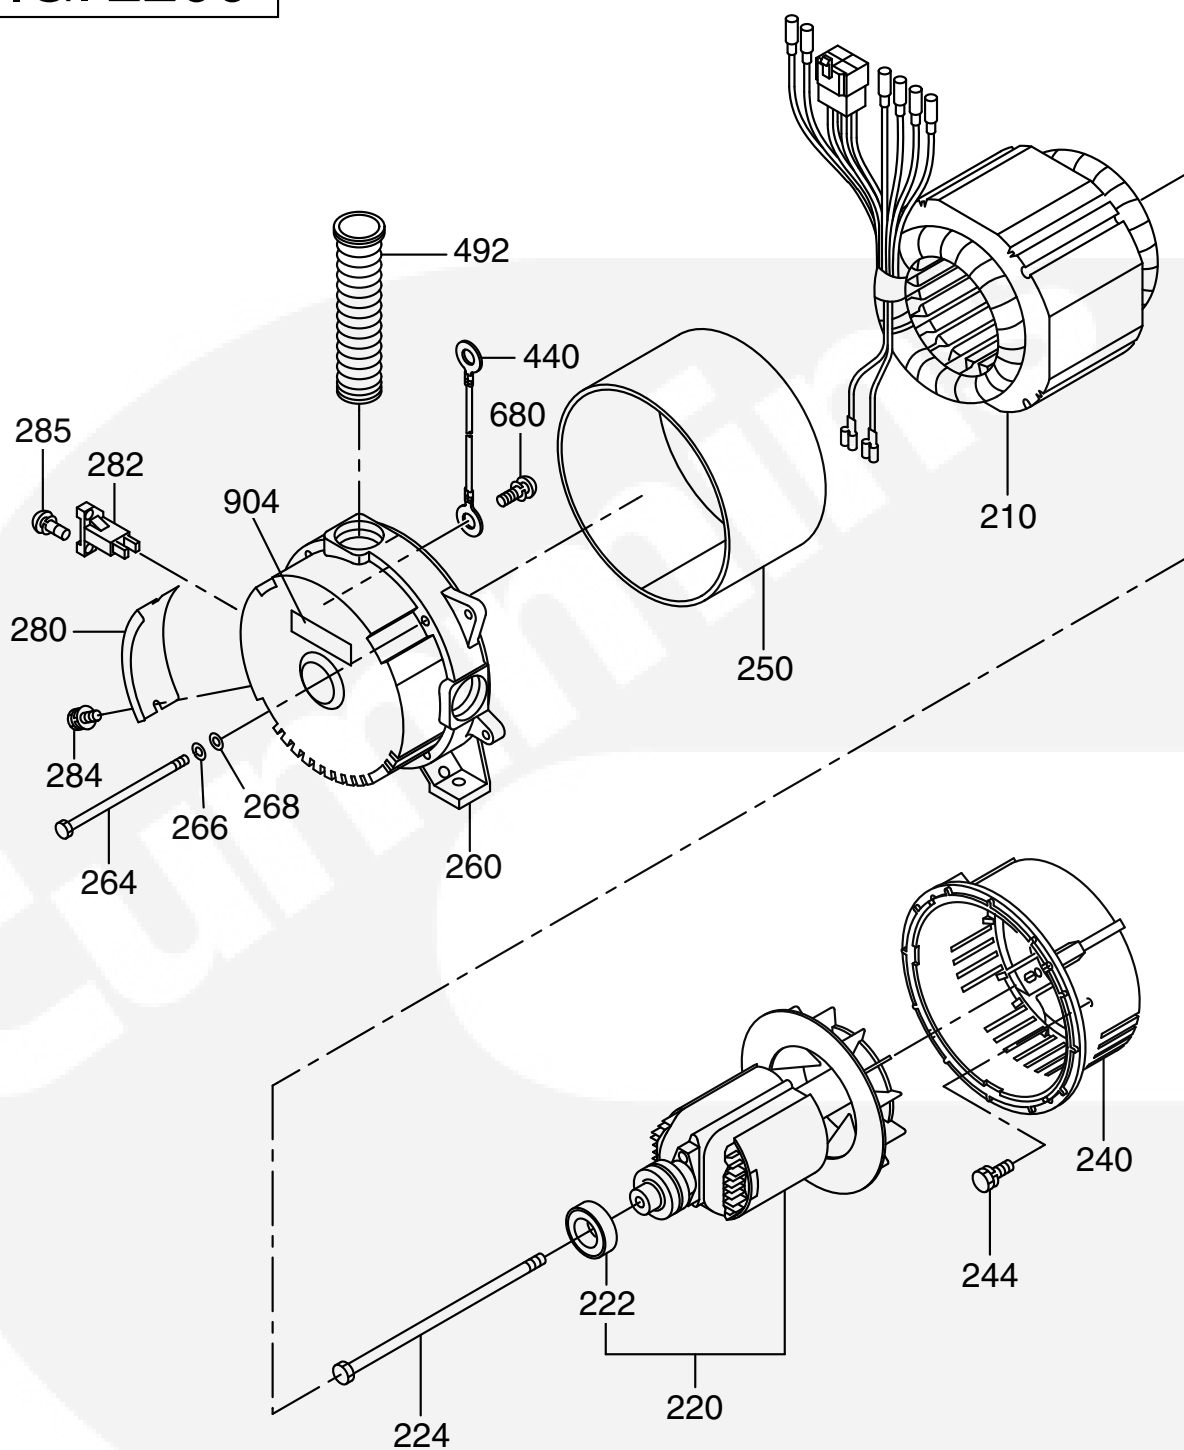

22 GENERATOR

[illegible]


FIG. 2300

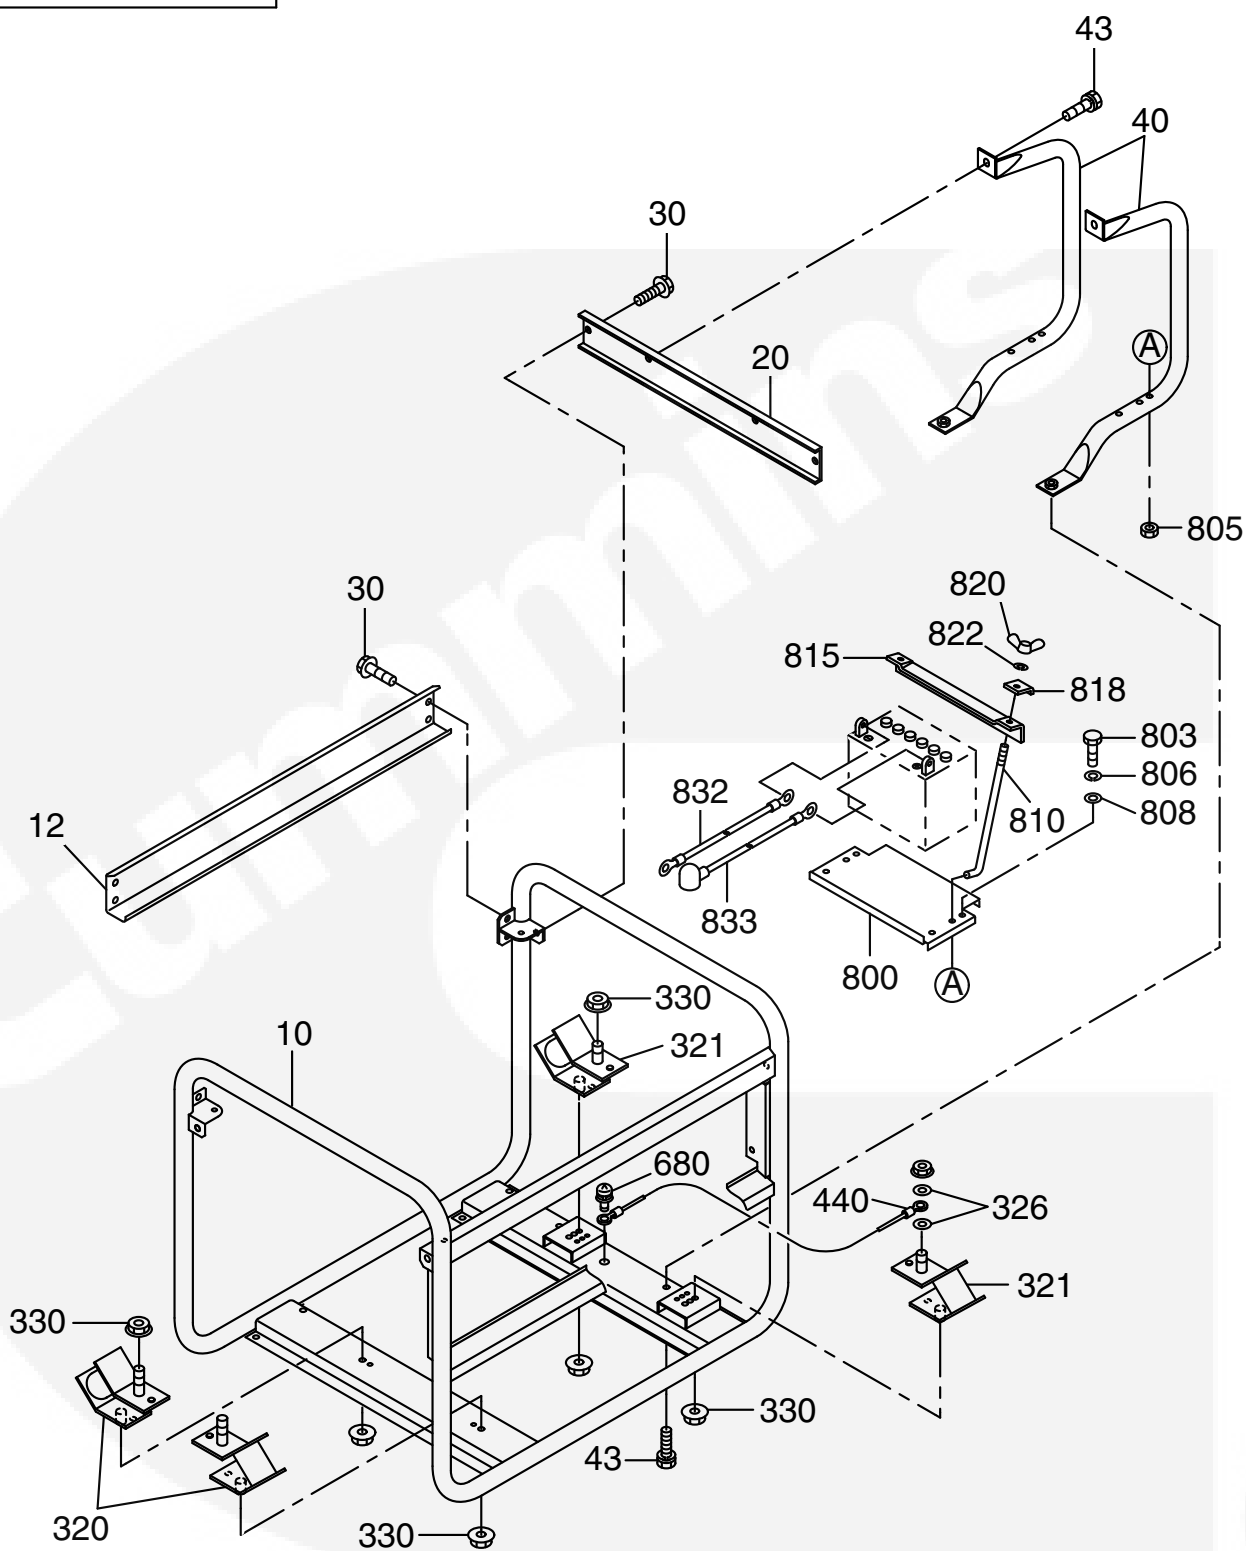

23 PIPE FRAME

[illegible]


FIG. 2400

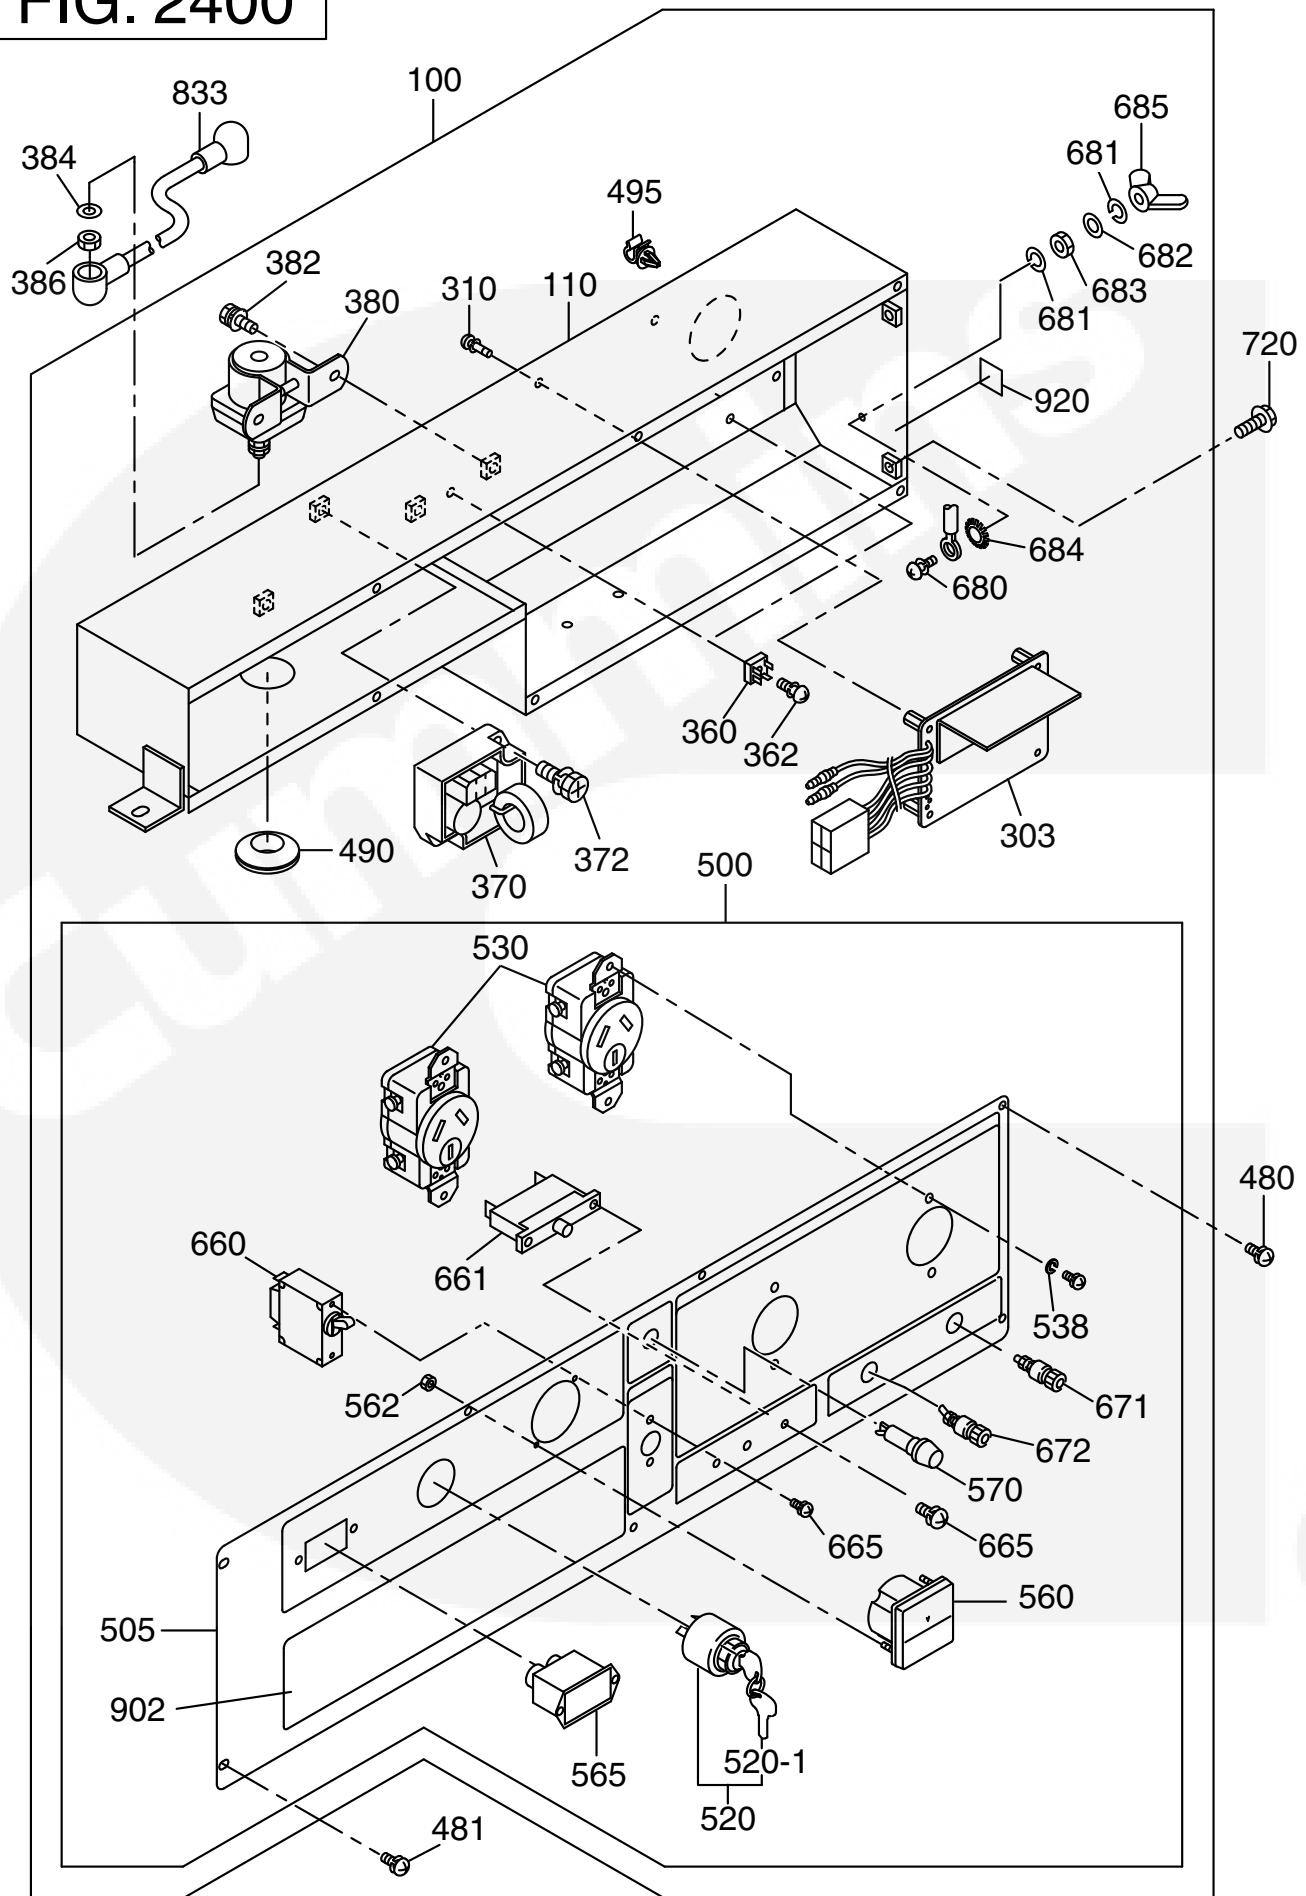

24 CONTROL BOX

REF.	PART NUMBER	PART NAME	QTY	R E M A R K S	CODE NO.	INTERCHANGE P/NO.	UNIT P	FIG.
100	31H-71028-00	CONTROL BOX AY	1		-			2400
110	31H-73001-01	CONTROL BOX UN	1		-			2400
303	31H-74001-01	AVR UN	1		-			2400
310	392-49986-08	SCREW	4	M4X6L	-			2400
360	353-45804-08	DIODE STACK AY	2		-			2400
362	004-36042-00	SCREW AND WASHER	2		-			2400
370	KU3-11061-01	F. CUT C/U CP (I4)	1		-			2400
372	004-36062-00	SCREW AND WASHER AY	2	M6X1. 0X20L W/W, SW	-			2400
380	214-77002-10	MAGNETIC SWITCH	1		-			2400
382	30A-71202-03	SCREW & WASHER AY	2		-			2400
384	003-20060-00	SPRING WASHER	3	6. 1DX12. 2DX1. 5T	-			2400
386	002-17060-00	NUT	3	M6X1. 0X5H	-			2400
480	31H-75007-03	SCREW	6		-			2400
481	31H-75008-03	SCREW AND WASHER AY	2		-			2400
490	31H-75009-03	GROMMET	1		-			2400
495	31H-75028-03	CABLE CLIP	3		-			2400
500	31H-72029-00	CONTROL BOX AY	1		-			2400
505	31H-73041-01	CONTROL PANEL	1		-			2400
520	066-00003-30	SWITCH	1		-			2400
- 1	066-00099-80	KEY, SWITCH	2	MARK 103	-			2400
530	353-45719-08	AC RECEPTACLE	2	AC250V 15A	-			2400
538	392-49981-08	WASHER	4		-			2400
560	391-47900-11	VOLT METER	1	200V CLASS	-			2400
562	388-49801-08	NUT	2		-			2400
565	31F-75023-03	VOLT METER	1		-			2400
570	31H-75017-03	PILOT LAMP	1		-			2400
660	31H-75024-03	BREAKER	1		-			2400
661	352-45620-08	CIRCUIT PROTECTOR	1		-			2400
665	31B-79011-03	SCREW & WASHER AY	4		-			2400
671	363-45701-08	TERMINAL BOLT	1	RED 20A	-			2400
672	363-45700-08	TERMINAL BOLT	1	BLACK 20A	-			2400
680	356-49956-08	SCREW	1		-			2400
681	332-00050-08	SPRING WASHER	2		-			2400
682	353-49903-08	WASHER	1		-			2400
683	353-49902-08	NUT	1		-			2400
684	372-59950-08	LOCK WASHER	1		-			2400
685	353-49901-08	WING NUT	1		-			2400
720	35C-72014-03	FLANGE BOLT	3		-			2400
833	31H-75016-03	BATTERY CORD	1		-			2400
902	31H-81035-03	LABEL (MODEL)	1		-			2400


FIG. 2400

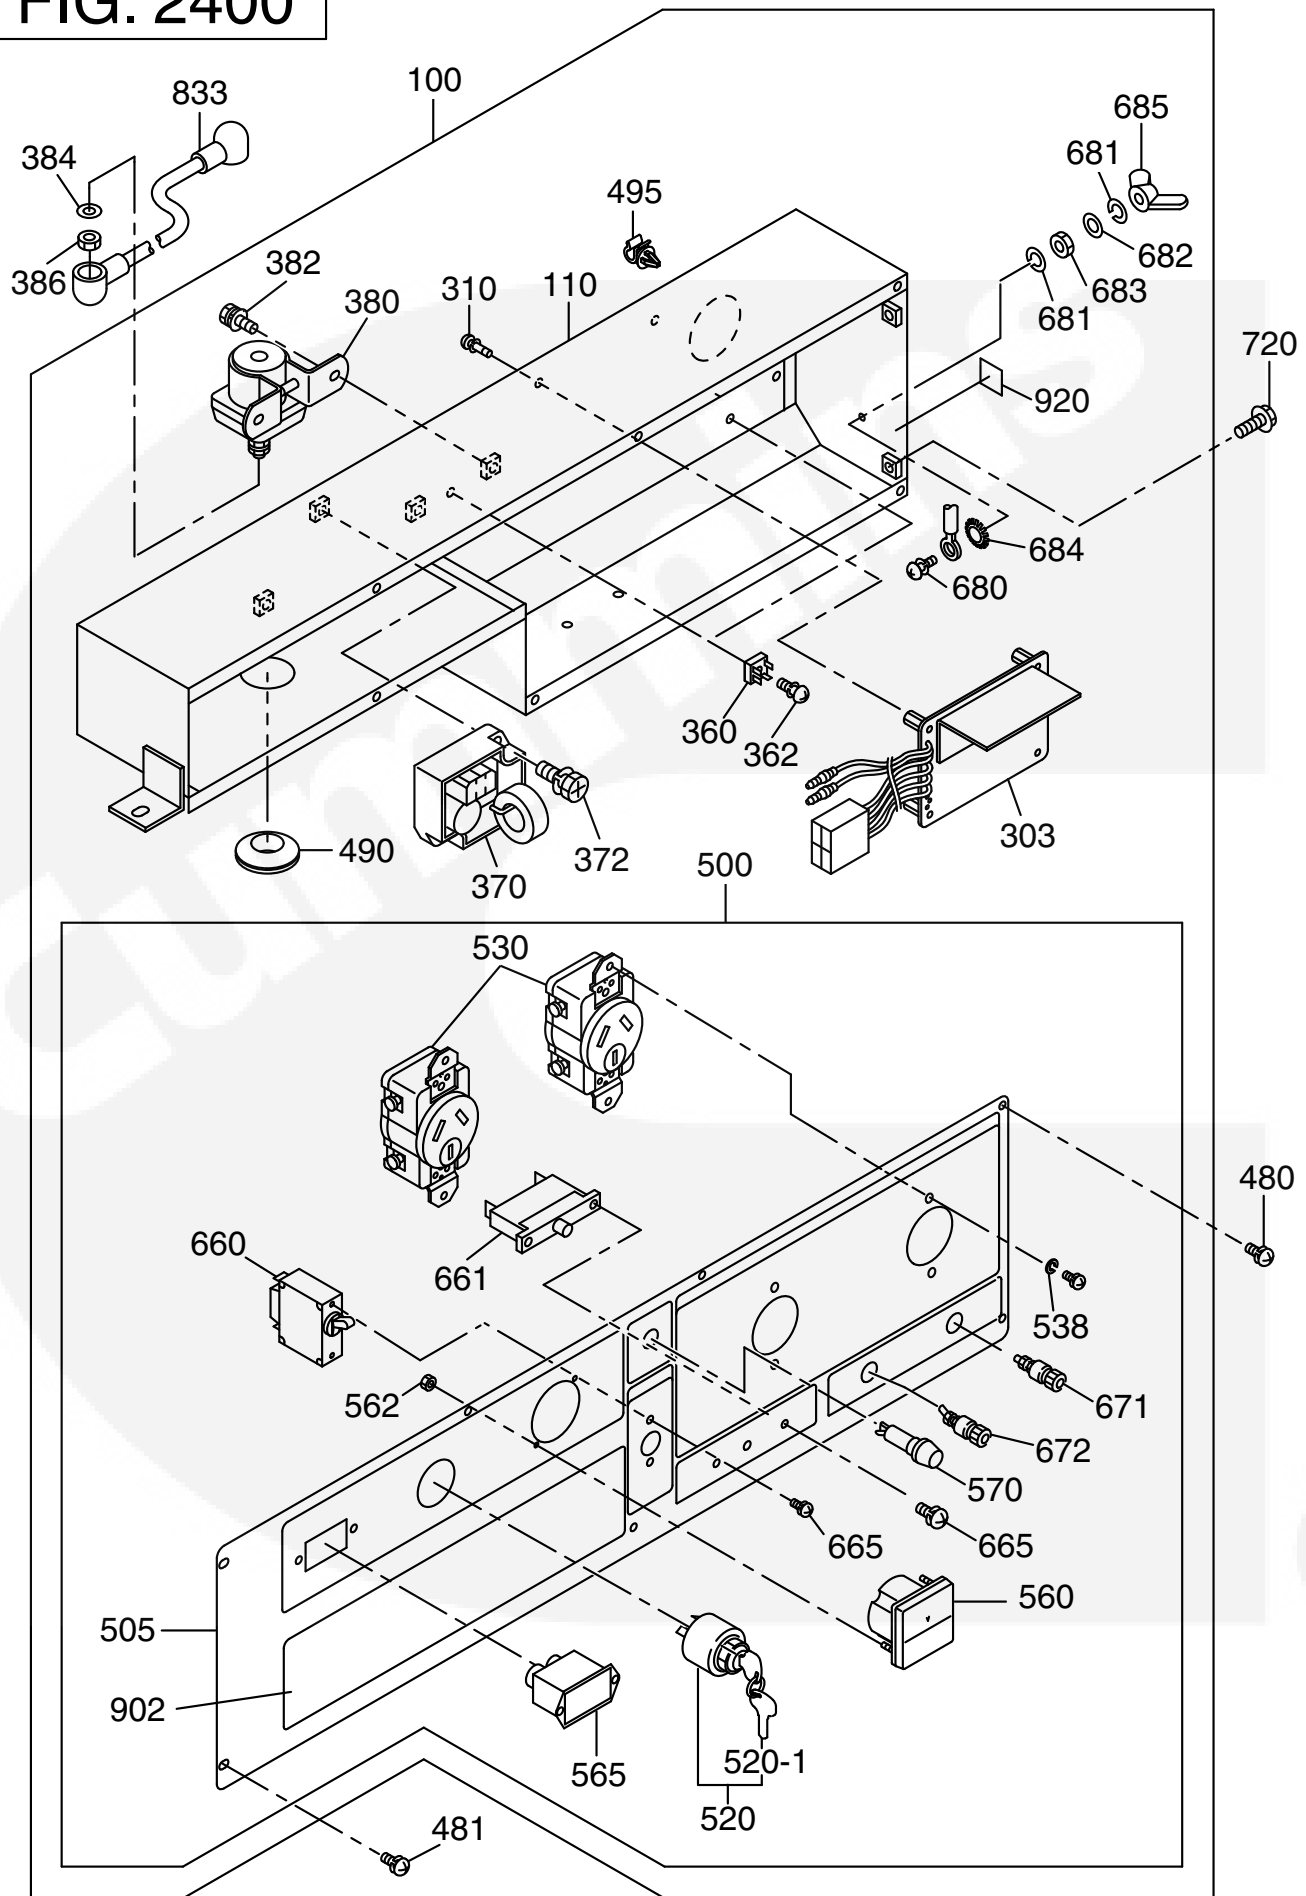

24 CONTROL BOX

[illegible]


FIG. 2600

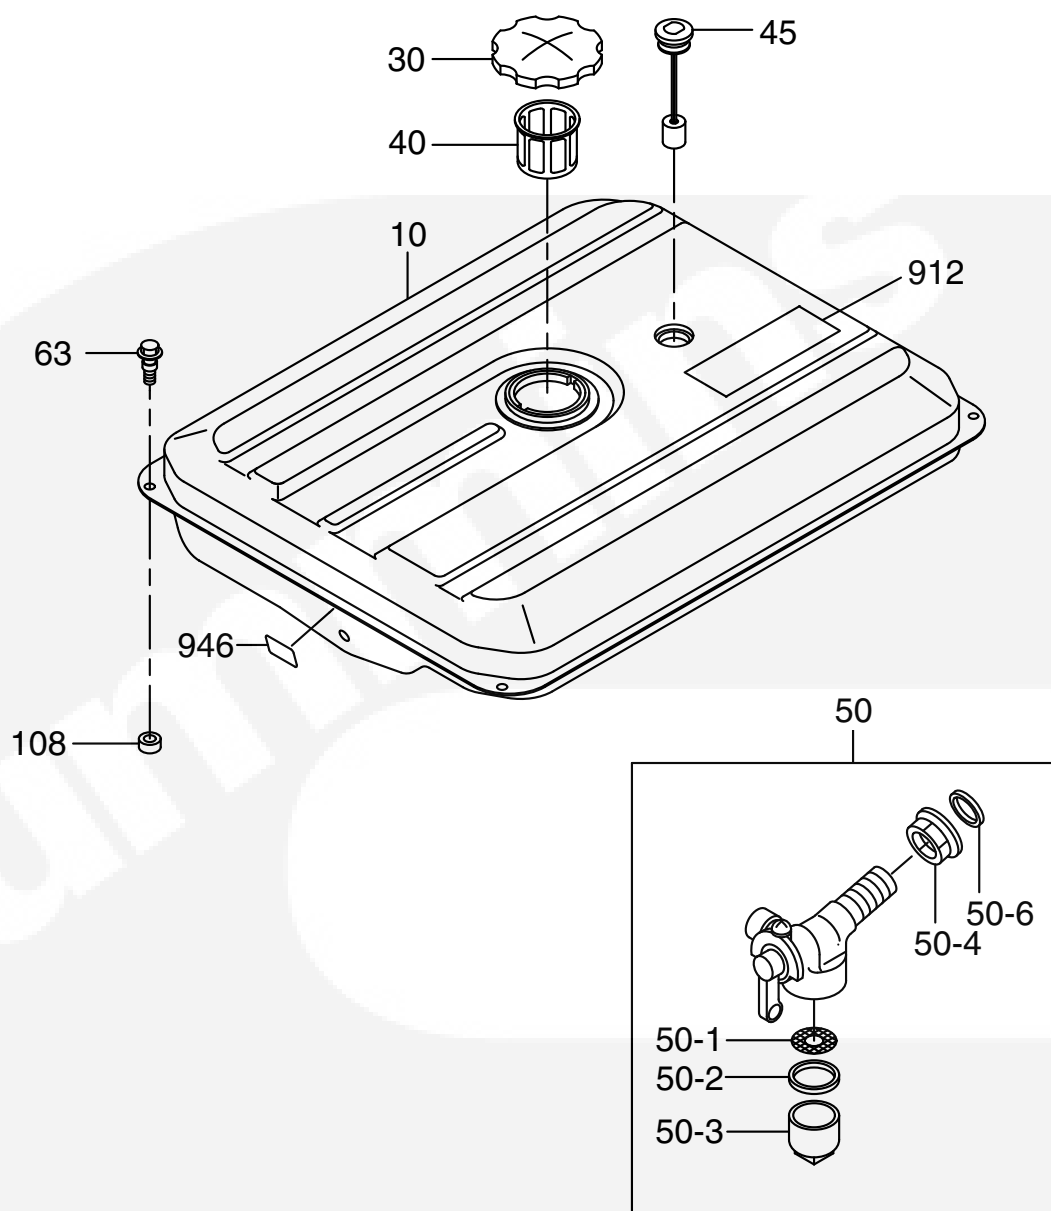

26 FUEL TANK

[illegible]

FIG. 2700

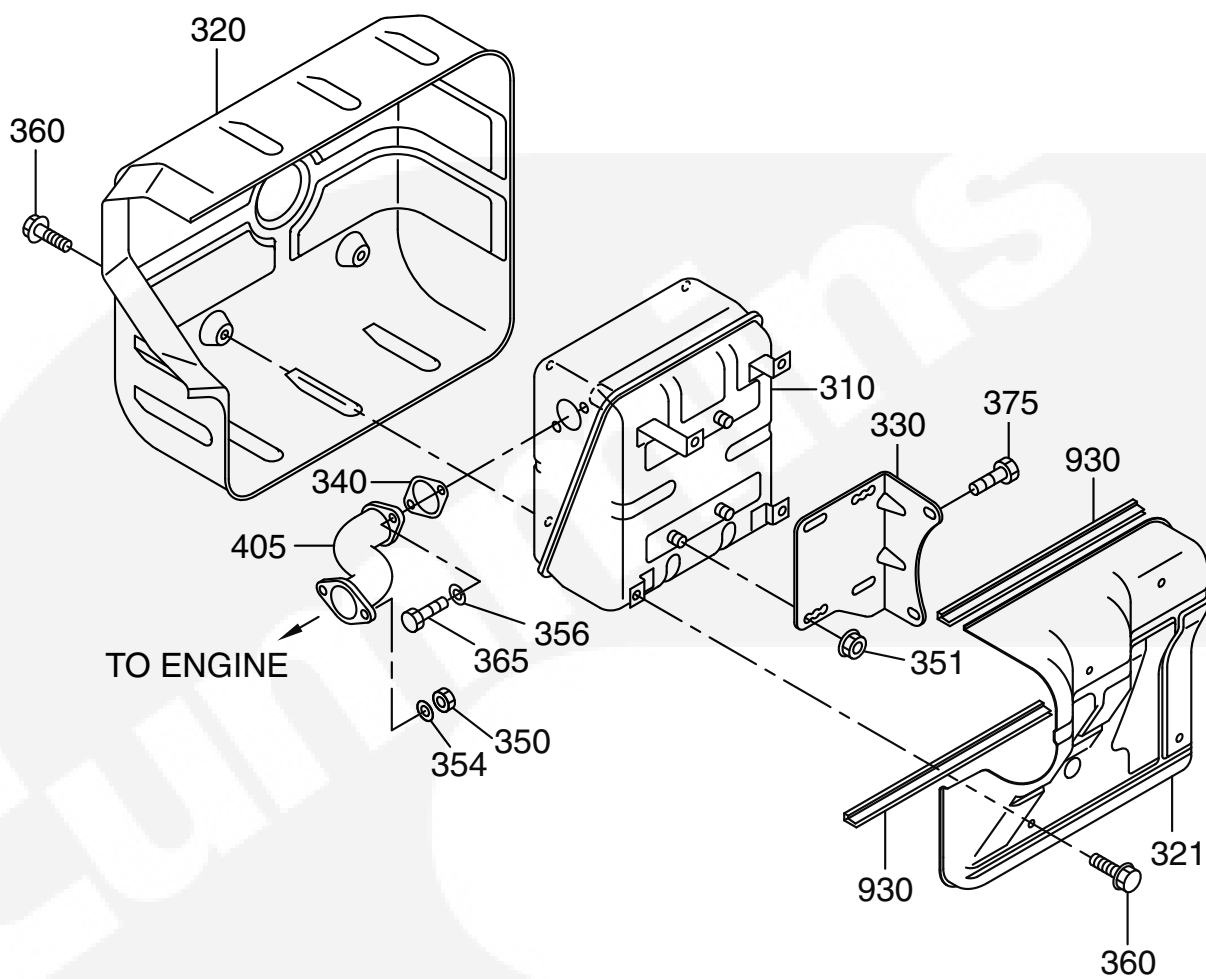

27 MUFFLER

[illegible]

NOTES



NOTES



NOTES



Cummins Onan

Cummins Power Generation

1400 73rd Ave. NE
Minneapolis, MN 55432 USA

Phone 1 763 574 5000

Toll-free 1 800 888 6626

Fax 1 763 574 5298

Email www.cumminsonan.com/contact
www.cumminsonan.com

Cummins®, Onan®, the "C" logo, and "Performance you rely on." are trademarks of Cummins Inc.

©2008 Cummins Power Generation, Inc. All rights reserved.

