


ONAN CW
SERIES
MASTER PARTS CATALOG
VOLUME 11

E. W. ONAN & SONS INC. MINNEAPOLIS, MINNESOTA

TYPICAL ILLUSTRATIONS

PARTS ILLUSTRATED ARE TYPICAL OF THE CW SERIES BUT DO NOT REFER TO ANY SPECIFIC MODEL. THIS SECTION IS A REFERENCE AS TO THE NOUN USED TO DESCRIBE PARTS LISTED IN THE ENGINE, GENERATOR, CONTROL AND ACCESSORY SECTIONS. FOR PART NUMBERS FOR ANY GIVEN UNIT CHECK THE DESCRIPTION IN THE APPROPRIATE SECTION.

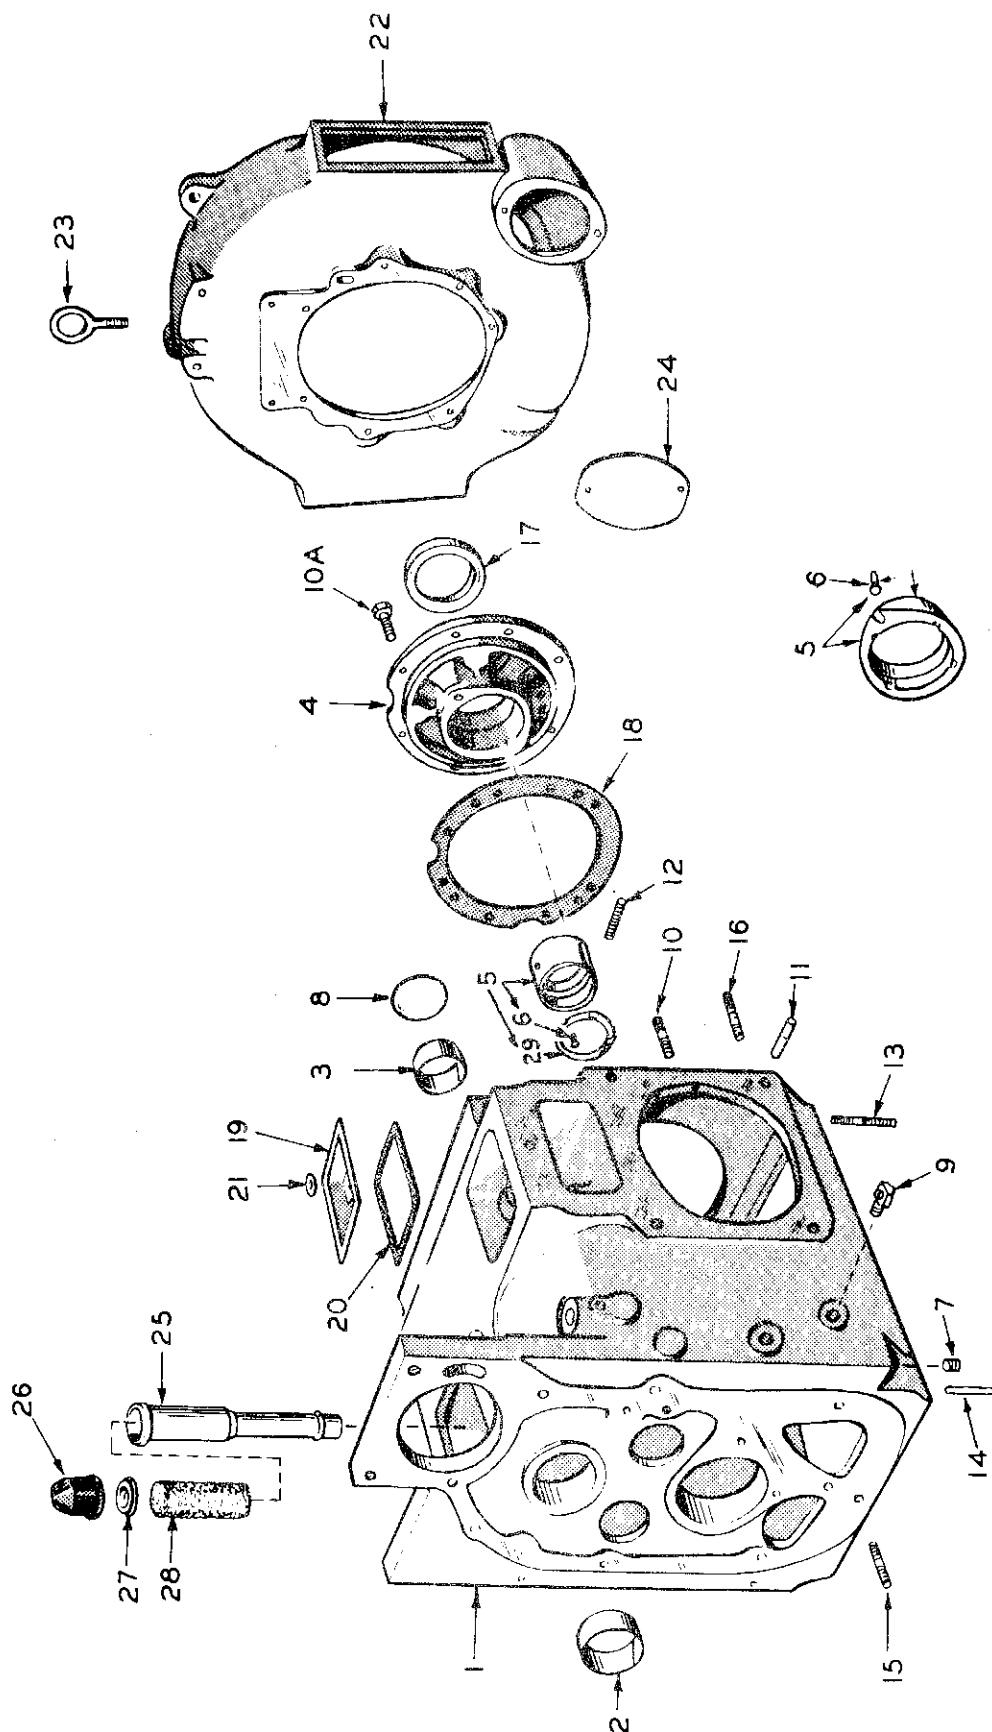


CRANKCASE GROUP

CRANKCASE GROUP

(Refer to Engine Section for Part Numbers)

1. Crankcase
2. Bearing, Camshaft Front
3. Bearing, Camshaft Rear
4. Plate, Bearing
5. Bearing Kit
6. Pin, Lock
7. Plug, Pipe
8. Plug, Expansion
9. Elbow, Inverted
10. Stud, Plate
- 10A. Bolt, Place
11. Stud, Cylinder Base
12. Stud, Cylinder Base
13. Stud, Oil Base
14. Stud, Oil Base
15. Stud, Gear Cover
16. Stud, Flywheel Housing
17. Seal, Oil
18. Gasket Kit, Plate
19. Cover, Box
20. Gasket, Box Cover
21. Washer, Copper
22. Housing, Flywheel
23. Bolt, Eye
24. Plate, Cover
25. Tube, Breather
26. Cap, Breather Tube
27. Valve, Breather
28. Filter, Breather Tube
29. Washer, Thrust

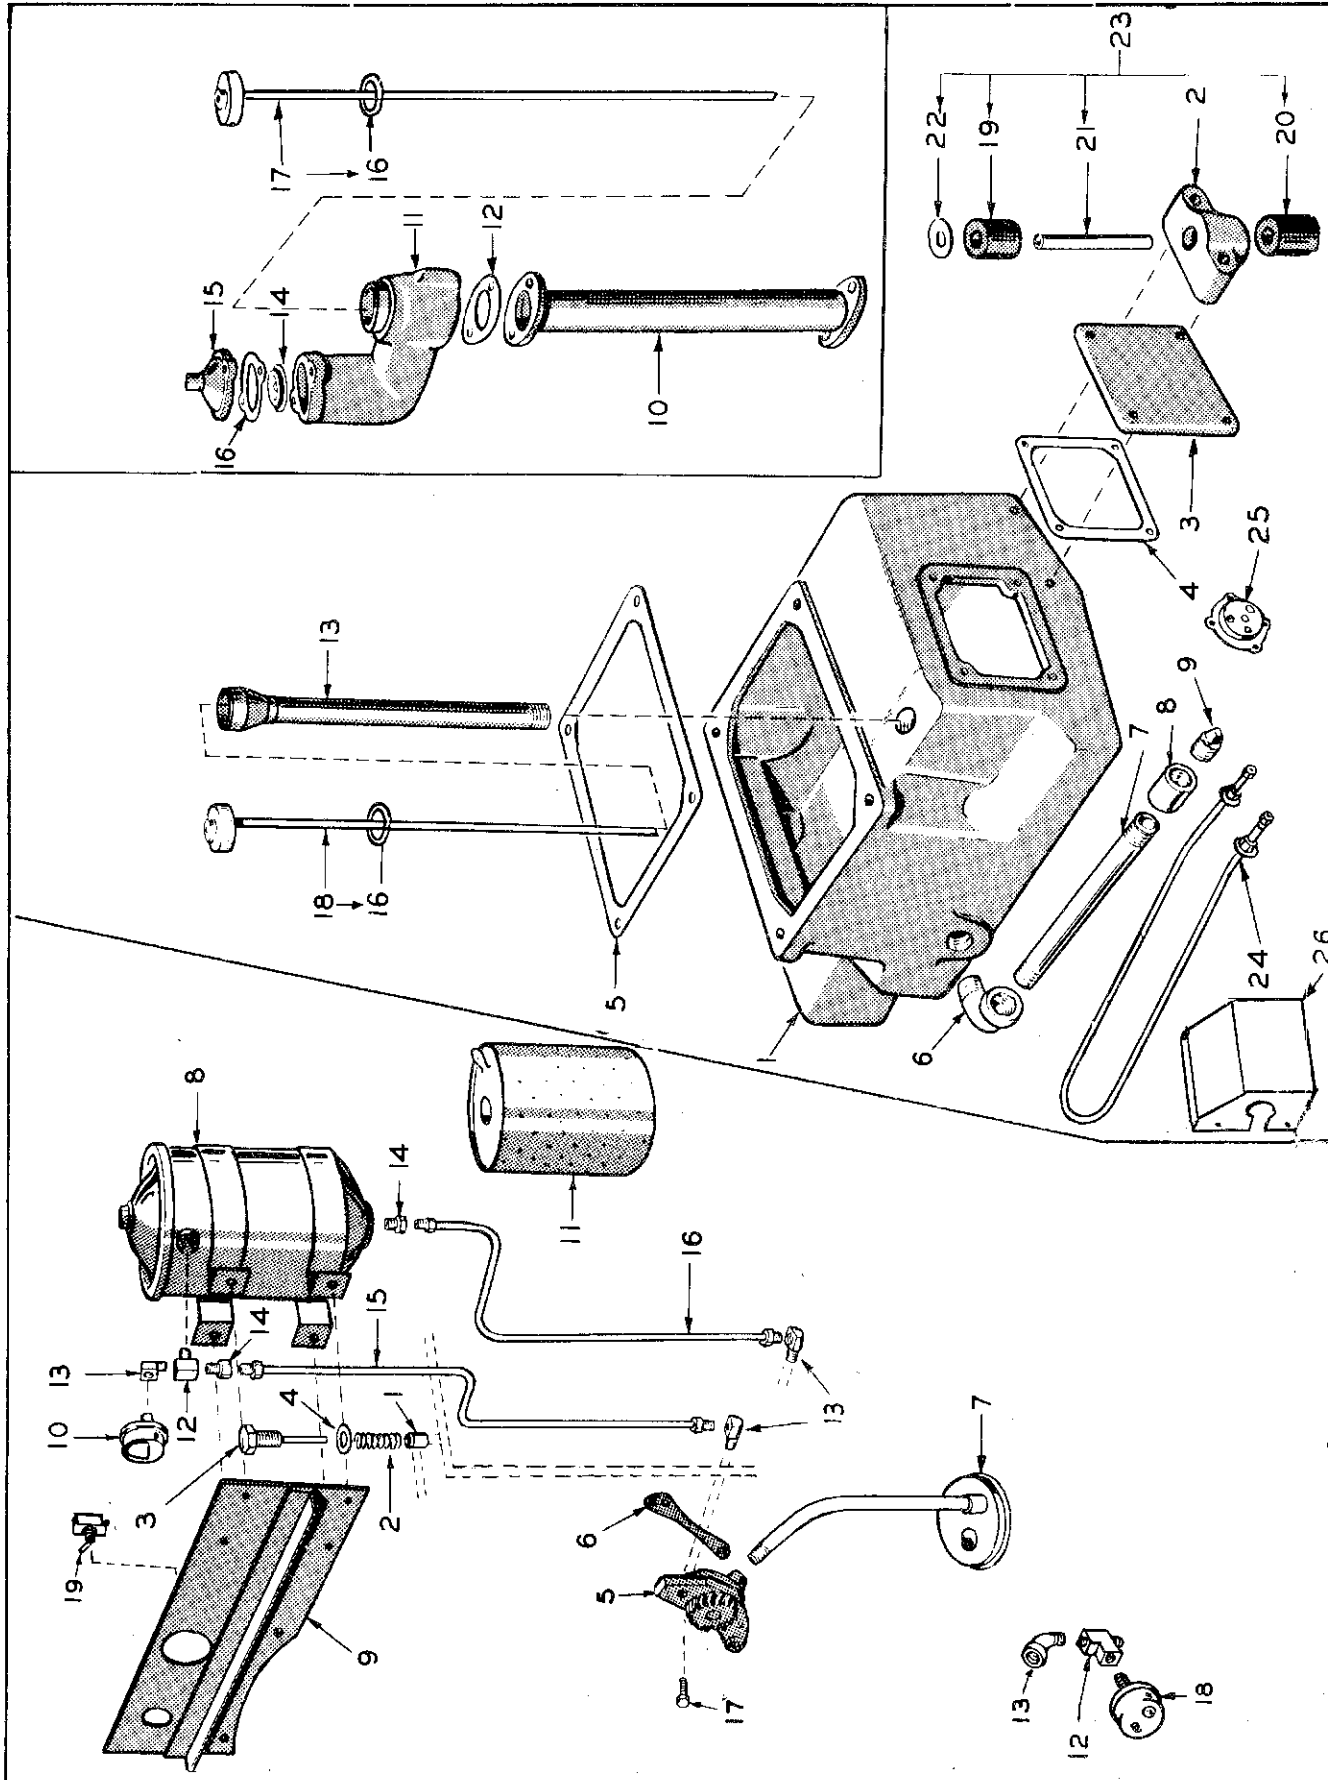

OIL BASE GROUP

OIL PUMP, OIL FILTER
AND BY-PASS GROUP

OIL PUMP, OIL FILTER AND BY-PASS GROUP

Refer to Engine Section for Part Numbers)


1. Piston, By-Pass
2. Spring, By-Pass
3. Screw, Guide
4. Washer, By-Pass
5. Pump, Oil
6. Gasket Kit
7. Cup, Intake
8. Filter, Oil
9. Bracket, Filter Mounting
10. Gauge
11. Cartridge
12. Tee
13. Elbow, Connection
14. Connector
15. Line, Filter Inlet
16. Line, Filter Outlet
17. Screw, Shoulder
18. Switch, Oil Pressure Cut-off
19. Switch, Momentary Contact

OIL BASE GROUP


(Refer to Engine Section for Part Numbers)

1. Base, Oil
2. Foot, Base
3. Cover, Base Opening
4. Gasket, Cover
5. Gasket, Base to Crankcase
6. Elbow, Street
7. Pipe, Drain
8. Coupling, Drain
9. Plug, Drain
10. Tube, Fill
11. Housing, Breather
12. Gasket
13. Tube, Fill
14. Valve, Breather
15. Cap
16. Gasket
17. Indicator
18. Indicator
19. Cushion, Upper
20. Cushion, Lower
21. Bushing, Spacer
22. Washer
23. Mounting Assembly
24. Element, Heater
25. Thermostat
26. Cover, Thermostat

CONNECTING ROD AND PISTON GROUP

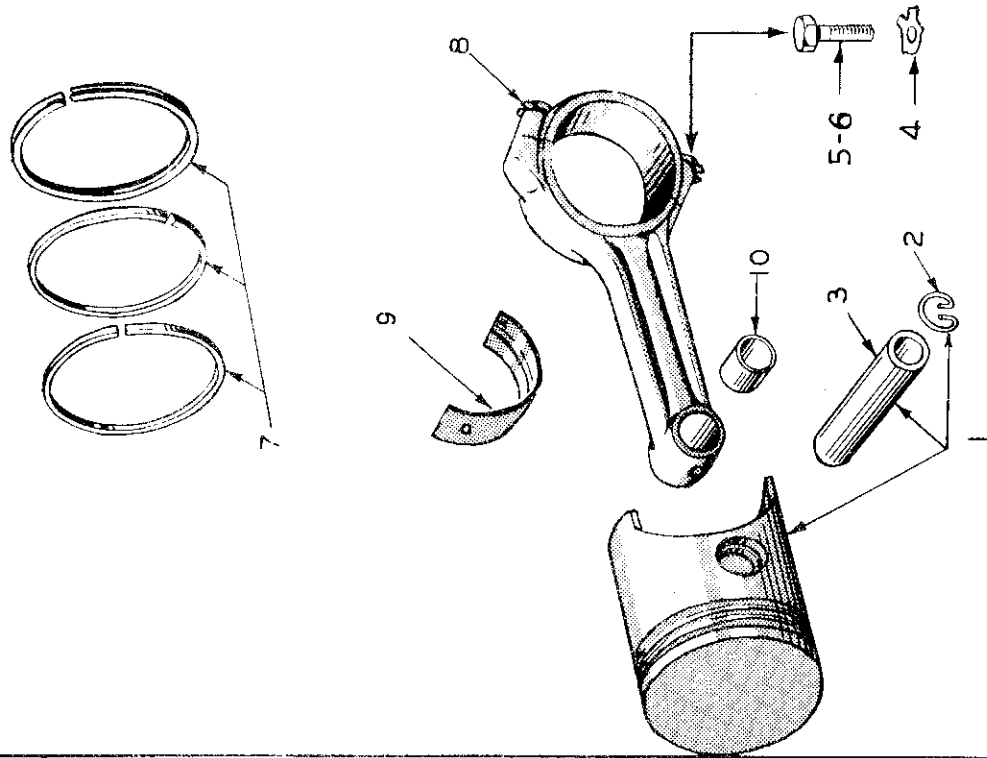

CYLINDER AND VALVE GROUP

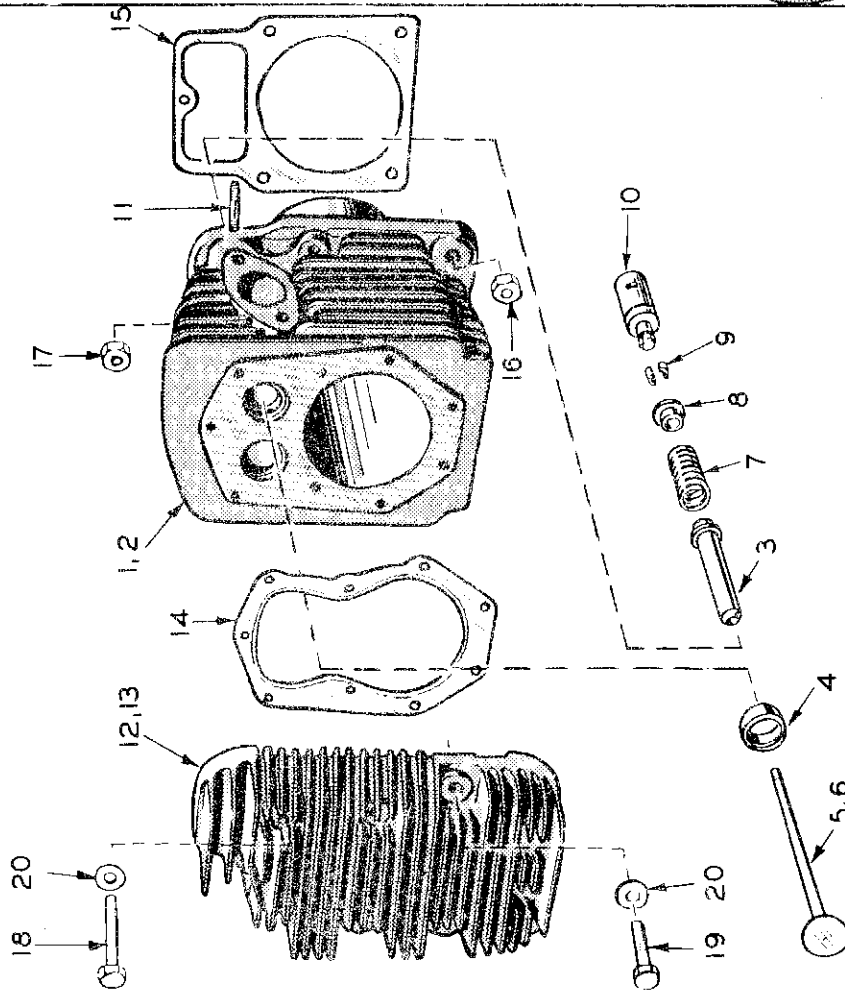


CYLINDER AND VALVE GROUP
(Refer to Engine Section for Part Numbers)


- | | |
|----------------------------|----------------------------|
| 1. Block, Cylinder - Left | 11. Stud, Manifold |
| 2. Block, Cylinder - Right | 12. Head, Cylinder - Left |
| 3. Guide, Valve | 13. Head, Cylinder - Right |
| 4. Insert, Seat | 14. Gasket, Head |
| 5. Valve, Exhaust | 15. Gasket, Base |
| 6. Valve, Intake | 16. Nut, Mounting |
| 7. Spring, Valve | 17. Nut, Mounting |
| 8. Retainer, Spring | 18. Screw, Hex Head |
| 9. Lock, Retainer | 19. Screw, Hex Head |
| 10. Tappet, Valve | 20. Washer |
-
-

CONNECTING ROD AND PISTON GROUP
(Refer to Engine Section for Part Numbers)

1. Piston and Pin
2. Ring, Lock
3. Pin, Piston
4. Washer, Lock
5. Screw, Rod
6. Bolt, Place
7. Ring Set, Piston
8. Rod, Connecting
9. Bearing Half, Rod
10. Bushing, Pin

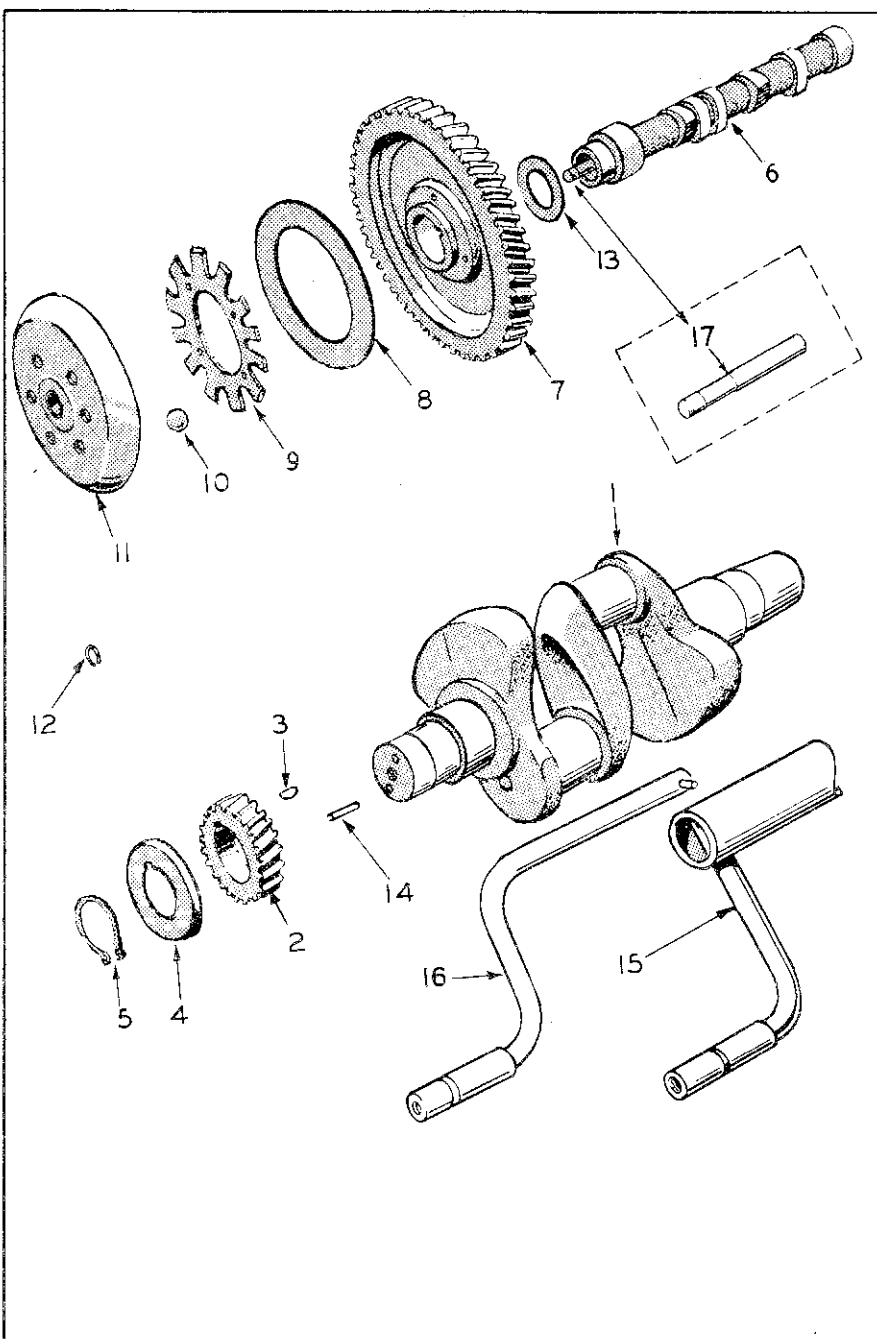

CRANKSHAFT AND CAMSHAFT GROUP

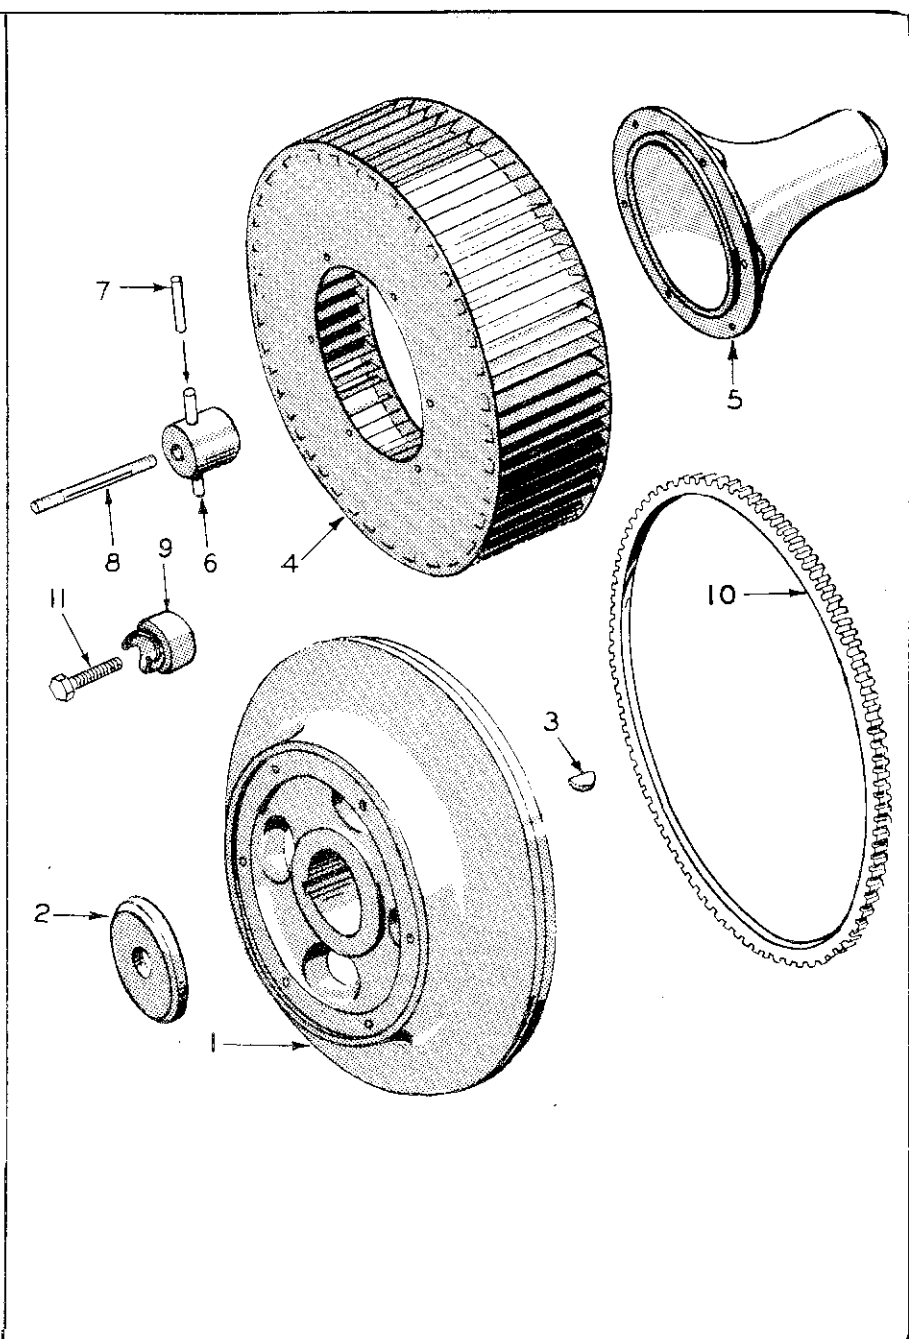


FLYWHEEL AND BLOWER WHEEL GROUP

CRANKSHAFT AND CAMSHAFT GROUP
(Refer to Engine Section for Part Numbers)

1. Crankshaft
 2. Gear, Crankshaft
 3. Key
 4. Washer and Slinger, Gear
 5. Ring, Lock
 6. Camshaft
 7. Gear, Camshaft
 8. Plate, Back
 9. Spacer, Ball
 10. Ball
 11. Cup, Governor
 12. Ring, Snap
 13. Washer, Thrust
 14. Pin
 15. Crank
 16. Crank
 17. Pin, Center
-

FLYWHEEL AND BLOWER WHEEL GROUP
(Refer to Engine Section for Part Numbers)

1. Flywheel
2. Washer, Flywheel
3. Key
4. Wheel, Blower
5. Hub, Blower Wheel
6. Support Guide
7. Pin
8. Stud
9. Dog, Crank
10. Gear, Ring
11. Screw

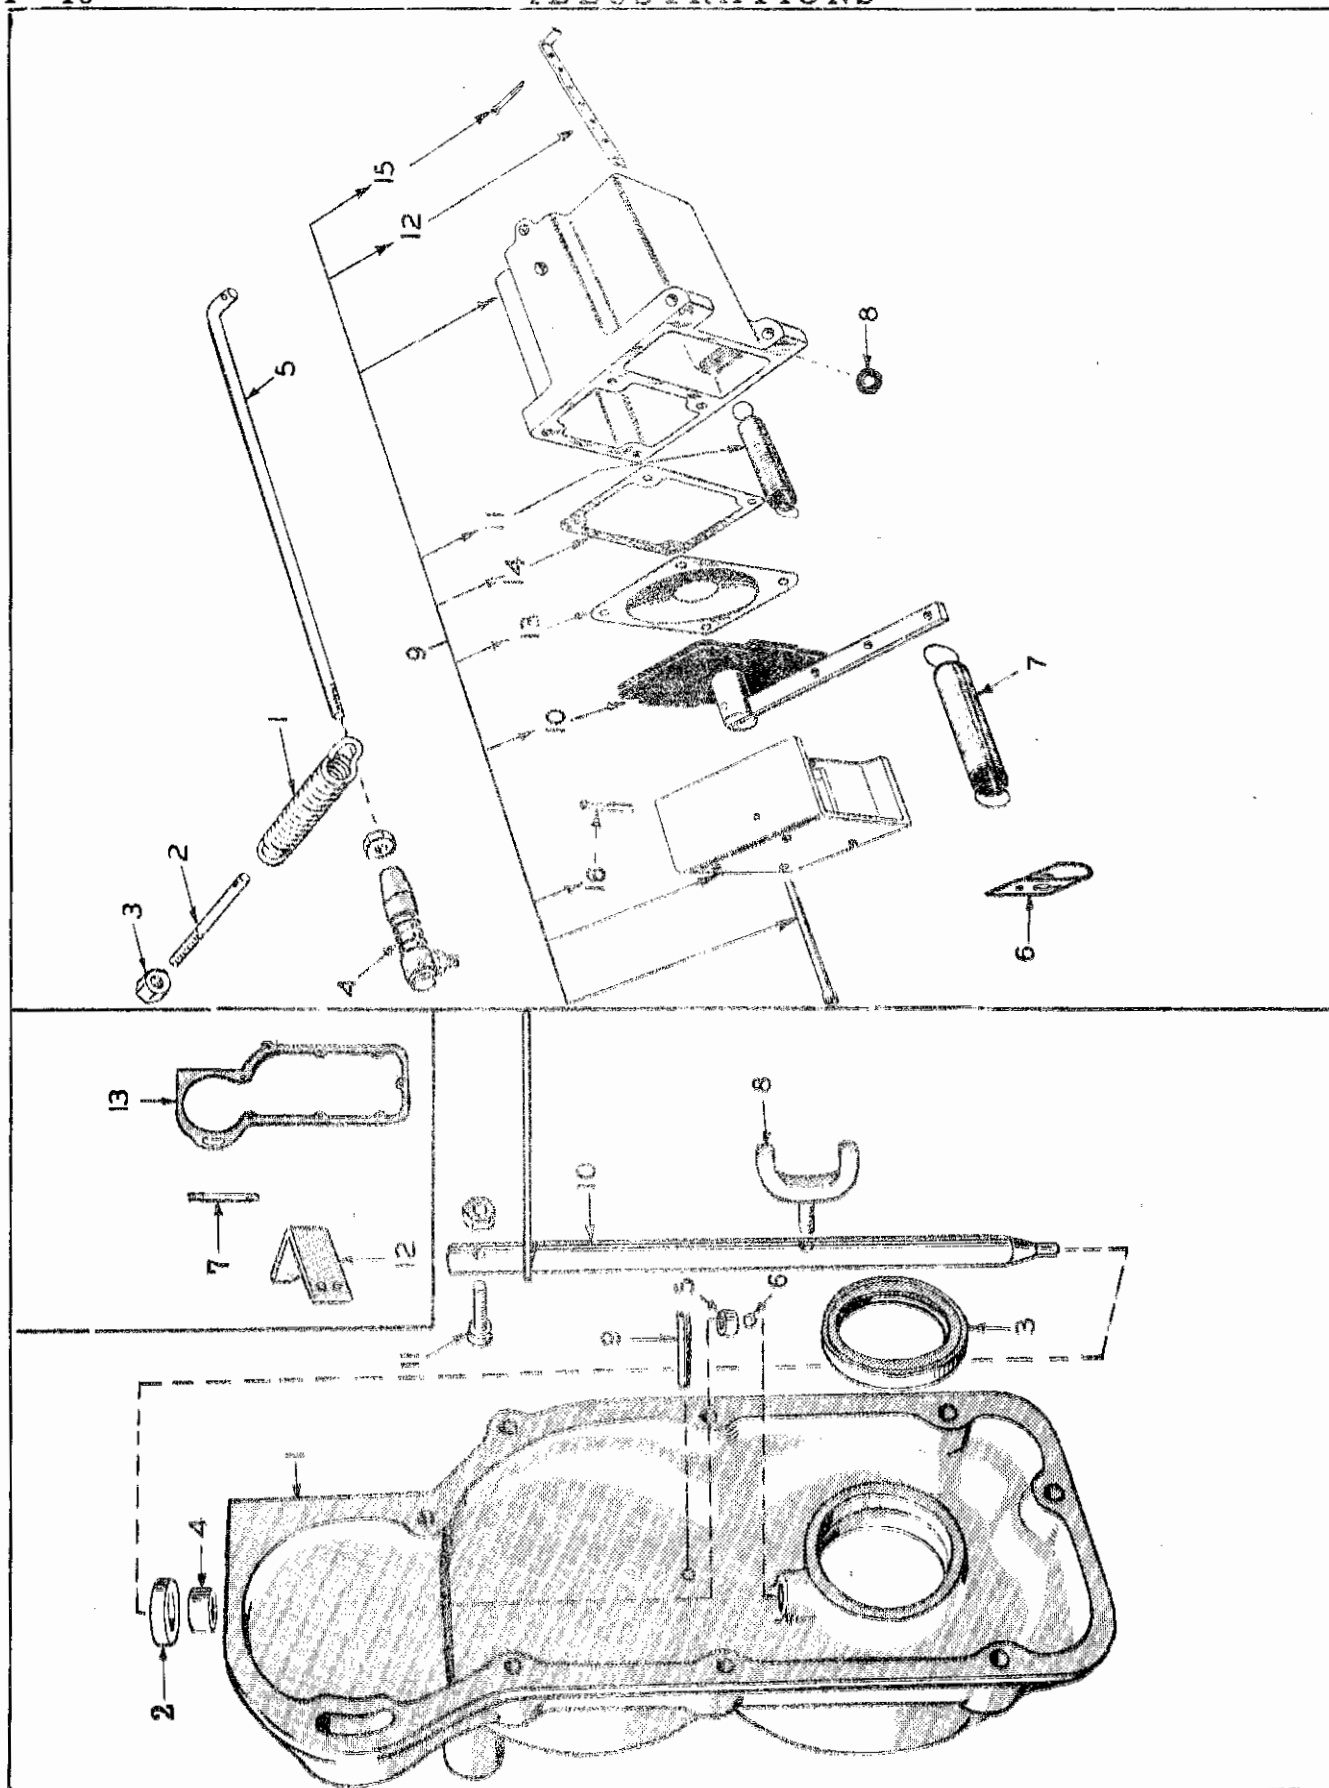

GOVERNOR GROUP

GEAR COVER GROUP

GEAR COVER GROUP


(Refer to Engine Section for Part Numbers)

1. Cover, Gear
2. Seal
3. Seal
4. Bearing, Upper
5. Bearing, Lower
6. Ball
7. Stud
8. Yoke
9. Pin
10. Arm and Shaft
11. Screw
12. Bracket
13. Gasket

GOVERNOR GROUP

(Refer to Engine Section for Part Numbers)

1. Spring
2. Stud
3. Nut
4. Joint
5. Link
6. Bracket, External
7. Spring, External
8. Ring, Gasket
9. Booster Replacement Kit
10. Diaphragm Kit
11. Spring, Internal
12. Bracket, Internal
13. Plate
14. Gasket
15. Pin, Cotter
16. Pin, Roll

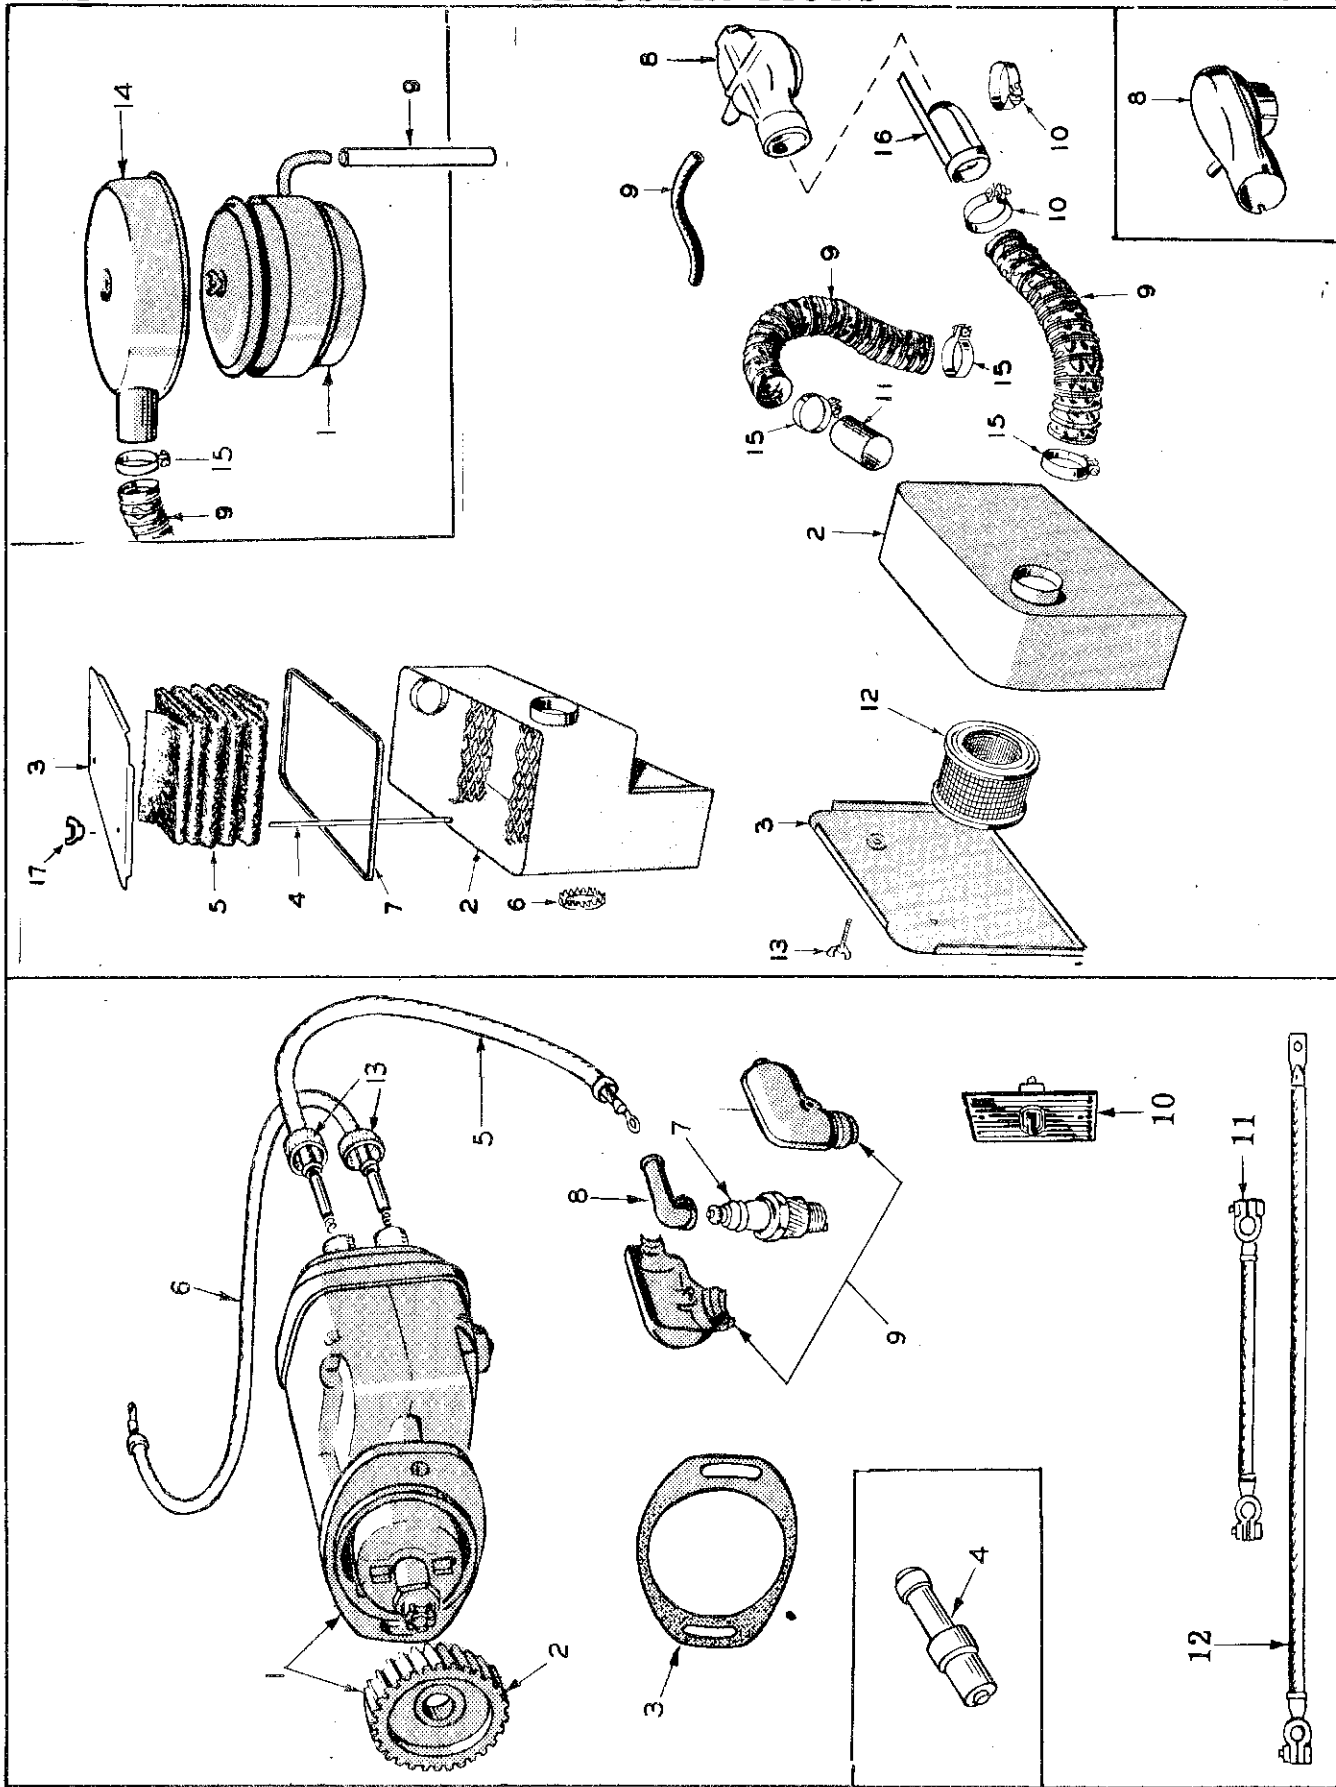

AIR CLEANER GROUP

IGNITION GROUP

IGNITION GROUP

(Refer to Engine Section for Part Numbers)


1. *Magneto
2. Gear, Drive
3. Gasket, Mounting
4. Button, Stop
5. Cable, Right Hand (Less nut)
6. Cable, Left Hand (Less nut)
7. Plug, Spark
8. Nipple
9. Shield
10. Switch
11. Cable, Jumper
12. Cable, Battery
13. Nut, Coupling - Spark Plug Cable

* - Replaceable component parts for the Magneto are listed in the Accessory Section . Not Illustrated.

AIR CLEANER GROUP

(Refer to Engine Section for Part Numbers)

1. Cleaner, Air
2. Housing, Cleaner
3. Cover, Cleaner Housing
4. Stud
5. Element, Cleaner
6. Plug
7. Gasket, Cover
8. Inlet, Air
9. Hose
10. Clamp
11. Tube, Pre-Heater
12. Cartridge, Air Cleaner
13. Screw, Air Cleaner Cover
14. Heater Kit, Air Pre-
15. Clamp
16. Bushing, Carburetor Air Inlet
17. Nut, Wing

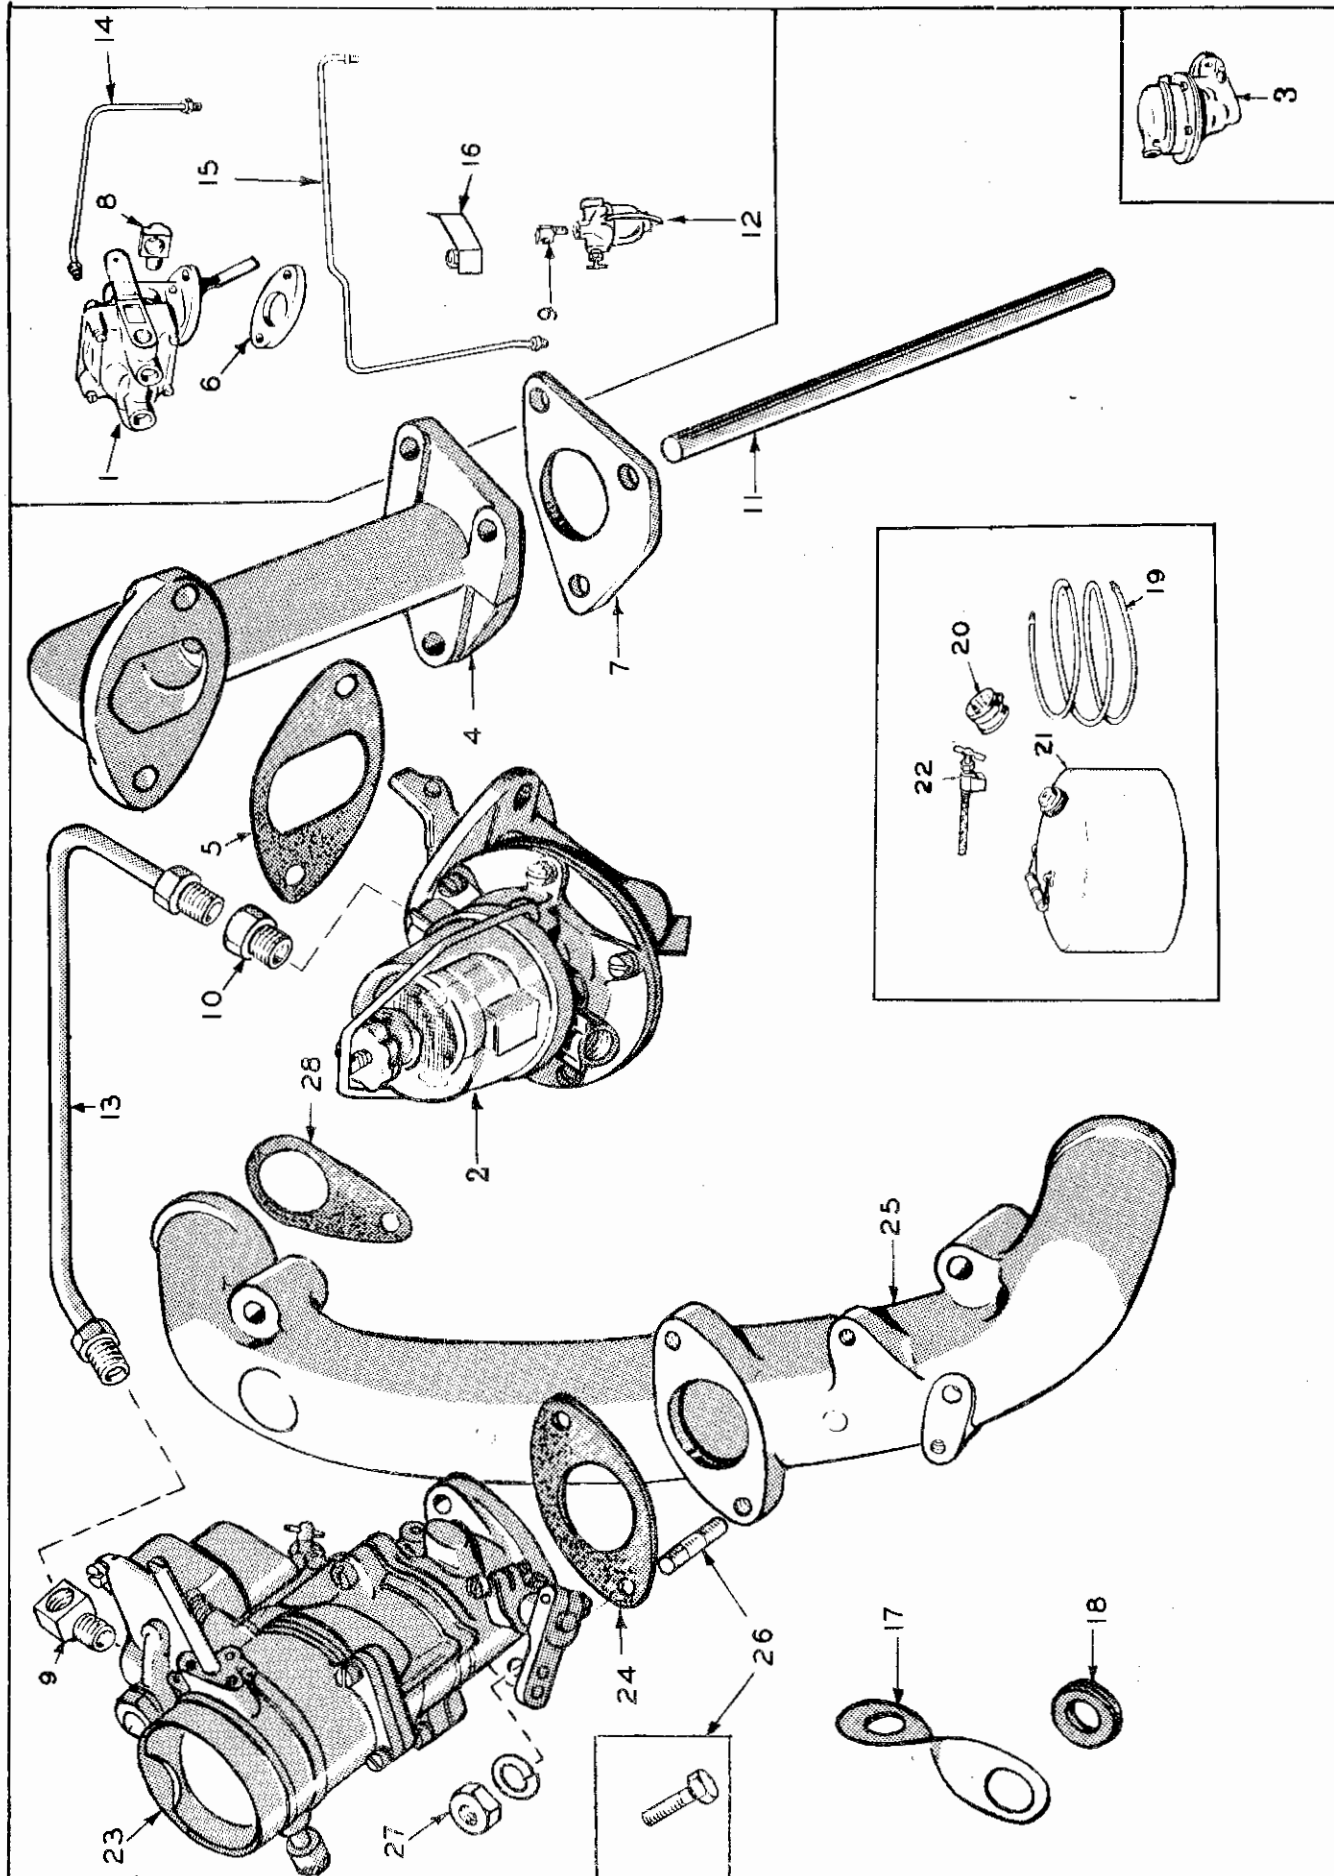


FUEL SYSTEM GROUP - GASOLINE


FUEL SYSTEM GROUP - Gasoline
(Refer to Engine Section for Part Numbers)

1. *Pump, Fuel - ONAN or Blaking Mfr.
2. *Pump, Fuel - AC Mfr.
3. Pump, Fuel - Carter Mfr.
4. Adapter, Pump
5. Gasket, Adapter
6. Spacer, Pump Mounting
7. Spacer, Adapter Mounting
8. Elbow
9. Elbow
10. Connector
11. Rod, Push
12. Filter, Fuel
13. Line, Fuel
14. Line, Fuel
15. Line, Fuel
16. Bracket, Connection
17. Bracket, Support
18. Grommet
19. Line, Fuel
20. Cap, Rain
21. Tank
22. Valve
23. *Carburetor
24. Gasket
25. Manifold, Intake
26. Stud or Screw, Hex Head
27. Nut
28. Gasket

* - Component parts for these assemblies are listed
in the Accessory Section.

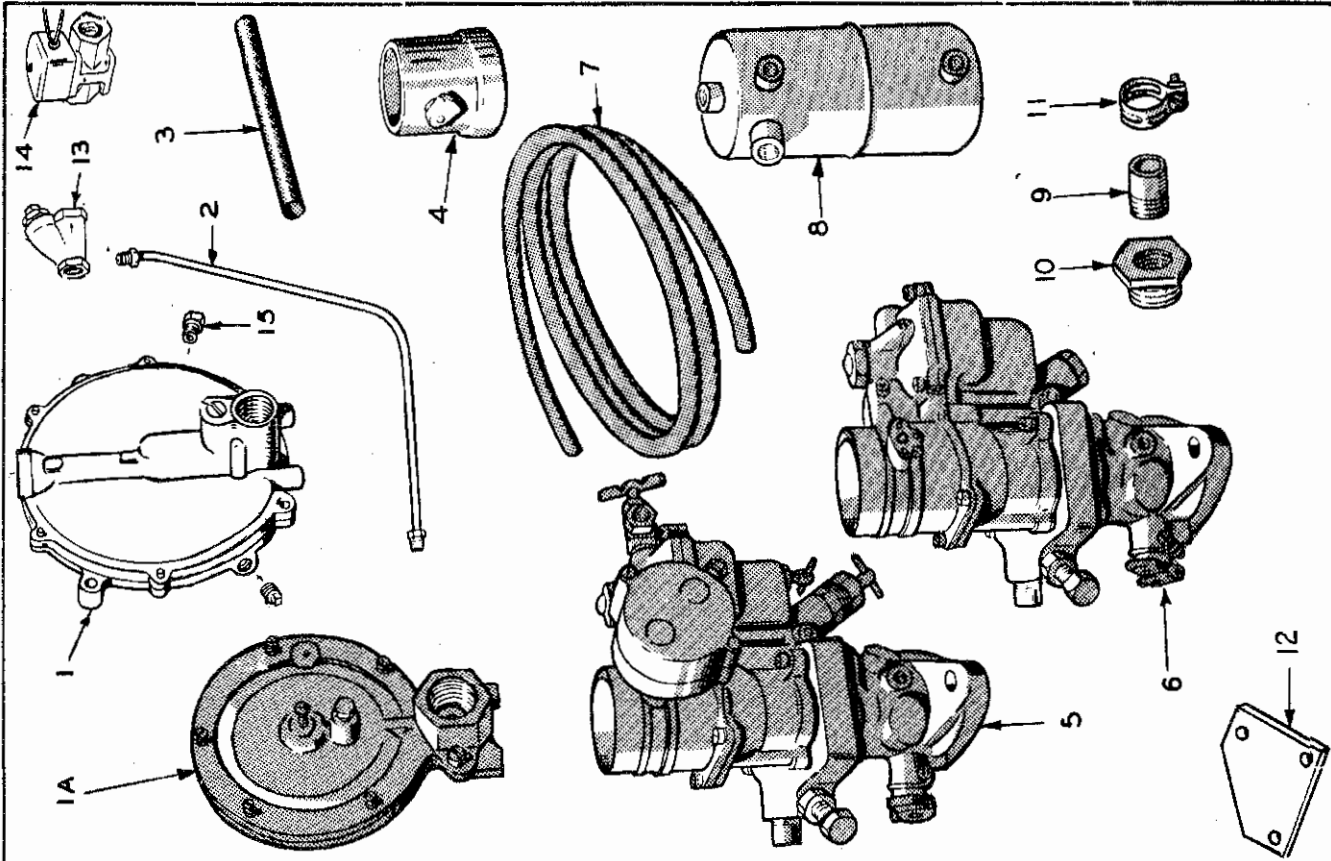

FUEL SYSTEM GROUP-OPTIONAL

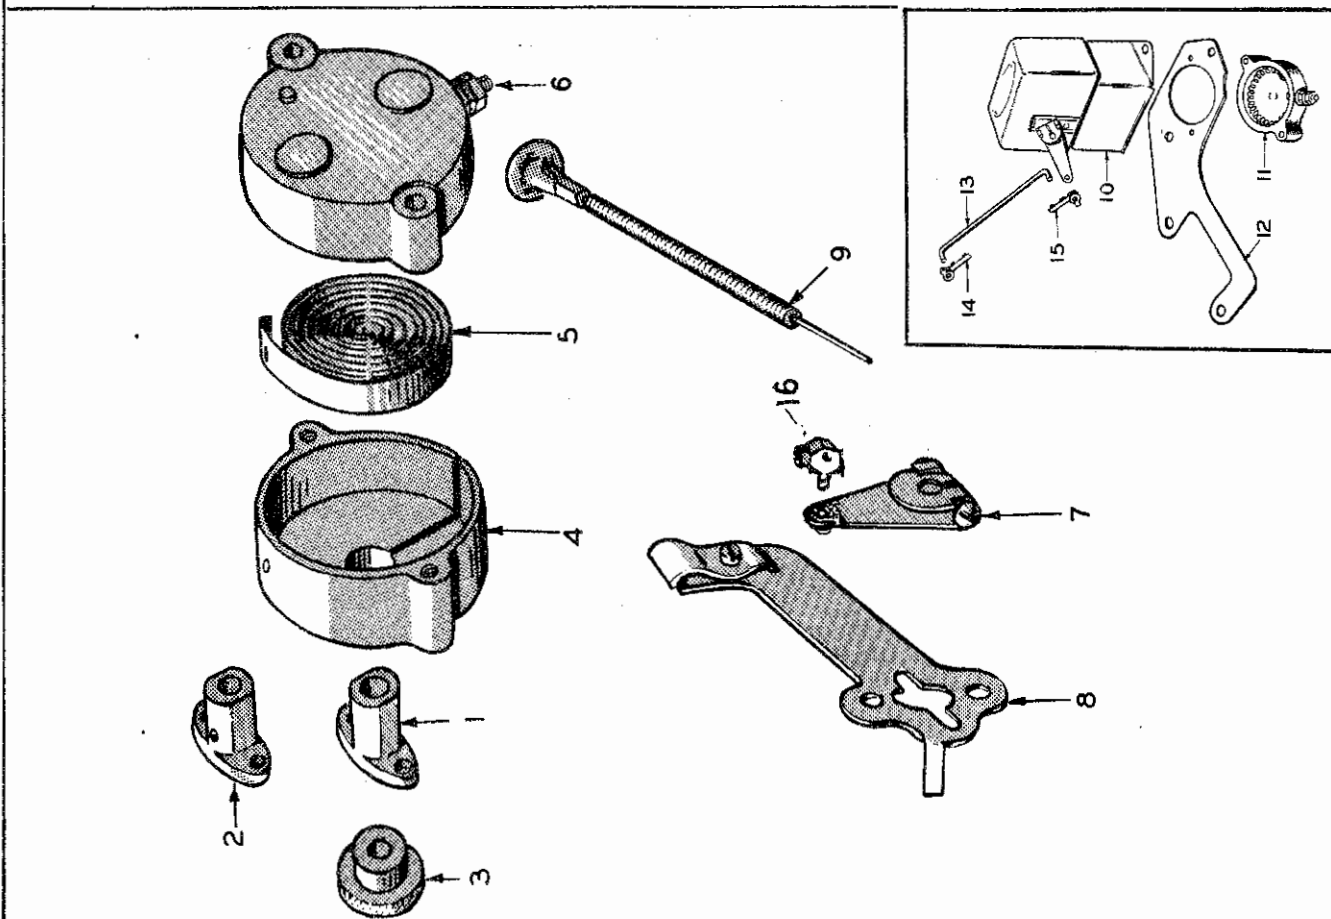

CHOKE GROUP

CHOKE GROUP

(Refer to Engine Section for Part Numbers)


- | | |
|-----------------------------|-----------------------------|
| 1. Adapter, Automatic Choke | 9. Rod, Choke Control |
| 2. Adapter, Automatic Choke | 10. Choke, Sisson |
| 3. Knob, Choke Shaft | 11. Cover, Choke |
| 4. Housing, Bi-Metal | 12. Bracket, Choke Mounting |
| 5. Element, Bi-Metal | 13. Linkage, Choke |
| 6. Cover, Choke | 14. Clip, Carburetor End |
| 7. Lever, Choke Shaft | 15. Clip, Choke End |
| 8. Bracket, Choke Rod | 16. Swivel, Choke Lever |
-

FUEL SYSTEM GROUP-Optional


(Refer to Engine Section for Part Numbers)

1. Regulator, Gas (Garretson Mfr.)
- 1A. Regulator, Gas (Ensign Mfr.)
2. Line, Fuel
3. Hose, Breather
4. Choke, Gas Fuel
5. *Carburetor, Gas-Gasoline
6. *Carburetor, Gas Fuel
7. Hose
8. *Tank, Reservoir
9. Nipple
10. Bushing
11. Clamp
12. Cover, Hole
13. Strainer
14. Valve
15. Vent

* - Component parts for these assemblies are listed in the Accessory Section.

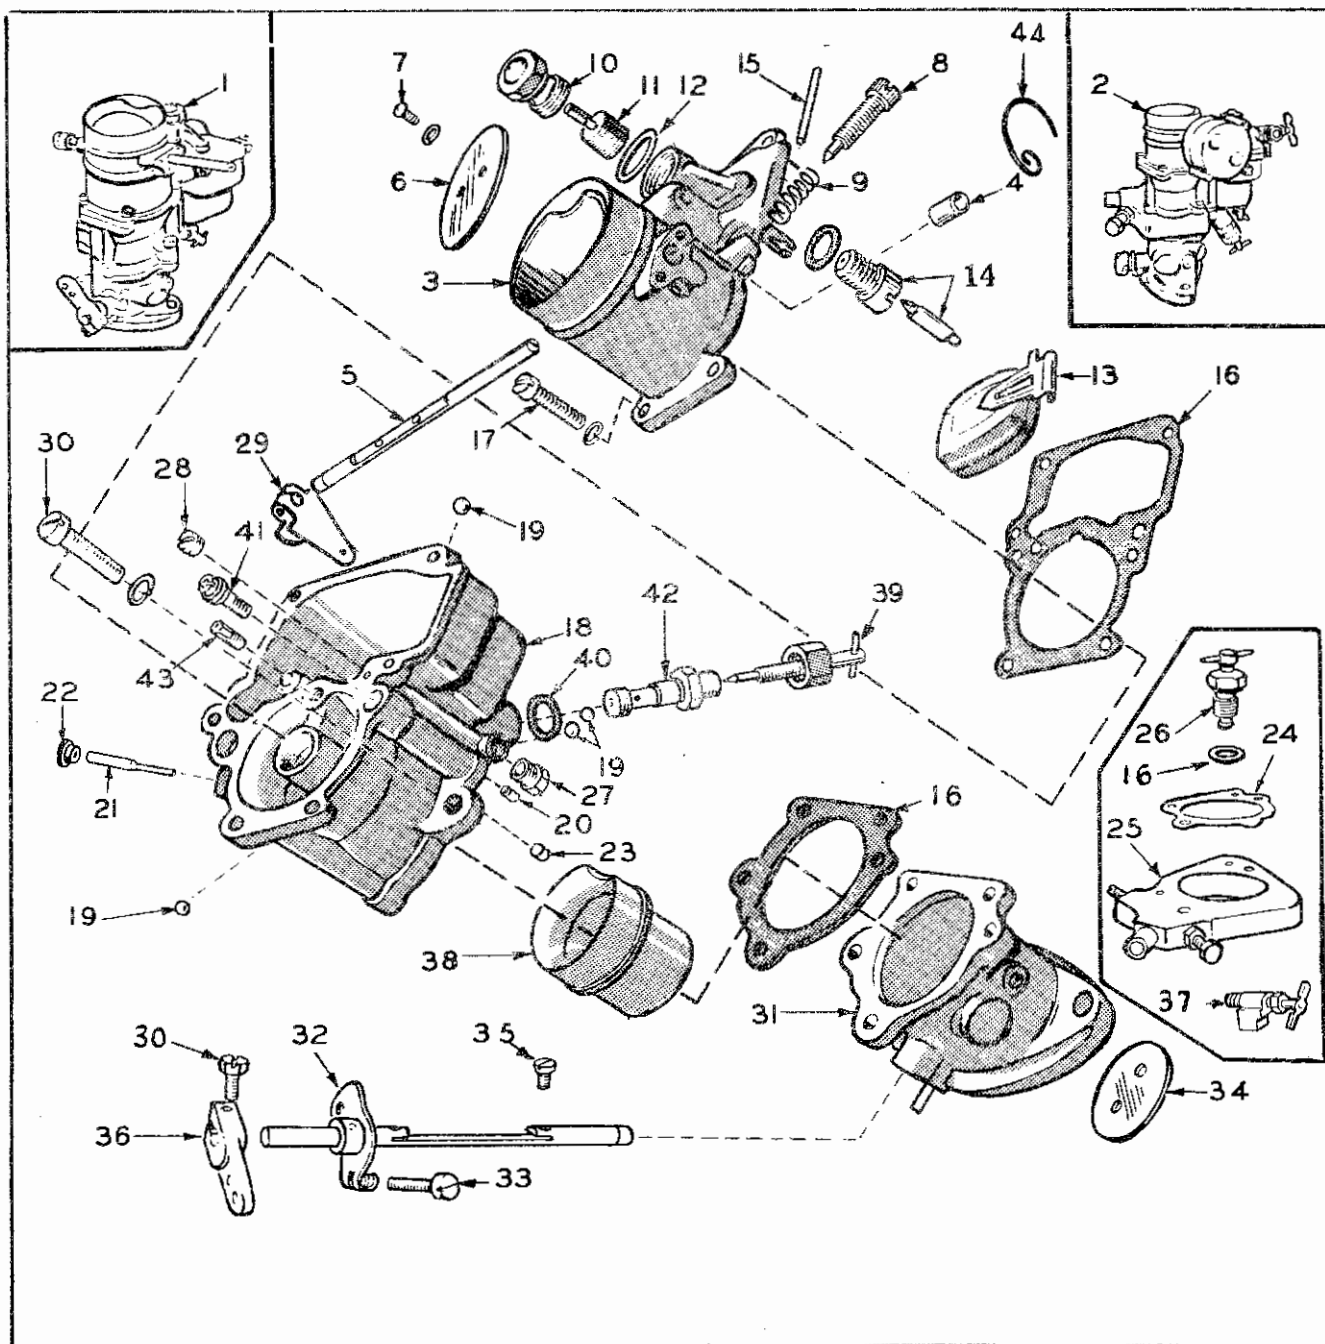

CARBURETOR PARTS GROUP

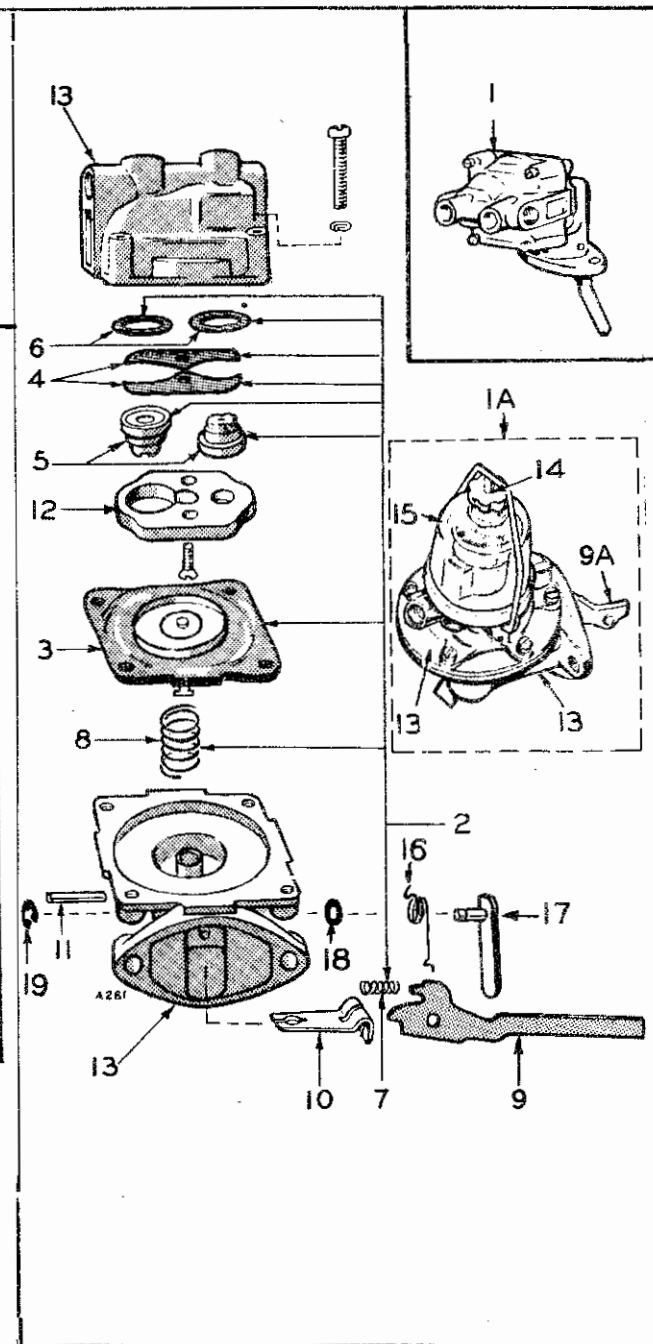

FUEL PUMP PARTS GROUP

CARBURETOR PARTS GROUP

(Refer to Accessory Section for Part Numbers)


- | | |
|------------------------------------|------------------------------|
| 1. Carburetor, Gasoline | 23. Plug |
| 2. Carburetor, Gas or Gas-Gasoline | 24. Gasket |
| 3. Body, Air Intake | 25. Adapter |
| 4. Bushing, Choke Shaft | 26. Lock, Float |
| 5. Shaft, Choke | 27. Plug |
| 6. Plate, Choke | 28. Plug |
| 7. Screw, Plate | 29. Arm, Choke Shaft |
| 8. Needle, Idle Adjusting | 30. Screw |
| 9. Spring, Idle Needle | 31. Body, Throttle |
| 10. Plug, Filter Head | 32. Shaft and Lever Kit |
| 11. Filter, Fuel Inlet | 33. Screw |
| 12. Washer, Gasket | 34. Plate, Throttle |
| 13. Float | 35. Screw, Plate |
| 14. Valve, Fuel Inlet | 36. Lever |
| 15. Axle, Float | 37. Valve, Shut-off |
| 16. Gasket | 38. Venturi |
| 17. Screw | 39. Jet and Adjusting Needle |
| 18. Bowl, Fuel | 40. Washer, Gasket |
| 19. Plug, Lead | 41. Jet, Idle |
| 20. Bushing, Idle Channel | 42. Jet, Discharge |
| 21. Jet, Blank | 43. Jet, Well Vent |
| 22. Plug, Jet Channel | 44. Spring, Choke Stop |
-

FUEL PUMP PARTS GROUP


(Refer to Accessory Section for Part Numbers)

- | | |
|--|---------------------------|
| 1. Pump, Fuel - ONAN or
Blaking Manufacture | 9A. Arm, Rocker |
| 1A. Pump, Fuel - AC Manufacture | 10. Link, Rocker Arm |
| 2. Repair Kit | 11. Pin, Rocker Arm |
| 3. Diaphragm and Pull Rod | 12. Retainer, Valve |
| 4. Gasket, Valve Retainer | 13. Body |
| 5. Valve | 14. Bail |
| 6. Gasket, Valve | 15. Bowl |
| 7. Spring, Rocker Arm | 16. Spring, Priming Lever |
| 8. Spring, Diaphragm | 17. Lever, Priming |
| 9. Arm, Rocker | 18. Seal, "O" Ring |
| | 19. Ring, "E" Retainer |

EXHAUST GROUP

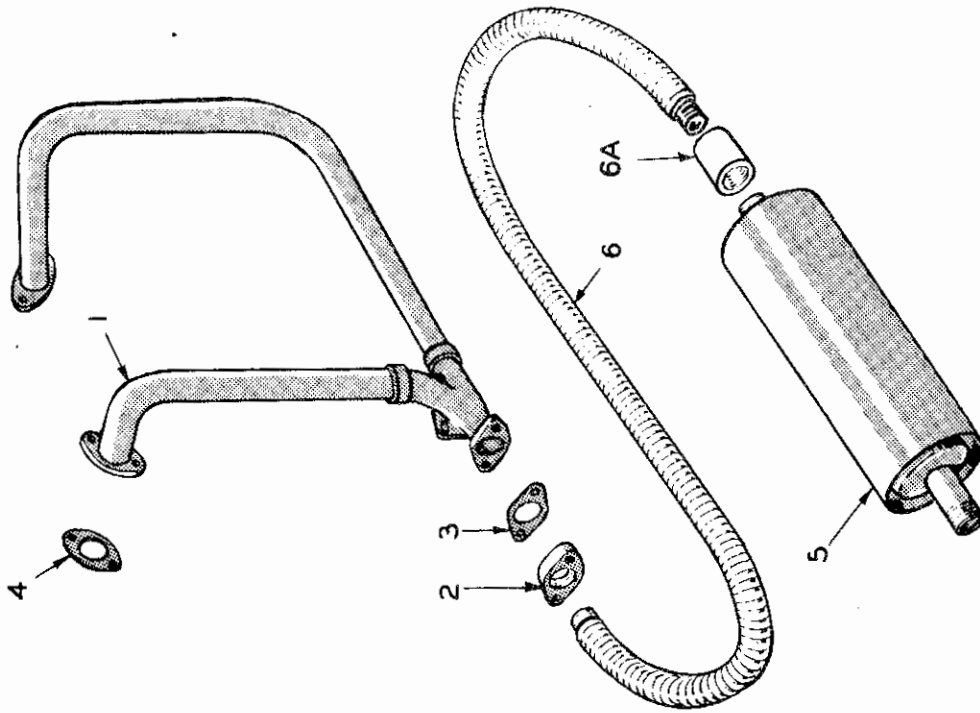

AIR HOUSING GROUP

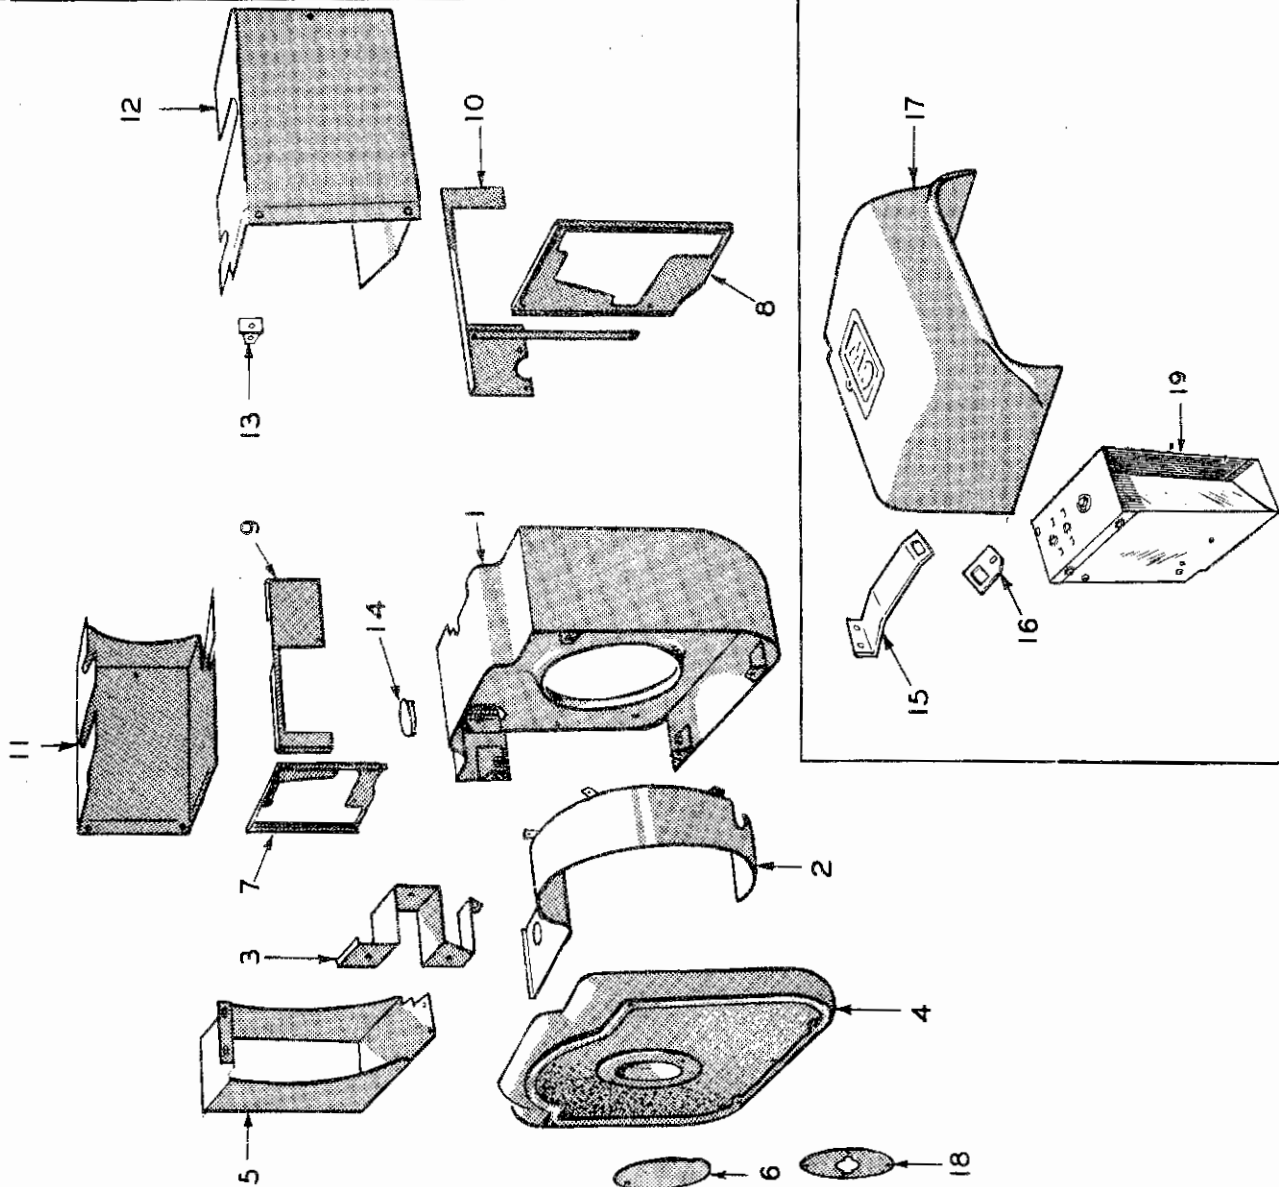

AIR HOUSING GROUP


(Refer to Engine Section for Part Numbers)

1. Housing, Blower
 2. Scroll, Housing
 3. Grille, Air Outlet
 4. Panel, Blower Housing Front
 5. Adapter, Air Outlet
 6. Cover, Crank Opening
 7. Plate, Baffle - Left
 8. Plate, Baffle - Right
 9. Extension, Plate - Left
 10. Extension, Plate - Right
 11. Shroud, Cylinder - Left
 12. Shroud, Cylinder - Right
 13. Bracket, Shroud
 14. Plug
 15. Catch - Lowers
 16. Catch - Uppers
 17. Cover, Governor Arm
 18. Plate, Crank Support
 19. Shutter, Automatic (Optional)
-

EXHAUST GROUP

(Refer to Engine Section for Part Numbers)

1. Manifold, Exhaust
2. Adapter, Outlet
3. Gasket, Adapter
4. Gasket, Manifold
5. Muffler, Exhaust
6. Tube, Exhaust
- 6A. Coupling, Pipe

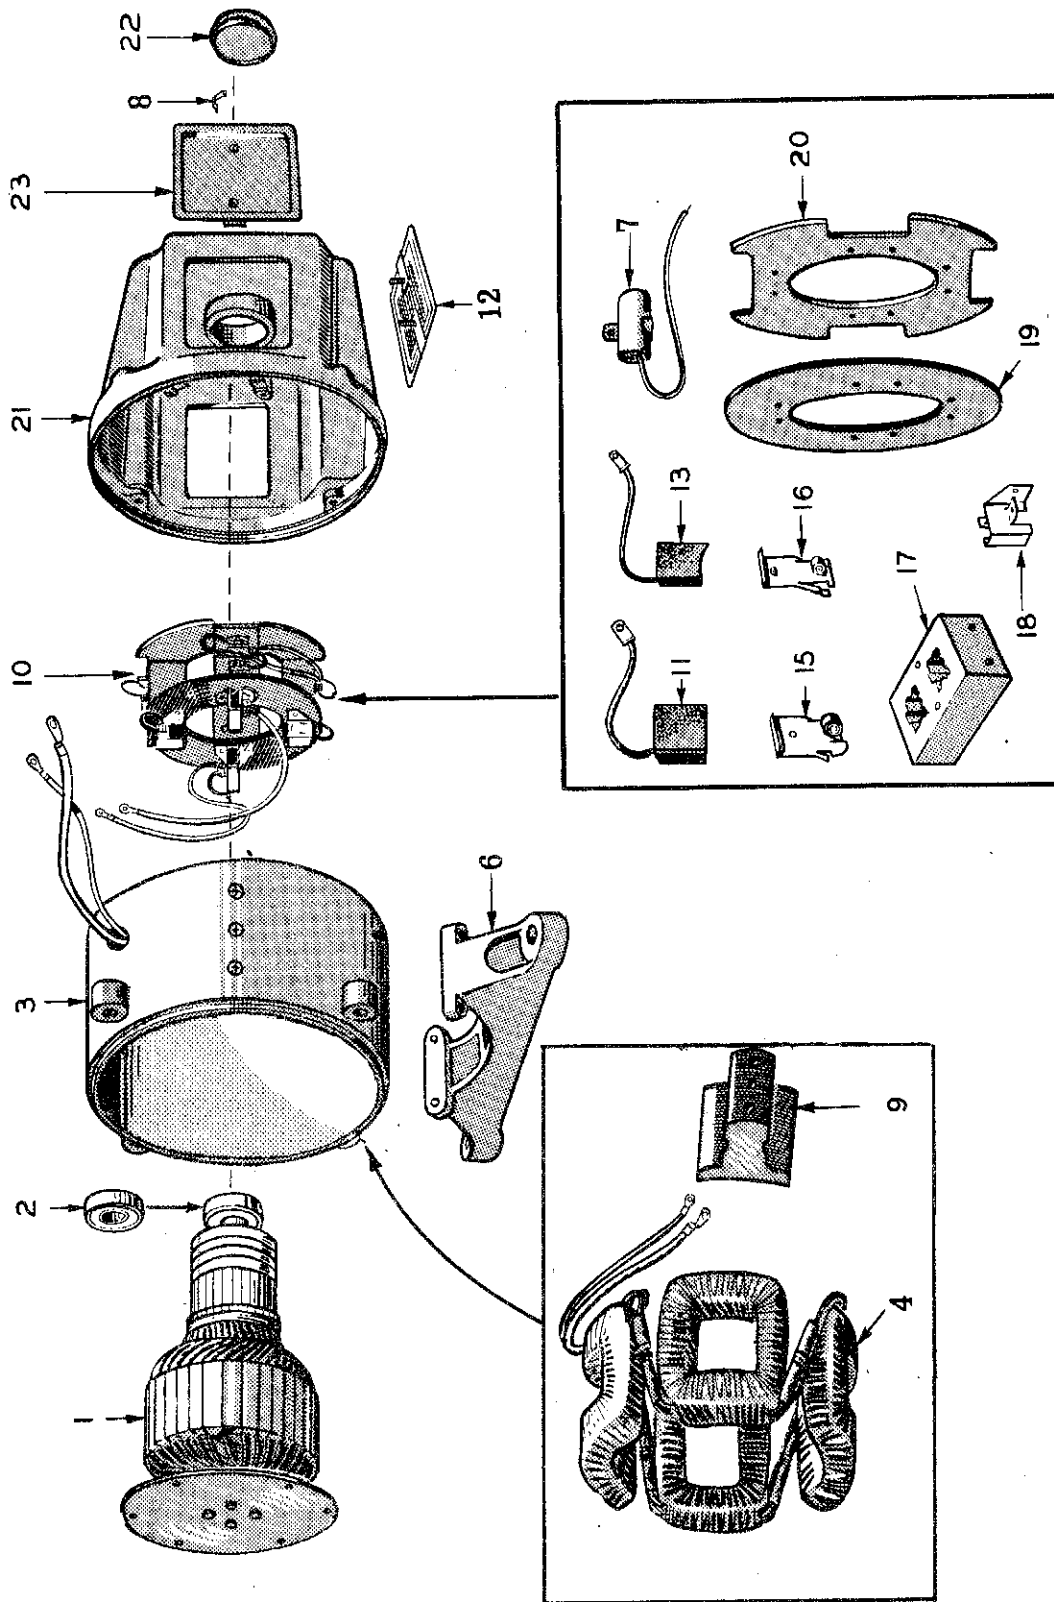


GENERATOR GROUP

GENERATOR GROUP

(Refer to Generator Section for Part Numbers)

1. Armature Assembly
2. Bearing
3. Frame Only
4. Coil Assembly, Field
5. Interpole
6. Support
7. Condenser
8. Clip
9. Poleshoe
10. Rig Assembly, Brush
11. Brush, Commutator
12. Cover, End Bell Opening
13. Brush, Collector Ring
14. Cover, End Bell Opening
15. Spring, Commutator Brush
16. Spring, Collector Ring Brush
17. Block, Holder
18. Guide, Brush
19. Ring, Insulator
20. Spider, Brush Rig
21. Bell, End
22. Cover, Bearing
23. Coil Assembly, Interpole

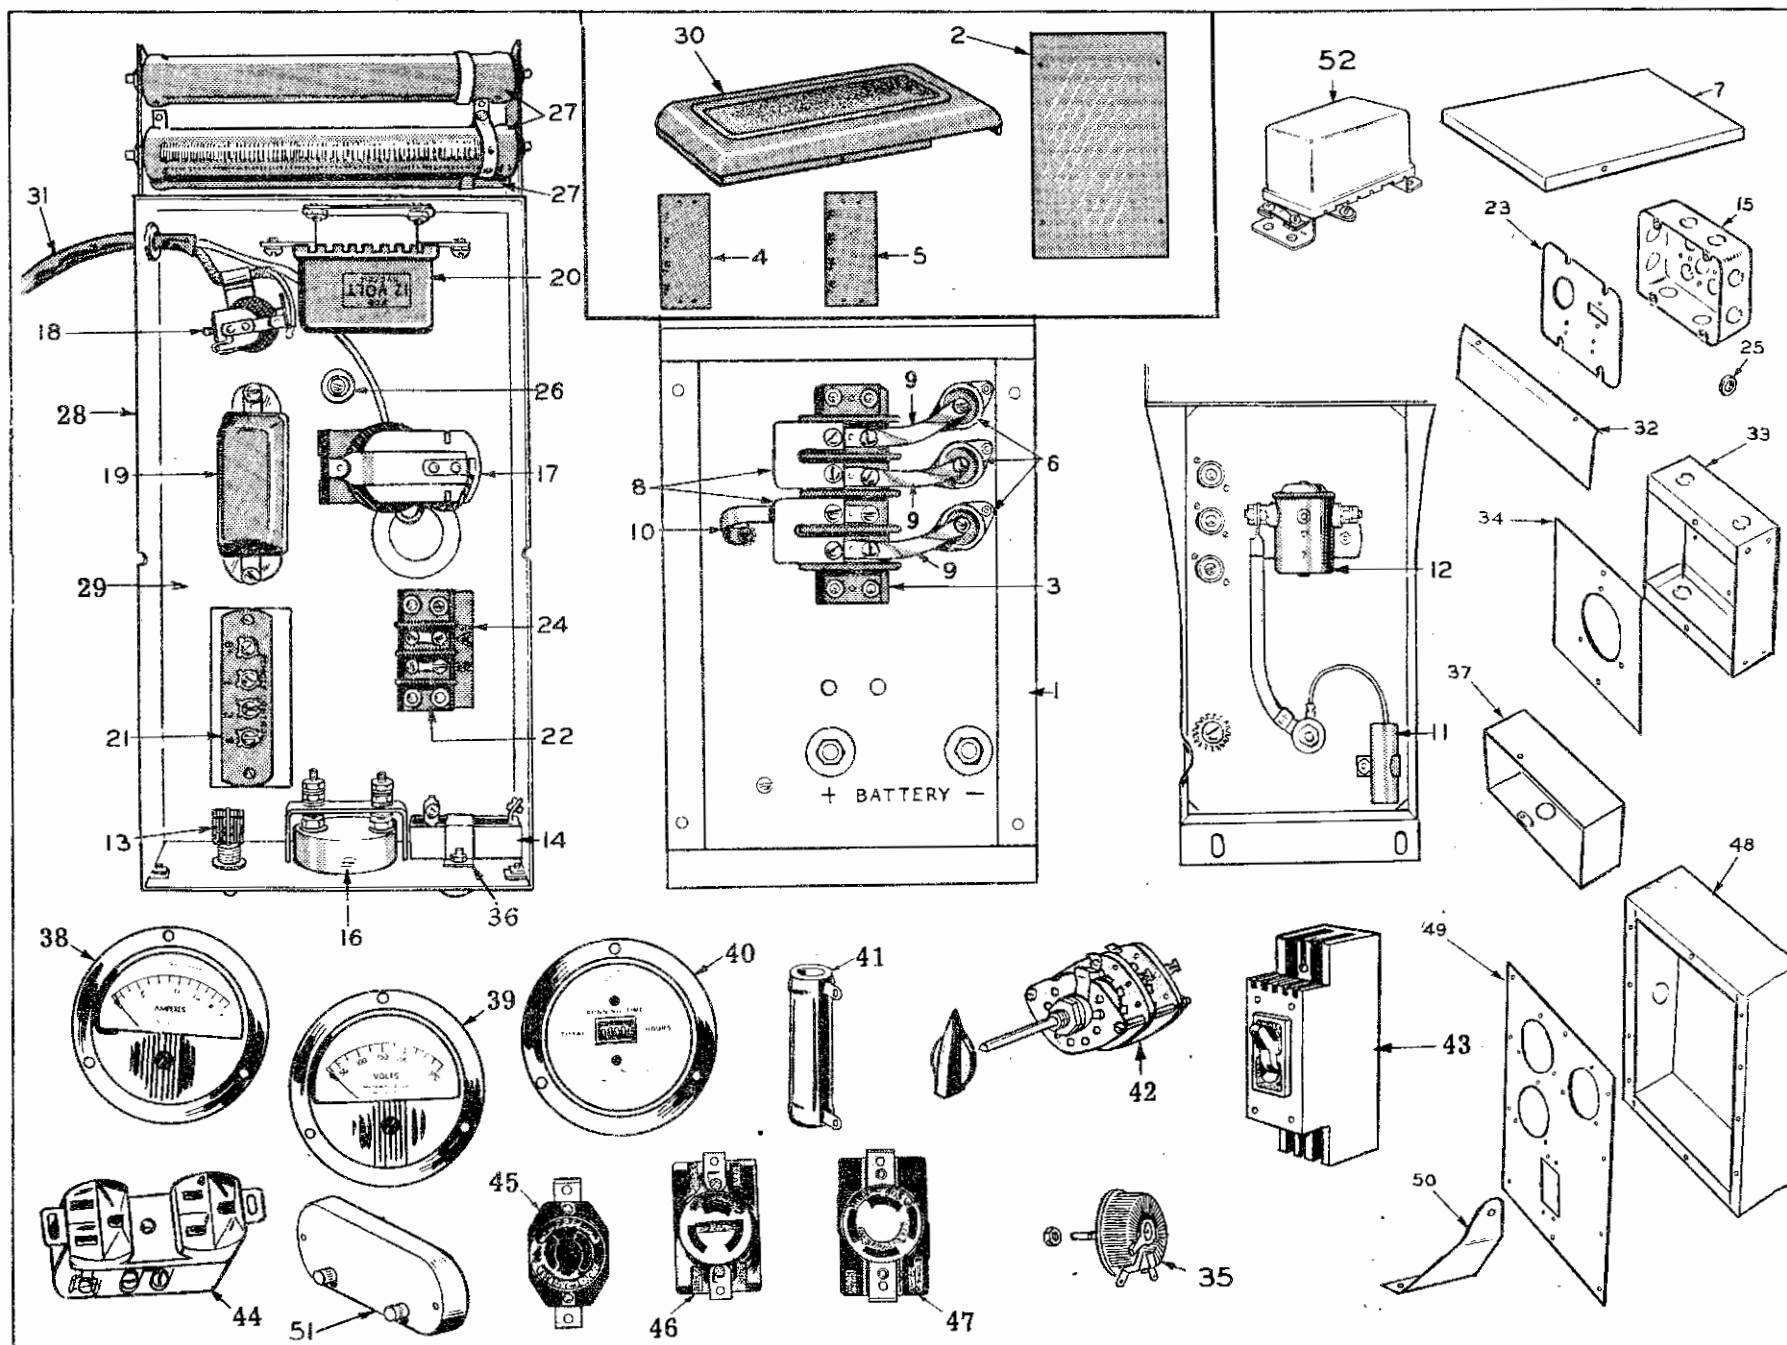

CONTROL GROUP

CONTROL GROUP

(Refer to Control Section for Part Numbers)

- | | |
|------------------------------|--------------------------------|
| 1. Box, Connection | 27. Resistor, Adjustable |
| 2. Cover, Connection Box | 28. Box, Control |
| 3. Block, Terminal | 29. Panel, Control |
| 4. Strip, Marker | 30. Cover, Control Box |
| 5. Strip, Marker | 31. Harness Assembly |
| 6. Condenser | 32. Plate, Baffle |
| 7. Cover, Receptacle Box | 33. Box, Voltmeter |
| 8. Jumper, Terminal Block | 34. Cover, Voltmeter Box |
| 9. Jumper, Terminal Block | 35. Rheostat |
| 10. Jumper, Terminal Block | 36. Bracket, Switch |
| 11. Condenser | 37. Box, Receptacle |
| 12. Solenoid, Start | 38. Ammeter, AC |
| 13. Switch, Selector | 39. Voltmeter, AC |
| 14. Switch, Start-Stop | 40. Meter, Running Time |
| 15. Box, Outlet | 41. Resistor, Fixed |
| 16. Ammeter, Charge | 42. Switch, Voltmeter Selector |
| 17. Relay, Start-Disconnect | 43. Breaker, Circuit |
| 18. Relay, Start or Stop | 44. Receptacle, Duplex |
| 19. Relay, Reverse Current | 45. Receptacle, 2 Wire |
| 20. Relay, Voltage Regulator | 46. Receptacle, 3 Wire |
| 21. Block, Terminal | 47. Receptacle, 4 Wire |
| 22. Block, Terminal | 48. Box, Switchboard |
| 23. Cover, Outlet Box | 49. Panel, Box |
| 24. Strip, Marker | 50. Bracket, Switchboard Mtg. |
| 25. Grommet | 51. Multiplier, Meter |
| 26. Resistor, Fixed | 52. Relay, Choke Disconnect |

BLANK PAGE

MODEL INDEX

MODEL INDEX SECTION

1

CONTAINS THE FOLLOWING-

Index for CW Series Units.

ALL DIAGONAL LINES (/) AND DASHES (-) APPEARING IN THE MODEL DESIGNATION MUST BE IGNORED IN THIS INDEX SECTION.

(Typical Model 10CW-3R/12C with dashes, and diagonal lines removed: 10CW3R12C).

Explanation of listing sequence:

Models are listed in alphabetical order.

Whenever the alphabetical order is disturbed by the appearance of a number, the number shall become the prime factor (numerically).

When the numbers have been exhausted by the appearance of a letter the same alphabetical sequence will again result, until the next number is apparent.

Follow the steps, in table, in proper order.

* - Model Designations beginning with a letter are Industrial Engines.

† - Model Designations beginning with a number are Generating Plants.
The number or numbers preceding the Series letters designate the wattage of the plant. 5 = 5,000 watt; 10 = 10,000 watt; 705 = 7,500 watt; etc.

EXHAUST IN THIS ORDER						
1ST STEP	2ND STEP	3RD STEP	4TH STEP	5TH STEP	6TH STEP	7TH STEP
C	W	245	A			
C	W	S	1	C		
5	C	W	1	R	248	C
5	C	W	3	M	509	A
5	C	W	3	R	12	A
5	C	W	4	R	1	E
5	C	W	5	M	1	C
6	C	W	54	R	1	E
8	C	W	3	R	31	B
9	C	W	3	R	30	A
10	C	W	3	M	316	A
10	C	W	3	R	1	C
10	C	W	3	R	55	A
705	C	W	1	R	31	E

4/26/67

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
CW/245A	1	5CW-3R/31B	3	5CW-3R/704B	6
CW/251A	1	5CW-3R/31C	3	5CW-3R/704E	6
CW/251B	1	5CW-3R/38A	3	5CW-3R/709B	6
CW/251C	1	5CW-3R/38B	3	5CW-3R/710B	6
CW-S/1C	1	5CW-3R/38C	3	5CW-3R/710E	6
CW-S/245E	1	5CW-3R/55C	3	5CW-3R/713B	6
CW-S/251E	1	5CW-3R/96B	3	5CW-3R/713C	6
CW-S/251J	61	5CW-3R/131C	3	5CW-3R/718B	6
5CW-1M/710C	1	5CW-3R/211A	3	5CW-3R/721B	6
5CW-1R/12C	1	5CW-3R/211B	3	5CW-3R/721C	6
5CW-1R/30B	1	5CW-3R/211C	3	5CW-3R/737B	6
5CW-1R/30C	1	5CW-3R/224A	3	5CW-3R/737C	6
5CW-1R/31B	1	5CW-3R/248A	3	5CW-3R/741B	6
5CW-1R/31C	1	5CW-3R/316A	3	5CW-3R/745B	6
5CW-1R/55B	1	5CW-3R/316B	3	5CW-3R/768C	6
5CW-1R/131C	1	5CW-3R/316C	3	5CW-3R/768E	6
5CW-1R/248C	1	5CW-3R/316E	3	5CW-3R/823B	6
5CW-1R/710C	1	5CW-3R/363A	4	5CW-3R/823C	6
5CW-1R/737C	1	5CW-3R/363C	4	5CW-3R/849C	6
5CW-1R/739B	1	5CW-3R/391A	4	5CW-3R/851C	6
5CW-1R/812B	1	5CW-3R/391B	4	5CW-3R/867C	6
5CW-1R/855C	1	5CW-3R/391C	58	5CW-3R/876C	6
5CW-2R/737C	2	5CW-3R/414C	4	5CW-3R/878C	7
5CW-3M/1A	2	5CW-3R/511A	4	5CW-3R/879C	7
5CW-3M/1B	2	5CW-3R/511B	4	5CW-3R/885C	7
5CW-3M/1C	2	5CW-3R/544A	4	5CW-3R/945C	7
5CW-3M/38A	2	5CW-3R/544B	4	5CW-3R/945E	7
5CW-3M/38C	2	5CW-3R/561A	4	5CW-3R/952C	7
5CW-3M/151C	2	5CW-3R/561E	4	5CW-3R/963C	7
5CW-3M/414A	2	5CW-3R/577A	4	5CW-3R/963E	7
5CW-3M/509A	2	5CW-3R/578A	4	5CW-3R/990C	7
5CW-3M/577C	2	5CW-3R/578B	4	5CW-3R/994C	7
5CW-3M/663B	2	5CW-3R/592A	4	5CW-3R/1002C	7
5CW-3M/663C	2	5CW-3R/599A	4	5CW-3R/1020C	7
5CW-3M/704C	2	5CW-3R/599B	4	5CW-3R/1037C	7
5CW-3M/860C	2	5CW-3R/616A	4	5CW-3R/1046C	7
5CW-3R/1A	2	5CW-3R/631A	5	5CW-3R/1101E	7
5CW-3R/1B	2	5CW-3R/631C	4	5CW-3R/1114E	7
5CW-3R/1C	2	5CW-3R/632A	5	5CW-3R30/12B	7
5CW-3R/1E	2	5CW-3R/641A	5	5CW-4M/1A	7
5CW-3R/12A	2	5CW-3R/641B	5	5CW-4M/1B	8
5CW-3R/12B	2	5CW-3R/655A	5	5CW-4M/1C	8
5CW-3R/12C	2	5CW-3R/658A	5	5CW-4R/1A	8
5CW-3R/12E	2	5CW-3R/663B	5	5CW-4R/1B	8
5CW-3R/23B	2	5CW-3R/663C	5	5CW-4R/1C	8
5CW-3R/23C	2	5CW-3R/663E	5	5CW-4R/1E	8
5CW-3R/30A	3	5CW-3R/665A	5	5CW-4R/12A	8
5CW-3R/30B	3	5CW-3R/665B	5	5CW-4R/12B	8
5CW-3R/30C	3	5CW-3R/665C	5	5CW-4R/12C	8
5CW-3R/31A	3	5CW-3R/695B	5	5CW-4R/30B	8

MODEL INDEX SECTION

3

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
5CW-4R/30C	8	5CW-57R/1A	10	8CW-52R/1J	27
5CW-4R/31B	8	5CW-57R/1C	10	8CW-52R/737F	27
5CW-4R/31E	8	5CW-99R/1089C	10	8CW-53M/1A	10
5CW-4R/38A	8	6CW-52A/316J	58	8CW-53M/1B	10
5CW-4R/55A	8	6CW-53R/1F	27	8CW-53M/1C	11
5CW-4R/131C	8	6CW-53R/1G	27	8CW-53R/1A	11
5CW-4R/316A	8	6CW-53R/1J	27	8CW-53R/1C	11
5CW-4R/316C	8	6CW-53R/1K	61	8CW-53R/1E	11
5CW-4R/316E	8	6CW-53R/1L	61	8CW-53R/1J	62
5CW-4R/663C	8	6CW-53R/316G	27	8CW-53R/1L	62
5CW-4R/737C	8	6CW-53R/316L	61	8CW-53R/316K	62
5CW-4R/793C	8	6CW-53R/663J	61	8CW-53R/663L	62
5CW-4R/851C	8	6CW-53R/703J	61	8CW-53R/704L	62
5CW-4R/893C	9	6CW-53R/704F	27	8CW-53R/737F	27
5CW-4R/925C	9	6CW-53R/710H	27	8CW-53R/742E	27
5CW-4R/931C	9	6CW-53R/737F	27	8CW-53R/1615G	27
5CW-4R/1084C	9	6CW-53R/1493F	27	8CW-54R/737E	11
5CW-5M/1B	9	6CW-53R/2150L	61	8CW-55R/1C	11
5CW-5M/1C	9	6CW-53R/2448J	62	8CW-55R/737F	28
5CW-5M/704C	9	6CW-53R17/663J	62	8CW-57M/1C	11
5CW-5R/1A	9	6CW-53R17/1320F	27	8CW-57R/1A	11
5CW-5R/1B	9	6CW-53R17/1320G	27	8CW-57R/1C	11
5CW-5R/1C	9	6CW-53R17/2612J	62	8CW-57R/1E	11
5CW-5R/12C	9	6CW-53R17/2612L	62	8CW-57R/1H	28
5CW-5R/31C	9	6CW-54R/1E	10	8CW-57R/1J	28
5CW-5R/322A	9	6CW-54R/1F	27	8CW-57R/1K	62
5CW-5R/511A	9	6CW-54R/1G	27	8CW-57R/1L	62
5CW-5R/704B	9	6CW-54R/1H	27	8CW-57R/703J	62
5CW-5R/737C	9	6CW-54R/1J	27	8CW-57R/703L	62
5CW-6R/1B	9	6CW-54R/1K	62	8CW-57R/704J	26
5CW-6R/12B	9	6CW-54R/1L	62	8CW-57R/704L	62
5CW-6R/886E	9	6CW-54R/1369H	27	8CW-57XR/1J	62
5CW-7R/1B	10	6CW-55R/1E	10	8CW-57XR/1L	62
5CW-8R/12C	10	6CW-55R/1J	27	8CW-57XR/2524J	63
5CW-53M/1A	10	6CW-55R/663J	62	8CW-57XR/2808K	63
5CW-53M/1B	10	6CW-55R/663L	62	8CW-99R/1253E	19
5CW-53M/1C	10	6CW-57R/1C	10	9CW-3R/30A	11
5CW-53R/1A	10	6CW-57R/1E	10	9CW-3R/30C	11
5CW-53R/1B	10	6CW-57R/1F	27	9CW-4R/30B	11
5CW-53R/1C	10	6CW-57R/1G	27	10CW-1R/30E	11
5CW-53R/316C	10	6CW-57R/1H	27	10CW-1R/30F	28
5CW-53R/737C	10	6CW-57R/1J	27	10CW-1R/30G	28
5CW-54M/1A	10	6CW-57R/1K	62	10CW-1R/30H	28
5CW-54M/1C	10	6CW-57R/1L	62	10CW-1R/30J	28
5CW-54R/1A	10	6CW-57R/737E	10	10CW-1R/30K	63
5CW-54R/1C	10	8CW-3R/31B	10	10CW-1R/30L	63
5CW-54R/316B	10	8CW-3R/31C	10	10CW-1R/31C	11
5CW-55R/1A	10	8CW-4R/31B	10	10CW-1R/31D	11
5CW-55R/1C	10	8CW-4R/31C	10	10CW-1R/31E	11
5CW-57M/1C	10	8CW-51R/2002H	27	10CW-1R/31F	28

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-1R/31G	28	10CW-3M/1A	11	10CW-3R/31L	65
10CW-1R/31H	28	10CW-3M/1B	11	10CW-3R/38A	12
10CW-1R/31J	28	10CW-3M/1C	11	10CW-3R/38B	12
10CW-1R/31K	63	10CW-3M/12A	11	10CW-3R/55A	12
10CW-1R/31L	63	10CW-3M/316A	11	10CW-3R/55C	12
10CW-1R/710F	28	10CW-3M/316C	11	10CW-3R/55E	19
10CW-1R/931F	28	10CW-3M/663C	11	10CW-3R/55H	32
10CW-1R/931L	63	10CW-3M/866C	12	10CW-3R/55J	65
10CW-1R/1114K	63	10CW-3R/1A	12	10CW-3R/85A	12
10CW-1R/1287J	63	10CW-3R/1B	12	10CW-3R/85B	12
10CW-1R/3628L	63	10CW-3R/1C	12	10CW-3R/96B	12
10CW-2R/862J	28	10CW-3R/1E	12	10CW-3R/96C	12
10CW-3E/1329E	28	10CW-3R/1F	32	10CW-3R/96E	12
10CW-3E/1511F	28	10CW-3R/1G	32	10CW-3R/96F	32
10CW-3E/1511G	28	10CW-3R/1H	32	10CW-3R/96G	33
10CW-3E/1511H	29	10CW-3R/1J	32	10CW-3R/96G	33
10CW-3E/1511J	26	10CW-3R/1K	65	10CW-3R/96J	33
10CW-3E/1597F	29	10CW-3R/1L	65	10CW-3R/96L	65
10CW-3E/1689G	29	10CW-3R/12A	12	10CW-3R/131D	12
10CW-3E/1775G	29	10CW-3R/12B	12	10CW-3R/131E	33
10CW-3E/1775H	29	10CW-3R/12C	12	10CW-3R/131F	33
10CW-3E/1775J	29	10CW-3R/12E	12	10CW-3R/131G	33
10CW-3E/1775K	63	10CW-3R/12F	32	10CW-3R/131H	33
10CW-3E/1776G	30	10CW-3R/12G	12	10CW-3R/131J	33
10CW-3E/1776H	30	10CW-3R/12H	32	10CW-3R/131K	65
10CW-3E/1776J	30	10CW-3R/12J	32	10CW-3R/131L	65
10CW-3E/1776K	64	10CW-3R/12K	65	10CW-3R/151E	19
10CW-3E/1813G	30	10CW-3R/12L	65	10CW-3R/151G	33
10CW-3E/1819G	30	10CW-3R/13C	12	10CW-3R/151H	33
10CW-3E/1824G	30	10CW-3R/13H	32	10CW-3R/211A	12
10CW-3E/1824H	31	10CW-3R/13J	32	10CW-3R/211B	13
10CW-3E/1824J	31	10CW-3R/13K	65	10CW-3R/211C	13
10CW-3E/1824K	64	10CW-3R/13L	65	10CW-3R/211E	33
10CW-3E/1837H	31	10CW-3R/14B	12	10CW-3R/211F	33
10CW-3E/1837J	58	10CW-3R/23C	12	10CW-3R/211G	33
10CW-3E/1841H	31	10CW-3R/30C	12	10CW-3R/211H	33
10CW-3E/1841J	58	10CW-3R/30E	12	10CW-3R/211J	33
10CW-3E/1850H	31	10CW-3R/30F	32	10CW-3R/211L	66
10CW-3E/1991H	32	10CW-3R/30G	32	10CW-3R/248A	13
10CW-3E/1991J	58	10CW-3R/30H	32	10CW-3R/248B	13
10CW-3E/2148J	26	10CW-3R/30J	32	10CW-3R/248E	13
10CW-3E/2203J	58	10CW-3R/30K	65	10CW-3R/248L	66
10CW-3E/2206J	64	10CW-3R/30L	65	10CW-3R/316A	13
10CW-3E/2206K	64	10CW-3R/31D	12	10CW-3R/316B	13
10CW-3E/2217J	58	10CW-3R/31E	12	10CW-3R/316C	13
10CW-3E/2220J	64	10CW-3R/31F	32	10CW-3R/316E	13
10CW-3E/2428K	64	10CW-3R/31G	32	10CW-3R/316F	33
10CW-3E/2537J	64	10CW-3R/31H	32	10CW-3R/316G	33
10CW-3E/2537K	65	10CW-3R/31J	32	10CW-3R/316H	33
10CW-3E/2770G	65	10CW-3R/31K	65	10CW-3R/316J	33

MODEL INDEX SECTION

5

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-3R/316K	66	10CW-3R/663F	34	10CW-3R/742F	34
10CW-3R/316L	66	10CW-3R/663G	34	10CW-3R/742J	67
10CW-3R/363C	13	10CW-3R/663H	34	10CW-3R/742L	67
10CW-3R/363E	26	10CW-3R/663J	34	10CW-3R/768B	15
10CW-3R/363F	33	10CW-3R/663K	66	10CW-3R/768C	15
10CW-3R/363J	66	10CW-3R/663L	66	10CW-3R/768E	35
10CW-3R/363K	66	10CW-3R/665B	14	10CW-3R/768F	35
10CW-3R/363L	66	10CW-3R/665C	14	10CW-3R/768J	67
10CW-3R/381C	13	10CW-3R/665E	14	10CW-3R/771B	15
10CW-3R/391C	13	10CW-3R/665F	34	10CW-3R/772B	15
10CW-3R/391F	33	10CW-3R/665G	34	10CW-3R/772F	35
10CW-3R/507E	33	10CW-3R/665H	34	10CW-3R/774B	15
10CW-3R/507J	66	10CW-3R/665J	67	10CW-3R/782B	15
10CW-3R/507K	66	10CW-3R/665K	67	10CW-3R/790B	15
10CW-3R/507L	66	10CW-3R/665L	67	10CW-3R/793B	15
10CW-3R/511A	13	10CW-3R/673B	14	10CW-3R/793H	35
10CW-3R/511B	13	10CW-3R/698B	14	10CW-3R/794B	16
10CW-3R/544A	13	10CW-3R/703B	14	10CW-3R/807K	67
10CW-3R/544B	13	10CW-3R/703C	14	10CW-3R/823C	16
10CW-3R/544C	13	10CW-3R/703E	14	10CW-3R/823E	35
10CW-3R/544E	33	10CW-3R/703F	34	10CW-3R/823J	67
10CW-3R/544H	33	10CW-3R/704B	15	10CW-3R/824B	16
10CW-3R/561A	13	10CW-3R/704E	15	10CW-3R/848E	35
10CW-3R/561C	13	10CW-3R/704F	34	10CW-3R/862C	16
10CW-3R/561E	13	10CW-3R/704G	34	10CW-3R/862E	16
10CW-3R/561L	66	10CW-3R/704H	34	10CW-3R/862J	35
10CW-3R/563B	13	10CW-3R/704J	34	10CW-3R/862L	67
10CW-3R/565A	13	10CW-3R/704L	67	10CW-3R/870C	16
10CW-3R-565B	13	10CW-3R/710B	15	10CW-3R/875C	16
10CW-3R-565E	33	10CW-3R/710C	15	10CW-3R/875E	16
10CW-3R/565J	66	10CW-3R/710E	26	10CW-3R/875F	35
10CW-3R/574A	14	10CW-3R/710F	34	10CW-3R/875J	26
10CW-3R/578A	14	10CW-3R/710H	34	10CW-3R/875K	67
10CW-3R/578B	14	10CW-3R/710J	58	10CW-3R/875L	67
10CW-3R/599B	14	10CW-3R/710L	67	10CW-3R/879F	35
10CW-3R/612A	14	10CW-3R/713E	34	10CW-3R/879H	35
10CW-3R/612B	14	10CW-3R/721B	15	10CW-3R/880C	16
10CW-3R/612J	66	10CW-3R/721C	15	10CW-3R/880E	16
10CW-3R/616A	14	10CW-3R/728B	15	10CW-3R/880F	35
10CW-3R/622E	14	10CW-3R/728C	15	10CW-3R/880J	35
10CW-3R/633A	14	10CW-3R/728E	18	10CW-3R/886J	59
10CW-3R/637E	14	10CW-3R/728F	34	10CW-3R/897C	16
10CW-3R/637F	34	10CW-3R/737B	15	10CW-3R/906C	16
10CW-3R/637J	66	10CW-3R/737C	15	10CW-3R/912C	16
10CW-3R/637L	66	10CW-3R/737E	15	10CW-3R/912L	67
10CW-3R/655A	14	10CW-3R/737F	34	10CW-3R/922C	16
10CW-3R/658C	14	10CW-3R/737J	34	10CW-3R/922E	16
10CW-3R/663B	14	10CW-3R/741C	15	10CW-3R/922F	35
10CW-3R/663C	14	10CW-3R/742B	15	10CW-3R/922G	35
10CW-3R/663E	14	10CW-3R/742C	15	10CW-3R/923B	16

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-3R/925C	16	10CW-3R/1163E	18	10CW-3R/1524F	38
10CW-3R/925F	35	10CW-3R/1163F	36	10CW-3R/1557F	38
10CW-3R/931C	16	10CW-3R/1163J	36	10CW-3R/1576F	38
10CW-3R/932C	16	10CW-3R/1194L	68	10CW-3R/1579F	38
10CW-3R/933J	59	10CW-3R/1195E	18	10CW-3R/1580F	38
10CW-3R/973C	16	10CW-3R/1203L	68	10CW-3R/1593F	38
10CW-3R/976C	17	10CW-3R/1210F	36	10CW-3R/1604J	69
10CW-3R/980C	17	10CW-3R/1227F	18	10CW-3R/1610F	38
10CW-3R/980E	35	10CW-3R/1233E	18	10CW-3R/1615F	38
10CW-3R/980F	35	10CW-3R/1233F	36	10CW-3R/1615G	39
10CW-3R/980G	35	10CW-3R/1233G	36	10CW-3R/1615H	39
10CW-3R/980H	35	10CW-3R/1233H	36	10CW-3R/1618F	39
10CW-3R/980J	36	10CW-3R/1233J	36	10CW-3R/1625F	39
10CW-3R/980L	67	10CW-3R/1233K	68	10CW-3R/1633F	39
10CW-3R/984C	17	10CW-3R/1233L	68	10CW-3R/1676F	39
10CW-3R/984E	17	10CW-3R/1237E	26	10CW-3R/1676G	39
10CW-3R/984J	67	10CW-3R/1243E	26	10CW-3R/1676H	39
10CW-3R/985C	17	10CW-3R/1243L	68	10CW-3R/1676J	39
10CW-3R/985J	67	10CW-3R/1271E	36	10CW-3R/1676L	69
10CW-3R/990F	36	10CW-3R/1271F	36	10CW-3R/1709F	39
10CW-3R/995C	17	10CW-3R/1278E	37	10CW-3R/1709L	69
10CW-3R/1000C	17	10CW-3R/1282E	37	10CW-3R/1717B	18
10CW-3R/1000E	36	10CW-3R/1282J	68	10CW-3R/1725G	39
10CW-3R/1000J	67	10CW-3R/1282L	68	10CW-3R/1738G	39
10CW-3R/1002E	17	10CW-3R/1287F	37	10CW-3R/1747G	39
10CW-3R/1002H	36	10CW-3R/1287L	68	10CW-3R/1791L	69
10CW-3R/1002J	68	10CW-3R/1307E	37	10CW-3R/1802G	61
10CW-3R/1003C	17	10CW-3R/1310E	37	10CW-3R/1835J	69
10CW-3R/1008C	17	10CW-3R/1310F	37	10CW-3R/1869L	69
10CW-3R/1021C	17	10CW-3R/1310H	37	10CW-3R/1871L	69
10CW-3R/1021E	17	10CW-3R/1310L	68	10CW-3R/1892H	39
10CW-3R/1021F	36	10CW-3R/1322E	37	10CW-3R/1898H	39
10CW-3R/1021H	36	10CW-3R/1338G	37	10CW-3R/1898J	59
10CW-3R/1021J	36	10CW-3R/1338H	37	10CW-3R/1903H	39
10CW-3R/1033C	17	10CW-3R/1351E	37	10CW-3R/1905H	39
10CW-3R/1054C	17	10CW-3R/1362H	37	10CW-3R/1905J	39
10CW-3R/1064C	17	10CW-3R/1369E	37	10CW-3R/1905L	69
10CW-3R/1064E	17	10CW-3R/1369G	37	10CW-3R/1907H	40
10CW-3R/1064F	36	10CW-3R/1371F	37	10CW-3R/1943H	40
10CW-3R/1067C	17	10CW-3R/1371H	38	10CW-3R/1970H	40
10CW-3R/1095C	17	10CW-3R/1371J	38	10CW-3R/1970J	59
10CW-3R/1102H	36	10CW-3R/1371L	68	10CW-3R/1970K	69
10CW-3R/1105C	18	10CW-3R/1377J	68	10CW-3R/1970L	69
10CW-3R/1105E	18	10CW-3R/1402E	38	10CW-3R/1981H	40
10CW-3R/1114K	68	10CW-3R/1417E	38	10CW-3R/1982J	59
10CW-3R/1114L	68	10CW-3R/1427E	38	10CW-3R/1982L	69
10CW-3R/1116E	18	10CW-3R/1428F	38	10CW-3R/1983H	40
10CW-3R/1119E	18	10CW-3R/1475F	38	10CW-3R/1983J	69
10CW-3R/1127E	18	10CW-3R/1477F	38	10CW-3R/1983K	69
10CW-3R/1142E	18	10CW-3R/1492F	38	10CW-3R/1983L	69

MODEL INDEX SECTION

7

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-3R/1990H	40	10CW-3R/2684J	72	10CW-4R/1E	19
10CW-3R/2010H	40	10CW-3R/2708J	72	10CW-4R/1F	41
10CW-3R/2033J	40	10CW-3R/2748J	73	10CW-4R/1G	41
10CW-3R/2042J	40	10CW-3R/2748L	73	10CW-4R/1H	41
10CW-3R/2025J	40	10CW-3R/2814K	73	10CW-4R/1J	41
10CW-3R/2052L	69	10CW-3R/2816K	73	10CW-4R/1K	77
10CW-3R/2055J	40	10CW-3R/2834K	73	10CW-4R/1L	77
10CW-3R/2055K	69	10CW-3R/2834L	73	10CW-4R/12A	19
10CW-3R/2055L	70	10CW-3R/2891L	73	10CW-4R/12B	19
10CW-3R/2061K	70	10CW-3R/2898L	73	10CW-4R/12C	19
10CW-3R/2062J	40	10CW-3R/2904L	74	10CW-4R/12E	19
10CW-3R/2067J	40	10CW-3R/2920L	74	10CW-4R/12F	41
10CW-3R/2076J	40	10CW-3R/2993L	74	10CW-4R/12G	41
10CW-3R/2079J	40	10CW-3R/3002L	74	10CW-4R/12H	41
10CW-3R/2080J	40	10CW-3R/3096L	74	10CW-4R/12J	41
10CW-3R/2088J	41	10CW-3R/3192L	74	10CW-4R/12K	77
10CW-3R/2134J	58	10CW-3R/3204L	74	10CW-4R/12L	77
10CW-3R/2150J	59	10CW-3R/3277L	74	10CW-4R/13J	41
10CW-3R/2150L	70	10CW-3R/3307L	75	10CW-4R/13K	77
10CW-3R/2155L	70	10CW-3R/3334L	75	10CW-4R/13L	77
10CW-3R/2161J	26	10CW-3R/3351L	75	10CW-4R/30E	19
10CW-3R/2165J	26	10CW-3R/3353L	75	10CW-4R/30F	41
10CW-3R/2165L	70	10CW-3R/3357L	75	10CW-4R/30G	41
10CW-3R/2170J	59	10CW-3R/3396L	75	10CW-4R/30H	41
10CW-3R/2182J	59	10CW-3R/3603L	75	10CW-4R/30J	41
10CW-3R/2182L	70	10CW-3R/3628L	75	10CW-4R/30K	77
10CW-3R/2189J	59	10CW-3R/3706L	75	10CW-4R/30L	77
10CW-3R/2205L	70	10CW-3R/3746L	76	10CW-4R/31C	19
10CW-3R/2213J	70	10CW-3R/3757L	76	10CW-4R/31D	19
10CW-3R/2225J	70	10CW-3R/3770L	76	10CW-4R/31E	19
10CW-3R/2258J	70	10CW-3R131/248L	76	10CW-4R/31F	42
10CW-3R/2288J	70	10CW-3R30/1154E	18	10CW-4R/31G	42
10CW-3R/2306J	70	10CW-3R30/1154F	41	10CW-4R/31H	42
10CW-3R/2308J	71	10CW-3R30/1154G	41	10CW-4R/31J	42
10CW-3R/2341J	71	10CW-3R30/1154H	41	10CW-4R/31K	77
10CW-3R/2341L	71	10CW-3R30/1154J	41	10CW-4R/31L	77
10CW-3R/2392J	71	10CW-3R30/1154K	76	10CW-4R/38B	19
10CW-3R/2415J	71	10CW-3R131/3300L	76	10CW-4R/38C	19
10CW-3R/2427J	71	10CW-4E/1689J	59	10CW-4R/55A	19
10CW-3R/2430J	71	10CW-4E/1775J	76	10CW-4R/55J	42
10CW-3R/2475J	71	10CW-4E/3503L	76	10CW-4R/96E	19
10CW-3R/2482J	71	10CW-4E/3685L	77	10CW-4R/96G	42
10CW-3R/2503J	71	10CW-4M/1A	18	10CW-4R/96H	42
10CW-3R/2507J	72	10CW-4M/1B	18	10CW-4R/96J	77
10CW-3R/2518L	72	10CW-4M/1C	18	10CW-4R/96L	77
10CW-3R/2519J	72	10CW-4M/38A	18	10CW-4R/131E	19
10CW-3R/2524L	72	10CW-4M/710C	18	10CW-4R/131F	42
10CW-3R/2582J	72	10CW-4R/1A	18	10CW-4R/131G	42
10CW-3R/2652L	72	10CW-4R/1B	18	10CW-4R/131H	42
10CW-3R/2660J	72	10CW-4R/1C	18	10CW-4R/131J	42

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-4R/131K	77	10CW-4R/742E	20	10CW-4R/1360E	43
10CW-4R/131L	77	10CW-4R/768C	20	10CW-4R/1360F	48
10CW-4R/134C	19	10CW-4R/768E	21	10CW-4R/1362E	43
10CW-4R/151E	19	10CW-4R/768F	42	10CW-4R/1369E	44
10CW-4R/151H	42	10CW-4R/768G	42	10CW-4R/1369F	44
10CW-4R/248E	19	10CW-4R/768H	42	10CW-4R/1369H	44
10CW-4R/316A	19	10CW-4R/768J	42	10CW-4R/1369J	78
10CW-4R/316B	19	10CW-4R/768K	78	10CW-4R/1371L	78
10CW-4R/316C	19	10CW-4R/768L	78	10CW-4R/1380E	44
10CW-4R/316E	19	10CW-4R/780E	42	10CW-4R/1400E	44
10CW-4R/316F	42	10CW-4R/793F	43	10CW-4R/1400J	59
10CW-4R/316H	42	10CW-4R/793H	43	10CW-4R/1428F	44
10CW-4R/316J	77	10CW-4R/800B	21	10CW-4R/1454F	44
10CW-4R/316L	77	10CW-4R/800C	21	10CW-4R/1455H	44
10CW-4R/363C	20	10CW-4R/807B	21	10CW-4R/1600F	44
10CW-4R/363E	20	10CW-4R/823E	21	10CW-4R/1747J	44
10CW-4R/363J	77	10CW-4R/823G	43	10CW-4R/1791J	78
10CW-4R/391A	20	10CW-4R/839C	21	10CW-4R/1835H	44
10CW-4R/414C	20	10CW-4R/848C	21	10CW-4R/1835J	58
10CW-4R/507B	20	10CW-4R/851C	21	10CW-4R/1849H	44
10CW-4R/507J	42	10CW-4R/874C	21	10CW-4R/1862H	44
10CW-4R/637B	20	10CW-4R/874E	21	10CW-4R/1869J	78
10CW-4R/637L	78	10CW-4R/874F	43	10CW-4R/1871J	78
10CW-4R/663B	20	10CW-4R/875L	78	10CW-4R/1871L	78
10CW-4R/663C	20	10CW-4R/886C	21	10CW-4R/1883H	44
10CW-4R/663E	59	10CW-4R/893C	21	10CW-4R/1888H	44
10CW-4R/663F	42	10CW-4R/925C	21	10CW-4R/1969L	79
10CW-4R/663H	57	10CW-4R/925E	21	10CW-4R/1982H	45
10CW-4R/663J	57	10CW-4R/933C	21	10CW-4R/1982J	79
10CW-4R/663L	78	10CW-4R/933F	43	10CW-4R/1982L	79
10CW-4R/703C	20	10CW-4R/989C	21	10CW-4R/1983J	79
10CW-4R/704B	20	10CW-4R/989L	78	10CW-4R/1983L	79
10CW-4R/704C	20	10CW-4R/994E	43	10CW-4R/2011H	45
10CW-4R/704J	42	10CW-4R/994F	43	10CW-4R/2011J	26
10CW-4R/704L	78	10CW-4R/1000F	43	10CW-4R/2027H	45
10CW-4R/708B	20	10CW-4R/1000G	43	10CW-4R/2027J	79
10CW-4R/710B	20	10CW-4R/1021E	43	10CW-4R/2036J	45
10CW-4R/710C	20	10CW-4R/1021F	43	10CW-4R/2040J	45
10CW-4R/710E	20	10CW-4R/1021H	43	10CW-4R/2053J	45
10CW-4R/710F	42	10CW-4R/1062C	21	10CW-4R/2095J	45
10CW-4R/710H	42	10CW-4R/1062J	78	10CW-4R/2136J	58
10CW-4R/710J	78	10CW-4R/1078C	21	10CW-4R/2146H	79
10CW-4R/734B	20	10CW-4R/1091C	22	10CW-4R/2146J	59
10CW-4R/737B	20	10CW-4R/1142E	22	10CW-4R/2195J	60
10CW-4R/737C	20	10CW-4R/1158E	22	10CW-4R/2205J	79
10CW-4R/737E	20	10CW-4R/1158J	78	10CW-4R/2336J	79
10CW-4R/737J	78	10CW-4R/1166E	22	10CW-4R/2430J	79
10CW-4R/737L	78	10CW-4R/1210E	22	10CW-4R/2526J	79
10CW-4R/741C	20	10CW-4R/1233E	43	10CW-4R/2547J	79
10CW-4R/742C	20	10CW-4R/1287E	43	10CW-4R/2568J	80

MODEL INDEX SECTION

9

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-4R/2677J	80	10CW-5R/1C	22	10CW-5R/897C	23
10CW-4R/2677K	80	10CW-5R/1E	22	10CW-5R/904C	23
10CW-4R/2677L	80	10CW-5R/1F	46	10CW-5R/931F	47
10CW-4R/2782K	80	10CW-5R/1G	46	10CW-5R/1263E	47
10CW-4R/2866L	80	10CW-5R/1H	46	10CW-5R/2028J	47
10CW-4R/3176L	80	10CW-5R/1J	46	10CW-5R/2182J	83
10CW-4R/3278L	80	10CW-5R/1K	82	10CW-5R/2524J	83
10CW-4R/3605L	80	10CW-5R/1L	82	10CW-6M/1C	23
10CW-4R31/1149E	22	10CW-5R/12A	22	10CW-6R/1A	23
10CW-4R131/3300L	80	10CW-5R/12C	22	10CW-6R/1B	23
10CW-4XR/1L	80	10CW-5R/12E	22	10CW-6R/1C	23
10CW-4XR/12L	80	10CW-5R/12F	46	10CW-6R/1E	23
10CW-4XR/13J	80	10CW-5R/12G	46	10CW-6R/1F	47
10CW-4XR/13K	80	10CW-5R/12H	46	10CW-6R/1G	47
10CW-4XR/13L	80	10CW-5R/12J	46	10CW-6R/1H	47
10CW-4XR/31L	80	10CW-5R/12K	83	10CW-6R/1J	47
10CW-4XR/316L	81	10CW-5R/12L	83	10CW-6R/1K	83
10CW-4XR/703J	45	10CW-5R/13A	22	10CW-6R/1L	83
10CW-4XR/704L	81	10CW-5R/13J	46	10CW-6R/12B	23
10CW-4XR/768L	81	10CW-5R/13L	83	10CW-6R/12L	23
10CW-4XR/886L	81	10CW-5R/31J	46	10CW-6R/12E	23
10CW-4XR/1002L	81	10CW-5R/31L	83	10CW-6R/12F	47
10CW-4XR/1982J	81	10CW-5R/38C	22	10CW-6R/12J	60
10CW-4XR/2103L	81	10CW-5R/316A	22	10CW-6R/13H	47
10CW-4XR/2645J	81	10CW-5R/316C	22	10CW-6R/13J	83
10CW-4XR/2645L	81	10CW-5R/316E	22	10CW-6R/31J	83
10CW-5DE/2275J	81	10CW-5R/316J	46	10CW-6R/38A	23
10CW-5DE/2348J	81	10CW-5R/363C	22	10CW-6R/38C	23
10CW-5DE/2428J	82	10CW-5R/381E	22	10CW-6R/211E	47
10CW-5DE/2585J	82	10CW-5R/653A	22	10CW-6R/316A	23
10CW-5DE/2585K	82	10CW-5R/663C	22	10CW-6R/316C	23
10CW-5DE/2585L	82	10CW-5R/663F	26	10CW-6R/316H	47
10CW-5DR/12J	82	10CW-5R/663F	46	10CW-6R/644A	23
10CW-5DR/793H	45	10CW-5R/663G	46	10CW-6R/663E	47
10CW-5DR/1002J	45	10CW-5R/663J	47	10CW-6R/663H	47
10CW-5DR/1807G	45	10CW-5R/703C	22	10CW-6R/704E	23
10CW-5DR/1849H	46	10CW-5R/703F	47	10CW-6R/710J	60
10CW-5DR/1849J	60	10CW-5R/703G	47	10CW-6R/768B	23
10CW-5DR/1970H	46	10CW-5R/703J	83	10CW-6R/768J	83
10CW-5DR/2146J	82	10CW-5R/703L	83	10CW-6R/875E	47
10CW-5DR/2278J	82	10CW-5R/704C	22	10CW-6R/990L	83
10CW-5DR/2296J	82	10CW-5R/710C	23	10CW-6R/1158G	47
10CW-5DR/2572J	82	10CW-5R/710E	23	10CW-6R/1259E	19
10CW-5DR/3169L	82	10CW-5R/710J	60	10CW-6R/2255J	83
10CW-5E/1776H	46	10CW-5R/710L	83	10CW-6R/2400J	83
10CW-5E/1828H	46	10CW-5R/722B	23	10CW-7R/1E	23
10CW-5M/1B	22	10CW-5R/737E	47	10CW-7R/1F	47
10CW-5M/1C	22	10CW-5R/768B	23	10CW-7R/1G	47
10CW-5R/1A	22	10CW-5R/768E	23	10CW-7R/1H	48
10CW-5R/1B	22	10CW-5R/890E	23	10CW-7R/1J	48

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
10CW-7R/1K	83	705CW-3R/1J	49	705CW-3R/316F	50
10CW-7R/1L	83	705CW-3R/1K	84	705CW-3R/316G	50
10CW-7R/663H	48	705CW-3R/1L	84	705CW-3R/316H	50
10CW-8R/1C	23	705CW-3R/12C	24	705CW-3R/316J	50
10CW-8R/1F	48	705CW-3R/12E	24	705CW-3R/316K	85
10CW-8R/663G	48	705CW-3R/12F	49	705CW-3R/316L	85
10CW-8R/737C	23	705CW-3R/12G	49	705CW-3R/363E	24
10CW-99R/986C	23	705CW-3R/12H	49	705CW-3R/363J	85
10CW-99R/2223J	84	705CW-3R/12J	49	705CW-3R/507J	26
10CW-150R/1C	23	705CW-3R/12K	84	705CW-3R/544C	24
10CW-150R/1E	23	705CW-3R/12L	84	705CW-3R/561E	24
10CW-150R/1F	48	705CW-3R/13H	49	705CW-3R/663C	24
10CW-150R/1G	48	705CW-3R/13J	49	705CW-3R/663E	26
10CW-150R/1H	48	705CW-3R/13L	84	705CW-3R/663F	50
10CW-150R/1J	48	705CW-3R/23C	24	705CW-3R/663L	85
10CW-150R/1K	84	705CW-3R/30D	24	705CW-3R/703E	24
10CW-150R/96C	24	705CW-3R/30E	24	705CW-3R/703H	50
10CW-150R/625C	24	705CW-3R/30F	49	705CW-3R/703K	85
10CW-150R/663C	24	705CW-3R/30G	49	705CW-3R/704E	24
10CW-150R/663E	48	705CW-3R/30H	50	705CW-3R/704J	85
10CW-150R/663F	48	705CW-3R/30J	50	705CW-3R/710E	24
10CW-150R/663G	48	705CW-3R/30K	84	705CW-3R/713E	51
10CW-150R/663J	60	705CW-3R/30L	84	705CW-3R/728E	51
10CW-150R/663K	84	705CW-3R/31E	24	705CW-3R/737E	51
10CW-150R/704C	24	705CW-3R/31F	50	705CW-3R/737F	51
10CW-150R/1454K	84	705CW-3R/31G	50	705CW-3R/737H	51
10CW-210R/1497F	48	705CW-3R/31H	50	705CW-3R/741L	85
705CW-1R/30F	48	705CW-3R/31J	50	705CW-3R/768H	51
705CW-1R/31D	24	705CW-3R/31K	84	705CW-3R/807J	51
705CW-1R/31E	24	705CW-3R/31L	84	705CW-3R/862J	85
705CW-1R/31F	48	705CW-3R/55E	19	705CW-3R/875J	85
705CW-1R/31G	48	705CW-3R/96G	50	705CW-3R/880F	51
705CW-1R/31H	48	705CW-3R/96H	50	705CW-3R/886L	85
705CW-1R/31J	49	705CW-3R/96J	85	705CW-3R/922C	24
705CW-1R/31K	84	705CW-3R/131E	50	705CW-3R/922G	51
705CW-1R/31L	84	705CW-3R/131F	50	705CW-3R/925F	51
705CW-1R/131F	49	705CW-3R/131G	50	705CW-3R/933F	51
705CW-1R/710F	49	705CW-3R/131H	50	705CW-3R/980F	51
705CW-1R/737F	49	705CW-3R/131J	50	705CW-3R/980G	51
705CW-2R/862J	49	705CW-3R/131K	85	705CW-3R/980H	51
705CW-3E/1991H	49	705CW-3R/131L	85	705CW-3R/980J	60
705CW-3E/1991J	49	705CW-3R/151E	50	705CW-3R/1021F	51
705CW-3E/2148J	60	705CW-3R/17/1E	50	705CW-3R/1101E	25
705CW-3E/2203J	60	705CW-3R/17/1F	50	705CW-3R/1101G	51
705CW-3E/2428J	84	705CW-3R/17/1J	60	705CW-3R/1173E	25
705CW-3R/1C	24	705CW-3R/17/1K	85	705CW-3R/1174E	25
705CW-3R/1E	24	705CW-3R/17/1L	85	705CW-3R/1182E	25
705CW-3R/1F	49	705CW-3R/211E	50	705CW-3R/1203J	85
705CW-3R/1G	49	705CW-3R/316C	24	705CW-3R/1233E	52
705CW-3R/1H	49	705CW-3R/316E	24	705CW-3R/1233G	52

MODEL INDEX SECTION

11

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
705CW-3R/1233H	52	705CW-3R/3383L	87	705CW-4R/30L	88
705CW-3R/1233J	85	705CW-3R17/507G	53	705CW-4R/31E	54
705CW-3R/1271G	52	705CW-3R17/663G	53	705CW-4R/31F	54
705CW-3R/1369L	85	705CW-3R17/663H	53	705CW-4R/31G	55
705CW-3R/1371E	52	705CW-3R17/663J	53	705CW-4R/31H	55
705CW-3R/1371F	52	705CW-3R17/663L	87	705CW-4R/31J	55
705CW-3R/1395E	52	705CW-3R17/704H	53	705CW-4R/31K	88
705CW-3R/1428E	52	705CW-3R17/704J	61	705CW-4R/31L	88
705CW-3R/1440E	52	705CW-3R17/704K	87	705CW-4R/55K	88
705CW-3R/1454F	52	705CW-3R17/704L	87	705CW-4R/131E	55
705CW-3R/1454J	61	705CW-3R17/737F	53	705CW-4R/131F	55
705CW-3R/1456F	52	705CW-3R17/737J	53	705CW-4R/131G	55
705CW-3R/1514F	52	705CW-3R17/784B	25	705CW-4R/131H	55
705CW-3R/1550F	52	705CW-3R17/784E	25	705CW-4R/131J	55
705CW-3R/1593H	52	705CW-3R17/817B	25	705CW-4R/316E	61
705CW-3R/1593J	86	705CW-3R17/943C	25	705CW-4R/316F	55
705CW-3R/1604F	52	705CW-3R17/1320E	53	705CW-4R/316H	55
705CW-3R/1665F	53	705CW-3R17/1492J	87	705CW-4R/316L	88
705CW-3R/1709J	53	705CW-3R17/1492L	88	705CW-4R/363G	55
705CW-3R17/17A	25	705CW-3R30/1154E	25	705CW-4R/507J	55
705CW-3R17/17B	25	705CW-3R30/1154F	53	705CW-4R/663J	61
705CW-3R17/17C	25	705CW-3R30/1154G	54	705CW-4R/663L	88
705CW-3R/1869L	86	705CW-3R30/1154H	54	705CW-4R/665F	55
705CW-3R/1886H	53	705CW-3R30/1154J	54	705CW-4R/703H	55
705CW-3R/1953H	53	705CW-3R30/1154K	88	705CW-4R/704J	55
705CW-3R/1982H	53	705CW-3R131/3300L	88	705CW-4R/710E	55
705CW-3R/1983J	61	705CW-4R/1C	25	705CW-4R/737E	26
705CW-3R/2000H	53	705CW-4R/1E	25	705CW-4R/737J	88
705CW-3R/2055J	86	705CW-4R/1F	54	705CW-4R/737L	88
705CW-3R/2089J	53	705CW-4R/1G	54	705CW-4R/1095E	25
705CW-3R/2091J	53	705CW-4R/1H	54	705CW-4R/1203E	25
705CW-3R/2146J	61	705CW-4R/1J	54	705CW-4R/1233J	55
705CW-3R/2146L	86	705CW-4R/1K	88	705CW-4R/1304E	55
705CW-3R/2155J	86	705CW-4R/1L	88	705CW-4R/1369F	55
705CW-3R/2182J	61	705CW-4R/12E	25	705CW-4R/1369H	55
705CW-3R/2182L	86	705CW-4R/12F	54	705CW-4R/1372E	55
705CW-3R/2205J	86	705CW-4R/12H	54	705CW-4R/1706F	55
705CW-3R/2341L	86	705CW-4R/12J	54	705CW-4R/1728G	55
705CW-3R/2489J	86	705CW-4R/12K	88	705CW-4R/1835G	55
705CW-3R/2508J	86	705CW-4R/12L	88	705CW-4R/1847H	56
705CW-3R/2524J	86	705CW-4R/13J	54	705CW-4R/1871H	56
705CW-3R/2524L	86	705CW-4R/13K	88	705CW-4R/1930H	56
705CW-3R/2576J	87	705CW-4R/13L	88	705CW-4R/1930J	89
705CW-3R/2628J	87	705CW-4R/30D	25	705CW-4R/1982J	56
705CW-3R/2652J	87	705CW-4R/30E	25	705CW-4R/1982K	89
705CW-3R/2753K	87	705CW-4R/30F	54	705CW-4R/2155J	61
705CW-3R/2814K	87	705CW-4R/30G	54	705CW-4R/2557J	89
705CW-3R/2914L	87	705CW-4R/30H	54	705CW-4R/3469L	89
705CW-3R/2939L	87	705CW-4R/30J	54	705CW-4R30/710L	89
705CW-3R/3182L	87	705CW-4R/30K	88	705CW-4R31/1149F	56

MODEL INDEX SECTION

PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE	PLANT MODEL	MODEL DATA PAGE
705CW-4R131/710J	89				
705CW-4R131/710L	89				
705CW-4R31/2089J	61				
705CW-4R131/3300L	89				
705CW-4XR/1J	89				
705CW-4XR/13J	89				
705CW-5DE/2276J	89				
705CW-5DR/1L	89				
705CW-5DR/3512L	89				
705CW-5E/1818H	56				
705CW-5E/3270L	89				
705CW-5E/3691L	90				
705CW-5R/1E	25				
705CW-5R/1F	56				
705CW-5R/1G	56				
705CW-5R/1H	56				
705CW-5R/1J	56				
705CW-5R/1K	90				
705CW-5R/1L	90				
705CW-5R/13J	56				
705CW-5R/507F	56				
705CW-5R/710E	25				
705CW-5R/710G	56				
705CW-5R/737E	25				
705CW-5R/1233H	56				
705CW-5R/1316E	56				
705CW-5R/1651F	56				
705CW-5R/1895H	56				
705CW-5R/2028J	56				
705CW-5R/2028L	90				
705CW-5R/2798K	90				
705CW-5R/3043L	90				
705CW-6E/1818H	57				
705CW-6E/2037J	57				
705CW-6R/1E	26				
705CW-6R/1F	57				
705CW-6R/1G	57				
705CW-6R/1H	57				
705CW-6R/1J	57				
705CW-6R/1K	90				
705CW-6R/1L	90				
705CW-6R/12H	57				
705CW-6R/13H	57				
705CW-6R/316C	26				
705CW-6R/704F	57				
705CW-6R/704H	57				
705CW-6R/1484F	57				
705CW-7R/663E	26				

MODEL DATA SECTION

MODEL DATA SECTION

CONTAINS THE FOLLOWING-

DATA FOR CW SERIES UNITS.

PARTS LISTED UNDER EACH MODEL IN THIS SECTION, HEADED ENGINE, CONTROL AND GENERATOR ARE SPECIAL PARTS FOR THIS MODEL ONLY AND SHOULD BE USED IN PLACE OF STANDARD PARTS. OTHER PARTS ARE STANDARD AND SHOULD BE SELECTED FROM THE APPROPRIATE ENGINE, CONTROL OR GENERATOR SECTIONS. PARTS LISTED IN THIS SECTION WITH AN ASTERISK (*) PRECEEDING THE PART NUMBER HAVE ALSO BEEN LISTED IN THE ACCESSORY SECTION WITH ALL COMPONENT PARTS.

NOTE: Models are not necessarily listed in any specific order on model data pages.

BLANK PAGE

MODEL DATA SECTION

1

CW/245A (Industrial Engine)
Engine See ★ Below

CW/251A (Industrial Engine)
Engine See ★ Below

CW/251B (Industrial Engine)
Engine See ★ Below

CW/251C
Engine See ★ Below

CW-S/1C (Industrial Engine)
Engine See ★ Below

101E261	Flywheel Housing
104D192	Flywheel
154D315	Intake Manifold
520A311	Carburetor Mounting Stud (2)
*141C564	Carburetor Assy.
134D459	Cylinder Shroud-R.H.
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable - L.H.
520A524	Stub Shaft Stud
123A353	Breather Valve and Gasket
232A200	Stub Shaft Centering Washer
805-30	Stub Shaft Bolt
515-70	Stub Shaft Key
190C170	Stub Shaft

CW-S/251E (Industrial Engine)
Engine See ★ Below

CW-S/245E (Industrial Engine)
Engine See ★ Below

5CW-1M/710C
Generator - 5CW3N1B
Control - Code 6 (W.D. 602B123)
Code 65 (W.D. 615B89)
Engine - Spec C—M

5CW-1R/12C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas-Gasoline Model

5CW-1R/30B
Generator - 5CW3C1B
Control - Code 27 (W.D. 611C142)
Engine - Spec B—R
*159A472 Reservoir Tank Assy
(Cont. next column)

5CW-1R/30B (Cont.)

415K3	Underground Fuel Tank - (55 Gallon) Includes Fittings
415K7	Fuel Line - 5/16" x 25 Feet - Includes Elbows and Connector
415K45	Fuel Line - 3/8" x 25 Feet - Includes Elbows and Connector

5CW-1R/30C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallons) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Feet - Includes Elbows & Connector
415K45 Fuel Line - 3/8" x 25 Feet - Includes Elbows & Connector

5CW-1R/31B
Generator - 5CW3C1B
Control - Code 27 (W.D. 611C142)
Engine - Spec B—R
Gas Fuel Model

5CW-1R/31C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas Fuel Model

5CW-1R/55B
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
Gas-Gasoline Model
309B10 Low Oil Pressure Cut off Switch

5CW-1R/131C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas Fuel Model

5CW-1R/248C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater

5CW-1R/710C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 65 (W.D. 615B89)
Engine - Spec C—R

5CW-1R/737C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 65 (W.D. 615B89)
Engine - Spec C—R
*405K918 Housing, Tank and Skid Kit

5CW-1R/739B
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
302-68 Running Time Meter
Engine - Spec B—R
*405D914 Housing Assembly
*416K334 Battery and Fuel Tank Rack Kit
*403K319 Mounting Skid and Muffler Kit

5CW-1R/812B
Generator - 5CW3C1B
Control - Code 39 (W.D. 611C165)
Code 71 (W.D. 615B112)
Engine - Spec B—R
*405K918 Housing, Tank and Skid Kit
316P1 Floodlight Assembly - W/Bulb (4)
407B60 Floodlight Standard (4)
407A59 Floodlight Reinforcement Plate (8) 1/4 x 4" x 4"
407A16 Floodlight Standard Adjustment Pin (4)

5CW-1R/855C
Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
323-140 Receptacle - 20 Amp - Rear Connected (2)
(Cont. next page)

* - Refer to Accessory Section for Component Parts.

★ - Standard Engine Parts have been listed in the Engine Section with these symbols preceding the parts description:

▲ - Use ONLY on Industrial Engine

† - Use ALSO on Industrial Engine

MODEL DATA SECTION

5CW-1R/855C (Cont.)

323-184 Duplex Receptacle -
15 Amp - Ground-
ed (2)

W.D. 615B89

Engine - Spec C—R

*405K918 Housing, Tank
and Skid Kit

5CW-2R/737C

Generator - 5CW3C1B

Control - Code 22 (W.D. 611C121)

Code 66 (W.D. 615B91)

Engine - Spec C—R

*405K918 Housing, Tank and
Skid Kit

5CW-3M/1A

Generator - 5CW3N1A

Control - Code 1 (W.D. 602B110)

Engine - Spec A—M

5CW-3M/1B

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

Engine - Spec B—M

5CW-3M/1C

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

Engine - Spec C—M

5CW-3M/38A

Generator - 5CW3N1A

Control - Code 1 (W.D. 602B110)

332-142 Ground Terminal

Engine - Spec A—M

5CW-3M/38C

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

332-142 Ground Terminal

Engine - Spec C—M

5CW-3M/151C

Generator - 5CW3N1B

Control - Code 22 (W.D. 611C121)

Engine - Spec C—M

*403K319 Mounting Skid and
Muffler Kit

5CW-3M/414A

Generator - 5CW3N1A

Control - Code 5 (W.D. 602B121)

Engine - Spec A—M

309-10 Low Oil Pressure
Cut off Switch

313-18 Stop Button

5CW-3M/509A

Generator - 5CW3N1A

Control - Code 1 (W.D. 602B110)

Engine - Spec A—M

155-389 Muffler

403C289 Mounting Skid

159C65 Fuel Tank

159B20 Fuel Tank Cap

149A425 Fuel Filter

Mounting Bracket

159A64 Fuel Tank Mounting

Band (2)

501-5 Tank to Filter

Fuel Line

501-4 Filter to Connector

Fuel Line

149-12 Fuel Filter

332A453 Hand Crank Clip

159A132 Fuel Gauge Hole
Cover

5CW-3M/577C

Generator - 5CW/48

Control - Code 6 (W.D. 602B123)

Engine - Spec C—M

167-125 Spark Plug (2)

167A1263 Sp. Plug Cable - Short

167A1264 Sp. Plug Cable - Long

5CW-3M/663B

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

Engine - Spec B—M

*405K918 Housing, Tank and
Skid Kit

5CW-3M/663C

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

Engine - Spec C—M

*405K918 Housing, Tank and
Skid Kit

5CW-3M/704C

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

Engine - Spec C—M

*403K319 Mounting Skid and
Muffler Kit

*159K478 Fuel Tank Kit

*416K334 Battery and Fuel
Tank Rack Kit (Less
Holdown Frame,
Studs and Cable)

5CW-3M/860C

Generator - 5CW3N1B

Control - Code 6 (W.D. 602B123)

332-142 Ground Terminal

Engine - Spec C—M

5CW-3M/860C (Cont.)

*403K319 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

*159K478 Fuel Tank Kit

5CW-3R/1A

Generator - 5CW3C1A

Control - Code 12 (W.D. 611C90)

Engine - Spec A—R

5CW-3R/1B

Generator - 5CW3C1B

Control - Code 22 (W.D. 611C121)

Engine - Spec B—R

5CW-3R/1C

Generator - 5CW3C1B

Control - Code 22 (W.D. 611C121)

Engine - Spec C—R

5CW-3R/1E

Generator - 5CW3C1C

Control - Code 50 (W.D. 611C204)

Engine - Spec E—R

5CW-3R/12A

Generator - 5CW3C1A

Control - Code 12 (W.D. 611C90)

Engine - Spec A—R

Gas-Gasoline Model

5CW-3R/12B

Generator - 5CW3C1B

Control - Code 22 (W.D. 611C121)

Engine - Spec B—R

Gas-Gasoline Model

5CW-3R/12C

Generator - 5CW3C1B

Control - Code 22 (W.D. 611C121)

Engine - Spec C—R

Gas-Gasoline Model

5CW-3R/12E

Generator - 5CW3C1C

Control - Code 50 (W.D. 611C204)

Engine - Spec E—R

Gas-Gasoline Model

5CW-3R/23B

Generator - 5CW/50

Control - Code 22 (W.D. 611C121)

Engine - Spec B—R

5CW-3R/23C

Generator - 5CW/50

Control - Code 22 (W.D. 611C121)

Engine - Spec C—R

* - Refer to Accessory Section for Component Parts.

(Cont.
next column)

MODEL DATA SECTION

3

5CW-3R/30A

Generator - 5CW3C1A
Control - Code 23 (W.D. 611C123)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness
Assembly

Engine - Spec A—R

*159A424 Reservoir Tank Assy

415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows and Con-
nector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows and Con-
nector

5CW-3R/30B

Generator - 5CW3C1B
Control - Code 29 (W.D. 611C145)
Engine - Spec B—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows and Con-
nector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

5CW-3R/30C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

5CW-3R/31A

Generator - 5CW3C1A
Control - Code 23 (W.D. 611C123)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness
Assembly

Engine - Spec A—R
Gas Fuel Model

5CW-3R/31B

Generator - 5CW3C1B
Control - Code 29 (W.D. 611C145)
Engine - Spec B—R
Gas Fuel Model

5CW-3R/31C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas Fuel Model

5CW-3R/38A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
332-142 Ground Terminal
Engine - Spec A—R

5CW-3R/38B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
332-142 Ground Terminal
Engine - Spec B—R

5CW-3R/38C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
332-142 Ground Terminal
Engine - Spec C—R

5CW-3R/55C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas-Gasoline Model
309B10 Low-Oil Pressure
Cut off Switch

5CW-3R/96B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/131C

Generator - 5CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas Fuel Model

5CW-3R/211A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas-Gasoline Model
Oil Base Heater

5CW-3R/211B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Gas-Gasoline Model
Oil Base Heater

5CW-3R/211C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas-Gasoline Model
Oil Base Heater

5CW-3R/224A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
332-142 Ground Terminal
Engine - Spec A—R
Gas-Gasoline Model

5CW-3R/248A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R
Oil Base Heater

5CW-3R/316A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R
*159A424 Reservoir Tank
Assembly

5CW-3R/316B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
*159A472 Reservoir Tank
Assembly

5CW-3R/316C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
*159A472 Reservoir Tank
Assembly

5CW-3R/316E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank
Assembly

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

5CW-3R/363A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R
Oil Base Heater
*159A424 Reservoir Tank Assy.

5CW-3R/363C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

5CW-3R/391A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R
*159A424 Reservoir Tank Assy.
309-10 Low Oil Pressure
Cut off Switch

5CW-3R/391B

Generator - 5CW3C1A
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/414C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/511A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
332-142 Ground Terminal
Engine - Spec A—R
309-10 Low Oil Pressure
Cut off Switch

5CW-3R/511B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
332-142 Ground Terminal
Engine - Spec B—R
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/544A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Code 75 (W.D. 625A23)
Engine - Spec A—R
(Cont. next column)

5CW-3R/544A (Cont.)

Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/544B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/561A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Oil Base Heater
*159A424 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/561E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/577A

Generator - 5CW/29
Control - Code 17 (W.D. 611C109)
Engine - Spec A—R
167-125 Spark Plugs (2)
167A1263 Sp. Plug Lead - Right
167A1264 Sp. Plug Lead - Left

5CW-3R/578A

Generator - 5CW3C1A
Control - Code 25 (W.D. 611C135)
Engine - Spec A—R

5CW-3R/578B

Generator - 5CW3C1B
Control - Code 31 (W.D. 611C148)
Engine - Spec B—R

5CW-3R/592A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
332-142 Ground Terminal
Engine - Spec A—R
(Cont. next column)

5CW-3R/592A (Cont.)

*159A424 Reservoir Tank
Assembly
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/599A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
332-142 Ground Terminal
Engine - Spec A—R
Gas-Gasoline Model
309-10 Low Oil Pressure
Cut off Switch

5CW-3R/599B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
332-142 Ground Terminal
Engine - Spec B—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/616A

Generator - 5CW/34
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left
416A36 Battery Cables
(2) 42"
416A326 Battery Jumper
Cable - 13"

5CW-3R/631C

Generator - 5CW/55
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

5

5CW-3R/631A

Generator - 5CW/37
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left
416A36 Battery Cables (2)
42"
416A326 Battery Jumper
Cable - 13"
150K580 Governor Booster
Kit
150A471 Governor Booster
External Spring
150A376 Governor Booster
Internal Spring
Bracket
154A266 Intake Manifold
150A425 Booster to Manifold
Gasket Ring
150A475 Governor Booster
Internal Spring
150A495 Booster External
Spring Bracket
150K582 Governor Booster
Diaphragm Kit
150A666 Governor Booster
Diaphragm Plate
150A668 Governor Booster
Diaphragm Plate
Gasket

5CW-3R/632A

Generator - 3CW/38
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable -
Right
167A1264 Spark Plug Cable -
Left
416A36 Battery Cable
(2) 42"
416A326 Battery Jumper
Cable - 13"

(Cont. next column)

5CW-3R/632A (Cont.)

150K580 Governor Booster
Kit
150A471 Governor Booster
External Spring
150A376 Governor Booster
Internal Spring
Bracket
154A266 Intake Manifold
150A425 Governor Booster
to Manifold Gas-
ket Ring
150A475 Governor Booster
Internal Spring
150A495 Governor Booster
External Spring
Bracket
150K582 Governor Booster
Diaphragm Kit
150A666 Governor Booster
Diaphragm Plate
150A668 Governor Booster
Diaphragm Plate
Gasket

5CW-3R/641A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R
Gas Fuel Model
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/641B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
Gas Fuel Model
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left

5CW-3R/655A

Generator - 5CW3C1A
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec A—R
*405K918 Housing, Tank and
Skid Kit
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left

5CW-3R/658A

Generator - 5CW3C1A
Control - Code 12 (W.D. 611C90)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas-Gasoline Model
Oil Base Heater
*159A424 Reservoir Tank Assy.

5CW-3R/663B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/663C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/663E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

5CW-3R/665A

Generator - 5CW3C1A
Control - Code 22 (W.D. 611C121)
Engine - Spec A—R
Gas Fuel Model
309B10 Low Oil Pressure
Cut off Switch
167-125 Spark Plugs (2)
167A1263 Spark Plug Cable -
Right
167A1264 Spark Plug Cable -
Left

5CW-3R/665B

Generator - 5CW/49
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R

5CW-3R/665C

Generator - 5CW/49
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R

5CW-3R/695B

Generator - 5CW3C1B
Control - Code 31 (W.D. 611C148)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

5CW-3R/704B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

5CW-3R/704E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

5CW-3R/709B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*403K319 Mounting Skid and
Muffler Kit

5CW-3R/710B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec B—R

5CW-3R/710E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R

5CW-3R/713B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Gas Fuel Model
Oil Base Heater

5CW-3R/713C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas Fuel Model
Oil Base Heater

5CW-3R/718B

Generator - 5CW/44
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R
Gas-Gasoline Model

5CW-3R/721B

Generator - 5CW3C1B
Control - Code 31 (W.D. 611C148)
Code 68 (W.D. 615B95)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit
309B10 Low Oil Pressure
Cut off Switch
*410D211 Trailer Assembly

5CW-3R/721C

Generator - 5CW3C1B
Control - Code 31 (W.D. 611C148)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit
309B10 Low Oil Pressure
Cut off Switch
*410D211 Trailer Assembly

5CW-3R/737B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/737C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/741B

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 68 (W.D. 615B95)
Engine - Spec B—R
*159A472 Reservoir Tank Assy.

5CW-3R/745B

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Code 64 (W.D. 615B87)
Engine - Spec B—R

5CW-3R/768C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Gas-Gasoline Model

5CW-3R/768E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
Gas-Gasoline Model

5CW-3R/823B

Generator - 5CW3C1B
Control - Code 40 (W.D. 611C167)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/823C

Generator - 5CW3C1B
Control - Code 40 (W.D. 611C167)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/849C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas-Gasoline Model
Oil Base Heater
*405D914 Housing Assembly
*403K319 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit

5CW-3R/851C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Oil Base Heater

5CW-3R/867C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Engine - Spec C—R

5CW-3R/876C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

7

5CW-3R/878C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec C—R
102A279 Oil Base Opening
Cover
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

5CW-3R/879C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 75 (W.D. 625A23)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
*159A472 Reservoir Tank Assy.

5CW-3R/885C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Engine - Spec C—R
Gas-Gasoline Model

5CW-3R/945C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/945E

Generator - 5CW3C1C
Control - Code 60 (W.D. 611C242)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

5CW-3R/952C

Generator - 5CW3C1B
Control - Code 45 (W.D. 611C191)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-3R/963C

Generator - 5CW/57
Control - Code 49 (W.D. 611C201)
Engine - Spec C—R
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

5CW-3R/963E

Generator - 5CW/68
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

5CW-3R/990C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
*405D914 Housing Assembly
*403K319 Mounting Skid and
Muffler Kit

5CW-3R/994C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit (Less
Fuel Tank & Bands)
159C551 Fuel Tank
159B552 Fuel Tank Band (2)

5CW-3R/1002C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
Gas-Gasoline Model
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

5CW-3R/1020C

Generator - 5CW3C1B
Control - Code 38 (W.D. 611C161)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

5CW-3R/1037C

Generator - 5CW3C1B
Control - Code 57 (W.D. 611D219)
Engine - Spec C—R
Gas-Gasoline Model
Oil Base Heater
(Cont. next column)

5CW-3R/1037C (Cont.)

309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
309P77 High Air Temper-
ature Cut off
Switch

5CW-3R/1046C

Generator - 5CW3C1B
Control - Code 58 (W.D. 611C221)
332-142 Ground Terminal
Engine - Spec C—R

5CW-3R/1101E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing
Scroll
309P77 High Air Temper-
ature Cut off
Switch

5CW-3R/1114E

Generator - 5CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
*405K1078 Housing, Tank and
Skid Kit

5CW-3R30/12B

Generator - 5CW3C1B
Control - Code 29 (W.D. 611C145)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness
Assembly
Engine - Spec B—R
Gas-Gasoline Model

5CW-4M/1A

Generator - 5CW4N1A
Control - Code 2 (W.D. 602B111)
Engine - Spec A—M

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

5CW-4M/1B

Generator - 5CW4N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec B—M

5CW-4M/1C

Generator - 5CW4N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec C—M

5CW-4R/1A

Generator - 5CW4C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R

5CW-4R/1B

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R

5CW-4R/1C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R

5CW-4R/1E

Generator - 5CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

5CW-4R/12A

Generator - 5CW4C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R
Gas-Gasoline Model

5CW-4R/12B

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R
Gas-Gasoline Model

5CW-4R/12C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
Gas-Gasoline Model

5CW-4R/30B

Generator - 5CW4C1B
Control - Code 30 (W.D. 611C146)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness
Assembly
Engine - Spec B—R
*159A472 Reservoir Tank Assy.
(Cont. next column)

5CW-4R/30B (Cont.)

415K3 Underground Fuel
Tank (55 Gallon)
Includes Fitting
415K7 Fuel Line - 5/16"
x 25 Feet - Includes
Elbows and Con-
nector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows and Con-
nector

5CW-4R/30C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows & Connector

5CW-4R/31B

Generator - 5CW4C1B
Control - Code 30 (W.D. 611C146)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness
Assembly
Engine - Spec B—R
Gas Fuel Model

5CW-4R/31E

Generator - 5CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas Fuel Model

5CW-4R/38A

Generator - 5CW4C1A
Control - Code 13 (W.D. 611C91)
332-142 Ground Terminal
Engine - Spec A—R

5CW-4R/55A

Generator - 5CW4C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

5CW-4R/131C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
Gas Fuel Model

5CW-4R/316A

Generator - 5CW4C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R
*159A424 Reservoir Tank Assy.

5CW-4R/316C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

5CW-4R/316E

Generator - 5CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

5CW-4R/663C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-4R/737C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-4R/793C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 75 (W.D. 625A23)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

5CW-4R/851C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 75 (W.D. 625A23)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Oil Base Heater

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

9

5CW-4R/893C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
R. T. F. Exhaust Tube
309B10 Low Oil Pressure
Cut off Switch
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

5CW-4R/925C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
*405D914 Housing Assembly
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

5CW-4R/931C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 69 (W.D. 615B103)
Engine - Spec C—R
Gas-Gasoline Model

5CW-4R/1084C

Generator - 5CW4C1B
Control - Code 20 (W.D. 611C119)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
*405K918 Housing, Tank and
Skid Kit

5CW-5M/1B

Generator - 5CW5N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec B—M

5CW-5M/1C

Generator - 5CW5N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec C—M

5CW-5M/704C

Generator - 5CW5N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec C—M
*159K478 Fuel Tank Kit
(Cont. next column)

5CW-5M/704C (Cont.)

*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit (Less
Hold-down Frame,
Studs & Cable)

5CW-5R/1A

Generator - 5CW5C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R

5CW-5R/1B

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R

5CW-5R/1C

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R

5CW-5R/12C

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
Gas-Gasoline Model

5CW-5R/31C

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
Gas Fuel Model

5CW-5R/322A

Generator - 5CW5C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R
510-46 Governor Fly Ball (6)
150K580 Governor Booster Kit
150A471 Governor Booster
External Spring
150A376 Governor Booster
Internal Spring
Bracket
150A425 Governor Booster to
Manifold Gasket
Ring
150A475 Governor Booster
Internal Spring
150A495 Governor Booster
External Spring
Bracket
150K582 Governor Booster
Diaphragm Kit
150A666 Governor Booster
Diaphragm Plate

(Cont. next column)

5CW-5R/322A (Cont.)

150A668 Governor Booster
Diaphragm Plate
Gasket
154A266 Intake Manifold

5CW-5R/511A

Generator - 5CW5C1A
Control - Code 13 (W.D. 611C91)
332-142 Ground Terminal
Engine - Spec A—R
309A10 Low Oil Pressure
Cut off Switch

5CW-5R/704B

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

5CW-5R/737C

Generator - 5CW5C1B
Control - Code 20 (W.D. 611C119)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

5CW-6R/1B

Generator - 5CW6C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R

5CW-6R/12B

Generator - 5CW6C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R
Gas-Gasoline Model

5CW-6R/886E

Generator - 5CW6C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Oil Base Heater
155B77 Exhaust Muffler
155B185 Exhaust Tube
155A294 Exhaust Tube
Wall Plate
*405K1078 Housing, Tank and
Skid Kit (Less
Muffler)

R. T. F. - Refer to Factory. Include Model and Serial Number of Unit.

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

5CW-7R/1B

Generator - 5CW7C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R

5CW-8R/12C

Generator - 5CW8C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
Gas-Gasoline Model

5CW-53M/1A

Generator - 5CW53N1B
Control - Code 1 (W.D. 602B110)
Engine - Spec A—M

5CW-53M/1B

Generator - 5CW53N1B
Control - Code 6 (W.D. 602B123)
Engine - Spec B—M

5CW-53M/1C

Generator - 5CW53N1B
Control - Code 6 (W.D. 602B123)
Engine - Spec C—M

5CW-53R/1A

Generator - 5CW53C1A
Control - Code 12 (W.D. 611C90)
Engine - Spec A—R

5CW-53R/1B

Generator - 5CW53C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec B—R

5CW-53R/1C

Generator - 5CW53C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R

5CW-53R/316C

Generator - 5CW53C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

5CW-53R/737C

Generator - 5CW53C1B
Control - Code 22 (W.D. 611C121)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and Skid Kit

5CW-54M/1A

Generator - 5CW54N1A
Control - Code 2 (W.D. 602B111)
Engine - Spec A—M

5CW-54M/1C

Generator - 5CW54N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec C—M

5CW-54R/1A

Generator - 5CW54C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R

5CW-54R/1C

Generator - 5CW54C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R

5CW-54R/316B

Generator - 5CW54C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec B—R
*159A472 Reservoir Tank Assy.

5CW-55R/1A

Generator - 5CW55C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R

5CW-55R/1C

Generator - 5CW55C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R

5CW-57M/1C

Generator - 5CW57N1B
Control - Code 7 (W.D. 602B124)
Engine - Spec C—M

5CW-57R/1A

Generator - 5CW57C1A
Control - Code 13 (W.D. 611C91)
Engine - Spec A—R

5CW-57R/1C

Generator - 5CW57C1B
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R

5CW-99R/1089C

Generator - 5CW/64
Control - Code 20 (W.D. 611C119)
Engine - Spec C—R
*405K918 Housing, Tank and Skid Kit

6CW-54R/1E

Generator - 6CW54C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

6CW-55R/1E

Generator - 6CW55C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

6CW-57R/1C

Generator - 6CW57C1C
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

6CW-57R/1E

Generator - 6CW57C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

6CW-57R/737E

Generator - 6CW57C1C
Control - Code 51 (W.D. 611C208)
Code 73 (W.D. 615B137)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

8CW-3R/31B

Generator - 10CW3C1B
Control - Code 28 (W.D. 611C144)
Engine - Spec B—R
Gas Fuel Model

8CW-3R/31C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas Fuel Model

8CW-4R/31B

Generator - 10CW4C1B
Control - Code 33 (W.D. 611C151)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness Assembly
Engine - Spec B—R
Gas Fuel Model

8CW-4R/31C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
Gas Fuel Model

8CW-53M/1A

Generator - 8CW53N1B
Control - Code 3 (W.D. 602B112)
Engine - Spec A—M

8CW-53M/1B

Generator - 8CW53N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec B—M

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

11

8CW-53M/1C

Generator - 8CW53N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec C—M

8CW-53R/1A

Generator - 8CW53C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R

8CW-53R/1C

Generator - 10CW53C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

8CW-53R/1E

Generator - 8CW53C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

8CW-54R/737E

Generator - 8CW54C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

8CW-55R/1C

Generator - 8CW55C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

8CW-57M/1C

Generator - 8CW/58
Control - Code 9 (W.D. 602B126)
Engine - Spec C—M

8CW-57R/1A

Generator - 8CW57C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R

8CW-57R/1C

Generator - 8CW57C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

8CW-57R/1E

Generator - 8CW57C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

9CW-3R/30A

Generator - 10CW3C1A
Control - Code 15 (W.D. 611C103)
301B497 Voltmeter Box
301A498 Voltmeter Box Cover
338A131 Voltmeter Harness Assembly

9CW-3R/30A (Cont.)

Engine - Spec A—R
*159A424 Reservoir Tank Assy.

9CW-3R/30C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Feet - Includes Elbows & Connector
415K45 Fuel Line - 3/8" x 25 Feet - Includes Elbows & Connector

9CW-4R/30B

Generator - 10CW4C1B
Control - Code 33 (W.D. 611C151)
301B497 Voltmeter Box
301B498 Voltmeter Box Cover
338A131 Voltmeter Harness Assembly
Engine - Spec B—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Feet - Includes Elbows and Connector
415K45 Fuel Line - 3/8" x 25 Feet - Includes Elbows and Connector

10CW-1R/30E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Feet - Includes Elbows and Connector
415K45 Fuel Line - 3/8" x 25 Feet - Includes Elbows and Connector

10CW-1R/31C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas Fuel Model

10CW-1R/31D

Generator - 10CW3C1B
Control - Code 55 (W.D. 611C214)
Engine - Spec C—R
Gas Fuel Model

10CW-1R/31E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

10CW-3M/1A

Generator - 10CW3N1A
Control - Code 3 (W.D. 602B112)
Engine - Spec A—M

10CW-3M/1B

Generator - 10CW3N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec B—M

10CW-3M/1C

Generator - 10CW3N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec C—M

10CW-3M/12A

Generator - 10CW3N1A
Control - Code 3 (W.D. 602B112)
Engine - Spec A—M
Gas-Gasoline Model
*141C500 Carburetor
503-159 Regulator to Carburetor Hose

10CW-3M/316A

Generator - 10CW3N1A
Control - Code 3 (W.D. 602B112)
Engine - Spec A—M
*159A424 Reservoir Tank Assy.

10CW-3M/316C

Generator - 10CW3N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec C—M
*159A472 Reservoir Tank Assy.

10CW-3M/663C

Generator - 10CW3N1B
Control - Code 8 (W.D. 602B125)
Engine - Spec C—M
*405K918 Housing, Tank and Skid Kit (Less Hold-down Frame and Studs)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3M/866C

Generator - 10CW3N1B
Control - Code 10 (W.D. 602B142)
Engine - Spec C—M
*403K319 Mounting Skid and
Muffler Kit

10CW-3R/1A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R

10CW-3R/1B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R

10CW-3R/1C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

10CW-3R/1E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

10CW-3R/12A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R
Gas-Gasoline Model

10CW-3R/12B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
Gas-Gasoline Model

10CW-3R/12C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model

10CW-3R/12E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model

10CW-3R/13C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas Fuel Model

10CW-3R/14B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R

10CW-3R/23C

Generator - 10CW/59
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

10CW-3R/30C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows and
Connector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows and
Connector

10CW-3R/30E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbow & Connector

10CW-3R/31D

Generator - 10CW3C1B
Control - Code 55 (W.D. 611C214)
Engine - Spec C—R
Gas Fuel Model

10CW-3R/31E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

10CW-3R/38A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611B89)
332-142 Ground Terminal
Engine - Spec A—R

10CW-3R38B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
332-142 Ground Terminal
Engine - Spec B—R

10CW-3R/55A

Generator - 10CW3C1A
Control - Code 15 (W.D. 611C103)
Engine - Spec A—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/55C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/85A

Generator - 10CW3C1A
Control - Code 18 (W.D. 611C111)
Engine - Spec A—R
167-125 Spark Plugs (2)
167A1263 Sp. Plug Lead - R.H.
167A1264 Sp. Plug Lead - L.H.

10CW-3R/85B

Generator 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

10CW-3R/96B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/96C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/96E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/131D

Generator - 10CW3C1B
Control - Code 55 (W.D. 611C214)
Engine - Spec C—R
Gas Fuel Model

10CW-3R/211A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
(Cont. next page)

MODEL DATA SECTION

13

10CW-3R/211A (Cont.)

Code 75 (W.D. 625A23)
Engine - Spec A — R
Gas-Gasoline Model
Oil Base Heater

10CW-3R/211B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B — R
Gas-Gasoline Model
Oil Base Heater

10CW-3R/211C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C — R
Gas-Gasoline Model
Oil Base Heater

10CW-3R/248A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Code 75 (W.D. 625A23)
Engine - Spec A — R
Oil Base Heater

10CW-3R/248B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B — R
Oil Base Heater

10CW-3R/248E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E — R
Oil Base Heater

10CW-3R/316A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A — R
*159A424 Reservoir Tank Assy.

10CW-3R/316B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B — R
*159A472 Reservoir Tank Assy.

10CW-3R/316C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C — R
*159A472 Reservoir Tank Assy.

10CW-3R/316E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E — R
*159A472 Reservoir Tank Assy.

10CW-3R/363C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C — R
Oil Base Heater
*159A472 Reservoir Tank Assy.

10CW-3R/381C

Generator - 10CW3C1B
Control - Code 48 (W.D. 611C198)
Engine - Spec C — R

10CW-3R/391C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C — R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/511A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
332-142 Ground Terminal
Engine - Spec A — R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/511B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
332-142 Ground Terminal
Engine - Spec B — R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/544A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Code 75 (W.D. 625A23)
Engine - Spec A — R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/544B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B — R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/544C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C — R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/561A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Code 75 (W.D. 625A23)
Engine - Spec A — R
Oil Base Heater
*159A424 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/561C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C — R
Oil Base Heater
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/561E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E — R
Oil Base Heater
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/563B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B — R
Oil Base Heater

10CW-3R/565A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Code 75 (W.D. 625A23)
Engine - Spec A — R
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/565B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B — R
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/574A

Generator - 10CW3C1A
Control - Code 15 (W.D. 611C103)
Engine - Spec A—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/578A

Generator - 10CW3C1A
Control - Code 16 (W.D. 611C108)
Engine - Spec A—R

10CW-3R/578B

Generator - 10CW3C1B
Control - Code 34 (W.D. 611C153)
Engine - Spec B—R

10CW-3R/599B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
332-142 Ground Terminal
Engine - Spec B—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/612A

Generator-10CW3C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R
Gas-Gasoline Model
102A279 Oil Base
Opening Cover

10CW-3R/612B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
Gas-Gasoline Model
102A279 Oil Base
Opening Cover

10CW-3R/616A

Generator - 10CW/33
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec A—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cnt off Switch
167-125 Spark Plugs (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
416A36 Battery Cable (2)42"
416A326 Battery Jumper
Cable - 13"

10CW-3R/622E

Generator - 10CW3C1C
Control - Code 61 (W.D. 611C246)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
149P554 Electric Fuel Pump
307B310 Fuel Pump Solenoid
Valve

10CW-3R/633A

Generator - 10CW3C1A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R
*405K918 Housing, Tank and
Skid Kit
*410K200 Trailer Kit

10CW-3R/637E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
Gas-Gasoline Model

10CW-3R/655A

Generator - 10CW3C1A
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec A—R
*405K918 Housing, Tank and
Skid Kit
167-125 Spark Plugs (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

10CW-3R/658C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas-Gasoline Model
Oil Base Heater
*159A472 Reservoir Tank Assy.

10CW-3R/663B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/663C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/663E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/665B

Generator - 10CW/42
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R

10CW-3R/665C

Generator - 10CW/42
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

10CW-3R/665E

Generator - 10CW/91
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

10CW-3R/673B

Generator - 10CW3C1B
Control - Code 32 (W.D. 611C149)
Code 68 (W.D. 615B95)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/698B

Generator - 10CW3C1B
Control - Code 34 (W.D. 611C153)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/703B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel

10CW-3R/703C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/703E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

MODEL DATA SECTION

15

10CW-3R/704B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/704E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/710B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R

10CW-3R/710C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R

10CW-3R/721B

Generator - 10CW3C1B
Control - Code 34 (W.D. 611C153)
Code 68 (W.D. 615B95)
Engine - Spec B—R
309B10 Low Oil Pressure Cut off Switch
*410D211 Trailer Assembly
*405K918 Housing, Tank and Skid Kit

10CW-3R/721C

Generator - 10CW3C1B
Control - Code 34 (W.D. 611C153)
Code 68 (W.D. 615B95)
Engine - Spec C—R
309B10 Low Oil Pressure Cut off Switch
*410D211 Trailer Assembly
*405K918 Housing, Tank and Skid Kit

10CW-3R/728B

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Engine - Spec B—R
*405K918 Housing, Tank and Skid Kit

10CW-3R/728C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Engine - Spec C—R
*405K918 Housing, Tank and Skid Kit

10CW-3R/737B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and Skid Kit

10CW-3R/737C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and Skid Kit

10CW-3R/737E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-3R/741C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-3R/742B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*159A472 Reservoir Tank Assy.

10CW-3R/742C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-3R/768B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R
Gas-Gasoline Model

10CW-3R/768C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Gas-Gasoline Model

10CW-3R/771B

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and Skid Kit
309B10 Low Oil Pressure Cut off Switch

10CW-3R/772B

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec B—R

10CW-3R/774B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
332-142 Ground Terminal
Engine - Spec B—R
309B10 Low Oil Pressure Cut off Switch
*405K918 Housing, Tank and Skid Kit

10CW-3R/782B

Generator - 10CW/41
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure Cut off Switch
416A36 Battery Cables (2)
- 42"
416A326 Battery Jumper
Cable - 13"
167-125 Spark Plugs (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

10CW-3R/790B

Generator - 10CW3C1B
Control - Code 41 (W.D. 611C174)
Engine - Spec B—R
*405K918 Housing, Tank and Skid Kit

10CW-3R/793B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

*Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/794B

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
332-142 Ground Terminal
Engine - Spec B—R

10CW-3R/823C

Generator - 10CW3C1B
Control - Code 46 (W.D. 611C194)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/824B

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec B—R
Gas-Gasoline Model
*405K918 Housing, Tank and
Skid Kit

10CW-3R/862C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Gas Fuel Model
Oil Base Heater

10CW-3R/862E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas Fuel Model
Oil Base Heater

10CW-3R/870C

Generator - 10CW/53
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec C—R
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H.
167A1264 Sp. Plug Cable - L. H.
*405K918 Housing, Tank and
Skid Kit

10CW-3R/875C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model
*405K918 Housing, Tank and
Skid Kit (Less
Muffler)
155B77 Exhaust Muffler

10CW-3R/875E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model
*405K1078 Housing, Tank and
Skid Kit (Less
Muffler)
155B77 Exhaust Muffler

10CW-3R/880C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/880E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/897C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 68 (W.D. 615B95)
Engine - Spec C—R
Gas-Gasoline Model
*405K918 Housing, Tank and
Skid Kit

10CW-3R/906C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/912C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
302-68 Running Time Meter
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/922C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/922E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 68 (W.D. 615B95)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/923B

Generator - 10CW3C1B
Control - Code 43 (W.D. 611C184)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
153P213 Electric Choke
153A215 Electric Choke Rod
153A216 Electric Choke
Bracket
153A214 Electric Choke Arm
403A383 Lifting Eye Bolt

10CW-3R/925C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Gas-Gasoline Model
155B77 Exhaust Muffler
*405D914 Housing Assembly
*403K319 Mounting Skid Kit
(Less Muffler)

10CW-3R/931C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 68 (W.D. 615B95)
Engine - Spec C—R
Gas-Gasoline Model

10CW-3R/932C

Generator - 10CW3C1B
Control - Code 44 (W.D. 611D187)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/973C

Generator - 10CW3C1B
Control - Code 47 (W.D. 611C196)
Engine - Spec C—R
102A279 Oil Base
Opening Cover
153P213 Electric Choke
153A162 Electric Choke
Heater
153A215 Electric Choke Rod
153A216 Electric Choke
Bracket
153A214 Electric Choke Arm
403A383 Lifting Eye Bolt

MODEL DATA SECTION

17

10CW-3R/976C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit

10CW-3R/980C

Generator - 10CW/42
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/984C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/984E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/985C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/995C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/1000C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model
*403K319 Mounting Skid and
Muffler Kit

10CW-3R/1002E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/1003C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-3R/1008C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Fuel Tank
309B10 Low Oil Pressure
Cut off Switch
102A349 Oil Base
Opening Cover
333B50 Oil Base Heater
Thermostat Cover

10CW-3R/1021C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Gas-Gasoline Model
*405K918 Housing, Tank and
Skid Kit

10CW-3R/1021E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
Gas-Gasoline Model
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/1033C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
*405D914 Housing Assy.
*403K319 Mounting Skid and
Muffler Kit

10CW-3R/1054C

Generator - 10CW/61
Control - Code 59 (W.D. 611C223)
Code 64 (W.D. 615B87)
Engine - Spec C—R
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
167-125 Spark Plug (2)
*405K918 Housing, Tank and
Skid Kit

10CW-3R/1064C

Generator - 10CW3C1B
Control - Code 37 (W.D. 611C160)
Code 72 (W.D. 615B127)
Engine - Spec C—R
*401D211 Trailer Assembly
309B10 Low Oil Pressure
Cut off Switch
*405K918 Housing, Tank and
Skid Kit

10CW-3R/1064E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 72 (W.D. 615B127)
Engine - Spec E—R
*401D211 Trailer Assembly
309B10 Low Oil Pressure
Cut off Switch
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/1067C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
141-172 Carburetor Air
Shutter Lever
141A496 Manual Choke
Rod Bracket
153A18 Manual Choke Rod

10CW-3R/1095C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 75 (W.D. 625A23)
Code 64 (W.D. 615B87)
Engine - Spec C—R
Oil Base Heater
*405K918 Housing, Tank and
Skid Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/1105C

Generator - 10CW3C1B
Control - Code 19 (W.D. 611C112)
Code 68 (W.D. 615B95)
Engine - Spec C—R
Gas-Gasoline Model
*403K319 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler

10CW-3R/1105E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 68 (W.D. 615B95)
Engine - Spec E—R
Gas-Gasoline Model
*403K474 Mounting Skid Kit
(Less Muffler)

10CW-3R/1116E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler

10CW-3R/1119E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1127E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/1227E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
*405D1066 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/1142E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159A472 Reservoir Tank Assy
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing
Scroll
309P77 High Air Tempera-
ture Cut off Switch

10CW-3R/1163E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas-Gasoline Model
Oil Base Heater
102A349 Oil Base
Opening Cover
333B50 Oil Base Heater
Thermostat Cover
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/1195E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 72 (W.D. 615B127)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/1233E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405D1066 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid Kit

10CW-3R17/17B(X-Ray Model)

Generator - 705CW3C2B
Control - Code 19 (W.D. 611C112)
Engine
Refer to Factory along with
Model and Serial Number of
Unit.

10CW-3R30/1154E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
(Cont. next column)

10CW-3R30/1154E (Cont.)

Oil Base Heater
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16"
x 25 Feet - Includes
Elbows and
Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows and
Connector

10CW-3R/728E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4M/1A

Generator - 10CW4N1A
Control - Code 4 (W.D. 602B113)
Engine - Spec A—M

10CW-4M/1B

Generator - 10CW4N1B
Control - Code 9 (W.D. 602B126)
Engine - Spec B—M

10CW-4M/1C

Generator - 10CW4N1B
Control - Code 9 (W.D. 602B126)
Engine - Spec C—M

10CW-4M/38A

Generator - 10CW4N1A
Control - Code 4 (W.D. 602B113)
332-142 Ground Terminal
Engine - Spec A—M

10CW-4M/710C

Generator - 10CW4N1B
Control - Code 9 (W.D. 602B126)
Code 67 (W.D. 615B92)
Engine - Spec C—M

10CW-4R/1A

Generator - 10CW4C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R

10CW-4R/1B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R

10CW-4R/1C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

MODEL DATA SECTION

19

10CW-4R/1E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

10CW-4R/12A

Generator - 10CW4C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
Gas-Gasoline Model

10CW-4R/12B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
Gas-Gasoline Model

10CW-4R/12C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
Gas-Gasoline Model

10CW-4R/12E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas-Gasoline Model

10CW-4R/30E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

10CW-4R/31C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
Gas Fuel Model

10CW-4R/31D

Generator - 10CW4C1B
Control - Code 56 (W.D. 611C217)
Engine - Spec C—R
Gas Fuel Model

10CW-4R/31E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas Fuel Model

10CW-4R/38B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
332-142 Ground Terminal
Engine - Spec B—R

8CW-99R/1253E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
102A279 Oil Base
Opening Cover

10CW-3R/55E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/151E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit

10CW-6R/1259E

Generator - 10CW6C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
309B10 Low Oil Pressure
Cut off Switch

705CW-3R/55E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

705CW-4R/316E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

10CW-4R/38C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
332-142 Ground Terminal
Engine - Spec C—R

10CW-4R/55A

Generator - 10CW4C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
(Cont. next column)

10CW-4R/55A (Cont.)

Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/96E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/131E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas Fuel Model

10CW-4R/134C

Generator - 10CW4C1B
Control - Code 42 (W.D. 611C180)
Engine - Spec C—R

10CW-4R/151E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit

10CW-4R/248E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Oil Base Heater

10CW-4R/316A

Generator - 10CW4C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
*159A424 Reservoir Tank Assy.

10CW-4R/316B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
*159A472 Reservoir Tank Assy.

10CW-4R/316C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-4R/316E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-4R/363C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Fuel Tank

10CW-4R/363E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

10CW-4R/391A

Generator - 10CW4C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
*159A424 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/414C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
332-142 Ground Terminal
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/507B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/637B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
Gas-Gasoline Model
*159A472 Reservoir Tank Assy.

10CW-4R/663B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/663C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/703C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/704B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/704C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/708B

Generator - 10CW4C1B
Control - Code 35 (W.D. 611C155)
Code 67 (W.D. 615B92)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/710B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec B—R

10CW-4R/710C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R

10CW-4R/710E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R

10CW-4R/734B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 75 (W.D. 625A23)

(Cont. next column)

10CW-4R/734B (Cont.)

Engine - Spec B—R
Oil Base Heater
416P262 Battery (2)
*159A472 Reservoir Tank Assy.
*403K319 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler
*405D914 Housing Assembly

10CW-4R/737B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/737C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/737E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/741C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 69 (W.D. 615B103)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-4R/742C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-4R/742E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

10CW-4R/768C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model

MODEL DATA SECTION

21

10CW-4R/768E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
Gas-Gasoline Model

10CW-4R/800B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec B—R
Gas-Gasoline Model
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/800C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/807B

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 75 (W.D. 625A23)
Engine - Spec B—R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
*405D914 Housing Assembly
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/823E

Generator - 10CW4C1C
Control - Code 62 (W.D. 611C253)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/839C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
332-142 Ground Terminal
Engine - Spec C—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/848C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
323P186 Receptacle - 50 Amp,
4 Wire
323P212 Receptacle Assy. -
Weatherproof
323P187 Receptacle Load
Plug - 50 Amp,
4 Wire
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/851C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 75 (W.D. 625A23)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Oil Base Heater

10CW-4R/874C

Generator - 10CW4C1B
Control - Code 35 (W.D. 611C155)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/874E

Generator - 10CW4C1C
Control - Code 53 (W.D. 611C210)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/886C

Generator - 10CW4C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Oil Base Heater
155B77 Exhaust Muffler
155B185 Exhaust Tube
155A294 Exhaust Wall Plate
*405K918 Housing, Tank and
Skid Kit (Less
Muffler)

10CW-4R/893C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
R.T.F. Exhaust Tube
309B10 Low Oil Pressure
Cut off Switch
*403K319 Mounting Skid and
Muffler Kit

(Cont. next column)

10CW-4R/893C(Cont.)

*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/925C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
*405D914 Housing Assembly
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/925E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
Gas-Gasoline Model
*405D1066 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/933C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 69 (W.D. 615B103)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-4R/989C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/1062C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
*159K478 Fuel Tank Kit
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-4R/1078C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch

* - Refer to Accessory Section for Component Parts.

R.T.F. - Refer to Factory. Include Model and Serial Number of Unit.

MODEL DATA SECTION

10CW-4R/1091C

Generator - 10CW4C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*403K319 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery Rack Kit

10CW-4R/1142E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing
Scroll
309P77 High Air Temperature
Cut off Switch
*159A472 Reservoir Tank Assy.

10CW-4R/1158E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas-Gasoline Model
*405D1066 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/1166E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/1210E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405D1066 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R31/1149E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 74 (W.D. 615B139)
Engine - Spec E—R
Gas Fuel Model

10CW-5M/1B

Generator - 10CW5N1B
Control - Code 9 (W.D. 602B126)
Engine - Spec B—M

10CW-5M/1C

Generator - 10CW5N1B
Control - Code 9 (W.D. 602B126)
Engine - Spec C—M

10CW-5R/1A

Generator - 10CW5C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R

10CW-5R/1B

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec B—R

10CW-5R/1C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

10CW-5R/1E

Generator - 10CW5C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

10CW-5R/12A

Generator - 10CW5C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
Gas-Gasoline Model

10CW-5R/12C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
Gas-Gasoline Model

10CW-5R/12E

Generator - 10CW5C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas-Gasoline Model

10CW-5R/13A

Generator - 10CW5C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
Gas Fuel Model

10CW-5R/38C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
332-142 Ground Terminal
Engine - Spec C—R

10CW-5R/316A

Generator - 10CW5C1A
Control - Code 14 (W.D. 611C92)
Engine - Spec A—R
*159A424 Reservoir Tank Assy.

10CW-5R/316C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

10CW-5R/316E

Generator - 10CW5C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

10CW-5R/363C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Code 75 (W.D. 625A23)
Engine - Spec C—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

10CW-5R/381E

Generator - 10CW5C1C
Control - Code 63 (W.D. 611C263)
323-12 Receptacle Load
Plug (3)
323-183 Receptacle Load
Plug Rubber
Cover (3)
Engine - Spec E—R

10CW-5R/653A

Generator - 10CW5C1A
Control - Code 26 (W.D. 611C138)
Engine - Spec A—R

10CW-5R/663C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-5R/703C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/704C

Generator - 10CW5C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
(Cont. next page)

MODEL DATA SECTION

23

10CW-5R/704C (Cont.)

- *403K319 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

10CW-5R/710C

- Generator - 10CW5C1B
- Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
- Engine - Spec C—R

10CW-5R/710E

- Generator - 10CW5C1C
- Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
- Engine - Spec E—R

10CW-5R/722B

- Generator - 10CW5C1B
- Control - Code 36 (W.D. 611C158)
Code 69 (W.D. 615B103)
- Engine - Spec B—R
- 309B10 Low Oil Pressure Cut off Switch
- *410D211 Trailer Assembly
- *405K918 Housing, Tank and Skid Kit

10CW-5R/768B

- Generator - 10CW5C1B
- Control - Code 21 (W.D. 611C120)
Code 69 (W.D. 615B103)
- Engine - Spec B—R
- Gas-Gasoline Model

10CW-5R/768E

- Generator - 10CW5C1C
- Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
- Engine - Spec E—R
- Gas-Gasoline Model

10CW-5R/890E

- Generator - 10CW5C1C
- Control - Code 54 (W.D. 611C212)
- Engine - Spec E—R

10CW-5R/897C

- Generator - 10CW5C1B
- Control - Code 21 (W.D. 611C120)
Code 69 (W.D. 615B103)
- Engine - Spec C—R
- Gas-Gasoline Model
- *405K918 Housing, Tank and Skid Kit

10CW-5R/904C

- Generator - 10CW5C1B
- Control - Code 21 (W.D. 611C120)
Code 69 (W.D. 615B103)
- Engine - Spec C—R
- Gas Fuel Model

10CW-6M/1C

- Generator - 10CW6N1B
- Control - Code 9 (W.D. 602B126)
- Engine - Spec C—M

10CW-6R/1A

- Generator - 10CW6C1A
- Control - Code 14 (W.D. 611C92)
- Engine - Spec A—R

10CW-6R/1B

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec B—R

10CW-6R/1C

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec C—R

10CW-6R/1E

- Generator - 10CW6C1C
- Control - Code 51 (W.D. 611C208)
- Engine - Spec E—R

10CW-6R/12B

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec B—R
- Gas-Gasoline Model

10CW-6R/12C

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec C—R
- Gas-Gasoline Model

10CW-6R/12E

- Generator - 10CW6C1C
- Control - Code 51 (W.D. 611C208)
- Engine - Spec E—R
- Gas-Gasoline Model

10CW-6R/38A

- Generator - 10CW6C1A
- Control - Code 14 (W.D. 611C92)
- 332-142 Ground Terminal
- Engine - Spec A—R

10CW-6R/38C

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- 332-142 Ground Terminal
- Engine - Spec C—R

10CW-6R/316C

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec C—R
- *159A472 Reservoir Tank Assy.

10CW-6R/316A

- Generator - 10CW6C1A
- Control - Code 14 (W.D. 611C92)
- Engine - Spec A—R
- *159A424 Reservoir Tank Assy.

10CW-6R/644A

- Generator - 10CW6C1A
- Control - Code 14 (W.D. 611C92)
- Engine - Spec A—R
- Gas Fuel Model

10CW-6R/704E

- Generator - 10CW6C1C
- Control - Code 51 (W.D. 611C208)
- Engine - Spec E—R
- *159K478 Fuel Tank Assembly
- *403K474 Mounting Skid and Muffler
- *416K334 Battery and Fuel Tank Rack Kit

10CW-6R/768B

- Generator - 10CW6C1B
- Control - Code 21 (W.D. 611C120)
Code 70 (W.D. 615B111)
- Engine - Spec B—R
- Gas-Gasoline Model

10CW-7R/1E

- Generator - 10CW7C1C
- Control - Code 51 (W.D. 611C208)
- Engine - Spec E—R

10CW-8R/1C

- Generator - 10CW8C1B
- Control - Code 21 (W.D. 611C120)
- Engine - Spec C—R

10CW-8R/737C

- Generator - 10CW8C1B
- Control - Code 21 (W.D. 611C120)
Code 67 (W.D. 615B92)
- Engine - Spec C—R
- *405K918 Housing, Tank and Skid Kit

10CW-99R/986C

- Generator - 10CW/56
- Control - Code 21 (W.D. 611C120)
- Engine - Spec C—R
- Gas Fuel Model

10CW-150R/1C (Magnet Use)

- Generator - 10CW150N1A
- Control - Code 24 (W.D. 611B127)
- Engine - Spec C—R

10CW-150R/1E (Magnet Use)

- Generator - 10CW150N1A
- Control - Code 24 (W.D. 611B127)
- Engine - Spec E—R

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-150R/96C (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
Engine - Spec C—R
309B10 Low Oil Pressure
Cut off Switch

10CW-150R/625B (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
Engine - Spec B—R

10CW-150R/663C (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

10CW-150R/704C (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

705CW-1R/31D

Generator - 705CW3C1C
Control - Code 55 (W.D. 611C214)
Engine - Spec C—R
Gas Fuel Model

705CW-1R/31E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

705CW-3R/1C

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

705CW-3R/1E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

705CW-3R/12C

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model

705CW-3R/12E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model

705CW-3R/23C

Generator - 705CW/65
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

705CW-3R/31E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

705CW-3R/30D

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-3R/30E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-3R/316C

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

705CW-3R/316E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

705CW-3R/363E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

705CW-3R/544C

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch

705CW-3R/561E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

705CW-3R/663C

Generator - 705CW3C1B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

705CW-3R/703E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler

705CW-3R/704E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/710E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R

705CW-3R/922C

Generator - 705CW3C1B
Control - Code 37 (W.D. 611C160)
Code 68 (W.D. 615B95)
Engine - Spec C—R
*405K918 Housing, Tank and
Skid Kit

MODEL DATA SECTION

25

705CW-3R/1101E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing
Scroll
309P77 High Air Tempera-
ture Cut off Switch

705CW-3R/1173E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
*405K1078 Housing, Tank and
Skid Kit

705CW-3R/1174E

Generator - 705CW/65
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

705CW-3R/1182E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

705CW-3R17/17A (X-Ray Model)

Generator - 705CW3C2A
Control - Code 11 (W.D. 611C89)
Engine - Spec A—R

705CW-3R17/17B (X-Ray Model)

Generator - 705CW3C2B
Control - Code 19 (W.D. 611C112)
Engine - Spec B—R

705CW-3R17/17C (X-Ray Model)

Generator - 705CW3C2B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R

705CW-3R17/784B (X-Ray Model)

Generator - 705CW3C2B
Control - Code 19 (W.D. 611C112)
Code 64 (W.D. 615B87)
Engine - Spec B—R

705CW-3R17/784E (X-Ray Model)

Generator - 705CW3C2C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R

705CW-3R17/817B (X-Ray Model)

Generator - 705CW3C2B
Control - Code 37 (W.D. 611C160)
Code 64 (W.D. 615B87)
Engine - Spec B—R
*405K918 Housing, Tank and
Skid Kit

705CW-3R17/943C (X-Ray Model)

Generator - 705CW3C2B
Control - Code 19 (W.D. 611C112)
Engine - Spec C—R
*403K319 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

705CW-3R30/1154E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-4R/1C

Generator - 705CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R

705CW-4R/1E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

705CW-4R/12E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas-Gasoline Model

705CW-4R/30D

Generator - 705CW4C1B
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-4R/30E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector
415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-4R/1095E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Code 75 (W.D. 625A23)
Code 67 (W.D. 615B92)
Engine - Spec E—R
Oil Base Heater
*405K1078 Housing, Tank and
Skid Kit

705CW-4R/1203E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
Gas Fuel Model
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

705CW-5R/1E

Generator - 705CW5C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

705CW-5R/710E

Generator - 705CW5C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)

705CW-5R/737E

Generator - 705CW5C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

705CW-6R/316C

Generator - 705CW6C1C
Control - Code 21 (W.D. 611C120)
Engine - Spec C—R
*159A472 Reservoir Tank Assy.

705CW-7R/663E

Generator - 705CW7C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-5R/663E

Generator - 10CW5C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-3R/363E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Oil Base Heater
*159A472 Reservoir Tank Assy.

10CW-3R/710E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R

10CW-3R/1237E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas-Gasoline Model
167-153 Spark Plug (2)
102A279 Oil Base Opening Cover
309B10 Low Oil Pressure Cut off Switch

10CW-3R/1243E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 68 (W.D. 615B95)
Engine - Spec E—R
Gas-Gasoline Model
*405D1066 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit

705CW-3R/663E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

705CW-4R/737E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

705CW-6R/1E

Generator - 705CW6C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R

8CW-57R/704J

Generator - 8CW57C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3E/1511J

Generator - 10CW/69
Control - Code 96 (W.D. 611C326)
Engine - Spec J—R
309B10 Low Oil Pressure Cut off Switch
167A1277 Sp. Plug Lead - R. H.
167A1278 Sp. Plug Lead - L. H.
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
154D562 Exhaust Manifold
141-172 Choke Shaft Lever - Carburetor
141A496 Choke Rod Bracket - Carburetor
153A18 Choke Control Rod

10CW-3E/2148J

Generator - 10CW/118
Control - Code 96 (W.D. 611C326)
Engine - Spec J—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
502-20 Oil Gauge Elbow (2)
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
154D562 Exhaust Manifold
110-620 Valve Rotators (4)
110A1191 Intake Valve Seat Insert - Stellite (2)
141-172 Choke Shaft Lever - Carburetor
141A496 Choke Rod Bracket - Carburetor

(Cont. next column)

10CW-3E/2148J (Cont.)

153A18 Choke Control Rod
110C1200 Cylinder Block - Right Hand
110C1201 Cylinder Block - Left Hand
110B1193 Intake Valve - Stellite (2)
110B1195 Exhaust Valve - Stellite (2)

10CW-3R/875J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas-Gasoline Model
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit (Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/2161J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 120 (W.D. 615B168)
Engine - Spec J—R
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery Rack Kit

10CW-3R/2165J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
154D562 Exhaust Manifold

10CW-4R/2011J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec J—R
Gas Fuel Model
Oil Base Heater
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery Rack Kit

705CW-3R/507J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
403K474 Mounting Skid Kit (Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery Rack Kit

MODEL DATA SECTION

27

6CW-53R/1F

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

6CW-53R/1G

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

6CW-53R/1J

Generator - 6CW53C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

6CW-53R/316G

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.

6CW-53R/704F

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

6CW-53R/710H

Generator - 6CW53C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec H—R

6CW-53R/737F

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit

6CW-53R/1493F

Generator - 6CW53C1C
Control - Code 83 (W.D. 611C283)
Code 117 (W.D. 615B163)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit

6CW-53R17/1320F (X-Ray Model)

Generator - 6CW/102
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
(Cont. next column)

6CW-53R17/1320F (Cont.)

*403K474 Mounting Skid and Muffler Kit
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Support Kit
*405D1146 Housing Assembly

6CW-53R17/1320G (X-Ray Model)

Generator - 6CW/102
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Support Kit
*403K474 Mounting Skid and Muffler Kit

6CW-54R/1F

Generator - 6CW54C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R

6CW-54R/1G

Generator - 6CW54C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R

6CW-54R/1H

Generator - 6CW54C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R

6CW-54R/1J

Generator - 6CW54C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R

6CW-54R/1369H

Generator - 6CW54C1C
Control - Code 94 (W.D. 611C324)
Code 69 (W.D. 615B103)
Engine - Spec H—R

6CW-55R/1J

Generator - 6CW55C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R

6CW-57R/1F

Generator - 6CW57C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R

6CW-57R/1G

Generator - 6CW57C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R

6CW-57R/1H

Generator - 6CW57C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R

6CW-57R/1J

Generator - 6CW57C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R

8CW-51R/2002H

Generator - 8CW53C1C
Control - Code 109 (W.D. 611C355)
Engine - Spec H—R
102A279 Oil Base Opening Cover
*159A472 Reservoir Tank Assy.

8CW-52R/1J

Generator - 8CW53C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

8CW-52R/737F

Generator - 8CW53C1C
Control - Code 83 (W.D. 611C283)
Code 66 (W.D. 615B91)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit

8CW-53R/737F

Generator - 8CW53C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit

8CW-53R/742E

Generator - 8CW53C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.

8CW-53R/1615G

Generator - 8CW/111
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
154D562 Exhaust Manifold

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

8CW-55R/737F

Generator - 8CW55C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel
Tank Rack Kit

8CW-57R/1H

Generator - 8CW57C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R

8CW-57R/1J

Generator - 8CW57C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R

10CW-1R/30F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank(55 Gallon)In-
cludes Fittings
415K7 Fuel Line(5/16" x
25 Feet)Includes
Elbows & Connector
415K45 Fuel Line(3/8"x 25
feet)Includes El-
bows & Connector

10CW-1R/30G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank(55 Gallon)In-
cludes Fittings
415K7 Fuel Line(5/16" x 25
Feet)Includes El-
bows and Connector
415K45 Fuel Line(3/8" x 25
Feet)Includes El-
bows and Connector

10CW-1R/30H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank(55 Gallon)In-
cludes Fittings

(Cont. next column)

10CW-1R/30H (Cont.)

415K7 Fuel Line - 5/16" x 25
Feet-Includes Elbows
and Connector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows and Connector

10CW-1R/30J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank(55 Gallon)In-
cludes Fittings

415K7 Fuel Line - 5/16" x 25
Feet-Includes El-
bows and Connector
415K45 Fuel Line - 3/8" x 25
Feet-Includes El-
bows and Connector

10CW-1R/31F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

10CW-1R/31G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

10CW-1R/31H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

10CW-1R/31J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J R
Gas Fuel Model

10CW-1R/710F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 114 (W.D. 615B121)
Engine - Spec F—R

10CW-1R/931F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 118 (W.D. 615B164)
Engine - Spec F—R
Gas-Gasoline Model

10CW-2R/862J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J R
Gas Fuel Model

10CW-3E/1329E

Generator - 10CW/69
Control - Code 77 (W.D. 611C267)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
338B198 Wire Harness Assy.
167A1277 Spark Plug Lead -
R.H. (11 1/4")
167A1278 Spark Plug Lead -
L.H. (19 1/4")
336A1202 Lead (Pressure
Switch to Contact
Switch)

10CW-3E/1511F

Generator - 10CW/69
Control - Code 88 (W.D. 611C298)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
167A1277 Spark Plug Lead -
R.H. (11 1/4")
167A1278 Spark Plug Lead -
L.H. (19 1/4")
338B217 Wiring Harness Assy.
140C531 Air Cleaner Housing
140B532 Air Cleaner Housing
Cover
140B495 Air Cleaner Element
336A1202 Cut-off Switch to
Momentary Control
Switch Lead
154D562 Exhaust Manifold
141-172 Choke Shaft Lever
141A496 Choke Control Rod
Bracket
153A18 Choke Control Rod

10CW-3E/1511G

Generator - 10CW/69
Control - Code 88 (W.D. 611C298)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut-off Switch
338B217 Wiring Harness Assy.
167A1277 Spark Plug Lead -
R.H. (11 1/4")
168A1278 Spark Plug Lead -
L.H. (19 1/4")
336A1202 Lead (Cut-off Switch
to Momentary Con-
tact Switch)
154D562 Exhaust Manifold
141-172 Choke Shaft Lever
141A496 Choke Control Rod
Bracket
153A18 Choke Control Rod

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

29

10CW-3E/1511H

Generator - 10CW/69
Control - Code 76 (W.D. 611C326)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut-off Switch
338B217 Wiring Harness Assy.
167A1277 Spark Plug Lead -
Right Hand
167A1278 Spark Plug Lead -
Left Hand
336A1202 Lead, Cut off Switch
to Contact Switch
154D562 Exhaust Manifold
141-172 Choke Shaft Lever
141A496 Choke Control Rod
Bracket
153A18 Choke Control Rod

10CW-3E/1597F

Generator - 10CW/69
Control - Code 88 (W.D. 611C298)
Engine - Spec F—R
338B217 Wiring Harness Assy.
309B10 Low Oil Pressure
Cut off Switch
*141C519 Gas Carburetor
167A1277 Spark Plug Cable -
Right Hand
167A1278 Spark Plug Cable -
Left Hand
154D562 Exhaust Manifold
336A1202 Lead (Cut off Switch
to Contact Switch)
148A198 Gasket, Gas Adapter
to Carburetor Body
148B197 Adapter, Gas Fuel -
Carburetor
148A196 Carburetor Venturi
503P218 Air Cleaner Breather
Hose
148C311 Gas Regulator Assy.
503-51 Gas Regulator Hose
(42")
503-49 Gas Regulator Hose
Clamp (2)
148A107 Gas Regulator Vent
145A239 Carburetor Air Inlet
140A560 Carburetor Air Inlet
Bushing
503P368 Clamp (Air Inlet to
Carburetor)

10CW-3E/1689G

Generator - 10CW/101
Control - Code 88 (W.D. 611C298)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut off Switch
(Cont. next column)

10CW-3E/1689G (Cont.)

338B217 Wiring Harness Assy.
167A1277 Spark Plug Lead -
Right Hand (11 1/4")
167A1278 Spark Plug Lead -
Left Hand (19 1/4")
154D562 Exhaust Manifold
336A1202 Cut off Switch to Mo-
mentary Contact
Switch Lead
141-172 Choke Shaft Lever
141A496 Choke Control Rod
Bracket
153A18 Choke Control Rod

10CW-3E/1775G

Generator - 10CW/69
Control - Code 88 (W.D. 611C298)
Engine - Spec G—R
338B217 Wiring Harness Assy.
309B10 Low Oil Pressure Cut
off Switch
336A1202 Cut off Switch to Mo-
mentary Contact
Switch Lead
502-20 Oil Gauge Elbow-(2)
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
141B637 Gas Carburetor (LPG)
502-138 Elbow - Carburetor
502-230 Elbow - Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor
to Manifold)
154D562 Exhaust Manifold
110C1200 Cylinder Block-R.H.
110C1201 Cylinder Block-L.H.
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve -
Stellite (2)
110A1204 Valve Spring Retainer
(4)
110A1191 Intake Valve Seat
Insert - Stellite (2)
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Hsg. Front Panel.
148A423 Vaporizer Mounting
Bracket
148C429 Carburetor to Vapor-
izer Line
332-50 Vaporizer Line Clip(2)
502-231 Vaporizer Outlet Union
Gas Fuel Model (LPG)

10CW-3E/1775H

Generator - 10CW/69
Control - Code 96 (W.D. 611C326)
Engine - Spec H—R
338B217 Wiring Harness Assy.
309B10 Low Oil Pressure
Cut off Switch
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
141B637 Gas Carburetor (LPG)
154D562 Exhaust Manifold
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve (2)
Stellite Faced
110B1195 Exhaust Valve (2)
110A1204 Valve Spring Retainer
(4)
110A1191 Intake Valve Seat
Insert(2)Stellite Faced
336A1202 Lead (Low Oil Pres-
sure Cutoff to Mo-
mentary Contact
Switch)
502-230 Elbow - Carburetor
502-138 Elbow - Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor to
Intake Manifold)
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing
Front Panel
148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Housing Front
Panel
148A423 Vaporizer Mounting
Bracket
148C429 Carburetor to Vapor-
izer Line
332-50 Vaporizer Line Clip
(2)
502-231 Vaporizer Outlet Union
Gas Fuel Model (LPG)
10CW-3E/1775J
Generator - 10CW/69
Control - Code 96 (W.D. 611C326)
Engine - Spec J—R
338B217 Wiring Harness Assy.
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch to
Momentary Contact
Switch)
502-20 Oil Gauge Elbow (2)
167A1277 Sp. Plug Cable - R.H.
(Cont. next page)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3E/1775J (Cont.)

167A1278 Sp. Plug Cable - L.H.
 141B637 Gas Carburetor (LPG)
 502-138 Elbow, Carburetor
 502-230 Elbow, Carburetor
 520A429 Carburetor Mounting Stud (2)
 145A231 Spacer (Carburetor to Manifold)
 154D562 Exhaust Manifold
 110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)
 110A1204 Valve Spring Retainer (4)
 110A1191 Intake Valve Seat Insert - Stellite (2)
 503A366 Air Cleaner Breather Hose
 134B1020 Blower Housing Front Panel
 148A418 Vaporizer Assembly (Zenith #A-963B-1) Mounts on Blower Hsg. Front Panel
 148A423 Vaporizer Mounting Bracket
 148C429 Carburetor to Vaporizer Line
 332-50 Vaporizer Fuel Line Clip (2)
 502-231 Vaporizer Outlet Union
 Gas Fuel Model (LPG)

10CW-3E/1776G

Generator - 10CW/69
 Control - Code 88 (W.D. 611C298)
 Engine - Spec G—R
 338B217 Wiring Harness Assy.
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 502-20 Oil Gauge Elbow (2)
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 154D562 Exhaust Manifold
 110-620 Valve Rotator (4)
 110A1191 Intake Valve Seat Insert-Stellite (2)
 141-172 Choke Shaft Lever - Carburetor
 141A496 Choke Rod Bracket-Carburetor
 153A18 Choke Control Rod

(Cont. next column)

10CW-3E/1776G (Cont.)

110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)
 10CW-3E/1776H
 Generator - 10CW/69
 Control - Code 96 (W.D. 611C326)
 Engine - Spec H—R
 338B217 Wiring Harness Assy.
 309B10 Low Oil Pressure Cut off Switch
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 154D562 Exhaust Manifold
 110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve (2) Stellite Faced
 110B1195 Exhaust Valve (2)
 110A620 Valve Rotator (4)

110A1191 Intake Valve Seat Insert (2) Stellite Faced
 336A1202 Lead (Low Oil Pressure Cut off Switch to Momentary Contact Switch)
 141-172 Choke Shaft Lever - Carburetor
 141A496 Choke Rod Bracket-Carburetor
 153A18 Choke Control Rod

10CW-3E/1776J

Generator - 10CW/69
 Control - Code 96 (W.D. 611C326)
 Engine - Spec J—R
 338B217 Wiring Harness Assy.
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 502-20 Oil Gauge Elbow (2)
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 154D562 Exhaust Manifold
 110-620 Valve Rotator (4)
 110A1191 Intake Valve Seat Insert-Stellite (2)
 141-172 Choke Shaft Lever - Carburetor
 141A496 Choke Rod Bracket-Carburetor
 153A18 Choke Control Rod

(Cont. next column)

10CW-3E/1776J (Cont.)

110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)

10CW-3E/1813G

Generator - 10CW/109
 Control - Code 88 (W.D. 611C298)
 Engine - Spec G—R
 309B10 Low Oil Pressure Cut off Switch
 338B217 Wiring Harness
 167A1277 Sp. Plug Lead - R.H.
 167A1278 Sp. Plug Lead - L.H.
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 154D562 Exhaust Manifold
 141-172 Choke Shaft Lever
 141A496 Choke Control Rod Bracket
 153A18 Choke Control Rod

10CW-3E/1819G

Generator - 10CW/101
 Control - Code 88 (W.D. 611C298)
 Engine - Spec G—R
 338B217 Wiring Harness Assy.
 309B10 Low Oil Pressure Cut off Switch
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 336A1202 Lead (Low Oil Pressure Switch to Momentary Contact Switch)
 141-172 Choke Shaft Lever
 141A496 Choke Control Rod Bracket
 153A18 Choke Control Rod

10CW-3E/1824G

Generator - 10CW/69
 Control - Code 88 (W.D. 611C298)
 Engine - Spec G—R
 338B217 Wiring Harness Assy.
 309-10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 502-20 Oil Gauge Elbow - (2)
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 154D562 Exhaust Manifold
 134B1020 Blower Housing Front Panel

(Cont. next page)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

31

10CW-3E/1824G (Cont.)

148A418	Vaporizer Assembly (Zenith #A963B-1) (Mounts on Blower Housing Front Panel)
148A423	Vaporizer Mounting Bracket
141B637	Gas Carburetor(LPG)
502-138	Elbow - Carburetor
502-230	Elbow - Carburetor
520A429	Carburetor Mounting Stud (2)
145A231	Spacer (Carburetor to Manifold)
503A366	Air Cleaner Breather Hose

10CW-3E/1824H

Generator - 10CW/69	
Control - Code 96 (W.D. 611C326)	
Engine - Spec H—R	
338B217	Wiring Harness Assy.
309B10	Low Oil Pressure Cut off Switch
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable - L.H.
154D562	Exhaust Manifold
134B1020	Blower Housing Front Panel
336A1202	Lead (Oil Pressure Cut off to Momen- tary Contact Switch)
141B637	Gas Carburetor(LPG)
502-230	Elbow - Carburetor
502-138	Elbow - Carburetor
520A429	Carburetor Mounting Stud (2)
145A231	Spacer (Carburetor Intake Manifold)
503A366	Air Cleaner Breather Hose
148A418	Vaporizer Assembly (Zenith #A963B-1) (Mounts on Blower Housing Front Panel)
148A423	Vaporizer Mounting Bracket
502-20	Oil Gauge Elbow-90°

10CW-3E/1824J

Generator - 10CW/69	
Control - Code 96 (W.D. 611C326)	
Engine - Spec J—R	
338B217	Wiring Harness Assy.
309-10	Low Oil Pressure Cut off Switch

10CW-3E/1824J (Cont.)

336A1202	Lead (Cut off Switch to Momentary Con- tact Switch)
502-20	Oil Gauge Elbow (2)
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable - L.H.
154D562	Exhaust Manifold
134B1020	Blower Housing Front Panel
148A418	Vaporizer Assembly (Zenith #A963B-1) (Mounts on Blower Housing Front Panel)
148A423	Vaporizer Mounting Bracket
141B637	Gas Carburetor(LPG)
502-138	Elbow - Carburetor
502-230	Elbow - Carburetor
520A429	Carburetor Mounting Stud (2)
145A231	Spacer (Carburetor to Manifold)
503A266	Air Cleaner Breather Hose

10CW-3E/1837H

Generator - 10CW/101	
Control - Code 96 (W.D. 611C326)	
Engine - Spec H—R	
338B217	Wiring Harness Assy.
110C1200	Cylinder Block - R.H.
110C1201	Cylinder Block - L.H.
110B1193	Intake Valve (2) Stellite Faced
110B1195	Exhaust Valve (2)
110-620	Valve Rotator (4)
110A1204	Valve Spring Retainer (4)
110A1191	Intake Valve Seat In- sert (2) Stellite Faced
309B10	Low Oil Pressure Cut off Switch
336A1202	Lead (Low Oil Pres- sure Switch to Mo- mentary Contact Switch)
141-172	Choke Shaft Lever - Carburetor
141A496	Choke Control Rod Bracket
153A18	Choke Control Rod
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable - L.H.

10CW-3E/1841H

Generator - 10CW/109	
Control - Code 96 (W.D. 611C326)	
Engine - Spec H—R	
154D562	Exhaust Manifold
141-172	Choke Shaft Lever - Carburetor
141A496	Choke Control Rod Bracket
153A18	Choke Control Rod
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable - L.H.

10CW-3E/1850H

Generator - 10CW3C1C	
Control - Code 102 (W.D. 611B333)	
Engine - Spec H—R	
167A1277	Sp. Plug Lead - R.H.
167A1278	Sp. Plug Lead - L.H.
110C1200	Cylinder Block - R.H.
110C1201	Cylinder Block - L.H.
110B1195	Exhaust Valve-Stellite (2)
110B1193	Intake Valve - Stellite (2)
110A1191	Insert Intake Valve Seat (2)
110A1204	Valve Spring Retainer (4)
141B637	Gas Carburetor(LPG)
309-10	Low Oil Pressure Cut off Switch
520A429	Carburetor Mounting Stud (2)
145A231	Spacer (Carburetor to Manifold)
502-138	Elbow - Carburetor
502-230	Elbow - Carburetor
134A1020	Blower Housing Front Panel
148A418	Vaporizer Assembly (Zenith #A963B-1) (Mounts on Blower Housing Front Panel)
148A423	Vaporizer Mounting Bracket
148C429	Carburetor to Vapor- izer Line
332-50	Vaporizer Line Clip (2)
502-231	Vaporizer Outlet Union
503A366	Air Cleaner Breather Hose

(Cont. next column)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3E/1991H

Generator - 10CW/118
Control - Code 96 (W.D. 611C326)
Engine - Spec H—R
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block- L.H.
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve -
Stellite (2)
110-620 Valve Rotator (4)
110A1191 Intake Valve Seat In-
sert - Stellite (2)
309-10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
502-20 Oil Gauge Elbow (2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Control Rod
167A1277 Sp.Plug Cable - R.H.
167A1278 Sp.Plug Cable - L.H.

10CW-3R/1F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

10CW-3R/1G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

10CW-3R/1H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R

10CW-3R/1J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

10CW-3R/12F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas-Gasoline Model

10CW-3R/12G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas-Gasoline Model

10CW-3R/12H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas-Gasoline Model

10CW-3R/12J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas-Gasoline Model

10CW-3R/13H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine-Spec H—R
Gas Fuel Model

10CW-3R/13J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

10CW-3R/30F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes Elbow
and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes Elbow
and Connector.

10CW-3R/30G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes Elbows
and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes Elbows
and Connector

10CW-3R/30H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes Elbows
and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes Elbows
and Connector

10CW-3R/30J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
*159B472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

10CW-3R/31F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

10CW-3R/31G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

10CW-3R/31H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

10CW-3R/31J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

10CW-3R/55H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Gas-Gasoline Model

10CW-3R/96F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Oil Pressure
Switch to Momen-
tary Contact Switch)

MODEL DATA SECTION

33

10CW-3R/96G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Pressure
Switch to Contact
Switch)

10CW-3R/96H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Pressure
Switch to Contact
Switch)

10CW-3R/96J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
309-10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/131E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

10CW-3R/131F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

10CW-3R/131G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

10CW-3R/131H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

10CW-3R/131J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

10CW-3R/151G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/151H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/211E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)

Engine - Spec E—R
Gas-Gasoline Model

10CW-3R/211F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)

Engine - Spec F—R
Gas-Gasoline Model

10CW-3R/211G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)

Engine - Spec G—R
Gas-Gasoline Model

10CW-3R/211H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)

Engine - Spec H—R
Gas-Gasoline Model

10CW-3R/211J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)

Engine - Spec J—R
Gas-Gasoline Model

10CW-3R/316F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.

10CW-3R/316G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.

10CW-3R/316H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.

10CW-3R/316J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.

10CW-3R/363F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
Oil Base Heater

10CW-3R/391F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
*159A472 Reservoir Tank Assy.
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/507E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

10CW-3R/544E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

Gas-Gasoline Model

10CW-3R/544H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

Gas-Gasoline Model

10CW-3R/565E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Oil Base Heater

MODEL DATA SECTION

10CW-3R/637F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

*159A472 Reservoir Tank Assy.

Gas-Gasoline Model

10CW-3R/663F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

*405C1146 Housing Assembly

*159K478 Fuel Tank Kit

*416K334 Battery and Fuel
Tank Rack Kit

*403K474 Mounting Skid Kit

10CW-3R/663G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

*405C1146 Housing Assembly

*159K478 Fuel Tank Kit

*416K334 Battery and Fuel
Tank Rack Kit

*403K474 Mounting Skid and
Muffler Kit

10CW-3R/663H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R

*405D1146 Housing Assembly

*159K478 Fuel Tank Kit

*416K334 Battery and Fuel
Tank Rack Kit

*403K474 Mounting Skid and
Muffler Kit

10CW-3R/663J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

*405D1146 Housing Assembly

*159K478 Fuel Tank Kit

*416K334 Battery and Fuel
Tank Rack Kit

*403K474 Mounting Skid and
Muffler Kit

10CW-3R/665F

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

10CW-3R/665G

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

10CW-3R/665H

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R

10CW-3R/703F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)

Engine - Spec F—R

*159K478 Fuel Tank Kit

*403K474 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/704F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

*159K478 Fuel Tank Kit

*403K474 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/704G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

*159K478 Fuel Tank Kit

*403K474 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/704H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R

*159K478 Fuel Tank Kit

*403K474 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/704J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

*159K478 Fuel Tank Kit

*403K474 Mounting Skid and
Muffler Kit

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/710F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R

10CW-3R/710H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec H—R

10CW-3R/713E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas Fuel Model

10CW-3R/728F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/737F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/737J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec J—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/742F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.

MODEL DATA SECTION

35

10CW-3R/768E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
Gas-Gasoline Model

10CW-3R/768F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
Gas-Gasoline Model

10CW-3R/772F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 64 (W.D. 615B87)
Engine - Spec F—R

10CW-3R/793H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine Spec H—R
*159A472 Reservoir Tank Kit
Oil Base Heater

10CW-3R/823E

Generator - 10CW3C1C
Control - Code 78 (W.D. 611C268)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-3R/848E

Generator - 10CW3C1C
Control - Code 80 (W.D. 611C275)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-3R/862J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J—R
Gas Fuel Model

10CW-3R/875F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Skid Kit (Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit
Gas-Gasoline Model

10CW-3R/879F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
*159A472 Reservoir Tank Assy.
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

Oil Base Heater

10CW-3R/879H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
*159A472 Reservoir Tank Assy.
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

Oil Base Heater

10CW-3R/880F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/880J

Generator - 10CW3C1C
Control - Code 113 (W.D. 611C363)
Code 64 (W.D. 615B87)
Engine - Spec J—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/922F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 68 (W.D. 615B95)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/922G

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 68 (W.D. 615B95)
Engine - Spec G—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/925F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
155B77 Exhaust Muffler
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-3R/980E

Generator - 10CW/69
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

10CW-3R/980F

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

10CW-3R/980G

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Pressure Switch to Contact Switch)

10CW-3R/980H

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Pressure Switch to Contact Switch)

MODEL DATA SECTION

10CW-3R/980J

Generator - 10CW/91
Control - Code 97 (W.D.611C327)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/990F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1000E

Generator 10CW3C1C
Control - Code 50 (W.D.611C204)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit

Gas-Gasoline Model

10CW-3R/1002H

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

Gas-Gasoline Model

10CW-3R/1021F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Code 64 (W.D.615B87)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit

Gas-Gasoline Model

10CW-3R/1021H

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 64 (W.D.615B87)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

Gas-Gasoline Model

10CW-3R/1021J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 64 (W.D.615B87)
Engine - Spec J—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

Gas-Gasoline Model

10CW-3R/1064F

Generator - 10CW3C1C
Control - Code 87 (W.D.611C289)
Code 72 (W.D.615B127)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/1102H

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec H—R
309-10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
102A279 Oil Base Opening
Cover

10CW-3R/1163F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Code 75 (W.D.625A23)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover
Gas-Gasoline Model

10CW-3R/1163J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 75 (W.D.625A23)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
333A50 Thermostat Cover
102A349 Oil Base Opening-
Cover

10CW-3R/1210F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Code 64 (W.D.615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

10CW-3R/1233F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Engine - Spec F—R
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1233G

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Engine - Spec G—R
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1233H

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec H—R
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1233J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec J—R
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1271E

Generator - 10CW3C1C
Control - Code 52 (W.D.611C209)
Code 68 (W.D.615B95)
Engine - Spec E—R

10CW-3R/1271F

Generator - 10CW3C1C
Control - Code 87 (W.D.611C289)
Code 68 (W.D.615B95)
Engine - Spec F—R

MODEL DATA SECTION

37

10CW-3R/1278E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
*405D1066 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Muffler
Oil Base Heater

10CW-3R/1282E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing
Scroll
309P77 High Air Temperature
Cut off Switch

Gas-Gasoline Model

10CW-3R/1287F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1307E

Generator - 10CW/80
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-3R/1310E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
309B10 Low Oil Pressure
Cut off Switch
*403K474 Mounting Skid Kit
*405D1066 Housing Assembly
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-3R/1310F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
309B10 Low Oil Pressure
Cut off Switch
*403K474 Mounting Skid Kit
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-3R/1310H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*405D1146 Housing Assembly
Gas-Gasoline Model

10CW-3R/1322E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 68 (W.D. 615B95)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-3R/1338G

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*141C622 Gas-Gasoline
Carburetor
148B197 Adapter, Gas Fuel-
Carburetor
148A198 Gasket, Gas Adapter
to Carburetor Body
141A493 Carburetor Float
148A196 Carburetor Venturi
148C311 Gas Regulator Assy.
503-51 Gas Regulator Hose
(42")
503-49 Gas Regulator Hose
Clamp (2)
148A107 Gas Regulator Vent

10CW-3R/1338H

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine-Spec H—R
*141C622 Gas-Gasoline Carb.
148B197 Adapter Gas Fuel -
Carburetor
148A198 Gasket, Gas Adapter
to Carburetor Body
141A493 Carburetor Float
148A196 Carburetor Venturi
148C311 Gas Regulator Assy.
503-51 Gas Regulator Hose
(42")
503-49 Gas Regulator Hose
Clamp (2)
148A107 Gas Regulator Vent

10CW-3R/1351E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
*405D1066 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit

Gas-Gasoline Model

10CW-3R/1362H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine - Spec H—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

Gas-Gasoline Model

10CW-3R/1369E

Generator - 10CW3C1C
Control - Code 52 (W.D. 611C209)
Code 68 (W.D. 615B95)
Engine - Spec E—R

10CW-3R/1369G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 68 (W.D. 615B95)
Engine - Spec G—R

10CW-3R/1371F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/1371H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
155B77 Exhaust Muffler

10CW-3R/1371J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

10CW-3R/1402E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch

Gas Fuel Model10CW-3R/1417E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Hsg. Scroll
309P77 High Air Temperature
Cut off Switch

Gas Fuel Model10CW-3R/1427E

Generator - 10CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Code 68 (W.D. 615B95)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch

Gas-Gasoline Model10CW-3R/1428F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-3R/1475F

Generator - 10CW/93
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch
503A313 Air Cleaner Breather
Tube (Rubber)

Gas-Gasoline Model10CW-3R/1477F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit

10CW-3R/1492F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 116 (W.D. 615B162)
Engine - Spec F—R
*159K478 Fuel Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit

10CW-3R/1524F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159K478 Fuel Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
309B10 Low Oil Pressure
Cut off Switch

Gas-Gasoline Model10CW-3R/1557F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*403K474 Mounting Skid and
Muffler Kit
*159A472 Reservoir Tank Assy.

10CW-3R/1576F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly

(Cont. next column)

10CW-3R/1576F (Cont.)

*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
309A10 Low Oil Pressure
Cut off Switch
336A138 Oil Base Heater
Ground Lead (2)
336A1176 Oil Base Heater Lead
308-37 Momentary Contact
Switch - Mounts on
Blower Housing
Gas-Gasoline Model
Oil Base Heater

10CW-3R/1579F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 120 (W.D. 615B168)
Engine - Spec F—R
309B10 Low Oil Pressure
Cut off Switch

10CW-3R/1580F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 120 (W.D. 615B168)
Engine - Spec F—R
Gas Fuel Model

10CW-3R/1593F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch
309P77 High Air Temperature
Cut off Switch
134A711 Air Outlet Grille -
Housing
134A757 Blower Housing
134A758 Blower Housing Scroll

10CW-3R/1610F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*403K334 Battery Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1615F

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
154D562 Exhaust Manifold

MODEL DATA SECTION

39

10CW-3R/1615G

Generator - 10CW/91
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
154D562 Exhaust Manifold

10CW-3R/1615H

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
154D562 Exhaust Manifold

10CW-3R/1618F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch
*405C1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit

10CW-3R/1625F

Generator - 10CW3C1C
Control - Code 87 (W.D. 611C289)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
*159K478 Fuel Tank Kit
Oil Base Heater

10CW-3R/1633F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 121 (W.D. 615B173)
Engine - Spec F—R

10CW-3R/1676F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
154D562 Exhaust Manifold

10CW-3R/1676G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
154D562 Exhaust Manifold

10CW-3R/1676H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
154D562 Exhaust Manifold

10CW-3R/1676J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
154D562 Exhaust Manifold

10CW-3R/1709F

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel
Tank Rack Kit
Gas-Gasoline Model
Oil Base Heater

10CW-3R/1725G

Generator - 10CW/104
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
154D562 Exhaust Manifold

10CW-3R/1738G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Oil Pressure
Cut off Switch to
Momentary Con-
tact Switch)
502-58 Tee (Oil Pressure
Gauge and Switch
Mounting)
*159A472 Reservoir Tank Assy.
102A279 Oil Base Opening
Cover

10CW-3R/1747G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
148-9 Gas Pressure Regu-
lator (Ensign Mfr.)
503A266 Breather Cap to Air
Inlet Hose
503-32 Gas Hose Clamp (2)
505-131 Gas Regulator Outlet
Bushing
148A214 Gas Fuel Choke
Gas Fuel Model

10CW-3R/1892H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 123 (W.D. 615B178)
Code 75 (W.D. 625A23)

(Cont. next column)

10CW-3R/1892H (Cont.)

Engine - Spec H—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Oil Base Heater

10CW-3R/1898H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 68 (W.D. 615B95)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Gas-Gasoline Model

10CW-3R/1903H

Generator - 10CW3C1C
Control - Code 106 (W.D. 611C345)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
Gas-Gasoline Model

10CW-3R/1905H

Generator - 10CW3C1C
Control - Code 105 (W.D. 611C343)
Code 120 (W.D. 615B168)
Engine - Spec H—R
154D562 Exhaust Manifold
*403K474 Mounting Skid Kit
(Less Muffler)
155P190 Exhaust Muffler
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*134C892 Automatic Shutter
(Air Discharge)

10CW-3R/1905J

Generator - 10CW3C1C
Control - Code 105 (W.D. 611C343)
Code 120 (W.D. 615B168)
Engine - Spec J—R
154D562 Exhaust Manifold
*403K474 Mounting Skid Kit
(Less Muffler)
155P190 Exhaust Muffler
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*134C892 Automatic Shutter
(Air Discharge)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/1907H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 120 (W.D. 615B168)
Engine - Spec H—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/1943H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 120 (W.D. 615B168)
Engine - Spec H—R
Gas-Gasoline Model

10CW-3R/1970H

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
154D562 Exhaust Manifold
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/1981H

Generator - 10CW3C1C
Control - Code 106 (W.D. 611C345)
Code 75 (W.D. 625A23)
Engine - Spec H—R
167-125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
Gas-Gasoline Model

10CW-3R/1983H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Gas Fuel Model

10CW-3R/1990H

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
110D748 Cylinder Head - R.H.
110D749 Cylinder Head - L.H.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/2010H

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Engine - Spec H—R
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel
Tank Rack Kit
R.T.F. Housing Parts
*159K478 Fuel Tank Kit
Gas-Gasoline Model

10CW-3R/2033J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 120 (W.D. 615B168)
Engine - Spec J—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/2042J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J—R
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
*405D1146 Housing Assembly
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
155B77 Exhaust Muffler
Gas Fuel Model

10CW-3R/2052J

Generator - 10CW3C1C
Control - Code 112 (W.D. 611C360)
Engine - Spec J—R

10CW-3R/2055J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
Gas Fuel Model
Oil Base Heater

10CW-3R/2062J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
102A279 Oil Base Opening
Cover
Gas Fuel Model

10CW-3R/2067J

Generator - 10CW3C1C
Control - Code 104 (W.D. 611C339)
Code 75 (W.D. 625A23)
Engine - Spec J—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit
Oil Base Heater

10CW-3R/2076J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Code 75 (W.D. 625A23)
Engine - Spec J—R
R.T.F. Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit
155B77 Exhaust Muffler
Gas-Gasoline Model
Oil Base Heater

10CW-3R/2079J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 120 (W.D. 615B168)
Engine - Spec J—R

10CW-3R/2080J

Generator - 10CW3C1C
Control - Code 106 (W.D. 611C345)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
*159A472 Reservoir Tank Assy.
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

R.T.F. - Refer to Factory. Include Model
and Serial Number of Unit.

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

41

10CW-3R/2088J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 120 (W.D.615B168)
Engine - Spec J—R
Gas Fuel Carburetor

10CW-3R30/1154F

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Code 75 (W.D.625A23)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fitting
415K7 Fuel Line - 5/16" x 25
Feet - Includes El-
bows and Connector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows and Connector
Oil Base Heater

10CW-3R30/1154G

Generator - 10CW3C1C
Control - Code 83 (W.D.611C283)
Code 75 (W.D.625A23)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon)
Includes Fitting
415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector
Oil Base Heater

10CW-3R30/1154H

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line - 5/16" x 25
Feet-Includes Elbows
and Connector
415K45 Fuel Line - 3/8" x 25
Feet-Includes Elbows
and Connector
Oil Base Heater

10CW-3R30/1154J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line - 5/16" x 25
Feet - Includes El-
bows and Connector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows and Connector

Oil Base Heater

10CW-4R/1F

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec F—R

10CW-4R/1G

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec G—R

10CW-4R/1H

Generator - 10CW4C1C
Control - Code 94 (W.D.611C324)
Engine - Spec H—R

10CW-4R/1J

Generator - 10CW4C1C
Control - Code 94 (W.D.611C324)
Engine - Spec J—R

10CW-4R/12F

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec F—R
Gas-Gasoline Model

10CW-4R/12G

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec G—R
Gas-Gasoline Model

10CW-4R/12H

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Engine - Spec H—R
Gas-Gasoline Model

10CW-4R/12J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J—R
Gas-Gasoline Model

10CW-4R/13J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J—R
Gas Fuel Model

10CW-4R/30F

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line - 5/16" x 25
Feet - Includes El-
bows and Connector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows and Connector

10CW-4R/30G

Generator - 10CW4C1C
Control - Code 81 (W.D.611C279)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

10CW-4R/30H

Generator - 10CW4C1C
Control - Code 94 (W.D.611C324)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings
415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector
415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

10CW-4R/30J

Generator - 10CW4C1C
Control - Code 94 (W.D.611C324)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank
(55 Gallon) Includes
Fittings

(Cont. next page)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-4R/30J (Cont.)

- 415K7 Fuel Line (5/16" x 25 Feet) Includes Elbows and Connectors
415K45 Fuel Line (3/8" x 25 Feet) Includes Elbows and Connectors

10CW-4R/31F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
Gas Fuel Model

10CW-4R/31G

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
Gas Fuel Model

10CW-4R/31H

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R
Gas-Fuel Model

10CW-4R/31J

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
Gas Fuel Model

10CW-4R/55J

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
Gas-Gasoline Model

10CW-4R/96G

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

10CW-4R/96H

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
309B10 Low Oil Pressure Cut off Switch
335A1202 Lead (Cut off Switch to Momentary Contact Switch)

10CW-4R/131F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
Gas Fuel Model (LP)

10CW-4R/131G

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
Gas Fuel Model (LP)

10CW-4R/131H

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R
Gas Fuel Model (LP)

10CW-4R/131J

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
Gas Fuel Model (LP)

10CW-4R/151H

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
*403K474 Mounting Skid and Muffler Kit

10CW-4R/316F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.

10CW-4R/316H

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.

10CW-4R/507J

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R
*403K474 Mounting Skid (Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

10CW-4R/663F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*416K334 Battery Rack and Fuel Tank Support Kit
*403K474 Mounting Skid Kit

10CW-4R/704J

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/710F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R

10CW-4R/710H

- Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Code 67 (W.D. 615B92)
Engine - Spec H—R

10CW-4R/768F

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R
Gas-Gasoline Model

10CW-4R/768G

- Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec G—R
Gas-Gasoline Model

10CW-4R/768H

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec H—R
Gas-Gasoline Model

10CW-4R/768J

- Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec J—R
Gas-Gasoline Model

10CW-4R/780E

- Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery and Fuel Tank Rack Kit
155B77 Muffler
Gas-Gasoline Model

MODEL DATA SECTION

43

10CW-4R/793F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
Oil Base Heater

10CW-4R/793H

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
Oil Base Heater

10CW-4R/823G

Generator - 10CW4C1C
Control - Code 92 (W.D. 611C316)
Code 67 (W.D. 615B92)
Engine - Spec G—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack and
Tank Support Kit
*159K478 Fuel Tank Kit

10CW-4R/874F

Generator - 10CW4C1C
Control - Code 85 (W.D. 611C286)
Code 67 (W.D. 615B92)
Engine - Spec F—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-4R/933F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
*159K478 Fuel Tank Assembly

10CW-4R/994E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 68 (W.D. 615B95)
Engine - Spec E—R
*416K334 Battery and Fuel
Tank Rack Kit

10CW-4R/994E (Cont.)

*403K474 Mounting Skid and
Muffler Kit (Less
Muffler)
*159K478 Fuel Tank Kit
155B77 Exhaust Muffler

10CW-4R/994F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*403K474 Mounting Skid Kit (Less
Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel Tank
Rack Kit

10CW-4R/1000F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Muffler
Gas-Gasoline Model

10CW-4R/1000G

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
*403K474 Mounting Skid (Less
Muffler)
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-4R/1021E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
; Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-4R/1021F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel
Tank Rack Kit
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-4R/1021H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec H—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid
*416K334 Battery and Fuel
Tank Rack Kit
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-4R/1233E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405D1066 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-4R/1287E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/1360E

Generator - 10CW4C1C
Control - Code 53 (W.D. 611C210)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/1360F

Generator - 10CW4C1C
Control - Code 85 (611C286)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-4R/1362E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec E—R
*405D1066 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit (Less
Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler
Gas-Gasoline Model
Oil Base Heater

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-4R/1369E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 69 (W.D. 615B103)
Engine - Spec E—R

10CW-4R/1369F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F—R

10CW-4R/1369H

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Code 69 (W.D. 615B103)
Engine - Spec H—R

10CW-4R/1380E

Generator - 10CW/89
Control - Code 79 (W.D. 611C274)
Engine - Spec E—R
*403K474 Mounting Skid Kit
(Less Muffler)

10CW-4R/1400E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
309B10 Low Oil Pressure
Cut off Switch
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Housing Scroll
309P77 High Air Temperature
Cut off Switch
Gas-Gasoline Model

10CW-4R/1428F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
Gas-Gasoline Model

10CW-4R/1454F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/1455H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R
149B557 Fuel Pump (Electric)
501-4 Fuel Line (Pump to
Carburetor)
307B4 Fuel Pump Relay

10CW-4R/1600F

Generator - 10CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch

10CW-4R/1747J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
Gas Fuel Model

10CW-4R/1835H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 69 (W.D. 615B103)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
309P77 High Air Tempera-
ture Cut off Switch
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Housing
Scroll
Gas-Gasoline Model

10CW-4R/1849H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve -
Stellite (2)
110A1204 Valve Spring Re-
tainer (4)
110A1191 Intake Valve Seat In-
sert - Stellite (2)

(Cont. next column)

10CW-4R/1849H (Cont.)

110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
134B1020 Blower Housing
Front Panel
148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Housing Front
Panel
148A423 Vaporizer Mounting
Bracket
502-231 Vaporizer Outlet
Union
148C429 Line (Carburetor
to Vaporizer)
332-50 Vaporizer Line
Clip (2)
141B637 Gas Carburetor (LP)
502-138 Elbow - Carburetor
502-230 Elbow - Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor
to Manifold)
503A366 Air Cleaner Breath-
er Hose

10CW-4R/1862H

Generator - 10CW4C1C
Control - Code 103 (W.D. 611C334)
Engine - Spec H—R
Gas-Gasoline Model

10CW-4R/1883H

Generator - 10CW4C1C
Control - Code 103 (W.D. 611C334)
Code 69 (W.D. 615B103)
Engine - Spec H—R
Gas-Gasoline Model

10CW-4R/1888H

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
102A349 Oil Base Opening
Cover
333A50 Thermostat Cover
Gas-Gasoline Model
Oil Base Heater

MODEL DATA SECTION

45

10CW-4R/1982H

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Code 67 (W.D. 615B92)
Engine - Spec H—R
Gas Fuel Model

10CW-4R/2011H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec H—R
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
Gas Fuel Model
Oil Base Heater

10CW-4R/2027H

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine-Spec H—R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch
309P77 High Air Tempera-
ture Cut off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille
Gas-Gasoline Model

10CW-4R/2036J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve -
Stellite (2)
110A1204 Valve Spring Retain-
er (4)
110A1191 Intake Valve Seat
Insert (2)
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Hsg. Front Panel

(Cont. next column)

* - Refer to Accessory Section for Component Parts.

10CW-4R/2036J (Cont.)

148A423 Vaporizer Mounting
Bracket
502-231 Vaporizer Outlet
Union
148C429 Carburetor to Vapor-
izer Line
332-50 Vaporizer Line
Clip (2)
141B637 Gas Carburetor (LP)
502-138 Elbow-Carburetor
502-230 Elbow-Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor
to Manifold)
503A366 Air Cleaner
Breather Hose

10CW-4R/2040J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 124 (W.D. 615B183)
Engine - Spec J—R
Gas-Gasoline Model

10CW-4R/2053J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec J—R
Gas-Gasoline Model
Oil Base Heater

10CW-4R/2095J

Generator - 10CW/128
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
154D562 Exhaust Manifold
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
110B1193 Intake Valve -
Stellite (2)
110B1195 Exhaust Valve -
Stellite (2)
110A1204 Valve Spring Retain-
er (4)
110A1191 Intake Valve Seat
Insert - Stellite (2)
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Housing Front
Panel
148A423 Vaporizer Mounting
Bracket

(Cont.
next column)

10CW-4R/2095J (Cont.)

502-231 Vaporizer Outlet
Union
148C429 Line (Carburetor to
Vaporizer)
332-50 Vaporizer Line Clip
(2)
141B637 Gas Carburetor (LP)
502-138 Elbow - Carburetor
502-230 Elbow-Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor
to Manifold)
503A366 Air Cleaner Breather
Hose

10CW-4XR/703J

Generator - 10CW/56
Control - Code 94 (W.D. 611C324)
Code 125 (W.D. 615B186)
Engine - Spec J—R
*403K474 Mounting Skid and
Muffler Kit
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-5DR/793H

Generator - 10CW/103
Control - Code 107 (W.D. 611C346)
Code 67 (W.D. 615B92)
Code 75 (W.D. 625A23)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
Oil Base Heater

10CW-5DR/1002J

Generator - 10CW/103
Control - Code 110 (W.D. 611C356)
Engine - Spec J—R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank
Rack Kit
*403K474 Mounting Skid and
Muffler Kit
Gas-Gasoline Model

10CW-5DR/1807G

Generator - 10CW/103
Control - Code 93 (W.D. 611C323)
Code 122 (W.D. 615B174)
Engine - Spec G—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch
309P77 High Air Temperature
Cut off Switch
134A757 Blower Housing

(Cont. next page)

MODEL DATA SECTION

10CW-5DR/1807G (Cont.)

134A758 Blower Housing
Scroll

134A711 Air Outlet Grille
Gas-Gasoline Model

10CW-5DR/1849H

Generator - 10CW/103

Control - Code 107 (W.D. 611C346)

Engine - Spec H—R

309B10 Low Oil Pressure
Cut off Switch

336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

110B1193 Intake Valve -
Stellite (2)

110B1195 Exhaust Valve -
Stellite (2)

110A1204 Valve Spring Re-
tainer (4)

110A1191 Intake Valve Seat
Insert - Stellite (2)

110C1200 Cylinder Block - R.H.

110C1201 Cylinder Block - L.H.

134B1020 Blower Housing
Front Panel

148A418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Housing Front
Panel

148A423 Vaporizer Mounting
Bracket

502-231 Vaporizer Outlet
Union

148C429 Line (Carburetor to
Vaporizer)

332-50 Vaporizer Line Clip
(2)

141B637 Gas Carburetor (LP)

502-138 Elbow - Carburetor

502-230 Elbow - Carburetor

520A429 Carburetor Mounting
Stud (2)

145A231 Spacer (Carburetor
to Manifold)

503A366 Air Cleaner Breath-
er Hose

10CW-5DR/1970H

Generator - 10CW/120

Control - Code 107 (W.D. 611C346)

Engine - Spec H—R

309B10 Low Oil Pressure
Cut off Switch

336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

154D562 Exhaust Manifold

10CW-5E/1776H

Generator - 10CW/116

Control - Code 108 (W.D. 611C347)

Engine - Spec H—R

338B217 Wiring Harness Assy.

309B10 Low Oil Pressure
Cut off Switch

336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

502-20 Oil Gauge Elbow (2)

167A1277 Sp. Plug Cable - R.H.

167A1278 Sp. Plug Cable - L.H.

154D562 Exhaust Manifold

110-620 Valve Rotators (4)

110B1193 Intake Valve -
Stellite (2)

110B1194 Exhaust Valve -
Stellite (2)

110A1191 Intake Valve Seat
Insert - Stellite (2)

110C1200 Cylinder Block - R.H.

110C1201 Cylinder Block - L.H.

141-172 Choke Shaft Lever -
Carburetor

141A496 Choke Rod Bracket -
Carburetor

153A18 Choke Control Rod

10CW-5E/1828H

Generator - 10CW/108

Control - Code 98 (W.D. 611B328)

Engine - Spec H—R

141-172 Choke Shaft Lever -
Carburetor

141A496 Choke Mounting
Bracket - Carburetor

153A18 Choke Control Rod
R. T. F. Housing Assembly

10CW-5R/1F

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

10CW-5R/1G

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec G—R

10CW-5R/1H

Generator - 10CW5C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec H—R

10CW-5R/1J

Generator - 10CW5C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec J—R

10CW-5R/12F

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

Gas-Gasoline Model

10CW-5R/12G

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec G—R

Gas-Gasoline Model

10CW-5R/12H

Generator - 10CW5C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec H—R

Gas-Gasoline Model

10CW-5R/12J

Generator - 10CW5C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec J—R

Gas-Gasoline Model

10CW-5R/13J

Generator - 10CW5C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec J—R

Gas Fuel Model

10CW-5R/31J

Generator - 10CW5C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec J—R

Gas Fuel Model

10CW-5R/316J

Generator - 10CW5C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec J—R

*159A472 Reservoir Tank Assy.

10CW-5R/663F

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

*405D1146 Housing Assembly

*403K474 Mounting Skid Kit

*159K478 Fuel Tank Assy.

*416K334 Battery Rack and Fuel
Tank Support Kit

10CW-5R/663G

Generator - 10CW5C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec G—R

*405D1146 Housing Assembly

*403K474 Mounting Skid Kit

*416K334 Battery Rack and Fuel
Tank Support Kit

*159K478 Fuel Tank Assembly

R. T. F. - Refer to Factory. Include Model and
Serial Number of Unit.

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

47

10CW-5R/663J

Generator - 10CW5C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-5R/703F

Generator - 10CW5C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec F—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/703G

Generator - 10CW5C1C
Control - Code 81 (W.D. 611C279)
Code 67 (W.D. 615B92)
Engine - Spec G—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/737E

Generator - 10CW5C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-5R/931F

Generator - 10CW5C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F—R
Gas-Gasoline Model

10CW-5R/1263E

Generator - 10CW5C1C
Control - Code 21 (W.D. 611C120)
Engine - Spec E—R
Gas-Gasoline Model

10CW-5R/2028J

Generator - 10CW/126
Control - By Customer
Engine - Spec J—R
122B196 Line - Oil Filter
Inlet

(Cont. next column)

10CW-5R/2028J (Cont.)

122B197 Line - Oil Filter
Outlet
502-3 Oil Line Connect-
or (4)
501B10 Oil Line - Flexible
(2)
122A194 Oil Line Bracket
Assembly
309B10 Low Oil Pressure
Cut off Switch
154C681 Exhaust Manifold
134A1095 Blower Housing
134D1078 Air Outlet Adapter -
Housing
149A555 Fuel Pump Hole
Cover
336A1297 Magneto Stop Lead

10CW-6R/1F

Generator - 10CW6C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R

10CW-6R/1G

Generator - 10CW6C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R

10CW-6R/1H

Generator - 10CW6C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R

10CW-6R/1J

Generator - 10CW6C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R

10CW-6R/12F

Generator - 10CW6C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R
Gas-Gasoline Model

10CW-6R/13H

Generator - 10CW6C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
Gas Fuel Model

10CW-6R/211E

Generator - 10CW6C1C
Control - Code 51 (W.D. 611C208)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas-Gasoline Model
Oil Base Heater

10CW-6R/316H

Generator - 10CW6C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.

10CW-6R/663E

Generator - 10CW6C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-6R/663H

Generator - 10CW6C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-6R/875E

Generator - 10CW6C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit (Less
Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-6R/1158G

Generator - 10CW6C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler
Gas-Gasoline Model

10CW-7R/1F

Generator - 10CW7C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R

10CW-7R/1G

Generator - 10CW7C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-7R/1H

Generator - 10CW7C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R

10CW-7R/1J

Generator - 10CW7C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J—R

10CW-7R/663H

Generator - 10CW7C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H—R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

10CW-8R/1F

Generator - 10CW8C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F—R

10CW-8R/663G

Generator - 10CW8C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G—R
*159K478 Fuel Tank Assembly
*405C1146 Housing Assembly
*416K334 Battery Rack and Fuel Tank Support Kit
*403K474 Mounting Skid Kit

10CW-150R/1F (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
338B134 Harness Assembly
Engine - Spec F—R

10CW-150R/1G (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
338B134 Harness Assembly
Engine - Spec G—R

10CW-150R/1H (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
338B134 Harness Assembly
Engine - Spec H—R

10CW-150R/1J (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
338B134 Harness Assembly
Engine - Spec J—R

10CW-150R/663E (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
301A1612 Control Mounting Bracket
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

10CW-150R/663F (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
301A1612 Control Mounting Bracket
338B134 Harness Assembly
Engine - Spec F—R
416A37 Battery Cable - 48"
416A77 Battery Cable - 28"
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assembly

10CW-150R/663G (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D. 611B127)
338B134 Harness Assembly
301A1612 Control Mounting Bracket
Engine - Spec G—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and Fuel Tank Support Kit
*159K478 Fuel Tank Assembly
416A37 Battery Cable - 48"
416A77 Battery Cable - 28"

10CW-210R/1497F

Generator - 10CW/96
Control - Code 90 (W.D. 611C301)
Engine - Spec F—R
191P269 Charge Generator - 12 Volt
191P270 Voltage Regulator - 12 Volt
191B91 Charge Generator Mounting Bracket
191C90 Charge Generator Belt Guard
511P37 Charge Generator Drive Belt
512P25 Charge Generator Pulley Drive
515A7 Charge Generator Drive Pulley Key
191B7 Starter Assembly - 12 Volt

(Cont. next column)

10CW-210R/1497F (Cont.)

101E223 Flywheel Housing
104A205 Flywheel and Ring Gear
104-137 Flywheel Ring Gear Only
167A1213 Sp. Plug Cable - R.H.
167A1214 Sp. Plug Cable - L.H.
134D503 Blower Housing
134D532 Cylinder Shroud - Right Hand
*141C621 Carburetor Assembly
153P213 Sisson Choke - Automatic
153A269 Choke Cover - Includes Heating Element
153A252 Automatic Choke Bracket
153A253 Choke Linkage
518-5 Choke Linkage Clip - Carburetor End
518-47 Choke Linkage Clip - Choke End

705CW-1R/30F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line (5/16" x 25 Feet) Includes Elbows and Connector
415K45 Fuel Line (3/8" x 25 Feet) Includes Elbows and Connector

705CW-1R/31F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

705CW-1R/31G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

705CW-1R/31H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

49

705CW-1R/31J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

705CW-1R/131F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

705CW-1R/710F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 114 (W.D. 615B121)
Engine - Spec F—R

705CW-1R/737F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 114 (W.D. 615B121)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit

705CW-2R/862J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J—R
Gas Fuel Model
Oil Base Heater

705CW-3E/1991H

Generator - 705CW/119
Control - Code 96 (W.D. 611C326)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
502-20 Oil Gauge Elbow (2)
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve -
Stellite (2)
110B1195 Exhaust Valve -
Stellite (2)
110-620 Valve Rotators (4)
110A1191 Intake Valve Seat In-
sert - Stellite (2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor

(Cont. next column)

* - Refer to Accessory Section for Component Parts.

705CW-3E/1991H (Cont.)

153A18 Choke Control Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.

705CW-3E/1991J

Generator - 705CW/119
Control - Code 96 (W.D. 611C326)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
502-20 Oil Gauge Elbow (2)
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve -
Stellite (2)
110B1195 Exhaust Valve -
Stellite (2)
110-620 Valve Rotators (4)
110A1191 Intake Valve Seat In-
sert - Stellite (2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Control Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.

705CW-3R/1F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

705CW-3R/1G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R

705CW-3R/1H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R

705CW-3R/1J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R

705CW-3R/12F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas-Gasoline Model

705CW-3R/12G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas-Gasoline Model

705CW-3R/12H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas-Gasoline Model

705CW-3R/12J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas-Gasoline Model

705CW-3R/13H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

705CW-3R/13J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

705CW-3R/30F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings
415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows and Con-
nector
415K45 Fuel Line - 3/8" x 25
Feet - Includes El-
bows and Connector

705CW-3R/30G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings
415K7 Fuel Line (5/16" x
25 Feet) Includes
Elbows and Con-
nector
415K45 Fuel Line (3/8" x
25 Feet) Includes
Elbows and Con-
nector

MODEL DATA SECTION

705CW-3R/30H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line (5/16" x 25 Feet) Includes Elbows and Connector
415K45 Fuel Line (3/8" x 25 Feet) Includes Elbows and Connector

705CW-3R/30J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.
415K3 Underground Fuel Tank (55 Gallon) Includes Fittings
415K7 Fuel Line (5/16" x 25 Feet) Includes Elbows and Connector
415K45 Fuel Line (3/8" x 25 Feet) Includes Elbows and Connector

705CW-3R/31F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

705CW-3R/31G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

705CW-3R/31H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

705CW-3R/31J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

705CW-3R/96G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
309B10 Low Oil Pressure Cut off Switch

705CW-3R/96H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

705CW-3R/131E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
Gas Fuel Model

705CW-3R/131F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
Gas Fuel Model

705CW-3R/131G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
Gas Fuel Model

705CW-3R/131H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec H—R
Gas Fuel Model

705CW-3R/131J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model

705CW-3R/151E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*403K474 Mounting Skid and Muffler Kit

705CW-3R17/1E (X-Ray Model)

Generator - 705CW3C2C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R

705CW-3R17/1F (X-Ray Model)

Generator - 705CW3C2C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R

705CW-3R/211E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas-Gasoline Model
Oil Base Heater

705CW-3R/316F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.

705CW-3R/316G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*159A472 Reservoir Tank Assy.

705CW-3R/316H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
*159A472 Reservoir Tank Assy.

705CW-3R/316J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.

705CW-3R/663F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit

705CW-3R/703H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

MODEL DATA SECTION

51

705CW-3R/713E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 75 (W.D. 625A23)
Engine - Spec E—R
Gas Fuel Model
Oil Base Heater

705CW-3R/728E

Generator - 705CW3C1C
Control - Code 52 (W.D. 611C209)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

705CW-3R/737E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
*405K1078 Housing, Tank and Skid Kit

705CW-3R/737F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery Rack and Fuel Tank Support Kit
*159K478 Fuel Tank Kit

705CW-3R/737H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

705CW-3R/768H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Engine - Spec H—R
Gas-Gasoline Model

705CW-3R/807J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Code 75 (W.D. 625A23)
Engine - Spec J—R
(Cont. on next column)

705CW-3R/807J (Cont.)

309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery Rack Kit
*405C1146 Housing Assembly
155B77 Exhaust Muffler
Gas-Gasoline Model
Oil Base Heater

705CW-3R/880F

Generator - 705CW3C1C
Control - Code 87 (W.D. 611C289)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery and Fuel Tank Rack Kit

705CW-3R/922G

Generator - 705CW3C1C
Control - Code 87 (W.D. 611C289)
Code 68 (W.D. 615B95)
Engine - Spec G—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assembly

705CW-3R/925F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack Kit
Gas-Gasoline Model

705CW-3R/933F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 68 (W.D. 615B95)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Support Kit
*159K478 Fuel Tank Assembly

705CW-3R/980F

Generator - 705CW/92
Control - Code 84 (W.D. 611C285)
Engine - Spec F—R
309B10 Low Oil Pressure Cut off Switch

705CW-3R/980G

Generator - 705CW/92
Control - Code 84 (W.D. 611C285)
Engine - Spec G—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Pressure Switch to Contact Switch)

705CW-3R/980H

Generator - 705CW/92
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

705CW-3R/1021F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F—R
*405D1146 Housing Assembly
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery Rack and Fuel Tank Support Kit
*159K478 Fuel Tank Assembly
Gas-Gasoline Model

705CW-3R/1101G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Engine - Spec G—R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Oil Pressure Switch to Momentary Contact Switch)
309P77 High Air Temperature Cut off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille - Housing
Gas-Gasoline Model
Oil Base Heater

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

705CW-3R/1233E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*405D1066 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid Kit

705CW-3R/1233G

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec G—R
*405D1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid Kit

705CW-3R/1233H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec G—R
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-3R/1271G

Generator - 705CW3C1C
Control - Code 87 (W.D. 611C289)
Code 68 (W.D. 615B95)
Engine - Spec G—R

705CW-3R/1371E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*159A472 Reservoir Tank Assy.
*405D1066 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

705CW-3R/1371F

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec F—R
*159A472 Reservoir Tank Assy.
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

705CW-3R/1395E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Code 64 (W.D. 615B87)
Engine - Spec E—R
(Cont. next column)

705CW-3R/1395E (Cont.)

309B10 Low Oil Pressure
Cut off Switch
*403K474 Mounting Skid Kit
(Less Muffler)
155B77 Exhaust Muffler
*416K334 Battery and Fuel
Tank Rack Kit
159K478 Fuel Tank Kit
309P77 High Air Temper-
ature Cut off
Switch
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Housing
Scroll
Gas-Gasoline Model

705CW-3R/1428E

Generator - 705CW3C1C
Control - Code 50 (W.D. 611C204)
Engine - Spec E—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
Gas-Gasoline Model

705CW-3R/1440E

Generator - 705CW3C1C
Control - Code 82 (W.D. 611C280)
Engine - Spec E—R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/1454F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
309B10 Low Oil Pressure
Cut off Switch
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/1456F

Generator - 705CW3C1C
Control - Code 86 (W.D. 611C288)
Code 64 (W.D. 615B87)
Engine - Spec F—R
149P554 Electric Fuel Pump -
12 Volt
307B310 Fuel Pump Solenoid
Valve

(Cont. next column)

705CW-3R/1456F (Cont.)

502-5 Inverted Male Elbow -
Fuel Pump Inlet
502-29 Pipe Bushing - Fuel
Pump Inlet
502-46 Close Nipple - Fuel
Pump Inlet
501A4 Flexible Fuel Pump
Line - 12"

705CW-3R/1514F

Generator - 705CW/95
Control - Code 89 (W.D. 611C299)
Code 119 (W.D. 615B165)
Engine - Spec F—R
*403K474 Mounting Skid Kit

705CW-3R/1550F

Generator - 705CW/98
Control - Code 83 (W.D. 611C283)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
309B10 Low Oil Pressure
Cut off Switch

705CW-3R/1593H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Oil Pressure
Switch to Momen-
tary Contact Switch)
*159A472 Reservoir Tank Assy.
309P77 High Air Temperature
Cut off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille

705CW-3R/1604F

Generator - 705CW3C1C
Control - Code 86 (W.D. 611C288)
Code 75 (W.D. 625A23)
Engine - Spec F—R
149B557 Electric Fuel Pump
501A4 Flexible Fuel Line
149A555 Fuel Pump Hole
Cover
Oil Base Heater

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

53

705CW-3R/1665F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 120 (W.D. 615B168)
Engine - Spec F — R
309B10 Low Oil Pressure
Cut off Switch
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

705CW-3R/1709J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Code 75 (W.D. 625A23)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
155B77 Exhaust Muffler
Gas-Gasoline Model
Oil Base Heater

705CW-3R/1886H

Generator - 705CW3C1C
Control - Code 104 (W.D. 611C339)
Code 64 (W.D. 615B87)
Engine - Spec H — R
Gas-Gasoline Model

705CW-3R/1953H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Code 116 (W.D. 615B162)
Engine - Spec H — R
*159A472 Reservoir Tank Assy.
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid (Less
Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
155B77 Exhaust Muffler

705CW-3R/1982H

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Engine - Spec H — R
Gas-Fuel Model

705CW-3R/2000H

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec H — R
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-3R/2089J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Code 75 (W.D. 625A23)
Engine - Spec J — R
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid and
Muffler Kit
Oil Base Heater

705CW-3R/2091J

Generator - 705CW3C1C
Control - Code 113 (W.D. 611C363)
Code 68 (W.D. 615B95)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.

705CW-3R17/507G (X-Ray Model)

Generator - 705CW3C2C
Control - Code 83 (W.D. 611C283)
Engine - Spec G — R
*403K474 Skid Kit
*416K334 Battery Rack Kit

705CW-3R17/663G (X-Ray Model)

Generator - 705CW3C2C
Control - Code 83 (W.D. 611C283)
Engine - Spec G — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and
Fuel Tank Support
Kit

705CW-3R17/663H (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97 (W.D. 611C327)
Engine - Spec H — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R17/663J (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97 (W.D. 611C327)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R17/704H (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97 (W.D. 611C327)
Engine - Spec H — R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R17/737F (X-Ray Model)

Generator - 705CW3C2C
Control - Code 83 (W.D. 611C283)
Code 64 (W.D. 615B87)
Engine - Spec F — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Skid Kit
*416K334 Battery Rack Kit

705CW-3R17/737J (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R17/1320E (X-Ray Model)

Generator - 705CW3C2C
Control - Code 50 (W.D. 611C204)
Engine - Spec E — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Skid Kit

705CW-3R30/1154F

Generator - 705CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)

(Cont. next page)

MODEL DATA SECTION

705CW-3R30/1154F (Cont.)

Engine - Spec F—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector
Oil Base Heater

705CW-3R30/1154G

Generator - 705CW3C1C

Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)

Engine - Spec G—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector
Oil Base Heater

705CW-3R30/1154H

Generator - 705CW3C1C

Control - Code 97 (W.D. 611C327)
Code 75 (W.D. 625A23)

Engine - Spec H—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector
Oil Base Heater

705CW-3R30/1154J

Generator - 705CW3C1C

Control - Code 97 (W.D. 611C327)
Code 75 (W.D. 625A23)

Engine - Spec J—R

*159A472 Reservoir Tank Assy.
415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line (5/16" x 25
Feet) Includes El-
bows and Connector

(Cont. next column)

705CW-3R30/1154J (Cont.)

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector
Oil Base Heater

705CW-4R/1F

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

705CW-4R/1G

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec G—R

705CW-4R/1H

Generator - 705CW4C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec H—R

705CW-4R/1J

Generator - 705CW4C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec J—R

705CW-4R/12F

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

Gas-Gasoline Model

705CW-4R/12H

Generator - 705CW4C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec H—R

Gas-Gasoline Model

705CW-4R/12J

Generator - 705CW4C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec J—R

Gas-Gasoline Model

705CW-4R/13J

Generator - 705CW4C1C

Control - Code 95 (W.D. 611C325)

Engine - Spec J—R

Gas Fuel Model

705CW-4R/30F

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel

Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line - 5/16" x
25 Feet - Includes
Elbows & Connector

(cont. next column)

705CW-4R/30F (Cont.)

415K45 Fuel Line - 3/8" x
25 Feet - Includes
Elbows & Connector

705CW-4R/30G

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec G—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line - 5/16" x
25 Feet) - Includes
Elbows & Connector

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

705CW-4R/30H

Generator - 705CW4C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec H—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line (5/16" x
25 Feet) Includes
Elbows & Connector

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

705CW-4R/30J

Generator - 705CW4C1C

Control - Code 94 (W.D. 611C324)

Engine - Spec J—R

*159A472 Reservoir Tank Assy.

415K3 Underground Fuel
Tank (55 Gallon) In-
cludes Fittings

415K7 Fuel Line (5/16" x
25 Feet) Includes
Elbows & Connector

415K45 Fuel Line (3/8" x 25
Feet) Includes El-
bows and Connector

705CW-4R/31E

Generator - 705CW4C1C

Control - Code 51 (W.D. 611C208)

Engine - Spec E—R

Gas Fuel Model

705CW-4R/31F

Generator - 705CW4C1C

Control - Code 81 (W.D. 611C279)

Engine - Spec F—R

Gas Fuel Model

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

55

705CW-4R/31G

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G — R
Gas Fuel Model

705CW-4R/31H

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H — R
Gas Fuel Model

705CW-4R/31J

Generator - 705CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J — R
Gas Fuel Model

705CW-4R/131E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E — R
Gas Fuel Model (LP)

705CW-4R/131F

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F — R
Gas Fuel Model (LP)

705CW-4R/131G

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G — R
Gas Fuel Model (LP)

705CW-4R/131H

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H — R
Gas Fuel Model (LP)

705CW-4R/131J

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J — R
Gas Fuel Model (LP)

705CW-4R/316F

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec F — R
*159A472 Reservoir Tank Assy.

705CW-4R/316H

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec H — R
*159A472 Reservoir Tank Assy.

705CW-4R/363G

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Code 75 (W.D. 625A23)
Engine - Spec G — R
*159A472 Reservoir Tank Assy.
Oil Base Heater

705CW-4R/507J

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J — R
*403K474 Mounting Skid Kit
(Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

705CW-4R/665F

Generator - 705CW/94
Control - Code 81 (W.D. 611C279)
338B205 Harness Assembly
(Magneto to Stop
Relay)
Engine - Spec F — R

705CW-4R/703H

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Code 67 (W.D. 615B92)
Engine - Spec H — R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-4R/704J

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-4R/710E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E — R

705CW-4R/1233J

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J — R
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-4R/1304E

Generator - 705CW/81
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E — R
*159A472 Reservoir Tank Assy.

705CW-4R/1369F

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec F — R

705CW-4R/1369H

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Code 69 (W.D. 615B103)
Engine - Spec H — R

705CW-4R/1372E

Generator - 705CW4C1C
Control - Code 51 (W.D. 611C208)
Code 67 (W.D. 615B92)
Engine - Spec E — R
*159A472 Reservoir Tank Assy.
309B10 Low Oil Pressure
Cut off Switch
*405K1078 Housing, Tank and
Skid Kit (Less
Muffler)
155B77 Exhaust Muffler

705CW-4R/1706F

Generator - 705CW4C1C
Control - Code 91 (W.D. 611C311)
Code 122 (W.D. 615B174)
Engine - Spec F — R
149B557 Electric Fuel Pump
307B4 Fuel Pump Relay
*405C1146 Housing Assembly
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit
501A4 Fuel Pump to
Carburetor Line

705CW-4R/1728G

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Engine - Spec G — R
R.T.F. Intake Manifold
R.T.F. Carburetor Assembly

705CW-4R/1835G

Generator - 705CW4C1C
Control - Code 81 (W.D. 611C279)
Code 69 (W.D. 615B103)
Engine - Spec G — R
309B10 Low Oil Pressure
Cut off Switch

R. T. F. - Refer to Factory. Include Model & Serial Number of Unit.

* - Refer to Accessory Section for Component Parts.

(Cont. next page)

MODEL DATA SECTION

705CW-4R/1835G (Cont.)

336A1202 Lead (Oil Pressure Switch to Momentary Contact Switch)
 309P77 High Air Temperature Cut off Switch
 134A757 Blower Housing
 134A758 Blower Hsg. Scroll
 134A711 Air Outlet Grille - Housing
 Gas-Gasoline Model

705CW-4R/1847H

Generator - 705CW4C1C
 Control - Code 94 (W.D. 611C324)
 Code 122 (W.D. 615B174)
 Engine - Spec H—R
 *159A472 Reservoir Tank Assy.
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Oil Pressure Switch to Momentary Contact Switch)
 134A757 Blower Housing
 134A758 Blower Hsg. Scroll
 134A711 Air Outlet Grille - Housing
 309P77 Temp. Cut off Switch

705CW-4R/1871H

Generator - 705CW4C1C
 Control - Code 94 (W.D. 611C324)
 Code 69 (W.D. 615B103)
 Engine - Spec H—R
 Gas Fuel Model

705CW-4R/1930H

Generator - 705CW4C1C
 Control - Code 94 (W.D. 611C324)
 Code 75 (W.D. 625A23)
 Engine - Spec H—R
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Oil Pressure Switch to Momentary Contact Switch)
 309P77 High Air Temperature Cut off Switch
 134A757 Blower Housing
 134A758 Blower Hsg. Scroll
 134A711 Air Outlet Grille - Housing
 *405D1146 Housing Assembly
 *403K474 Mounting Skid Kit (Less Muffler)
 *416K334 Battery Rack Kit
 155B77 Exhaust Muffler
 Gas Fuel Model
 Oil Base Heater

705CW-4R/1982J

Generator - 705CW4C1C
 Control - Code 94 (W.D. 611C324)
 Code 67 (W.D. 615B92)
 Engine - Spec J—R
 Gas Fuel Model

705CW-4R31/1149F

Generator - 705CW4C1C
 Control - Code 81 (W.D. 611C279)
 Code 74 (W.D. 615B139)
 Engine - Spec F—R
 Gas Fuel Model

705CW-5E/1818H

Generator - 705CW/110
 Control - Code 99 (W.D. 611B330)
 Engine - Spec H—R
 123A206 Oil Level Indicator
 123A209 Oil Fill Tube
 123A92 Oil Fill Tube Gasket
 102A453 Oil Base Opening Cover
 123A671 Breather Adapter
 123A668 Breather Tube
 141B642 Gas Carburetor (LP)
 502-138 Elbow - Carburetor
 502-230 Elbow - Carburetor
 140B574 Bracket (Oil Filter and Air Cleaner Mounting)
 502-53 Elbow (Oil Sender Mounting - 45°)
 193A108 Oil Pressure Sender Unit
 122C189 Line (Oil Filter Inlet)
 122C190 Line (Oil Filter Outlet)
 140B564 Air Cleaner
 140B565 Air Cleaner Inlet Cap
 140A566 Saddle Bracket (Air Cleaner)
 503A367 Air Cleaner Hose
 503P365 Air Cleaner Hose Clamp (2)
 503A275 Air Cleaner Breather Hose
 134D1032 Cylinder Shroud - R. H.
 155B707 Exhaust Muffler

705CW-5R/1F

Generator - 705CW5C1C
 Control - Code 81 (W.D. 611C279)
 Engine - Spec F—R

705CW-5R/1G

Generator - 705CW5C1C
 Control - Code 81 (W.D. 611C279)
 Engine - Spec G—R

705CW-5R/1H

Generator - 705CW5C1C
 Control - Code 94 (W.D. 611C324)
 Engine - Spec H—R

705CW-5R/1J

Generator - 705CW5C1C
 Control - Code 94 (W.D. 611C324)
 Engine - Spec J—R

705CW-5R/507F

Generator - 705CW5C1C
 Control - Code 81 (W.D. 611C279)
 Engine - Spec F—R
 *403K474 Mounting Skid Kit (Less Muffler)
 *416K334 Battery Rack Kit
 155B77 Exhaust Muffler

705CW-5R/710G

Generator - 705CW5C1C
 Control - Code 81 (W.D. 611C279)
 Code 67 (W.D. 615B92)
 Engine - Spec G—R

705CW-5R/1233H

Generator - 705CW5C1C
 Control - Code 94 (W.D. 611C324)
 Engine - Spec H—R
 *405D1146 Housing Assembly
 *403K474 Mounting Skid and Muffler Kit
 *416K334 Battery Rack Kit

705CW-5R/1316E

Generator - 705CW5C1C
 Control - Code 51 (W.D. 611C208)
 Code 67 (W.D. 615B92)
 Code 75 (W.D. 625A23)
 Engine - Spec E—R
 309-10 Low Oil Pressure Cut off Switch
 Oil Base Heater

705CW-5R/1651F

Generator - 705CW5C1C
 Control - Code 81 (W.D. 611C279)
 Engine - Spec F—R
 Gas Fuel Model

705CW-5R/1895H

Generator - 705CW5C1C
 Control - By Customer
 Engine - Spec H—R

705CW-5R/2028J

Generator - 705CW/123
 Control - By Customer
 Engine - Spec J—R
 122B196 Line - Oil Filter Inlet
 (Cont. next page)

MODEL DATA SECTION

57

705CW-5R/2028J(Cont.)

122B197 Line - Oil Filter
Outlet
502-3 Oil Line Connector
(4)
501B10 Oil Line - Flexible
(2)
122B194 Oil Line Prkt. Assy.
309B10 Low Oil Pressure
Cut off Switch
154C681 Exhaust Manifold
134A1095 Blower Housing
134A1078 Air Outlet Adapter -
Housing
149A555 Fuel Pump Hole
Cover
336A1297 Magneto Stop Lead

705CW-6E/1818H

Generator - 705CW/112
Control - Code 101(W.D.611B332)
Engine - Spec H—R
123A206 Oil Level Indicator
123A209 Oil Fill Tube
123A92 Oil Fill Tube Gasket
102A453 Oil Base Opening
Cover
123A671 Breather Tube
123A668 Breather Tube
141B642 Gas Carburetor (LP)
502-138 Elbow - Carburetor
502-230 Elbow - Carburetor
140B574 Bracket (Oil Filter
and Air Cleaner
Mounting)
502-53 Elbow (Oil Sender
Mounting - 45°)
193A108 Oil Pressure Sender
Unit
122C189 Line (Oil Filter Inlet)
122C190 Line (Oil Filter
Outlet)
140B564 Air Cleaner
140B565 Air Cleaner Inlet
Cap
140A566 Saddle Bracket (Air
Cleaner)
503A367 Air Cleaner Hose
503P365 Air Cleaner Hose
Clamp (2)
503A275 Air Cleaner Breather
Hose
134D1032 Cylinder Shroud -
Right Hand
155B707 Exhaust Muffler

705CW-6E/2037J

Generator - 705CW/112
Control - Code 111(W.D.611B358)
Engine - Spec J—R
(Cont. next column)

705CW-6E/2037J (Cont.)

123A206 Oil Level Indicator
123A209 Oil Fill Tube
123A92 Oil Fill Tube Gasket
102A453 Oil Base Opening
Cover
123A668 Breather Tube
123A671 Breather Adapter
141B642 Gas Carburetor (LP)
502-138 Elbow - Carburetor
502-230 Elbow - Carburetor
140B574 Bracket (Oil Filter
and Air Cleaner
Mounting)
502-53 Elbow (Oil Sender
Mounting - 45°)
193A108 Oil Pressure
Sender Unit
122C189 Line (Oil Filter
Inlet)
122C190 Line (Oil Filter
Outlet)
140B564 Air Cleaner
140B565 Air Cleaner Inlet
Cap
140A566 Saddle Bracket
(Air Cleaner)
503A367 Air Cleaner Hose
503P365 Air Cleaner Hose
Clamp (2)
503A275 Air Cleaner
Breather Hose
154C681 Exhaust Manifold
134D1032 Cylinder Shroud -
Right Hand

705CW-6R/1F

Generator - 705CW6C1C
Control - Code 81(W.D.611C279)
Engine - Spec F—R

705CW-6R/1G

Generator - 705CW6C1C
Control - Code 81(W.D.611C279)
Engine - Spec G—R

705CW-6R/1H

Generator - 705CW6C1C
Control - Code 94(W.D.611C324)
Engine - Spec H—R

705CW-6R/1J

Generator - 705CW6C1C
Control - Code 94(W.D.611C324)
Engine - Spec J—R

705CW-6R/12H

Generator - 705CW6C1C
Control - Code 95(W.D.611C325)
Engine - Spec H—R
Gas-Gasoline Model

705CW-6R/13H

Generator - 705CW6C1C
Control - Code 94(W.D.611C324)
Engine - Spec H—R
Gas Fuel Model

705CW-6R/704F

Generator - 705CW6C1C
Control - Code 81(W.D.611C279)
Engine - Spec F—R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

705CW-6R/704H

Generator - 705CW6C1C
Control - Code 94(W.D.611C324)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-6R/1484F

Generator - 705CW6C1C
Control - Code 81(W.D.611C279)
Code 115(W.D.615B161)
Engine - Spec F—R
*159K478 Fuel Tank Assembly
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and Fuel
Tank Support Kit

10CW-4R/663H

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Engine - Spec H—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-4R/663J

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Engine - Spec J—R
*159K478 Fuel Tank Kit
*405C1146 Housing Assembly
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-4R/1835J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 69 (W.D. 615B103)
Engine - Spec J — R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Low Oil
Pressure Switch
to Momentary Con-
tact Switch)
309P77 High Air Tempera-
ture Cut off Switch
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Housing
Scroll

10CW-3R/710J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 64 (W.D. 615B87)
Engine - Spec J — R

10CW-3R/2134J

Generator - 10CW3C1C
Control - Code 106 (W.D. 611C345)
Code 64 (W.D. 615B87)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery Rack Kit

10CW-4R/2136J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec J — R
Gas-Gasoline Model
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

5CW-3R/391C

Generator - 5CW3C1B
Control - Code 22 (W.D. 611C121)
Engine - Spec C — R
*159A472 Reservoir Tank Assy
309B10 Low Oil Pressure
Cut off Switch

6CW-52R/316J

Generator - 6CW53C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.

10CW-3E/1837J

Generator - 10CW/101
Control - Code 96 (W.D. 611C326)
Engine - Spec J — R
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve - Stellite
(2)
110-620 Valve Rotator (4)
110A1191 Intake Valve Seat
Insert - Stellite (2)
309B10 Low Oil Pressure Cut
off Switch
336A1202 Lead (Cut off Switch to
Momentary Contact
Switch)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.

10CW-3E/1841J

Generator - 10CW/109
Control - Code 96 (W.D. 611C326)
Engine - Spec J — R
154D562 Exhaust Manifold
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.

10CW-3E/1991J

Generator - 10CW/118
Control - Code 96 (W.D. 611C326)
Engine - Spec J — R
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve -
Stellite (2)
110B1195 Exhaust Valve -
Stellite (2)
110-620 Valve Rotator (4)
110A1191 Intake Valve Seat
Insert - Stellite (2)
309-10 Low Oil Pressure
Cut off Switch

(Cont. next column)

10CW-3E/1991J (Cont.)

336A1202 Lead (Cut off
Switch to Mo-
mentary Con-
tact Switch)
502-20 Oil Gauge Elbow
(2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.

10CW-3E/2203J

Generator - 10CW/118
Control - Code 96 (W.D. 611C326)
Engine - Spec J — R
154C727 Exhaust Manifold
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve -
Stellite (2)
110B1195 Exhaust Valve -
Stellite (2)
110-620 Valve Rotator (4)
110A1191 Intake Valve Seat
Insert - Stellite (2)
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
502-20 Oil Gauge Elbow (2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Control Rod
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
134A1169 Blower Housing
Front Panel
134A1095 Blower Housing Scroll

10CW-3E/2217J

Generator - 10CW/69
Control - Code 96 (W.D. 611C326)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
502-20 Oil Gauge Elbow (2)
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
154D562 Exhaust Manifold
110-620 Valve Rotator (4)

(Cont. next page)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

59

10CW-3E/2217J (Cont.)

110A1191 Intake Valve Seat
Insert - Stellite (2)
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Rod Bracket -
Carburetor
153A18 Choke Control Rod
110C1200 Cylinder Block - R.H.
110C1201 Cylinder Block - L.H.
110B1193 Intake Valve - Stellite
(2)
110B1195 Exhaust Valve -
Stellite (2)

10CW-3R/886J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 75 (W.D. 625A23)
Engine - Spec J—R
Oil Base Heater
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank
Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/933J

Generator - 10CW3C1C
Control - Code 97 (W.D. 611C327)
Code 68 (W.D. 615B95)
Engine - Spec J—R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/1898J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 68 (W.D. 615B95)
Engine - Spec J—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/1970J

Generator - 10CW/91
Control - Code 97 (W.D. 611C327)
Engine - Spec J—R
154D562 Exhaust Manifold
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-3R/1982J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Code 64 (W.D. 615B87)
Engine - Spec J—R
Gas Fuel Model

10CW-3R/2150J

Generator - 10CW3C1C
Control - Code 106 (W.D. 611C345)
Code 68 (W.D. 615B95)
Engine - Spec J—R
*159A472 Reservoir Tank Assy.
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.

10CW-3R/2170J

Generator - 10CW3C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec J—R
Oil Base Heater
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch to
Momentary Contact
Switch)
134B1020 Blower Housing Front
Panel
148C418 Vaporizer Assembly
(Zenith #A963B-1)
Mounts on Blower
Housing Front Panel
148C423 Vaporizer Mounting
Bracket
502-231 Vaporizer Outlet Union
148C429 Line (Carburetor to
Vaporizer)
332-50 Vaporizer Line Clip(2)
141B637 Gas Carburetor (LP)
502-138 Elbow - Carburetor
502-230 Elbow - Carburetor
520A429 Carburetor Mounting
Stud (2)
145A231 Spacer (Carburetor to
Manifold)
503A366 Air Cleaner Breather
Hose

10CW-3R/2182J

Generator - 10CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J—R
Gas Fuel Model
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid Kit
(Less Muffler)

10CW-3R/2189J

Generator - 10CW/135
Control - Code 100 (W.D. 611C331)
Code 120 (W.D. 615B168)
Engine - Spec J—R
Gas-Gasoline Model
Oil Base Heater
*159A472 Reservoir Tank Assy
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)

10CW-4E/1689J

Generator - 10CW/133
Control - Code 108 (W.D. 611C347)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Cut off Switch
to Momentary Con-
tact Switch)
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
154D562 Exhaust Manifold
141-172 Choke Shaft Lever -
Carburetor
141A496 Choke Control Rod -
Carburetor
153A18 Choke Control Rod

10CW-4R/663E

Generator - 10CW4C1C
Control - Code 51 (W.D. 611C208)
Engine - Spec E—R
*405K1078 Housing, Tank and
Skid Kit

10CW-4R/1400J

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec J—R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut off Switch
336A1202 Lead (Oil Pressure
Switch to Momentary
Contact Switch)
309P77 High Air Temperature
Cut off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille

10CW-4R/2146J

Generator - 10CW/133
Control - Code 126 (W.D. 611C368)
Engine - Spec J—R
309B10 Low Oil Pressure
Cut off Switch

* - Refer to Accessory Section for Component Parts.

(Cont. next page)

MODEL DATA SECTION

10CW-4R/2146J (Cont.)

336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 102E465 Oil Base
 122-91 Oil Filter Assembly
 122C204 Oil Filter Outlet Line
 122C205 Oil Filter Inlet Line
 502-2 Oil Filter Outlet Elbow
 502-20 Oil Gauge Elbow (2)
 110A300 Filter Mounting Spacer (4)
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 416A50 Battery Cable (2)

10CW-4R/2195J

Generator - 10CW4C1C
 Control - Code 95 (W.D. 611C325)
 Code 67 (W.D. 615B92)
 Code 75 (W.D. 625A23)
 Engine - Spec J—R
 Gas Fuel Model
 Oil Base Heater
 *405D1146 Housing Assembly
 *416K334 Battery Rack Kit
 *403K474 Mounting Skid Kit (Less Muffler)

10CW-5DR/1849J

Generator - 10CW/103
 Control - Code 110 (W.D. 611C356)
 Engine - Spec J—R
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)
 110A1204 Valve Spring Retainer (4)
 110A1191 Intake Valve Seat Insert - Stellite (2)
 110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 134B1020 Blower Housing Front Panel
 148A418 Vaporizer Assembly (Zenith #A963B-1)
 148A423 Vaporizer Mounting Bracket
 502-231 Vaporizer Outlet Union
 148C429 Line (Carburetor to Vaporizer)
 332-50 Vaporizer Line Clip (2)

10CW-5DR/1849J (Cont.)

141B637 Gas Carburetor (LP)
 502-138 Elbow - Carburetor
 502-230 Elbow - Carburetor
 520A429 Carburetor Mounting Stud (2)
 145A231 Spacer (Carburetor to Manifold)
 503A366 Air Cleaner Breather Hose

10CW-5R/710J

Generator - 10CW5C1C
 Control - Code 94 (W.D. 611C324)
 Code 67 (W.D. 615B92)
 Engine - Spec J—R

10CW-6R/12J

Generator - 10CW6C1C
 Control - Code 95 (W.D. 611C325)
 Engine - Spec J—R
 Gas-Gasoline Model

10CW-6R/710J

Generator - 10CW6C1C
 Control - Code 94 (W.D. 611C324)
 Code 125 (W.D. 615B186)
 Engine - Spec J—R

10CW-150R/663J (Magnet Use)

Generator - 10CW150N1A
 Control - Code 24 (W.D. 611B127)
 338B134 Harness Assembly
 301A1612 Control Mounting Bracket
 Engine - Spec J—R
 *405D1146 Housing Assembly
 *159K478 Fuel Tank Kit
 *416K334 Battery and Fuel Tank Rack Kit
 *403K474 Mounting Skid and Muffler Kit
 416A37 Battery Cable - 48"
 416A77 Battery Cable - 28"

705CW-3E/2148J

Generator - 705CW/119
 Control - Code 96 (W.D. 611C326)
 Engine - Spec J—R
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 502-20 Oil Gauge Elbow (2)
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 154D562 Exhaust Manifold
 110-620 Valve Rotator (4)

(Cont. next column)

705CW-3E/2148J (Cont.)

110A1191 Intake Valve Seat Insert - Stellite (2)
 141-172 Choke Shaft Lever - Carburetor
 141A496 Choke Rod Bracket - Carburetor
 153A18 Choke Control Rod
 110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)

705CW-3E/2203J

Generator - 705CW/119
 Control - Code 96 (W.D. 611C326)
 Engine - Spec J—R
 154C727 Exhaust Manifold
 110C1200 Cylinder Block - R.H.
 110C1201 Cylinder Block - L.H.
 110B1193 Intake Valve - Stellite (2)
 110B1195 Exhaust Valve - Stellite (2)
 110-620 Valve Rotator (4)
 110A1191 Intake Valve Seat Insert - Stellite (2)
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)
 502-20 Oil Gauge Elbow (2)
 141-172 Choke Shaft Lever - Carburetor
 141A496 Choke Rod Bracket - Carburetor
 153A18 Choke Control Rod
 167A1277 Sp. Plug Cable - R.H.
 167A1278 Sp. Plug Cable - L.H.
 134A1169 Blower Housing Front Panel
 134A1095 Blower Housing Scroll

705CW-3R17/1J (X-Ray Model)

Generator - 705CW3C2C
 Control - Code 97 (W.D. 611C327)
 Engine - Spec J—R

705CW-3R/980J

Generator - 705CW/92
 Control - Code 97 (W.D. 611C327)
 Engine - Spec J—R
 309B10 Low Oil Pressure Cut off Switch
 336A1202 Lead (Cut off Switch to Momentary Contact Switch)

(Cont. next column)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

61

705CW-3R/1454J

Generator - 705CW3C1C
Control - Code 97 (W.D. 611C327)
Engine - Spec J — R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid Kit (Less Muffler)
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

705CW-3R/1983J

Generator - 705CW3C1C
Control - Code 100 (W.D. 611C331)
Engine - Spec J — R
Gas Fuel Model
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)

705CW-3R/2146J

Generator - 705CW/134
Control - Code 127 (W.D. 611C369)
Engine - Spec J — R
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
102E465 Oil Base
122-91 Oil Filter Assembly
122C204 Oil Filter Outlet Line
122C205 Oil Filter Inlet Line
502-2 Oil Filter Outlet Elbow
502-20 Oil Gauge Elbow (2)
110A300 Filter Mounting Spacer (4)
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
416A50 Battery Cable (2)

705CW-3R/2182J

Generator - 705CW3C1C
Control - 100 (W.D. 611C331)
Engine - Spec J — R
Gas Fuel Model
*405D1146 Housing Assembly
*416K334 Battery Rack Kit
*403K474 Mounting Skid Kit (Less Muffler)

705CW-3R17/704J (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97 (W.D. 611C327)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

705CW-4R/663J

Generator - 705CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec J — R
*405D1146 Housing Assembly
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

705CW-4R/1982J

Generator - 705CW4C1C
Control - Code 95 (W.D. 611C325)
Code 67 (W.D. 615B92)
Engine - Spec J — R
Gas Fuel Model

705CW-4R/2155J

Generator - 705CW4C1C
Control - Code 95 (W.D. 611C325)
Code 75 (W.D. 625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure Cut off Switch
336A1202 Lead (Cut off Switch to Momentary Contact Switch)
336A138 Lead (Oil Base Heater) 2
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery Rack Kit

705CW-4R31/2089J

Generator - 705CW4C1C
Control - Code 95 (W.D. 611C325)
Code 75 (W.D. 625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit (Less Muffler)
*416K334 Battery Rack Kit
155B77 Exhaust Muffler

10CW-3R/1802G

Generator - 10CW3C1C
Control - Code 83 (W.D. 611C283)
Code 75 (W.D. 625A23)
Code 64 (W.D. 615B87)
Engine - Spec G — R
Oil Base Heater
*405D1146 Housing Assembly
*403K474 Mounting Skid Kit
*416K334 Battery Rack and Fuel Tank Support Kit

CW-S/251 J (Industrial Engine)

Engine See ★ Below
191P77 Starter Motor - 6 Volt

6CW-53R/1K

Generator - 6CW53C1C
Control - Code 97 (W. D. 611C327)
Engine - Spec K — R

6CW-53R/1L

Generator - 6CW53C1C
Control - Code 154 (W. D. 611C498)
Engine - Spec L — R

6CW-53R/316L

Generator - 6CW53C1C
Control - Code 154 (W. D. 611C498)
Engine - Spec L — R

*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

6CW-53R/663J

Generator - 6CW53C1C
Control - Code 97 (W. D. 611C327)
Engine - Spec J — R

*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit

*416K334 Battery and Fuel Tank Rack Kit

*159K478 Fuel Tank Kit

6CW-53R/703J

Generator - 6CW53C1C
Control - Code 97 (W. D. 611C327)
Code 64 (W. D. 615B87)

Engine - Spec J — R
*403K474 Mounting Skid and Muffler Kit

*416K334 Battery and Fuel Tank Rack Kit

*159K478 Fuel Tank Kit

6CW-53R/2150L

Generator - 6CW53C1C
Control - Code 164 (W. D. 611C512)
Code 68 (W. D. 615B95)

Engine - Spec L — R

*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
167A125 Spark Plug (2)
167A1263 Spark Plug Cable - R.H.
167A1264 Spark Plug Cable - L.H.
338B281 Choke and Magneto Wiring Harness

* - Refer to Accessory Section for Component Parts.

★ - Standard Engine Parts have been listed in the Engine Section with these symbols preceding the parts description:

MODEL DATA SECTION

6CW-53R/2448J

Generator - 6CW53C1C
Control - Code 144 (W.D.611C442)
Engine - Spec J — R
Oil Base Heater
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
149P554 Fuel Pump - 12 Volt
307B565 Fuel Solenoid Valve-
12 V.
505-61 Pipe Nipple - 1/8 x 2"
501-5 Fuel Line - Flex.
(18-1/2")
505-85 Pipe Nipple - 3/4 x 2
505-307 Reducer Coupling -
3/4 x 1/2

6CW-53R17/663J (X-Ray Model)

Generator - 6CW/102
Control - Code 97 (W.D.611C327)
Engine - Spec J — R
*405D1146 Housing Assy.
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank
Rack Kit
*403K474 Mounting Skid and
Muffler Kit

6CW-53R17/2612J (X-Ray Model)

Generator - 6CW/102
Control - Code 151 (W.D.611C459)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

6CW-53R17/2612L (X-Ray Model)

Generator - 6CW/102
Control - Code 166 (W.D.611C515)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

6CW-54R/1K

Generator - 6CW54C1C
Control - Code 95 (W.D.611C325)
Engine - Spec K — R

6CW-54R/1L

Generator - 6CW54C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R

6CW-55R/663J

Generator - 6CW55C1C
Control - Code 94 (W.D.611C324)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

6CW-55R/663L

Generator - 6CW55C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid
and Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

6CW-57R/1K

Generator - 6CW57C1C
Control - Code 95 (W.D.611C325)
Engine - Spec K — R

6CW-57R/1L

Generator - 6CW57C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R

8CW-53R/1J

Generator - 8CW53C1C
Control - Code 97 (W.D.611C327)
Engine - Spec J — R

8CW-53R/1L

Generator - 8CW53C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R

8CW-53R/316K

Generator - 8CW53C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank
Support

8CW-53R/663L

Generator - 8CW53C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

8CW-53R/704L

Generator - 8CW53C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

8CW-57R/1K

Generator - 8CW57C1C
Control - Code 94 (W.D.611C324)
Engine - Spec K — R

8CW-57R/1L

Generator - 8CW57C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R

8CW-57R/703J

Generator - 8CW57C1C
Control - Code 94 (W.D.611C324)
Code 73 (W.D.615B137)
Engine - Spec J — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

8CW-57R/703L

Generator - 8CW57C1C
Control - Code 155 (W.D.611C499)
Code 73 (W.D.615B137)
Engine - Spec L — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

8CW-57R/704L

Generator - 8CW57C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit

8CW-57XR/1J

Generator - 8CW/143
Control - Code 94 (W.D.611C324)
Engine - Spec J — R

8CW-57XR/1L

Generator - 8CW/143
Control - Code 155 (W.D.611C499)
Engine - Spec L — R

* - Refer to Accessory Section for Component Parts

MODEL DATA SECTION

63

8CW-57XR/2524J

Generator - 8CW/143
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model
141B654 Carburetor (LPG)
145A231 Spacer (Carburetor to Manifold)
503A366 Air Cleaner Breather Hose
134B1020 Blower Housing Front Panel
148C429 Line (Carburetor to Vaporizer)
332-50 Vaporizer Line Clip (2)
148A418 Vaporizer Assy. (Zenith #A963B-1) Mts. on Blower Hsg. Front Panel
148A423 Vaporizer Mtg. Bracket
502-231 Vaporizer Outlet Union

8CW-57XR/2808K

Generator - 8CW/143
Control - Code 95 (W.D.611C325)
Engine - Spec K — R
Gas Fuel Model
134B1020 Blower Housing Front Panel
148C429 Line (Carburetor to Vaporizer)
332-50 Vaporizer Line Clip (2)
148A418 Vaporizer Assy. (Zenith #A963B-1) Mts. on Blower Housing Front Panel
148A423 Vaporizer Mtg. Bracket
502-231 Vaporizer Outlet Union
141B654 Gas Carburetor (LPG)
145A231 Spacer (Carburetor to Manifold)
503A366 Air Cleaner Breather Hose
154D562 Exhaust Manifold

10CW-1R/30K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

10CW-1R/30L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

10CW-1R/31K

Generator - 10CW 3C1C
Control - Code 100(W.D.611C331)
Engine - Spec K — R
Gas Fuel Model

10CW-1R/31L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas Fuel Model

10CW-1R/931L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 118(W.D.615B164)
Engine - Spec L — R
Gas-Gasoline Model

10CW-1R/1114K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 114(W.D.615B121)
Engine - Spec K — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery & Fuel Tank Rack Kit
309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)

10CW-1R/1287J

Generator - 10CW3C1C
Control - Code 97(W.D.611C327)
Code 114(W.D.615B121)

10CW-1R/1287J (Cont.)

Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-1R/3628L

Generator - 10CW/141
Control - Code 163(W.D.611C511)
Code 114(W.D.615B121)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
*405D1146 Housing Assy.
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
308-97 Momentary Switch
309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
502-57 Pipe Tee - To Oil Filter
502-58 Pipe Tee - To Cut-Off Switch
502-3 Inverted Male Connector
309P77 Hi-Temp. Cut-Off Switch
150A717 Overspeed Switch
336A138 Lead (Oil Base Heater) 2
150A852 Overspeed Switch Cover
336A1335 Lead - Overspeed Switch
134A711 Blower Housing Grill
134A758 Blower Housing Scroll
134A757 Blower Housing

10CW-3E/1775K

Generator - 10CW/69
Control - Code 133(W.D.611C395)
Engine - Spec K — R
338B217 Wiring Harness Assy.
309B10 Low Oil Pressure Cut-Off Switch
502-20 Oil Gauge Elbow (2)
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
141B637 Gas Carburetor (LPG)
502-138 Elbow, Carburetor
502-230 Elbow, Carburetor
145A231 Spacer (Carburetor to Manifold)

(Cont. on next Page)

MODEL DATA SECTION

10CW-3E/1775K (Cont.)

154D562	Exhaust Manifold
110B1193	Intake Valve - Stellite (2)
110B1195	Exhaust Valve - Stellite (2)
110A1204	Valve Spring Retainer (4)
110A1191	Intake Valve Seat Insert - Stellite (2)
503A366	Air Cleaner Breather Hose
134B1020	Blower Housing Front Panel
148A418	Vaporizer Assy. (Zenith #A-963B-1) (Mounts on Blower Hsg. Front Panel)
148A423	Vaporizer Mtg. Bracket
148C429	Carburetor to Vaporizer Line
332-50	Vaporizer Fuel Line Clip (2)
502-231	Vaporizer Outlet Union Gas Fuel Model (LPG)

10CW-3E/1776K

Generator - 10CW/69	
Control - Code 96(W.D.611C326)	
Engine - Spec K — R	
338B217	Wiring Harness Assy.
309B10	Low Oil Pressure Cut-Off Switch
336A1202	Lead (Cut-Off Switch to Momentary Contact Switch)
502-20	Oil Gauge Elbow (2)
167A1277	Sp. Plug Cable - R. H.
167A1278	Sp. Plug Cable - L. H.
154D562	Exhaust Manifold
110-620	Valve Rotator (4)
110A1191	Intake Valve Seat Insert - Stellite (2)
141-172	Choke Shaft Lever - Carburetor
141A496	Choke Rod Bracket - Carburetor
153A18	Choke Control Rod
110B1193	Intake Valve - Stellite (2)
110B1195	Exhaust Valve - Stellite - (2)

10CW-3E/1824K

Generator - 10CW/69	
Control - Code 133(W.D.611C395)	
Engine - Spec K — R	
338B217	Wiring Harness Assy.
309B10	Low Oil Pressure Cut-Off Switch
336A1202	Lead (Cut-Off Switch to Momentary Contact Switch)

10CW-3E/1824K (Cont.)

502-20	Oil Gauge Elbow (2)
167A1277	Sp. Plug Cable -R.H.
167A1278	Sp. Plug Cable -L.H.
154D562	Exhaust Manifold
134B1020	Blower Housing Front Panel
148A418	Vaporizer Assy. (Zenith #A963B-1) (Mounts on Blower Housing Front Panel)
148A423	Vaporizer Mtg. Bracket
141B637	Gas Carburetor (LPG)
502-138	Elbow - Carburetor
502-230	Elbow - Carburetor
145A231	Spacer (Carburetor to Manifold)
503A266	Air Cleaner Breather Hose

10CW-3E/2206J

Generator - 10CW/137	
Control - Code 129(W.D.611C384)	
Engine - Spec J — R	
154D562	Exhaust Manifold
167A1277	Sp. Plug Cable - R.H.
167A1278	Sp. Plug Cable -L.H.
141-172	Choke Shaft Lever - Carb.
141A496	Choke Rod Bracket - Carb.
153A18	Choke Rod

10CW-3E/2206K

Generator - 10CW/137	
Control - Code 129(W.D.611C384)	
Engine - Spec K — R	
154D562	Exhaust Manifold
167A1277	Sp. Plug Cable - R. H.
167A1278	Sp. Plug Cable - L. H.
141-172	Choke Shaft Lever - Carb.
141A496	Choke Rod Bracket - Carb.
153A18	Choke Rod

10CW-3E/2220J

Generator - 10CW/137	
Control - Code 130(W.D.611C386)	
Engine - Spec J — R	
154D562	Exhaust Manifold
167A1277	Sp. Plug Cable - R. H.
167A1278	Sp. Plug Cable - L. H.

10CW-3E/2220J (Cont.)

141-172	Choke Shaft Lever - Carb.
141A496	Choke Rod Bracket - Carb.
153A18	Choke Rod

10CW-3E/2428K

Generator - 10CW/118	
Control - Code 143(W.D.611C427)	
Engine - Spec K — R	
102E465	Oil Base
309B10	Low Oil Pressure Cut-Off Switch
336A1202	Lead (Cut-Off Switch to Momentary Contact Switch)
308-97	Momentary Contact Switch
502-58	Brass Pipe Tee (Cut-Off Switch)
167A1277	Sp. Plug Cable - L. H.
167A1278	Sp. Plug Cable - R. H.
110A620	Valve Rotator (4)
110B1193	Intake Valve - Stellite (2)
110B1195	Exhaust Valve - Stellite (2)
141-172	Choke Shaft Lever - Carb.
153A18	Choke Control Rod
153A347	Choke Rod Bracket - Carb.
134D1208	Air Discharge Elbow
134-1218	Cylinder Shroud - Upper - L. H.
134-1219	Cylinder Shroud - Lower - L. H.
134-1220	Cylinder Shroud - Upper - R. H.
134-1221	Cylinder Shroud - Lower - R. H.
134D1095	Blower Housing Scroll

10CW-3E/2537J

Generator - 10CW/69	
Control - Code 96(W.D.611C326)	
Engine - Spec J — R	
338B217	Wiring Harness Assy.
167A1277	Sp. Plug Cable - R. H.
167A1278	Sp. Plug Cable - L. H.
153A18	Choke Rod
153A347	Choke Rod Bracket - Carb.
141-172	Choke Shaft Lever - Carb.
309-10	Low Oil Pressure Cut-Off Switch

(Cont. on next page.)

MODEL DATA SECTION

65

10CW-3E/2537J (Cont.)

- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-20 Oil Gauge Elbow (2)
- 134D1228 Blower Housing
- 154D761 Exhaust Manifold
- 110B1193 Intake Valve - Stellite (2)
- 110A1191 Intake Valve Seat Insert - Stellite (2)
- 110-620 Valve Rotators (4)

10CW-3E/2537K

- Generator - 10CW/69
- Control - Code 96(W.D.611C326)
- Engine - Spec K — R
- 338B217 Wiring Harness Assy.
- 167A1277 Sp. Plug Cable - R. H.
- 167A1278 Sp. Plug Cable - L. H.
- 153A18 Choke Rod
- 153A347 Choke Rod Bracket - Carb.
- 141-172 Choke Shaft Lever - Carb.
- 309-10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-20 Oil Gauge Elbow (2)
- 134D1228 Blow Housing
- 154D761 Exhaust Manifold
- 110B1193 Intake Valve - Stellite (2)
- 110A1191 Intake Valve Seat Insert - Stellite (2)
- 110-620 Valve Rotators (4)

10CW-3E/2770G

- Generator - 10CW/101
- Control - Code 88 (W.D.611C298)
- Engine - Spec G — R
- 309B10 Low Oil Pressure Cut-Off Switch
- 338B217 Wiring Harness Assy.
- 167A1277 Sp. Plug Cable - R. H.
- 167A1278 Sp. Plug Cable - L. H.
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 141-172 Choke Shaft Lever
- 141A496 Choke Control Rod Bracket
- 153A18 Choke Control Rod
- *405D1146 Housing Assy.
- *403K474 Mounting and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

10CW-3R/1K

- Generator - 10CW3C1C
- Control - Code 97(W.D.611C327)
- Engine - Spec K — R

10CW-3R/1L

- Generator - 10CW3C1C
- Control - Code 154(W.D.611C498)
- Engine - Spec L — R

10CW-3R/12K

- Generator - 10CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec K — R
- Gas-Gasoline Model

10CW-3R/12L

- Generator - 10CW3C1C
- Control - Code 158(W.D.611C505)
- Engine - Spec L — R
- Gas-Gasoline Model

10CW-3R/13K

- Generator - 10CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec K — R
- Gas Fuel Model

10CW-3R/13L

- Generator - 10CW3C1C
- Control - Code 158(W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model

10CW-3R/30K

- Generator - 10CW3C1C
- Control - Code 97(W.D.611C327)
- Engine - Spec K — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Assy.

415K3 Underground Fuel

Tank (55 Gal.) Includes Fittings

415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector

415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

10CW-3R/30L

- Generator - 10CW3C1C
- Control - Code 154(W.D.611C498)
- Engine - Spec L — R

*159A472 Reservoir Tank Assy.

159B752 Reservoir Tank Support

10CW-3R/30L (Cont.)

- 415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
- 415K7 Fuel Line - 5/6" x 25 Ft. Includes Elbows & Connector
- 415K45 Fuel Line - 3/8" x 25 Ft. Includes Elbows & Connector

10CW-3R/31K

- Generator - 10CW3C1C
- Control - Code 91(W.D.611C311)
- Engine - Spec K — R
- Gas Fuel Model

10CW-3R/31L

- Generator - 10CW3C1C
- Control - Code 158(W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model

10CW-3R/55J

- Generator - 10CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec J — R
- Gas-Gasoline Model

309B10 Low Oil Pressure Cut-Off Switch

308-97 Momentary Contact Switch

502-58 Pipe Tee - 1/8 (Oil Cut-Off Switch)

10CW-3R/96L

- Generator - 10CW3C1C
- Control - Code 154 (W.D.611C498)
- Engine - Spec L — R

309B10 Low Oil Pressure Cut-Off Switch

308-97 Momentary Contact Switch

502-58 Pipe Tee - 1/8 (Oil Cut-Off Switch)

10CW-3R/131K

- Generator - 10CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec K — R
- Gas Fuel Model (LPG)

10CW-3R/131L

- Generator - 10CW3C1C
- Control - Code 158(W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model (LPG)

141B675 Carburetor

145A231 Spacer - Carb. to Manifold

(Cont. on next page)

MODEL DATA SECTION

10CW-3R/131L (Cont.)

503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assy. (Zenith
#A963B-1) (Mounts on
Blower Housing Front
Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carburetor to Vaporizer
Line
332-50 Vaporizer Line Clip (2)

10CW-3R/211L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Base Heater
Gas-Gasoline Model

10CW-3R/248L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 75 (W.D.625A23)
Engine - Spec L — R
Oil Base Heater

10CW-3R/316K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/316L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/363J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
Oil Base Heater

10CW-3R/363K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
Engine - Spec K — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
Oil Base Heater

10CW-3R/363L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 75 (W.D.625A23)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank
Support
Oil Base Heater

10CW-3R/507J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec J — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW3R/507K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/507L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/561L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 75 (W.D.625A23)
Engine - Spec L — R
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support
308-97 Momentary Contact
Switch
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch
502-3 Inverted Male
Connector (2)
502-57 Brass Pipe Tee -
To Oil Filter
502-58 Brass Pipe Tee -
To Cut-Off Switch
Oil Base Heater

10CW-3R/565J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut-Off Switch
308-97 Momentary Contact
Switch
502-58 Brass Pipe Tee - To
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
Oil Base Heater

10CW-3R/612J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
102A279 Cover - Oil Base
Opening

10CW-3R/637J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/637L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas-Gasoline Model
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/663K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/663L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

67

10CW-3R/665J

Generator - 10CW/91
Control - Code 97 (W.D.611C327)
Engine - Spec J — R

10CW-3R/665K

Generator - 10CW/91
Control - Code 97 (W.D.611C327)
Engine - Spec K — R

10CW-3R/665L

Generator - 10CW/91
Control - Code 154 (W.D.611C498)
Engine - Spec L — R

10CW-3R/704L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-3R/710L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 64 (W.D.615B87)
Engine - Spec L — R

10CW-3R/742J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 64 (W.D.615B87)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/742L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 64 (W.D.615B87)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-3R/768J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 64 (W.D.615B87)
Engine - Spec J — R
Gas-Gasoline Model

10CW-3R/807K

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 75 (W.D.625A23)
Engine - Spec K — R
Gas-Gasoline Model
Oil Base Heater

10CW-3R/807K (Cont.)

309B10 Low Oil Pressure
Cut-Off Switch
308-97 Momentary Contact
Switch
502-58 Brass Pipe Tee -
To Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*405D1146 Housing Assy.
148A428 Gas Regulator
503-260 Hose - Gas
Regulator to
Carburetor

10CW-3R/823J

Generator - 10CW3C1C
Control - Code 139(W.D.611C410)
Code 64(W.D.615B87)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/862L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 75(W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater

10CW-3R/875K

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec K — R
Gas-Gasoline Model
*159K478 Fuel Tank Kit
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/875L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas-Gasoline Model
*159K478 Fuel Tank Assy.
*405C1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/875L (Cont.)

*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/912L

Generator - 10CW3C1C
Control - Code 173(W.D.611C592)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/980L

Generator - 10CW/91
Control - Code 154(W.D.611C498)
Engine - Spec L — R
309B10 Low Oil Pressure
Cut-Off Switch
308-97 Momentary Contact
Switch
502-58 Brass Pipe Tee -
To Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch

10CW-3R/984J

Generator - 10CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec J — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
309B10 Low Oil Pressure
Cut-Off Switch
*159K478 Fuel Tank Kit

10CW-3R/985J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit
309B10 Low Oil Pressure
Cut-Off Switch

10CW-3R/1000J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*403K474 Mounting Skid and
Muffler Kit

MODEL DATA SECTION

10CW-3R/1002J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*403K474 Mounting Skid and Muffler Kit
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/1114K

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 64 (W.D.615B87)
Engine - Spec K — R
*159K478 Fuel Tank Kit
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
309B10 Low Oil Pressure Cut-Off Switch

10CW-3R/1114L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 64 (W.D.615B87)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit
309B10 Low Oil Pressure Cut-Off Switch

10CW-3R/1194L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas-Gasoline Model
Oil Base Heater
309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
333A50 Thermostat Cover
102A349 Oil Base Opening Cover

10CW-3R/1203L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas Fuel Model
*403K474 Mounting Skid and Muffler Kit

10CW-3R/1203L (Cont.)

*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/1233K

Generator - 10CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec K — R
*405D1146 Housing Assy.
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

10CW-3R/1233L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Engine - Spec L — R
*405D1146 Housing Assy.
*416K334 Battery and Fuel Tank Rack Kit
*403K474 Mounting Skid and Muffler Kit

10CW-3R/1243L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 68(W.D.615B95)
Engine - Spec L — R
Gas-Gasoline Model
*405D1066 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/1282J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
309P77 Hi - Temp. Cut-Off Switch
134A711 Air Outlet Grille
134A757 Blower Housing
134A758 Blower Housing Scroll

10CW-3R/1282L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas-Gasoline Model

10CW-3R/1282L (Cont.)

309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
309P77 Hi - Temp Cut-Off Switch
134A711 Air Outlett Grille
134A757 Blower Housing
134A758 Blower Housing Scroll

10CW-3R/1287L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 64(W.D.615B87)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/1310L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
309B10 Low Oil Pressure Cut-Off Switch
336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)

10CW-3R/1371L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-3R/1477J

Generator - 10CW3C1C
Control - Code 113(W.D.611C363)
Code 64(W.D.615B87)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

MODEL DATA SECTION

69

10CW-3R/1604J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Code 75(W.D.625A23)
Engine - Spec J — R
Oil Base Heater
149P554 Fuel Pump - 12Volt
307B565 Fuel Solenoid Valve -
12 V.
501-4 Fuel Line - Flex. (18-1/2")
502-2 Inverted Male Elbow
505-61 Pipe Nipple - 1/8 x 2"

10CW-3R/1676L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
154D562 Exhaust Manifold

10CW-3R/1709L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas-Gasoline Model
Oil Base Heater
*159K478 Fuel Tank Kit
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*403K334 Battery and Fuel Tank
Rack Kit

10CW-3R/1791L

Generator - 10CW3C1C
Control - Code 164 (W.D.611C512)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
167A125 Spark Plug (2)
167A1263 Spark Plug Cable - R. H.
167A1264 Spark Plug Cable - L. H.

10CW-3R/1835J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 68 (W.D.615B95)
Engine - Spec J — R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch to
Momentary Contact
Switch)
309P77 Hi - Temp Cut-Off Switch
134A711 Air Outlet Grill
134A757 Blower Housing
134A758 Blower Housing Scroll

10CW-3R/1869L

Generator - 10CW3C1C
Control - Code 164(W.D.611C612)
Engine - Spec L — R
Gas Fuel Model
154A790 Intake Manifold
148A367 Vacuum Switch
148A531 Vacuum Switch
Line
502-3 Inverted Male
Connector (2) -
Vacuum Line

10CW-3R/1871L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 68(W.D.615B95)
Engine - Spec L — R
Gas Fuel Model

10CW-3R/1905L

Generator - 10CW3C1C
Control - Code 171(W.D.611C560)
Code 120(W.D.615B168)
Engine - Spec L — R
154D562 Exhaust Manifold
*403K474 Mounting Skid Kit
(Less Muffler)
155P190 Exhaust Muffler
414B441 Exhaust Muffler
Brackets
*405D1146 Housing Assy.
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit
*134C892 Automatic Shutter
(Air Discharge)

10CW-3R/1970K

Generator - 10CW/91
Control - Code 97(W.D.611C327)
Engine - Spec K — R
154D562 Exhaust Manifold
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)

10CW-3R/1970L

Generator - 10CW/91
Control - Code 154(W.D.611C498)
Engine - Spec L — R
154D562 Exhaust Manifold
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)

10CW-3R/1982L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 64(W.D.615B87)
Engine - Spec L — R
Gas Fuel Model

10CW-3R/1983J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)

10CW-3R/1983K

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec K — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary Contact
Switch)

10CW-3R/1983L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)

10CW-3R/2052L

Generator - 10CW3C1C
Control - Code 168 (W.D.611C519)
Engine - Spec L — R

10CW-3R/2055K

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Code 75 (W.D.625A23)
Engine - Spec K — R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)

MODEL DATA SECTION

10CW-3R/2055L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary Contact
Switch)

10CW-3R/2061K

Generator - 10CW3C1C
Control - Code 138 (W.D.611C406)
Engine - Spec K — R
Gas Fuel Model
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H..
167A1264 Sp. Plug Cable - L. H.

10CW-3R/2150L

Generator - 10CW3C1C
Control - Code 164 (W.D.611C512)
Code 68 (W.D.615B95)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H..
167A1264 Sp. Plug Cable - L. H.

10CW-3R/2155L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assy..
*403K474 Mounting Skid and Muffler
Kit
*403K334 Battery and Fuel Tank
Rack Kit
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary Contact
Switch)

10CW-3R/2165L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L — R
154D562 Exhaust Manifold
309A10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)

10CW-3R/2182L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas Fuel Model
*405D1146 Housing Assy..
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/2205L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 64 (W.D.615B87)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater

10CW-3R/2213J

Generator - 10CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*159K478 Fuel Tank Kit
*405D1146 Housing Assy..
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/2225J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 178 (W.D.615B196)
Engine - Spec J — R
*134C892 Automatic Shutter
(Air Discharge)
505-186 Elbow - Street
(1-1/4 X 90°) (2)
505-362 Elbow - Street
(1-1/4 X 45°) (2)

10CW-3R/2258J

Generator - 10CW3C1C
Control - Code 97 (W.D.611C327)
Code 120 (W.D.615B168)
Engine - Spec J — R
*405D1146 Housing Assy..
406P249 Hasp (Housing Assy)
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit (2)
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)

10CW-3R/2288J

Generator - 10CW/141
Control - Code 136 (W.D.611C400)
Code 123 (W.D.615B178)
Code 75 (W.D.625A23)
Engine - Spec J — R
Oil Base Heater
*159A472 Reservoir Tank Assy..
159B752 Reservoir Tank
Support
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-3 Inverted Male
Connector (2)
502-58 Brass Pipe Tee -
To Cut-Off Switch
102A349 Oil Base Opening Cover
333B50 Thermostat Cover
110D748 Cylinder Head - R. H..
110D749 Cylinder Head - L. H.

10CW-3R/2306J

Generator - 10CW/141
Control - Code 138 (W.D.611C406)
Code 120 (W.D.615B168)
Code 75 (W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
*159A472 Reservoir Tank Assy..
159B752 Reservoir Tank Support
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
102A349 Oil Base Opening Cover
333B50 Thermostat Cover
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H..
167A1264 Sp. Plug Cable - L. H..
134A1020 Blower Housing Front
Panel
148A418 Vaporizer Assy..
(Zenith #A963B-1)
(Mts. on Blower
Housing Front Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carburetor to Vaporizer
Line
332-50 Vaporizer Line Clip (2)
502-231 Vaporizer Outlet Union
503A366 Air Clenaer Breather
Hose
145A231 Spacer (Carburetor
to Manifold)
141B637 Gas Carburetor (LPG)
150A879 Overspeed Switch
150A852 Overspeed Switch Cover

MODEL DATA SECTION

71

10CW-3R/2308J

Generator - 10CW/141
Control - Code 100(W.D.611C331)
Engine Spec J — R
Oil Base Heater
110D748 Cylinder Head - R. H.
110D749 Cylinder Head - L. H.
102A349 Oil Base Opening Cover
333B50 Thermostat Cover
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary Contact
Switch)
502-3 Inverted Male Connector
(2)
502-58 Brass Pipe Tee-
To Cut-Off Switch
149B557 Electric Fuel Pump
150A717 Overspeed Switch
150A852 Overspeed Switch Cover

10CW-3R/2341J

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-3R/2341L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-3R/2392J

Generator - 10CW3C1C
Control - Code 138 (W.D.611C406)
Code 68 (W.D.615B95)
Engine - Spec J — R
Gas-Gasoline Model
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. R.

10CW-3R/2392J (Cont.)

167A1264 Sp. Plug Cable L.H.
339C274 Wiring Harness

10CW-3R/2415J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
*403K474 Mounting Skid
and Muffler Kit
(Less Muffler)
*416K334 Battery and Fuel
Tank Rack Kit
R. T. F. Housing Assy.
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover

10CW-3R/2427J

Generator - 10CW3C1C
Control - Code 138(W.D.611C406)
Code 64(W.D.615B87)
Engine - Spec J — R
Gas-Gasoline Model
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable-R.H.
167A1264 Sp. Plug Cable-L.H.
338B205 Wiring Harness

10CW-3R/2430J

Generator - 10CW3C1C
Control - Code 100(W.D.611C331)
Code 64(W.D.615B87)
Engine - Spec J — R
Gas Fuel Model
102A279 Oil Base Opening
Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
309B10 Oil Pressure Cut-
Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)
502-58 Brass Pipe Tee -
To Cut-Off Switch

10CW-3R/2475J

Generator - 10CW/141
Control - Code 142(W.D.611C420)
Code 123(W.D.615B178)
Code 75(W.D.625A23)
Engine - Spec J — R
Oil Base Heater
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
110D748 Cylinder Head - R. H.
110D749 Cylinder Head - L. H.
102A349 Oil Base Opening Cover
333B50 Thermostat Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple - 3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Pipe Tee -
To Cut-Off Switch
150A717 Overspeed Switch
150A852 Overspeed Switch Cover
336A1335 Lead (Overspeed Switch)
336A138 Lead (Oil Base Heater)
(2)

10CW-3R/2482J

Generator - 10CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Pipe Tee - To
Cut-Off Switch
110B1193 Intake Valve - Stellite(2)
110B1195 Exhaust Valve - Stellite
(2)
110A1191 Intake Valve Seat
Insert - Stellite (2)
154C562 Exhaust Manifold
110-620 Valve Rotator (4)

10CW-3R/2503J

Generator - 10CW3C1C
Control - Code 138(W.D.611C406)
Engine - Spec J — R
Gas-Gasoline Model
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R.H.
167A1264 Sp. Plug Cable - L.H.
338B205 Wiring Harness
*134C892 Automatic Shutter
(Air Discharge)

(Cont. on next page)

* - Refer to Accessory Section for Component Parts.

R. T. F. - Refer to Factory. Include Model and Serial Number of Unit.

MODEL DATA SECTION

10CW-3R/2503J (Cont.)

- 134B1020 Blower Housing Front Panel
- 148C418 Vaporizer Assy. (Zenith #A963B-1) Mts. on Blower Housing Front Panel
- 148C423 Vaporizer Mtg. Bracket
- 502-231 Vaporizer Outlet Union
- 148C429 Line (Carburetor to Vaporizer)
- 332-50 Vaporizer Line Clip (2)

10CW-3R/2507J

- Generator - 10CW3C1C
- Control - Code 113 (W.D.611C363)
Code 116 (W.D.615B162)
- Engine - Spec J — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *159K478 Fuel Tank Kit
- *416K334 Battery and Fuel Tank Kit

10CW-3R/2518L

- Generator - 10CW3C1C
- Control - Code 158 (W.D.611C505)
- Engine - Spec L — R
- 149P554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line - Flex (18-1/2")

10CW-3R/2519J

- Generator - 10CW3C1C
- Control - Code 97 (W.D.611C327)
Code 158 (W.D.615B205)
- Engine - Spec J — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/2524L

- Generator - 10CW3C1C
- Control - Code 158 (W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model
- 141B675 Carburetor (LPG)
- 145A231 Spacer (Carburetor to Manifold)

10CW-3R/2524L (Cont.)

- 503B402 Air Cleaner Hose
- 503-274 Hose Clamp
- 134B1020 Blower Housing Front Panel
- 148C418 Vaporizer Assy. (Zenith #A963B-1) Mts. on Blower Front Panel
- 143C423 Vaporizer Mtg. Bracket
- 502-231 Vaporizer Outlet Union
- 148C429 Line (Carburetor to Vaporizer)
- 332-50 Vaporizer Line Clip (2)

10CW-3R/2582J

- Generator - 10CW/141
- Control - Code 149 (W.D.611C455)
Code 123 (W.D.615B178)
Code 75 (W.D.625A23)
- Engine - Spec J — R
- Oil Base Heater
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee - 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2
- 110D748 Cylinder Head - R. H.
- 110D749 Cylinder Head - L. H.
- 134D757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grill
- 309P77 Hi - Temp. Cut-Off Switch
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
- 150A879 Overspeed Switch
- 150A852 Overspeed Switch Cover
- 149B554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line - Flex (18-1/2")
- 307B565 Inverted Male Elbow
- 505-61 Pipe Nipple - 1/8 x 2"

10CW-3R/2652L

- Generator - 10CW3C1C
- Control - Code 154 (W.D.611C498)
Code 68 (W.D.615B95)
- Engine - Spec L — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support

10CW-3R/2660J

- Generator - 10CW3C1C
- Control - Code 100 (W.D.611C331)
Code 116 (W.D.615B162)
- Engine - Spec J — R
- Gas Fuel Model

10CW-3R/2684J

- Generator - 10CW/141
- Control - Code 142 (W.D.611C420)
Code 120 (W.D.615B168)
Code 75 (W.D.625A23)
- Engine - Spec J — R
- Oil Base Heater
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee - 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *110D748 Cylinder Head - R. H.
- 110D749 Cylinder Head - L. H.
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- 150A879 Overspeed Switch
- 150A852 Overspeed Switch Cover

10CW-3R/2708J

- Generator - 10CW3C1C
 - Control - Code 97 (W.D.611C327)
Code 116 (W.D.615B162)
Code 75 (W.D.625A23)
 - Engine - Spec - J — R
- (Cont. on next page)

MODEL DATA SECTION

73

10CW-3R/2708J (Cont.)

- Oil Base Heater
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Assy.
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/2748J

- Generator - 10CW3C1C
- Control - Code 138 (W.D.611C406) Code 64 (W.D.615B87)
- Engine - Spec J — R
- Gas-Gasoline Model
- 338B205 Wiring Harness
- 167A125 Spark Plug (2)
- 167A1263 Sp. Plug Cable - R. H.
- 167A1264 Sp. Plug Cable - L. H.
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- R. T. F. Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

10CW-3R/2748L

- Generator - 10CW3C1C
- Control - Code 172 (W.D.611C572) Code 64 (W.D.615B87)
- Engine - Spec L — R
- Gas-Gasoline Model
- 338B205 Wiring Harness
- 167A125 Spark Plug (2)
- 167A1263 Sp. Plug Cable - R. H.
- 167A1264 Sp. Plug Cable - L. H.
- *159A472 Reservoir Tank Assy.
- 159A752 Reservoir Tank Support
- R. T. F. Housing Assy.
- *416K334 Battery and Fuel Tank Rack Kit
- *403K474 Mounting Skid and Muffler Kit

10CW-3R/2814K

- Generator - 10CW3C1C
- Control - Code 100 (W.D.611C331) Code 75 (W.D.625A23)
- Engine - Spec K — R
- Gas Fuel Model
- Oil Base Heater
- *405D1146 Housing Assy.

10CW-3R/2814K (Cont.)

- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee - 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/2816K

- Generator - 10CW3C1C
- Control - Code 100 (W.D.611C331) Code 75 (W.D.625A23)
- Engine - Spec K — R
- Gas Fuel Model
- Oil Base Heater
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee- 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/2834K

- Generator - 10CW3C1C
- Control - Code 97 (W.D.611C327) Code 75 (W.D.625A23)
- Engine - Spec K — R
- Oil Base Heater
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/2834K (Cont.)

- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

10CW-3R/2834L

- Generator - 10CW3C1C
- Control - Code 154 (W.D.611C498) Code 75 (W.D.625A23)
- Engine - Spec L — R
- Oil Base Heater
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

10CW-3R/2891L

- Generator - 10CW/161
- Control - Code 165 (W.D.611C514)
- Engine - Spec L — R
- 309B10 Low Oil Pressure Cut-Off Switch
- 336A1202 Lead (Cut-Off Switch to Momentary Contact Switch)
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- 167A125 Spark Plug (2)
- 167A1263 Sp. Plug Cable - R. H.
- 167A1264 Sp. Plug Cable - L. H.

10CW-3R/2898L

- Generator - 10CW/141
 - Control - Code 163 (W.D.611C511) Code 183 (W.D.615B228) Code 75 (W.D.625A23)
 - Engine - Spec L — R
 - 110D748 Cylinder Head - R. H.
 - 110D749 Cylinder Head - L. H.
 - 102A349 Oil Base Opening Cover
 - 333B50 Thermostat Cover
 - 505-166 Pipe Tee - 3/4
 - 505-85 Pipe Nipple - 3/4 x 2"
 - 505-307 Pipe Reducer - 3/4 x 1/2
 - *159A472 Reservoir Tank Assy.
 - 159B752 Reservoir Tank Support
- (Cont. on the next page)

* - Refer to Accessory Section for Component Parts.

R. T. F. - Refer to Factory. Include Model and Serial Number of Unit.

MODEL DATA SECTION

10CW-3R/2898L (Cont.)

309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
150A879 Overspeed Switch
150A852 Overspeed Switch Cover
336A1335 Lead (Overspeed Switch)
309P77 Hi - Tem. Cut-Off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grill - Housing

10CW-3R/2904L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
*403K474 Mounting Skid and
Muffler Kit
(Less Muffler)
*416K334 Battery and Fuel Tank
Rack Kit

10CW-3R/2920L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 64 (W.D.615B87)
Engine - Spec L — R
Gas Fuel Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-3R/2993L

Generator - 10CW/141
Control - Code 163 (W.D.611C511)
Code 120 (W.D.615B168)
Code 75 (W.D.625A23)

10CW-3R/2993L (Cont.)

Engine - Spec L — R
Oil Base Heater
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee -
1/8 (To Cut-Off
Switch)
150A879 Overspeed Switch
150A852 Overspeed Switch
Cover
309P77 Hi - Temp. Cut-
Off Switch
134A757 Blower Housing
134A758 Blower Housing
Scroll
134A711 Air Outlet Grill-
Housing

10CW-3R/3002L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/3096L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 120(W.D.615B168)
Engine - Spec L — R
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit

10CW-3R/3096L (Cont.)

*416K334 Battery and Fuel
Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-3R/3192L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
Gas Fuel Model (LPG)
141B675 Carburetor
145A231 Spacer - Carb. to
Manifold
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assy.
(Zenith #A963B-1)
(Mts. on Blower
Housing Front Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carburetor to Vaporizer
Line
332-50 Vaporizer Line Clip (2)

10CW-3R/3204L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 184(W.D.615B239)
Engine - Spec L — R
Gas-Gasoline Model

10CW-3R/3277L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 64 (W.D.615B87)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model (LPG)
Oil Base Heater
141B675 Carburetor
145A231 Spacer - Carb. to
Manifold
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assy.
(Zenith #A963B-1)
(Mts. on Blower
Housing Front Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carburetor to Vaporizer
Line
332-50 Vaporizer Line Clips (2)
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

75

10CW-3R/3307L

Generator - 10CW3C1C
Control - Code 164 (W.D.611C512)
Code 68 (W.D.615B95)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H.
167A1264 Sp. Plug Cable - L. H.

10CW-3R/3334L

Generator - 10CW3C1C
Control - Code 158(W.D.611C505)
Code 68(W.D.615B95)
Engine - Spec L — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Tee - 1/8
(To Cut-Off Switch)

10CW-3R/3351L

Generator - 10CW3C1C
Control - Code 154 (W.D.611C498)
Code 64 (W.D.615B87)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Tee - 1/8 (To
Cut-Off Switch)

10CW-3R/3353L

Generator - 10CW3C1C
Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater

10CW-3R/3353L (Cont.)

309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary Contact
Switch)
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2

10CW-3R/3357L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 64(W.D.615B87)
Engine - Spec L — R
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)
502-58 Brass Tee - 1/8
(To Cut-Off
Switch)
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-3R/3396L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 68(W.D.615B95)
Engine - Spec L — R
309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off
Switch to
Momentary
Contact Switch)
502-58 Brass Tee - 1/8
(To Cut-Off Switch)

10CW-3R/3603L

Generator - 10CW/141
Control - Code 167(W.D.611C518)
Engine - Spec L — R
Gas Fuel Model

10CW-3R/3603L (Cont.)

309B10 Low Oil Pressure
Cut-Off Switch
336A1202 Lead (Cut-Off Switch
to Momentary
Contact Switch)
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
150A879 Overspeed Switch
150A852 Overspeed Switch Cover
336A1335 Lead (Overspeed Switch)

10CW-3R/3628L

Generator - 10CW/141
Control - Code 163(W.D.611C511)
Code 64(W.D.615B87)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank
Support
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
150A717 Overspeed Switch
150A852 Overspeed Switch Cover
*405D1146 Housing Assy.
*416K334 Battery and Fuel Tank
Rack Kit
*403K474 Mounting Skid and
Muffler Kit
309P77 Hi - Temp. Cut-Off
Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grill -
Housing

10CW-3R/3706L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 120(W.D.615B168)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Cut-Off Switch)
*405D1146 Housing Assy.

(Cont. on next page)

* - Refer to Accessory Section for Component Parts.

MODEL DATA SECTION

10CW-3R/3706L (Cont.)

- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit
- *134C892 Automatic Shutter (Air Discharge)

10CW-3R/3746L

- Generator - 10CW/141
- Control - Code 167 (W.D.611C518)
Code 64 (W.D.615B87)
Code 75 (W.D.625A23)
- Engine - Spec L — R
- Gas Fuel Model
- Oil Base Heater
- *405D1146 Housing Assy.
- *416K334 Battery and Fuel Tank Rack Kit
- *403K474 Mounting Skid and Muffler Kit
- 309P77 Hi - Temp. Cut-Off Switch
- 150A717 Overspeed Switch
- 150A852 Overspeed Switch Cover
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)

10CW-3R/3757L

- Generator - 10CW/141
- Control - Code 163 (W.D.611C511)
Code 75 (W.D.625A23)
- Engine - Spec L — R
- Oil Base Heater
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee - 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- 150A717 Overspeed Switch
- 150A852 Overspeed Switch Cover
- *405D1146 Housing Assy.
- *416K334 Battery and Fuel Tank Rack Kit
- *403K474 Mounting Skid and Muffler Kit
- 309P77 Hi - Temp Cut-Off Switch
- 134A757 Blow Housing
- 134A758 Blow Housing Scroll
- 134A711 Air Outlet Grill - Housing

10CW-3R/3770L

- Generator - 10CW/141
- Control - Code 175 (W.D.611C621)
Code 64 (W.D.615B87)
- Engine - Spec L — R
- Gas Fuel Model
- *403K474 Mounting Skid and Muffler Kit (Less Muffler)
- *416K334 Battery and Fuel Tank Rack Kit
- 150A879 Overspeed Switch
- 150A852 Overspeed Switch Cover
- 309P77 Hi - Temp Cut-Off Switch
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- 134A757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grille - Housing

10CW-3R131/248L

- Generator - 10CW3C1C
- Control - Code 158 (W.D.611C505)
Code 75 (W.D.625A23)
- Engine - Spec L — R
- Gas Fuel Model (LPG)
- Oil Base Heater

10CW-3R30/1154K

- Generator - 10CW3C1C
- Control - Code 97 (W.D.611C327)
Code 75 (W.D.625A23)
- Engine - Spec K — R
- Oil Base Heater
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
- 415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
- 415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

10CW-3R131/3300L

- Generator - 10CW3C1C
- Control - Code 158 (W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model (LPG)

10CW-4E/1775J

- Generator - 10CW/128
- Control - Code 132 (W.D.611C394)
- Engine - Spec J — R
- 338B217 Wiring Harness Assy.
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-20 Oil Gauge Elbow (2)
- 167A1277 Sp. Plug Cable - R. H.
- 167A1278 Sp. Plug Cable - L. H.
- 141B637 Gas Carburetor (LPG)
- 502-230 Elbow, Carburetor
- 502-138 Elbow, Carburetor
- 145A231 Spacer (Carburetor to Manifold)
- 154D562 Exhaust Manifold
- 110B1193 Intake Valve - Stellite (2)
- 110B1195 Exhaust Valve - Stellite (2)
- 110A1204 Valve Spring Retainer (4)
- 110A1191 Intake Valve Seat Insert - Stellite (2)
- 503A366 Air Cleaner Breather Hose
- 134B1020 Blower Housing Front Panel
- 148A418 Vaporizer Assy. (Zenith #A-963B-1) (Mounts on Blower Hsg. Front Panel)
- 148A423 Vaporizer Mtg. Bracket
- 148C429 Carburetor to Vaporizer Line
- 332-50 Vaporizer Fuel Line Clip (2)
- 502-231 Vaporizer Outlet Union
- Gas Fuel Model (LPG)

10CW-4E/3503L

- Generator - 10CW/133
- Control - Code 108 (W.D.611C347)
- Engine - Spec L — R
- 141-172 Carburetor Air Shutter Lever
- 153A18 Manual Choke Rod
- 153A347 Manual Choke Rod Bracket
- 518P176 Manual Choke Rod Bracket Clip
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Cut-Off Switch)
- 167A1277 Spark Plug Cable - R. H.
- 167A1278 Spark Plug Cable - L. H.

MODEL DATA SECTION

77

10CW-4E/3685L

Generator - 10CW/133
Control - Code 108 (W.D. 611C347)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
309B10 Low Oil Pressure Cut-
Off Switch
502-58 Brass Tee - 1/8 (To Oil
Cut-Off Switch)
141-172 Carburetor Air Shutter
Lever
153A18 Manual Choke Rod
153A347 Manual Choke Rod
Bracket
518P176 Manual Choke Rod
Bracket Clip
167A1277 Spark Plug Cable - R. H.
167A1278 Spark Plug Cable - L. H.

10CW-4R/1K

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec K — R

10CW-4R/1L

Generator - 10CW4C1C
Control - Code 155 (W.D. 611C499)
Engine - Spec L — R

10CW-4R/12K

Generator - 10CW4C1C
Control - Code 95(W.D. 611C325)
Engine - Spec K — R
Gas-Gasoline Model

10CW-4R/12L

Generator - 10CW4C1C
Control - Code 159 (W.D. 611C506)
Engine - Spec L — R
Gas-Gasoline Model

10CW-4R/13K

Generator - 10CW4C1C
Control - Code 95 (W.D. 611C325)
Engine - Spec K — R
Gas Fuel Model

10CW-4R/13L

Generator - 10CW4C1C
Control - Code 159(W.D. 611C506)
Engine - Spec L — R
Gas Fuel Model

10CW-4R/30K

Generator - 10CW4C1C
Control - Code 94 (W.D. 611C324)
Engine - Spec K — R

10CW-4R/30K (Cont.)

*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support
415K3 Underground Fuel
Tank (55 Gal.)
Includes Fittings
415K7 Fuel Line
(5/16" x 25 Ft.)
Includes Elbows
& Connector
415K45 Fuel Line
(3/8" x 25 Ft.)
Includes Elbows
& Connector

10CW-4R/30L

Generator - 10CW4C1C
Control - Code 155(W.D. 611C499)
Engine - Spec L — R
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support
415K3 Underground Fuel
Tank (55 Gal.)
Includes Fittings
415K7 Fuel Line
(5/16" x 25 Ft.)
Includes Elbows
& Connector
415K45 Fuel Line
(3/8" x 25 Ft.)
Includes Elbows
& Connector

10CW-4R/31K

Generator - 10CW4C1C
Control - Code 95(W.D. 611C325)
Engine - Spec K — R
Gas Fuel Model

10CW-4R/31L

Generator - 10CW4C1C
Control - Code 159(W.D. 611C506)
Engine - Spec L — R
Gas Fuel Model

10CW-4R/96J

Generator - 10CW4C1C
Control - Code 94(W.D. 611C324)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off
Switch)

10CW-4R/96L

Generator - 10CW4C1C
Control - Code 155(W.D. 611C499)
Engine - Spec L — R
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee- 1/8
(To Oil Cut-Off
Switch)

10CW-4R/131K

Generator - 10CW4C1C
Control - Code 95(W.D. 611C325)
Engine - Spec K — R
Gas Fuel Model (LPG)

10CW-4R/131L

Generator - 10CW4C1C
Control - Code 159(W.D. 611C506)
Engine - Spec L — R
Gas Fuel Model (LPG)
141B675 Carburetor Assy.
145A231 Spacer - Carb. to
Manifold
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assy,
(Zenith #A963B-1)
(Mts. on Blower Hsy.
Front Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carb. to Vaporizer
Line
332-50 Vaporizer Line Clip (2)

10CW-4R/316J

Generator - 10CW4C1C
Control - Code 94(W.D. 611C324)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4R/316L

Generator - 10CW4C1C
Control - Code 155(W.D. 611C499)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4R/363J

Generator - 10CW4C1C
Control - Code 94(W.D. 611C324)
Code 75(W.D. 625A23)
Engine - Spec J — R
Oil Base Heater
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

MODEL DATA SECTION

10CW-4R/637L

Generator - 10CW4C1C
Control - Code 159(W.D.611C506)
Engine - Spec L — R
Gas-Gasoline Model
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4R/663L

Generator - 10CW4C1C
Control - Code 155(W.D.611C499)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4R/704L

Generator - 10CW4C1C
Control - Code 155(W.D.611C499)
Engine - Spec L — R
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-4R/710J

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Code 67(W.D.615B92)
Engine - Spec J — R

10CW-4R/737J

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Code 67(W.D.615B92)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4R/737L

Generator - 10CW4C1C
Control - Code 155(W.D.611C499)
Code 67 (W.D.615B92)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4R/768K

Generator - 10CW4C1C
Control - Code 95(W.D.611C325)
Code 67(W.D.615B92)
Engine - Spec K — R
Gas-Gasoline Model

10CW-4R/768L

Generator - 10CW4C1C
Control - Code 159(W.D.611C506)
Code 67(W.D.615B92)
Engine - Spec L — R
Gas-Gasoline Model

10CW-4R/875L

Generator - 10CW4C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4R/989L

Generator - 10CW4C1C
Control - Code 155(W.D.611C499)
Code 67(W.D.615B92)
Engine - Spec L — R
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)

10CW-4R/1062J

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Engine - Spec J — R
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4R/1158J

Generator - 10CW4C1C
Control-Code 95(W.D.611C325)
Engine - Spec J — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-4R/1369J

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Code 69(W.D.615B103)
Engine - Spec J — R

10CW-4R/1371L

Generator - 10CW4C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4R/1791J

Generator - 10CW4C1C
Control - Code 134(W.D.611C396)
Engine - Spec J — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
167A125 Spark Plug (2)
167A1263 Sp. Plug Cable - R. H.
167A1264 Sp. Plug Cable - L. H.

10CW-4R/1869J

Generator - 10CW4C1C
Control - Code 152 (W.D.611C477)
Engine - Spec J — R
Gas Fuel Model
154A790 Intake Manifold
148A367 Vacuum Switch
148A531 Vacuum Switch Line
502-3 Inverted Male Connector (Vacuum Switch) (2)

10CW-4R/1871J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Code 69(W.D.615B103)
Engine - Spec J — R
Gas Fuel Model

10CW-4R/1871L

Generator - 10CW4C1C
Control - Code 159(W.D.611C506)
Code 69 (W.D.615B103)
Engine - Spec L — R
Gas Fuel Model

MODEL DATA SECTION

79

10CW-4R/1969L

Generator - 10CW4C1C
Control - Code 159(W.D.611C506)
Engine - Spec L — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)
*134C892 Automatic Shutter
(Air Discharge)

10CW-4R/1982J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Code 67 (W.D.615B92)
Engine - Spec J — R
Gas Fuel Model

10CW-4R/1982L

Generator - 10CW4C1C
Control - Code 159 (W.D.611C506)
Code 67 (W.D.615B92)
Engine - Spec L — R
Gas Fuel Model

10CW-4R/1983J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)

10CW-4R/1983L

Generator - 10CW4C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R
Gas Fuel Model
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)

10CW-4R/2027J

Generator - 10CW4C1C
Control - Code 95 (W.D.611C325)
Code 67 (W.D.615B92)
Engine - Spec J — R
Gas-Gasoline Model
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)
309P77 Hi - Temp. Cut-Off
Switch
134A757 Blower Housing

10CW-4R/2027J (Cont.)

134A758 Blower Housing
Scroll
134A711 Air Outlet Grille-
Housing
*405L1146 Housing Assy.
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid
and Muffler Kit
*159K478 Fuel Tank Kit

10CW-4R/2146H

Generator - 10CW4C1C
Control - Code 94(W.D.611C324)
Engine - Spec H — R
102E465 Oil Base
309B10 Low Oil Pressure
Cut-Off Switch
122C204 Oil Filter Outlet
Line
122C205 Oil Filter Inlet
Line
502-2 Oil Filter Outlet
Elbow
502-20 Oil Gauge Elbow (2)
110A300 Filter Mounting
Spacer (4)
167A1277 Sp. Plug Cable -
R. H.
167A1278 Sp. Plug Cable -
L. H.
416A50 Battery Cable -
36" (2)

10CW-4R/2205J

Generator - 10CW4C1C
Control - Code 95(W.D.611C325)
Code 67(W.D.615B92)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater

10CW-4R/2336J

Generator - 10CW/144
Control - Code 140(W.D.611C411)
Code 177(W.D.615B195)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
102A349 Oil Base Opening
Cover
333B50 Thermostat Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple -
3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2

10CW-4R/2336J (Cont.)

309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)
141B654 Gas Carburetor (LPG)
145A231 Spacer (Carburetor to
Manifold)
134B1020 Blower Housing Front
Panel
148C418 Vaporizer Assy.
(Zenith #A963B-1)
Mounts on Blower
Hsg. Front Panel
148C423 Vaporizer Mounting
Bracket
502-231 Vaporizer Outlet Union
148C429 Line (Carburetor to
Vaporizer)
332-50 Vaporizer Line Clips
(2)
503A366 Air Cleaner Breather
Hose
167A1263 Sp. Plug Cable - R. H.
167A1264 Sp. Plug Cable - L. H.
167A125 Spark Plug (2)

10CW-4R/2430J

Generator - 10CW4C1C
Control - Code 95(W.D.611C325)
Code 67(W.D.615B92)
Engine - Spec J — R
Gas Fuel Model
102A279 Oil Base Opening
Cover
505-166 Pipe Tee - 3/4
505-85 Pipe Nipple - 3/4 x 2"
505-307 Pipe Reducer -
3/4 x 1/2
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(To Oil Cut-Off Switch)

10CW-4R/2526J

Generator - 10CW/151
Control - Code 145 (W.D.611C445)
Engine - Spec J — R
Gas-Gasoline Model

10CW-4R/2547J

Generator - 10CW4C1C
Control - Code 95(W.D.611C325)
Engine - Spec J — R
Gas - Gasoline Model
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

(Cont. on next page)

MODEL DATA SECTION

10CW-4R/2547J (Cont.)

- *159K478 Fuel Tank Assy.
- 149B554 Electric Fuel Pump - 12 V.
- 307B565 Fuel Solenoid Valve - 12 V.
- 504-4 Fuel Valve
- 501-4 Fuel Line (1/4" x 12")
- 502-2 Inverted Male Elbow (Solenoid Valve Inlet)
- 505-61 Pipe Nipple (1/8 x 2")

10CW-4R/2568J

- Generator - 10CW4C1C
- Control - Code 94 (W.D.611C324)
Code 69 (W.D.615B103)
- Engine - Spec J — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit
- 134A757 Blower Housing
- 134A758 **Blower Housing Scroll**
- 134A711 Air Outlet Grille - Housing
- 309P77 Hi - Temp. Cut-Off Switch

10CW-4R/2677J

- Generator - 10CW4C1C
- Control - Code 103 (W.D.611C334)
Code 67 (W.D.615B92)
- Engine - Spec J — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 149P554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line (1/4" x 12")

10CW-4R/2677K

- Generator - 10CW4C1C
- Control - Code 103 (W.D.611C334)
Code 67 (W.D.615B92)
- Engine - Spec K — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 149P554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line (1/4 x 12")

10CW-4R/2677L

- Generator - 10CW4C1C
- Control - Code 157 (W.D.611C502)
Code 67 (W.D.615B92)
- Engine - Spec L — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 149P554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line - 1/4 x 12"

10CW-4R/2782K

- Generator - 10CW4C1C
- Control - Code 128 (W.D.611C364)
Code 122 (W.D.615B174)
- Engine - Spec K — R
- *159K478 Fuel Tank Assy.
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

10CW-4R/2866L

- Generator - 10CW4C1C
- Control - Code 159 (W.D.611C506)
Code 69 (W.D.615B103)
- Engine - Spec L — R
- Gas-Gasoline Model
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
- 149P554 Electric Fuel Pump - 12 V.
- 501-4 Fuel Line - 1/4" x 12"
- 134A757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grille-Housing
- 309P77 Hi - Temp. Cut-Off Switch

10CW-4R/3176L

- Generator - 10CW/144
- Control - Code 170 (W.D.611C556)
- Engine - Spec L — R
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
- 307P77 Hi- Temp. Cut-Off Switch
- 150A879 Overspeed Switch
- 150A852 Overspeed Switch Cover
- 134A757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grille-Housing

10CW-4R/3278L

- Generator - 10CW4C1C
- Control - Code 155 (W.D.611C499)
Code 122 (W.D.615B174)
- Engine - Spec L — R

10CW-4R/3605L

- Generator - 10CW4C1C
- Control - Code 159 (W.D.611C506)
Code 122 (W.D.615B174)
- Engine - Spec L — R
- Gas-Gasoline Model
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)

10CW-4R131/3300L

- Generator - 10CW4C1C
- Control - Code 159 (W.D.611C506)
- Engine - Spec L — R
- Gas Fuel Model (LPG)

10CW-4XR/1L

- Generator - 10CW4XC1C
- Control - Code 155 (W.D.611C499)
- Engine - Spec L — R

10CW-4XR/12L

- Generator - 10CW4XC1C
- Control - Code 159 (W.D.611C506)
- Engine - Spec L — R
- Gas-Gasoline Model

10CW-4XR/13J

- Generator - 10CW4XC1C
- Control - Code 95 (W.D.611C325)
- Engine - Spec J — R
- Gas Fuel Model

10CW-4XR/13K

- Generator - 10CW4XC1C
- Control - Code 95 (W.D.611C325)
- Engine - Spec K — R
- Gas Fuel Model

10CW-4XR/13L

- Generator - 10CW4XC1C
- Control - Code 159 (W.D.611C506)
- Engine - Spec L — R
- Gas Fuel Model

10CW-4XR/31L

- Generator - 10CW4XC1C
- Control - Code 159 (611C506)
- Engine - Spec L — R
- Gas Fuel Model

MODEL DATA SECTION

81

10CW-4XR/316L

Generator - 10CW4XC1C
Control - Code 155 (W.D. 611C499)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

10CW-4XR/704L

Generator - 10CW4XC1C
Control - Code 155 (W.D. 611C499)
Engine - Spec L — R
*403K474 Mounting Skid and Muffler
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4XR/768L

Generator - 10CW4XC1C
Control - Code 159 (W.D. 611C506)
Code 125 (W.D. 615B186)
Engine - Spec L — R
Gas-Gasoline Model

10CW-4XR/886L

Generator - 10CW4XC1C
Control - Code 155 (W.D. 611C499)
Code 75 (W.D. 625A23)
Engine - Spec L — R
Oil Base Heater
*159K478 Fuel Tank Assy.
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-4XR/1002L

Generator - 10CW4XC1C
Control - Code 159 (W.D. 611C506)
Engine - Spec L — R
Gas-Gasoline Model
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Assy.

10CW-4XR/1982J

Generator - 10CW4XC1C
Control - Code 95 (W.D. 611C325)
Code 125 (W.D. 615B186)
Engine - Spec J — R
Gas Fuel Model

10CW-4XR/2103L

Generator - 10CW4XC1C
Control - Code 159 (W.D. 611C506)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.

10CW-4XR/2103L (Cont.)

159B752 Reservoir Tank Support
149P554 Electric Fuel Pump - 12 V.
501A4 Fuel Line - 1/4" x 12"

10CW-4XR/2645J

Generator - 10CW4XC1C
Control - Code 95 (W.D. 611C325)
Code 180 (W.D. 615B212)
Code 186 (W.D. 625A275)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater - 240 V.
102A495 Oil Base Opening Cover
333P80 Oil Base Heater Element
309P119 Oil Base Heater Thermostat
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-4XR/2645L

Generator - 10CW4XC1C
Control - Code 159 (W.D. 611C506)
Code 180 (W.D. 615B212)
Code 186 (W.D. 625A275)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
102A495 Oil Base Opening Cover
333P80 Oil Base Heater Element
309P119 Oil Base Heater Thermostat
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit

10CW-5DE/2275J

Generator - 10CW/120
Control - Code 135 (W.D. 611C399)
Engine - Spec J — R
Gas Fuel Model (LPG)
141B642 Carburetor
110B1193 Intake Valve - Stellite (2)
110B1195 Exhaust Valve - Stellite (2)
110A1191 Intake Valve Seat Insert - Stellite (2)

10CW-5DE/2275J (Cont.)

110A1204 Valve Spring Retainer (4)
123A209 Oil Fill Tube
102A453 Oil Base Opening Cover
123A92 Gasket (Oil Fill Tube Mounting)
123A206 Oil Level Indicator
533A271 Air Cleaner Hose
502-3 Inverted Male Connector - Oil Line Bracket (4)
122A194 Oil Line Bracket
122B196 Line - Oil Filter Inlet
122B197 Line - Oil Filter Outlet
167A1277 Sp. Plug Cable - R.H.
167A1278 Sp. Plug Cable - L.H.
134B1020 Blower Housing Front Panel
148C418 Vaporizer Assy. (Zenith #A963B-1) Mounts on Blower Hsg. Front Panel
148C423 Vaporizer Mtg. Bracket
502-231 Vaporizer Outlet Union
159B754 Line (Carburetor to Vaporizer)
332-50 Vaporizer Line Clip (2)
502-230 Elbow - Carb. Fuel Inlet
502-138 Elbow - Breather Hose to Carb.

10CW-5DE/2348J

Generator - 10CW/120
Control - Code 141 (W.D. 611C413)
Engine - Spec J — R
110B1193 Intake Valve - Stellite (2)
110B1195 Exhaust Valve - Stellite (2)
110A1191 Intake Valve Seat Insert - Stellite (2)
110A1204 Valve Spring Retainer (4)
123A209 Oil Fill Tube
102A453 Oil Base Opening Cover
123A92 Gasket (Oil Fill Tube Mounting)
123A206 Oil Level Indicator
122A194 Oil Line Bracket
502-3 Inverted Male Connector - Oil Line Bracket (4)
122B196 Line - Oil Filter Inlet
122B197 Line - Oil Filter Outlet
505-57 Plug - Oil Filter Drain Line
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.

MODEL DATA SECTION

10CW-5DE/2428J

Generator - 10CW/154
Control - Code 150(W.D.611C457)
Engine - Spec J — R
110B1193 Intake Valve - Stellite (2)
110B1195 Exhaust Valve - Stellite (2)
110A1191 Intake Valve Seat Insert (4)
110-620 Valve Rotator (4)
102E465 Oil Base
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
141-172 Choke Shaft Lever - Carburetor
153A347 Choke Rod Bracket - Carburetor
153A18 Choke Control Rod
518P176 Choke Rod Bracket Clip
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
134D1095 Blower Housing Scroll
134-1218 Shroud - Upper L. H. Cylinder
134-1219 Shroud - Lower L. H. Cylinder
134-1220 Shroud - Upper R. H. Cylinder
134-1221 Shroud - Lower R. H. Cylinder
134D1208 Air Outlet Elbow
416A38 Battery Cable (2)

10CW-5DE/2585J

Generator - 10CW/120
Control - Code 148 (W.D.611C454)
Engine - Spec J — R
102C465 Oil Base
154D562 Exhaust Manifold
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
141-172 Choke Shaft Lever - Carburetor
153A347 Choke Rod Bracket - Carburetor
153A18 Choke Control Rod
518P176 Choke Rod Bracket Clip

10CW-5DE/2585K

Generator - 10CW/120
Control - Code 148 (W.D.611C454)
Engine - Spec K — R
102C465 Oil Base
154D562 Exhaust Manifold
141-172 Choke Shaft Lever - Carburetor

10CW-5DE/2585K (Cont.)

153A347 Choke Rod Bracket
518P176 Choke Rod Bracket Clip
153A18 Choke Control Rod
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)

10CW-5DE/2585L

Generator - 10CW/120
Control - Code 148(W.D.611C454)
Engine - Spec L — R
102C465 Oil Base
154D562 Exhaust Manifold
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
141-172 Choke Shaft Lever - Carburetor
153A347 Choke Rod Bracket
518P176 Choke Rod Bracket Clip
153A18 Choke Control Rod

10CW-5DR/12J

Generator - 10CW/103
Control - Code 110(W.D.611C356)
Engine - Spec J — R
Gas-Gasoline Model

10CW-5DR/2146J

Generator - 10CW/152
Control - Code 146(W.D.611C447)
Engine - Spec J — R
102C465 Oil Base
309A10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (Oil Cut-Off Switch Mtg.)
122C204 Oil Filter Outlet Line
122C205 Oil Filter Inlet Line
502-2 Oil Filter Outlet Elbow
502-20 Oil Gauge Elbow (2)
110A300 Filter Mtg. Spacer (4)
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
416A50 Battery Cable - 36" (2)

10CW-5DR/2278J

Generator - 10CW/103
Control - Code 107(W.D.611C346)
Code 122(W.D.615B174)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5DR/2296J

Generator - 10CW/103
Control - Code 137(W.D.611C401)
Code 177(W.D.615B195)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5DR/2572J

Generator - 10CW/152
Control - Code 128(W.D.611C364)
Code 67(W.D.615B92)
Engine - Spec J — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5DR/3169L

Generator - 10CW/103
Control - Code 160(W.D.611C507)
Code 122(W.D.615B174)
Engine - Spec L — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/1K

Generator - 10CW5C1C
Control - Code 94 (W.D.611C324)
Engine - Spec K — R

10CW-5R/1L

Generator - 10CW5C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R

MODEL DATA SECTION

83

10CW-5R/12K

Generator - 10CW5C1C
Control - Code 95 (W.D.611C325)
Engine - Spec K — R
Gas-Gasoline Model

10CW-5R/12L

Generator - 10CW5C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R
Gas-Gasoline Model

10CW-5R/13L

Generator - 10CW5C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R
Gas Fuel Model

10CW-5R/31L

Generator - 10CW5C1C
Control - Code 159 (W.D.611C506)
Engine - Spec L — R
Gas Fuel Model

10CW-5R/703J

Generator - 10CW5C1C
Control - Code 94 (W.D.611C324)
Code 67 (W.D.615B92)
Engine - Spec J — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/703L

Generator - 10CW5C1C
Control - Code 155 (W.D.611C499)
Code 67 (W.D.615B92)
Engine - Spec L — R
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*159K478 Fuel Tank Kit

10CW-5R/710L

Generator - 10CW5C1C
Control - Code 155 (W.D.611C499)
Code 67 (W.D.615B92)
Engine - Spec L — R

10CW-5R/2182J

Generator - 10CW5C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

10CW-5R/2524J

Generator - 10CW5C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model
141B654 Carburetor (LPG)
145A231 Spacer (Carburetor
to Manifold)
134A1020 Blower Housing
Front Panel
148A418 Vaporizer Assy.
(Zenith #963B-1)
(Mounts on Blower
Housing Front
Panel)
148A423 Vaporizer Mounting
Bracket
148C429 Carburetor to
Vaporizer Line
332-50 Vaporizer Line Clip
(2)
502-231 Vaporizer Outlet
Union
503A366 Air Cleaner
Breather Hose

10CW-6R/1K

Generator - 10CW6C1C
Control - Code 94 (W.D.611C324)
Engine - Spec K — R

10CW-6R/1L

Generator - 10CW6C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R

10CW-6R/13J

Generator - 10CW6C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model

10CW-6R/31J

Generator - 10CW6C1C
Control - Code 95 (W.D.611C325)
Engine - Spec J — R
Gas Fuel Model

10CW-6R/768J

Generator - 10CW6C1C
Control - Code 95 (W.D.611C325)
Code 125 (W.D.615B186)
Engine - Spec J — R
Gas-Gasoline Model

10CW-6R/990L

Generator - 10CW6C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit

10CW-6R/2255J

Generator - 10CW6C1C
Control - Code 95 (W.D.611C325)
Code 176 (W.D.615B194)
Code 175 (W.D.625A23)
Engine - Spec J — R
Gas-Gasoline Model
Oil Base Heater
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit
*134C892 Automatic Shutter
(Air Discharge)
505-186 Elbow - Street
1-1/4 x 90° (2)
505-362 Elbow - Street
1-1/4 x 45° (2)

10CW-6R/2400J

Generator - 10CW/148
Control - Code 95 (W.D.611C325)
Engine Spec J — R
Gas Fuel Model
141B654 Carburetor (LPG)
145A231 Spacer (Carburetor
to Manifold)
134A1020 Blower Housing Front
Panel
148A418 Vaporizer Assy.
(Zenith #963B-1)
Mounts on Blower
Housing Front Panel)
148A423 Vaporizer Mounting
Bracket
148C429 Carburetor to
Vaporizer Line
332-50 Vaporizer Line Clip (2)
502-231 Vaporizer Outlet Union
503A366 Air Cleaner Breather
Hose
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

10CW-7R/1K

Generator - 10CW7C1C
Control - Code 94 (W.D.611C324)
Engine - Spec K — R

10CW-7R/1L

Generator - 10CW7C1C
Control - Code 155 (W.D.611C499)
Engine - Spec L — R

MODEL DATA SECTION

10CW-99R/2223J

Generator - 10CW/138
Control - Code 131 (W.D.611C388)
Engine - Spec J --- R
Gas Fuel Model

10CW-150R/1K (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D.611B127)
338B134 Harness Assembly
Engine - Spec K --- R

10CW-150R/663K (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D.611B127)
338B134 Harness Assembly
301A1612 Control Mounting Bracket
Engine - Spec K --- R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit
416A37 Battery Cable - 48"
416A77 Battery Cable - 28"

10CW-150R/1454K (Magnet Use)

Generator - 10CW150N1A
Control - Code 24 (W.D.611B127)
338B134 Harness Assembly
301A1612 Control Mounting Bracket
Engine - Spec K --- R
*405D1146 Housing Assy.
*403K474 Mounting Skid and Muffler Kit
*416K334 Battery and Fuel Tank Rack Kit
*159K478 Fuel Tank Kit
416A37 Battery Cable - 48"
416A77 Battery Cable - 28"
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)

705CW-1R/31K

Generator - 705CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec K --- R
Gas Fuel Model

705CW-1R/31L

Generator - 705CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L --- R
Gas Fuel Model

705CW-3E/2428J

Generator - 705CW/119
Control - Code 143 (W.D.611C427)
Engine - Spec J --- R
110B1193 Intake Valve - Stellite (2)
110B1195 Exhaust Valve - Stellite (2)
110A1191 Intake Valve Seat Insert - Stellite (2)
110-620 Valve Rotator (4)
102C465 Oil Base
141-172 Choke Shaft Lever-Carburetor
153A347 Choke Rod Bracket
518P176 Choke Rod Bracket Clip
153A18 Choke Control Rod
309B10 Low Oil Pressure Cut-Off Switch
502-58 Brass Tee - 1/8 (To Oil Cut-Off Switch)
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
134D1095 Blower Housing Scroll
134-1218 Shroud - Upper L. H. Cylinder
134-1219 Shroud - Lower L. H. Cylinder
134-1220 Shroud - Upper R. H. Cylinder
134-1221 Shroud - Lower R. H. Cylinder
134D1208 Air Discharge Elbow
416A38 Battery Cable - 60" (2)

705CW-3R/1K

Generator - 705CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K --- R

705CW-3R/1L

Generator - 705CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L --- R

705CW-3R/12K

Generator - 705CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec K --- R
Gas-Gasoline Model

705CW-3R/12L

Generator - 705CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L --- R
Gas-Gasoline Model

705CW-3R/13L

Generator - 705CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L --- R
Gas Fuel Model

705CW-3R/30K

Generator - 705CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K --- R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
415K7 Fuel Line (5/16" x 25 Ft.) Includes Elbows and Connector
415K45 Fuel Line (3/8" x 25 Ft.) Includes Elbows and Connector

705CW-3R/30L

Generator - 705CW3C1C
Control - Code 154 (W.D.611C498)
Engine - Spec L --- R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support
415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
415K7 Fuel Line (5/16" x 25 Ft.) Includes Elbows and Connector
415K45 Fuel Line (3/8" x 25 Ft.) Includes Elbows and Connector

705CW-3R/31K

Generator - 705CW3C1C
Control - Code 100 (W.D.611C331)
Engine - Spec K --- R
Gas Fuel Model

705CW-3R/31L

Generator - 705CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L --- R
Gas Fuel Model

705CW-3R/96J

Generator - 705CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec J — R
309B10 Low Oil Pressure Cut-
Off Switch
502-58 Brass Tee - 1/8 (Oil
Cut-Off Switch Mtg.)

705CW-3R/131K

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec K — R
Gas Fuel Model (LPG)

705CW-3R/131L

Generator - 705CW3C1C
Control - Code 158 (W.D.611C505)
Engine - Spec L — R
Gas Fuel Model (LPG)
141B675 Carburetor
145A231 Spacer - Carb. to
Manifold
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148A418 Vaporizer Assy.
(Zenith #A963B-1)
Mts. on Blower Housing
Front Panel)
148A423 Vaporizer Mtg. Bracket
148C429 Carburetor to Vaporizer
Line
332-50 Vaporizer Line Clip (2)

705CW-3R17/1K (X-Ray Model)

Generator - 705CW3C2C
Control - Code 97(W.D.611C327)
Engine - Spec K — R

705CW-3R17/1L (X-Ray Model)

Generator - 705CW3C2C
Control - Code 154(W.D.611C498)
Engine - Spec L — R

705CW-3R/316K

Generator - 705CW3C1C
Control - Code 97 (W.D.611C327)
Engine - Spec K — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

705CW-3R/316L

Generator - 705CW3C1C
Control - Code 154(W.D.611C498)
Engine - Spec L — R
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

705CW-3R/363J

Generator - 705CW3C1C
Control - Code 97(W.D.611C327)
Code 75(W.D.625A23)
Engine - Spec J — R
Oil Base Heater
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support

705CW-3R/663L

Generator - 705CW3C1C
Control - Code 154(W.D.611C498)
Engine - Spec L — R
*405D1146 Housing Assy.
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/703K

Generator - 705CW3C1C
Control - Code 97(W.D.611C327)
Code 64(W.D.615B87)
Engine - Spec K — R
*403K474 Mounting Skid and
Muffler Kit
*159K478 Fuel Tank Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/704J

Generator - 705CW3C1C
Control - Code (W.D.611C327)
Engine - Spec J — R
*159K478 Fuel Tank Kit
*403K474 Mounting Skid
and Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/741L

Generator - 705CW3C1C
Control - Code 154(W.D.611C498)
Code 68(W.D.615B95)
Engine - Spec L — R
*159A472 Reservoir Tank
Assy.
159B752 Reservoir Tank
Support

705CW-3R/862J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater

705CW-3R/875J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/886L

Generator - 705CW3C1C
Control - Code 154(W.D.611C498)
Code 75(W.D.625A23)
Engine - Spec L — R
Oil Base Heater
*405D1146 Housing Assy.
*159K478 Fuel Tank Kit
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit

705CW-3R/1203J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas Fuel Model
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel Tank
Rack Kit

705CW-3R/1233J

Generator - 705CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec J — R
*405D1146 Housing Assy.
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-3R/1369L

Generator - 10CW3C1C
Control - Code 154(W.D.611C498)
Code 68 (W.D.615B95)
Engine - Spec L — R

MODEL DATA SECTION

705CW-3R/1593J

Generator - 705CW3C1C
Control - Code 97(W.D.611C327)
Engine - Spec J — R
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(Oil Cut-Off Switch Mtg.)
307P77 Hi - Temp. Cut-Off Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille - Housing
*159A472 Reservoir Tank Assy.
159B752 Reservoir Tank Support

705CW-3R/1869L

Generator - 705CW3C1C
Control - Code 174(W.D.611C612)
Engine - Spec L — R
Gas Fuel Model
154A790 Intake Manifold
502-3 Inv. Male Connector
(Vacuum Line) (2)
148A367 Vacuum Switch
148A531 Vacuum Line

705CW-3R/2055J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Brass Tee - 1/8
(Oil Cut-Off Switch
Mtg.)

705CW-3R/2146L

Generator - 705CW/134
Control - Code 161(W.D.611C509)
Engine - Spec L — R
102E465 Oil Base
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Tee - 1/8 (Oil Cut-Off
Switch Mtg.)
502-20 Elbow - 90° Street -
Oil Gauge Mtg. (2)
110A300 Spacer - Oil Filter Mtg.
502-2 Elbow - Filter Outlet
122C205 Oil Line - Filter Inlet
122C204 Oil Line - Filter Outlet
167A1277 Sp. Plug Cable - R. H.
167A1278 Sp. Plug Cable - L. H.
416A50 Battery Cable (2)
122B208 Oil Filter Support Bracket

705CW-3R/2155J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 75 (W.D.625A23)

705CW-3R/2155J (Cont.)

Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit
*416K334 Battery and Fuel
Tank Rack Kit
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Tee - 1/8 (Oil
Cut-Off Switch
Mtg.)

705CW-3R/2182L

Generator - 705CW3C1C
Control - Code 158(W.D.611C505)
Engine - Spec L — R
Gas Fuel Model
*405D1146 Housing Assy.
*416K334 Battery and Fuel
Tank Rack Kit
*403K319 Mounting Skid and
Muffler Kit

705CW-3R/2205J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 64 (W.D.615B87)
Code 75(W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater

705CW-3R/2341L

Generator - 705CW3C1C
Control - Code 158(W.D.611C505)
Code 75 (W.D.625A23)
Engine - Spec L — R
Gas Fuel Model
Oil Base Heater
*405D1146 Housing Assy.
*416K334 Battery and Fuel
Tank Rack Kit
*403K474 Mounting Skid and
Muffler Kit

705CW-3R/2489J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 75 (W.D.625A23)
Engine - Spec J — R
Gas Fuel Model
Oil Base Heater
309B10 Low Oil Pressure
Cut-Off Switch
502-58 Tee (Oil Cut-Off
Switch Mtg.)

705CW-3R/2489J (Cont.)

307P77 Hi - Temp. Cut Off
Switch
134A757 Blower Housing
134A758 Blower Housing Scroll
134A711 Air Outlet Grille -
Housing

705CW-3R/2508J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Code 120(W.D.615B168)
Engine - Spec J — R
Gas-Gasoline Model
*405D1146 Housing Assy.
*403K474 Mounting Skid and
Muffler Kit (Less
Muffler)
R.T.F. Battery Rack
134D423 Air Discharge Adapter
416P437 Battery - 6 Volt (2)

705CW-3R/2524J

Generator - 705CW3C1C
Control - Code 100(W.D.611C331)
Engine - Spec J — R
Gas Fuel Model
141B654 Carburetor (LPG)
145A231 Spacer (Carburetor to
Manifold)
503A366 Air Cleaner Breather
Hose
134B1020 Blower Housing Front
Panel
148C429 Line (Carburetor to
Vaporizer)
332-50 Vaporizer Line Clip (2)
148A418 Vaporizer Assy.
(Zenith #A963B-1)
Mts. on Blower
Housing Front Panel
148A423 Vaporizer Mtg.
Bracket
502-231 Vaporizer Outlet
Union

705CW-3R/2524L

Generator - 705CW3C1C
Control - Code 169(W.D.611C550)
Engine - Spec L — R
Gas Fuel Model
141B675 Carburetor (LPG)
145A231 Spacer (Carburetor
to Manifold)
503A366 Air Cleaner Breather
Hose
134B1020 Blower Hsg. Front
Panel
148C429 Line (Carburetor to
Vaporizer)

(Cont. on next page)

* - Refer to Accessory Section for Component Parts.

R.T.F. - Refer to Factory. Include Model and Serial Number of Unit.

MODEL DATA SECTION

87

705CW-3R/2524L (Cont.)

- 332-50 Vaporizer Line Clip (2)
- 148A418 Vaporizer Assy. (Zenith #A963B-1) Mts. on Blower Hsg. Front Panel
- 148A423 Vaporizer Mtg. Bracket
- 502-231 Vaporizer Outlet Union

705CW-3R/2576J

- Generator - 705CW3C1C
- Control - Code 147(W.D.611C452)
- Engine - Spec J — R
- 167A125 Spark Plug (2)
- 167A1263 Sp. Plug Cable R. H.
- 167A1264 Sp. Plug Cable L. H.
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

705CW-3R/2628J

- Generator - 705CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec J — R
- 149P554 Electric Fuel Pump - 12 V.
- 502-2 Elbow - Inv. Male (Sol. Valve Inlet)
- 505-61 Pipe Nipple - 1/8 x 2"
- 501-4 Fuel Line
- 307B565 Fuel Solenoid Valve - 12 V.

705CW-3R/2652J

- Generator - 705CW3C1C
- Control - Code 97(W.D.611C327) Code 68(W.D.615B95)
- Engine - Spec J — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit

705CW-3R/2753K

- Generator - 705CW/95
- Control - Code 153 (W.D.611C491) Code 181 (W.D.615B222) Code 75 (W.D.625A23)
- Engine - Spec K — R
- Gas - Gasoline Model
- *405D1146 Housing Assy.
- *159K478 Fuel Tank Kit
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- 309B10 Low Oil Pressure Cut-Off Switch

705CW-3R/2753K (Cont.)

- 502-58 Tee - 1/8 (Oil Cut-Off Switch Mtg.)
- 309P77 Hi - Temp. Cut-Off Switch
- 134A757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grille

705CW-3R/2814K

- Generator - 705CW3C1C
- Control - Code 100(W.D.611C331) Code 75 (W.D.625A23)
- Engine - Spec K — R
- Gas Fuel Model
- Oil Base Heater
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Tee- 1/8 (Oil Cut-Off Switch)
- 102A349 Oil Base Opening Cover
- 333B50 Thermostat Cover
- 505-166 Pipe Tee - 3/4
- 505-85 Pipe Nipple - 3/4 x 2"
- 505-307 Pipe Reducer - 3/4 x 1/2

705CW-3R/2914L

- Generator - 705CW3C1C
- Control - Code 172(W.D.611C572) Code 68(W.D.615B95)
- Engine - Spec L — R
- Gas Fuel Model
- 167A125 Spark Plug (2)
- 167A1263 Sp. Plug Cable- R. H.
- 167A1264 Sp. Plug Cable - L. H.
- 338B281 Wiring Harness

705CW-3R/2939L

- Generator - 705CW3C1C
- Control-Code 154(W.D.611C498) Code 182(W.D.615B226)
- Engine - Spec L — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support

705CW-3R/3182L

- Generator - 705CW3C1C
- Control - Code 100(W.D.611C331)
- Engine - Spec L — R
- Gas Fuel Model
- *405D1146 Housing Assy.
- *416K334 Battery and Fuel Tank Rack Kit
- *403K319 Mounting Skid and Muffler Kit

705CW-3R/3383L

- Generator - 705CW3C1C
- Control - Code 100(W.D.611C331) Code 75 (W.D.625A23)
- Engine - Spec L — R
- Gas Fuel Model
- Oil Base Heater
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- 309B10 Low Oil Pressure Cut-Off Switch

705CW-3R17/663L (X-Ray Model)

- Generator - 705CW3C2C
- Control - Code 154(W.D.611C498)
- Engine - Spec L — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-3R17/704K (X-Ray Model)

- Generator - 705CW3C2C
- Control - Code 97(W.D.611C327)
- Engine - Spec K — R
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-3R17/704L (X-Ray Model)

- Generator - 705CW3C2C
- Control - Code 154(W.D.611C498)
- Engine - Spec L — R
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-3R17/1492J (X-Ray Model)

- Generator - 705CW3C2C
 - Control - Code 97 (W.D.611C327) Code 116(W.D.615B162)
 - Engine - Spec J — R
- (Cont. on next page)

MODEL DATA SECTION

705CW-3R17/1492J (X-Ray Model)(Cont.)

- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-3R17/1492L (X-Ray Model)

- Generator - 705CW3C2C
- Control - Code 154(W.D.611C498)
Code 116(W.D.615B162)
- Engine - Spec L — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-3R30/1154K

- Generator - 705CW3C1C
- Control - Code 97(W.D.611C327)
Code 75(W.D.625A23)
- Engine - Spec K — R
- Oil Base Heater
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
- 415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
- 415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

705CW-3R131/3300L

- Generator - 705CW3C1C
- Control - Code 158(W.D.611C505)
- Engine - Spec L — R
- Gas Fuel Model (LPG)

705CW-4R/1K

- Generator - 705CW4C1C
- Control - Code 94(W.D.611C324)
- Engine - Spec K — R

705CW-4R/1L

- Generator - 705CW4C1C
- Control - Code 155(W.D.611C499)
- Engine - Spec L — R

705CW-4R/12K

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
- Engine - Spec K — R
- Gas-Gasoline Model

705CW-4R/12L

- Generator - 705CW4C1C
- Control - Code 159(W.D.611C506)
- Engine - Spec L — R
- Gas-Gasoline Model

705CW-4R/13K

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
- Engine - Spec K — R
- Gas Fuel Model

705CW-4R/13L

- Generator - 705CW4C1C
- Control - Code 159(W.D.611C506)
- Engine - Spec L — R
- Gas Fuel Model

705CW-4R/30K

- Generator - 705CW4C1C
- Control - Code 94(W.D.611C324)
- Engine - Spec K — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
- 415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
- 415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

705CW-4R/30L

- Generator - 705CW4C1C
- Control - Code 155(W.D.611C499)
- Engine - Spec L — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 415K3 Underground Fuel Tank (55 Gal.) Includes Fittings
- 415K7 Fuel Line - 5/16" x 25 Ft. - Includes Elbows & Connector
- 415K45 Fuel Line - 3/8" x 25 Ft. - Includes Elbows & Connector

705CW-4R/31K

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
- Engine - Spec K — R
- Gas Fuel Model

705CW-4R/31L

- Generator - 705CW4C1C
- Control - Code 159(W.D.611C506)
- Engine - Spec L — R
- Gas Fuel Model

705CW-4R/55K

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
- Engine - Spec K — R
- Gas-Gasoline Model
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Tee - 1/8 (Oil Cut-Off Switch Mtg.)

705CW-4R/316L

- Generator - 705CW4C1C
- Control - Code 155(W.D.611C499)
- Engine - Spec L — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support

705CW-4R/663L

- Generator - 705CW4C1C
- Control - Code 155 (W.D.611C499)
- Engine - Spec L — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-4R/737J

- Generator - 705CW4C1C
- Control - Code 94(W.D.611C324)
Code 67(W.D.615B92)
- Engine - Spec J — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-4R/737L

- Generator - 705CW4C1C
- Control - Code 155(W.D.611C499)
Code 67(W.D.615B92)
- Engine - Spec L — R

(Cont. on next Page)

MODEL DATA SECTION

89

705CW-4R/737L (Cont.)

- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-4R/1930J

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
Code 75(W.D.625A23)
- Engine - Spec J — R
- Gas Fuel Model
- Oil Base Heater
- *405D1146 Housing Assy.
- *416K334 Battery and Fuel Tank Rack Kit
- *403K474 Mounting Skid and Muffler Kit
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Tee - 1/8 (Oil Cut-Off Switch Mtg.)
- 307P77 Hi - Temp. Cut-Off Switch
- 134A757 Blower Housing
- 134A758 Blower Housing Scroll
- 134A711 Air Outlet Grille - Housing

705CW-4R/1982K

- Generator - 705CW4C1C
- Control - Code 95 (W.D.611C325)
Code 67 (W.D.615B92)
- Engine - Spec K — R
- Gas Fuel Model

705CW-4R/2557J

- Generator - 705CW4C1C
- Control - Code 94(W.D.611C324)
Code 69(W.D.615B103)
Code 75(W.D.625A23)
- Engine - Spec J — R
- Oil Base Heater
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-4R/3469L

- Generator - 705CW/169
- Control - Code 162(W.D.611C510)
Code 69(W.D.615B103)
- Engine - Spec L — R
- 309B10 Low Oil Pressure Cut-Off Switch
- 502-58 Tee - 1/8 (Oil Cut-Off Switch Mtg.)
- 150A879 Overspeed Switch
- 150A852 Overspeed Switch Cover

705CW-4R30/710L

- Generator - 705CW4C1C
- Control - Code 155(W.D.611C499)
Code 67(W.D.615B92)
- Engine - Spec L — R
- *159A472 Reservoir Tank Assy.
- 159B752 Reservoir Tank Support
- 415K3 Underground Fuel Tank (55 Gal.)
Includes Fittings
- 415K7 Fuel Line (5/16" x 25 Ft.)
Includes Elbows & Connector
- 415K45 Fuel Line (3/8" x 25 Ft.)
Includes Elbows & Connector

705CW-4R131/710J

- Generator - 705CW4C1C
- Control - Code 95(W.D.611C325)
Code 67(W.D.615B92)
- Engine - Spec J — R
- Gas Fuel Model (LPG)

705CW-4R131/710L

- Generator - 705CW4C1C
- Control - Code 159(W.D.611C506)
Code 67(W.D.615B92)
- Engine Spec L
- Gas Fuel Model (LPG)

705CW-4R131/3300L

- Generator - 705CW4C1C
- Control - Code 159(W.D.611C506)
- Engine - Spec L — R
- Gas Fuel Model

705CW-4XR/1J

- Generator - 705CW/153
- Control - Code 94(W.D.611C324)
- Engine - Spec J — R

705CW-4XR/13J

- Generator - 705CW/153
- Control - Code 95(W.D.611C325)
- Engine - Spec J — R
- Gas Fuel Model

705CW-5DE/2276J

- Generator - 705CW/140
- Control - Code 135(W.D.611C399)
- Engine - Spec J — R
- Gas Fuel Model
- 110B1193 Intake Valve - Stellite (2)
- 110B1195 Exhaust Valve - Stellite (2)

705CW-5DE/2276J (Cont.)

- 110A1191 Intake Valve Seat Insert - Stellite (2)
- 110A1204 Valve Spring Retainer (4)
- 123A209 Oil Fill Tube
- 102A453 Oil Base Opening Cover
- 123A92 Gasket (Oil Fill Tube Mtg.)
- 123A206 Oil Level Indicator
- 503A271 Air Cleaner Hose
- 141B642 Carburetor (LPG)
- 502-230 Elbow - Carb. Fuel Inlet
- 502-138 Elbow - Breather Hose to Carb.
- 502-3 Inverted Male Connector - Oil Line Bracket (4)
- 122A194 Oil Line Bracket
- 122B196 Line - Oil Filter Inlet
- 122B197 Line - Oil Filter Outlet
- 167A1277 Sp. Plug Cable - R. H.
- 167A1278 Sp. Plug Cable - L. H.
- 134B1020 Blower Housing Front Panel
- 148C418 Vaporizer Assy. (Zenith #A963B-1)
Mounts on Blower Hsg. Front Panel
- 148C423 Vaporizer Mtg. Bracket
- 502-231 Vaporizer Outlet Union
- 159B754 Line (Carb. to Vaporizer)
- 332-50 Vaporizer Line Clip (2)

705CW5DR/1L

- Generator - 705CW/170
- Control - Code 156(W.D.611C500)
- Engine - Spec L — R

705CW-5DR/3512L

- Generator - 705CW/170
- Control - Code 156(W.D.611C500)
Code 185(W.D.615B258)
- Engine - Spec L — R
- *405D1146 Housing Assy.
- *403K474 Mounting Skid and Muffler Kit
- *416K334 Battery and Fuel Tank Rack Kit
- *159K478 Fuel Tank Kit

705CW-5E/3270L

- Generator - 705CW/110
- Control - Code 99(W.D.611B330)
- Engine - Spec L — R

(Cont. on next page)

MODEL DATA SECTION

705CW-5E/3270L (Cont.)

Gas Fuel Model (LPG)

141B672	Carburetor
153B97	Choke Control Cable
503-271	Air Cleaner Breather Tube
102A453	Oil Base Opening Cover
123A209	Oil Fill Tube
123A206	Oil Level Indicator
123A92	Gasket - Oil Fill Tube Mtg.
122C189	Line - Oil Filter Inlet
122C190	Line - Oil Filter Outlet
123A668	Breather Tube
123A671	Breather Adapter
134D1032	Shroud - R. H. Cylinder
193B107	Oil Pressure Gauge
193A108	Sender - Oil Pressure Gauge
140A564	Air Cleaner
155B707	Muffler
416A435	Battery Cable - 38"
416A519	Battery Jumper Cable - 24"
140A565	Inlet Cap - Air Cleaner
140A566	Saddle Bracket - Air Cleaner
140B574	Bracket - Oil Filter and Air Cleaner Mtg.
502-230	Elbow - Carb. Fuel Inlet
502-138	Elbow - Breather Hose to Carb.

705CW-5E/3691L

Generator - 705CW/110	
Control - Code 99(W.D.611B330)	
Engine - Spec L — R	
503-271	Air Cleaner Breather Tube
102A453	Oil Base Opening Cover
123A209	Oil Fill Tube
123A206	Oil Level Indicator
123A92	Gasket - Oil Fill Tube Mtg.
122C189	Line - Oil Filter Inlet
122C190	Line - Oil Filter Outlet
123A668	Breather Tube
123A671	Breather Adapter
134D1032	Shroud - R. H. Cylinder
193B107	Oil Pressure Gauge
193A108	Sender - Oil Pressure Gauge
140A564	Air Cleaner
155B707	Muffler
416A435	Battery Cable - 38"
416A519	Battery Jumper Cable - 24"
140A565	Inlet Cap - Air Cleaner
140A566	Saddle Bracket - Air Cleaner
140B574	Bracket - Oil Filter and Air Cleaner Mtg.

705CW-5R/1K

Generator - 705CW5C1C	
Control - Code 94(W.D.611C324)	
Engine - Spec K — R	

705CW-5R/1L

Generator - 705CW5C1C	
Control - Code 155(W.D.611C499)	
Engine - Spec L — R	

705CW-5R/13J

Generator - 705CW5C1C	
Control - Code 95(W.D.611C325)	
Engine - Spec J — R	
Gas Fuel Model	

705CW-5R/2028L

Generator - 705CW/123	
Control - By Customer	
Engine - Spec L — R	
154C681	Exhaust Manifold
134A1095	Blower Housing
502-3	Oil Line Connector (4)
501B10	Oil Line - Flexible (2) (Remote Mtg.)
309B10	Low Oil Pressure Cut-Off Switch
502-58	Tee - 1/8 (Oil Cut-off Switch Mtg.)
122A194	Oil Line Brkt. Assy.
134A1078	Air Outlet Adapter - Housing
336A1297	Magneto Stop Lead
149A555	Fuel Pump Hole Cover

705CW-5R/2798K

Generator - 705CW/123	
Control - By Customer	
Engine - Spec K — R	
141B675	Carburetor (LPG)
145A231	Spacer (Carb. to Manifold)
503A275	Air Cleaner Breather Hose
501B10	Oil Line - Flexible (2) (Remote Mtg.)
502-3	Oil Line Connector (4)
309B10	Low Oil Pressure Cut-Off Switch
502-58	Tee - 1/8 (Oil Cut-Off Switch Mtg.)
122A194	Oil Line Brkt. Assy.

705CW-5R/2798K (Cont.)

154C681	Exhaust Manifold
134B1020	Blower Housing Front Panel
148A418	Vaporizer Assy. (Zenith #963B-1) Mts. on Blower Hsg. Front Panel
148A423	Vaporizer Mtg. Bracket
502-231	Vaporizer Outlet Union
148C429	Line (Carb. to Vaporizer)
332-50	Vaporizer Line Clip (2)
134A1095	Blower Housing Scroll
336A1297	Magneto Stop Lead

705CW-5R/3043L

Generator - 705CW/123	
Control - By Customer	
Engine - Spec L — R	
154C681	Exhaust Manifold
501B10	Oil Line - Flexible (2)
502-3	Oil Line Connector (4) (Remote Mtg.)
309B10	Low Oil Pressure Cut-Off Switch
502-58	Tee - 1/8 (Oil Cut-Off Switch Mtg.)
122A194	Oil Line Bracket Assy.

705CW-6R/1K

Generator - 705CW6C1C	
Control - Code 94(W.D.611C324)	
Engine - Spec K — R	

705CW-6R/1L

Generator - 705CW6C1C	
Control - Code 155 (W.D.611C499)	
Engine - Spec L — R	

GENERATOR SECTION

GENERATOR SECTION

CONTAINS THE FOLLOWING-

GENERATOR MODELS FOR CW ENGINE GENERATORS

GENERATOR MODELS ARE LISTED BY NUMBER, LETTER SEQUENCE.
PARTS MOST OFTEN REQUIRED ARE LISTED IN COLUMNS ACROSS
THE PAGE FROM EACH MODEL. REFERENCE SYMBOLS APPEARING
WITH ANY COLUMN, MODEL OR PART SHOULD BE CHECKED AGAINST
THE CORRESPONDING FOOT NOTES. ANY PART REQUIRED BUT NOT
LISTED HERE SHOULD BE REFERRED TO THE FACTORY ALONG WITH
THE MODEL AND SERIAL NUMBER OF THE UNIT.

BLANK PAGE

GENERATOR SECTION

GENERATOR DATA NO.	□ FRAME NO.	† POLESHOE NO.	END BELL NO.	† BRUSH RIG ASSY. NO.	COLLECTOR RING BRUSH NO.	COMMUTATOR BRUSH NO.	• ARMATURE ASSY. NO.	FIELD COIL ASSY. NO.
3CW/38	210C194	221B97	211D76	212C181	▲214A46	†214A45	3CW/38	222A1328
5CW3C1A	210C194	221B93	211D76	212C181	▲214A46	†214A45	201A519	222A1329
5CW3C1B	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1329
5CW3C1C	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1491
5CW3N1A	210C194	221B93	211D76	212C181	▲214A46	†214A45	201A519	222A1343
5CW3N1B	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1394
5CW4C1A	210C194	221B97	211D76	212C181	▲214A46	†214A45	201A518	222A1328
5CW4C1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A518	222A1328
5CW4C1C	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A518	222A1468
5CW4N1A	210C194	221B97	211D76	212C181	▲214A46	†214A45	201A518	222A1352
5CW4N1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A518	222A1393
5CW5C1A	210C194	221B97	211D76	212C181	▲214A46	†214A45	201A531	222A1328
5CW5C1B	210C220	221B97	211D91	212C207	§214A54	†214A57	201A531	222A1328
5CW5N1B	210C220	221B97	211D91	212C207	§214A54	†214A57	201A531	222A1393
5CW6C1B	210C220	221B97	211D91	212C207	§214A54	†214A57	201A707	222A1328
5CW6C1C	210C220	221B97	211D91	212C207	§214A54	†214A57	201A707	222A1468
5CW7C1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A683	222A1328
5CW8C1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A788	222A1328
■5CW/29	210C194	221B93	211D76	212C181	▲214A46	†214A45	5CW/29	222A1329
5CW/34	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A508	222A1318
5CW/37	210C195	221B94	211D76	212C181	▲214A46	†214A45	5CW/37	222A1318
■5CW/44	210C220	221B93	211D91	212C202	▲214A54	†214A57	5CW/44	222A1329
*5CW/48	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A745	222A1394
5CW/49	5CW/49	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1329
■5CW/50	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A745	222A1329
5CW53C1A	210C194	221B97	211D76	212C181	▲214A46	†214A45	201A687	222A1328
5CW53C1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A637	222A1328
5CW53N1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A637	222A1393
5CW54C1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A545	222A1353
5CW54C1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A545	222A1353
5CW54N1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A545	222A1365
5CW54N1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A545	222A1392
5CW/55	210C217	221B94	211D91	212C202	▲214A54	†214A57	5CW/55	222A1318
5CW55C1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	5CW55C1A	222A1353
5CW55C1B	210C217	221B94	211D91	212C207	§214A54	†214A57	201A614	222A1353
★5CW/57	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1329
5CW57C1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A602	222A1353
5CW57C1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A602	222A1353
5CW57N1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A602	222A1392
5CW/64	210C220	221B97	211D91	212C207	§214A54	†214A57	5CW/64	222A1328

- NOTE: 1. Whenever a Generator Data Number is listed in place of a part number, refer order to factory along with a description of the part and the Complete Model and Serial Number of the Unit.
2. For Explanation of Symbols see the last page of this section.

GENERATOR SECTION

GENERATOR DATA NO.	□ FRAME NO.	† POLESHOE NO.	END BELL NO.	† BRUSH RIG ASSY. NO.	COLLECTOR RING BRUSH NO.	COMMUTATOR BRUSH NO.	• ARMATURE ASSY. NO.	FIELD COIL ASSY. NO.
★5CW/68	210C220	221B93	211D91	212C202	▲214A54	†214A57	201A519	222A1491
6CW53C1C	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A1001	222A1468
6CW54C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A857	222A1469
6CW55C1C	210C217	221B94	211D91	212C207	\$214A54	†214A57	201A874	222A1486
6CW57C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A852	222A1486
6CW/102	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A1047	222A1562
8CW53C1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	8CW53C1A	222A1318
8CW53C1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A636	222A1318
8CW53C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A636	222A1469
8CW53N1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A636	222A1391
8CW54C1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A855	222A1470
8CW55C1B	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A826	222A1330
8CW55C1C	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A826	222A1470
8CW57C1A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A606	222A1330
8CW57C1B	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A606	222A1330
8CW57C1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A606	222A1470
8CW/58	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A606	222A1390
8CW/111	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A636	222A1495
8CW/143	210C219	221B96	211D91	212C202	▲214A54	†214A57	201-1181	222A1470
10CW3C1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A508	222A1318
10CW3C1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1318
10CW3C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1469
10CW3N1A	210C195	221B94	211D76	212C181	▲214A46	†214A45	201A508	222A1339
10CW3N1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1391
10CW4C1A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A520	222A1330
10CW4C1B	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A520	222A1330
10CW4C1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A520	222A1470
10CW4N1A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A520	222A1346
10CW4N1B	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A520	222A1390
10CW4XC1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A1146	222A1470
10CW5C1A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A532	222A1330
10CW5C1B	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A532	222A1330
10CW5C1C	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A532	222A1470
10CW5N1B	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A532	222A1390
10CW6C1A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A541	222A1330
10CW6C1B	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A541	222A1330
10CW6C1C	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A541	222A1470
10CW6N1B	210C219	221B96	211D91	212C207	\$214A54	†214A57	201A541	222A1390
10CW7C1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A880	222A1470
10CW8C1B	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A760	222A1330
10CW8C1C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A760	222A1470
10CW/33	210C197	221B96	211B91	212C202	▲214A54	†214A57	10CW/33	10CW/33

- NOTE: 1. Whenever a Generator Data Number is listed in place of a part number, refer order to factory along with a description of the part and the Complete Model and Serial Number of the Unit.
2. For Explanation of Symbols see the last page of this section.

GENERATOR SECTION

GENERATOR DATA NO.	□ FRAME NO.	† POLESHOE NO.	END BELL NO.	† BRUSH RIG ASSY. NO.	COLLECTOR RING BRUSH NO.	COMMUTATOR BRUSH NO.	• ARMATURE ASSY. NO.	FIELD COIL ASSY. NO.
10CW/41	210C219	221B96	211D91	212C202	▲214A54	†214A57	10CW/41	10CW/41
10CW/42	210C267	221B94	211D91	10CW/42	▲214A54	†214A57	201A508	222A1477
○10CW/53	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1318
10CW/56	210C219	221B96	211D91	212C202	▲214A54	†214A57	10CW/56	222A1330
■10CW/59	210C217	221B94	211D91	212C202	▲214A54	†214A57	10CW/59	222A1318
■10CW/60	210C217	221B94	211D91	212C202	▲214A54	†214A57	10CW/60	222A1318
★10CW/61	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1469
10CW/69	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1495
10CW/80	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	10CW/80
10CW/89	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A520	10CW/89
10CW/91	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1495
■10CW/93	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A1056	222A1469
■10CW/96	210C216	221B104	211D90	212C201	NONE	†214A49	201A1006	222A1554
10CW/101	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1469
10CW/103	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A1080	222A1470
■10CW/104	210C324	221B96	211D91	212C202	▲214A54	†214A57	10CW/104	222A1563
10CW/108	210C324	221B96	211D91	212C207	§214A54	†214A57	201A532	10CW/108
■10CW/109	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A1056	222A1495
10CW/116	210C324	221B96	211D91	212C207	§214A54	†214A57	201A532	222A1563
10CW/118	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1567
10CW/120	210C324	221B96	211D91	212C202	▲214A54	†214A57	201A1080	222A1563
10CW/126	210C219	221B96	211D91	212C207	§214A54	†214A57	201A532	10CW/126
10CW/128	210C324	221B96	211D91	212C202	▲214A54	†214A57	201A520	222A1563
10CW/133	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A520	222A1470
10CW/135	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A508	10CW/135
10CW/137	210C267	221B94	211A140	212C202	▲214A54	†214A57	201A1056	222A1495
10CW/138	210C217	221B94	211D91	212C207	§214A54	†214A57	10CW/138	222A1469
10CW/141	210C217	221B94	211D141	212C202	▲214A54	†214A57	201A508	222A1469
10CW/144	210C219	221B96	211D141	212C202	▲214A54	†214A57	201A520	222A1470
10CW/148	210C219	221B96	211D91	212C207	§214A54	†214A57	201A541	222A1594
■10CW150N1A	210C216	221B104	211D90	212C201	NONE	†214A49	201A656	222A1395
10CW/151	210C219	221B96	211D133	212C202	▲214A54	†214A57	10CW/151	10CW/151
10CW/152	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A1080	222A1470
10CW/154	210C324	221B96	211D91	212C202	▲214A54	†214A57	201A1080	222A1594
10CW/161	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A508	222A1495
705CW3C1B	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A817	222A1328
705CW3C1C	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A817	222A1468
705CW3C2A	210C197	221B96	211D76	212C181	▲214A46	†214A45	201A605	222A1330
705CW3C2B	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A605	222A1330

- NOTE: 1. Whenever a Generator Data Number is listed in place of a part number, refer order to factory along with a description of the part and the Complete Model and Serial Number of the Unit.
2. For Explanation of Symbols see the last page of this section.

GENERATOR DATA NO.	□ FRAME NO.	† POLESHOE NO.	END BELL NO.	† BRUSH RIG ASSY. NO.	COLLECTOR RING BRUSH NO.	COMMUTATOR BRUSH NO.	● ARMATURE ASSY. NO.	FIELD COIL ASSY. NO.
705CW3C2C	210C219	221B96	211D91	212C202	▲214A54	†214A57	201A605	222A1470
705CW4C1B	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A818	222A1318
705CW4C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A818	222A1469
705CW5C1C	210C217	221B94	211D91	212C207	§214A54	†214A57	201A820	222A1469
705CW6C1C	210C217	221B94	211D91	212C207	§214A54	†214A57	201A845	222A1469
705CW7C1C	210C217	221B94	211D91	212C202	▲214A54	†214A57	201A864	222A1469
☐705CW/65	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A849	222A1468
705CW/92	210C316	221B97	211D91	212C202	▲214A54	†214A57	201A817	705CW/92
705CW/94	210C267	221B94	211D91	212C202	▲214A54	†214A57	201A818	222A1495
705CW/95	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A817	705CW/95
705CW/98	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A817	222A1468
705CW/110	210C331	221B94	211D91	212C207	§214A54	†214A57	201A820	222A1567
705CW/112	210C331	221B94	211D91	212C207	§214A54	†214A57	201A845	222A1567
705CW/119	210C316	221B97	211D91	212C202	▲214A54	†214A57	201A817	222A1584
705CW/123	210C344	221B94	211D91	212C207	§214A54	†214A57	201A820	222A1469
705CW/134	210C220	221B97	211D91	212C202	▲214A54	†214A57	201A817	222A1468
705CW/140	210C267	221B94	211D91	212C202	▲214A54	†214A57	201-1165	222A1567
705CW/169	210C217	221B94	211D141	212C202	▲214A54	†214A57	201A818	222A1469
705CW/170	210C217	221B94	211D91	212C202	▲214A54	†214A57	201-1165	222A1469

NOTE: 1. Whenever a Generator Data Number is listed in place of a part number, refer order to factory along with a description of the part and the Complete Model and Serial Number of the Unit.

ADDITIONAL PARTS REQUIRED (Unless specified as different per symbols)

510A52	Bearing, Armature Ball (Replaces #510A2).
212B1120	Block, Holder - Collector Ring Brush (4) - ALL AC Plants.
232A615	Clip, Bearing Stop.
222A1396	Coil Assy., Interpole (4 Coils - Connected) - Magnet use Plants.
222A1555	Coil Assy., Interpole (4 Coils - Connected) - Battery Charger 110-140 V.
232A601	Cover, Bearing.
232B814	Cover, End Bell Opening (3) - Top and Sides (ALL AC Plants).
232B841	Cover, End Bell Opening - Bottom (ALL AC Plants).
232B1089	Cover, End Bell Opening (2) - Upper (ALL DC Plants).
232B1093	Cover, End Bell Opening - Lower Left (ALL DC Plants).
232B1162	Cover, End Bell Opening - Lower Right (ALL DC Plants).
212A1121	Guide, Commutator Brush (4) - ALL AC Plants.
221A107	Interpole (4) - DC Plants only.
213B106	Ring, Insulator - Brush Guide(ALL EXCEPT DC Plants) Spec "A" Only
213B116	Ring, Insulator - Brush Guide(ALL EXCEPT DC Plants)Begin Spec "B".
212B1119	Spider, Brush Rig Mounting (ALL EXCEPT DC Plants) Spec "A" Only.
212B1138	Spider, Brush Rig Mounting (ALL EXCEPT DC Plants) Begin Spec "B"
212A1123	Spring, Collector Ring Brush (Quantity as per brush).
212B1106	Spring, Commutator Brush (4).
232C784	Support, Generator Frame.

EXPLANATION OF REFERENCE SYMBOLS:

- † - 4 Used per Unit.
- § - 6 Used per Unit.
- ▲ - 8 Used per Unit.
- - Frame Only. Machined and Drilled.
- † - Includes Brushes, Springs and Hardware.
- - Includes Bearing and Drive Disc.
- - Use Bearing Cover #232A1031.
- ★ - Use (3) AC Condensers #312A23 and (2) DC Condensers #312A80.
- - Use (4) AC Condensers #312A23 and (2) DC Condensers #312A80.
- * - Use Bearing Cover #232A1031, (4) AC Condensers #312A22 and (2) DC Condensers #312A80.
- ☐ - Use Bearing Cover #234A35, Armature Ball Bearing #510A62 and Bearing Stop Clip 705CW/65.

CONTROL SECTION

CONTROL SECTION

CONTAINS THE FOLLOWING-

CONTROL PARTS FOR CW ENGINE GENERATORS

ALL W.D. (WIRING DIAGRAMS) LISTED UNDER THE HEADING OF CONTROL IN THE MODEL DATA SECTION CAN BE LOCATED BY CODE NUMBER IN THE CONTROL SECTION. CODE NUMBERS ARE LISTED IN NUMERICAL SEQUENCE. ALL MAJOR CONTROL PARTS HAVE BEEN LISTED. WIRING DIAGRAMS SHOWING THE LOCATION OF EACH PART WILL BE SENT TO CUSTOMERS REQUESTING ONE BY W.D. NUMBER.

THE CONTROLS COVERED IN THIS SECTION ARE ENGINE CONTROL ONLY AND ARE NOT TO BE CONFUSED WITH THE SEPARATE AUTOMATIC CONTROLS USED WITH SOME UNITS.

BLANK PAGE

CONTROL SECTION

1

WIRING DIAGRAMS

CODE

①

(W.D.) 602B110

301D857 Connection Box
301B856 Connection Box Cover
332A254 Terminal Block
332A435 Block Marker Strip
332A439 Terminal Block Jumper(2)
312A22 Condenser (2)
332A464 Ground Jumper

②

(W.D.) 602B111

301D857 Connection Box
301B856 Connection Box Cover
332A254 Terminal Block
332A434 Block Marker Strip
332A464 Ground Jumper
312A22 Condenser (3)

③

(W.D.) 602B112

301D857 Connection Box
301B856 Connection Box Cover
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Block Jumper (2)
312A22 Condenser (2)

④

(W.D.) 602B113

301D857 Connection Box
301B856 Connection Box Cover
332A419 Terminal Block
332A436 Block Marker Strip
312A22 Condenser (3)

⑤

(W.D.) 602B121

301D857 Connection Box
301B856 Connection Box Cover
332A254 Terminal Block
332A435 Block Marker Strip
332A439 Block Jumper (2)
312A22 Condenser (2)
332A464 Ground Jumper

⑥

(W.D.) 602B123

301D990 Connection Box
301B856 Connection Box Cover
332A254 Terminal Block
332A435 Block Marker Strip
332A484 Block Jumper (3)
332A439 Block Jumper (2)
332A464 Ground Jumper
312P87 Condenser (3) Output Terminal

⑦

(W.D.) 602B124

301D990 Connection Box
301B856 Connection Box Cover
332A254 Terminal Block
332A434 Block Marker Strip
332A484 Block Jumper (3)
332A464 Ground Jumper
312P87 Condenser (3)

CODE

⑧

(W.D.) 602B125

301D990 Connection Box
301B856 Connection Box Cover
332A419 Terminal Block
332A437 Block Marker Strip
332A484 Block Jumper (3)
332A440 Block Jumper (2)
332A464 Ground Jumper
312P87 Condenser (3)

⑨

(W.D.) 602B126

301D990 Connection Box
301B856 Connection Box Cover
332A419 Terminal Block
332A436 Block Marker Strip
332A484 Block Jumper (3)
332A464 Ground Jumper
312P87 Condenser (3)

⑩

(W.D.) 602B142

301D990 Connection Box
301B1161 Connection Box Cover
332A419 Terminal Block
332A437 Block Marker Strip
332A484 Block Jumper (3)
332A440 Block Jumper (2)
332A464 Ground Jumper
312P87 Condenser (3)
323P184 Duplex Receptacle (15 Amp.)
323P91 Twistlock Receptacle (4 Wire) 20 Amp (2)
323P185 Twistlock Plug (4 Wire) 20 Amp (2)
323P186 Twistlock Receptacle (4 Wire) 50 Amp
323P187 Twistlock Plug (4 Wire) 50 Amp

⑪

(W.D.) 611C89

301D857 Connection Box - Lower
301C855 Control Box - Upper
301B856 Connection Box Cover - Lower
301C853 Control Box Cover - Upper
301C854 Control Box Panel - Upper
301A878 Control Box Baffle Plate
LOWER CONTROL BOX (CONNECTIONS)
307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Block Jumper (2)
312A22 Condenser(2) Block to Ground
312A17 Condenser - Battery Positive to Ground

UPPER CONTROL BOX

308-26 Start-Stop Switch
332A406 Terminal Block (3 Place)
332A438 Block Marker Strip (3 Place)

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C89 (Cont.)

302A58 Charge Ammeter
 308-2 Manual or Electric Start
 Selector Switch
 332A222 Terminal Block(4 Place)
 307B52 Start or Stop Relay (2)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 304-121 Resistor (Stop Relay to
 Regulator Relay)Fixed
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistors (3)

12

(W.D.) 611C90

301D857 Connection Box - Lower
 301C855 Control Box - Upper
 301B856 Connection Box Cover -
 Lower
 301C853 Control Box Cover - Upper
 301C854 Control Box Panel - Upper
 301A878 Control Box Baffle Plate

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A254 Terminal Block
 332A435 Block Marker Strip
 332A439 Block Jumper (2)
 312A22 Condenser(2) Block to
 Ground
 312A17 Condenser - Battery
 Positive to Ground
 332A464 Ground Jumper

UPPER CONTROL BOX

308-26 Start-Stop Switch
 332A406 Terminal Block(3 Place)
 332A438 Block Marker Strip(3 Place)
 302A58 Charge Ammeter
 308-2 Manual or Electric Start
 Selector Switch
 332A222 Terminal Block(4Place)
 307B52 Start or Stop Relay (2)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 304-121 Resistor (Stop Relay to
 Regulator Relay) Fixed
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

13

(W.D.) 611C91

301D857 Connection Box - Lower
 301C855 Control Box - Upper
 301B856 Connection Box Cover -
 Lower
 301C853 Control Box Cover - Upper
 301C854 Control Box Panel - Upper
 301A878 Control Box Baffle Plate

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A254 Terminal Block
 332A434 Block Marker Strip
 (Cont.)

CODE

(W.D.) 611C91 (Cont.)

332A464 Ground Jumper
 312A22 Condenser (3) Block to
 Ground
 312A17 Condenser - Battery
 Positive to Ground

UPPER CONTROL BOX

308-26 Start-Stop Switch
 332A406 Terminal Block(3 Place)
 332A438 Block Marker Strip(3 Place)
 302A58 Charge Ammeter
 308-2 Manual or Electric Start
 Selector Switch
 332A222 Terminal Block(4 Place)
 307B52 Start or Stop Relay (2)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 304-121 Resistor (Stop Relay to
 Regulator Relay) Fixed
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

14

(W.D.) 611C92

301D857 Connection Box - Lower
 301C855 Control Box - Upper
 301B856 Connection Box Cover -
 Lower
 301C853 Control Box Cover - Upper
 301C854 Control Box Panel - Upper
 301A878 Control Box Baffle Plate

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 312A22 Condenser (3) Block to Ground
 312A17 Condenser - Battery Positive
 to Ground

UPPER CONTROL BOX

332A406 Terminal Block (3 Place)
 332A438 Block Marker Strip (3 Place)
 308-26 Start-Stop Switch
 302A58 Charge Ammeter
 308-2 Manual or Electric Start
 Selector Switch
 332A222 Terminal Block (4 Place)
 307B52 Start or Stop Relay (2)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 304-121 Resistor (Stop Relay to
 Regulator Relay) Fixed
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

15

(W.D.) 611C103

301D857 Connection Box - Lower
 301C855 Control Box - Upper
 301B856 Connection Box Cover -
 Lower

(Cont.)

CONTROL SECTION

3

WIRING DIAGRAMS

CODE

- (W.D.) 611C103 (Cont.)
- 301C853 Control Box Cover - Upper
 - 301C854 Control Box Panel - Upper
 - 301A878 Control Box Baffle Plate
 - 302-41 AC Voltmeter
 - 301B778 Voltmeter Box
 - 301A779 Voltmeter Box Cover
 - 508-8 Voltmeter Box Grommet
- LOWER CONTROL BOX (CONNECTIONS)
- 307B40 Start Solenoid
 - 332A419 Terminal Block
 - 332A437 Block Marker Strip
 - 312A22 Condenser (2) Block to Ground
 - 312A17 Condenser - Battery Positive to Ground
 - 332A440 Terminal Jumper (2)
- UPPER CONTROL BOX
- 332A406 Terminal Block (3 Place)
 - 332A438 Block Marker Strip (3 Place)
 - 308-26 Start-Stop Switch
 - 302A58 Charge Ammeter
 - 308-2 Manual or Electric Start Selector Switch
 - 332A222 Terminal Block (4 Place)
 - 307B52 Start or Stop Relay (2)
 - 306A28 Start-Disconnect Relay
 - 307B180 Reverse Current Relay
 - 304-121 Resistor (Stop Relay to Regulator Relay) Fixed
 - 305A1 Voltage Regulator Relay
 - 304A256 Adjustable Resistor (3)

16

- (W.D.) 611C108
- 301D857 Connection Box - Lower
 - 301C855 Control Box - Upper
 - 301C853 Control Box Cover - Upper
 - 301C854 Control Box Panel - Upper
 - 301B989 Connection Box Cover - Lower
 - 301A878 Control Box Baffle Plate
 - 323-11 Receptacle (2) 220 Volt
 - 323-88 Receptacle (2) 110 Volt
- LOWER CONTROL BOX (CONNECTIONS)
- 307B40 Start Solenoid
 - 332A419 Terminal Block
 - 332A437 Block Marker Strip
 - 332A440 Terminal Jumper (2)
 - 312A22 Condenser (2) Block to Ground
 - 312A17 Condenser - Battery Positive to Ground
- UPPER CONTROL BOX
- 332A406 Terminal Block (3 Place)
 - 332A438 Block Marker Strip (3 Place)
 - 308-26 Start-Stop Switch
 - 302A58 Charge Ammeter
- (Cont.)

R. T. F. - Refer to Factory along with description of part and complete Model and Serial Number of Plant.

CODE

- (W.D.) 611C108 (Cont.)
- 308-2 Manual or Electric Start Selector Switch
 - 332A222 Terminal Block (4 Place)
 - 307B52 Start or Stop Relay (2)
 - 306A28 Start-Disconnect Relay
 - 307B180 Reverse Current Relay
 - 304-121 Fixed Resistor (Stop Relay to Regulator Relay)
 - 305A1 Voltage Regulator Relay
 - 304A256 Adjustable Resistor (3)

17

- (W.D.) 611C109
- 301D990 Connection Box - Lower
 - 301C992 Control Box - Upper
 - 301B856 Connection Box Cover - Lower
 - 301C853 Control Box Cover - Upper
 - 301C991 Control Box Panel - Upper
 - 301A878 Control Box Baffle Plate
 - 338B123 Harness Assembly (Magneto to Stop Relay)
- LOWER CONTROL BOX (CONNECTIONS)
- 307B40 Start Solenoid
 - 332-254 Terminal Block
 - 332A435 Block Marker Strip
 - 332A484 Terminal Jumper (3) to Condensers
 - 332A439 Terminal Jumper (2)
 - 332A464 Terminal Jumper (1)
 - 312A28 Condenser - Battery Positive to Ground
 - 312P87 Feed Thru Condenser (3)
- UPPER CONTROL BOX
- 332-333 Terminal Block (2 Place)
 - 332A483 Block Marker Strip (2 Place)
 - 308-90 Start-Stop Switch
 - 301A974 Switch Mounting Bracket
 - 302A58 Charge Ammeter
 - 308-2 Manual or Electric Start Selector Switch
 - 332A222 Terminal Block (4 Place)
 - 307B180 Reverse Current Relay
 - 307B253 Stop Relay
 - 304-251 Fixed Resistor (Off Stop Relay)
 - 306A28 Start-Disconnect Relay
 - 305A1 Voltage Regulator Relay
 - 304A256 Adjustable Resistors (3)

18

- (W.D.) 611C111
- R. T. F. Connection Box - Lower
 - R. T. F. Control Box - Upper
 - 301B856 Connection Box Cover - Lower
 - 301C853 Control Box Cover - Upper
 - R. T. F. Control Box Panel - Upper
 - 301A878 Control Box Baffle Plate
- (Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C111 (Cont.)

338B123 Harness Assembly (Magneto to Stop Relay)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A434 Block Marker Strip
332A440 Terminal Jumper
312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-26 Start-Stop Switch
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
306A28 Start-Disconnect Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop Relay)

305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

19

(W.D.) 611C112

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B856 Connection Box Cover - Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

338B123 Harness Assembly (Magneto to Stop Relay) NOTE: If Control is mounted on the left side - Use Harness Assembly #338B145

301A878 Control Box Baffle Plate

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A484 Terminal Jumper (3) to Condensers
332A440 Terminal Jumper (2)
332A464 Terminal Jumper
312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter

(Cont.)

CODE

(W.D.) 611C112 (Cont.)

308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block (4 Place)

307B180 Reverse Current Relay

306A28 Start-Disconnect Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

20

(W.D.) 611C119

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B856 Connection Box Cover - Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

338B123 Harness Assembly (Magneto to Stop Relay)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A254 Terminal Block
332A434 Block Marker Strip
332A484 Terminal Jumper (3) to Condensers

332A464 Terminal Jumper

312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block (4 Place)

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop Relay)

306A28 Start-Disconnect Relay

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

21

(W.D.) 611C120

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B856 Connection Box Cover - Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

(Cont.)

CONTROL SECTION

5

WIRING DIAGRAMS

CODE

(W.D.) 611C120 (Cont.)

338B123 Harness Assembly (Magnet to Stop Relay)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
332A484 Terminal Jumper (3) to
Condensers
332A464 Terminal Jumper - Ground
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332-483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch (Note: If
Model uses also W.D. #625-
B103, use Switch #308B68)
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop
Relay)
306A28 Start-Disconnect Relay
305A1 Voltage Regulator Relay
304A256 Adjustable Resistors (3)

22

(W.D.) 611C121

301D990 Connection Box - Lower
301C992 Control Box - Upper
301B856 Connection Box Cover -
Lower
301C853 Control Box Cover - Upper
301C991 Control Box Panel - Upper
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet
to Stop Relay) Note: When
Control is mounted on left
side, use #338B145

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332-254 Terminal Block
332A435 Block Marker Strip
332A484 Terminal Jumper (3) to
Condensers
332A439 Terminal Jumper (2)
332A464 Terminal Jumper
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
(Cont.)

CODE

(W.D.) 611C121 (Cont.)

301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307-253 Stop Relay
306A28 Start-Disconnect Relay
304-251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

23

(W.D.) 611C123

301D857 Connection Box - Lower
301C855 Control Box - Upper
301B856 Connection Box Cover -
Lower
301C853 Control Box Cover - Upper
301C854 Control Box Panel - Upper
301A878 Control Box Baffle Plate
302-41 AC Voltmeter
301B778 Voltmeter Box
301A779 Voltmeter Box Cover
508-8 Voltmeter Box Rubber
Grommet

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A254 Terminal Block
332A435 Block Marker Strip
312A17 Condenser - Battery Positive
to Ground
312A22 Condenser (2) Terminal
Block to Ground

UPPER CONTROL BOX

332A406 Terminal Block (3 Place)
332A438 Block Marker Strip (3 Place)
308-26 Start-Stop Switch
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
307B52 Start or Stop Relay (2)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
304-121 Fixed Resistor (Between
Stop Relay and Regulator
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

24

(W.D.) 611B127

330-11 Outlet Box
301A1055 Outlet Box Panel
303-84 Field Rheostat
332A406 Terminal Block
332A426 Block Marker Strip
302-60 Charge Ammeter
(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611B127 (Cont.)

- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 301B1093 Receptacle Box - Mounted on Generator
- 301B1100 Receptacle Box Cover

25(W.D.) 611C135

- 301D857 Connection Box - Lower
- 301C855 Control Box - Upper
- 301C853 Control Box Cover - Upper
- 301B989 Connection Box Cover - Lower
- 301C854 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 323-88 Receptacle (2) 110 Volt
- 323-11 Receptacle (2) 220 Volt

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A439 Terminal Jumper (2)
- 312A22 Condenser (2) Block to Ground
- 312A17 Condenser - Battery Positive to Ground

UPPER CONTROL BOX

- 332A406 Terminal Block (3 Place)
- 332A438 Block Marker Strip (3 Place)
- 308-26 Start-Stop Switch
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 307B52 Start or Stop Relay (2)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 304-121 Fixed Resistor (Between Stop Relay and Regulator Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

26(W.D.) 611C138

- 301D857 Connection Box - Lower
- 301C855 Control Box - Upper
- 301C853 Control Box Cover - Upper
- 301B1083 Connection Box Cover - Lower
- 301C854 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 323-11 Receptacle - 220 Volt
- 323-182 Receptacle Closure Plug
- 323-12 Receptacle Load Plug
- 323-183 Receptacle Load Plug Rubber Cover

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
 - 332A419 Terminal Block
- (Cont.)

CODE

(W.D.) 611C138 (Cont.)

- 332A436 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground
- 312A22 Condenser (3) Block to Ground

UPPER CONTROL BOX

- 332A406 Terminal Block (3 Place)
- 332A438 Block Marker Strip (3 Place)
- 308-26 Start-Stop Switch
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 307B52 Start or Stop Relay (2)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 304-121 Fixed Resistor (Between Stop Relay & Regulator Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

27(W.D.) 611C142

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B856 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-neto to Stop Relay)
- 301B778 Voltmeter Box
- 302-40 AC Voltmeter
- 301A779 Voltmeter Box Cover
- 508-8 Voltmeter Box Rubber Grommet

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condensers
- 332A439 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

UPPER CONTROL PANEL

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay

(Cont.)

CONTROL SECTION

7

WIRING DIAGRAMS

CODE

(W.D.) 611C142 (Cont.)

307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

28

(W.D.) 611C144

301D990 Connection Box - Lower
301C992 Control Box - Upper
301B856 Connection Box Cover - Lower
301C853 Control Box Cover - Upper
301C991 Control Box Panel - Upper
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay)
302-41 AC Voltmeter
301B778 Voltmeter Box
301A779 Voltmeter Box Cover
508-8 Voltmeter Box Rubber Grommet

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A484 Terminal Jumper (3) to Condenser
332A440 Terminal Jumper
332A464 Terminal Jumper
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

29

(W.D.) 611C145

301D990 Connection Box - Lower
301C992 Control Box - Upper
301B856 Connection Box Cover - Lower
301C853 Control Box Cover - Upper
301C991 Control Box Panel - Upper
(Cont.)

CODE

(W.D.) 611C145 (Cont.)

301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay)
302-41 AC Voltmeter
301B778 Voltmeter Box
301A779 Voltmeter Box Cover
508-8 Voltmeter Box Grommet

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332-254 Terminal Block
332A435 Block Marker Strip
332A484 Terminal Jumper (3) to Condenser
332A439 Terminal Jumper (2)
332A464 Terminal Jumper
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

30

(W.D.) 611C146

301D990 Connection Box - Lower
301C992 Control Box - Upper
301B856 Connection Box Cover - Lower
301C853 Control Box Cover - Upper
301C991 Control Box Panel - Upper
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay)
302-41 AC Voltmeter
301B778 Voltmeter Box
301A779 Voltmeter Box Cover
508-8 Voltmeter Box Grommet

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A254 Terminal Block
332A434 Block Marker Strip
332A484 Terminal Jumper (3) to Condenser
332A464 Terminal Jumper
(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C146 (Cont.)

312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)
UPPER CONTROL PANEL
 332-333 Terminal Block
 332A483 Block Marker Strip
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307-253 Stop Relay
 304-251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

31

(W.D.) 611C148

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B989 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B123 Harness Assembly-(Magnet to Stop Relay)
 323-88 Receptacles (2) 110 Volt
 323-11 Receptacle (2) 220 Volt
LOWER CONTROL BOX (CONNECTIONS)
 307B40 Start Solenoid
 332-254 Terminal Block
 332A435 Block Marker Strip
 332A484 Terminal Jumpers (3) to Condensers
 332A439 Terminal Jumper (2)
 332A464 Terminal Jumper
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)
UPPER CONTROL BOX
 332-333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307-253 Stop Relay
 304-251 Fixed Resistor(Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

CODE

32

(W.D.) 611C149

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B1083 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B123 Harness Assembly (Magnet to Stop Relay)
 323-11 Receptacle
LOWER CONTROL BOX (CONNECTIONS)
 307B40 Start Solenoid
 332-419 Terminal Block
 332A437 Block Marker Strip
 332A484 Terminal Jumper (3) to Condenser
 332A440 Terminal Jumper (2)
 332A464 Terminal Jumper
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)
UPPER CONTROL BOX
 332-333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307-253 Stop Relay
 304-251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

33

(W.D.) 611C151

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B856 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B123 Harness Assembly (Magnet to Stop Relay)
 302-41 AC Voltmeter
 301B778 Voltmeter Box
 301A779 Voltmeter Box Cover
 508-8 Voltmeter Box Rubber Grommet
LOWER CONTROL BOX (CONNECTIONS)
 307B40 Start Solenoid
 332-419 Terminal Block
 332A436 Block Marker Strip
 (Cont.)

CONTROL SECTION

9

WIRING DIAGRAMS

CODE

(W.D.) 611C151 (Cont.)

- 332A484 Terminal Jumper (3) to
Condenser
- 332A464 Ground Jumper
- 312A17 Condenser - Battery Positive
to Ground
- 312P87 Feed Thru Condenser (3)
- UPPER CONTROL BOX
- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

34

(W.D.) 611C153

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B989 Connection Box Cover -
Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-
neto to Stop Relay)
- 323-88 Receptacle - 110 Volt (2)
- 323-11 Receptacle - 220 Volt (2)
- LOWER CONTROL BOX (CONNECTIONS)
- 307B40 Start Solenoid
- 332-419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to
Condenser
- 332A440 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive
to Ground
- 312P87 Feed Thru Condenser (3)
- UPPER CONTROL BOX
- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)
- (Cont.)

CODE

(W.D.) 611C153 (Cont.)

- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

35

(W.D.) 611C155

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B1147 Connection Box Cover -
Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-
neto to Stop Relay)
- 323-11 Receptacle (3)
- 323-12 Receptacle Load Plug (3)
- 323-186 Receptacle
- 323-187 Receptacle Load Plug
- LOWER CONTROL BOX (CONNECTIONS)
- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 332A484 Terminal Jumper (3)
- 332A464 Terminal Ground Jumper
- 312A17 Condenser - Battery Positive
to Ground
- 312P87 Feed Thru Condenser (3)
- UPPER CONTROL BOX
- 332-333 Terminal Block (2 Place)
- 332-483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

36

(W.D.) 611C158

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B1147 Connection Box Cover -
Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-
neto to Stop Relay)
- 323-11 Receptacle (3)

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C158 (Cont.)

323-12 Receptacle Load Plug (3)

323-186 Receptacle

323-187 Receptacle Load Plug

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

332A419 Terminal Block

332A436 Block Marker Strip

332A484 Terminal Jumper (3) to
Condensers312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start
Selector Switch

332A222 Terminal Block (4 Place)

306A28 Start-Disconnect Relay

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop
Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

37

(W.D.) 611C160

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B1161 Connection Box Cover -
Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

338B123 Harness Assembly (Mag-
neto to Stop Relay)

323-91 Receptacle (2) 4 Wire

323P185 Receptacle Load Plug (2)
4 Wire

323P184 Duplex Receptacle

323-186 Receptacle - 3 Wire

323-187 Receptacle Load Plug -
3 Wire

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

332A419 Terminal Block

332A437 Block Marker Strip

332A484 Terminal Jumper (3) to
Condenser

332A464 Terminal Jumper

312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

(Cont.)

CODE

(W.D.) 611C160 (Cont.)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start
Selector Switch

332A222 Terminal Block (4 Place)

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop
Relay)

306A28 Start-Disconnect Relay

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

38

(W.D.) 611C161

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B1170 Connection Box Cover -
Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

338B123 Harness Assembly (Mag-
neto to Stop Relay)

323P184 Duplex Receptacle (2)

323-91 Receptacle (2) 3 Wire

323P185 Receptacle Load Plug (2)
3 Wire

LOWER CONTROL BOX (CONNECTIONS)

332-254 Terminal Block

332A435 Block Marker Strip

332A484 Terminal Jumper (3) to
Condenser

332A439 Terminal Jumper (2)

312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start
Selector Switch

332A222 Terminal Block (4 Place)

306A28 Start-Disconnect Relay

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop
Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

CONTROL SECTION

11

WIRING DIAGRAMS

CODE

39

(W.D.) 611C165

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301C1223 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-62 Receptacle (4)
- 308-13 Toggle Switch - Receptacle On-Off (4)
- 308-14 Toggle Switch Mounting Strap (2)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condensers
- 332A439 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Terminal Block (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

40

(W.D.) 611C167

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B856 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323P193 Receptacle - 60 Amp, 3 Wire, 4 Pole
- 323P195 Receptacle - 15 Amp, 3 Wire Grounding (Use W/Weatherproof Cover)

(Cont.)

CODE

(W.D.) 611C167 (Cont.)

- 323P194 Receptacle Cover and Plate - W/Gasket and Chain (Weatherproof) 2
- 323P196 Receptacle Base - 2 Wire (Use W/Weatherproof Cover)
- 323P197 Receptacle Cord Connector (Use W/Receptacle Base)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condenser
- 332A439 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

41

(W.D.) 611C174

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B1238 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-11 Receptacle (3) 3 Pole
- 323P204 Receptacle - 4 Pole (Use W/Receptacle Cover)
- 323P205 Receptacle Cover

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condensers
- 332A440 Terminal Jumper (2)
- 332A464 Terminal Jumper

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C174 (Cont.)

312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condensers (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block

306A28 Start-Disconnect Relay

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

42

(W.D.) 611C180

R. T. F. Connection Box - Lower

301C992 Control Box - Upper

301B856 Connection Box Cover - Lower

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

338B123 Harness Assembly (Magnet to Stop Relay)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

332A419 Terminal Block

332A436 Block Marker Strip

332A484 Terminal Jumper (4) to Condenser

312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (4)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332-483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block (4 Place)

306A28 Start-Disconnect Relay

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistors (3)

CODE

43

(W.D.) 611C184

301D990 Connection Box - Lower

301C1296 Control Box - Upper

301B856 Connection Box Cover - Lower

301C853 Control Box Cover - Upper

301D991 Control Box Panel - Upper

301B878 Control Box Baffle Plate

338B123 Harness Assembly (Magnet to Stop Relay) Note: If Control is mounted on left side, use Harness Assembly #338B145

300C218 Choke Relay and Box - Complete

301B431 Choke Relay Box - Included in #300C218

306A140 Choke Relay - Included in #300C218

307B4 Choke Disconnect Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

332A419 Terminal Block

332A437 Block Marker Strip

332A484 Terminal Jumper (3) to Condenser

332A440 Terminal Jumper (2)

332A464 Terminal Jumper

312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308-90 Start-Stop Switch

301A974 Switch Mounting Bracket

302A58 Charge Ammeter

308-2 Manual or Electric Start Selector Switch

332A222 Terminal Block (4 Place)

306A28 Start-Disconnect Relay

307B180 Reverse Current Relay

307-253 Stop Relay

304-251 Fixed Resistor (Off Stop Relay)

305A1 Voltage Regulator Relay

304A256 Adjustable Resistor (3)

44

(W.D.) 611D187

301D990 Connection Box - Lower

301C992 Control Box - Upper

301B1305 Connection Box Cover

301C853 Control Box Cover - Upper

301C991 Control Box Panel - Upper

301A878 Control Box Baffle Plate

338B123 Harness Assembly (Magnet to Stop Relay)

(Cont.)

R. T. F. - Refer to Factory along with a description of the part and complete Model and Serial Number of the unit.

CONTROL SECTION

13

WIRING DIAGRAMS

CODE

(W.D.) 611D187 (Cont.)

- 323P184 Duplex Receptacle (2)
- 323-140 Receptacle
- 301C1084 Switchboard Box
- 301B1304 Switchboard Box Panel
- 301A1089 Switchboard Box Mounting Bracket
- 302-7 AC Ammeter (2) In Switchboard Box
- 302-41 AC Voltmeter (In Switchboard Box)
- 320P2 Circuit Breaker (2) 15 Amp (In Switchboard Box)
- 320P18 Circuit Breaker (20 Amp) In Switchboard Box
- 320P52 Circuit Breaker (2) Main Output (50 Amp) In Switchboard Box

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (To Feed Thru Condenser)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground

- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

45

(W.D.) 611C191

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B1321 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)

- 323-140 Receptacle (2)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid

(Cont.)

CODE

(W.D.) 611C191 (Cont.)

- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condenser
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)
- UPPER CONTROL BOX
- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

46

(W.D.) 611C194

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B856 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on the left side, use #338B145 Harness Assy.
- 323P193 Receptacle - 60 Amp, 3 Wire, 4 Pole
- 323P195 Receptacle - 15 Amp, 3 Wire, Grounding (Use W/Weatherproof Cover)
- 323P194 Receptacle Cover & Plate W/Gasket & Chain (Weatherproof) 2
- 323P196 Receptacle Base - 2 Wire (Use W/Weatherproof Cover)
- 323P197 Receptacle Cord Connector (Use W/Receptacle Base)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condenser

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C194 (Cont.)

- 332A440 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

47

(W.D.) 611C196

- 301D990 Connection Box - Lower
- 301C1296 Control Box - Upper
- 301B856 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301D991 Control Box Panel - Upper
- 301B878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: If Control is mounted on Left Side, Use Harness Assembly #338B145

- 307B4 Choke Disconnect Relay

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condensers
- 332A440 Terminal Jumper (2)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground

- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay

(Cont.)

CODE

(W.D.) 611C196 (Cont.)

- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor

48

(W.D.) 611C198

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B1383 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-24 Duplex Receptacle (2)
- 323-11 Receptacle (2)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A484 Terminal Jumper (3) to Condenser
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

49

(W.D.) 611C201

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B856 Connection Box Cover - Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate

(Cont.)

CONTROL SECTION

15

WIRING DIAGRAMS

CODE

(W.D.) 611C201 (Cont.)

338B123 Harness Assembly (Magnet to Stop Relay) Note:
When Control is mounted
on Left Side, Use Harness
Assembly #338B145

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332-254 Terminal Block
332A435 Block Marker Strip
332A484 Terminal Jumper (3) to
Condenser
332A439 Terminal Jumper (2)
332A464 Terminal Jumper
312A80 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
308-2 Manual or Electric Start
Selector Switch
302A58 Charge Ammeter
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

50

(W.D.) 611C204

301E1384 Control Box
301B856 Control Box Lower Cover
(Connections)
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay) Note:
When Control is mounted
on the Left Side, Use
Harness Assembly
#338B145

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332-333 Terminal Block (2 Place)
(Cont.)

CODE

(W.D.) 611C204 (Cont.)

332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

51

(W.D.) 611C208

301E1384 Control Box
301B856 Control Box Lower
Cover (Connections)
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay) Note:
When Control is mounted
on the Left Side, Use
Harness Assembly
#338B145

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307-253 Stop Relay
304-251 Fixed Resistor
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

52

(W.D.) 611C209

301E1384 Control Box
301B1161 Control Box Lower Cover
(Connections)
301C853 Control Box Upper Cover
(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C209 (Cont.)

- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-91 Receptacle (2) 4 Wire
- 323P185 Receptacle Load Plug (2) 4 Wire
- 323P184 Duplex Receptacle
- 323-186 Receptacle - 3 Wire
- 323-187 Receptacle Load Plug - 3 Wire

CONTROL BOX (CONNECTIONS PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor

CODE

(W.D.) 611C210 (Cont.)

CONTROL BOX (UPPER PORTION)

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

(W.D.) 611C212

- 301E1384 Control Box
- 301B1147 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-11 Receptacle (3)
- 323-12 Receptacle Load Plug (3)
- 323-186 Receptacle - 3 Phase
- 323-187 Receptacle Load Plug - 3 Phase

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

- 332-333 Terminal Block
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302-58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

53

(W.D.) 611C210

- 301E1384 Control Box
- 301B1147 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay)
- 323-11 Receptacle (3)
- 323-12 Receptacle Load Plug (3)
- 323-186 Receptacle - 3 Phase
- 323-187 Receptacle Load Plug

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
 - 332A419 Terminal Block
 - 332A436 Block Marker Strip
 - 312A17 Condenser - Battery Positive to Ground
 - 312P87 Feed Thru Condenser (3)
- (Cont.)

54

CONTROL SECTION

17

WIRING DIAGRAMS

CODE

55

(W.D.) 611C214

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B856 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

332-333 Terminal Block
 332A483 Block Marker Strip
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307-253 Stop Relay
 304-251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor

56

(W.D.) 611C217

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B856 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B123 Harness Assembly (Magnet to Stop Relay)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 332A484 Terminal Jumper (3) to Condenser
 332A464 Ground Jumper
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

(Cont.)

CODE

(W.D.) 611C217 (Cont.)

UPPER CONTROL BOX

332-333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 304-251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor
 307-253 Stop Relay

57

(W.D.) 611C219

301D990 Connection Box - Lower
 301C992 Control Box - Upper
 301B856 Connection Box Cover - Lower
 301C853 Control Box Cover - Upper
 301C991 Control Box Panel - Upper
 301A878 Control Box Baffle Plate
 338B156 Harness Assembly (Magnet to Stop Relay)
 301C1084 Instrument Box (Wall Mounted)
 301C1414 Instrument Box Control Panel
 301A1088 Instrument Box Mounting Bracket
 307B54 High Temperature Signal Light & Stopping Relay (In Instrument Box)
 332-333 Terminal Block (2 Place) In Instrument Box (To Switches)
 332A563 Block Marker Strip (2 Place) In Instrument Box (To Switches)
 307B4 High Temperature Alarm Relay (In Instrument Box)
 332A391 Terminal Block (4 Place) In Instrument Box
 332A562 Block Marker Strip (4 Place) In Instrument Box
 307B4 Low Oil Pressure Alarm Relay (In Instrument Box)
 307B242 Low Oil Pressure Signal Light and Stopping Relay (In Instrument Box)
 304-247 Adjustable Resistor (2) In Instrument Box
 307A325 Time Delay Relay (In Instrument Box)

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611D219 (Cont.)

- 332A333 Terminal Block (2 Place)
In Instrument Box (For
Lights)
- 332A564 Block Marker Strip (2 Place)
In Instrument Box (For
Lights)
- 308A29 Low Oil Pressure Stop
Relay Re-Set Switch (In
Instrument Box)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A484 Terminal Jumpers (3) to
Condensers
- 332A439 Terminal Jumpers (3)
- 332A464 Terminal Jumper
- 312A17 Condenser - Battery Positive
to Ground

- 312P87 Feed Thru Condensers (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

58

(W.D.) 611C221

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301B1428 Connection Box Cover -
Lower
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-
neto to Stop Relay)
- 323-23 Receptacle (4)
- 323-11 Receptacle (2)

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332-254 Terminal Block
- 332A435 Block Marker Strip
- 332A484 Terminal Jumper (3) to
Condensers
- 332A439 Terminal Jumper (2)
- 332A464 Terminal Jumper

(Cont.)

CODE

(W.D.) 611C221 (Cont.)

- 312A17 Condenser - Battery Positive
to Ground

- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

59

(W.D.) 611C223

- 301D990 Connection Box - Lower
- 301C992 Control Box - Upper
- 301B856 Connection Box Cover -
Lower
- 301C853 Control Box Cover - Upper
- 301C991 Control Box Panel - Upper
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Mag-
neto to Stop Relay) Note:
When Control is mounted
on Left Side, Use Harness
Assembly #338B145

LOWER CONTROL BOX (CONNECTIONS)

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A440 Terminal Jumper (2)
- 312A28 Condenser - Battery Positive
to Ground

- 312P87 Feed Thru Condenser (3)

UPPER CONTROL BOX

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start
Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop
Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

CONTROL SECTION

WIRING DIAGRAMS

19

CODE

60

(W.D.) 611C242

- 301E1384 Control Box
- 301B1170 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on the Left Side, Use Harness Assembly #338B145

323P184 Duplex Receptacle (2)

323-91 Receptacle (2)

CONTROL BOX (CONNECTION PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A440 Terminal Jumper (2)
- 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

61

(W.D.) 611C246

- 301B1507 Control Box
- 301B856 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145

307B4 Fuel Pump Relay

CONTROL BOX (CONNECTIONS PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip

(Cont.)

CODE

(W.D.) 611C246 (Cont.)

- 332A440 Terminal Jumper (2)
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)
- CONTROL BOX (UPPER PORTION)
- 332-333 Terminal Block (2 Place)
- 332A483 Block Marker Strip (2 Place)
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308B68 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307-253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

62

(W.D.) 611C253

- 301E1384 Control Box
- 301B856 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145
- 323P193 Receptacle - 60 Amp, 4 Pole
- 323P195 Receptacle - 15 Amp, 3 Wire Grounding(Use W/Weatherproof Cover)
- 323P194 Receptacle Cover & Plate - W/Gasket and Chain (Weatherproof) 2
- 323P196 Receptacle Base - 2 Wire (Use W/Weatherproof Cover)
- 323P197 Receptacle Cord Connector (Use W/Receptacle Base)

CONTROL BOX (CONNECTION PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)
- CONTROL BOX (UPPER PORTION)
- 332-333 Terminal Block (2 Place)
- 332A483 Terminal Block Strip (2 Place)

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C253 (Cont.)

308-90	Start-Stop Switch
301A974	Switch Mounting Bracket
302A58	Charge Ammeter
308-2	Manual or Electric Start Selector Switch
332A222	Terminal Block (4 Place)
306A28	Start-Disconnect Relay
307B180	Reverse Current Relay
307-253	Stop Relay
304-251	Fixed Resistor (Off Stop Relay)
305A1	Voltage Regulator Relay
304A256	Adjustable Resistor (3)

63

(W.D.) 611C263

301E1384	Control Box
301B1547	Control Box Lower Cover (Connections)
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B123	Harness Assembly (Magnet to Stop Relay)
323-11	Receptacle (3)
323-182	Receptacle Closure Plugs (3)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40	Start Solenoid
332A419	Terminal Block
332A436	Block Marker Strip
312A17	Condenser - Battery Positive to Ground
312P87	Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332-333	Terminal Block
332A483	Block Marker Strip
308-90	Start-Stop Switch
301A974	Switch Mounting Bracket
302A58	Charge Ammeter
308-2	Manual or Electric Start Selector Switch
332A222	Terminal Block (4 Place)
306A28	Start-Disconnect Relay
307B180	Reverse Current Relay
307-253	Stop Relay
304-251	Fixed Resistor
305A1	Voltage Regulator Relay
304A256	Adjustable Resistor (3)

64

(W.D.) 615B87 SWITCHBOARD

301C1084	Switchboard Box
301B1086	Switchboard Box Panel
301A1088	Box Mounting Bracket (5000 Watt Plants)
301A1089	Box Mounting Bracket (10000 Watt Plant)

(Cont.)

CODE

(W.D.) 615B87 SWITCHBOARD (Cont.)

301A1090	Box Mounting Bracket (7500 Watt Plants)
302-5	AC Ammeter (0-30) 2 (5000 Watt Plants)
302-7	AC Ammeter (0-50) 2 (7500 Watt and 10000 Watt Plants)
320P19	Circuit Breaker (25 Amp) 5000 Watt Plants (2)
320P52	Circuit Breaker (50 Amp) 7500 Watt and 10000 Watt Plants (2)
302-41	AC Voltmeter

65

(W.D.) 615B89 SWITCHBOARD

301C1084	Switchboard Box
301B1085	Switchboard Box Panel
301A1088	Box Mounting Bracket (Remote Start Plants)
301A1341	Box Mounting Bracket (Manual Start Plants)
302-7	AC Ammeter
302-40	AC Voltmeter
320P52	Circuit Breaker

66

(W.D.) 615B91 SWITCHBOARD

301C1084	Switchboard Box
301B1085	Switchboard Box Panel
301A1088	Box Mounting Bracket (5000 Watt Plants)
301A1089	Box Mounting Bracket (10000 Watt Plants)
302-5	AC Ammeter (0-30) 5000 Watt Plants
302-7	AC Ammeter (0-50) 10000 Watt Plants
320P19	Circuit Breaker (25 Amp) 5000 Watt Plants
320P52	Circuit Breaker (50 Amp) 10000 Watt Plants
302-41	AC Voltmeter

67

(W.D.) 615B92 SWITCHBOARD

301C1084	Switchboard Box
301B1087	Switchboard Box Panel
301A1088	Box Mounting Bracket (5000 Watt Remote Start Plants)
301A1090	Box Mounting Bracket (7500 Watt, 8000 Watt or 10000 Watt, Remote Start Plants)
301A1341	Box Mounting Bracket (10000 Watt, Manual Start Plants)
302-335	AC Ammeter (3) 0-20 (5000 Watt, Remote Start Plants)

(Cont.)

CONTROL SECTION

21

WIRING DIAGRAMS

CODE

- (W.D.) 615B92 SWITCHBOARD (Cont.)
- 302-7 AC Ammeter (3) 0-50
(7500, 8000, 10000 Watt
Remote Start Plants)
 - 320P18 Circuit Breaker (20 Amp)
5000 Watt, Remote Start
Plants (3)
 - 320P52 CIRCUIT BREAKER (50 Amp)
10000 Watt, Remote Start
Plants (3)
 - 320B58 Circuit Breaker (30 Amp)
7500 Watt, or 8000 Watt,
Remote Start Plants
 - 302-41 AC Voltmeter
 - 308-12 Voltmeter Selector Switch

68

- (W.D.) 615B95 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1117 Switchboard Box Panel
 - 301A1088 Box Mounting Bracket
(5000 Watt Plants)
 - 301A1090 Box Mounting Bracket
(7500 Watt Plants)
 - 301A1089 Box Mounting Bracket
(10000 Watt Plants)
 - 302-5 AC Ammeter (2) 0-30
(5000 Watt Plants)
 - 302-7 AC Ammeter (2) 0-50
(10000 Watt Plants)
 - 302-6 AC Ammeter (2) 0-35
(7500 Watt Plants)
 - 320P19 Circuit Breaker (2) 25
Amp (5000 Watt Plants)
 - 320P52 Circuit Breaker (2) 50
Amp (10000 Watt Plants)
 - 320P20 Circuit Breaker (2) 35
Amp (7500 Watt Plants)
 - 302-41 AC Voltmeter
 - 302-68 Running Time Meter

69

- (W.D.) 615B103 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1153 Switchboard Box Panel
 - 301A1088 Box Mounting Bracket
(5000 Watt Plants)
 - 301A1090 Box Mounting Bracket
(10000 Watt Plants)
 - 302-335 AC Ammeter (3) 0-20
(5000 Watt Plants)
 - 302-7 AC Ammeter (3) 0-50
(10000 Watt Plants)
 - 320P18 Circuit Breaker (3) 20
Amp (5000 Watt Plants)
 - 320P52 Circuit Breaker (3) 50
Amp (10000 Watt Plants)
 - 302-41 AC Voltmeter
 - 302-68 Running Time Meter
 - 304-99 Running Time Meter
Resistor
 - 308-12 Voltmeter Selector Switch

CODE

70

- (W.D.) 615B111 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1087 Switchboard Box Panel
 - 301A1090 Box Mounting Bracket
 - 302-3 AC Ammeter (3) 0-15
 - 302-42 AC Voltmeter
 - 302-157 Meter Multiplier (Resistor)
Between Voltmeter and
Switch
 - 308-12 Voltmeter Selector Switch

71

- (W.D.) 615B112 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1222 Switchboard Box Panel
 - 301A1088 Box Mounting Bracket
 - 302-7 AC Ammeter (0-50)
 - 320P52 Circuit Breaker (50 Amp)
 - 302-40 AC Voltmeter
 - 323-48 Receptacle

72

- (W.D.) 615B127 SWITCHBOARD
- 301C1442 Switchboard Box
 - 301B1440 Switchboard Box Panel
 - 301A1089 Box Mounting Bracket
 - 301B1441 Running Time Meter Box
 - 301A779 Running Time Meter
Box Cover
 - 302-68 Running Time Meter
 - 302-7 AC Ammeter (2) 0-50
 - 322-5 Panel Light Assembly
 - 322-4 Panel Light Bulb
 - 308-2 Panel Light Switch
 - 302-41 AC Voltmeter
 - 302-213 Frequency Meter
 - 320P52 Circuit Breaker (2) 5 Amp

73

- (W.D.) 615B137 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1487 Switchboard Box Panel
 - 301A1089 Box Mounting Bracket
 - 303-76 Knob
 - 302-335 AC Ammeter (3) 0-20
 - 302-42 AC Voltmeter
 - 308-12 Voltmeter Selector Switch
 - 320-145 Circuit Breaker (3) 12 Amp

74

- (W.D.) 615B139 SWITCHBOARD
- 301C1084 Switchboard Box
 - 301B1086 Switchboard Box Panel
 - 301A1090 Box Mounting Bracket
 - 301A1510 Circuit Breaker Opening
Cover
 - 302-7 AC Ammeter (3) 0-50

75

- (W.D.) 625A23 OIL BASE HEATER
CIRCUIT
- Diagram of Electrical Circuit only.
Parts listed in Engine Section.

CONTROL SECTION

WIRING DIAGRAMS

CODE

76

(W.D.) 625B103 FUEL PUMP RELAY MOUNTING

Diagram for Mounting and Connecting Gas Fuel Pump Relay.

307B4 Fuel Pump Relay
308B68 Manual or Electric Start Selector Switch

77

(W.D.) 611C267

301E1384 Control Box
301B856 Control Box Lower Cover (Connections)
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Block Jumper (2)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

78

(W.D.) 611C268

301E1384 Control Box
301B856 Control Box Lower Cover (Connections)
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use #338B145 Harness Assembly
323P193 Receptacle - 60 Amp, 3 Wire, 4 Pole
323P195 Receptacle - 15 Amp, 3 Wire, Grounding (Use W/Weatherproof Cover)
323P194 Receptacle Cover and Plate - W/Gasket & Chain (Weatherproof) 2
323P196 Receptacle Base - 2 Wire (Use W/Weatherproof Cover)
323P197 Receptacle Cord Connector (Use W/Receptacle Base)

(Cont.)

CODE

(W.D.) 611C268 (Cont.)

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Block Jumper (2)
312P87 Feed Thru Condenser (3)
312A17 Battery Terminal Condenser

CONTROL BOX (UPPER PORTION)

332-333 Terminal Block (2 Place)
332A483 Block Marker Strip
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)
307-253 Stop Relay
304-251 Fixed Resistor (Off Stop Relay)
332A222 Terminal Block (4 Place)
308-2 Manual or Electric Start Selector Switch

79

(W.D.) 611C274

301E1384 Control Box
301B856 Control Box Lower Cover (Connections)
301C853 Control Box Upper Cover
301C1664 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145

Field Rheostat by customer (if used)

CONTROL BOX (CONNECTION PORTION) LOWER

307B61 Start Solenoid
332A419 Terminal Block
332A436 Terminal Block Marker Strip
312A17 Battery Terminal Condenser
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (Marked 5 and A1)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
306A28 Start-Disconnect Relay
307B278 Reverse Current Relay

(Cont.)

CONTROL SECTION

23

WIRING DIAGRAMS

CODE

(W.D.) 611C274 (Cont.)

- 308-2 Manual or Electric Start Selector Switch
- 308-7 High-Low Charge Rate Switch
- 304-5 Resistor (Fixed - 150 Ohm) 9/16 x 2"
- 332A222 Terminal Block (4 Place)
- 307-253 Stop Relay
- 304A247 Adjustable Resistor (5/16 x 1 3/4")
- 304-53 Adjustable Resistor (2 Ohm) 3/4 x 6"
- 304A268 Adjustable Resistor (5 Ohm) 3/4 x 4"

80

(W.D.) 611C275

- 301E1384 Control Box
- 301B1665 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145
- 323P184 Duplex Receptacle (4)
- 307B312 Gas Solenoid Valve - 12 Volt (if used)

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A440 Terminal Block Jumper
- 312A17 Battery Terminal Condenser
- 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

- 332A333 Terminal Block (2 Place)
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 307-253 Stop Relay
- 305A1 Voltage Regulator Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 304A256 Adjustable Resistor (3)

CODE

81

(W.D.) 611C279

- 301E1384 Control Box
- 301B856 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B205 Harness Assembly (Magnet to Stop Relay)

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground
- 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

- 332-333 Terminal Block - 2 Place
- 332A483 Block Marker Strip-2 Place
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 307B4 Choke Disconnect Relay
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block - 4 Place
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307B253 Stop Relay
- 304-251 Fixed Resistor (Off Stop Relay)
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)

82

(W.D.) 611C280

- 301E1384 Control Box
- 301B1687 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B123 Harness Assembly (Magnet to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B145

- 323P91 Receptacle
- 323P185 Twistlock Plug
- 323-283 Receptacle Cover

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 312P87 Feed Thru Condenser (3)
- 312A17 Condenser - Battery Positive to Ground

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C280 (Cont.)

332A440 Terminal Jumper (2)
CONTROL BOX (UPPER PORTION)
 332-333 Terminal Block
 332A483 Block Marker Strip
 308-90 Start-Stop Switch
 301A974 Start-Stop Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307-253 Stop Relay
 304-251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

83

(W.D.) 611C283

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnet to Stop Relay) Note:
 When Control is mounted on Left Side, Use Harness Assembly #338B206

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start-Solenoid
 332A419 Terminal Block (4 Place)
 332A437 Block Marker Strip
 332A440 Terminal Block Jumper (2)
 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condensers (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block - 2 Place
 332A483 Block Marker Strip - 2 Place
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 307B4 Choke Disconnect Relay
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block - 4 Place
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

CODE

84

(W.D.) 611C285

301E1702 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B206 Harness Assembly (Magnet to Stop Relay)

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Block Jumper (2)
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block - 2 Place
 332A483 Block Marker Strip - 2 Place
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 307B4 Choke Disconnect Relay
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block - 4 Place
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A256 Adjustable Resistor (3)

85

(W.D.) 611C286

301E1384 Control Box
 301B1147 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnet to Stop Relay)

323-11 Receptacle (3)
 323-186 Receptacle (1)

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 (Cont.)

CONTROL SECTION

25

WIRING DIAGRAMS

CODE

(W.D.) 611C286 (Cont.)

307B4 Choke Disconnect Relay
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

86

(W.D.) 611C288

301B1507 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B206 Harness Assembly (Mag-
neto to Stop Relay)

CONTROL BOX (CONNECTION PORTION)

LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumpers (2)
312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
307B4 Choke Disconnect Relay
302A58 Charge Ammeter
308B68 Toggle Switch - Off Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start-Disconnect Relay
304-251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor
307B4 Fuel Pump Relay

87

(W.D.) 611C289

301E1384 Control Box
301B1161 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate

(Cont.)

CODE

(W.D.) 611C289 (Cont.)

338B205 Harness Assembly (Mag-
neto to Stop Relay) Note:
When Control is mounted
on Left Side of a (10000
Watt) Unit, Use Harness
Assembly #338B206
323-91 Receptacle (2) 4 Wire
323-186 Receptacle (1) 3 Wire
323P184 Duplex Receptacle (1)

CONTROL BOX (CONNECTION PORTION)

LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
307B4 Choke Disconnect Relay
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start-Disconnect Relay
304-251 Fixed Resistor (Off Stop
Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

88

(W.D.) 611C298

301E1384 Control Box
301B856 Control Box Lower Cover
(Connections)
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate

CONTROL BOX (CONNECTION PORTION)

LOWER

307B40 Start Solenoid
332A419 Terminal Block (4 Place)
332A437 Block Marker Strip
332A440 Block Jumper (2)
332-333 Terminal Block (2 Place)
332A483 Block Marker Strip
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

CONTROL SECTION

WIRING DIAGRAMS

CODE

89

(W.D.) 611C299

- 301E1384 Control Box
- 301B856 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate

CONTROL BOX (CONNECTION PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A440 Block Jumper (2)
- 312A17 Condenser (Battery Postive Terminal to Ground)
- 312P87 Condenser - Feed Thru (3) Generator Connections to Terminal Block

CONTROL BOX (UPPER PORTION)

- 332A333 Terminal Block (2 Place)
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)
- 338B205 Harness Assembly (Mag-neto to Stop Relay)
- 308-2 Manual or Electric Start Selector Switch
- 307B4 Choke Disconnect Relay
- 332A222 Terminal Block (4 Place)
- 307B253 Stop Relay
- 304A251 Fixed Resistor (Off Stop Relay)

90

(W.D.) 611C301

- 301C1732 Control Box
- 301B1733 Control Box Panel
- 301A1734 Control Box Mounting Bracket - Top
- 301A1735 Control Box Mounting Bracket - Bottom
- 305C175 Battery Charger
- 307P503 DC Contactor (Mounted by Customer)
- 332A673 Output Terminal Block (Marked +, -)
- 303-102 Field Rheostat
- 303-47 Field Rheostat Knob
- 303-64 Voltage Regulator Rheostat
- 303-32 Voltage Regulator Rheostat Knob
- 308-2 Handcrank-Remote Selector Switch
- 308-68 Voltage Regulator On-Off Switch

(Cont.)

CODE

(W.D.) 611C301 (Cont.)

- 307B52 Stop Relay
- 307B52 Start-Disconnect Relay
- 302-60 Charge Ammeter
- 320A104 Cranking Limiter
- 304-192 Fixed Resistor (Cranking Limiter to Ammeter)
- 308-2 Run-Stop - Automatic Selector Switch
- 307B282 Remote Start-Stop Relay
- 307-501 Reverse Current Relay
- 304A200 Adjustable Resistor (Off Voltage Regulator)
- 305C210 Voltage Regulator Base Assembly
- 305P209 Voltage Regulator Plug-in Unit
- 332A503 Terminal Block - 8 Place
- 332A510 Block Marker Strip (Marked 4 through 11)

91

(W.D.) 611C311

- 301E1384 Control Box
- 301B856 Control Box Lower Cover (Connections)
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate

CONTROL BOX (CONNECTIONS PORTION)

LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 312P87 Feed Thru Condensers (3) Generator Connections to Terminal Block
- 312A17 Condenser (Battery Positive Terminal to Ground)

CONTROL BOX (UPPER PORTION)

- 332A333 Terminal Block (2 Place)
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Start-Stop Switch Mounting Bracket
- 302A58 Charge Ammeter
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 305A1 Voltage Regulator Relay
- 304A256 Adjustable Resistor (3)
- 338B205 Harness Assembly (Mag-neto to Stop Relay)
- 308B68 Manual or Electric Start Selector Switch
- 307B4 Choke Disconnect Relay
- 332A222 Terminal Block (4 Place)
- 307B253 Stop Relay
- 304A251 Fixed Resistor (Off Stop Relay)

CONTROL SECTION

27

WIRING DIAGRAMS

CODE

92

(W.D.) 611C316

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Magnet to Stop Relay)
323P193 Receptacle (4 Wire)
323P195 Receptacle (3 Wire)
323P196 Battery Charging Base Receptacle
323P194 Waterproof Receptacle Covers (2)
323P197 Receptacle Cord Connector

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block - 4 Place
332A436 Terminal Block Marker Strip (Marked M1, M2, M3, M0)
312P87 Terminal Block Feed Thru Condensers (3)
312A17 Condenser - Battery Positive Terminal to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block - 2 Place
332A483 Terminal Block Marker Strip
308-90 Start-Stop Switch
301A974 Start-Stop Switch Mounting Bracket
307B4 Choke Disconnect Relay
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch
332A222 Terminal Block - 4 Place
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor (Off Stop Relay)
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)

93

(W.D.) 611C323

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Magnet to Stop and Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
(Cont.)

CODE

(W.D.) 611C323 (Cont.)

332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator Relay
304A256 Adjustable Resistor (3)
307B597 Choke Disconnect Relay
308-2 Manual or Electric Start Selector Switch

94

(W.D.) 611C324

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Magnet to Stop and Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
307B597 Choke Disconnect Relay

CONTROL SECTION

WIRING DIAGRAMS

CODE

95(W.D.) 611C325

301B1507 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magneteto Stop & Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Relay
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308B68 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor
 307B597 Choke Disconnect Relay
 307B597 Fuel Valve and Pump Pilot Relay (Used on Penn State Models Only)

96(W.D.) 611C326

301E1384 Control Box
 301B856 Control Box Lower Cover (Connections)
 301B853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B217 Harness Assembly (Magneteto Stop)

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block (4 Place)
 332A437 Terminal Block Marker Strip
 332A440 Terminal Block Jumper (2)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Terminal Block Marker Strip
 308-90 Start-Stop Switch
 (Cont.)

CODE

(W.D.) 611C326 (Cont.)

301A974 Start-Stop Switch Mounting Bracket
 302A58 Charge Ammeter
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 305A1 Voltage Regulator
 304A483 Adjustable Resistor

97(W.D.) 611C327

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magneteto to Stop Relay) Note: When Control is mounted on Left Side, Use Harness Assembly #338B206

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block (4 Place)
 332A437 Terminal Block Marker Strip
 332A440 Terminal Block Jumper (2)
 312A17 Condenser - Battery Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Terminal Block Marker Strip
 308-90 Start-Stop Switch
 301A974 Start-Stop Switch Mounting Bracket
 307B4 Choke Disconnect Relay
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block - 4 Place
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor (Off Stop Relay)
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor

98(W.D.) 611B328

301D1852 Control Box
 301B1853 Control Panel
 301C1854 Control Box Mounting Bracket
 301B1855 Resistor Box
 301C1860 Output Connection Box
 301B1861 Output Box Cover
 (Cont.)

CONTROL SECTION

29

WIRING DIAGRAMS

CODE

(W.D.) 611B328 (Cont.)

508-26 Grommet 3/8"
508-90 Grommet - Solid Center (2)
332A236 Terminal Block (3 Place)
332A238 Block Marker Strip
(3 Place)
307A585 Field Booster Relay
332A607 Terminal Block (12 Place)
332A642 Block Marker Strip (12
Place)
305A1 Voltage Regulator Relay
307B180 Reverse Current Relay
304A483 Adjustable Resistor
307B40 Start Solenoid
193B107 Oil Pressure Gauge (Panel
unit only)
302-212 Running Time Meter
302-58 Charge Ammeter
308P154 Start-Stop Switch
304A99 Fixed Resistor
338C236 Harness Assembly - (Mag-
neto Stop)

99

(W.D.) 611B330

301B1852 Control Box
301B1853 Control Box Panel
301C1854 Control Box Mounting
Bracket
301B1855 Resistor Box
330-28 Output Connection Box
330-6 Output Box Cover
508-26 Grommet - 3/8"
508-1 Grommet - 3/4"
508-90 Grommet - Solid Center
332A607 Terminal Block (12 Place)
332A642 Block Marker Strip (12
Place)
305A1 Voltage Regulator Relay
307B180 Reverse Current Relay
304A483 Adjustable Resistor
307B40 Start Solenoid
193B107 Oil Pressure Gauge (Panel
Unit only)
302-212 Running Time Meter
302A58 Charge Ammeter
308P68 Switch (Run-Stop)
308-29 Start Switch
304A99 Fixed Resistor
338C234 Harness Assembly (Mag-
neto Stop)

100

(W.D.) 611C331

301E1384 Control Box
301C853 Control Box Upper Cover
301B856 Control Box Lower Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate

(Cont.)

CODE

(W.D.) 611C331 (Cont.)

338B205 Harness Assembly (Mag-
neto Stop & Choke Circuit)
Note: If Control is mount-
ed on Left Side, Use
Harness Assembly
#338B206

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Terminal Block Marker
332A440 Terminal Jumper (2)
312A17 Condenser - Battery Positive
to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block
332A483 Block Marker Strip
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308B68 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator
304A483 Adjustable Resistor
307B597 Choke - Disconnect Relay
307B597 Fuel Valve & Pump Pilot
Relay (Used on Penn
State Models only)

101

(W.D.) 611B332

301D1852 Control Box
301B1853 Control Box Panel
301C1854 Control Box Mounting
Bracket
301B1855 Resistor Box
330-28 Output Connection Box
330-6 Output Box Cover
508-26 Grommet - 3/8"
508-1 Grommet - 3/4"
508-90 Grommet - Solid Center
332A607 Terminal Block (12 Place)
332A642 Block Marker Strip (12
Place)
305A1 Voltage Regulator Relay
307B180 Reverse Current Relay
304A483 Adjustable Resistor
307B40 Start Solenoid
193B107 Oil Pressure Gauge (Panel
Unit only)
302-212 Running Time Meter
302A58 Charge Ammeter

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611B332 (Cont.)

308P68 Switch (Run-Stop)
 308-29 Start Switch
 304A125 Fixed Resistor
 338C234 Harness Assembly (Magneteto Stop)

102

(W.D.) 611B333

301D1852 Control Box
 301B1853 Control Box Panel
 301C1854 Control Box Mounting Bracket
 301B1855 Resistor Box
 330-28 AC Output Box
 330-6 AC Output Box Cover
 508-26 Rubber Grommet - 3/8"-
 For Mounting Bracket
 508-1 Rubber Grommet - 3/4"-
 For Output Box
 508-8 Rubber Grommet - 1/2"-
 For Control Box
 338C235 Control Wire Harness Assembly
 406A105 Door Fastener
 332-51 Tinnerman Clips (2)
 308-29 Start Button
 332A607 Terminal Block - 12 Place
 332A642 Terminal Block Marker Strip
 308-68 Run-Stop Switch
 302A58 Charge Ammeter
 302A212 Running Time Meter
 305A1 Voltage Regulator Relay
 307B180 Reverse Current Relay
 307B40 Start-Solenoid (Mounts
 on back of control box
 mounting bracket)
 304A483 Adjustable Charge Resistor

103

(W.D.) 611C334

301B1507 Control Box
 301B1147 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magneteto Stop & Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION)

LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 323-11 Twistlock Receptacle (3)
 323-186 Twistlock Receptacle
 312A17 Condenser - Battery Positive
 to Ground
 312P87 Feed Thru Condenser (3)

(Cont.)

CODE

(W.D.) 611C334 (Cont.)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor
 307B597 Choke Disconnect Relay
 307B597 Fuel Valve and Pump Pilot
 Relay (Used on Penn State
 Models only)
 308B68 Manual or Electric Start
 Selector Switch

104

(W.D.) 611C339

301E1384 Control Box
 301B1161 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magneteto Stop & Choke Circuit)
 Note: If control is mounted
 on left side, Use Harness
 Assembly #338B206

CONTROL BOX (CONNECTIONS PORTION)

LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 323-91 Twistlock Receptacle (2)
 323-186 Twistlock Receptacle
 323P184 Duplex Receptacle
 312A17 Condenser - Battery Positive
 to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308B68 Manual or Electric Start
 Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor
 305A1 Voltage Regulator Relay

(Cont.)

CONTROL SECTION

31

WIRING DIAGRAMS

CODE

(W.D.) 611C339 (Cont.)

304A483 Adjustable Resistor
307B597 Choke Disconnect Relay
307B597 Fuel Valve & Pump Pilot
Relay (Used on Penn
State Models only)

105

(W.D.) 611C343

301E1384 Control Box
301B1876 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Mag-
neto Stop & Choke Circuit)
Note: When Control is
mounted on Left Side, Use
Harness Assy. #338B206

CONTROL BOX (CONNECTIONS PORTION)
LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper
323-47 Duplex Receptacle (2)
323-186 Twistlock Receptacle
312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
307B597 Choke Disconnect Relay

106

(W.D.) 611C345

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Mag-
neto Stop & Choke Circuit)
Note: When Control is
mounted on Left Side, Use
Harness Assy. #338B206

(Cont.)

CODE

(W.D.) 611C345 (Cont.)

CONTROL BOX (CONNECTIONS PORTION)
LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start-Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
307B597 Choke Disconnect Relay
312A15 Condenser-Off 4 Place
Block Marked 3-2-1-B

107

(W.D.) 611C346

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Mag-
neto Stop & Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION)
LOWER

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery Positive
to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308-90 Start-Stop Switch
301A974 Switch Mounting Bracket
302A58 Charge Ammeter
308-2 Manual or Electric Start
Selector Switch
332A222 Terminal Block (4 Place)
306A28 Start Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
304A251 Fixed Resistor
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
307B597 Choke Disconnect Relay

CONTROL SECTION

WIRING DIAGRAMS

CODE

(108)

(W.D.) 611C347

301E1384 Control Panel
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B217 Harness Assembly (Magnetone Stop)

CONTROL BOX (CONNECTION PORTION) LOWER

307B40 Start Solenoid
 332-419 Terminal Block
 332A436 Block Marker Strip

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor

(109)

(W.D.) 611C355

301E1384 Control Panel
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnetone Stop & Choke Circuit)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 308-2 Hi-Lo Charge Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 306A15 Reverse Current Relay
 307B253 Stop Relay
 307B52 Start Pilot Relay
 304A251 Fixed Resistor (30 Ohm, 5 Watt)

(Cont.)

CODE

(W.D.) 611C355 (Cont.)

304A328 Fixed Resistor (60 Ohm, 25 Watt) 9/16 x 2
 304A159 Adjustable Resistor (75 Ohm, 25 Watt) 9/16 x 2
 304A483 Adjustable Tapped Resistor (3-6 Ohm, 225 Watt)

(110)

(W.D.) 611C356

301B1507 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnetone Stop & Control Circuit)

CONTROL BOX (CONNECTIONS PORTION) LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308B68 Manual or Electric Start Selector Switch
 332A222 Terminal Block (4 Place)
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor
 307B597 Choke Disconnect Relay
 307B597 Fuel Valve and Pump Pilot Relay (Used on Penn State Models only)

(111)

(W.D.) 611B358

301D1922 Control Box
 301B1853 Control Panel
 301C1923 Control Box Mounting Bracket
 301B1855 Resistor Box
 330-28 Output Connection Box
 330-6 Output Box Cover
 508-26 Grommet - 3/8"
 508-1 Grommet - 3/4"
 508-90 Grommet - Solid Center
 301A1369 Meter Hole Cover
 338C243 Harness Assembly (Magnetone Stop)

(Cont.)

CONTROL SECTION

33

WIRING DIAGRAMS

CODE

(W.D.) 611B358 (Cont.)

332A607 Terminal Block (12 Place)
 332A642 Block Marker Strip (12 Place)
 305A1 Voltage Regulator Relay
 307B180 Reverse Current Relay
 304A483 Adjustable Resistor
 307B40 Start Solenoid
 193B107 Oil Pressure Gauge (Panel Unit Only)
 302A58 Charge Ammeter
 308P68 Switch (Run-Stop)
 308-29 Start Switch

(112)

(W.D.) 611C360

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnet Stop & Choke Circuit)
 Note: When Control is mounted on Left Side, Use Harness Assy. #338B206

CONTROL BOX (CONNECTIONS PORTION)
 LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 332A537 Terminal Block (4 Place)
 332A554 Block Marker Strip (4 Place)
 306A28 Start-Disconnect Relay
 307B597 Choke Disconnect Relay

(113)

(W.D.) 611C363

301E1384 Control Box
 301B1161 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly (Magnet Stop & Choke Circuit)
 Note: When Control is mounted on Left Side, Use Harness Assy. #338B206

(Cont.)

CODE

(W.D.) 611C363 (Cont.)

CONTROL BOX (CONNECTIONS PORTION)
 LOWER

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper
 323-91 Twistlock Receptacle (2)
 323-186 Twistlock Receptacle
 323P184 Duplex Receptacle
 312A17 Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip
 308-90 Start-Stop Switch
 301A974 Switch Mounting Bracket
 302A58 Charge Ammeter
 308-2 Manual or Electric Start Selector Switch
 332A222 Terminal Block
 306A28 Start-Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 304A251 Fixed Resistor
 305A1 Voltage Regulator Relay
 304A483 Adjustable Resistor
 307B597 Choke Disconnect Relay

(114)

(W.D.) 615B121 SWITCHBOARD

301C1084 Switchboard Box
 301B1405 Switchboard Box Panel
 301A1088 Switchboard Box Mounting Bracket
 302-11 AC Ammeter (0-100) For 10,000 Watt Plants only
 302-9 AC Ammeter (0-75) For 7,500 Watt Plants only
 320P52 Circuit Breaker (2) For 10,000 Watt Plants only
 320P20 Circuit Breaker (2) For 7,500 Watt Plants only
 302B78 Current Transformer (For 10,000 Watt Plants only)
 302B76 Current Transformer (For 7,500 Watt Plants only)
 302A235 Current Transformer Mounting Bracket - Upper
 302A236 Current Transformer Mounting Bracket - Lower
 302-40 AC Voltmeter

(115)

(W.D.) 615B161 SWITCHBOARD

301C1084 Switchboard Box
 301B1153 Switchboard Box Panel
 301A1090 Switchboard Box Mounting Bracket

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 615B161 SWITCHBOARD (Cont.)

- 301A1718 Circuit Breaker Opening Cover
- 302-3 AC Ammeter (3)
- 302-42 AC Voltmeter
- 302-157 Meter Multiplier (Between AC Voltmeter and Selector Switch)
- 302B387 Running Time Meter
- 304A445 Resistor (Between Running Time Meter and AC Ammeter)
- 308-12 Voltmeter Selector Switch

116

(W.D.) 615B162 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1117 Switchboard Box Panel
- 301A1088 Box Mounting Bracket (7500 Watt Plants)
- 301A1089 Box Mounting Bracket (10000 Watt Plants)
- 302P419 AC Ammeter (2) 0-50
- 320P20 Circuit Breaker (2) 25 Amp (7500 Watt Plants)
- 320B52 Circuit Breaker (2) 50 Amp (10000 Watt Plants)
- 302-213 Frequency Meter
- 302P421 AC Voltmeter

117

(W.D.) 615B163 SWITCHBOARD

- 301C1720 Switchboard Box
- 301B1719 Switchboard Box Panel
- 301A1088 Box Mounting Bracket
- 323-287 Receptacle
- 302-7 AC Ammeter (2)
- 302-41 AC Voltmeter
- 320P52 Circuit Breaker (2)

118

(W.D.) 615B164 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1056 Switchboard Box Panel
- 301A1089 Box Mounting Bracket
- 302-11 AC Ammeter
- 302-40 AC Voltmeter
- 302-212 Running Time Meter
- 320P52 Circuit Breaker (2)
- 302B78 Current Transformer
- 302A235 Current Transformer Mounting Bracket - Upper
- 302A236 Current Transformer Mounting Bracket - Lower

119

(W.D.) 615B165 SWITCHBOARD

- 301A1723 Switchboard Box
 - 301B1117 Switchboard Box Panel
- (Cont.)

R.T.F. - Refer to Factory. Include Model and Serial Number of Unit.

CODE

(W.D.) 615B165 SWITCHBOARD (Cont.)

- 301A1088 Switchboard Box Mounting Bracket
- 301A1724 Rheostat Box
- 508-8 Rubber Grommet (1/2")
- 302-7 AC Ammeter (2)
- 302-41 AC Voltmeter
- 302-212 Running Time Meter
- 320B20 Circuit Breaker (2)
- 303-47 Rheostat Knob
- 303-85 Rheostat

120

(W.D.) 615B168 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1759 Switchboard Box Panel
- 301A1088 Box Mounting Bracket (7500 Watt Plants)
- 301A1089 Box Mounting Bracket (10000 Watt Plants)
- 302-7 AC Ammeter (2) 0-50
- 320B20 Circuit Breaker (2) 35 Amp (7500 Watt Plants)
- 320B52 Circuit Breaker (2) 50 Amp (10000 Watt Plants)
- 302-41 AC Voltmeter
- 302-213 Frequency Meter
- 302-212 Running Time Meter

121

(W.D.) 615B173 SWITCHBOARD

- 301C1084 Switchboard Box
- R.T.F. Switchboard Box Panel
- 301A1089 Box Mounting Bracket
- 302-7 AC Ammeter (2) 0-50 Amp
- 302-41 AC Voltmeter 0-300 Volt
- 320B52 Circuit Breaker (2)
- 322-26 Panel Lamp
- 322-49 Panel Light & Switch

122

(W.D.) 615B174 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1153 Switchboard Box Panel
- 301B1089 Box Mounting Bracket (7500 Watt Plants)
- 301B1090 Box Mounting Bracket (10000 Watt Plants)
- 302-7 AC Ammeter (3) 0-50
- 320B58 Circuit Breaker (3) 30 Amp (7500 Watt Plants)
- 320B20 Circuit Breaker (3) 35 Amp (10000 Watt Plants)
- 302-41 AC Voltmeter
- 302-213 Frequency Meter
- 308-12 Voltmeter Selector Switch
- 304A125 Resistor (Frequency Meter to Circuit Breaker)

CONTROL SECTION

35

WIRING DIAGRAMS

CODE

(123)

(W.D.) 615B178 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1086 Switchboard Box Panel
- 301B1089 Box Mounting Bracket
- 301A1510 Circuit Breaker Opening Cover
- 302-41 AC Voltmeter
- 302-213 Frequency Meter
- 302-212 Running Time Meter

(124)

(W.D.) 615B183 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1087 Switchboard Box Panel
- 301A1090 Box Mounting Bracket
- 320-177 Circuit Breaker Box
- 320B20 Circuit Breaker (3) 35 Amp
- 320-141 Circuit Breaker (3) 15 Amp
- 302P419 AC Ammeter (3) 0-50
- 302P421 AC Voltmeter
- 308-12 Voltmeter Selector Switch

(125)

(W.D.) 615B186 SWITCHBOARD

- 301C1084 Switchboard Box
- 301B1942 Switchboard Box Panel
- 301A1090 Box Mounting Bracket
- 302-335 AC Ammeter (3) 0-20
- 320B150 Circuit Breaker (3) 20 Amp
- 302-42 AC Voltmeter
- 302-157 Meter Multiplier (Resistor) Between Voltmeter and Switch
- 308-12 Voltmeter Selector Switch

(126)

(W.D.) 611C368

- 301E1384 Control Box
- 301B856 Control Box Lower Cover
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B252 Harness Assembly (Magneteto Stop & Choke Circuit)

CONTROL BOX (CONNECTION PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip

CONTROL BOX (UPPER PORTION)

- 332A333 Terminal Block (2 Place)
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch

(Cont.)

CODE

(W.D.) 611C368 (Cont.)

- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307B253 Stop Relay
- 304A251 Fixed Resistor
- 305A1 Voltage Regulator Relay
- 304A483 Adjustable Resistor
- 307B597 Choke Disconnect Relay

(127)

(W.D.) 611C369

- 301E1384 Control Box
- 301B856 Control Box Lower Cover
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B252 Harness Assembly (Magneteto Stop & Choke Circuit)

CONTROL BOX (CONNECTION PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A437 Block Marker Strip
- 332A440 Block Jumper (2)

CONTROL BOX (UPPER PORTION)

- 332A333 Terminal Block (2 Place)
- 332A483 Block Marker Strip
- 308-90 Start-Stop Switch
- 301A974 Switch Mounting Bracket
- 302A58 Charge Ammeter
- 308-2 Manual or Electric Start Selector Switch
- 332A222 Terminal Block (4 Place)
- 306A28 Start-Disconnect Relay
- 307B180 Reverse Current Relay
- 307B253 Stop Relay
- 304A251 Fixed Resistor
- 305A1 Voltage Regulator Relay
- 304A483 Adjustable Resistor
- 307B597 Choke Disconnect Relay

(128)

(W.D.) 611C364

- 301E1384 Control Box
- 301B1147 Control Box Lower Cover
- 301C853 Control Box Upper Cover
- 301C991 Control Box Upper Panel
- 301A878 Control Box Baffle Plate
- 338B205 Harness Assembly (Magneteto Stop and Choke Circuit)
- 323-11 Receptacle - 20 Amp, 3 Wire (3) (Use Cap #323-12)
- 323-186 Receptacle - 50 Amp, 4 Wire (Use Cap #323-187)

CONTROL BOX (CONNECTION PORTION) LOWER

- 307B40 Start Solenoid
- 332A419 Terminal Block
- 332A436 Block Marker Strip
- 312A17 Condenser - Battery Positive to Ground

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W.D.) 611C364 (Cont.)

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A222 Terminal Block (4 Place)

308-2 Manual or Electric Start Selector Switch

302-58 Charge Ammeter

308P154 Start-Stop Switch

307B597 Choke Disconnect Relay

306A28 Start Disconnect Relay

307B253 Stop Relay

307B180 Reverse Current Relay

304A251 Fixed Register (Off Stop Relay)

304A483 Adjustable Resistor

305A1 Voltage Regulator Relay

332A33 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

(129)

(W.D.) 611C384

301E1974 Control Box

301B856 Control Box Lower Cover

301C853 Control Box Upper Cover

301C991 Control Box Upper Panel

301A878 Control Box Baffle Plate

338B217 Harness Assembly

CONTROL BOX (CONNECTION PORTION)

LOWER

307B40 Start Solenoid

323-207 Receptacle - 50 Amp, 3 Wire

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308P154 Start-Stop Switch

302-58 Charge Ammeter

306A28 Start Disconnect Relay

307B180 Reverse Current Relay

(Cont.)

CODE

(W.D.) 611C384 (Cont.)

305A1 Voltage Regulator Relay

304A483 Adjustable Resistor

(130)

(W.D.) 611C386

301E1384 Control Box

301A1977 Control Box Lower Cover

301C853 Control Box Upper Cover

301C991 Control Box Upper Panel

301A878 Control Box Baffle Plate

338B217 Harness Assembly

323-207 Receptacle - 50 Amp, 3 Wire

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)

332A483 Block Marker Strip (2 Place)

308P154 Start-Stop Switch

302-58 Charge Ammeter

306A28 Start Disconnect Relay

307B180 Reverse Current Relay

305A1 Voltage Regulator Relay

304A483 Adjustable Resistor

(131)

(W.D.) 611C388

R.T.F. Control Box

301B856 Control Box Lower Cover

301C853 Control Box Upper Cover

301C991 Control Box Upper Panel

301A878 Control Box Baffle Plate

338B205 Harness Assembly (Magnet to Stop and Choke

Circuit) NOTE: When

Magnet is Mounted on

Left Side, Use Harness

Assembly #338B206

307B597 Fuel Valve and Pump Pilot

Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

332A419 Terminal Block

332A436 Block Marker Strip

312P87 Feed Thru Condenser (2)

312A17 Condenser - Battery Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Board (2 Place)

332A483 Block Marker Strip (2 Place)

307B597 Choke Disconnect Relay

308P154 Start-Stop Switch

302-58 Charge Ammeter

308B68 Manual or Electric Start

Selector Switch

332A222 Terminal Block (4 Place)

307B180 Reverse Current Relay

(Cont.)

R.T.F. - Refer to Factory. Include Model and Serial Number of Unit.

CONTROL SECTION

37

WIRING DIAGRAMS

CODE

(W.D.) 611C388 (Cont.)

307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor
304A483 Adjustable Resistor

(132)

(W.D.) 611C394

R. T. F. Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B217 Harness Assembly
307B597 Fuel Valve and Pump Pilot Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332-419 Terminal Block
332A436 Block Marker Strip

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308P154 Start-Stop Switch
302-58 Charge Ammeter
308P5 Manual or Electric Start Selector Switch
307B180 Reverse Current Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor

(133)

(W.D.) 611C395

R. T. F. Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B217 Harness Assembly
307B597 Fuel Valve and Pump Pilot Relay

(Cont.)

CODE

(W.D.) 611C395 (Cont.)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332-419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block
332A483 Block Marker Strip
308P154 Start-Stop Switch
302-58 Charge Ammeter
308P5 Manual or Electric Start Selector Switch
307B180 Reverse Current Relay
305A1 Voltage Regulator Relay
306A28 Start Disconnect Relay
304A483 Adjustable Resistor

(134)

(W.D.) 611C396

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Magnet Stop and Choke Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
307B597 Choke Disconnect Relay
308P154 Start-Stop Switch
302-58 Charge Ammeter
308-2 Manual or Electric Start Selector Switch
332A222 Terminal Block
312A15 Condenser - Off 4 Place Block
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor
304A483 Adjustable Resistor

R. T. F. - Refer to Factory. Include Model and Serial Number of Unit.

CONTROL SECTION

WIRING DIAGRAMS

CODE

(135)(W.D.) 611C399

R.T.F.	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B205	Harness Assembly (Magnet to Stop Relay) NOTE: When Control is Mounted on Left Side, Use Harness Assembly #338B206
307B597	Fuel Valve Pilot Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A436	Block Marker Strip
312P87	Feed Thru Condenser (3)
312A17	Condenser - Battery Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start-Stop Switch
302-58	Charge Ammeter
308B68	Manual or Electric Start Selector Switch
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor

(136)(W.D.) 611C400

R.T.F.	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B205	Harness Assembly (Magnet to Stop and Choke Circuit) NOTE: When Control is Mounted on Left Side, Use Harness Assy. #338B206.

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground

(Cont.)

CODE

(W.D.) 611C400 (Cont.)

312P87	Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)	
332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start-Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B597	Choke Disconnect Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

(137)(W.D.) 611C401

301E1384	Control Box
301B2015	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B205	Harness Assembly (Magnet to Stop and Choke Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A436	Block Marker Strip
312A17	Condenser - Battery Positive to Ground
312P87	Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start-Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B597	Choke Disconnect Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

CONTROL SECTION

39

WIRING DIAGRAMS

CODE

(138)

(W.D.) 611C406

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Fuel Valve & Pump Pilot Relay
338B205 Harness Assembly (Magnetto Stop and Choke Circuit) NOTE: When Control is Mounted on Left Side, Use Harness Assembly # 338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2 Place)
308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor Off Stop Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start Selector Switch
312A15 Condenser - Off 4 Place Block

CODE

(139)

(W.D.) 611C410

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly (Magnetto Stop and Choke Circuit)
323P193 Receptacle - 60 Amp
323P195 Receptacle - 15 Amp
323P194 Receptacle Cover - Weather Proof (15 Amp)
323P196 Receptacle - Battery Charging
323P197 Receptacle - Cord Connector (Bat. Charging)
323P194 Receptacle Cover - weather Proof (Bat. Charging)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper
312A17 Condenser - Battery Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip (2Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off Stop Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start Selector Switch

(140)

(W. D.) 611C411

R. T. F. Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Fuel Valve and Pump Pilot Relay
338B205 Harness Assembly (Magnetto Stop and Choke Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid

(Cont.)

R. T. F. - Refer to Factory. Include Model and Serial Number of Unit.

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C411 (Cont.)

332A419 Terminal Block
 332A436 Block Marker Strip
 312P87 Feed Thru Condenser (3)
 312A17 Condenser - Battery
 Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2 Place)
 308P154 Start - Stop Switch
 302-58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 312A15 Condenser - Off
 4 Place Block
 307B597 Choke Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay
 304A483 Adjustable Resistor
 308B68 Manual or Electric
 Start Selector Switch

(141)(W. D.) 611C413

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly
 (Magneto Stop and Choke
 Circuit) Note: When Control
 is Mounted on Left Side,
 Use Harness Assembly
 #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A436 Block Marker Strip
 312A17 Condenser - Battery
 Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip (2
 Place)
 308P154 Start - Stop Switch
 302-58 Charge Ammeter
 307B597 Choke Disconnect Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay

(Cont.)

CODE

(W. D.) 611C413 (Cont.)

304A483 Adjustable Resistor
 308-2 Manual or Electric
 Start Selector Switch

(142)(W. D.) 611C420

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B205 Harness Assembly
 (Magneto Stop and Choke
 Circuit) Note: When Control
 is Mounted on Left Side,
 Use Harness Assembly
 #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 312A17 Condenser - Battery
 Positive to Ground
 312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip
 (2 Place)
 308P91 Reset Switch - Overspeed
 Cutout
 308P154 Start Stop Switch
 302-58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 307B597 Choke Disconnect Relay
 307B174 Over Speed Latch Relay
 307B180 Reverse Current Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay
 304A483 Adjustable Resistor
 308-2 Manual or Electric Start
 Selector Switch

(143)(W. D.) 611C427

301E2059 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C2060 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B217 Harness Assembly

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)

(Cont.)

CONTROL SECTION

41

WIRING DIAGRAMS

CODE

(W. D.) 611C427 (Cont.)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block
(2 Place)
332A483 Block Marker Strip (2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
307B180 Reverse Current Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor

(144)

(W. D.) 611C442

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Fuel Valve and Pump
Pilot Relay
338B205 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
98A1470 Hi - Lo Charge Switch
306A28 Start Disconnect Relay
306A15 Reverse Current Relay
307B253 Stop Relay
307B52 Start Pilot Relay
304A251 Fixed Resistor - Off
Stop Relay (30-OHM,
5 WATT)
304A328 Fixed Resistor - Off
Start Pilot Relay
(60-OHM, 25 WATT)
304A159 Adjustable Charge
Resistor (25 WATT)
304A483 Adjustable Charge Resistor
(225 WATT)
(Cont.)

CODE

(W. D.) 611C442 (Cont.)

308B68 Manual or Electric
Start Selector Switch

(145)

(W. D.) 611C445

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
(Magneto Stop and Choke
Circuit)
Field Rheostat - (1-OHM,
225 WATT) Note: Fur-
nished and Connected
By Customer

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser(3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307P597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor Relay - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

(146)

(W. D.) 611C447

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B252 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C447 (Cont.)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start - Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B597	Choke Disconnect Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
304A251	Fixed Resistor - Off Stop Relay
305A1	Voltage Regulator Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

(147)

(W. D.) 611C452

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B205	Harness Assembly (Magneto Stop to Choke Circuit) Note: When Control is Mounted on left Side, Use Harness Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start - Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B597	Choke Disconnect Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
304A251	Fixed Resistor - Off Stop Relay
305A1	Voltage Regulator Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

CODE

(148)

(W. D.) 611C454

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B217	Harness Assembly

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A436	Block Marker Strip

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block
332A483	Block Marker Strip
308P154	Start - Stop Switch
302-58	Charge Ammeter
307B180	Reverse Current Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A483	Adjustable Resistor

(149)

(W. D.) 611C455

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
307B597	Fuel Valve and Pump Pilot Relay
338B205	Harness Assembly (Magneto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start - Stop Switch
308P91	Reset Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B597	Choke Disconnect Relay
307B180	Reverse Current Relay
307B174	Over Speed Latch Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
304A251	Fixed Resistor - Off Stop Relay

(Cont.)

CONTROL SECTION

43

WIRING DIAGRAMS

CODE

(W. D.) 611C455 (Cont.)

305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308B68 Manual or Electric
Start Selector Switch

150

(W. D.) 611C457

301E2059 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C2060 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B217 Harness Assembly

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
334A483 Block Marker Strip
(2 Place)

308P154 Start - Stop Switch
302-58 Charge Ammeter
307B180 Reverse Current Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor

151

(W. D.) 611C459

301E1384 Control Box
301B1161 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
323P11 Receptacle - 20 Amp,
3 Wire (2) (Use Cap
#323-12)
323-72 Receptacle - 50 Amp,
3 Wire (Use Cap
#323P187)
323-213 Duplex Receptacle - 15
Amp. - 2 Wire

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
302P154 Start - Stop Switch

(Cont.)

CODE

(W. D.) 611C459 (Cont.)

302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308-2 Manual or Electric
Start Selector Switch

152

(W. D.) 611C477

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
(Magneto Stop to Choke
Circuit) Note: When
Control is Mounted on
Left Side, Use Harness
Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312P87 Feed Thru Condenser (3)
312A17 Condenser - Battery
Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor

153

(W. D.) 611C491

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301B991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Fuel Valve and Pump
Pilot Relay

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C491 (Cont.)

338B205 Harness Assembly -
(Magneto Stop to
Choke Circuit) Note:
When Control is Mounted
on Left Side, Use Harness
Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid (2 Place)
332A419 Terminal Block (2 Place)
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B597 Choke Disconnect Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start
Selector Switch

154(W. D.) 611C498

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly -
(Magneto Stop to Choke
Circuit) Note: When
Control is Mounted on
Left Side, Use Harness
Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)

(Cont.)

CODE

(W. D.) 611C498 (Cont.)

308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

155(W. D.) 611C499

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
304A251 Fixed Resistor - Off
Stop Relay
305A1 Voltage Regulator Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

156(W. D.) 611C500

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit)

(Cont.)

CONTROL SECTION

45

WIRING DIAGRAMS

CODE

(W. D.) 611C500 (Cont.)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

(157)

(W. D.) 611C502

301E1384 Control Box
301B1147 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
(Magneto Stop to Choke
Circuit)
307B597 Fuel Pump Pilot Relay
323P11 Receptacle - 20 Amp,
3 Wire (3) (Use Cap
#323-12
323P186 Receptacle - 50 Amp,
4 Wire (Use Cap #323P187)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312P87 Feed Thru Condenser (3)
312A17 Condenser - Battery
Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay

(Cont.)

CODE

(W. D.) 611C502 (Cont.)

304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start
Selector Switch

(158)

(W. D.) 611C505

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Pump and Valve Relay
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit) Note: When
Control is Mounted on
Left Side, Use Harness
Assembly #338B281

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306B28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start
Selector Switch

(159)

(W. D.) 611C506

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit) Note: When
Control is Mounted
on Left Side, Use
Harness Assembly
#338B282

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C506 (Cont.)

307B597 Pump and Valve
Pilot Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312P87 Feed Thru Condenser (3)
312A17 Condenser - Battery
Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay304A483 Adjustable Resistor
308B68 Manual or Electric
Start Selector Switch

160

(W. D.) 611C507

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
307B597 Fuel Pump Pilot Relay
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312P87 Feed Thru Condenser (3)
312A17 Condenser - Battery
Positive to Ground

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)308P154 Start Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay

(Cont.)

CODE

(W. D.) 611C507 (Cont.)

304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start
Selector Switch

161

(W. D.) 611C509

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B252 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
332A440 Terminal Jumper (2)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

162

(W. D.) 611C510

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B205 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A436 Block Marker Strip
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)

(Cont.)

CONTROL SECTION

47

WIRING DIAGRAMS

CODE

(W. D.) 611C510 (Cont.)

332A483	Block Marker Strip (2 Place)
308P154	Start -Stop Switch
308P91	Reset Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B174	Over Speed Latch Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

163

(W. D.) 611C511

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B205	Harness Assembly (Magneto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B206

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground

312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start -Stop Switch
308P91	Reset Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B174	Over Speed Latch Relay
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

CODE

164

(W. D.) 611C512

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B281	Harness Assembly (Magneto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B282

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground
312P87	Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Stop-Start Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
312A58	Condenser - Off 4 Place Block
307P180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

165

(W. D.) 611C514

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
308B281	Harness Assembly (Magneto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #332B282

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper
312A17	Condenser - Battery Positive to Ground

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C514 (Cont.)

312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
 332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip
 (2 Place)
 308P154 Stop-Start Switch
 302-58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 312A58 Condenser - Off
 4 Place Block
 307B180 Reverse Current Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay
 304A483 Adjustable Resistor
 308-2 Manual or Electric Start
 Selector Switch

(166)

(W. D.) 611C515

301E1384 Control Box
 301B2181 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B281 Harness Assembly
 (Magneto Stop to Choke
 Circuit)
 323P11 Receptacle - 20 Amp,
 3 Wire (2) (Use Cap
 #323-12)
 323-72 Receptacle - 50 Amp,
 3 Wire (Use Cap
 #323P187)
 323-213 Duplex Receptacle - 15
 Amp, 2 Wire

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper
 312A17 Condenser - Battery
 Positive to Ground
 312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
 332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip
 (2 Place)
 302P154 Start-Stop Switch
 302-58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 307B180 Reverse Current Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay

(Cont.)

CODE

(W. D.) 611C515 (Cont.)

304A483 Adjustable Resistor
 308-2 Manual or Electric
 Start Selector Switch

(167)

(W. D.) 611C518

301E1384 Control Box
 301B586 Control Box Lower Cover
 301C583 Control Box Upper Cover
 301C991 Control Box Upper Panel
 301A878 Control Box Baffle Plate
 338B281 Harness Assembly
 (Magneto Stop to Choke
 Circuit) Note: When
 Control is Mounted
 on Left Side, Use
 Harness Assembly
 #338B282

307B597 Pump Pilot Relay

LOWER CONTROL BOX (CONNECTION)

307B40 Start Solenoid
 332A419 Terminal Block
 332A437 Block Marker Strip
 332A440 Terminal Jumper (2)
 312A17 Condenser - Battery
 Positive to Ground

312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
 332A483 Block Marker Strip
 (2 Place)
 308P154 Start-Stop Switch
 308P91 Reset Switch
 302-58 Charge Ammeter
 332A222 Terminal Block (4 Place)
 307B180 Reverse Current Relay
 307B174 Over Speed Latch Relay
 307B253 Stop Relay
 306A28 Start Disconnect Relay
 305A1 Voltage Regulator Relay
 304A251 Fixed Resistor - Off
 Stop Relay
 304A483 Adjustable Resistor
 308B68 Manual or Electric
 Start Selector Switch

(168)

(W. D.) 611C519

301E1384 Control Box
 301B856 Control Box Lower Cover
 301C853 Control Box Upper Cover
 301C991 Control Box Upper Panel
 310A878 Control Box Baffle Plate
 338B283 Harness Assembly
 (Magneto Stop to Choke
 Circuit) Note: When
 Control is Mounted
 on Left Side, Use
 Harness Assembly
 #338B284

LOWER CONTROL BOX (CONNECTIONS)
 (Cont.)

CONTROL SECTION

49

WIRING DIAGRAMS

CODE

(W. D.) 611C519 (Cont.)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start - Stop Switch
332A222 Terminal Block (4 Place)
306A28 Start Disconnect Relay

(169)

(W. D.) 611C550

301D1962 Control Box
301C2092 Control Panel
301B1963 Control Cover
305A254 Rectifier Mtg. Bracket
301B1964 Control Mtg. Bracket
(L. H.)
301B1965 Control Mtg. Bracket
(R. H.)
304A60 Ignition Resistor -
25 Watt, 1.72 OHMS
304A500 Adjustable Resistor -
150 Watt, 2 OHM
(Mtd. in Generator
Air Outlet)
305A235 Rectifier
308A28 Start Switch
308P2 Ignition Switch
302A446 Charge Ammeter
(5 - 0 - 5)
320A104 Emergency Relay
332A706 Terminal Block (8 Place)
332A739 Block Marker (4 thru 9)
332K750 Battery Polarity Marker
Kit
332A419 Terminal Block (4 Place)
332A744 Block Marker (T1, T3, T2, T4)
332A440 Terminal Jumper (2)
304A217 Fixed Resistor - 1 OHM,
10 WATT

(170)

(W. D.) 611C556

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C2296 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B283 Harness Assembly
(Magneto Stop to Choke
Circuit)

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A609 Terminal Block (2 Place)
332A610 Block Marker Strip
(2 Place)

(Cont.)

CODE

(W. D.) 611C556 (Cont.)

312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)
332A419 Terminal Block (4 Place)
332A436 Block Marker Strip
(4 Place)
CONTROL BOX (UPPER PORTION)
332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Stop-Start Switch
308P91 Reset Switch
302-58 Charge Ammeter
332P69 Signal Light Socket (2)
322P4 Signal Light Lamp (2)
332A222 Terminal Block (4 Place)
307B174 Over Speed Latch Relay
307B174 Hi-Air Temperature
Latch Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308-2 Manual or Electric Start
Selector Switch

(171)

(W. D.) 611C560

301E1384 Control Box
301B1876 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit) Note: When
Control is Mounted on
Left Side, Use Harness
Assembly #338B282
323P186 Receptacle - 50 Amp.
3 Wire (Use Cap
#323P187)
323-47 Duplex Receptacle -
15 Amp, 2 Wire

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)
CONTROL BOX (UPPER PORTION)
332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start-Stop Switch

(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 611C560 (Cont.)

302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

(172)

(W. D.) 611C572

301E1384	Control Box
301B586	Control Box Lower Cover
301C583	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
307B597	Pump and Valve Pilot Relay
338B281	Harness Assembly (Magnetto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B282

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground
312P87	Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start-Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
312A58	Condenser - Off 4 Place Block
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308B68	Manual or Electric Start Selector Switch

CODE

(173)

(W. D.) 611C592

301E1384	Control Box
301B856	Control Box Lower Cover
301C853	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B281	Harness Assembly (Magnetto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B282

302P465	Running Time Meter
301B500	Running Time Meter Mtg. Box

LOWER CONTROL BOX (CONNECTIONS)

307B40	Start Solenoid
332A419	Terminal Block
332A437	Block Marker Strip
332A440	Terminal Jumper (2)
312A17	Condenser - Battery Positive to Ground
312P87	Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333	Terminal Block (2 Place)
332A483	Block Marker Strip (2 Place)
308P154	Start-Stop Switch
302-58	Charge Ammeter
332A222	Terminal Block (4 Place)
307B180	Reverse Current Relay
307B253	Stop Relay
306A28	Start Disconnect Relay
305A1	Voltage Regulator Relay
304A251	Fixed Resistor - Off Stop Relay
304A483	Adjustable Resistor
308-2	Manual or Electric Start Selector Switch

(174)

(W. D.) 611C612

301E1384	Control Box
301B586	Control Box Lower Cover
301C583	Control Box Upper Cover
301C991	Control Box Upper Panel
301A878	Control Box Baffle Plate
338B281	Harness Assembly (Magnetto Stop to Choke Circuit) Note: When Control is Mounted on Left Side, Use Harness Assembly #338B282

(Cont.)

CONTROL SECTION

51

WIRING DIAGRAMS

CODE

(W. D.) 611C612 (Cont.) LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor

(175)

(W. D.) 611C621

301E1384 Control Box
301B856 Control Box Lower Cover
301C853 Control Box Upper Cover
301C991 Control Box Upper Panel
301A878 Control Box Baffle Plate
338B281 Harness Assembly
(Magneto Stop to Choke
Circuit) NOTE: When
Control is Mounted
on Left Side, Use
Harness Assembly
#338B282
307B597 Pump and Valve Pilot
Relay

LOWER CONTROL BOX (CONNECTIONS)

307B40 Start Solenoid
332A419 Terminal Block
332A437 Block Marker Strip
332A440 Terminal Jumper (2)
312A17 Condenser - Battery
Positive to Ground
312P87 Feed Thru Condenser (3)

CONTROL BOX (UPPER PORTION)

332A333 Terminal Block (2 Place)
332A483 Block Marker Strip
(2 Place)
308P154 Start-Stop Switch
302-58 Charge Ammeter
332A222 Terminal Block (4 Place)

(Cont.)

CODE

(W. D.) 611C621 (Cont.)

308P91 Reset Switch
308P154 Time Delay Relay
307B174 Emergency Latch Relay
307B180 Reverse Current Relay
307B253 Stop Relay
306A28 Start Disconnect Relay
305A1 Voltage Regulator Relay
304A251 Fixed Resistor - Off
Stop Relay
304A483 Adjustable Resistor
308B68 Manual or Electric Start
Selector Switch

(176)

(W. D.) 615B194 Switchboard

301C1084 Switchboard Box
301B1942 Switchboard Box Panel
301A1090 Box Mounting Bracket
320B150 Circuit Breaker - 20 Amp
(3)
302-335 A. C. Ammeter (3) 0-20
302-42 A. C. Voltmeter
308-12 Voltmeter Selector Switch
302-157 Meter Multiplier
(Resistor) Between
Voltmeter and Switch

304A125 Fixed Resistor - Off
Running Time Meter
302-212 Running Time Meter

(177)

(W. D.) 615B195 Switchboard

301B1084 Switchboard Box
301B1153 Switchboard Box Panel
301B1090 Box Mounting Bracket
320B20 Circuit Breaker - 35 Amp
(3)
308-12 Voltmeter Selector Switch
302-212 Running Time Meter
302-213 Frequency Meter
304A125 Fixed Resistor (15,000-
OHM) Off Frequency
Meter

302P421 A. C. Voltmeter
302P419 A. C. Ammeter (3) 0-50
304A99 Fixed Resistor (5,000 -
OHM) Off Ammeter

(178)

(W. D.) 615B196 Switchboard

301C1084 Switchboard Box
301B2017 Switchboard Box Panel
301B1089 Box Mounting Bracket
320-42 Circuit Breaker - 50 Amp.
320P419 A. C. Ammeter (2) 0-50
302P421 A. C. Voltmeter

(179)

(W. D.) 615B205 Switchboard

301C1084 Switchboard Box
301B1759 Switchboard Box Panel
(Cont.)

CONTROL SECTION

WIRING DIAGRAMS

CODE

(W. D.) 615B205 Switchboard (Cont.)

301A1089	Box Mounting Bracket (10CW PLANTS)
301A1088	Box Mounting Bracket (705CW PLANTS)
322A49	Panel Light and Switch
322-26	Panel Lamp
302-7	A. C. Ammeter (2) 0-50
302-213	Frequency Meter
302-41	A. C. Voltmeter
302-212	Running Time Meter
320B52	Circuit Breaker (2) 50 Amp (10CW PLANTS)
320B20	Circuit Breaker (2) 35 Amp (705CW PLANTS)

(180)

(W. D.) 615B212 Switchboard

301C1084	Switchboard Box
301B2113	Switchboard Box Panel
301A1090	Box Mounting Bracket
308-12	Voltmeter Selector Switch
303-76	Selector Switch Knob
302P422	A. C. Voltmeter
302P418	A. C. Ammeter (3) 0-30
323P316	Duplex Receptacle - 15 Amp, 277 Volt (Use Connector Plug #323P317)

(181)

(W. D.) 615B222 Switchboard

301A1723	Switchboard Box
301B1759	Switchboard Box Panel
301A1088	Box Mounting Bracket
301B1724	Rheostat Box
508-8	Rubber Grommet (1/2")
303-85	Rheostat
303-47	Rheostat Knob
320B20	Circuit Breaker (2) 35 Amp
308-2	Panel Light Switch
322P73	Panel Light Holder
322-74	Panel Lamp
302-212	Running Time Meter
302-213	Frequency Meter
302P419	A. C. Ammeter (2) 0-50
302P421	A. C. Voltmeter

(182)

(W. D.) 615B226 Switchboard

301C1084	Switchboard Box
301B2194	Switchboard Box Panel
301A1088	Box Mounting Bracket (705CW PLANTS)
301A1089	Box Mounting Bracket (10CW PLANTS)
308-12	Voltmeter Selector Switch
303-76	Selector Knob
304-519	Meter Multiplier (Resistor) Off Selector Switch

(Cont.)

CODE

(W. D.) 615B226 Switchboard (Cont.)

302-212	Running Time Meter
302P461	A. C. Voltmeter (0 - 150 - 300)
302P444	A. C. Ammeter (2) 0-35 (705CW PLANTS)
302P419	A. C. Ammeter (2) 0-50 (10CW PLANTS)
320P20	Circuit Breaker (2) 35 Amp (705CW PLANTS)

320P52	Circuit Breaker (2) 50 Amp (10CW PLANTS)
--------	---

(183)

(W. D.) 615B228 Switchboard

301C1084	Switchboard Box
301B1117	Switchboard Box Panel
301B1089	Box Mounting Bracket
301A1510	Circuit Breaker Opening Cover
302-212	Running Time Meter
302-213	Frequency Meter
302-41	A. C. Voltmeter
302P428	D. C. Voltmeter

(184)

(W. D.) 615B239 Switchboard

301C1084	Switchboard Box
301B2194	Switchboard Box Panel
301A1088	Box Mounting Bracket (705CW PLANTS)
301A1089	Box Mounting Bracket (10CW PLANTS)
302B448	Meter Face Plate
308-12	Voltmeter Selector Switch
303-76	Selector Knob
304-519	Meter Multiplier (Resistor) Off Selector Switch
302-213	Frequency Meter
302P461	A. C. Voltmeter (0 - 150 - 300)
302P444	A. C. Ammeter (2) 0 - 35 (705CW PLANTS)
302P419	A. C. Ammeter (2) 0 - 50 (10CW PLANTS)
320P20	Circuit Breaker (2) 35 Amp (705CW PLANTS)
320P52	Circuit Breaker (2) 50 Amp (10CW PLANTS)

(185)

(W. D.) 615B258 Switchboard

301C1084	Switchboard Box
301B1153	Switchboard Box Panel
301B1089	Box Mounting Bracket (705CW PLANTS)
301B1090	Box Mounting Bracket (10CW PLANTS)

(Cont.)

CONTROL SECTION

53

WIRING DIAGRAMS

CODE

(W. D.) 615B258 Switchboard (Cont.)

308-12	Voltmeter Selector Switch
303-76	Selector Knob
302P466	Running Time Meter
302P42	A. C. Voltmeter
302P418	A. C. Ammeter (3) 0 - 30 (705CW PLANTS)
302P419	A. C. Ammeter (3) 0 - 50 (10CW PLANTS)
320B19	Circuit Breaker (3) 25 Amp (705CW PLANTS)
320B20	Circuit Breaker (3) 35 Amp (10CW PLANTS)

(186)

(W. D.) 625A275 (Oil Base Heater Control)

Diagram Only - Refer to
Model Data Section for
Components

BLANK PAGE

ENGINE SECTION

ENGINE SECTION

CONTAINS THE FOLLOWING-

ENGINE PARTS FOR CW ENGINE GENERATOR

ALL ENGINE PARTS ARE LISTED IN ALPHABETICAL ORDER (A THRU Z). THE PREDOMINATING NOUN OF ANY PHRASE HAS ALWAYS BEEN LISTED FIRST WHENEVER MORE THAN ONE WORD DESCRIBES ANY ITEM. THUS A CONNECTING ROD ASSEMBLY IS LISTED AS: ROD ASSEMBLY, CONNECTING. THE MAIN HEADING COLUMNS ARE FOR SPEC A, SPEC B - C, SPEC E - F AND ETC. (NOTE: SPEC D PLANTS USE SPEC COLUMN C AS THE W.D. CHANGE CONTROLS THE ONLY DIFFERENCES). THESE SPEC (SPECIFICATION) COLUMNS ARE DIVIDED INTO 2 SUBCOLUMNS OF:

M - MANUAL START PLANTS

R - REMOTE START PLANTS

Special Note: Parts in this section are prefixed by symbols and indicate as follows -

- ▲ - Part applies only to Industrial Engines. Quantity for these parts is one unless otherwise specified.
- † - Part applies to both Generating Plants and Industrial Engines. Quantity used are the same.
- x - Indicates period of usage only in Spec Columns. Use superceding part.

Whenever there is a choice of more than one part number for any particular part, use the one that has the quantity entered under the specification letter column as given in the Model Data. This letter should agree with the last letter of the Engine Model.

BLANK PAGE

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
-A-											
134D423	Adapter - Air Outlet - Housing	1	1	1	1		1		1		1
153A155	Adapter, Automatic Choke to Carburetor - Gasoline Fuel Plants (Not used on AC Plants Begin Spec "F")		1		1		1				
141A502	Adapter, Automatic Choke to Carburetor - Gas-Gasoline Fuel Plants (Used only as Choke Lock for AC Plants Begin Spec "F")..		1		1				1		1
155A170	† Adapter, Exhaust Manifold Outlet	1	1	1	1	1	1	1	1		1
149C528	† Adapter, Fuel Pump			1	1	1	1	1	1		1
150B416	† Arm and Shaft, Governor	1	1	1	1	1		1			1
-B-											
510-14	† Ball, Bearing - Governor Shaft Thrust	1	1	1	1		1		1		1
510-46	† Ball, Fly - Governor	12	12	12	12		12		12		12
102E220	† Base, Oil	1	1								
102E262	† Base, Oil			1	1	1		1			1
101B373	† Bearing, Camshaft - Front	1	1	1	1	1		1			1
101A367	† Bearing, Camshaft - Rear	1	1	1	1	1		1			1
114B53	† Bearing Half, Connecting Rod - Specify: Std. or .002, .010, .020, .030 U/S.	4	4	4	4	4		4			4
101K341	† Bearing Kit, Main - Front or Rear - Includes Thrust Washer and Lock Pins - Specify: Std. or .002, .010, .020, .030 U/S. (Re- places #101A66 and #101K220)	2	2	2	2	2		2			2
510-49	† Bearing, Needle - Lower	1	1	1	1	1		1			1
510-48	† Bearing, Needle - Upper	1	1	1	1	1		1			1
511P37	Belt, Generator Drive (Magnet Use Plants only)		1		1	1		1			1
110C1201	† Block, Cylinder - Left Hand - Includes Valve Guides and Exhaust Valve Seat Insert. (Replaces #110C757)	1	1	1	1	1		1			1
110C1200	† Block, Cylinder - Right Hand - Includes Valve Guides & Exhaust Valve Seat Insert. (Replaces #110C756)	1	1	1	1	1		1			1
403A95	† Bolt, Eye - Lifting	1	1	1	1	1		1			1
805-20	† Bolt, Place - Connecting Rod (Also replaces both screw & washer used previously)					4		4			4
805-18	† Bolt, Place - Rear Bearing Plate (Units Prior to Spec "E" see "Stud")					8		8			8
150K580	† Booster Replacement Kit, Governor (Not used on 5CW Models or X-Ray Models	1	1	1	1	1		1			1
153A47	Bracket Assembly, Automatic Choke - Complete with Bi-Metal Element and Housing (NOTE: Not used on AC Plants Begin Spec "F")		1		1	1					
† - Used also on Industrial Engines.											

† - Used also on Industrial Engines.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
153A252	Bracket, Automatic Choke - Sisson (Use began with Spec "F" Models)					1		1		1	
191B91	Bracket, Charge Generator (Magneto Use Plants only)		1		1	1		1		1	
141A496	† Bracket, Choke Control Rod	1		1							
134A487	† Bracket, Cylinder Shroud			2	2	2		2		2	
159A477	Bracket, Fuel Line Support			1	1	1		1		1	
149A171	† Bracket, Fuel Supply Connection	1	1								
150A495	† Bracket, Governor Booster External Spring (Not used on 5CW Models or X-Ray Models) Replaces #150A472	1	1	1	1	1		1		1	
150A376	† Bracket, Governor Booster Internal Spring (Not used on 5CW Models or X-Ray Models)	1	1	1	1	1		1		1	
150A411	† Bracket, Governor Spring	1	1	1	1	1		1		1	
122C122	† Bracket, Oil Filter Mounting (Replaces all previously used Brackets)	1	1	1	1	1		1		1	
145A246	† Bushing, Carburetor Air Inlet - Used with Rubber Inlet							1		1	
505-131	Bushing, Gas Regulator Outlet (Plants with OPTIONAL Ensign Gas Regulator only prior to Serial #573571)		1		1	1					
114B54	† Bushing, Piston Pin - Semi - Finished	4	4	4	4	4		4		4	
402A46	† Bushing, Plant Mounting Spacer	4	4	4	4	4		4		4	
161P152	Button, Stop	1		1							
-C-											
416A77	Cable, Battery		2		2	2		2		2	
416A4	Cable, Battery Jumper - AC Plants only (Replaces #416A1)		1		1	1		1		1	
167A1214	† Cable, Spark Plug (Less Nut) - Left Hand - AC Plants	1	1	1	1	1		1		1	
167A1278	Cable, Spark Plug (Less Nut) - Left Hand - Magnet Use Plants only		1		1	1		1		1	
167A1213	† Cable, Spark Plug (Less Nut) - Right Hand - AC Plants	1	1	1	1	1		1		1	
167A1277	Cable, Spark Plug (Less Nut) - Right Hand - Magnet Use Plants only		1		1	1		1		1	
105A112	† Camshaft - Includes Center Pin	1	1	1	1	1		1		1	
123B409	† Cap, Breather Housing	1	1								
123A458	† Cap, Breather Tube			1	1	1		1		1	
415B124	Cap, Rubber Rain (With provision for inserting Fuel Line)										
141C560	*Carburetor Assembly, GASOLINE - 5CW Plants only (Replaces #141C479)	1	1	1	1	1					
141C607	▲*Carburetor Assembly, GASOLINE										
141C564	*Carburetor Assembly, GASOLINE - Used on all AC Models Prior to Spec "F" except 5CW (Replaces #141C466)	1	1	1	1	1					

† - Used also on Industrial Engines.

▲ - Used only on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC K - L	
		M	R	M	R	M	R	M	R	M	R
141C564	*Carburetor Assy., GASOLINE-Magnet Use Plants only (Replaces #141C466)	1	1	1	1	1		1		1	
141C621	*Carburetor Assembly, GASOLINE - AC Plants Spec "F" Thru "K"					1		1		1	
141C655	*Carburetor Assembly, GASOLINE - AC Plants Begin Spec "L"									1	
141C492	*Carburetor Assembly, GAS-GASOLINE - OPTIONAL Equipment for 5CW Plants only		1	1		1					
141C500	*Carburetor Assembly, GAS-GASOLINE - OPTIONAL Equipment for all AC Plants EXCEPT 5CW	1									
141C494	*Carburetor Assembly, GAS-GASOLINE - OPTIONAL Equipment for all AC Plants Prior to Spec "F" EXCEPT 5CW		1	1		1					
141C622	*Carburetor Assembly, GAS-GASOLINE - OPTIONAL Equipment - AC Plants Spec "F" Thru "K"					1		1		1	
141C656	*Carburetor Assembly, GAS-GASOLINE - OPTIONAL Equipment - AC Plants Begin Spec "L"									1	
141C562	*Carburetor Assembly GAS (Only) Fuel - OPTIONAL Equipment for 5CW Plants only		1	1		1					
141C519	*Carburetor Assembly, GAS (Only) Fuel - OPTIONAL Equipment for all AC Plants EXCEPT 5CW		1	1		1		1		1	
140B495	Cartridge, Air Cleaner							1		1	
122-37	† Cartridge, Oil Filter (See Also "Element")	1	1	1	1	1		1		1	
134A410	† Catch, Cylinder Shroud Fastener - Left Hand Upper	1	1								
134A411	† Catch, Cylinder Shroud Fastener - Right Hand Upper	1	1								
134A413	† Catch, Cylinder Shroud Fastener - Left Hand Lower	1	1								
134A414	† Catch, Cylinder Shroud Fastener - Right Hand Lower	1	1								
153A28	Choke Assembly, Automatic - Complete (Magnet use Plants only) .		1	1		1		1		1	
148A214	Choke, Gas Fuel - All AC Plants with OPTION Gas-Gasoline Carburetor Prior to Serial #573571 EXCEPT 5CW	1	1	1		1					
153P213	Choke, Sisson - Automatic - AC Plants Spec "F" Thru "K"					1		1		1	
153A337	Choke, Sisson - Automatic - AC Plants Begin Spec "L"									1	
503-269	† Clamp, Hose, Air Cleaner Hose to Air Cleaner			1	1	1		1		1	
503-269	† Clamp, Hose, Air Pre-Heater Hose	2	2	2	2	2		2		2	
503-274	† Clamp, Hose - Air Cleaner Hose to Air Inlet			1	1	1		1		1	
503-274	† Clamp, Hose - METAL Air Inlet to Carburetor			1	1	1		1		1	
503P368	† Clamp, Hose - RUBBER Air Inlet to Carburetor							1		1	
503-32	Clamp, Gas Hose - For 7/8" Hose - Plants with Optional ENSIGN Gas Regulator only Prior to Serial #573571		2	2		2					
503-32	Clamp, Gas Hose - For 15/16" Hose - Plants with Optional GARRETSON Gas Regulator only Begin Serial #573571. (Replaces 503-49)					2		2		2	

† - Used also on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

ENGINE SECTION

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
140A343	† Cleaner, Air - Oil Bath Type (Replaces #140C266)	1	1								
518-5	Clip, Choke Linkage - Carburetor End - AC Plants with Sisson Choke Begin Spec "F"					1		1		1	
502-3	† Connector, Fuel - Fuel Pump Outlet			1	1	1		1		1	
502-3	† Connector, Oil Line to Filter	2	2	2	2	2		2		2	
505-36	Coupling - Exhaust Tube (1 1/2 x 1 1/4)	1	1	1	1	1		1		1	
505-29	† Coupling, Pipe - Oil Drain - 3/4"	1	1	1	1	1		1		1	
140B356	† Cover, Air Cleaner Housing			1	1	1					
140B532	Cover, Air Cleaner - Housing							1		1	
103C115	† Cover Assembly, Gear - Complete	1	1								
103C173	† Cover Assembly, Gear - Complete (Replaces #103C140)			1	1	1		1		1	
153A162	Cover, Automatic Choke - Includes Heating Element - AC Plants Prior to Spec "F"		1		1	1					
153A50	Cover, Automatic Choke - Includes Heating Element - Magnet use Plants only		1		1	1		1		1	
153A256	Cover, Sisson Automatic Choke - Includes Heating Element - AC Plants Spec "F" Thru "K"					1		1		1	
153A346	Cover, Sisson Automatic Choke - Includes Heating Element - AC Plants Begin Spec "L"									1	
134B471	† Cover, Crank Opening - Spec "B" Models only.....			1	1						
149A555	Cover, Fuel Pump Hole - Plants with Gas Fuel only										
150C454	† Cover, Governor Arm (Replaces #150C453)	1	1								
102A221	† Cover, Oil Base Opening - Standard (NOTE: Models with Optional Oil Base Heater use #102A248)	1	1	1	1	1		1		1	
102A248	Cover, Oil Base Opening - (For Plants with Optional Oil Base Heater) Less Heater										
333B43	Cover, Thermostat - For Plants with Optional Oil Base Heater										
110B640	† Cover, Valve Box	2	2	2	2	2		2		2	
101A236	† Crankcase Replacement - Includes Camshaft Bearings, Main Bearings, Bearing Plate (Less Studs and Oil Seal) Replaces #101A217	1	1	1	1	1		1		1	
192C259	† Crank, Hand - Prior to Spec "C" (Replaces #192C204)	1	1	1	1						
192C268	† Crank, Hand - Begin Spec "C" (Replaces #192B264)			1	1	1		1		1	
104D172	† Crankshaft	1	1	1	1	1		1		1	
150A440	† Cup, Governor	1	1	1	1	1		1		1	
120B275	† Cup, Intake - Oil Pump	1	1	1	1	1		1		1	
402A38	† Cushion, Plant Mounting - Lower	4	4	4	4	4		4		4	
402A36	† Cushion, Plant Mounting - Upper	4	4	4	4	4		4		4	

† - Used also on Industrial Engines.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
-D-											
150K582	† Diaphragm Kit, Governor Booster (Not used on 5CW Models or X-Ray Models	1	1	1	1		1		1		1
104B252	† Dog, Crank Engagement - Begin Spec "C"			1	1		1		1		1
-E-											
502-2	† Elbow, Fuel Line Connection	3	3	2	2		2		2		2
505-39	Elbow, Gas Regulator - 3/8" - Plants with Optional GARRETSON Regulator Begin Serial #573751						1		1		1
502-2	† Elbow, Oil Filter Lines to Crankcase	2	2	2	2		2		2		2
505-52	Elbow, Oil Pressure Gauge Connection	1	1	1	1		1		1		1
502-20	▲ Elbow, Oil Pressure Gauge Connection										
505-51	† Elbow, Street - Oil Base Drain - 3/4" x 90°	1	1	1	1		1		1		1
140-359	† Element, Air Cleaner - Mesh Type (See also Cartridge)			1	1		1				
153-57	Element, Choke Bi-Metal (Included in Bracket Assembly #153A47) Not used on AC Plants Begin Spec "F"		1		1		1		1		1
333B42	Element, Heater - Oil Base (For Plants with Optional Oil Base Heater)										
134B402	† Extension, Cylinder Baffle Plate - Left Hand	1	1	1	1		1		1		1
134B403	† Extension, Cylinder Baffle Plate - Right Hand	1	1	1	1		1		1		1
-F-											
123A865	† Filter, Breather Tube			1	1		1		1		1
149B79	Filter, Fuel - Prior to Serial #508834	1	1	1	1						
122A91	† Filter, Oil - Includes Cartridge (Replaces #122C56)	1	1	1	1		1		1		1
104D192	Flywheel - AC Plants	1	1	1	1		1		1		1
104A205	† Flywheel - Includes Ring Gear - Magnet use Plants only		1		1		1		1		1
102B223	† Foot, Oil Base	2	2								
102B271	† Foot, Oil Base			2	2		2		2		2
-G-											
123A380	† Gasket - (1) Oil Fill Tube, (1) Breather Housing	2	2								
140B467	† Gasket, Air Cleaner Cover (Replaces #508-73)			1	1		1				
123A410	† Gasket, Breather Cap	1	1								
154A133	† Gasket, Carburetor to Manifold	1	1	1	1		1		1		1
110B645	† Gasket, Cylinder Base - Right or Left	2	2	2	2		2		2		2
110B641	† Gasket, Cylinder Head	2	2	2	2		2		2		2
154A133	† Gasket, Exhaust Adapter	1	1	1	1		1		1		1
† - Used also on Industrial Engines.											
▲ - Used only on Industrial Engines.											

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
110D749	Head, Cylinder - L.H. - High Compression (Compression Chamber is 23/32" Deep) For Gas or Gas-Gasoline Fuel Models	1	1	1		1		1		1	
110D748	Head, Cylinder - R.H. - High Compression (Compression Chamber is 23/32" Deep) For Gas or Gas-Gasoline Fuel Models	1	1	1		1		1		1	
133K30	† Heater Kit, Air Pre-Heater - Includes Air Adapter, Hose, Clamps and Tube	1	1								
503B402	† Hose, Air Cleaner (Replaces #503A263 and #503B42)			1	1	1		1		1	
503A215	† Hose, Air Pre-Heater	1	1								
503-259	† Hose, Air Pre-Heater			1	1	1		1		1	
123A412	Hose, Breather Cap to Air Cleaner - 5CW Plants only with OPTI-ONAL Gas-Gasoline Carburetor		1								
123A415	Hose, Breather Cap to Air Cleaner - All EXCEPT 5CW with OPTIONAL Gas-Gasoline Carburetor	1	1								
123A411	† Hose, Breather Cap to Air Cleaner - Gasoline Plants	1	1								
503A267	Hose, Breather Cap to Air Inlet - All 5CW Plants with OPTIONAL Gas-Gasoline Carburetor				1		1				
503A266	Hose, Breather Cap to Air Inlet - All Plants with OPTIONAL Gas-Gasoline Carburetor EXCEPT 5CW (Prior to Serial #573751)				1		1				
503A275	† Hose, Breather Cap to Air Inlet - Gasoline Plants (NOTE: Also used on all Plants with OPTIONAL Gas-Gasoline Carburetor begin Serial #573571 Spec F Models only)			1	1		1		1		1
503A318	Hose, Breather Cap to Air Inlet - Gas-Gasoline Plants only Begin Spec "F"						1		1		1
503-260	Hose, Gas Regulator to Carburetor - Plants with OPTIONAL Gas Regulator only Prior to Spec "F"		1		1		1				
503-51	Hose, Gas Regulator to Carburetor - Plants with OPTIONAL Gas Regulator only Begin Spec "F"						1		1		1
140D355	† Housing, Air Cleaner - Dry Type			1	1		1				
140C531	Housing, Air Cleaner - Dry Type								1		1
134D394	Housing, Blower	1	1								
134D456	▲Housing, Blower		1								
134D460	▲Housing, Blower				1						
134D462	Housing, Blower - AC Plants only			1	1		1		1		1
134D503	Housing, Blower - Magnet Use Plants only		1		1		1		1		1
153A58	Housing, Choke Bi-Metal (Included in #153A47 Bracket Assembly) NOTE: Not used on AC Plants Begin Spec "F"		1		1		1		1		1
123C388	† Housing, Crankcase Breather	1	1								
101E188	Housing, Flywheel	1	1								
101E222	Housing, Flywheel (NOTE: Not used on Magnet Models)			1	1		1		1		1

† - Used also on Industrial Engines.

▲ - Used only on Industrial Engines.

ENGINE SECTION

[illegible]

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC K - L	
		M	R	M	R	M	R	M	R	M	R
122B94	† Line, Oil - Filter Inlet	1	1	1	1	1		1		1	
122B95	† Line, Oil - Filter Outlet	1	1	1	1	1		1		1	
150A410	† Link, Governor Arm to Carburetor	1	1	1	1	1		1		1	
153A253	Linkage, Sisson Choke to Carburetor - Gasoline Fuel Plants Spec "F" Thru "K"					1		1		1	
153A344	Linkage, Sisson Choke to Carburetor - Gasoline Fuel Plants Begin Spec "L"									1	
153A254	Linkage, Sisson Choke to Carburetor - Gas-Gasoline Fuel Plants Spec "F" Thru "K"					1		1		1	
153A343	Linkage, Sisson Choke to Carburetor - Gas-Gasoline Fuel Plants Begin Spec "L"									1	
110A639	† Lock, Valve Spring Retainer	8	8	8	8	8		8		8	
-M-											
161A148	† *Magneto - Includes Drive Gear - Less Stop Button (Use #161C238)	1	1	1	1	1		1		1	
161C238	*Magneto - Includes Drive Gear - Less Stop Button									1	
155C352	† Manifold, Exhaust	1	1	1	1	1		1		1	
154D253	Manifold, Intake - For 5CW Models and X-Ray Models only	1	1								
154A266	† Manifold, Intake - NOT used on 5CW Models or X-Ray Models ..	1	1								
154D314	Manifold, Intake - For 5CW Models and X-Ray Models only			1	1	1		1		1	
154D315	† Manifold, Intake - NOT used on 5CW Models and X-Ray Models ..			1	1	1		1		1	
191P86	Motor, Starting - 6 Volt - Autolite Model #MZ-4178 (Magnet use Plants only) NOTE: For Component Parts see note below		1		1	1		1		1	
191P77	▲Motor, Starting - 6 Volt - Autolite Model #MCC-6007 - NOTE: For Component Parts see note below										
191B7	▲Motor Starting - 12 Volt, Autolite Model #MAY-4147 - NOTE: For Component Parts See note below										
155B77	Muffler, Exhaust	1	1	1	1	1		1		1	
155B735	† Muffler, Exhaust - Plants with OPTIONAL Weatherproof Housing Only (Replaces #155B389 and #155B269)										
-N-											
505-135	Nipple, Half - Gas Regulator Outlet (Plants with OPTIONAL Gas Regulator only		1		1	1		1		1	
505-101	Nipple, Pipe - 3/8 x 1" - Plants with OPTIONAL Garretson Gas Regulator Begin Serial #573571					1		1		1	
† - Used also on Industrial Engines. ▲ - Used only on Industrial Engines. * - Refer to Accessory Section for Component Parts. NOTE: For Component Parts contact your nearest Autolite Dealer giving Autolite Model No.											

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
166-105	Nipple, Spark Plug	2	2	2	2		2		2		2
868-3	Nut, Carburetor Stud	2	2	2	2		2		2		2
104A91	▲ Nut, Carburetor Stud - 2 Used										
110A707	† Nut, Cylinder Base Mounting - 1/2" - 20 (Hardened)	8	8	8	8		8		8		8
104A91	† Nut, Cylinder Base Mounting - 3/8" - 24 (Hardened)	2	2	2	2		2		2		2
150A398	† Nut, Governor Speed Adjusting	1	1	1	1		1		1		1
167A57	† Nut, Magneto Coupling - Spark Plug Cable	2	2	2	2		2		2		2
870-111	Nut, Speed Grip - Air Outlet Adapter Mounting (1/4" - 20 thin)	2	2	2	2		2		2		2
870-114	Nut, Speed Grip - Front Panel Mounting (5/16" - 18)	4	4	4	4		4		4		4
870-110	Nut, Speed Grip - Air Outlet Adapter Mounting (1/4" - 20 thick) ...	2	2	2	2		2		2		2
865-6	† Nut, Wing - Air Cleaner			2	2		2				
-P-											
134E999	† Panel, Blower Housing Front (Replaces #134E408)	1	1	1	1		1		1		1
150A435	† Pin, Camshaft Center	1	1	1	1		1		1		1
516-27	Pin, Choke Shaft Knob		1		1		1				
516-59	Pin, Cotter - Choke Lever Swivel - Included in Lever Assy. # 145A60	1									
516-39	† Pin, Cotter - 3/32 x 5/8" - Governor Booster (Not used on 5CW) .	1	1	1	1		1		1		1
516A11	† Pin, Dowel - Crank Support	1	1	1	1						
516A72	† Pin, Lock - Main Bearing (NOTE: 2 only used Prior to Spec "J") .	2	2	2	2		2		4		4
112A54	† Pin, Piston	2	2	2	2		2		2		2
516A116	† Pin, Roll - Crank Guide Pilot (Replaces #516A88)	2	2	2	2		2		2		2
516-85	† Pin, Roll - 3/32 x 3/4" - Governor Booster (Not used on 5CW) ...	1	1	1	1		1		1		1
516-90	† Pin, Stop - Governor Cup Engaging	1	1	1	1		1		1		1
505-268	† Pipe, Oil Drain - 3/4" x 9"	1	1	1	1		1		1		1
112-90	† Piston and Pin - Specify: Std. or .010", .020", .030", .040 Over- size (Replaces 112-55)	2	2	2	2		2		2		2
120A222	† Piston, Valve - Oil By-Pass	1	1	1	1		1		1		1
150A413	† Plate, Back - Governor Ball	1	1	1	1		1		1		1
134B398	† Plate, Baffle - Left Hand Cylinder	1	1	1	1		1		1		1
134B399	† Plate, Baffle - Right Hand Cylinder	1	1	1	1		1		1		1
101A154	Plate, Cover - Flywheel Housing Opening	1	1								
192B266	† Plate, Crank Support - Use began with Spec "C" and discontinued during Spec "G"			1	1		1		1		
150A666	† Plate, Governor Booster Diaphragm (Not used on 5CW) Replaces #150A373	1	1	1	1		1		1		1

† - Used also on Industrial Engines.

▲ - Used only on Industrial Engines.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
101C67	† Plate, Rear Main Bearing - Less Bearing and Pin - Prior to Spec "E"	1	1	1	1	1					
101C268	† Plate, Rear Main Bearing - Less Bearing and Pin - Begin with Spec "E"					1		1		1	
517-9	† Plug, Button - Air Cleaner			1	1	1					
517-9	† Plug, Button - Pre-Heater Tube Air Outlet	1	1	1	1	1		1		1	
517-48	† Plug, Expansion - Rear Camshaft Bearing Opening (Replaces # 517-18)	1	1	1	1	1		1		1	
505-130	† Plug, Oil Drain - 3/4	1	1	1	1	1		1		1	
505-274	† Plug, Pipe - Countersunk Head - Crankcase	4	4	4	4	4		4		4	
505-57	Plug, Pipe - 1/8 - Gas Regulator - Plants with OPTIONAL Gas Regulator only	1	1		1	1		1		1	
505-130	Plug, Pipe - 3/4 - Gas Regulator - Plants with OPTIONAL Garretson Regulator with 2 outlets only										
167-34	† Plug, Spark (Replaces #167-35)	2	2	2	2	2		2		2	
512P25	Point Set, Magneto - See Magneto										
512P25	Pulley, Charge Generator (Magnet Use Plants only)		1		1	1		1		1	
149C405	† *Pump, Fuel - Blaking Mfr. (Use Pump #149D693)	x	x								
149C559	*Pump, Fuel - ONAN Mfr. (Use Pump #149D693)	x	x								
149D693	† *Pump, Fuel - ONAN Mfr. (Replaces #149C405 and #149C559) ...	1	1								
149C530	† *Pump, Fuel - AC Mfr.			1							
149C532	*Pump, Fuel - Carter Mfr. - Used Prior to Serial #508834 (Use Pump #149C567)				1						
149C567	† *Pump, Fuel - AC Mfr. (Replaces Carter Pump #149C532)				1	1		1		1	
120A279	† Pump, Oil	1	1	1	1	1		1		1	
-R-											
148A428	Regulator, Gas Pressure (Ensign Mfr.) OPTIONAL - Prior to Serial #573571 (Replaces 148-9)	1	1	1	1	1					
148C311	Regulator, Gas Pressure (Garretson Mfr.) OPTIONAL - Begin Serial #573571										
141-563	† Repair Kit, Carburetor	1	1	1	1	1		1		1	
149K526	† Repair Kit, Fuel Pump	1	1								
149K106	† Repair Kit, Fuel Pump (AC Mfr. Pump only)			1	1	1		1		1	
141P590	† Repair Kit, Needle Bearing - Carburetor Throttle Body - Includes Seal and Washer	1	1	1	1	1		1		1	
110A648	† Retainer, Valve Spring	4	4	4	4	4		4		4	

† - Used also on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

x - Indicates period of usage only.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
150A425	† Ring, Gasket - Booster to Manifold (Not used on 5CW)	1	1	1	1		1		1		1
518-16	† Ring, Lock - Crankshaft Gear Washer	1	1	1	1	1		1		1	
112A19	† Ring, Lock - Piston Pin	4	4	4	4	4		4		4	
113-105	† Ring Set, Piston - For 1 Piston - Specify: Standard or .010", .020", .030", .040" Oversize (Sold only as a Set) (Replaces 113-59)	2	2	2	2	2		2		2	
150P437	† Ring, Snap - Camshaft Center Pin	1	1	1	1	1		1		1	
141A497	† Rod, Choke Control - Gasoline Carburetor	1		1							
114B64	† Rod, Connecting - Less Bearings	2	2	2	2	2		2		2	
149A519	† Rod, Push - Fuel Pump Adapter			1	1	1		1		1	
-S-											
150A438	† Screw, Adjusting - Governor Sensitivity	1	1	1	1	1		1		1	
114A57	† Screw, Connecting Rod - Use Bolt #805-20										
518-56	Screw, Cover Retaining - Air Cleaner							2		2	
800-75	† Screw, Crank Dog Mounting - Begin Spec "C" (Replaces #806-38)			1	1	1		1		1	
120A224	† Screw, Guide - Oil By-Pass (Replaces #120A380)	1	1	1	1	1		1		1	
800-52	Screw, Hex Head - Carburetor to Manifold (3/8 - 16 x 1 - 1/2) Begin Spec F					2		2		2	
110A814	† Screw, Hex Head - Cylinder Head Mounting - Hardened (3/8" - 24 x 2") Replaces Stud Used during Spec "A"	8	8	8	8	8		8		8	
110A815	† Screw, Hex Head - Cylinder Head Mounting - Hardened (3/8" - 24 x 2") Replaces Stud Used during Spec "A"	10	10	10	10	10		10		10	
120A182	† Screw, Shoulder - Oil Pump Mounting	1	1	1	1	1		1		1	
134D396	† Scroll, Blower Housing	1	1	1	1	1		1		1	
509-19	† Seal, Oil - Crankshaft Front	1	1	1	1	1		1		1	
509P64	† Seal, Oil - Crankshaft Rear (Replaces #509-17 or #509A48)	1	1	1	1	1		1		1	
509-46	† Seal, Oil - Governor Shaft	1	1	1	1	1		1		1	
167A41	† Shield, Spark Plug	2	2	2	2	2		2		2	
134B437	† Shroud, Cylinder - Left Hand - Includes Fasteners	1	1								
134B438	† Shroud, Cylinder - Right Hand - Includes Fasteners	1	1								
134D458	† Shroud, Cylinder - Left Hand			1	1	1		1		1	
134D459	Shroud, Cylinder - Right Hand - AC Plants only			1	1	1		1		1	
134D576	Shroud, Cylinder - Right Hand - Magnet Use Plants only				1	1		1		1	
134D532	▲ Shroud, Cylinder - Right Hand - Spec "B" Thru "E"										
134D576	▲ Shroud, Cylinder - Right Hand - Begin Spec "J"										
134C892	*Shutter, Automatic - Air Discharge - OPTIONAL Accessory (Re- places #134C630 or #134C884)										
149A520	† Spacer, Fuel Pump Adapter Mounting			1	1	1		1		1	

† - Used also on Industrial Engines.

▲ - Used only on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
149A388	† Spacer, Fuel Pump Mounting	1	1								
150C417	† Spacer, Governor Ball	1	1	1	1	1		1		1	
150A115	† Spring, Governor	1	1	1	1	1		1		1	
150A471	Spring, Governor Booster - External (Not used on 5CW Models or X-Ray Models)	1	1	1	1	1		1		1	
150A475	† Spring, Governor Booster - Internal (Not used on 5CW Models or X-Ray Models)	1	1	1	1	1		1		1	
120A221	† Spring, Oil By-Pass (Replaces #120A270)	1	1	1	1	1		1		1	
110A738	† Spring, Valve (Replaces #110A649)	4	4	4	4	4		4		4	
149-558	Strainer, Gas Fuel - Plants with OPTIONAL Gas Fuel Carburetor only		1		1	1		1		1	
520A75	† Stud, Air Cleaner Cover - Dry Type			2	2	2					
520A451	† Stud, Blower Wheel and Support - Prior to Spec "C" Models only ..	1	1	1	1						
520A311	Stud, Carburetor to Manifold (To Spec F - Begin Spec F See Screw)	2	2	2	2	2					
520A118	▲ Stud, Carburetor to Manifold - 2 Used										
520A431	† Stud, Cylinder Base - 1/2" x 2-5/16"	8	8	8	8	8		8		8	
520A434	† Stud, Cylinder Base - 3/8" x 1-13/16"	2	2	2	2	2		2		2	
520A11	† Stud, Exhaust Manifold - 5/16" x 1-7/16"	4	4	4	4	4		4		4	
520A118	† Stud, Flywheel Housing - 3/8" - 24 x 1-1/2"	6	6								
520A9	† Stud, Gear Cover - 5/16" x 1-7/8"	6	6								
520A11	† Stud, Gear Cover - 5/16" x 1-7/16"			1	1	1		1		1	
520A363	† Stud, Governor Arm Cover Mounting	1	1								
150A96	† Stud, Governor Spring Tension (Speed)	1	1	1	1	1		1		1	
520A432	† Stud, Oil Base - 7/16" x 3-1/16"	2	2								
520A433	† Stud, Oil Base - 7/16" x 2-1/8"	2	2								
520A11	† Stud, Rear Bearing Plate - 5/16" x 1-7/16" (Begin Spec "E" See "Bolt")	8	8	8	8						
520A404	† Stud, Starter Motor - 7/16" - Magnet use Plants only (Replaces #800-73 Capscrew) NOTE: #867-4 Nut required with Stud		2		2	2		2		2	
192B193	† Support Guide, Crank - Includes Dowel Pins - Prior to Spec "C" Models only	1	1	1	1						
309-10	Switch, Low Oil Pressure Cut-Off (OPTIONAL)	1	1	1	1	1		1		1	
308-97	Switch, Momentary Contact - Used on Plants with OPTIONAL Low Oil Pressure Cut-Off Switch (Replaces #308-37)	1	1	1	1	1		1		1	
308A165	Switch, Remote Control Start - Stop (AC Plants only) (Replaces #308A94)		1		1	1		1		1	
307B40	▲ Switch, Start Solenoid (Replaces #307-29)										
142-113	† Swivel, Choke Lever - Included in Lever Assembly #145A60	1									

† - Used also on Industrial Engines.

▲ - Used only on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
-T-											
159A424	*Tank Assembly, Reservoir (Day) OPTIONAL	1	1								
159A472	*Tank Assembly, Reservoir (Day) OPTIONAL			1	1	1		1		1	
415A126	Tank, Fuel - 5Gallon - Less Valve (Replaces all previously used separate 5 gallon Tanks)	1	1	1	1	1		1		1	
115A34	† Tappet, Valve - Includes Adjusting Screw	4	4	4	4	4		4		4	
502-57	† Tee, Oil Filter Inlet	1	1	1	1	1		1		1	
502-58	Tee, Special Brass Pipe - Use with OPTIONAL Low Oil Pressure Cut-Off Switch	1	1	1	1	1		1		1	
309-29	Thermostat, Oil Heater Control - For Plants with OPTIONAL Oil Base Heater										
133A32	† Tube, Air Pre-Heater	1	1	2	2	2		2		2	
123A445	† Tube, Breather			1	1	1		1		1	
155B492	Tube, Exhaust Flexible	1	1	1	1	1		1		1	
123C402	† Tube, Oil Fill	1	1								
123A437	† Tube, Oil Fill			1	1	1		1		1	
-V-											
123A315	† Valve, Breather (NOTE: Located in Breather Housing during Spec "A", Location Changed to Separate Breather Tube Begin Spec "B")	1	1	1	1	1		1		1	
110B642	† Valve, Exhaust - Stellite Faced	2	2	2	2	2		2		2	
110B643	† Valve, Intake	2	2	2	2	2		2		2	
504A13	Valve, Shut-Off - Fuel Tank (Not used on Tanks W/Rain Cap) ...	1	1	1	1	1		1		1	
307P312	Valve, Solenoid - Plants with OPTIONAL Gas Fuel Carburetor only.		1		1	1		1		1	
148A107	Vent, Gas Regulator - Plants with OPTIONAL Garretson Gas Reg- ulator only Begin Serial #573571					1		1		1	
-W-											
526-153	† Washer, Copper - Oil By-Pass (Replaces #526-69)	1	1	1	1	1		1		1	
526-63	† Washer, Copper - Valve Cover Screw - 1/4"	2	2	2	2	2		2		2	
104A365	† Washer and Slinger, Crankshaft Gear (Replaces #104A95)	1	1	1	1	1		1		1	
104B432	† Washer, Crankshaft Thrust - Begin Spec "J" (Included in Kit # 101K341) - Not used with Flange Type Bearing									2	
526A127	† Washer, Cylinder Head Mounting	18	18	18	18	18		18		18	
104A160	† Washer, Flywheel	1	1	1	1	1		1		1	
114A20	† Washer, Lock - Connecting Rod Screw - See Bolt #805-20										
† - Used also on Industrial Engines. * - Refer to Accessory Section for Component Parts.											

† - Used also on Industrial Engines.

* - Refer to Accessory Section for Component Parts.

PART NUMBER	DESCRIPTION	SPEC. A		SPEC. B - C		SPEC. E - F		SPEC. G - H - J		SPEC. K - L	
		M	R	M	R	M	R	M	R	M	R
526A124	† Washer, Plant Mounting Cushion	8	8	8	8		8		8		8
105A42	† Washer, Thrust - Camshaft Gear	1	1	1	1		1		1		1
134C388	† Wheel, Blower	1	1	1	1		1		1		1
	-Y-										
150A444	† Yoke, Governor Shaft	1	1	1	1		1		1		1

† - Used also on Industrial Engines.

BLANK PAGE

ACCESSORY SECTION

ACCESSORY SECTION

1

CONTAINS THE FOLLOWING-

COMPONENT PARTS FOR THESE ASSEMBLIES:

CARBURETORS

FUEL PUMPS

MAGNETOS

RESERVOIR FUEL TANKS

TRAILERS

▲ HOUSINGS - WEATHERPROOF

▲ MOUNTING SKID KITS

FUEL TANK KIT - SKID MOUNTED

BATTERY AND FUEL TANK RACK KIT

▲ - SPEC "E" MODELS ONLY. Regardless of the Assembly number listed in the Model Data Section, see the explanation of this symbol (▲) in the symbol explanation chart on the last page of this section.

ACCESSORY SECTION

CARBURETOR PARTS		ASSEMBLY NUMBERS												
		141C492	141C494	141C500	141C519	141C560	141C562	141C564	141C607	141C621	141C622	141C655	141C656	
PART NUMBER	DESCRIPTION													
141A502	Adapter or Lock, Automatic Choke	1	1							1				
148B197	Adapter, Gas Fuel	1	1	1	1	1				1	1			
153A214	Arm, Choke Shaft								1	1	1			
141-72	*Axle, Float (Replaces #141-206)	1	1	1	1	1	1	1	1	1	1	1		
141-530	Body, Air Intake - Includes Choke Shaft Bushing	1	1	1	1	1	1	1	1	1				
141-666	Body, Air Intake - Includes Choke Shaft Bushing										1	1		
141B585	Body, Throttle - Includes Shaft, Plate and Needle Bearings	1	1	1	1	1	1	1	1	1				
141-538	Bowl, Fuel	1	1	1	1	1	1	1	1	1	1	1		
153A47	Bracket Assembly, Automatic Choke	X	X											
141A496	Bracket, Manual Choke			X										
141-531	Bushing, Choke Shaft - Included in #141-530	1	1	1	1	1	1	1	1	1	1	1		
141-540	*Bushing, Idle Channel - Included in #141-538	1	1	1	1	1	1	1	1	1	1	1		
153A161	Choke Assembly, Automatic	X	X											
153A162	Cover Assy. Auto. Choke - Included in #153A161	X	X											
153-57	Element, Auto. Choke Bi-Metal - Included in #153A47	X	X											
141-566	Filter, Fuel Inlet	1	1	1	1	1	1	1	1	1	1	1		
141A493	Float	1	1	1						1				
141-535	Float				1		1	1	1		1	1		
141-545	†Gasket, Bowl to Throttle Body	1	1	1	1	1	1	1	1	1	1	1		

NOTE: FOR EXPLANATION OF SYMBOLS, SEE LAST PAGE OF CARBURETOR PARTS.

ACCESSORY SECTION

3

		ASSEMBLY NUMBERS													
CARBURETOR PARTS		□	■	§	▲	†	•	★	⊠	⊙	⊞	⊠	⊙	⊞	⊠
PART NUMBER	DESCRIPTION	141C492	141C494	141C500	141C519	141C560	141C562	141C564	141C607	141C621	141C622	141C655	141C656		
148A17	Gasket, Float Lock	1	1	1						1					
148A198	Gasket, Gas Adapter to														
	Carburetor Body	1	1		1	1				1	1				
141-536	†Gasket, Intake to Bowl	1	1	1	1	1	1	1	1	1	1	1			
141-529	*Gasket Kit - Includes parts														
	marked †	1	1	1	1	1	1	1	1	1	1	1			
154A133	*Gasket, Mounting	1	1	1	1	1	1	1	1	1	1	1			
153A58	Housing, Automatic Choke Bi-														
	Metal - Included in #153A47	X	X												
141-553	Jet and Adjusting Needle As-														
	sembly, Main	1	1	1	1	1	1	1	1	1	1	1			
141-541	Jet, Blank - Accelerator (In-														
	cluded in #141-538)	1	1	1	1	1	1	1	1	1	1	1			
141-555	Jet, Discharge	1	1	1	1	1	1	1	1	1	1	1			
141-554	*Jet, Idle	1	1	1	1	1	1	1	1	1	1	1			
141-556	*Jet, Well Vent	1	1	1	1	1	1		1	1	1	1			
141-605	Jet, Well Vent							1							
141A372	Knob, Choke Shaft	X	X												
145A60	Lever and Swivel - Choke Shaft			X											
141-584	Lever, Throttle Clamp	1	1	1	1	1	1	1	1	1	1	1			
148A135	Lock Assembly, Float	1	1	1						1					
141P590	Needle Bearing Kit, Throttle														
	Body - Includes Bearings, Seal														
	and Washers	1	1	1	1	1	1	1	1	1	1	1			
141-8	*Needle, Idle Adjusting	1	1	1	1	1	1	1	1	1	1	1			
516-27	Pin, Choke Shaft Knob	X	X												
141A532	Plate, Choke	1	1	1		1		1	1	1					
141-667	Plate, Choke										1	1			
141-551	Plate, Throttle	1	1	1	1	1	1	1	1	1	1	1			
141-543	Plug, Accelerator Pump Rod														

NOTE: FOR EXPLANATION OF SYMBOLS, SEE LAST PAGE OF CARBURETOR PARTS.

ACCESSORY SECTION

CARBURETOR PARTS

PART NUMBER	DESCRIPTION	ASSEMBLY NUMBERS											
		141C492	141C494	141C500	141C519	141C560	141C562	141C564	141C607	141C621	141C622	141C655	141C656
	Channel - Included in #141-538	1	1	1	1	1	1	1	1	1	1	1	
141-70	Plug, Bowl Drain	1	1	1	1	1	1	1	1	1	1	1	
517A10	Plug, Brass - Choke Shaft												
	Holes				2	2							
141-533	Plug, Fuel Inlet Filter Head	1	1	1	1	1	1	1	1	1	1	1	
141-542	Plug, Jet Channel - Accelerator (Included in #141-538)	1	1	1	1	1	1	1	1	1	1	1	
141-539	*Plug, Lead - Bowl Passages (Included in #141-538)	4	4	4	4	4	4	4	4	4	4	4	
505-8	Plug, Pipe - 1/8				1	1							
141-544	Plug, Power Jet Channel	1	1	1	1	1	1	1	1	1			
141P563	Repair Kit - Includes parts marked *	1	1	1		1	1	1	1	1	1	1	
141A497	Rod, Manual Choke			X									
141-546	*Screw, Body to Bowl	2	2	2	2	2	2	2	2	2	2	2	
141-471	*Screw, Choke Plate	2	2	2	2	2	2	2	2	2	2	2	
141-537	*Screw, Intake to Bowl (2 only in Kit)	6	6	6	6	6	6	6	6	6	6	6	
141-2	Screw, Throttle Lever Champ	1	1	1	1	1	1	1	1	1	1	1	
141-259	Screw, Throttle Lever Stop	1	1	1	1	1	1	1	1	1	1	1	
810-41	*Screw, Throttle Plate	2	2	2	2	2	2	2	2	2	2	2	
141K586	Shaft and Lever Kit, Throttle-												
	Includes Stop Screw	1	1	1	1	1	1	1	1	1	1	1	
141A478	Shaft, Choke	1	1	1		1	1	1					
141-624	Shaft, Choke									1	1	1	
141A501	Spring, Choke Stop	1	1								1	1	
141-9	Spring, Idle Needle	1	1	1	1	1	1	1	1	1	1	1	
141-323	*Valve, Fuel Inlet	1	1	1		1		1	1	1	1	1	
504-7	Valve, Gasoline Shut off	1	1								1	1	
148A195	Venturi	1				1							

NOTE: FOR EXPLANATION OF SYMBOLS, SEE LAST PAGE OF CARBURETOR PARTS.

5

ASSEMBLY NUMBERS

EXPLANATION OF SYMBOLS

- - Optional Gas-Gasoline Carburetor, used on Remote Start 5CW Plants.
- - Optional Gas-Gasoline Carburetor, used on Remote Start Plants other than 5CW (Prior to Spec F).
- ⊠ - Optional Gas-Gasoline Carburetor, used on Remote Start Plants - Begin Spec F.
- ⊞ - Optional Gas-Gasoline Carburetor, used on Remote Start Plants - Begin Spec L.
- § - Optional Gas-Gasoline Carburetor, used on Manual Start 10CW Plants.
- ▲ - Optional Gas Fuel Carburetor, used on Remote Start Plants other than 5CW.
- - Optional Gas Fuel Carburetor, used on Remote Start 5CW Plants.
- † - Standard Gasoline Carburetor, used on Manual or Remote Start 5CW Plants.
- ★ - Standard Gasoline Carburetor, used on Manual (or Remote Start - Prior to Spec F) Plants other than 5CW.
- ⊙ - Standard Gasoline Carburetor, used on Remote Start AC Plants - Begin Spec F.
- ⊗ - Standard Gasoline Carburetor, used on Remote Start AC Plants - Begin Spec L.
- * - Parts included in Repair Kit #141-563.
- † - Parts included in Gasket Kit #141-529.
- X - These parts are included in the assembly under which the symbol is listed, but are also used with some other carburetors as well. For the usage of these parts with other carburetors, see the listing in the Engine Section.
- ⊠ - Standard Gasoline Carburetor used on Industrial Engines.

ACCESSORY SECTION

FUEL PUMP PARTS

ASSEMBLY NUMBERS

PART NUMBER	DESCRIPTION	149C405	149C530	149C532	149C559	149C567	149D693						
149-710	Arm and Link Set, Rocker - Sold only as a Set												
	(Replaces previously used Arm and Link)	1			1		1						
149P581	Arm, Rocker		1			1							
149P573	Bail, Bowl Retainer		1			1							
	Body, Upper or Lower (Not Sold Separately -												
	Order Complete Pump	1	1		1	1	1						
149A481	Bowl, Glass		1			1							
149P577	Bushing, Rocker Arm Pin		1			1							
149A582	*Diaphragm and Pull Rod	1			1		1						
149P276	†Diaphragm and Pull Rod		1			1							
149A275	†Gasket, Bowl		1			1							
149A3	*Gasket, Pump and Spacer Mounting	2			2		2						
149A277	†Gasket, Mounting		1			1							
149A95	▲Gasket, Valve	2	2		2	2	2						
149A159	*Gasket, Valve Retainer	2											
	Lever, Hand Primer (Not Sold Separately)	1	1										
149A551	Lever, Hand Primer				1		1						
149P579	Link, Rocker Arm		1			1							
516A113	Pin, Rocker Arm (Replaces #516A25)	1			1		1						
149P578	Pin, Rocker Arm		1			1							
149K526	Repair Kit (Includes parts marked * or ▲)	1			1		1						
149K106	Repair Kit (Includes parts marked † or ▲)		1			1							
149P575	Retainer, Valve and Cage		1			1							
149A539	Retainer, Valve and Cage (Replaces #149A84)	1			1		1						
518-129	Ring, Retainer - Primer Lever				1		1						
149P483	Screen, Bowl		1			1							
509-65	Seal, "O" Ring - Hand Primer				2		2						
149A672	Spring, Diaphragm (Replaces #149A93)	1			1		1						
149P576	Spring, Diaphragm		1			1							
149A404	Spring, Primer Lever				1		1						

NOTE: FOR EXPLANATION OF SYMBOLS, SEE NEXT PAGE.

ACCESSORY SECTION

7

FUEL PUMP PARTS (CONT.)

ASSEMBLY NUMBERS

PART NUMBER	DESCRIPTION	149C405 ☒	149C530 †	149C532 ★	149C559 •	149C567 §	149D693 □				
149A675	Spring, Rocker Arm (Replaces #149A94)	1			1		1				
149P580	Spring, Rocker Arm		1			1					
149A96	▲Valve and Cage	2	2		2	2	2				

EXPLANATION OF SYMBOLS

- ☒ - Blaking Mfr. Pump (W/Priming Lever) used on some Spec "A" Plants. For complete assembly use ONAN Pump #149D693.
- † - AC Mfr. Pump (W/Priming Lever) used on Manual Start Plants, Begin with Spec "B".
- ★ - Carter Mfr. Pump. Used only on Remote Start Spec "B" Plants prior to Serial #508834. No part available for this pump. For Complete Pump Assembly, Use AC Pump #149C567.
- - ONAN Mfr. Pump (W/Priming Lever) used on Spec "A" Plants. (For Complete Pump Assembly, Use ONAN Pump #149D693.
- § - AC Mfr. Pump. Used on Remote Start Plants Begin with Serial #508834.
- * - Included in Repair Kit #149K526.
- † - Included in Repair Kit #149K106.
- ▲ - Included in Repair Kits #149K526 and #149K106.
- - ONAN Mfr. Pump - (With Primer Lever).

ASSEMBLY NUMBERS

[illegible][illegible]

ACCESSORY SECTION

9

MAGNETO PARTS

NOTE: Number Shown Is Manufacturer's Number. Order Parts By This Number From Your Local FAIRBANKS-MORSE Dealer.

PART NUMBER	DESCRIPTION	ASSEMBLY NUMBERS									
		161A148	161C238								
161-242	Point Set, Contact (Q2437A)		1								
161-18	Ring, Snap - Rotor Drive End Bearing (B1498B)	1									
161-19	Ring, Snap - Rotor Drive End Shaft (C1498D)	1	1								
161-169	Rotor Assembly (GV2480)	1									
161P212	Rotor Assembly (XS2480)		1								
161P221	Screen, Vent (C6032B)	1	1								
814-77	Screw, Bearing Support (8S6G)	4	4								
161P225	Screw & Lockwasher, Brkr. Arm Term. (8S6U)	1									
161P223	Screw & Lockwasher, Brkr. Arm Term. (6S6U)		1								
161P225	Screw & Lockwasher, Contact Support Locking (8S6U)	2									
161P231	Screw & Lockwasher, Contact Support Locking (8S5U)		2								
812-61	Screw, Cam Wick	1									
161P225	Screw, Condenser Mounting (8S6U)	1									
161P224	Screw, Condenser Mounting (8S4U)		1								
161-35	Screw, Contact Support Adjusting (C2455)	1									
161P231	Screw, Contact Support Adjusting (8S5U)		1								
161-120	Screw, End Cap (10S10D)	4	4								
161-244	Screw, Rotor Dr. End Bearing Washer (8S6N)		1								
161P220	Screw, Vent Cover (6S4L)	1	1								
161-62	Seal, Rotor Drive End (G3861)	1	1								
161-239	Setscrew, Coil Bridge (25SS12A)	2									
161P226	Setscrew, Coil Bridge (31SS12B)		2								
161-175	Shell, Impulse Coupling (DY5957)	1									
161-131	Shell, Impulse Coupling (DX5957)		1								
161-56	Shim, Drive End Seal - Use as Required (C2723)										
161-113	Spacer, Cam Wick (A2982)	1									
161-186	Spring, Coil Lead (B3967)	2	2								
161-136	Spring, Ground Switch (D2513A)	1	1								

ASSEMBLY NUMBERS

161A148

161C238

11

* Vent Cap and Bracket are not Included in Fuel Tank Assembly

ACCESSORY SECTION

TRAILER PARTS (OPTIONAL EQUIPMENT)

ASSEMBLY NUMBERS

PART NUMBER	DESCRIPTION	ASSEMBLY NUMBERS									
		410K200 *	410D211 †	410K256 ▲	410K257 ⚡	410K271 ★					
410P188	Axle, Spring and Hub Assembly - "Straight										
	type" Axle	1	1								
410P260	Axle, Spring and Hub Assembly - "Drop type"										
	Axle			1	1						
410P228	Bolt and Nut Assembly - Wire Sling Guide -										
	Included in #410P227		4								
410P192	Bolt, Shackle - Front	2	2	2	2						
410A213	Bolt, Trailer Stand	1	1								
410A148	Bolt, "U" - Safety Wire Sling Mounting		2								
410A199	Brace, Fender	2	2								
322-62	Bracket, Licence (If required)		1								
410P191	Bracket, Spring - Front	2	2								
410P264	Bracket, Spring - Front			2	2						
410P190	Bracket, Spring - Rear	2	2	2	2						
508P62	Bumper, Rubber (For Housing and Stand)	2	2								
410P196	Cap, Hub	2	2	2	2						
410A270	Clamp, Fender Support					2					
232-153	Clip, Wire - Tailight wire retaining		3								
410P229	Deadstand - Adjustable		1								
410P189	Drawbar and Support	1	†								
410P261	Drawbar and Support			1	1						
410P220	Eye, Towing - Blank		1								
410B198	Fender	2	2								
410B268	Fender					2					
410P194	Fitting, Grease - Shackle Bolt	2	2	2	2						
410A212	Nut, Trailer Stand	1	1								
516-115	Pin, Cotter - Rear Shackle Rivet	4	4	4	4						
410A230	Plate, Spacer - Steel - Towing Eye Mounting		2								
308-87	Plate, Toggle Switch (On-Off) Rear Housing										
	Panel		1								

NOTE: FOR EXPLANATION OF SYMBOLS, SEE NEXT PAGE.

ACCESSORY SECTION

13

TRAILER PARTS (OPTIONAL EQUIPMENT)

PART NUMBER	DESCRIPTION	ASSEMBLY NUMBERS									
		410K200 *	410D211 †	410K256 ▲	410K257 §	410K271 ★					
322P56	Reflector, Red - Rear Housing Panel		2								
410P193	Rivet, Shackle - Rear	2	2	2	2						
410P227	Sling, Safety Wire		2								
410C214	Stand, Trailer - Rear	1	1								
520-249	Stud, Stand Nut Handle	1	1								
410C269	Support, Fender				2						
308-7	Switch, Toggle - Rear Housing Panel		1								
322-61	Tailight - If Licence Bracket is Used		1								
322P55	Tailight - If <u>No</u> Licence Bracket is Used		1								
410-132	Tire - 6.00 x 16 - Included in #410A197	2	2								
410-258	Tire - 5.90 x 15 - Included in #410-267			2							
410-131	Tube, Inner - 6.00 x 16 - Included in #410A197	2	2								
410-259	Tube, Inner - 5.90 x 15 - Included in #410-267			2							
410P195	Wheel - 16" - Included in #410A197	2	2								
410P263	Wheel - 15" - Included in #410P267			2	2						
410A197	Wheel and Tire Assembly - 6.00 x 16	2	2								
410P267	Wheel and Tire Assembly - 5.90 x 15			2							

EXPLANATION OF SYMBOLS:

NOTE: Assembly Numbers listed include parts indicated plus hardware.

* - #410K200 trailer is obsolete as an assembly. Use either #410K256 or #410K257.

† - #410D211 trailer used on Michigan Bell Telephone Co. Plants only. This very special assembly has the Drawbar welded to the Mounting Skid. No number has been assigned to this part for a spare parts sale.

▲ - #410K256 is the later type trailer (With Tires and Tubes). This assembly does NOT include any Fenders. If Fenders are required, use also Fender Kit #410K271.

§ - #410K257 is the later type trailer (Less Tires and Tubes). Otherwise identical to #410K256.

★ - #410K271 Trailer Fender Kit. To be used only with later type trailer assemblies #410K256 or #410K257.

ACCESSORY SECTION

MISCELLANEOUS ASSEMBLIES PARTS (OPTIONAL EQUIPMENT)

PART NUMBER	DESCRIPTION	ASSEMBLY NUMBERS								
		405K918 ^s	405K1078 ^s	405D914 [*]	405D1066 [†]	405D1146 [†]	403K319 [*]	403K474 [†]	159K478	416K334
405D914	*Housing Assembly, Weatherproof	1		X						
405D1066	† Housing Assembly, Weatherproof		▲	X						
405D1146	† Housing Assembly, Weatherproof				X					
405K918	§Kit, Complete - Includes Housing, Skid, Tank and Rack Kits	X								
405K1078	§Kit, Complete - Includes Housing, Skid, Tank and Rack Kits		X							
416K334	Rack Kit - Battery and Fuel Tank Mounting	1	1							X
134C892	Shutter, Automatic - Air Discharge									X
403K319	*Skid Kit, Mounting - Early Type	1				X				
403K474	† Skid Kit, Mounting - Later Type		▲			X				
159K478	Tank Kit, Fuel - Skid Mounted	1	1					X		
	• • •									
159B475	Band, Tank Mounting							2		
406A194	Bar, Door Latch - Right Hand Panel			1	1	1				
159A479	Block, Spacer - Tank Band							2		
406B190	Bracket, Top Adjusting Link			2	2	2				
134B660	Bracket, Vernatherm Mounting									1
508P62	Bumper, Rubber			3	3	3				
402A46	Bushing, Spacer - Plant Mounting - Included in #402A123 Mounting Assembly					4	4			
416A4	Cable, Battery Jumper								1	
159B20	Cap, Tank							1		
406P188	Catch, Hood			2	2	2				
405A903	Channel, Mounting - Middle and Battery End			2	2	2				
405A902	Channel, Mounting - Engine End			1	1	1				
405A1143	Cover, Engine Access - L.H.					1				
405A1144	Cover, Engine Access - R.H.					1				
192C268	Crank, Engine			1	1	1				
402A38	Cushion, Plant Mounting - Lower (Included in									

NOTE: FOR EXPLANATION OF SYMBOLS, SEE LAST PAGE OF MISCELLANEOUS PARTS

ACCESSORY SECTION

15

MISCELLANEOUS ASSEMBLIES PARTS (OPTIONAL EQUIPMENT)

ASSEMBLY NUMBERS

PART NUMBER	DESCRIPTION	405K918 ^{SN}	405K1078 ^{SN}	405D914 [*]	405D1066 [†]	405D1146 [†]	403K319 [*]	403K474 [†]	159K478	416K334	134C892
	#402A123 Mounting Assembly)					4	4				
402A36	Cushion, Plant Mounting - Upper (Included in #402A123 Mounting Assembly)					4	4				
502-20	Elbow, Street - Tank Outlet							1			
505-186	Elbow, Street - 1 1/4 x 90°										2
505-362	Elbow, Street - 1 1/4 x 45°										2
309P85	Element, Vernatherm										1
134D893	Extension, Air Discharge Adapter										1
406P3	Fastener, Hood			2	2	2					
416B331	Frame, Battery Hold Down								1		
406A100	Handle, Latch - Right Hand Housing Panel Door			1	1	1					
406A189	Hinge, Top Housing			3	3	3					
405D897	Housing, Top			1	1	1					
336A1090	Lead Assembly										1
501-16	Line, Flexible Fuel - 52"							1			
406A195	Link Assembly, Hinge - Top Housing			2	2	2					
402A123	Mounting Assembly, Plant - Includes Cushions, Spacer Bushing and Hardware					4	4				
155B269	Muffler, Exhaust					1	1				
405C899	Panel, Housing - L.H.			1							
405C1065	Panel, Housing - L.H. (Use #405C1141 and #405A1143)				▲						
405C1141	Panel, Housing - L.H. (W/opening for engine access)					1					
405B905	Panel - R.H. - Includes Panel Door and Frame			1							
405B1064	Panel - R.H. - Includes Panel Door and Frame (Use #405B1145 and #405A1144)				▲						
405B1145	Panel - R.H. - Includes Panel Door and Frame					1					
516-40	Pin, Cotter - Handle Retaining - R.H. Panel			1	1	1					
134C880	Plate, Vernatherm Mounting										1

NOTE: FOR EXPLANATION OF SYMBOLS, SEE LAST PAGE OF MISCELLANEOUS PARTS

