


# **Parts Catalog**

GGFD GGFE

# **Generator Set**

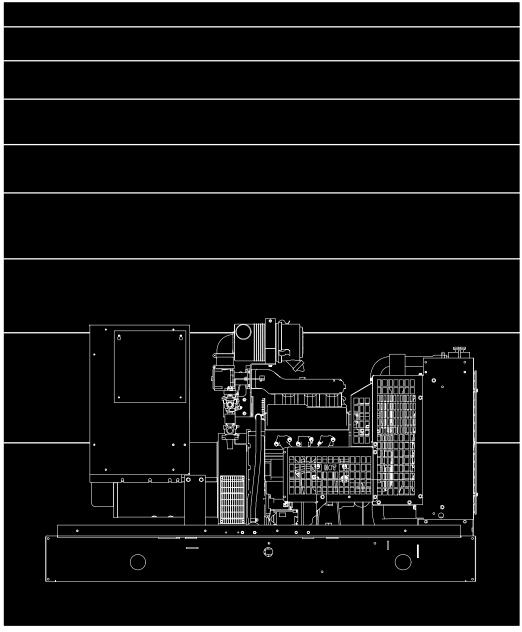

Printed in U.S.A.

928-0237 (Spec A) 9-2000

## MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE) SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

> This symbol warns of immediate hazards which will result in severe personal injury or death.

**A DANGER** 

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

## **PRODUCT SAFETY PRECAUTIONS**

#### 

Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUC-TIONS in the Service Manual appropriate for the equipment you are working on.

#### 

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

#### 

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

#### 

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

#### Introduction

This Parts Catalog applies to the standard generator models GGFD and GGFE as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding with the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or the page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine (front) of the set unless noted in the description column.

Engine parts that have been modified or added by Onan are identified in this catalog. All other Engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturers nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

#### **Replacement Engine**

Onan Generator Model	Ford Engine Model				
GGFD	ESG6421–6005–A				
GGFE	ESG6421–6005–A				

Replacement engines cannot be ordered from Onan. Order from your nearest Ford Distributor.

#### **Generator Set Data Table**

Model/ Specifica-		Battery Voltage				
tion	Watts	Volts	Hertz	Wire	Phase	voltage
35GGFD*	35,000	#	60	4,6,12	1 or 3	12 VDC
30GGFE*	30,000	#	50	4,6,12	1 or 3	12 VDC
35GGFE*	35,000	#	50	4,6,12	1 or 3	12 VDC
42GGFE*	42,000	#	60	4,6,12	1 or 3	12 VDC
47GGFE*	47,000	#	60	4,6,12	1 or 3	12 VDC

\* The specification number denotes customer requested options or deviations from the Standard model. The specification letter advances with major manufacturing changes.

# Broad Range Reconnectible.

#### Index

Adapter, Duct, 23 Adapter, Generator, 7, 45 Alarm, Common, 55 Alarm, Fuel, 8 Alternator, 36 Ammeter, AC - Detector Control, 49 Ammeter, Blank Scale - Emergency Stop Switch, 59 Armature, Starter, 35 Bearing, Starter (Commutator End), 35 Bearing, Starter (Pinion End), 35 Bell, End, 43 Bell, End - Generator, 45 Belt, Serpentine, 7 Block, Terminal - Detector Control, 49 Block, Terminal – Generator, 45 Block, Terminal - Generator Heater - Quiet Site, 41 Block, Terminal - Generator Heater - Standard, 40 Board, Printed Circuit - Alarm Relay, 54 Board, Printed Circuit - Common Alarm, 55 Board, Printed Circuit - Engine Monitor - Detector Control, 49 Board, Printed Circuit – Isolation Transformer, 53 Board, Printed Circuit - Sensor Board - Detector Control, 49 Board, Printed Circuit - Time Delay Start/Stop, 56 Box, Circuit Breaker, 61 Box, Control, 49 Box, Control - Control Housing, 39 Box, Entrance, 38 Box, Terminal - Generator Heater - Quiet Site, 41 Box, Terminal – Generator Heater – Standard, 40 Bracket, Mounting - Circuit Breaker Box , 61 Bracket, Mounting - Control, 39 Bracket, Mounting - Coolant Heater, 21 Bracket, Mounting - Generator Foot, 45 Breaker, Circuit, 62 Breaker, Circuit - Voltage Regulator, 53 Bulb, Replacement – Emergency Stop Switch, 59 Cable, Battery, 7 Cable, Heater - Control, 47 Carburetor. 9 Cartridge, Heater - Generator - Quiet Site, 41 Cartridge, Heater - Generator - Standard, 40 Cleaner, Air, 5 Clutch, Starter, 35 Control, Detector, 49 Cover, Circuit Breaker Box, 61 Cover, End Bell - PMG, 42 Cover, Housing - Control, 39 Cover, Stator - Generator, 45 Diode – Generator, 45 Disc, Drive - Generator, 45 Door, Control - Detector Control, 49 Drain, Oil, 22

Drain, Radiator, 27 Element, Replacement – Air Cleaner, 5 External Engine Parts, 7 Fan, Alternator, 36 Frame, Starter (Commutator End), 35 Fuel System – LP Liquid, 13 Fuel System – LP Vapor, 11 Fuel System – Natural Gas, 10 Fuel System - Natural Gas/LP Liquid, 15 Fuel System – Natural Gas/LP Vapor, 12 Fuse – Engine Monitor Board – Detector Control, 49 Gasket, Carburetor, 9 Gauge, Oil Pressure - Control Mounted - Detector Control, 49 Gauge, Water Temperature - Control Mounted - Detector Control, 49 Generator, 45 Governor, 37 Guard, Fan – Generator, 45 Harness, Wiring - AC Control, 50 Harness, Wiring - AC Control Door - Detector Control, 49 Harness, Wiring - Alarm Relay Board, 54 Harness, Wiring - Common Alarm, 55 Harness, Wiring – DC Control Door – Detector Control, 49 Harness, Wiring - Engine, 51 Harness, Wiring - Fuel Alarm, 8 Harness, Wiring - Ignition Module, 7 Harness, Wiring - Low Battery Voltage, 57 Harness, Wiring - Low Coolant Level - With Continuously Monitored Low Coolant Level, 19 Harness, Wiring - Low Coolant Level - Without Continuously Monitored Low Coolant Level, 20 Harness, Wiring - PMG, 42 Harness, Wiring - Terminal Block - Detector Control, 49 Harness, Wiring - Time Delay Start/Stop, 56 Harness, Wiring - Vacuum Switch, 52 Heater, Control, 47 Heater, Engine Coolant, 21 Heater, Generator - Quiet Site, 41 Housing, Control, 39 Housing, Generator Set - F172 Enclosure, 29 Housing, Generator Set - F173 Enclosure, 29 Housing, Generator Set - F182 Enclosure, 30 Housing, Starter, 35 Isolator, Vibration – Detector Control, 49 Key, Exciter Rotor - Generator, 45 Kit, Starter Brush, 35 Lead - Main Circuit Breaker, 62 Lens, Indicator, 57 Lens, Replacement - Low Coolant Level - With Continuously Monitored Low Coolant Level, 19

#### Index

Light Assembly, Indicator – Detector Control, Light, Indicator – Upper and Lower Scale – Detector Control, **49** Light, Panel – Detector Control, Lug, Solderless – Circuit Breaker Box , Lug, Solderless – Entrance Box, Meter, Frequency – Detector Control, Meter, Hour – Detector Control, Module, Ignition,

Muffler – Residential, **17** Muffler – Sound Attenuating Enclosure, **18** 

Paint, **4** Pan, Skid, Pickup, Magnetic – Governor, Pin, Parallel – PMG, Plate, Audible Signal, Potentiometer – Voltage Regulator,

Radiator, Radiator, Remote, Rectifier – Generator, Rectifier, Power – Control Heater, Rectifier, Silicon – Low Coolant Level – With Continuously Monitored Low Coolant Level, Regulator, Voltage, Resistor – Voltage Regulator, Rotor, Exciter – Generator, Rotor, Generator, Rotor, PMG,

Screen, Air Inlet - Generator, 45

Sealant, Thread, 4 Sender, Low Coolant Level - With Continuously Monitored Low Coolant Level, 19 Sender, Low Coolant Level – Without Continuously Monitored Low Coolant Level, 20 Sender, Oil Pressure, 7 Sender, Water Temperature, 7 Sensor, Low Battery, 57 Signal, Audible, 58 Skid, Housing Compatible, 32 Skid, Non-Housing Compatible, 33 Starter Components, 35 Stator, Exciter - Generator, 45 Stator, Generator, 46 Stator, PMG, 42 Strap, Ground – Detector Control, 49 Switch - Blank - Emergency Stop Switch, 59 Switch, Pushbutton - Emergency Stop, 59 Switch, Rocker - Lamp Test/Reset Panel Lamp - Detector Control, 49 Switch, Rocker - Run/Stop/Remote - Detector Control, 49 Switch, Rotary - Voltmeter/Ammeter - Detector Control, 49 Switch, Starter, 35 Switch, Vacuum, 52 Transformer, Current, 63 Tray, Battery, 34 Tube, Exhaust, 16 Valve, Shutoff - Oil Drain, 22 Valve, Shutoff - Radiator Drain, 27 Varistor - Generator, 45

Voltmeter, AC – Detector Control, **49** Voltmeter, DC – Detector Control, **49** 

#### Abbreviations


Some of the following abbreviations may be used throughout this Parts Catalog:

AC Amp	Alternating Current Ampere	mm MOH	Millimeter Mobile Off Highway
A/R	As Required	NFS	Not For Sale
AVR	Automatic Voltage Regulator	NPT	National Pipe Thread
AWG	American Wire Gauge	OD	Outside Diameter
Deg	Degree	OZ.	Ounce
DC	Direct Current	PMG	Permanent Magnet Generator
EFC	Electronic Fuel Control	Ph	Phase
ET	External Tooth	PC	Printed Circuit
EIT	External/Internal Tooth	RFI	Radio Frequency Interference
GFI	Ground Fault Interrupter	RT	Right
ID	Inside Diameter	Spec	Specification
IT	Internal Tooth	Thk	Thick
IEC	International Electrotechnical	UL	Underwriters Laboratories Inc.
	Commission	UNC	Union National Coarse
kW	Kilowatt	UNF	Union National Fine
LPG	Liquid Petroleum Gas	VAC	Volts Alternating Current
LT	Left	VDC	Volts Direct Current
M(meter Number)	Meter	W/(ET, IT, EIT)	With


#### Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
:	525–0305	_	Onan Green Enamel (Non-Metallic) 12 oz. Pressurized Spray Can	5	18–0601	-	Sealant, Thread (6 ml Tube)
	525–0306 525–0304	_	Quart Can Gallon Can				

Air Cleaner

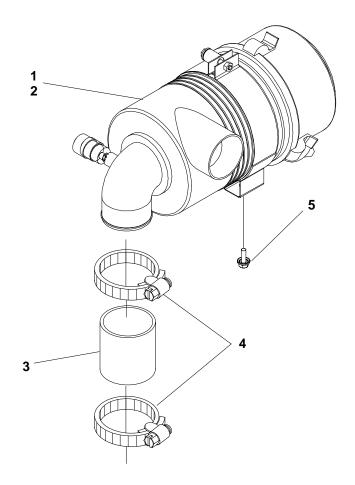


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140–3271	1	Cleaner, Air	4	503-1870-0	5 2	Clamp, Hose
2	140–3272	1	Element, Replacement	5	821-6003-0	2 2	Screw, Hex Head (M8 x 1.25
3	148–1086	1	Hose, Mixer				x 20)

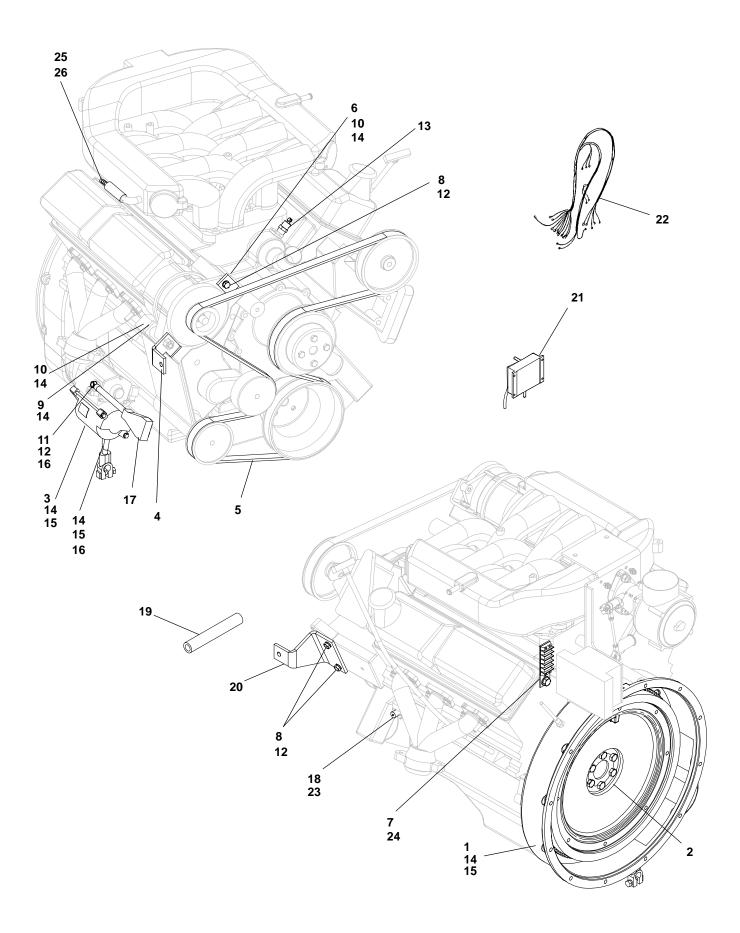

#### **External Engine Parts**


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	231-0395-02	1	Adapter, Generator	14	850–2010	12	Washer, Lock – Split (M10)
2	104–1972	1	Flywheel and Ring Gear	15	800–2088	8	Screw, Cap – Hex Head
3	191–2213	1	Starter (1.4 Kw) (See				(M10 x 1.5 x 35)
			separate page for	16	416–0549	2	Cable, Battery
			components)	17	416–1019	1	Boot, Battery
4	191-2309-02	1	Bracket, Alternator	18	193–0448	1	Sender, Oil Pressure
5	511-0161-19	1	Belt, Serpentine	19	503–2004	-	Hose – Bulk (Order by the
6	191-2287-02	1	Bracket, Alternator				Foot – 2 Feet Required)
7	526-2106	1	Washer, Flat (M8)	20	155-3458-02	1	Bracket, Exhaust
8	800–2059	3	Screw, Cap – Hex Head (M8	21	166–0876	1	Module, Ignition
			x 1.25 x 30)	22	166–0882	1	Harness, Ignition
9	800–2097	1	Screw, Cap – Hex Head	23	505-0007	1	Bushing, Reducer (1/8 x 1/4)
			(M10 x 1.5 x 80)	24	800–2057	1	Screw, Cap – Hex Head (M8
10	800–3004	3	Screw, Cap – Hex Head				x 1.25 x 20)
			(M10 x 1.5 x 35)	25	502-1376	1	Connector, Hose – Reducer
11	860-2008	2	Nut, Hex (M8 x 1.25)				(3/8–1/4)
12	850–2008	6	Washer, Lock – Splitt (M8)	26	503–2004	-	Hose, Bulk (3/8) (Order by
13	193–0318	1	Sender, Water Temperature				the Foot – 1 Foot Required)

#### Fuel Alarm

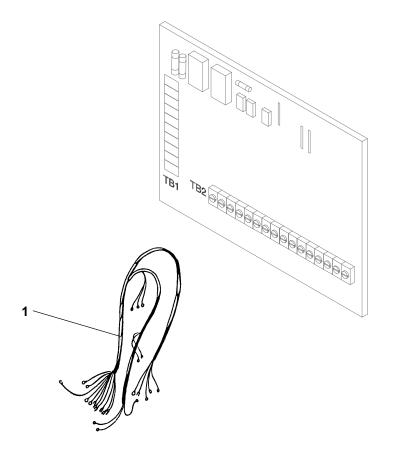


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 3	38–3740–0	)1 1	Harness, Fuel Alarm				

Carburetor

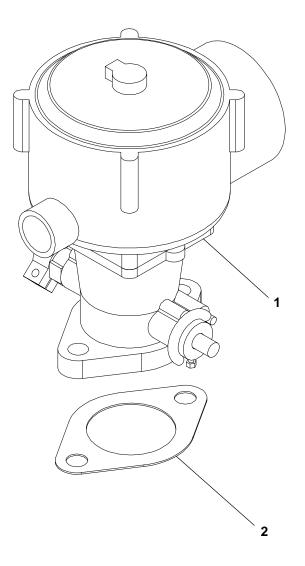


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	148–1146	1	Carburetor	2	145–0787	1	Gasket, Carburetor

Fuel System Natural Gas

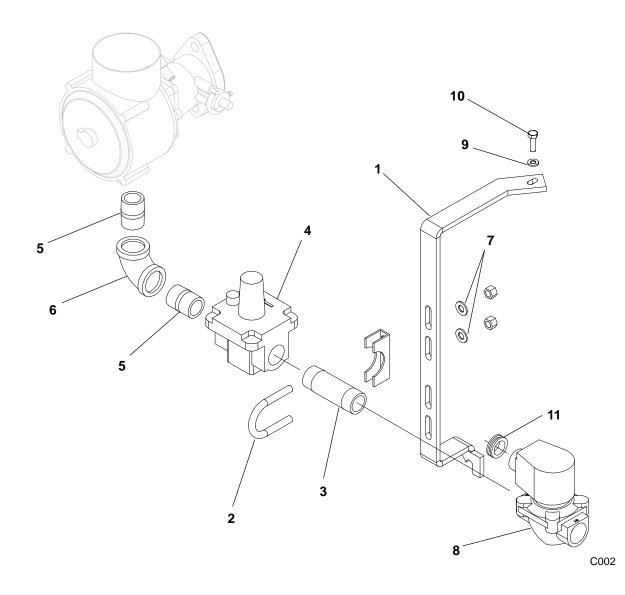


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148–1147–02	. 1	Bracket, Fuel System	7	526–2100	2	Washer, Flat (M8)
2	155–1256	1	Clamp, Muffler	8	307–2930	1	Valve, Solenoid
3	505–0332	1	Nipple, Muffler (3/4 x 3.00)	9	526-2080	1	Washer, Flat (M6)
4	148–0597	1	Regulator, Natural Gas	10	800–2034	1	Screw, Cap – Hex Head (M6
5	505-0102	2	Nipple, Close (3/4)				x 1 x 20)
6	505–0132	1	Elbow, Pipe	11	508–1158	1	Grommet

Fuel System LP Vapor

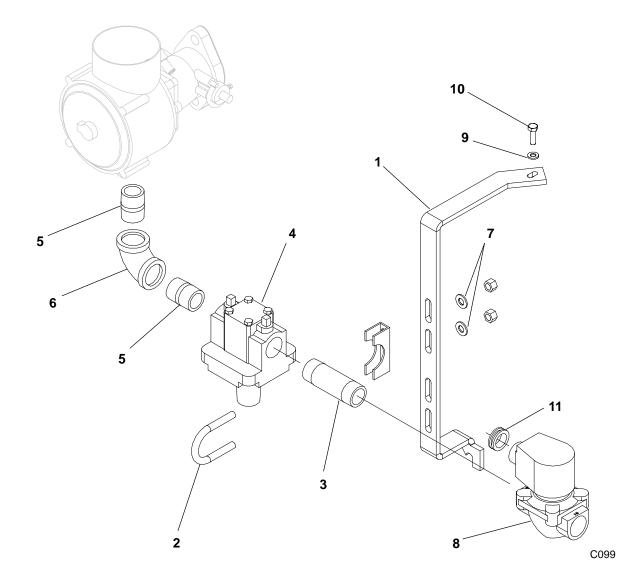


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148–1147–02	2 1	Bracket, Fuel System	7	526–2100	2	Washer, Flat (M8)
2	155–1256	1	Clamp, Muffler	8	307–2930	1	Valve, Solenoid
3	505–0332	1	Nipple, Muffler (3/4 x 3.00)	9	526-2080	1	Washer, Flat (M6)
4	148–0637	1	Regulator, LP	10	800–2034	1	Screw, Cap – Hex Head (M6
5	505-0102	2	Nipple, Close (3/4)				x 1 x 20)
6	505–0132	1	Elbow, Pipe	11	508–1158	1	Grommet

#### Fuel System Natural Gas / LP Vapor

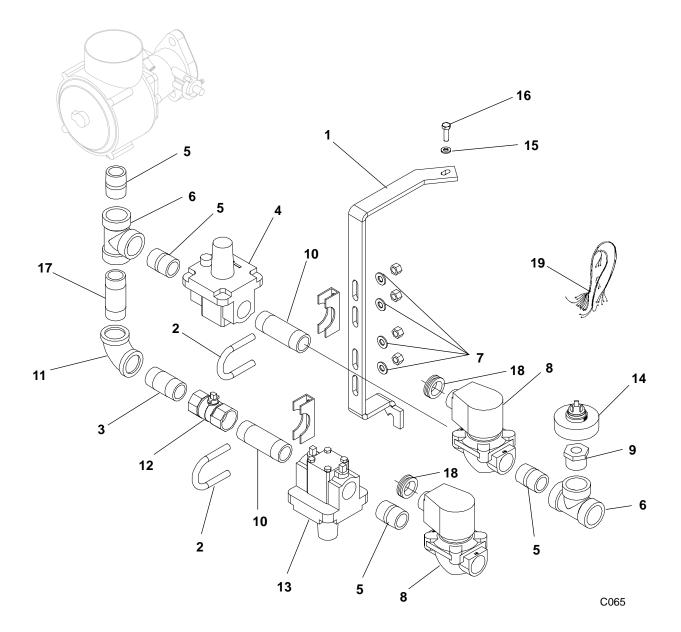


REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	148–1147–02	1	Bracket, Fuel System	11	505–0132	1	Elbow, Pipe
2	155–1256	2	Clamp, Muffler	12	504–0171	1	Valve
3	505-0085	1	Nipple, Pipe (3/4 x 2.00)	13	148–0637	1	Regulator, LP
4	148–0597	1	Regulator, Natural Gas	14	309–0669	1	Switch, Low Pressure
5	505-0102	4	Nipple, Close (3/4)	15	526-2080	1	Washer, Flat (M6)
6	505–0166	2	Тее	16	800–2034	1	Screw, Cap – Hex Head (M6
7	526–2100	4	Washer, Flat (M8)				x 1 x 20)
8	307–2930	2	Valve, Solenoid	17	505-0084	1	Nipple, Pipe (3/4 x 2.50)
9	505-0020	1	Bushing, Reducer (3/4 x 1/4)	18	508–1158	1	Grommet
10	505–0332	2	Nipple, Pipe (3/4 x 3.00)	19	338–3816–01	1	Harness, Dual Fuel

Fuel System LP Liquid

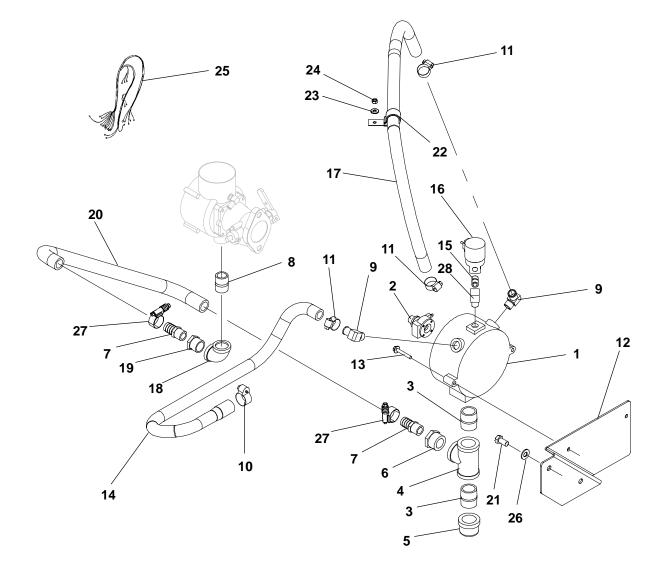

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148–0625	1	Converter, Gas	16	307-0268-01	1	Valve, Solenoid
2	148–1152	1	Solenoid, Primer	17	503–1988	_	Hose – Bulk (Order by the
3	505-0004	2	Nipple, Pipe (1 x 1.50)				Foot (4 Feet Required)
4	505-0304	1	Tee, Pipe	18	505-0132	1	Elbow, Pipe
5	505–0479	1	Cap, Pipe (1.00)	19	505-0021	1	Bushing, Reducer (3/4 x 1/2)
6	505-0022	1	Bushing, Reducer (1 x 1/2)	20	503–1565	_	Hose (3/4) – Bulk (Order by
7	502-0827	2	Hose, Barb				the Foot – 2 Feet Required)
8	505-0102	1	Nipple, Close (3/4)	21	800–2085	2	Screw, Cap – Hex Head
9	502-0942	2	Elbow, Hose – 90° (3/8 x 5/8)	22	332–3196	1	Clamp, J
10	503-1872-01	1	Clamp, Hose	23	526-0018	1	Washer, Flat (1/4)
11	503–0183	3	Clamp, Hose	24	860–2007	1	Nut, Hex (M6 x 1)
12	148-1159-02	. 1	Bracket, Converter	25	338-3654-01	1	Harness, Wiring
13	815–0924	2	Screw, Hex Washer Head	26	526–2132	2	Washer, Flat (M10)
			(M6 x 1 x 40)	27	503-2157-02	2	Clamp, Hose
14	503–2185	1	Hose, Coolant – Engine	28	502-0054	1	Elbow, Pipe – Street
15	505-0099	1	Nipple, Pipe (1/4 x .88)				


#### Fuel System Natural Gas / LP Liquid

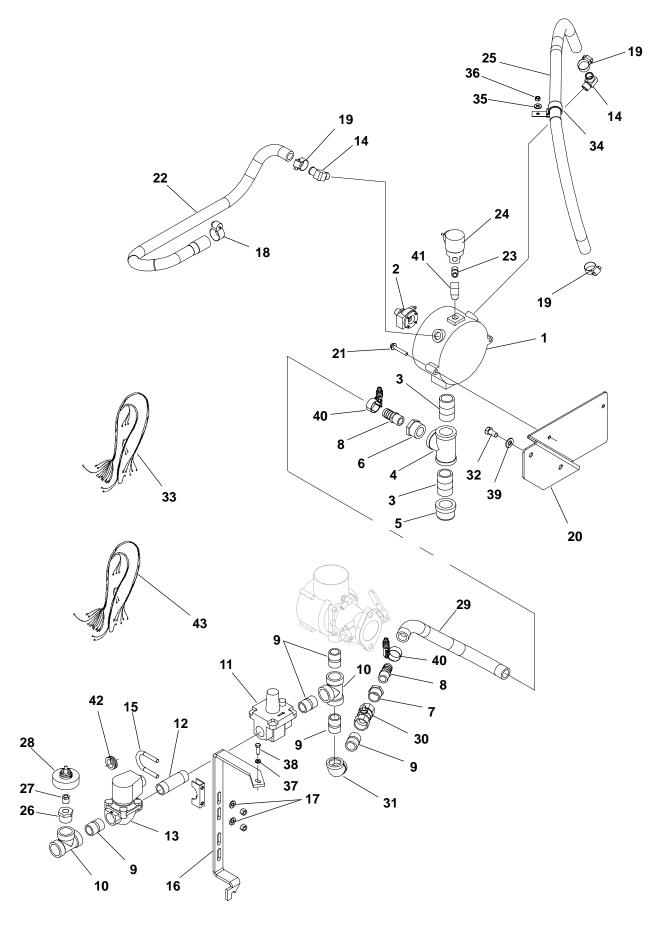

#### Fuel System Natural Gas / LP Liquid


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148–0625	1	Converter, Gas	25	503–1988	_	Hose – Bulk (Order by the
2	148–1152	1	Solenoid, Primer				Foot – 4 Feet Required)
3	505-0107	2	Nipple, Pipe (1 x 2.00)	26	505-0020	1	Bushing, Reducer (3/4 x 1/4)
4	505-0304	1	Tee, Pipe	27	505-0007	1	Bushing, Reducer (1/4 x 1/8)
5	505-0479	1	Cap, Pipe (1")	28	309–0669	1	Switch, Low Pressure
6	505-0022	1	Bushing, Reducer (1 x 1/2)	29	503–1565	_	Hose, LPG (3/4 ID) – Bulk
7	505-0021	1	Bushing, Reducer (3/4 x 1/2)				(Order by the Foot – 2 Feet
8	502-0827	2	Hose, Barb				Required)
9	505-0102	5	Nipple, Close (3/4)	30	504–0171	1	Valve
10	505–0166	2	Tee, Reducing	31	505–0132	1	Elbow, Pipe
11	148–0597	1	Regulator, Natural Gas	32	800–2085	2	Screw, Cap – Hex Head
12	505–0332	1	Nipple, Pipe (3/4 x 3.00)				(M10 x 20)
13	307–2930	1	Valve, Solenoid	33	338-3654-01	1	Harness, Wiring
14	502-0942	2	Elbow, Hose – 90° (3/8 x 5/8)	34	332–3196	1	Clamp, J
15	155–1256	1	Clamp, Muffler	35	526-0018	1	Washer, Flat (1/4)
16	148-1147-02	1	Bracket, Fuel System	36	860–2007	1	Nut, Hex (M6 x 1)
17	526-2100	2	Washer, Flat (M8)	37	526-2080	1	Washer, Flat (M6)
18	503-1872-01	1	Clamp, Hose	38	800–2034	1	Screw, Cap – Hex Head (M6
19	503–0183	3	Clamp, Hose				x 1 x 20)
20	148-1159-02	1	Bracket, Converter	39	526–2132	2	Washer, Flat (M10)
21	815–0924	2	Screw, Hex Washer Head	40	503-2157-02	2	Clamp, Hose
			(M6 x 1 x 40)	41	502-0054	1	Elbow, Pipe – Street
22	503–2185	1	Hose, Coolant – Engine	42	508–1158	1	Grommet
23	505-0099	1	Nipple, Pipe (1/4 x .88)	43	338-3816-01	1	Harness, Dual Fuel
24	307-0268-01	1	Valve, Solenoid				

#### Exhaust System With Threaded Exhaust Pipe

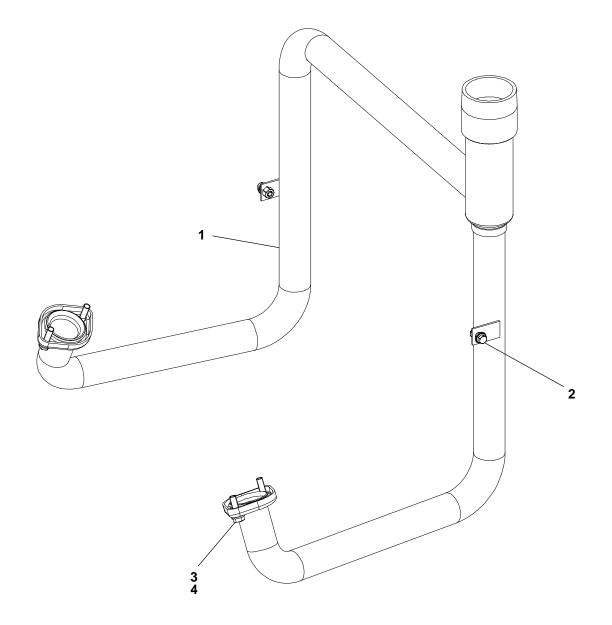


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155–3377	1	Tube, Exhaust – NPT	3	526–2120	4	Washer, Flat (M10)
2	821–6003–02	2 2	Screw, Cap – Hex Head (M8 x 1.25 x 20)	4	800–2088	4	Screw, Cap – Hec Head (M10 x 1.5 x 35)

Muffler Residential

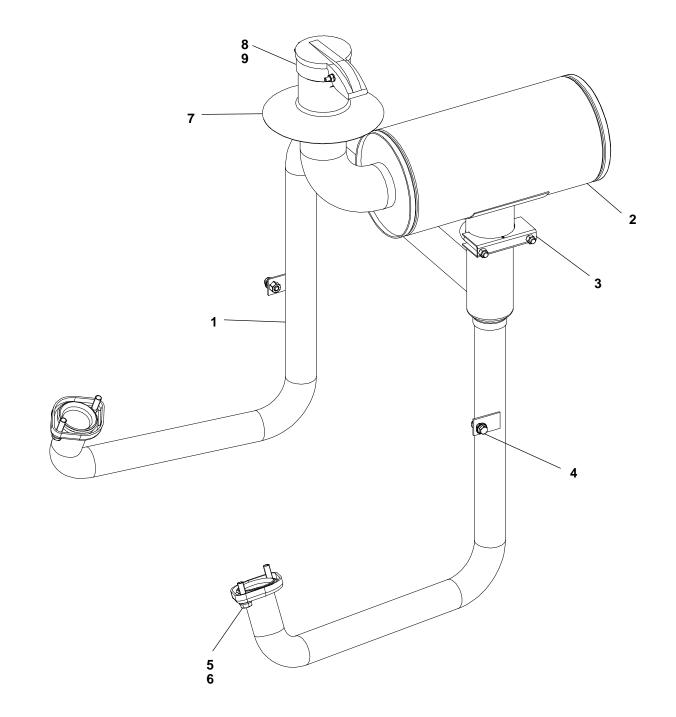


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155–3378	1	Tube, Exhaust	6	800–2088	4	Screw, Cap – Hex Head
2	155–3193	1	Muffler				(M10 x 1.5 x 35)
3	155–2175	1	Clamp, Muffler (3.0" OD)	7	155-3102-02	. 1	Shield, Rain (Unhoused
4	821-6003-02	2	Screw, Hex Head (M8 x 1.25				Sets)
			x 20)	8	155-2062-10	) 1	Cap, Rain (Unhoused Sets)
5	526–2120	4	Washer, Flat (M10)	9	155-2062-03	5 1	Cap, Rain (Housed Sets)

Muffler Sound Attenuating Enclosure

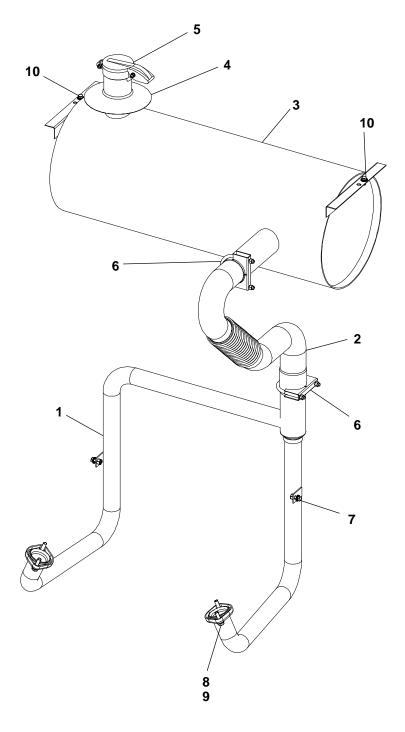


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155–3378	1	Tube, Exhaust	7	821-6003-02	2	Screw, Hex Head (M8 x 1.25
2	154–3048	1	Tube, Exhaust				x 20)
3	155–3167	1	Muffler	8	526-2120	4	Washer, Flat (M10)
4	155-3102-02	2 1	Shield, Rain	9	800–2088	4	Screw, Cap – Hex Head
5	155-2062-10	) 1	Cap, Rain				(M10 x 1.5 x 35)
6	155–2175	2	Clamp, Muffler (3" OD)	10	821–6007–02	2	Screw, Hex Head – Stainless Steel (M8 x 1.25 x 20)

Low Coolant Level Sender With Continuously Monitored Low Coolant Level 12 Light Indicator Controls

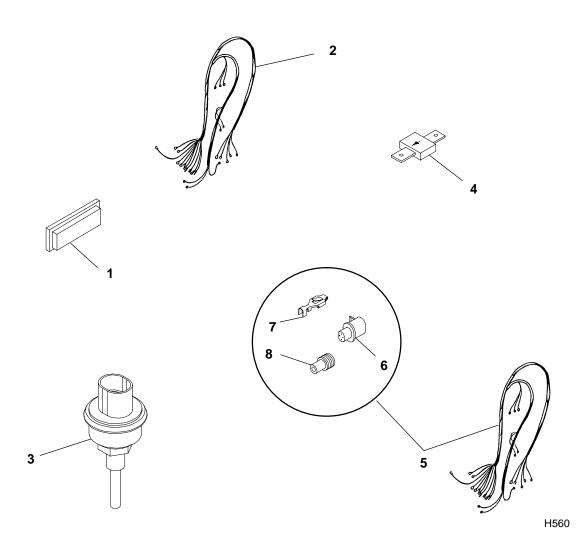

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	RE NC		PART NO.	QTY USED	PART DESCRIPTION
1	322-0431-07	1	Lens, Replacement	6	323	8–1765	1	*Housing, Connector (4 Pin)
2	338-3035-01	1	Harness, Low Coolant Level	7	323	8–1709	4	*Socket, Contact (Used in S3)
3	193–0468	1	Sender, Low Coolant Level	8	323	8–1708	4	*Seal, Cable
4	357-0030	1	Rectifier, Silicon					
5	338–3594	1	Harness, Pigtail (Includes Parts Marked *)	* — F	Parts	Included i	n 338–35	94 Pigtail Harness


Low Coolant Level Without Continuously Monitored Low Coolant Level

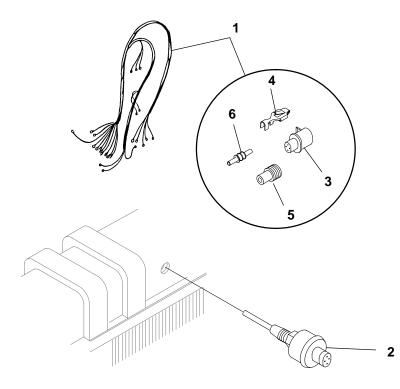


H389,H559,H527

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3751	1	Harness, Low Coolant Level (Includes Parts Marked *)		323–1708 323–1712	4 1	*Seal, Cable *Plug, Cavity
2	193–0468	1	Sender, Low Coolant Level				
3	323–1765	1	*Housing, Connector (4 Pin)	* – Pa	rts Included i	in 338–375	51 Wiring Harness
4	323–1709	4	*Socket, Contact (Used in S7)				

**Coolant Heater** 

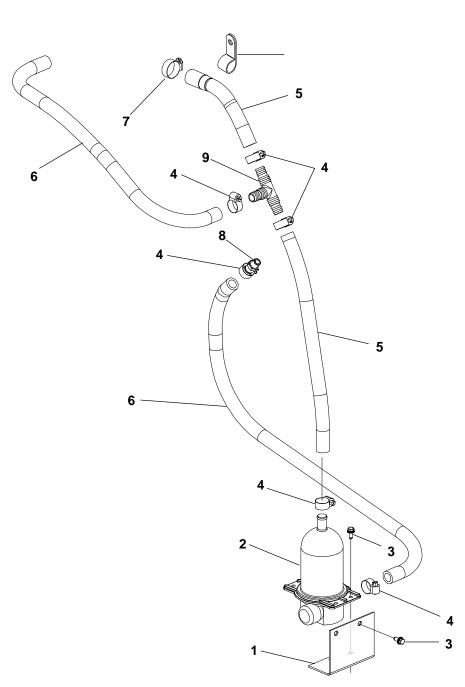


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	333–0616	1	Bracket, Mounting – Heater Heater, Engine Coolant	6			Hose, Coolant – Bulk (Order by the Foot)
	333-0588-03	5 1	120 Volt		503–1988	_	3 Feet Required (Without
	333-0588-04	1	240 Volt				Liquid LP Fuel System)
3	821-6006-01	4	Screw, Hex Head – Stainless Steel (M6 x 1.0 x 16)		503–1988	-	6 Feet Required (With Liquid LP Fuel System)
4			Clamp, Hose	7	503–1136	1	Clamp, Hose
	503–0183	3	Without Liquid LP Fuel	8	502-0613	1	Adapter, Hose
			System	9	502-0870	1	Tee (With Liquid LP Fuel
	503–0183	6	With Liquid LP Fuel System				System)
5	503–2185	1	Hose, Coolant – Engine	10	332–3196	1	Clamp, J

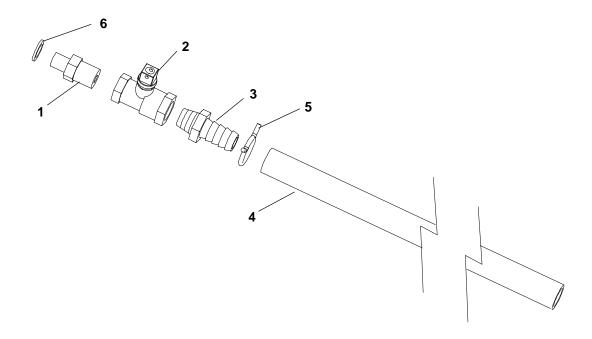


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	102–1054–01	1	Adapter, Oil Drain	5	503–0197	1	Clip, Hose
2	504–0011	1	Valve, Shutoff	6	102–0664	1	Gasket, Oil Drain
3	502-0827	1	Hose, Barb (1/2 x 3/4)				
4	503–0098	-	Hose, Oil Drain – Bulk (Order by the Foot – 2 Feet Required)				

Duct Adapter

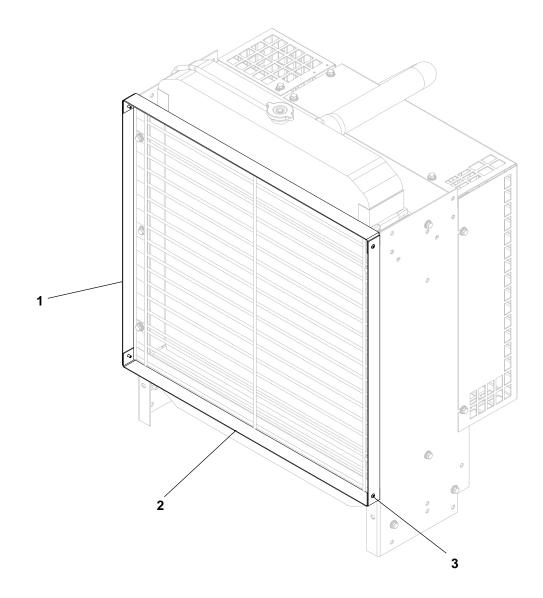


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2	130–4623 130–4622	2 2	Adapter, Duct (Side) Adapter, Duct (Top and Bottom)	3	818–0231–0	24	Rivet, Pop

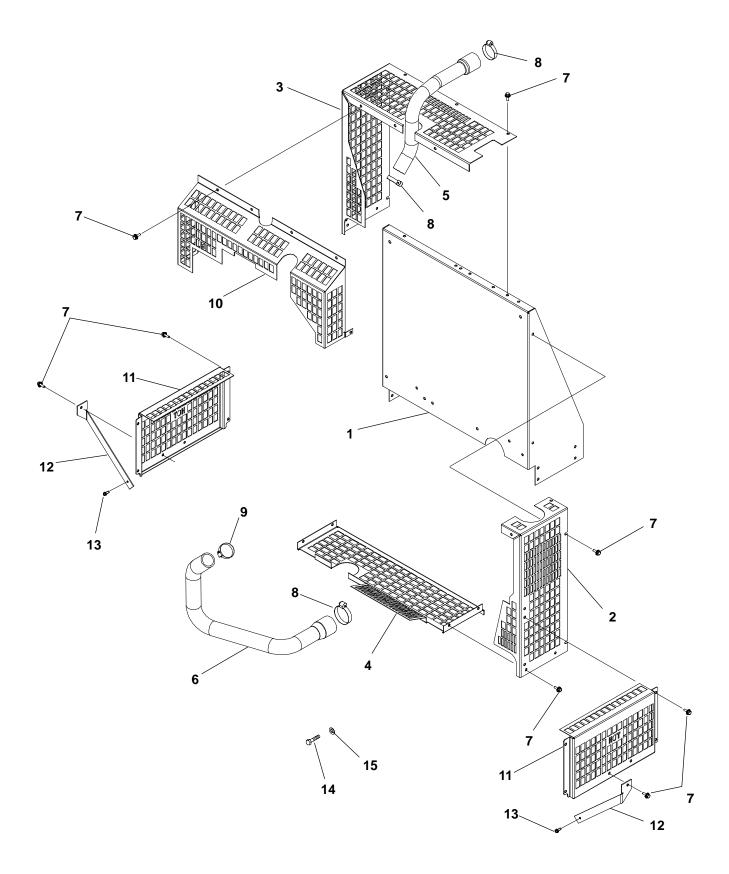


#### **Remote Radiator**

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	405-6603-02	1	Panel, Front – Radiator	9	503–0365	1	Clamp, Hose
			Housing	10	130-5270-02	1	Guard, Fan
2	130-5269-02	1	Guard, Fan – Right Hand	11	155-3389-02	2	Shield, Heat
3	130-5271-02	1	Guard, Fan – Left Hand	12	155-3391-02	2	Bracket, Shield
4	130-5272-02	1	Guard, Fan – Bottom	13	815-0941-03	2	Screw, Thread Forming (M6
5	503–2169	1	Hose, Radiator – Inlet				x 1.0 x 18)
6	503–2170	1	Hose, Radiator – Outlet	14	526–2101	4	Screw, Cap – Hex Head (M8
7	821-6003-02	31	Screw, Hex Head (M8 x 1.25				x 1.25 x 12)
			x 20)	15	130-5306-02	4	Washer (M8)
8	503–0465	3	Clamp, Hose				

#### Radiator

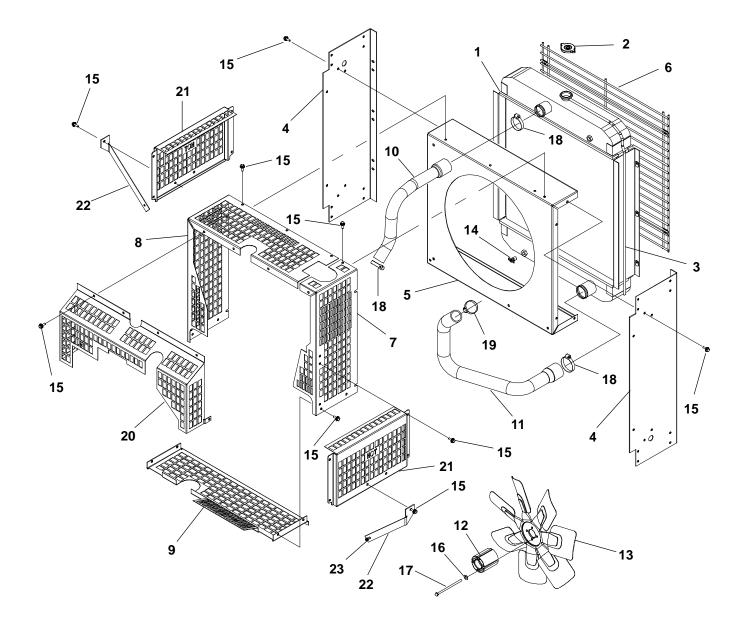


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4596–02	1	Radiator (Includes Cap and	13	130–5383	1	Fan
			Overflow Hose)	14	504–0003	1	Cock, Drain
2	130–1788	1	Cap, Radiator – 14 PSI	15	821-6003-02	2 41	Screw, Hex Head (M8 x 1.25
3	503-0276	_	Hose, Overflow – Bulk (Order				x 20)
			by the Foot – 4 Feet	16	740–1006	4	Washer, Flat (M8)
			Required)	17	800-2074	4	Screw, Cap – Hex Head
4	130–4767	2	Side, Housing				(M8 x 1.25 x 120)
5	130-5273-02	1	Shroud, Fan	18	503–0465	3	Clamp, Hose
6	130–4602	1	Grille	19	503-0365	1	Clamp, Hose
7	130-5269-02	1	Guard, Fan – Left Hand	20	130-5270-02	2 1	Guard, Fan
8	130-5271-02	1	Guard, Fan – Right Hand	21	155-3389-02	2 2	Shield, Heat
9	130-5272-02	1	Guard, Fan – Bottom	22	155-3391-02	2 2	Bracket
10	503–2169	1	Hose, Radiator	23	815-0941-03	2	Screw, Thread Forming
11	503–2170	1	Hose, Radiator				(M6 x 1.0 x 18)
12	130–5213–02	1	Spacer, Fan				

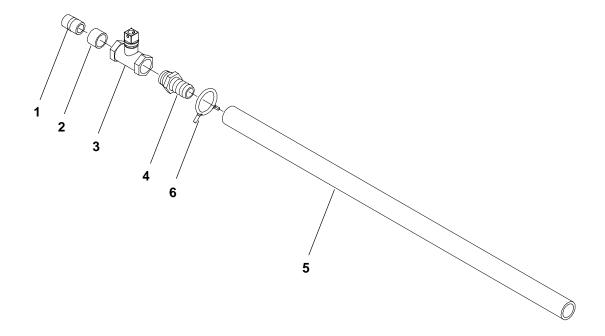


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502–0085 505–0117	1	Nipple, Pipe (3/8) Bushing, Flush (3/8 x 1/2)	5	503–0098	-	Hose – Bulk (Order by the Foot – 2 Feet Reguired)
3 4	504–0011 502–0827	1 1	Valve, Shutoff $(1/2)$ Hose, Barb $(1/2 \times 3/4)$	6	503–0197	1	Clamp. Hose


#### Housing F172 / F173 Enclosure

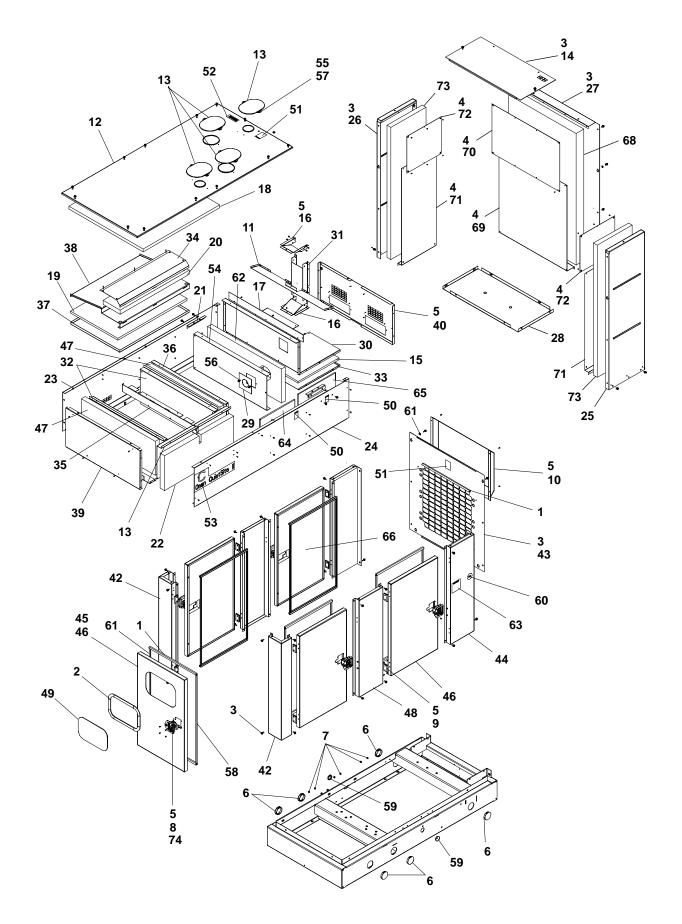

#### Housing F172 / F173 Enclosure


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	895–0384	11	Weather Seal Top & Bottom	40	405–5952	1	Extension, Front
2	895–0363	4.2'	Weather Strip – Window	41	155–3238	4	Cover, Exhaust
3			Screw, Hex Head (M8 x 1.25	42	405–5916	2	Post, Corner – Housing
Ũ			x 20)	43	405–5910	1	Panel, Front – Radiator
	821-6007-0	)2 47	F172 Housing				Housing
	821-6007-0		F173 Housing	44	405–5908	2	Panel, Side – Radiator
4			Rivet (1/8")				Housing
	818-0237-0	)1 72	F172 Housing	45	405–5903	1	Door, Housing W/Window
	818-0237-0	)1 85	F173 Housing				Cutout
5	818-0231-0	2 105	Rivet (3/16")	46	405-5902	5	Door, Housing WO/Window
6	517–0322	6	Plug, Hole	47	405–5841	2	Fiberglass
7	517–0131	6	Plug, Hole	48	405–5745	2	Post, Housing – Center
8	406–0918	5	Latch, Door	49	319–2653	1	Window, Control (if equipped)
9	406–0831	10	Hinge	50	098–7451	3	Label, Caution
10	405–6035	1	Baffle, Air – Discharge	51	098–4730	2	Label, Caution
11	405–6068	1	Baffle, Recirculation – Muffler	52	098–5429	1	Label, Coolant Fill
12	405–6018	1	Roof	53	098–7470	2	Label, Model
13	405–6015	1	Cover, Perforated	54	405–6034	1	Retainer, Insulation
14	405–6010	1	* Cover, Discharge	55	821-6006-01	2	Screw, Hex Head
15	405–6005	1	Fiberglass – Muffler				(M6 x 1.0 x 16)
16	405–6003	2	Box, Radiator Fill	56	526–0011	2	Washer, Flat
17	405–6029	1	Barrier, Air Flow	57	870–0504	2	Nut, Captive – Floating
18	405-6001-0		Fiberglass	58	895–0385	5	Weather Seal – Side
19	405-6000-0		Fiberglass	59	517-0138-07		Plug
20	405-6000-0		Fiberglass	60	098–4500	2	Label, Prototype Tested
21	405–5998	2	Support, Muffler	61	895–0386	5	Weather Seal
22	405–5997	1	Fiberglass	62	405-6109	1	Fiberglass
23	405–5996	1	Extension, Side – RH	63	098–4732	2	Label, Warning
24	405–5995	1	Extension, Side – LH	64	128-0154-04		Insulation, Foam
25	405-5991-0		* Side, Discharge – LH	65	128-0252	2	Insulation, Foam
26	405-5991-0		* Side, Discharge – RH	66	405–5734	2	Fiberglass
27	405–5990	1	* Discharge, Front	67	526-0451	4	Washer, Flat (M8)
28	405–5988	1	* Discharge, Bottom	68	405-6000-07		* Fiberglass
29	405–5987	1	Barrier, Air	69	405-6013	1	* Retainer, Insulation
30	405–5966	1	Box, Muffler	70	405–6132	1	* Retainer, Insulation
31	405–6030	1	Fill Neck, Radiator	71	405-6014	2	* Retainer, Insulation
32	405-5961	2	Cover, Perforated	72	405-6044	2	* Retainer, Insulation
33	405-5960	1	Retainer, Insulation	73	405-6000-04		* Fiberglass
34	405-5958	1	Inlet, Perforated	74	406–0782	5	Key, Replacement
35	405-5957	2	Angle, Support				(Fits Latch 406–0918)
36	405-5956	1	Duct, Support				
37	405-5955	1	Inlet, Perforated	* -			
38	405-5954	1	Duct, Bottom – Inlet		Parts used only	on F1/3	
39	405–5953	1	Extension, Rear				

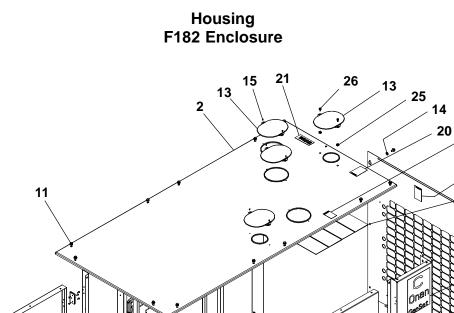

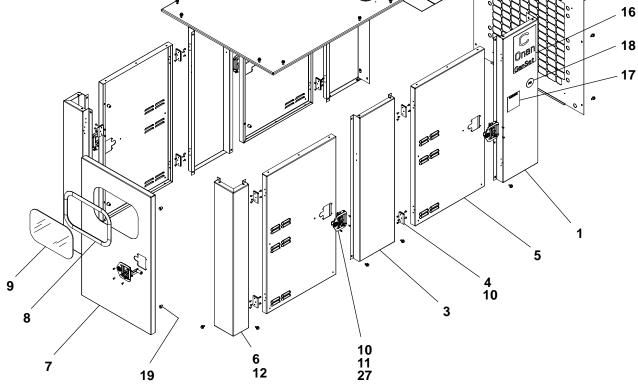

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405–5908	2	Panel, Side – Radiator	14	526–0451	2	Washer, Flat (M8)
			Housing	15	818-0237-01	6	Rivet, Pop (1/8)
2	405–6018	1	Roof	16	098-6139-06	2	Label, Model Identification
3	405–5745	2	Post, Housing – Center	17	098–4732	2	Label, Warning
4	406–0831	10	Hinge, Housing	18	098–4500	2	Label, Prototype
5	405–5832	4	Door, Housing	19	895–0382	10	Bumper, Door
6	405–5916	2	Post, Corner – Housing	20	098–4730	2	Label, Warning
7			Door, Rear	21	098–5429	1	Label, Coolant Fill
	405–5902	1	Units Without Window	22	405–5910	1	Panel, Front – Radiator
	405–5903	1	Units With Window				Housing
8	895–0363	4.2'	Weatherstrip – Units with	23	098–7451	1	Label, Caution
			Window	24	130–4848	6.3'	Insulation, Exhaust
9	319–2653	1	Window, Control	25	870–0504	2	Nut, Captive – Floating
10	818-0231-02	2 70	Rivet – Pop (3/16)				(M6 x 1.0)
11	406–0918	5	Latch, Door	26	821-6006-01	2	Screw, Hex Head (M6 x 1.00
12	821-6007-02	2 28	Screw, Hex Head (M8 x 1.25				x 16)
			x 20)	27	406-0782	5	Key, Replacement
13	155–3238	4	Cover, Exhaust				(Fits Latch 406–0918)


Skid Pan

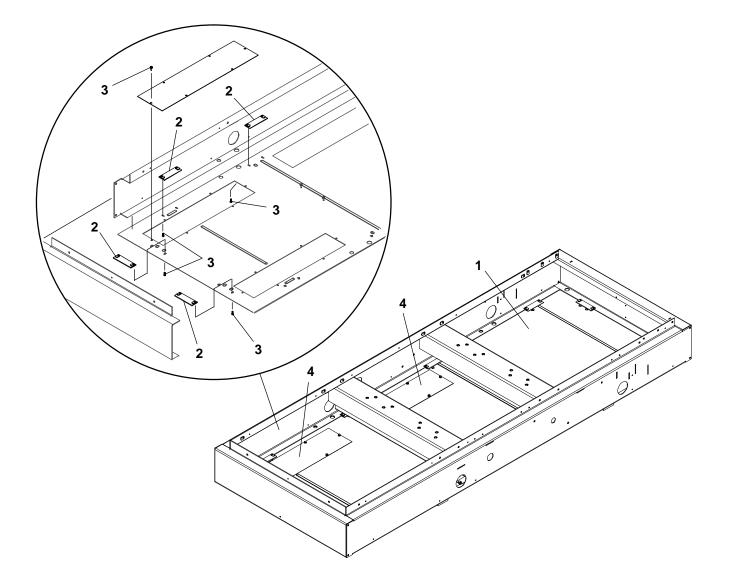

F170


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2 3	403–4290 403–4110 821–6002–03	1 10 38	Pan, Skid Clamp Screw, Self-Locking – Hex Washer Head (M6 x 1 x 16mm)	4	403–4116	3	Cover, Stub-Up

Skid Housing Compatible

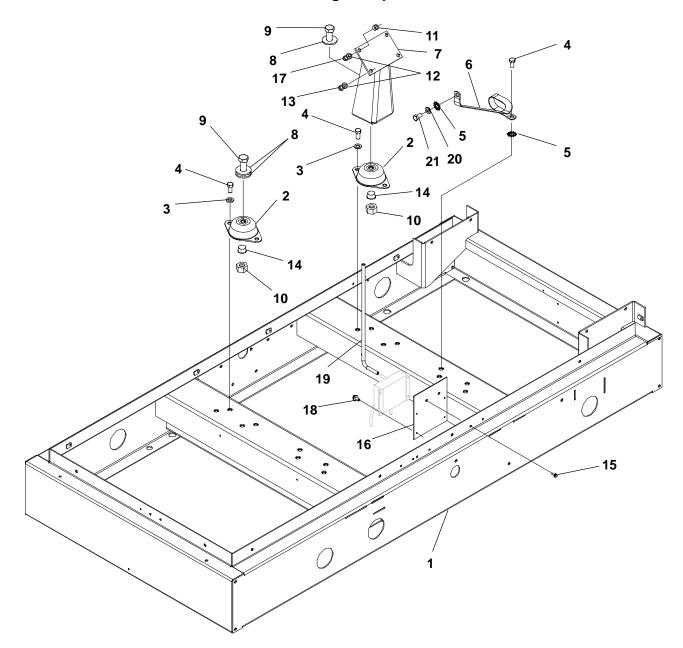


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-4487-02	1	Skid	13	800-2530-03	4	Screw, Cap – Hex Head
2	402–0730	4	Cushion, Vibration Isolator				(M10 x 1.5 x 25)
3	526–0433	8	Washer, Hardened (M12)	14	517–0094	4	Plug, Plastic
4	800–2543–02	9	Screw, Cap – Hex Head (M12 x 25)	15	821–6006–01	2	Screw, Hex Head – Stainless Steel (M6 x 1 x 16)
5	856-0013	2	Washer, Lock – WIT (1/2)	16	403-4450-02	1	Bracket, Ignition Module
6	337-0090-01	1	Strap, Electrical	17	800-2530-05	2	Screw, Cap – Hex Head
7	403-4486-02	2	Bracket, Engine – Mounting				(M10 x 1.5 x 35)
8	526-0238-01	6	Washer, Flat (3/4)	18	815-0793-03	4	Screw, Cap – Hex Flange
9	800–0607	4	Screw, Cap – Hex Head (3/4–10 x 2)				Head – Thread Forming (M5 x 0.8 x 12)
10	862-0044	4	Nut, Hex – Heavy (3/4–10)	19	503–2179	1	Hose, Vacuum
11	403-4496-02	2	Spacer, Motor Mount	20	526–2140	1	Washer, Flat (M12)
12	526–0174	6	Washer, Flat (M10)	21	800–2110	1	Screw, Cap – Hex Head (M12 x 1.75 x 20)

Skid Non-Housing Compatible

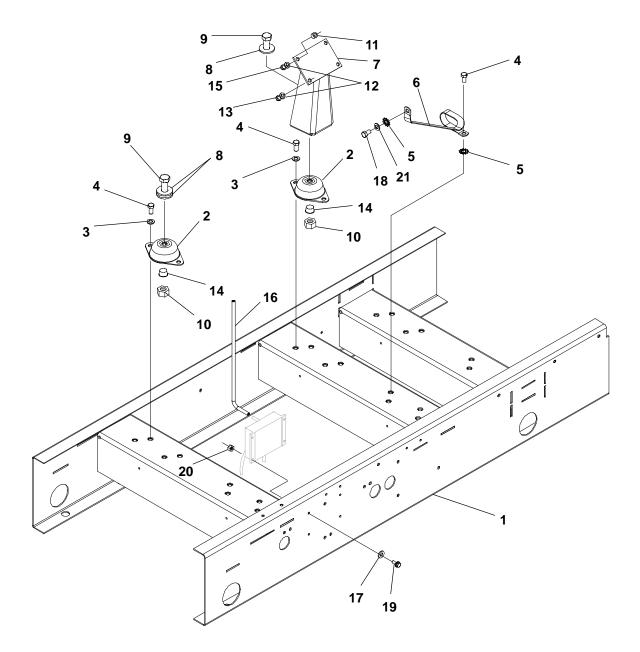


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	403–4497–02 402–0730	1 4	Skid Cushion, Vibration Isolator	13	800–2530–03	4	Screw, Cap – Hex Head (M10 x 1.5 x 25)
3	526-0433	8	Washer, Hardened (M12)	14	517–0094	4	Plug, Plastic
4	800–2543–02	9	Screw, Cap – Hex Head (M12 x 25)	15	800–2530–05	2	Screw, Cap – Hex Head (M10 x 1.5 x 35)
5	856-0013	2	Washer, Lock – WIT (1/2)	16	503–2179	1	Hose, Vacuum
6	337-0090-01	1	Strap, Electrical	17	526-0008	8	Washer, Flat (3/16)
7	403-4486-02	2	Bracket, Engine – Mounting	18	800–2110	1	Screw, Cap – Hex Head
8	526-0238-01	6	Washer, Flat (3/4)				(M12 x 1.75 x 20)
9	800–0607	4	Screw, Cap – Hex Head (3/4–10 x 2)	19	800–2010	4	Screw, Cap – Hex Head (M5 x 0.8 x 20)
10	862-0044	4	Nut, Hex – Heavy (3/4–10)	20	860–2006	4	Nut, Hex (M5 x 0.8)
11	403-4496-02	2	Spacer, Motor Mount	21	526–2140	1	Washer, Flat (M12)
12	526-0174	6	Washer, Flat (M10)				

**Battery Tray** 

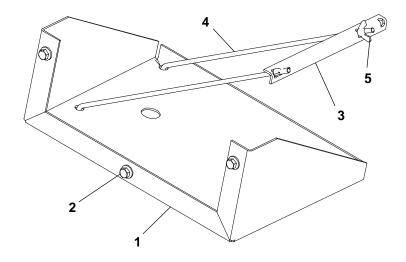

F065


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403–4267	1	Tray, Battery	3	416–1033	1	Hold Down, Battery
2	821-6007-02	23	Screw, Hex Head – Stainless	4	416-0993-0	22	Rod, Hold Down – Battery
			Steel (M8 x 1.25 x 20)	5	865–0030	2	Nut, Wing (M6)

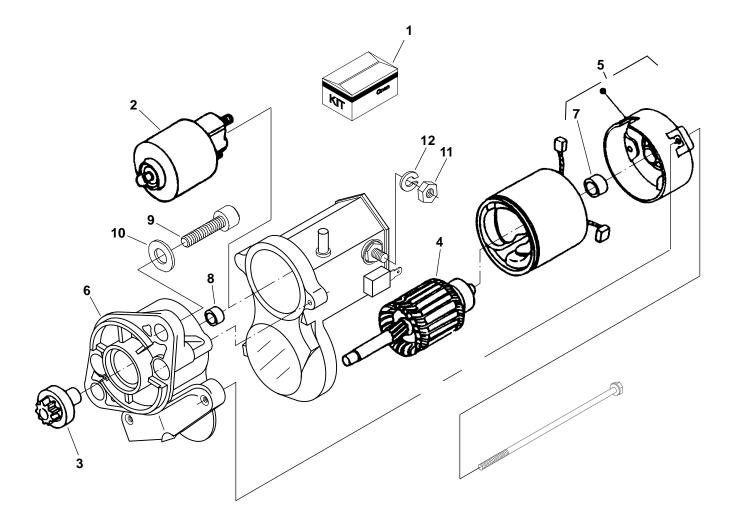

CP01

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	191–2213	1	Starter (1.4kW)	7	191–2221	1	Bearing, Commutator End
1	191–2215	1	Kit, Starter Brush	8	191–2222	1	Bearing, Pinion End
2	191–2216	1	Switch	9	186–6675	2	Screw, Socket Head Cap
3	191–2217	1	Clutch				(M10 x 1.5 x 35mm)
4	191–2218	1	Armature	10	186–6619	2	Washer, Spring (M10)
5	191–2219	1	Frame, Commutator End	11	186–6274	1	Nut, Hex (M8 x 1.25)
6	191–2220	1	Housing	12	186–6618	1	Washer, Spring (M8)


### Alternator

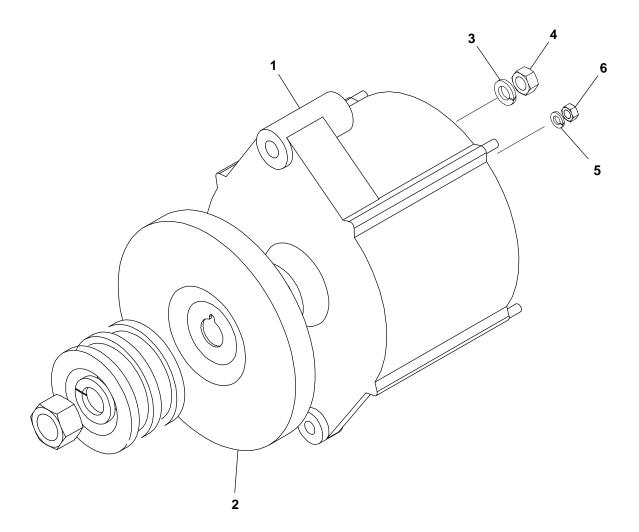


CP01

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-2209-01	1	Alternator	4	860–2008	1	Nut, Hex (M8 x 1.25)
2	191–1981	1	Fan, Alternator	5	850–2005	2	Washer, Lock (M5)
3	850–2008	1	Washer, Lock (M8)	6	860–2006	2	Nut, Hex (M5 x 0.8)


# Governor

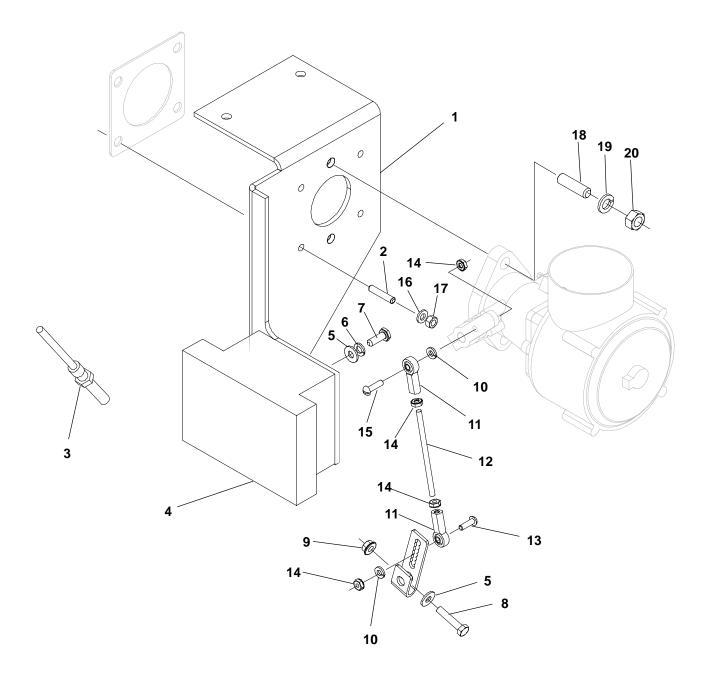

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2766-02	1	Bracket, Governor	12	150-2697-01	1	Rod, Governor
2	520-1024-01	4	Stud (M6 x 1.0 x 30)	13	813–0102	1	Screw, Machine – Slotted –
3	150–2651	1	Pickup, Magnetic				Round Head (#10–32 x
4	150-2692-01	1	Governor				0.625)
5	526-0018	5	Washer, Flat (1/4)	14	870–0131	4	Nut, Hex – W/ET
6	850-0040	4	Washer, Lock – Split (1/4)	15	813–0103	1	Screw, Machine – Slotted –
7	800-0602	4	Screw, Cap – Hex Head (1/4–28 x .75)				Round Head (#10–32 x 0.75)
8	800–2036	1	Screw, Cap – Hex Head (M6	16	526-2080	4	Washer, Flat (M6)
			x 1 x 30)	17	862-0026-54	4	Nut, Hex (M6 x 1.0)
9	870–2054	1	Nut, Hex – Self-Locking – Flange Head (M6 x 1)	18	803–2001–19	2	Screw, Socket Set (M10 x 1.5 x 35)
10	850-0030	2	Washer, Lock – Split (#10)	19	850-0114-55	2	Washer, Lock – Split (M10)
11	151–0769	2	Swivel, Governor Rod End	20	860–2009	2	Nut, Hex (M10 x 1.5)

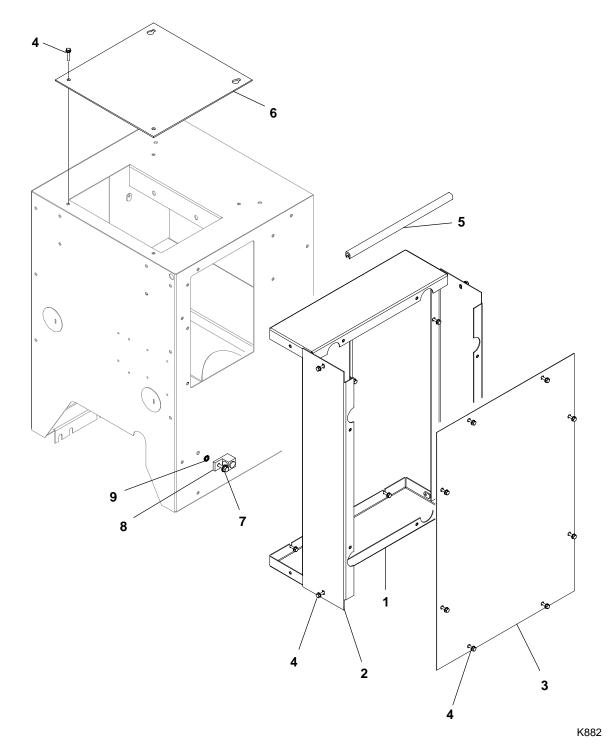


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3072	2	Panel, End – CB Box	6	319–2996	1	Cover, Control Housing
2	319–2978	2	Panel, Side – CB Box	7	821-6003-02	1	Screw, Hex Head (M8 x 1.25
3	319-2979-02	1	Cover, CB Box				x 20)
4	821-6002-03	24	Screw, Hex Head (M6 x 16)	8	332–1473	1	Lug, Solderless
5	508–0239	-	Edging – Bulk (Order By The Foot – 2 Feet Required)	9	856–0008	1	Washer, Lock – EIT (5/16)

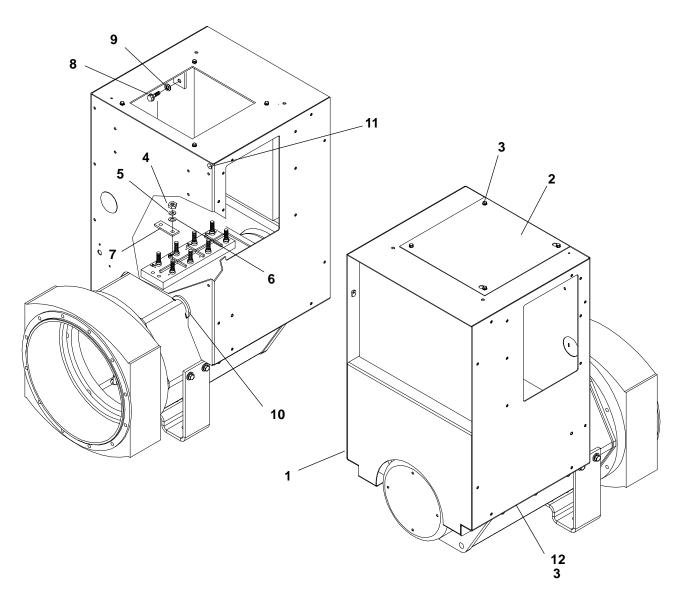

CP01


REF PART		QTY	PART
NO.	NO.	USED	DESCRIPTION
1	319–3208	1	Box, Control
2	319–2996	1	Cover, Housing – Control
3	821–6002–03	9	Screw, SEMS – Hex Head (M6 x 1 x 16)
4	860–2009	8	Nut, Machine – Hex (M10 x 1.5)
5	850–2010	8	Washer, Lock (M10)
6	526–2120	8	Washer, Flat (M10)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	332–2987	4	Link, Terminal
8	821-5003-01	4	Screw, Lock (5/16–18 x .50)
9	856-0008	1	Washer, Lock – ET (5/16)
10	508-0305-02	.33'	Edging
11	517–0135	1	Plug, Hole
12	319–3207	1	Bracket, Mounting – Control

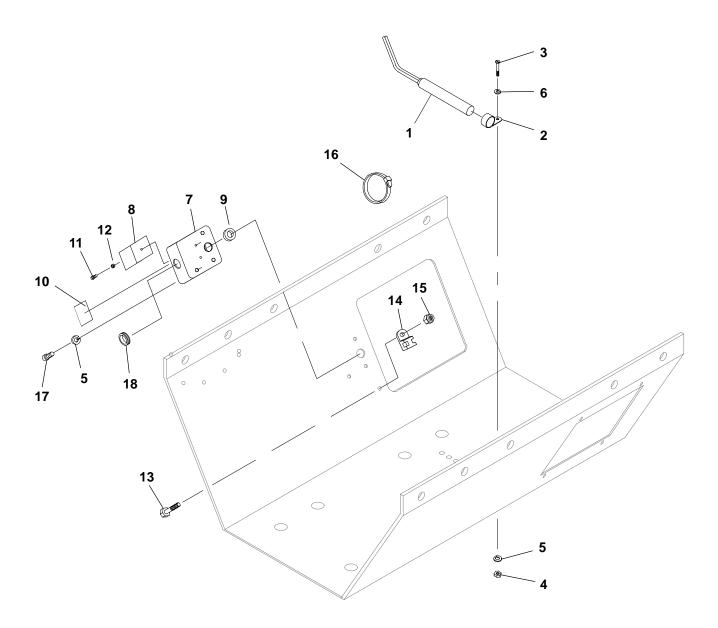


A292,A293

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Cartridge, Heater	10	098–7281	1	Label, Warning – Heater
	333-0438-07	' 1	120 Volt	11	822–3047	1	Screw, Pan Head (M3 x 20)
	333-0438-08	1	240 Volt	12	850-2003	1	Washer, Lock (M3)
2	332-3024-11	2	Clamp, Loop	13	800–3034	1	Screw, Cap – Hex Head
3	822-3075	5	Screw, Pan Head (M4 x 16)				(M4 x .7 x 12)
4	860–2005	2	Nut, Hex (M4)	14	332–3228	1	Mount, Tie – Cable
5	850–2004	4	Washer, Lock (M4)	15	870-2064-01	1	Nut, Nylon
6	526-2050	2	Washer, Flat (M4)	16	332–1389	1	Tie, Cable
7	330-0142	1	Box, Terminal – Heater	17	815-0792-04	2	Screw, Countersunk – Pan
8	332-3023	1	Block, Terminal				Head (M4 x .7 x 12)
9	508-0228	1	Grommet	18	517–0021	1	Plug, Dot – Button

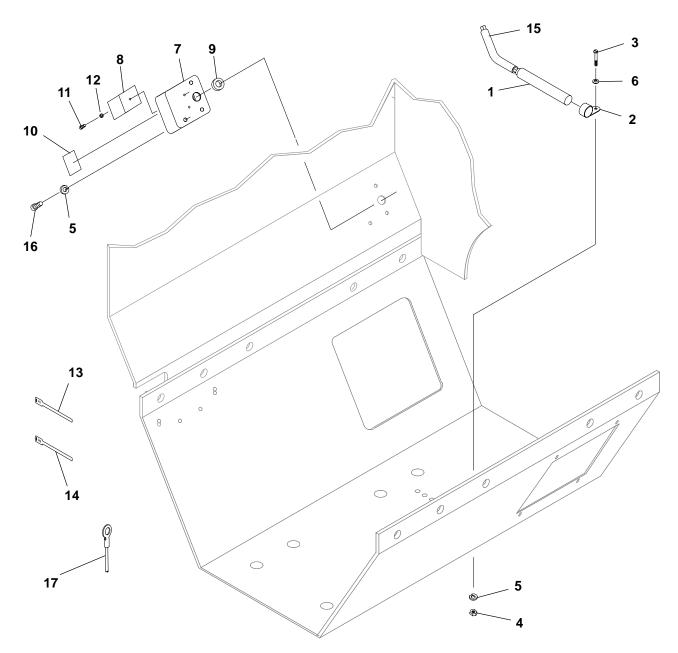


A292,293

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Cartridge, Heater	9	508-0228	1	Grommet
	333-0438-07	1	110-125 Volt	10	098–6142	1	Label, Heater Adjust
	333-0438-08	1	220–260 Volt	11	822–3047	1	Screw, Pan Head (M3 x 20)
2	332-3024-11	2	Clamp, Loop	12	850–2003	1	Washer, Lock (M3)
3	822-3075	5	Screw, Pan Head (M4 x 16)	13	532-0474-19	) 1	Marker, Wire (H1)
4	860-2005	1	Nut, Hex (M4)	14	532-0474-20	) 1	Marker, Wire (H2)
5	850–2004	3	Washer, Lock (M4)	15	898-1254-19	) 1	Sleeving, Insulating
6	526-2050	1	Washer, Flat (M4)	16	815–0242	2	Screw, Thread Cutting - Pan
7	330–0142	1	Box, Terminal – Heater				Head (#8–32 x .5)
8	332–3023	1	Block, Terminal	17	226–4780	2	Lead

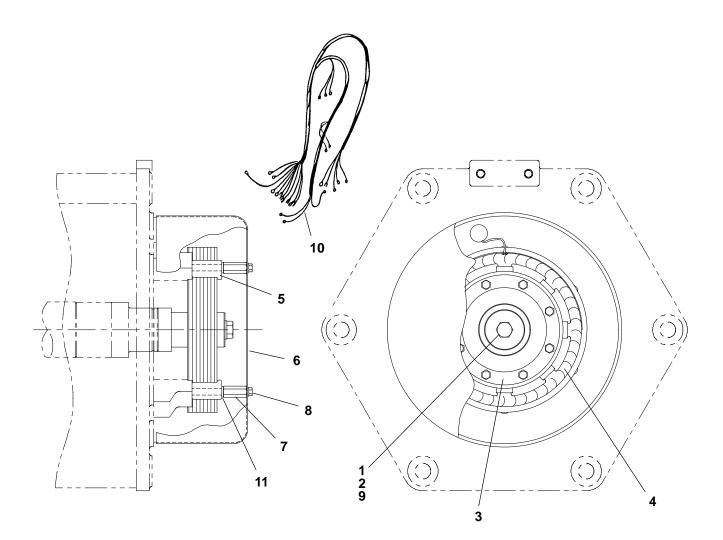


B184

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	775–0049	1	Pin, Parallel	7	232-3462-03	3 4	Spacer, Cover
2	815–0761–01	1	Bolt, Mounting – PMG	8	821-6001-01	4	Screw, SEMS – Hex Head
3	201–3446	1	Rotor, PMG				(M5 x 0.8 x 10)
4	220–4233	1	Stator, PMG	9	850–2010	1	Washer, Lock (M10)
5	232–3972	4	Clamp, Stator – PMG	10	338–3011	1	Harness, Wiring – PMG
6	234-0875-02	1	Cover, End Bell	11	850–2006	4	Washer, Lock (M6)

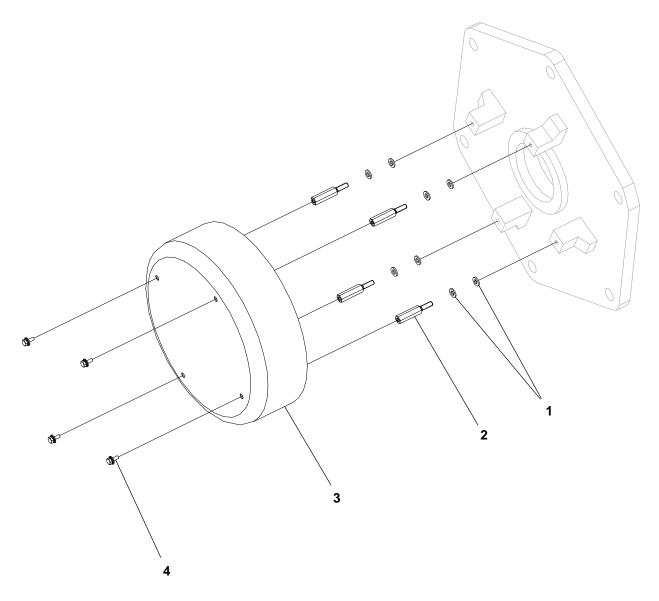


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	526-2080	8	Washer, Flat (M6)	4	821-6001-01	I 4	Screw, Hex Head (M5 x 0.8 x
2	232-3462-01	14	Spacer, Cover				10)
3	234-0875-01	1	Cover, End Bell				

Generator

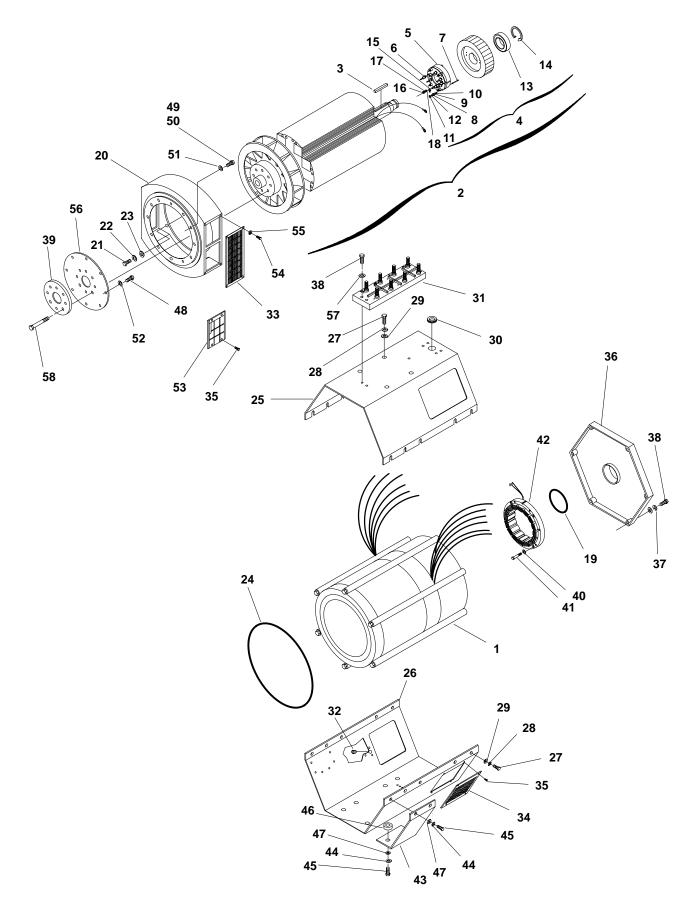


#### Generator

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Stator, Generator (See	28			Washer, Lock – Spring (M10)
			seperate page for part numbers)		850-0114-55 850-0114-55	8 10	130/160 Stack Length 180/240 Stack Length
2			Rotor Assembly, Generator	29	000 0114 00	10	Washer, Flat (M10)
			(Includes parts marked *)		526-0399-62	8	130/160 Stack Length
	201–3557–01	1	130mm Stack Length		526-0399-62	10	180/240 Stack Length
	201-3557-02		160mm Stack Length	30	508-1057	1	Grommet
	201-3557-03 201-3557-04	1 1	180mm Stack Length 240mm Stack Length	31 32	232-3421	1 1	Block, Terminal
3	201-3557-04	I	* Key, Exciter Rotor	33	517–0135 234–0990	2	Plug, Hole Guard, Fan
0	515-0298-01	1	130, 160mm Stack Length	34	234-0878	2	Screen, Air Inlet
	515-0298-02	1	180, 240mm Stack Length	35	821-6001-02	24	Screw, SEMS (M5 x 12mm)
4			* Rotor Assembly, Exciter	36	211–0422	1	Bell, End
			(Includes Parts Marked #)	37	850-0114-54	3	Washer, Lock (M8)
	201–3434–01	1	130, 160mm Stack	38	800–2060	3	Screw, Cap – Hex Head
	201–3434–02	1	Length 180, 240mm Stack	39	232–3960	1	(M8 x 1.25 x 35) Plate, Pressure
	201 0404 02		Length	40	850-2006	4	Washer, Lock – Spring (M6)
5			*# Rectifier Assembly (Includes Parts Marked +)	41			Screw, Cap – Hex Head (M6 x 1)
	357–0091	1	Forward (with Positive Diode)		800–2038	4	130, 160mm Stack Length
	357–0092	1	Reverse (with Negative Diode)		800–2040	4	180, 240mm Stack Length
6	050 0405 04	~	*#+ Diode	42	000 4000 04		Stator, Exciter
	358-0135-01 358-0135-02	3 3	Positive Negative		220-4293-04 220-4293-05	1 1	130, 160mm Stack Length 180, 240mm Stack Length
7	800-3009	3	*#+ Screw, Cap – Hex Head (M4	43	232-3940	2	Bracket, Mounting –
'	000 0000	U	x 35mm) (CR1,2,3,4,5,6)	10	202 0010	-	Generator Foot
8	860–2005	3	*#+ Nut, Hex (M4)	44	850-0114-55	8	Washer, Lock (M10)
9	850–2004	3	*#+ Washer, Lock – Spring (M4)	45	800–3017–41	4	Screw, Cap – Hex Head
10	526-2050	3	*#+ Washer, Flat (M4)	40	000 0700 00	4	(M10 x 45)
11 12	870–2064–01 526–2050	6 6	*# Nut, Locking – Nylon (M4) *# Washer, Flat (M4)	46 47	232–3730–03 526–0423	4 8	Spacer, Foot – Mounting Washer, Flat
13	510-0165	1	* Bearing, Ball	48	805-0015	8	Bolt, Place (3/8–16 x 1)
14	518-0122	1	* Ring, Retaining	49	800–2088	4	Screw, Cap – Hex Head
15	304–0807	1	* Varistor				(M10 x 35mm)
16	860-2006	2	* Nut, Hex (M5)	50	800–2090	6	Screw, Cap – Hex Head
17	850-2005	2	* Washer, Lock – Spring (M5)	54	050 0040	40	(M10 x 35mm)
18 19	526–2060 509–0266–01	2 1	* Washer, Flat (M5) O-Ring	51 52	850–2010 526–0174	12 8	Washer, Lock – Spring (M10) Washer, Flat (3/8)
20	231–0383	1	Adapter, Generator	53	234-0981	2	Guard, Fan
21	800–3017–20	6	Screw, Cap – Hex Head (M8 x 1.25 x 25)	54	821–6001–01	8	Screw, Self–Locking – Hex Washer Head (M5 x 10mm)
22	850-0114-54	6	Washer, Lock (M8)	55	526-0399-11	8	Washer, Flat
23	232–3441	6	Washer, End Bell	56	232-3959-01	1	Disc, Drive
24	508–0139		Seal, Edging – Bulk (Order by the foot – 3 Feet	57 58	526–2100 805–2021–06	3 8	Washer, Flat (M8) Screw, Cap – Hex Head
			Required)	00	000 2021 00	U	
25			Cover, Stator – Top				
	234–0936–01	1	130, 160mm Stack Length				
~~	234–0936–02	1	180, 240mm Stack Length				
26	232–3819–01	1	Cover, Stator – Bottom 130, 160mm Stack Length				
	232–3819–02		180, 240mm Stack Length				
27		•	Screw, Cap – Hex Head	* _P	arts Included in	Generat	or Rotor Assemblies
	800–3017–37	8	130, 160mm Stack Length (M10 x 1.5 x 25mm)	# –P	arts Included in	Exciter F	Rotor Assemblies
	800–3017–37	10	180, 240mm Stack Length (M10 x 1.5 x 25mm)	+ -P	arts Included in	Rectifier	Assemblies

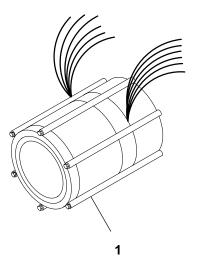

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	220-4447-06 220-4447-17 220-4447-12 220-4447-16 220-4447-08 220-4447-08 220-4447-08 220-4447-15 220-4447-17 220-4447-17 220-4447-17 220-4447-17 220-4447-27 220-4447-28	7     1       1     1       2     1       5     1       5     1       3     1       4     1       7     1       3     1       7     1       7     1	Stator, Generator <b>GGFD</b> 130mm Stack Length, Winding Code 6 160mm Stack Length, Winding Code 6 130mm Stack Length, Winding Code 11 160mm Stack Length, Winding Code 14 130mm Stack Length, Winding Code 17 <b>GGFE</b> 180mm Stack Length, Winding Code 6 240mm Stack Length, Winding Code 6 130mm Stack Length, Winding Code 11 180mm Stack Length, Winding Code 11 240mm Stack Length, Winding Code 11 160mm Stack Length, Winding Code 14 180mm Stack Length, Winding Code 11 240mm Stack Length, Winding Code 14 160mm Stack Length, Winding Code 14 180mm Stack Length, Winding Code 14 180mm Stack Length, Winding Code 17 180mm Stack Length, Winding Code 17 180mm Stack Length, Winding Code 17


# **Control Heater**

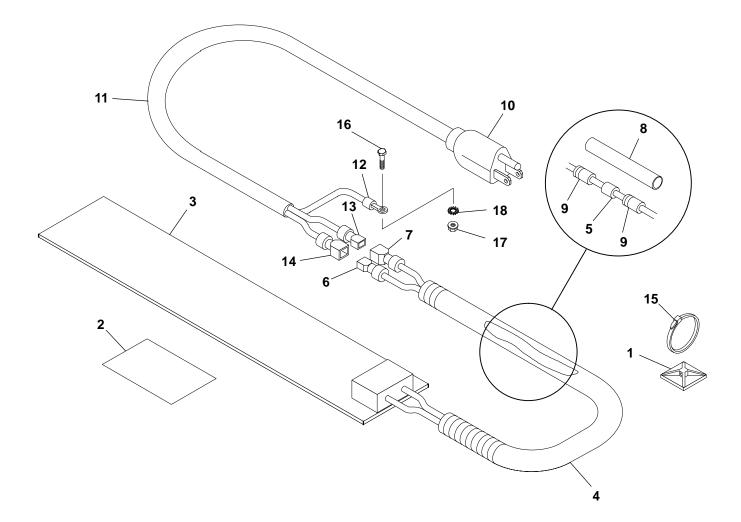

A362,A363

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332–3338	2	Mount, Tie – Cable	11	335–0110	1	* Cable
2	098–6195	1	Label, Caution	12	332–2697	1	* Terminal, Ring
3			Heater, Control	13	332–1992	1	* Terminal, Receptical
	333-0550-0	1 1	120 Volt	14	332–2430	1	* Terminal, Tab
	333-0550-0	21	240 Volt	15	332–0942	3	Tie, Cable
4	898-1195-0	1 A/R	Sleeving, Convoluted	16	800-0024	1	Screw, Cap – Hex Head
5	357–0114	1	Rectifier, Power				(5/16–18 x 3/4)
6	332–1992	1	Terminal, Receptical	17	870-0257	1	Nut, Hex – Self Locking
7	332–2430	1	Terminal, Tab				(5/16–18)
8	898–0860	A/R	Tubing, Heat Shrink	18	856-0008	2	Washer, Lock EIT (5/16)
9	332–1789	2	Splice, Window (18 Gauge)				
10	335–0173	1	Cable, Heater – Control (Includes Parts Marked *)	* – F	Parts Included	in 335–0	173 Heater Cable

# **Detector Control**

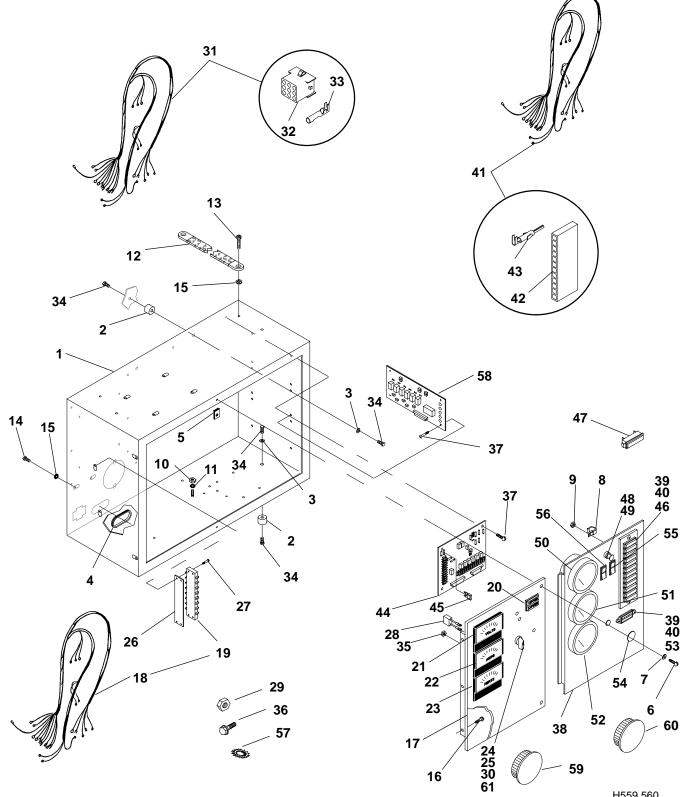


H559,560

# **Detector Control**

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3030 402–0527	1 4	Box, Control Isolator, Vibration	34	800–0045	4	Screw, Cap – Hex Head (5/16–18 x 3/8")
3	850-0045	4	Washer, Lock – Spring (5/16)	35	870–1220	6	Nut, Hex (#4–40)
4	508-0051	1	Grommet (Fits 2" Hole)	36	821-5000-05		Screw, Self–Locking – Hex
5	406-0332	2	Receptacle, Fastener				Washer Head (#10-32 x
6	406-0333	2	Stud, Fastener				1/2")
7	406–0334	2	Washer, Stud Retainer	37	815–0937	4	Screw, Pan Head (Cross
8	332–0052	2	Clip, Wire				Recessed (#6-32 x 1/2")
9	870–0131	1	Nut, Hex – W/ET (#10–32)	38	301-9055-01	1	Door, Control – DC
10	871–0015	1	Nut, Hex (1/4–20)	39	815–0385	4	Screw, Machine – Round
11	526-0018	1	Washer, Flat (1/4")				Head (#6–32 x 1/2")
12	337–0049	1	Strap, Ground	40	870–0183	4	Nut, Hex – W/ET (#6–32)
13	821–0014	5	Screw, Self-Locking – Hex	41	338–3252	1	Harness, Wiring – DC Control
14	815-0905-08	1	Head (5/16–18 x 1/2") Screw, Pan Head – Cross				Door (Includes Connector Housing and Contact Pins)
			Recessed (#10-32 x 7/8")				(22 Wire, 32") (A11J4 to
15	856-0008	2	Washer, Lock – EIT (5/16")				GND, M11,12,13,14,
16	821–0004	3	Screw, Self–Locking – Hex				S11,12, DS11)
			Washer Head (#10–32 x	42	323-1308	1	Housing, Connector (J4)
47	004 0054 04		5/16")	43	323-1302	11	Pin, Contact
17	301-9054-01	1	Door, Control – AC	44	300–4296	1	Board Assembly, Printed
18	338–2278	1	Harness, Wiring – AC Control				Circuit – Engine Monitor
			Door (Includes Terminal	45			(Includes Fuses) (A11)
			Block) (19 Wire, 26")	45	321-0307-03	2	Fuse
			(TB21, GND to GND, M21,22,23, S21, DS21,22)		321-0307-03		5 Amp (Tan) (F4, F5) 15 Amp (Light Blue) (F3)
19	332–0607	1	Block, Terminal (12 Place)		321-0307-00		20 Amp (Yellow) (F1, F2)
19	332-0007	I	(TB21)	46	322-0360-01		Light Assembly, Indicator
20	322-0363	1	Light, Indicator –	40	522-0500-01	I	(Includes Wiring Harness
20	022 0000		Upper/Lower Scale				and Connector Housing)
			(DS21,22)				(A12)
21			Voltmeter, AC (M21)	47	322-0369-01	1	Light, Indicator –
	302–1148	1	0-300/600				Replacement
	302–1753	1	0–0750	48	322-0361	1	Light, Panel (DS11)
22			Ammeter (M22)	49	322-0004	1	Bulb, Panel Light –
	302–1683	1	0-100/200				Replacement
	302–1684	1	0–150/300	50	193–0466	1	Gauge, Oil Pressure (M11)
	302–1685	1	0–200/400	51	193–0351	1	Gauge, Water Temperature
23	302–1968	1	Meter, Frequency (M23)				(M12)
24	853–0008	1	Washer, Lock – ET (#10)	52	302–1641	1	Voltmeter (M13)
25	308–1052	1	Switch, Rotary –	53	302-2002	1	Meter, Hour (M14)
			Voltmeter/Ammeter	54	517-0131	1	Plug, Hole (Fits 7/8" Hole)
~~	000 0700		(Includes Handle) (S21)	55	308–1010	1	Switch, Rocker – Lamp
26	332-2723	1	Strip, Marker				Test/Reset Panel Lamp
27	815-0901-06	2	Screw, Cross Recessed –	50	200 4044	4	(S11) Switch Decker
			Thread Forming (#6–32 x	56	308–1011	1	Switch, Rocker –
20	255 0190	4	5/8")	67	952 0009	4	Run/Stop/Remote (S12)
28	355–0189	1	Capaciter – Voltmeter (.1	57 58	853-0008	1	Washer, Lock – ET (#10)
29	870–0183	2	Mfd., 500 WVDC) (C21) Nut, Hex – W/ET (#6–32)	58	300–5098	1	Board, Printed Circuit – Sensor Board (A27)
30	815-0875-02		Screw, Machine – Round	59	517–0302	1	Plug, Hole (Fits 2–1/4" Hole)
50	013-0073-02	5	Head (M4 x 8mm)	55	517-0502	1	(Quantity Used As
31	338–3429	1	Harness, Wiring – Terminal				Required)
51	000 0723	ı	Block (9 Wire, 11")	60	517–0301	1	Plug, Hole (Fits 2" Hole)
			(Includes Connector Plug	00	517 0001	I	(Quantity Used As
			and Sockets) (P2 to TB21)				Required)
32	323–1644–02	1	Plug, Connector (P2)	61	308–1082	1	Handle, Rotary Switch
33	323–1648	9	Socket, Contact	51	200 1002	•	
		-	,				

Wiring Harness AC Control

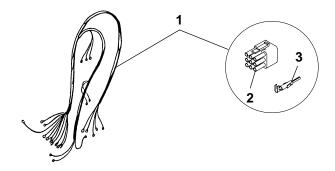


CP01,H559,560,562,R114,K001


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3405	1	Harness, Wiring – AC Control (Includes Connector Plug and Contact Pins) Generators With Full Rated, 3 Phase, 60 Hertz Output at 347/600 Volts (16 Wire, 41") (Includes Parts Marked *)
	338–3403	1	(J2 to 5,6,7,8, GND, P1, CT21,22,23) All Other Generators (12 Wire, 38") (Includes Parts Marked #) (J2 to 4,5,6,7,8, GND, CT21,22,23)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	323–1644–01	2	Plug, Connector (9 Place) * Generators With Full Rated, 3 Phase, 60 Hertz Output at 347/600 Volts (P1, J2)
3	323–1644–01	1	# All Other Generators (J2) Pin, Contact
-	323–1647	18	* Generators With Full Rated, 3 Phase, 60 Hertz Output at 347/600 Volts
	323–1647	9	# All Other Generators


\* – Parts Used In 338–3405 AC Control Wiring Harness # – Parts Used In 338–3403 AC Control Wiring Harness

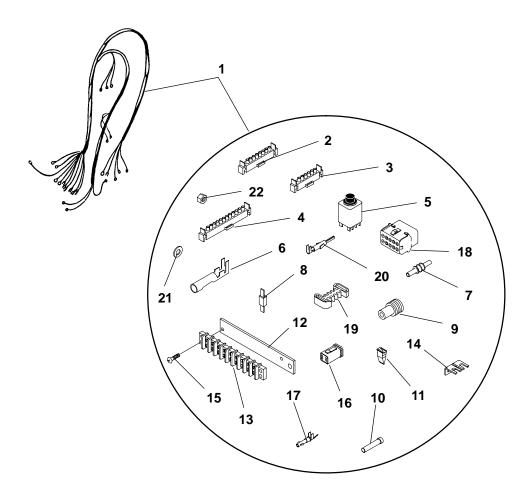

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3925		Harness, Engine (Includes	12	319–2006–01	1	Bracket, Terminal
			Parts Listed Below)	13	332-0604	1	Block, Terminal
2	323–1306	1	Housing, Connector – 8	14	332–1043	4	Jumper
			Place (J1)	15	815–0538	2	Screw, Machine – Round
3	323–1304	1	Housing, Connector – 6 Place (J2)				Head – Cross Recessed – W/IT (#8–32 x .50)
4	323-1374-12	2 1	Housing, Connector – 12	16	323–1546	1	Plug (4 Pin)
			Place (J3)	17	323-1302	11	Pin, Contact
5	307-2817-01	12	Relay	18	323–1710	1	Connector, Receptacle – 10
6	323–1200	12	Socket, Contact				Pin (P8)
7	323–1712	A/R	Plug, Cavity (P8)	19	323–1719	1	Housing, Lock (P8)
8	357-0030	1	Rectifier, Silicon	20	323–1707	10	Pin, Contact (P8)
9	323–1708	6	Seal, Cable (P8)	21	526-2080	1	Washer, Flat (M6)
10	323–1591	1	Plug, Seal	22	862-0026-54	1	Nut, Hex (M6)
11	323–1548	1	Wedge, Plug (4 Pin)				

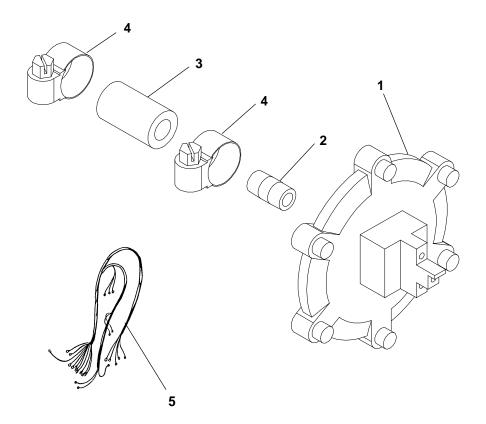


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	148–1099	1	Switch, Vacuum	4	503–0446	2	Clamp, Hose
2	505–0098	1	Nipple, Pipe (1/8 x .75)	5	338–3667	1	Harness, Wiring – Vacuum
3	503–2004	_	Hose – Bulk (3/8 ID) (Order by the Foot – 1 Foot Required)				Switch

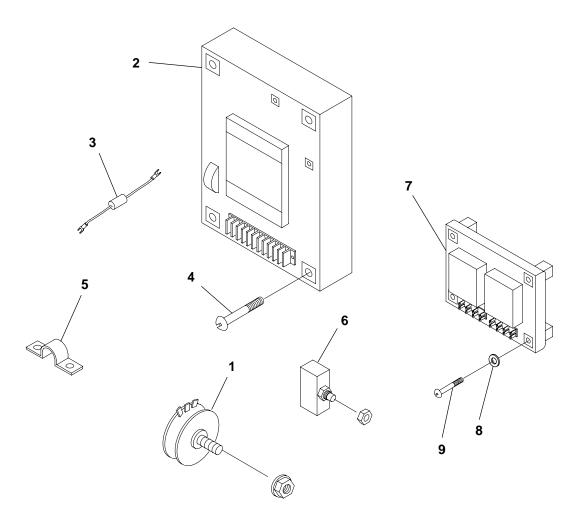

B184,240

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	303–0261 303–0285–01	1 1	Potentiometer SX460 Regulator MX321 Regulator	7	305–0868	1	Board, PC – Isolation Transformer (MX321 Regulator Only – Up to 480
2	005 0000		Regulator, Voltage	0	500 0000		Volts)
	305–0982 305–0823	1 1	SX460 Regulator MX321 Regulator	8	526-0003	4	Washer (#8) (MX321 Regulator Only – Up to 480
3	350–1222	1	Resistor				Volts)
4			Screw, Cross Recessed (#10–32 x 7/8)	9	815–0901–06	4	Screw, Pan Head – Cross Recessed – Thread
	815-0905-08	4	SX460				Forming (#6–32 x 5/8)
	815-0905-08	6	MX321				(MX321 Regulator Only –
5	332–1043	1	Jumper				Up to 480 Volts)
6	320-1688-01	1	Breaker, Circuit				1 )


# Alarm Relay Board

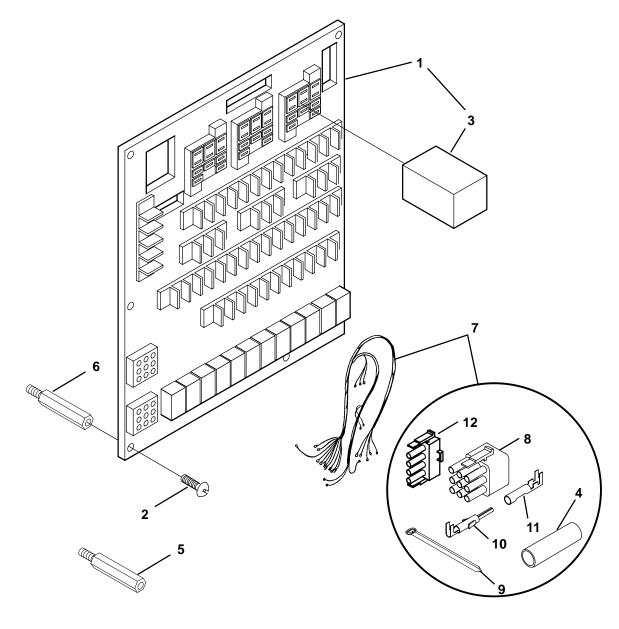

KJ03


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4111-03	1	Board, PC – Alarm Relay	7	338–2875	1	Harness, Alarm Relay Board
2	815–0937	6	Screw, Machine – Pan Head				(Includes parts marked *)
			<ul> <li>Cross Recessed (#6–32</li> </ul>	8	323–1291	2	* Plug, 9 Pin
			x .50)	9	332–1445	A/R	* Tie, Cable
3	307-1058	3	Relay (12 VDC) (K1, K2, K3)	10	323–1199	9	* Pin, Contact
4	898–0025	5	* Sleeving (1/2")	11	323–1200	12	* Socket, Contact
5	870-0517-02	2 2	Standoff – Alarm Board (1.31 lg.)	12	323–1292	1	* Plug, 4 Pin
6	870-0517-01	4	Standoff – Alarm Board				
			(1.25 lg.)	* = F	Parts includes	in 338–28	375 Harness Assembly

# Common Alarm

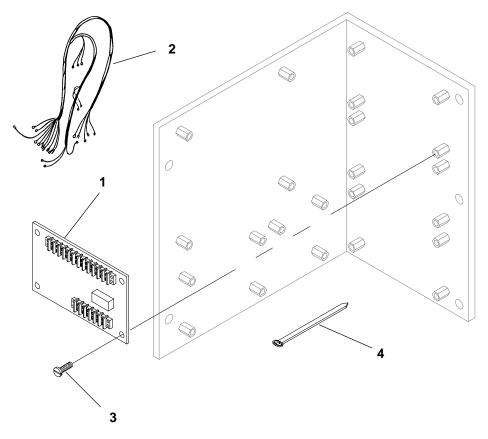


H560

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4218-01	1	Board, PC – Diode	4	332–1445	A/R	Tie, Cable
2	338–3033	1	Harness, Common Alarm				
3	812–0063	4	Screw, Machine – Round Head (#6–32 x 1/2)				

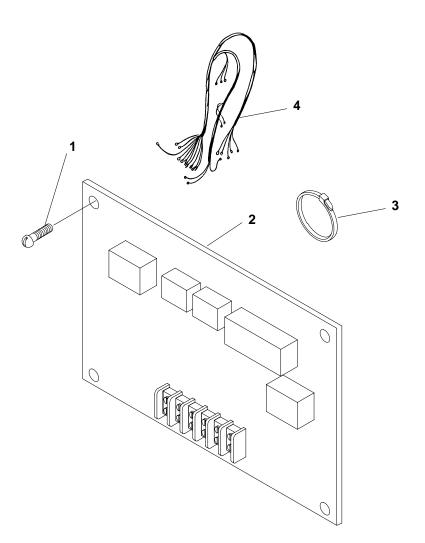


KL39

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	RE NC	 PART NO.	QTY USED	PART DESCRIPTION
1	815–0937	4	Screw, Machine – Pan Head – Cross Recessed (#6–32 x 1/2)	-	 2–1445 3–1904	3 1	Tie, Cable Harness, Time Delay Start/ Stop
2	300–2897	1	PCB, Time Delay Start/Stop				r

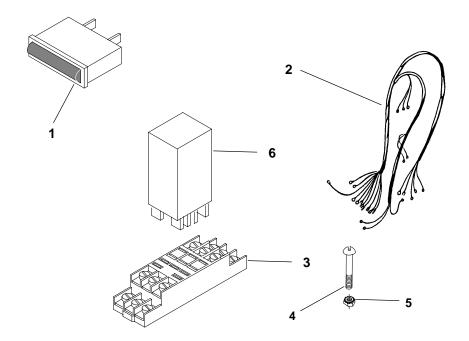


H560,H543

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	322–0431–08 338–3034	1 1	Lens, Indicator Harness, Low Battery	4	812–0084	2	Screw, Machine – Round Head (#8–32 x 1)
-		•	Voltage	5	870–1221	2	Nut, Hex W/ET (#8–32)
3	323-1410-03	1	Base, Relay	6	305–0901	1	Sensor, Low Battery

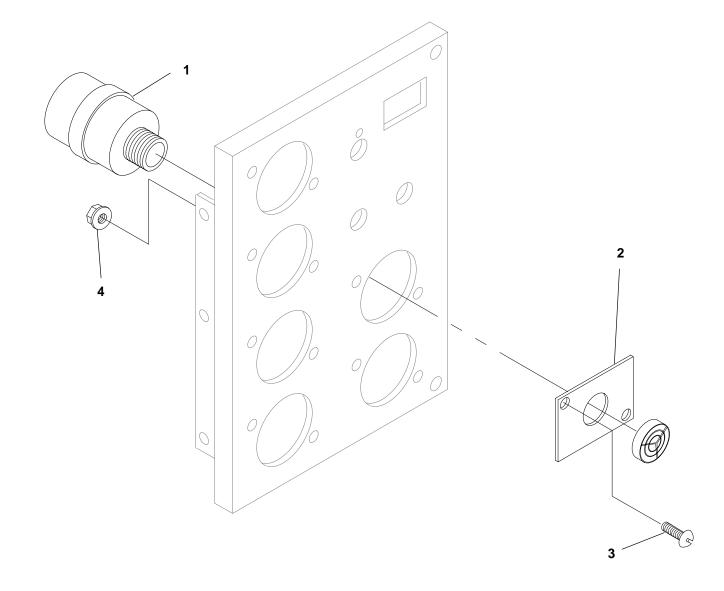


KL39

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333–0133	1	Signal, Audible	4	870–0183	2	Nut, Hex W/ET (#6–32)
2	319–0898	1	Plate, Audible Signal				
3	815–0385	2	Screw, Machine – Round Head (#6–32 x 1/2)				

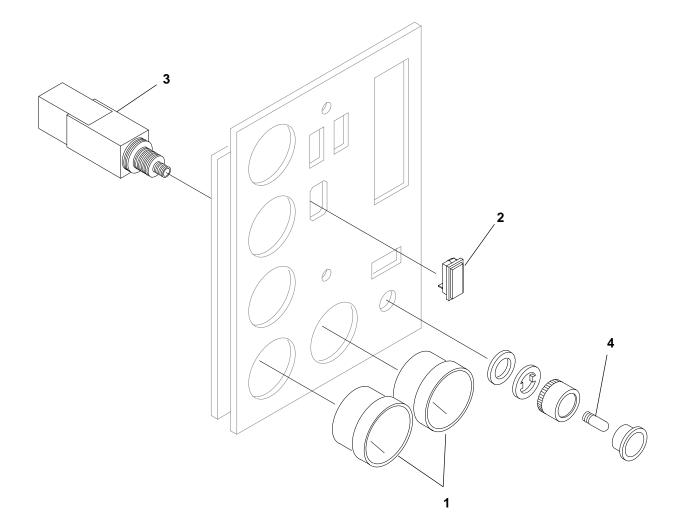

KL39

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2 3	302–1723 301–6257 308–1095	2 1 1	Ammeter – Blank Scale Switch – Blank Switch, Pushbutton – Emergency Stop (Includes Bulb)	4	322–0487	1	Bulb, Replacement

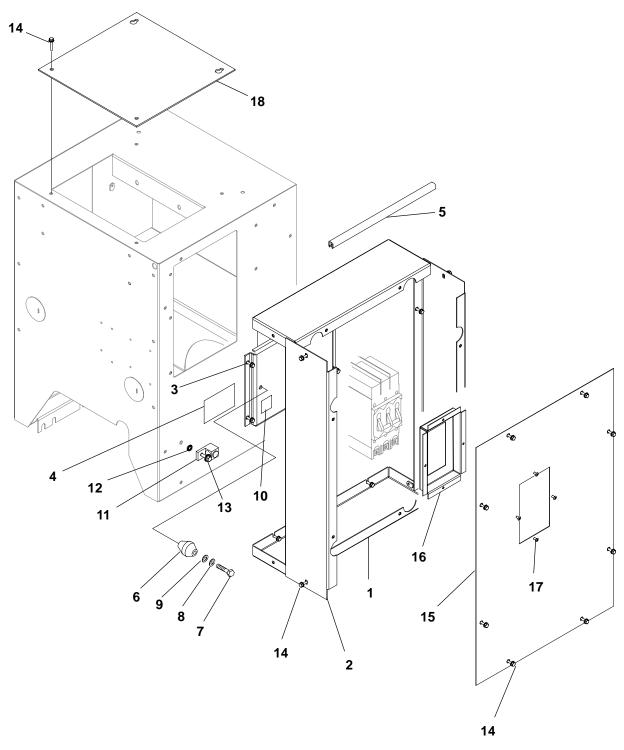


K028

# **Circuit Breaker Box**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3072	2	Panel, End – CB Box	16			Cutout, CB Box
2	319–2978	2	Panel, Side – CB Box				UL
3	319–3149	1	Bracket, Mounting – CB		319–3150	1	600 Volt, 300–630 Amp,
4	098–2304	1	Label, Warning				3 Pole
5	508–0239	-	Edging – Bulk (Order By The Foot – 2 Feet Required)		319–3240	1	240 Volt, 300–400 Amp, 2/3 Pole
6	332-2744-07	1	*Standoff, Insulator		319–3242	1	240 Volt, 100–250 Amp,
7	800–0048	2	*Screw, Cap – Hex Head				2/3 Pole
			(3/8–16 x .75)		319–3242	1	600 Volt, 50–250 Amp,
8	850-0050	2	*Washer, Lock (3/8)				3 Pole
9	526-0029	1	*Washer, Flat (3/8)				IEC
10	098–5854–04	1	*Label, Bus – Warning		319–3150	1	690 Volt, 300–630 Amp,
11	332–1473	1	Lug, Solderless				3/4 Pole
12	856-0008	1	Washer, Lock – EIT (5/16)		319–3242	1	690 Volt, 70–250 Amp,
13	821-6003-02	1	Screw, SEMS – Hex Head				3/4 Pole
			(M8 x 1.25 x 20)	17	818-0231-02	4	Rivet, Pop
14	821–6002–03	24	Screw, SEMS – Hex Head (M6 x 1 x 16)	18	319–2996	1	Cover, Housing – Control
15	319–3151	1	Cover, CB Box	* = l	JL Rated Break	ers only	


# **Circuit Breaker**

10

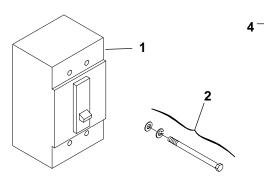


REF NO.

1

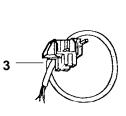

F	PART NO.	QTY USED		PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
				Breaker, Circuit	2			Package, Hardware – Circuit
				2 Pole (UL)				Breaker Mounting (Includes
	320-1961-07	1		100 Amp (240 Volts)				Screws, Nuts and Lock
	320-1961-06	1		125 Amp (240 Volts)		000 4000 00		Washers)
	320-1961-05	1		150 Amp (240 Volts)		320-1986-08	1	Used With 320–1959–XX
	320-1961-04	1		175 Amp (240 Volts)		220 4000 07	4	Circuit Breakers
	320-1961-03	1		200 Amp (240 Volts)		320–1986–07	1	Used With 320–1960–XX
	320-1961-02	1 1		225 Amp (240 Volts)				Circuit Breakers
	320–1961–01 320–1962–03	1	*	250 Amp (240 Volts) 300 Amp (240 Volts)		320-1986-05	1	(Screws Only) Used With 320–1962–XX
	320-1902-03	I		<b>3 Pole (UL)</b>		320-1960-05	I	Circuit Breakers
	320-1961-14	1		100 Amp (240 Volts)				(Screws Only)
	320-1961-13	1		125 Amp (240 Volts)	3			Accessories, Circuit
	320-1961-12	1		150 Amp (240 Volts)	5			Breaker: The following
	320-1961-11	1		175 Amp (240 Volts)				are used on 320–1959–XX
	320-1961-10	1		200 Amp (240 Volts)				and 320–1960–XX Circuit
	320-1961-09	1		225 Amp (240 Volts)				Breakers
	020 1001 00	•		3 Pole (UL & IEC)		320-1981-02	1	Trip, Shunt (12V)
	320-1959-22	1	*	15 Amp (600/750 Volts)		320-1981-01	2	Switch – Used as an
	320-1959-21	1	*	20 Amp (600/750 Volts)		020 1001 01	-	Auxiliary Contact or Trip
	320-1959-20	1	*	30 Amp (600/750 Volts)				Alarm
	320-1959-19	1	*	40 Amp (600/750 Volts)	4			Lead (Quantity Used As
	320-1959-18	1	*	50 Amp (600/750 Volts)				Required)
	320-1959-17	1	*	60 Amp (600/750 Volts)		226-0893	1	3/8" Ring Terminal End to
	320-1959-10	1	*	70 Amp (600/750 Volts)				1" Stripped End – No
	320-1959-09	1	*	80 Amp (600/750 Volts)				Markings (33") (#1/0
	320-1959-08	1	*	90 Amp (600/750 Volts)				Wire)
	320-1959-07	1	*	100 Amp (600/750 Volts)		226-3505-01	1	3/8" Ring Terminal End to
	320-1959-06	1	*	125 Amp (600/750 Volts)				1" Stripped End – No
	320-1959-05	1	*	150 Amp (600/750 Volts)				Markings (30") (#4
	320-1959-04	1	*	175 Amp (600/750 Volts)				Wire)
	320-1959-03	1	*	200 Amp (600/750 Volts)		226-3505-03	1	3/8" Ring Terminal End to
	320-1959-02	1	*	225 Amp (600/750 Volts)				3/8" Ring Terminal End
	320-1959-01	1	*	250 Amp (600/750 Volts)				<ul> <li>– Marked "LO" (30") (#4</li> </ul>
	320-1960-06	1	*	300 Amp (600/750 Volts)				Wire)
				4 Pole (IEC)		226-3505-04	1	3/8" Ring Terminal End to
	320-1959-16	1	*	80 Amp (750 Volts)				3/8" Ring Terminal End
	320-1959-15	1	*	100 Amp (750 Volts)				– Marked "LO" (30")
	320-1959-14	1	*	125 Amp (750 Volts)				(#1/0 Wire)
	320-1959-13	1	*	160 Amp (750 Volts)				
	320-1959-12	1	*	200 Amp (750 Volts)	* 1		م الميران	
	320-1959-11	1 1	*	250 Amp (750 Volts)	" – Ir	ncludes Mountir	ig Hardw	are
	320-1960-10	Т		320 Amp (750 Volts)				

# **Current Transformer**

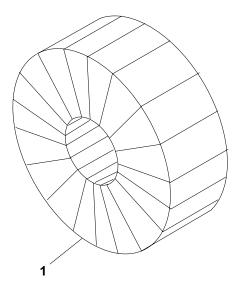

REF	PART QTY PART		REF	PART	QTY	PART	
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Transformer, Current (CT21,				Greater than 300 Volts
			CT22, CT23)	:	302-1845-0	33	75/5 Primary Ratio
			Less than 300 Volts	:	302–1845–04	43	100/5 Primary Ratio
	302-1845-03	3	150/5 Primary Ratio	:	302-1845-0	53	150/5 Primary Ratio
	302-1845-04	3	200/5 Primary Ratio				
	302-1845-05	3	300/5 Primary Ratio				

Part No. Page	Part No. Page	Part No. Page	Part No. Page
098–2304, <b>61</b>	148–1159–02, <b>13</b> , <b>15</b>	193–0468, <b>19</b> , <b>20</b>	232–3972, <b>42</b>
098–4500, <b>29</b> , <b>30</b>	150–2651, <b>37</b>	201–3434–01, <b>45</b>	234–0875–01, <b>43</b>
098–4730, <b>29</b> , <b>30</b>	150–2692–01, <b>37</b>	201–3434–02, <b>45</b>	234–0875–02, <b>42</b>
098–4732, <b>29</b> , <b>30</b>	150–2697–01, <b>37</b>	201–3446, <b>42</b>	234–0878, <b>45</b>
098–5429, <b>29</b> , <b>30</b>	150–2766–02, <b>37</b>	201–3557–01, <b>45</b>	234–0936–01, <b>45</b>
098–5854–04, <b>61</b>	151–0769, <b>37</b>	201–3557–02, <b>45</b>	234–0936–02, <b>45</b>
098–6139–06, <b>30</b>	154–3048, <b>18</b>	201–3557–03, <b>45</b>	234–0981, <b>45</b>
098–6142, <b>41</b>	155–1256, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b>	201–3557–04, <b>45</b>	234–0990, <b>45</b>
098–6195, <b>47</b>	155–2062–03, <b>17</b>	211–0422, <b>45</b>	300–2897, <b>56</b>
098–7281, <b>40</b>	155–2062–10, <b>17</b> , <b>18</b>	220–4233, <b>42</b>	300–4111–03, <b>54</b>
098–7451, <b>29</b> , <b>30</b>	155–2175, <b>17</b> , <b>18</b>	220–4293–04, <b>45</b>	300–4218–01, <b>55</b>
098–7470, <b>29</b>	155–3102–02, <b>17</b> , <b>18</b>	220–4293–05, <b>45</b>	300–4296, <b>49</b>
102–0664, <b>22</b>	155–3167, <b>18</b>	220–4447–06, <b>46</b>	300–5098, <b>49</b>
102–1054–01, <b>22</b>	155–3193, <b>17</b>	220–4447–07, <b>46</b>	301–6257, <b>59</b>
104–1972, <b>7</b>	155–3238, <b>29</b> , <b>30</b>	220–4447–08, <b>46</b>	301–9054–01, <b>49</b>
128–0154–04, <b>29</b>	155–3377, <b>16</b>	220–4447–09, <b>46</b>	301–9055–01, <b>49</b>
128–0252, <b>29</b>	155–3378, <b>17</b> , <b>18</b>	220–4447–11, <b>46</b>	302–1148, <b>49</b>
130–1788, <b>26</b>	155–3389–02, <b>25</b> , <b>26</b>	220–4447–12, <b>46</b>	302–1641, <b>49</b>
130–4596–02, <b>26</b>	155–3391–02, <b>25</b> , <b>26</b>	220–4447–13, <b>46</b>	302–1683, <b>49</b>
130–4602, <b>26</b>	155–3458–02, <b>7</b>	220–4447–14, <b>46</b>	302–1684, <b>49</b>
130–4622, <b>23</b>	166–0876, <b>7</b>	220–4447–16, <b>46</b>	302–1685, <b>49</b>
130–4623, <b>23</b>	166–0882, <b>7</b>	220–4447–17, <b>46</b>	302–1723, <b>59</b>
130–4767, <b>26</b>	186–6274, <b>35</b>	220–4447–18, <b>46</b>	302–1753, <b>49</b>
130–4848, <b>30</b>	186–6618, <b>35</b>	220–4447–26, <b>46</b>	302–1845–03, <b>63</b>
130–5213–02, <b>26</b>	186–6619, <b>35</b>	220–4447–27, <b>46</b>	302–1845–04, <b>63</b>
130–5269–02, <b>25</b> , <b>26</b>	186–6675, <b>35</b>	220–4447–28, <b>46</b>	302–1845–05, <b>63</b>
130–5270–02, <b>25</b> , <b>26</b>	191–1981, <b>36</b>	226–0893, <b>62</b>	302–1968, <b>49</b>
130–5271–02, <b>25</b> , <b>26</b>	191–2200, <b>35</b>	226–3505–01, <b>62</b>	302–2002, <b>49</b>
130–5272–02, <b>25</b> , <b>26</b>	191–2209–01, <b>36</b>	226–3505–03, <b>62</b>	303–0261, <b>53</b>
130–5273–02, <b>26</b>	191–2213, <b>7</b> , <b>35</b>	226–3505–04, <b>62</b>	303–0285–01, <b>53</b>
130–5306–02, <b>25</b>	191–2215, <b>35</b>	226–4780, <b>41</b>	304–0807, <b>45</b>
130–5383, <b>26</b>	191–2216, <b>35</b>	231–0383, <b>45</b>	305–0823, <b>53</b>
140–3271, <b>5</b>	191–2217, <b>35</b>	231–0395–02, <b>7</b>	305–0868, <b>53</b>
140–3272, <b>5</b>	191–2218, <b>35</b>	232–3421, <b>45</b>	305–0901, <b>57</b>
145–0787, <b>9</b>	191–2219, <b>35</b>	232–3441, <b>45</b>	305–0982, <b>53</b>
148–0597, <b>10</b> , <b>12</b> , <b>15</b>	191–2221, <b>35</b>	232–3462–01, <b>43</b>	307–0268–01, <b>13</b> , <b>15</b>
148–0625, <b>13</b> , <b>15</b>	191–2222, <b>35</b>	232–3462–03, <b>42</b>	307–1058, <b>54</b>
148–0637, <b>11</b> , <b>12</b>	191–2287–02, <b>7</b>	232–3730–03, <b>45</b>	307–2817–01, <b>51</b>
148–1086, <b>5</b>	191–2309–02, <b>7</b>	232–3819–01, <b>45</b>	307–2930, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b>
148–1099, <b>52</b>	193–0318, <b>7</b>	232–3819–02, <b>45</b>	308–1010, <b>49</b>
148–1146, <b>9</b>	193–0351, <b>49</b>	232–3940, <b>45</b>	308–1011, <b>49</b>
148–1147–02, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b>	193–0448, <b>7</b>	232–3959–01, <b>45</b>	308–1052, <b>49</b>
148–1152, <b>13</b> , <b>15</b>	193–0466, <b>49</b>	232–3960, <b>45</b>	308–1082, <b>49</b>

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
308–1095, <b>59</b>	)	320–1961–02	, <b>62</b>	323–1644–02	, <b>49</b>	338–1904, <b>56</b>	
309–0669, <b>12</b>	2, 15	320–1961–03	, <b>62</b>	323–1647, <b>50</b>		338–2278, <b>49</b>	1
319–0898, <b>58</b>	6	320–1961–04	, <b>62</b>	323–1648, <b>49</b>		338–2875, <b>54</b>	
319–2006–01	, <b>51</b>	320–1961–05	, <b>62</b>	323–1707, <b>51</b>		338–3011, <b>42</b>	
319–2653, <b>29</b>	), <b>30</b>	320–1961–06	, <b>62</b>	323–1708, <b>19</b>	, <b>20</b> , <b>51</b>	338–3033, <b>55</b>	
319–2978, <b>38</b>	s, 61	320–1961–07	, <b>62</b>	323–1709, <b>19</b>	, <b>20</b>	338–3034, <b>57</b>	
319–2979–02	2, 38	320–1961–09	, <b>62</b>	323–1710, <b>51</b>		338–3035–01	, <b>19</b>
319–2996, <b>38</b>	8, 39, 61	320–1961–10	, <b>62</b>	323–1712, <b>20</b>	, <b>51</b>	338–3252, <b>49</b>	I
319–3030, <b>49</b>		320–1961–11	, <b>62</b>	323–1719, <b>51</b>		338–3403, <b>50</b>	I
319–3072, <b>38</b>	s, 61	320–1961–12	, <b>62</b>	323–1765, <b>19</b>	, <b>20</b>	338–3405, <b>50</b>	1
319–3149, <b>61</b>		320–1961–13	, <b>62</b>	330–0142, <b>40</b>	, <b>41</b>	338–3429, <b>49</b>	I
319–3150, <b>61</b>		320–1961–14	, <b>62</b>	332–0052, <b>49</b>		338–3594, <b>19</b>	I
319–3151, <b>61</b>		320–1962–03	, <b>62</b>	332–0604, <b>51</b>		338–3654–01	, <b>13</b> , 15
319–3207, <b>39</b>	)	320–1981–01	, <b>62</b>	332–0607, <b>49</b>		338–3667, <b>52</b>	
319–3208, <b>39</b>	)	320–1981–02	, <b>62</b>	332–0942, <b>47</b>		338–3740–01	, <b>8</b>
319–3240, <b>61</b>		320–1986–05	, <b>62</b>	332–1043, <b>51</b>	, <b>53</b>	338–3751, <b>20</b>	1
319–3242, <b>61</b>		320–1986–07	, <b>62</b>	332–1389, <b>40</b>		338–3816–01	, <b>12</b> , <b>15</b>
320–1688–01	, <b>53</b>	320–1986–08	, <b>62</b>	332–1445, <b>54</b>	, <b>55</b> , <b>56</b>	338–3925, <b>51</b>	
320–1959–01	, <b>62</b>	321–0307–03	, <b>49</b>	332–1473, <b>38</b>	, <b>61</b>	350–1222, <b>53</b>	
320–1959–02	2, <b>62</b>	321–0307–06	, <b>49</b>	332–1789, <b>47</b>		355–0189, <b>49</b>	1
320–1959–03	s, 62	321–0307–07	, <b>49</b>	332–1992, <b>47</b>		357–0030, <b>19</b>	, <b>51</b>
320–1959–04	, <b>62</b>	322–0004, <b>49</b>	)	332–2430, <b>47</b>		357–0091, <b>45</b>	
320–1959–05	i, <b>62</b>	322–0360–01	, <b>49</b>	332–2697, <b>47</b>		357–0092, <b>45</b>	
320–1959–06	6, <b>62</b>	322–0361, <b>49</b>	)	332–2723, <b>49</b>		357–0114, <b>47</b>	
320–1959–07	′, <b>62</b>	322–0363, <b>49</b>	)	332–2744–07	, 61	358–0135–01	, <b>45</b>
320–1959–08	8, <b>62</b>	322-0369-01	, <b>49</b>	332–2987, <b>39</b>		358–0135–02	, <b>45</b>
320–1959–09	), <b>62</b>	322–0431–07	, <b>19</b>	332–3023, <b>40</b>	, <b>41</b>	402–0527, <b>49</b>	1
320-1959-10	), <b>62</b>	322–0431–08	, <b>57</b>	332–3024–11	, <b>40</b> , <b>41</b>	402–0730, <b>32</b>	, <b>33</b>
320–1959–11	, <b>62</b>	322–0487, <b>59</b>	)	332–3196, <b>13</b>	, <b>15</b> , <b>21</b>	403–4110, <b>31</b>	
320–1959–12	2, <b>62</b>	323–1199, <b>54</b>		332–3228, <b>40</b>		403–4116, <b>31</b>	
320–1959–13	s, 62	323–1200, <b>51</b>	, <b>54</b>	332–3338, <b>47</b>		403–4267, <b>34</b>	
320–1959–14	, <b>62</b>	323–1291, <b>54</b>		333–0133, <b>58</b>		403–4290, <b>31</b>	
320–1959–15	5, <b>62</b>	323–1292, <b>54</b>		333–0438–07	, 40, 41	403–4450–02	, <b>32</b>
320–1959–16	6, <b>62</b>	323–1302, <b>49</b>	, 51	333–0438–08	, <b>40</b> , <b>41</b>	403–4486–02	, 32, 33
320–1959–17	′, <b>62</b>	323–1304, <b>51</b>		333–0550–01	, <b>47</b>	403–4487–02	, <b>32</b>
320–1959–18	8, <b>62</b>	323–1306, <b>51</b>		333-0550-02	, <b>47</b>	403–4496–02	, 32, 33
320–1959–19	), <b>62</b>	323–1308, <b>49</b>	)	333–0588–03	, <b>21</b>	403–4497–02	, <b>33</b>
320–1959–20	), <b>62</b>	323–1374–12	., <b>51</b>	333–0588–04	, <b>21</b>	405–5734, <b>29</b>	1
320–1959–21	, <b>62</b>	323–1410–03	, <b>57</b>	333–0616, <b>21</b>		405–5745, <b>29</b>	, <b>30</b>
320–1959–22	2, <b>62</b>	323–1546, <b>51</b>		335–0110, <b>47</b>		405–5832, <b>30</b>	1
320–1960–06	5, <b>62</b>	323–1548, <b>51</b>		335–0173, <b>47</b>		405–5841, <b>29</b>	1
320-1960-10	), <b>62</b>	323–1591, <b>51</b>		337–0049, <b>49</b>		405–5902, <b>29</b>	, <b>30</b>
320–1961–01	, <b>62</b>	323-1644-01		337-0090-01		405–5903, <b>29</b>	

Part No. Page	Part No. Page	Part No. Page	Part No. Page
405–5908, <b>29</b> , <b>30</b>	406–0332, <b>49</b>	505–0084, <b>12</b>	526–0174, <b>32</b> , <b>33</b> , <b>45</b>
405–5910, <b>29</b> , <b>30</b>	406–0333, <b>49</b>	505–0085, <b>12</b>	526-0238-01, <b>32</b> , <b>33</b>
405–5916, <b>29</b> , <b>30</b>	406–0334, <b>49</b>	505–0098, <b>52</b>	526–0399–11, <b>45</b>
405–5952, <b>29</b>	406–0782, <b>29</b> , <b>30</b>	505–0099, <b>13</b> , <b>15</b>	526–0399–62, <b>45</b>
405–5953, <b>29</b>	406–0831, <b>29</b> , <b>30</b>	505–0102, <b>10</b> , <b>11</b> , <b>12</b> , <b>13</b> , <b>15</b>	526–0423, <b>45</b>
405–5954, <b>29</b>	406–0918, <b>29</b> , <b>30</b>	505–0107, <b>15</b>	526–0433, <b>32</b> , <b>33</b>
405–5955, <b>29</b>	416–0549, <b>7</b>	505–0117, <b>27</b>	526–0451, <b>29</b> , <b>30</b>
405–5956, <b>29</b>	416–0993–02, <b>34</b>	505–0132, <b>10</b> , <b>11</b> , <b>12</b> , <b>13</b> , <b>15</b>	526–2050, <b>40</b> , <b>41</b> , <b>45</b>
405–5957, <b>29</b>	416–1019, <b>7</b>	505–0166, <b>12</b> , <b>15</b>	526–2060, <b>45</b>
405–5958, <b>29</b>	416–1033, <b>34</b>	505–0304, <b>13</b> , <b>15</b>	526–2080, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b> , <b>37</b> ,
405–5960, <b>29</b>	502–0054, <b>13</b> , <b>15</b>	505–0332, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b>	43, 51
405–5961, <b>29</b>	502–0085, <b>27</b>	505–0479, <b>13</b> , <b>15</b>	526–2100, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b> , <b>45</b>
405–5966, <b>29</b>	502–0613, <b>21</b>	508–0051, <b>49</b>	526–2101, <b>25</b>
405–5987, <b>29</b>	502–0827, <b>13</b> , <b>15</b> , <b>22</b> , <b>27</b>	508–0139, <b>45</b>	526–2106, <b>7</b>
405–5988, <b>29</b>	502–0870, <b>21</b>	508–0228, <b>40</b> , <b>41</b>	526–2120, <b>16</b> , <b>17</b> , <b>18</b> , <b>39</b>
405–5990, <b>29</b>	502–0942, <b>13</b> , <b>15</b>	508–0239, <b>38</b> , <b>61</b>	526–2132, <b>13</b> , <b>15</b>
405–5991–01, <b>29</b>	502–1376, <b>7</b>	508–0305–02, <b>39</b>	526–2140, <b>32</b> , <b>33</b>
405–5991–02, <b>29</b>	503–0098, <b>22</b> , <b>27</b>	508–1057, <b>45</b>	532–0474–19, <b>41</b>
405–5995, <b>29</b>	503–0183, <b>13</b> , <b>15</b> , <b>21</b>	508–1158, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b>	532–0474–20, <b>41</b>
405–5996, <b>29</b>	503–0197, <b>22</b> , <b>27</b>	509–0266–01, <b>45</b>	740–1006, <b>26</b>
405–5997, <b>29</b>	503–0276, <b>26</b>	510–0165, <b>45</b>	775–0049, <b>42</b>
405–5998, <b>29</b>	503–0365, <b>25</b> , <b>26</b>	511–0161–19, <b>7</b>	800–0024, <b>47</b>
405–6000–02, <b>29</b>	503–0446, <b>52</b>	515–0298–01, <b>45</b>	800–0045, <b>49</b>
405–6000–03, <b>29</b>	503–0465, <b>25</b> , <b>26</b>	515–0298–02, <b>45</b>	800–0048, <b>61</b>
405–6000–04, <b>29</b>	503–1136, <b>21</b>	517–0021, <b>40</b>	800–0602, <b>37</b>
405–6000–07, <b>29</b>	503–1565, <b>13</b> , <b>15</b>	517–0094, <b>32</b> , <b>33</b>	800–0607, <b>32</b> , <b>33</b>
405–6001–01, <b>29</b>	503–1870–05, <b>5</b>	517–0131, <b>29</b> , <b>49</b>	800–2010, <b>33</b>
405–6003, <b>29</b>	503–1872–01, <b>13</b> , <b>15</b>	517–0135, <b>39</b> , <b>45</b>	800–2034, <b>10</b> , <b>11</b> , <b>12</b> , <b>15</b> 800–2036, <b>37</b>
405–6005, <b>29</b>	503–1988, <b>13</b> , <b>15</b> , <b>21</b>	517–0138–07, <b>29</b>	800–2038, <b>45</b>
405–6010, <b>29</b>	503–2004, <b>7</b> , <b>52</b>	517–0301, <b>49</b>	800–2038, <b>45</b> 800–2040, <b>45</b>
405–6013, <b>29</b>	503–2157–02, <b>13</b> , <b>15</b>	517–0302, <b>49</b>	800–2057, <b>7</b>
405–6014, <b>29</b>	503–2169, <b>25</b> , <b>26</b>	517–0322, <b>29</b>	800–2058, <b>7</b>
405–6015, <b>29</b>	503–2170, <b>25</b> , <b>26</b>	518–0122, <b>45</b>	800–2074, <b>26</b>
405–6018, <b>29</b> , <b>30</b>	503–2179, <b>32</b> , <b>33</b>	518–0601, <b>4</b>	800–2085, <b>13</b> , <b>15</b>
405–6029, <b>29</b>	503–2185, <b>13</b> , <b>15</b> , <b>21</b>	520–1024–01, <b>37</b>	800–2088, <b>7</b> , <b>16</b> , <b>17</b> , <b>18</b> , <b>45</b>
405–6030, <b>29</b>	504–0003, <b>26</b>	525–0304, <b>4</b>	800–2090, <b>45</b>
405–6034, <b>29</b>	504–0011, <b>22</b> , <b>27</b>	525–0305, <b>4</b>	800–2097, <b>7</b>
405–6035, <b>29</b>	504–0171, <b>12</b> , <b>15</b>	525–0306, <b>4</b>	800–2110, <b>32</b> , <b>33</b>
405–6044, <b>29</b>	505–0004, <b>13</b>	526–0003, <b>53</b>	800–2503–03, <b>32</b> , <b>33</b>
405–6068, <b>29</b>	505–0007, <b>7</b> , <b>15</b>	526–0008, <b>33</b>	800–2530–05, <b>32</b> , <b>33</b>
405–6109, <b>29</b>	505–0020, <b>12</b> , <b>15</b>	526–0011, <b>29</b>	800–2543–02, <b>32</b> , <b>33</b>
405–6132, <b>29</b>	505–0021, <b>13</b> , <b>15</b>	526–0018, <b>13</b> , <b>15</b> , <b>37</b> , <b>49</b>	800–3004, <b>7</b>
405–6603–02, <b>25</b>	505–0022, <b>13</b> , <b>15</b>	526–0029, <b>61</b>	

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
800–3009, <b>45</b>		815-0905-08	, 49, 53	850–0040, <b>37</b>		865–0030, <b>34</b>	
800–3017–20,	45	815–0924, <b>13</b>	, 15	850–0045, <b>49</b>		870–0131, <b>37</b> ,	49
800–3017–37,	45	815–0937, <b>49</b>	, 54, 56	850–0050, <b>61</b>		870–0183, <b>49</b> ,	58
800–3017–41,	45	815-0941-03	, 25, 26	850–0114–54,	45	870–0257, <b>47</b>	
800–3017–42,	45	818-0231-02	, 23, 29, 30, 61	850–0114–55,	37, 45	870–0504, <b>29</b> ,	30
800–3034, <b>40</b>		818-0237-01	, 29, 30	850–2003, <b>40</b> ,	41	870–0517–01,	54
803–2001–19,	37	821–0004, <b>49</b>		850–2004, <b>40</b> ,	41, 45	870–0517–02,	54
805–0015, <b>45</b>		821–0014, <b>49</b>		850–2005, <b>36</b> ,	45	870–1220, <b>49</b>	
805–2021–06,	45	821–5000–05	, 49	850–2006, <b>42</b> ,	45	870–1221, <b>57</b>	
812–0063, <b>55</b>		821-5003-01	, 39	850–2008, <b>7</b> , 3	36	870–2054, <b>37</b>	
812–0084, <b>57</b>		821-6001-01	, 42, 43, 45	850–2010, <b>7</b> , 3	39, 42, 45	870–2064–01,	<b>40</b> , <b>45</b>
813–0102, <b>37</b>		821-6001-02	, 45	853–0008, <b>49</b>		871–0015, <b>49</b>	
813–0103, <b>37</b>		821-6002-03	, 31, 38, 39	856–0008, <b>38</b> ,	39, 47, 49, 61	895–0363, <b>29</b> ,	30
815–0242, <b>41</b>			, 5, 16, 17, 18,	856–0013, <b>32</b> ,	33	895–0382, <b>30</b>	
815–0385, <b>49</b> ,	58	25, 26, 38, 6		860–2005, <b>40</b> ,	41, 45	895–0384, <b>29</b>	
815–0538, <b>51</b>		821-6003-03		860–2006, <b>33</b> ,	36, 45	895–0385, <b>29</b>	
815–0761–01,	42		, 21, 29, 30, 32	860–2007, <b>13</b> ,	15	895–0386, <b>29</b>	
815–0792–04,	40		, 18, 29, 30, 34	860–2008, <b>7</b> , 3	36	898–0025, <b>54</b>	
815–0793–03,	32	822–3047, <b>40</b>		860–2009, <b>37</b> ,	39	898–0860, <b>47</b>	
815–0875–02,	49	822–3075, <b>40</b>		862–0026–54,	37, 51	898–1195–01,	47
815–0901–06,	49, 53	850–0030, <b>37</b>		862–0044, <b>32</b> ,	33	898–1254–19,	41



Onan Corporation 1400 73rd Avenue N.E. Minneapolis, MN 55432 612–574–5000 Telex: 275477 Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation Cummins is a registered trademark of Cummins Engine Company