


PARTS CATALOG

FOR

ONAN ELECTRIC GENERATING PLANTS

Series

HC

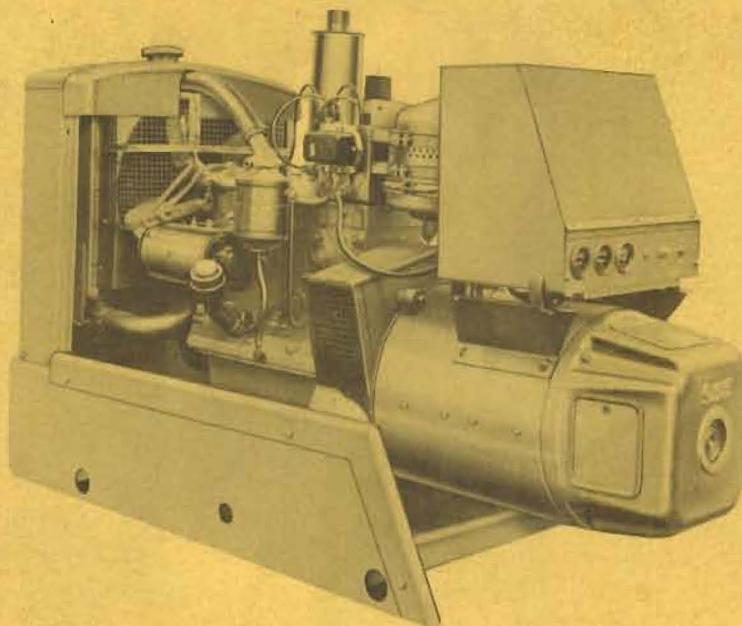


DIVISION OF STUDEBAKER CORPORATION
MINNEAPOLIS 14, MINNESOTA

938-2

Price \$1.00

Printed in U.S.A.

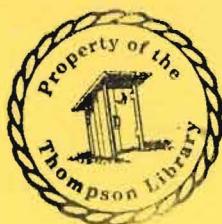

10AB62

INSTRUCTIONS FOR ORDERING REPAIR PARTS


1

FOR PARTS OR SERVICE, CONTACT THE DEALER FROM WHOM YOU PURCHASED THIS EQUIPMENT OR REFER TO YOUR NEAREST AUTHORIZED SERVICE STATION.

TO AVOID ERRORS OR DELAY IN FILLING YOUR PARTS ORDER, PLEASE FURNISH ALL INFORMATION REQUESTED.

REFER TO THE NAMEPLATE ON YOUR PLANT

1. Always give the MODEL & SPEC. NO. and SERIAL NO.

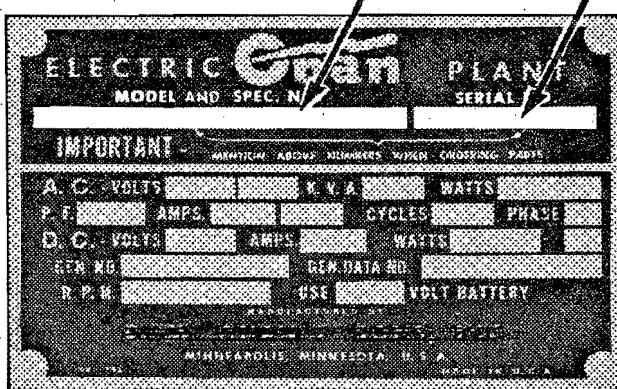

For handy reference, copy YOUR plant nameplate information in the spaces above.

2. Do not order by reference number or group number, use part number and description.
3. Give the part number, description and quantity needed of each item. If an old part cannot be identified, return the part prepaid to your dealer or nearest AUTHORIZED SERVICE STATION. Print your name and address plainly on the package. Write a letter to the same address stating the reason for returning the part.
4. State definite shipping instructions.

Any claim for loss or damage to your unit in transit should be filed promptly against the transportation company making the delivery. Shipments are complete unless the packing list indicates items are back ordered.

"Prices are purposely omitted from this Parts Catalog due to the confusion resulting from fluctuating costs, import duties, sales taxes, exchange rates, etc.

For Current parts prices, consult your Onan Dealer, Distributor or Parts and Service Center."

"En esta lista de partes los precios se omiten de propósito, ya que bastante confusión resultó de fluctuaciones de los precios, derechos aduanales, impuestos de venta, cambios extranjeros etc.

Consiga los precios vigentes de su distribuidor de productos "ONAN".

PARTS CATALOG

This Parts Catalog applies to the Onan HC Series electric generating plants.

This complete generating plant is powered by a Continental 4 cylinder engine. Always supply the MODEL, SPEC., and SERIAL NO. of the plant with each inquiry or parts order.

"Left Side" of the complete plant, as designated by the manufacturer, is determined by viewing the plant from the radiator end; for example, the carburetor is on the left side. The radiator is at the "Front End" of the plant.

All part numbers are ONAN numbers except those prefixed as follows:
 (CO) Continental Motors; (AL) Electric Auto-Lite; (HOF) Hoof Products;
 (CAR) Carter Carburetor. Many of the prefixed numbers are stocked by
 ONAN and distributors.

Parts in the main illustrated list apply to the following output voltage plants. In 10,000 watt or 15,000 watt 60 cycle, and in 10,000 watt or 12,000 watt 50 cycle plants:

ELECTRICAL OUTPUT †	BASIC MODEL	
	60 CYCLE	50 CYCLE
120 VOLT, 1 PHASE, 2 WIRE	10 & 15 HC-1R	10 & 12 HC-51R
120/240 VOLT, 1 PHASE, 3 WIRE	10 & 15 HC-3R	10 & 12 HC-53R
120/208 VOLT, 3 PHASE, 4 WIRE	10 & 15 HC-4R	10 & 12 HC-54R
240 VOLT, 3 PHASE, 3 WIRE	10 & 15 HC-5R	10 & 12 HC-55R
480 VOLT, 3 PHASE, 3 WIRE	10 & 15 HC-6R	10 & 12 HC-56R
220/380 VOLT, 3 PHASE, 4 WIRE	10 & 15 HC-7R	10 & 12 HC-57R
277/480 VOLT, 3 PHASE, 4 WIRE	10 & 15 HC-4XR	10 & 12 HC-54XR
120/240 VOLT, 1 PHASE, 3 WIRE	10 HC-3R17	10HC53R17

† - Reference to 120, 120/240, 240 and 480 Volt also applies to 115, 115/230, 230 and 460 Volt.

PENNSYLVANIA APPROVED FOR EMERGENCY STANDBY SERVICE

The Commonwealth of Pennsylvania has established requirements for standby generating plants which necessitate the use of special parts on plants operated within that state. The parts contained in that section of the catalog apply to the Onan HC Series PENNSYLVANIA APPROVED Generating Plants, which can be identified by the specification numbers 30 (Gasoline), 31 (Natural Gas), and 131 (L.P.G.), depending on the type of fuel used for internal combustion, either immediately before or after the diagonal in the Model and Specification number. If relevant, refer to the special section, pages 53 thru 55, before consulting the main section.

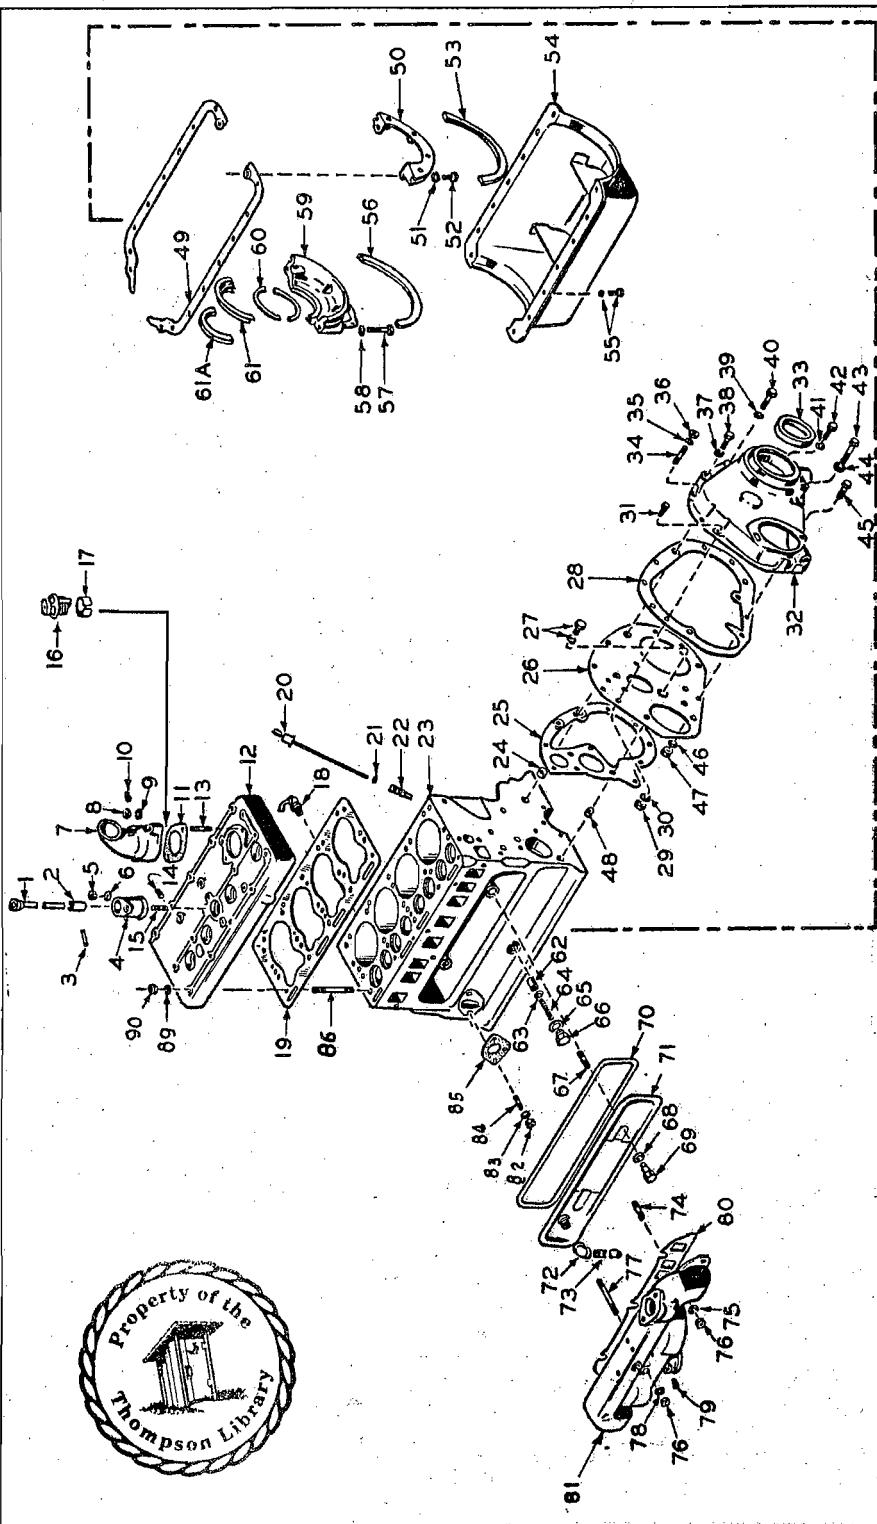


FIG. 1 - EXTERNAL VIEW ENGINE PARTS GROUP

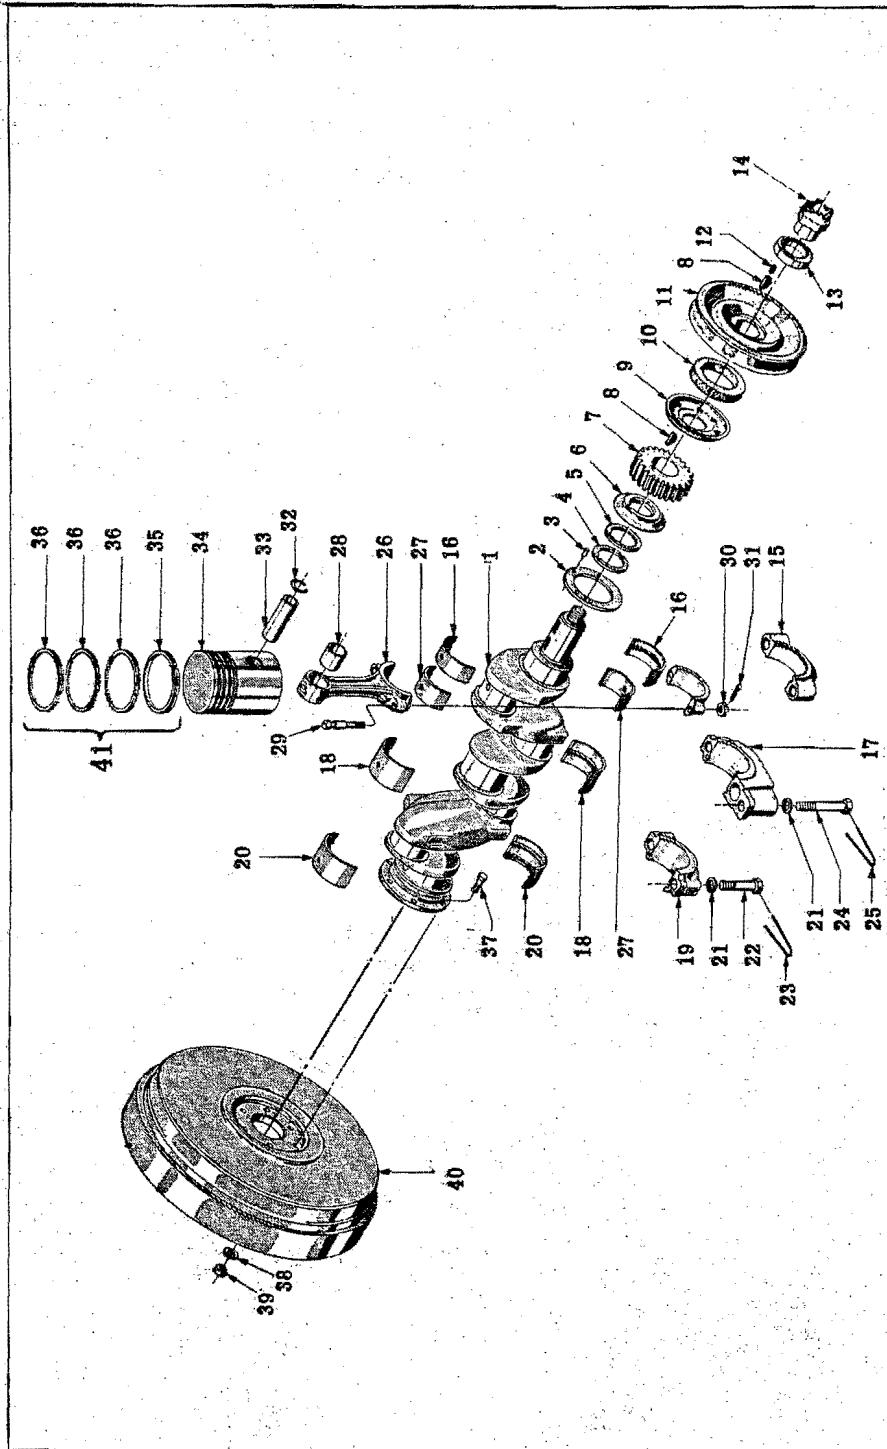


FIG. 2 - INTERNAL VIEW ENGINE PARTS GROUP

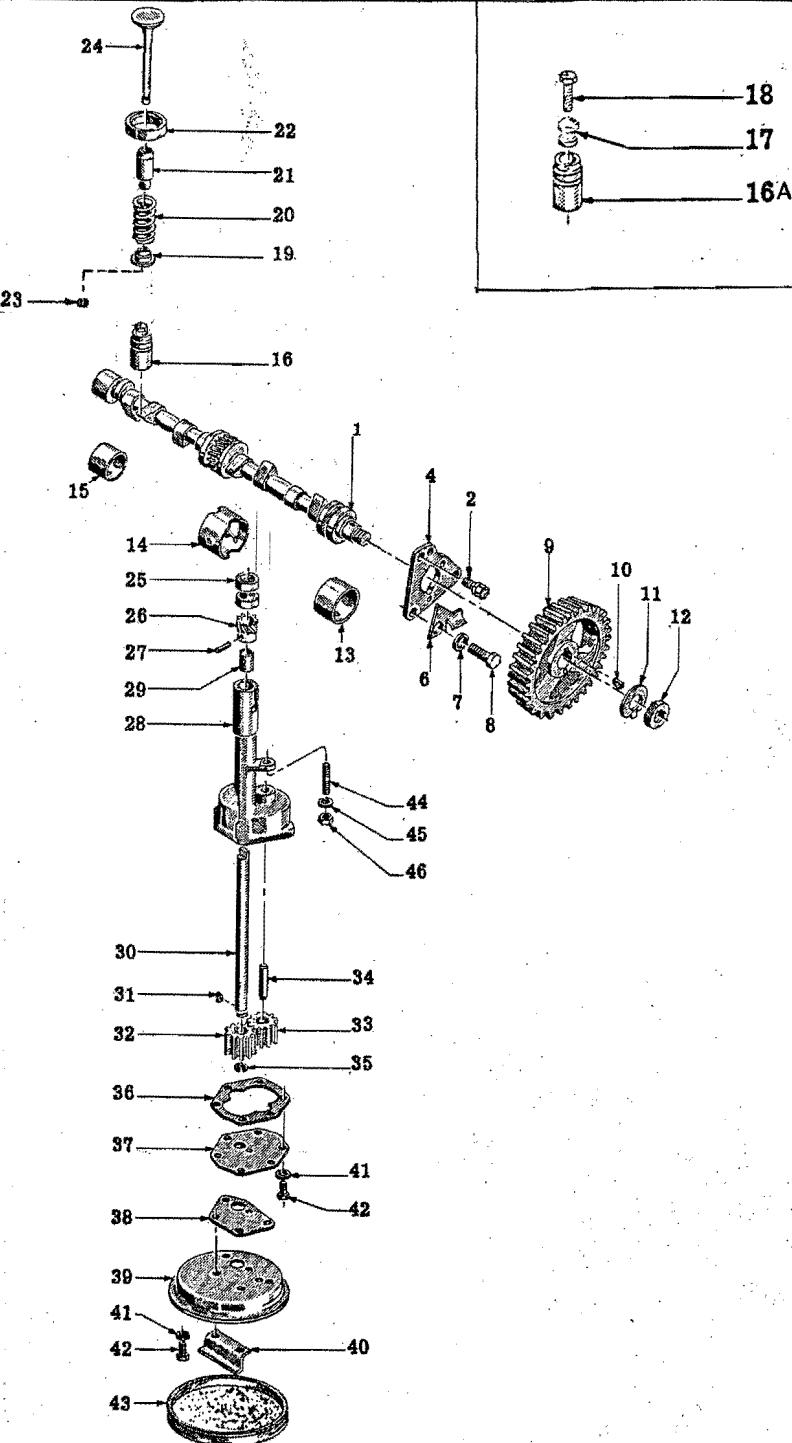


FIG. 3 - CAMSHAFT & OIL PUMP PARTS GROUP

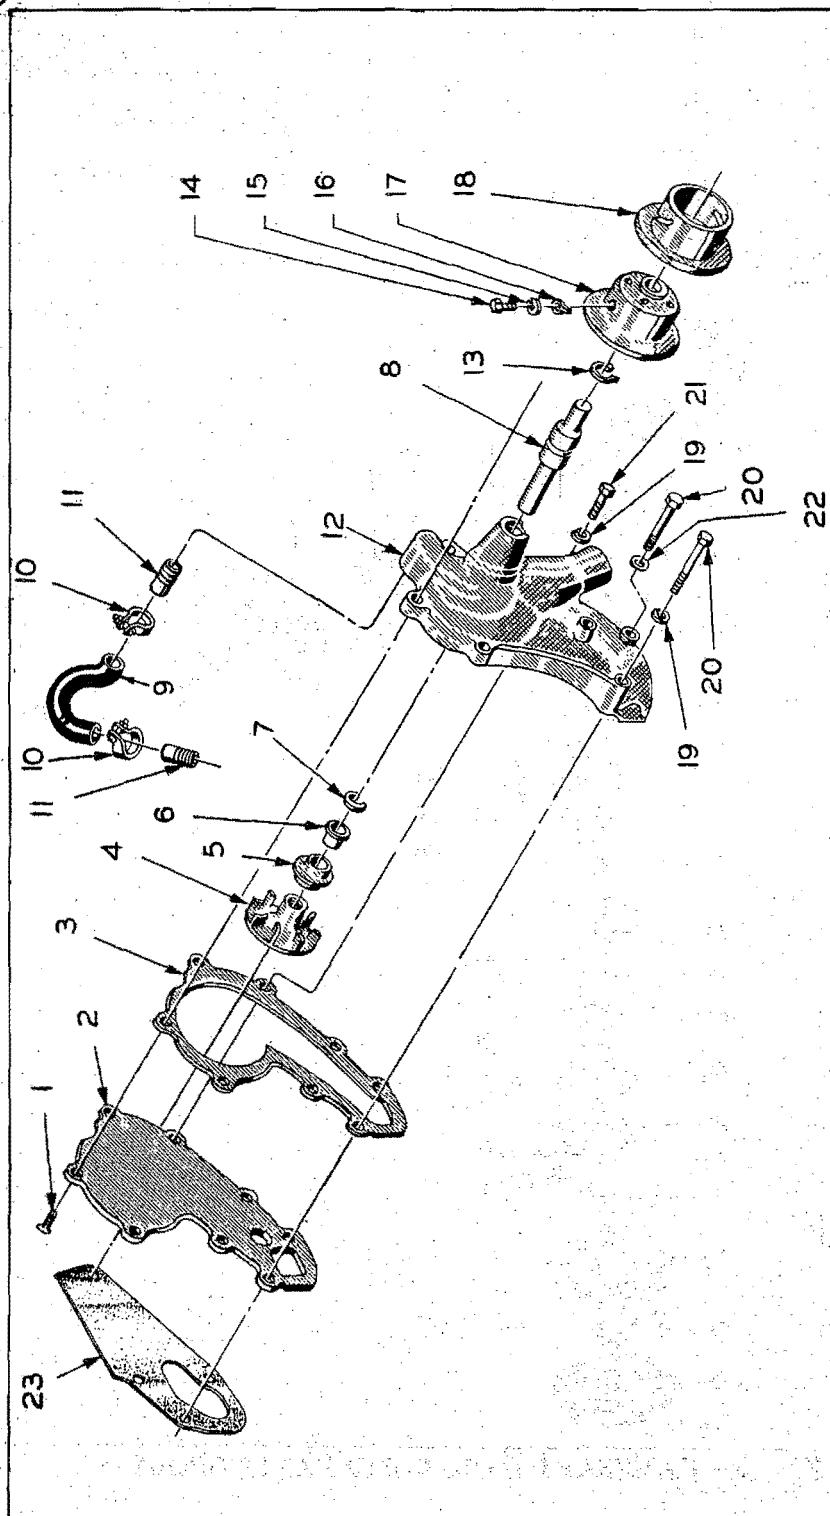


FIG. 4 - WATER PUMP PARTS GROUP

FIG. 5 - OIL SYSTEM GROUP

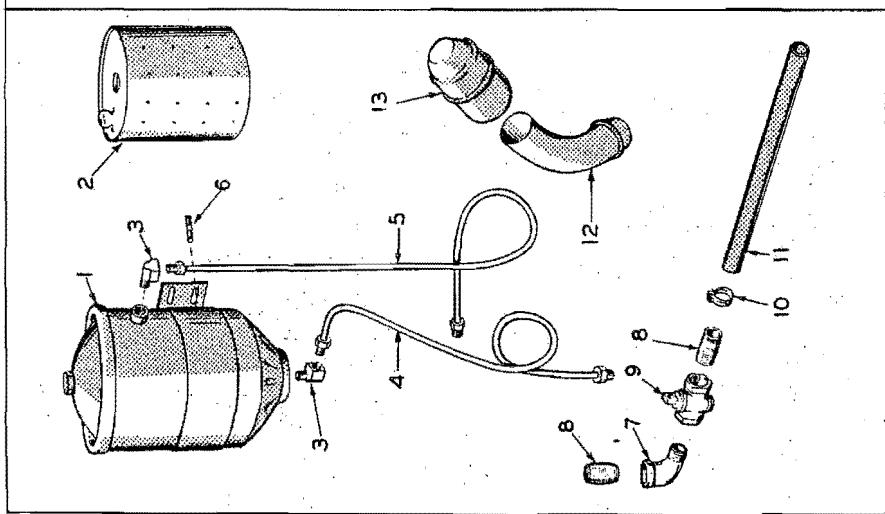


FIG. 6 - MUFFLER GROUP

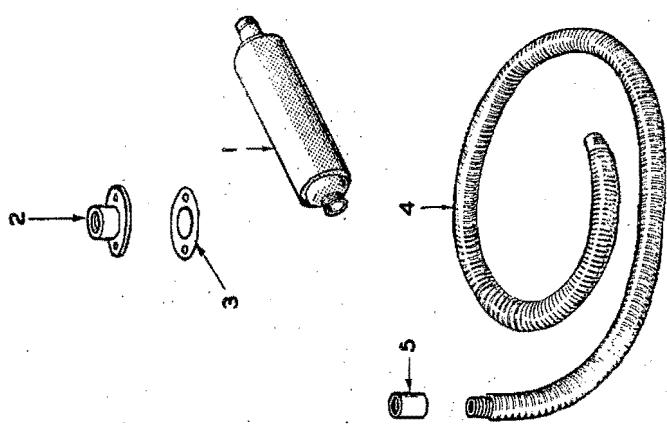


FIG. 7 - GOV. & LINKAGE GROUP

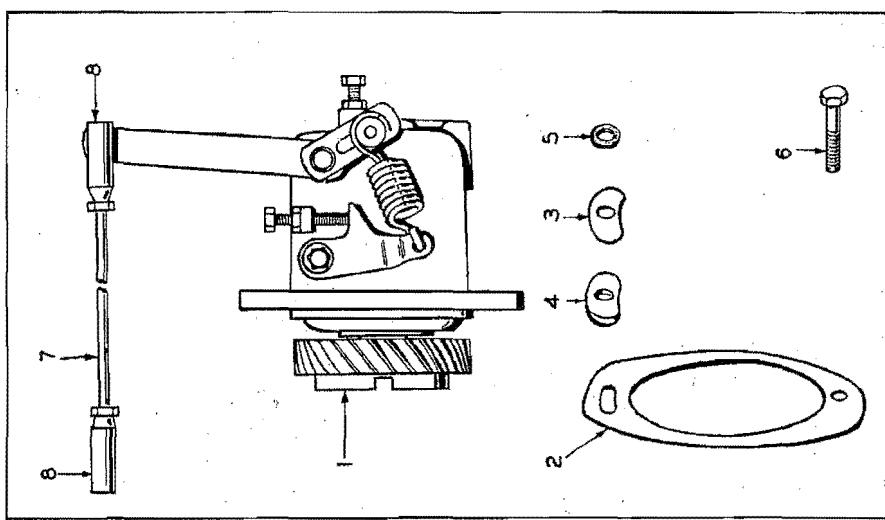


FIG. 8 - GOVERNOR PARTS GROUP

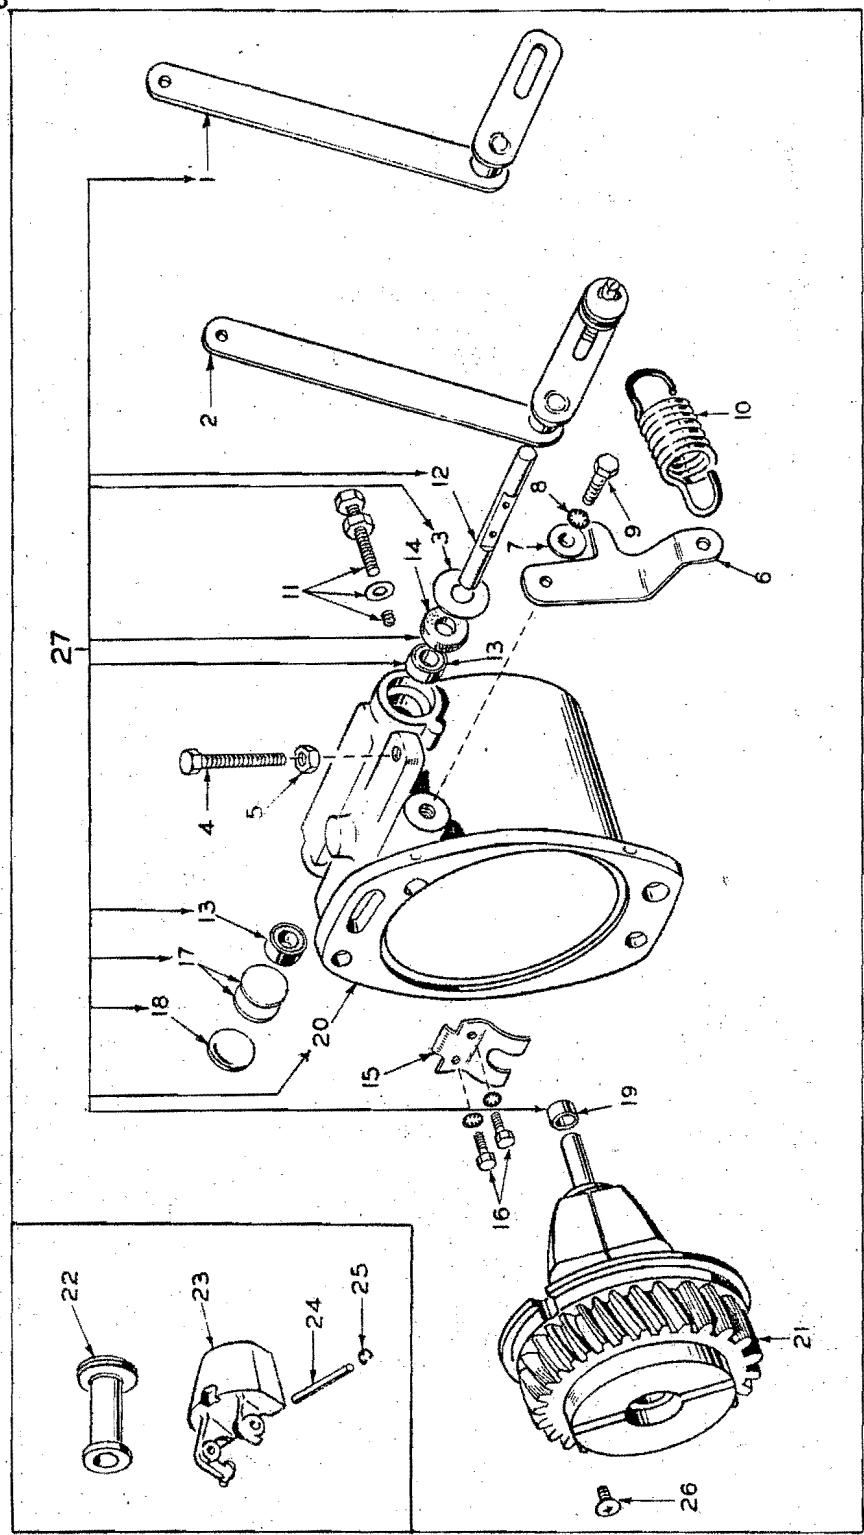
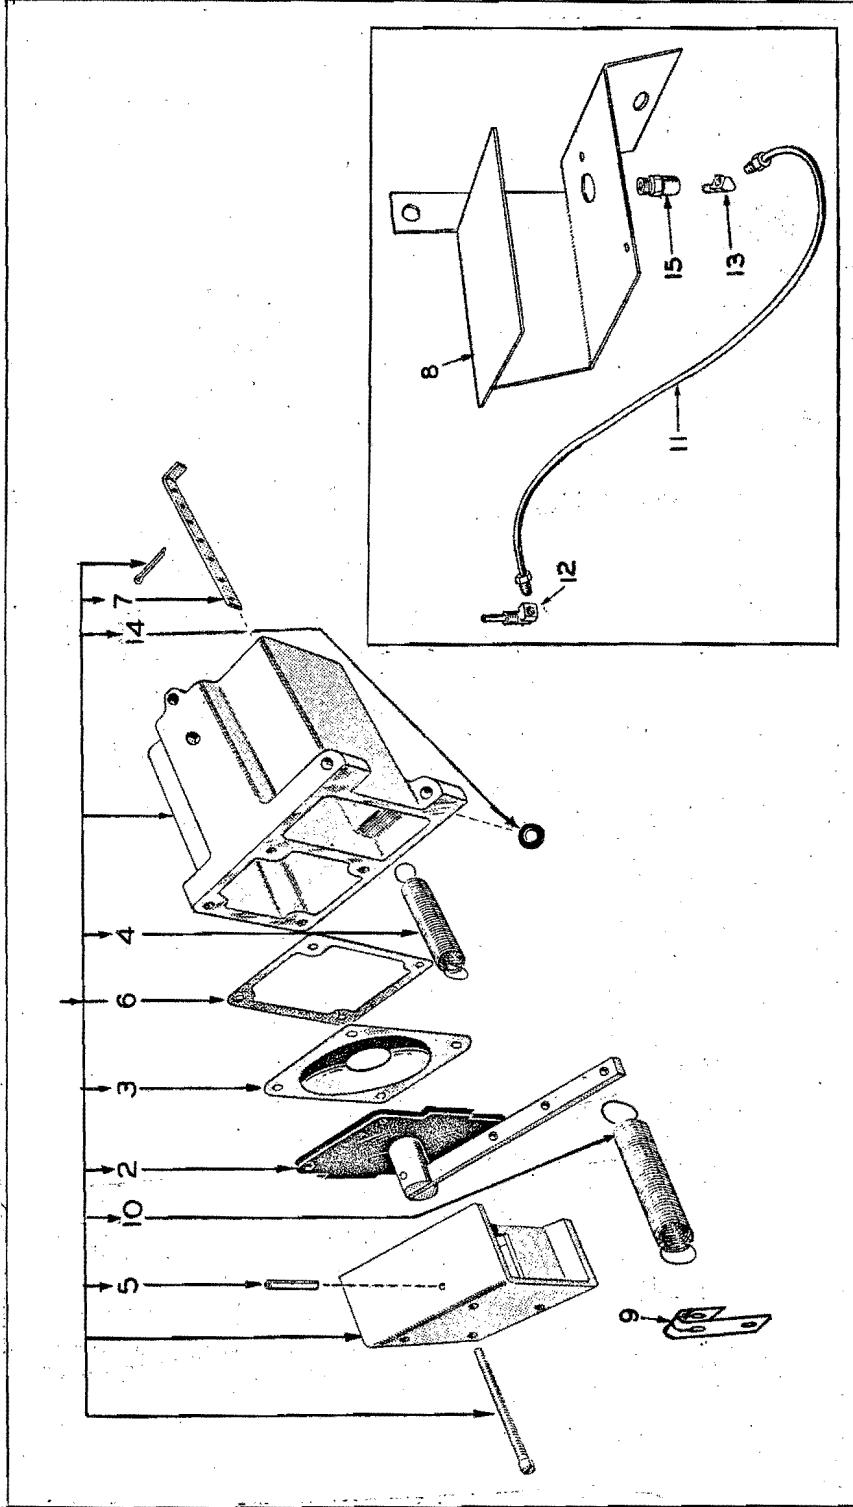


FIG. 9 - VACUUM BOOSTER GROUP

9



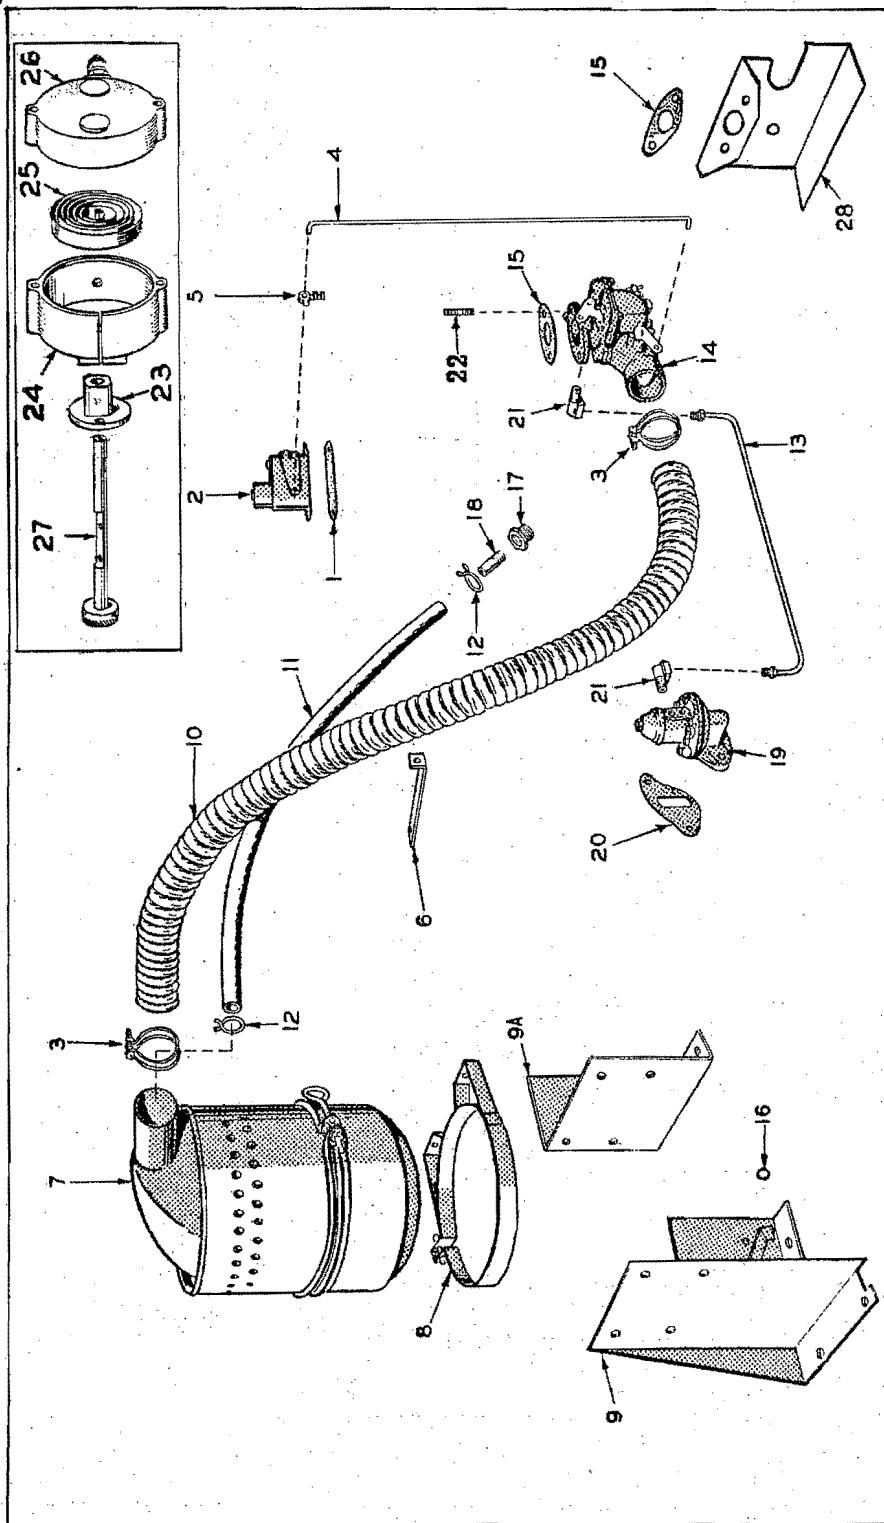


FIG. 10 - FUEL SYSTEM GROUP (GASOLINE)

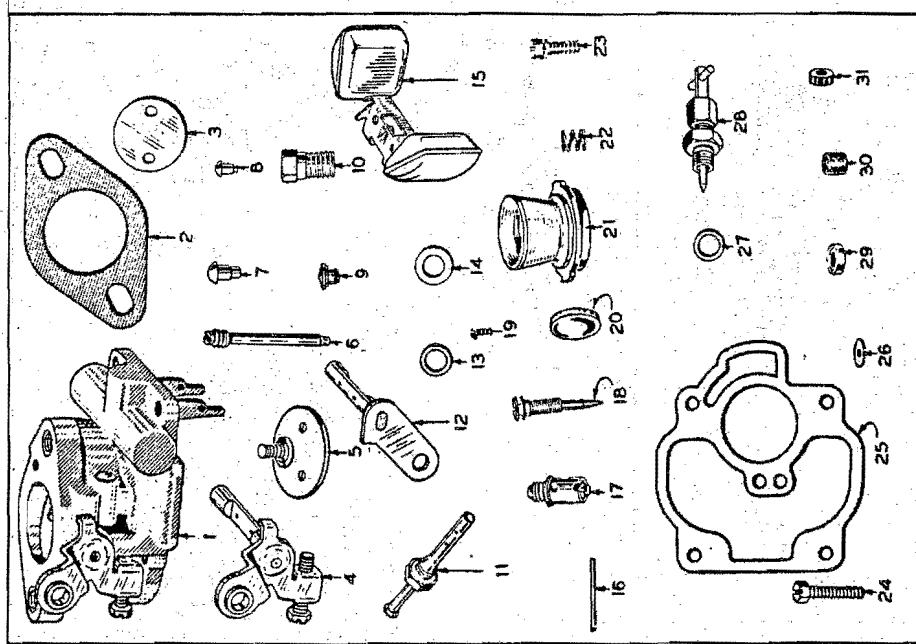
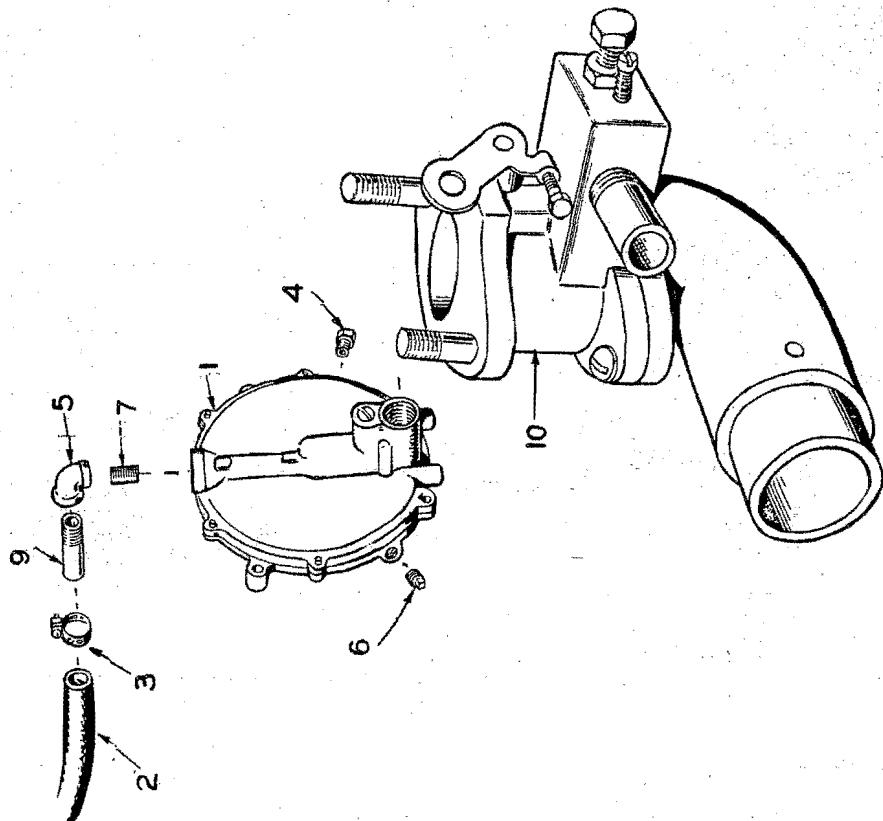


FIG. 11 - CARBURETOR PARTS GROUP

FIG. 12 - FUEL SYSTEM GROUP (GAS ONLY)

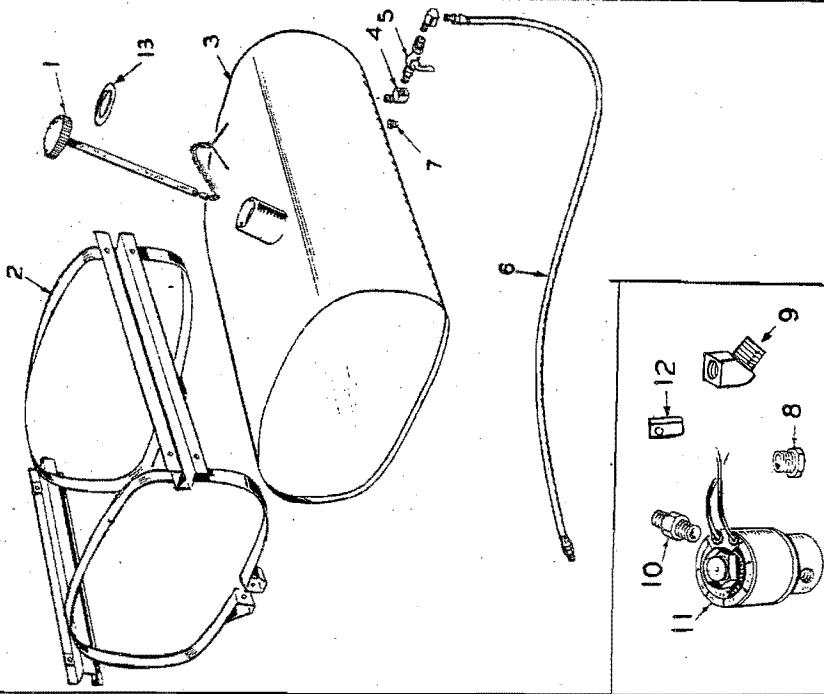


FIG. 14 - MOUNTED FUEL TANK GROUP

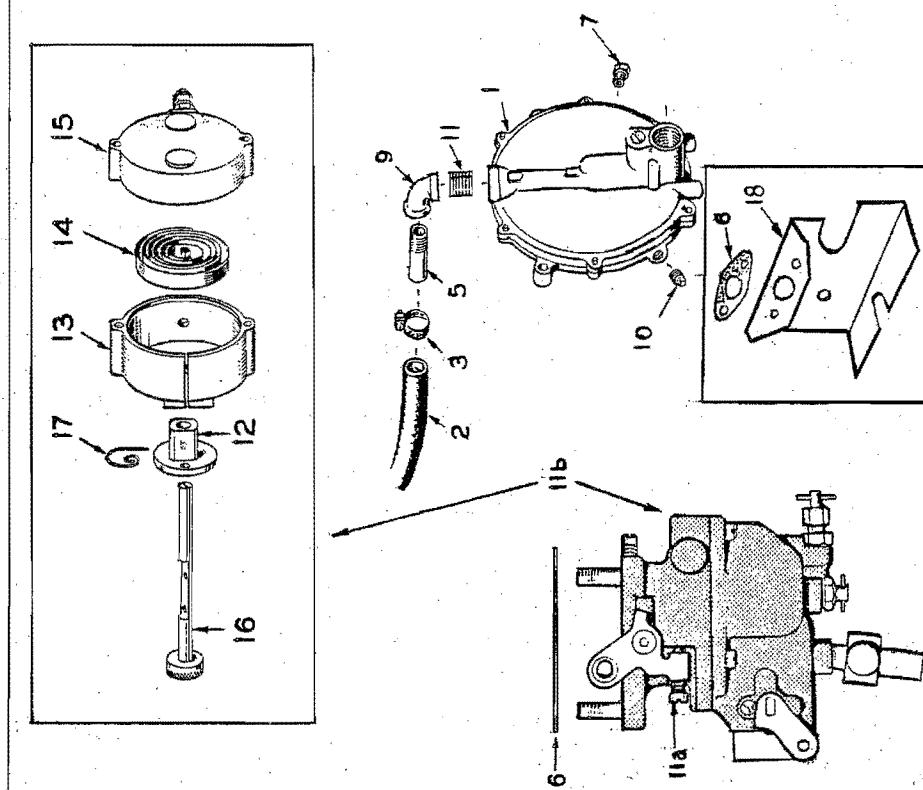


FIG. 13 - FUEL SYSTEM GROUP (GAS-GASOLINE)

FIG. 17 - BATTERY IGNITION GROUP

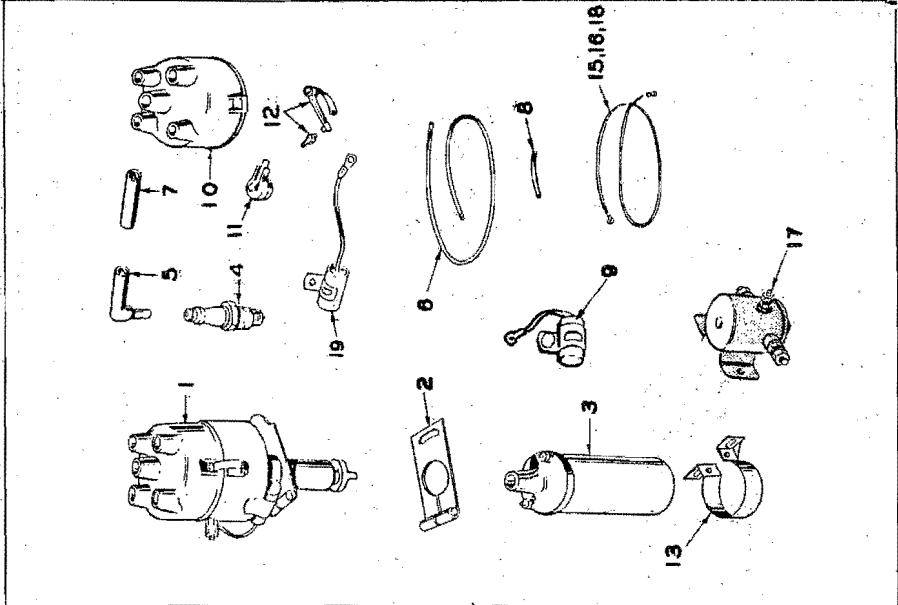


FIG. 15 - FUEL TANK AND DAY TANK

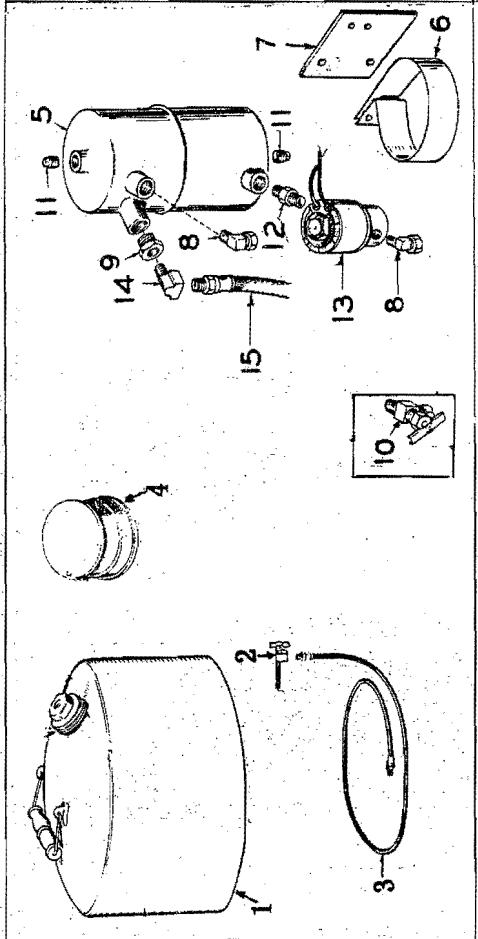
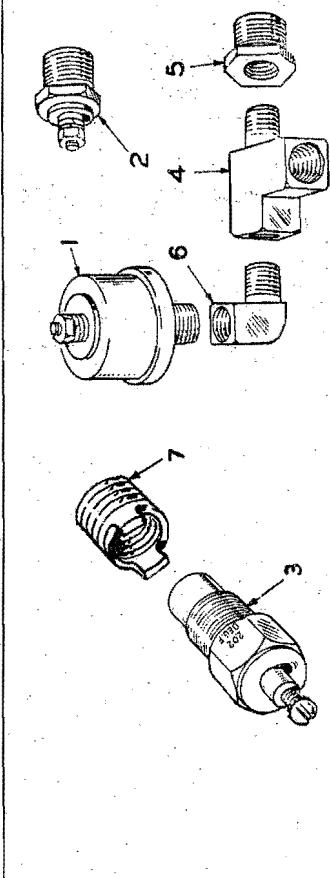


FIG. 16 - WATER AND OIL SENDER GROUP



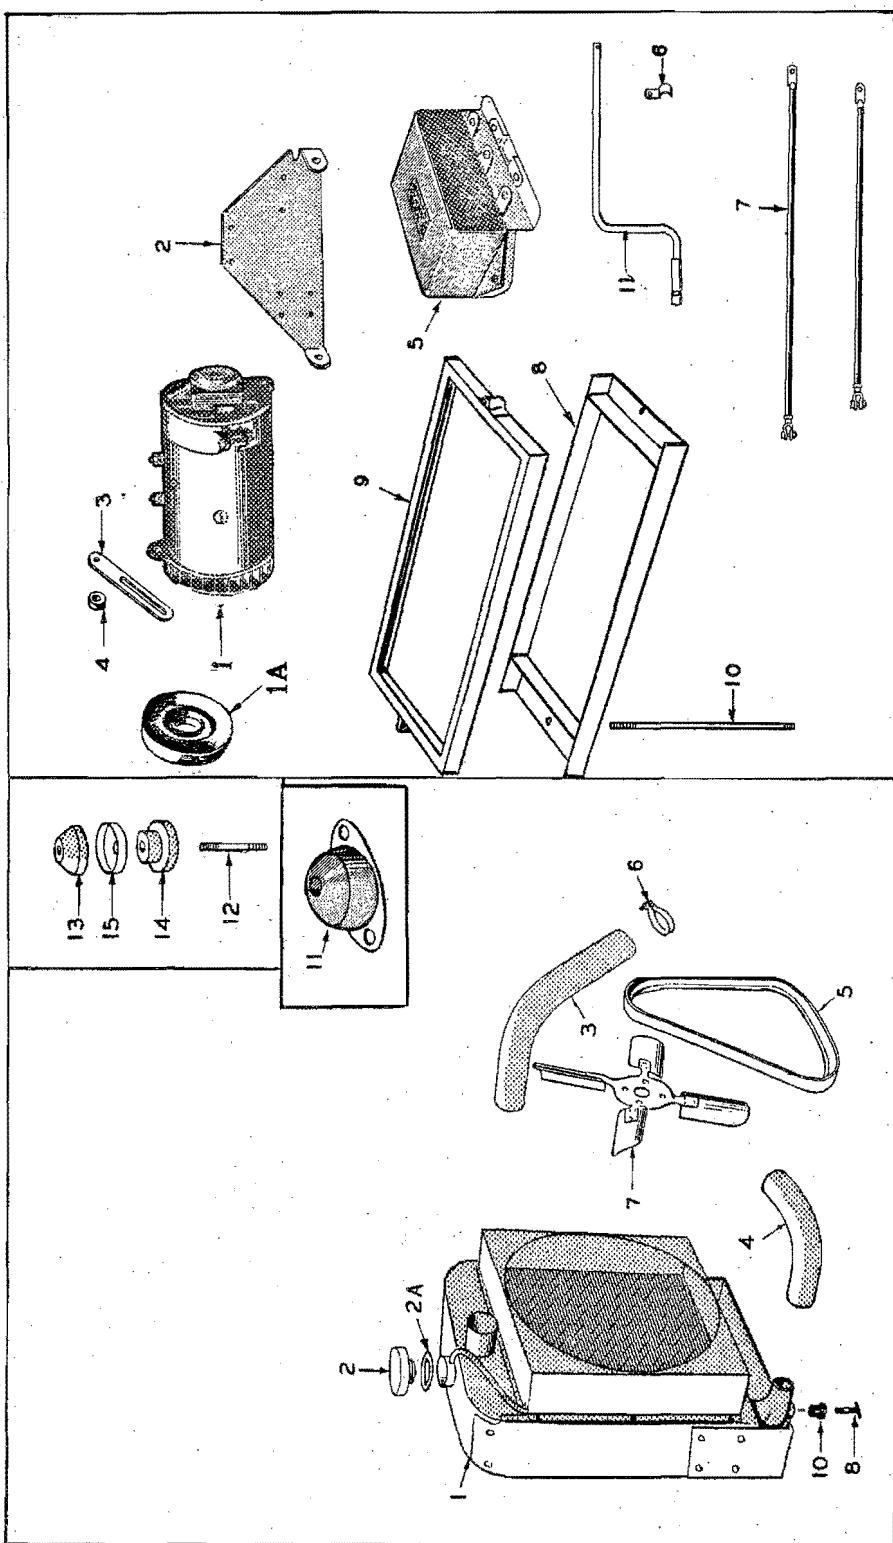
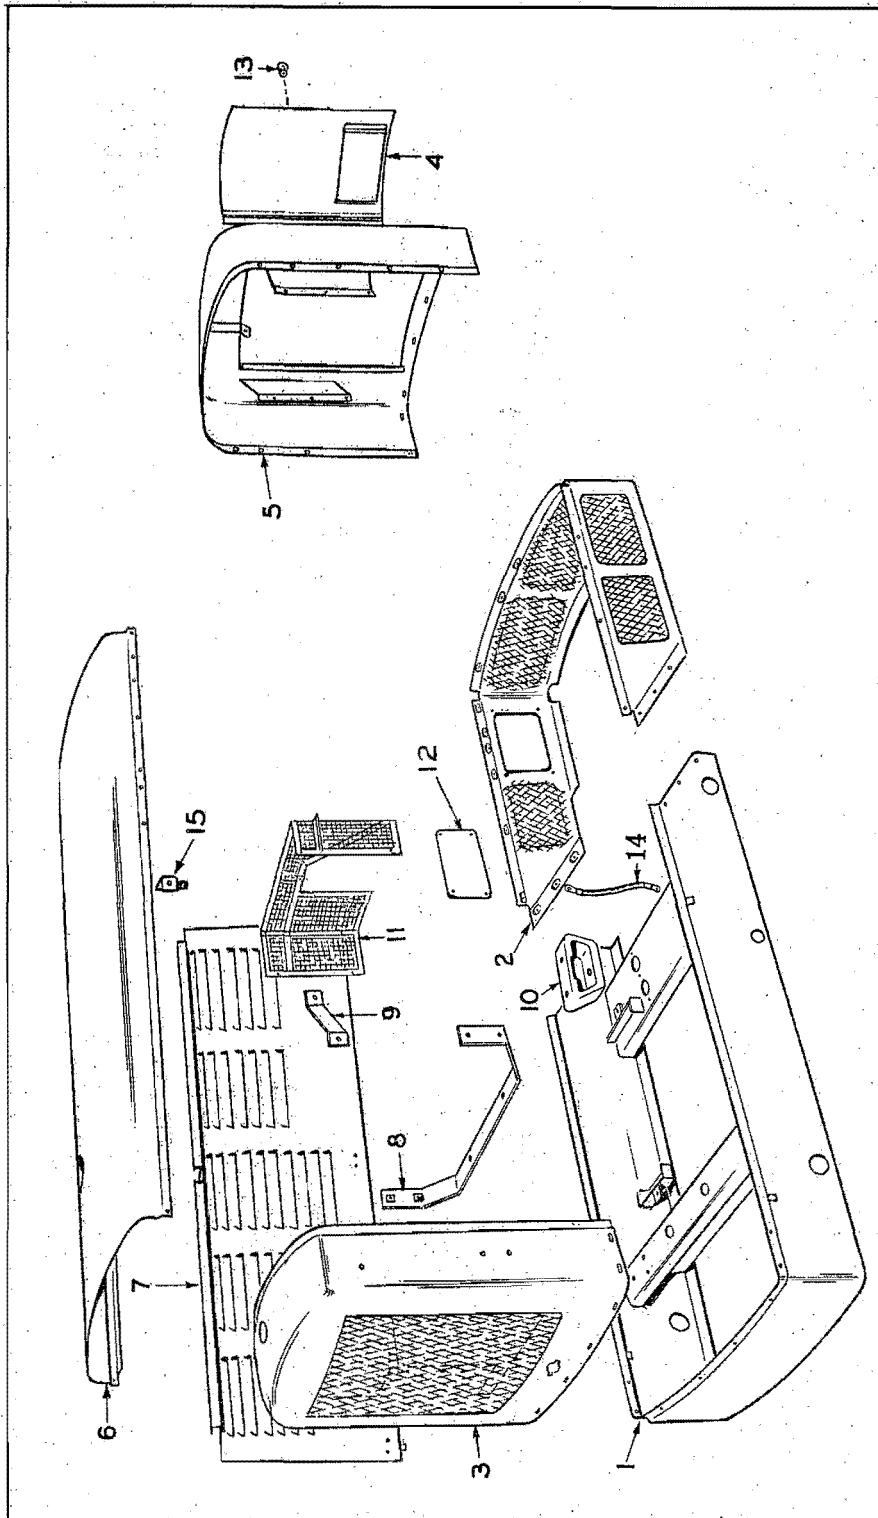


FIG. 20 - HOUSING GROUP (HOUSED PLANTS ONLY)



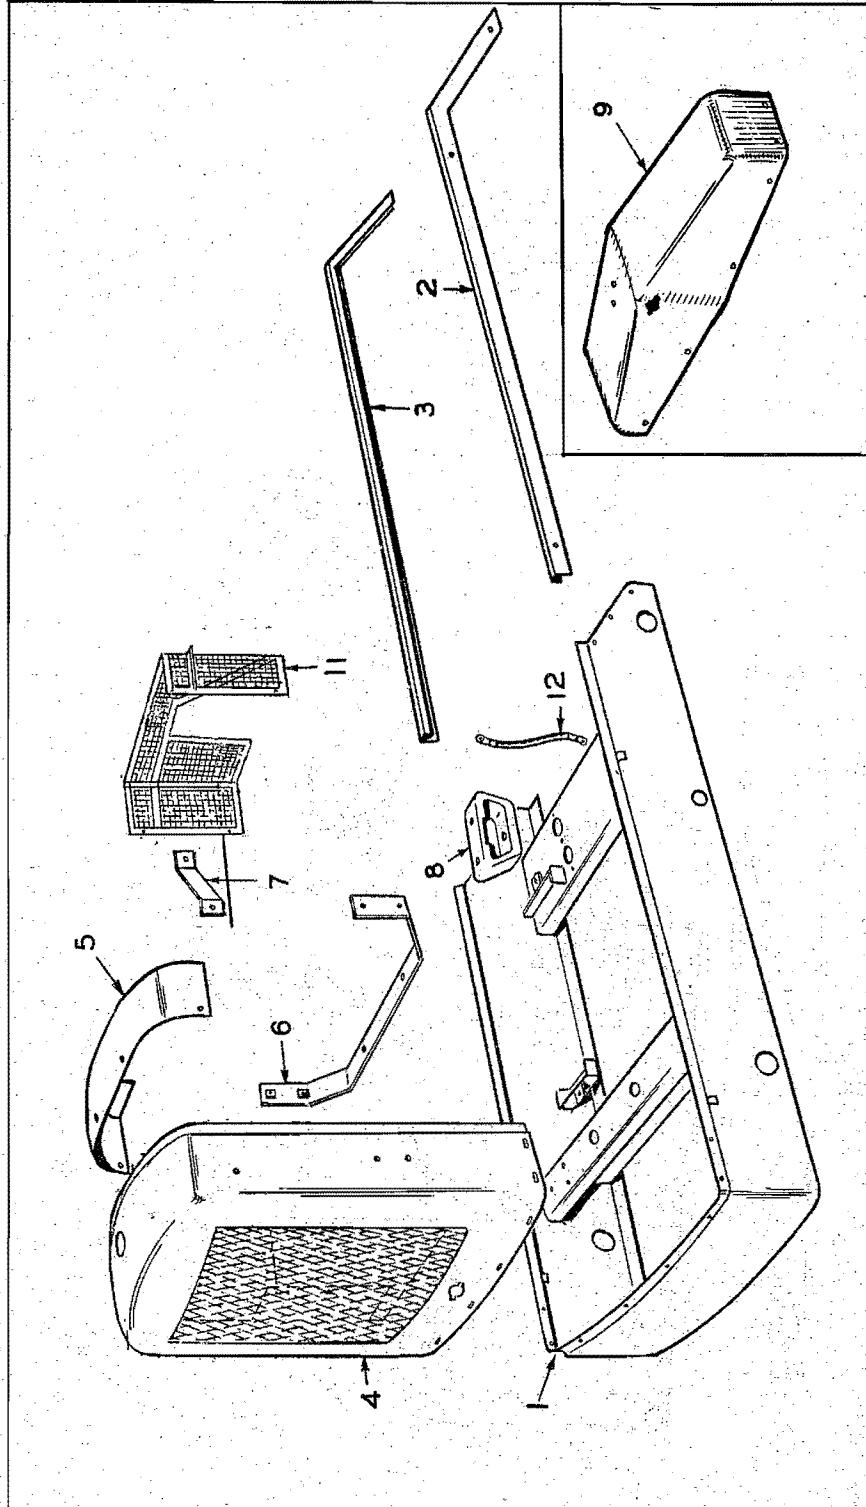


FIG. 21 - MOUNTING GROUP (UNHUSED PLANTS ONLY)

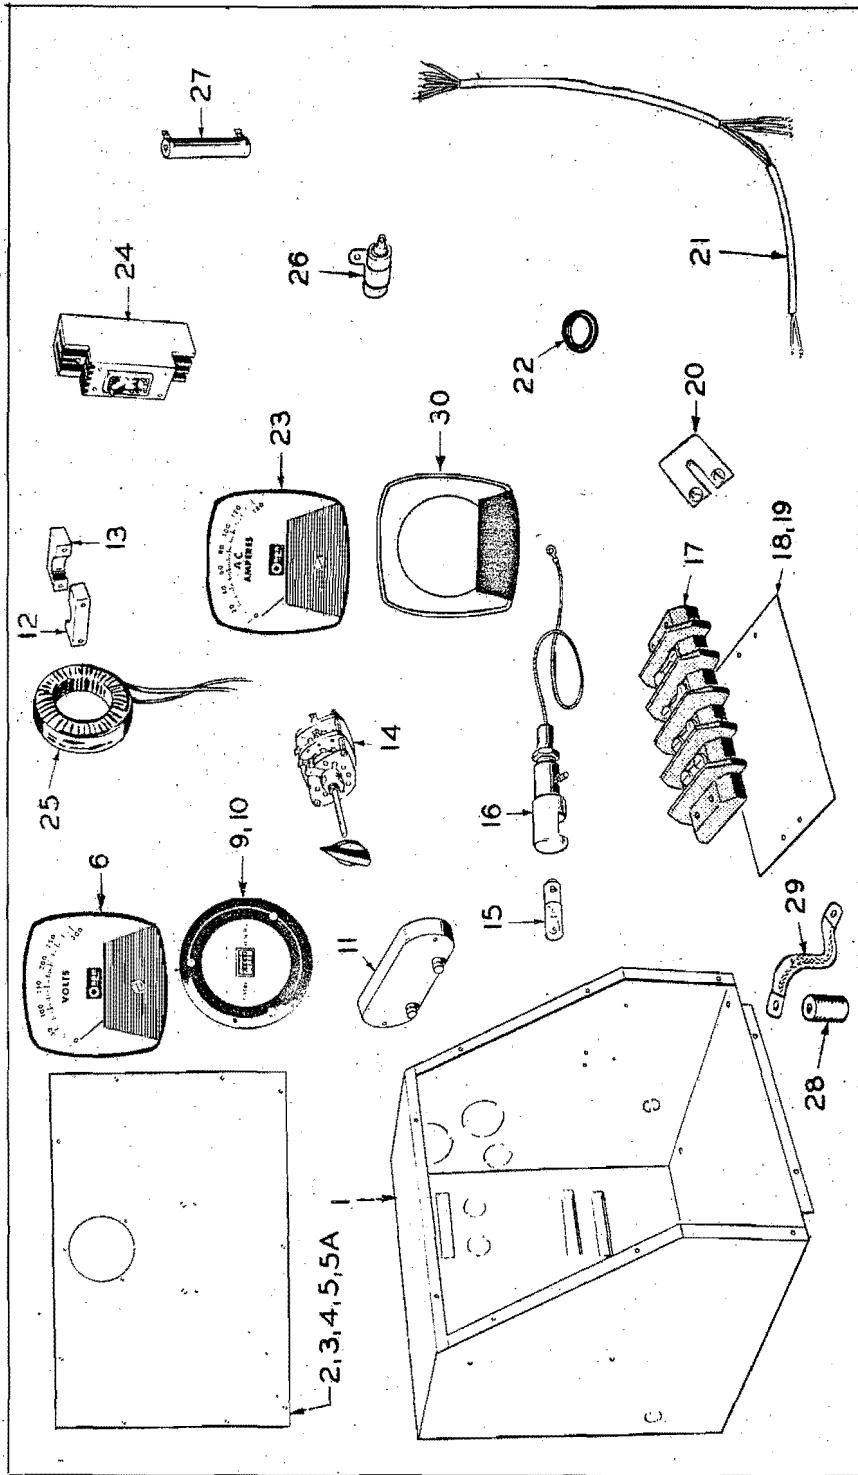
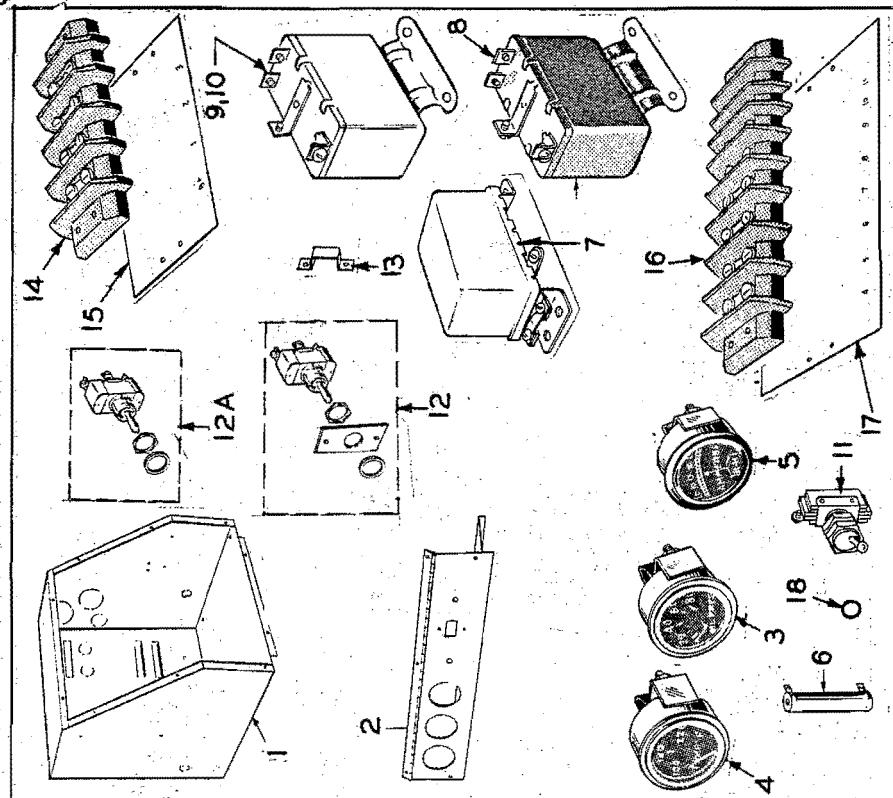
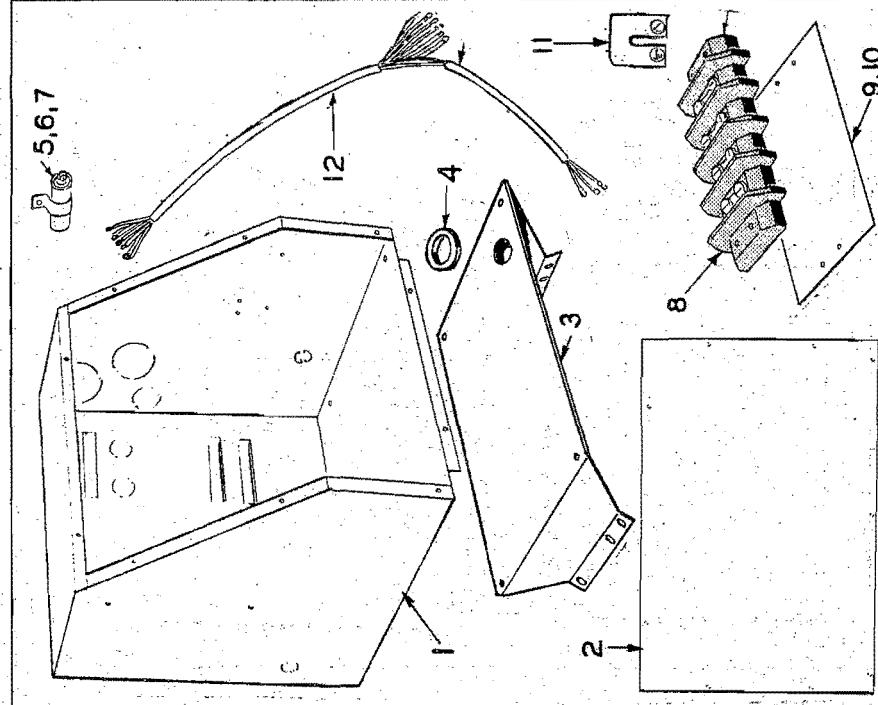


FIG. 22 - ELECTRICAL CONTROL GROUP (HOUSED ONLY)



**FIG. 24 - ENGINE CONTROL GROUP
(HOUSED & UNHOUSED)**



**FIG. 23 - ELECTRICAL CONTROL GROUP
(UNHOUSED ONLY)**

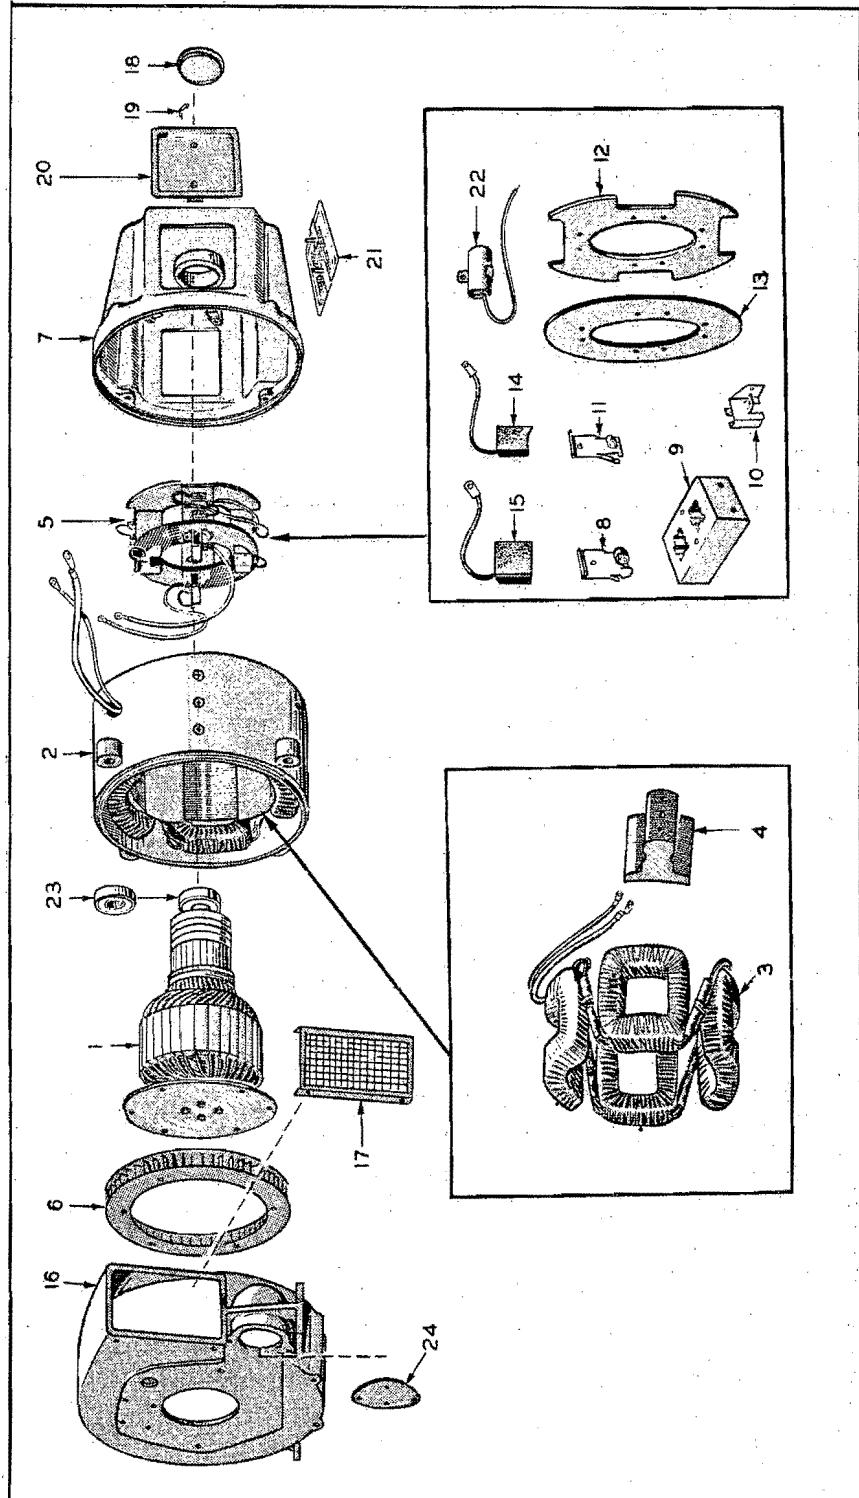


FIG. 25 - GENERATOR GROUP

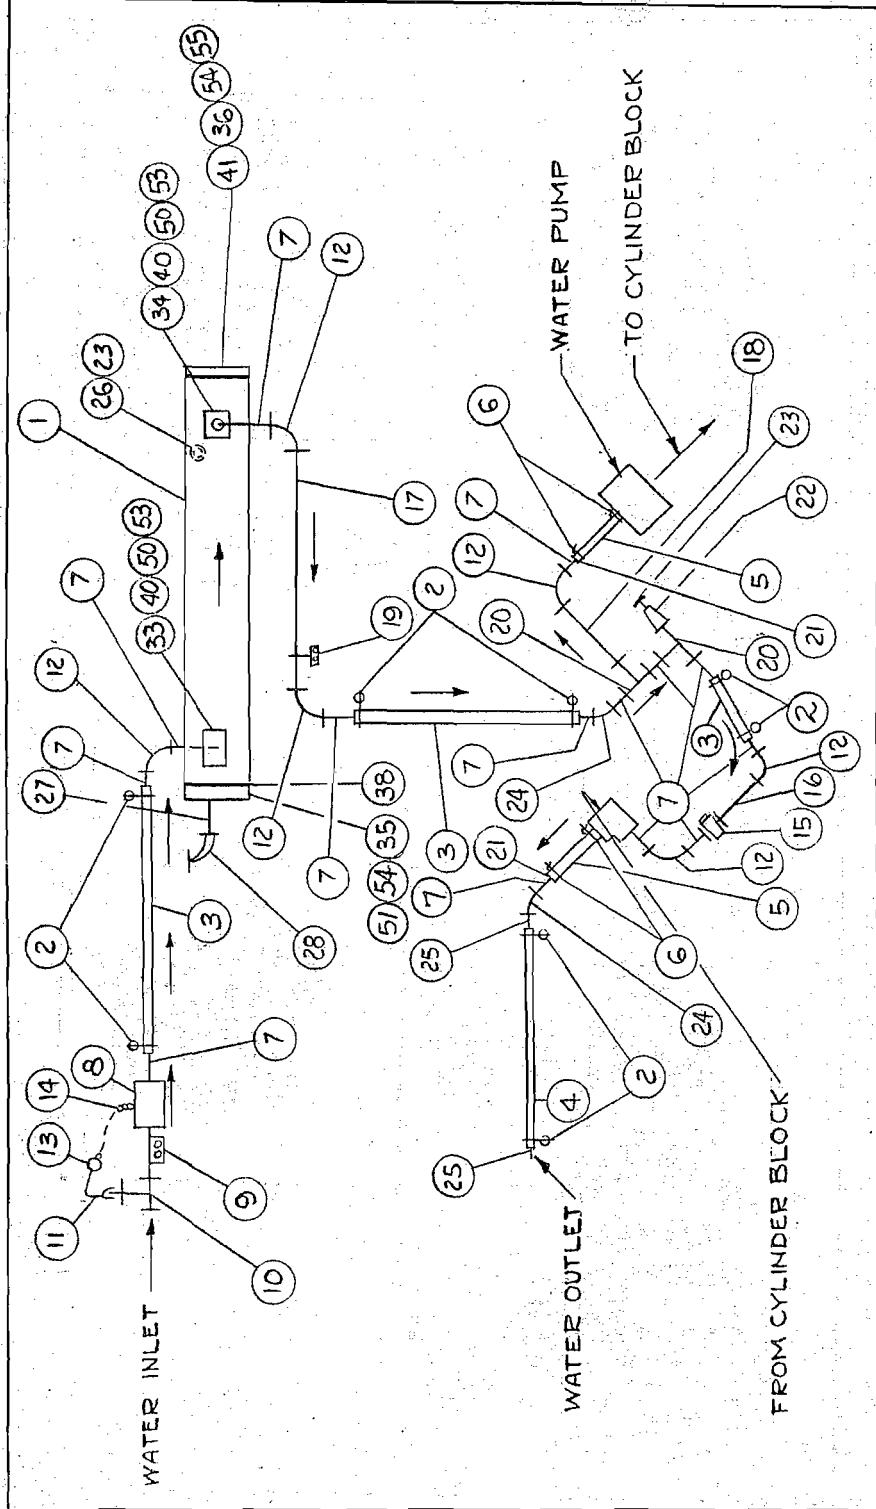


FIG. 26 - CITY WATER COOLING GROUP (Optional Equipment)

ENGINE

OVERSIZE AND UNDERSIZE PARTS

If an oversize or undersize part is required, specify the size after the part number and separated with a dash. Example: F162A-230-.003(Oversize)

Sizes other than standard are offered as follows:

NOTE: Only standard size and those sizes below which are marked with an asterisk (*) are stocked by ONAN. Whenever practicable order other sizes directly from your nearest Continental Motors Corp. dealer.

OVERSIZE PISTONS

Cast Iron	Aluminum
.010*	.010
.020*	.020
.030*	.030
.040	.040
.050	
.060	
S.F. (Semi-Finished)	S.F.

OVERSIZE PISTON RINGS

.010 *
.020 *
.030 *
.040
.060

OVERSIZE PISTON PINS

.003 *
.005
.010

UNDERSIZE BEARINGS (MAIN & ROD)

.002 *
.010
.020 *
.030
.040
.060 (may be reworked to .040)

OVERSIZE GEARS

Identification Mark on Gear	
.001	(1)
.002	(2)
.003	(3)
.004	(4)
.005	(5)
.006	(6)

UNDERSIZE GEARS

Identification Mark on Gear	
.001	(1)
.002	(2)
.003	(3)
.004	(4)
.005	(5)
.006	(6)

PARTS LIST

FIG. 1 - EXTERNAL VIEW ENGINE PARTS GROUP

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
100P235	1	1	Engine, Replacement (CONTINENTAL Type F-162 Spec 1377) - General description: INCLUDES Complete Block, also Valve Cover, Cylinder Head, Oil Pan, Thermostat, Water Pump, Fan Hub, Flywheel, Manifold: EXCLUDES Radiator, Air Cleaner, Fan Blades, Flywheel Housing Fuel Pump, Governor, Ignition Wiring, Distributor, Spark Plugs, Charge Generator, Charge Regulator, Carburetor, Fan Belt, Oil Filter, Oil Fill Neck. Note: See also Cylinder and Crankcase Assembly.
1	185-807	1	Shaft Assembly, Distributor Drive - (COFF600M-2160).
2	(CO)PYM-201	1	Coupling, Drive Distributor Drive Shaft.
3	(COX-1735	1	Nut - 3/8-16 - Distributor Adapter to Cylinder Head.
4	(CO)F162M-271	1	Washer, Lock - 3/8 in. - Distributor Adapter to Cylinder Head - Replaces (COX-203).
5	(COX-1802-G	1	Pin, Distributor Drive Coupling.
6	(COX-226	1	Adapter, Distributor.
7	(CO)F226K-337	1	Nut - 5/16-18 - Distributor Adapter to Cylinder Head.
8	870-48	2	Washer, Lock - 5/16 in. - Outlet Elbow (COX-1801-E).
9	850-45	2	Plug, Pipe - 1/2" - Cylinder Water Outlet Elbow - (CO)X-202.
10	(CO)X-101-B	1	Plug, Pipe - 3/8" - Cylinder Water Outlet Elbow.
10	(CO)X-110	1	Plug, Pipe - 3/8" - Cylinder Water Outlet Elbow.
11	185-747	1	Gasket, Cylinder Water Outlet Elbow - (CO)C400K-215.
12	185-506	1	Head Assembly, Cylinder (Includes Head, Header Studs and Plug) - Standard Compression - (CO)F40A-310.
12	110A813	1	Head Assembly, Cylinder (Includes Head, Header Studs and Plug) - High Compression - For use with Gaseous Fuel, 15 HC Units Only.
13	(CO)X-19837	2	Stud - 5/16-18 x 2-1/8" - Water Outlet Elbow.
14	(CO)X-101-B	1	Plug, Pipe - 1/2" - Counter sunk.
15	(CO)X-19004-C	1	Stud - 3/8-16 x 1-1/2" - Distributor Adapter to Cylinder Head.
16	309-39	1	Thermostat, Coolant Water (CO)F226K-318.
17	185-750	1	Ring, Thermostat Adapter - (CO)F218K-202.
18	(CO)X-1015	1	Cock, Drain - Cylinder Water - Replaces (CO)F400A-386.
19	185-513	1	Gasket, Cylinder Head - (CO)F400A-386.
20	(CO)D600L-3000	1	Rod Assembly, Oil Gauge.
21	509-29	1	Felt, Oil Gauge Rod Cover (CO)K404L-210.
	505-135	1	Nipple, Pipe - Cylinder Water Outlet Elbow Ell - 3/8" (COX-12517).

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
22	(CO)Y400L-266	1	
23	(CO)F400A-421170-A	1	
23	(CO)F400A-421170-C	1	
23	(CO)F400A-421170-I	1	
23	(CO)F400A-421170-S	1	
24	(CO)8TC-200	1	
25	185-581	1	
26	(CO)F400B-322	1	
27	(CO)X-3941	1	
27	(CO)X-3896	1	
27	(CO)X-226	1	
28	(CO)F400B-383	1	
29	(CO)X-1803-H	1	
30	(CO)X-14220	1	
31	(CO)X-5823	1	
32	(CO)F400B-4142	1	
33	185-842	1	
34	185-849	1	
34A	(CO)X-4228	1	
35	(CO)X-226	2	
36	(CO)X-1802-G	2	
37	(CO)X-226	1	
38	(CO)X-3295	1	
39	(CO)X-14220	2	
40	(CO)X-3368	1	

FIG. 1 - EXTERNAL VIEW ENGINE PARTS GROUP (Cont.)

- Support, Oil Gauge Rod.
- Cylinder and Crankcase Assembly - Includes cylinder and crankcase, bearings, bushings, guides, inserts, support, guard, screws, studs, plugs and pins.
- Cylinder and Crankcase Assembly - Includes all parts in the "A" assembly plus pistons and rings.
- Cylinder and Crankcase Assembly - Includes all parts in the "C" assembly with valves, springs, locks, retainers, and tappet assembly.
- Cylinder and Crankcase Assembly - Includes all parts in the "I" assembly plus connecting rods, crankshaft, camshaft, front end plate, gears, filler blocks, cylinder head, gaskets, gear cover assembly, oil pump assembly, oil pan assembly, studs, nuts, screws, washers, plugs and lock wires.
- Dowel, Ring - Gear Cover to Crankcase.
- Gasket, End Plate to Cylinder - (CO)F400B-225.
- Plate, End - Crankcase.
- Screw, Front End Plate to Gear Cover - 3/8-16 x 7/8".
- Screw and Washer Assembly, Front End Plate to Cylinder - 5/16-18 x 3/4".
- Lockwasher, Front End Plate to Gear Cover - 3/8" - Replaces (CO)X-203.
- Gasket, Gear Cover to End Plate - Replaces (CO)F400B-320.
- Nut, 7/16-14 - Gear Cover to End Plate.
- Washer, Lock - 7/16" - Gear Cover - Replaces (CO)X-270.
- Screw, Dowel - Gear Cover to End Plate - Replaces (CO)D600B-221.
- Cover Assembly, Gear (Including Cover and Seal).
- Seal, Fan Drive Pulley and Front Crankshaft Bearing Oil (Listed in External View, Engine) - (CO)X-1555.
- Stud - 3/8-16 x 1-11/16" - Gear Cover to Cylinder (Upper Holes) - (CO)X-4200.
- Stud - 3/8-16 x 1-7/8" - Gear Cover to Crankcase
- Washer, Lock - 3/8" Gear Cover to Cylinder - Replaces (CO)X-203.
- Nut - 3/8-16 - Gear Cover to Cylinder.
- Washer, Lock - 3/8" Gear Cover to Cylinder - Replaces (CO)X-203.
- Screw - 3/8-16 x 1-1/8" - Gear Cover to Cylinder.
- Washer, Lock - 3/8" Gear Cover to Crankcase - Replaces (CO)X-270.
- Screw - 7/16-14 x 1-1/2" Gear Cover to Crankcase (at ring dowel).

PARTS LIST

FIG. 1 - EXTERNAL VIEW ENGINE PARTS GROUP (Cont.)

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
41	(CO)X-14134	2	Washer, Copper - 3/8" Gear Cover to Filler Block (Upper).
42	(CO)X-3295	1	Screw - 3/8-16 x 1-1/8" - Gear Cover to Filler Block.
43	(CO)X-3299	3	Screw - 3/8-16 x 2" - Gear Cover to Filler Block.
44	(CO)X-226	2	Washer, Lock - 3/8" - Gear Cover to Filler Block - Replaces (CO)X-203.
45	(CO)X-3295	1	Screw - 3/8-16 x 1-1/8" - Gear Cover to End Plate.
45	(CO)X-3941	1	Screw - 3/8-16 x 7/8" - Front End Plate to Gear Cover.
46	(CO)X-226	1	Washer, Lock - 3/8" - Front End Plate to Gear Cover - Replaces (CO)X-203.
47	(CO)X-1802-G	1	Nut - 3/8-16 - Gear Cover to End Plate.
48	(CO)D600B-203	1	Dowel, Ring - End Plate to Crankcase.
49	(CO)F400B-442	2	Gasket, Oil Pan.
50	185-577	1	Block, Filler (Front) - (CO)D600B-340.
51	850-50	2	Washer, Lock - 3/8" - Filler Block to Crankcase Screw - (CO)X-297-A.
52	800-27	2	Screw, Front Filter Block to Crankcase - 5/16-18 x 7/8" (CO)X-3924.
53	185-584	1	Cork, Front - Filler Block to Crankcase - (CO)F400B-255.
54	(CO)F400B-4580	1	Oil Pan.
55	(CO)X-3896	14	Screw and Lock Washer Assembly - 5/16-18 x 3/4".
56	185-584	1	Cork - Rear Filler Block - (CO)F400B-255.
57	(CO)X-2958	2	Screw, Filler Block to Crankcase, Rear - 5/16-18 x 2-5/8".
58	850-50	2	Washer, Lock - Rear Filler Block to Crankcase - (CO)X-297-A.
59	185-578	1	Block, Filler (Rear) - (CO)D600B-406.
60	185-583	2	Seal, Oil - Rear Bearing Filler Block - Felt against neoprene - Installed with felt toward rear - (CO)F400B-252.
61	185-574	1	Guard, Oil - Crankshaft Bearing, Rear - (CO)D600B305.
61A	185-582	1	Felt, Rear Bearing Oil Guard - 1/2" Thick - to be secured with Shellac or equal-(CO)F400B-251.
62	(CO)15SL-211	1	Valve, Relief - Oil Pressure.
63	(CO)X-14324	As Req.	Washer, Adjusting - Oil Pressure Relief Valve - Replaces (CO)W5L-213.
64	(CO)F400L-223	1	Spring, Oil Pressure Relief Valve - Replaces (CO)F400L-219.
65	185-838	1	Gasket, Oil Pressure Relief Valve Plug - (CO)X-365.
66	(CO)41AL-200	1	Plug, Oil Pressure Relief Valve.
67	(CO)X-4036	2	Stud, 1/4-20 x 1-3/8" - Valve Chamber Cover.
68	185-837	2	Gasket, Valve Chamber Cover Nut - (CO)X-334.
69	(CO)X-18327	2	Nut - Valve Chamber Cover.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
70	185-504	1	Gasket, Valve Chamber Cover - (CO)F124A-201.
71	(CO)F400A-2410	1	Cover Assembly, Valve Chamber.
72	(CO)X-12150	1	Elbow, Vent Tube - Valve Chamber Cover.
73	(CO)P39A-221	1	Tube, Vent - Valve Chamber Cover.
74	185-849	6	Stud, Int. and Exh. Manifold to Cylinder - 3/8-16 x 1-11/16" - (CO)X-4200.
75	526-29	3	Washer, Plain - 3/8" - Manifold to Cylinder (CO)UB-110.
76	185-855	7	Nut - 3/8-16 Brass - Manifold to Cylinder - (CO)X-18278.
77	(CO)X-4256	1	Stud - Int. and Exh. - Manifold to Cylinder - 3/8-16 x 3-5/8" .
78	(CO)X-14141	4	Washer, 13/32" - Manifold to Cylinder.
79	505-57	1	Plug, Pipe - 1/8 - Sq. Head - Exhaust Manifold - (CO)X-100.
80	185-638	1	Gasket, Exhaust and Intake Manifold to Cylinder - (CO)F400E-303.
81	185-635	1	Manifold Assembly, Intake and Exhaust - (CO)F162E-502.
82	870-48	2	Nut, 5/16-18 - Fuel Pump Mounting (CO)X-1801-E.
83	850-45	2	Washer, Lock - 5/16 - Fuel Pump Mounting-(CO)X-202.
84	(CO)X-1954-B	2	Stud, 5/16-18 x 1-1/2 - Fuel Pump Mounting - Replaces (CO)X-1952.
85	149A126	1	Gasket, Fuel Pump Mounting - (CO)16EV-201.
86	(CO)X-4723	14	Stud - 7/16-14-20 x 3-1/2" - Cylinder Head to Cylinder - Replaces (CO)X-19828.
87	(CO)X-4731	1	Stud - 7/16-14-20 x 4 1/4" - Distributor Adapter - Replaces (CO)X-4349.
88	(CO)3XX-X-1408	15	Washer, Plain.
90	(CO)3XX-X-1803-E	15	Nut - 7/16-20 - Cylinder Head.
	(CO)X-2963	2	Screw, Dowel - 7/16-14 x 1-1/2" - Flywheel Housing to Crankcase - Replaces (CO)X-2693 - (was in error).
517-28		1	Plug, Hubbard - Camshaft Bushing (Rear), 1-1/2" - (CO)X-2236.
517-41		1	Plug, Hubbard - Cylinder Core Hole - 1-1/8", (CO)X-2207.
(CO)X-2202		2	Plug, Hubbard - Cylinder Core Hole - 1-3/8".
(CO)X-5798		2	Screw and Washer, Filler Block to Flywheel Housing - Replaces (CO)X-3056.
850-40		2	Washer, Lock - Filler Block to Flywheel Housing (CO)X-201.
(CO)F162U-109		1	Gasket Kit, Valve Grinding.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	(CO)F400C-500	1	Crankshaft -Replaces (CO)F400C-5000.
2	(CO)D600G-204	2	Washer, Thrust - Crankshaft.
3	185-698	1	Pin - 5/32 x 1/2 in. - Crankshaft Thrust Washer to Crankcase - (CO)6TG-101.
4	185-623	8	Shim, Thrust - Crankshaft (.002 in.) - Use as required - (CO)10EC-204.
5	185-624	8	Shim, Thrust - Crankshaft (.008 in.) - Use as required - (CO)10EC-205.
6	(CO)F600C-205	1	Plate, Thrust - Crankshaft.
7	(CO)D600H-300	1	*Gear, Timing - Crankshaft.
8	(CO)X-534	2	Key, Crankshaft Gear, and Fan Drive Pulley - Replaces (CO)X-511.
9	(CO)A600C-204	1	Thrower, Oil - Crankshaft
10	185-842	1	Seal, Front Crankshaft Bearing Oil and Fan Drive Pulley - (CO)X-1555.
11	(CO)F140K302	1	Pulley, Fan Drive (On Crankshaft).
12	185-748	1	Plug, Keyway - Fan Drive Pulley - (CO)C400K217.
13	(CO)8UO-202	1	Washer, Crankshaft Starting Jaw to Crankshaft - Replaces (CO)F600-0-205.
14	(CO)F600-O-206	1	Jaw, Starting.
15	(CO)F400B-348	1	Cap, Bearing - Front.
16	185-831	1	*Kit, Crankshaft Front Bearing (F600T-227) - Upper and Lower - Includes Washer and Bearing - (CO)F600G-3491.
17	(CO)F400B-350	1	Cap, Bearing - Center
18	185-654	1	*Bearing, Crankshaft - Center Upper and Lower - (CO)F400G-3111.
19	(CO)F400B-349	1	Cap, Bearing - Rear.
20	185-667	1	*Bearing, Crankshaft - Rear Upper and Lower - (CO)F600G-3471.
21	(CO)X-14455	6	Washer, Plain - 1 1/2" - Crankshaft Bearing Cap to Cylinder - Replaces (CO)3X-B2B-110.
22	(CO)X-2986	4	Screw, Crankshaft Bearing Cap - Front and Rear - 1/2-13 x 2-5/8".
23	(CO)6SH-100	2	Wire, Lock - No. 19 x 10 - Front and Rear Bearing - Replaces (CO)X-1333-B.
24	(CO)X-3511	2	Screw, Crankshaft Bearing Cap - Center - 1/2-13 x 3-1/4".
25	(CO)6SH-100	1	Wire, Lock - No. 19 x 12 for Center Bearing - Replaces (CO)X-1333-B.
26	185-628	2	Rod and Cap Assembly (Including Bearings, Bushing, Bolts and Nuts, Cylinders 1-3) - (CO)F400D-5021.
26	185-627	2	Rod and Cap Assembly (Including Bearings, Bushing, Bolts and Nuts, Cylinders 2-4) - (CO)F400D-3031.
27	185-659	4	Bearing Half (1-8 Connecting Rods) - (CO)F600G-341.

FIG. 2 - INTERNAL VIEW ENGINE PARTS GROUP

- * - Refer to, Available Oversize and Undersize Parts Chart.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
27	185-660	4	*Bearing Half (2-4 Connecting Rods) - (CO)F600G-342,
28	(CO)F400G-211	4	Bushing, Piston Pin
29	(CO)C600D-206	8	Bolts, Connecting Rod.
30	(CO)X-18188	8	Nut, Connecting Rod Bolt - 3/8-24.
31	(CO)X-601	8	Pin, Cotter - Connecting Rod Bolt - 3/32 x 3/4".
32	185-511	4	Piston and Pin Assembly - (CO)F162A-4101-E.
33	(CO)X-7011	8	Ring, Piston Pin Retaining.
33	185-573	4	*Pin, Piston - (CO)11EA-200.
34	(CO)F162A-410	4	Piston Only - Less Pin - Order Piston Pin Assembly.
35	(CO)F162A-302	4	*Ring, Piston - Bottom Groove.
36	185-500	12	Ring, Piston - First, Second and Third Grooves - (CO)A600A-333.
37	185-605	6	Ring, Piston - First, Second and Third Grooves - (CO)A600A-333.
38	854-20	6	Bolt, Flywheel to Crankshaft - (CO)C400C-206.
39	104A91	6	Bolt, Flywheel Lock - 3/8-24 - Flywheel Mounting (CO)X-18237.
40	(CO)F162C-321	1	Flywheel - Replaces (CO)F162C350.
41	113-73	4	*Ring Set, Piston - Complete for 1 Piston.
	185-820	1	*Ring Set, Piston Ring - Complete for 4 Pistons - For Re-Ring - Standard Size - (CO)162T-152C.
(CO)	162T-153C	1	*Kit, Piston Ring - Complete for 4 Pistons - For Re-Bore - Standard Size.
185-824	1	*Bearing Kit, Main - (Complete for Engine) - (CO)F400T-151.	
185-825	1	*Bearing Kit, Rod - (Complete for Engine) - (CO)F400T-152.	

* - Refer to, Available Oversize and Undersize Parts Chart.


FIG. 2 - INTERNAL VIEW ENGINE PARTS GROUP (Cont.)

FIG. 3 - CAMSHAFT & OIL PUMP PARTS GROUP		
	Camshaft - (CO)F400I-403.	1
	Screw and Washer Assembly - 3/8-16 x 7/8" - Camshaft Thrust Plate.	2
	Plate, Thrust - Camshaft - (CO)D6001-259.	1
	Plate, Oiler - Timing Gear	1

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
7	(CO)X-14220	1	Washer, Lock - 3/8" - Camshaft Thrust Plate - Replaces (CO)X-270.
8	(CO)X-3362	1	Screw - 7/16-14 x 1-1/4 - Camshaft Thrust Plate to Crankcase.
9	185-700	1	Gear, Timing - Camshaft - (CO)F400H-310.
10	515-94	1	Key - Woodruff No. 6 - (CO)X-506.
11	185-705	1	Lock, Nut to Timing Gear - (CO)D600I-258.
12	(CO)X-18242	1	Nut, 3/4-16 - Camshaft Timing Gear.
13	(CO)F2266G227	1	Bushing, Camshaft - Front - Replaces F600G-295.
14	(CO)Y400G-231	1	Bushing, Camshaft - Center - Replaces (CO)Y400G-228.
15	(CO)Y400G-232	1	Bushing, Camshaft - Rear - Replaces (CO)Y400G-229.
16	(CO)F600I-2520	8	Tapet, Valve - Self Locking - Replaces (CO)Y400I-211, (CO)Y400I-212, & (CO)Y400I-213.
16A	(CO)Y400I-211	8	Tapet only, Valve - Order F600I-2520.
17	(CO)Y400I-212	8	Nut, Lock - Valve Tappet - Use with Y400I-211 Only.
18	(CO)Y400I-213	8	Screw, Adjusting - Valve Tappet - Use with Y400I-211 Only.
19	185-745	8	Cap, Roto - Positive Valve Rotation Type - (CO)Z120I-3000.
20	185-735	8	Spring, Valve - Intake and Exhaust - (CO)Y400I-215.
21	(CO)F400I-233	8	Guide, Valve Stem.
22	(CO)F226A-238	4	Insert, Valve Seat - Exhaust - .010" Oversize.
23	185-744	16	Lock, Retainer - Valve Spring (Roto) - (CO)Z120I-235.
24	185-713	4	Valve, Exhaust - (CO)F400I-328.
24	185-719	4	Valve, Intake - (CO)F600I-343.
25	(CO)F400L-210	1	Bushing, Oil Pump Drive Shaft (In Crankcase).
	185-790	1	Pump Assembly, Oil - (CO)F600L-4131.
26	(CO)F600H-205	1	Gear, Oil Pump Drive.
27	(CO)X-17095	1	Pin, 3/16 x 15/16" - Oil Pump Drive Gear to Shaft.
28	(CO)F600L-4130	1	Body Assembly, Oil Pump - Includes Body and Bushing.
29	(CO)D600G-274	1	Bushing, Oil Pump Drive Shaft - (In Pump Body).
30	(CO)F218L-204	1	Shaft, Drive - Oil Pump.
31	515-1	1	Key, Woodruff No. 3 - Oil Pump Drive Gear to Shaft (CO)X-584.
32	(CO)F600H-217	1	Gear, Driver - Oil Pump.
33	(CO)F600H-218	1	Gear, Idler - Oil Pump.
34	(CO)8UL-212	1	Stud, Oil Pump Idler Gear.
35	(CO)D600L-204	1	Ring, Snap - Oil Pump Drive Shaft.
36	185-739	1	Gasket, Oil Pump Cover - (CO)C400L-231.

FIG. 3 - CAMSHAFT AND OIL PUMP PARTS GROUP (Cont.)

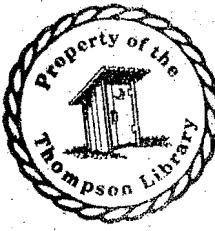

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
37	(CO)F400L-2511	1	Cover Assembly, Oil Pump.
38	185-801	1	Gasket, Oil Pump Strainer Frame - (CO)1TEL-204.
39	(CO)1TEL-300	1	Frame, Oil Pump Strainer Screen.
40	(CO)C400L-228	1	Spacer, Oil Pump Suction Cup.
41	850-40	6	Washer, Oil Pump Cover to Body (CO)X-201.
42	(CO)X5798	6	Screw and Lockwasher, Oil Pump to Body - Replaces (CO)X-3056.
43	(CO)D600L-2120	1	Screen Assembly, Oil Pump Strainer.
44	185-859	1	Stud, Oil Pump to Bearing Cap - 3/8-16 x 1-1/2" - (CO)X-20040.
45	(CO)X-226	1	Washer, Oil Pump to Bearing Cap - Replaces (CO)X-203.
46	(CO)X-1802-G	1	Nut, Oil Pump to Bearing Cap - 3/8-16".
	(CO)X-14294	1	Washer, 3/8 x 1/8 - Between Bearing Cap and Oil Pump Mounting Lug.
	(CO)F400T-181	1	Kit, Camshaft Bushing (Finish Reamed) - Complete for Engine.
	(CO)F400T-314	1	Kit, Valve Tappet - (Complete for Engine - 8 pcs.)
	(CO)F600T-293	1	Kit, Oil Pump Repair.

FIG. 3 - CAMSHAFT & OIL PUMP PARTS GROUP (Cont.)

FIG. 4 - WATER PUMP PARTS GROUP

(CO)F400K-3947	1	Pump, Water - Replaces (CO)F400K-3941.
(CO)F400T-253	1	Kit, Water Pump Repair Parts (For servicing F400K-3941 Pump and F400K-3947).
(CO)X-3794	4	Screw, Cover to Body.
(CO)F400K-392	1	Cover, Water Pump.
(CO)F400K-391	1	Gasket, Water Pump Cover.
(CO)F162K-2560	1	Impeller, Water Pump.
(CO)N62K-211	1	Seal, Water Pump.
(CO)F400K-291	1	Shedder, Water.
(CO)X-7022	1	Ring, Seat Bearing.
8	185-751	Shaft and Bearing - (CO)F226K-2230.
9	185-845	Hose, Water Pump to Water Outlet Elbow - (CO)X-2441.
10	503-49	Clamp, Hose - Water Pump (CO)X-2376.
11	505-135	Nipple, 3/8" Pipe - Water Pump Outlet (CO)X-12517.
12	(CO)F400K-418	Body, Water Pump.
13	(CO)X-7021	Retainer, Water Pump Bearing.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
17	185-754	1	Hub, Fan - (CO)F400K-385.
19	(CO)X-226	3	Washer, Lock - 3/8" - Water Pump - Replaces (CO)X203.
20	800-55	2	Screw, 3/8-16 x 2-1/4" - Water Pump to Cylinder - (CO)X-3939.
20	(CO)X-3319	1	Screw, Water Pump to Cylinder - 3/8-16 x 2-1/8".
21	800-51	1	Screw, 3/8-16 x 1-1/4" - Water Pump to Cylinder - (CO)X-3063.
22	(CO)X-14134	1	Washer, Copper - 3/8" - Water Pump to Cylinder.
23	185-752	1	Gasket, Water Pump to Cylinder Block - (CO)F400K-340.
	(CO)K600K-220	1	Gasket, Water Pump Seal (Not Illustrated).

FIG. 4 - WATER PUMP PARTS GROUP (Cont.)

1	122-91	1	Filter, Oil - Complete with Cartridge and Mounting Bracket.
2	122-37	1	Cartridge, Oil Filter Refill - Includes Gaskets.
3	502-2	2	Elbow, Inverted Male - Oil Filter - (WH)400X4.
4	122A86	1	Line, Oil Filter Return.
5	122A87	1	Line, Oil Filter Inlet.
6	520A221	2	Stud, Oil Filter Mounting - 5/16-18 x 1".
7	505-50	1	Elbow, Pipe Street - 1/2" - Oil Drain.
8	505-100	2	Nipple, Pipe Close - 1/2" - Oil Drain.
9	504-11	1	Valve, Oil Drain - 1/2".
10	503-197	1	Clamp, Hose - Oil Drain.
11	503-316	1	Hose, Oil Drain - 3/4" I.D. x 1" O.D. x 11" Long.
12	123B96	1	Tube, Oil Fill.
13	123A20	1	Cap, Oil Fill Tube.

FIG 5 - OIL SYSTEM GROUP

Note:	Refer to Control Group for Oil Pressure Gauge.
-------	--

PARTS LIST

31

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	155B456	1	Muffler, Exhaust.
2	155A565	1	Mounting Flange, Muffler.
3	154-351	1	Gasket, Muffler Mounting Flange.
4	155B493	1	Tubing, Exhaust.
5	505-32	1	Coupling.

FIG. 6 - MUFFLER GROUP

1	151P175	1	Muffler, Exhaust.
1	151P182	1	Mounting Flange, Muffler.
2	151A139	1	Gasket, Governor Mounting.
3	185-319	1	Gasket, Governor Flange Plate - (CO)Y91S-215.
4	(CO)F400S-201	1	Plate, Governor Flange - (Kidney Shaped).
5	(CO)X-318	1	Gasket, Governor to Gearcover - Upper - 3/8 Copper Asbestos.
6	(CO)X-3283	1	Screw, Governor to Gear Cover - 3/8-16 x 3-5/8" Long.
7	520A479	1	Stud, Governor Link.
8	150A638	2	Joint, Ball - Governor Link - 1/4-28 Thread.
7,8	150A695	1	Linkage Assembly, Governor.

FIG. 7 - GOVERNOR & GOVERNOR LINKAGE GROUP

1	151P175	1	*Governor Assembly - Includes Gear - Hoff No. GD270-C5137 - Used PRIOR to Serial #593603.
1	151P182	1	*Governor Assembly - Includes Gear - Hoff No. GD270-C7147 - Used BEGIN Serial #593603.
2	151A139	1	Gasket, Governor Mounting.
3	185-319	1	Gasket, Governor Flange Plate - (CO)Y91S-215.
4	(CO)F400S-201	1	Plate, Governor Flange - (Kidney Shaped).
5	(CO)X-318	1	Gasket, Governor to Gearcover - Upper - 3/8 Copper Asbestos.
6	(CO)X-3283	1	Screw, Governor to Gear Cover - 3/8-16 x 3-5/8" Long.
7	520A479	1	Stud, Governor Link.
8	150A638	2	Joint, Ball - Governor Link - 1/4-28 Thread.
7,8	150A695	1	Linkage Assembly, Governor.

* - For Complete Assembly, Use Governor #151P182. For Components, See separate group.

FIG. 8 - GOVERNOR PARTS GROUP

1	151P175	1	Governor - Complete with Gear (HOF)GD270-C5137 - Used PRIOR to Serial #593603 (For Complete Assembly, Use Governor #151P182).
1	151P182	1	Governor - Complete with Gear (HOF)GD270-C7147 - Used BEGIN Serial #593603.
1	(HO)D104-145	1	†Lever, Throttle.
1	(HOF)D132-81	1	Sensitivity Assembly - Includes Lever and following indented parts not individually illustrated.
2	(HOF)D132-83	1	Pin, Sensitivity Adjusting - Prior to Serial #593603.
1	(HOF)D165-33	1	Pin, Sensitivity Adjusting - Beginning Serial #593603.
1	(HOF)D117-36	1	Retainer, Spring Bushing to Pin - Replaces (HOF)D165-18.
1	(HOF)D117-46	1	Washer, Sensitivity Pin to Spring Bushing - Prior to Serial #593603.
1	(HOF)D129-29	1	Bushing, Sensitivity Spring.

Bushing, Spring Link - Prior to Serial #593603.

(HOF)D129-29

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
3	(HOF)D117-72	1	†Washer, Lever Spacer.
4	(HOF)D114-133	1	Screw, Speed Adjusting.
5	(HOF)D115-29	1	Nut, Lock - Speed Adjusting.
6	(HOF)D105-223	1	Lever, Speed Adjusting - Prior to Serial #593603.
6	(HOF)D105-232	1	Lever, Speed Adjusting - Begin Serial #593603.
7	(HOF)D129-18	1	Bushing, Adjusting Lever Pivot.
8	(HOF)D117-87	1	Washer, Lock - Adjusting Lever to Body.
9	(HOF)D114-179	1	Screw, Adjusting Lever to Body.
10	(HOF)D110-85	1	Spring, Speed (120 #Rate - Black) Prior to Serial #593603.
10	(HOF)D110-57	1	Spring, Speed (120 #Rate - Black) Begin Serial #593603.
11	(HOF)D164-120	1	Screw, Bumper - Complete with Spring, Nut and Seal.
12	(HOF)D127-133	1	†Shaft, Rocker.
13	(HOF)D133-24	2	†Bearing, Rocker Shaft.
14	(HOF)D108-33	1	†Seal, Rocker Shaft Oil - Replaces (HOF)D108-8.
15	(HOF)D105-67	1	Lever, Rocker Shaft.
16	(HOF)D114-163	2	Screw, Lever to Rocker Shaft.
17	(HOF)D150-101	1	†Spacer, Welch Plug.
18	(HOF)D140-24	1	†Plug, Welch.
19	(HOF)D133-14	1	†Bearing, Rear Main - Bushing Type.
20	(HOF)D164-293	1	†Body Only - Not Sold Separately.
21	(HOF)D164-393	1	Gear Assembly - Includes Gear, Shaft, Cover, Ball Bearing, Rivet and Yoke.
22	(HOF)D164-118	2	Thrust Sleeve and Bearing Assembly - Includes Sleeve, Bearing, Washer and Retainer.
23	(HOF)D164-547	2	Flyweight Assembly - Includes Thrust Pin and Bearing - Prior to Serial #593603.
23	(HOF)D132-88	2	Flyweight Assembly - Includes Thrust Pin and Bearings - Begin Serial #593603.
24	(HOF)D165-32	4	Pin, Flyweight Pivot.
25	(HOF)D114-128	1	Retainer, Flyweight Pivot - Replaces (HOF)D165-17.
26	(HOF)D164-451	1	Screw, Cover to Body.
27		1	Body Assembly - Includes parts marked (†).

FIG. 8 - GOVERNOR PARTS GROUP (Cont.)

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	150K689	1	Booster Kit, Vacuum Assembly - Replaces 150B680.
2	150K382	1	Diaphragm Assembly (Replaces #150A477).
3	150A666	1	Plate, Diaphragm.
4	150A679	1	Spring, Internal - Booster.
5	516-85	1	Pin, Roll.
6	150A668	1	Gasket.
7	150A376	1	Bracket, Booster Spring.
8	150C683	1	Bracket, Vacuum Booster.
9	150A686	1	Bracket, Booster External Spring.
10	150A471	1	Spring, External - Booster.
11	150A681	1	Line, Vacuum Booster - Copper.
12	150A685	1	Fitting and Tube Assembly.
13	502-37	1	Elbow, Invert - Male.
14	509P75	1	"O" Ring.
15	502A215	1	Connector.

FIG. 9 - VACUUM BOOSTER GROUP

FIG. 10 - FUEL SYSTEM GROUP (GASOLINE)

1	143K60	1	Kit, Gasket - Carburetor.
2	153A26	1	Gasket, Insulating - Choke Control to Manifold.
3	153P87	1	Choke, Automatic - Sisson 12-volt (Not used with special water cooled manifold).
4	503-107	3	Clamp, Hose - Mounting Air Cleaner Hose - 1-5/8" I.D (Replaces #503A22).
5	153A199	1	Rod, Choke Control - 1-1/4" x 12-1/4" long.
6	518-6	1	Clip, Choke Control Rod End.
7	140A218	1	Bracket, Air Cleaner Hose Mounting.
8	140B303	1	Cleaner, Air.
	140A78	2	Band, Air Cleaner.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
9	140B311	1	Bracket, Air Cleaner - Unhoused Plant only.
9A	140C287	1	Bracket, Air Cleaner - Housed Plant only.
10	503A205	1	Hose, Air Cleaner - Wirenold - 1-1/2" I.D. x 32" long.
11	503A207	1	Hose, Breather - Valve Compartment Cover to Air Cleaner - 5/8" I.D. x 21" long.
	503-262	1	Hose, Breather - Valve Compartment Cover to Air Cleaner - 5/8" I.D. x 18" long.
12	503P131	2	Clamp, Hose - Breather Hose.
13	149A394	1	Line, Fuel - Fuel Pump to Carburetor.
14	143C21	1	Carburetor, Gasoline - CARTER #UFT-2054S - For plants with Sisson Choke.
15	141-281	1	Gasket, Carburetor Mounting - Interchangeable with (CAH) #1A-48 or (CO) NF-104
		For Models without Dripshield - Carburetor to Manifold.	
		For Models with Dripshield - (1) Carburetor to Dripshield, (1) Dripshield to Manifold	
16	508-2	1	Grommet, Rubber - 3/8" I.D.
17	505-19	1	Bushing, Pipe Reducer - 1/2 x 3/8 - Breather.
18	505A135	1	Nipple, Pipe Half - 3/8 x 1-1/2 - Breather.
19	149P61	1	Pump, Fuel.
20	149A126	1	Gasket, Fuel Pump Mounting.
21	502-2	2	Elbow, Inverted Male - (1) Carburetor, (1) Fuel Pump - 400 x 4.
	502-65	1	Elbow, Inverted 45°.
22	520A567	1	Stud, Carburetor Mounting - 5/16 x 1-1/2".
22	520A223	1	Stud, Carburetor Mounting - 5/16 x 1-1/4".
	149K503	1	Kit, Fuel Pump Repair Parts.
	143A58	1	†Carburetor, Gasoline - Basic 143C21 with provision for ONAN choke.
23	153A155	1	†Adapter, Onan Choke - Mounts to Carburetor.
24	153A58	1	†Housing, Thermostatic Bimetal - Onan Choke.
25	153-57	1	†Bimetal, Thermostatic - Onan Choke - (flat coiled spring).
26	153A49	1	†Cover, Onan Choke - 12-17 volt heating element - For 12 volt cranked plants.
27	143A57	1	†Shaft, Carburetor Choke - Includes knurled knob - For plants with Onan choke.
28	145B298	1	†Shield, Carburetor Drip.
	336A505	1	Lead, Choke Ground.

FIG. 10 - FUEL SYSTEM GROUP (GASOLINE) Cont.

- † These parts apply for plants with special water cooled manifold. Onan electric choke is used instead of Sisson automatic choke.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	143C21	1	Carburetor - CARTER Updraft.
	143K65	1	Kit, Carburetor Repair Parts - Includes parts marked (†).
1	143K60	1	†Kit, Carburetor Gasket - Includes parts marked (★).
1	143-23	1	Body Assembly, Throttle (Not Sold Separately).
2	141-281	1	★Gasket, Carburetor Mounting - Interchangeable with (CAR) #1A-48 or (CO) NF-104 - (1 Only Included in 143K60 Kit)
3	143-25	1	For Models without Dripshield - Carburetor to Manifold Valve, Throttle.
4	143-26	1	†Shaft and Lever, Throttle.
5	143-27	1	Valve, Choke.
6	143-28	1	†Jet, Low Speed.
7	143-29	2	Plug, Rivet.
8	143-30	1	Plug, Rivet.
9	143-31	1	Plug, Idle Port Rivet.
10	143-32	1	Plug, Bowl Drain.
11	143-33	1	†Nozzle.
12	143-34	1	Shaft and Lever, Choke.
13	143A15	2	★Gasket, Nozzle.
14	143-36	1	★Gasket, Main Metering Screw.
15	143-37	1	Float and Lever.
16	143-38	1	†Pin, Float Lever.
17	143-39	1	†Needle and Seat.
18	143-40	1	Screw, Idle Adjustment.
19	812-14	4	†Screw, Throttle and Choke Valve Attaching.
20	(CAR)47-26	2	Plug, Welch.
21	143-42	1	Venturi.
22	143-43	1	Spring, Idle Adjustment Screw.
23	143-44	4	Screw and Washer, Body Attaching.
24	143-45	1	Screw, Throttle Adjusting.
25	143-46	1	★Gasket, Body.
26	143-47	1	Retainer, Air Horn Dust Seal.
27	143-48	2	Retainer, Choke and Throttle Shaft Dust Seal.

FIG. 11 - CARBURETOR PARTS GROUP (GASOLINE)

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
28	143-49	1	#Screw and Needle, Adjustable Main Metering.
29	143-50	2	#Seal, Choke and Throttle Shaft Dust.
30	143-51	1	#Felt, Air Horn Drain.
31	143-52	1	#Packing, Main Metering Screw.

FIG. 11 - CARBURETOR PARTS GROUP (GASOLINE) Cont.

FIG. 12 - FUEL SYSTEM (GAS ONLY) - (Optional Equipment) GROUP

1	148K349	1	Kit, Gas Conversion - Includes the Following Parts Marked #.
	141A281	1	#Gasket, Carburetor Mounting.
	148C311	1	#Regulator, Gas - Garrettson - Atmospheric Type.
2	503-51	1	#Hose, Rubber - 5/8" I.D. x 36" Long.
3	503-49	1	#Clamp, Hose - For 1" O. D. Hose.
4	148A107	1	#Vent.
5	503-39	1	#Elbow - 3/8"-90°.
6	505-57	1	#Plug, Pipe - 1/8".
7	505-101	1	#Nipple - 3/8" x 1".
9	505A135	1	#Nipple, Pipe Half - 3/8" I.P.S. x 1-1/2" Long.
10	148C350	1	#Carburetor Assembly - For operation on Gas Fuel only - Includes the following parts marked #. With The One Noted Exception.
	148C348	1	Carburetor Assembly, Gas Fuel - Includes Parts Marked ## With The One Noted Exception.
	143-26	1	#Shaft and Lever, Throttle.
	520A567	1	##Stud, Carburetor Mounting - 5/16 x 1-1/2". (Not used on Carburetor No. 148C348).
	520A223	1	##Stud, Carburetor Mounting - 5/16 x 1-1/4". (Carburetor No. 148C348 Uses 2).
	142-34	1	##Needle, Idle Adjusting.
	142-76	1	##Spring, Idle Adjusting Needle.
	505-135	1	##Nipple, Pipe Half - 3/8" I.P.S. x 1-1/2" Long - Fuel Connection.
	148A207	1	##Venturi.
	148B520	1	##Adapter, Air Hose and Choke - Replaces 148B204.
	148A205	1	##Gasket, Body to Adapter.
	148A208	1	##Screw, Gas Adjusting (Power Jet).

- Parts included in Conversion Kit.

- Parts included in Gas Carburetor Assembly.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
-------------	-------------	----------------	-------------

FIG. 12 - FUEL SYSTEM (GAS ONLY) - (Optional Equipment) GROUP (Cont.)

868-4	1	## Nut, Hex Jam - 7/16-20	Power Adjusting Screw.
800-7	2	## Screw, Hex Head Steel Cap - 1/4-20 x 1"	Body to Adapter.
850-40	2	## Washer, Lock - 1/4	Body to Adapter.
143-25	1	## Butterfly, Throttle Shaft.	
812-15	2	## Screw, Round Head Steel Machine - #3-48 x 1/4"	Fly to Shaft.
854-3	2	## Washer, Shakeproof - I.T. #3	Fly to Shaft.
517A30	1	## Plug, Passage in Body.	
143-45	1	## Screw, Idle Stop.	
148C203	1	## Body, Carburetor.	
148C426	1	Carburetor Assembly, L.P.G. (not used with Garretson Regulator)	- Includes Parts Marked ## and † with the Noted Exception.
148A171	1	† Counterweight.	
148A209	1	Shaft, Choke.	
148A210	1	† Butterfly, Choke.	
803-2	1	† Screw, Socket Head Set.	

- Parts included in Gas Carburetor Assembly.

FIG. 13 - FUEL SYSTEM (GAS-GASOLINE COMBINATION) - (Optional Equipment) GROUP

1	148K341	1	Kit, Gas-Gasoline Conversion - Includes the following parts marked ▲.
1	148C311	1	▲Regulator, Gas - Garretson Model K.N. - Atmospheric Type.
2	503-260	1	▲Hose, Rubber - 5/8" I.D. x 36".
3	503-49	2	▲Clamp, Hose - For 1" O.D. Hose.
5	505A135	1	▲Nipple, Pipe Half - 3/8" I.P.S. x 1-1/2" long.
6	141-281	1	▲Gasket, Carburetor Mounting - Interchangeable with (CARR) #1A-48 or (CO) NF-104
			For Models without Dripshield - Carburetor to Manifold
7	148A107	2	For Models with Dripshield - (1) Carburetor to Dripshield, (1) Dripshield to Manifold
		1	▲Vent.

▲ - Parts included in conversion package.

▲▲ - Parts included in Gas-Gasoline (combination) Carburetor only.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
FIG. 13 - FUEL SYSTEM (GAS-GASOLINE COMBINATION) - (Optional Equipment) GROUP (Cont.)			
9	505-39	1	▲Elbow - 3/8"-90°.
10	505-57	1	▲Plug, Pipe 1/8"
11	505-101	1	▲Nipple 3/8 x 1".
	148P390	1	Repair Kit, Gas Regulator.
11a	143B151	1	▲Carburetor Assembly - For Operation on either Gas or Gasoline Fuel - Parts below marked ▲ are peculiar to Carburetor #143B151, while other parts must be selected from the Gasoline Carburetor (#143C21) Parts Group.
	148A222	1	▲Float, Fuel Level.
	148A17	1	▲Gasket, Bushing - Float Locking Mechanism.
	148A223	1	▲Lock, Float.
	148A224	1	▲Valve - Gas Fuel Inlet.
	815-118	1	▲Screw, Fillister Head - #6-32 x 1/4" - For Locking Automatic Choke.
	143-54	1	▲Venturi.
	502-2	1	▲Elbow, Inverted Male.
	520A567	1	▲Stud, 5/16 x 1-1/2" - Carburetor Mounting.
	141A281	2	▲Gasket, (1) Carburetor Mounting, (1) Drip Shield Mounting.
	520A223	1	▲Stud, 5/16 x 1-1/4" - Carburetor Mounting.
	143B149	1	*Carburetor Assembly with Onan Electric Choke (Choke Parts Marked *).
12	141A502	1	*Adapter.
	13	153A58	*Housing, Thermostatic Element.
	14	157-57	*Bimetal, Thermostatic.
	15	153A49	*Cover.
	16	143A57	*Shaft, Choke.
	17	141A501	*Spring, Choke Lock.
	18	145B299	*Shield, Carburetor Drip.
			* - Parts included in conversion package.
			▲ - Parts included in Gas-Gasoline (combination) Carburetor only.
			* - These parts used on plants with special water cooled manifolds.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
-------------	-------------	----------------	-------------

FIG. 14 - MOUNTED FUEL TANK GROUP (Optional Equipment) HOUSED PLANTS ONLY

1	159B642	1	Cap, Fuel Tank.
2	159D640	1	Band, Fuel Tank Hold-down.
3	159D639	1	Tank, Fuel.
4	502-2	2	Elbow, Inverted Male.
5	504P4	1	Valve, Fuel Shut Off.
6	501-7	1	Line, Fuel.
7	505-57	1	Plug, Pipe - 1/8".
8	502-3	1	Connector, Inverted Male - Flex Line to Valve - For X-ray Models only.
9	502-53	1	Elbow, 45° Street - Solenoid Valve Inlet - For X-ray Models only.
10	502-82	1	Nipple, Hex - Brass pipe - Solenoid Mounting - For X-ray Models only.
11	307P565	1	Valve, Solenoid Fuel - For X-ray Models only.
12	416A95	1	Clip, Fuel Line - For X-ray Models only.
13	159P751	1	Gasket, Gas Tank Filler Neck.

FIG. 15 - SEPARATE FUEL TANK & DAY TANK (Optional Equipment) GROUP

1	159A664	1	Tank Assembly, Reservoir - Includes parts marked (*) - (Prior to Serial No. 642844).
1	415A126	1	Tank, Fuel - 5 Gallon (Replaces all previous separate tanks).
2	504A13	1	Valve, Shut Off - Optional (For tanks with fuel outlet at bottom of tank).
3	501A27	1	Line, Fuel Tank to Pump.
4	415B124	1	Cap, Rain - Rubber (With provision for fuel line outlet).
5	159B294	1	*Tank, Reservoir ("Day" or "Standby").
6	159A641	1	*Band, Reservoir Tank.
7	159A657	1	*Bracket - Day Tank, Mounting.
8	502-24	2	*Elbow, Male Compression.
9	505-17	1	*Bushing, Pipe.
10	159A705	1	Prior to Serial No. 642844.
	504A39	1	Reducer, Restricted - Begins Serial No. 642844 (Used with pressurized day tank).
		1	*Cock, Shut-Off - With Strainer - Prior to Serial No. 642844.

* - Parts included in tank assembly.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
11	505-57	2	*Plug, Pipe Square Head.
	159C656	1	*Line, Fuel - Pump to Reservoir Tank.
	159C655	1	*Line, Fuel - Reservoir Tank to Carburetor.
	159-41	1	Cap, Vent - Reservoir Tank - Prior to Serial No. 642844.
	415A55	1	Bracket, Vent Cap - Prior to Serial No. 642844.
12	502-82	1	Nipple - Begin Serial No. 642844.
13	307P564	1	Valve, 12 V. Solenoid - Begin Serial No. 642844.
14	502-2	1	Elbow, Inverted Male - Begin Serial No. 642844.
15	501A5	1	Line, Fuel Flex - Begin Serial No. 642844.

* - Parts included in tank assembly.

FIG. 15 - SEPARATE FUEL TANK & DAY TANK (Optional Equipment) GROUP (Cont.)

11	505-57	2	*Plug, Pipe Square Head.
	159C656	1	*Line, Fuel - Pump to Reservoir Tank.
	159C655	1	*Line, Fuel - Reservoir Tank to Carburetor.
	159-41	1	Cap, Vent - Reservoir Tank - Prior to Serial No. 642844.
	415A55	1	Bracket, Vent Cap - Prior to Serial No. 642844.
12	502-82	1	Nipple - Begin Serial No. 642844.
13	307P564	1	Valve, 12 V. Solenoid - Begin Serial No. 642844.
14	502-2	1	Elbow, Inverted Male - Begin Serial No. 642844.
15	501A5	1	Line, Fuel Flex - Begin Serial No. 642844.

* - Parts included in tank assembly.

FIG. 16 - WATER & OIL SENDER GROUP

1	193B98	1	Sender, Oil Pressure.
	193A108	1	Spec A Only.
	193A109	1	Begin Spec B.
2	193A100	1	Sender, Water Temperature.
	193A109	1	Spec A Only.
	193A146	1	Begin Spec B.
3	309A146	1	Switch, Hi-Temperature - Non-Adjustable (Replaces 309A1).
4	502-1	1	Tee, Inverted - W550X4 - Oil Pressure Sender.
5	505-7	1	Bushing, Reducer - 1/4 x 1/8" Oil Pressure Sender.
6	502-20	1	Elbow - Street 3400x2.
7	505-117	1	Bushing, Face - 1/2 x 3/8".

PARTS LIST

41

FIG. 17 - BATTERY IGNITION GROUP

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	166B4	1	Distributor.
2	160A186	1	Clamp, Distributor Adjusting.
3	166B278	1	Coil, Ignition - 12 Volt (Replaces #166-259).
4	167-129	4	Spark Plug - Champion.
5	314-32	4	Suppressor, Spark Plug.
6	167A1070	4	Cable, Hi Tension - Does not include Suppressor.
7	314-6	1	Suppressor, Coil to Distributor.
8	167A1312	1	Cable, Hi Tension - Distributor to Suppressor 3" Length.
9	167A1316	1	Cable, Hi Tension - Coil to Suppressor.
10	312A58	1	Condenser - Coil - Replaces 312A15.
11	166P235	1	Cap, Distributor.
12	166P234	1	Rotor, Distributor.
13	166P245	1	Contact Point Set - Distributor.
14	166B279	1	Clamp - Coil (Replaces 166-101).
15	336A336	1	Lead, Rotor Arm to Coil.
16	336A337	1	Lead - Hi Temperature Cut-off to Coil.
17	307B40	1	Solenoid, Start.
18	336A332	1	Lead, Distributor to Coil.
19	312A10	1	Condenser, Distributor.

FIG. 18 - COOLING SYSTEM & MOUNTING CUSHION GROUP

1	130-285	1	Radiator.
2	130C553	1	Cap, Radiator - Replaces 130P364.
2A	130-245	1	Gasket, Radiator Cap.
3	563B203	1	Hose, Radiator - Upper - 1-1/2 I.D. Inlet.
4	563B204	1	Hose, Radiator - Lower - 1-1/2 I.D. Outlet.
5	511-20	1	Belt, Fan - 46-1/2".

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
6	503-129	4	Clamp, Radiator Hose.
7	130B343	1	Fan Only, Cooling - 4 Blades, Pusher Type.
8	504-3	1	Valve, Drain - Radiator - (WH)145.
10	505-18	1	Bushing, Reducer - 1/2 x 1/4" Pipe - Drain Valve.
11	402-27	2	Mount, Rubber - Generator.
12	402A68	1	Pin, Engine Mounting - 4-3/8" long with 5/8-18 Thread.
	870-59	1	Nut, Castellated - 5/8-18 Thread.
13	402-10	1	Mount, Rubber - Upper.
14	402-11	1	Mount, Rubber - Lower.
15	402-12	1	Cup, Rubber Mount Retainer.
	(CO)C400B-229	2	Washer, Plain - 11/16, 3/32 thick - Lower Mounting Rubber Stud, 5/8-18 x 4-3/8 long (Drilled) - Gear Cover to Front Motor Support.
	(CO)X-4584	1	Nut, 5/8-18 x 3 high (Slotted) - Gear Cover to Front Motor Support.
	(CO)X-18066	1	Washer, Plain - 5/8 x 2-1/4 x 1/8 - Gear Cover to Upper Mount.
	(CO)X-14191	2	Pin, Cotter - 1/8 x 1-1/2 long - Gear Cover to Front Motor Support Stud.
	(CO)X-607	1	▲Manifold, Engine Exhaust - Water Cooled.
	(CO)F162E-5011	1	▲Valve, Water - Lockshield.
	504-19	1	▲Key, Water Valve.
	504-20	1	▲Valve, Water - Solenoid 12 Volt.
	307-182	1	▲Bracket, Manifold Water Pipe.
	110A528	1	▲Valve, Water By-Pass Regulator.
	504-11	1	▲Plug, Adapter - (1) Water Pump Hose, (1) Water Outlet Hose.
	110A522	2	*Thermostat.
	309-29	1	*Thermostat Box.
	333A12	1	*Thermostat Box Cover.
	333A13	1	*Heater, Water Jacket (Tank Type, 110 Volt, 850W).
	333P54	1	▲ - These optional parts are used only with certain plants which are adapted to cooling by passing fresh water (city water) through the engine as necessary when ventilation is inadequate. Pipe fittings, hoses and clamps which are usually available locally are not listed. Consult your dealer if conversion to City Water Cooling is desired.
			* Optional Equipment

FIG. 18 - COOLING SYSTEM & MOUNTING CUSHION GROUP (Cont.)

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
FIG. 19 - BATTERY CHARGING GENERATOR GROUP			
1	191P8	1	Generator, Battery Charging (Does not include pulley) Autolite, 12 volt.
	191C315	1	Spec A Only. Begin Spec B.
1A	191P11	1	Pulley, For Charging Generator. Spec A Only. Begin Spec B.
	191A317	1	Bracket, Generator Mounting - (CO)F400M-301.
2	185-805	1	Arm, Generator Belt Adjusting.
3	232A230	1	Spacer, Generator Mounting.
4	232A234	1	Regulator, Charge - 12-Volt.
5	191-21	1	Spec A Only. Begin Spec B.
	191B316	1	Clamp, Pipe - Mounting Hand Crank.
6	331A29	1	Cable, Battery - 28" long.
7	416A77	1	Cable, Battery - 14" long.
8	416A49	1	†Tray, Battery.
9	416B407	1	†Frame, Hold Down.
10	520A435	2	Stud, Battery Hold Down.
11	192B4	1	Crank, Engine Hand.
	(CO)X-19002	5	Stud - 3/8-16 x 101/4" - Charging Generator Bracket to Crankcase.
	(CO)X-1802-G	5	Nut - 3/8-16 - Charging Generator Bracket to Crankcase.
	850-51	5	Lockwasher - 3/8 - Charging Generator Bracket to Crankcase (CO)X-203.
			Brush Set, Charging Generator.
			Spec A Only Begin Spec B
191-16		1	Spring, Brush, Charging Generator.
	(AL)GJC-2012AS	1	Spec A Only Begin Spec B
	(AL)GBW-45	2	Condenser, 0.1 Mfd., Voltage Regulator Suppression
	(AL)GJC-42	2	
	312A15	1	

† - Note: - On Plants With Optional Water Cooled Manifolds, Use Tray #416C427 and Frame #416B338.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	403D476	1	Chassis, Mounting.
2	403D477	1	Chassis, Mounting - Rear Section.
3	405D1079	1	Panel, Front.
4	405D1080	1	Panel, Rear Door - Includes hinge.
5	405D1081	1	Panel, Rear End - Excludes door.
6	405D1082	1	Panel, Top.
7	405D1084	2	Panel, Side Door - Includes Hold Down Fasteners.
8	130B396	1	Bracket, Radiator - Mounting Support.
9	130B397	2	Bracket, Radiator.
10	232B1345	2	Spacer, Generator Mounting.
11	130C402	1	Guard, Fan - 1 Piece (Replaces 2 piece guards used previously).
12	403A373	1	Plate, Chassis - 9-1/2 x 9" - For Mounting Load Wire Conduit.
13	406-2	1	Knob, Panel Door - Attach with Machine Screw.
14	336A476	1	Cable, Ground Strap.
15	405A1181	2	Stop, Door.

FIG. 20 - HOUSING GROUP (HOUSED PLANTS ONLY)

FIG. 21 - MOUNTING GROUP (UNHOUSED PLANTS ONLY)

1	403D476	1	Chassis, Mounting.
2	403C478	1	Trim, Chassis - Right Hand Side.
3	403C479	1	Trim, Chassis - Left Hand Side.
4	405D1079	1	Panel, Front End.
5	405D1089	1	Trim, Front Panel.
6	130B396	1	Bracket, Radiator Mounting.
7	130A397	2	Spacer, Generator Mounting - Spec "A" Models only.
8	232B1345	2	Cover, Chassis Front (For units with City Water Cooling).
9	403C507	1	Guard, Fan - 1 Piece (Replaces 2 Piece Guards used previously).
11	130C402	1	Cable, Ground Strap.
12	336A476	1	

FIG. 22 - ELECTRICAL CONTROL GROUP (HOUSED ONLY)

1	301D1560	1	Box, Control.
2	301C1551	1	Panel, Control Box Upper - Use with 120/240 Volt Units.
3	301C1554	1	Panel, Control Box Upper - Use with 120 Volt Units.
4	301C1555	1	Panel, Control Box Upper - Use with 240 and 120/208 Volt Units.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
5	301C1561	1	Panel, Control Box Upper - Use with 460, 220/380, and 277/480 Volt Units.
5A	30IC1696	1	Panel, Control Box Upper - Use with 120/240 volt units - For X-ray Models only.
6	302P420	1	Voltmeter. 0-150 Volt.
	302P421	1	0-300 Volt.
	302P422	1	0-500 Volt.
	302P423	1	0-750 Volt.
9	302-212	1	Meter, Running Time - 60 Cycle (Replaces #302-68).
10	302-102	1	Meter, Running Time - 50 Cycle.
11	302-157	1	Meter, Multiplier - 58,000 Ohms.
12	302A235	As Req.	Clamp, Current Transformer.
13	302A236	As Req.	Clamp, Current Transformer.
14	308-22	1	Switch, Selector.
15	322-26	1	Lamp, Panel.
16	332P49	1	Receptacle, Panel Lamp.
17	332-419	1	Block, Terminal - 6-1/4" long.
18	332A436	1	Marker, Terminal Block - Marked M1, M2, M3, M4.
19	332A437	1	Marker, Terminal Block - Marked M1, M3, M2, M4.
20	332A440	1	Jumper, Brass.
21	338C187	1	Harness Assembly, Wire.
22	508P63	1	Grommet.
23	▲	▲	Ammeter, AC.
24	▲	▲	Breaker, Circuit.
25	▲	▲	Transformer, Current.
26	▲	▲	Condenser.
27	402-70	4	Resistor.
28	337A44	1	Mounts, Rubber.
29	302B448	1	Strap, Ground.
30	302-213	1	Plate, Meter Face - For appearance only - to give round meter a square look.
31	Frequency Meter - For X-ray Models only.	1	

▲ - See Parts Table. For any parts not listed here refer to wiring diagram furnished with unit.

PARTS LIST

PARTS TABLE

MODEL	VOLTAGE	REF. NO. 23 AC AMMETER	REF. NO. 24 CIRCUIT BREAKER	REF. NO. 25 CURRENT TRANSFORMER	REF. NO. 26 CONDENSER	REF. NO. 27 RESISTOR
10HC-1R	120	302P408	320B52	302B78	312A58	
	120/240	302P419	320B52	302B117	312A58	*304-99
	120/208	302P405	325K2	302B117	312A58	*304-99
	4R	302P405	325K2	302B117	312A58	*304-125
	5R	240	302-144	320-150	302B145	▲304-125
	6R	460	302-144	320-150	312A22	*304-99
	7R	220/380	302-159	320-150	312A22	304A125
	4XR	277/480	302-144	320-150	312A22	
	3R17	120/240	302P406	320P148	312A58	
12HC-53R	120/240	302P406	320-21	302B76	312A58	*304-99
	120/208	302P405	320B52	302B117	312A58	*304-99
	54R	240	302P405	320-153	302B117	*304-99
	55R	220/380	302P404	320-152	302B123	*304-99
	57R				312A22	
15HC-1R	120	302P410	320P148	302B79	312A58	
	120/240	302P406	320P148	302B76	312A58	
	120/208	302P406	320B21	302B76	312A58	*304-99
	4R	240	302P405	320B52	302B117	*304-99
	5R	460	302P404	320-151	302B123	▲304-125
	6R		302P404	320-152	312A22	*304-99
	7R	220/380	302P404	320-151	302B123	304A125
	4XR	277/480	302P404		312A22	

* - 5,000 Ohm - 10 Watt Resistor.

▲ - 15,000 Ohm - 25 Watt Resistor.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
-------------	-------------	----------------	-------------

FIG. 23 - ELECTRICAL CONTROL GROUP (UNHOUSED ONLY)

Note: For Unhoused Units With Optional Meterpanel, See Routed Electrical Control Group for parts not listed in this Group.

1	301D1560	1	Box, Control.
2	301C1195	1	Panel, Control Box.
3	301C1845	1	Bracket, Mounting - Control Box - Single Piece (Replaces two piece bracket).
4	508P63	1	Grommet - For 2-3/4" Hole (Use with single piece control mounting bracket).
5	312A15	As Req.	Condenser - 0.1 Mfd. - Use with 120, 120/240, and 120/208 Volt Units.
6	312A22	As Req.	Condenser - 0.1 Mfd. - Use with 460 Volt Units.
7	312A58	As Req.	Condenser - 0.1 Mfd. - Use with 240, and 220/380 Volt Units.
8	332AA419	1	Block, Terminal - 6-1/4" long.
9	332AA36	1	Marker, Terminal Block - Marked M1, M2, M3, M0.
10	332AA437	1	Marker, Terminal Block - Marked M1, M3, M2, M4.
11	332AA440	2	Jumper - Brass.
12	338C187	1	Harness Assembly, Wire (Replaces #538C188).

FIG. 24 - ENGINE CONTROL GROUP (HOUSED AND UNHOUSED)

1	301D1560	1	Box, Control.
2	301C1152	1	Panel, Control Box - Lower.
	301C1916	1	Spec A Only.
			Begin Spec B.
3	193B97	1	Gauge, Oil Pressure.
	193B107	1	Spec A Only.
			Begin Spec B.
4	193B99	1	Gauge, Water Temperature.
	193B106	1	Spec A Only.
			Begin Spec B.
5	302-60	1	Ammeter, Charge.
	302-61	1	20-0-20, Spec A Only.
	304-32	1	30-0-30, Begin Spec B.
7	307B4	1	Resistor - 15 Ohm - 10 Watt.
			Relay, Stop.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
8	307B52	1	Relay, Start Disconnect.
9	307B81	1	Relay, Choke.
10	307B81	1	Relay, Start Ignition.
11	308-5	1	Switch, Hand Crank - Remote (Replaces #308-6).
12	308-90	1	Switch, Start-Stop - Spec A Only - Use 308A166 Switch Assy.
12A	308P154	1	Switch, Start-Stop - Begin Spec "B".
13	301A974	1	Bracket, Mounting - Use with 308-90 Switch only.
14			Block, Terminal.
			3-7/32", 20A - Spec A Only.
			2-1/2", 20 A - Begin Spec B.
15	332A537	Marker Strip	3-7/32", B - 3-Spec A Only.
	332A447		2-1/4", B - 3-Begin Spec B.
	332A566		Block, Terminal - 6-1/4" long.
16	332A503	1	5-15/32", 30A - Spec A Only.
	332A607	1	6", 20A - Begin Spec B.
17	332A510	1	Marker Strip
			5-15/32", 4-11-Spec A Only.
	332A608	1	6", 4-15-Begin Spec B.
18	517-19	1	Button, Dot.

FIG. 24 - ENGINE CONTROL GROUP (HOUSED AND UNHOUSED) (Cont.)

8	307B52	1	Relay, Start Disconnect.
9	307B81	1	Relay, Choke.
10	307B81	1	Relay, Start Ignition.
11	308-5	1	Switch, Hand Crank - Remote (Replaces #308-6).
12	308-90	1	Switch, Start-Stop - Spec A Only - Use 308A166 Switch Assy.
12A	308P154	1	Switch, Start-Stop - Begin Spec "B".
13	301A974	1	Bracket, Mounting - Use with 308-90 Switch only.
14			Block, Terminal.
			3-7/32", 20A - Spec A Only.
			2-1/2", 20 A - Begin Spec B.
15	332A537	Marker Strip	3-7/32", B - 3-Spec A Only.
	332A447		2-1/4", B - 3-Begin Spec B.
	332A566		Block, Terminal - 6-1/4" long.
16	332A503	1	5-15/32", 30A - Spec A Only.
	332A607	1	6", 20A - Begin Spec B.
17	332A510	1	Marker Strip
			5-15/32", 4-11-Spec A Only.
	332A608	1	6", 4-15-Begin Spec B.
18	517-19	1	Button, Dot.

FIG. 25 - GENERATOR GROUP

1	*	1	Armature - Includes Ball Bearing and Drive Disk.
2	*	1	Frame - Machined and Drilled.
3	*	1	Coil Set, Field - Set of 4 Connected.
4	*	4	Shoe, Pole.
			* - Refer to factory giving Model and Serial Number.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
5	*	1	Rig Assembly, Brush - Includes Brushes and Springs.
6	205B33	1	Blower, Armature.
7	211D91	1	Bell, End.
8	212A1106	4	Spring, Commutator Brush.
9	212A1120	4	Block, Holder - Collector Ring Brush.
10	212A1121	4	Guide, Commutator Brush.
11	212A1123	As Req.	Spring, Collector Ring.
12	212A1138	1	Spider, Brush Rig Mounting.
13	213B116	1	Ring, Insulator - Brush Guide.
14	214A54	As Req.	Brush, Collector Ring.
15	214A57	4	Brush, Commutator.
16	231D95	1	Adapter, Generator (Replaces #231D64).
17	232B1116	1	Screen, Generator Air Outlet.
18	232A601	1	Cover, Bearing.
19	232A615	1	Clip, Bearing Stop.
20	232B814	3	Cover, End Bell Opening - Top and Sides.
21	232B841	1	Cover, End Bell Opening - Bottom.
22	312A17	1	Condenser, 0.5 Mfd. - 10 HC Only.
23	510A52	1	Bearing, Armature Ball.
24	101A298	1	Cover, Starter Hole - On Generator Adapter.

* - Refer to factory giving Model and Serial Number.

PARTS LIST**FIG. 26 - CITY WATER COOLING GROUP (OPTIONAL EQUIPMENT)**NOTE: Requires one $7/32"$ hole in valve plate of thermostat.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
1	154E504	1	Manifold, Water Cooled.
2	503-189	8	Clamp, Hose.
3	Describe	As Req.	Hose, $3/4$ id x $9"$ (503P191 bulk).
4	Describe	As Req.	Hose, $3/4$ id x $6"$ (503P191 bulk).
5	503A3	2	Hose $1-1/2$ x $1-7/8$ O.D. x $2-1/2$ Long
6	503P129	4	Clamp, Hose (Also in Cooling System Group).
7	505-100	14	Nipple, $1/2$ x $1-1/8$.
8	307P182	1	Solenoid, 12 V. (Also in Cooling System Group).
9	110A526	1	Nipple and Bracket Assembly.
10	504-19	1	Nipple, Lockshield (Also in Cooling System Group).
11	504-20	1	Key, Valve (Also in Cooling System Group).
12	505-40	5	Elbow, $1/2$.
13	518A29	1	Ring, Key.
14	880-47	1	Chain, $8"$ of 2/0.
15	504-11	1	Valve, Water Regulator (Also in Cooling System Group).
16	505-80	1	Pipe, $1/2$ x $6"$ Long.
17	505-300	1	Nipple, $1/2$ x 21 .
18	505-78	1	Nipple, $1/2$ x $2-1/2$.
19	110A528	1	Bracket, Manifold Water Pipe (Also in Cooling System Group).
20	505-108	2	Tee, $1/2$.
21	110A522	2	Adapter (Also in Cooling System Group).
22	505-18	1	Bushing Reducer $1/2$ - $1/4$ (Also in Cooling System Group).
23	504-3	2	Cock, Drain (Also in Cooling System Group).
24	505-190	2	45° Elbow $1/2$.
25	505A185	2	Half Nipple $1/2$.
26	504-28	1	Drain Cock $3/8$.
27	505-172	1	Close Nipple $2"$.
28	505-188	1	Elbow Reducer 2 x $1-1/2$.
29	520A573	3	*Stud, Manifold.

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
30	520A574	2	*Stud, Manifold.
31	416C27	1	*Tray, Battery (Also in Cooling System Group).
32	154A525	1	*Backplate, Nipple and Bracket Assembly.
33	154A523	1	Cover Plate, Manifold.
34	154A524	1	Flange, Manifold Water Outlet.
35	154A502	1	Flange, Manifold Exhaust.
36	154A503	1	Plate, Manifold End.
37	408C307	1	*Cover, Front Chassis.
38	154A531	1	Gasket, Exhaust Flange.
39	130C485	1	*Belt Guard.
40	154A529	2	Gasket, Water Outlet.
41	154A530	1	Gasket, End Plate.
42	154-618	1	*Adapter, Carburetor.
43	145A178	1	*Gasket, Carburetor Adapter.
45	110-580	2	*Screw, 3/10 - 16 x 1-1/8.
46	406D1132	1	*Top Panel (Replaces 406D1082).
47	501-95	1	*Nipple, 1-1/2 x 12" Pipe.
48	505-32	1	*Coupling, 1-1/2 Pipe.
49	416B338	1	*Battery Holdown.
50	800-28	8	Capscrew 5/16 x 1 (Top Plate).
51	800-50	4	Capscrew, 3/8 x 1 (Back Plate).
52	(CO) F400E-303	1	Gasket, Manifold.
53	526-65	8	Washer 5/16 (Copper).
54	526-66	8	Washer 3/8 (Copper).
55	800-53	4	Capscrew 3/8 x 1-3/4.

FIG. 26 - CITY WATER COOLING GROUP (Cont.)

* - These items not shown on drawing:
 Items 32, 37 and 39 open units only;
 Items 46, 47, and 48 housed units only.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
SERVICE KITS & MISCELLANEOUS			
	185-835	1	*Kit, Connecting Rod Bearing - Complete Engine - Standard - (CO)F400T-152.
	185-824	1	*Kit, Crankshaft Bearing - Complete Engine - Standard - (CO)F400T-151.
	185-820	1	*Kit, Piston Ring - For Re-Ring, Expander Type - Standard Size, 4 Piston.
(CO)F162T-153C	(CO)F600T-293	1	*Kit, Piston Ring - For Re-Bore - Standard Size, 4 Piston.
(CO)F162U-119	(CO)F400T-253	1	Kit, Oil Pump Repair Parts.
(CO)F162U-109	(CO)F400T-181	1	Kit, Engine Gasket - For Basic Engine Only - See Onan #168K58 for Complete Plant.
(CO)F162U-109	(CO)F400T-314	1	Kit, Water Pump Repair Parts - For Pump (CO)F400K-3941 and (CO)F400K-3947.
(CO)F600T-283	(CO)F600T-283	1	Gasket Kit, Valve Grind.
	143K60	1	Kit, Camshaft Bushing - (Finished Reamed) - Complete for Engine.
	143K65	1	Kit, Valve Tappet - (Complete for Engine - 8 pcs.).
	149K508	1	Kit, Oil Pump Repair.
	168K58	1	Kit, Carburetor Repair Parts.
	5222K168	1	Kit, Fuel Pump Repair Parts.
	524-73	1	Kit, Gasket - Complete Plant.
	524-74	1	Kit, Overhaul - 12 Volt Cranked Plants - Battery Ignition.
	524-75	1	STA-BIL, Gasoline Additive. -
	525P90	1	4 Ounce Can.
	525P137	1	16 Ounce Can.
		1	32 Ounce Can.
			Paint, Touch-up Enamel.
			Mouse Gray, 12 Ounce Pressurized Can.
			Green, 16 Ounce Pressurized Can.

* - Refer to "Oversize and Undersize" Chart.

SPECIAL SECTION

FOR

PENNSYLVANIA APPROVED STANDBY GENERATING PLANTS

THIS SECTION IS DESIGNED TO SUPPLEMENT THE MAIN, ILLUSTRATED SECTION. IT IS, THEREFORE, TO BE USED WITH, NOT MERELY IN PLACE OF, THE MAIN SECTION. CONSULT THIS SECTION BEFORE REFERRING TO THE MAIN PARTS LISTING.

PARTS LIST

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
149P558	1	1	
307P312		1	

NOTE: USE THESE PARTS IN PLACE OF OR IN ADDITION TO PARTS LISTED IN THE MAIN, ILLUSTRATED SECTION.

SUPPLEMENT TO FIG. 12 - FUEL SYSTEM GROUP (Gas Only)

Strainer, L. P. G. Fuel Pipeline (3/4" Pipe size).
Valve, Gas Solenoid (3/4", 12 Volt).

SUPPLEMENT TO FIG. 15 - SEPARATE FUEL TANK GROUP

415K3	1	Tank and Fittings (Includes Parts Marked ★).
415-43	1	★Cap, Fill Pipe.
415-44	1	★Cap, Vent Pipe.
415-140	1	★Tube, Suction.
415A168	1	★Tank, Fuel (55 Gallon).
Describe	As Req.	Common Hardware and Plumbing Not Supplied.
415R45	2	Line and Fittings (Includes Parts Marked †).
502-117	1	†Elbow, Compression (W/ Nut and Sleeve).
502-118	1	†Connector
Describe	As Req.	†Tubing, 3/8" x 25' Copper.

SUPPLEMENT TO FIG. 16 - WATER AND OIL SENDER GROUP

Note: Switch, Hi-temperature Cut-off Not Standard Equipment On PENNSYLVANIA APPROVED GENERATING PLANTS.

SUPPLEMENT TO FIG. 19 - BATTERY CHARGING GENERATOR GROUP

416P325 1 Hydrometer.


NOTE: USE THESE PARTS IN PLACE OF OR IN ADDITION TO PARTS LISTED IN THE MAIN, ILLUSTRATED SECTION.

SUPPLEMENT TO FIG. 22 - ELECTRICAL CONTROL GROUP (Housed)

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
301C1602	1	Panel, Upper Control - Use With 240 and 120/208 Volt Units.	
301C1744	1	Panel, Upper Control - Use With 115/230 Volt Units.	Note: Circuit Breakers Not Standard Equipment On PENNSYLVANIA APPROVED GENERATING PLANTS.


SUPPLEMENT TO FIG. 24 - ENGINE CONTROL GROUP (Housed and Unhoused)

REF. NO.	PART NO.	QUANT. USED	DESCRIPTION
301A993	1	Guard, Switch.	

 



*For Genuine Onan Parts and Service, see your
Onan Parts and Service Center. In most major
cities they are listed in the classified section of
the telephone directory. See Generators-Electric.*

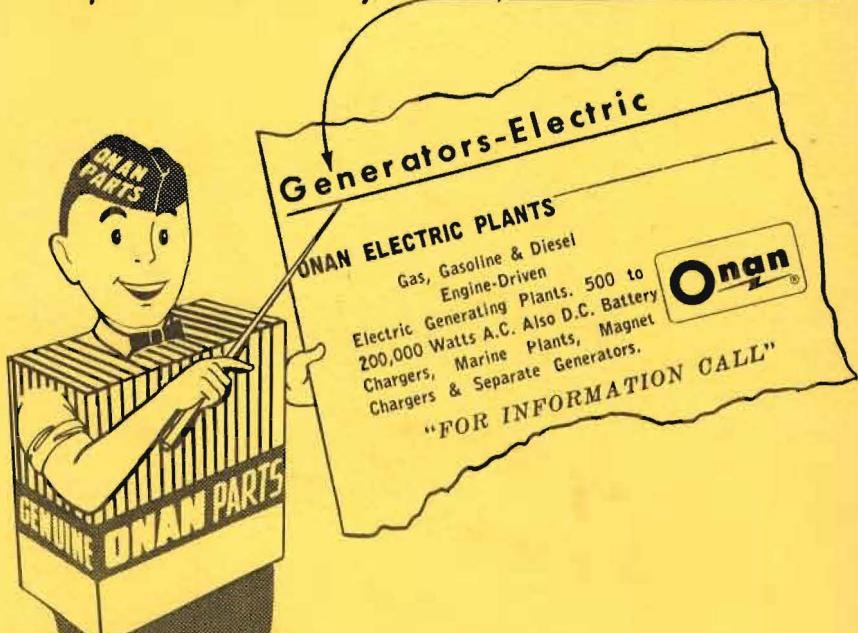

✓ **Write the factory for a
complete current listing of
Onan World Wide Parts
and Service Centers.**