The following catalog has gaps in its page numbers, or doesn't have any numbers. We have chosen to leave the page numbering in the order that Acrobat assigns it.


Onan

Parts Manual

6.3

NHL-RV

GenSet

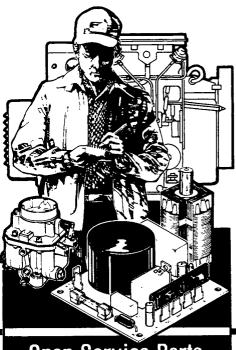

Onan Service Parts


940-0225 4-86 (Spec P)

Replaces 6-83 (Spec P) Printed in U.S.A.

General Information

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

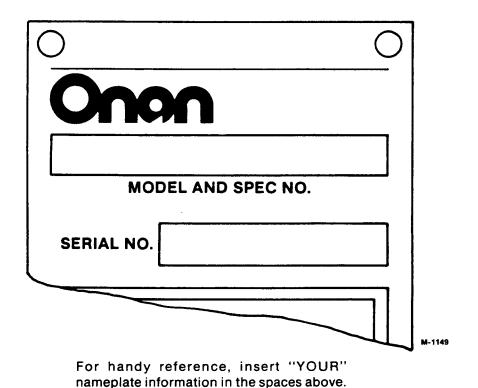

Important Safety Precautions

Read and observe these safety precautions when using or working on electric generators, engines and related equipment. Also read and follow the literature provided with the equipment.

Proper operation and maintenance are critical to performance and safety. Electricity, fuel, exhaust, moving parts and batteries present hazards that can cause severe personal injury or death.

FUEL, ENGINE OIL, AND FUMES ARE FLAMMABLE AND TOXIC

Fire, explosion, and personal injury can result from improper practices.

- Used engine oil, and benzene and lead, found in some gasoline, have been identified by government agencies as causing cancer or reproductive toxicity.
 When checking, draining or adding fuel or oil, do not ingest, breathe the fumes, or contact gasoline or used oil.
- Do not fill tanks with engine running. Do not smoke around the area. Wipe up oil or fuel spills. Do not leave rags in engine compartment or on equipment. Keep this and surrounding area clean.
- Inspect fuel system before each operation and periodically while running.
- · Equip fuel supply with a positive fuel shutoff.
- Do not store or transport equipment with fuel in tank.
- Keep an ABC—rated fire extinguisher available near equipment and adjacent areas for use on all types of fires except alcohol.
- Unless provided with equipment or noted otherwise in installation manual, fuel lines must be copper or steel, secured, free of leaks and separated or shielded from electrical wiring.
- Use approved, non-conductive flexible fuel hose for fuel connections. Do not use copper tubing as a flexible connection. It will work-harden and break.

EXHAUST GAS IS DEADLY

- Engine exhaust contains carbon monoxide (CO), an odorless, invisible, poisonous gas. Learn the symptoms of CO poisoning.
- Never sleep in a vessel, vehicle, or room with a genset or engine running unless the area is equipped with an operating CO detector with an audible alarm.
- Each time the engine or genset is started, or at least every day, thoroughly inspect the exhaust system.
 Shut down the unit and repair leaks immediately.

 Warning: Engine exhaust is known to the State of California to cause cancer, birth defects and other reproductive harm.

Make sure exhaust is properly ventilated.

- Vessel bilge must have an operating power exhaust.
- Vehicle exhaust system must extend beyond vehicle perimeter and not near windows, doors or vents.
- Do not use engine or genset cooling air to heat an area.
- Do not operate engine/genset in enclosed area without ample fresh air ventilation.
- Expel exhaust away from enclosed, sheltered, or occupied areas.
- Make sure exhaust system components are securely fastened and not warped.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not remove any guards or covers with the equipment running.
- Keep hands, clothing, hair, and jewelry away from moving parts.
- Before performing any maintenance, disconnect battery (negative [—] cable first) to prevent accidental starting.
- Make sure fasteners and joints are secure. Tighten supports and clamps, keep guards in position over fans, drive belts, etc.
- If adjustments must be made while equipment is running, use extreme caution around hot manifolds and moving parts, etc. Wear safety glasses and protective clothing.

BATTERY GAS IS EXPLOSIVE

- Wear safety glasses and do not smoke while servicing batteries.
- Always disconnect battery negative (–) lead first and reconnect it last. Make sure you connect battery correctly. A direct short across battery terminals can cause an explosion. Do not smoke while servicing batteries. Hydrogen gas given off during charging is explosive.
- Do not disconnect or connect battery cables if fuel vapors are present. Ventilate the area thoroughly.

DO NOT OPERATE IN FLAMMABLE AND EXPLOSIVE ENVIRONMENTS

Flammable vapor can be ignited by equipment operation or cause a diesel engine to overspeed and become difficult to stop, resulting in possible fire, explosion, severe personal injury and death. Do not operate diesel equipment where a flammable vapor environment can be created by fuel spill, leak, etc., unless equipped with an automatic safety device to block the air intake and stop the engine.

HOT COOLANT CAN CAUSE SEVERE PERSONAL INJURY

 Hot coolant is under pressure. Do not loosen the coolant pressure cap while the engine is hot. Let the engine cool before opening the pressure cap.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not service control panel or engine with unit running. High voltages are present. Work that must be done while unit is running should be done only by qualified service personnel.
- Do not connect the generator set to the public utility or to any other electrical power system. Electrocution can occur at a remote site where line or equipment repairs are being made. An approved transfer switch must be used if more than one power source is connected.
- Disconnect starting battery (negative [-] cable first) before removing protective shields or touching electrical equipment. Use insulative mats placed on dry wood platforms. Do not wear jewelry, damp clothing or allow skin surface to be damp when handling electrical equipment.
- Use insulated tools. Do not tamper with interlocks.
- Follow all applicable state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag open switches to avoid accidental closure.
- With transfer switches, keep cabinet closed and locked. Only authorized personnel should have cabinet or operational keys. Due to serious shock hazard from high voltages within cabinet, all service and adjustments must be performed by an electrician or authorized service representative.

If the cabinet must be opened for any reason:

- 1. Move genset operation switch or Stop/Auto/ Handcrank switch (whichever applies) to Stop.
- 2. Disconnect genset batteries (negative [–] lead first).
- 3. Remove AC power to automatic transfer switch. If instructions require otherwise, use extreme caution due to shock hazard.

MEDIUM VOLTAGE GENERATOR SETS (601 V TO 15kV)

- Medium voltage acts differently than low voltage. Special equipment and training are required to work on or around medium voltage equipment. Operation and maintenance must be done only by persons trained and qualified to work on such devices. Improper use or procedures will result in severe personal injury or death.
- Do not work on energized equipment. Unauthorized personnel must not be permitted near energized equipment. Induced voltage remains even after equipment is disconnected from the power source. Plan maintenance with authorized personnel so equipment can be de-energized and safely grounded.

GENERAL SAFETY PRECAUTIONS

- Do not work on equipment when mentally or physically fatigued or after consuming alcohol or drugs.
- Carefully follow all applicable local, state and federal codes.
- Never step on equipment (as when entering or leaving the engine compartment). It can stress and break unit components, possibly resulting in dangerous operating conditions from leaking fuel, leaking exhaust fumes, etc.
- Keep equipment and area clean. Oil, grease, dirt, or stowed gear can cause fire or damage equipment by restricting airflow.
- Equipment owners and operators are solely responsible for operating equipment safely. Contact your authorized Onan/Cummins dealer or distributor for more information.

KEEP THIS DOCUMENT NEAR EQUIPMENT FOR EASY REFERENCE.

Index

Adapter, Air Duct 14 Head, Cylinder 4 Adapter, Oil Filter 3 Holder, Fuse 20 Armature, Generator 18 Hose, Fuel 14 Base, Oil 6 Housing, Air 17 Bearing, Camshaft 4 Kit. Gasket 4 Bearing, Crankshaft 4 Kit, Tune-Up 13 Bell, End 18 Line, Fuel-LP 14 Block, Brush 18 Manifold, Exhaust 14 Block, Cylinder 4 Manifold, Intake 14 **Block Terminal 20** Meter, Battery Condition 24 Box. Breaker 12. 13 Meter, Time Totalizing 24 Box, Control 20 Muffler, Spark Arrestor 25 Bracket, Exhaust 25 Paint, Green 23 Bracket, Governor Mounting 10 Pan, Oil Base 6 Breaker, Circuit 20 Panel, Control 24 Brush, Generator 18 Piston 9 Camshaft 8 Plate, Mounting 6 Carburetor, LP 14 Plug, Spark 12 Clamp, Muffler 25 Points, Ignition 13 Coil, Ignition 12 Pump, Oil 3 Control, Generator 20 Regulator, LP 14 Control. Remote 24 Relay, Start Solenoid 20 Cover, Generator 18 Resistor, Fixed 18 Cover, Control 20 Ring, Piston 9 Cover, Valve 4 Rod, Connecting 9 Crankshaft 8 Rod, Governor 10 Cushion, Vibration Eng-/Gen 6 Scroll, Air 17 Drain, Oil Filter 3 Seal, Air-Oil Filter 3 Duct. Air Cleaner 14 Seal, Oil-Crankshaft 4, 10 Element Air Cleaner 14 Seat, Valve 4 Fan, Generator 18 Shield, Heat 14, 25 Filter, Breather Tube 4 Solenoid, Start 20 Filter, LP 14 Spring, Governor 10 Filter, Oil 3 Stator, Generator 18 Flywheel 8 Strap, Ground 6 Fuse, 5 Amp 20 Switch, Pressure—Oil 3 Gasket, Exhaust Manifold 14, 25 Switch, Start-Stop 20, 24 Gasket, Oil Filter Adapter 3 Tappet, Valve 4 Gearcase 10 Terminal, Solderless 6 Generator 18 Tube, Breather 4 Guard, Scroll 17 Tube, Exhaust 25 Guide, Valve 4 Valve, Exhaust 4 Harness, Wiring (Control to Engine) 20 Valve, Intake 4 Harness, Wiring—Remote 24 Valve, Oil Drain 6

Valve, Shutoff—Fuel (LP) 14

INTRODUCTION

This Catalog applies to the Standard NHL Recreational Vehicle Generator Set. Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number in the parts list for that group. Parts illustrations are typical. Using the *Model* and *Spec No.* from the nameplate, select parts from this Catalog that apply to your set. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left sides are determined by *facing* the engine end (front) of the set.

GENERATOR SET DATA TABLE

MODEL AND SPEC NO.	TYPE	WATTS	VOLTS	HERTZ	WIRE	PHASE
6.3 NHL-3 CR/16013P	Remote	6300	120/240	60	**	Single

^{**-}Set is reconnectible for 120 volt, 2 wire; 240 volt, 2 wire; or 120/240 volt, 3 wire service.

NOTE: The letter R in the Model and Spec denotes Electric Start with Start-Stop at both the Set and the Remote Control.


STANDARD PARTS SECTION


This section contains the illustrated parts listing for the standard generator sets listed in the Data Table.

NOTICE!

ITEMS REFERENCED AS **OPTIONAL** INDICATE PART IS FACTORY INSTALLED AND MAY NOT BE APPLICABLE TO ALL MODELS. FOR FIELD CONVERSIONS ADDITIONAL PARTS ARE USUALLY REQUIRED.

Oil System

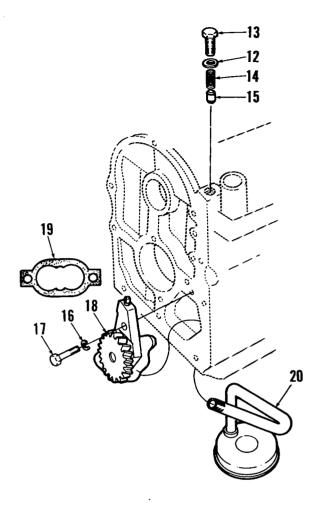


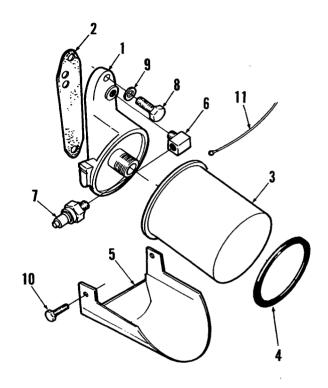

LS 1120

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	122-0320	1	Adapter, Oil Filter	11	336-3377	1	Lead, Electrical - Low Oil
2	122-0321	1	Gasket, Oil Filter Adapter				Pressure Switch
			Mounting	12	526-0066	1	Washer, Flat - Copper
3	122-0323	1	Filter, Oil - Spin-on				(25/64" ID x 9/16" OD x 1/16"
4	122-0347	1	Seal, Air - Oil Filter				THK)
5	122-0360	1	Drain, Oil Filter	13	801-0050	1	Screw, Cap - Hex Head
6	502-0053	1	Elbow, Street - 45°			•	(3/8-24 x 1")
7	309-0322	1	Switch, Low Oil Pressure	14	120-0140	1	Spring, Oil By-Pass Valve
8	800-0028	2	Screw, Cap - Hex Head	15	120-0398	1	Valve, Oil By-Pass
			(5/16-18 x 1")	16	850-0040	2	Washer, Lock - Spring (1/4")
9	526-0065	2	Washer, Flat - Copper (21/64"ID x 9/16"OD x	17	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")
40		_	1/16")	18	120-0491	1	Pump, Oil (Components Not
10	815-0194	2	Screw, Tapping - Hex Head				Sold Separately)
			(#10-32 x 3/8")	19	120-0161	1	Kit, Gasket - Oil Pump
		•		20	120-0413	1	Cup, Oil Pump Intake - (Includes Screw Pipe and Cup)


Cylinder Block

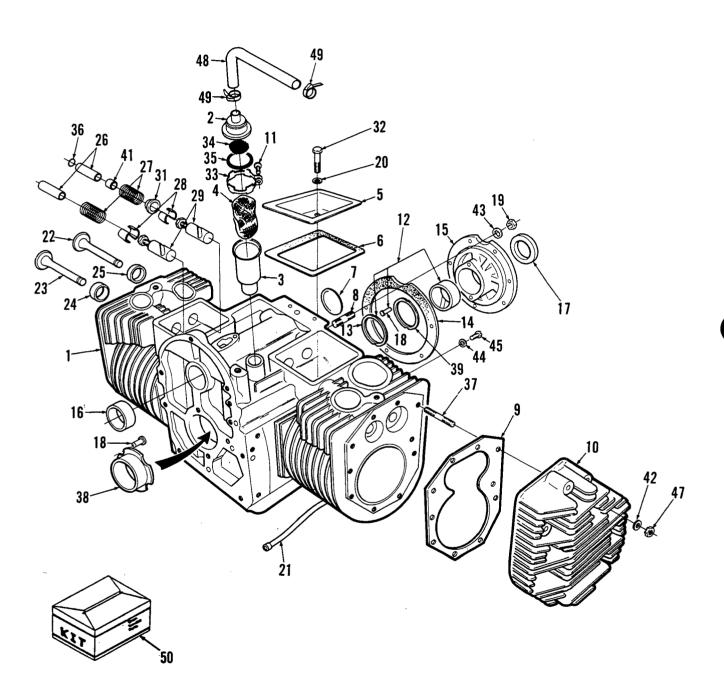

Cylinder Block

REF.	PART NO.	QTY		REF NO.		QTY. USED	
1	110-2340	1	Block Assembly, Cylinder		*GUIDE, VAL		DESCRIPTION
•	20	•	(Includes Parts Marked*)	20	110-3167	V E 2	Exhaust
2	123-0954	1	Cap and Valve, Breather		110-3168	2	Intake
3	123-0952	1	*Tube, Breather	27	110-0539	4	Spring, Valve
4	123-1417	1	Filter, Breather Tube		110-0639	8	Lock, Valve Spring
5	110-1624	2	Cover, Valve		TAPPET, VAL		Lock, vaive Spring
6	110-1720	2	Gasket, Valve Cover Mounting	23	115-0006	4	Standard
7	517-0048	1	*Plug, Expansion		115-0006-05	4	.005" Oversize
8	520-0736	5	*Stud, Bearing Plate Mounting	31	110-0893	4	Retainer, Valve Spring
9	110-2987	2	Gasket, Cylinder Head Mounting	32	800-0011	2	Screw, Cap-Hex Head
10	110-2713	2	Head, Cylinder-Left and			_	(1/4-20 x 2"Lg)
			Right Side	33	123-0951	1	Clamp, Loop-Breather
11	809-0035	1	Screw, Tapping-Round				Tube Cap
			Head (#8 x 3/4" Lg)	34	123-0958	2	Screen, Breather Tube
12	BEARING, CRA	ANKS	HAFT REAR	35	509-0117	1	Seal, "O" Ring-Breather
	101-0450	1	*Standard				Tube
	101-0450-02	1	.002" Undersize	36	110-0068	2 '	'Gasket, Valve Guide-
	101-0450-10	1	.010" Undersize				Intake
	101-0450-20	1	.020" Undersize	37	STUD, CYLII	NDER HE	EAD MOUNTING
	101-0450-30	1	.030" Undersize		520-0876	4	2 Top Holes (3/8 x 2-3/4" Lg)
13	104-0575	2	*Washer, Thrust-Crankshaft		520-0918	8	4 Middle Holes (3/8 x 3" Lg)
			Bearing		520-0919	8	4 Bottom Holes (3/8 x 2-19/32" Lg)
14	101-0415		*Gasket, Bearing Plate	38	BEARING, S	LEEVE-F	LANGED CRANKSHAFT
	101-0439	1	*Plate, Bearing-Rear		101-0432	1 '	*Standard
	101-0405		*Bearing, Camshaft		101-0432-02	1	.002" Undersize
17	509-0041	1	*Seal, Oil-Crankshaft		101-0432-10	1	.010" Undersize
18	516-0072		*Pin, Bearing Stop		101-0432-20	1	.020" Undersize
19	104-0091		*Nut, Hex (3/8-24)		101-0432-30	1	.030" Undersize
20	526-0063	2	Washer, Flat (Copper)-		104-0776		Shim, Crankshaft Thrust
			(17/64"ID x 7/16"OD	41		2 '	'Seal, Intake Valve
21	120-0680		x 1/32"Thk)	42	WASHER		
21 22	110-1718	1	*Tube, Oil-Crankcase		526-0250	20	Flat (13/32"ID x 1"OD x 1/8"Thk)
23	110-1718	2	Valve, Intake	40	851-0029	24	Compression (3/8"ID x 1-1/16"OD)
	INSERT, VALV	2	Valve, Exhaust	43	526-0251	5	'Washer, Flat (.406"ID x
27	110-1716		*Standard	44	E00 0000		.688"OD x .1345"Thk)
	110-1716-02	2	.002" Oversize	44	526-0066	2	Washer, Flat (Copper)-
	110-1716-05	2	.005" Oversize				(25/64"ID x 9/16"OD x
	110-1716-10	2	.010" Oversize	AE	800-0046		1/16"Thk)
	110-1716-25	2	.025" Oversize	45	000-0046	2	'Screw, Cap-Hex Head
25	INSERT, VALV			47	104-0091	20	(3/8-16 x 1/2" Lg)
	110-1933		*Standard	48		1	Nut, Hex (3/8-24)
	110-1933-02	2	.002" Oversize	49	503-057	2	Tube, Breather Clamp, Breather Tube
	110-1933-05	2	.005" Oversize	50		_	Clamp, Breather Tube
		_		30	168-0168	1	Carbon Removal
	110-1933-10	2	.010" Oversize		168-0169	1	Engine
	110-1933-25	2	.025" Oversize				110-2340 Cylinder Block Assembly.
					i arts mor	adod iii	TO 2040 Cynnider Diock Assembly.


Oil Base and Mounting Hardware

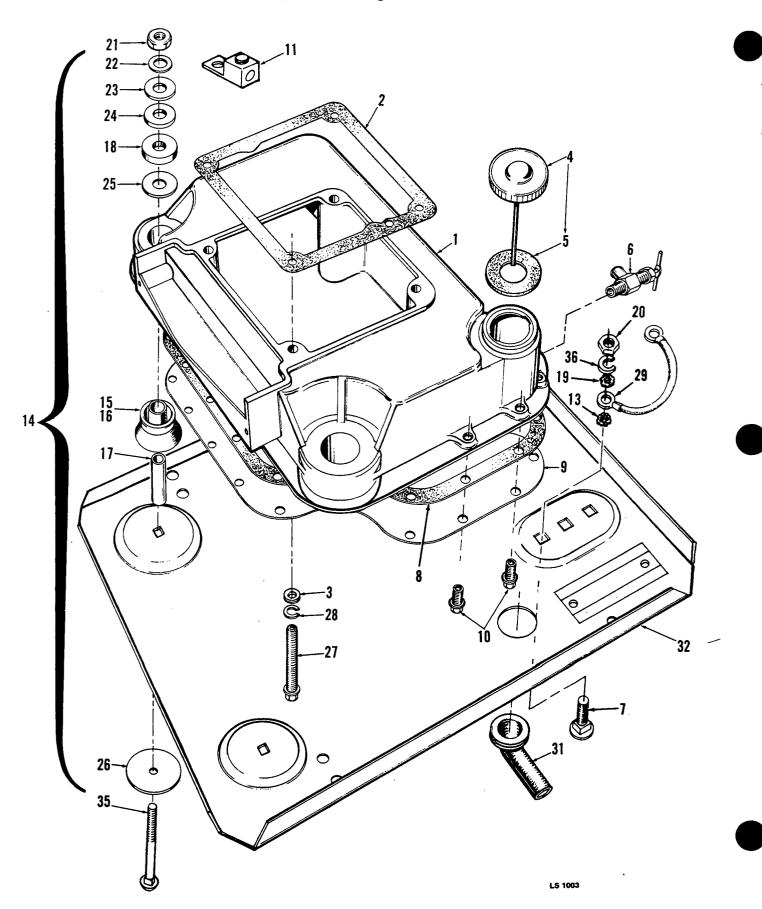

Oil Base and Mounting Hardware


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO		QTY. USE	
1	102-0957		e, Oil (Includes Parts	21		((7/16" - 14	
_			arked*)		862-0004	2	Engine End
	102-1200		ket, Oil Base		862-0004	1	Generator End (Left Side)
3	526-0030		sher, Flat (13/32" ID x		862-0004	1	Generator End (Right Side)
			/8"OD x 1/8"Thk)	22		LOCK (7/1	
	123-1400		and Indicator, Oil Fill		850-0055	2	Engine End
5	123-0191		ket, Oil Fill Cap		850-0055	1	Generator End (Right Side)
6	504-0092		ve, Oil Drain		856-0012	1	(EIT) Generator End (Left Side)
7	816-0197		t, Carriage (7/16-14 x 1-1/4")	23			64"ID x 1-1/2OD x 1/8"Thk)
8	102-1275		sket, Oil Pan Mounting		526-0014	2	Engine End
9	102-0889		, Oil Base		526-0014	1	Generator End (Left Side)
10	821-0018		ew, Cap-HWH		526-0014	1	Generator End (Right Side)
			/4-20 x 5/8")	24			'ID x 1-1/2"OD x 1/16"Thk)
11	332-0142		minal, Solderless-Ground		526-0198	4	Engine End
13	856-0016		sher, Lock-EIT (5/8")		526-0198	1	Generator End (Left Side)
14	14 PACKAGE, HARDWARE MOUNTING				526-0198	1	Generator End (Right Side)
		Parts Marked		25	#WASHER,		
	402-0477		jine End		526-0286	2	Generator End (Left Side)
	402-0478		nerator End (Left Side)		526-0286	1	Generator End (Right Side)
	402-0480	1 Ger	nerator End (Right Side)	26	856-0016	1 :	#Washer, Lock-EIT (5/8")-
15	402-0283	2 Cus	shion, Vibration-				Right Side Generator End-Left Side
			ngine End	. 27	800-0064	4	Screw, Cap - Hex Head
16	#CUSHION, \	/IBRATION-G	SENERATOR END				(3/8-16 x 4-1/2")
	402-0283	1 Left	t Side	28	850-0050	4	Washer, Lock-Spring (3/8")
	402-0283	1 Rig	ht Side	29	337-2055	1	Strap, Ground
17	#SPACER, SL	LEEVE		31	122-0345	1	Hose, Oil Drain-Optional
	402-0290	2 Eng	gine End	32	403-2092	1	Plate, Mounting
	402-0290	1 Ger	nerator End (Left Side)	35	#BOLT, CA	RRIAGE (7	7/16-14 x 3-1/2")
	402-0290	1 Ger	nerator End (Right Side)		816-0206	2	Engine End
18	#SNUBBER				816-0206	1	Generator End (Left Side)
•	402-0282	2 Eng	gine End		816-0206	1	Generator End (Right Side)
	402-0282	1 Gei	nerator End (Left Side)	36	850-0055	1	Washer, Lock (7/16")
	402-0282	1 Gei	nerator End (Right Side)				• • • • •
19	856-0012	1 Wa	sher, Lock-EIT (7/16")	*-F	Parts Includ	ed in 102-0	957 Oil Base
20	862-0004	1 Nut	t, Hex (7/16" - 14)	#-1	Parts Includ	led in Hardy	ware Mounting Package

Crankshaft and Flywheel

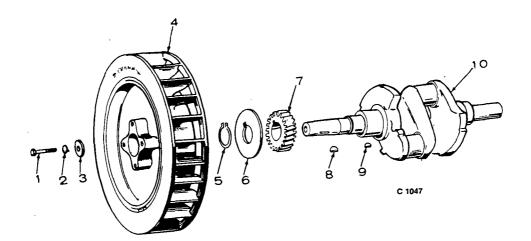


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	104-0170	1	Screw Cap - Hex Head (7/16-14 x 4"Lg)
2	850-0055	1	Washer, Lock - Spring (7/16")
3	526-0262	1	Washer, Flat (15/32"ID x 1-1/4"OD x 1/4"Thk)
4	134-4245	1	Flywheel
5	518-0014	1	Ring, Retaining
6	104-0043	1	Washer, Gear
7	104-0032	1	Gear, Crankshaft
8	515-0227	1	Kit, Key
9	515-0001	1	Key, Woodruff
10	104-1314	1	Crankshaft

Camshaft

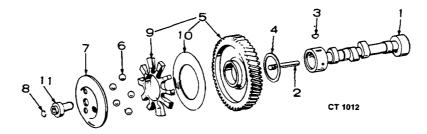


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	105-0396	1	Camshaft (Includes Center	6	510-0015	10	Ball, Fly - Governor
			Pin)	7	150-1520	1	Cup, Governor
2	150-0075	1	Pin, Camshaft	8	150-0078	1	Ring, Retaining
3	515-0001	1	Key, Camshaft Gear	9	150-1510	1	*Spacer, Flyball
4	105-0541	1	Washer, Thrust	10	150-0077	1	*Plate, Flyball
5	105-0332	1	Gear Assembly, Camshaft	11	150-1519	1	Hub, Governor Cup
			(Includes Parts Marked *)	* - Part	s Included in	the 105-03	32 Camshaft Gear Assembly

Piston and Rod

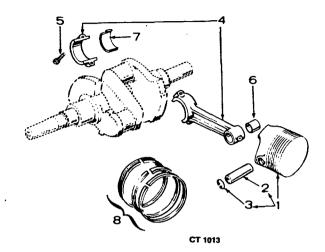

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1 PISTON AND PIN (Includes Retaining Rings)		7	BEARING, HALF-CONNECTING ROD				
	112-0228	2	Standard		114-0188	4	Standard
	112-0228-05	2	.005" Oversize		114-0188-02	4	.002" Undersize
	112-0228-10	2	.010" Oversize		114-0188-10	4	.010" Undersize
	112-0228-20	2	.020" Oversize		114-0188-20	4	.020" Undersize
	112-0228-30	2	.030" Oversize		114-0188-30	4	.030" Undersize
	112-0228-40	2	.040" Oversize	8	RING SET, PI	STON	
2	112-0112	2	Pin, Piston		113-0203	2	Standard
3	518-0294	4	Ring, Retaining - Piston Pin		113-0203-05	2	.005" Oversize
4	114-0203	2	Rod Assembly, Connecting		113-0203-10	2	.010" Oversize
5	805-0010	4	Bolt, Place		113-0203-20	2	.020" Oversize
6	114-0036	2	Bushing, Piston Pin		113-0203-30	2	.030" Oversize
			-		113-0203-40	2	.040" Oversize

Gearcase and Governor

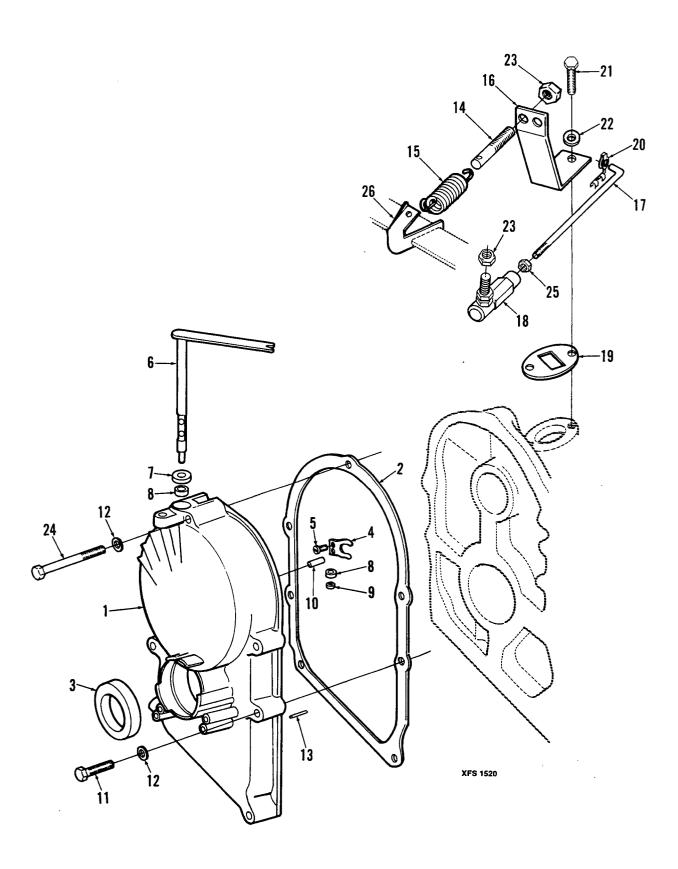


Gearcase and Governor

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	103-0667	1	Cover Assembly, Gear (Includes Parts Marked *)
2	103-0408	1	Gasket, Gearcase Mounting
3	509-0040	1	*Seal, Oil
4	150-1187	1	*Yoke, Governor
5	815-0046	2	*Screw, Machine - Pan Head (#8-32 x 3/8"Lg)
6	150-1542	1	*Arm and Shaft Assembly, Governor
7	509-0008	1	*Seal, Oil
8	510-0013	2	*Bearing, Needle
9	510-0014	1	*Bearing, Ball - Governor Shaft
10	516-0130	1	*Pin, Governor Cup Stop
11	800-0032	4	Screw, Cap - Hex Head Gearcase Mounting (5/16-18 x 1-3/4"Lg)
12	526-0065	6	Washer, Flat (Copper) Gearcase Mounting (21/64"ID x 9/16"OD x 1/16"Thk)
13	516-0141	2	Pin, Gearcase Alignment
14	150-0096	1	Stud, Speed Adjustment
15	150-1612	1	Spring, Governor
16	150-1577	1	Bracket, Governor Mounting
17		1	Rod, Governor Arm to Carburetor
18	150-0639	1	Ball, Joint
	149-0003	1	Gasket, Governor Bracket Mounting
20	518-0004	1	Clip, Retaining - Rod End
21	800-0004	2	Screw, Cap - Hex Head Governor Bracket Mounting (1/4-20 x 5/8"Lg)
22	526-0063	2	Washer, Flat (Copper) Governor Bracket Mounting (17/64"ID x 7/16"OD x 1/32"Thk)
23	870-0131	1	Nut, Self-Locking (1/4-20)
24	800-0034	1	Screw, Cap - Hex Head Gearcase Mtg. (5/16-18 x 2-1/4"Lg)
25	870-0053	. 1	Nut, Hex (#10-32)
26	150-0678	1	*Clip, Sensitivity


^{* -} Parts Included in 103-0667 Gearcase Assembly.


Ignition System

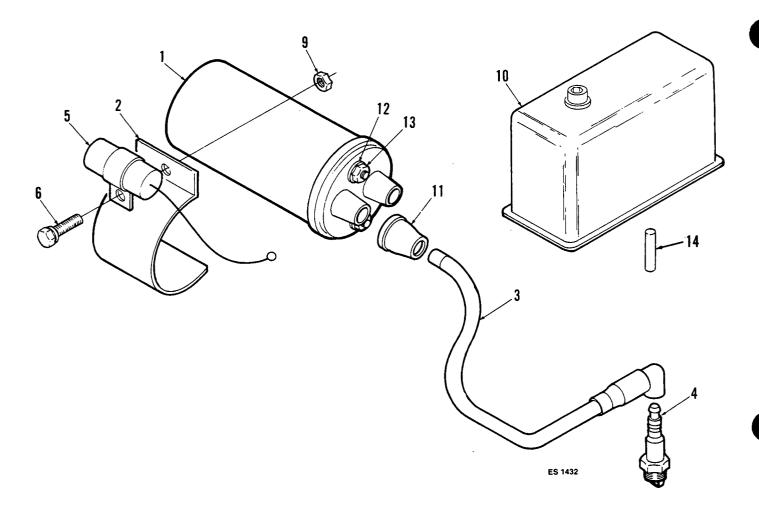

REF.	PART NO.	QTY.	
1	166-0643	1	Coil, Ignition
2	166-0588	1	Clamp, Ignition Coil Mounting
3	167-1602	2	Lead, Spark Plug Electrical
4	167-0291	2	Plug, Spark
5	321-0017	1	Condenser, Ignition (.5 MFD)
6	821-0004	1	Screw, Cap - HWH (#10-32 x 5/16")
9	870-0131	1	Nut, Hex-Coil Bracket Mtg. and Condenser (#10-32)
10	160-1303	1	Box Assembly, Breaker- Complete (See Separate Group for Components)
11	160-0558	2	Nipple, Spark Plug Cable
12	850-2005	2	Washer, Flat (Special)
13	166-0554	2	Nut, Hex (Special)
14	160-1151	1	Plunger, Breaker Points

 Breaker Box

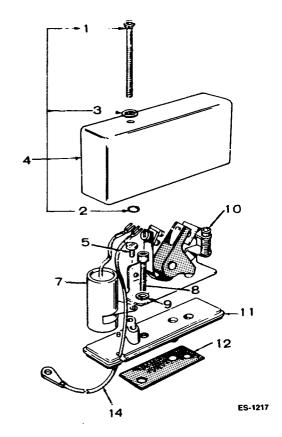




REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	160-1303	1	Breaker Box (Includes Parts Marked *)
1	802-0022	1	*Screw, Cap - Hex Socket (#10-24 x 1-1/2")
2	509-0065	1	*Retainer ("O" Ring)
3	526-0008	. 1	*Washer, Flat (13/64 ID x 7/16 OD x 1/32" Thk)
4	160-1285	1	*Cover, Breaker Box
5	815-0358	1	*Screw, Cap - Slotted (#8-32 x 5/16")
7	312-0246	1	*Condenser
8	802-0034	2	*Screw, Cap - Socket Head (1/4-20 x 3/4")
9	850-0040	2	*Washer, Lock (1/4")
10	160-1183	1	*Point Set, Breaker
11	160-1219	1	*Base, Breaker
12	160-1150	1	*Gasket, Breaker Box
14	336-2378	1	Lead, Breaker Box to Coil
15	160-1311	1	Tune Up Kit (Includes Points and Condenser)

^{* -} Parts Included in 160-1303 Breaker Box.


Fuel System and Exhaust Manifold

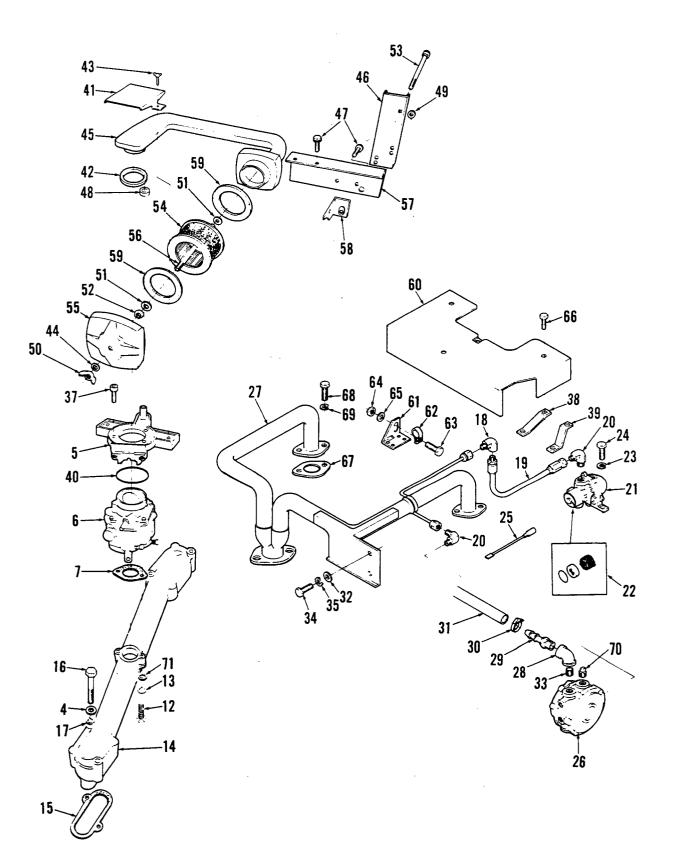

Fuel System and Exhaust Manifold

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
4	526-0030	4	Washer, Flat (13/32"ID x 7/8"OD x	38	154-1969	1	Bracket, Heat Shield - Left
			1/8"Thk)	39	154-1968	1	Bracket, Heat Shield - Right
5	140-1492	1	Adapter, Air Duct	40	509-0145	1	Seal, "O" Ring
6	146-0354	1	Carburetor, Complete (Includes	41	140-1520	1	Clamp, Air Duct
			Mounting Gasket) (See Separate	42	140-1502	1	Seal, Air Duct to Adapter
			Group for Components)	43	518-0390	2	Screw, Wing (1/4-20 x 3/4")
7	154-0733	1	Gasket, Carburetor to Adapter	44	526-0021	1	Washer, Flat (17/64"ID x
12	800-0035	2	Screw, Cap - Hex Head				3/4"OD x 1/16"Thk)
			(5/16-18 x 2-1/2")	45	140-1503	1 .	Duct, Air Cleaner
13	850-0045	2	Washer, Lock - Spring (5/16")	46	140-1531	1	Bracket, Air Duct Support
14	154-2292	1	Manifold, Intake	47	821-0009	6	Screw, Cap - Hex Head
15	154-1483	2	Gasket, Intake Manifold				Locking (1/4-20 x 3/8")
16	800-0058	4	Screw, Cap - Hex Head	48	140-1521	1	Seal, Air Duct to Breather Port
			(3/8-16 x 3")	49	870-0212	2	Nut, Hex - Locking (1/4-20)
17	800-0050	4	Washer, Lock - Spring (3/8")	50	865-0019	1	Nut, Wing (1/4-20)
18	502-0839	1	Elbow (90°)	51	526-0158	2	Washer, Flat (.261"ID x 1"Od x 1/8"Thk)
19	501 -045 4	1	Line, Fuel	52	870-0212	1	Nut, Hex - Locking (1/4-20)
20	502-0838	2	Elbow (90°)	53	816-0070	1	Bolt, Carriage (1/4-20 x 6-1/2")
21	148-0868	1	Shutoff/Filter, Fuel	54	140-0495	1	Element, Air Cleaner
22	148-0874	1	Magnet and Filter Kit	55	140-1504	1	Cover, Air Cleaner
23	850-0045	2	Washer, Lock - Spring (1/4")	56	140-1522	1	Spacer, Air Intake
24	800-0005	2	Screw, Cap - Hex Head,	57	140-152 9	1	Bracket, Air Intake Duct
			(1/4-20 x 3/4")	· 58	140-1528	1	Brace, Air Intake Duct
25	336-9679	1	Lead and Connector, Ground	5 9	140-1533	2	Seal
26	148-0866	1	Regulator	60	154-2392	1	Shield, Heat - Exhaust Manifold
27	154-2386	1	Manifold, Exhaust (Includes	61	154-2396	1	Bracket, Fuel Line Mounting
			Fuel Line)	62	503-1190	1	Clamp, Fuel Line
28	505-0047	1	Elbow, Reducing (90°)	63	815-0176	1	Screw, Machine - Hex Head
29	502-0238	1	Connector, Hose				(#8-32 x 1/2")
30	503-0183	2	Clamp, Hose	64	870-0221	1	Nut, Hex W/ET (#8-32)
31	503-1191	1	Hose, Fuel	65	526-0003	1	Washer, Flat (11/64"ID x 3/8"OD
32	526-0021	2	Washer, Flat (17/64"ID x 3/4"OD x				x 1/32"Thk)
			1/16" Thk)	66	821-0010	2	Screw, Cap - HWH (1/4-20 x 1/2")
33	505-0100	1	Nipple, Closé	67	154-1482	2	Gasket, Exhaust
34	800-0004	2	Screw, Cap - Hex Head	68	800-0512	4	Screw, Cap - Hex Head (5/16-18 x 1")
			(1/4-20 x 5/8")	69	850-0045	4	Washer, Lock - Spring (5/16")
35	850-0040	2	Washer, Lock - Spring (1/4")	70	505-0110	1	Plug, Pipe - Square Head (3/8"NPT)
37	804-0017	3	Screw, Cap - Socket Head (#10-32 x 1/2")	71	526-0022	1	Washer, Flat (21/64"ID x 9/16"OD x 1/16"Thk)


Carburetor Parts

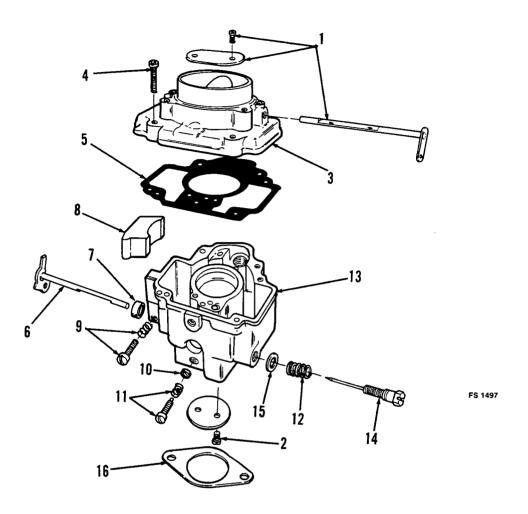


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	146-0354	1	Carburetor, Complete
1		1	Shaft, Choke (Not Sold Separately)
2	146-0142	2	*Screw, Throttle Valve
3.		1	Intake, Air (Not Sold Separately)
4	146-0247	1	Screw, Body to Intake
5	146-0365	1	Gasket, Fuel Bowl
6	146-0267	1	. Shaft, Throttle (Package) (Includes
			Parts Marked *)
7	146-0178	1	*Seal, Throttle Shaft
8		2	Block, Filler (Not Sold Separately)
9	146-0261	1	Throttle Stop (Package)
10	146-0358	1	Seal, Idle Screw
11	146-0357	1	Screw, Idle
12	146-0363	1	Spring, Power Adjusting Screw
13		1	Body (Not Sold Separately)
14	146-0364	1	Screw, Power Adjusting
15	146-0359	1	Seal, Power Adjusting Screw
16	154-0733	1	Gasket, Carburetor Mounting

^{* -} Parts Included in Package 146-0267

Air Housing

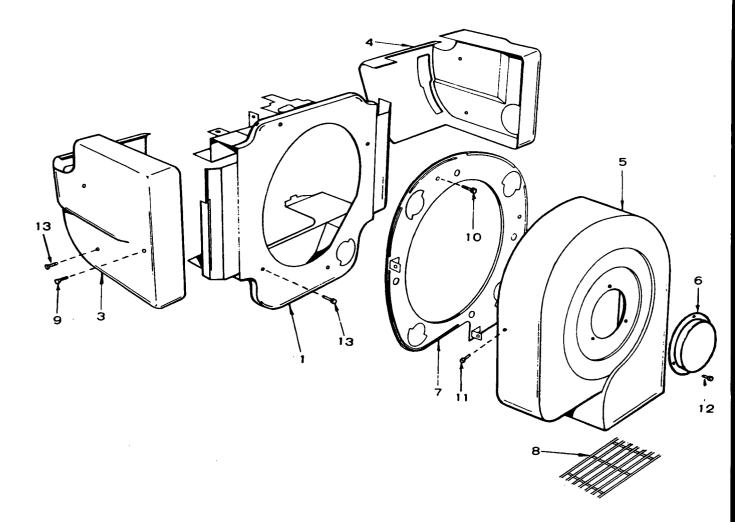


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	134-4095	1	Housing, Air	10	821-0010	4	Screw, Self-Locking - Hex
3	134-3617	1	Housing, Cylinder Air (Left Side)				Head - Scroll Backplate
4	134-3618	1	Housing, Cylinder Air (Right Side)				Mounting (1/4-20 x 1/2"Lg)
5	134-2749	1	Scroll, Air	11	821-0010	5	Screw, Cap - HWH (1/4-20 x 3/8")
6	134-3119	1	Cover, Scroll	12	821-0009	3	Screw, Self-Locking - Hex
7	134-2747	1	Backplate, Scroll				Head - Scroll Cover Mounting
8	134-4316	1	Guard, Scroll				(1/4-20 x 3/8"Lg)
9	821-0010	2	Screw, Self-Locking - Hex Head - Cylinder Air Housing Mounting (1/4-20 x 1/2"Lg)	13	815-0261	6	Screw, Tapping - Hex Head - Cylinder Air Housing Mounting (1/4-20 x 7/16"Lg)

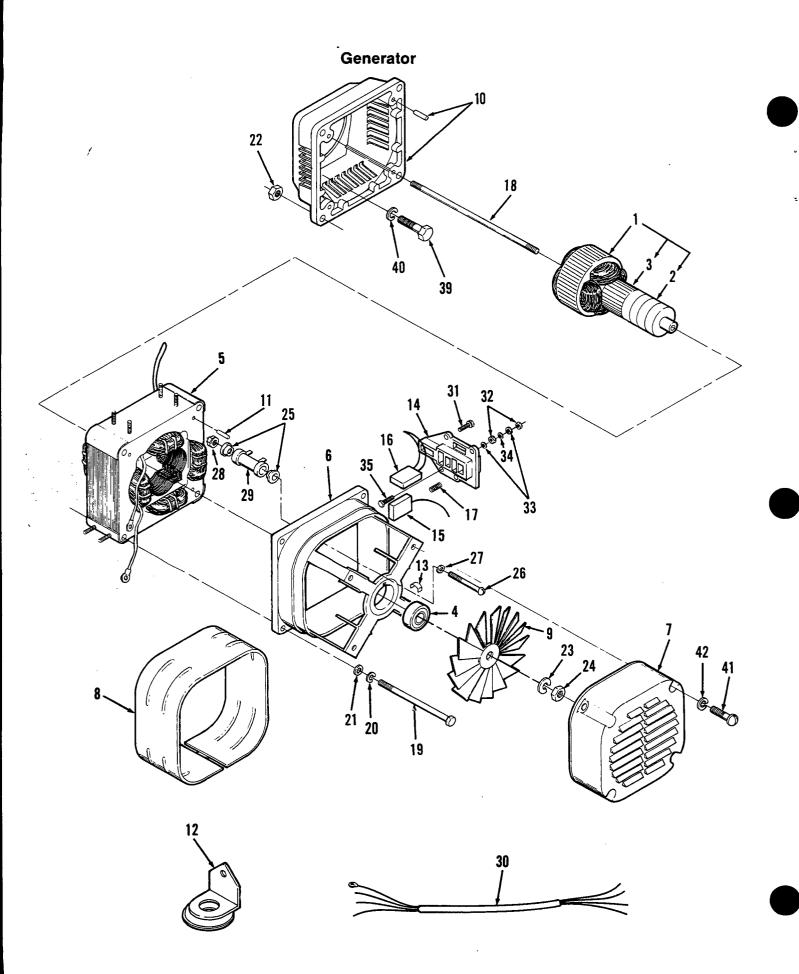

Generator

REF.	PART NO.	QTY. USEI		REF.	PART NO.	QTY USE	
1	201-2407	1	Armature Assembly, Generator	22	862-0015	4	Nut, Hex (5/16-18)
_		_	(Includes Parts Marked*)	23	850-0055	1	Washer, Lock-Spring (7/16")
2	204-0110		*Collector Ring, Generator	24		1	Nut, Hex (7/16-20)
3	203-0152		*Commutator, Generator	25	304-0014	1	Washer, Centering
4	510-0047	1	*Bearing Ball	26	812-0092	1	Screw, Machine - Round Head
5	220-1816	1	Stator, Generator				(#8-32 x 2-3/4" Lg)
6	211-0364	1	End Bell, Generator	27	853-0005	1	Washer, Lock-(#8)w/ET
			(Includes 4 alignment pins)	28	870-0221	1	Nut, Hex (#8-32) w/ET
7	232-2107	1	Cover, Generator	29	353-0057	1	Resistor, Fixed (3.4 Ohm,
8	234-0362	1	Wrapper, Generator				25 Watt)
9	205-0090	1	Fan, Generator	30	338-1099	1	Harness Wiring
10	231-0164	1	Adapter, Generator to Engine	31	815-0359	15	Screw, Tapping - Hex Head
			(Includes 4 alignment pins)				(#10-32 x 7/8" Lg)
11	516-0196	8	Pin, Straight-Headless	32	871-0010	8	,
12	402-0475	2	Support Generator	33	853-0008	8	†Washer, Lock - External (#10)
13	232-0596	1	Clip Retaining-Bearing	34	526-0049	8	†Washer, Flat-Brass
14	14 BLOCK BRUSH (Includes Parts Marked †) (.200"ID x 7/16"OD x					(.200"ID x 7/16"OD x	
	212-1254	1	Bottom Position				1/32"Thk)
	212-1258	1	Top Position	35	815-0341	4	†Screw, Machine-Hex Head
	212-1255	1	Left Side Position				Brass(#10-32 x 1" Lg)
	212-1259	1	Right Side Position	39	800-0050	4	Screw, Cap-Hex Head
15	214-0095	4	Brush-DC				(3/8-16x1-1/4" Lg)
16	214-0096	4	Brush-AC	40	850-0050	4	Washer, Lock-Spring (3/8")
17	212-1232	8	Spring, Brush	41	812-0156	2	Screw, Machine-Round Head
18	520-0733	1	Stud				(1/4-20 x 1-1/4"Lg)
19	800-0044	4	Screw, Cap-Hex Head	42	850-0040	2	Washer, Lock Spring (1/4")
			(5/16-18 x 7-1/2" Lg)				, , ,
20	850-0045	3	Washer, Lock-Spring (5/16")	*-Pa	rts Included ii	n Armat	ure Assembly
21	526-0115	4	Washer, Flat (11/32"ID x	†-Pa	rts Included i	n Gener	rator Brush Blocks.
			11/16"OD x 1/16"Thk)				
			·				

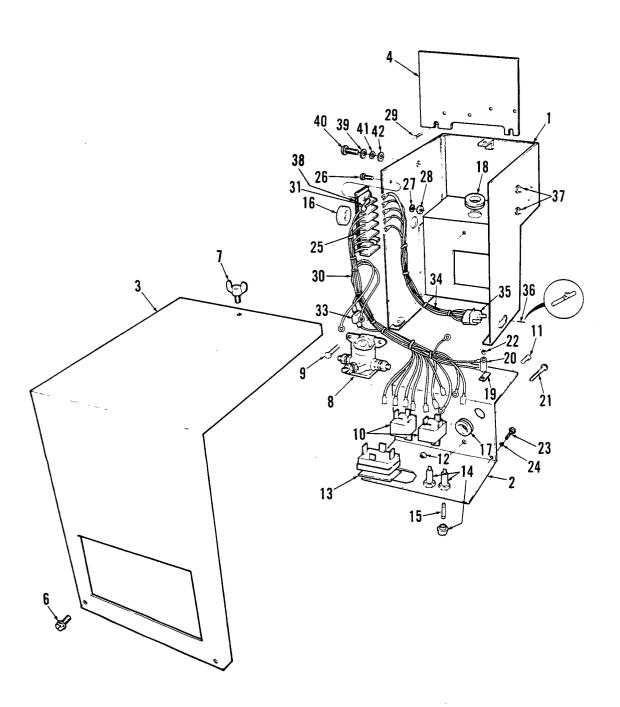

XES 1431


Control

REF.	PART	QTY.	PART	REF.	PART	QTY.	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	301-4446	1	Box, Control	24	856-0003	2	Washer, Lock - EIT (#10)
2	301-4442	1	Panel, Control	25	332-0254	1	Block, Terminal - 4 Place
3	301-8895	1	Cover, Control (Includes AC Schematic)	26	812-0066	2	Screw, Machine - Round Head
4	301-4441	1	Plate, Control				(#6-32 x 3/4")
6	815-0350	1	Screw, Tapping - Slotted	27	853-0003	2	Washer, Lock - ET (#6)
			HWH (#10-32 x 3/8")	28	860-0005	2	Nut, Hex (#6-32)
7	518-0056	1	Screw, Wing (#10-32 x 1/2")	29	821-0009	4	Screw, Cap - HWH (1/4-20 x 3/8")
8	307-1617	1	Relay, Start Solenoid	30	338-1265	1	Harness, Wiring - Control
9	821-0009	2	Screw, Cap - HWH (1/4-20 x 3/8")	31	323-1088	3	Nut, Wire
10	307-1575	2	° Relay, Ignition (Crank	33	357-0030	1	° Rectifier, Diode
			Ignition and Run Ignition)	34	338-1078	1	Harness, Wiring
11	815-0340	1	Screw, Machine - Round Head				(Includes Parts Marked △)
			(#10-32 x 3/8")	35	323-0440		△Housing, Connector Pin
12	870-0131	3	Nut, Hex with ET (#10-32)	36	323-0488		△Pin, Connector-Female
13	308-0383	1	Switch, Start-Stop	37	BREAKER, (CIRCUIT	
14	321-0175	2	Holder, Fuse		320-0544	2	35 Amp
15	321-0174	2	Fuse (5 Ampere)		320-0692	1	20 Amp
16	508-0208	1	Bushing, Insulating - Nylon (3/4" Hole)	38	332-2099	1	Strip, Terminal Block Marker
17	331-0088	1	Bushing, Insulating	39	508-0015	1	Washer, Fibre
18	508-0191	1	Bushing, Insulating - Nylon (7/8" Hole)	40	815-0238	1	Screw, Machine - Round
19	304-0580	1	Insulator, Resistor Mounting				Head with ET (#8-32 x 7/16")
20	RESISTOR, F	FIXED		41	853-0005	1	Washer, Lock - ET (#8)
	352-0160	1	120 Ohm, 5 Watt	42	526-0048	1	Washer, Flat - Brass
	352-0161	1	° 100 Ohm, 5 Watt				(11/64"ID x 3/8"OD x 1/32" THK)
	304-0431	1	150 Ohm, 5 Watt				
21	812-0087	1	Screw, Machine - Round Head (#8-32 x 1-1/2")				· · · · · · · · · · · · · · · · · · ·
22	870-0221	2	Nut, Hex with ET (#8-32)	° - F	Parts Included	in 338-12	65 Wiring Harness
23	821-0004	5	Screw, Cap - Hex Head (#10-32 x 5/16")	Δ - Parts Included in 338-1078 Wiring Harness			

Paint

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	525-0305	1	Paint, Enamel Touch-up (Non-Metallic Green) - 13 oz. Pressurized Can
	525-0137	1	Paint, Enamel Touch-up (Metallic Green) - 13 oz. Pressurized Can


Remote Start Control

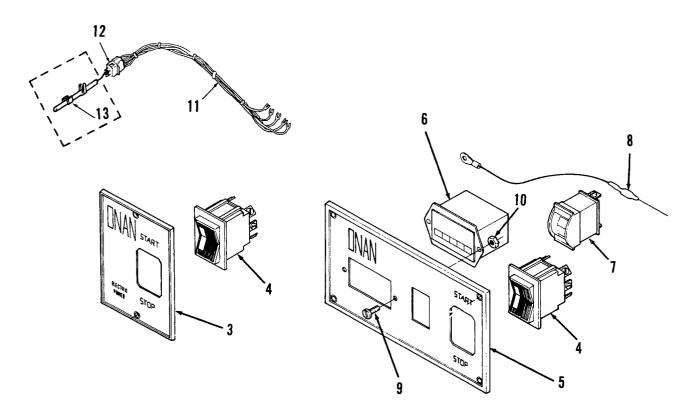

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-0985	F	ntrol Package-Standard temote Starting (Includes Parts Marked *)
	300-0986	1 Co	ntrol Package-Deluxe Remote Starting (Includes Parts Marked †)
3	301-3566	1 *Par	nel Control
4	308-0341	1 *†Sw	itch, Rocker
5	301-3606	1 †Par	nel, Control
6	302-0885	1 †Me	ter, Time Totalizing
7	302-0888	1 †Me	ter, Battery Condition
8	359-0034	1 †Dic	ode
9	815-0385		rew, Machine - Round Head #6-32 x 1/2" lg)
10	860-0005	2 †Nu	t, Hex, Head (#6-32)
11	HARNESS, WI	RING — R	EMOTE
	(Includes Parts	s Marked %	6)
	338-1082	1 6 li	nches Long
	338-1080	1 10	Ft.
	338-1081	1 30	Ft.
12	323-0400		using, Connector Pin
13	323-0500	5 %Pin	, Connector-Male

^{* -} Parts Included in 300-0985 Control Assembly. † - Parts Included in 300-0986 Deluxe Control Assembly. % - Parts Included in Remote Wiring Harness.

Exhaust System (UL Listed and CSA Certified)

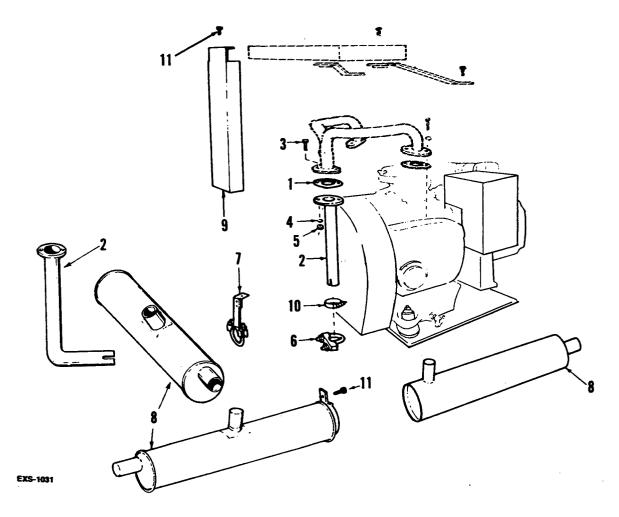

REF. NO.		QTY. USED	PART DESCRIPTION	
1	154-2061	1	Gasket, Exhaust Tube	
2	TUBE, EXHAUS	Γ		
	154-2167	1	15-1/2" Long (Straight)	
	154-2143	1	12-1/2" Long (Straight)	
	154-2226	2	90° Bend-W/Attached Clamp (4" Long)	
	154-2554	1	90° Bend-W/Attached Clamp (18" Long)	
3	800-0030	2	Screw, Cap-Hex Head	
			(5/16-18 x 1-1/4" lg)	
4	850-0045	2	Washer, Lock - Spring (5/16")	
5	862-0015	2	Nut, Hex (5/16-18)	
6	155-1239	1	Clamp, Muffler	
7	155-1234	× 1	Bracket and Clamp, Muffler	
8	MUFFLER, SPARK ARRESTOR			
	155-1 258	1	End inlet	
	155-1520	1	Center Inlet (Used with Straight Exhaust Tube)	
	155-1910	1	Center Inlet (Used with 90° Bend Exhaust Tube)	
9	154-2146	1	Shield, Heat	
10	503-0107	1	Clamp, Shield to Exhaust Tube	
11	821-0010	2	Screw, Cap-Locking Head (1/4-20 x 1/2")	