

Onan

Parts Manual

**SK
GenSet**

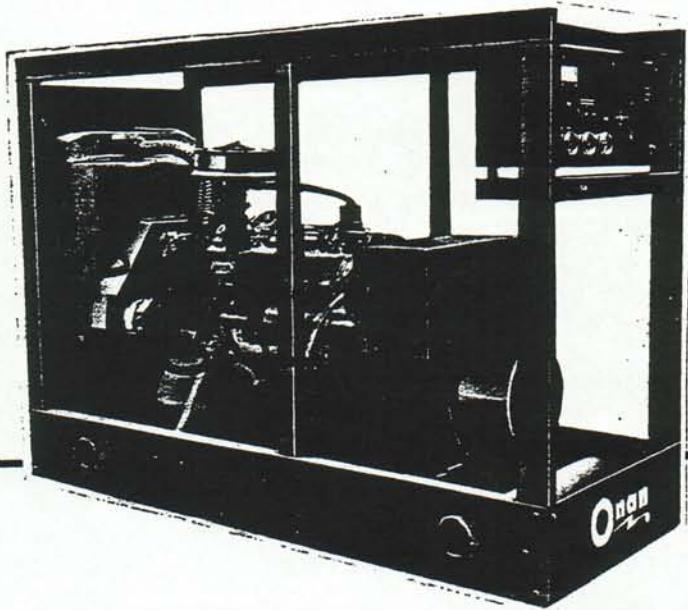

946-0220

4-82 (SPEC A)

Replaces

10-78 (SPEC A)

GENERAL INFORMATION


INSTRUCTIONS FOR ORDERING REPAIR PARTS

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, please furnish all information requested.

Always refer to the nameplate on your unit.

1. Always give the MODEL, SPEC NO. and SERIAL NO.

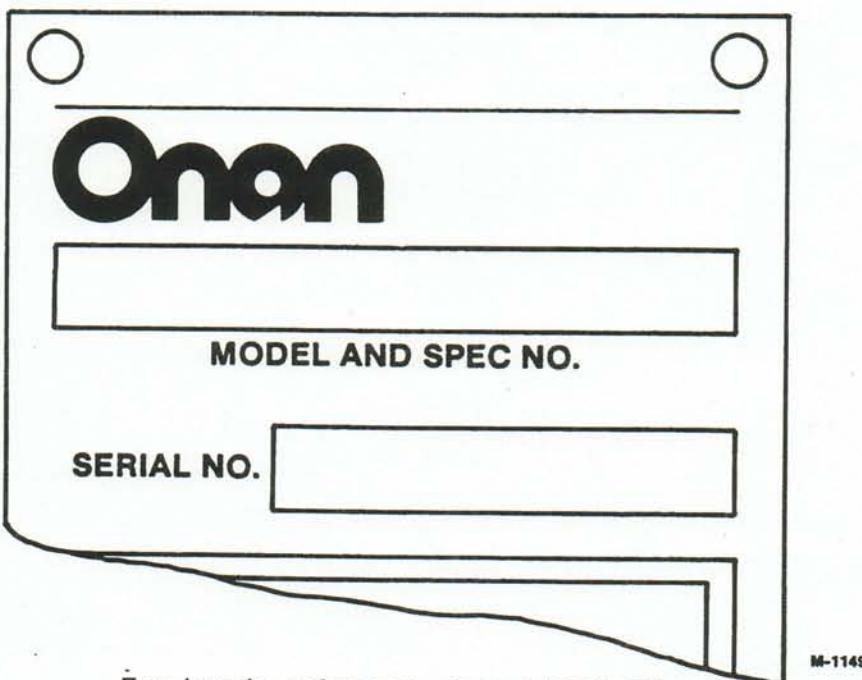

For handy reference, insert "YOUR" nameplate information in the spaces above.

2. Do not order by reference number; always use part number and description.
3. Give the part number, description and quantity needed of each item. If an older part cannot be identified, return the part prepaid to your dealer or nearest Onan Parts and Service Center. Print your name and address plainly on the package. Write a letter to the same address stating the reason for returning the part.
4. State definite shipping instructions. Any claim for loss or damage to your unit in transit should be filed promptly against the transportation company making the delivery. Shipments are complete unless the packing list indicates items are back ordered.

Prices are purposely omitted from this Parts Manual due to the confusion resulting from fluctuating costs, import duties, sales taxes, exchange rates, etc.

For current parts prices, consult your Onan Dealer, Distributor or Parts and Service Center.

"En esta lista de partes los precios se omiten de propósito, ya que bastante confusión resultó de fluctuaciones de los precios, derechos aduanales, impuestos de venta, cambios extrajeros, etc."

Consiga los precios vigentes de su distribuidor de productos "ONAN."

Important Safety Precautions

Read and observe these safety precautions when using or working on electric generators, engines and related equipment. Also read and follow the literature provided with the equipment.

Proper operation and maintenance are critical to performance and safety. Electricity, fuel, exhaust, moving parts and batteries present hazards that can cause severe personal injury or death.

FUEL, ENGINE OIL, AND FUMES ARE FLAMMABLE AND TOXIC

Fire, explosion, and personal injury can result from improper practices.

- Used engine oil, and benzene and lead, found in some gasoline, have been identified by government agencies as causing cancer or reproductive toxicity. When checking, draining or adding fuel or oil, do not ingest, breathe the fumes, or contact gasoline or used oil.
- Do not fill tanks with engine running. Do not smoke around the area. Wipe up oil or fuel spills. Do not leave rags in engine compartment or on equipment. Keep this and surrounding area clean.
- Inspect fuel system before each operation and periodically while running.
- Equip fuel supply with a positive fuel shutoff.
- Do not store or transport equipment with fuel in tank.
- Keep an ABC-rated fire extinguisher available near equipment and adjacent areas for use on all types of fires except alcohol.
- Unless provided with equipment or noted otherwise in installation manual, fuel lines must be copper or steel, secured, free of leaks and separated or shielded from electrical wiring.
- Use approved, non-conductive flexible fuel hose for fuel connections. Do not use copper tubing as a flexible connection. It will work-harden and break.

EXHAUST GAS IS DEADLY

- Engine exhaust contains carbon monoxide (CO), an odorless, invisible, poisonous gas. Learn the symptoms of CO poisoning.
- Never sleep in a vessel, vehicle, or room with a genset or engine running unless the area is equipped with an operating CO detector with an audible alarm.
- Each time the engine or genset is started, or at least every day, thoroughly inspect the exhaust system. Shut down the unit and repair leaks immediately.

- Warning: Engine exhaust is known to the State of California to cause cancer, birth defects and other reproductive harm.

Make sure exhaust is properly ventilated.

- Vessel bilge must have an operating power exhaust.
- Vehicle exhaust system must extend beyond vehicle perimeter and not near windows, doors or vents.
- Do not use engine or genset cooling air to heat an area.
- Do not operate engine/genset in enclosed area without ample fresh air ventilation.
- Expel exhaust away from enclosed, sheltered, or occupied areas.
- Make sure exhaust system components are securely fastened and not warped.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not remove any guards or covers with the equipment running.
- Keep hands, clothing, hair, and jewelry away from moving parts.
- Before performing any maintenance, disconnect battery (negative [-] cable first) to prevent accidental starting.
- Make sure fasteners and joints are secure. Tighten supports and clamps, keep guards in position over fans, drive belts, etc.
- If adjustments must be made while equipment is running, use extreme caution around hot manifolds and moving parts, etc. Wear safety glasses and protective clothing.

BATTERY GAS IS EXPLOSIVE

- Wear safety glasses and do not smoke while servicing batteries.
- Always disconnect battery negative (-) lead first and reconnect it last. Make sure you connect battery correctly. A direct short across battery terminals can cause an explosion. Do not smoke while servicing batteries. Hydrogen gas given off during charging is explosive.
- Do not disconnect or connect battery cables if fuel vapors are present. Ventilate the area thoroughly.

DO NOT OPERATE IN FLAMMABLE AND EXPLOSIVE ENVIRONMENTS

Flammable vapor can be ignited by equipment operation or cause a diesel engine to overspeed and become difficult to stop, resulting in possible fire, explosion, severe personal injury and death. **Do not operate diesel equipment where a flammable vapor environment can be created by fuel spill, leak, etc., unless equipped with an automatic safety device to block the air intake and stop the engine.**

HOT COOLANT CAN CAUSE SEVERE PERSONAL INJURY

- Hot coolant is under pressure. Do not loosen the coolant pressure cap while the engine is hot. Let the engine cool before opening the pressure cap.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not service control panel or engine with unit running. High voltages are present. Work that must be done while unit is running should be done only by qualified service personnel.
- Do not connect the generator set to the public utility or to any other electrical power system. Electrocution can occur at a remote site where line or equipment repairs are being made. An approved transfer switch must be used if more than one power source is connected.
- Disconnect starting battery (negative [-] cable first) before removing protective shields or touching electrical equipment. Use insulative mats placed on dry wood platforms. Do not wear jewelry, damp clothing or allow skin surface to be damp when handling electrical equipment.
- Use insulated tools. Do not tamper with interlocks.
- Follow all applicable state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag open switches to avoid accidental closure.
- With transfer switches, keep cabinet closed and locked. Only authorized personnel should have cabinet or operational keys. Due to serious shock hazard from high voltages within cabinet, all service and adjustments must be performed by an electrician or authorized service representative.

If the cabinet must be opened for any reason:

1. Move genset operation switch or Stop/Auto/Handcrank switch (whichever applies) to Stop.
2. Disconnect genset batteries (negative [-] lead first).
3. Remove AC power to automatic transfer switch. If instructions require otherwise, use extreme caution due to shock hazard.

MEDIUM VOLTAGE GENERATOR SETS (601V TO 15kV)

- Medium voltage acts differently than low voltage. Special equipment and training are required to work on or around medium voltage equipment. Operation and maintenance must be done only by persons trained and qualified to work on such devices. Improper use or procedures will result in severe personal injury or death.
- Do not work on energized equipment. Unauthorized personnel must not be permitted near energized equipment. Induced voltage remains even after equipment is disconnected from the power source. Plan maintenance with authorized personnel so equipment can be de-energized and safely grounded.

GENERAL SAFETY PRECAUTIONS

- Do not work on equipment when mentally or physically fatigued or after consuming alcohol or drugs.
- Carefully follow all applicable local, state and federal codes.
- Never step on equipment (as when entering or leaving the engine compartment). It can stress and break unit components, possibly resulting in dangerous operating conditions from leaking fuel, leaking exhaust fumes, etc.
- Keep equipment and area clean. Oil, grease, dirt, or stowed gear can cause fire or damage equipment by restricting airflow.
- Equipment owners and operators are solely responsible for operating equipment safely. Contact your authorized Onan/Cummins dealer or distributor for more information.

KEEP THIS DOCUMENT NEAR EQUIPMENT FOR EASY REFERENCE.

INDEX

	LOCATION
GENERAL INFORMATION	A2
SET DATA TABLE	A4
REPLACEMENT ENGINE	A5
EQUIPMENT PARTS SECTION	
Air Cleaner	A6
Alternator	A7
Chassis.....	B6
Control, Set with One Fault Light.....	B2
Cooling System (With Radiator)	A13
Current Transformer Assembly.....	A14
Engine Parts, Miscellaneous (Left Side).....	A12
Battery Cables	
Engine Coolant Temperature Sender	
Flywheel and Ring Gear	
Starter	
Engine Parts, Miscellaneous (Right Side)	A10
High Coolant Temperature Switches (Alarm and Shutdown)	
Low Oil Pressure Switches (Prealarm and Shutdown)	
Oil Drain Hardware	
Oil Pressure Sender	
Oil Temperature Sender	
Wiring Harness, Engine	
Fuel System (Gasoline)	A9
Generator Assembly.....	B4
Governor	A8
Output Box Assembly	B1
Rotor, Exciter	B4
OPTIONAL EQUIPMENT SECTION	
Air Cleaner (With Heater System)	C6
Circuit Breaker	C2
Control, Set With Multi Fault Lights & A C Meters	C4
Cooling System (City Water)	D13
Exhaust System (Housed Sets).....	D9
Filter, Voltage Regulator	D12
Fuel System - Dual (Gasoline & Nat. Gas)	C8
Fuel System - Dual (Gasoline & LPG Liquid)	C10
Fuel System - Dual (Gasoline & LPG Vapor)	C12
Fuel System - Dual (Nat. Gas & LPG Liquid)	D2
Fuel System (LPG Liquid)	D4
Fuel System (LPG Vapor)	D6
Fuel System (Nat. Gas)	D7
Heater, Control	C7
Heater, Engine Coolant	D8
Heater, Generator	D14
Housing, Set	D10
Tachometer.....	C4
Tank, Fuel - Mounted (Housed Sets).....	D1
Tank, Fuel Reservoir	C14

This parts catalog applies to the standard generator sets listed below. Any engine parts modified or added by Onan will be listed in this catalog and have been assigned Onan part numbers for identification. These modified or added parts supersede similar parts listed in the Engine Manufacturer's manuals. The illustrations are arranged in groups of related items, and each part or assembly is identified by a reference number. All parts illustrated are typical, and unless otherwise mentioned, parts are interchangeable. These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The Right and Left generator set sides are determined by facing the front end of the engine.

SET DATA TABLE

MODEL IDENTIFICATION	RATING	MODEL IDENTIFICATION	RATING
25.0SK-*/#£	25,000 WATTS	30.0SK-*/#£	30,000 WATTS

ELECTRICAL DATA TABLE

*VOLTAGE CODES	VOLTS	HERTZ	WIRE	PHASE	NOTES
3	120/240	60	13	1	
9X	347/600	60	4	3	
15	120/240	60	12	1	+
15	120/208, 120/240, 127/220, 139/240, 240/416, 254/440, 277/480	60	12	3	+
53	110/220, 115/230, 120/240	50	3	1	
515	110/220, 115/230	50	12	1	+
515	110/190, 110/220, 115/200, 115/230, 120/208, 127/220, 220/380, 230/400, 240/416, 254/440	50	12	3	+
3CR50	@	60	3	1	@
15R50	@	60	12	1	@+
15R50	@	60	12	3	@+

* - Voltage codes follow model letter designations.

- Specification number; number 1 is standard, all others indicate variations.

£ - Specification letter; letter advances (A to B, B to C, etc.) with major manufacturing changes.

+ - These generators are reconnectible, refer to Operator's manual for wiring data.

@ - These are Penn State Sets; special parts are identified in the Parts manual when applicable.

NOTICE!

ITEMS REFERENCED AS OPTIONAL INDICATE PART IS FACTORY INSTALLED AND MAY NOT BE APPLICABLE TO ALL MODELS. FOR FIELD CONVERSIONS ADDITIONAL PARTS ARE USUALLY REQUIRED.

REPLACEMENT ENGINE

ONAN PART NO.

100-1524


*Engine, Replacement

Standard

Includes: Complete Cylinder Block, Oil Pan, Water Pump, Oil Filter, Spark Plugs, Thermostat, and Alternator Mounting Brackets.

Excludes: Carburetor, Air Cleaner, Generator, Oil Pressure, Water Temperature Gauge Senders, Oil Pressure Switch, High Water Temperature Cut Off Switch, Radiator, Fan Blades & Belts, Muffler, Exhaust Tube, Fly Wheel, Fuel Pump and Starter.

***NOTE:** Engine listed is for Standard Spec 1 (Radiator Cooled) generator sets, for all other models refer to the factory.

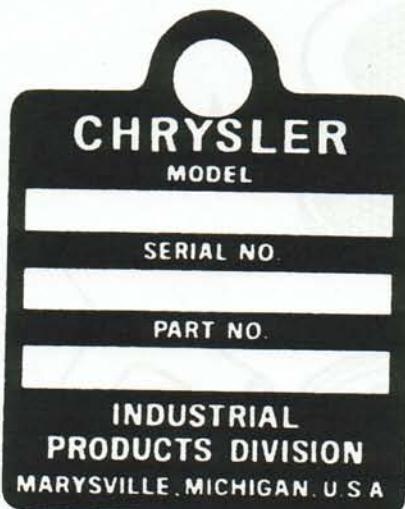


M1400

For handy reference, insert "YOUR" name-plate information in the spaces.

ENGINE REPLACEMENT PARTS

All engine replacement parts must be ordered from the engine manufacturer, except those modified or added by Onan. When ordering engine parts, refer to the manufacturer's nameplate and supply the Model, Spec, Serial numbers and other available information. Refer to the engine manufacturer's manuals for your nearest authorized distributor or parts center; or contact the Onan distributor from whom you purchased this set for assistance in ordering replacement parts.


AIR CLEANER

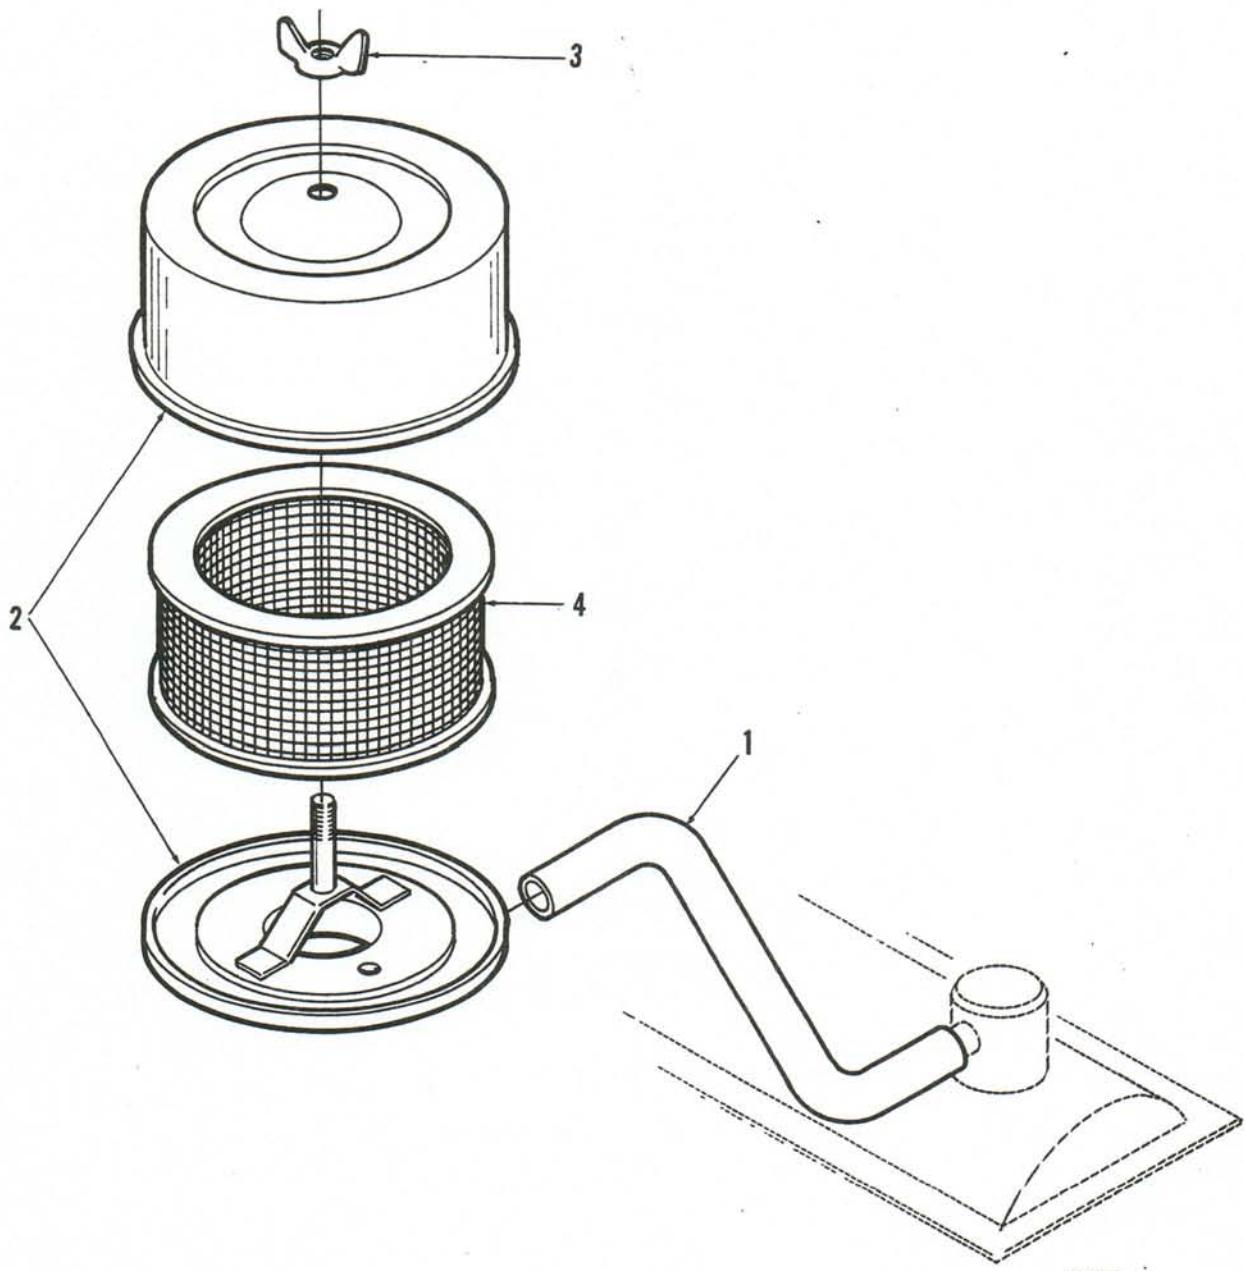

FS1416

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0891	1	Hose, Rubber - Breather (5/8" ID x 14" Lg)
2	140-1583	1	Air Cleaner (Includes Nut and Element)
3	865-0020	1	Nut, Wing (1/4-20)
4	140-1089	1	Element, Air Cleaner


ALTERNATOR

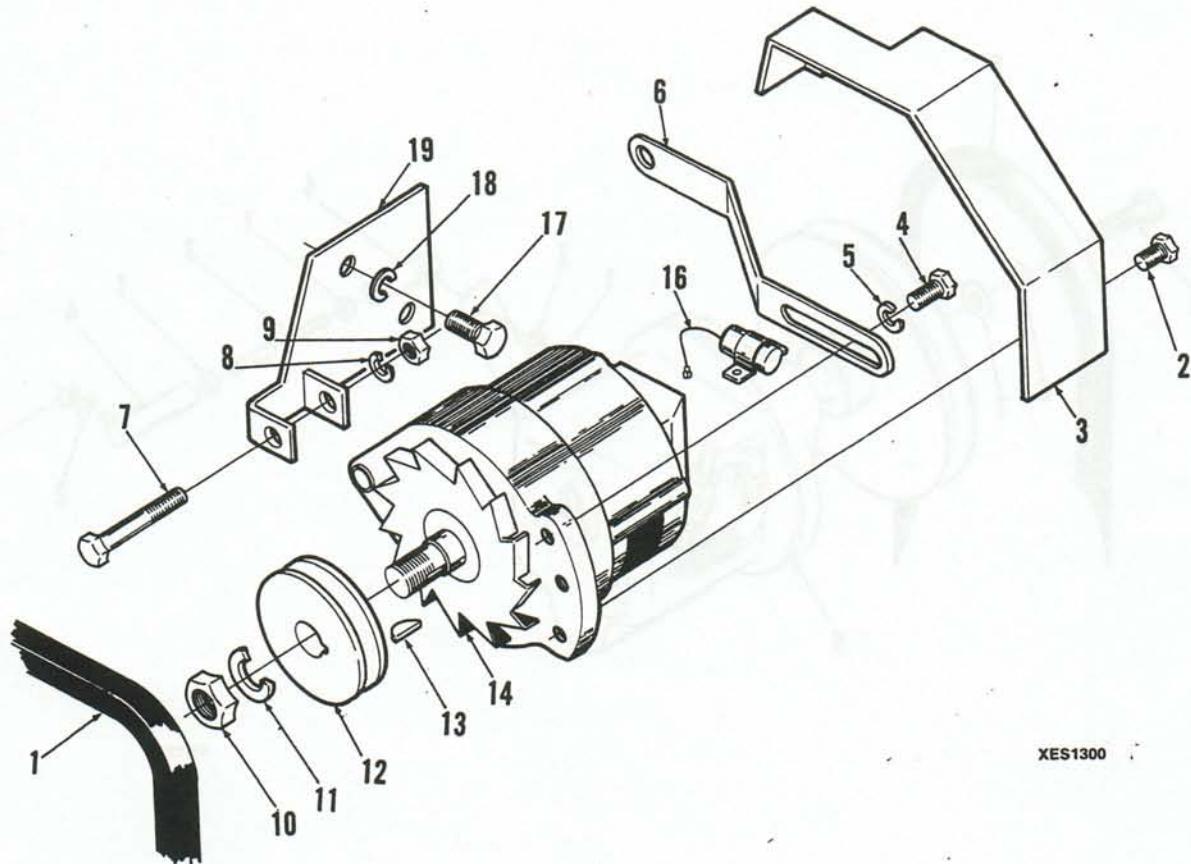

XES1300

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	511-0072	1	Belt, Drive	13	515-0093	1	#Key, Woodruff (#5)
2	821-0014	1	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")	14	191-1388	1	Alternator - 12 VDC (A Replacement Kit, Includes Part Marked *)
3	191-1240	1	Guard, Belt	15	191-1390	1	#Regulator, Voltage (A Replacement Kit, Includes Part Marked *)
4	800-0026	1	Screw, Cap - Hex Head (5/16-18 x 3/4")	16	312-0201	1	*Capacitor
5	850-0045	1	Washer, Lock - Spring (5/16")	17	800-0071	2	Screw, Cap - Hex Head (7/16-14 x 1")
6	191-1224	1	Arm, Adjusting - Alternator	18	850-0055	2	Washer, Lock - Spring (7/16")
7	800-0085	1	Screw, Cap - Hex Head (1/2-13 x 2-1/4")	19	191-1212	1	Bracket, Mounting - Alternator
8	850-0060	2	Washer, Lock - Spring (1/2")				# - Parts Included in Alternator.
9	862-0016	2	Nut, Hex (1/2-13)				* - Part Included in Replacement Kits.
10	868-0007	1	#Nut, Hex (5/8-18NF-2A)				
11	850-0070	1	#Washer, Lock - Spring (5/8")				
12	191-0623	1	Pulley				




GOVERNOR

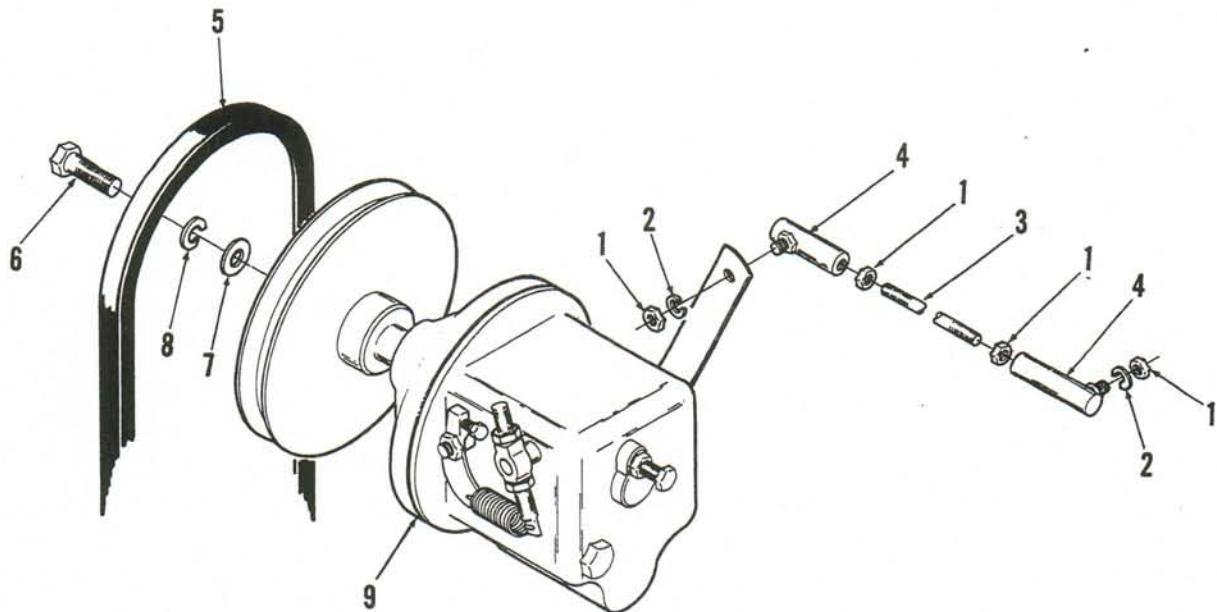

XM1391

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	115-0025	4	Nut, Hex (1/4-28)
2	850-0040	2	Washer, Lock - Spring (1/4")
3	520-0874	1	Stud (Governor to Throttle)
4	150-0638	2	Joint, Ball
5	511-0066	1	Belt, Drive
6	800-0051	3	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
7	526-0014	3	Washer, Flat (25/64" ID x 1" OD x 1/16" Thk)
8	850-0050	3	Washer, Lock - Spring (3/8")
9	150-0440	1	Governor


**FUEL SYSTEM
(GASOLINE)**

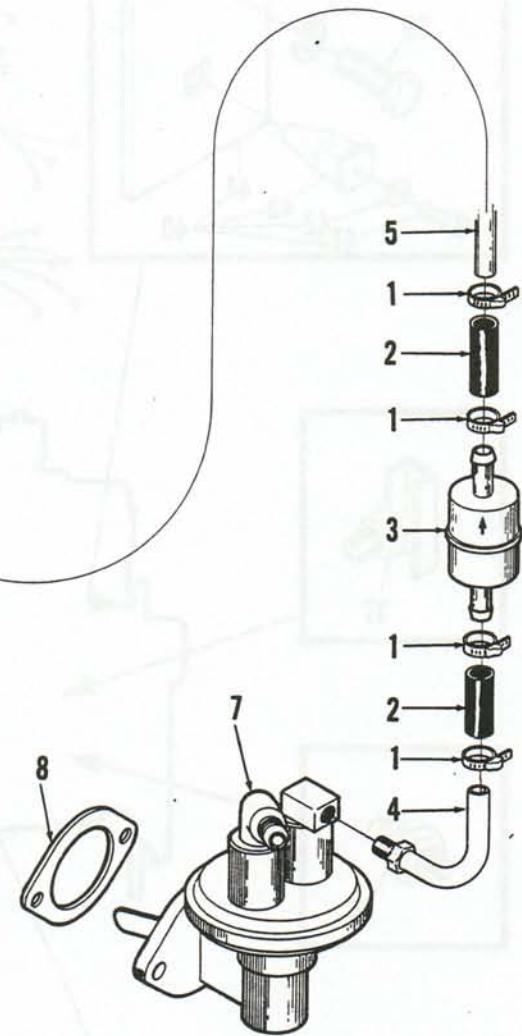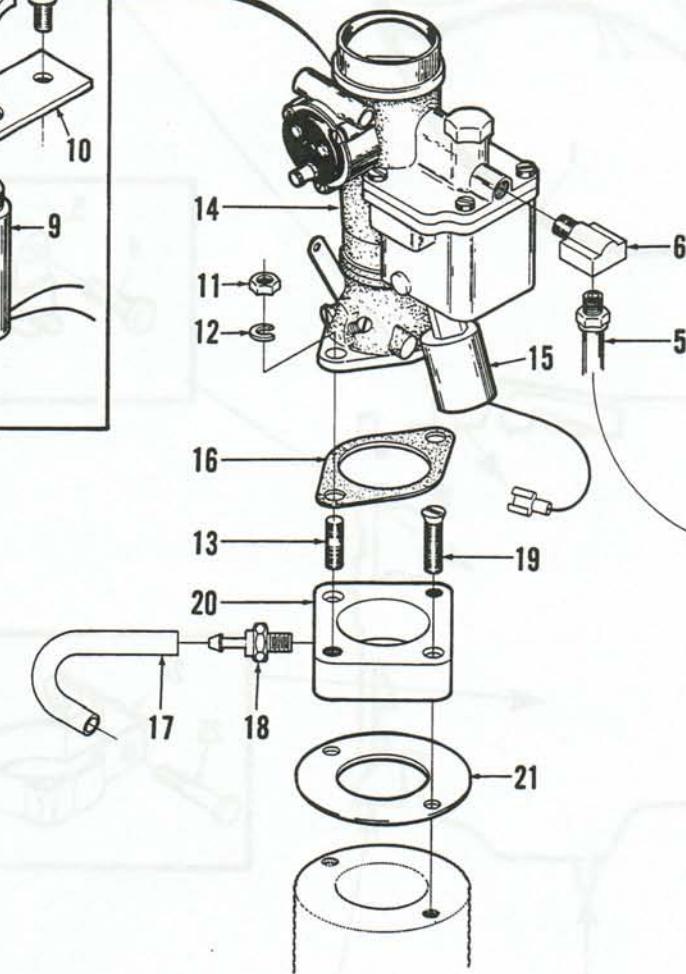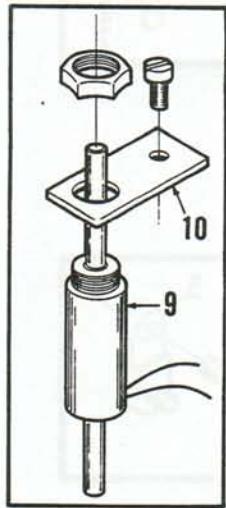

XFS1421

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0685	4	Clamp, Hose	14	141-0854	1	Carburetor, Gasoline (Includes Fuel Shutoff Solenoid)
2	503-0883	2	Hose, Rubber (5/16" ID x 2" Lg)	15	141-0850	1	Solenoid - 12 VDC (Fuel Shutoff)
3	149-1569	1	Filter, Fuel	16	154-0133	1	Gasket - Carburetor
4	149-1573	1	Line, Fuel	17	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
5	149-1558	1	Line, Fuel	18	502-0582	1	Adapter, Hose (1/8-27 NPT x 5/16" Hose)
6	502-0004	1	Elbow, Pipe - 90 DEG, Brass	19	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
7	149-1568	1	Pump, Fuel	20	148-0800	1	Adapter - Carburetor to Manifold
8	149-0736	1	Gasket - Fuel Pump	21	148-0775	1	Gasket
9	307-2017	1	Solenoid - 12 VDC (Choke Closing)				
10	307-2014	1	Plate, Mounting - Solenoid				
11	104-0091	2	Nut, Hex (3/8-24)				
12	850-0050	2	Washer, Lock - Spring (3/8")				
13	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)				

MISCELLANEOUS ENGINE PARTS
(RIGHT SIDE)

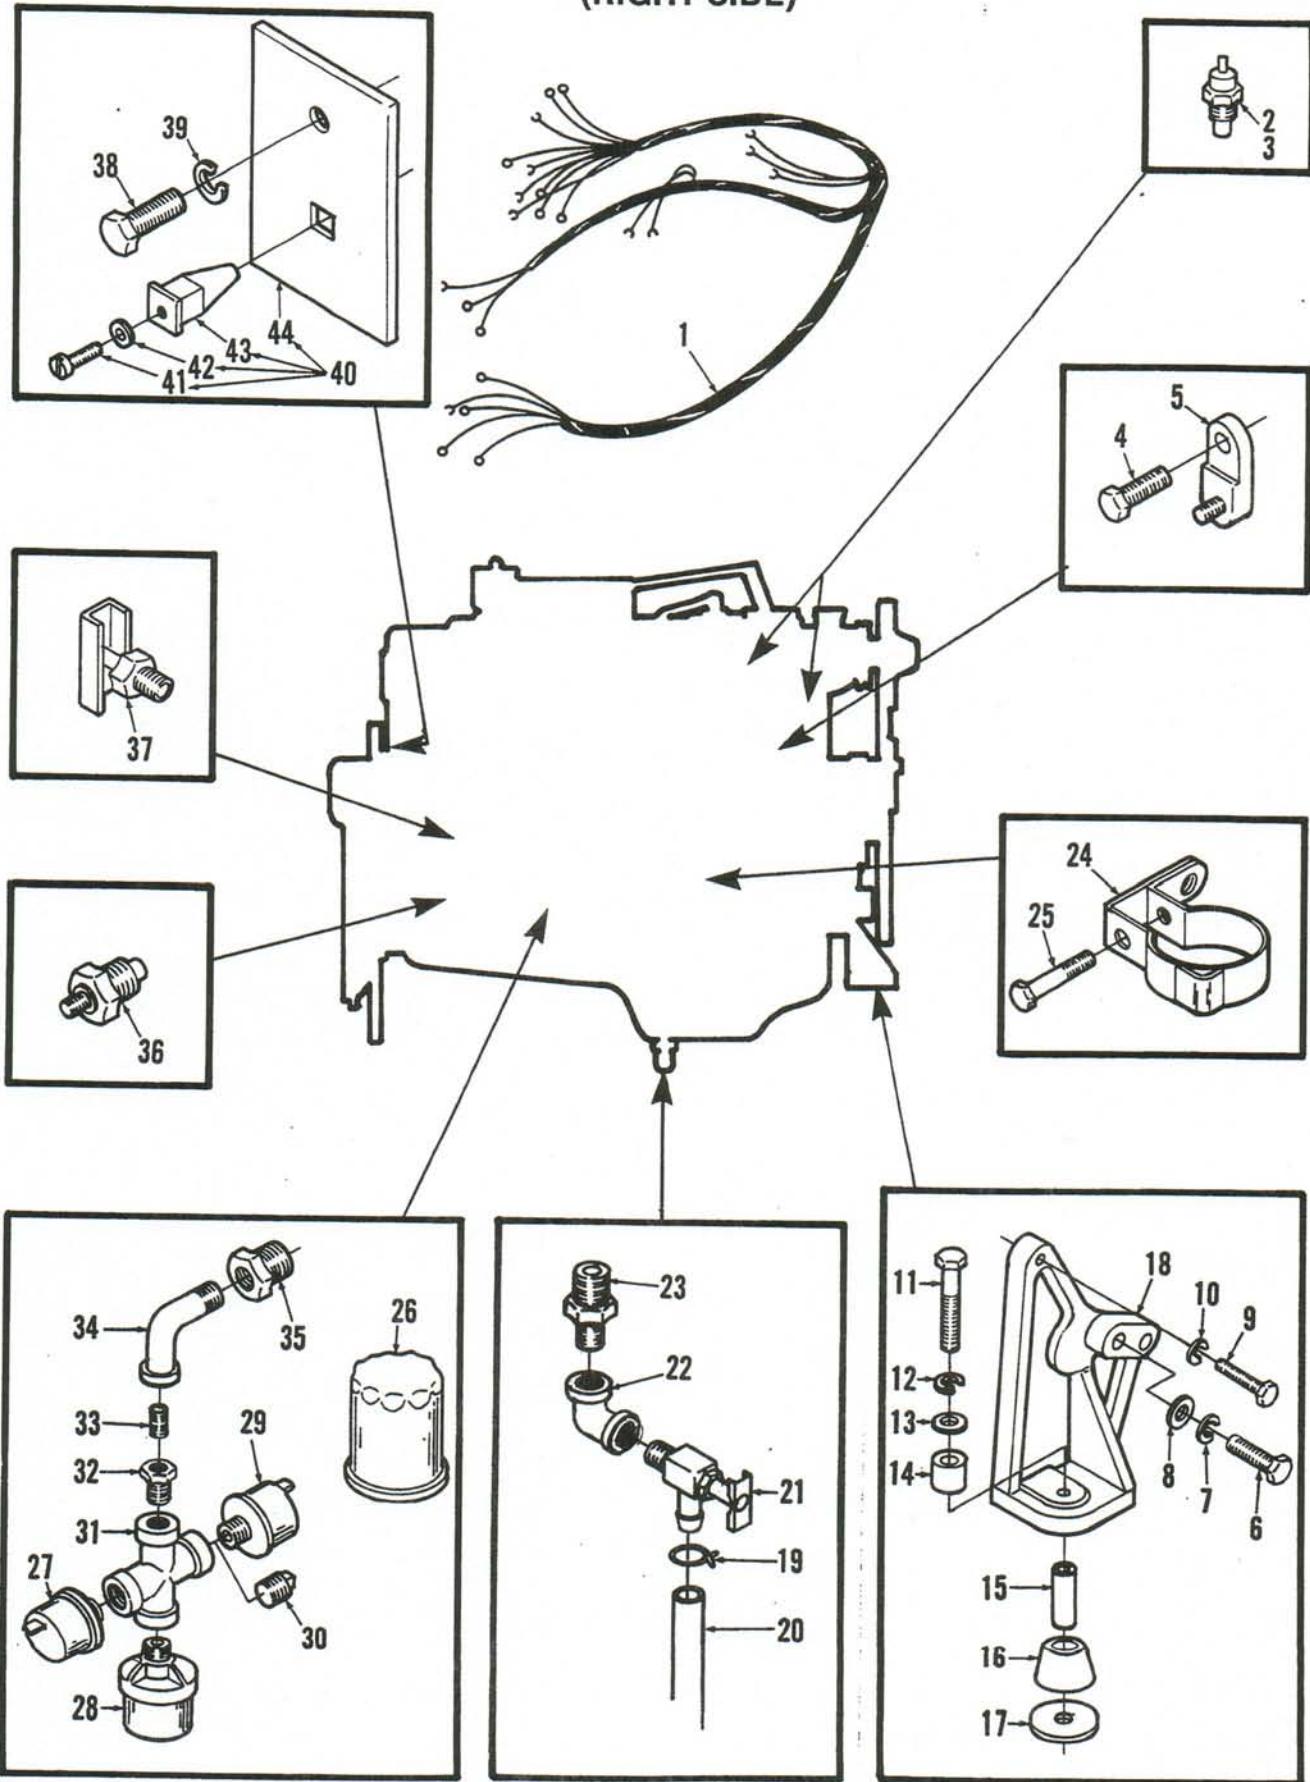


MISCELLANEOUS ENGINE PARTS (RIGHT SIDE)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
WIRING HARNESS - ENGINE							
1	338-1130	1	Standard	21	504-0092	1	Valve, Shutoff
		1	Special (NOTE: Use Standard Wiring Harness and add electrical leads as required for optional sensors, switches per Gen Set wiring diagram.)	22	505-0039	1	Elbow, Pipe - 90 DEG (3/8 NPT)
2	309-0179	1	+Switch, Thermostatic - High Coolant Temperature - PreAlarm	23	102-0652	1	Adapter, Hex (1/2-20 UNF x 3/8-18 NPT)
3	309-0178	1	+Switch, Thermostatic - High Coolant Temperature - Shutdown	24	160-1045	1	Clamp, Mounting - Ignition Coil
4	821-0029	1	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")	25	166-0286	1	Screw, Special - Coil Clamp
5	309-0269	1	+Switch, Thermostatic - Low Engine Temperature	26	122-0193	1	Filter, Oil
6	800-0050	2	Screw, Cap - Hex Head (3/8-16 x 1")	27	193-0244	1	+Sender, Pressure - Oil
7	850-0050	2	Washer, Lock - Spring (3/8")	28	309-0169	1	+Switch, Pressure - Oil (Pre-Alarm)
8	526-0013	2	Washer, Flat (29/64" ID x 1" OD x 1/16" Thk)	29	309-0064	1	+Switch, Pressure - Oil (Shutdown)
9	800-0036	3	Screw, Cap - Hex Head (5/16-18 x 2-3/4")	30	505-0057	1	Plug, Pipe - Square Head (1/8 NPT)
10	850-0045	3	Washer, Lock - Spring (5/16")	31	505-0763	1	Cross, Pipe (1/8" NPT)
11	800-0082	1	Screw, Cap - Hex Head (7/16-14 x 3-3/4")	32	505-0007	1	Bushing, Reducer - Hex (1/4 NPT x 1/8 NPT)
12	850-0055	1	Washer, Lock - Spring (7/16")	33	505-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4")
13	526-0014	1	Washer, Flat (25/64" ID x 1-1/2" OD x 1/8" Thk)	34	505-0011	1	Elbow, Pipe - Street, 90 DEG (1/4 NPT)
14	402-0282	1	Snubber, Rubber	35	505-0017	1	Bushing, Reducer - Hex (3/8 NPT x 1/4 NPT)
15	402-0290	1	Bushing, Sleeve	36	193-0249	1	+Sender, Temperature - Oil
16	402-0287	1	Mount, Vibration - Engine	37	504-0003	1	Cock, Drain (1/4 NPT)
17	526-0182	3	Washer, Flat (17/32" ID x 2-7/8" OD x 1/4" Lg)	38	800-0050	1	Screw, Cap - Hex Head (3/8-16 x 1")
18	403-1323	1	Support, Mounting - Engine	39	850-0050	1	Washer, Lock - Spring (3/8")
19	503-0131	1	Clamp, Hose	40	332-1292	1	Terminal Board (Includes Parts Marked *)
20	503-0262	1	Hose, Rubber (5/8" ID x 7/8" OD x 18" Lg)	41	809-0035	1	*Screw, Thread Cutting - Round Head (#8 x 3/4")
				42	508-0015	1	*Washer, Insulating - Fiber (#8)
				43	870-0196	1	*Nut, Insulating (#8)
				44	332-1281	1	*Plate, Mounting - Terminal

+ - Items used with fault lights or gauges on Control Panel.

* - Parts included in Terminal Board.

**MISCELLANEOUS ENGINE PARTS
(LEFT SIDE)**

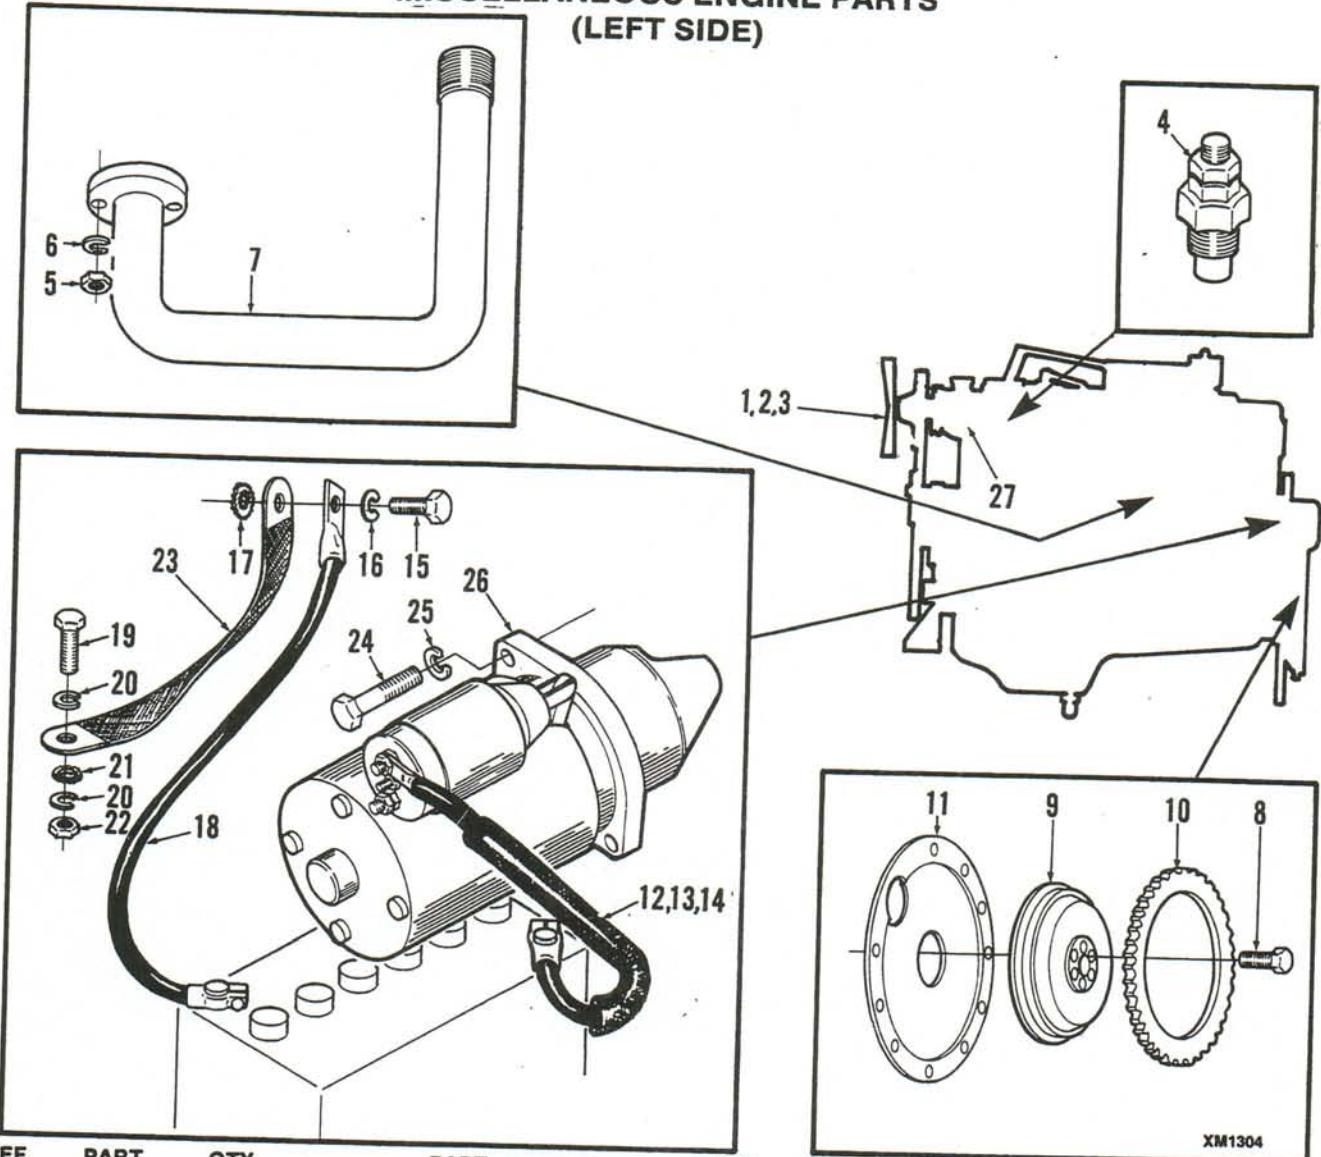


XM1304

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	511-0076	1	Belt, Drive - Water Pump
2	511-0072	1	Belt, Drive - Fan/Alternator
3	ATTACHING HARDWARE For Fan, Fan Pulley and Water Pump Pulley		
	800-0026	9	Screw, Cap - Hex Head (5/16-18 x 3/4")
	850-0045	9	Washer, Lock - Spring (5/16")
4	.193-0259	1	+Sender, Temperature - Engine Coolant
5	862-0004	2	Nut, Hex (7/16-14)
6	850-0055	2	Washer, Lock - Spring (7/16")
7	155-1584	1	Tube, Exhaust
8	805-0028	6	Bolt, Place
9	104-1034	1	Flywheel with Ring Gear
10	104-0980	1	Gear, Ring
11	231-0211	1	Plate, Adapter - Generator Mtg.
	ATTACHING HARDWARE FOR ADAPTER PLATE		
	800-0050	2	Screw, Cap - Hex Head (3/8-16 x 1")
	800-0075	3	Screw, Cap - Hex Head (7/16-14 x 2")
	850-0050	2	Washer, Lock - Spring (3/8")
	850-0055	3	Washer, Lock - Spring (7/16")
	862-0004	3	Nut, Hex (7/16-14)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
12	332-0942	2	Tie, Cable
13	895-0179	1	Tubing, Asbestos
14	416-0643	1	Cable, Battery - Positive
15	800-0071	1	Screw, Cap - Hex Head (7/16-14 x 1")
16	850-0055	1	Washer, Lock - Spring (7/16")
17	856-0012	1	Washer, Lock - EIT (7/16")
18	416-0049	1	Cable, Battery - Negative
19	800-0090	1	Screw, Cap - Hex Head (1/2-13 x 1")
20	850-0060	2	Washer, Lock - Spring (1/2")
21	856-0013	1	Washer, Lock - EIT (1/2")
22	862-0016	1	Nut, Hex (1/2-13)
23	337-0090	1	Strap, Electrical
24	800-0071	2	Screw, Cap - Hex Head (7/16-14 x 1")
25	850-0055	2	Washer, Lock - Spring (7/16")
26	191-1209	1	Starter - 12 VDC
27	ATTACHING HARDWARE FOR THERMOSTAT HOUSING		
	800-0050	2	Screw, Cap - Hex Head (3/8-16 x 1")
	850-0050	4	Washer, Lock - Spring (3/8")
	800-0055	2	Screw, Cap - Hex Head (3/8-16 x 2-1/4")

+ - Items used with fault lights or gauges on Control Panel.


**COOLING SYSTEM
(WITH RADIATOR)**

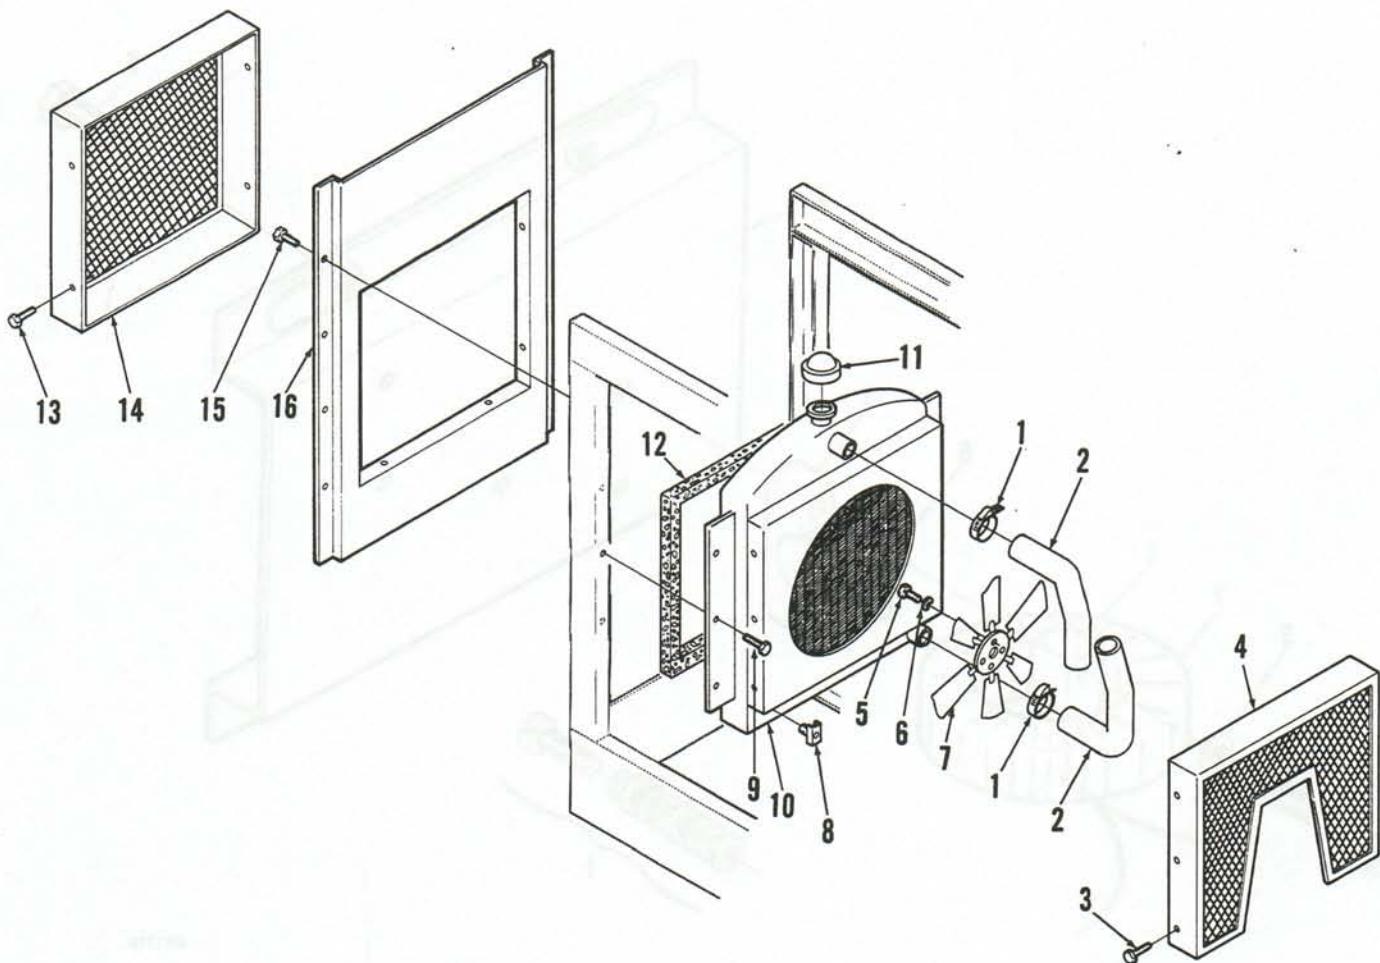

XCS1197

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0429	4	Clamp, Hose
2	503-0869	2	Hose, Rubber - Preformed
3	821-0005	8	Screw, Self-locking - Hex Washer Head (#10-32 x 1/2")
4	130-1275	1	Guard, Fan
5	800-0033	4	Screw, Cap - Hex Head (5/16-18 x 2")
6	850-0045	4	Washer, Lock - Spring (5/16")
7	130-1196	1	Fan
8	504-0028	1	Cock, Drain (3/8" NPT)
9	821-0010	6	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
10	130-1238	1	Radiator (Includes Cap)
11	130-1363	1	Cap, Radiator
12	895-0174	1	Strip, Foam - Rubber
13	821-0008	8	Screw, Self-locking - Hex Washer Head (1/4-20 x 5/16")
14	130-1262	1	Guard - Radiator Core
15	821-0010	8	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
16	130-1264	1	Panel, Front-Air Duct


CURRENT TRANSFORMER ASSEMBLY

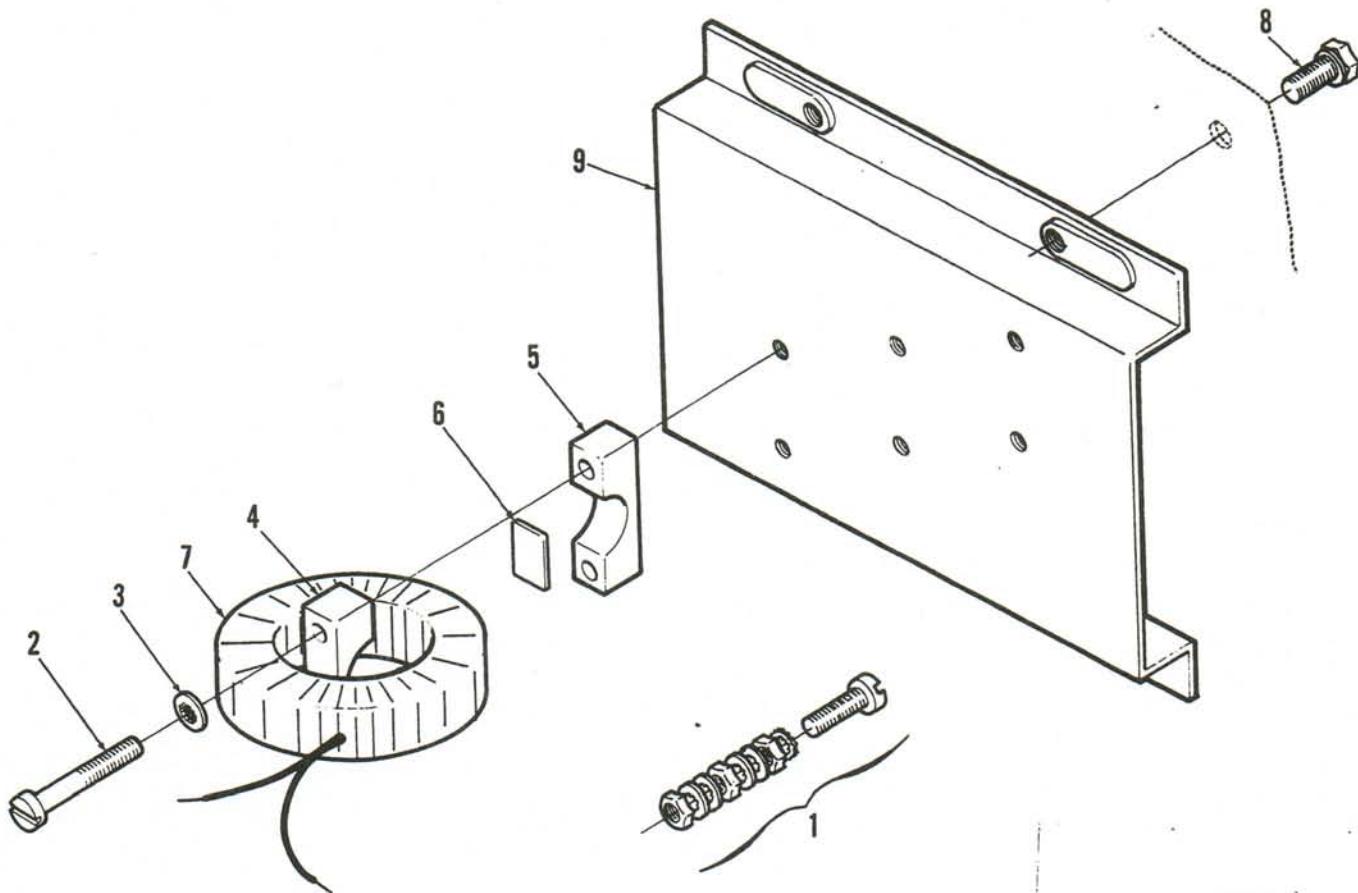

ES1310

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
CURRENT TRANSFORMER ASSEMBLY (Select Components as Required)							
1	GROUND TERMINAL ASSEMBLY (Includes Following Items)			3	854-0010	6	Washer, Lock - IT (#10)
	815-0203	1	Screw, Machine - Round Head, Brass (#10-32 x 7/8")	4	302-0235	3	Clamp, Upper
	871-0010	3	Nut, Hex - Brass (#10-32)	5	302-0236	3	Clamp, Lower
	856-0003	1	Washer, Lock - EIT (#10)	6	302-0253	6	Shim
	854-0010	2	Washer, Lock - IT (#10)	7	CURRENT TRANSFORMER (Select Size As Required)		
	526-0049	2	Washer, Flat - Brass (13/64" ID x 7/32" OD x 1/32" Thk)	302-0117	3	Ratio 50/5, 3 VA	
2	813-0110	6	Screw, Machine - Round Head (#10-32 x 2")	302-0076	3	Ratio 75/5, 2 VA	
				302-0078	3	Ratio 100/5, 2 VA	
				302-0079	3	Ratio 150/5, 1 VA	
				302-0106	3	Ratio 200/5, 1 VA	
				302-0209	3	Ratio 230/5, 1 VA	
				302-0107	3	Ratio 300/5, 1 VA	
				8	821-0010	4	Screw Self-locking - Hex Washer Head (1/4-20 x 1/2")
				9	301-4610	1	Bracket, Mounting - Transformer


OUTPUT BOX ASSEMBLY

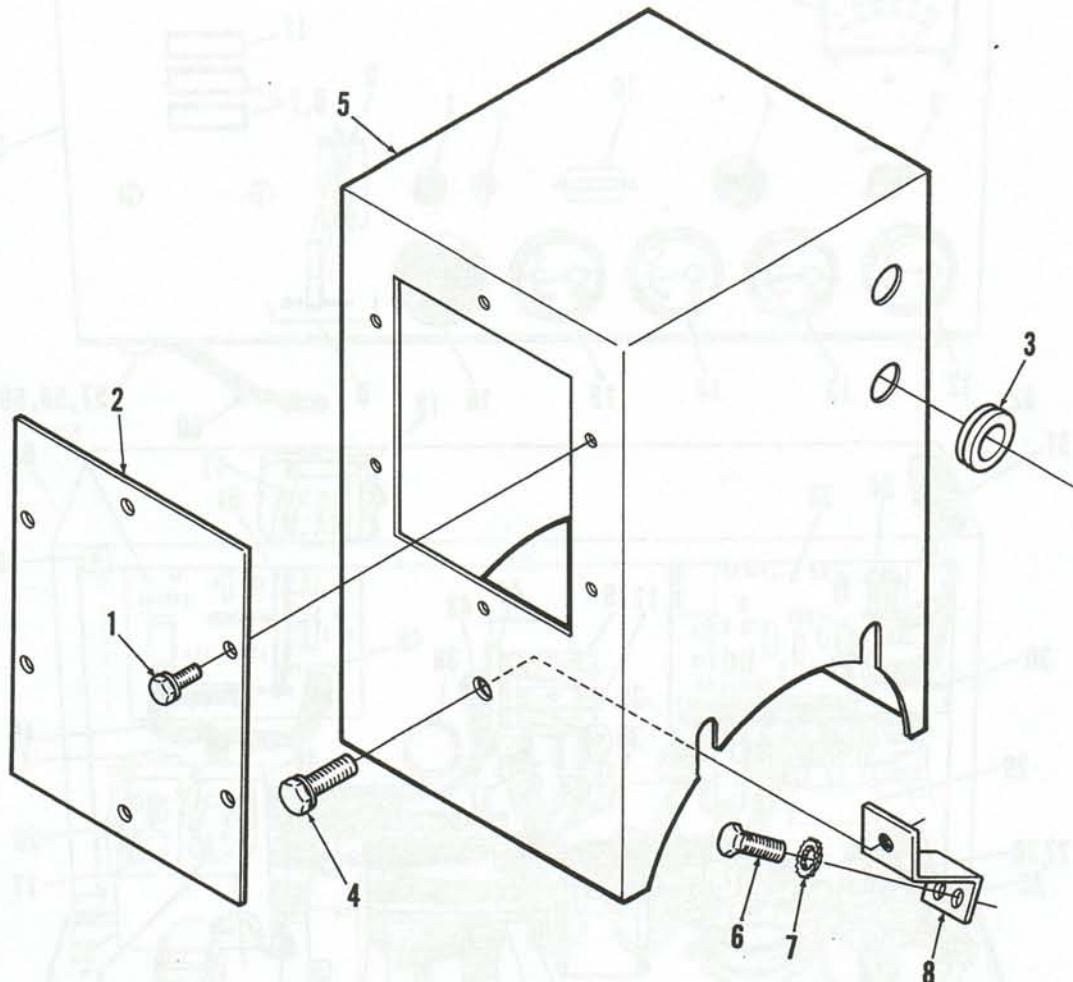

XES1311

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	821-0010	12	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
2	301-4640	2	Cover, Access
3	508-0109	2	Grommet, Rubber
4	821-0014	2	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")
5	301-4608	1	Output Box
6	815-0236	4	Screw, Tapping - Hex Head (5/16-18 x 5/8")
7	856-1008	4	Washer, Lock - EIT (5/16")
8	301-3903	2	Bracket, Support - Control Box

**SET CONTROL
WITH SINGLE FAULT LIGHT**

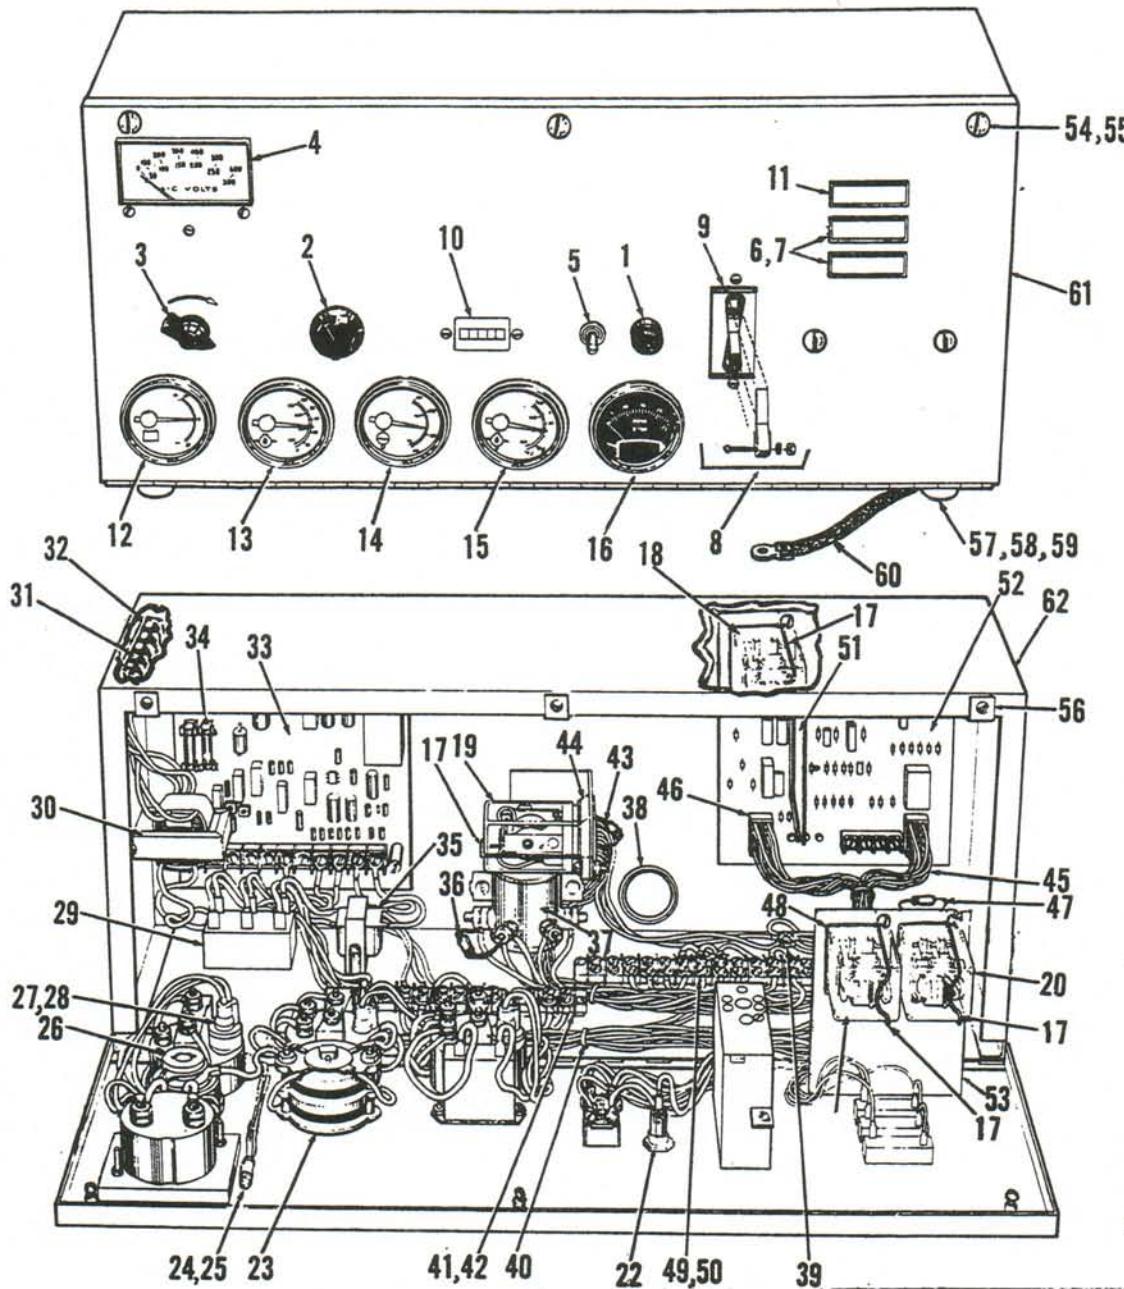

SC1316

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	321-0147	1	Fuse, Cartridge (5 AMP)
2	303-0076	1	Knob, Pointer
3	303-0032	1	Knob
4	VOLTMETER		SINGLE SCALE 302-1175 1 0-300 Volt, Code 3, 53 302-1300 1 0-750 Volt, Code 9X DUAL SCALE 302-1148 1 0-300, 0-600 Volt, Code 15, 515
5	SWITCH, TOGGLE - SELECTOR (S15) 308-0138 1 SPDT-3 Position 308-0327 1 SPDT (Penn State Sets)		
6	#LIGHT, INDICATOR - 125 VAC (Lens Color & Legend Listed Below)		
322-0130	1	Red - Lower Scale	
322-0131	1	Red - Upper Scale	
7	322-0178	1	#Light Indicator - 125 VAC (Amber Lens - No Legend)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
8	320-0307	1	Lock - Circuit Breaker Handle (Penn State Sets)
	ATTACHING HARDWARE FOR LOCK 815-0203	1	Screw, Machine - Round Head (#10-32 x 7/8")
	854-0010	1	Washer, Lock - IT (#10)
	871-0010	1	Nut, Hex (#10-32)
9	320-0431	1	Circuit Breaker
	ATTACHING HARDWARE FOR CIRCUIT BREAKER 812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")
	850-0020	2	Washer, Lock - Spring (#6)
	815-0203	1	Screw, Machine - Round Head, Brass (#10-32 x 7/8")
	871-0010	1	Nut, Hex - Brass (#10-32)
	853-0008	1	Washer, Lock - ET (#10)
	526-0049	1	Washer, Flat - Brass (13/64" ID x 7/16" OD x 132" Thk)

**SET CONTROL
WITH SINGLE FAULT LIGHT**


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	
10	302-0885	1	Meter, Time Totalizing	40	HARNESS, WIRING - AC CONTROL (Includes Parts Marked *)			
11	322-0128	1	Light, Indicator - 14 VDC (Red-Fault)	338-1164		1	Code 15, 515	
12	302-1154	1	Ammeter (30-0-30)	338-1248		1	Code 3, 53	
13	193-0243	1	Gauge, Oil Pressure (0-100 PSI)	338-1637		1	Code 9X	
14	193-0245	1	Gauge, Water Temperature (100-280 F)	41	*BLOCK TERMINAL (TB21)			
15	193-0248	1	Gauge, Oil Temperature (150-350 F)	332-0607		1	12 Place (Code 15, 515)	
16	302-0726	1	Tachometer	332-2025		1	7 Place (Codes 3, 53, 9X)	
17	307-1157	4	Spring, Holdown - Relay	42	STRIP, MARKER			
18	307-1633	1	Relay - 12 VDC (K11)	332-2115		1	#61 Through 71 (Code 15, 515)	
19	307-1061	1	Relay - 240 VAC (K21)	332-2237		1	#61 Through 67 (Codes 3, 53, 9X)	
20	307-1058	1	Relay - 12 VDC (K12)	43	350-1201	1	*Resistor With Terminals (Code 15, 515)	
21	307-1061	1	Relay - 240 VAC (K14)	44	323-0765	1	*Socket, Relay (Code 15, 515)	
22	321-0217	1	Holder, Fuse	45	338-1163	1	Harness, Wiring - Engine Control (Includes Parts Marked †)	
23	308-0012	1	Switch, Rotary - Selector (S21)	46	323-0984	2	†Connector, Plug (12 Pin)	
24	322-0203	1	Lamp, Incandescent (14 VDC, .3 CP, T-1-3/4)	47	357-0040	1	†Diode With Terminals & Leads	
25	322-0213	1	Lampholder	48	323-0765	2	†Socket, Relay	
	ATTACHING HARDWARE FOR LAMPHOLDER				49	332-1005	1	
	812-0029	1	Screw, Machine - Round Head (#4-40 x 3/8")	50	332-1559	1	†Block, Terminal (20 Place) Strip, Marker - #21 Through 40	
	853-0001	1	Washer, Lock - ET (#4)	51	300-1604	1	Control, Cycle Cranker (Optional)	
	860-0003	1	Nut, Hex (#4-40)	52	300-1695	1	Control, Engine Monitor	
				53	301-4665	1	Bracket, Relay Mounting	
26	303-0170	1	Rheostat - 35K Ohm, 25 Watt (R21)		ATTACHING HARDWARE FOR BRACKET			
27	322-0004	4	Lamp, Incandescent (14 VDC, 1.4 CP, T-3-1/4)	812-0063	2	Screw, Machine - Round Head (#6-32 x 1/2")		
28	322-0210	4	Lampholder (Fits Gauges)	856-0001	2	Washer, Lock - EIT (#6)		
29	305-0675	1	Rectifier, Bridge	860-0006	2	Nut, Hex (#6-32)		
	ATTACHING PARTS FOR RECTIFIER				54	406-0334	3	
	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")	55	406-0333	3	Clip, Retaining - Turnbutton Fastener	
	850-0020	2	Washer, Lock - Spring (#6)	56	406-0332	3	Stud, Turnbutton Fastener	
30	315-0431	1	Transformer, Voltage	57	800-0045	4	Receptacle, Turnbutton Fastener	
	ATTACHING PARTS FOR TRANSFORMER				58	850-0045	4	
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")	59	402-0070	4	Screw, Cap - Hex Head (5/16-18 x 3/8")	
	853-0003	2	Washer, Lock - ET (#6)	60	337-0049	1	Washer, Lock - Spring (5/16")	
					61	Dampener, Vibration		
31	332-0604	1	Block, Terminal - TB22 (5 Place)		Strap, Ground			
32	332-2116	1	Strip, Marker (H2 through H6)					
33	332-1956	1	Regulator, Voltage (Includes Fuses)					
34	321-0204	2	Fuse, Cartridge (1/4 Amp)					
35	315-0384	1	Reactor					
	ATTACHING PARTS FOR REACTOR				62	PANEL, CONTROL - WITH HINGE & FLOOR PLATE	CODE 3, 53	
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")		301-5703	1	With Three Gauge Mtg. Holes	
	853-0003	2	Washer, Lock - ET (#6)		£	1	With Four Gauge Mtg. Holes	
					£	1	With Five Gauge Mtg. Holes	
36	357-0026	1	Diode with Terminals		301-7222	1	CODE 9X	
37	307-1500	1	Relay, Solenoid (K13)		£	1	With Three Gauge Mtg. Holes	
38	508-0001	4	Grommet		£	1	With Four Gauge Mtg. Holes	
39	GROUND TERMINAL ASSEMBLY (Includes Parts Marked *)					£	1	
	871-0010	2	#Nut, Hex - Brass (#10-32)		301-5339	1	With Five Gauge Mtg. Holes	
	850-0030	1	#Washer, Lock - Spring (#10)		301-5440	1	CODE 15, 515	
	526-0062	2	#Washer, Flat - Brass (13/64" ID x 1/2" OD x 1/16" Thk)		£	1	With Three Gauge Mtg. Holes	
	853-0008	1	#Washer, Lock - ET (#10)		301-4655	1	With Four Gauge Mtg. Holes	
	856-0003	1	#Washer, Lock - EIT (#10)		301-5350	1	With Five Gauge Mtg. Holes	
	815-0203	1	#Screw, Machine - Round Head, Brass (#10-32 x 7/8")					

* - Parts Included in AC Control Wiring Harness.
 † - Parts Included in Engine Control Wiring Harness.
 # - Parts Included in Ground Terminal Assembly.

‡ - NOTE: For lamp replacement order 322-0178. Remove and discard plain red lens, install lens with legend from burned out light — lights snap in and out of panel.

£ - Part Number Not Available at Time of Publication.

GENERATOR ASSEMBLY

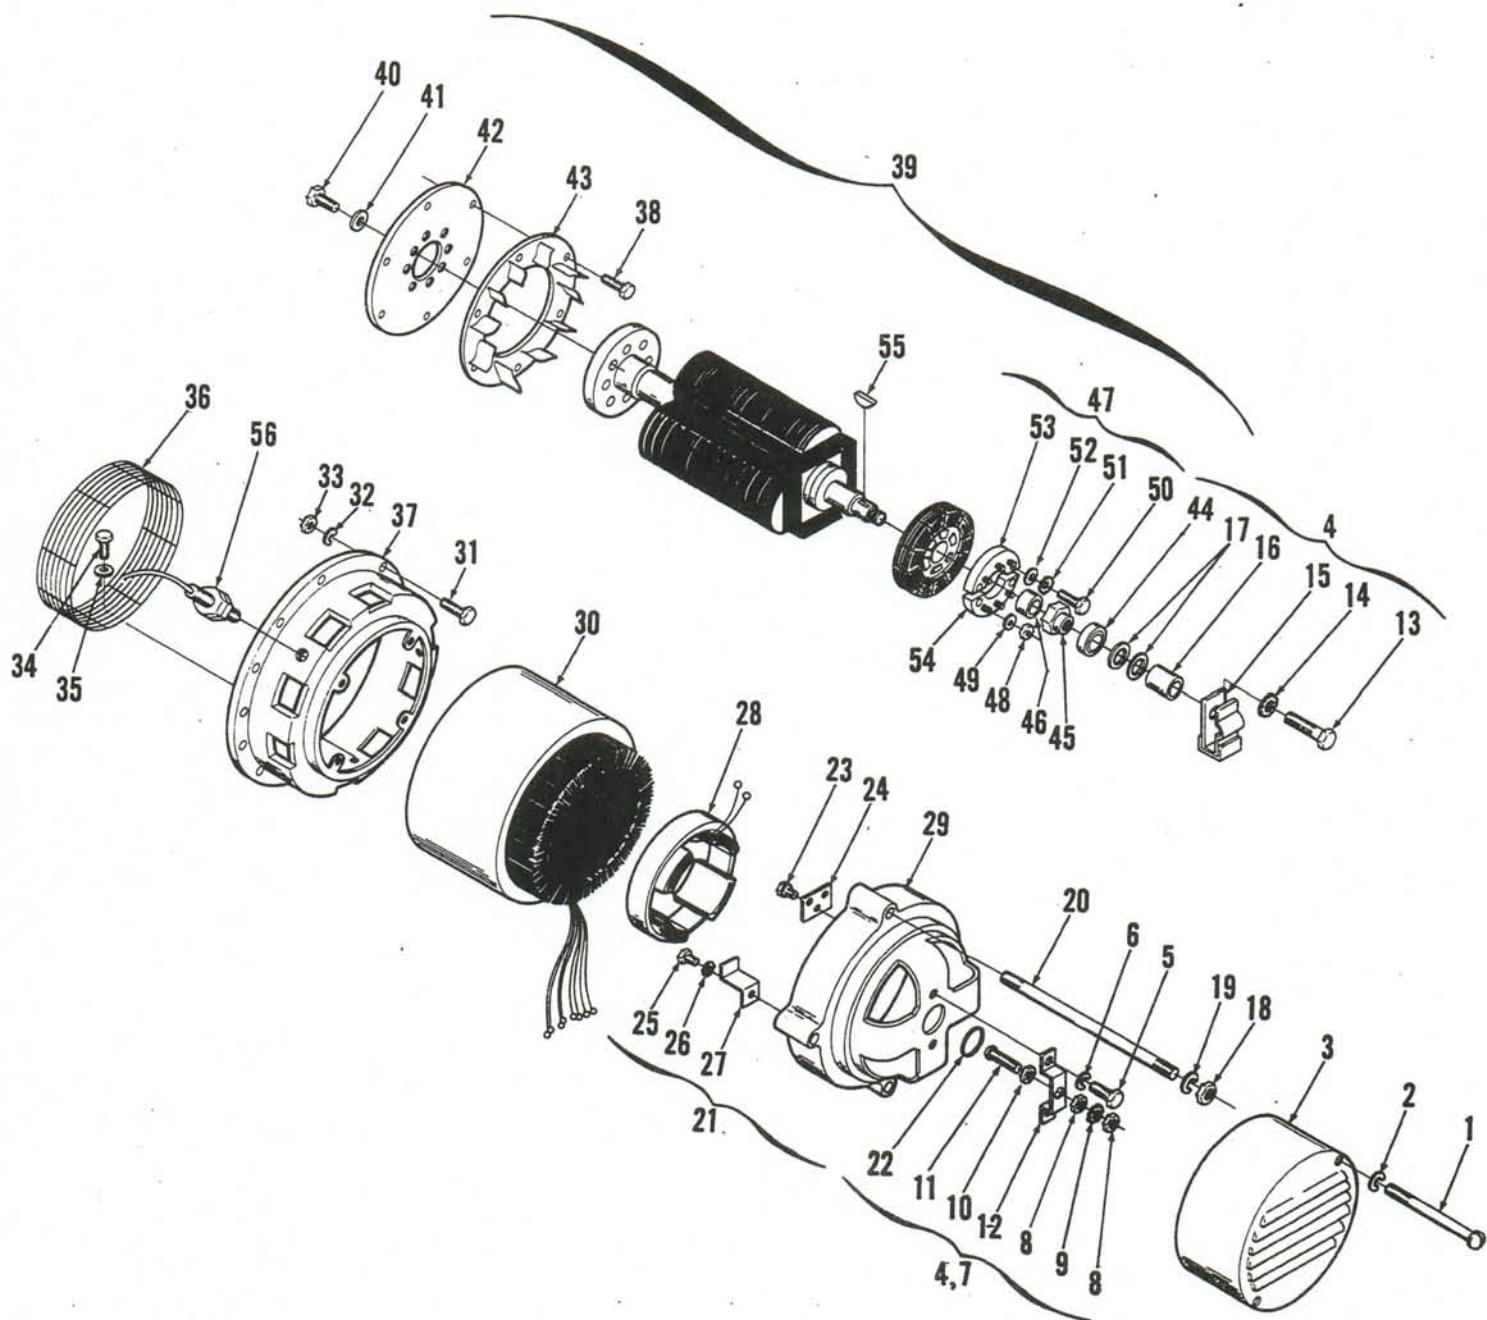

XG1144

GENERATOR ASSEMBLY

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	812-0167	2	Screw, Machine - Round Head Steel (1/4-20 x 6")	33	862-0011	12	Nut, Hex (3/8-16)
2	850-0040	2	Washer, Lock - Spring (1/4")	34	815-0220	6	Screw, Drive (#8 x 1/2")
3	234-0498	1	Cover, End Bell	35	526-0179	6	Washer, Flat (7/32" ID x 5/8" OD x 1/16" Thk)
4	REF	Switch Assembly, Overspeed (Includes Parts Marked +)		36	234-0594	1	Screen, Air
5	800-0003	2	+Screw, Cap - Hex Head (1/4-20 x 1/2")	37	231-0213	1	Adapter, Generator
6	850-0040	2	+Washer, Lock - Spring (1/4")	38	805-0018	8	Bolt, Hex Head-Slotted, Grade 8 (3/8-16 x 1")
7	150-1446	1	+Point Assembly (Includes Parts Marked @)	39	ROTOR ASSEMBLY, GENERATOR (Includes Parts Marked *)		
8	862-0001	2	@Nut, Hex (1/4-20)	201-2744		1	Code 3
9	853-0013	1	@Washer, Lock - ET (1/4")	201-2585		1	Code 9X
10	870-0250	1	@Nut, Insulating	201-2585		1	Code 15
11	150-0723	1	@Point, Contact	201-2744		1	‡Code 15 (Extended Stack)
12	150-1445	1	@Bracket, Mounting	201-2915		1	£Code 15 (Environmental Protected)
13	800-0051	1	+Screw, Cap - Hex Head (3/8-16 x 1-1/4")	201-2920		1	‡£Code 15 (Extended Stack and Environmental Protected)
14	856-0010	1	+Washer, Lock EIT (3/8")	40	805-0025	8	*Bolt, Hex Head - Slotted, Grade 8 (7/16-14 x 3/4")
15	150-0717	1	+Switch, Overspeed	41	526-0249	8	*Washer, Flat - Hardened (15/32" ID x 1" OD x 1/8" Thk)
16	150-1735	1	+Spacer	42	232-2675	1	*Disk, Drive
17	526-0029	2	+Washer, Flat (7/32" ID x 5/8" OD x 1/16" Thk)	43	205-0121	1	*Fan, Generator
18	862-0003	4	Nut, Hex (3/8-16)	44	510-0112	1	*Bearing, Ball
19	850-0050	4	Washer, Lock - Spring (3/8")	45	870-0284	1	*Nut, Self-locking, Hex (1-1/8 - 12)
20	STUD (Select as Required)			46	232-2398	1	*Spacer, Sleeve
	520-0799	4	3/8-16 UNC x 11-1/8" Lg	47	ROTOR ASSEMBLY, EXCITER (Includes Parts Marked †)		
	520-0800	4	3/8-16 UNC x 12-3/8" Lg	201-2152		1	Standard
	520-0801	4	3/8-16 UNC x 14" Lg	201-2298		1	£Environmental Protected
	520-0802	4	3/8-16 UNC x 15-3/4" Lg	48	870-0131	6	†Nut, Self-locking, Hex, with ET Lockwasher (#10-32)
21	END BELL ASSEMBLY (Includes Parts Marked #)			49	526-0008	6	†Washer, Flat (13/64" ID x 7/16" OD x 1/32" Thk)
	211-0263	1	Standard	50	813-0100	4	†Screw, Machine - Round Head (#10-32 x 1/2")
	211-0334	1	Environmental Protected	51	853-0008	4	†Washer, Lock - ET (#10)
22	509-0094	1	#Seal, "O" Ring	52	526-0008	4	†Washer, Flat (13/64" ID x 7/16" OD x 1/32" Thk)
23	815-1094	2	#Screw, Tapping - Hex Head With ET Lockwasher (#10-32 x 3/8")	53	358-0069	1	†Rectifier Assembly - Positive
24	232-2418	1	#Terminal Board	54	358-0070	1	†Rectifier Assembly - Negative
25	800-0004	4	#Screw, Cap - Hex Head (1/4-20 x 5/8")	55	515-0094	1	*Key, Woodruff (#6)
26	853-0013	4	#Washer, Lock - ET (1/4")	56	150-1648	1	Pickup, Magnetic (Used with Electronic Overspeed Control)
27	232-2584	4	#Clip, Retaining				
28	#STATOR, EXCITER						
	220-2010	1	Standard				
	220-2309	1	£Environmental Protected				
29	211-0256	1	#End Bell Generator				
30	STATOR, GENERATOR						
	220-2978	1	Code 3				
	220-2980	1	Code 9X				
	220-2424	1	Code 15				
	220-2426	1	‡Code 15 (Extended Stack)				
	220-3392	1	£Code 15 (Environmental Protected)				
	220-3394	1	‡£Code 15 (Extended Stack and Environmental Protected)				
31	800-0052	12	Screw, Cap - Hex Head (3/8-16 x 1-1/2")				
32	850-0050	12	Washer, Lock - Spring (3/8")				

+ - Parts Included in Overspeed Switch Assembly.

@ - Parts Included in Overspeed Point Assembly.

- Parts Included in End Bell Assembly.


* - Parts Included in Generator Rotor Assembly.

† - Parts Included in Exciter Rotor Assembly.

‡ - Extended Stack type assemblies that are used on sets having full power output on both single and three phase hookups. Both phases carry same kW and kVA ratings.

£ - Environmental protected assemblies or parts which are coated with epoxy and are for use in high humidity areas.

CHASSIS

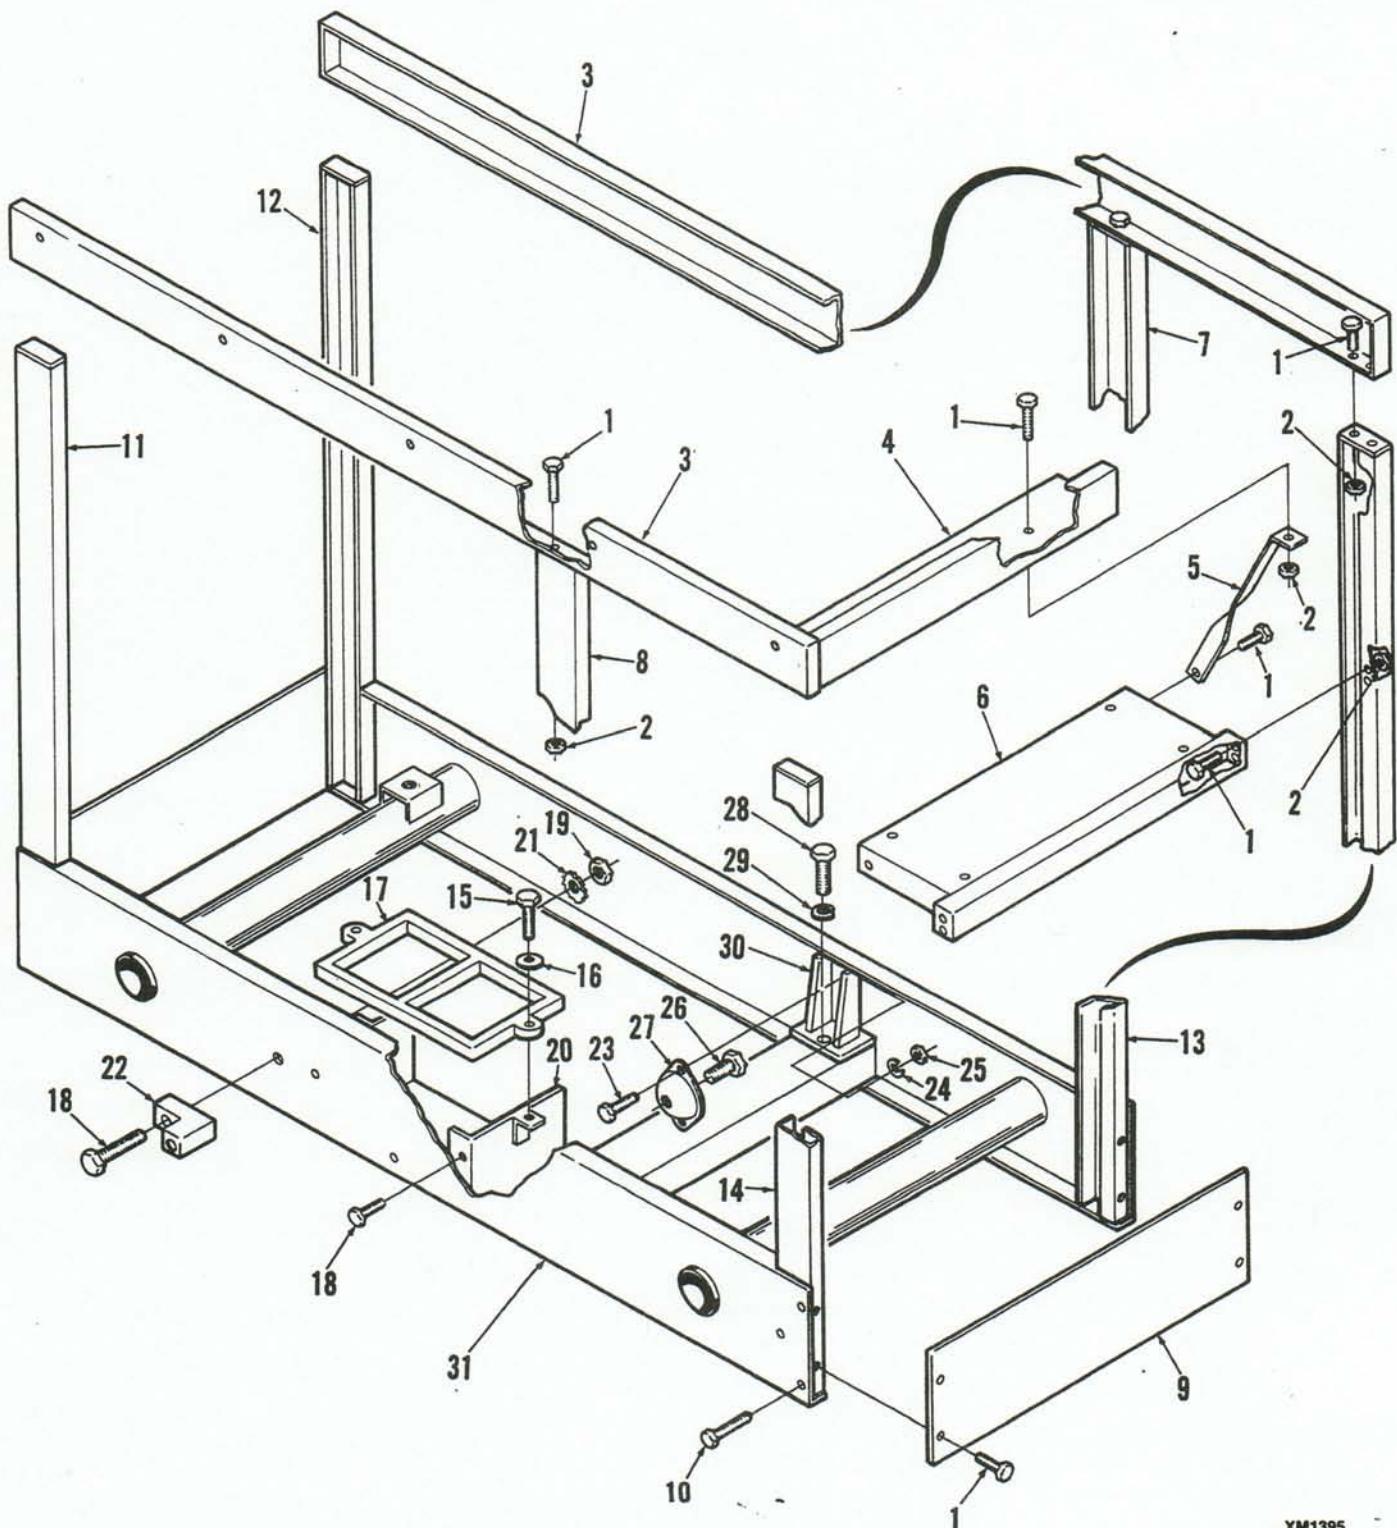

XM1395


CHASSIS

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	821-0010	36	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")	17	416-0612	1	Holddown, Battery
2	870-0212	28	Nut, Self-locking - Hex Washer Head (1/4-20)	18	821-0016	4	Screw, Self-locking - Hex Washer Head (5/16-18 x 3/4")
3	403-1349	2	Channel, Top	19	870-0257	4	Nut, Self-locking - Hex Washer Head (5/16-18)
4	403-1352	1	Channel, Rear-Top	20	416-0687	1	Tray, Battery
5	403-1574	2	Bracket, Support - Control	21	856-0008	1	Washer, Lock - EIT (5/16")
6	403-1400	1	Plate, Support - Control	22	332-1473	1	Terminal, Lug
7	403-1343	1	Channel, Center - Left Side	23	800-0090	4	Screw, Cap - Hex Head (1/2-13 x 1")
8	403-1342	1	Channel, Center - Right Side	24	850-0060	4	Washer, Lock - Spring (1/2")
9	403-1371	2	Plate, Cover - End	25	862-0016	4	Nut, Hex (1/2-13)
10	821-0029	12	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")	26	800-0553	2	Screw, Cap - Hex Head, Grade 8 (1/2-13 x 1")
11	403-1346	1	Channel, Front - Right Side	27	402-0466	2	Mount, Vibration
12	403-1347	1	Channel, Front - Left Side	28	800-0071	6	Screw, Cap - Hex Head (7/16-14 x 1")
13	403-1344	1	Channel, Rear - Left Side	29	850-0055	6	Washer, Lock - Spring (7/16")
14	403-1245	1	Channel, Rear - Right Side	30	403-1355	2	Support, Generator
15	800-0035	2	Screw, Cap - Hex Head (5/16-18 x 2-1/2")	31	403-1330	1	Chassis
16	526-0115	2	Washer, Flat (11/32" ID x 11/16" OD x 1/16" Thk)				

OPTIONAL EQUIPMENT SECTION

This section contains parts listing of factory installed options.
NOTE: options may not be applicable to all models; for field installations, additional parts are usually required.

**OPTIONAL
CIRCUIT BREAKER**

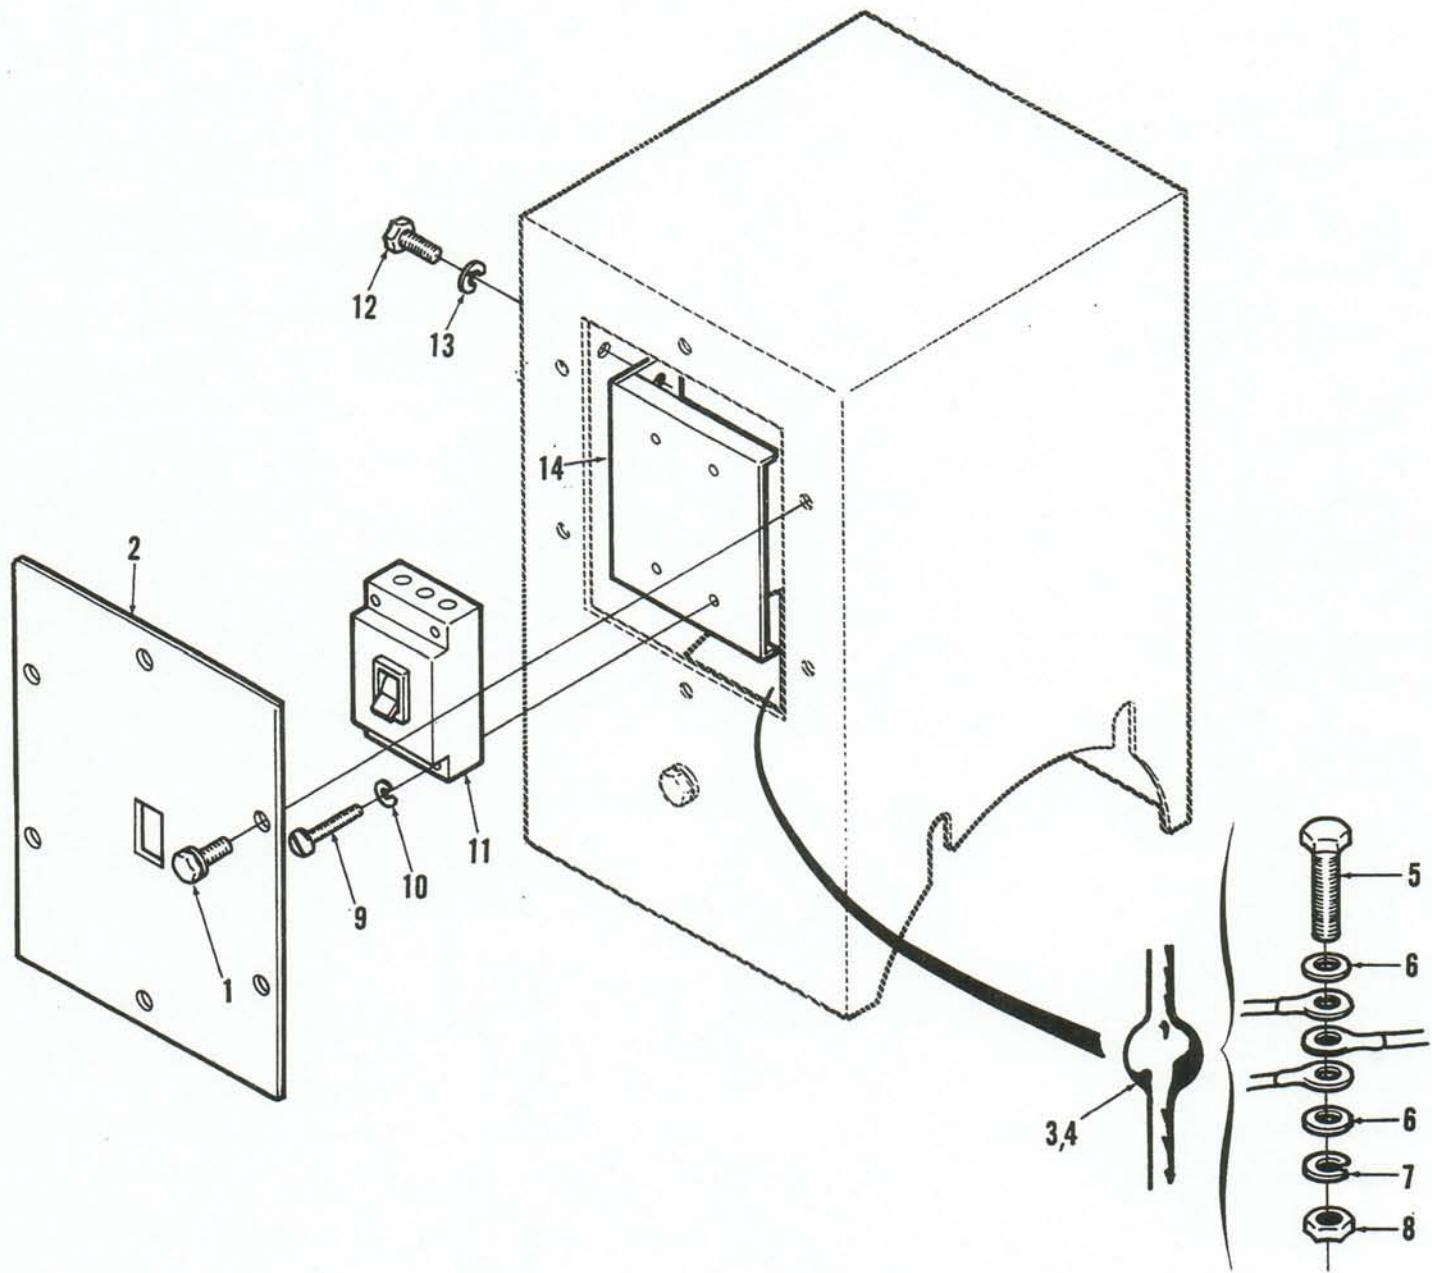


XES1320

**OPTIONAL
CIRCUIT BREAKER**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	815-0350	6	Screw, Tapping - Hex Washer Head (#10-32 x 3/8)	11	CIRCUIT BREAKER (SELECT AS REQUIRED)		
2	301-4885	1	Panel, Cover - Circuit Breaker	320-0344	1	175 AMP, 1 PH, 120/240 VAC	
3	SLEEVING, INSULATION — SHRINKABLE (Select as Required)		898-0863 3/4" ID	320-0346	1	150 AMP, 3 PH, 120/208 - 120/240 VAC	
	898-0865 1" ID		898-0875 1-1/2" ID	320-0347	1	175 AMP, 3 PH, 120/208 - 120/240 VAC	
	898-0869 2" ID		898-0974 3/4" ID	320-0348	1	200 AMP, 3 PH, 120/208 - 120/240 VAC	
4	SLEEVING, INSULATION — FIBER GLASS (Select as Required)		898-0976 1" ID	320-0349	1	225 AMP, 3 PH, 120/208 VAC	
	898-0974 3/4" ID		800-0028 5	320-0359	1	225 AMP, 1 PH, 120/240 VAC	
	898-0976 1" ID		Screw, Cap - Hex Head (5/16-18 x 1")	320-0379	1	90 AMP, 3 PH, 200/346 - 220/380 - 277/480 VAC	
5	526-0022	10	Washer, Flat (21/64" ID x 9/16" OD x 1/16" Thk)	320-0380	1	100 AMP, 3 PH, 200/346 - 220/380 - 277/480 VAC	
7	850-0045	5	Washer, Lock - Spring (5/16")	320-0384	1	60 AMP, 3 PH, 200/346 - 220/380 VAC	
8	862-0015	5	Nut, Hex (5/16-18)	320-0411	1	90 AMP, 3 PH, 120/240 VAC	
9	812-0094	4	Screw, Machine - Round Head (#8-32 x 3-5/8")	320-0412	1	100 AMP, 3 PH, 120/208 VAC	
10	850-0025	4	Washer, Lock - Spring (#8)	320-0413	1	50 AMP, 3 PH, 277/480 VAC	
			320-0414	1	70 AMP, 3 PH, 277/480 VAC		
			320-0415	1	40 AMP, 3 PH, 347/600 VAC		
			320-0416	1	60 AMP, 3 PH, 347/600 VAC		
			320-0417	1	70 AMP, 3 PH, 347/600 VAC		
			320-0418	1	90 AMP, 3 PH, 347/600 VAC		
			320-0419	1	125 AMP, 3 PH, 200/346 - 220/380 VAC		
			320-0425	1	150 AMP, 3 PH, 200/346 VAC		
			320-0726	1	150 AMP, 3 PH, 120/208 - 120/240 VAC		
			12	320-0823	1	50 AMP, 3 PH, 277/480 VAC	
				800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")	
			13	850-0040	2	Washer, Lock - Spring (1/4")	
			14	301-3197	1	Bracket, Mounting - Circuit Breaker	

**OPTIONAL
SET CONTROL WITH MULTI-FAULT
LIGHTS AND AC METERS**

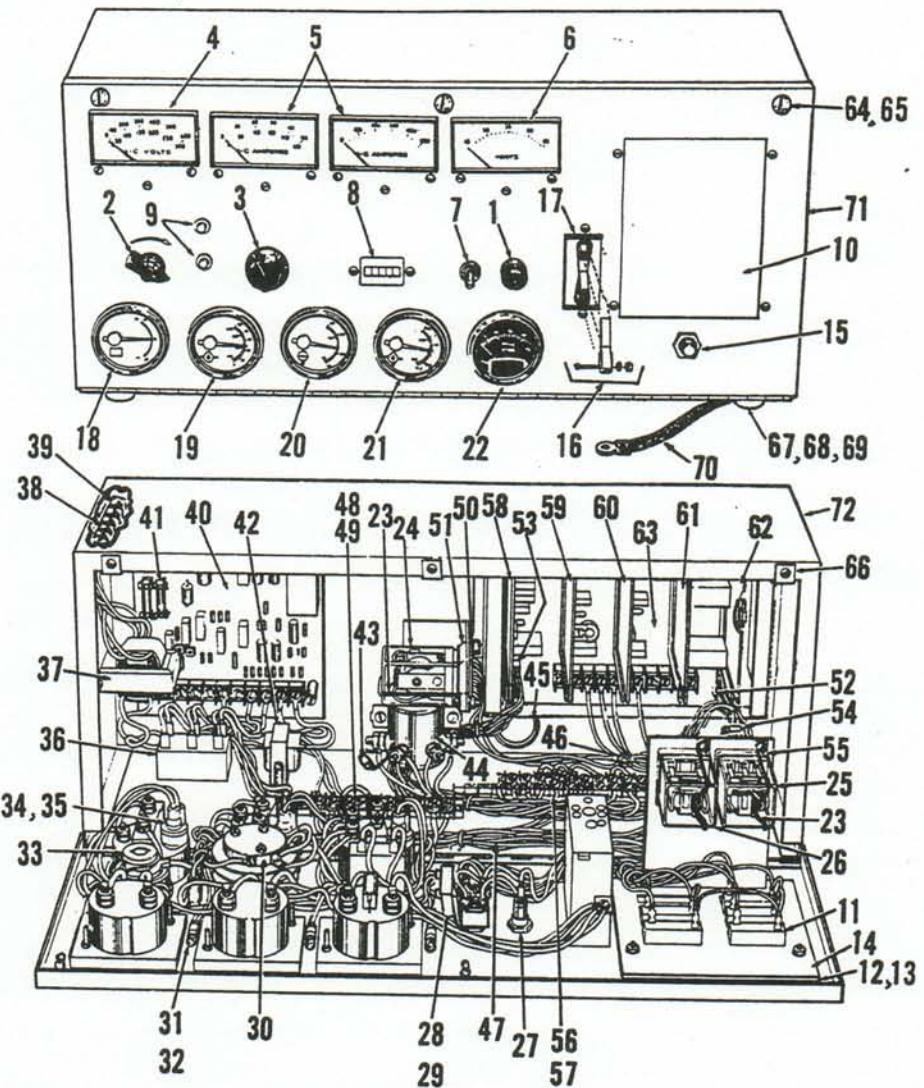


SC1314

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	321-0147	1	Fuse, Cartridge (5 AMP)	10	ASSEMBLY — SYSTEM FAULT STATUS (Includes Parts Marked ‡)		
2	303-0076	1	Knob, Pointer	322-0199		1	Five Fault Lights
3	303-0032	1	Knob	322-0295		1	Six Fault Lights
4	VOLTMETER						ATTACHING HARDWARE FOR ASSEMBLY
			SINGLE SCALE	812-0079		4	‡Screw, Machine - Round Head (#8-32 x 1/2")
	302-1175	1	0-300 Volt, Code 3, 53				‡Nut, Self-Locking, Hex With ET Lockwasher (#8-32)
	302-1300	1	0-750 Volt, Code 9X	870-0221		4	
			DUAL SCALE				
	302-1148	1	0-300, 0-600 Volt, Code 15, 515				
5	AMMETER			11	322-0201	6	‡Light, Indicator (12 VDC)
			SINGLE SCALE	12	322-0200	1	‡Diffuser, Light
	302-1176	2	0-200 AMP, Code 3, 53; Optional Code 15, 515	13	‡DISPLAY — FAULT LEGENDS		
				301-4202		1	Five Fault Legends
	302-1298	1	0-50 AMP, Code 9X	301-6258		1	Six Fault Legends
			DUAL SCALE	14	301-4666	1	‡Bracket - Panel Mounting
	302-1147	1	0-75, 0-150 AMP, Code 15, 515	15	308-0410	1	Switch, Push - Display Reset
6	METER, FREQUENCY			16	320-0307	1	Lock - Circuit Breaker Handle (Penn State Sets)
	302-1153	1	60 Hertz				ATTACHING HARDWARE FOR LOCK
	302-1399	1	50 Hertz	815-0203		1	Screw, Machine - Round Head (#10-32 x 7/8")
7	SWITCH, TOGGLE — SELECTOR (S15)						
	308-0138	1	SPDT - 3 Position				
	308-0327	1	SPDT (Penn State Sets)				
8	302-0885	1	Meter, Time Totalizing	854-0010		1	Washer, Lock - IT (#10)
9	322-0211	2	Light, Indicator (High/Low Scale)	871-0010		1	Nut, Hex (#10-32)

**OPTIONAL
SET CONTROL WITH MULTI FAULT
LIGHTS AND AC METERS**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
17	320-0431	1	Circuit Breaker		526-0062	2	#Washer, Flat - Brass (13/64" ID x 1/2" OD x 1/16" Thk)
	ATTACHING HARDWARE FOR CIRCUIT BREAKER				853-0008	1	#Washer, Lock - ET (#10)
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")		856-0003	1	#Washer, Lock - EIT (#10)
	850-0020	2	Washer, Lock - Spring (#6)		815-0203	1	#Screw, Machine - Round Head, Brass (#10-32 x 7/8")
	815-0203	1	Screw, Machine - Round Head, Brass (#10-32 x 7/8")				
	871-0010	1	Nut, Hex - Brass (#10-32)	47	HARNESS, WIRING — AC CONTROL (Includes Parts Marked *)		
	853-0008	1	Washer, Lock - ET (#10)		338-1152	1	Code 15, 515, 9X
	526-0049	1	Washer, Flat - Brass (13/64" ID x 7/16" OD x 132" Thk)		338-1259	1	Code 3, 53; Also 15 With Six Fault Lights
					48	332-0607	*Block, Terminal - 12 Place (TB21)
18	302-1154	1	Ammeter (30-0-30)		49	332-2115	Strip, Marker (#61 Through 71)
19	193-0243	1	Gauge, Oil Pressure (0-100 PSI)		50	350-1201	*Resistor With Terminals (Code 15, 515)
20	193-0245	1	Gauge, Water Temperature (100-280 F)		51	323-0765	*Socket, Relay (Code 15, 515)
21	193-0248	1	Gauge, Oil Temperature (150-350 F)		52	338-1151	Harness, Wiring — Engine Control (Includes Parts Marked †)
22	302-0726	1	Tachometer		53	323-0984	†Connector, Plug (12 Pin)
23	307-1157	3	Spring, Holdown - Relay		54	357-0040	†Diode With Terminals & Leads
24	307-1061	1	Relay - 240 VAC (K21)		55	323-0765	†Socket, Relay
25	307-1058	1	Relay - 12 VDC (K12)		56	332-1005	†Block, Terminal (20 Place)
26	307-1061	1	Relay - 240 VAC (K14)		57	332-1559	Strip, Marker - #21 Through 40
27	321-0217	1	Holder, Fuse		58	300-1585	Control, Start Disconnect
28	333-0194	1	Flasher, DC (Used on Six Fault Light System)		59	300-1586	Control, Over Speed
	ATTACHING HARDWARE FOR FLASHER				60	300-1587	Control, Engine Monitor
	813-0105	1	Screw, Machine - Round Head (#10-32 x 1")		61	300-1588	Control, Shutdown
					62	300-1589	Control, Start-Stop
29	301-6053	1	Bracket, Mounting - Flasher		63	300-1590	Chassis - Engine Controls (Includes Parts Marked Δ)
30	308-0284	1	Switch, Rotary - Selector		332-1917	5	△Plug, Keying
31	322-0203	3	Lamp, Incandescent (14 VDC, 3 CP, T-1-3/4)		301-3880	2	△Bracket, Module Cover
32	322-0213	3	Lampholder		323-0983	2	△Connector, Receptacle
	ATTACHING HARDWARE FOR LAMPHOLDERS				332-1887	5	△Housing, PC Board Terminals
	812-0029	3	Screw, Machine - Round Head (#4-40 x 3/8")		332-1909	1	△Block, Terminal
	853-0001	3	Washer, Lock - ET (#4)		308-0324	2	△Switch, Slide
	860-0003	3	Nut, Hex (#4-40)		356-0068	2	△Capacitor (180 Mfd, 40 Volt)
					301-4830	1	△Cover
33	303-0170	1	Rheostat - 35K Ohm, 25 Watt (R21)		64	406-0334	— * —
34	322-0004	4	Lamp, Incandescent (14 VDC, 1.4 CP, T-3-1/4)		65	406-0333	Clip, Retaining - Turnbutton Fastener
35	322-0210	4	Lampholder (Fits Gauges)		66	406-0332	Stud, Turnbutton Fastener
36	305-0675	1	Rectifier, Bridge		67	800-0045	Receptacle, Turnbutton Fastener
	ATTACHING PARTS FOR RECTIFIER				68	850-0045	Screw, Cap - Hex Head (5/16-18 x 3/8")
	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")		69	402-0070	Washer, Lock - Spring (5/16")
	850-0020	2	Washer, Lock - Spring (#6)		70	337-0049	Dampener, Vibration
37	315-0431	1	Transformer, Voltage				Strap, Ground
	ATTACHING PARTS FOR TRANSFORMER				70	337-0049	ATTACHING PARTS FOR STRAP
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")		800-0045	1	Screw, Cap - Hex Head (5/16-18 x 3/8")
	853-0003	2	Washer, Lock - ET (#6)		850-0045	1	Washer, Lock - Spring (5/16")
					856-0008	2	Washer, Lock - EIT (5/16")
					862-0015	1	Nut, Hex (5/16-18)
38	332-0604	1	Block, Terminal - TB22C (5 Place)		71	PANEL, CONTROL — WITH HINGE & FLOOR PLATE	— * —
39	332-2116	1	Strip, Marker (H2 Through H6)			CODE 3, 53	
40	332-1956	1	Regulator, Voltage (Includes Fuses)		301-5702	1	With Three Gauge, Four Meter Mtg. Holes
41	321-0204	2	Fuse, Cartridge (1/4 AMP)		301-6587	1	With Four Gauge, Four Meter Mtg. Holes
42	315-0384	1	Reactor		£	1	With Five Gauge, Four Meter Mtg. Holes
	ATTACHING PARTS FOR REACTOR						CODE 15, 515, 9X
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")		301-5338	1	With Three Gauge and Three Meter Mtg. Holes
	853-0003	2	Washer, Lock - ET (#6)		£	1	With Four Gauge and Three Meter Mtg. Holes
43	357-0026	1	Diode With Terminals		£	1	With Five Gauge and Three Meter Mtg. Holes
44	307-1500	1	Relay, Solenoid (K13)				
45	508-0001	4	Grommet		72	301-5350	Box, Control
46	GROUND TERMINAL ASSEMBLY (Includes Parts Marked #)						
	871-0010	2	#Nut, Hex - Brass (#10-32)				‡ - Parts Included in System Fault Status Assembly.
	850-0030	1	#Washer, Lock - Spring (#10-32 x 3/8")				* - Parts Included in AC Control Wiring Harness.
							† - Parts Included in Engine Control Wiring Harness.


**OPTIONAL
AIR CLEANER
(WITH HEATER SYSTEM)**

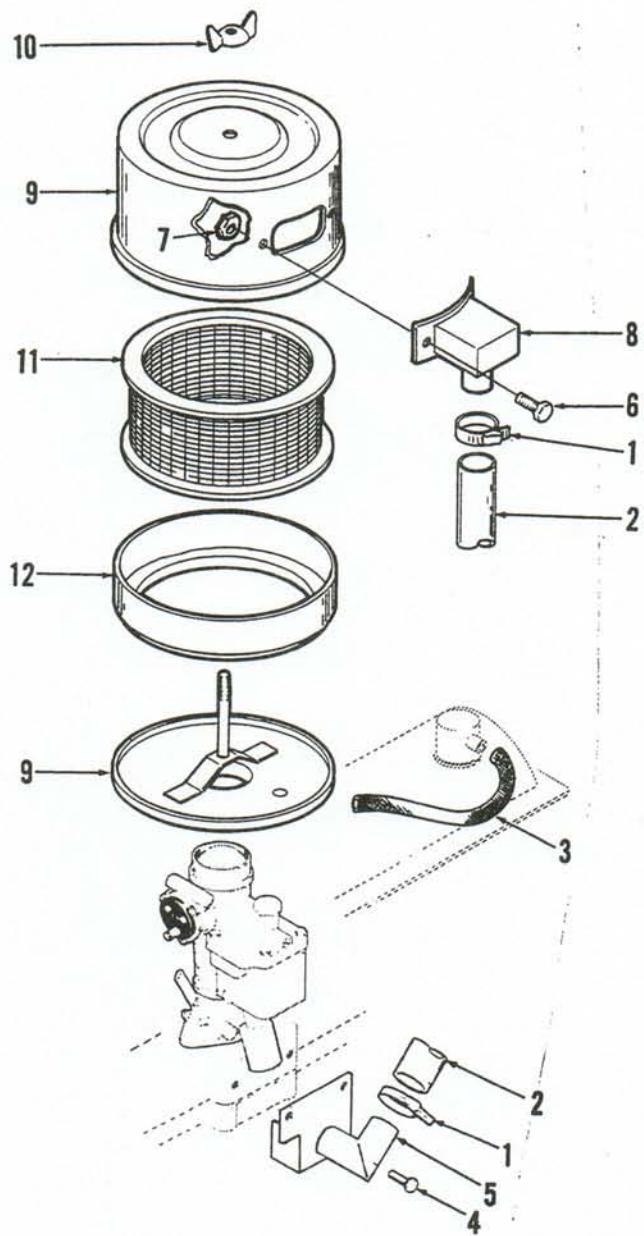

XFS1425

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0365	2	Clamp, Hose
2	503-0879	1	Hose, Rubber (2" ID x 16")
3	503-0891	1	Hose, Rubber - Breather (5/8" ID x 14" Lg)
4	800-0028	2	Screw, Self-locking - Hex Head (5/16-18 x 1")
5	140-1568	1	Plenum, Air Heater
6	821-0008	2	Screw, Self-locking - Hex Washer Head (1/4-20 x 5/16)
7	870-0212	2	Nut, Self-locking - Hex Washer Head (1/4-20)
8	140-1431	1	Inlet, Air Heater
9	140-1584	1	Air Cleaner (Includes Nut and Element)
10	865-0020	1	Nut, Wing (1/4-20)
11	140-1089	1	Element, Air Cleaner
12	140-1401	1	Retainer - Air Heater


OPTIONAL
CONTROL HEATER

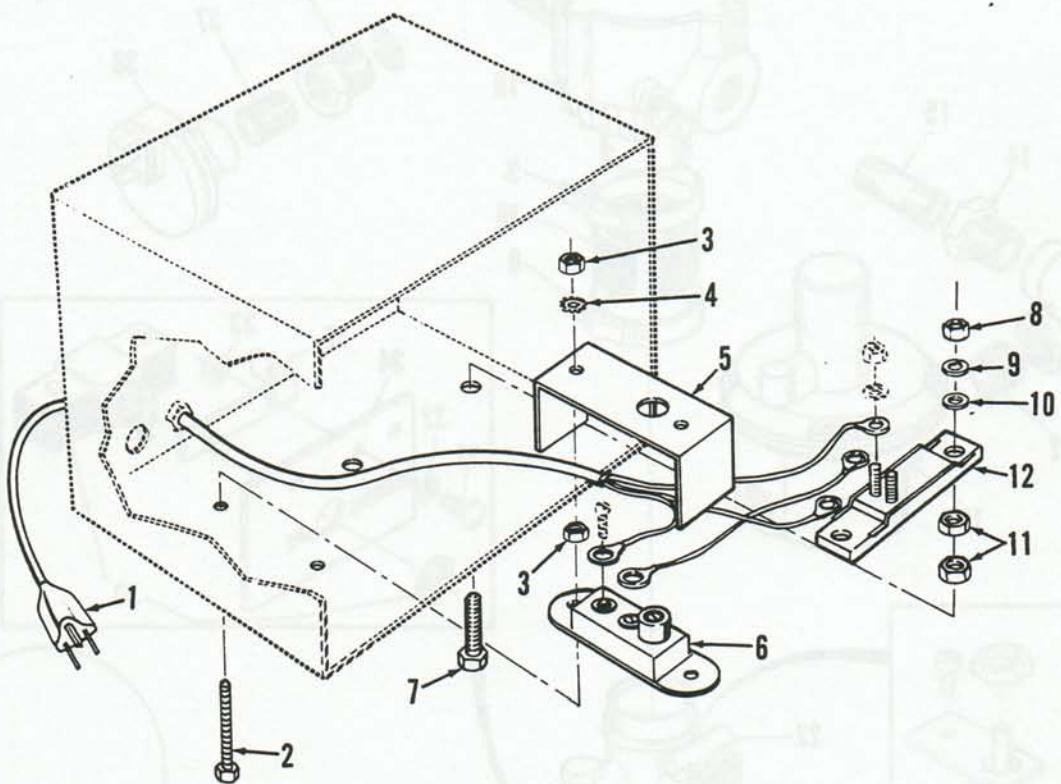

SC-1156

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	335-0110	1	Cable, Electrical (3 Wire)
2	812-0090	2	Screw, Machine - Round Head (#6-32 x 2-1/4")
3	860-0006	4	Nut, Hex (#6-32)
4	856-0001	2	Washer, Lock - EIT (#6)
5	301-1886	1	Cover, Thermostat
6	309-0128	1	Thermostat - Adjustable
7	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")
8	862-0001	2	Nut, Hex (1/4-20)
9	850-0040	2	Washer, Lock - Spring (1/4")
10	526-0052	2	Washer, Flat (17/64" ID x 9/16" OD x 1/16" Thk)
11	862-0015	4	Nut, Hex (5/16-18) - Used As Spacers
12	333-0151	1	Heater - 75 Watt, 120 VAC; 300 Watt, 240 VAC


**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & NAT. GAS)**

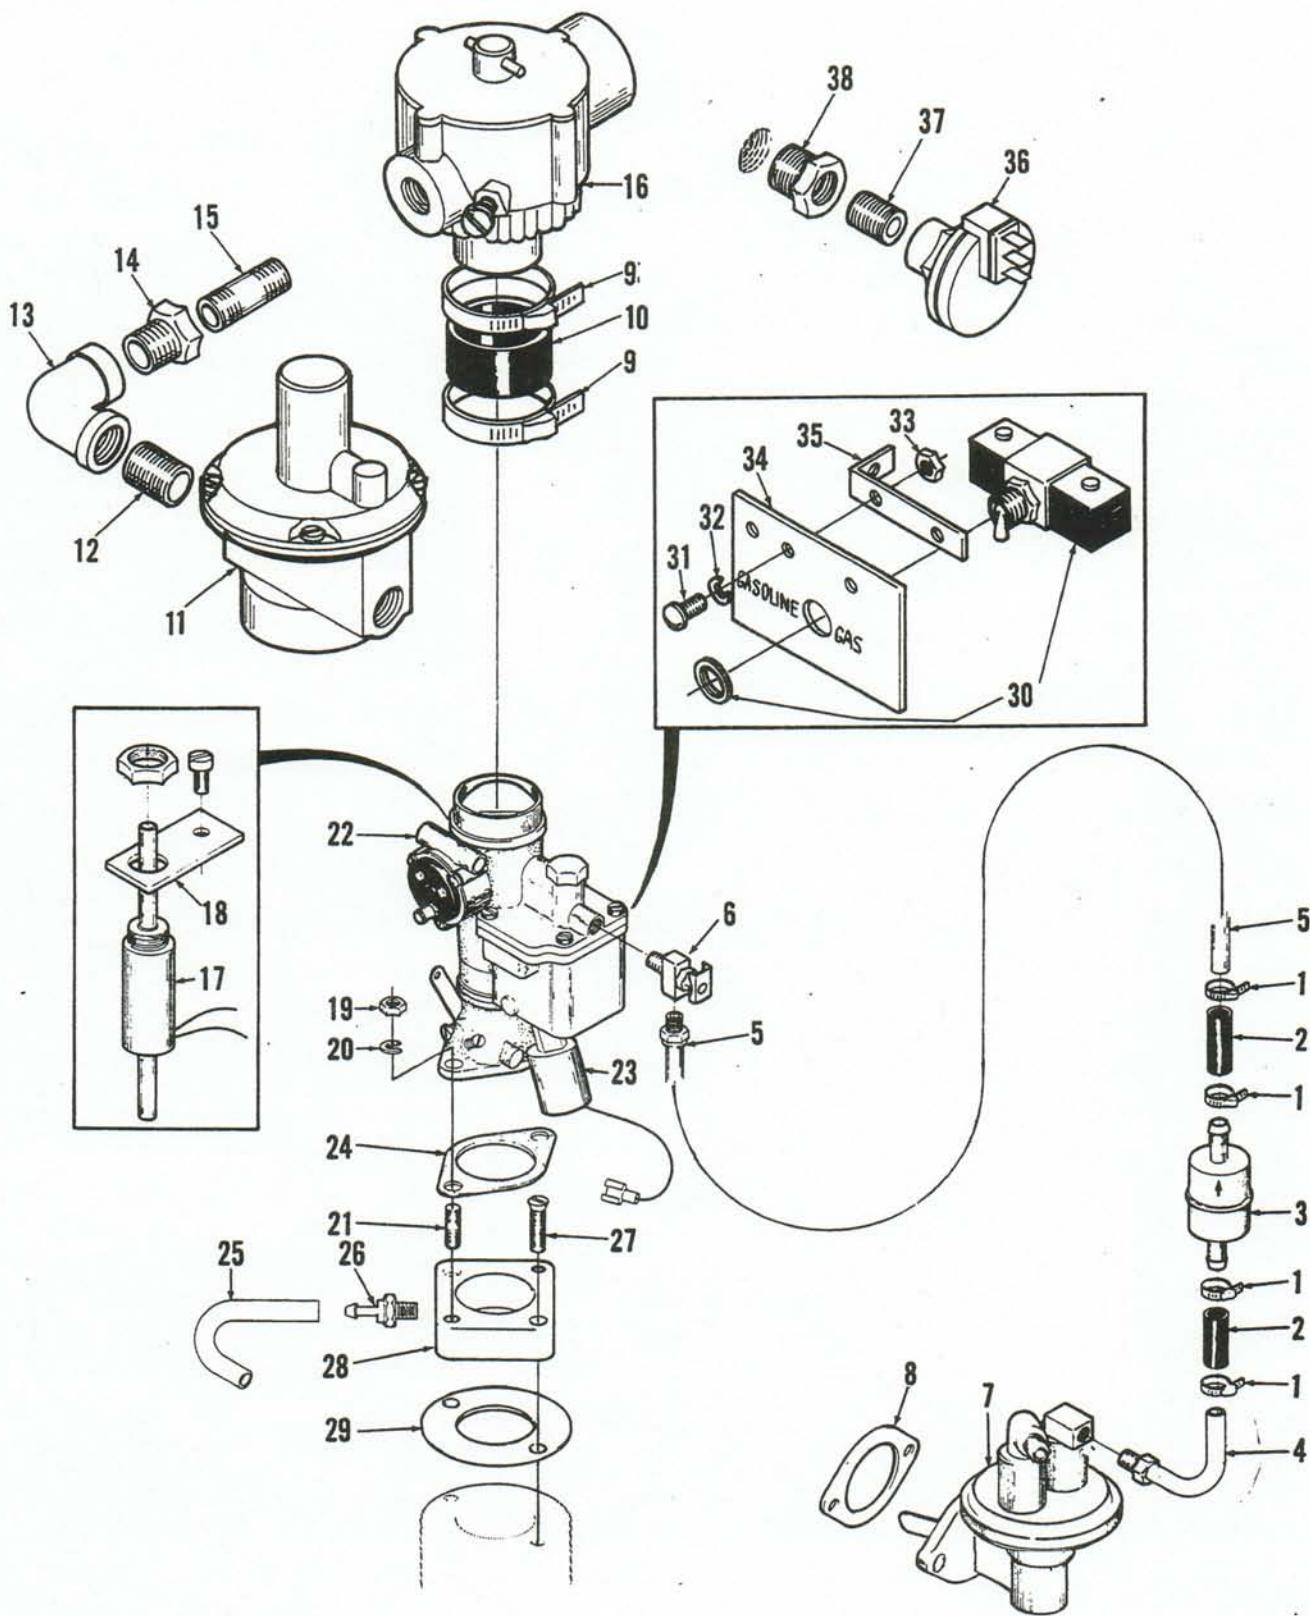

**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & NAT. GAS)**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0685	4	Clamp, Hose	20	850-0050	2	Washer, Lock - Spring (3/8")
2	503-0883	2	Hose, Rubber (5/16" ID x 2" Lg)	21	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
3	149-1569	1	Filter, Fuel	22	141-0854	1	Carburetor, Gasoline (Includes Fuel Shutoff Solenoid)
4	149-1573	1	Line, Fuel	23	141-0850	1	Solenoid - 12 VDC (Fuel Shutoff)
5	149-1558	1	Line, Fuel	24	154-0133	1	Gasket - Carburetor
6	504-0085	1	Valve, Shutoff (1/8" NPT x 5/16" Tube)	25	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
7	149-1568	1	Pump, Fuel	26	502-0582	1	Adapter, Hose (1/8-22 NPT x 5/16" Hose)
8	149-0736	1	Gasket - Fuel Pump	27	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
9	503-0465	2	Clamp, Hose	28	148-0800	1	Adapter - Carburetor To Manifold
10	503-0542	1	Hose, Rubber (1-1/4" ID x 2-1/4" Lg)	29	148-0775	1	Gasket
11	148-0597	1	Regulator, Pressure - Gas (3/4" NPT)	30	308-0005	1	Switch, Toggle
12	505-0102	1	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	31	813-0100	2	Screw, Machine - Round Head (#10-32 x 1/2")
13	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)	32	850-0030	2	Washer, Lock - Spring (#10)
14	505-0021	1	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	33	871-0010	2	Nut, Hex (#10-32)
15	505-0100	1	Nipple, Pipe - Close (1/2" NPT x 1-1/8" Lg)	34	308-0150	1	Plate, Mounting - Switch
16	148-0691	1	Mixer, Gas	35	306-0155	1	Bracket, Mounting
17	307-2017	1	Solenoid - 12 VDC (Choke Closing)	36	148-0367	1	Switch, Control - Vacuum (12 VDC)
18	307-2014	1	Plate, Mounting - Solenoid	37	502-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
19	104-0091	2	Nut, Hex (3/8-24)	38	505-0016	1	Bushing, Reducer - Hex (3/8" NPT x 1/8" NPT)


**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & LPG LIQUID)**

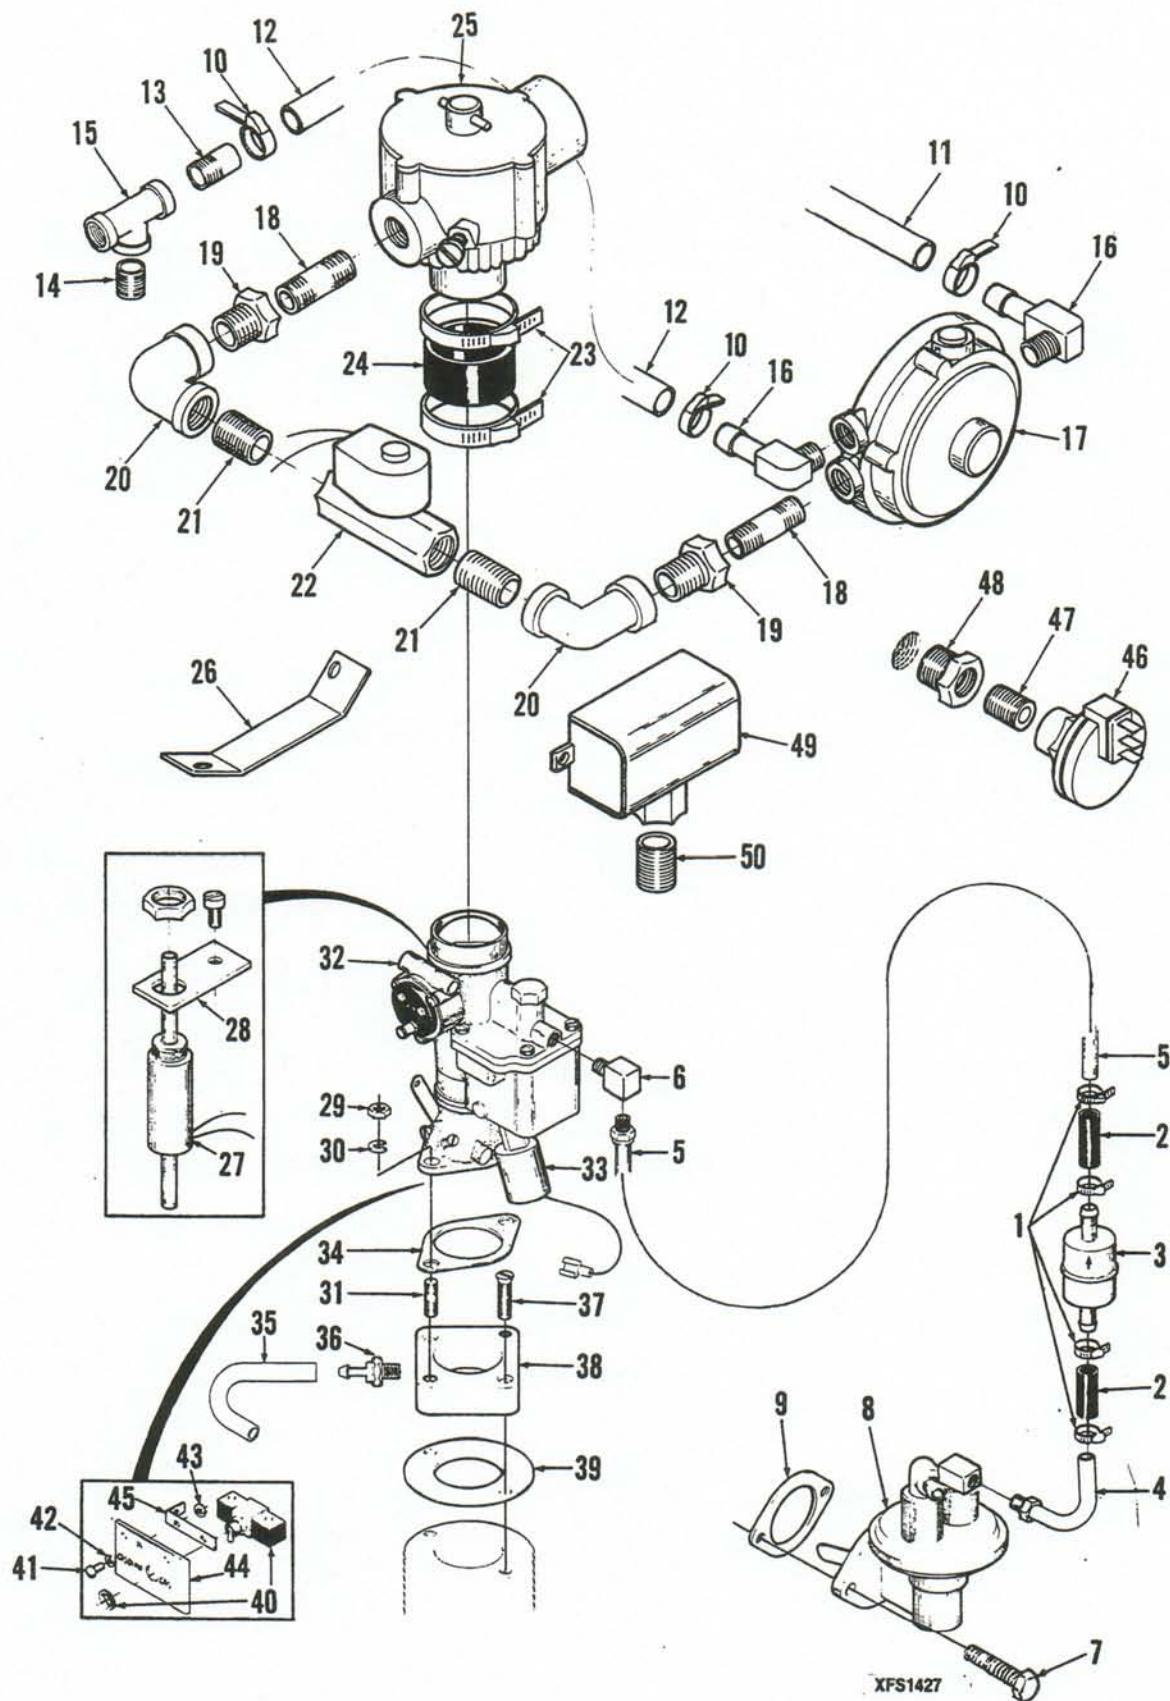

**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & LPG LIQUID)**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0685	4	Clamp, Hose	26	148-0809	1	Bracket, Support - Carburetor To Regulator
2	503-0883	2	Hose, Rubber (5/16" ID x 2" Lg)	27	307-2017	1	Solenoid - 12 VDC (Choke Closing)
3	149-1569	1	Filter, Fuel	28	307-2014	1	Plate, Mounting - Solenoid
4	149-1573	1	Line, Fuel	29	104-0091	2	Nut, Hex (3/8-24)
5	149-1558	1	Line, Fuel	30	850-0050	2	Washer, Lock - Spring (3/8")
6	502-0004	1	Elbow, Pipe - 90 DEG (1/8" NPT x 5/16" Tube)	31	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
7	821-0021	2	Screw, Self-locking - Hex Washer Head (5/16-18 x 1")	32	141-0854	1	Carburetor, Gasoline (Includes Fuel Shutoff Solenoid)
8	149-1568	1	Pump, Fuel	33	141-0850	1	Solenoid - 12 VDC (Fuel Shutoff)
9	149-0736	1	Gasket - Fuel Pump	34	154-0133	1	Gasket - Carburetor
10	503-0183	4	Clamp, Hose	35	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
11	503-1169	1	Hose, Rubber (5/8" ID x 48" Lg)	36	502-0582	1	Adapter, Hose (1/8-22 NPT x 5/16" Hose)
12	503-0833	1	Hose, Rubber (5/8" ID x 24" Lg)	37	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
13	505-0135	1	Nipple, Pipe - Half (3/8" NPT x 1-1/2" Lg)	38	148-0800	1	Adapter - Carburetor To Manifold
14	505-0101	1	Nipple, Pipe - Close (3/8" NPT x 1" Lg)	39	148-0775	1	Gasket
15	505-0060	1	Tee, Pipe (3/8" NPT)	40	308-0005	1	Switch, Toggle
16	502-0587	2	Adapter - Hose To Pipe, 90 DEG (3/4" NPT x 5/8" Hose)	41	813-0100	2	Screw, Machine - Round Head (#10-32 x 1/2")
17	148-0737	1	Converter - Regulator, LPG (1/2" NPT)	42	850-0030	2	Washer, Lock - Spring
18	505-0100	2	Nipple, Pipe - Close (1/2" NPT x 1" Lg)	43	871-0010	2	Nut, Hex (#10-32)
19	505-0021	2	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	44	308-0150	1	Plate, Mounting - Switch
20	505-0132	2	Elbow, Pipe - 90 DEG (3/4" NPT)	45	306-0155	1	Bracket, Mounting
21	505-0102	2	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	46	148-0367	1	Switch, Control - Vacuum (12 VDC)
22	307-0312	1	Valve, Solenoid - 12 VDC (3/4" NPT)	47	502-0098	1	Nipple Pipe - Close (1/8" NPT x 3/4" Lg)
23	503-0465	2	Clamp, Hose	48	505-0016	1	Bushing Reducer - Hex (3/8" NPT x 1/8" NPT)
24	503-0542	1	Hose, Rubber (1-1/4" ID x 2-1/4" Lg)	49	148-0627	1	Switch, Pressure - 12 VDC (For Automatic Fuel Switching Systems)
25	148-0691	1	Mixer, Gas	50	505-0097	1	Nipple, Pipe - Close (1/4" NPT x 7/8")

**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & LPG VAPOR)**

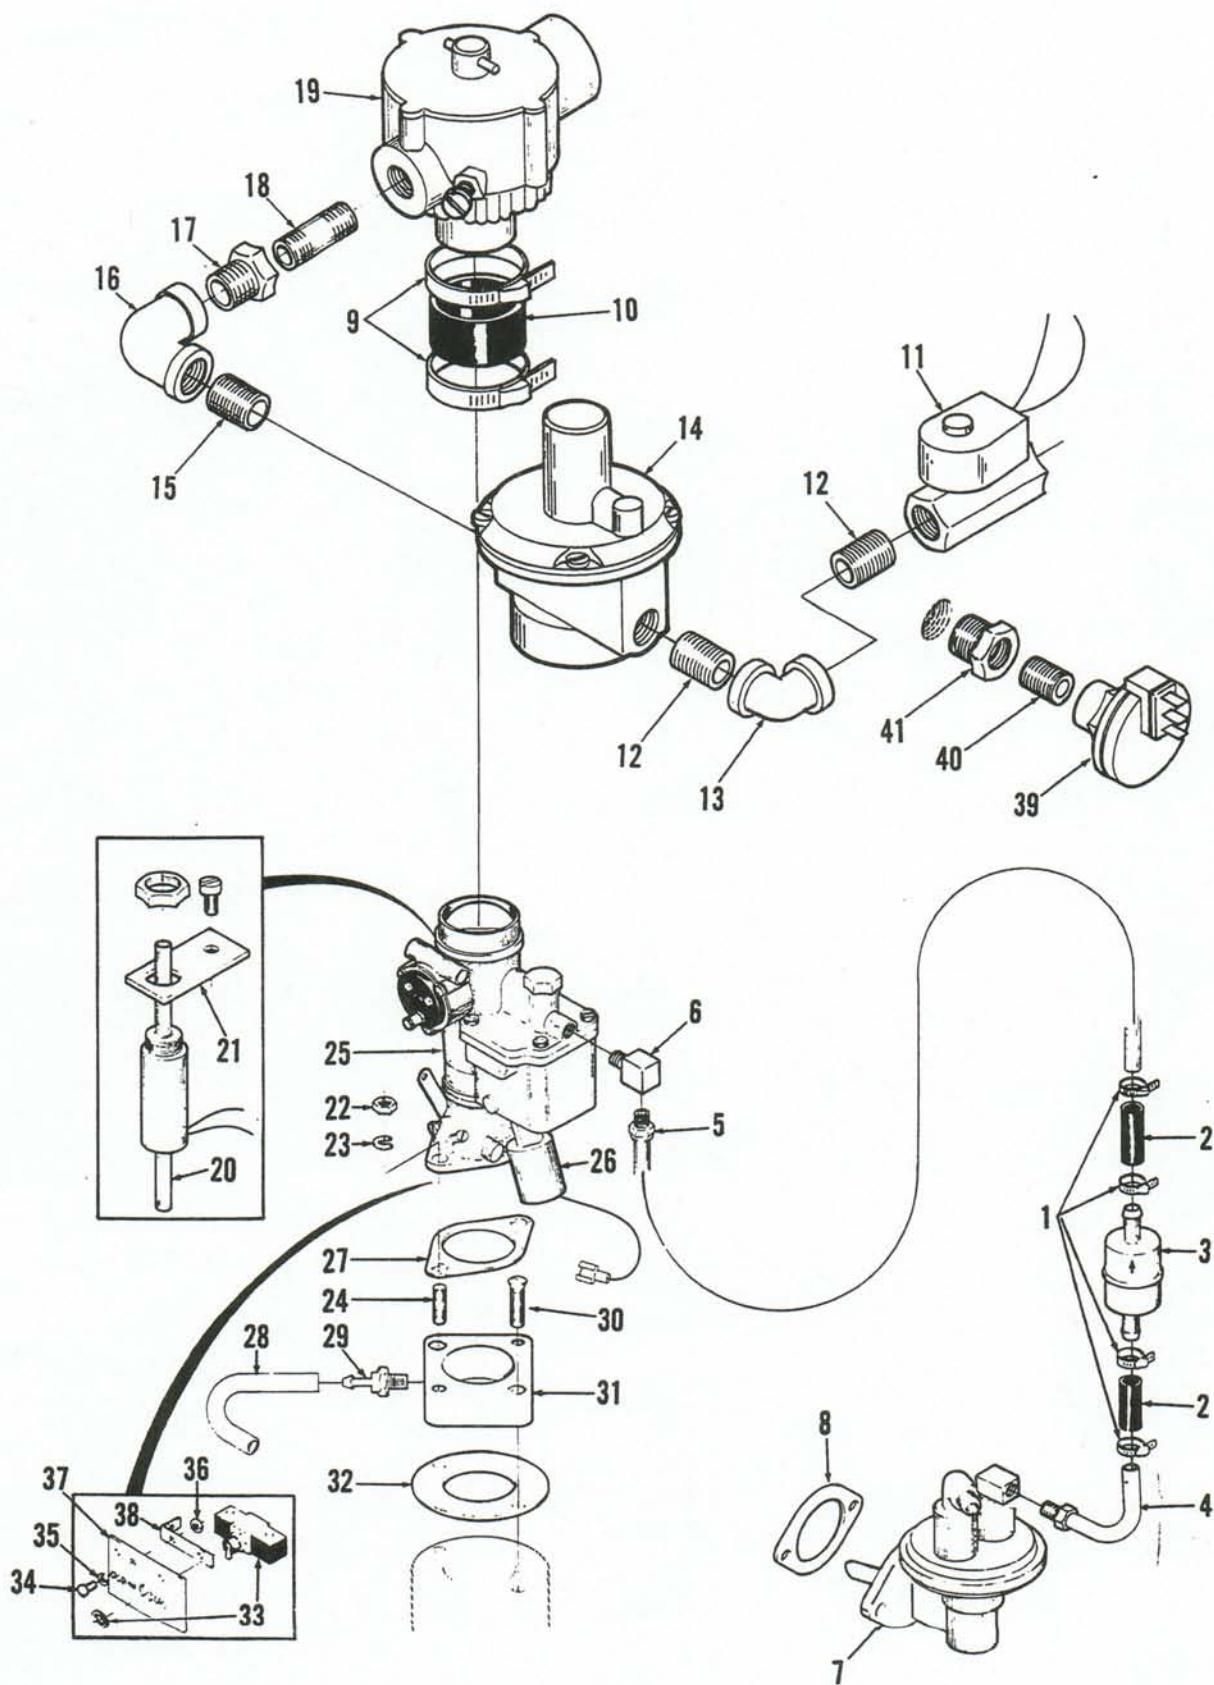


XFS1430

**OPTIONAL
DUAL FUEL SYSTEM
(GASOLINE & LPG VAPOR)**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0685	4	Clamp, Hose	21	307-2014	1	Plate, Mounting - Solenoid
2	503-0883	2	Hose, Rubber (5/16" ID x 2" Lg)	22	104-0091	2	Nut, Hex (3/8-24)
3	149-1569	1	Filter, Fuel	23	850-0050	2	Washer, Lock - Spring (3/8")
4	149-1573	1	Line, Fuel	24	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
5	149-1558	1	Line, Fuel	25	141-0854	1	Carburetor, Gasoline (Includes Fuel Shutoff Solenoid)
6	504-0085	1	Valve, Shutoff (1/8" NPT x 5/16" Tube)	26	141-0850	1	Solenoid - 12 VDC (Fuel Shutoff)
7	149-1568	1	Pump, Fuel	27	154-0133	1	Gasket - Carburetor
8	149-0736	1	Gasket - Fuel Pump	28	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
9	503-0465	2	Clamp, Hose	29	502-0582	1	Adapter, Hose (1/8-22 NPT x 5/16" Hose)
10	503-0542	1	Hose, Rubber (1-1/4" ID x 2-1/4" Lg)	30	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
11	307-0312	1	Valve, Solenoid - 12 VDC (3/4" NPT)	31	148-0800	1	Adapter - Carburetor To Manifold
12	505-0102	2	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	32	148-0775	1	Gasket
13	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)	33	308-0005	1	Switch, Toggle
14	148-0597	1	Regulator, Pressure - Gas (3/4" NPT)	34	813-0100	2	Screw, Machine - Round Head (#10-32 x 1/2")
15	505-0102	1	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	35	850-0030	2	Washer, Lock - Spring
16	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)	36	871-0010	2	Nut, Hex (#10-32)
17	505-0021	1	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	37	308-0150	1	Plate, Mounting - Switch
18	505-0100	1	Nipple, Pipe - Close (1/2" NPT x 1-1/8" Lg)	38	306-0155	1	Bracket, Mounting
19	148-0691	1	Mixer, Gas	39	148-0367	1	Switch, Control - Vacuum (12 VDC)
20	307-2017	1	Solenoid - 12 VDC (Choke Closing)	40	502-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
				41	505-0016	1	Bushing, Reducer - Hex (3/8" NPT x 1/8" NPT)


**OPTIONAL
FUEL TANK RESERVOIR**

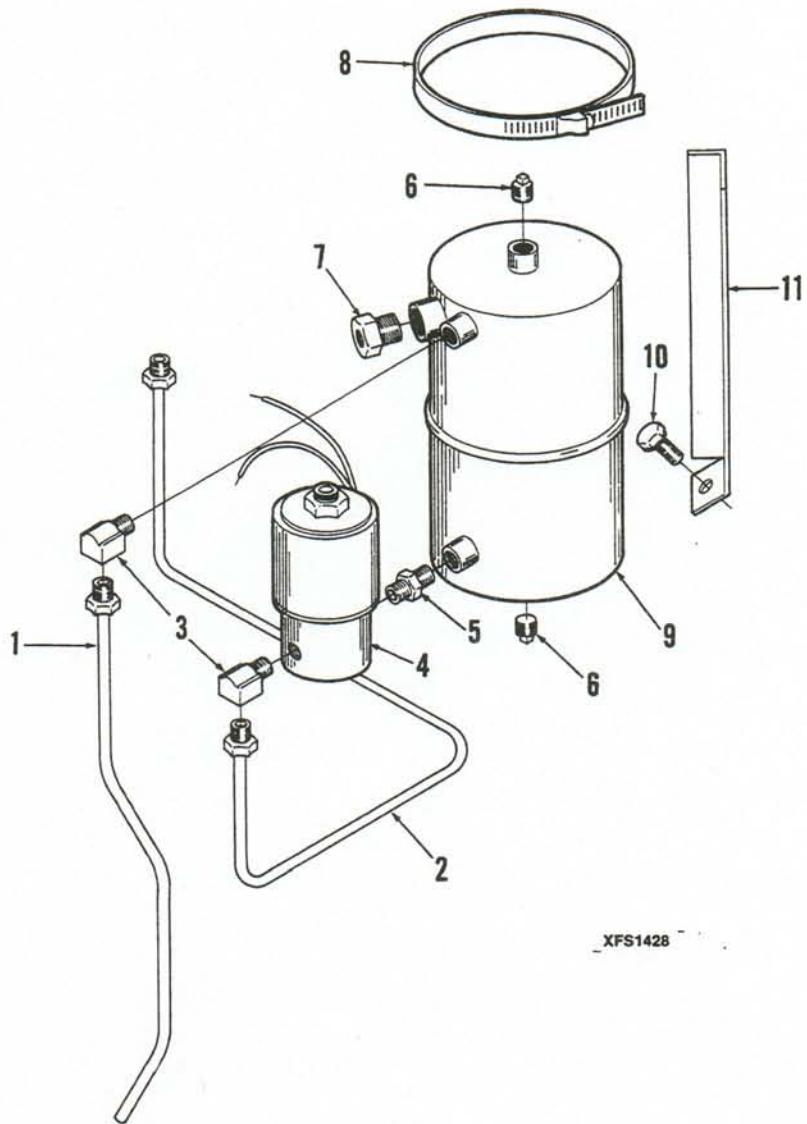

XFS1428

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	149-1574	1	Line, Fuel - Preformed Tubing (Fuel Pump To Tank)
2	149-1575	1	Line, Fuel - Preformed Tubing (Tank to Carburetor)
3	502-0004	2	Elbow, Pipe - 90 DEG, Brass, (1/8" NPT x 1/4" Tube)
4	307-0565	1	Valve, Solenoid - 12 VDC (1/8" NPT)
5	502-0082	1	Nipple, Pipe - Hex, Brass (1/8" NPT)
6	505-0057	2	Plug, Pipe - Square Head (1/8" NPT)
7	159-0705	1	Bushing, Reducer - Hex, With Flow Restricting Plug (3/8" NPT x 1/8" NPT)
8	503-0612	2	Clamp, Hose
9	159-0294	1	Tank, Fuel (One Quart)
10	821-0029	1	Screw, Self-Locking - Hex Washer Head (3/8-16 x 3/4")
11	159-1070	1	Bracket, Mounting - Fuel Tank

**OPTIONAL
FUEL TANK-MOUNTED
(HOUSED SETS)**

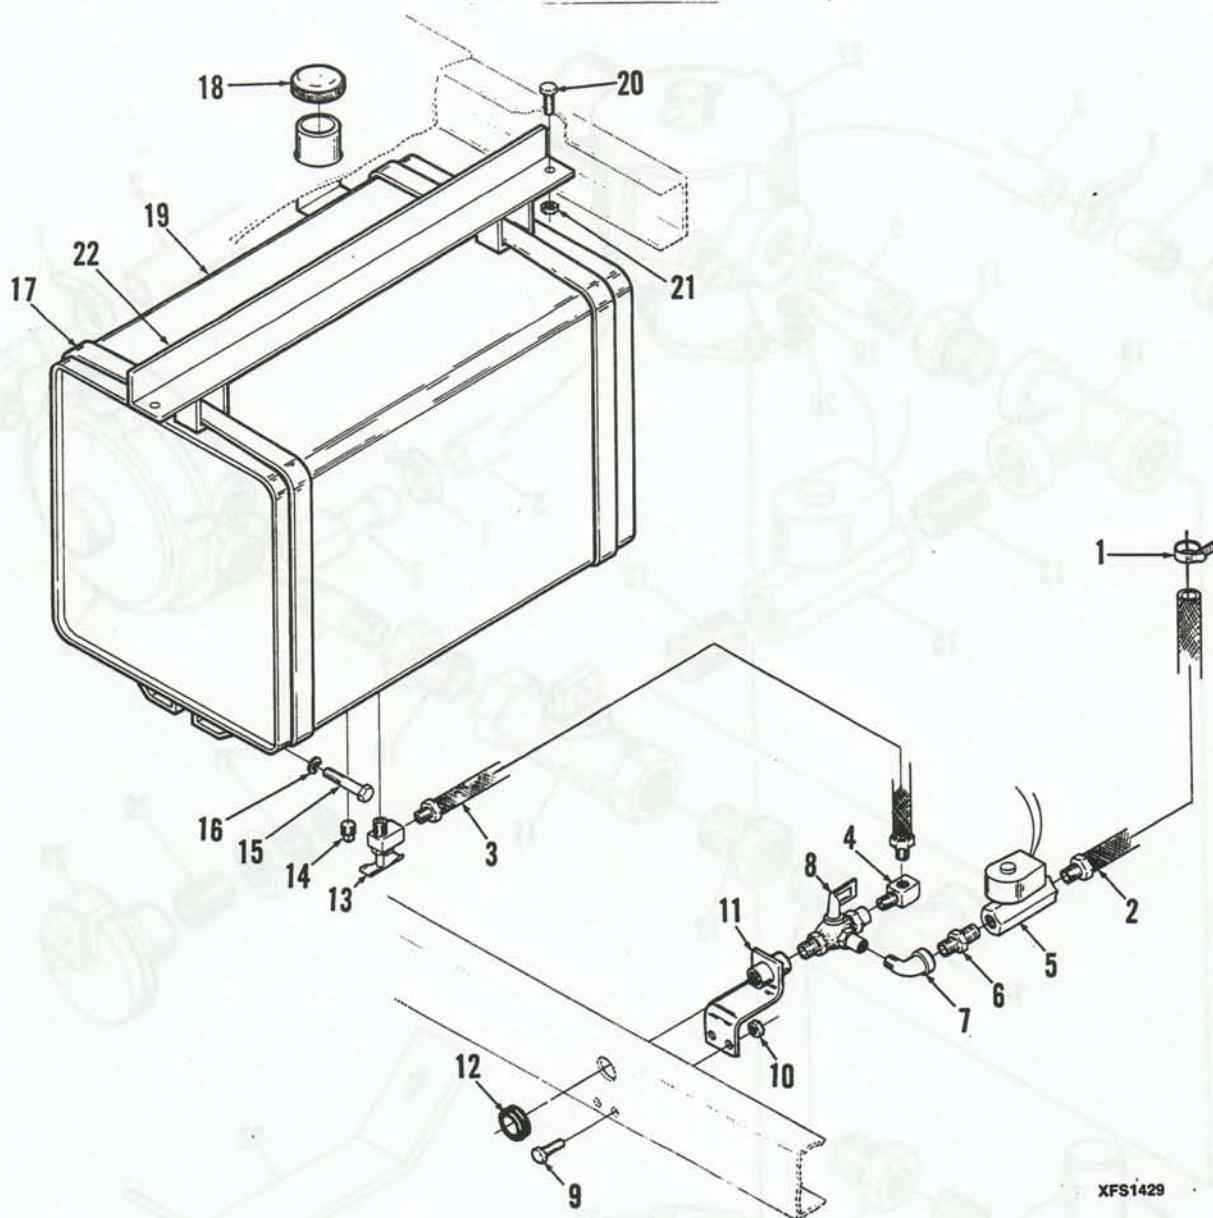


XFS1429

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0547	1	Clamp, Hose
2	501-0134	1	Line, Fuel - Flexible (24" Lg x 1/4" NPT Male)
3	501-0011	1	Line, Fuel - Flexible (52" Lg x 1/4" NPT Male Both Ends)
4	502-0002	1	Elbow, Pipe - 90 DEG, Inverted Male (1/8" NPT x 1/4" Tube)
5	307-0565	1	Valve, Solenoid - 12 VDC (1/8" NPT)
6	502-0082	1	Nipple, Pipe - Hex (1/8" NPT)
7	502-0020	1	Elbow, Pipe - 90 DEG. Street (1/8" NPT)
8	504-0004	1	Valve, Control - 3 Way (1/8" NPT)
9	821-0010	2	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
10	870-0212	2	Nut, Self-locking - Hex Washer Head (1/4-20)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
11	403-1559	1	Bracket with Pipe Coupling
12	508-0225	1	Grommet
13	504-0007	1	Valve, Control - Shutoff (1/8" NPT x 1/4" Tube)
14	505-0057	1	Plug, Pipe - Square Head (1/8" NPT)
15	812-0158	2	Screw, Machine - Round Head (1/4-20 x 2")
16	850-0040	2	Washer, Lock - Spring (1/4")
17	159-1082	2	Strap, Mounting - Fuel Tank
18	159-0515	1	Cap, Fuel Tank
19	159-1081	1	Tank, Fuel (15 Gal.)
20	821-0010	4	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
21	870-0212	4	Nut, Self-locking - Hex Washer Head (1/4-20)
22	159-1083	2	Support, Mounting - Fuel Tank

**OPTIONAL
DUAL FUEL SYSTEM
(NAT. GAS & LPG LIQUID)**

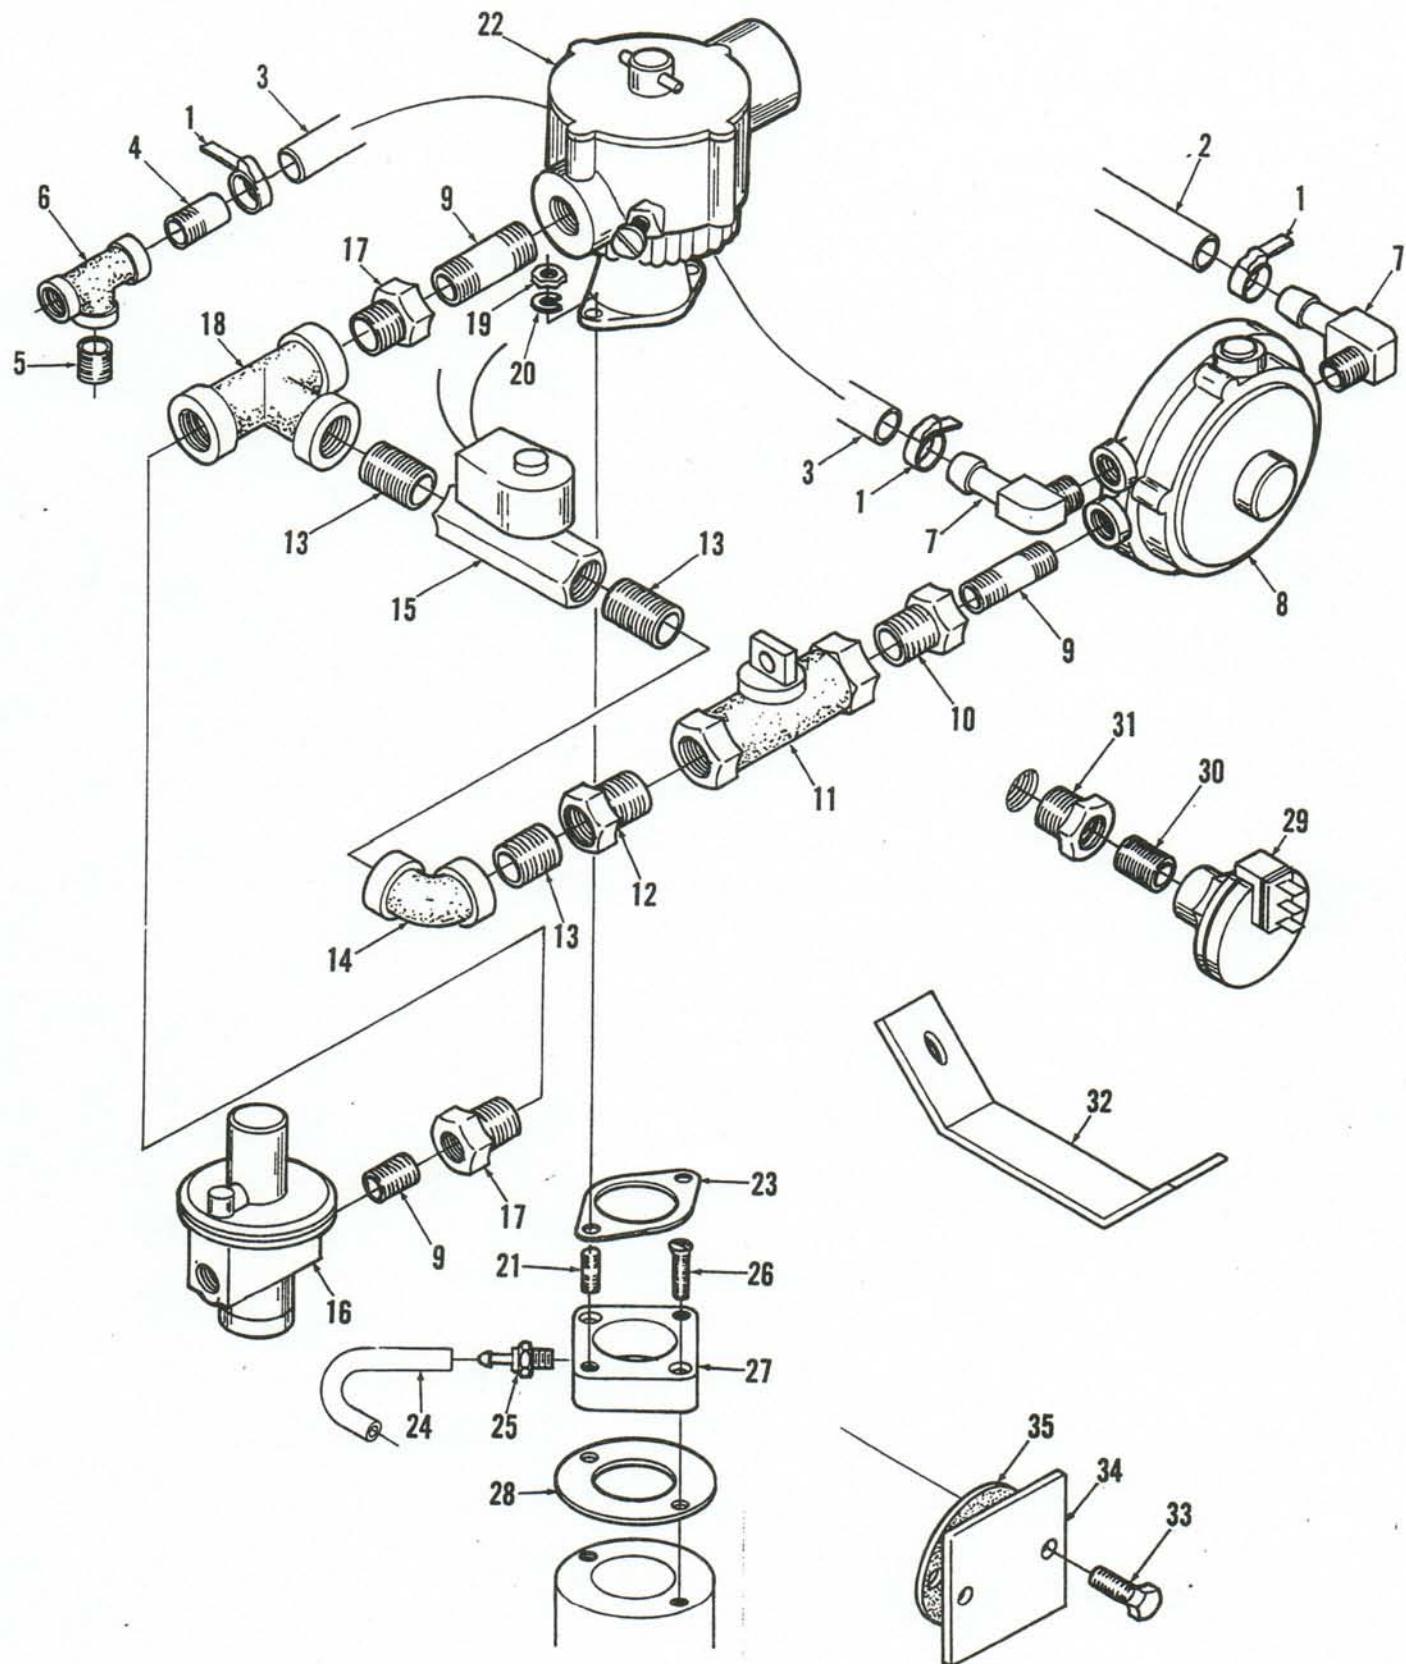


XFS1431

**OPTIONAL
DUAL FUEL SYSTEM
(NAT. GAS & LPG LIQUID)**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0183	4	Clamp, Hose	18	505-0166	1	Tee, Pipe (3/4" NPT)
2	503-1169	1	Hose, Rubber (5/8" ID x 48" Lg)	19	104-0091	2	Nut, Hex (3/8-24)
3	503-0833	1	Hose, Rubber (5/8" ID x 24" Lg)	20	850-0050	2	Washer, Lock - Spring (3/8")
4	505-0135	1	Nipple, Pipe-Half (3/8" NPT x 1-1/2" Lg)	21	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
5	505-0101	1	Nipple, Pipe-Close (3/8" NPT x 1" Lg)	22	148-0792	1	Carburetor, Gas (Vapor) Gasket
6	505-0060	1	Tee, Pipe (3/8" NPT)	23	154-0133	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
7	502-0587	2	Adapter - Hose To Pipe, 90 DEG (3/4" NPT x 5/8" Hose)	24	503-0871	1	Adapter, Hose (1/8-27 NPT x 5/16" Hose)
8	148-0737	1	Converter - Regulator, LPG (1/2" NPT)	25	502-0582	1	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
9	505-0100	2	Nipple, Pipe- Close (1/2" NPT x 1" Lg)	26	814-0200	2	Adapter - Carburetor to Manifold Gasket
10	505-0022	1	Bushing, Reducer - Hex (1" NPT x 1/2" NPT)	27	148-0800	1	Switch, Control - Vacuum (12 VDC)
11	148-0626	1	Valve, Control - Manual	28	148-0775	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
12	505-0129	1	Bushing, Reducer - Hex (1" NPT x 3/4" NPT)	29	148-0367	1	Bushing, Reducer - Hex (3/8" NPT x 1/8" NPT)
13	505-0102	3	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	30	502-0098	1	Bracket, Support - Carburetor to Regulator
14	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)	31	505-0016	1	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")
15	307-0312	1	Valve, Solenoid - 12 VDC (3/4" NPT)	32	148-0809	1	Cover - Fuel Pump Mtg. Hole Gasket
16	148-0597	1	Regulator, Pressure - Gas (1/2" NPT)	33	821-0017	2	
17	505-0021	2	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	34	149-0638	1	
				35	149-0736	1	

**OPTIONAL
FUEL SYSTEM
(LPG LIQUID)**

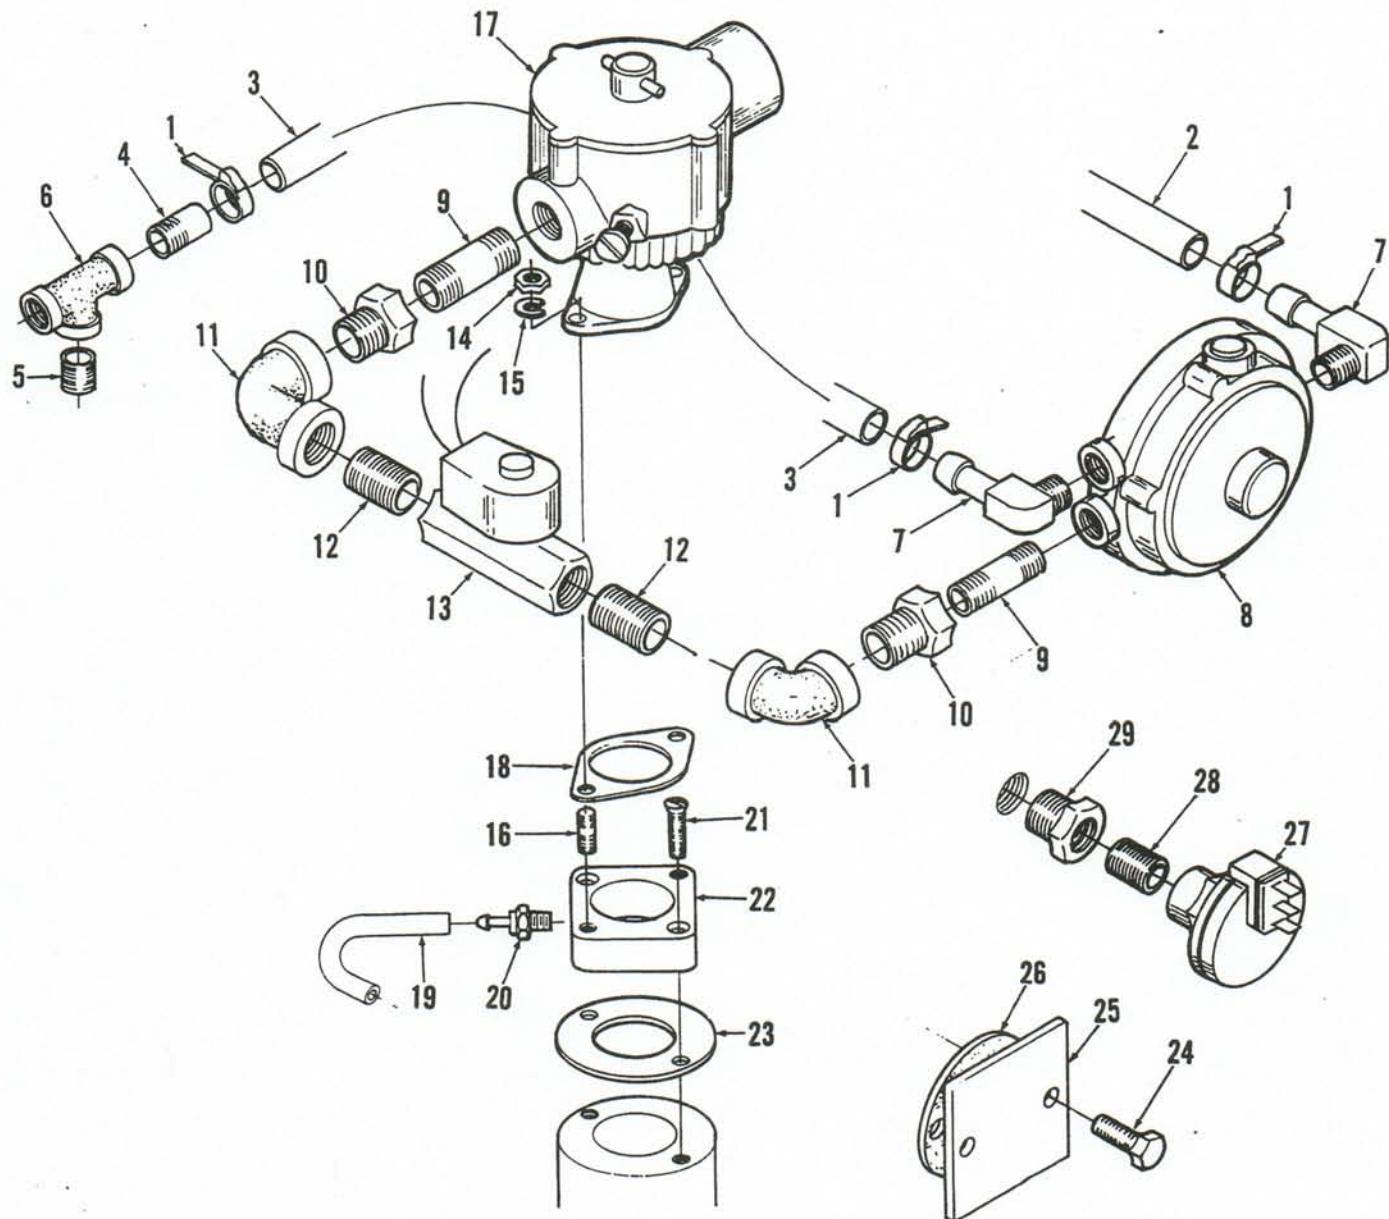


FS1434

**OPTIONAL
FUEL SYSTEM
(LPG LIQUID)**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0183	4	Clamp, Hose	15	850-0050	2	Washer, Lock - Spring (3/8")
2	503-1169	1	Hose, Rubber (5/8" ID x 48" Lg)	16	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
3	503-0833	1	Hose, Rubber (5/8" ID x 24" Lg)	17	148-0792	1	Carburetor, Gas (Vapor)
4	505-0135	1	Nipple, Pipe - Half (3/8" NPT x 1-1/2" Lg)	18	154-0133	1	Gasket
5	505-0101	1	Nipple, Pipe - Close (3/8" NPT x 1" Lg)	19	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)
6	505-0060	1	Tee, Pipe (3/8" NPT)	20	502-0582	1	Adapter, Hose (1/8-27 NPT 5/16" Hose)
7	502-0587	2	Adapter - Hose to Pipe, 90 DEG (3/4" NPT x 5/8" Hose)	21	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
8	148-0737	1	Converter - Regulator, LPG (1/2" NPT)	22	148-0800	1	Adapter - Carburetor to Manifold
9	505-0100	2	Nipple, Pipe - Close (1/2" NPT x 1" Lg)	23	148-0775	1	Gasket
10	505-0021	2	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	24	821-0017	2	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")
11	505-0132	2	Elbow, Pipe - 90 DEG (3/4" NPT)	25	149-0638	1	Cover - Fuel Pump Mtg. Hole
12	505-0102	2	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	26	149-0736	1	Gasket
13	307-0312	1	Valve, Solenoid - 12 VDC (3/4" NPT)	27	148-0367	1	Switch, Control - Vacuum (12 VDC)
14	104-0091	2	Nut, Hex (3/8-24)	28	502-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
				29	505-0016	1	Bushing, Reducer - Hex (3/8" NPT 1/8" NPT)

**OPTIONAL
FUEL SYSTEM
(LPG VAPOR)**

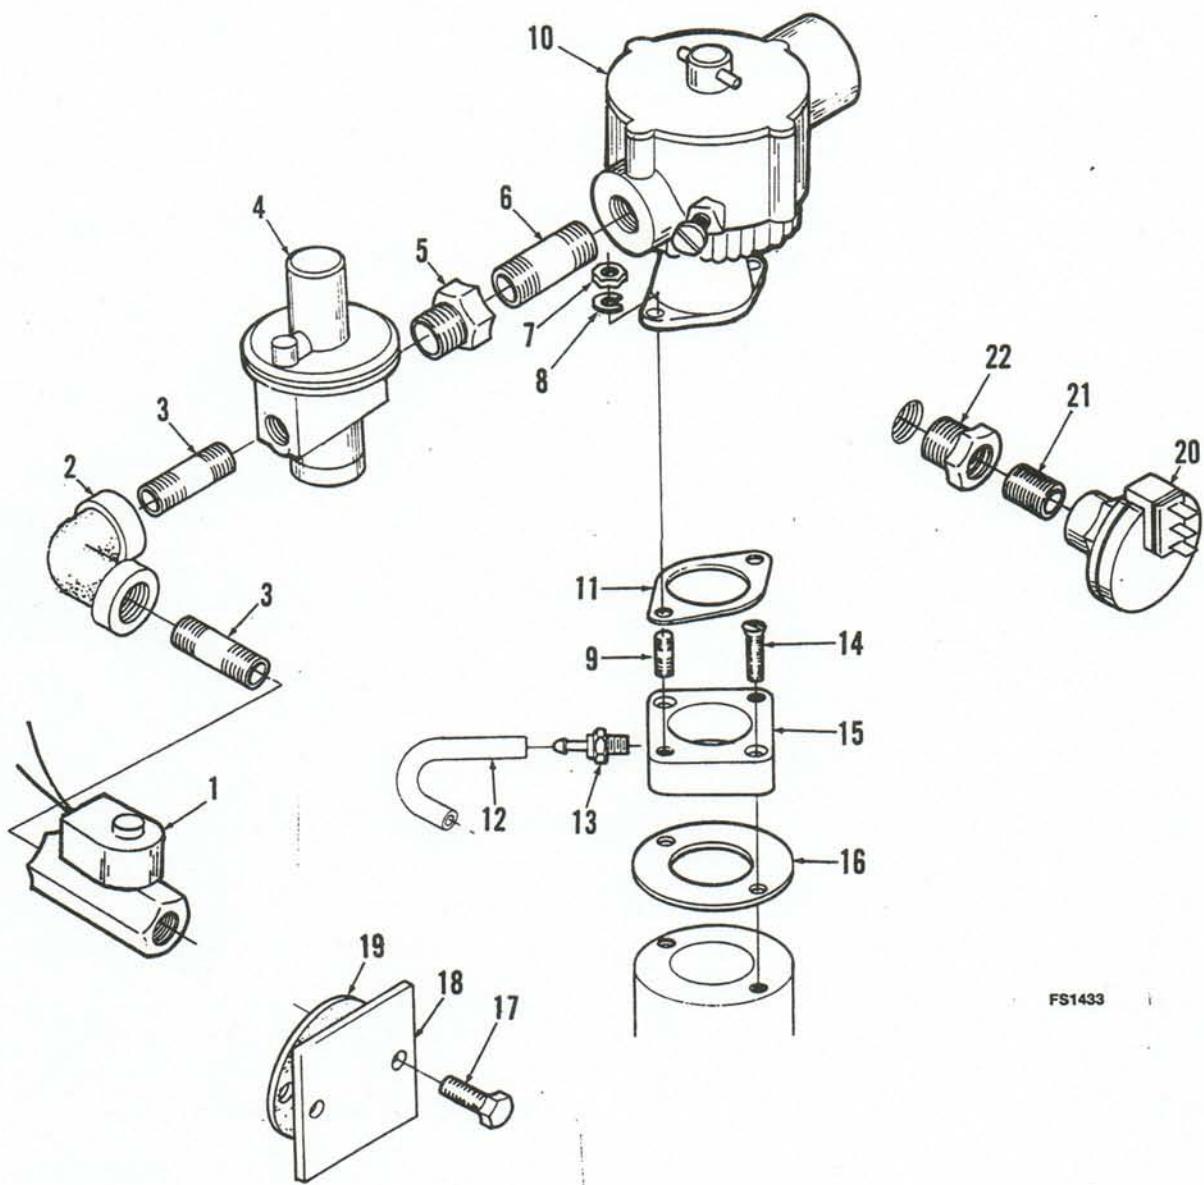


FS1433

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	307-0312	1	Valve, Solenoid - 12 VDC (3/4" NPT)
2	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)
3	505-0102	2	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)
4	148-0637	1	Regulator, Pressure - Gas (3/4" NPT)
5	505-0021	1	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)
6	505-0100	1	Nipple, Pipe - Close (1/2" NPT x 1-1/8" Lg)
7	104-0091	2	Nut, Hex (3/8-24)
8	850-0050	2	Washer, Lock - Spring (3/8")
9	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)
10	148-0792	1	Carburetor, Gas (Vapor)
11	154-0133	1	Gasket
12	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
13	502-0582	1	Adapter, Hose (1/8-27 NPT x 5/16" Hose)
14	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
15	148-0800	1	Adapter - Carburetor to Manifold
16	148-0775	1	Gasket
17	821-0017	2	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")
18	149-0638	1	Cover - Fuel Pump Mtg. Hose
19	149-0736	1	Gasket
20	148-0367	1	Switch, Control - Vacuum (12 VDC)
21	502-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
22	505-0016	1	Bushing, Reducer - Hex (3/8" NPT x 1/8" NPT)

**OPTIONAL
FUEL SYSTEM
(NAT. GAS)**

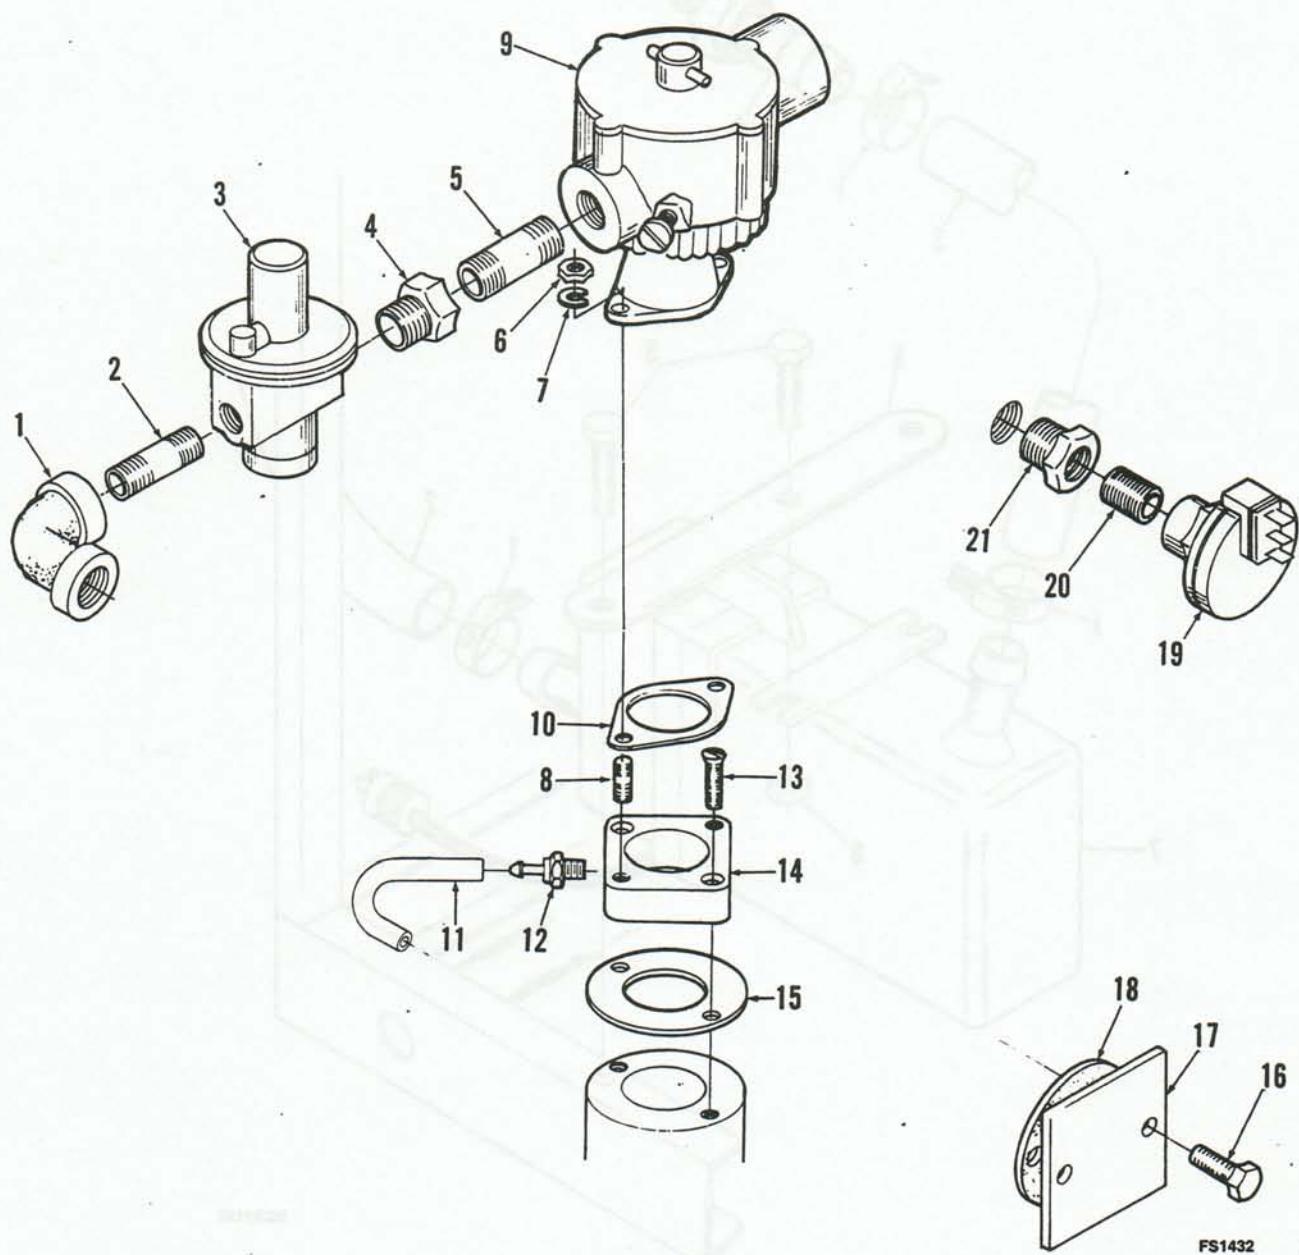

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	505-0132	1	Elbow, Pipe - 90 DEG (3/4" NPT)	12	502-0582	1	Adapter, Hose (1/8-27 NPT x 5/16" Hose)
2	505-0102	1	Nipple, Pipe - Close (3/4" NPT x 1-3/8" Lg)	13	814-0200	2	Screw, Machine - Flat Head (3/8-16 x 1-1/4")
3	148-0597	1	Regulator, Pressure - Gas (3/4" NPT)	14	148-0800	1	Adapter - Carburetor to Manifold
4	505-0021	1	Bushing, Reducer - Hex (3/4" NPT x 1/2" NPT)	15	148-0775	1	Gasket
5	505-0100	1	Nipple, Pipe - Close (1/2" NPT x 1-1/8" Lg)	16	821-0017	2	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")
6	104-0091	2	Nut, Hex (3/8-24)	17	149-0638	1	Cover - Fuel Pump Mtg. Hole
7	850-0050	2	Washer, Lock - Spring (3/8")	18	149-0736	1	Gasket
8	520-0311	2	Stud (3/8-24 x 3/8-16 x 1-5/8" Lg)	19	148-0367	1	Switch, Control - Vacuum (12 VDC)
9	148-0792	1	Carburetor, Gas (Vapor)	20	502-0098	1	Nipple, Pipe - Close (1/8" NPT x 3/4" Lg)
10	154-0133	1	Gasket	21	505-0016	1	Bushing, Reducer - Hex (3/8" NPT x 1/8" NPT)
11	503-0871	1	Hose, Rubber (5/16" ID x 13-1/2" Lg)				


**OPTIONAL
ENGINE COOLANT HEATER**

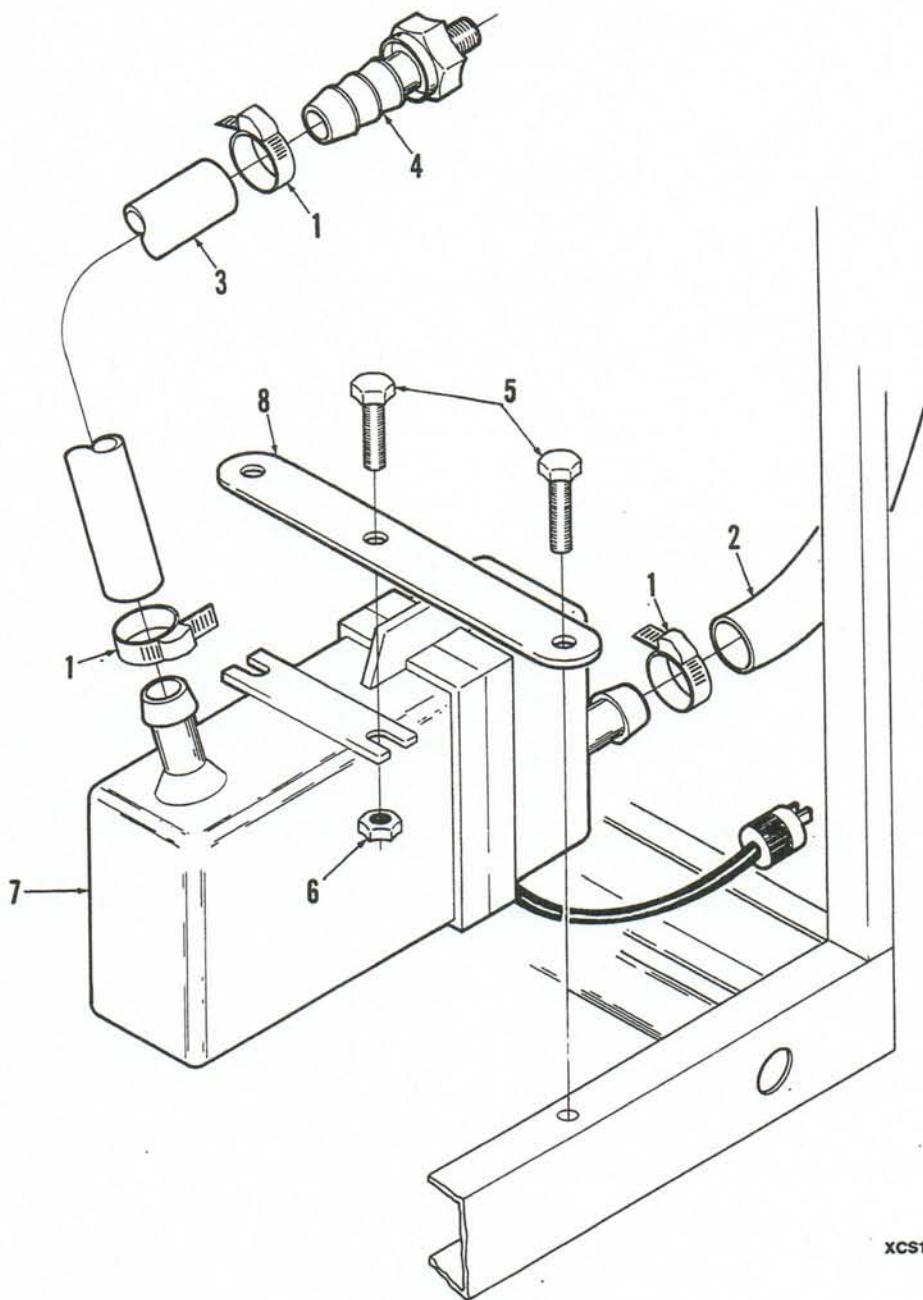

XCS1199

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0183	4	Clamp, Hose
2	503-1168	1	Hose, Rubber (5/8" ID x 36" Lg)
3	503-0833	1	Hose, Rubber (5/8" ID x 24" Lg)
4	502-0163	1	Adapter, Pipe to Hose (1/4" NPT x 5/8" Hose)
5	821-0011	3	Screw, Self-locking - Hex Washer Head (1/4-20 x 7/8")
6	870-0212	3	Nut, Self-locking - Hex Washer Head (1/4-20)
7	HEATER, ELECTRICAL - ENGINE COOLANT (Includes Mtg. Bracket) - (Select As Applicable to Match Voltage)		
	333-0163	1	1000 Watt, 115 VAC, 1 Phase
	333-0175	1	1000 Watt, 230 VAC, 1 Phase
8	130-1191	1	Bracket, Mounting

**OPTIONAL
EXHAUST SYSTEM
(HOUSED SETS)**



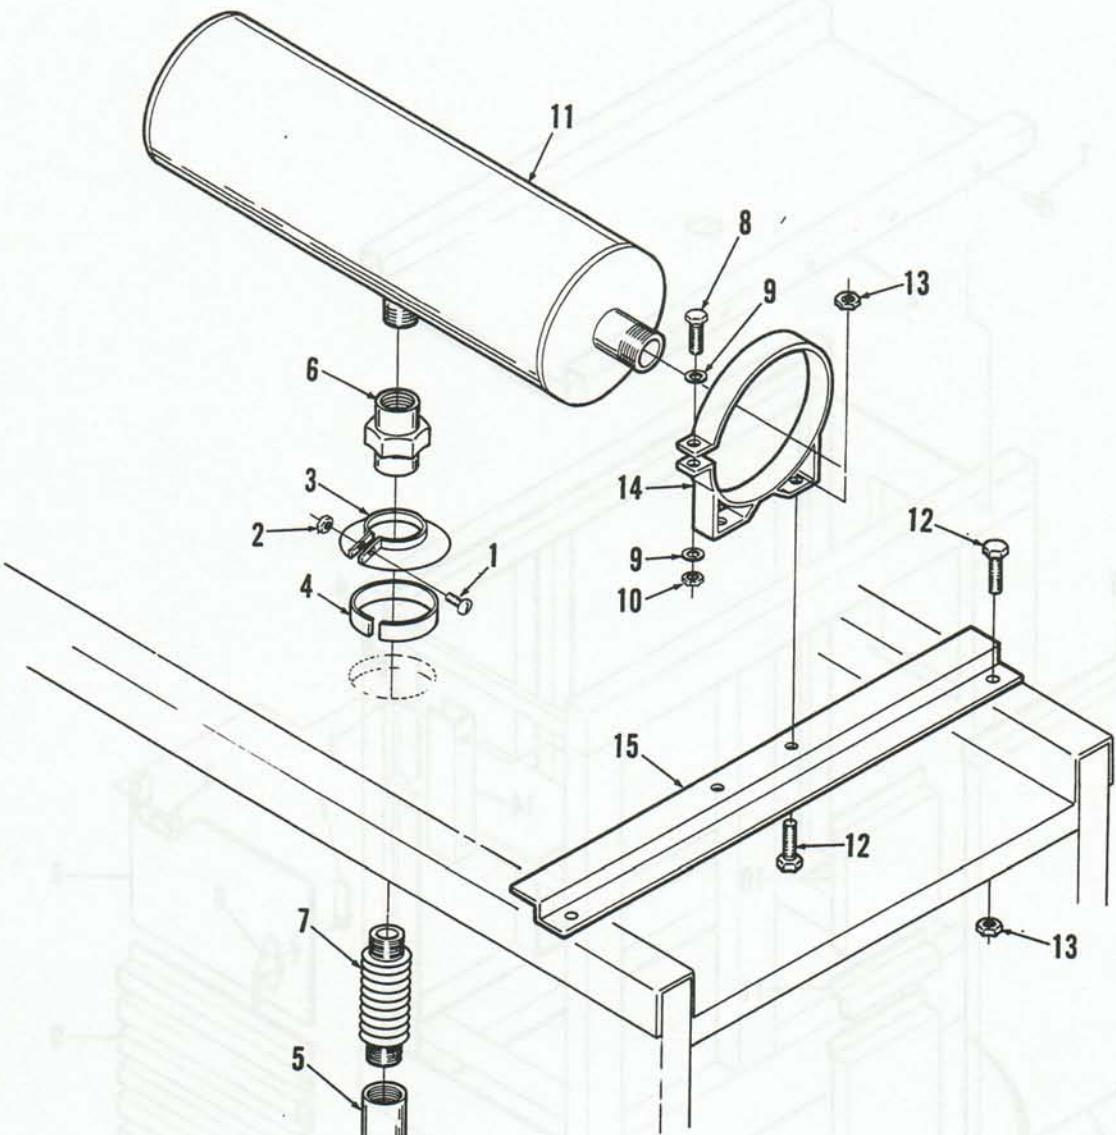


XEXS1081

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	813-0105	2	Screw, Machine - Round Head (#10-32 x 1")
2	870-0188	2	Nut, Self-locking, Hex (#10-32)
3	155-1420	1	Shield, Rain
4	895-0157	1	Asbestos Strip (2" x 1/16" Thk x 8-1/2" Lg)
5	505-0203	1	Coupling, Pipe (2" NPT)
6	505-0454	1	Union, Pipe (2" NPT)
7	155-1590	1	Tube, Exhaust - Flexible (2" NPT x 16" Lg)
8	SCREW CAP - HEX (Select as Required)		
	800-0035	3	5/16-18 x 2-1/2"
	800-0036	3	5/16-18 x 2-3/4"
	800-0037	3	5/16-18 x 3"
9	526-0113	6	Washer, Flat (11/32" ID x 1" OD x 3/32" Thk)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
10	870-0257	3	Nut, Self-locking, Hex Washer Head (5/16-18)
11	MUFFLER, EXHAUST (Select as Applicable)		
	155-0988	1	Industrial (10" OD x 43" Lg)
	155-1512	1	Industrial, SST (10" OD x 43" Lg)
	155-1617	1	Critical, SST (12" OD x 44" Lg)
12	821-0029	8	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")
13	870-0281	8	Nut, Self-locking - Hex Washer Head (3/8-16)
14	BAND, MOUNTING (Select as Required)		
	140-0649	2	10" ID
	140-0752	2	12" ID
15	155-1601	2	Brace, Support - Muffler

**OPTIONAL
SET HOUSING**

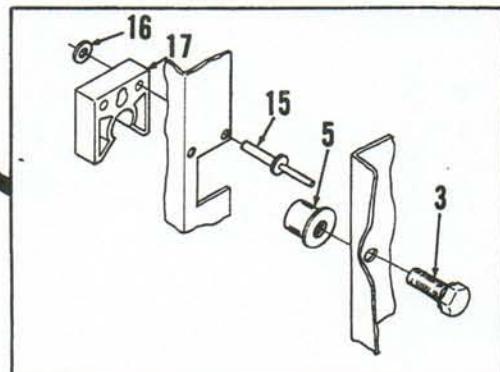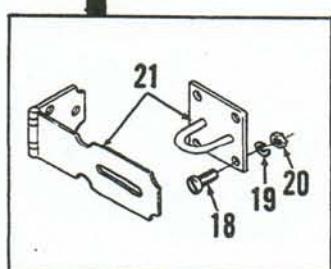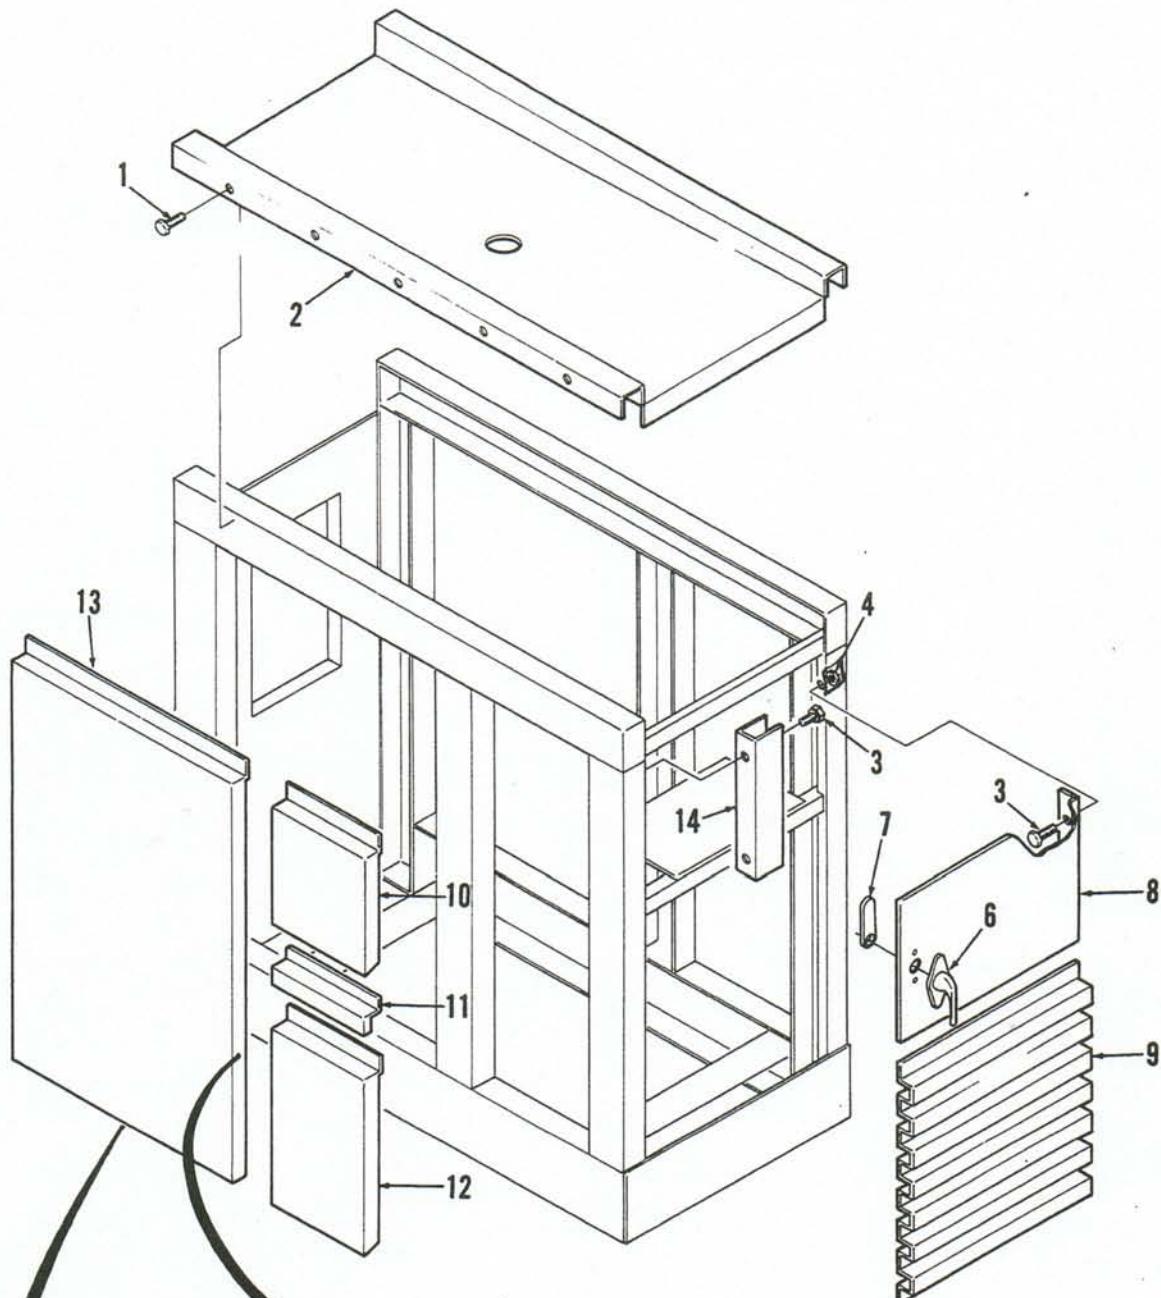


M1401

**OPTIONAL
SET HOUSING**

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	821-0010	10	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")	10	405-2462	2	Door, Access - Control
2	405-2483	1	Panel, Top	11	403-1350	2	Channel, Support - Control
3	821-0010	40	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")	12	405-2460	2	Door, Access - Generator
4	870-0212	12	Nut, Self-locking - Hex Washer Head (1/4-20)	13	405-2461	2	Door, Access - Engine
5	870-0250	28	Nut, Weld - Door Mounting (1/4-20)	14	405-2476	1	Stop, Door
6	405-0157	1	Handle, Lock	15	818-0150	56	Rivet, Drive Pin
7	406-0089	1	Catch	16	526-0003	56	Washer, Flat (11/64" ID x 3/8" OD x 1/32" Thk)
8	405-2475	1	Door, Rear (Excludes Handle & Catch)	17	405-1872	28	Clip, Door - Plastic
9	405-2472	1	Grill, Air - Generator Inlet	18	814-0079	49	Screw, Machine - Flat Head (#8-32 x 1/2")
				19	850-0025	9	Washer, Lock - Spring (#8)
				20	860-0008	49	Nut, Hex (#8-32)
				21	406-0249	7	Hasp, Set - Optional


**OPTIONAL
VOLTAGE REGULATOR FILTER**

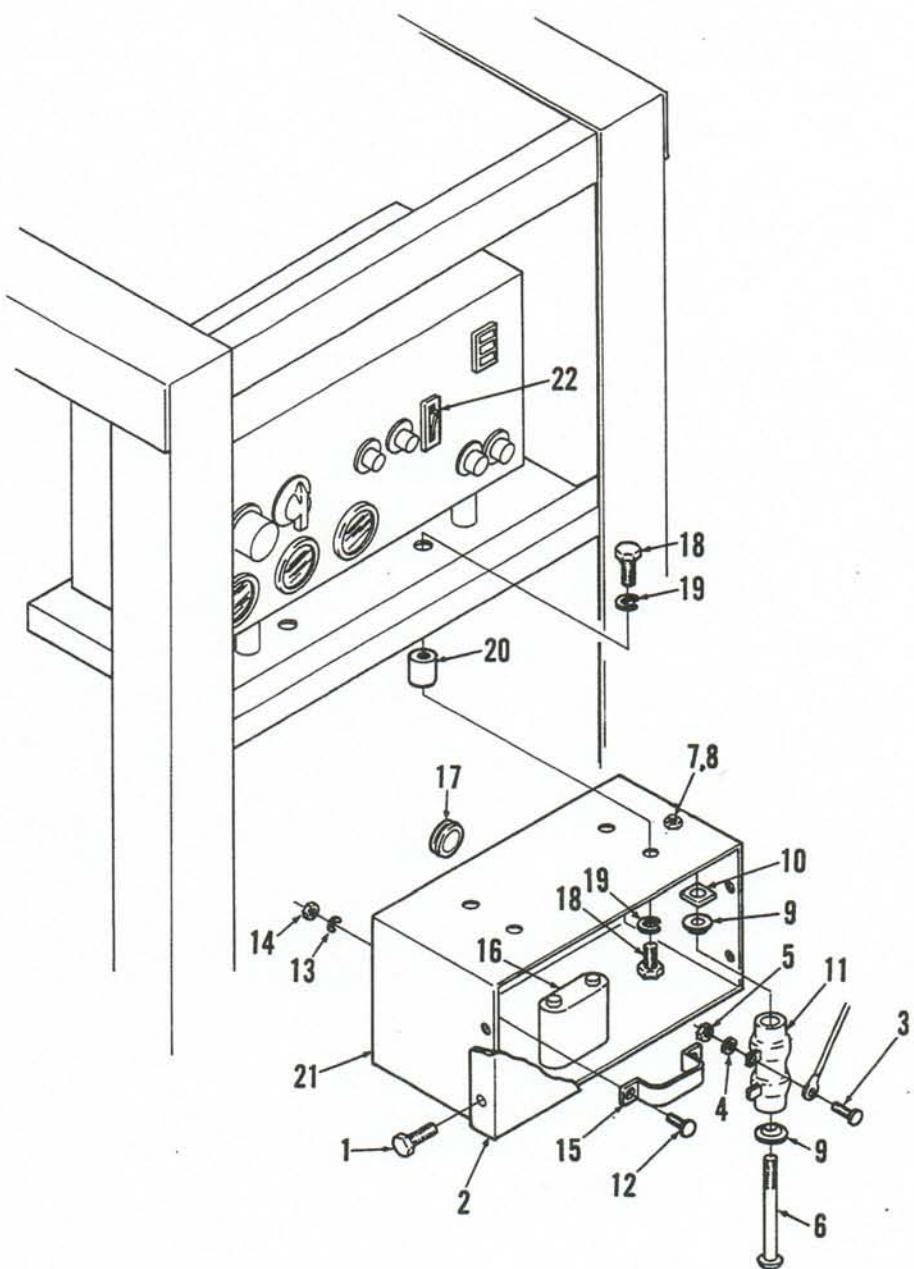

XES1330

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	821-0010	8	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")	12	812-0061	6	Screw, Machine - Round Head (#6-32 x 3/8")
2	301-5468	1	Cover, Filter	13	850-0020	6	Washer, Lock - Spring (#6)
3	815-0001	4	Screw, Machine - Binder Head (#6-32 x 1/4")	14	860-0006	6	Nut, Hex (#6-32)
4	853-0003	4	Washer, Lock - ET (#6)	15	312-0189	2	Bracket, Mounting - Capacitor
5	860-0006	4	Nut, Hex (#6-32)	16	312-0188	1	Capacitor, Fixed - 15 MFD, 440 VAC
6	812-0165	2	Screw, Machine - Round Head (1/4-20 x 4-1/2")	17	508-0001	1	Grommet
7	862-0001	2	Nut, Hex (1/4-20)	18	800-0045	8	Screw, Cap - Hex Head (5/16-18 x 3/8")
8	850-0040	2	Washer, Lock - Spring (1/4")	19	850-0045	8	Washer, Lock - Spring (5/16")
9	304-0427	4	Washer, Centering (1/4")	20	402-0070	4	Mount, Vibration
10	304-0292	2	Insulator	21	301-5467	1	Box
11	304-0026	2	Resistor, Fixed, Wire Wound (2-Ohm, 100 Watt)	22	320-0061	1	Circuit Breaker (5 Amp, 120 VAC)


**OPTIONAL
COOLING SYSTEM
(CITY WATER)**

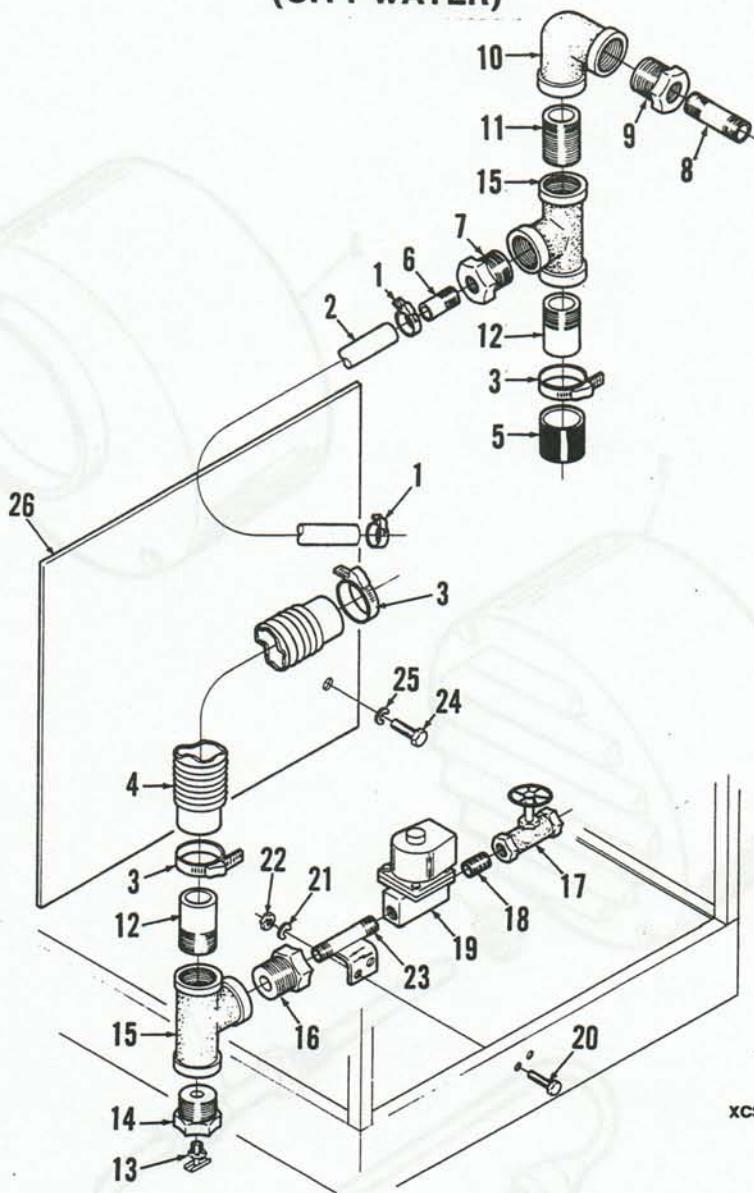

XCS1201

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	503-0183	2	Clamp, Hose	14	505-0766	1	Bushing, Reducer - Hex (1-1/4" NPT x 1/4" NPT)
2	503-0833	1	Hose, Rubber (5/8" ID x 24" Lg)	15	505-0249	2	Tee, Pipe (1-1/4" NPT)
3	503-0429	4	Clamp, Hose	16	505-0127	1	Bushing, Reducer - Hex (1-1/4" NPT x 1/2" NPT)
4	503-0869	1	Hose, Rubber (1-1/2" ID x 20" Lg)	17	505-0019	1	Valve, Globe (1/2" NPT)
5	503-1027	1	Hose, Rubber (1-1/2" ID x 3" Lg)	18	505-0100	1	Nipple, Pipe - Close (1/2" NPT x 1-1/8" Lg)
6	505-0135	1	Nipple, Pipe - Half (3/8" NPT x 1-1/2" Lg)	19	307-0833	1	Valve, Solenoid - 12 VDC (1/2" NPT)
7	505-0128	1	Bushing, Reducer - Hex (1-1/4" NPT x 3/8" NPT)	20	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 2")
8	505-0324	1	Nipple, Pipe - Half (3/4" NPT x 2" Lg)	21	850-0040	2	Washer, Lock - Spring (1/4") Nut, Hex (1/4-20)
9	505-0297	1	Bushing, Reducer - Hex (1-1/4" NPT x 3/4" NPT)	22	862-0001	2	Nipple and Bracket Assembly (1/2" NPT)
10	505-0042	1	Elbow, Pipe - 90 DEG (1-1/4" NPT)	23	110-0526	1	Screw, Cap - Hex Head (5/16-18 x 1")
11	505-0177	1	Nipple, Pipe - Close (1-1/4" NPT x 1-1/2" Lg)	24	800-0028	1	Washer, Lock - Spring (5/16") Guard
12	505-0384	2	Nipple, Pipe - Half (1-1/4" NPT x 2" Lg)	25	850-0045	1	
13	504-0003	1	Cock, Drain (1/4" NPT)	26	130-1696	1	

**OPTIONAL
GENERATOR HEATER**

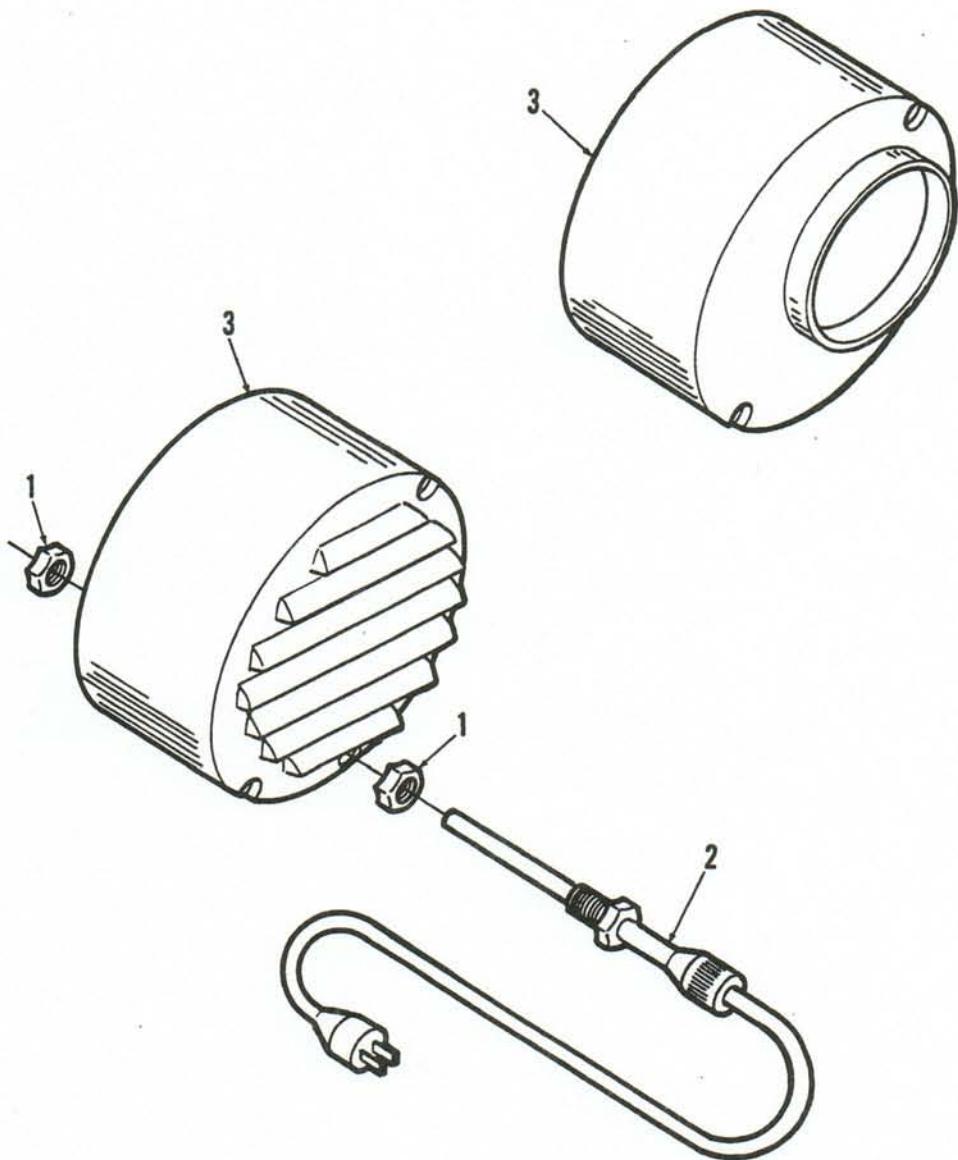

M1402

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	331-0041	2	Nut, Hex - Special
2	333-0157	1	Heater, Electrical
3	COVER, ENDBELL 234-0542	1	Sets Without Overspeed Switch
	234-0543	1	Sets With Overspeed Switch
	234-0541	1	Sets With Duct to Cover



Onan Corporation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
Telex: 275477
Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation
Cummins is a registered trademark of Cummins Engine Company