

The following catalog has gaps in its page numbers, or doesn't have any numbers. We have chosen to leave the page numbering in the order that Acrobat assigns it.



Parts Manual

Cummins **Onan**

Performance you rely on.™



Diesel Genset

DFP / LDFP

General Information

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

The diagram shows a rectangular nameplate with two circular mounting holes at the top. The word "Onan" is printed in a large, bold, stylized font at the top. Below it is a horizontal rectangular box labeled "MODEL AND SPEC NO.". Underneath that is another horizontal rectangular box labeled "SERIAL NO.". To the right of the "SERIAL NO." box, there is a stamp that reads "NO LONGER GUARANTEED" and "PARTS AVAILABLE". The nameplate is shown overlapping another one behind it. The number "M-1149" is printed at the bottom right corner of the nameplate.

For handy reference, insert "YOUR" nameplate information in the spaces above.

Std. #36D

Important Safety Precautions

Read and observe these safety precautions when using or working on electric generators, engines and related equipment. Also read and follow the literature provided with the equipment.

Proper operation and maintenance are critical to performance and safety. Electricity, fuel, exhaust, moving parts and batteries present hazards that can cause severe personal injury or death.

FUEL, ENGINE OIL, AND FUMES ARE FLAMMABLE AND TOXIC

Fire, explosion, and personal injury can result from improper practices.

- Used engine oil, and benzene and lead, found in some gasoline, have been identified by government agencies as causing cancer or reproductive toxicity. When checking, draining or adding fuel or oil, do not ingest, breathe the fumes, or contact gasoline or used oil.
- Do not fill tanks with engine running. Do not smoke around the area. Wipe up oil or fuel spills. Do not leave rags in engine compartment or on equipment. Keep this and surrounding area clean.
- Inspect fuel system before each operation and periodically while running.
- Equip fuel supply with a positive fuel shutoff.
- Do not store or transport equipment with fuel in tank.
- Keep an ABC-rated fire extinguisher available near equipment and adjacent areas for use on all types of fires except alcohol.
- Unless provided with equipment or noted otherwise in installation manual, fuel lines must be copper or steel, secured, free of leaks and separated or shielded from electrical wiring.
- Use approved, non-conductive flexible fuel hose for fuel connections. Do not use copper tubing as a flexible connection. It will work-harden and break.

EXHAUST GAS IS DEADLY

- Engine exhaust contains carbon monoxide (CO), an odorless, invisible, poisonous gas. Learn the symptoms of CO poisoning.
- Never sleep in a vessel, vehicle, or room with a genset or engine running unless the area is equipped with an operating CO detector with an audible alarm.
- Each time the engine or genset is started, or at least every day, thoroughly inspect the exhaust system. Shut down the unit and repair leaks immediately.

- Warning: Engine exhaust is known to the State of California to cause cancer, birth defects and other reproductive harm.

Make sure exhaust is properly ventilated.

- Vessel bilge must have an operating power exhaust.
- Vehicle exhaust system must extend beyond vehicle perimeter and not near windows, doors or vents.
- Do not use engine or genset cooling air to heat an area.
- Do not operate engine/genset in enclosed area without ample fresh air ventilation.
- Expel exhaust away from enclosed, sheltered, or occupied areas.
- Make sure exhaust system components are securely fastened and not warped.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not remove any guards or covers with the equipment running.
- Keep hands, clothing, hair, and jewelry away from moving parts.
- Before performing any maintenance, disconnect battery (negative [-] cable first) to prevent accidental starting.
- Make sure fasteners and joints are secure. Tighten supports and clamps, keep guards in position over fans, drive belts, etc.
- If adjustments must be made while equipment is running, use extreme caution around hot manifolds and moving parts, etc. Wear safety glasses and protective clothing.

BATTERY GAS IS EXPLOSIVE

- Wear safety glasses and do not smoke while servicing batteries.
- Always disconnect battery negative (-) lead first and reconnect it last. Make sure you connect battery correctly. A direct short across battery terminals can cause an explosion. Do not smoke while servicing batteries. Hydrogen gas given off during charging is explosive.
- Do not disconnect or connect battery cables if fuel vapors are present. Ventilate the area thoroughly.

DO NOT OPERATE IN FLAMMABLE AND EXPLOSIVE ENVIRONMENTS

Flammable vapor can be ignited by equipment operation or cause a diesel engine to overspeed and become difficult to stop, resulting in possible fire, explosion, severe personal injury and death. **Do not operate diesel equipment where a flammable vapor environment can be created by fuel spill, leak, etc., unless equipped with an automatic safety device to block the air intake and stop the engine.**

HOT COOLANT CAN CAUSE SEVERE PERSONAL INJURY

- Hot coolant is under pressure. Do not loosen the coolant pressure cap while the engine is hot. Let the engine cool before opening the pressure cap.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Do not service control panel or engine with unit running. High voltages are present. Work that must be done while unit is running should be done only by qualified service personnel.
- Do not connect the generator set to the public utility or to any other electrical power system. Electrocutation can occur at a remote site where line or equipment repairs are being made. An approved transfer switch must be used if more than one power source is connected.
- Disconnect starting battery (negative [-] cable first) before removing protective shields or touching electrical equipment. Use insulative mats placed on dry wood platforms. Do not wear jewelry, damp clothing or allow skin surface to be damp when handling electrical equipment.
- Use insulated tools. Do not tamper with interlocks.
- Follow all applicable state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag open switches to avoid accidental closure.
- With transfer switches, keep cabinet closed and locked. Only authorized personnel should have cabinet or operational keys. Due to serious shock hazard from high voltages within cabinet, all service and adjustments must be performed by an electrician or authorized service representative.

If the cabinet must be opened for any reason:

1. Move genset operation switch or Stop/Auto/Handcrank switch (whichever applies) to Stop.
2. Disconnect genset batteries (negative [-] lead first).
3. Remove AC power to automatic transfer switch. If instructions require otherwise, use extreme caution due to shock hazard.

MEDIUM VOLTAGE GENERATOR SETS (601V TO 15kV)

- Medium voltage acts differently than low voltage. Special equipment and training are required to work on or around medium voltage equipment. Operation and maintenance must be done only by persons trained and qualified to work on such devices. Improper use or procedures will result in severe personal injury or death.
- Do not work on energized equipment. Unauthorized personnel must not be permitted near energized equipment. Induced voltage remains even after equipment is disconnected from the power source. Plan maintenance with authorized personnel so equipment can be de-energized and safely grounded.

GENERAL SAFETY PRECAUTIONS

- Do not work on equipment when mentally or physically fatigued or after consuming alcohol or drugs.
- Carefully follow all applicable local, state and federal codes.
- Never step on equipment (as when entering or leaving the engine compartment). It can stress and break unit components, possibly resulting in dangerous operating conditions from leaking fuel, leaking exhaust fumes, etc.
- Keep equipment and area clean. Oil, grease, dirt, or stowed gear can cause fire or damage equipment by restricting airflow.
- Equipment owners and operators are solely responsible for operating equipment safely. Contact your authorized Onan/Cummins dealer or distributor for more information.

KEEP THIS DOCUMENT NEAR EQUIPMENT FOR EASY REFERENCE.

DO NOT REMOVE

SUPPLEMENT 960-1006

This supplement applies to the LDFP series generator sets and should be used in place of or in addition to information given in the DFP series Operator's Manual 960-0122 and DFP Parts Catalog 960-0222.

OPERATOR'S MANUAL

SPECIFICATIONS SECTION

	156 kW (50 Hz)	176 kW (50 Hz)	209 kW (60 Hz)
Engine Details			
Gross Continuous Output	198 kW (265 bhp) @ 1500 r/min.	198 kW (265 bhp) @ 1500 r/min.	239 kW (320 bhp) @ 1800 r/min.
Generator Set Details			
Rating (Continuous)	156 kW (195 kVA)* 146 kW (182.5 kVA)**	176 kW (220 kVA)* 174 kW (217.5 kVA)**	209 kW (261 kVA)* 207 kW (259 kVA)**
Air Requirements			
Radiator-Cooled Engine	385 m ³ /min (13600 CFM)	385 m ³ /min (13600 CFM)	487 m ³ /min (17210 CFM)
Average Fuel Consumption			
At Rated Load with No. 2 Diesel Fuel	47.3 L/hr (12.5 gph)	53.4 L/hr (14.1 gph)	67. L/hr (17.7 gph)
General			
Approximate Mass (Weight)	2690 kg (5930 lb)	2767 kg (6100 lb)	2767 kg (6100 lb)

* At 0.8 PF with ambient temperature of 29.4 C, 152.4 metres above sea level and 50 percent relative humidity.

** At 0.8 PF with ambient temperature of 50 C, 1000 metres above sea level and 50 percent relative humidity.

DESCRIPTION SECTION

Control Panel

Panel Light and Panel Light Switch: The LDFP includes an instrument panel light and panel light switch. The light remains lit whether or not the generator set operates if the panel light switch is left in the on position.

Panel Fuse: A five-ampere fuse is located on the front of the control panel. It protects the DC control components if a short should occur.

OPERATION SECTION

Fuses

DC Fuse: If the DC fuse in the control panel should burn out, check for a DC short in the control box and remedy. Use a Bussman MTH5 fuse (rated 5 amperes, 250 volts) or equivalent.

AC Fuse: Fuse blocks in the control housing interior where the load connections are made contain five fuses for protection of the alternator from shorts in the control box. If a fuse burns out, find the cause and remedy before replacing the fuse. Be sure to remove the battery ground cable and turn the operation selector switch to "STOP" before beginning inspection. Use a Bussman SC15 fuse (rated 15 amperes, 300 volts, 100 kA interrupting capacity) or equivalent.

WARNING

Failure to disable the generator set during this procedure results in a serious shock hazard if accidental generator set starting occurs.

GENERAL MAINTENANCE SECTION


Air Cleaner Maintenance

Use the time intervals specified in the operator maintenance schedule in the operator's manual for checking the air cleaner element (unless the air cleaner service indicator exhibits the red signal with the engine shut off, then service immediately). Follow this procedure for servicing the air cleaner.

1. Remove the wing nut and end cover from the air cleaner assembly.
2. Remove the primary element from the air cleaner but do not remove the safety element (read Step 3).
 - a. Blow dry compressed air (207 kPa or 30 psi maximum) through the primary element from the inside (clean side). Hold air nozzle at least 25 mm (one inch) away.
 - b. Soak the primary element for at least 15 minutes in water and Donaldson's D1400 solvent to remove soot and carbon as well as dirt. Rinse until water is clear (use low pressure water) and air dry. Do not use compressed air.

Compressed air is recommended if the element must be used immediately after cleaning since the primary element must be dry before use.

- c. Replace the primary element after six cleanings or annually, whichever occurs first.
3. With every third primary element change, replace the safety element.
 - a. Remove safety element from the air cleaner.
 - b. Wipe out the air cleaner interior and inspect the air cleaner.
4. Check the air cleaner and air cleaner tube to engine for leaks. Be sure clamps are tight and that tubing and joints have no leaks.
5. If the safety element was removed for replacement, wipe the seal on the new safety element and install making sure it seats properly.
6. Install the primary element so it seats properly and then secure with the end cover and wing nut.
7. Push the button on the air cleaner service indicator to reset.

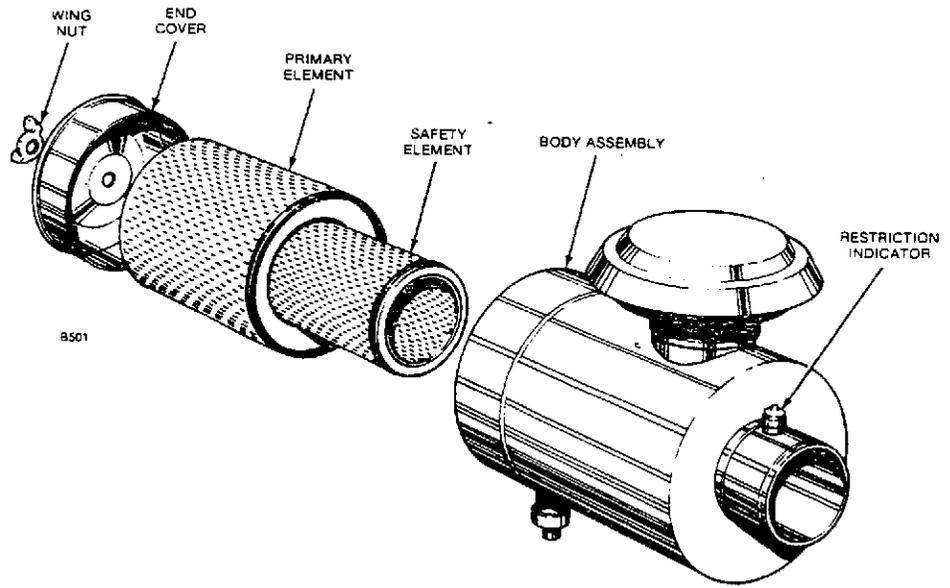

SUPPLEMENTARY PARTS LIST

This Supplementary Parts List Applies to the Standard LDFP Models listed below. Use these parts in place of/or in addition to those listed in the Main Parts Catalog, 960-0222.

SET DATA TABLE

MODEL AND SPEC NO #	ELECTRICAL DATA			
	WATTS	WIRE	HERTZ'	PHASE
156.0 LDFP-517R	156,000	*	50	3
176.0 LDFP-517R	176,000	*	50	3
309.0 LDFP-17R	209,000	*	60	3

* - These sets are Broad Range Reconnectable; Refer to Wiring Diagram inside Control Box Cover.

- The Specification Letter Advances (A to B, B to C, etc.) with Manufacturing Changes.

100-1578 1 Engine, Replacement

MISCELLANEOUS ENGINE PARTS

<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
19 Through - 30	DELETE	-	See separate group for Air Cleaner and associated parts.
60	338-1161	1	Harness, Engine Wiring (Includes Parts Marked +)
62	330-0093	1	+ Box, Outlet
63	330-0099	1	+ Cover Assembly, Outlet Box
64	330-0094	1	+ Box, Outlet
65	330-0004	1	+ Cover, Outlet Box
66	508-0001	1	+ Grommet
67	508-0009	1	+ Grommet
68	331-0149	3	+ Connector
69	331-0150	3	+ Connector
70	508-0201	4	+ Bushing
71	508-0202	4	+ Bushing
72	331-0190	1	+ Conduit, Flex
73	331-0146	1	+ Conduit, Flex
74	331-0184	1	+ Conduit, Flex
75	331-0167	1	+ Conduit, Flex
76	338-0989	1	+ Harness, Governor
77	330-0097	1	+ Bracket, Mounting
78	821-0010	2	+ Screw, Cap - Locking Head ($\frac{1}{4}$ -20 X $\frac{1}{2}$ " Long)
79	331-0180	6	+ Strap, Half


MISCELLANEOUS ENGINE PARTS

<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
80	331-0181	1	+ Strap, Half
81	800-0088	1	+ Screw, Cap - Hex Head - (1/2-13 X 3/4" Lg.)
82	800-0048	3	+ Screw, Cap - Hex Head - (3/8-16 X 3/4" Lg.)
83	331-0155	1	+ Conduit, Flex
84	801-0048	1	+ Screw, Cap - Hex Head - (3/8-24 X 3/4" Lg.)
85	801-0099	2	+ Screw, Cap - Hex Head - (9/16-18 X 3/4" Lg.)
86	526-0198	3	+ Washer, Flat (5/8 ID X 1-1/2" OD X 1/16" Thk)
87	330-0100	1	+ Cover, Outlet Box
88	331-0160	1	+ Conduit, Flex
89	331-0182	1	+ Conduit, Flex
90	331-0153	6	+ Washer, Reducer
91	330-0117	1	+ Bracket, Box Mtg.
92	330-0116	1	+ Bracket, Box Mtg.
93	870-0212	5	+ Nut (1/4-20)
94	850-0060	2	+ Washer, Lock-Spring (1/2")
95	505-0022	1	+ Bushing, Reducer
	151-0423	1	* Actuator, Governor (B.C. #11003-0-0-24)
	151-0399	1	* Control (Includes Mtg. Screw) - (B.C. #DYNI-1000-2-0-24)
	151-0441	1	* Lower, Actuator (B.C. #DYNC-208)
	151-0442	1	* Tod, Threaded (B.C. #GYRF-43-1)
	151-0443	2	* Bearing, Rod End (B.C. #DYNZ-47-2)
	151-0411	1	* Pickup, Magnetic (B.C. #DYNT-10200)
96	309-0272	1	* Bracket, Actuator Mtg. (B.C. #DYNZ-68) Switch, Oil Pressure - Pre-Alarm

* - Check for Barber-Colman numbers when ordering parts.

+ - Parts Included in 338-1161 Wiring Harness.


MISCELLANEOUS ENGINE PARTS

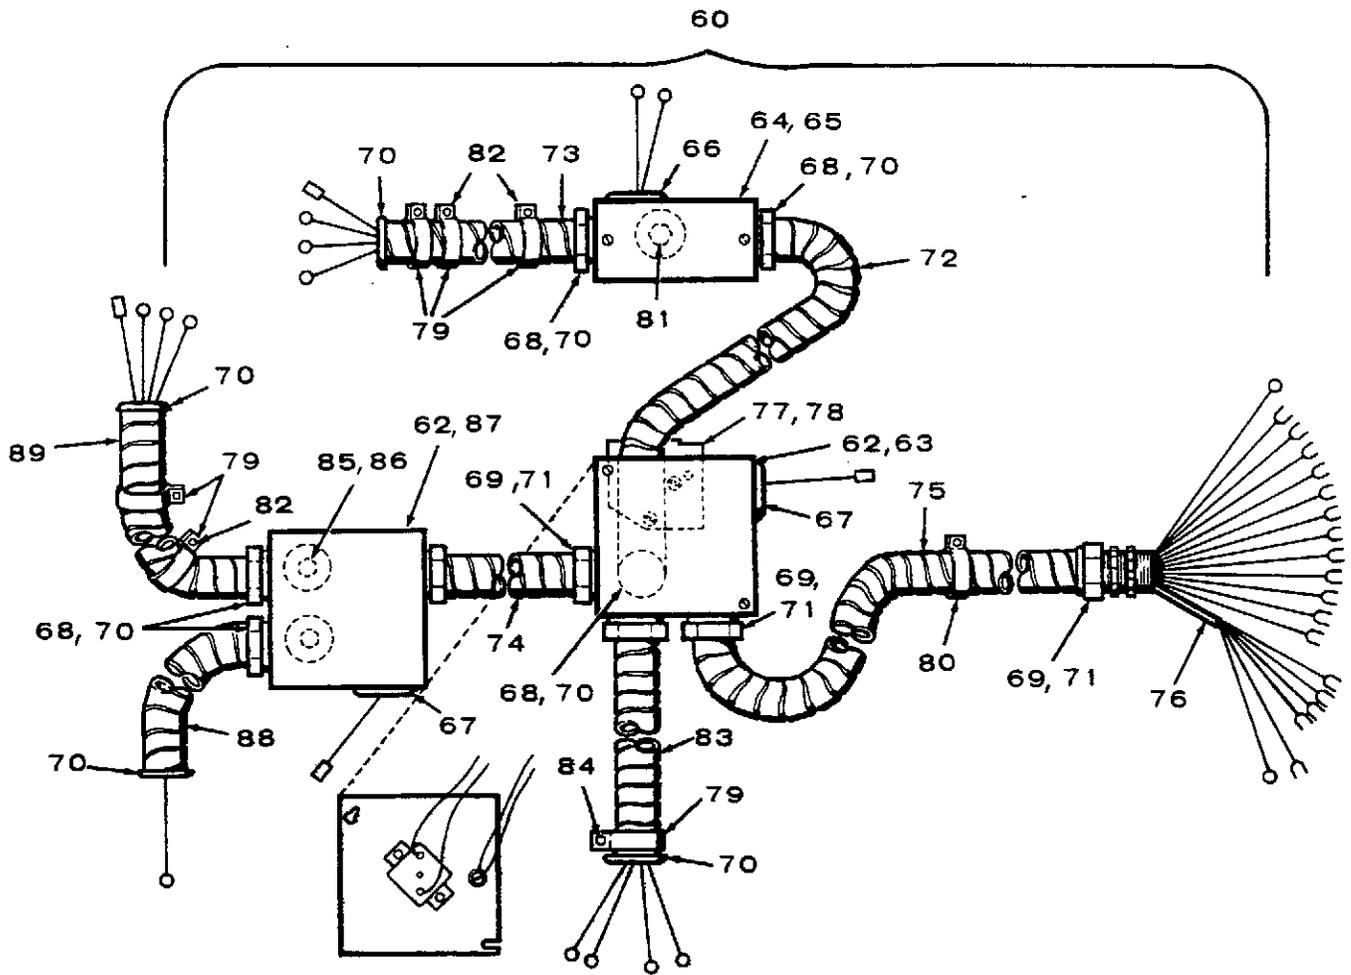

AIR CLEANER PARTS

<u>REF NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
1	503-0863	1	Clamp, Hose
2	503-0862	1	Reducer, Tube
3	503-0864	3	Clamp, Hose
4	140-1544	1	Tube, Air Cleaner
5	140-1545	1	Hood, Air Inlet
6	140-1537	1	Cleaner, Air (Includes Elements)
7	503-0861	1	Elbow
8	140-0757	2	Clamp, Air Cleaner
9	800-0050	6	Screw, Cap-Hex Head - (3/8-16 X 1" LG)
10	870-0281	6	Nut, Hex-Self Locking - (3/8-16)
11	801-0119	2	Screw, Cap-Hex Head - (5/8-18 X 1" LG)
12	850-0070	2	Washer, Lock-Spring - (5/8")
13	140-1546	1	Bracket, Air Cleaner
14	140-1548	1	Indicator, Service
15	140-1631	1	Element, Air Cleaner (Primary)
16	140-1630	1	Element, Air Cleaner (Safety)

AIR CLEANER PARTS

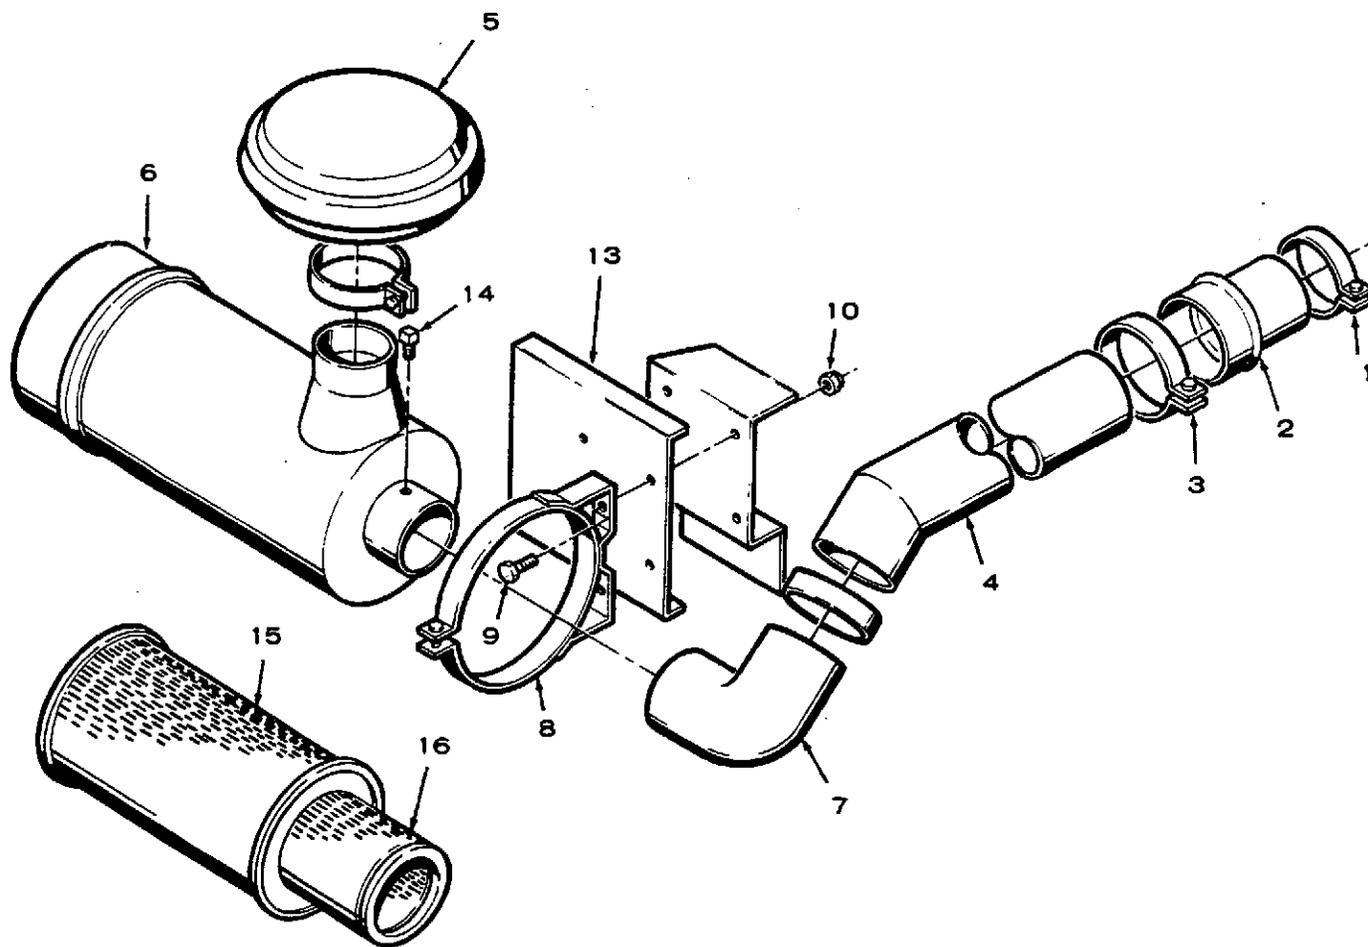

COOLING SYSTEM

<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
1	130-1240	1	Radiator (Includes Cap
2	130-0843	2	Bracket, Radiator Support
4	130-1304	1	Hose, Radiator (Outlet)
5	503-0908	4	Clamp, Radiator Hose
6	130-1330	1	Shroud, Radiator - Fan
11	130-1305	1	Hose, Radiator - (Inlet)
27	405-2016	2	Bracket, Panel Mtg.
28	503-0904	2	Hose, Inlet
29	503-0907	4	Clamp, Hose
30	503-0906	2	Hose, Outlet


CONTROL (AC PORTION)

<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
1	301-4668	1	Box, Control
22	332-2044	1	Regulator Board, Voltage (See Separate Group for Components)
35	321-0223	5	Fuse - 15 Ampere
36	321-0177	1	Holder, Fuse
37	321-0176	1	Holder, Fuse
38	338-1104	1	Harness, Wiring

GENERATOR


<u>REF. NO.</u>	<u>PART NO.</u>	<u>QTY. USED</u>	<u>PART DESCRIPTION</u>
1	201-1941	1	Rotor, Wound
14	Stator, Wound (Includes Bus Bars)		
	220-2136	1	50 Hertz
	220-1912	1	60 Hertz
33	509-0151	1	Seal "O" Ring

VOLTAGE REGULATOR BOARD ASSEMBLY

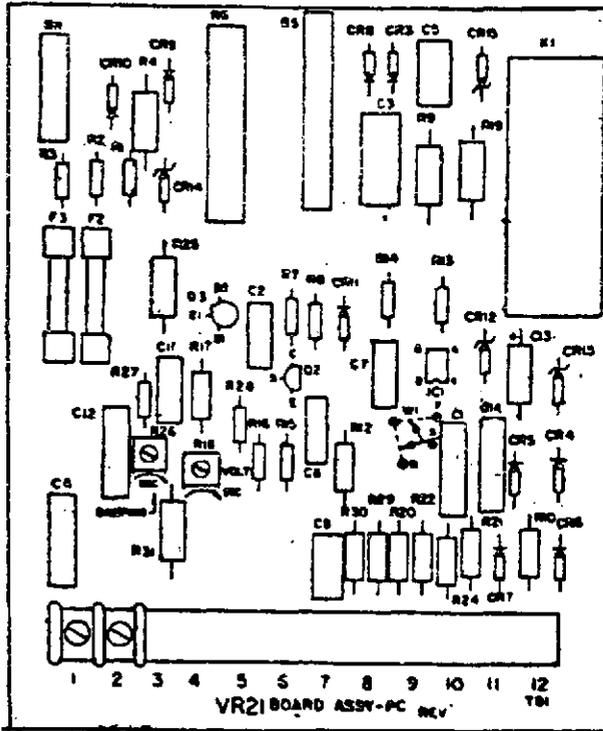

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	332-1954	1	Printed Circuit Board
C1,14	355-0042	2	Capacitor - .47 Mfd., 250 Volt
C2,7	355-0043	2	Capacitor - .22 Mfd, 250 Volt
C3	355-0047	2	Capacitor - .47 Mfd, 400 Volt
C4,12	355-0044	1	Capacitor - .47 Mfd, 250 Volt
C5,8	355-0046	2	Capacitor - 1 Mfd, 100 Volt
C6	355-0056	1	Capacitor - .33 Mfd, 250 Volt
C11	355-0048	1	Capacitor - .1 Mfd, 400 Volt
C13	356-0039	1	Capacitor - Electrolytic, 100 Mfd, 10 Volt
CR3 thru 11	357-0014	9	Rectifier - Silicon
CR12	359-0036	1	Diode, Zener - 5.6 Volt
CR13	359-0025	1	Diode, Zener - 20 Volt
CR14	359-0026	1	Diode, Zener - 18 Volt
F1,2,3	321-0204	3	Fuse - 1.4 Amp
IC1	367-0005	1	Integrated Circuit
Q2	362-0017	1	Transistor - Silicon (NPN)
Q3	361-0004	1	Transistor - Unijunction
R1	350-0355	1	Resistor - 1/2 Watt, 47-Ohm
R2,3	350-0351	2	Resistor - 1/2 Watt, 33-Ohm
R4	350-1075	1	Resistor - 2 Watt, 4,700,000-Ohm
R5	353-0040	1	Resistor, Fixed - 10 Watt, 270-Ohm
R6	353-0039	1	Resistor, Fixed - 15 Watt, 5,000-Ohm
R7	350-0398	1	Resistor - 1/2 Watt, 3,000-Ohm
R8,16	350-0447	2	Resistor - 1/2 Watt, 330,000-Ohm
R10	351-0885	1	Resistor - 1/2 Watt, 51,000-Ohm
R11	352-0151	1	Resistor, Fixed - 5 Watt, 15,000-Ohm
R12	351-0909	1	Resistor - 1/2 Watt, 90,900-Ohm
R13	350-0411	1	Resistor - 1/2 Watt, 10,000-Ohm
R14	350-0443	1	Resistor - 1/2 Watt, 220,000-Ohm
R15,27	350-0435	2	Resistor - 1/2 Watt, 100,000-Ohm
R17	351-0293	1	Resistor - Metal Film - 1/4 Watt, 11,000-Ohm
R18	303-0210	1	Potentiometer - 1/2 Watt, 5,000-Ohm
R20,22,29 & 30	351-0520	4	Resistor - 1/4 Watt, 28,000-Ohm
R21	351-0522	1	Resistor, Metal Film - 1/4 Watt, 5,110,000-Ohm
R24	351-0523	1	Resistor, Metal Film - 1/4 Watt, 8,870,000-Ohm
R25,31	350-1011	2	Resistor - 2 Watt, 10,000-Ohm
R26	303-0211	1	Potentiometer - 1/2 Watt, 100,000-Ohm
R28	350-0588	1	Resistor - 1/2 Watt
TB1	332-1252	1	Terminal Block
CR15	359-0015	1	Diode, Zener - 24 Volt
	321-0163	6	Clip - Fuse
K1	307-1063	1	Relay - Magnetic Reed
R9	350-1014	1	Resistor - 2 Watt, 13,000-Ohm
R19	350-1007	1	Resistor - 2 Watt, 6,800-Ohm

CONTROL (ENGINE SECTION)

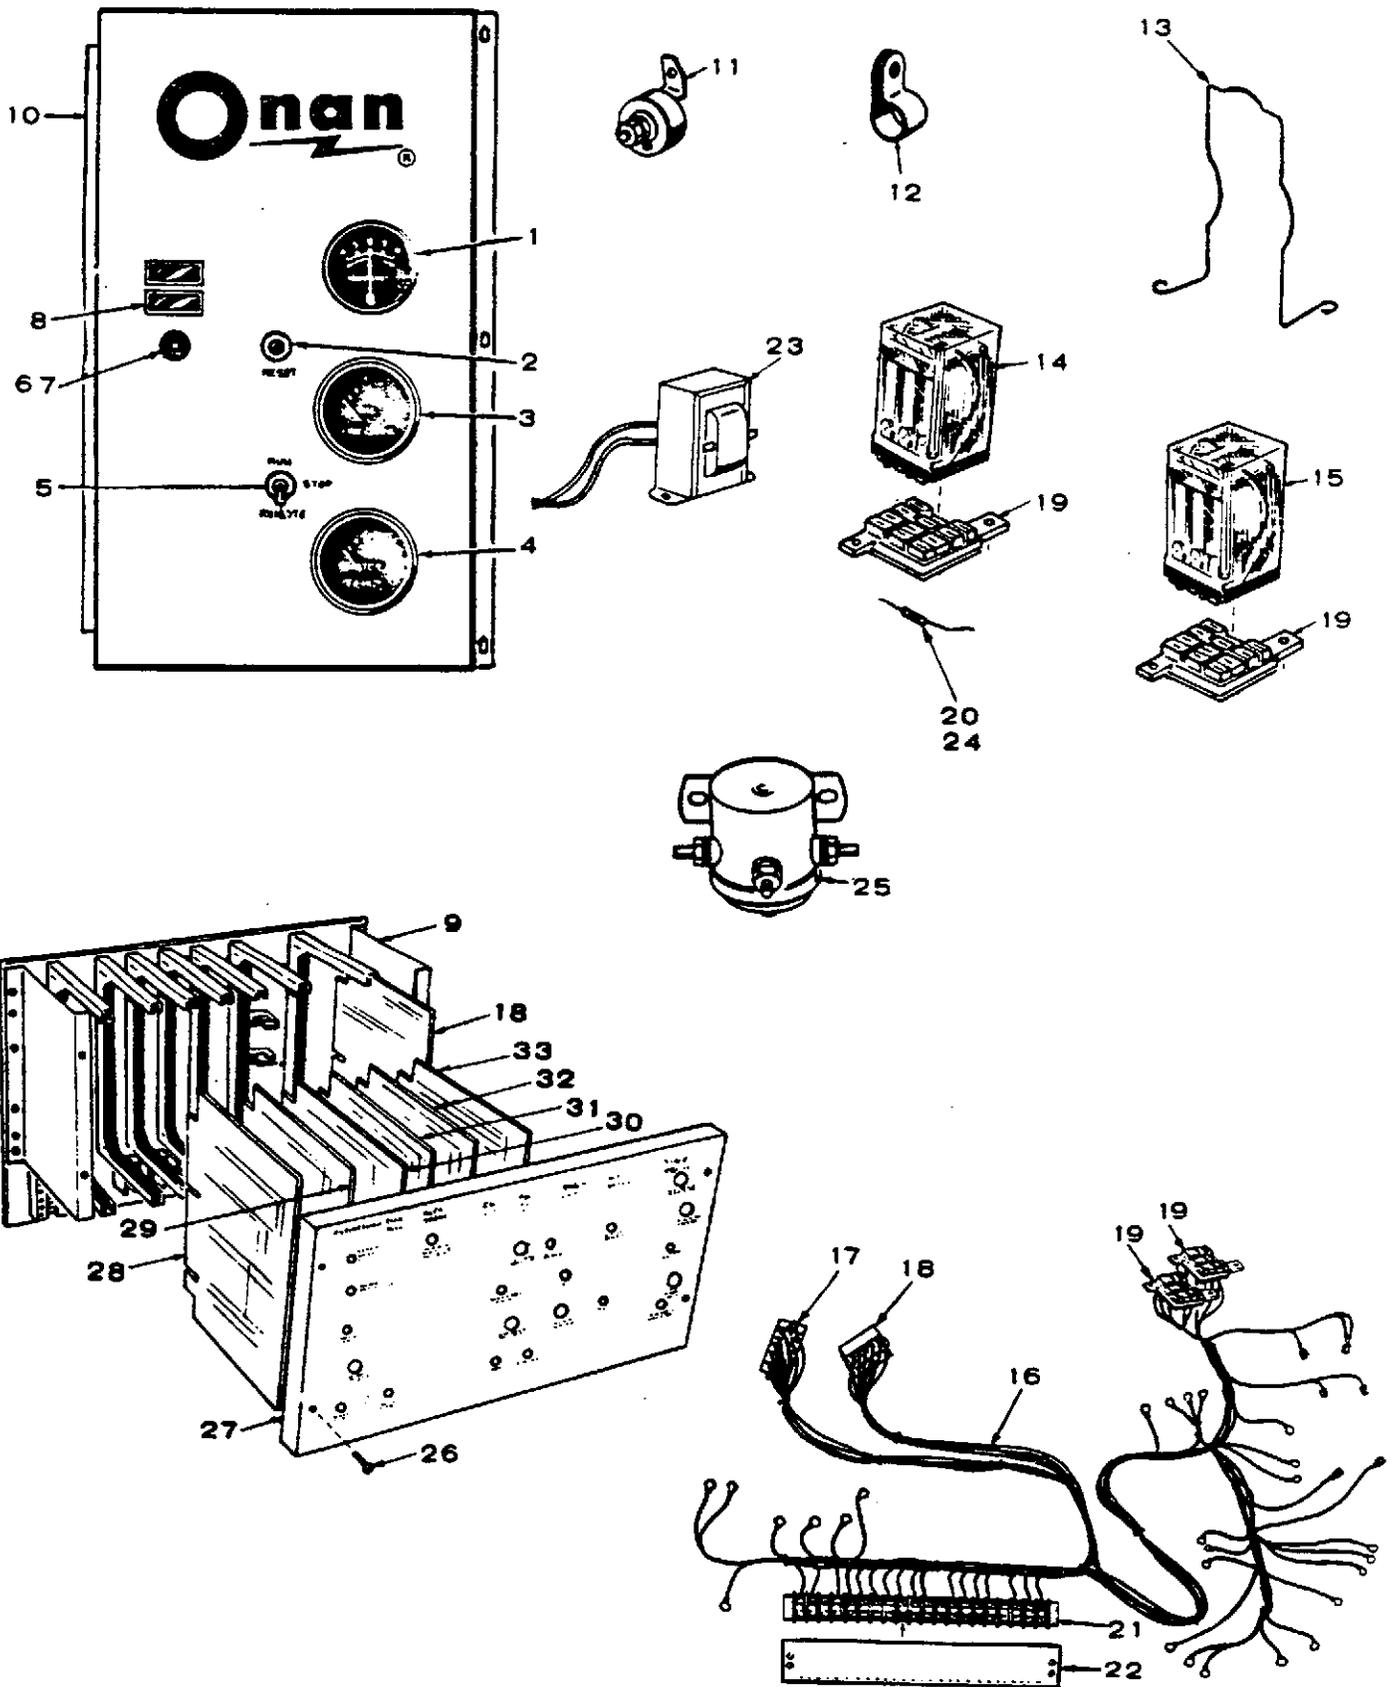


CONTROL (ENGINE SECTION)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	302-0061	1	Ammeter (30-0-30)	16	338-1016	1	Harness, Wiring (Includes Parts Marked †)
2	308-0410	1	Switch, Push	17	332-0984	2	†Connector, Plug, Electrical (12 Pin)
3	193-0243	1	Gauge, Oil Pressure (0-80)	18	300-1579	1	*Module, Time Delay Start-Stop
4	193-0245	1	Gauge, Water Temperature	19	323-0765	2	†Socket, Relay
5	SWITCH, TOGGLE			20	357-0004	1	†Diode
	308-0220	1	Standard Sets	21	332-1005	1	†Board, Terminal (20 Place)
	308-0347	1	Penn State Sets	22	332-1559	1	Strip, Marker
6	321-0147	1	Fuse - 5 Amp	23	315-0361	1	Transformer, Step-down
7	321-0217	1	Fuseholder	24	357-0004	2	Diode
8	LIGHT, INDICATOR			25	307-0061	1	Relay - Start Solenoid
	322-0119	1	Overcrank	26	815-0387	4	Screw, Machine - Pan Head, Cross-Recessed Drive (#6-32 x 1/4")
	322-0120	1	Low Oil Pressure	27	301-4015	1	Cover, Access - Control Modules
	322-0121	1	High Engine Temperature	28	300-1573	1	*Module, Cycle Cranker
	322-0122	1	Low Engine Temperature	29	300-1574	1	*Module, Start-Disconnect
	322-0123	1	Overspeed	30	300-1575	1	*Module, Overspeed Control
	322-0135	1	Over Voltage	31	300-1576	1	*Module, Monitor No. 1
9	300-1572	1	*Chassis, Control	32	300-1577	1	*Module, Monitor No. 2
10	301-4692	1	Panel, Control	33	300-1578	1	*Module, Engine Shutdown
11	193-0250	2	Resistor, Gauge				
12	332-0052	1	Clamp, Loop				
13	307-1157	2	Spring, Hold-down - Relay				
14	307-1061	1	Relay, Armature - Starter Protection				
15	307-1056	1	Relay, Armature - Start Disconnect				

* - See Separate Group for Components.


† - Included in Wiring Harness.

CONTROL CHASSIS

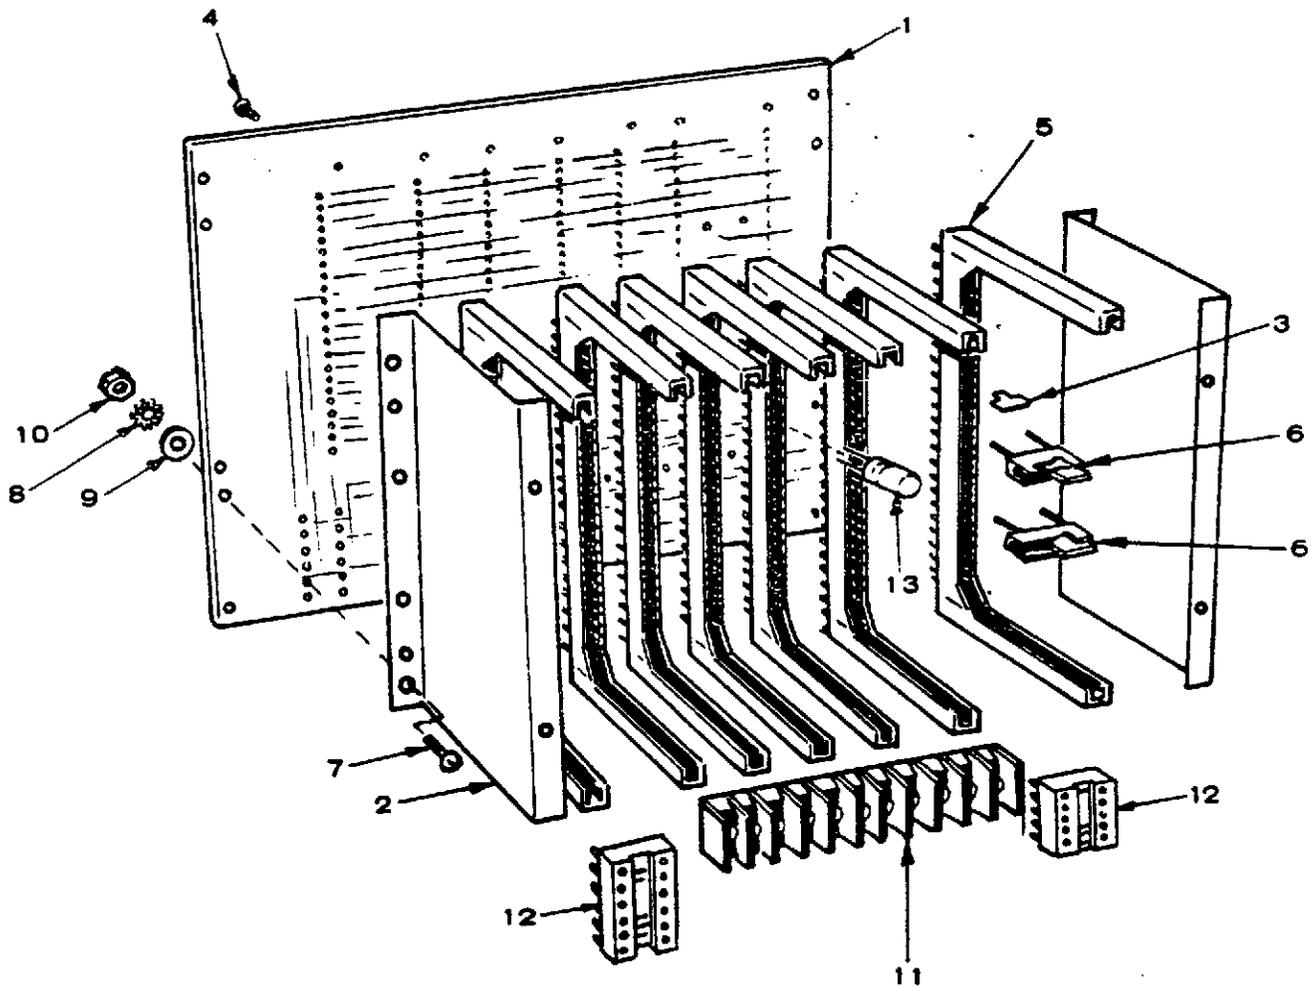


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1572	1	Chassis, Control (Complete)
1	332-1884	1	Board, Printed Circuit
2	301-3880	2	Bracket, Module Cover Mtg.
3	332-1917	14	Plug, Keying
4	812-0029	14	Screw, Machine - Roundhead (#4-40 x 3/8" long)
5	332-1887	7	Socket Plug In Module
6	308-0324	2	Switch, Slide
7	812-0059	4	Screw, Machine - Roundhead (#6-32 x 1/4" long)
8	853-0003	4	Washer, Lock - External (#6)
9	526-0047	4	Washer, Flat (.147" ID x 5/16" OD x 1/32" Thk)
10	860-0006	4	Nut, Hex (#6-32)
11	332-1909	1	Block, Terminal (11 Place)
12	323-0983	2	Connector, Receptacle Electrical (12 Pin)
13	356-0068	1	Capacitor, Electrolytic (180MFD - 40 Volt)

TIME DELAY START-STOP MODULE (300-1579)

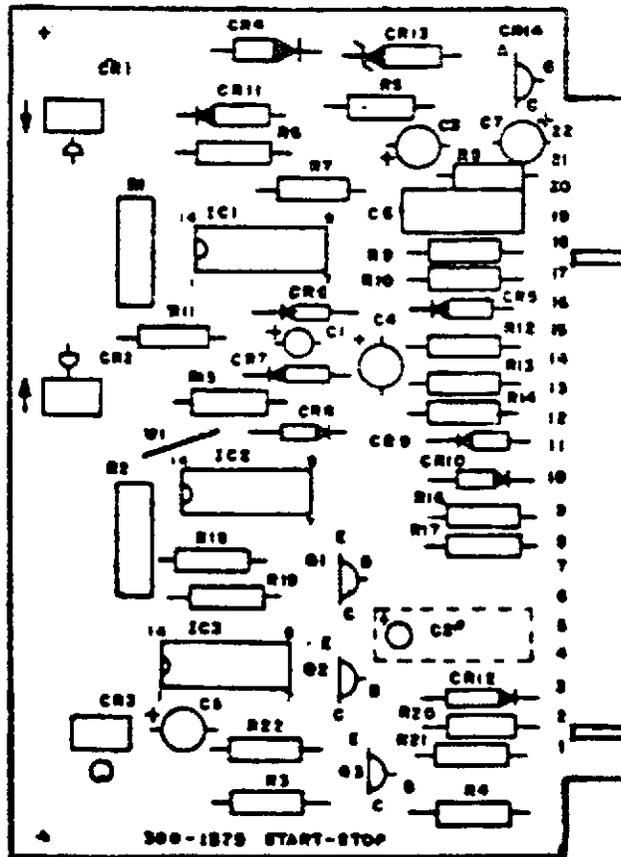


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1579	1	Module, Time Delay Start-Stop (Complete)	1C3	367-0017	1	Integrated Circuit, Counter 7 Stage
C1,2	356-0059	2	Capacitor, Electrolytic (2.2 Mfd., 35 Volt)	Q1,2,3	362-0011	3	Transistor, Signal
C3,4,5	356-0051	3	Capacitor, Electrolytic (6.8 Mfd., 35 Volt)	R1,2	303-0169	2	Potentiometer (3.5 Megohm)
C6	355-0062	1	Capacitor, Composition (1 Mfd., 100 Volt)	R3,19	350-0418	2	Resistor (20,000-Ohm, 2 Watt)
C7	356-0053	1	Capacitor, Tantalum (1.0 Mfd., 35 Volt)	R7	350-0370	1	Resistor (200-Ohm, 1/2 Watt)
CR1	322-0172	1	Lamp, Indicator (Green)	R5,11,15,18	350-0548	4	Resistor (10,000-Ohm, 2 Watt)
CR2	322-0157	1	Lamp, Indicator (Red)	R6	350-0373	1	Resistor (470-Ohm, 1/2 Watt)
CR3	322-0171	1	Lamp, Indicator (Red-Green)	R8	350-0505	1	Resistor (2.7-Ohm, 1/2 Watt)
CR4-12	357-0004	9	Rectifier, Diode (400 Volt, 400 MA)	R10,14,16,22	350-0394	4	Resistor (2,000-Ohm, 1/2 Watt)
CR13	359-0002	1	Diode, Zener (13 Volt, 400 MW)	R12	350-0443	1	Resistor (220,000-Ohm, 1/2 Watt)
CR14	364-0011	1	Rectifier, Gate Control	R13,17,20,21	350-0537	4	Resistor (12,000-Ohm, 2 Watt)
1C1,2	367-0016	2	Integrated Circuit, Timing	R4	350-0376	1	Resistor (360-Ohm, 1/2 Watt)
				R9	350-0524	1	Resistor (100-Ohm, 1/2 Watt)

SHUTDOWN MODULE (300-1578)

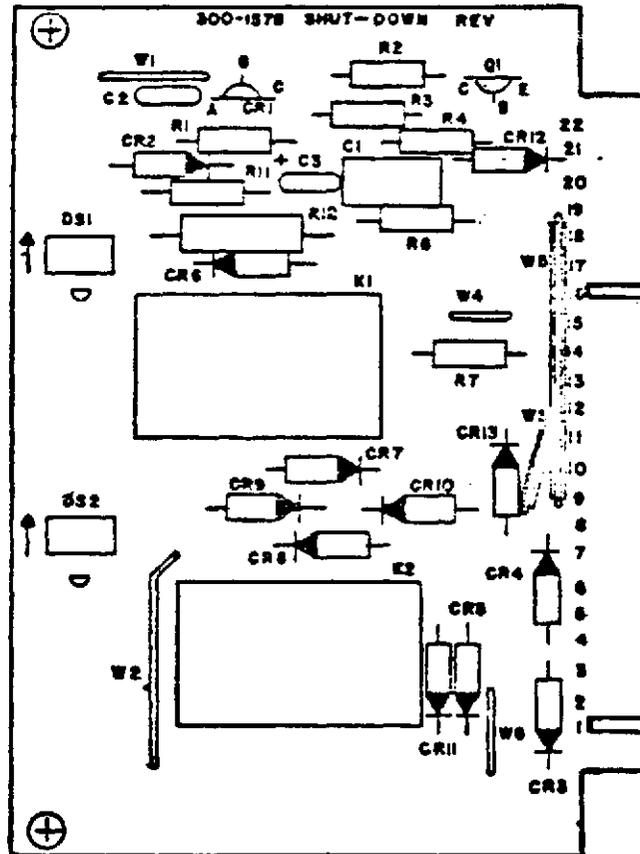


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1578	1	Module, Shut Down (Complete)
C1	355-0045	1	Capacitor, Composition (1 Mfd., 200 Volt)
DS1	322-0175	2	Receptacle, Lamp
DS2	322-0157	1	Lamp, Indicator (Red)
DS2	322-0172	1	Lamp, Indicator (Green)
C2	355-0041	1	Capacitor, Ceramic (.22 Mfd., 35 Volt)
C3	356-0051	1	Capacitor, Tantalum (6.8 Mfd., 35 Volt)
CR1	364-0011	1	Rectifier, Gate Control
CR2-13	357-0004	12	Rectifier, Diode (400 Volt, 400 MA)
K1,2	307-1076	2	Relay
Q1	362-0026	1	Transistor, Signal
R2	350-0398	1	Resistor (3,000-Ohm, 1/2 Watt)
R1	350-0505	1	Resistor (2.7-Ohm, 1/2 Watt)
R7	350-0533	1	Resistor (560-Ohm, 1/2 Watt)
R3	350-0529	1	Resistor (270-Ohm, 1/2 Watt)
R4	350-0540	1	Resistor (2,200-Ohm, 1/2 Watt)
R6	350-0379	1	Resistor (470-Ohm, 1/2 Watt)
R11,12	350-0393	2	Resistor (1,800-Ohm, 1/2 Watt)

MONITOR NUMBER ONE MODULE (300-1576)

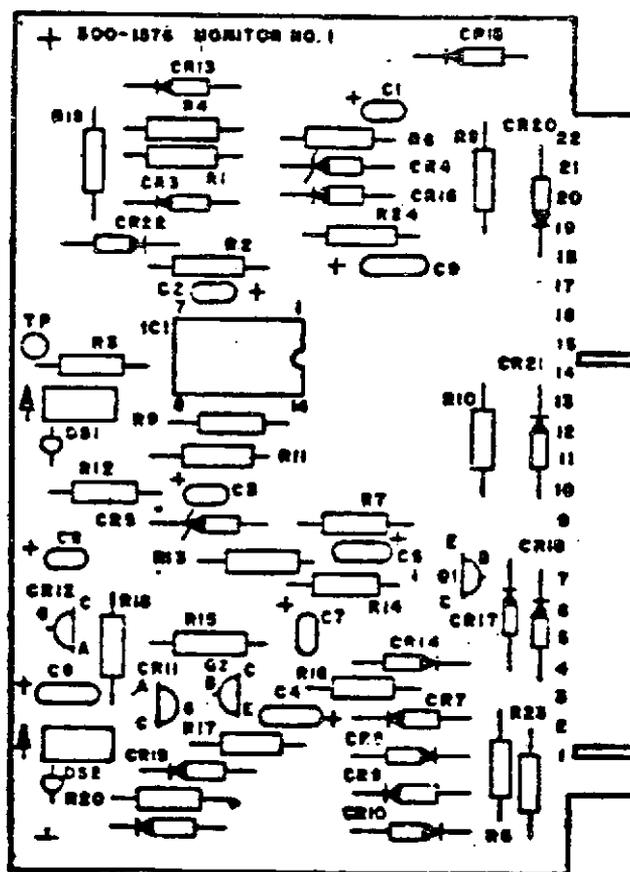


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1576	1	Module, Monitor Number One (Complete)	R1	350-0397	1	Resistor (2,700-Ohm, 1/2 Watt)
C1,2,3, 7,8	356-0051	5	Capacitor, Electrolytic (6.8Mfd., 35 Volt)	R2	350-0446	1	Resistor (300,000-Ohm, 1/2 Watt)
C4	356-0053	1	Capacitor, Tantalum (1 Mfd., 35 Volt)	R3	350-0584	1	Resistor (10 Megohm, 1/2 Watt)
C5,6,9	355-0041	3	Capacitor, Ceramic (.22 Mfd., 35 Volt)	R4,6	350-0536	2	Resistor (1,000-Ohm, 1/2 Watt)
CR3,7-10, 13-23	357-0004	16	Rectifier, Diode (400 Volt, 400 MA)	R5,23	350-0404	2	Resistor (5,100-Ohm, 1/2 Watt)
CR4	359-0026	1	Diode, Zener (18 Volt, 400 MW)	R7,18	350-0505	2	Resistor (2.7-Ohm, 1/2 Watt)
CR5	359-0002	1	Diode, Zener (13 Volt, 400 MW)	R8	350-0544	1	Resistor (4,700-Ohm, 1/2 Watt)
CR11,12	364-0011	2	Rectifier, Gate Control	R9	350-0548	1	Resistor (10,000-Ohm, 1/2 Watt)
DS1,2	322-0157	2	Lamp, Indicator (Red)	R10,17	350-0529	2	Resistor (270-Ohm, 1/2 Watt)
IC1	367-0016	1	Integrated Circuit, Timing	R11,15	350-0398	2	Resistor (3,000-Ohm, 1/2 Watt)
Q1,2	362-0026	2	Transistor, Signal	R12	350-0380	1	Resistor (510-Ohm, 1/2 Watt)
				R13,14	350-0379	2	Resistor (470-Ohm, 1/2 Watt)
				R16	350-0540	1	Resistor (2,200-Ohm, 1/2 Watt)
				R19,20	350-0393	2	Resistor (18,000-Ohm, 1/2 Watt)
				R24	350-0451	1	Resistor (470,000-Ohm, 1/2 Watt)
					322-0175	2	Receptacle, Lamp

MONITOR NUMBER TWO MODULE (300-1577)

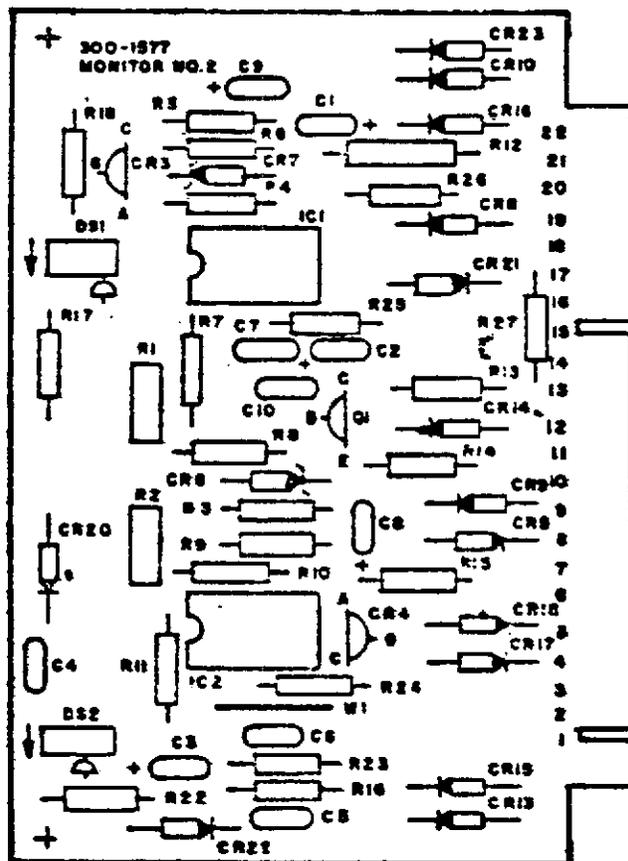


REF. NO.	PART NO.	QTY. used	PART DESCRIPTION
	300-1577	1	Module, Monitor Number Two
C1	356-0066	1	Capacitor, Electrolytic (47 Mfd.)
C2	356-0059	1	Capacitor, Electrolytic (2.2 Mfd., 35 Volt)
C3,8,9	356-0051	3	Capacitor, Electrolytic (6.8 Mfd., 35 Volt)
C4,5,6,7,10	355-0041	5	Capacitor, Ceramic (.22 Mfd.)
CR3,4	364-0011	2	Rectifier, Gate Control
CR5-9,13-18,20-23	357-0004	14	Rectifier, Diode (400 Volt, 400 MA)
CR6	359-0016	1	Diode, Zener (6.8 Volt, 400 MW)
CR7	359-0033	1	Diode, Zener (14 Volt, 5 W)
IC1,2	367-0016	2	Integrated Circuit, Timing
DS1,2	322-0157	2	Lamp, Indicator (Red)
	322-0175	2	Receptacle, Lamp
Q1	362-0011	1	Transistor, Signal
R1,2	303-0169	2	Potentiometer (3.5 Megohm)
R3	350-0420	1	Resistor (24,000-Ohm, 1/2 Watt)
R4,7,10,13,16	350-0548	5	Resistor (10,000-Ohm, 1/2 Watt)
R5,15	350-0379	2	Resistor (470-Ohm, 1/2 Watt)
R6,9	350-0398	2	Resistor (3,000-Ohm, 1/2 Watt)
R8	350-0418	1	Resistor (20,000-Ohm, 1/2 Watt)
R11	350-0466	1	Resistor (2 Megohm, 1/2 Watt)
R12	350-0672	1	Resistor (240-Ohm, 1/2 Watt)
R14	350-0389	1	Resistor (1,200-Ohm, 1/2 Watt)
R17,18	350-0393	2	Resistor (1,800-Ohm, 1/2 Watt)
R22,23	350-0505	2	Resistor (2,700-Ohm, 1/2 Watt)
R24,25,27	350-0451	3	Resistor (470,000-Ohm, 1/2 Watt)
R26	350-0421	1	Resistor (27,000-Ohm, 1/2 Watt)

OVERSPEED MODULE (300-1575)

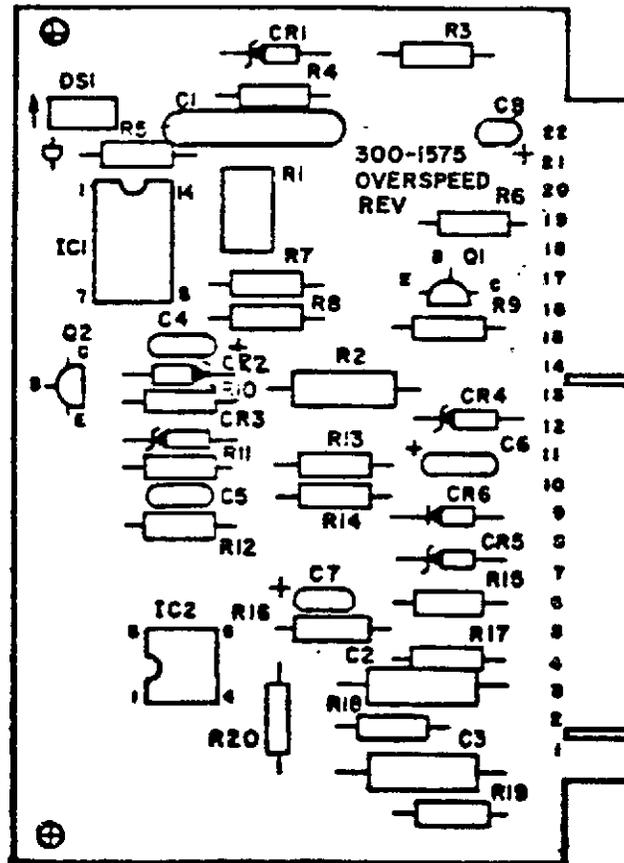


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1575	1	Module, Overspeed (Complete)				
C1	355-0043	1	Capacitor, Composition (22 Mfd., 200 Volt)	CR6	357-0004	1	Rectifier, Diode (400 Volt, 400 MA)
C2,3	355-0010	2	Capacitor, Composition (.0022 Mfd., 100 Volt)	DS1	322-0172	1	Lamp, Indicator (Green)
C4,8	356-0051	2	Capacitor, Electrolytic (6.8 Mfd., 35 Volt)	IC1	322-0175	1	Receptacle, Lamp
C5	355-0049	1	Capacitor, Ceramic (22 Mfd., 1000 Volt)	IC2	367-0002	1	Integrated Circuit
C6,7	356-0066	2	Capacitor, Tantalum (47 Mfd., 20 Volt)	Q1,2	367-0001	1	Integrated Circuit
CR1,3	359-0016	2	Diode, Zener (6.8 Volt, 400,000 Watt)	Q1,2	362-0011	2	Transistor, Signal
CR2	359-0017	1	Diode, Zener (5.1 Volt, 400 MW)	R1	303-0191	1	Potentiometer (5,000-Ohm, 4 Watt)
CR4	359-0032	1	Diode, Zener (8.2 Volt, 400 MW)	R2	350-0683	1	Resistor (680-Ohm, 1 Watt)
CR5	359-0002	1	Diode, Zener (13 Volt, 400 MW)	R3	350-0379	1	Resistor (470-Ohm, 2 Watt)
				R4,6,7	350-0411	7	Resistor (10,000-Ohm, 1/2 Watt)
				R5	350-0414	1	Resistor (13,000-Ohm, 1/2 Watt)
				R9	350-0427	1	Resistor (47,000-Ohm, 1/2 Watt)
				R11,13	350-0394	2	Resistor (2,000-Ohm, 1/2 Watt)
				R14	350-0380	1	Resistor (510-Ohm, 1/2 Watt)
				R15,18	350-0536	2	Resistor (1,000-Ohm, 2 Watt)
				R12,16,20	350-0451	3	Resistor (470,000-Ohm, 1/2 Watt)

START DISCONNECT MODULE (300-1574)

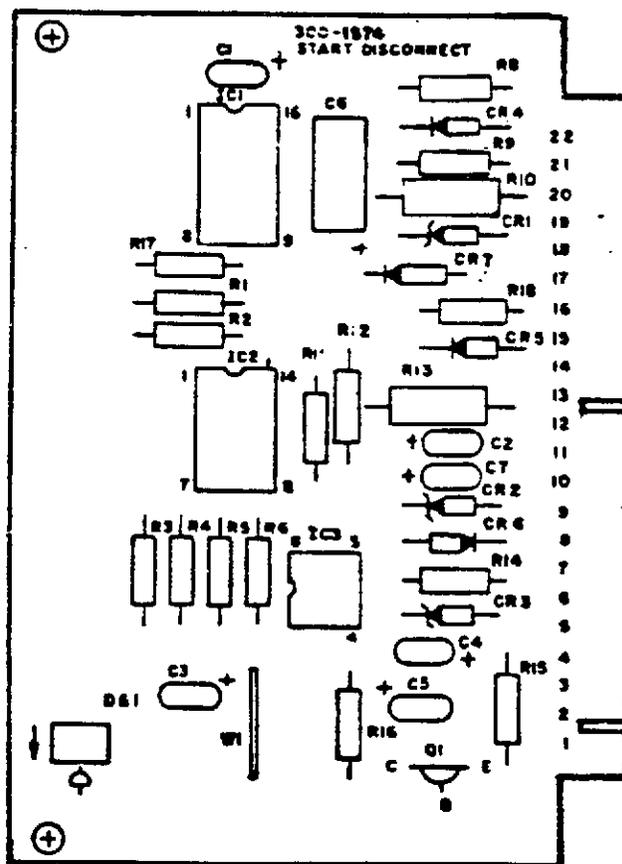

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1574	1	Module, Start Disconnect (Complete)
C1,2,3	356-0051	3	Capacitor, Electrolytic (6.8 Mfd., 35 Volt)
C4,7	356-0066	2	Capacitor, Tantalum (.47 Mfd.)
C5	356-0059	1	Capacitor, Electrolytic (2.2 Mfd)
C6	355-0045	1	Capacitor, Composition (.1 Mfd)
DS1	322-0172	1	Lamp, Indicator
CR1,2	359-0033	2	Diode, Zener (14 Volt, 5 Watt)
CR3	359-0032	1	Diode, Zener (8.2 Volt)
CR4,5,6,7	357-0004	4	Rectifier, Diode (400 Volt, 400 Milliampere)
1C1	367-0014	1	Integrated Circuit (Multivibrator)
1C2	367-0013	1	Integrated Circuit (Dual, 2 Input, and Gate)
1C3	367-0001	1	Integrated Circuit (Oral Amp)
Q1	362-0011	1	Transistor, Signal
R1,2,5,6	350-0418	1	Resistor (20,000-Ohm, 1/2 Watt)
R3,11,12,15,16	350-0548	5	Resistor (10,000-Ohm, 1/2 Watt)
R4,8	350-0422	2	Resistor (30,000-Ohm, 1/2 Watt)
R9	350-0435	1	Resistor (100,000-Ohm, 1/2 Watt)
R10,13	350-0672	2	Resistor (240-Ohm, 1 Watt)
R14	350-0404	1	Resistor (1,000-Ohm, 1/2 Watt)
R18	350-0536	1	Resistor (1,000-Ohm, 1/2 Watt)
R17	350-0459	1	Resistor (1 Megohm, 1/2 Watt)
	322-0175	1	Receptacle, Lamp

CYCLE CRANKER MODULE (300-1573)

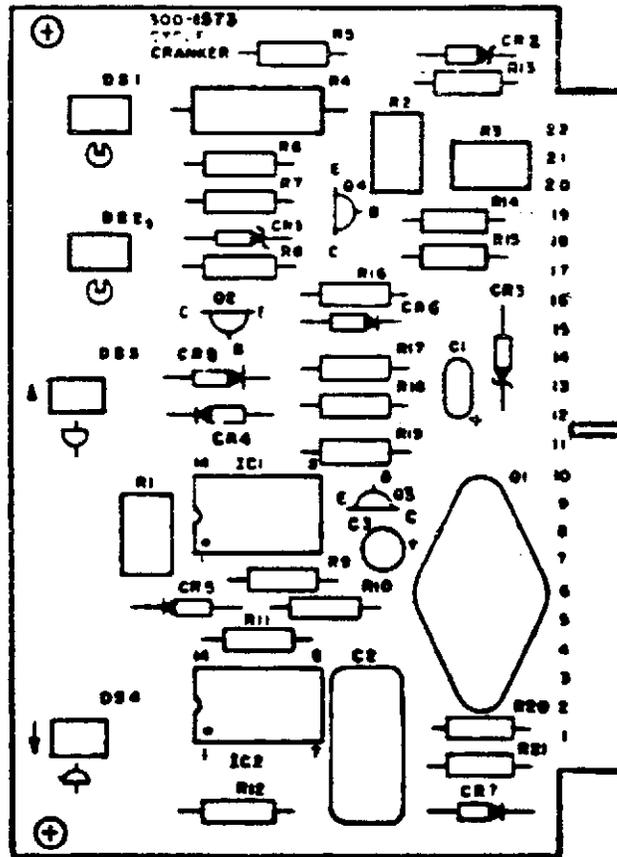

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-1573	1	Module, Cycle Cranker (Complete)	R1	303-0171	1	Potentiometer (100,000-Ohm)
C1	356-0066	1	Capacitor, Tantalum (47 Mfd., 20 Volt)	R2,3	303-0191	2	Potentiometer (5000-Ohm)
C2	355-0042	1	Capacitor (.47 Mfd., 250 Volt)	R4	350-1132	1	Resistor (470-Ohm, 2 Watt)
DS1,2	322-0171	2	Lamp, Indicator (Red-Green)	R5,18	350-0532	2	Resistor (470-Ohm, 1/2 Watt)
DS3	322-0157	1	Lamp, Indicator, (Red)	R6,8	350-0537	2	Resistor (1200-Ohm, 1/2 Watt)
DS4	322-0172	1	Lamp, Indicator (Green)	R7	350-0382	1	Resistor (620-Ohm, 1/2 Watt)
CR1	359-0032	1	Diode, Zener - 8.2 Volt	R9	350-0394	1	Resistor (2000-Ohm, 1/2 Watt)
CR2	359-0016	1	Diode, Zener - 6.8 Volt	R10	350-0418	1	Resistor (20,000-Ohm, 1/2 Watt)
CR3	359-0002	1	Diode, Zener - 13 Volt	R11,13,16	350-0548	5	Resistor (10,000-Ohm, 1/2 Watt)
CR4-8	357-0004	5	Rectifier, Diode - 400 Volt 400 MA	R12	350-0437	1	Resistor (120,000-Ohm, 1/2 Watt)
IC1	367-0017	1	Integrated Circuit, Counter	R14,15	350-0538	2	Resistor (1,000-Ohm, 1/2 Watt)
IC2	367-0016	1	Integrated Circuit, Timing	R19	350-0380	1	Resistor (510-Ohm, 1/2 Watt)
Q1	362-0038	1	Transistor, Power	R20	350-0387	1	Resistor (1,000-Ohm, 1/2 Watt)
Q2,3,4	362-0011	3	Transistor, Signal	C3	356-0051	1	Capacitor, Electrolytic (6.8 Mfd., 35 Volt)
					322-0175	4	Receptacle, Lamp

Index

- Actuator, Governor 8
Alternator 9
Ammeter - AC 55, 57, 59, 61
Ammeter - DC 49, 51, 53
- Base, Sub 26
Bell, End 37, 39
Belt, Drive 9
Board, ByPass 53
Board, Cyle Cranker 53
Board, Engine Monitor 51, 53
Board, Engine Shutdown 53
Board, Magnetic Sensor 51, 53
Board, Over Speed Sensor 51, 53
Board, Over Under Voltage 51, 53
Board, Relay Assembly 51, 53
Board, Remote Indicator 53
Board, Standard Cranker 53
Board, Start Disconnect 51, 53
Board, Terminal 7
Board, Time Delay 51, 53
Breaker, Circuit 69, 71
Bus Bar Assembly 41
- Cable, Battery 5
Cap, Radiator 11
Chassis 29
Cleaner, Air 3
Contactor 19
Control, Engine 49, 51, 53
Control, Generator 55, 57, 59, 61
Controller, Governor 8
- Disk, Drive 37, 39
- Elbow, Exhaust 5, 31, 33
Element, Cleaner, Air 3
Element, Fuel/Water Separator 21
Element, Lube Oil Filter 20
- Fan, Cooling 11
Filter, Oil 20
Filter, Voltage Regulator 66, 67
Frame, Battery 29
- Gauge, Fuel - Level 26
Gauge, Pressure - Fuel 22
Gauge, Pressure - Oil 49, 51, 53
Gauge, Temperature 49, 51, 53
Generator 37, 39
Governor, Electronic 8
Guard, Belt 7, 13, 15
Guard, Fan 11
- Harness, Engine 5
Heater, Control 72
Heater, Generator 48
Heater, Water 18
Housing, Control 65
Housing, Set 34
- Indicator, Service, Air 3
Introduction 2
- Light, Indicator 51, 55, 57, 59, 61
Line, Fuel - Incoming 7
Line, Fuel - Return 7
- Meter, Frequency 55, 57, 59, 61
Meter, Time Totalizing 51, 53, 55, 57, 59, 61
- Module, Indicator, Fault 51
Mount, Vibration 29
Muffler, Exhaust 31, 33
- Panel, Housing - Front 11
Parts, Replacement - Engine 2
Pick Up, Magnetic 8, 43, 44
Point Assembly, Overspeed 43
- Radiator 11
Regulator, Alternator 9
Regulator, Voltage 55, 57, 59, 61
Rotor, Exciter 37, 39, 45
Rotor, Generator 36, 38
- Sender, Pressure - Oil 7
Sender, Tach 7
Sender, Temperature 7
Separator, Fuel/Water 21
Shield, Heat 31, 33
Solenoid, Start 2A, 53
Starter 5
Stator, Exciter 37, 39
Stator, Generator 37, 39
Suppressor, Voltage 46, 47
Switch, Level - Coolant 16
Switch, Over Speed 42
Switch, Pressure - Oil 7
Switch, Selector 51, 53
Switch, Temperature 7, 17
- Table, Data - Electrical 2
Table, Data - Set 2
Tachometer 51, 53
Tang, Drive - Tachometer 7
Tank, Expansion 13
Tank, Fuel - Day 23, 25, 26
Tank, Standpipe 15
Throttle, Vernier 27
Transducer, Watt 63
Transformer, Current 64
- Valve, Control - Temperature 15
Valve, Drain 5
Valve, Float 25
Valve, Globe 13, 15
Valve, Solenoid 13, 15, 25
Voltmeter 55, 57, 59, 61
- Wattmeter 63
Wheel, Sensor - Overspeed 43, 44

Introduction

This Parts Manual applies to the Standard Sets Listed below. The illustrations are arranged in groups of related items, and each part or assembly is identified by a Reference Number. All parts illustrated are typical, and unless otherwise mentioned in the description column the parts are interchangeable between models.

These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The Right and Left sides of the Set are determined by FACING the FRONT of the Set (Engine End)

Set Data Table

MODEL IDENTIFICATION	RATING	RPM RATING	BATTERY VOLTAGE
165.0 DFP - */# @	165,000 WATTS	1500 RPM	24 VDC
190.0 DFP - */# @	190,000 WATTS	1500 RPM	24 VDC
200.0 DFP - */# @	200,000 WATTS	1800 RPM	24 VDC
230.0 DFP - */# @	230,000 WATTS	1800 RPM	24 VDC

Electrical Data Table


*VOLTAGE CODE	VOLTS	HERTZ	WIRE	PHASE	NOTES
5D	120/240	60	4	3	
6D	240/480	60	4	3	
7	220/380	60	4	3	
9X	347/600	60	4	3	
17	120/208	60	12	3	+
	127/220	60	12	3	
	139/240	60	12	3	
	240/416	60	12	3	
	254/440	60	12	3	
	277/480	60	12	3	
517	110/190	50	12	3	+
	115/200	50	12	3	
	120/208	50	12	3	
	127/220	50	12	3	
	220/380	50	12	3	
	230/400	50	12	3	
	240/416	50	12	3	
	254/440	50	12	3	
17R50	Same as 17	60	12	3	&

- * - Voltage Codes follow Model Letter designations.
- # - Specification Number: Number 1 is Standard, all others indicate variations.
- @ - Specification Letter: Letter advances (A to B, B to C, etc) with major manufacturing changes.
- + - The Stators are Reconnectible.
- & - Penn State Sets Only, Special Parts identified in manual when used.

Engine Replacement Parts


All Engine replacement parts must be ordered from the Engine Manufacturer, except those modified or added by Onan. When ordering engine parts, refer to the Engine Manufacturer's Nameplate and supply the Model, Specification, Serial Numbers and other available information. Refer to the Engine Manufacturer's Manuals for your nearest authorized Parts Distributor; or contact the Onan Distributor from whom you purchased this set, for assistance in ordering the replacement parts.

Start Solenoid
Begin Spec M

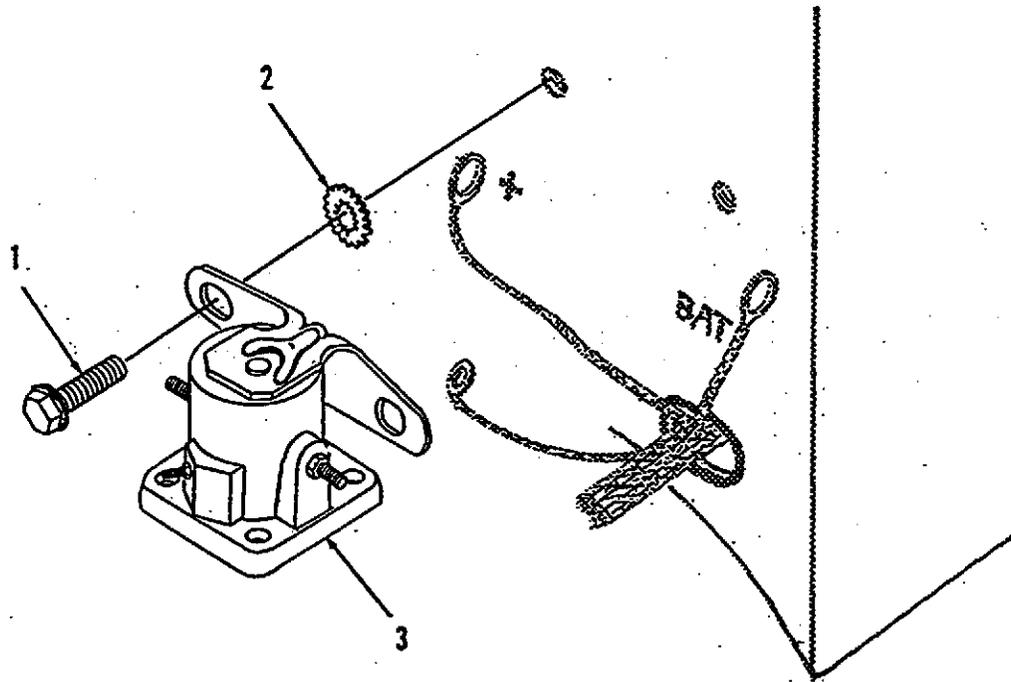

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0010	2	Screw, Self-locking - Hex Head (1/4-20 x 1/2")	2	856-0006	2	Washer, Lock - EIT (1/4")
				3	307-2167	1	Solenoid, Start (K2)






Air Cleaner

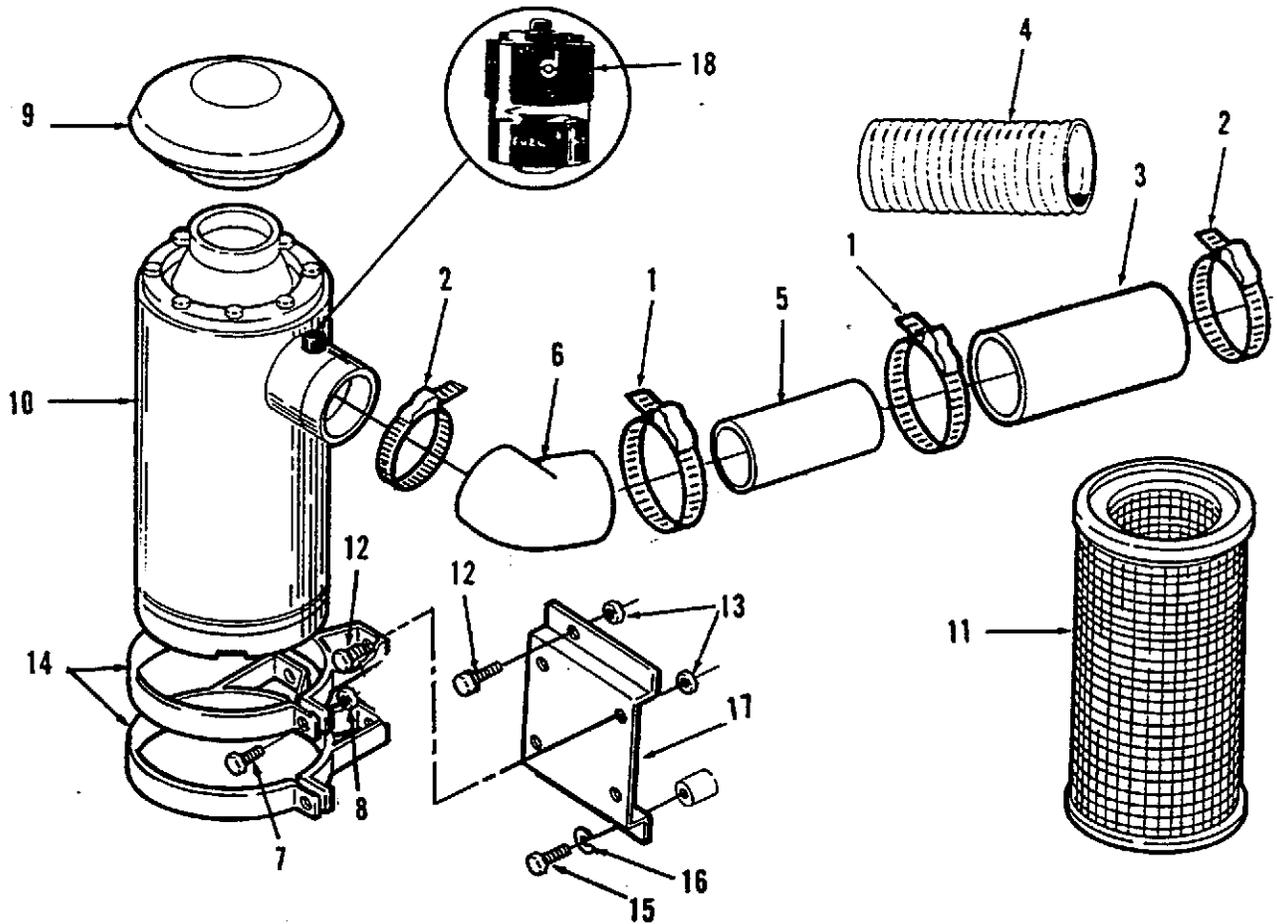

M1290

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0863	2	Clamp, Hose - Begin July 1981	10	140-1346	1	Air Cleaner (Includes Element)
2	503-0863	2	Clamp, Hose	11	140-1376	1	Element
3	503-0806	1	Hose - Begin July 1981	12	821-0029	5	Screw, Self-locking - Hex (3/8-16 x 3/4")
4	503-0855	1	Hose - 1970 Thru June 1981	13	870-0281	5	Nut, Self-locking - Hex
5	140-1795	1	Tube - Begin July 1981	14	140-1345	2	Band, Mounting
6	503-1092	1	Elbow, Hose - Begin July 1981	15	801-0119	2	Screw, Cap - Hex Head (5/18-18 x 1")
7	800-0032	2	Screw, Cap - Hex Head (5/16-18 x 1-3/4")	16	850-0070	2	Washer, Lock - Spring (5/8")
8	870-0257	2	Nut, Self-locking - Hex (5/16-18)	17	140-1349	1	Bracket, Mounting
9	140-1347	1	Cap, Air Cleaner	18	140-1548	1	Indicator, Service

Miscellaneous Engine Parts Left Side

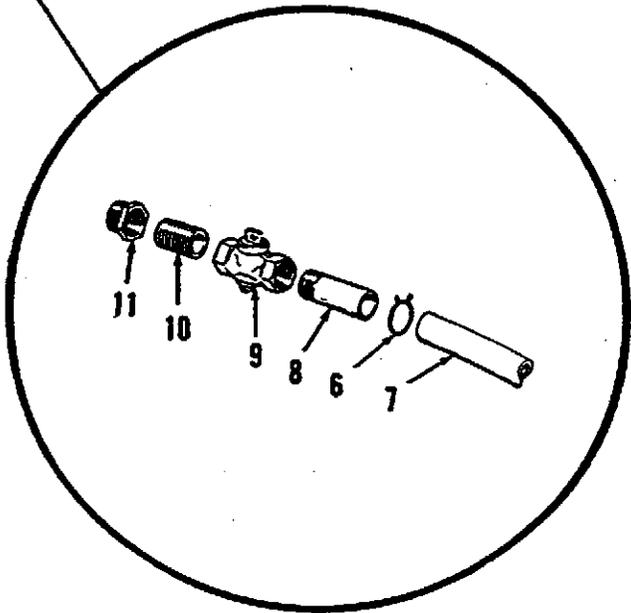
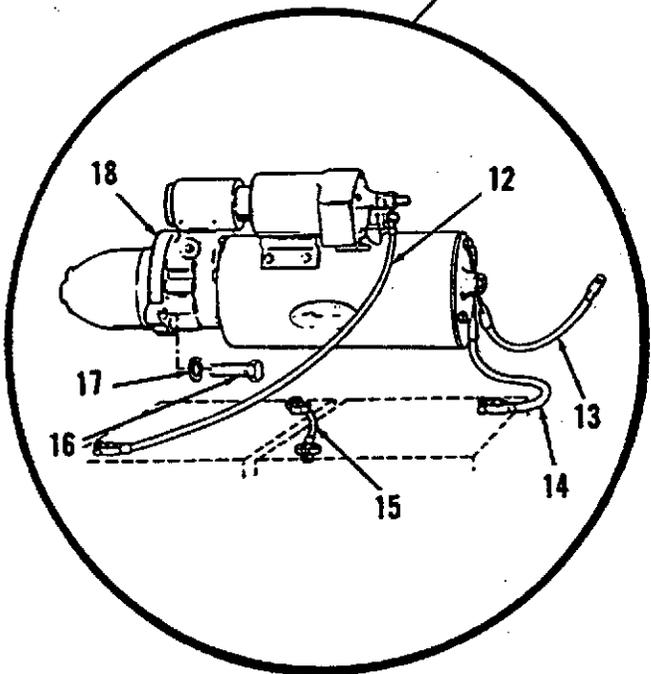
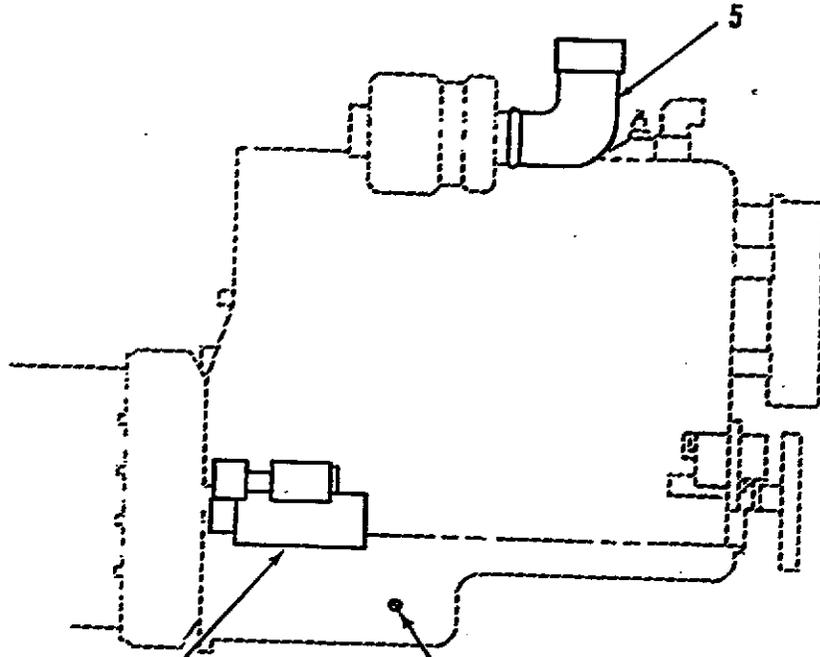
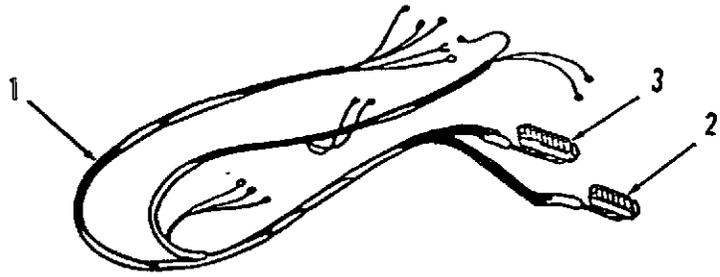
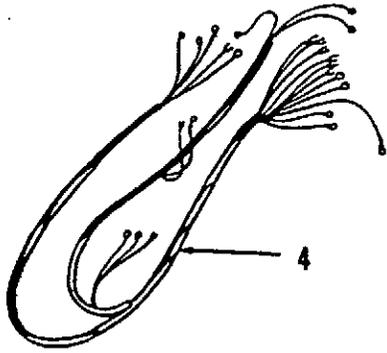


M1239

Miscellaneous Engine Parts Left Side

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-2067	1	Harness, Wiring - Begin Spec M (Includes Connectors)	9	504-0011	1	Valve
2	323-1304	1	Housing, Connector - 6 Place	10	505-0100	1	Nipple, Pipe - Close
	323-1200	6	Contact, Pin	11	505-0022	1	Bushing, Reducer - Hex
3	323-1306	1	Housing, Connector - 8 Place	12	416-0636	1	Cable, Battery - Positive
	323-1200	8	Contact, Pin	13	416-0632	1	Cable, Electrical - Ground
4	338-0957	1	Harness, Wiring - Spec H Thru L	14	416-0639	1	Cable, Battery - Negative
5	155-1035	1	Elbow, Exhaust	15	416-0473	1	Cable, Electrical - Jumper
6	503-0197	1	Clamp, Loop	16	800-0135	3	Screw, Cap - Hex Head (5/16-11 x 2-1/4")
7	503-0888	1	Hose	17	850-0070	3	Washer, Lock - Spring (5/8")
8	505-0185	1	Nipple, Pipe - Half	18	191-1348	1	Starter

Miscellaneous Engine Parts
Right Side

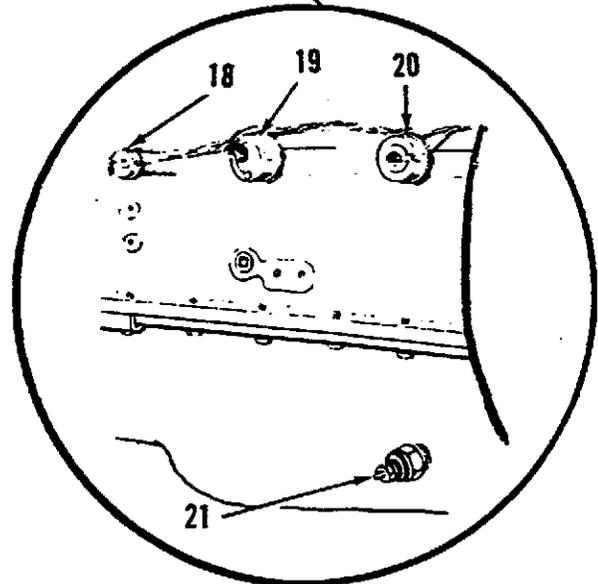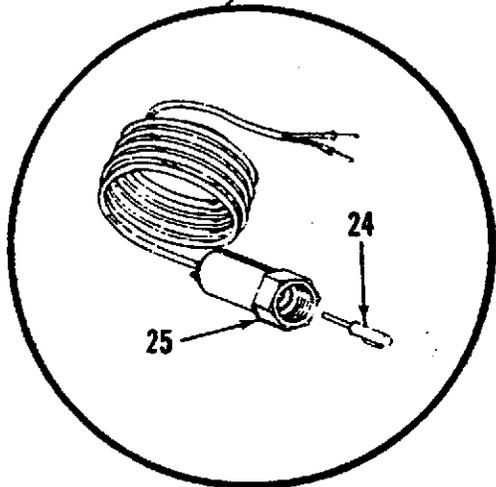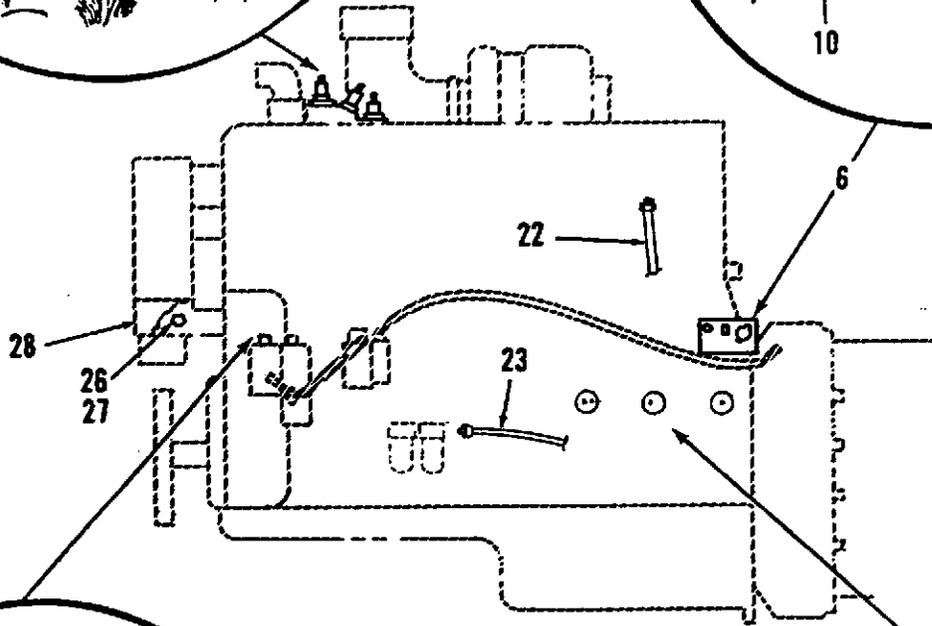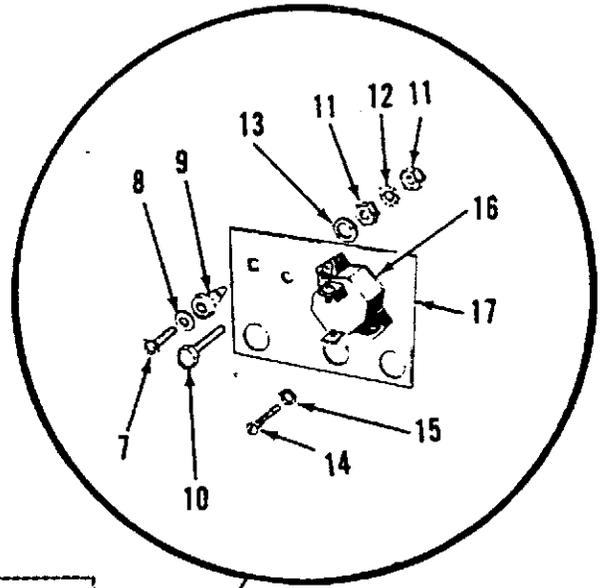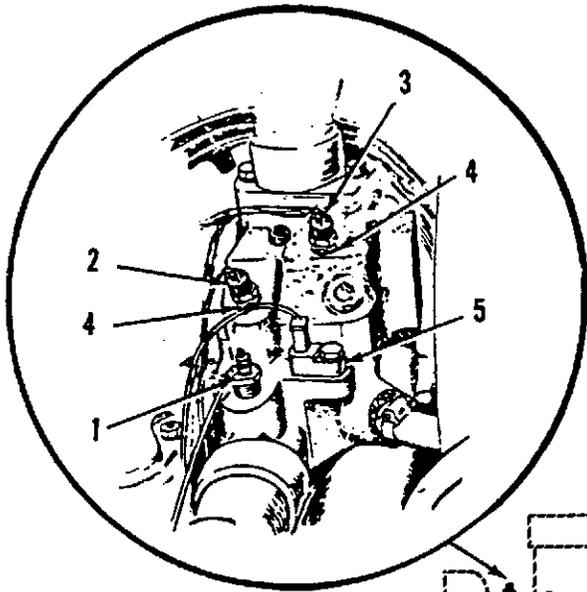


M1240

Miscellaneous Engine Parts Right Side

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Sender, Temperature - Engine Coolant (E2)	14	813-0103	2	*Screw, Machine - Round Head (#10-32 x 3/4")
	193-0247	1	Begin Spec K	15	850-0030	2	*Washer, Lock - Spring (#10)
	193-0109	1	Spec H - J	16	320-0240	1	*Breaker, Circuit
2	309-0178	1	Switch, Thermostatic - Coolant Temperature (S2)	17	332-1382	1	*Board, Terminal
3	309-0179	1	Switch, Thermostatic - Coolant Temperature - Shutdown (S6)	18	309-0272	1	Switch, Pressure - Oil - Alarm (S5)
4	505-0117	1	Bushing, Reducer - Flush	19			Sender, Pressure - Oil (E1)
5	309-0269	1	Switch, Temperature - Low Engine Temperature (S4)		193-0244	1	Begin Spec K
6	332-1383	1	Terminal Assembly (Includes Parts Marked*)		193-0108	1	Spec H - J
7	809-0035	1	*Screw, Tapping - Round Head (#8 x 3/4")	20	309-0169	1	Switch, Pressure - Oil - Shutdown (S1)
8	508-0015	1	*Washer, Insulating	21			Sender, Temperature - Oil (E5)
9	870-0196	1	*Nut, Insulated		193-0109	1	Spec H - J
10	800-0005	1	*Screw, Cap - Hex Head (1/4-20 x 3/4")	22	501-0216	1	Line, Fuel - Return
11	862-0001	2	*Nut, Hex (1/4-20)	23	501-0084	1	Line, Fuel - Incoming
12	856-0006	1	*Washer, Lock - EIT (1/4")	24	302-0753	1	Tang, Drive - Tachometer
13	850-0040	1	*Washer, Lock - Spring (1/4")	25	302-0750	1	Sender - Tachometer
				26	800-0130	1	Screw, Cap - Hex Head (5/8-11 x 1")
				27	850-0070	1	Washer, Lock - Spring (5/8")
				28	191-1144	1	Guard, Belt

*- Parts included in Circuit Breaker Assembly.


Electronic Governor

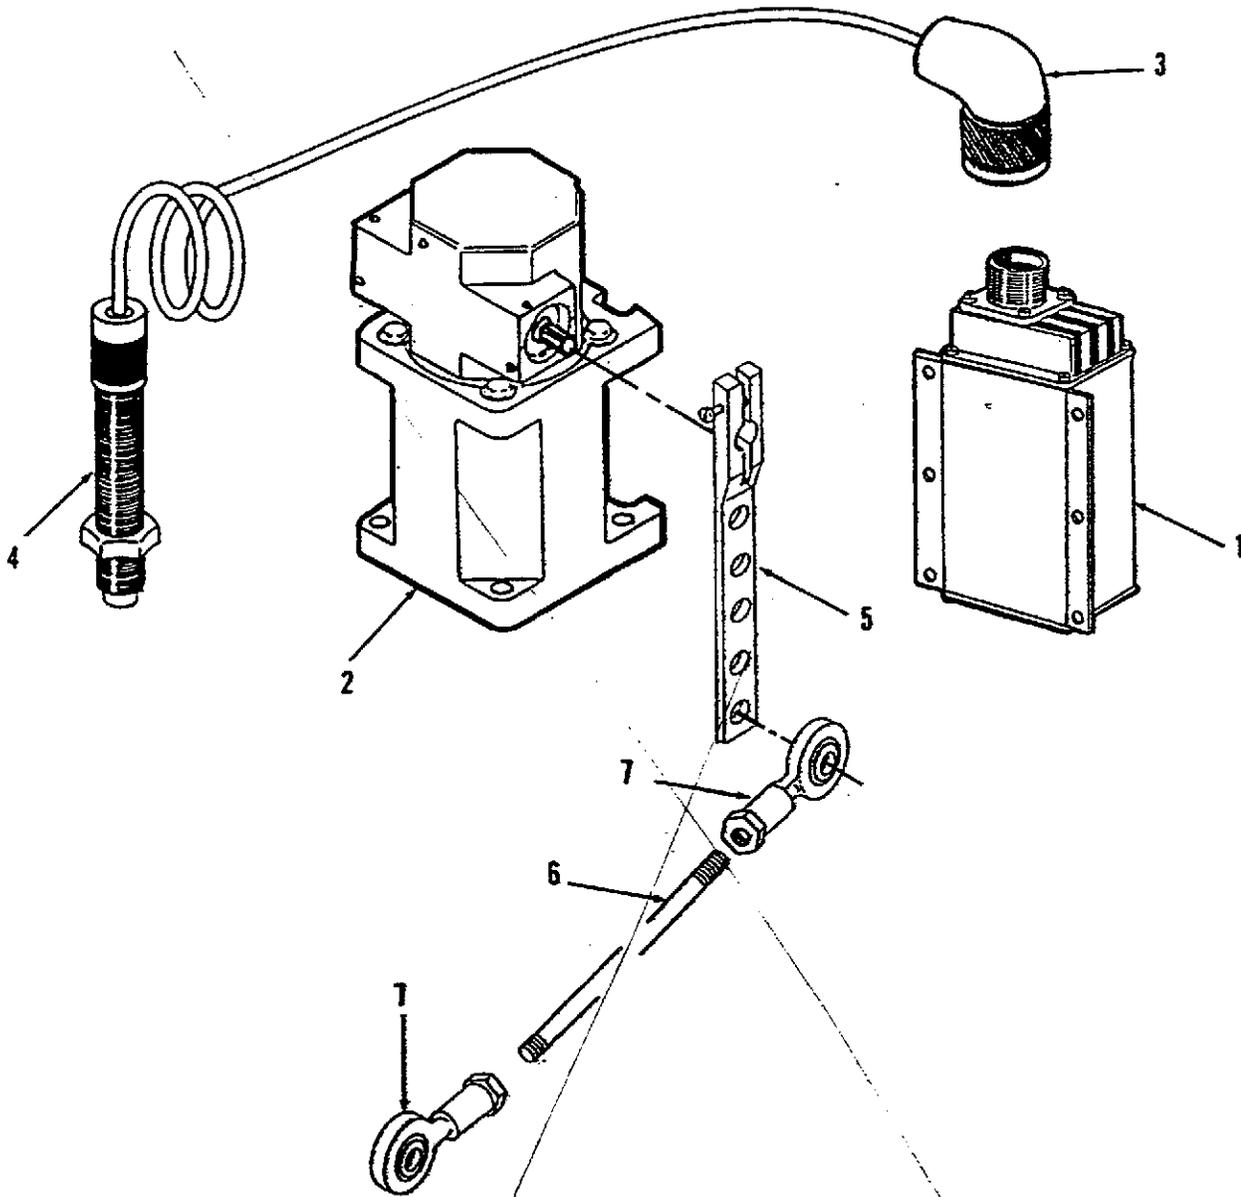

FS1272-1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	151-0399	1	Controller	4	151-0411	1	Pickup, Magnetic
2	151-0419	1	Actuator	5	151-0441	1	Lever
3	338-0989	1	Harness, Wiring	6	151-0442	1	Rod, Threaded
				7	151-0443	2	Joint, Ball

Electric Governor

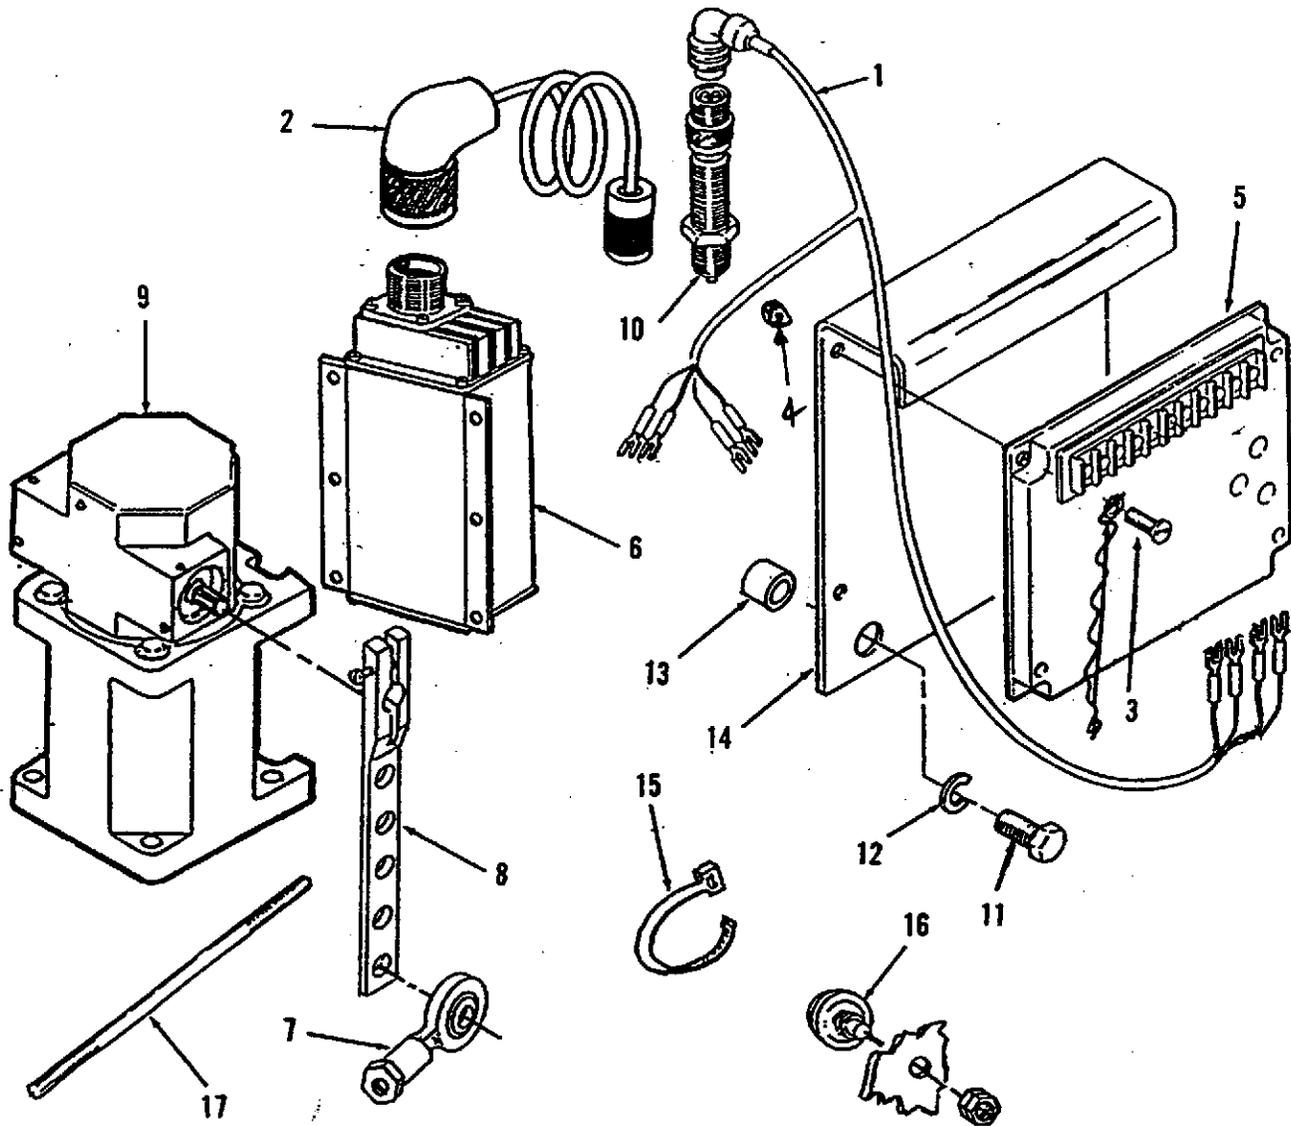


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-1777	1	Harness, Wiring - Begin Spec M	8	151-0441	1	Lever - Spec H Thru L
2	338-1086	1	Harness, Wiring - Spec H Thru L	9	151-0419	1	Actuator - Spec H Thru L
3	813-0103	4	Screw, Machine - Round Head (#10-32 x 3/4")	10	151-0411	1	Pickup, Magnetic
4	870-0131	4	Nut, Self-locking, Hex (#10-32)	11	800-0151	2	Screw, Cap - Hex Head (3/4-10 x 1")
5	151-0637	1	Controller, Governor - Begin Spec M	12	850-0079	2	Washer, Lock - Spring (3/4")
6	151-0399	1	Controller, Governor - Spec H Thru L	13	370-4040	2	Spacer, Sleeve
7	151-0443	2	Joint, Ball - Spec H Thru L	14	150-2007	1	Bracket, Mounting - Begin Spec M
				15	332-1445	9	Tie, Cable
				16	151-0402	1	Potentiometer - Speed Control - Spec H Thru L (Mounted in Set Control)
				17	151-0442	1	Rod, Threaded - Spec H Thru L

SK

NOT IN DESIGN BOOK


Alternator

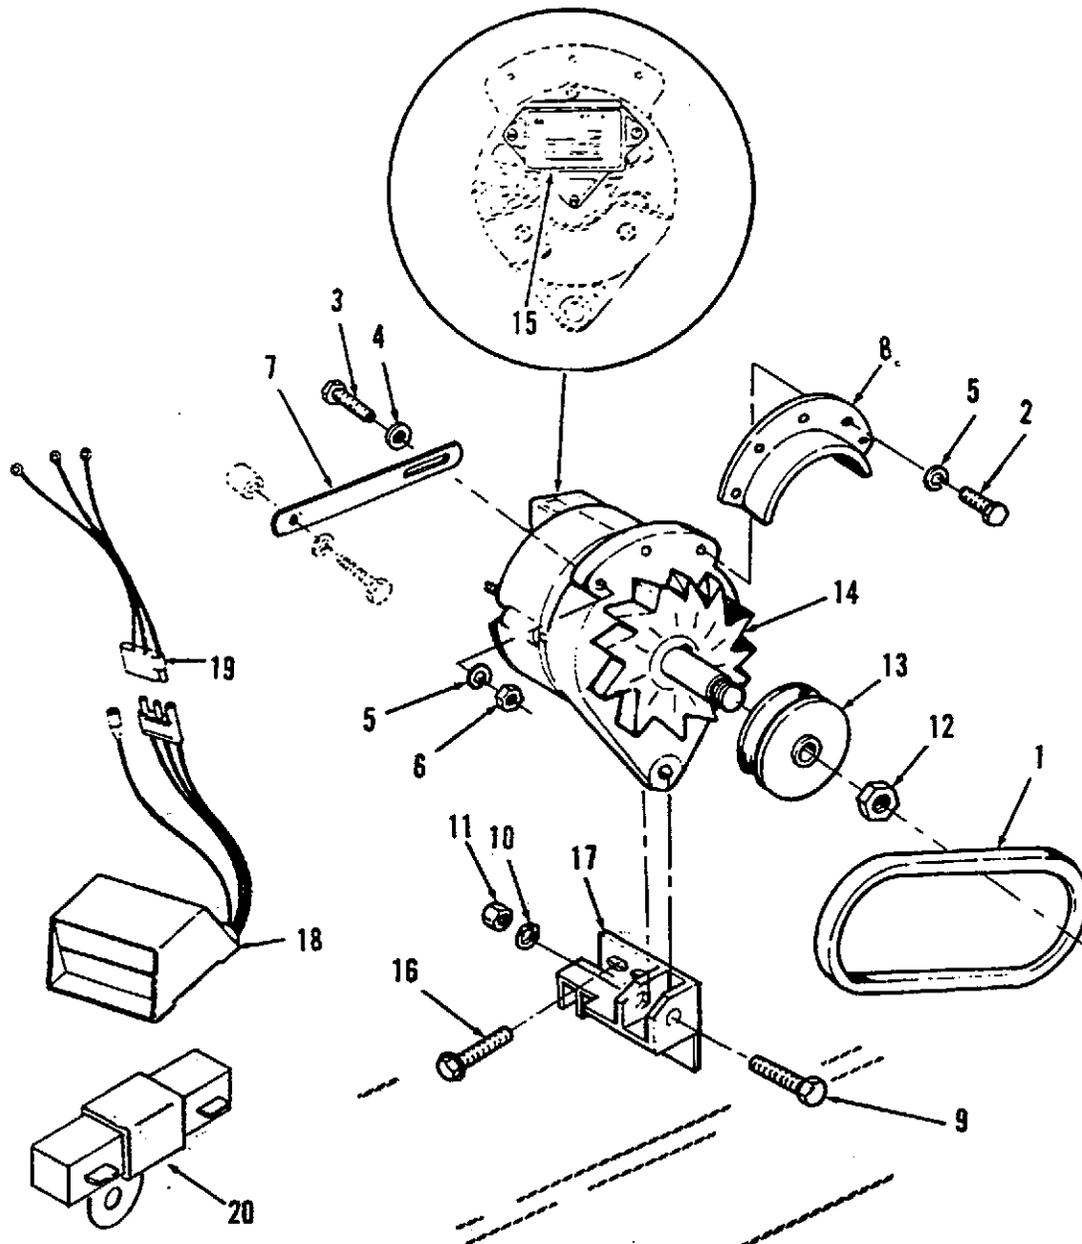

ES1138

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	511-0084	1	Belt	13	191-0781	1	Pulley
2	821-0014	1	Screw, Self-locking - Hex (5/16-18 x 1/2")	14	191-0688	1	Alternator Standard
3	800-0030	1	Screw, Cap - Hex Head (5/16-18 x 1-1/4")	14	191-1258	1	Marine
4	526-0030	1	Washer, Flat (5/16")	15	191-0733	1	Regulator, Voltage (Used with Standard Alternator)
5	850-0045	2	Washer, Lock - Spring (5/16")	16	821-0029	2	Screw, Self-locking - Hex (3/8-16 x 3/4")
6	862-0015	1	Nut, Hex (5/16-18)	17	191-1141	1	Bracket, Mounting
7	191-0869	1	Strap, Adjusting	18	191-0548	1	Regulator, Voltage (Used with Marine Alternator)
8	191-0725	1	Guard, Belt	19	191-0681	1	Cable, Electrical (Used with Marine Alternator)
9	800-0095	1	Screw, Cap - Hex Head (1/2-13 x 2-1/4")	20	191-0550	1	Resistor (Used with Marine Alternator)
10	850-0060	1	Washer, Lock - Spring (1/2")				
11	862-0016	1	Nut, Hex (1/2-13)				
12	868-0007	1	Nut, Hex (5/8-18)				

Cooling System Radiator

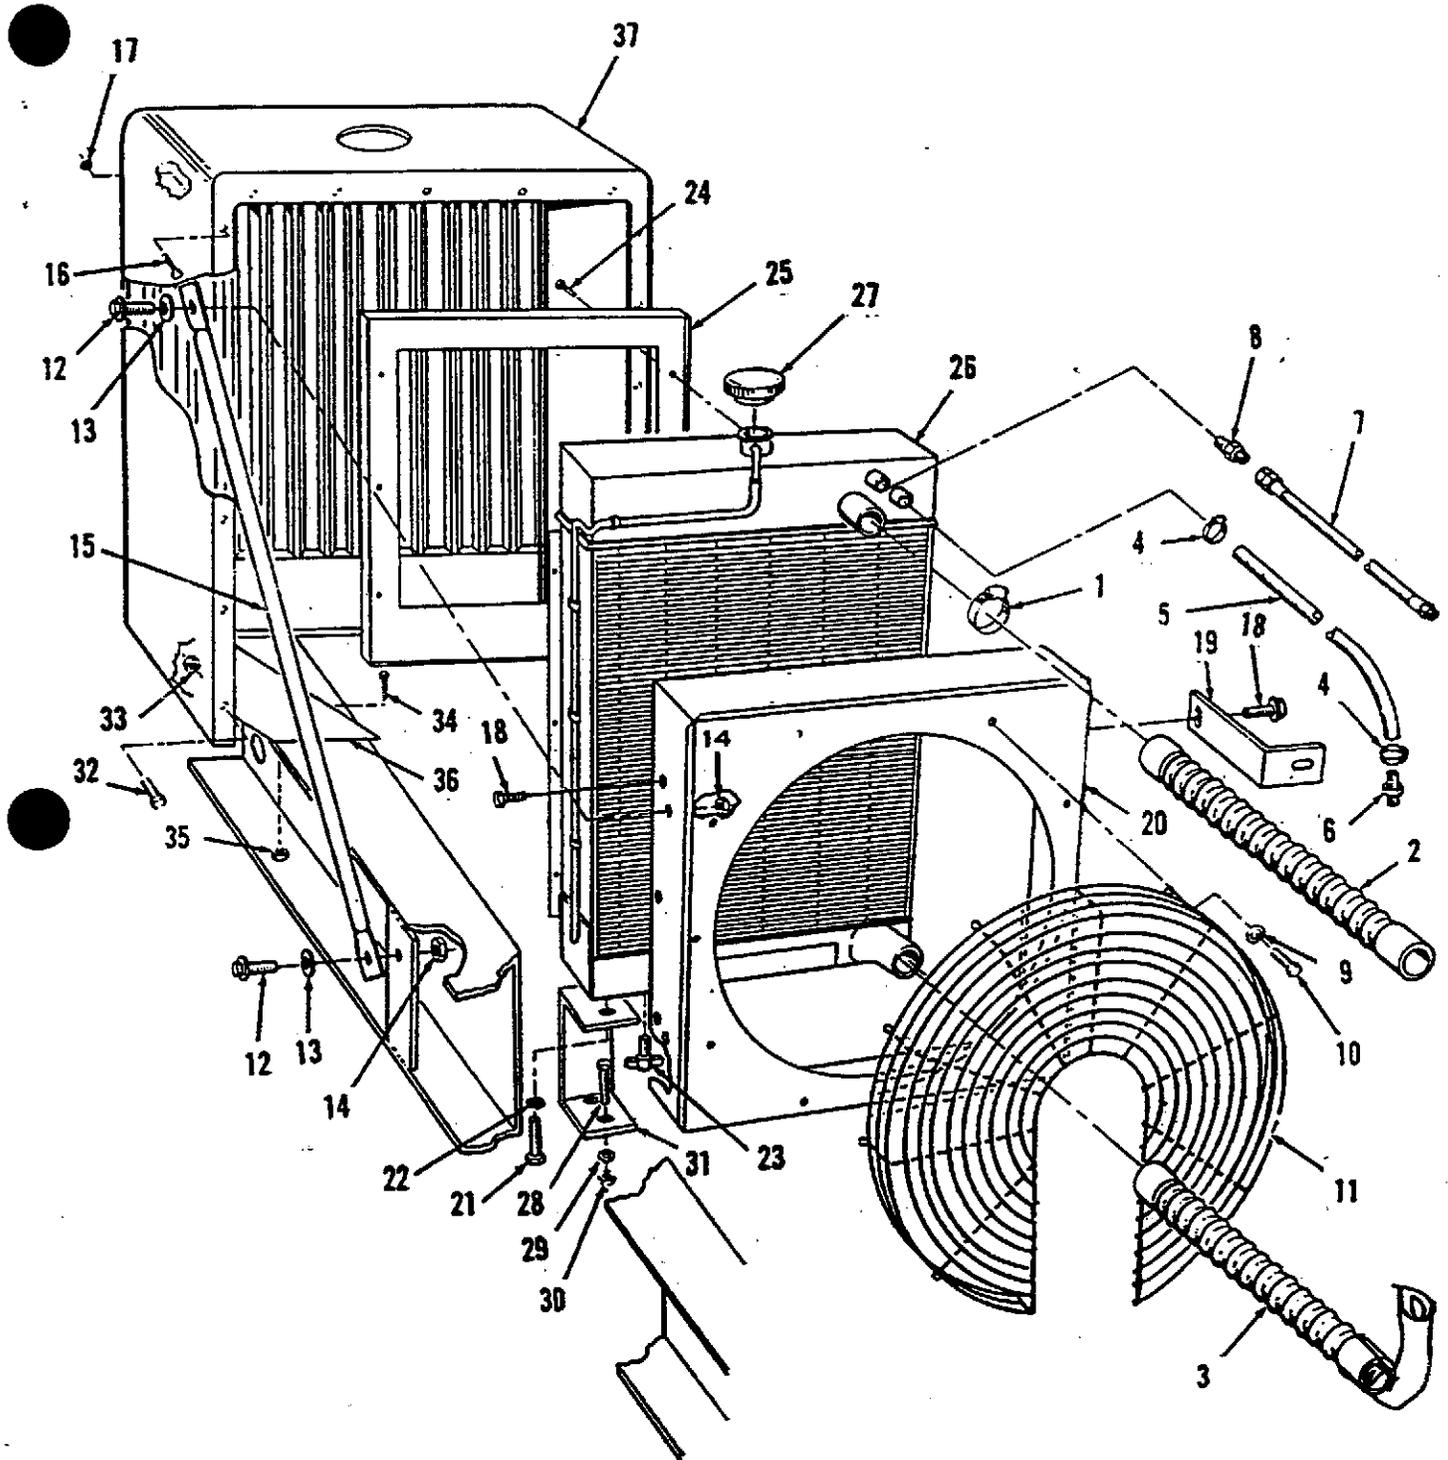


XCS1132

Cooling System Radiator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0354	4	Clamp, Hose	20			Shroud, Fan
2	503-0752	1	Hose, Upper		130-1017	1	Opening for 34" Fan
3	503-0858	1	Hose, Lower - <i>Reinforced</i>		130-0846	1	Opening for 32" Fan
4	503-0429	2	Clamp, Hose	21	800-0130	4	Screw, Cap - Hex Head (5/8-11 x 1")
5	503-0877	1	Hose	22	850-0070	4	Washer, Lock - Spring (5/8")
6	505-0759	1	Adapter, Pipe to Hose	23	504-0028	1	Cock, Drain
7	501-0087	1	Line, Fuel	24	821-0014	16	Screw, Self-locking - HEX (5/16-18 x 1/2")
8	502-0184	1	Connector, Pipe	25	130-0842	1	Shroud, Radiator
9	821-0018	8	Screw, Self-locking - Hex (1/4-20 x 5/8")	26	130-0992	1	Radiator (Include Cap)
10	526-0018	8	Washer, Flat (1/4")	27	130-0449	1	Cap, Radiator
11	130-0924	1	Guard, Fan	28	800-0092	4	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
12	821-0029	4	Screw, Self-locking - Hex (3/8-16 x 3/4")	29	850-0060	4	Washer, Lock - Spring (1/2")
13	526-0077	4	Washer, Flat (3/8")	30	862-0016	4	Nut, Hex (1/2-13)
14	870-0281	4	Nut, Self-locking - Hex (3/8-16)	31	130-1412	2	Bracket, Support
15	405-1888	2	Brace	32	821-0016	4	Screw, Self-locking - Hex (5/16-18 x 3/4")
16	821-0016	4	Screw, Self-locking - Hex (5/16-18 x 3/4")	33	870-0257	4	Nut, Self-locking - Hex (5/16-18)
17	870-0257	4	Nut, Self-locking - Hex (5/16-18)	34	800-0030	4	Screw, Cap - Hex Head (5/16-18 x 1-1/4")
18	821-0016	6	Screw, Self-locking - Hex (5/16-18 x 3/4")	35	870-0048	4	Nut, Self-locking - Hex (5/16-18)
19	130-0848	2	Brace	36	405-2016	2	Bracket, Mounting
				37	405-1884	1	Panel, Housing - Front

Fan from Cummins

Cooling System Heat Exchanger

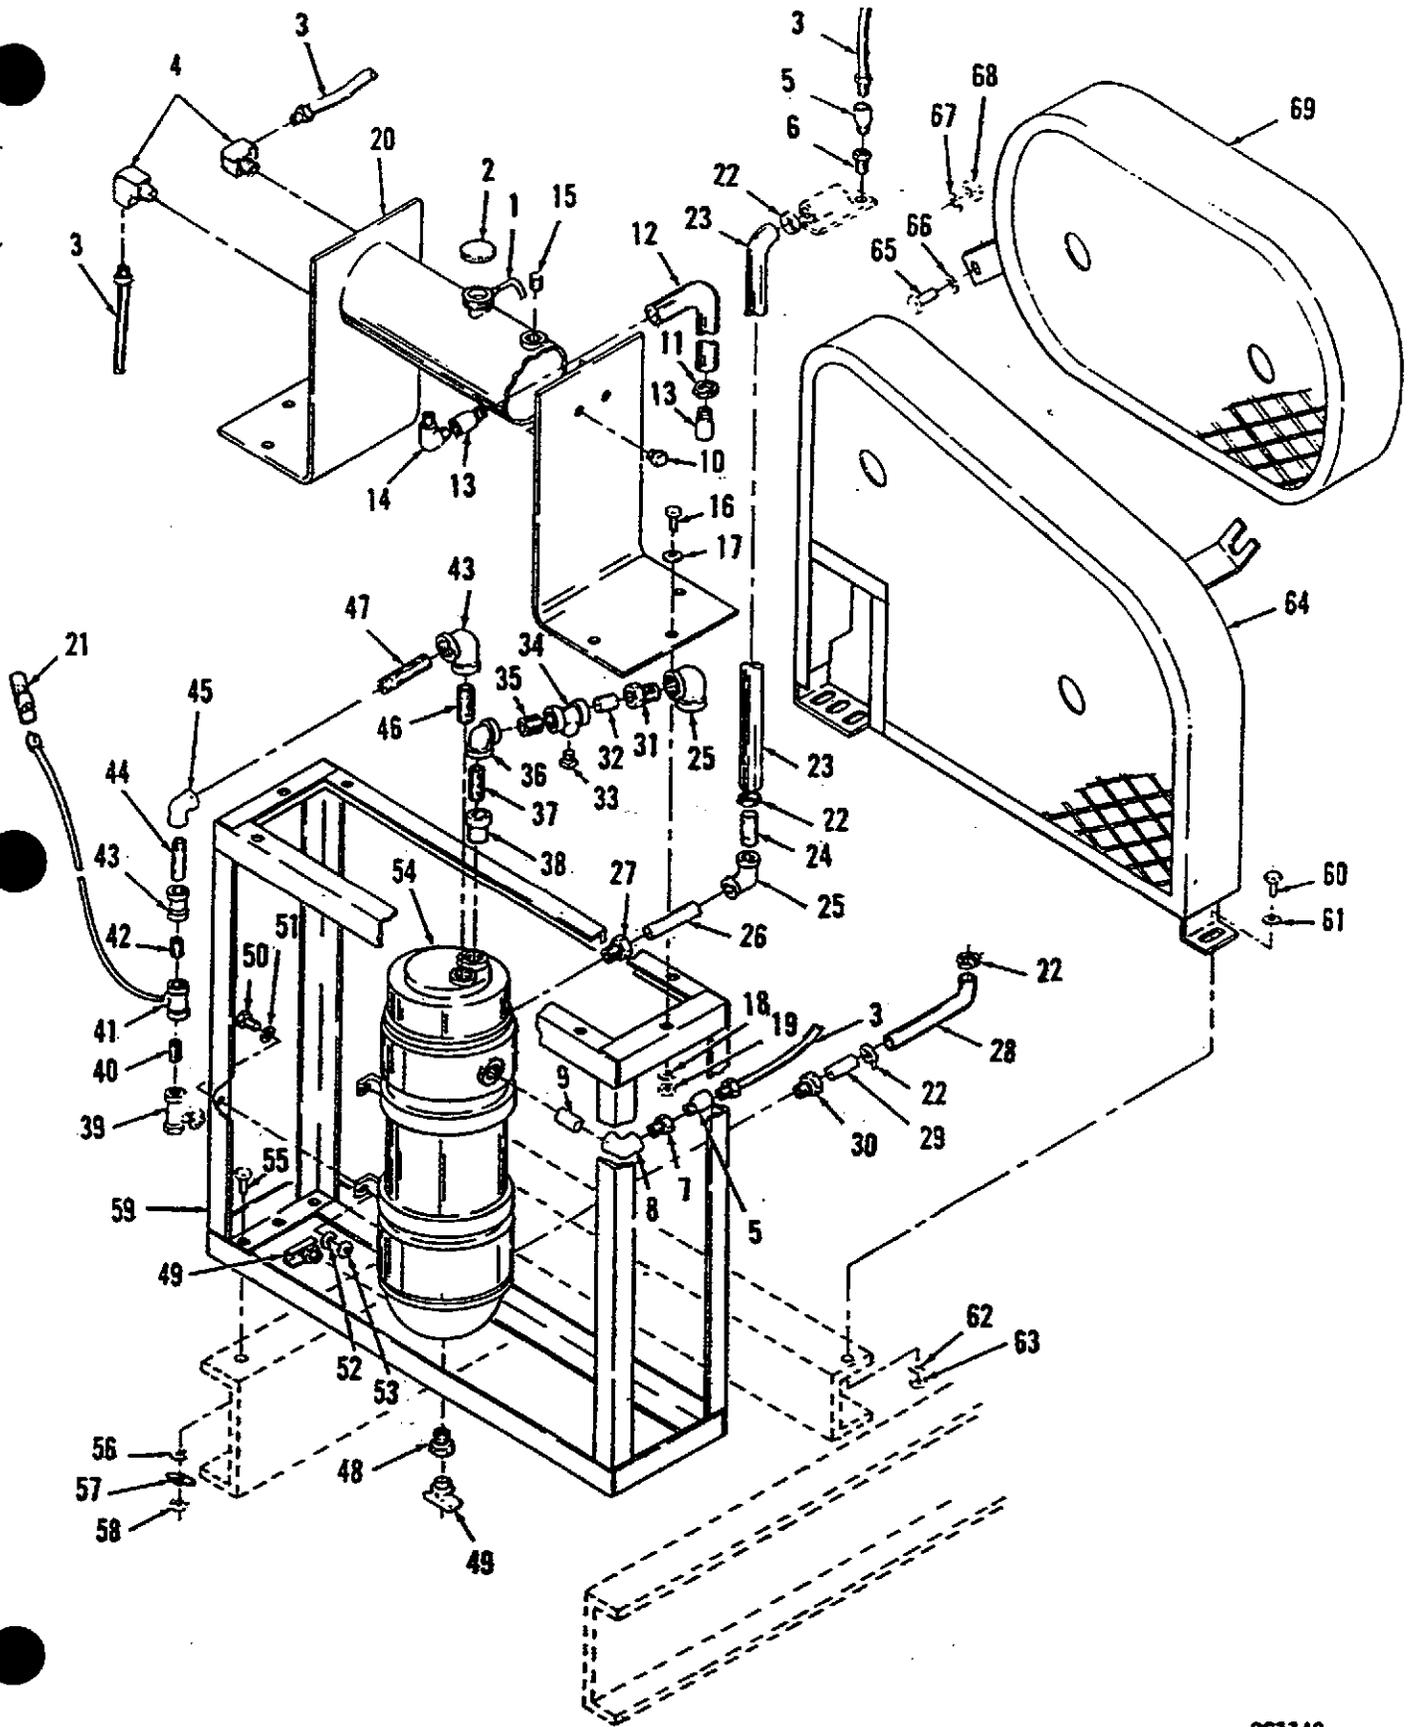


CS1149

Cooling System Heat Exchanger

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0539	1	Hose	37		1	Nipple, Pipe
2	130-0449	1	Cap, Radiator		505-0220	1	1-1/2"
3	501-0087	2	Line, Fuel		505-0172	1	2"
4	502-0020	2	Elbow, Pipe - Street, 90 Degree	38	505-0187	1	Bushing, Reducer
5	502-0184	2	Adapter, Pipe to Hose	39	504-0057	1	Valve, Globe
6	502-0143	1	Bushing, Reducer	40	505-0172	1	Nipple, Pipe
7	502-0049	1	Bushing, Reducer	41	307-0844	1	Valve, Solenoid
8	505-0039	1	Elbow, Pipe - 90 Degree	42	505-0172	1	Nipple, Pipe
9	505-0101	1	Nipple, Pipe - Close	43	505-0175	1	Elbow, Pipe - 90 Degree
10	505-0057	2	Plug, Pipe - Square Head	44	505-0405	1	Nipple, Pipe
11	503-0429	2	Clamp, Hose	45	505-0872	1	Elbow, Pipe - 45 Degree
12	503-0799	1	Hose	46	505-0172	1	Nipple, Pipe
13	505-0759	2	Adapter, Pipe to Hose	47	505-0173	1	Nipple, Pipe
14	505-0003	1	Elbow, Pipe - Street, 90 Degree	48	502-0019	1	Bushing, Reducer
15	505-0054	1	Plug, Pipe	49	504-0028	2	Cock, Drain
16	800-0051	6	Screw, Cap - Hex Head (3/8-16 x 1-1/4")	50	800-0051	4	Screw, cap - Hex Head (3/8-16 x 1-1/4")
17	526-0013	6	Washer, Flat (3/8")	51	526-0013	4	Washer, Flat (3/8")
18	850-0050	6	Washer, Lock - Spring (3/8")	52	850-0050	4	Washer, Lock - Spring (3/8")
19	862-0003	6	Nut, Hex (3/8-16)	53	862-0003	4	Nut, Hex (3/8-16)
20	130-1887	1	Tank, Expansion	54	130-1431	1	Exchanger, Heat
21	332-1506	1	Splice	55	800-0094	5	Screw, Cap - Hex Head (1/2-13 x 2")
22	503-0354	8	Clamp, Hose				
23	503-0752	1	Hose	56	850-0060	5	Washer, Lock - Spring (1/2")
24	505-0375	1	Nipple, Pipe - Half	57	526-0278	5	Washer, Bevel - Square
25	505-0175	2	Elbow, Pipe - 90 Degree	58	862-0005	5	Nut, Hex (1/2-13)
26	505-0172	1	Nipple, Pipe	59	130-1833	1	Frame, Support
27	505-0738	1	Bushing, Reducer	60	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")
28	503-0858	1	Hose - Preformed				
29	505-0380	1	Nipple, Pipe	61	526-0041	4	Washer, Flat (5/16")
30	505-0738	1	Bushing, Reducer	62	850-0045	4	Washer, Lock - Spring (5/16")
31	505-0187	1	Bushing, Reducer	63	862-0014	4	Nut, Hex (5/16-18)
32	505-0220	1	Nipple, Pipe - Close	64	130-1891	1	Guard, Belt
33	505-0402	1	Plug, Pipe	65	800-0088	1	Screw, Cap - Hex Head (1/2-13 x 3/4")
34	505-1072	1	Valve, Water Saver				
35			Nipple, Pipe	66	526-0061	1	Washer, Flat (1/2")
	505-0220	1	1-3/4"	67	850-0060	1	Washer, Lock - Spring (1/2")
	505-0748	1	9"	68	862-0005	1	Nut, Hex (1/2-13)
36			Elbow, Pipe - 90 Degree	69	130-1136	1	Guard, Belt
	505-0043	1	1-1/2"				
	505-0175	1	2"				

Cooling System Standpipe

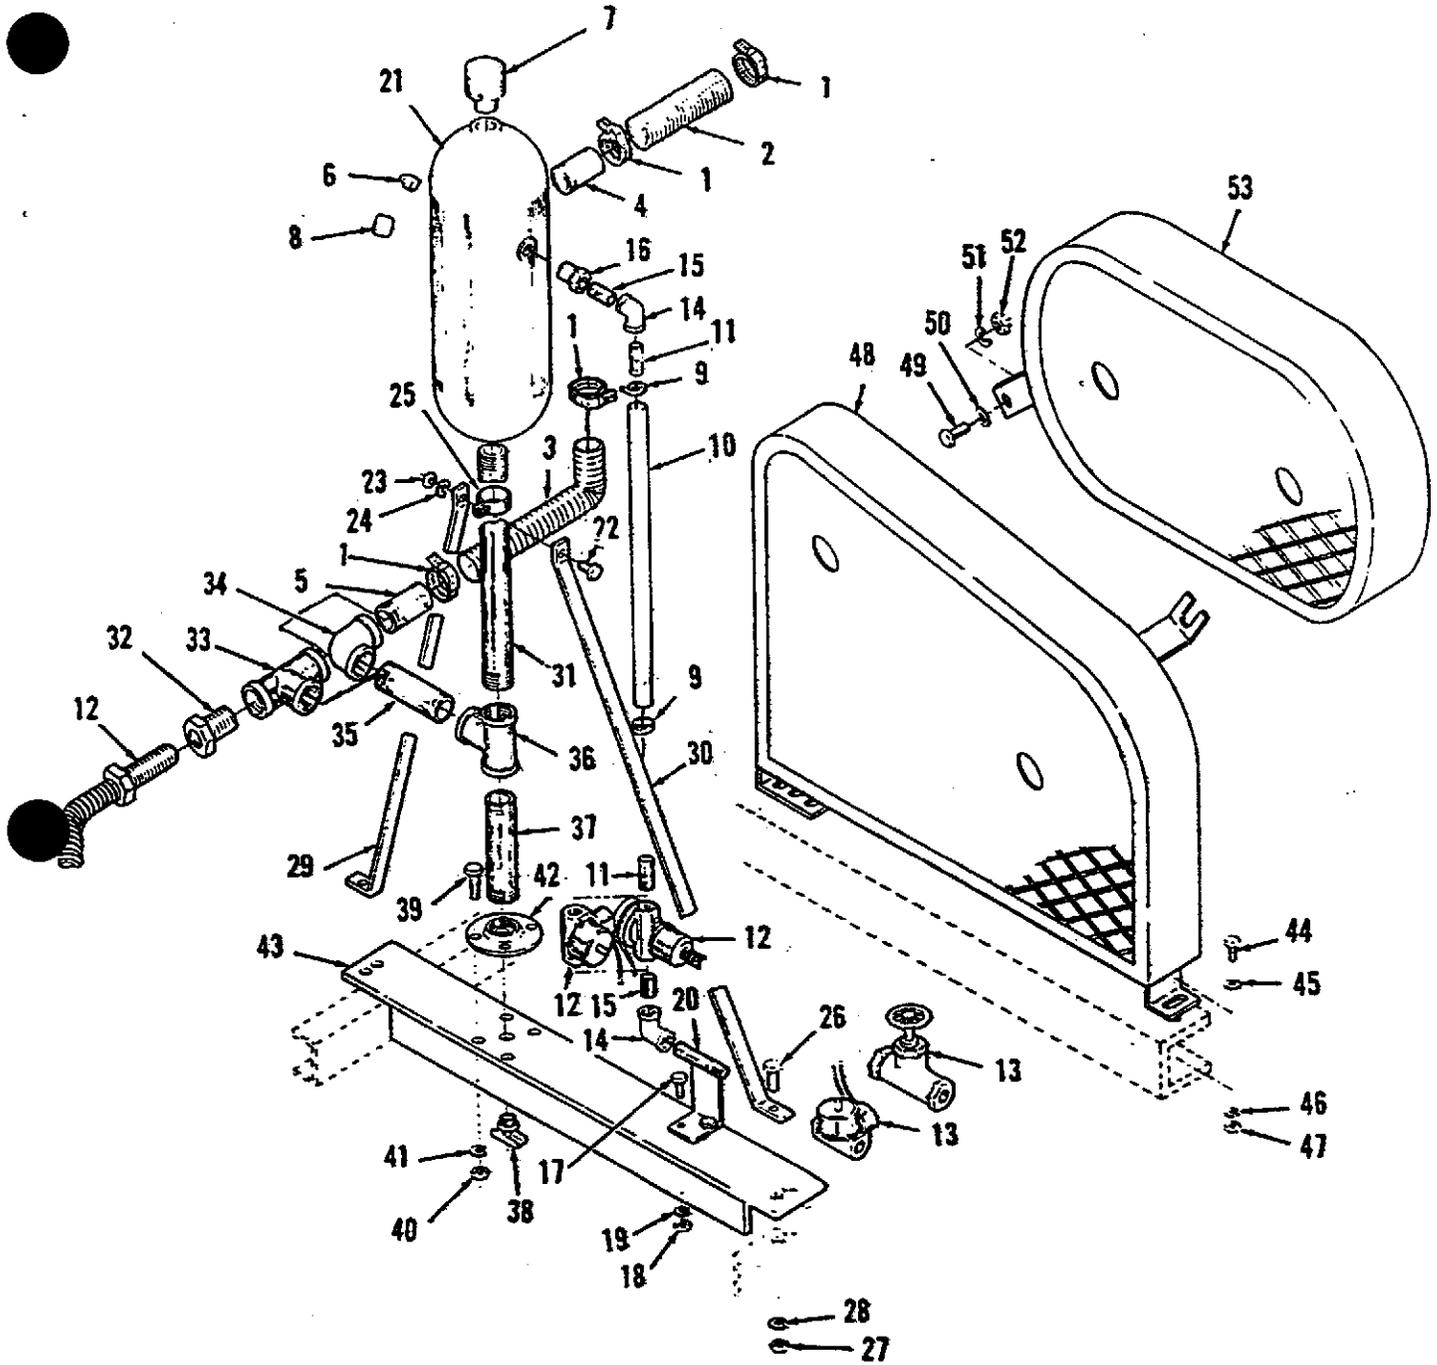


XCS1134

Cooling System Standpipe

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0354	4	Clamp, Hose	27	862-0005	2	Nut, Hex (1/2-13)
2	503-0617	1	Hose	28	850-0060	2	Washer, Lock - Spring (1/2")
3	503-0756	1	Hose, Preformed	29	130-1178	1	Brace
4	505-0204	1	Nipple, Pipe - Half	30	130-1179	1	Brace
5	505-0875	1	Adapter, Pipe to Hose	31	505-0746	1	Nipple, Pipe
6	505-0140	1	Plug, Pipe - Square Head	32	505-0351	1	Bushing, Reducer
7	504-0062	1	Valve, Vacuum Relief	33	505-0374	1	Tee, Pipe
8	505-0949	1	Plug, Pipe - Socket Head	34	505-0175	1	Elbow, Pipe - 90 Degree
9	503-0189	2	Clamp, Hose	35	505-0748	1	Nipple, Pipe
10	503-0361	1	Hose	36	505-0374	1	Tee, Pipe
11	505-0330	2	Nipple, Pipe - Half	37	505-0379	1	Nipple, Pipe
12			Valve, Control	38	504-0006	1	Cock, Drain
	309-0242	1	Temperature Regulating	39	800-0092	6	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
	307-1135	1	Solenoid	40	862-0005	6	Nut, Hex (1/2-13)
13			Valve, Control	41	850-0060	6	Washer, Lock - Spring (1/2")
	307-1135	1	Solenoid	42	130-0442	1	Base
	504-0090	1	Manual	43	130-1177	1	Support
14	505-0041	2	Elbow, Pipe - 90 Degree	44	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")
15	505-0004	2	Nipple, Pipe - Close	45	526-0041	4	Washer, Flat (5/16")
16	505-0023	1	Bushing, Reducer	46	850-0045	4	Washer, Lock - Spring (5/16")
17	800-0007	2	Screw, cap - Hex Head (1/4-20 x 1")	47	862-0014	4	Nut, Hex (5/16-18)
18	862-0001	2	Nut, Hex (1/4-20)	48	130-1132	1	Guard, Belt
19	850-0040	2	Washer, Lock - Spring (1/4")	49	800-0088	1	Screw, Cap - Hex Head (1/2-13 x 3/4")
20	130-0797	1	Nipple, Support	50	526-0060	1	Washer, Flat (1/2")
21	130-0425	1	Tank, Standpipe	51	850-0060	1	Washer, Lock - Spring (1/2")
22	800-0051	1	Screw, Cap - Hex Head (3/8-16 x 1-1/4")	52	862-0005	1	Nut, Hex (1/2-13)
23	862-0003	1	Nut, Hex (3/8-16)	53	130-1136	1	Guard, Belt
24	850-0050	1	Washer, Lock - Spring (3/8")				
25	130-0871	1	Clamp, Loop				
26	800-0092	2	Screw, Cap - Hex Head (1/2-13 x 1-1/2")				


Coolant Level Switch

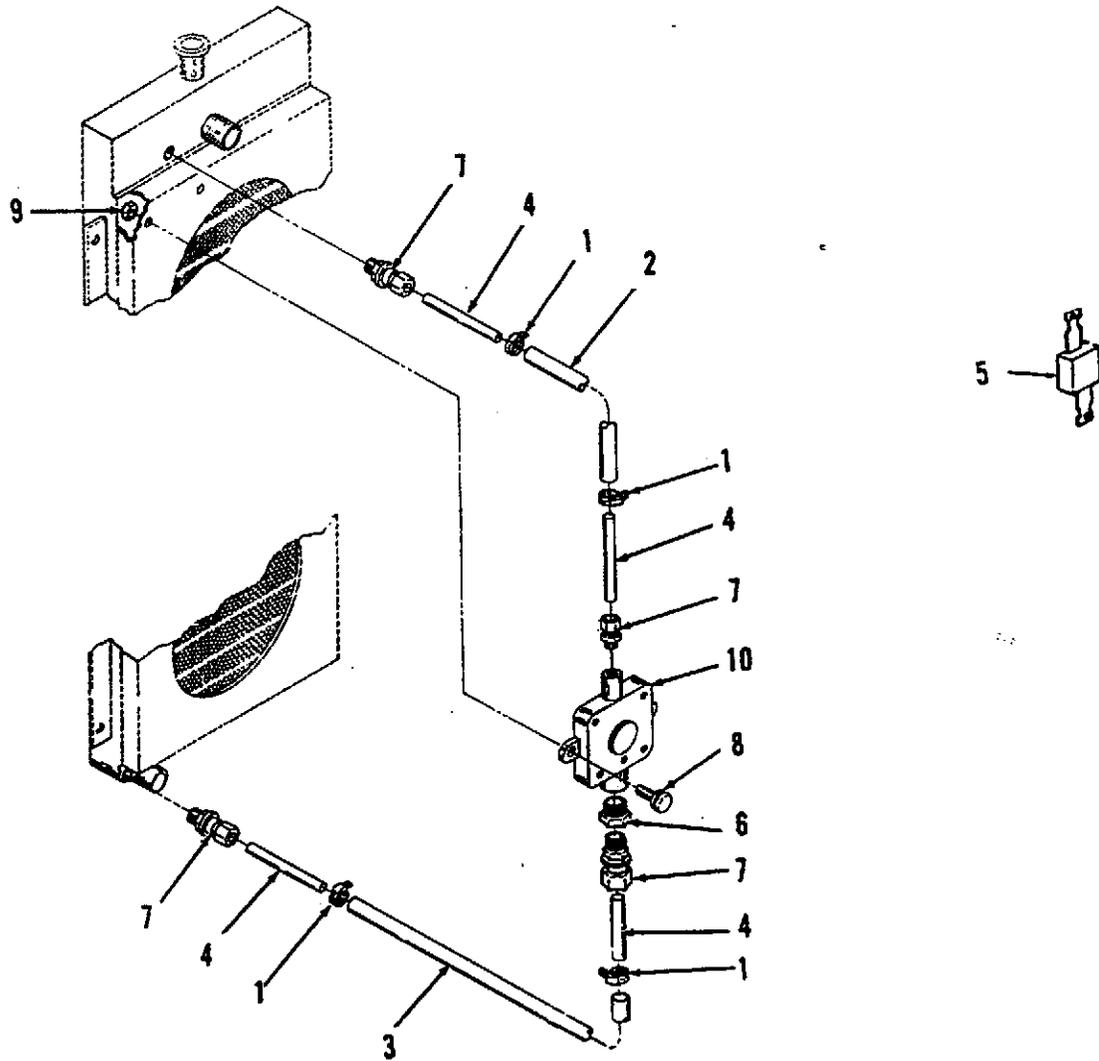

CS1148.

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0685	4	Clamp, Hose	7	502-0801	4	Connector, Tube, Brass
2	503-1199	1	Hose	8	821-0011	2	Screw, Self-locking - Hex (1/4-20 x 7/8")
3	503-1119	1	Hose	9	870-0212	2	Nut, Self-locking - Hex (1/4-20)
4	130-2053	4	Tube	10	193-0329	1	Switch, Level - Coolant
5	357-0030	2	Diode				
6	502-0802	1	Bushing, Reducer - Hex				


Engine Temperature Switch

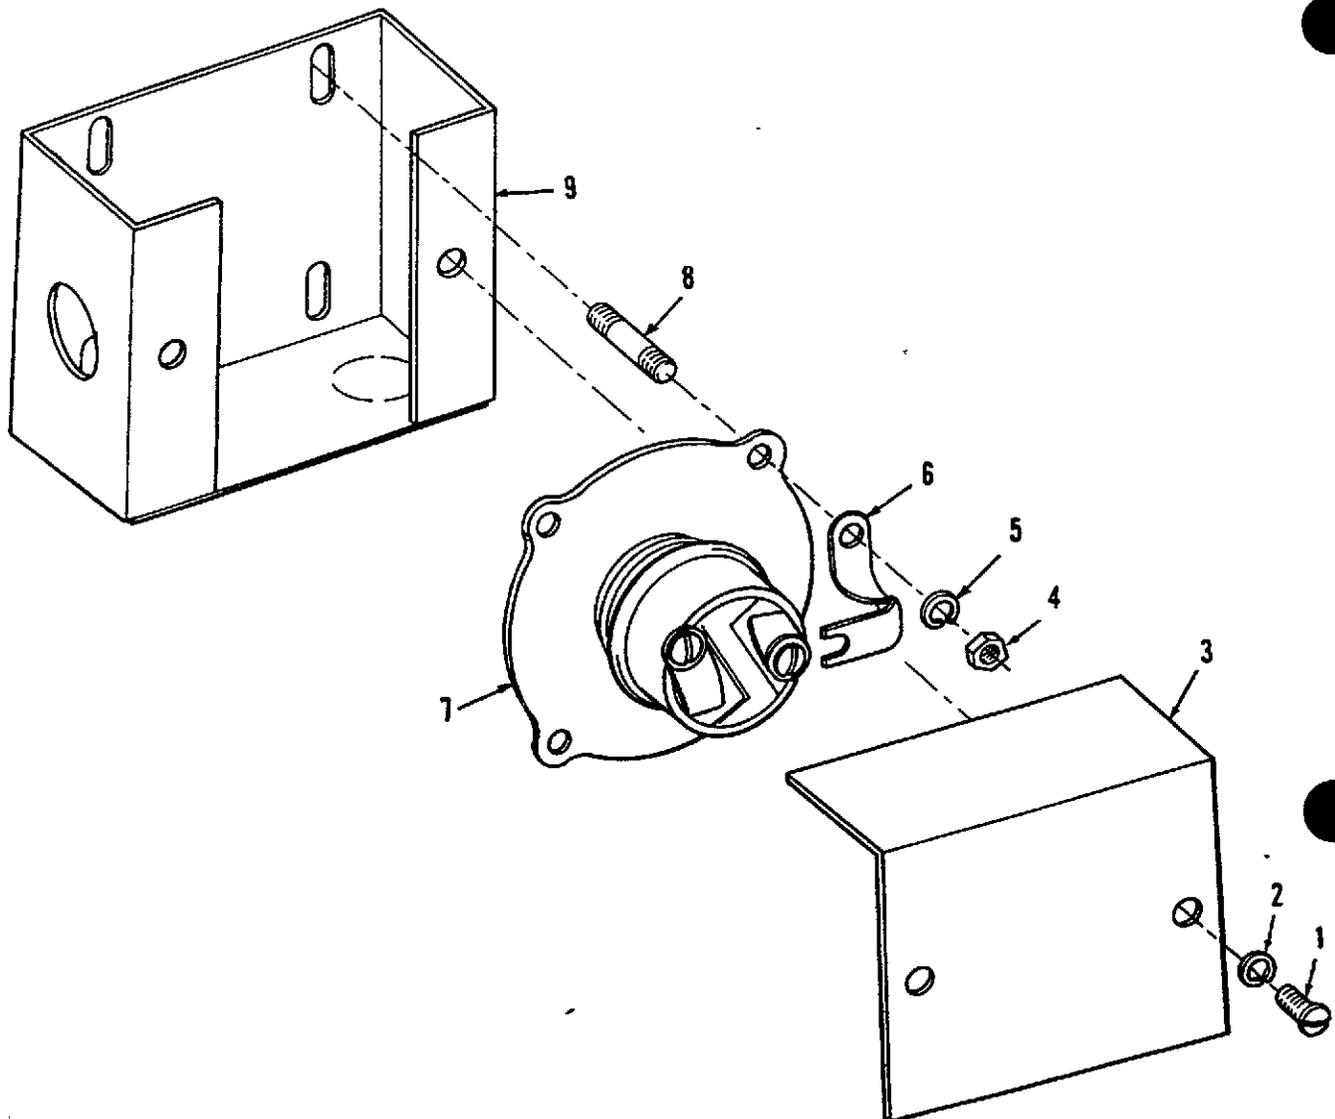

CS1063

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	812-0075	2	Screw, Machine - Round Head (#8-32 x 1/4")	5	850-0030	2	Washer, Lock - Spring (#10)
2	850-0025	2	Washer, Lock - Spring (#8)	6	160-0428	1	Strap, Ground
3	333-0013	1	Cover	7	309-0029	1	Switch, Thermostatic
4	870-0053	2	Nut, Hex (#10-32)	8	520-0446	2	Stud (#10-32 x 3/4")
				9	333-0012	1	Box

Heater Horizontal Tank

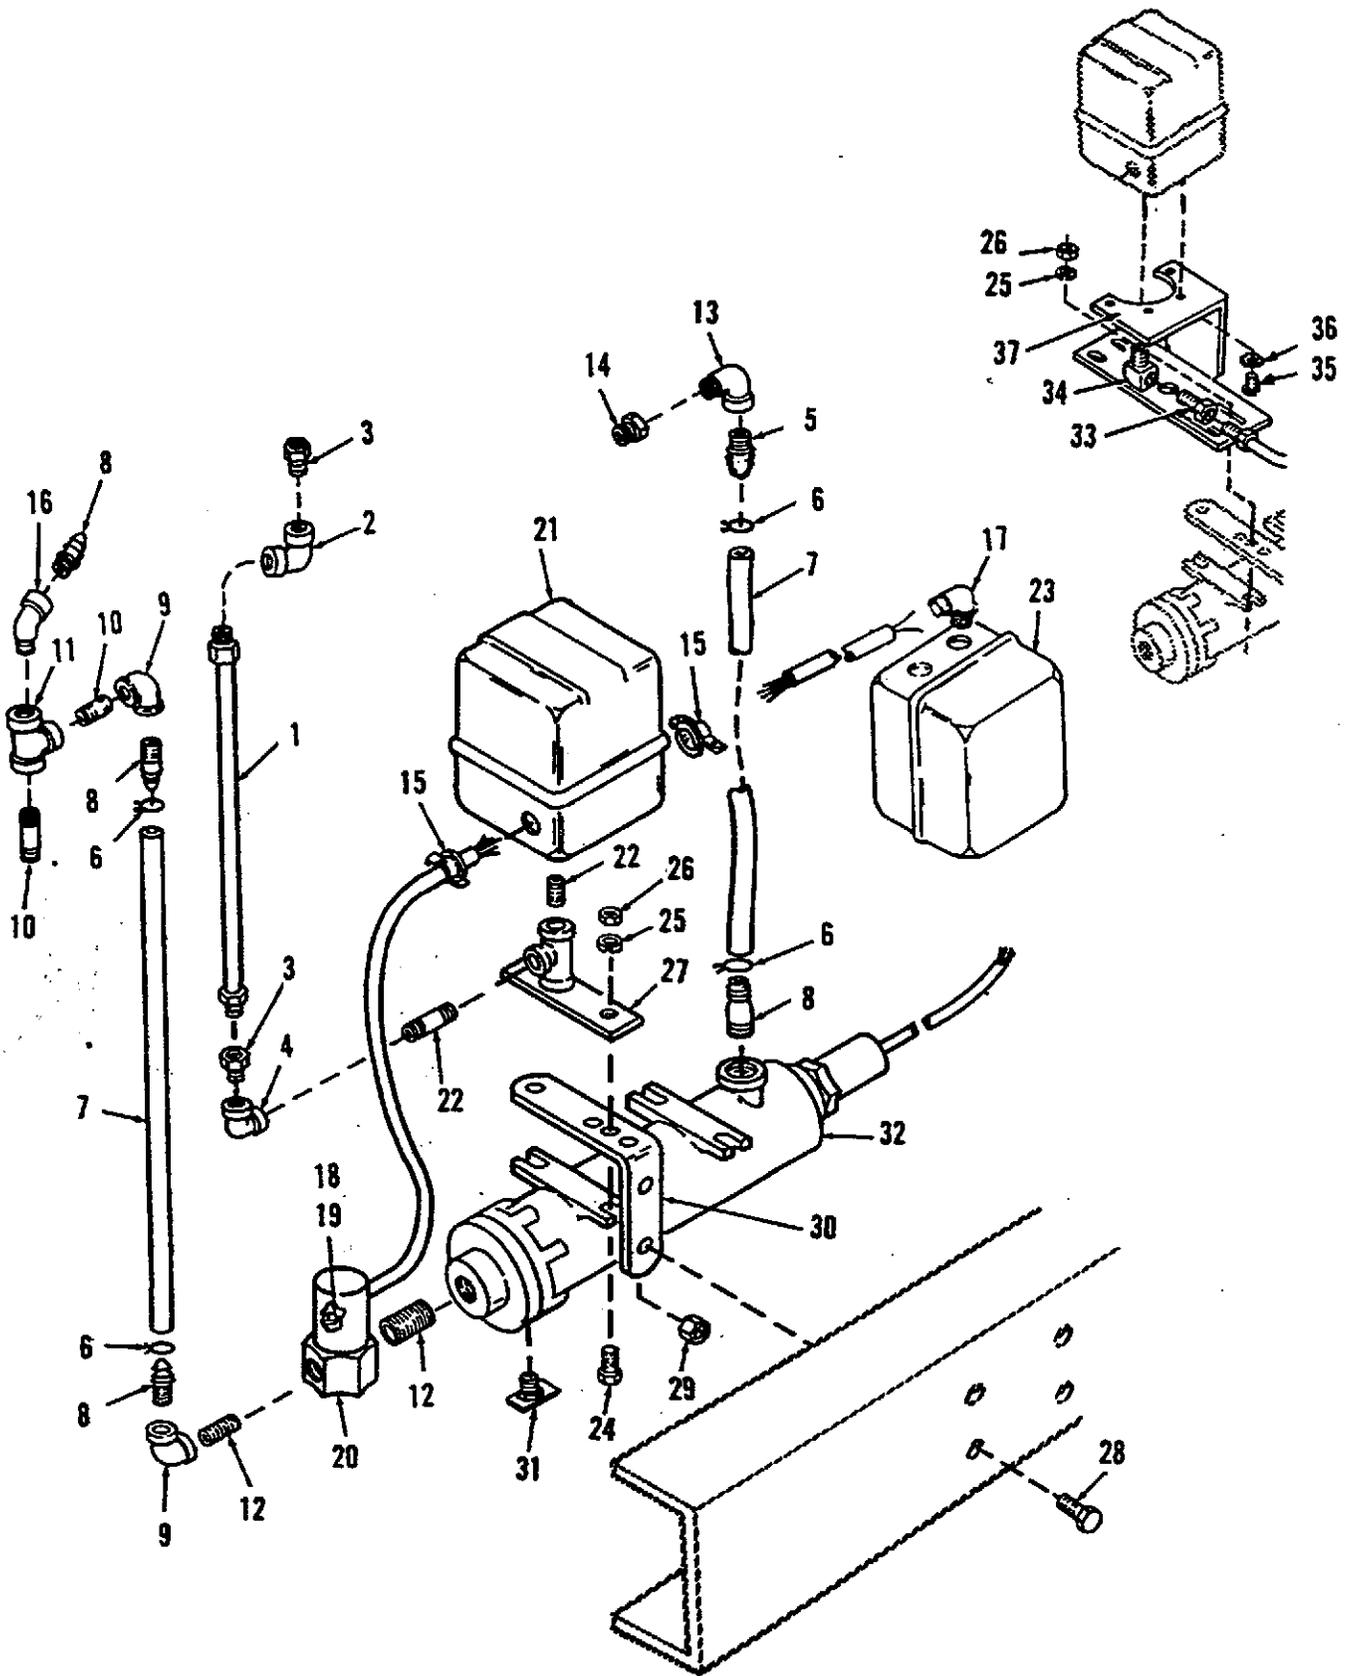


CS1136

Heater Horizontal Tank

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0227	1	Line, Fuel	25	850-0040	4	Washer, Lock - Spring (1/4")
2	505-0037	1	Elbow, Pipe - 90 Degree	26	862-0001	4	Nut, Hex (1/4-20)
3	505-0007	2	Bushing, Reducer - Hex	27	333-0142	1	Support with Tee (1970 Thru 1982)
4	505-0038	1	Elbow, Pipe - 90 Degree				
5	505-0324	1	Nipple, Pipe - Half	28	800-0052	2	Screw, Cap - Hex Head (3/8-16 x 1-1/2")
6	503-0429	4	Clamp, Hose				
7	503-0853	2	Hose	29	862-0003	2	Nut, Hex (3/8-16)
8	505-0759	4	Adapter, Hose to Pipe	30	130-1191	2	Bracket, Mounting
9	505-0041	2	Elbow, Pipe - 90 Degree	31	504-0003	1	Cock, Drain
10	505-0086	2	Nipple, Pipe	32			Heater, Electrical
11	505-0304	1	Tee, Pipe		333-0094	1	2500 Watt, 115 VAC - 1 Phase
12	505-0004	2	Nipple, Pipe - Close		333-0169	1	2500 Watt, 208 VAC - 1 Phase
13	502-0390	1	Elbow, Pipe - Street, 90 Degree		333-0165	1	2500 Watt, 208 VAC - 3 Phase
14	505-0289	1	Bushing, Reducer - Hex		333-0131	1	2500 Watt, 240 VAC - 1 Phase
15	331-0027	2	Clamp, Cable		333-0180	1	2500 Watt, 380 VAC - 1 Phase
16	505-0333	1	Elbow, Pipe - Street, 45 Degree		333-0211	1	2500 Watt, 380 VAC - 3 Phase
17	331-0027	4	Clamp, Cable		333-0166	1	2500 Watt, 480 VAC - 1 Phase
18	323-0957	2	Nut, Wire		333-0172	1	2500 Watt, 480 VAC - 3 Phase
19	332-0149	8	Lug, Terminal	33	505-0007	1	Bushing, Reducer - Hex (Begin 1983)
20	309-0490	1	Switch, Thermostatic				
21	309-0307	1	Switch, Pressure - Oil	34	502-0054	1	Elbow, Pipe - Street, 90 Degree (Begin 1983)
22	505-0099	2	Nipple, Pipe - Close (1970 thru 1982)	35	812-0079	4	Screw, Machine - Round Head (#8-32 x 1/2") (Begin 1983)
23			Contactor				
	307-1460	1	230 VAC, 3 Pole	36	854-0007	4	Washer, Lock - ET (#8) (Begin 1983)
	307-1164	1	460 VAC, 3 Pole				
24	800-0007	4	Screw, Cap - Hex Head (1/4-20 x 1")	37	333-0224	1	Bracket, Support (Begin 1983)


Lube Oil Filter

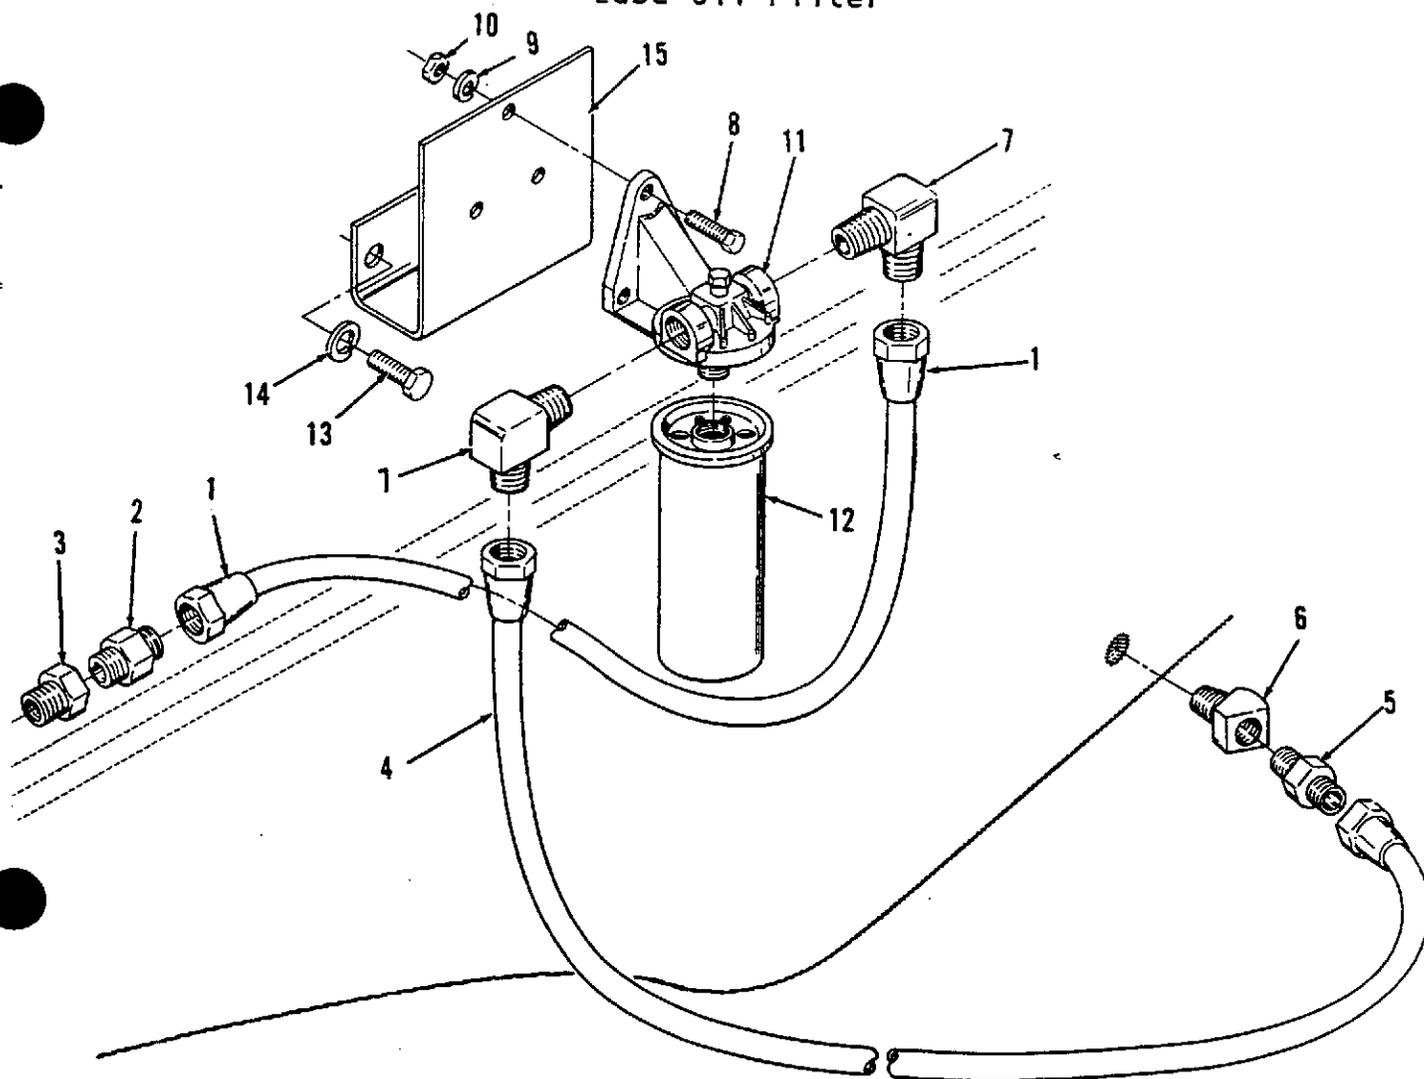

LS1071

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0382	1	Line, Fuel	9	850-0050	3	Washer, Lock - Spring (3/8")
2	502-0682	1	Nipple, Pipe - Hex	10	862-0003	3	Nut, Hex (3/8-16)
3	505-0021	1	Bushing, Reducer - Hex	11	122-0524	1	Head, Filter
4	501-0381	1	Line, Fuel	12	122-0526	1	Element, Filter
5	502-0594	1	Adapter, Line to Pipe	13	801-0099	2	Screw, Cap - Hex Head (9/16-18 x 3/4")
6	505-0248	1	Elbow, Pipe - 45 Degree	14	850-0065	2	Washer, Lock - Spring (9/16")
7	502-0277	2	Elbow, Pipe - 90 Degree	15	122-0543	1	Bracket, Mounting
8	800-0053	3	Screw, Cap - Hex Head (3/8-16 x 1-3/4")				


Fuel/Water Separator

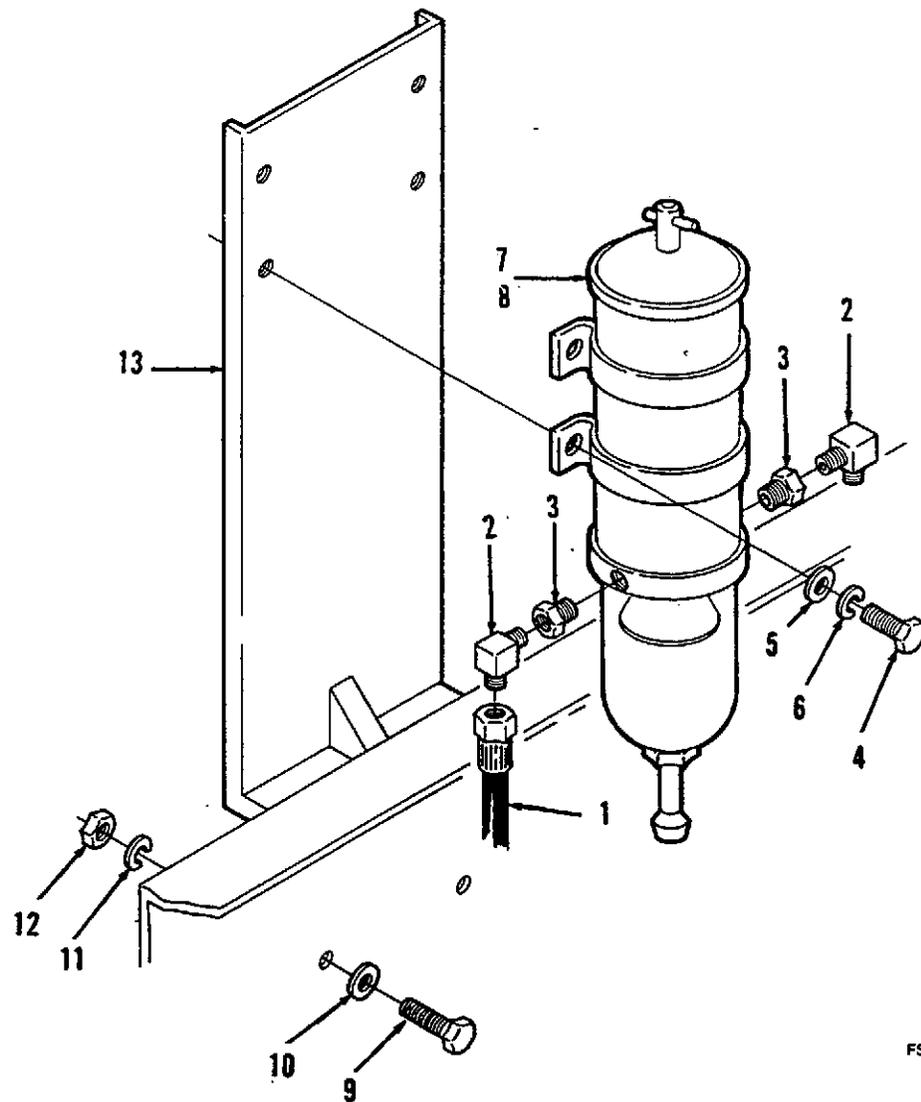

FS 1374

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0331	1	Line, Fuel	7	149-1625	1	Separator (Includes Element)
2	502-0702	2	Elbow, Pipe - Street - Male - 90 Degree	8	149-1689	1	Element
3	502-0701	2	Adapter, Pipe	9	800-0051	4	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
4	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")	10	526-0026	4	Washer, Flat (3/8")
5	526-0022	4	Washer, Flat (5/16")	11	850-0050	4	Washer, Lock - Spring (3/8")
6	850-0045	4	Washer, Lock - Spring (5/16")	12	862-0003	4	Nut, Hex (3/8-16)
				13	149-1716	1	Bracket, Mounting


Fuel Pressure Gauge

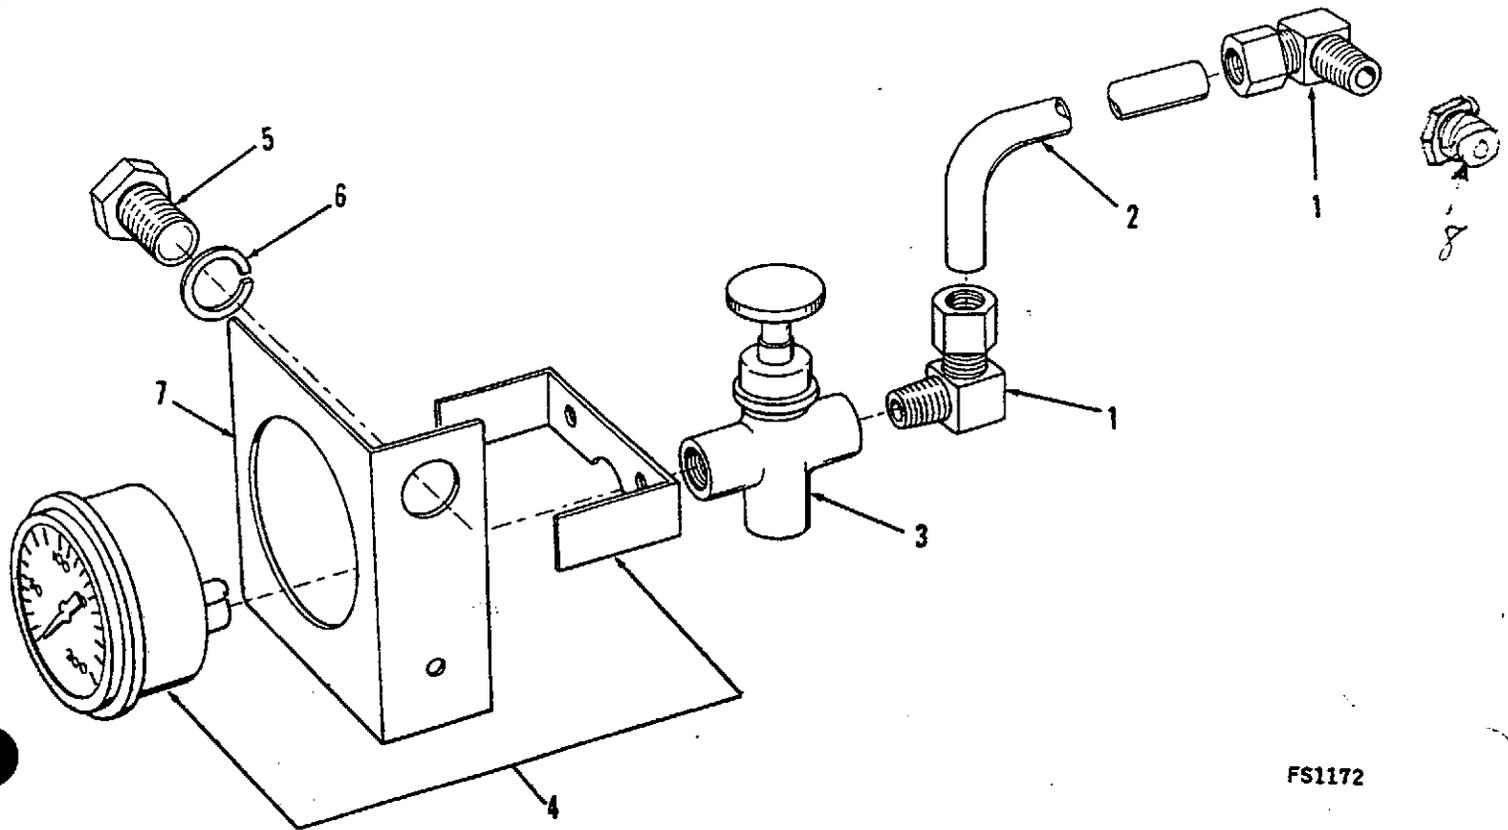

FS1172

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-0034	2	Elbow, Tube - 90 Degree (Includes Nut and Ring)	4	193-0128	1	Gauge, Pressure (Includes Bracket and Hardware)
2	375-4003	1	Tube, Copper	5	800-0130	1	Screw, Cap - Hex Head (5/8-11 x 1")
3	504-0064	1	Valve, Gate	6	850-0070	1	Washer, Lock - Spring (5/8")
				7	193-0029	1	Bracket, Mounting
				8	505-0017	1	Bushing, Reducer - 1/4" 1/4 NPT x 1/8 NPT


Fuel Tank

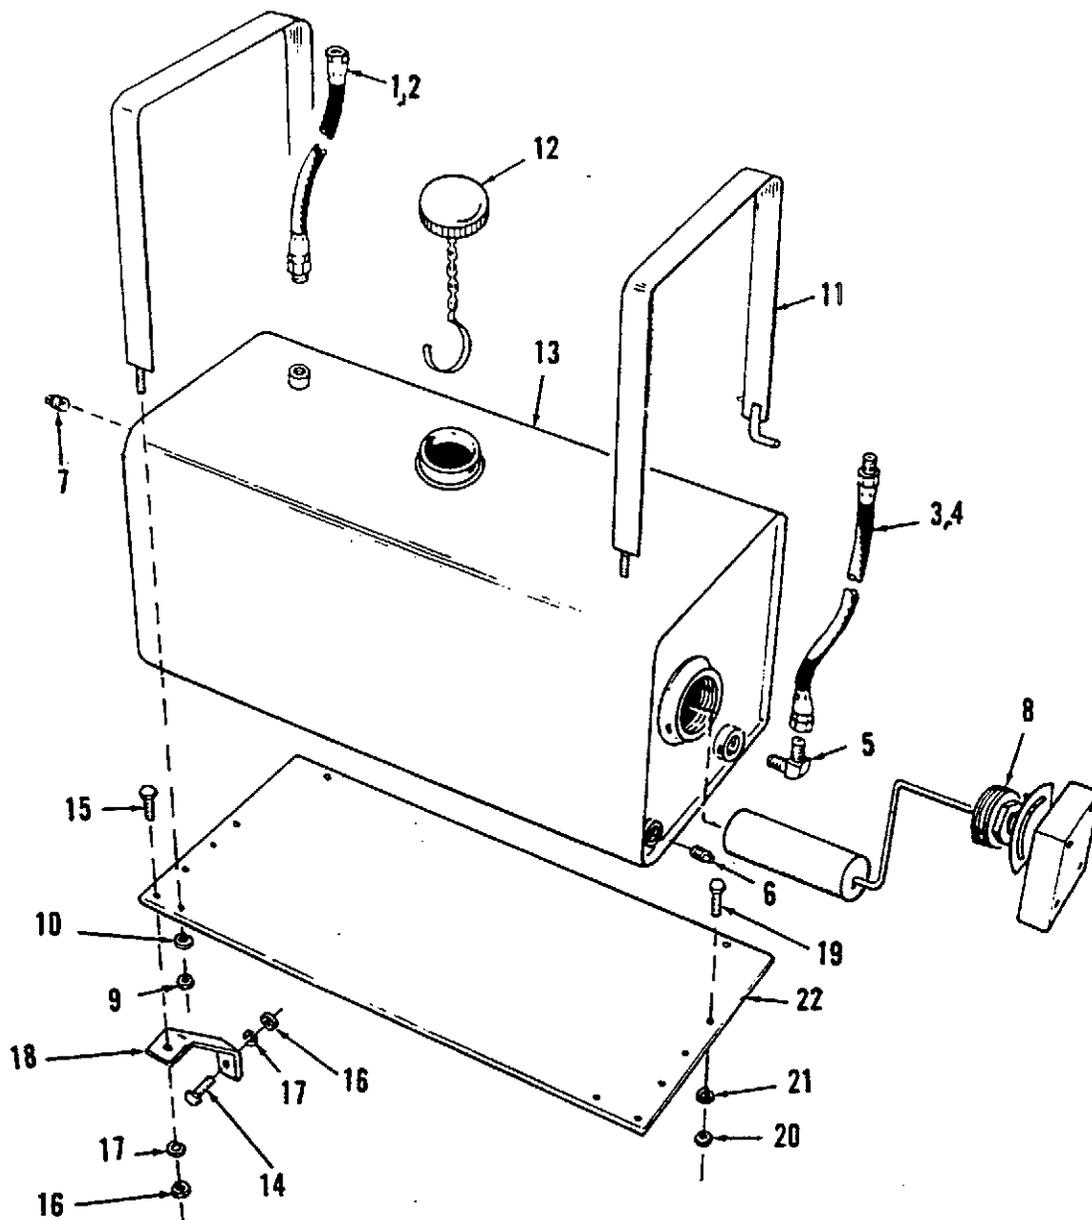

FS1171

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0215	1	Line, Fuel (Housed Set)	13	415-0322	1	Tank, Fuel - 8-1/2 Gallon
2	501-0216	1	Line, Fuel (Unhoused Set)	14	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")
3	501-0214	1	Line, Fuel (Housed Set)	15	800-0005	2	Screw, Cap - Hex Head (1/4-20 x 3/4")
4	501-0194	1	Line, Fuel (Unhoused Set)	16	862-0001	4	Nut, Hex (1/4-20)
5	502-0133	1	Elbow, Pipe - Street - 90 Degree (Unhoused Set)	17	850-0040	4	Washer, Lock - Spring (1/4")
6	505-0110	1	Plug, Pipe - Square Head	18	415-0329	2	Brace (Unhoused Set)
7	505-0056	1	Plug, Pipe - Square Head	19	800-0007	2	Screw, Cap - Hex Head. (1/4-20 x 1")
8	415-0170	1	Switch, Level	20	862-0001	2	Nut, Hex (1/4-20)
9	862-0001	2	Nut, Hex (1/4-20)	21	850-0040	2	Washer, Lock - Spring (1/4")
10	850-0040	2	Washer, Lock - Spring (1/4")	22	415-0330	1	Plate, Mounting
11	415-0331	2	Strap, Hold Down				
12	159-0020	1	Cap, Tank				

Fuel Tank Overhead/Underground Supply

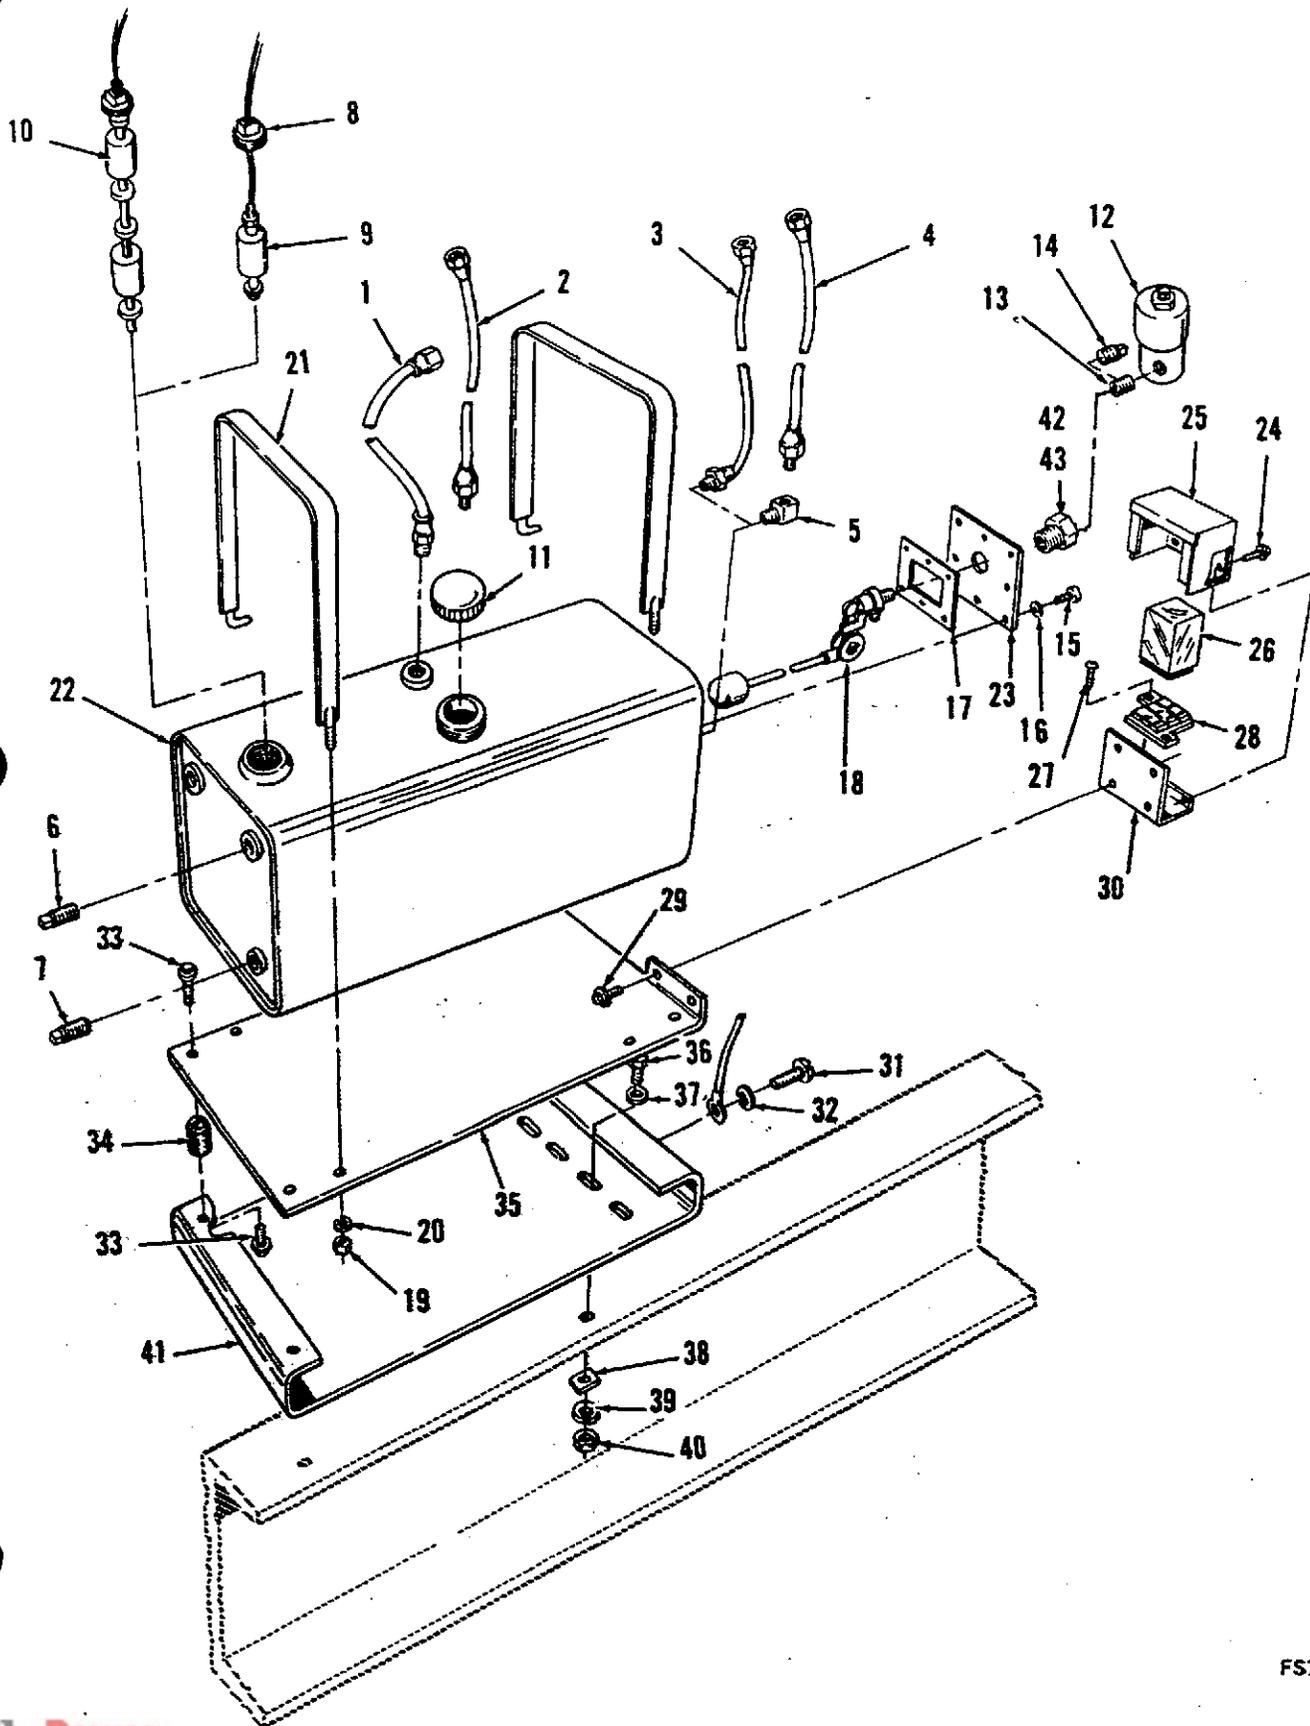


FS1334

Fuel Tank
Overhead/Underground Supply


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0215	1	Line, Fuel (Housed Set)	25	415-0464	1	Cover, Access
2	501-0216	1	Line, Fuel (Unhoused Set)	26	307-1056	1	Relay
3	501-0194	1	Line, Fuel (Housed Set)	27	812-0079	2	Screw, Machine - Round Head (#8-32 x 1/2")
4	501-0214	1	Line, Fuel (Unhoused Set)			1	Socket, Relay
5	502-0133	1	Elbow, Pipe - Street - 90 Degree	28	323-0804	1	Screw, Self-locking - Hex (1/4-20 x 5/16")
6	505-0056	2	Plug, Pipe - Square Head	29	821-0008	2	Box
7	505-0110	1	Plug, Pipe - Square Head	30	415-0463	1	Screw, Machine - Round Head (#10-32 x 5/16")
8	505-1050	1	Plug, Pipe - Modified	31	813-0097	1	Washer, Lock - Spring (#10)
9	415-0466	1	Switch, Float (Overhead Supply)			8	Screw, Self-locking - Hex (5/16-18 x 1/2")
10	415-0476	1	Switch, Float (Underground Supply)	32	850-0030	1	Mount, Vibration
11	159-0020	1	Cap, Tank	33	821-0014	8	Plate, Mounting
12	307-1816	1	Valve, Solenoid (Overhead Supply)			2	Screw, Cap - Hex Head (1/2-13 x 1-3/4")
13	505-0098	1	Nipple, Pipe	34	402-0078	4	Washer, Flat (1/2")
14	505-0057	1	Plug, Pipe - Square Head (1970 thru Aug 1982)	35	415-0479	1	Washer, Bevel
15	800-0002	8	Screw, Cap - Hex Head (1/4-20 x 3/8")	36	800-0093	2	Washer, Lock - Spring (1/2")
16	526-0063	8	Washer, Flat (1/4")	37	526-0219	2	Nut, Hex (1/2-13)
17	415-0486	1	Gasket	38	526-0278	2	Bracket, Mounting
18	309-0404	1	Valve, Float (Overhead Supply)	39	850-0060	2	Bushing, Reducer - Hex (Begin Sept 1982)
19	862-0001	2	Nut, Hex (1/4-20)	40	862-0016	2	Plug, Pipe - Square Head (Begin Sept 1982)
20	850-0040	2	Washer, Lock - Spring (1/4")	41	415-0478	1	
21	415-0509	2	Strap	42	505-0016	1	
22	415-0465	1	Tank, Fuel - 8-1/2 Gallon	43	505-0110	1	
23	415-0515	1	Plate, Access				
24	821-0004	2	Screw, Self-locking - Hex (#10-32 x 5/16")				

Fuel Tank and Sub Base

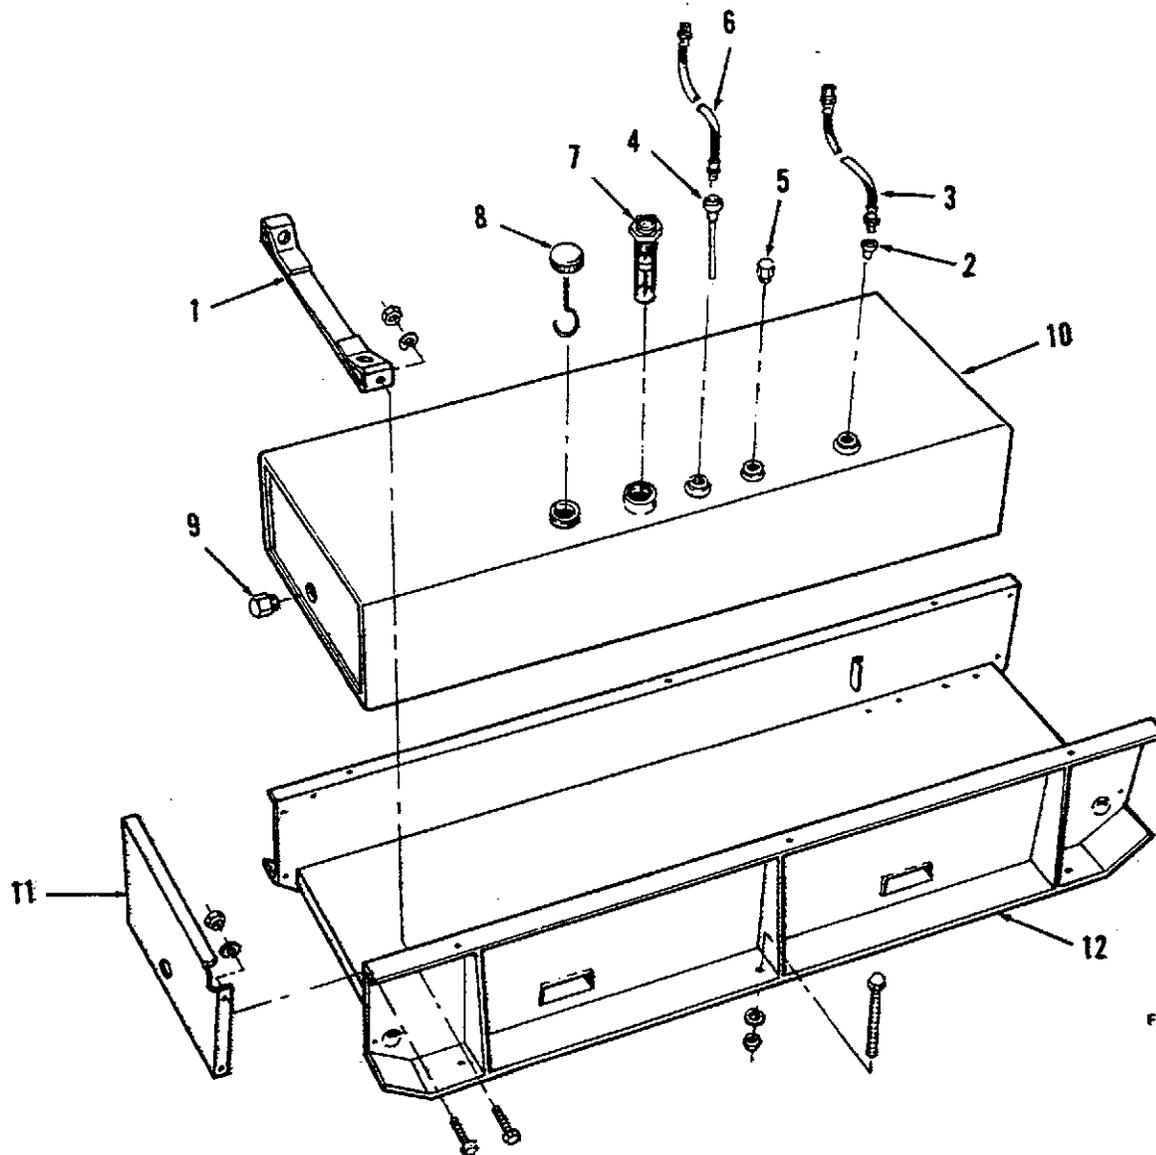

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	159-1100	2	Strap, Hold Down	9	505-0247	1	Plug, Pipe - Socket Head
	800-0051	4	Screw, Cap - Hex Head (3/8-16 x 1-1/4")	10	159-1101	1	Tank, Fuel
	526-0013	4	Washer, Flat (3/8")	11	403-1743	2	Plate, End
	850-0050	4	Washer, Lock - Spring (3/8")		800-0050	8	Screw, Cap - Hex Head (3/8-16 x 1")
	862-0003	4	Nut, Hex (3/8-16)		850-0050	8	Washer, Lock - Spring (3/8")
2	502-0297	1	Bushing, Reducer - Hex		862-0003	8	Nut, Hex (3/8-16)
3	501-0211	1	Line, Fuel	12	403-1896	1	Base, Sub
4	415-0317	1	Pipe, Suction		800-0156	6	Screw, Cap - Hex Head (3/4-10 x 2-1/4")
5	505-0334	1	Plug, Pipe - Square Head		850-0079	6	Washer, Lock - Spring (3/4")
6	501-0214	1	Line, Fuel		862-0020	6	Nut, Hex (3/4-10)
7	193-0216	1	Gauge				
8	159-0020	1	Cap, Tank				


Vernier Throttle

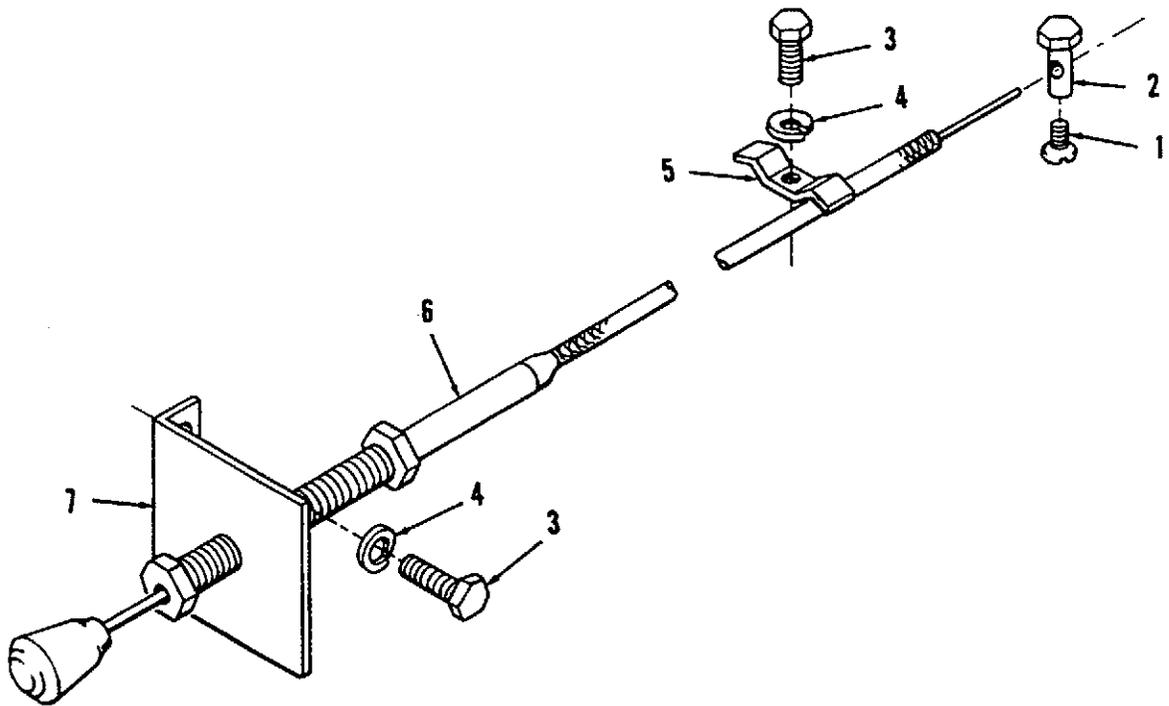

M1179

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	812-0075	1	Screw, Machine - Round Head (#8-32 x 1/2")	4	850-0040	3	Washer, Lock - Spring (1/4")
2	152-0158	1	Swivel	5	152-0036	1	Clamp, Cable
3	800-0005	3	Screw, Cap - Hex Head (1/4-20 x 3/4")	6	152-0120	1	Throttle, Vernier
				7	151-0230	1	Bracket, Mounting


Chassis

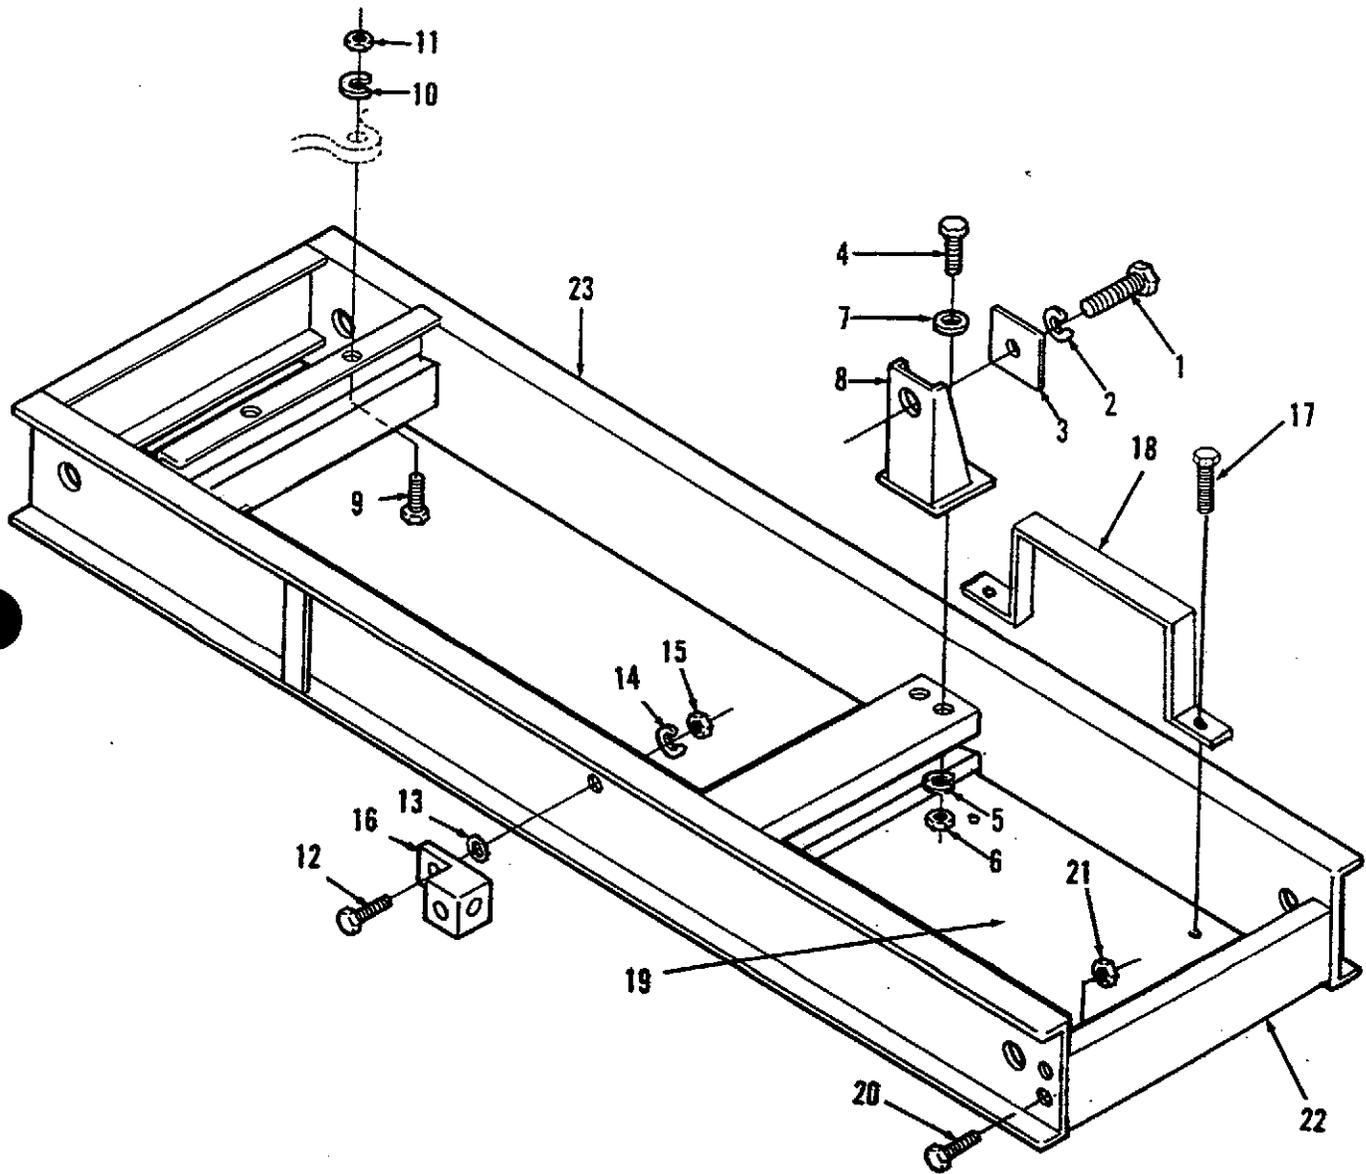

Chassis

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0153	2	Screw, Cap - Hex Head (3/4-10 x 1-1/2")	13	856-0008	1	Washer, Lock - EIT (5/16")
2	850-0079	2	Washer, Lock - Spring (3/4")	14	850-0045	1	Washer, Lock - Spring (5/16")
3	232-2385	2	Plate, Mounting - Generator	15	870-0257	1	Nut, Self-locking - Hex (5/16-18)
4	800-0156	4	Screw, Cap - Hex Head (3/4-10 x 2-1/2")	16	332-1473	1	Lug, Terminal
5	850-0079	4	Washer, Lock - Spring (3/4")	17	800-0035	4	Screw, Cap - Hex Head (5/16-18 x 2-1/2")
6	862-0020	4	Nut, Hex (3/4-10)	18	416-0635	2	Strap, Holddown - Battery
7	526-0238	2	Washer, Flat (3/4")	19	416-0674	1	Tray, Battery
8	232-2389	2	Bracket, Mounting - Generator	20	821-0016	6	Screw, Self-locking - Hex (5/16-18 x 3/4")
9	800-0138	2	Screw, Cap - Hex Head (5/8-11 x 3")	21	870-0257	6	Nut, Self-locking - Hex (5/16-18)
10	850-0070	2	Washer, Lock - Spring (5/8")	22	403-1200	1	Panel, Rear - Chassis
11	862-0007	2	Nut, Hex (5/8-11)	23	403-1203	1	Base, Skid
12	800-0028	1	Screw, Cap - Hex Head (5/16-18 x 1")				

Exhaust Muffler Commerical

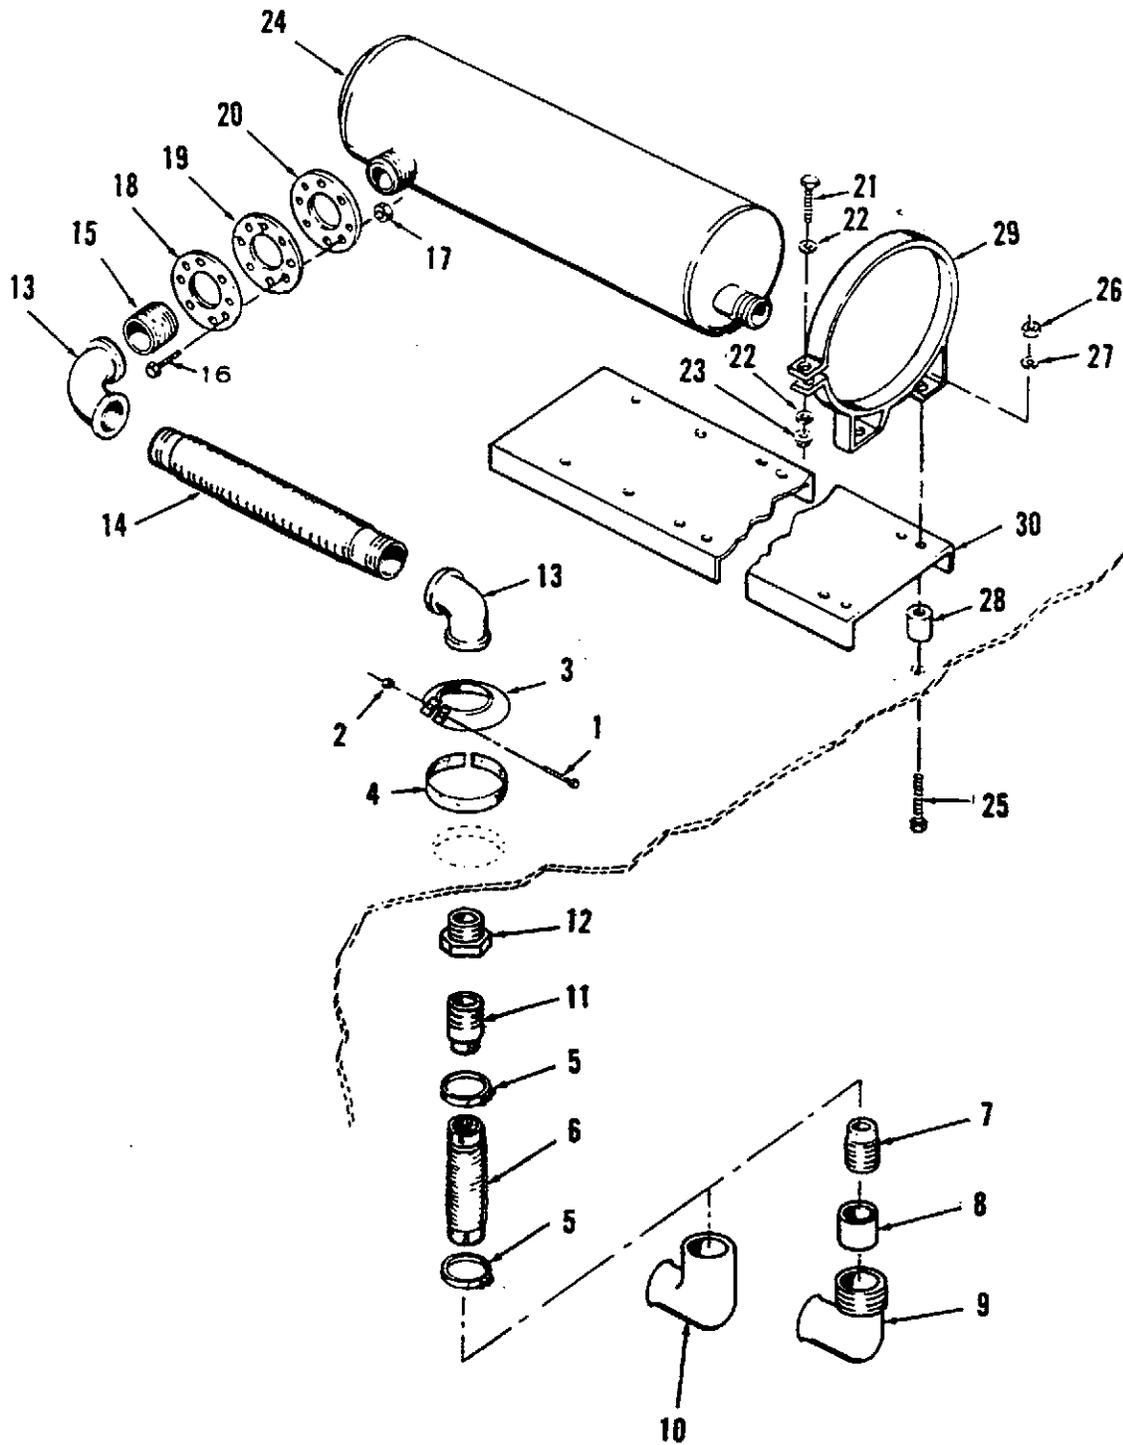

EXS1056


Exhaust Muffler Commerical

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	813-0105	2	Screw, Machine - Round Head (#10-32 x 1")	14			Tube, Exhaust Standard
2	870-0188	2	Nut, Self-locking - Hex (#10-32)		155-1160	1	Standard
					155-1184	1	Stainless Steel
3			Shield, Rain Standard	15	505-0740	1	Nipple, Pipe - Short
	155-1425	1		16	800-0160	8	Screw, Cap - Hex Head (3/4-10 x 3-1/4")
	155-1639	1	Stainless Steel	17	862-0008	8	Nut, Hex (3/4-10)
4	895-0163	1	Strip, Asbestos	18	155-0652	1	Flange, Companion - Pipe
5	503-0605	2	Clamp	19	155-0676	1	Gasket
6			Tube, Exhaust - Stainless Steel	20	155-0652	1	Flange, Companion - Pipe
	155-1143	1	10"	21	800-0037	3	Screw, Cap - Hex Head (5/16-18 x 3")
	155-1603	1	13"				Washer, Flat (5/16")
	155-1456	1	16"	22	526-0113	6	
	155-1299	1	21"	23	870-0257	3	Nut, Self-locking - Hex (5/16-18)
	155-1293	1	33"				Muffler, Exhaust
7	155-1275	1	Connector, Tube	24	155-1158	1	
8	505-0784	1	Coupling, Pipe	25	800-0037	6	Screw, Cap - Hex Head (5/16-18 x 3")
9	155-1035	1	Elbow, Pipe				Nut, Self-locking - Hex (5/16-18)
10	155-1736	1	Elbow, Tube	26	870-0048	6	Washer, Lock - Spring (5/16")
11			Connector, Tube				Spacer
	155-1275	1	6"	27	850-0045	6	Band, Mounting
	155-1929	1	17"	28	155-1430	6	Shield, Heat
12	505-0695	1	Bushing, Reducer - Hex	29	140-0757	3	
13	505-0741	2	Elbow, Pipe - 90 Degree	30	155-1404	1	

Exhaust Muffler Residential and Critical

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	813-0105	2	Screw, Machine - Round Head (#10-32 x 1")	16	800-0160	16	Screw, Cap - Hex Head (3/4-10 x 3-1/4")
2	870-0188	2	Nut, Self-locking - Hex (#10-32)	17	862-0008	16	Nut, Hex (3/4-10)
3			Shield, Rain	18	155-0652	2	Flange, Companion - Pipe
	155-1425	1	Standard	19	155-0676	2	Gasket
	155-1639	1	Stainless Steel	20	505-0785	1	Nipple, Pipe - Modified
4	895-0163	1	Strip, Asbestos	21	800-0037	3	Screw, Cap - Hex Head (5/16-18 x 3")
5	503-0605	2	Clamp	22	526-0113	6	Washer, Flat (5/16")
6			Tube, Exhaust - Stainless Steel	23	870-0257	3	Nut, Self-locking - Hex (5/16-18)
	155-1143	1	10"	24	155-1605	1	Muffler, Exhaust - Residential Standard
	155-1603	1	13"		155-1727	1	Stainless Steel
	155-1456	1	16"	25	155-1568	1	Muffler, Exhaust - Critical Standard
	155-1299	1	21"		155-1728	1	Stainless Steel
	155-1493	1	22-1/2"	26	800-0037	6	Screw, Cap - Hex Head (5/16-18 x 3")
	155-1293	1	33"	27	870-0048	6	Nut, Self-locking - Hex (5/16-18)
7	155-1275	1	Connector, Tube	28	850-0045	6	Washer, Lock - Spring (5/16")
8	505-0784	1	Coupling, Pipe	29	155-1430	6	Spacer
9	155-1035	1	Elbow, Pipe	30	140-0751	3	Band, Mounting Standard
10	155-1736	1	Elbow, Tube		140-1685	3	Stainless Steel
11			Connector, Tube	31	155-1400	1	Shield, Heat Standard, 67"
	155-1275	1	6"		155-1729	1	Stainless Steel, 67"
	155-1929	1	17"		155-1602	1	Standard, 94"
12	505-0695	1	Bushing, Reducer - Hex		155-1730	1	Stainless Steel, 94"
13	505-0741	2	Elbow, Pipe - 90 Degree				
14			Tube, Exhaust				
	155-1604	1	Tube, 38"				
	155-1619	1	Tube, 55"				
	505-0939	1	Pipe, 43"				
15	505-0740	1	Nipple, Pipe - Short				

Set Housing

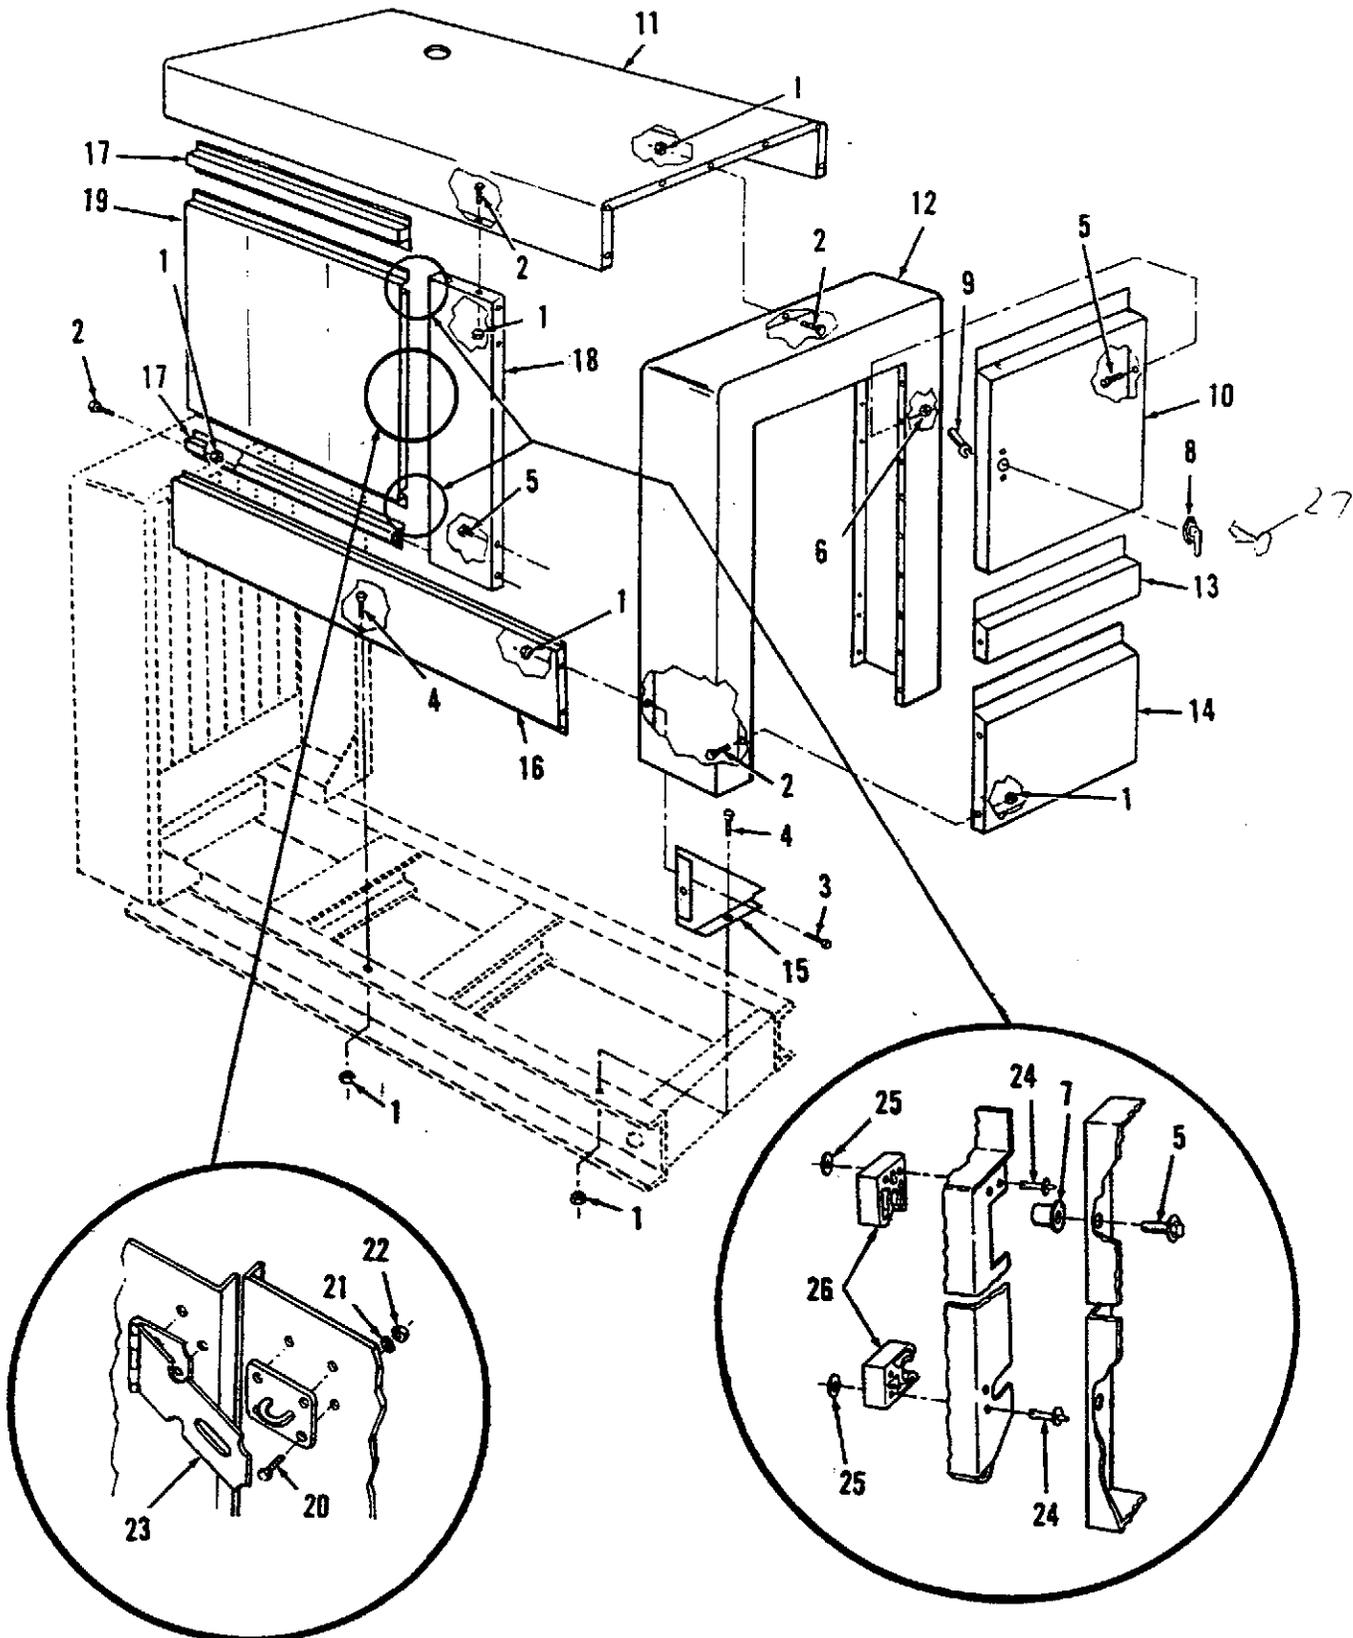


M1004

Set Housing

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0257	62	Nut, Self-locking - Hex (5/16-18)	11	405-2222	1	Panel, Top
2	821-0014	48	Screw, Self-locking - Hex (5/16-18 x 1/2")	12	405-1883	1	Panel, Rear
3	821-0016	8	Screw, Self-locking - Hex (5/16-18 x 3/4")	13	405-1858	2	Panel, Louver - Rear
4	800-0030	6	Screw, Cap - Hex Head (5/16-18 x 1-1/4")	14	405-1856	1	Panel, Lower - Rear
5	821-0010	20	Screw, Self-locking - Hex (1/4-20 x 1/2")	15	405-2016	4	Bracket, Mounting
6	870-0212	4	Nut, Self-locking - Hex (1/4-20)	16	405-2221	2	Panel, Base
7	870-0258	16	Nut, Weld	17	405-2014	8	Panel, Louver
8	406-0157	1	Handle, Lock	18	405-2220	2	Panel, Center
9	406-0089	1	Catch	19	405-2011	4	Door
10	405-1880	1	Door, Rear	20	814-0079	28	Screw, Machine - Flat Head (#8-32 x 1/2")
				21	850-0025	28	Washer, Lock - Spring (#8)
				22	860-0008	28	Nut, Hex (#8-32)
				23	406-0249	4	Set, Hasp
				24	818-0150	32	Rivet, Drive Pin
				25	526-0003	32	Washer, Flat (3/16")
				26	405-1872	16	Clip, Pivot - Door

27 406-0565 / Key


Generator
Begin Spec M

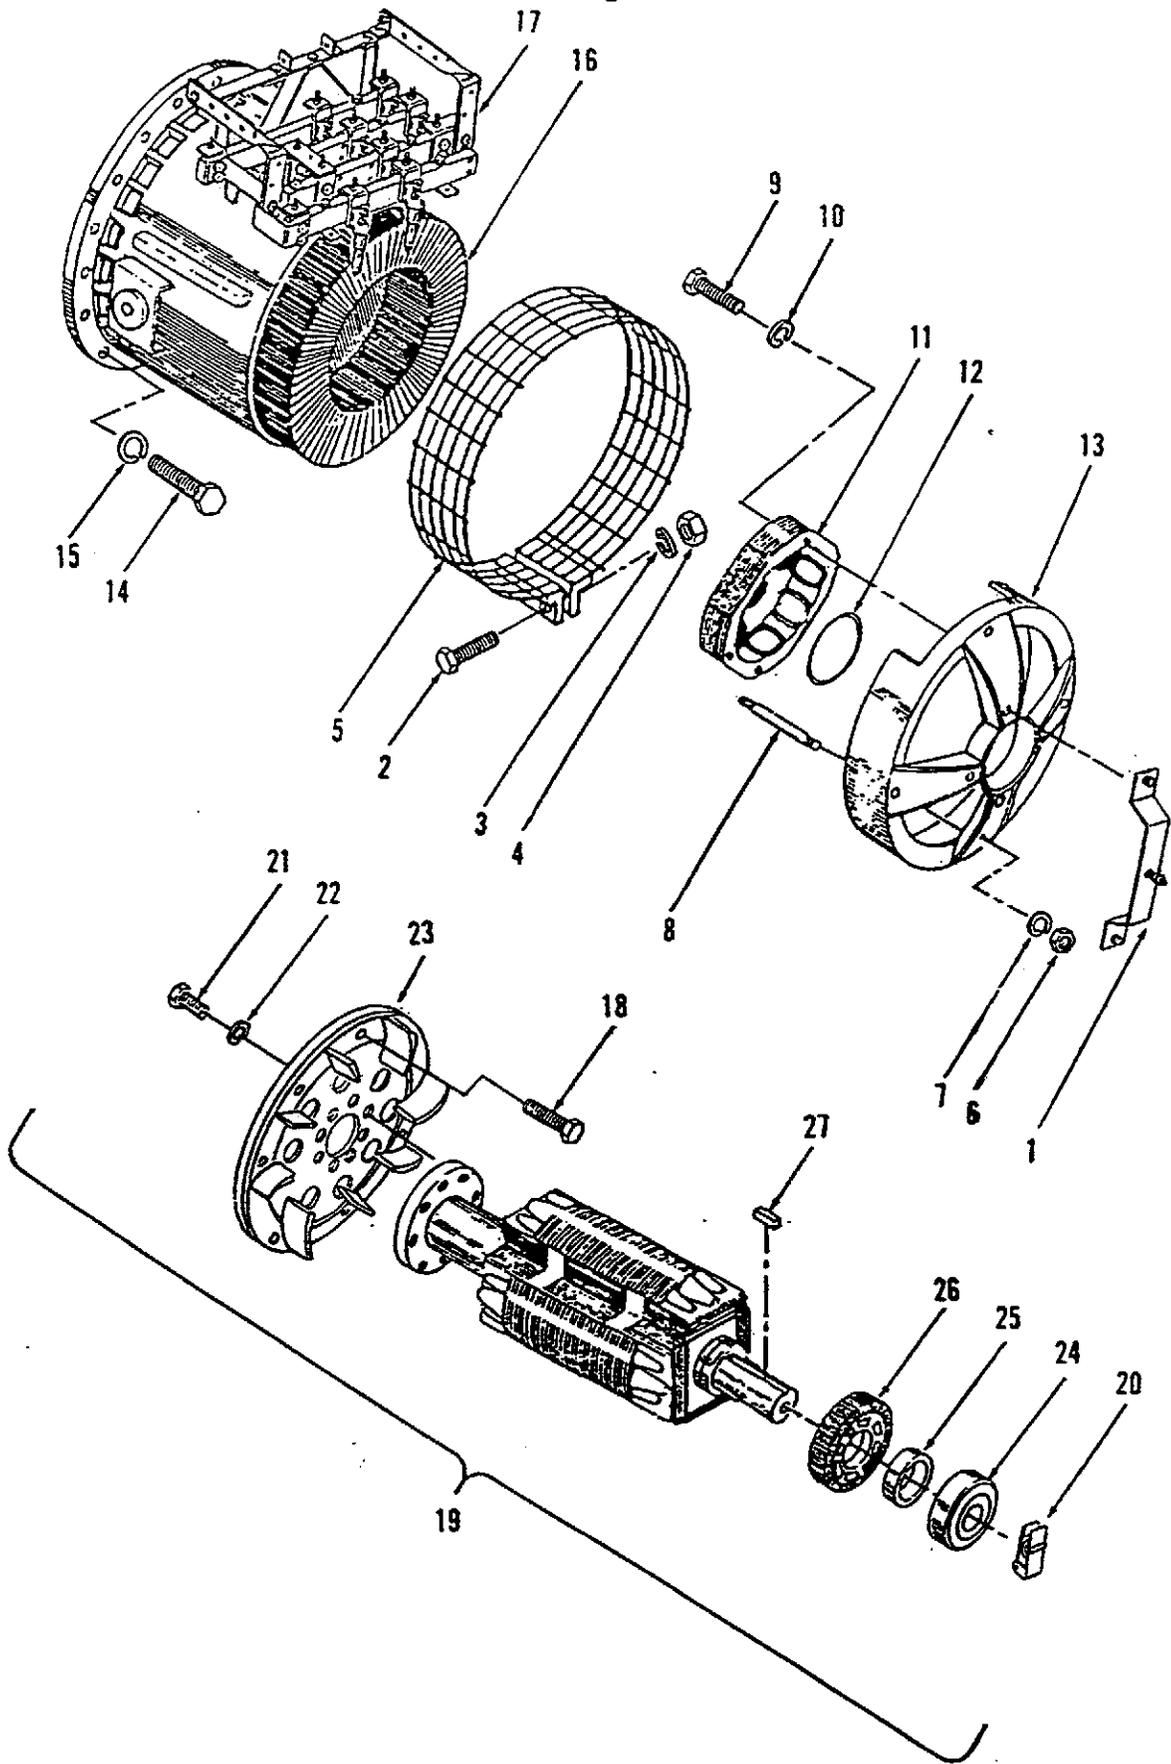

Generator
Begin Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Switch Assembly, Overspeed (See Separate Page for Components)	17		1	Bus Bar Assembly (See Separate Page for Components)
2	114-0023	2	Screw, Cap - Hex Head (1/4-20 x 1-1/4")	18	805-0032	8	Bolt, Hex Head - Grade 8 (1/2-13 x 1-1/4")
3	850-0040	2	Washer, Lock - Spring (1/4")	19		19	Rotor Assembly (Includes Disk and Fan Assembly, Bearing, Exciter Rotor, Overspeed Switch
4	862-0001	2	Nut, Hex (1/4-20)		201-3328	1	165kW, Code 517
5	234-0455	1	Screen, Air		201-3328	1	200kW, Code 5, 6, 7, 9, 17
6	862-0016	4	Nut, Hex (1/2-13)	20	201-3328	1	200kW, Code 5, 6, 7, 9, 17
7	850-0060	4	Washer, Lock - Spring (1/2")				(EP) Switch Assembly, Overspeed (See Separate Page for Components)
8	620-0780	4	Stud (1/2-13 x 6-1/2")	21	805-0035	8	Bolt, Hex Head - Grade 8 (5/8-11 x 1-1/2")
9	800-0009	4	Screw, Cap - Hex Head (1/4-20 x 1-1/2")	22	526-0259	8	Washer, Flat - Hardened Steel (5/8")
10	850-0040	4	Washer, Lock - Spring (1/4")	23	232-2898	1	Disk and Fan Assembly (Matched Pair)
11	220-1920	1	Stator, Exciter	24	510-0106	1	Bearing, Ball
12	509-0151	1	Seal, Oil - "O" Ring	25	232-2317	1	Spacer, Sleeve
13	211-0214	1	Bell, End	26	201-1902	1	Rotor, Assembly - Exciter (See Separate Page for Components)
14	800-0073	12	Screw, Cap - Hex Head (7/16-14 x 1-1/2")	27	515-0145	1	Key, Machine
15	850-0055	12	Washer, Lock - Spring (7/16")				
16			Stator (Includes Bus Bar Assembly)				
	220-2135	1	165kW, Code 517				
	220-2341	1	200kW, Code 5				
	220-2347	1	200kW, Code 6				
	220-2443	1	200kW, Code 7				
	220-2317	1	200kW, Code 9				
	220-1912	1	200kW, Code 17				
	220-2610	1	200kW, Code 17 ENVIRONMENTALLY PROTECTED				


Generator
Spec H thru L

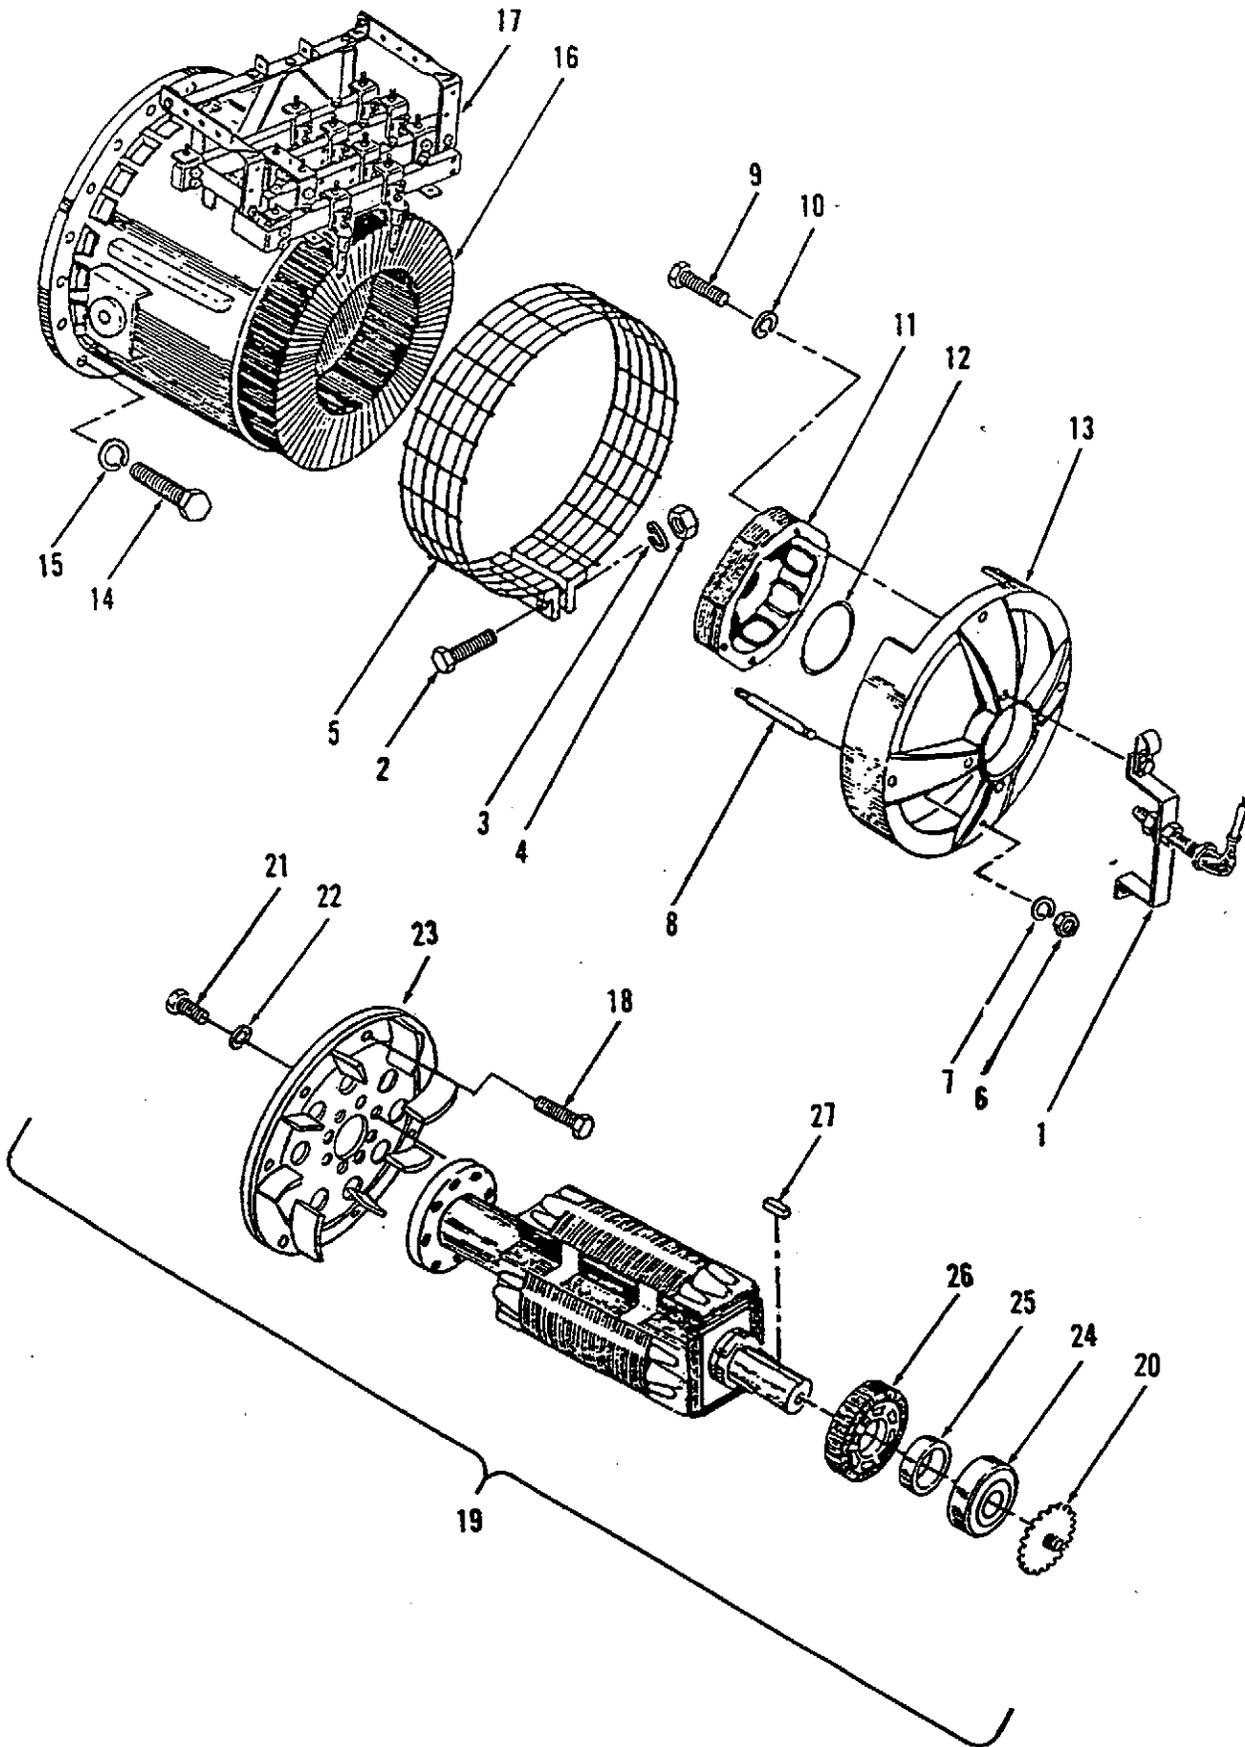

Generator
Spec H thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Sensor Assembly, Overspeed (See Separate Page for Components)	17		1	Bus Bar Assembly (See Separate Page for Components)
2	114-0023	2	Screw, Cap - Hex Head (1/4-20 x 1-1/4")	18	805-0032	8	Bolt, Hex Head - Grade 8 (1/2-13 x 1-1/4")
3	850-0040	2	Washer, Lock - Spring (1/4")	19			Rotor Assembly (Includes Disk and Fan Assembly, Bearing, Exciter Rotor and Overspeed Sensor)
4	862-0001	2	Nut, Hex (1/4-20)				165kW, Code 517
5	234-0455	1	Screen, Air		201-1940	1	190kW, Code 517
6	862-0016	4	Nut, Hex (1/2-13)		201-1942	1	200kW, Code 5, 6, 7, 9, 17
7	850-0060	4	Washer, Lock - Spring (1/2")		201-1942	1	275kW, Code 5, 6, 7, 9, 17
8	620-0780	4	Stud (1/2-13 x 6-1/2")				Switch Assembly, Overspeed (See Separate Page for Components)
9	800-0009	4	Screw, Cap - Hex Head (1/4-20 x 1-1/2")	20		1	Bolt, Hex Head - Grade 8 (5/8-11 x 1-1/2")
10	850-0040	4	Washer, Lock - Spring (1/4")				Washer, Flat - Hardened Steel (5/8")
11	220-1920	1	Stator, Exciter	21	805-0035	8	Disk and Fan Assembly (Matched Pair)
12	509-0151	1	Seal, Oil - "O" Ring	22	526-0259	8	Bearing, Ball
13	211-0214	1	Bell, End	23	232-2898	1	Spacer, Sleeve
14	800-0073	12	Screw, Cap - Hex Head (7/16-14 x 1-1/2")	24	510-0106	1	Rotor, Assembly - Exciter (See Separate Page for Components)
15	850-0055	12	Washer, Lock - Spring (7/16")	25	232-2317	1	Key, Machine (Matched Pair)
16			Stator (Includes Bus Bar Assembly)	26	201-1902	1	
	220-2135	1	165kW, Code 517	27	515-0145	1	
	220-2136	1	190kW, Code 517				
	220-2341	1	200kW, Code 5				
	220-2347	1	200kW, Code 6				
	220-2443	1	200kW, Code 7				
	220-2317	1	200kW, Code 9				
	220-1912	1	200kW, Code 17				
	220-2342	1	230kW, Code 5				
	220-2348	1	230kW, Code 6				
	220-2318	1	230kW, Code 9				
	220-1913	1	230kW, Code 17				


Bus Bar Assembly

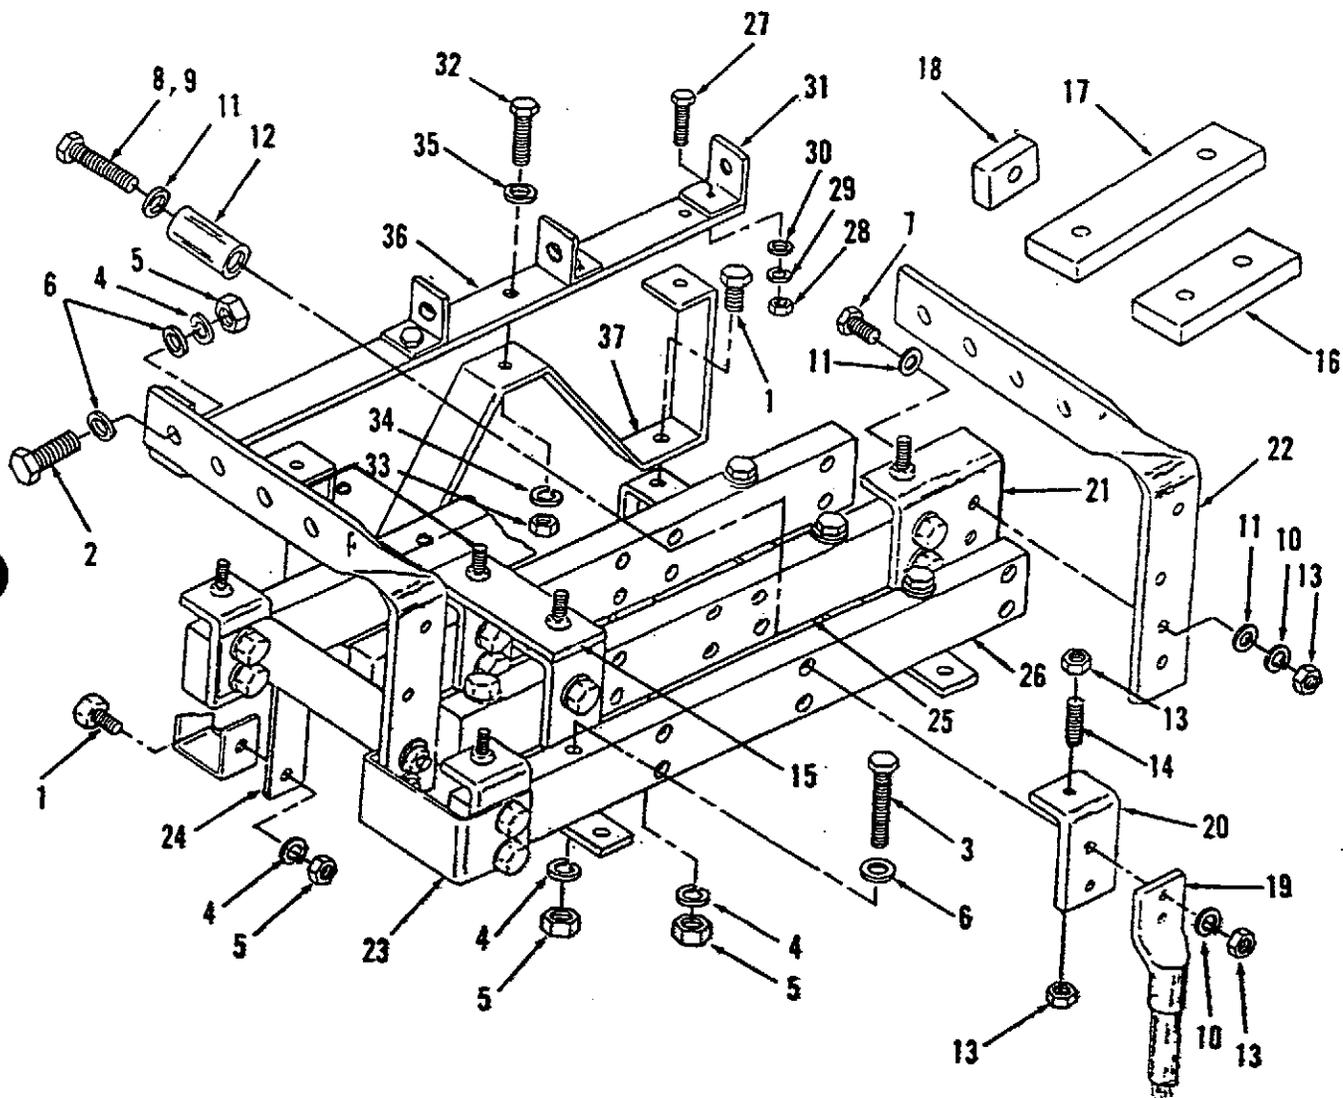

Bus Bar Assembly


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0050	4	Screw, Cap - Hex Head (3/8-16 x 1")	18	232-2583	1	Spacer, Bus Bar
2	800-0051	4	Screw, Cap - Hex Head (3/8-16 x 1-1/4")	19	332-1152	12	Terminal, Lug
3	800-0056	8	Screw, Cap - Hex Head (3/8-16 x 2-1/2")	20	232-2241	11	Bar, Bus
4	850-0050	16	Washer, Lock - Spring (3/8")	21	232-2343	3	Bar, Bus
5	862-0003	16	Nut, Hex (3/8-16)	22	232-2240	4	Bar, Bus
6	526-0029	16	Washer, Flat (3/8")	23	232-2238	1	Bar, Bus
7	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")	24	232-2249	2	Bracket, Mounting - Bus Bar
8	114-0022	24	Screw, Cap - Hex Head (5/16-18 x 1-3/4")	25	232-2242	2	Board, Insulator - Center
9	800-0033	8	Screw, Cap - Hex Head (5/16-18 x 2")	26	232-2243	2	Board, Insulator - Front and Rear
10	850-0045	36	Washer, Lock - Spring (5/16")	27	800-0007	4	Screw, Cap - Hex Head (1/4-20 x 1")
11	526-0115	48	Washer, Flat (5/16")	28	862-0001	4	Nut, Hex (1/4-20)
12	232-2344	32	Spacer, Sleeve	29	850-0040	4	Washer, Lock - Spring (1/4")
13	862-0015	50	Nut, Hex (5/16-18)	30	526-0018	4	Washer, Flat (1/4")
14	520-0142	14	Stud (5/16-18 x 1-1/4"LG)	31	232-2387	4	Bracket, Angle
15	232-2246	2	Bar, Reconnection - Long	32	800-0051	3	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
16	232-2248	2	Bar, Reconnection - Short	33	862-0003	3	Nut, Hex (3/8-16)
17	232-2582	1	Jumper, Bus Bar	34	850-0050	3	Washer, Lock - Spring (3/8")
				35	526-0029	3	Washer, Flat (3/8")
				36	232-2245	1	Board, Insulator
				37	232-2237	1	Bracket, Support

Overspeed Switch Assembly
Begin Spec M

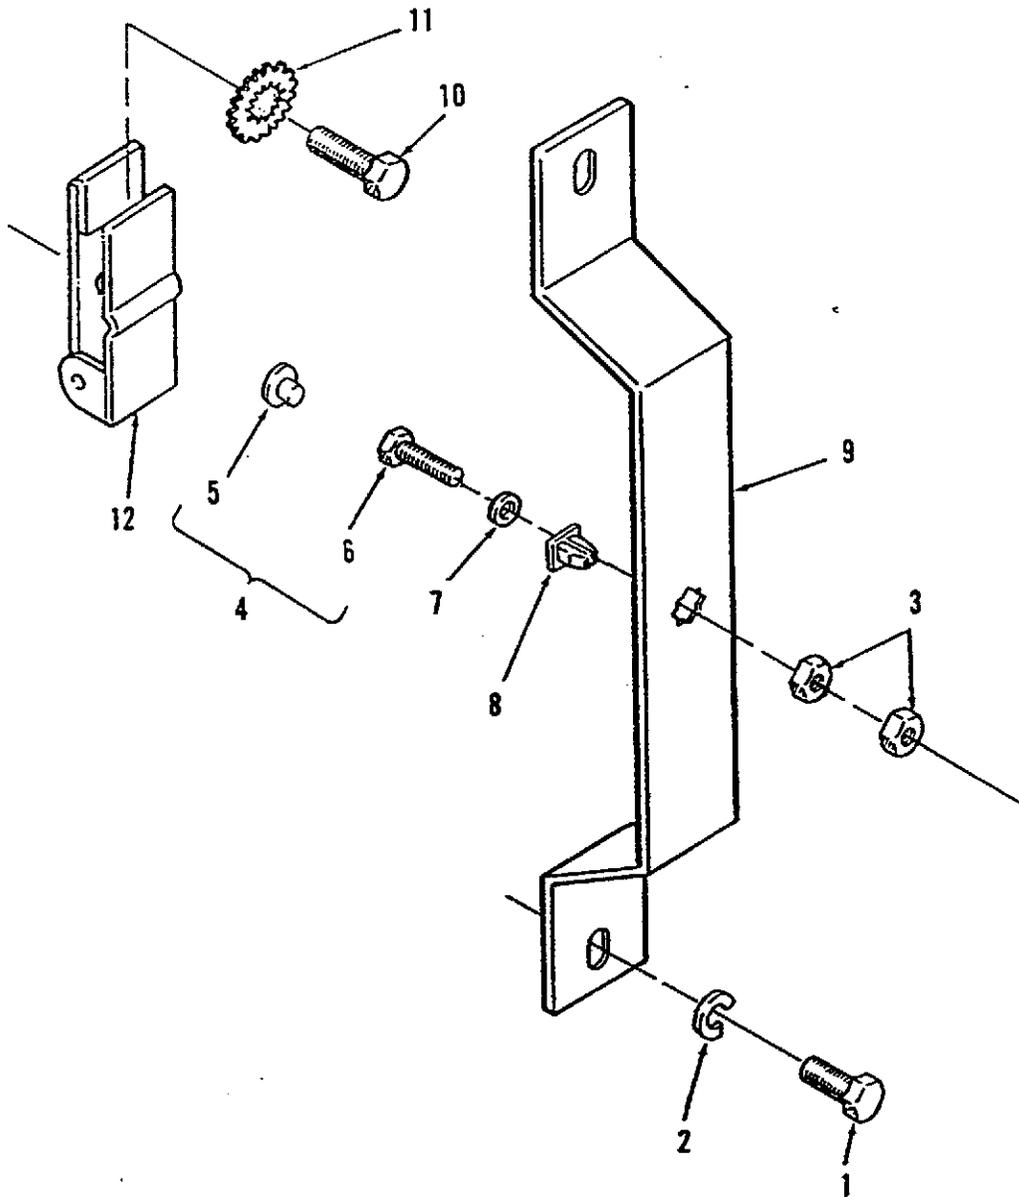


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")	6	150-0724	1	Screw, Cap - Modified
2	850-0040	2	Washer, Lock - Spring (1/4")	7	853-0013	1	Washer, Lock - ET (1/4")
3	862-0001	2	Nut, Hex (1/4-20)	8	870-0250	1	Nut, Insulating (1/4")
4	150-0723	1	Point Assemby, Overspeed (Includes Contact and Modified Screw)	9	150-2104	1	Bracket, Mounting
5	306-0036	1	Contact, Electrical	10	800-0048	1	Screw, Cap - Hex Head (3/8-16 x 3/4")
				11	856-0010	1	Washer, Lock - EIT (3/8")
				12	150-0717	1	Switch, Overspeed

Magnetic Pickup
Begin Spec M

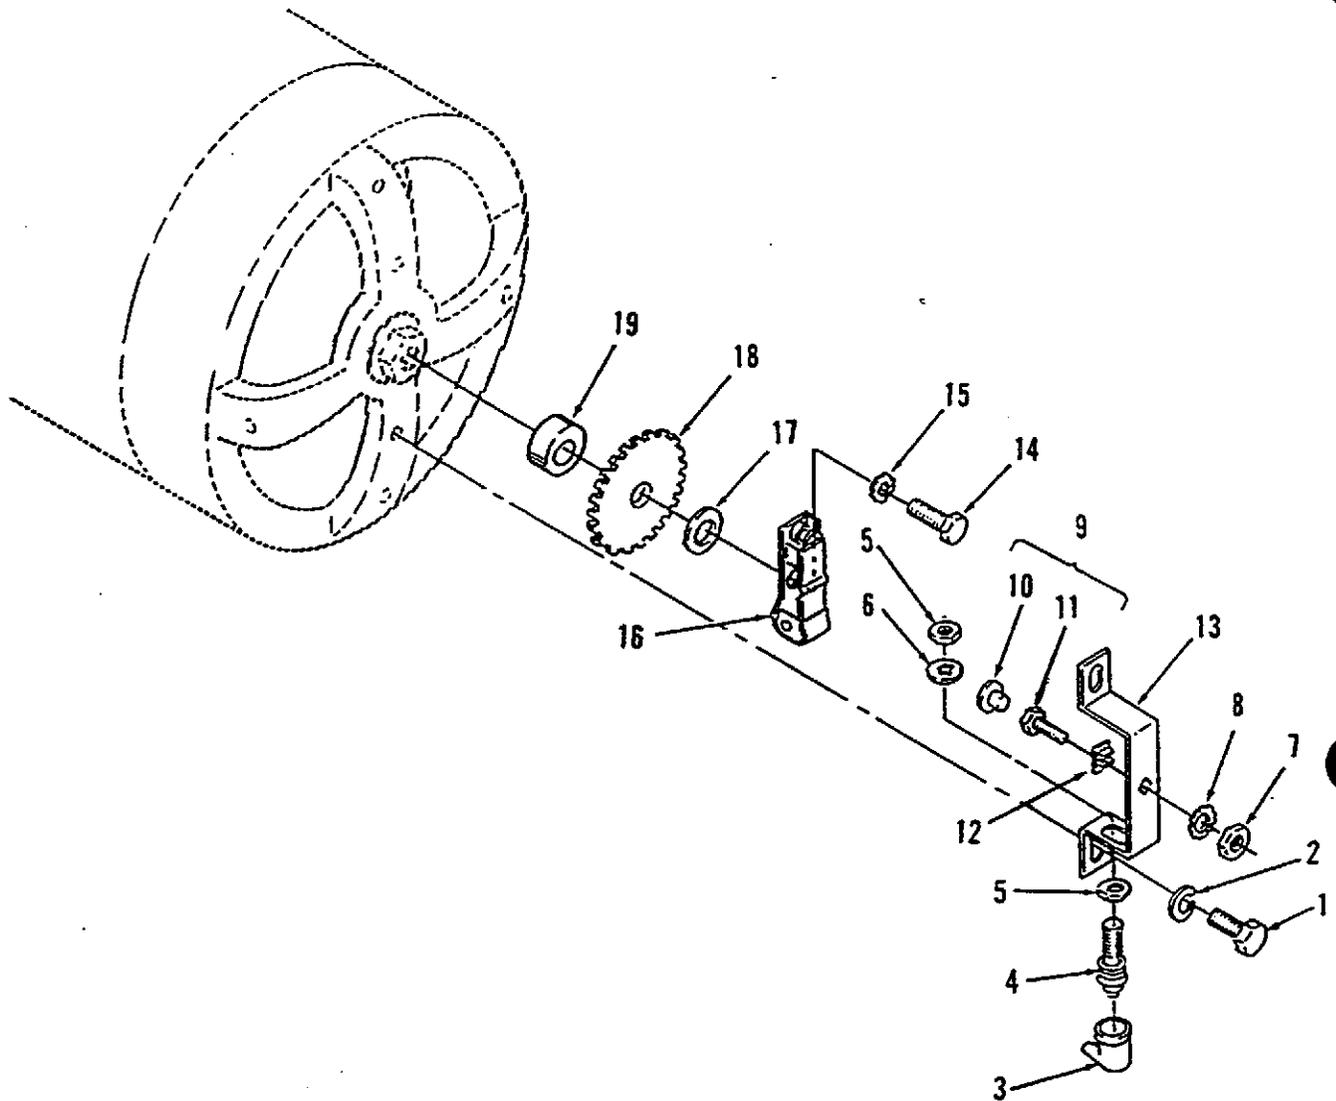

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")	10	306-0036	1	Contact, Electrical
2	850-0040	2	Washer, Lock - Spring (1/4")	11	150-0724	1	Screw, Cap - Modified
3	150-1410	1	Cap, Insulating	12	870-0250	1	Nut, Insulating (1/4")
4	150-1406	1	Pickup, Magnetic (Sensor)	13	301-9697	1	Bracket, Mounting
5	868-0011	2	Nut, Hex (3/4-16)	14	800-0053	1	Screw, Cap - Hex Head (3/8-16 x 1-3/4")
6	854-0031	1	Washer, Lock - IT (3/4")	15	856-0010	1	Washer, Lock - EIT (3/8")
7	862-0001	2	Nut, Hex (1/4-20)	16	150-0717	1	Switch, Overspeed
8	853-0013	1	Washer, Lock - ET (1/4")	17	526-0077	1	Washer, Flat (13/32" ID 1-1/4" OD x 1/4" Thick)
9	150-0723	1	Point Assembly, Overspeed (Includes Contact and Modified Screw)	18	150-1557	1	Wheel, Sensor - Overspeed
				19	370-4011	1	Spacer, Sleeve


Overspeed Sensor Assembly
Spec H thru L

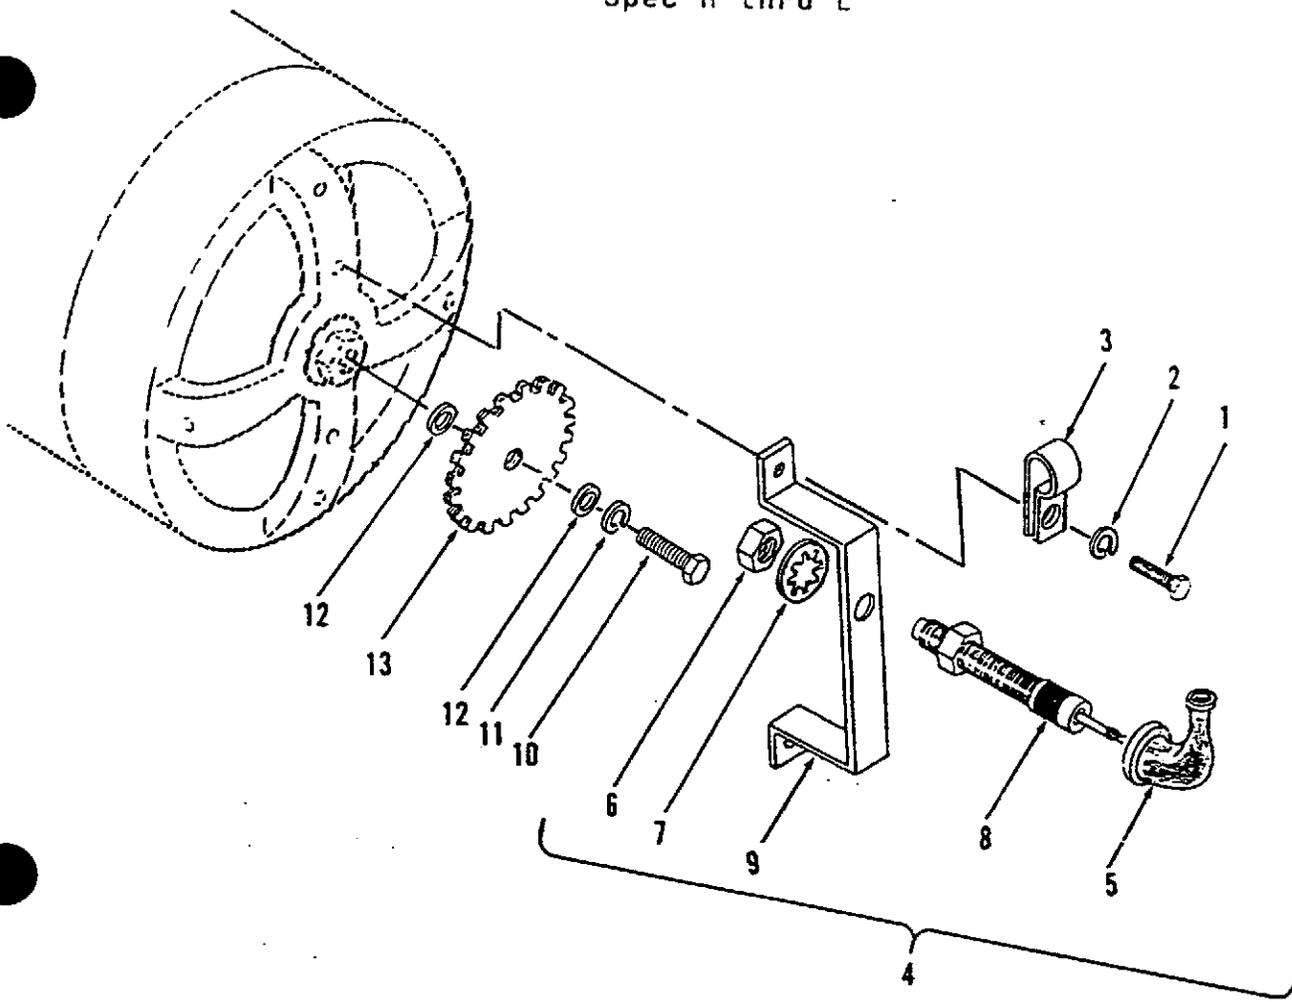

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0005	2	Screw, Cap - Hex Head (1/4-20 x 1-1/2")	7	854-0031	1	Washer, Lock - IT (3/4")
2	850-0040	2	Washer, Lock - Spring (1/4")	8	150-1406	1	Pickup, Magnetic (Sensor)
3	332-1554	1	Clamp, Loop	9	150-1407	1	Bracket, Mounting
4	150-1411	1	Sensor Assembly, Overspeed (Includes Cap, Sensor and Mounting Bracket)	10	800-0092	1	*Screw, Cap - Hex Head (1/2-13 x 1-1/2")
5	150-1410	1	Cap, Insulating	11	850-0060	1	*Washer, Lock - Spring (1/2")
6	868-0011	2	Nut, Hex (3/4-16)	12	526-0252	2	*Washer, Flat (1/2")
				13	150-1405	1	*Wheel, Sensor - Overspeed

* - Parts included with Generator Rotor Assembly.



Exciter Rotor Components

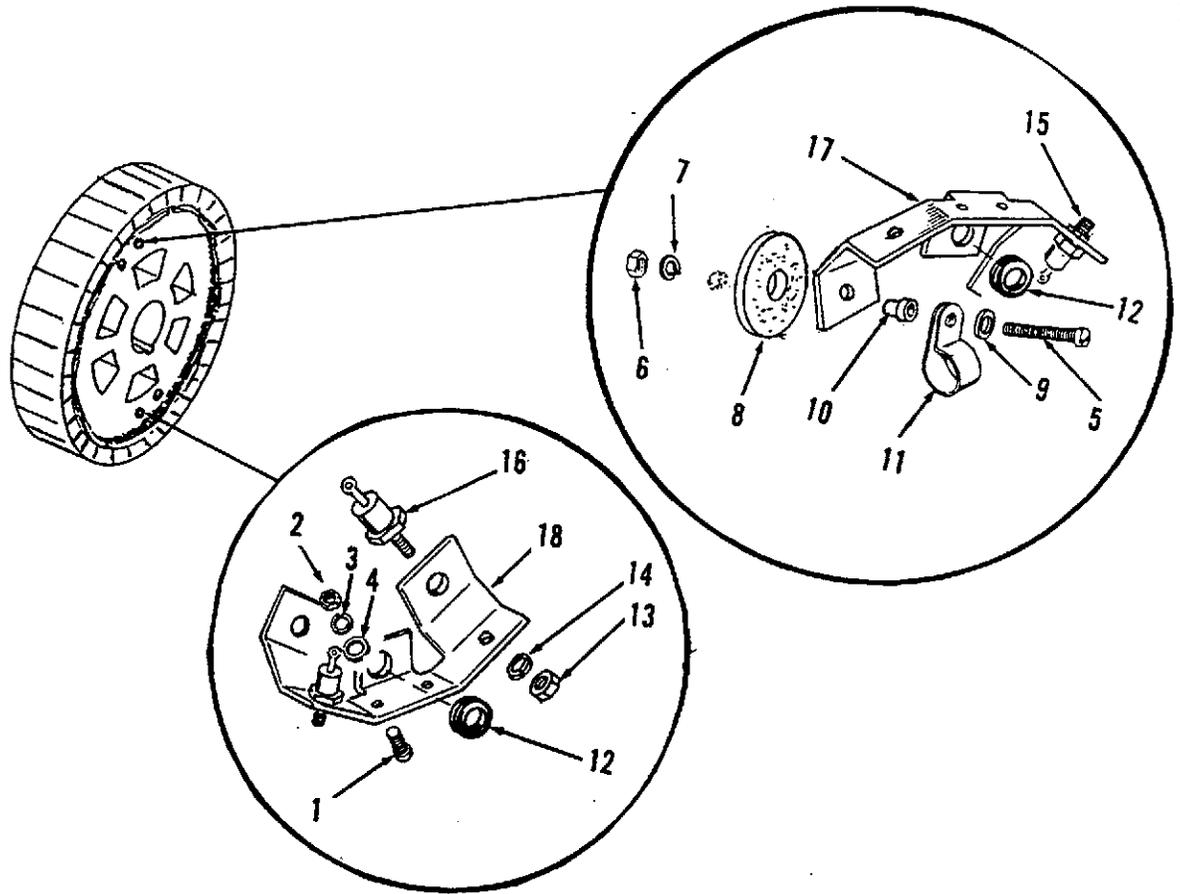

G1092-1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Rotor, Exciter (Includes Heat Sinks and Diodes)	7	850-0030	4	Washer, Lock - Spring (#10)
	201-1902	1	Standard	8	508-0156	4	Washer, Insulating
	201-2453	1	Environmental Protected	9	526-0009	4	Washer, Flat (#10)
1	813-0100	2	Screw, Machine - Round Head (#10-32 x 1/2")	10	508-0187	4	Spacer, Stepped
2	870-0053	2	Nut, Hex (#10-32)	11	332-0050	2	Clamp, Loop
3	850-0030	2	Washer, Lock - Spring (#10)	12	508-0093	2	Grommet
4	526-0008	2	Washer, Flat (#10)	13	868-0001	6	Nut, Hex (1/4-28)
5	813-0110	4	Screw, Machine - Round Head (#10-32 x 2")	14	850-0040	6	Washer, Lock - Spring (1/4")
6	870-0053	4	Nut, Hex (#10-32)	15	358-0011	3	Rectifier, Diode - Positive (CR1, CR2, CR3)
				16	358-0012	3	Rectifier, Diode - Negative (CR4, CR5, CR6)
				17	363-0049	1	Sink, Heat
				18	363-0050	1	Sink, Heat



Voltage Suppressor Components

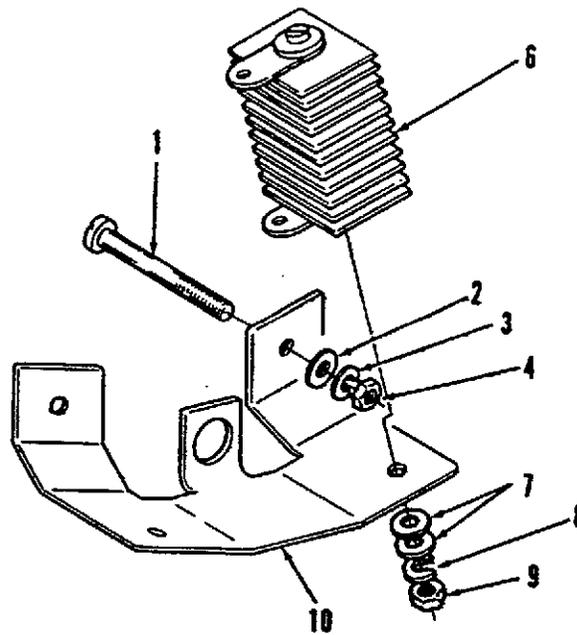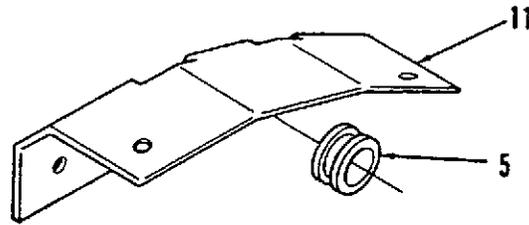

XES1229

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	232-2445	1	Suppressor, Voltage	6	305-0526	1	Set, Voltage Suppressor
1	813-0112	4	Screw, Machine - Round Head (#10-32 x 2-1/2")	7	526-0140	4	Washer, Flat (#10)
2	526-0140	4	Washer, Flat (#10)	8	850-0030	4	Washer, Lock - Spring (#10)
3	850-0030	4	Washer, Lock - Spring (#10)	9	870-0053	4	Nut, Hex (#10-32)
4	870-0053	4	Nut, Hex (#10-32)	10	363-0054	1	Sink, Heat
5	508-0093	2	Grommet	11	363-0055	1	Sink, Heat


Dual Voltage Suppressor Components

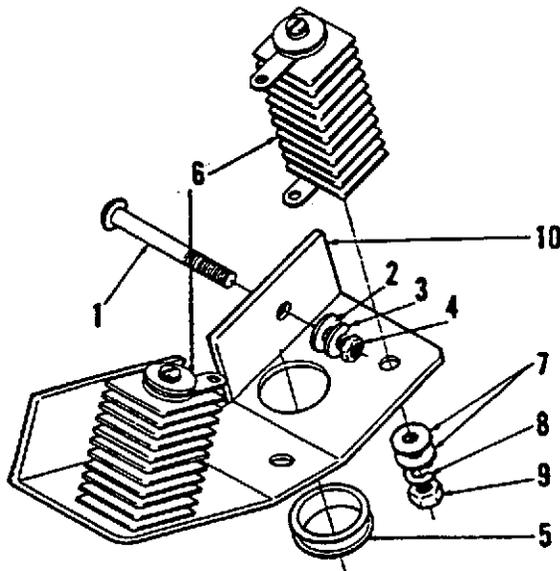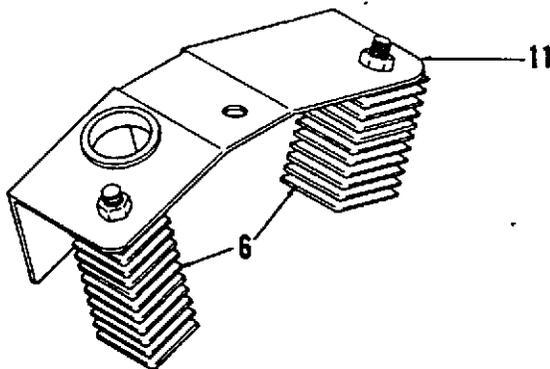

XES1230

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	232-2639	1	Suppressor, Voltage - Dual	6	305-0526	2	Set, Voltage Suppressor
1	813-0112	8	Screw, Machine - Round Head (#10-32 x 2-1/2")	7	526-0140	8	Washer, Flat (#10)
2	526-0140	8	Washer, Flat (#10)	8	850-0030	8	Washer, Lock - Spring (#10)
3	850-0030	8	Washer, Lock - Spring (#10)	9	870-0053	8	Nut, Hex (#10-32)
4	870-0053	8	Nut, Hex (#10-32)	10	363-0025	1	Sink, Heat
5	508-0093	2	Grommet	11	363-0033	1	Sink, Heat


Generator Heater

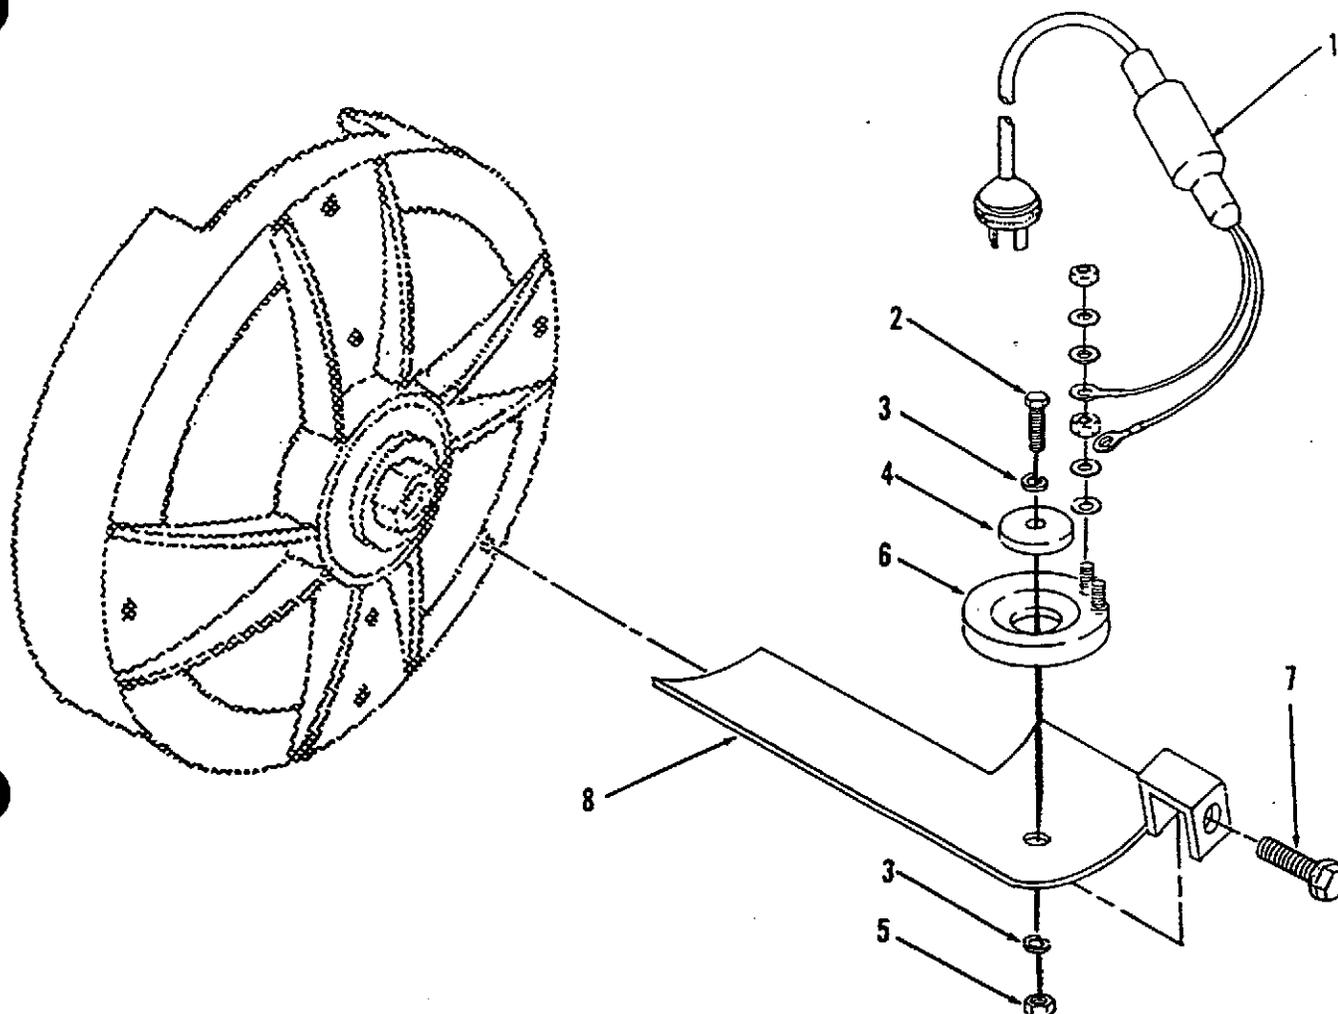

G1086-1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Cable, Electrical (Includes Thermostat)	5	862-0001	1	Nut, Hex (1/4-20)
	335-0146	1	120 VAC	6	333-0059	1	Heater, Electrical 125 Watt, 120 VAC
	335-0147	1	240 VAC		333-0192	1	200 Watt, 240 VAC
2	800-0004	1	Screw, Cap - Hex Head (1/4-20 x 5/8")	7	821-0014	1	Screw, Self-locking - Hex (5/16-18 x 1/2")
3	850-0038	1	Washer, Lock - Spring (1/4")	8			Bracket, Mounting
4	526-0158	1	Washer, Flat (17/64"ID x 1"OD x 1/8"Thick)		232-2446	1	Used with 120 VAC Heater
					232-2832	1	Used with 240 VAC Heater


Engine Control Mechanical Gauges

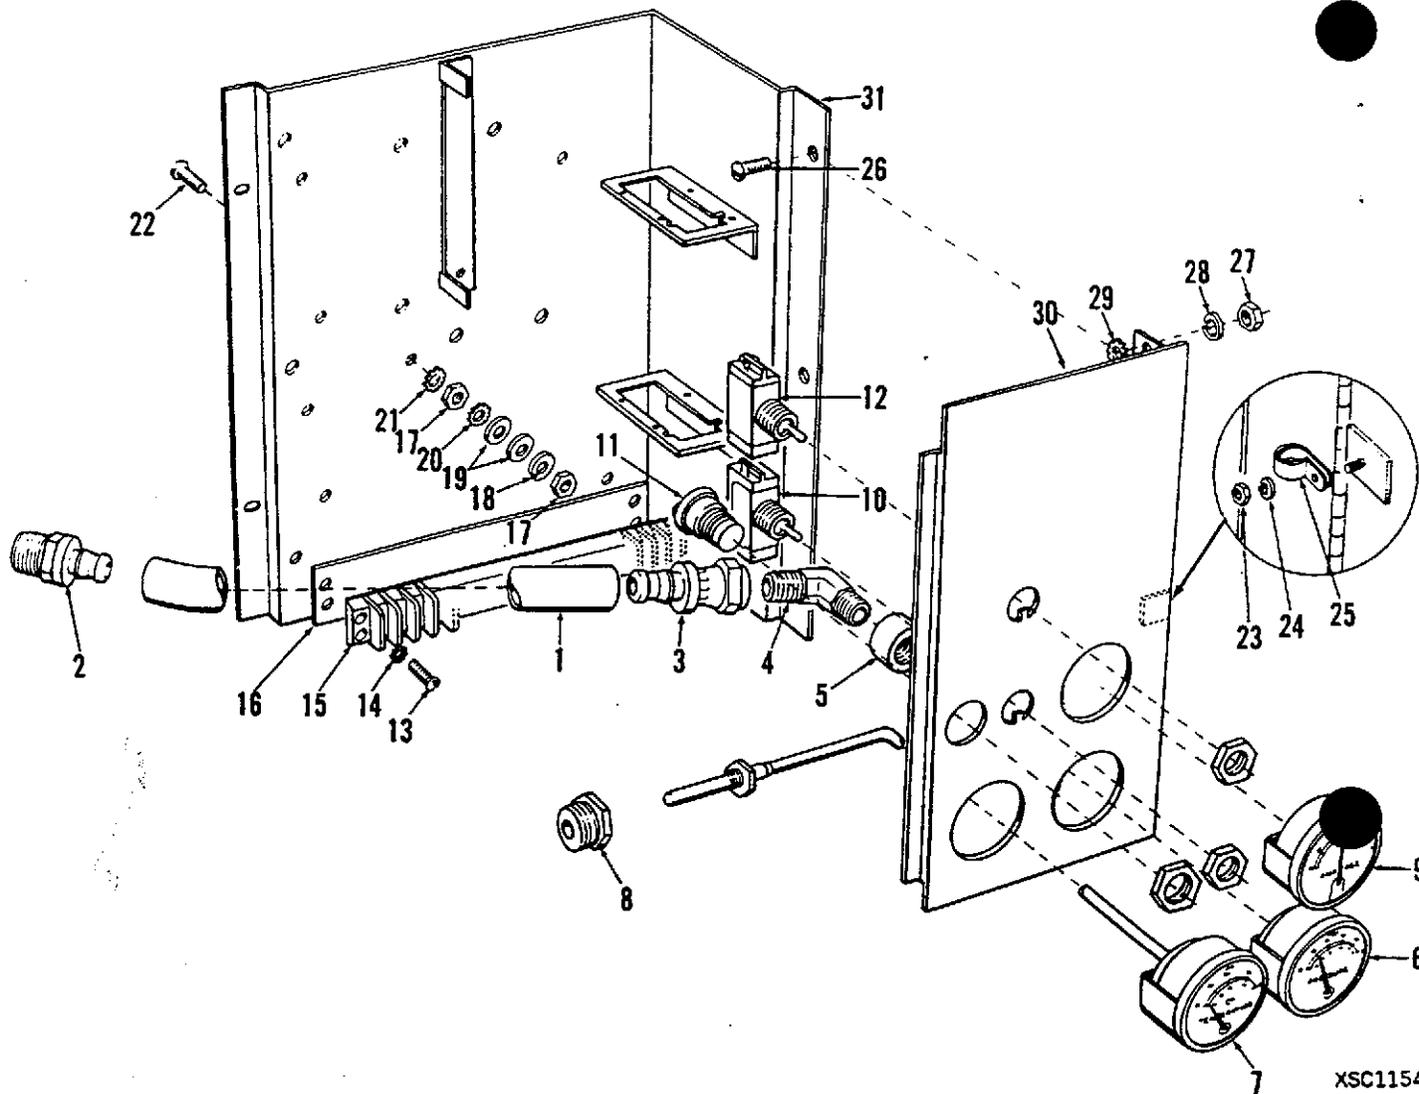

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-1077	1	Hose	14	853-0003	2	Washer, Lock - ET (#6)
2	502-0444	1	Adapter, Pipe to Hose - Male	15	332-0795	1	Block, Terminal - 20 Place
3	502-0445	1	Adapter, Pipe to Hose - Female	16	332-1241	1	Strip, Marker
4	502-0583	1	Elbow, Pipe - 45 Degree	17	871-0010	2	Nut, Hex - Brass (#10-32)
5	502-0051	1	Coupling, Pipe	18	850-0030	2	Washer, Lock - Spring (#10)
6			Gauge, Pressure - Oil	19	526-0062	2	Washer, Flat - Brass (#10)
	193-0232	1	0 - 75 Pounds	20	853-0008	1	Washer, Lock - ET (#10)
	193-0233	1	0 - 150 Pounds	21	856-0003	1	Washer, Lock - EIT (#10)
7			Gauge, Temperature - Water (Includes Reducer)	22	815-0203	1	Screw, Machine - Round Head (#10-32 x 7/8")
	193-0234	1	72" Capillary Tube	23	870-0053	1	Nut, Hex (#10-32)
	193-0235	1	84" Capillary Tube	24	850-0030	1	Washer, Lock - Spring (#10)
	193-0236	1	96" Capillary Tube	25	332-0051	2	Clamp, Loop
	193-0305	1	144" Capillary Tube	26	815-0026	5	Screw, Machine - Truss Head (#10-32 x 3/8")
8	NFS	1	Reducer, Hex (Part of Gauge)	27	870-0053	1	Nut, Hex (#10-32)
9	302-0061	1	Ammeter	28	850-0030	1	Washer, Lock - Spring (#10)
10	308-0088	1	Switch, Toggle	29	856-0003	1	Washer, Lock - EIT (#10)
11	308-0297	1	Switch, Push	30	301-4009	1	Panel, Control
12	308-0155	1	Switch, Toggle	31	301-3253	1	Bracket, Mounting
13	812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")				

XSC1154

Engine Control
Begin Spec M

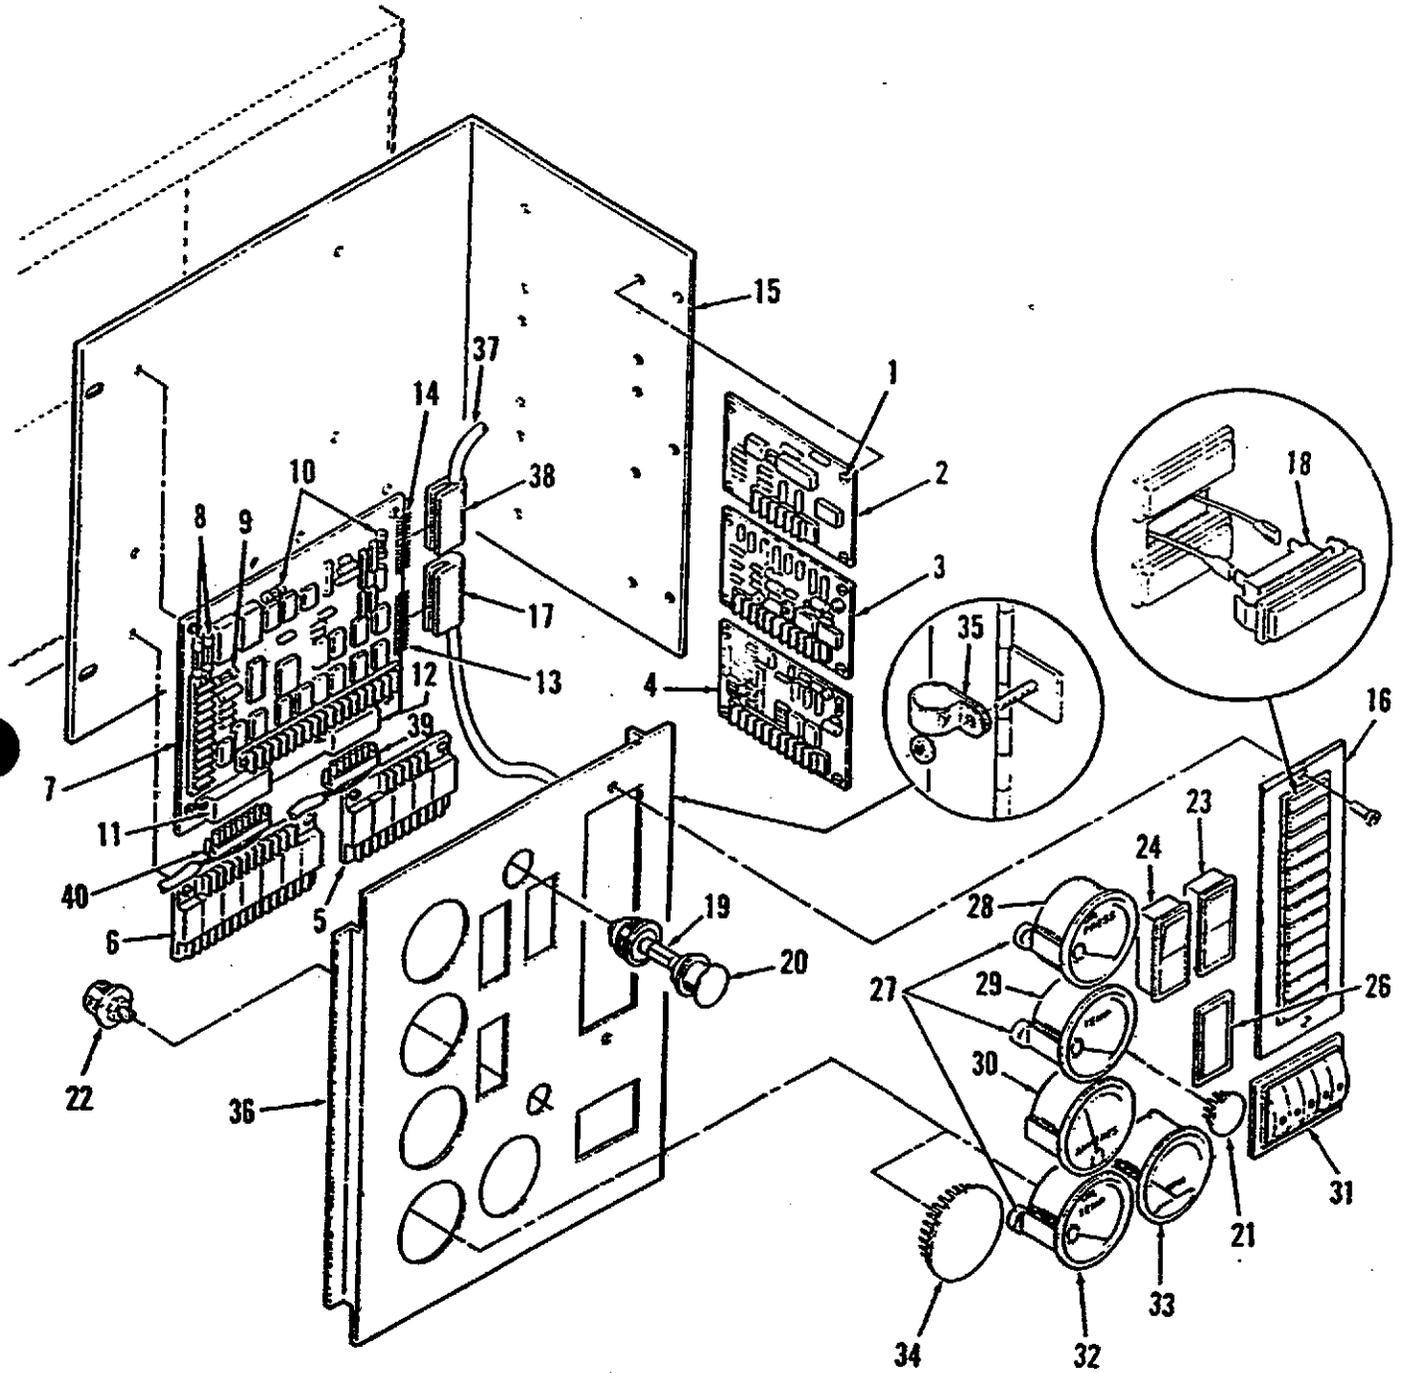


59C

**Engine Control
Begin Spec M**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0544	24	Screw, Machine - Round Head With IT Lock Washer (#6-32 x 1/2")	17	323-1310	1	Housing, 13 Pin (J3)
					323-1302	13	Contact, Pin
2	300-2900	1	Board, Time Delay, Start/Stop - 24 VDC (A15)	18	322-0369-02	1	Lamp, Incandescent - 1/3 Watt, 28 VDC
3			Board, Magnetic Sensor, Start Disconnect/Over Speed Sensor (A16)	19	322-0017	1	Lamp, Incandescent - 28 VDC (DS11)
	300-2903	1	Standard	20	322-0361	1	Holder, Lamp
	300-2904	1	Precision	21	517-0131	1	Plug, Button
4	300-2906	1	Board, Over-Under Voltage Sensor - 24 VDC (A17)	22	151-0402	1	Potentiometer (R11)
5	300-2856	1	Board, Relay - 24 VDC (A13)	23	308-0785	1	Switch, Push (S11)
6	300-2863	1	Board, Relay - 24 VDC (A14)	24	308-0784	1	Switch, Push (S12)
7			Board, Engine Monitor (A11) (Includes Fuses and Connectors)	26	301-6257	1	Cover
	300-2808	1	24 VDC, 2 Light	27	193-0250	3	Resistor, Gauge (R12)
	300-2812	1	24 VDC, 12 Light	28	193-0352	1	Gauge, Pressure - Oil (M11)
8	321-0270	2	Fuse, Cartridge - 20 Amp (F1, F2)	29	193-0351	1	Gauge, Temperature - Water (M12)
9	321-0231	1	Fuse, Cartridge - 15 Amp (F3)	30	302-1790	1	Ammeter (M13)
10	321-0094	2	Fuse, Cartridge - 5 Amp (F4, F5)	31	302-0885	1	Meter, Totalizing - Time (M14)
11	323-1305	1	Connector, 8 Pin (P1)	32	193-0330	1	Gauge, Temperature - Oil (M15)
12	323-1303	1	Connector, 6 Pin (P2)	33	302-1715	1	Tachometer (M16)
13	323-1309	1	Connector, 13 Pin (P3)	34	517-0221	1	Plug, Button
14	323-1307	1	Connector, 12 Pin (P4)	35	322-0052	1	Clamp, Loop
15	301-8851	1	Bracket, Mounting		870-0131	1	Nut, Self-locking - Hex (#10-32)
	821-0004	4	Screw, Self-locking - Hex (#10-32 x 5/16")	36			Door, Control 5 Meter Holes
16			Module, Indicator - Fault (A12) (Includes Connector)		301-9055-01	1	3 Meter Holes
	322-0358-02	1	24 VDC, 2 Light		301-9055-02	1	Harness, Wiring - DC (Includes Connector)
	322-0360-02	1	24 VDC, 12 Light	37	338-1817	1	Housing, 12 Pin (J4)
	815-0385	2	Screw, Machine - Round Head (#6-32 x 1/2")	38	323-1308	1	Contact, Pin
	870-0183	2	Nut, Self-locking - Hex (#6-32)		323-1302	12	Contact, Pin
				39	323-1304	1	*Housing, 6 Pin
					323-1200	6	*Contact, Pin
				40	323-1306	1	*Housing, 8 Pin
					323-1200	8	*Contact, Pin

* - Parts Included in Engine Wiring Harness

Engine Control
Spec H thru L

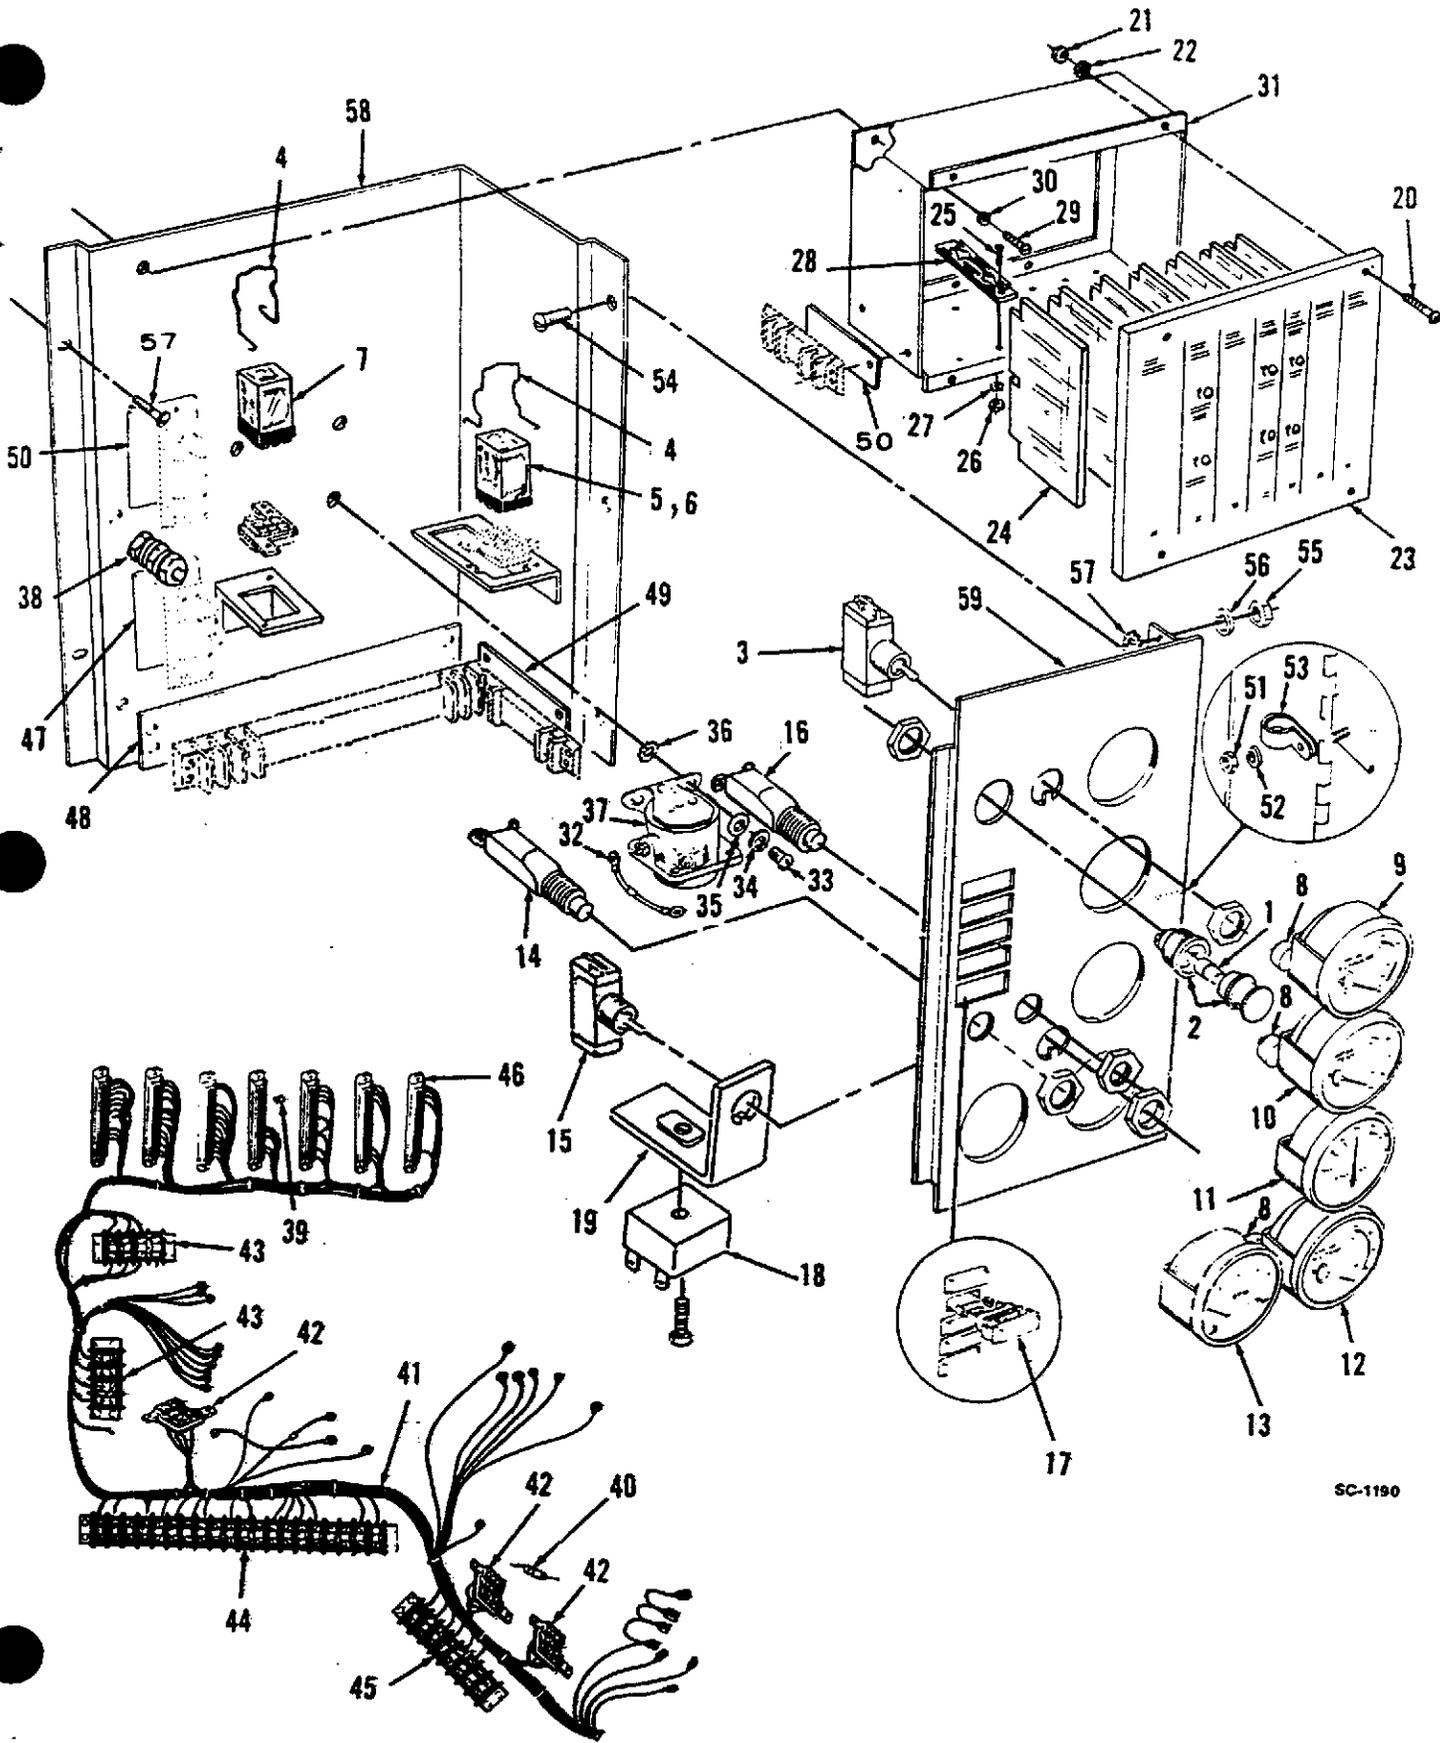


SC-1190

Engine Control Spec H Thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	322-0017	1	Lamp, 24 VDC (DS11)	26	860-0006	28	Nut, Hex (#6-32)
2	322-0149	1	Light, Panel	27	853-0003	28	Washer, Lock - ET (#6)
3	308-0002	1	Switch, Toggle (S11)	28	323-0814	14	Guide
4	307-1157	3	Spring, Holddown - Relay	29	813-0100	4	Screw, Machine - Round Head (#10-32 x 1/2")
5	307-1056	1	Relay, Ignition (K12)	30	850-0030	4	Washer, Lock - Spring (#10)
6	307-1056	1	Relay, Start Disconnect (K11)	31	301-3588	1	Rack
7	307-1061	1	Relay, Start Protection (K14)	32	357-0018	1	Diode with Terminals
8	193-0250	3	Resistor, Gauge (R11,R12,R13)	33	813-0098	2	Screw, Machine - Round Head (#10-32 x 3/8")
9			Gauge, Pressure - Oil, 12 VDC (M11)	34	850-0030	2	Washer, Lock - Spring (#10)
	193-0243	1	Begin 1977	35	526-0009	2	Washer, Flat (#10)
	193-0107	1	Thru 1976	36	856-0003	2	Washer, Lock - EIT (#10)
10			Gauge, Temperature - Water - 12 VDC (M12)	37	307-0061	1	Relay, Starting - 24 VDC (K13)
	193-0245	1	Begin 1977	38			Terminal, Ground (Includes Parts Marked *)
	193-0106	1	Thru 1976				
11	302-1362	1	Ammeter (M13)		871-0010	2	*Nut, Hex (#10-32)
12			Gauge, Temperature - Oil - 12 VDC (M14)		850-0030	1	*Washer, Lock - Spring (#10)
	193-0248	1	Begin 1977		526-0062	2	*Washer, Flat (#10)
	193-0187	1	Thru 1976		853-0008	1	*Washer, Lock - ET (#10)
13	302-0749	1	Tachometer (M15)		856-0003	1	*Washer, Lock - EIT (#10)
14	308-0337	1	Switch, Push - Lamp Test (S13)		815-0203	1	*Screw, Machine - Round Head (#10-32 x 7/8")
15			Switch, Toggle - Selector (S12)	39	332-1276	7	Plug, Keying
	308-0220	1	Standard	40	357-0004	2	Diode (CR11, CR12)
	308-0347	1	Penn State	41			@Harness, Wiring
	308-0539	1	Alarm Control		338-0715	1	Set with Single Fault Light
16	308-0091	1	Switch, Push - Alarm Reset (S14)		338-0705	1	Set with Five Fault Lights
17			Light, Indicator - 28 VDC	42	323-0765	3	Socket, Relay (Less Terminals)
	322-0119	1	Overcrank (DS12)		332-1280	11	Terminal
	322-0120	1	Low Oil Pressure (DS14)	43	332-0537	2	Block, Terminal (TB12,14)
	322-0121	1	High Engine Temperature (DS15)	44	332-1005	1	Block, Terminal (TB11)
	322-0122	1	Low Engine Temperature (DS16)	45	332-0699	1	Block, Terminal (TB13)
	322-0123	1	Overspeed (DS13)	46	332-1271	7	Connector
	322-0129	1	Fault (DS12)	47	332-1561	1	Strip, Marker
	322-0315	1	Switch Off (DS17)	48	332-1239	1	Strip, Marker
	322-0137	1	Blank, No Legend	49	332-1559	1	Strip, Marker
18	333-0194-02	1	Flasher, 24 VDC	50	332-1560	1	Strip, Marker
	813-0105	1	Screw, Machine - Round Head (#10-32 x 1")	51	870-0053	1	Nut, Hex (#10-32)
19	301-6053	1	Bracket, Mounting - Flasher	52	850-0030	1	Washer, Lock - Spring (#10)
20	812-0063	4	Screw, Machine - Round Head (#6-32 x 1/2")	53	332-0051	1	Clamp, Loop
21	860-0006	4	Nut, Hex (#6-32)	54	815-0026	5	Screw, Machine - Truss Head (#10-32 x 3/8")
22	853-0003	4	Washer, Lock - ET (#6)	55	870-0053	1	Nut, Hex (#10-32)
23	301-3635	1	Cover	56	850-0030	1	Washer, Lock - Spring (#10)
24			Control	57	856-0003	1	Washer, Lock - ET (#10)
	300-0953	1	Board, Engine Monitor (A12)	58	301-3621	1	Bracket, Mounting
	300-0954	1	Board, Engine Shutdown (A11)	59			Panel, Control
	300-0955	1	Board, Remote Indicator (A13)		301-3661	1	Single Fault Light Control
	300-0956	1	Board, Cyle Cranker (A14)		301-3978	1	3 Meters, 1 Panel Light
	300-0957	1	Board, Overspeed Sensor (A16)		301-3979	1	4 Meters, 1 Panel Light
	300-0958	1	Board, Start Disconnect (A17)				5 Meters, 1 Panel Light
	300-0973	1	Board, Start/Stop (A15)		301-3629	1	Five Fault Light Control
	300-0977	1	Board, Standard Cranker (A14)		301-3976	1	3 Meters, 1 Panel Light
	300-0987	1	Board, Bypass (A15)		301-3977	1	4 Meters, 1 Panel Light
25	812-0063	28	Screw, Machine - Round Head (#6-32 x 1/2")		301-3977	1	5 Meters, 1 Panel Light
					301-7079	1	Six Fault Light Control
							3 Meters, 1 Panel Light

@ - Standard Harness Listed; Sets with 4 or 5 Meters and other special features may require additional electrical leads.
* - Parts Included in Ground Terminal.

Generator Control
Begin Spec M

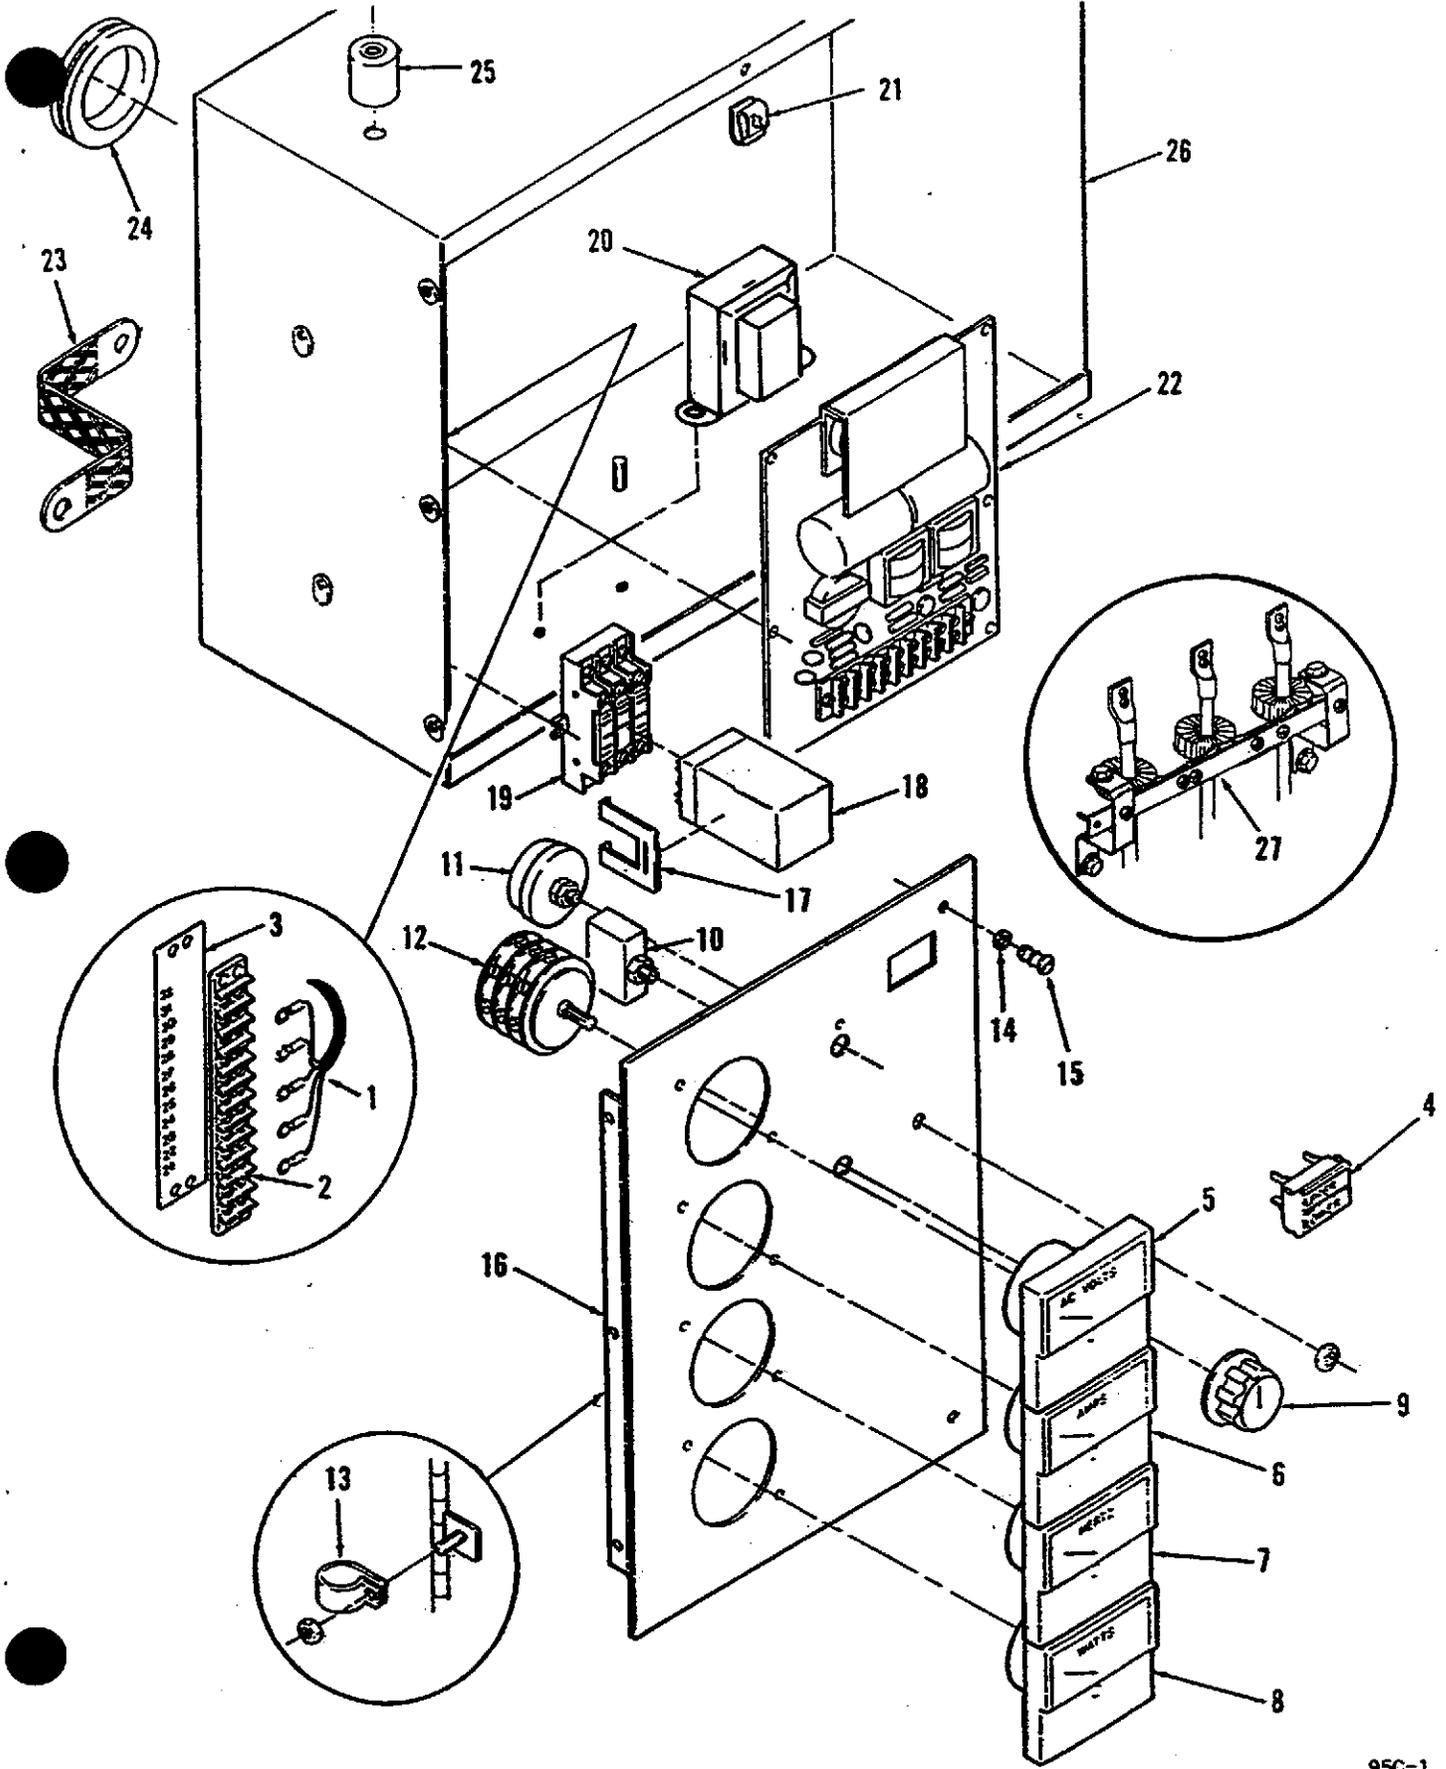


95C-1

Generator Control
Begin Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring - (Includes Terminal Block)	17	307-1987	2	Clip, Relay
	338-1818	1	Control with Meters	18	307-1056	1	Relay, 24 VDC (K21)
	338-1853	1	Control without Meters	19	323-0804	1	Socket, Relay
	812-0065	2	Screw, Machine - Round Head (#6-32 x 5/8")		815-0544	2	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
2	332-0607	1	Block, Terminal (TB1)	20	315-0642	1	Transformer, Step-down Code 9 Only (T21)
3	332-2723	1	Strip, Marker				
4	322-0363	1	Light, Indicator - Dual (DS21, DS22)		812-0077	2	Screw, Machine - Round Head (#8-32 x 3/8")
5			Voltmeter (M21)		856-0002	2	Washer, Lock - EIT (#8)
	302-1148	1	0-300/600 VAC, Code 17, 517	21	406-0332	2	Receptacle, Fastener
	302-1753	1	0-750 VAC, Code 9	22	300-2880	1	Regulator, Voltage (VR21)
6			Ammeter (M22)		815-0544	6	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
	302-1686	1	0-300 Amp, Code 9				
	302-1726	1	0-400/800 Amp, Code 17, 517				
7	302-1720	1	Meter, Frequency (M23)	23	337-0049	1	Strap, Electrical
8		1	Wattmeter (M24) (See Separate page for Components)		800-0024	1	Screw, Cap - Hex Head (5/16-18 x 1/2")
9	303-0032	1	Knob		856-0008	1	Washer, Lock - EIT (5/16")
10			Breaker, Circuit (CB21)	24	508-0051	1	Grommet
	320-1121	1	Standard	25	402-0527	2	Mount, Vibration
	320-1438	1	With Aux Contact		800-0045	4	Screw, Cap - Hex Head (5/16-18 x 3/8")
11	303-0261	1	Rheostat (R21)				
12	308-0284	1	Switch, Rotary (S21)		850-0045	4	Washer, Lock - Spring (5/16")
13	332-0052	1	Clamp, Loop	26	301-8065	1	Box, Control
	870-0131	1	Nut, Self-locking - Hex with ET Lock Washer (#10-32)	27		1	Current Transformer (See Separate Page for Components)
14	406-0334	2	Clip, Fastener				
15	406-0333	2	Stud, Fastener				
16			Door, Control				
	301-9054-01	1	4 Meter Holes				
	301-9054-02	1	3 Meter Holes				
	301-9054-03	1	No Meter Holes				
	821-0004	3	Screw, Self-locking - Hex (#10-32 x 5/16")				

Generator Control
Spec H thru L

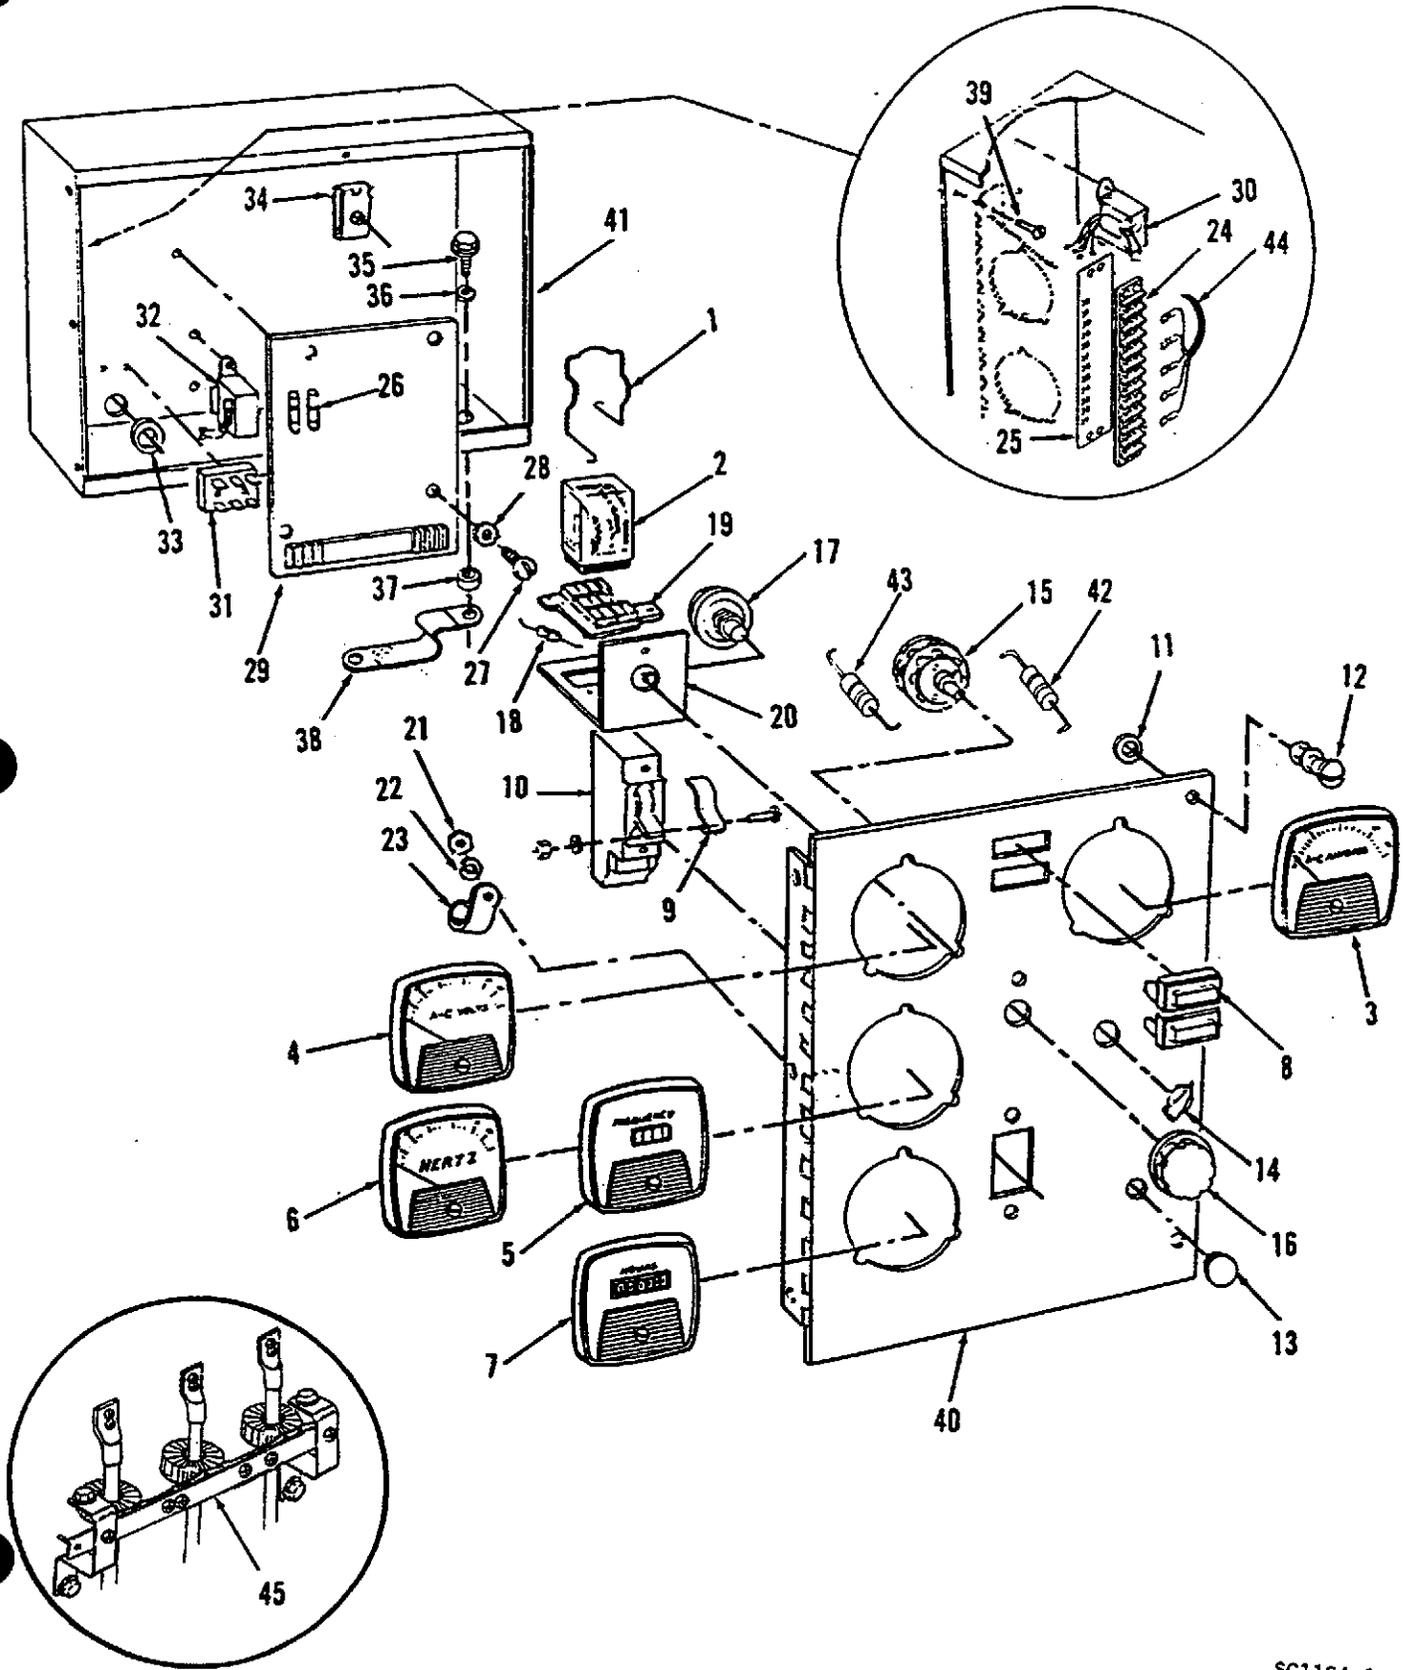


SC1164-1

Generator Control
Spec H thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-1157	1	Spring, Relay	24			Block, Terminal (TB21)
2	307-1061	1	Relay (K21)		332-0607	1	12 Place
3			Ammeter (M21)		332-0795	1	16 Place
	302-0413	1	0-300 Amp, Code 9 - 200kW Set		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
	302-0605	1	0-400 Amp, Code 6				Washer, Lock - ET (#6)
	302-0605	1	0-400 Amp, Code 9 - 230kW Set		853-0003	2	Washer, Lock - Spring (#6)
	302-0414	1	0-500 Amp, Code 5, 7		850-0020	2	Strip, Marker
	302-0877	1	0-400/800 Amp, Code 517	25			16 Place
	302-0878	1	0-500/1000 Amp, Code 17		332-1242	1	12 Place
4			Voltmeter (M22)		332-1248	1	
	302-0421	1	0-300 VAC, Code 5	26	321-0204	2	Fuse, Cartridge - 1/4 Amp
	302-0612	1	0-500 VAC, Code 7	27	812-0065	4	Screw, Machine - Round Head (#6-32 x 5/8")
	302-0422	1	0-600 VAC, Code 6				Washer, Lock - ET (#6)
	302-0779	1	0-750 VAC, Code 9	28	853-0003	4	Regulator, Voltage (VR21)
	302-0718	1	0-300/600 VAC, Code 17, 517	29			120 VAC Input Signal Req'd
5			Meter, Frequency - Reed (M23)		332-1268	1	240 VAC Input Signal Req'd
	302-0221	1	230 VAC, 60 Hz - Code 5, 6, 7, 9, 17	30	332-1956	1	Transformer, Voltage (T21)
	302-0256	1	230 VAC, 50 Hz - Code 517		315-0342	1	120 VAC
6			Meter, Frequency - Pointer (M23)		315-0431	1	240 VAC
	302-0810	1	208 VAC, 60 Hz - Code 7, 17		812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")
	302-0811	1	240 VAC, 60 Hz - Code 5, 6, 9				Washer, Lock - ET (#6)
	302-0894	1	240 VAC, 50 Hz - Code 517		853-0003	2	Rectifier, Bridge (CR21)
7			Meter, Totalizing - Time (M24)	31	305-0675	1	Screw, Machine - Round Head (#6-32 x 1-1/4")
	302-0466	1	60 Hz		812-0070	2	Washer, Lock - Spring (#6)
	302-0469	1	50 Hz				Reactor (L21)
8			Light, Indicator - Red - 125 VAC		850-0020	2	Screw, Machine - Round Head (#6-32 x 3/8")
	322-0130	1	Upper Scale (DS21)	32	315-0384	1	Washer, Lock - ET (#6)
	322-0131	1	Lower Scale (DS22)		812-0061	2	Grommet
9			Lock, Handle				Receptacle, Fastener
	815-0203	1	Screw, Machine - Round Head (#10-32 x 7/8")		853-0003	2	Screw, Cap - Hex Head (5/16-18 x 3/8")
	854-0010	1	Washer, Lock - ET (#10)	33	508-0001	1	Washer, Lock - Spring (5/16")
	871-0010	1	Nut, Hex (#10-32)	34	406-0332	2	Dampener, Vibration
10			Breaker, Circuit (CB21)	35	800-0045	4	Strap, Electrical - Ground
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")	36	850-0045	4	Screw, Machine - Truss Head (#10-32 x 3/8")
	850-0020	2	Washer, Lock - Spring (#6)	37	402-0078	4	Panel, Control
11	406-0334	2	Clip, Fastener	38	337-0049	1	4 Meters, Code 5, 6, 7, 9
12	406-0333	2	Stud, Fastener	39	815-0026	3	4 Meters, Code 17, 517
13	517-0131	1	Plug, Plastic	40			5 Meters, Code 5, 6, 7, 9
14	303-0076	1	Knob, Pointer		301-3342	1	5 Meters, Code 17, 517
15	308-0284	1	Switch, Selector (S21)		301-3170	1	Box, Control
16	303-0032	1	Knob		301-3449	1	Resistor (3.k Ohms)
17	303-0170	1	Rheostat (R21)		301-3312	1	Resistor (3.9k Ohms)
18	350-0556	1	Resistor (R22)	41	301-3158	1	Harness, Wiring
19			Socket, Relay (Less Terminals)	42	350-0098	1	Code 17, 517
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")	43	350-0101	1	Code 5, 6, 9
	853-0003	2	Washer, Lock - ET (#6)	44			Code 7
	860-0005	2	Nut, Hex (#6-32)		338-0730	1	Current Transformer
	332-1280	11	Terminal		338-0759	1	(See Separate Page for Components)
20	301-3244	1	Bracket, Mounting	45	338-0916	1	
21	870-0053	1	Nut, Hex (#10-32)				
22	850-0030	1	Washer, Lock - Spring (#10)				
23	332-0051	1	Clamp, Loop				

Generator Control
Switching Regulator
Spec H thru L

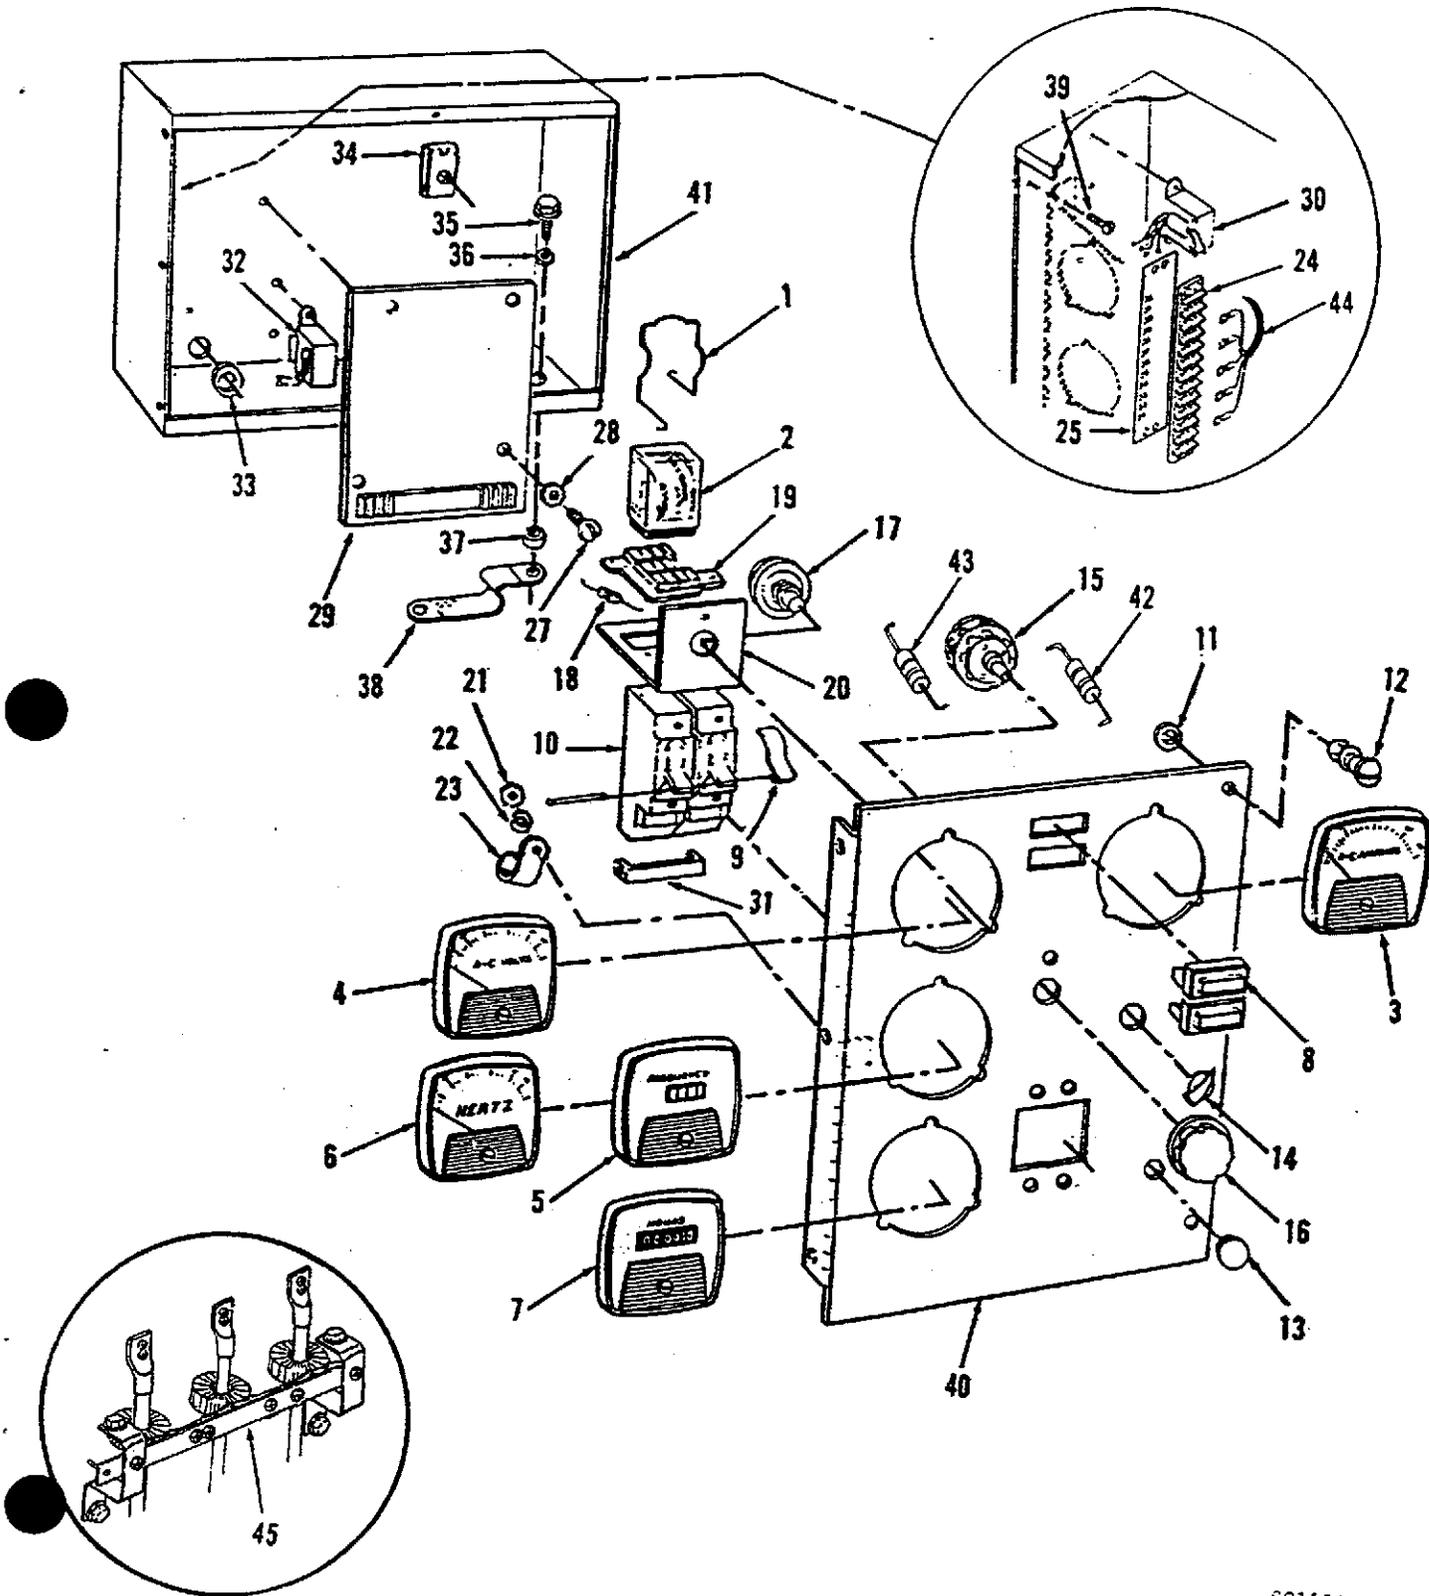


SC1164-2

Generator Control
Switching Regulator
Spec H thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-1157	1	Spring, Relay	20	301-3244	1	Bracket, Mounting
2	307-1061	1	Relay (K21)	21	870-0053	1	Nut, Hex (#10-32)
3			Ammeter (M21)	22	850-0030	1	Washer, Lock - Spring (#10)
	302-0413	1	0-300 Amp, Code 9 - 200kW Set	23	332-0051	1	Clamp, Loop
	302-0605	1	0-400 Amp, Code 6	24		1	Block, Terminal (T921)
	302-0605	1	0-400 Amp, Code 9 - 230kW Set		332-0607	1	12 Place
	302-0414	1	0-500 Amp, Code 5, 7		332-0795	1	16 Place
	302-0877	1	0-400/800 Amp, Code 517		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
	302-0878	1	0-500/1000 Amp, Code 17				
4			Voltmeter (M22)		853-0003	2	Washer, Lock - ET (#6)
	302-0421	1	0-300 VAC, Code 5		850-0020	2	Washer, Lock - Spring (#6)
	302-0612	1	0-500 VAC, Code 7	25			Strip, Marker
	302-0422	1	0-600 VAC, Code 6		332-1242	1	16 Place
	302-0779	1	0-750 VAC, Code 9		332-1248	1	12 Place
	302-0718	1	0-300/600 VAC, Code 17, 517	27	812-0065	4	Screw, Machine - Round Head (#6-32 x 5/8")
5			Meter, Frequency - Reed (M23)				
	302-0221	1	230 VAC, 60 Hz - Code 5, 6, 7, 9, 17	28	853-0003	4	Washer, Lock - ET (#6)
				29			Regulator, Voltage (VR21)
	302-0256	1	230 VAC, 50 Hz - Code 517		332-1956	1	Semi-Frequency Sensitive
6			Meter, Frequency - Pointer (M23)		332-2044	1	Voltage Sensitive
	302-0810	1	208 VAC, 60 Hz - Code 7, 17		332-2045	1	Frequency Sensitive
	302-0811	1	240 VAC, 60 Hz - Code 5, 6, 9	30	315-0431	1	Transformer, Voltage (T21)
	302-0894	1	240 VAC, 50 Hz - Code 517		812-0061	2	Screw, Machine - RH
7			Meter, Totalizing - Time (M24)	31	320-0202	1	Bar, Locking
	302-0466	1	60 Hz	32	315-0384	1	Reactor (L21)
	302-0469	1	50 Hz		812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")
8			Light, Indicator - Red - 125 VAC				
	322-0130	1	Upper Scale (DS21)		853-0003	2	Washer, Lock - ET (#6)
	322-0131	1	Lower Scale (DS22)	33	508-0001	1	Grommet
9	320-0307	1	Lock, Handle	34	406-0332	2	Receptacle, Fastener
	815-0203	1	Screw, Machine - Round Head (#10-32 x 7/8")	35	800-0045	4	Screw, Cap - Hex Head (5/16-18 x 3/8")
	854-0010	1	Washer, Lock - ET (#10)	36	850-0045	4	Washer, Lock - Spring (5/16")
	871-0010	1	Nut, Hex (#10-32)	37	402-0078	4	Dampener, Vibration
10	320-0455	2	Breaker, Circuit (CB21)	38	337-0049	1	Strap, Electrical - Ground
	812-0061	4	Screw, Machine - Round Head (#6-32 x 3/8")	39	815-0026	3	Screw, Machine - Truss Head (#10-32 x 3/8")
	850-0020	4	Washer, Lock - Spring (#6)	40			Panel, Control
11	406-0334	2	Clip, Fastener		301-6298	1	4 Meters, Code 17, 517
12	406-0333	2	Stud, Fastener		301-6412	1	4 Meters, Code 5, 6, 7, 9
13	517-0131	1	Plug, Plastic		301-8775	1	5 Meters, Code 17, 517
14	303-0076	1	Knob, Pointer	41	301-3158	1	Box, Control
15	308-0284	1	Switch, Selector (S21)	42	350-0098	1	Resistor (3.k Ohms)
16	303-0032	1	Knob	43	350-0101	1	Resistor (3.9k Ohms)
17	303-0170	1	Rheostat (R21)	44			Harness, Wiring
18	350-0556	1	Resistor (R22)		338-0730	1	Code 17, 517
19	323-0765	1	Socket, Relay (Less Terminals)		338-0759	1	Code 5, 6, 9
	812-0061	2	Screw, Machine - Round Head (#6-32 x 3/8")		338-0916	1	Code 7
	853-0003	2	Washer, Lock - ET (#6)	45			Current Transformer
	860-0005	2	Nut, Hex (#6-32)				(See Separate Page for Components)
	332-1280	11	Terminal				



Generator Control
Torque Matched Regulator
Spec H thru L

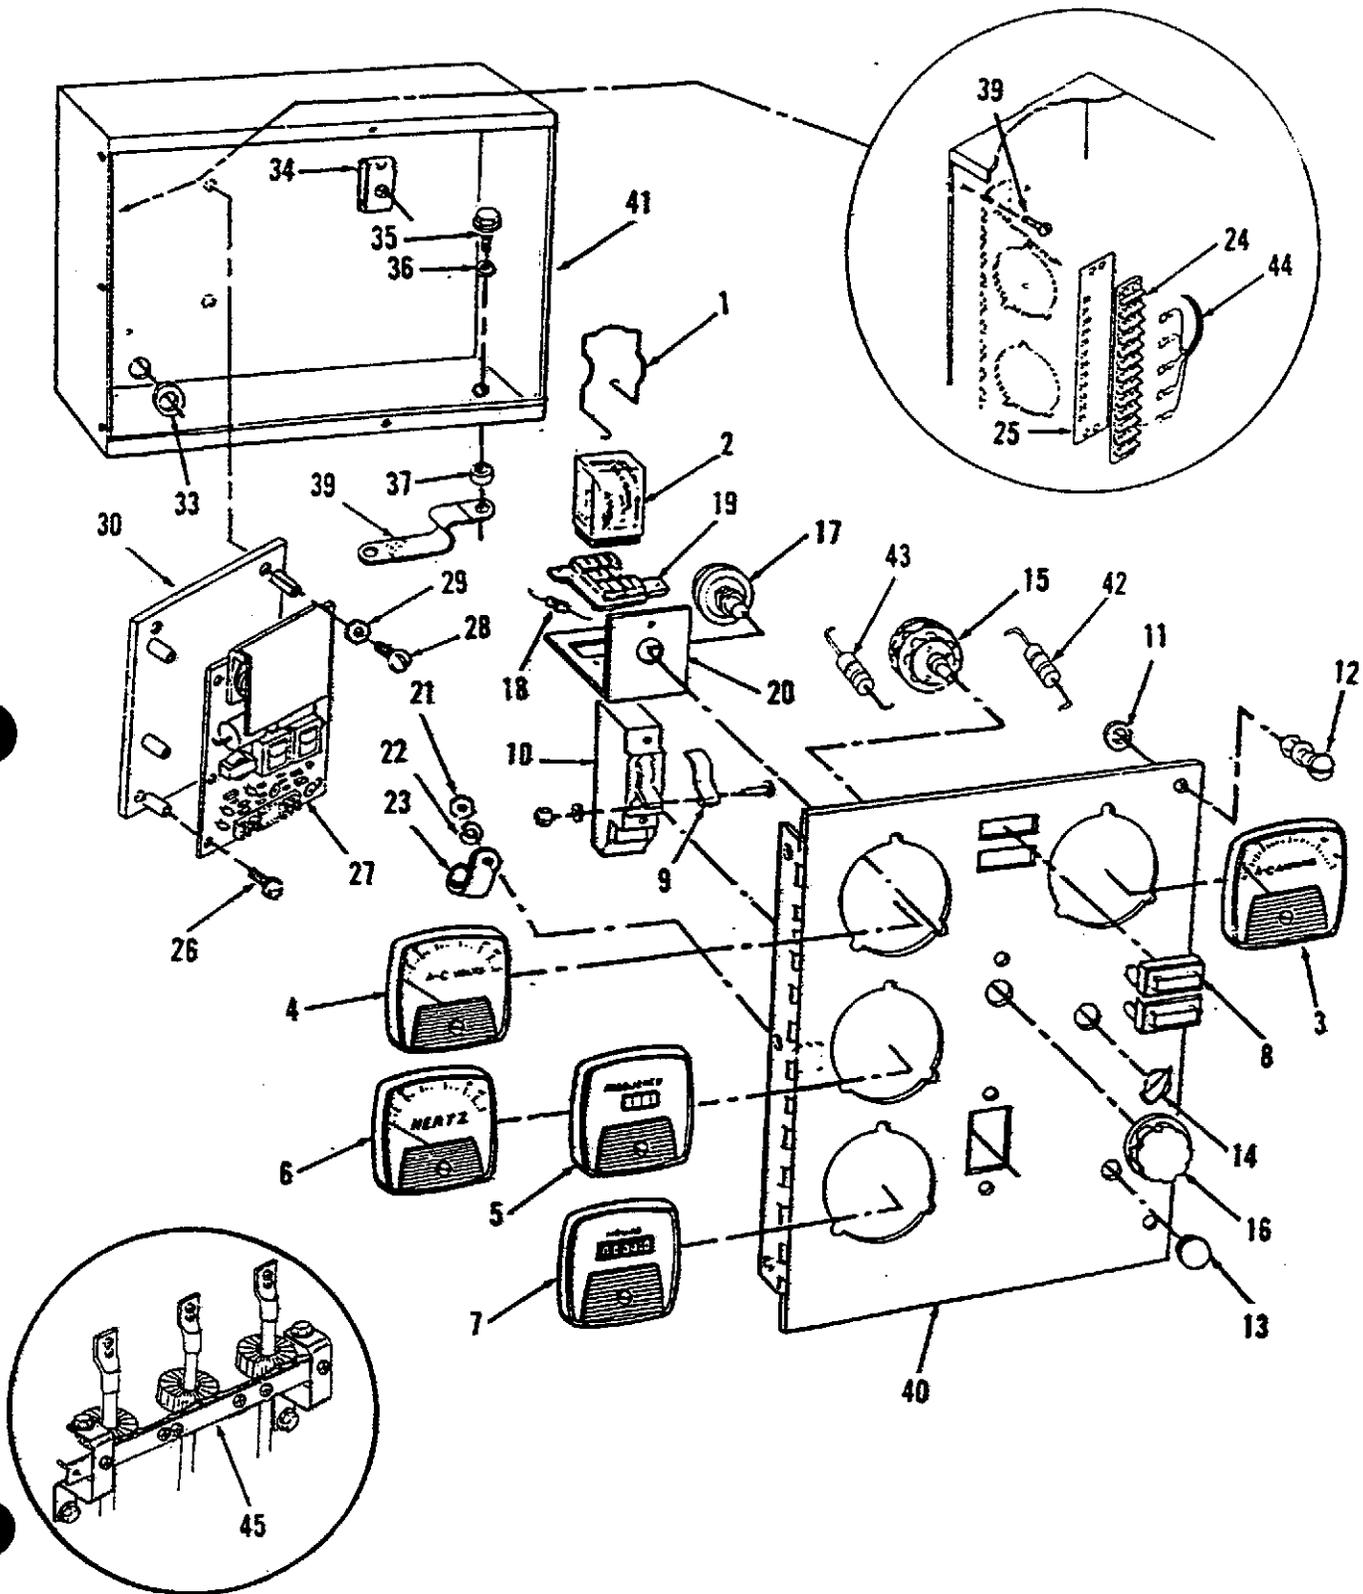

Generator Control
Torque Matched Regulator
Spec H thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-1157	1	Spring, Relay	20	301-3244	1	Bracket, Mounting
2	307-1061	1	Relay (K21)	21	870-0053	1	Nut, Hex (#10-32)
3			Ammeter (M21)	22	850-0030	1	Washer, Lock - Spring (#10)
	302-0413	1	0-300 Amp, Code 9 - 200kW Set	23	332-0051	1	Clamp, Loop
	302-0605	1	0-400 Amp, Code 6	24			Block, Terminal (TB21)
	302-0605	1	0-400 Amp, Code 9 - 230kW Set		332-0607	1	12 Place
	302-0414	1	0-500 Amp, Code 5, 7		332-0795	1	16 Place
	302-0877	1	0-400/800 Amp, Code 517		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
	302-0878	1	0-500/1000 Amp, Code 17				Washer, Lock - ET (#6)
4			Voltmeter (M22)		853-0003	2	Washer, Lock - Spring (#6)
	302-0421	1	0-300 VAC, Code 5		850-0020	2	Strip, Marker
	302-0612	1	0-500 VAC, Code 7	25			16 Place
	302-0422	1	0-600 VAC, Code 6		332-1242	1	12 Place
	302-0779	1	0-750 VAC, Code 9		332-1248	1	16 Place
	302-0718	1	0-300/600 VAC, Code 17, 517	26	815-0544	6	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
5			Meter, Frequency - Reed (M23)				Regulator, Voltage (VR21)
	302-0221	1	230 VAC, 60 Hz - Code 5, 6, 7, 9, 17	27	300-2880	1	Screw, Machine - Round Head (#6-32 x 5/8")
	302-0256	1	230 VAC, 50 Hz - Code 517	28	812-0065	4	Washer, Lock - ET (#6)
6			Meter, Frequency - Pointer (M23)				Bracket, Mounting
	302-0810	1	208 VAC, 60 Hz - Code 7, 17	29	853-0003	4	Grommet
	302-0811	1	240 VAC, 60 Hz - Code 5, 6, 9	30	301-9315	1	Receptacle, Fastener
	302-0894	1	240 VAC, 50 Hz - Code 517	33	508-0001	1	Screw, Cap - Hex Head (5/16-18 x 3/8")
7			Meter, Totalizing - Time (M24)	34	406-0332	2	Washer, Lock - Spring (5/16"
	302-0466	1	60 Hz	35	800-0045	4	Dampener, Vibration
	302-0469	1	50 Hz				Strap, Electrical - Gro
8			Light, Indicator - Red - 125 VAC	36	850-0045	4	Screw, Machine - Truss Head (#10-32 x 3/8")
	322-0130	1	Upper Scale (DS21)	37	402-0078	4	Panel, Control
	322-0131	1	Lower Scale (DS22)	38	337-0049	1	4 Meters, Code 5, 6, 7, 9
9			Lock, Handle	39	815-0026	3	4 Meters, Code 17, 517
	815-0203	1	Screw, Machine - Round Head (#10-32 x 7/8")	40			5 Meters, Code 5, 6, 7, 9
	854-0010	1	Washer, Lock - ET (#10)		301-3342	1	5 Meters, Code 17, 517
	871-0010	1	Nut, Hex (#10-32)		301-3170	1	5 Meters, Code 5, 6, 7, 9
10			Breaker, Circuit (CB21)		301-3449	1	Box, Control
	320-0307	1	Screw, Machine - Round Head (#6-32 x 3/8")		301-3312	1	Resistor (3.k Ohms)
	812-0061	2	Washer, Lock - Spring (#6)		301-3158	1	Resistor (3.9k Ohms)
	850-0020	2	Clip, Fastener	41	301-3158	1	Harness, Wiring
11			Stud, Fastener	42	350-0098	1	Code 17, 517
	406-0334	2	Plug, Plastic	43	350-0101	1	Code 5, 6, 9
12			Knob, Pointer	44			Code 7
	406-0333	2	Switch, Selector (S21)		338-0730	1	Current Transformer
13			Knob		338-0759	1	(See Separate Page for Components)
	517-0131	1	Rheostat (R21)	45	338-0916	1	
14			Resistor (R22)				
	303-0076	1	Socket, Relay (Less Terminals)				
15			Screw, Machine - Round Head (#6-32 x 3/8")				
	308-0284	1	Washer, Lock - ET (#6)				
16			Nut, Hex (#6-32)				
	303-0032	1	Terminal				
17							
	303-0170	1					
18							
	350-0556	1					
19							
	323-0765	1					
	812-0061	2					
	853-0003	2					
	860-0005	2					
	332-1280	11					

Wattmeter

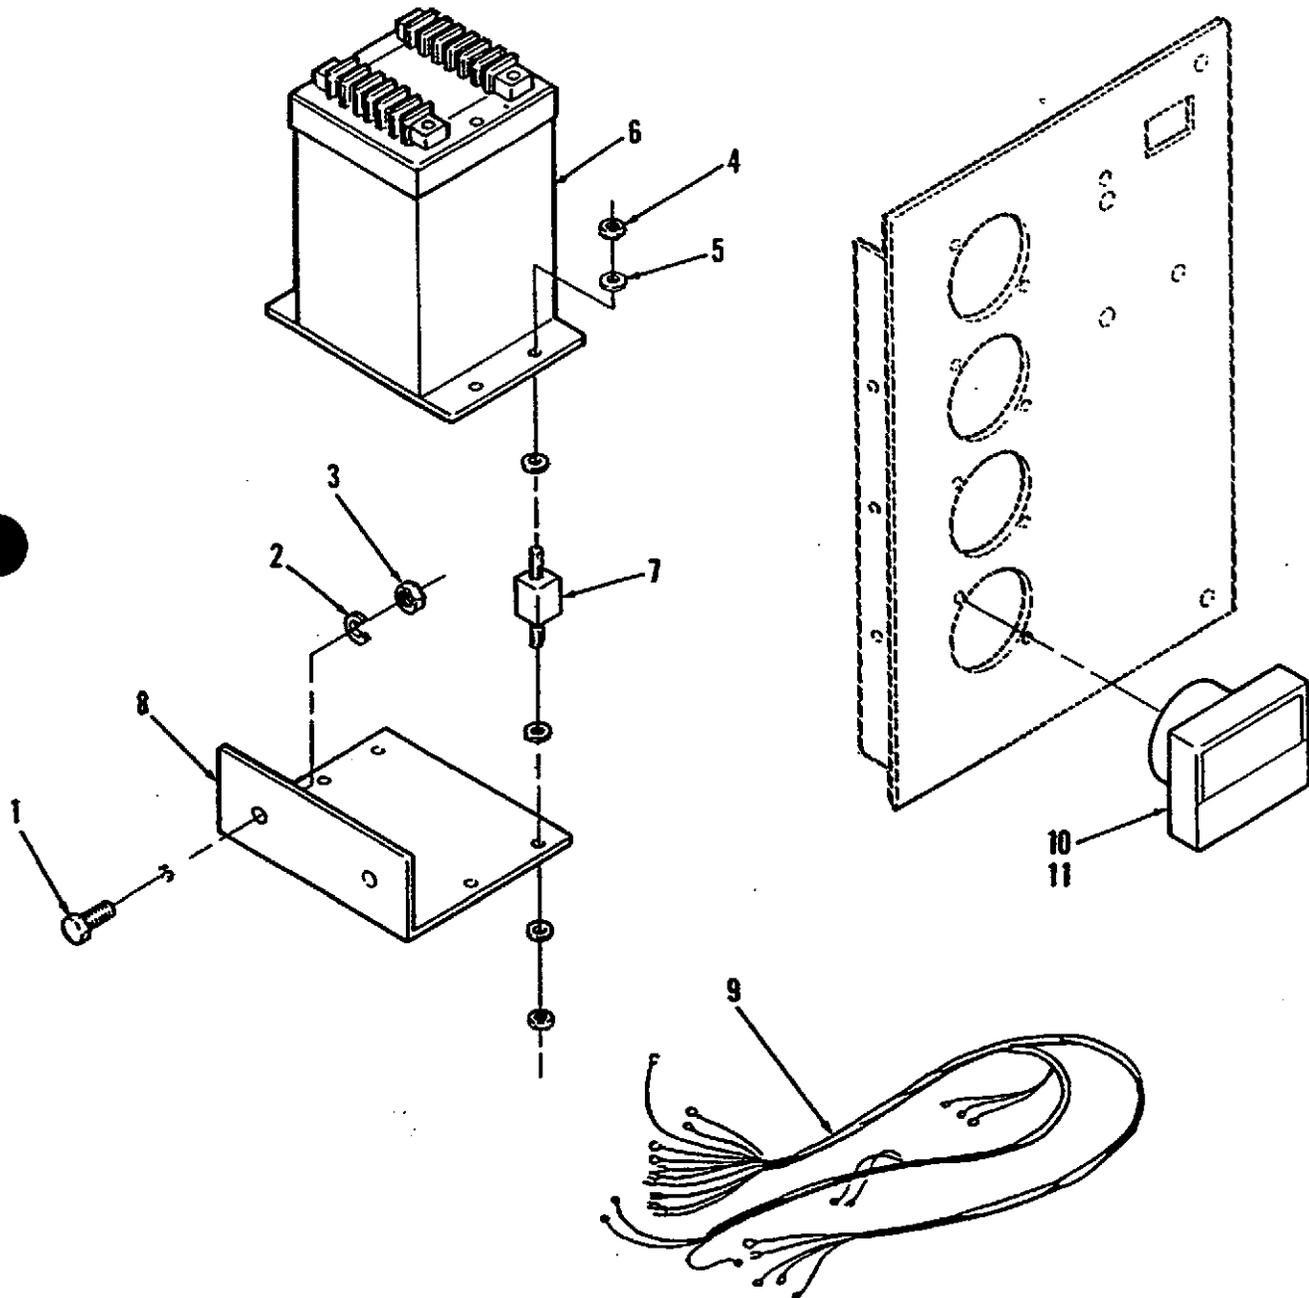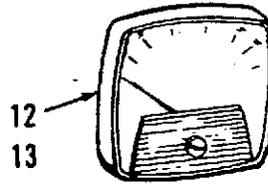


126A.

Wattmeter

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0017	2	Screw, Self-locking - Hex (5/16-18 x 1/2")	8	301-6987	1	Bracket, Mounting
2	850-0045	2	Washer, Lock - Spring (5/16")	9	338-1936	1	Harness, Wiring
3	862-0014	2	Nut, Hex (5/16-18)	10	302-1722	1	Wattmeter (Less Dial) - Begin Spec M
4	860-0008	8	Nut, Hex (#8-32)	11	302-1721-09	1	Dial (Scale 0-250KW)
5	856-0002	16	Washer, Lock - EIT (#8)	12	302-1102	1	Wattmeter (Less Dial) - Spec H thru L
6	302-1082	1	3 Phase, 60 Hz	13	302-1115	1	Dial(Scale 0-250kw)
	302-1083	1	3 Phase, 50 Hz				
7	402-0078	4	Mount, Vibration				

Current Transformer

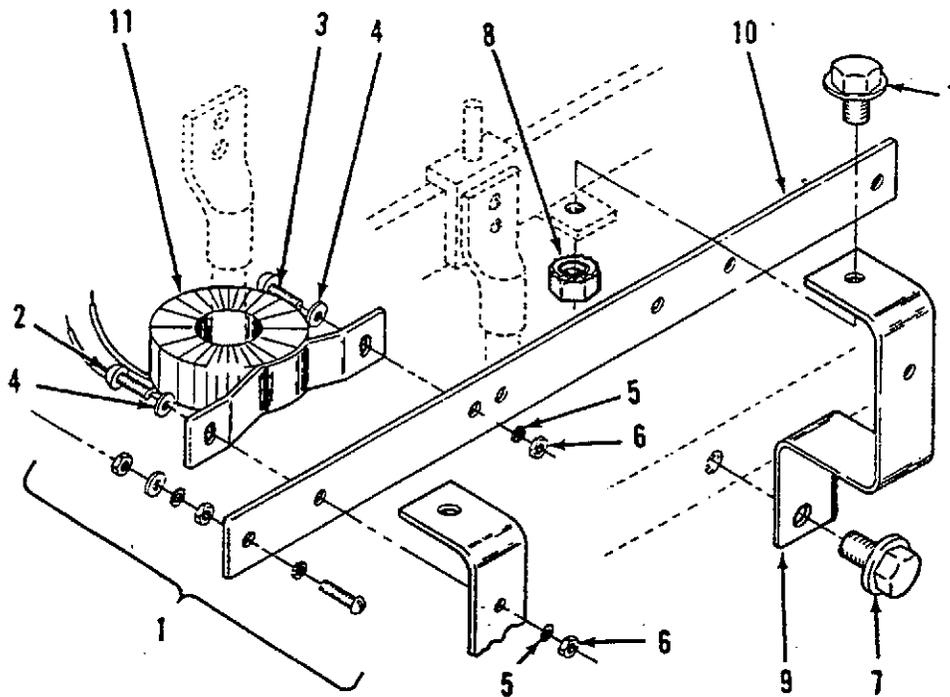


XES-1155

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0203	1	Terminal, Ground	7	821-0029	4	Screw, Self-locking - Hex (3/8-16 x 3/4")
	871-0010	3	Screw, Machine - Round Head (#10-32 x 7/8")	8	870-0281	4	Nut, Self-locking - Hex (3/8-16)
	856-0003	1	Nut, Hex (#10-32)	9	232-2342	2	Bracket, Mounting
	854-0010	2	Washer, Lock - EIT (#10)	10	315-0389	1	Plate, Mounting
	526-0049	2	Washer, Lock - IT (#10)	11		1	Transformer, Current with Mounting Feet
2	813-0103	2	Washer, Flat - Brass (#10)		302-0866	3	300/5, 2VA - Code 9X
			Screw, Machine - Round Head (#10-32 x 3/4")		302-0608	3	400/5, 2VA - Code 517
3	813-0100	4	Screw, Machine - Round Head (#10-32 x 1/2")		302-0609	3	400/5, 5VA - Code 6
4	526-0008	6	Screw, Machine - Round Head (#10-32 x 1/2")		302-0547	3	500/5, 2VA - Code 7, 17
5	856-0003	6	Washer, Flat (#10)		302-1090	3	750/5, 5VA - Code 5
6	870-0053	6	Washer, Lock - EIT (#10)				
			Nut, Hex (#10-32)				

* - Parts Included in Ground Terminal.


Control Housing

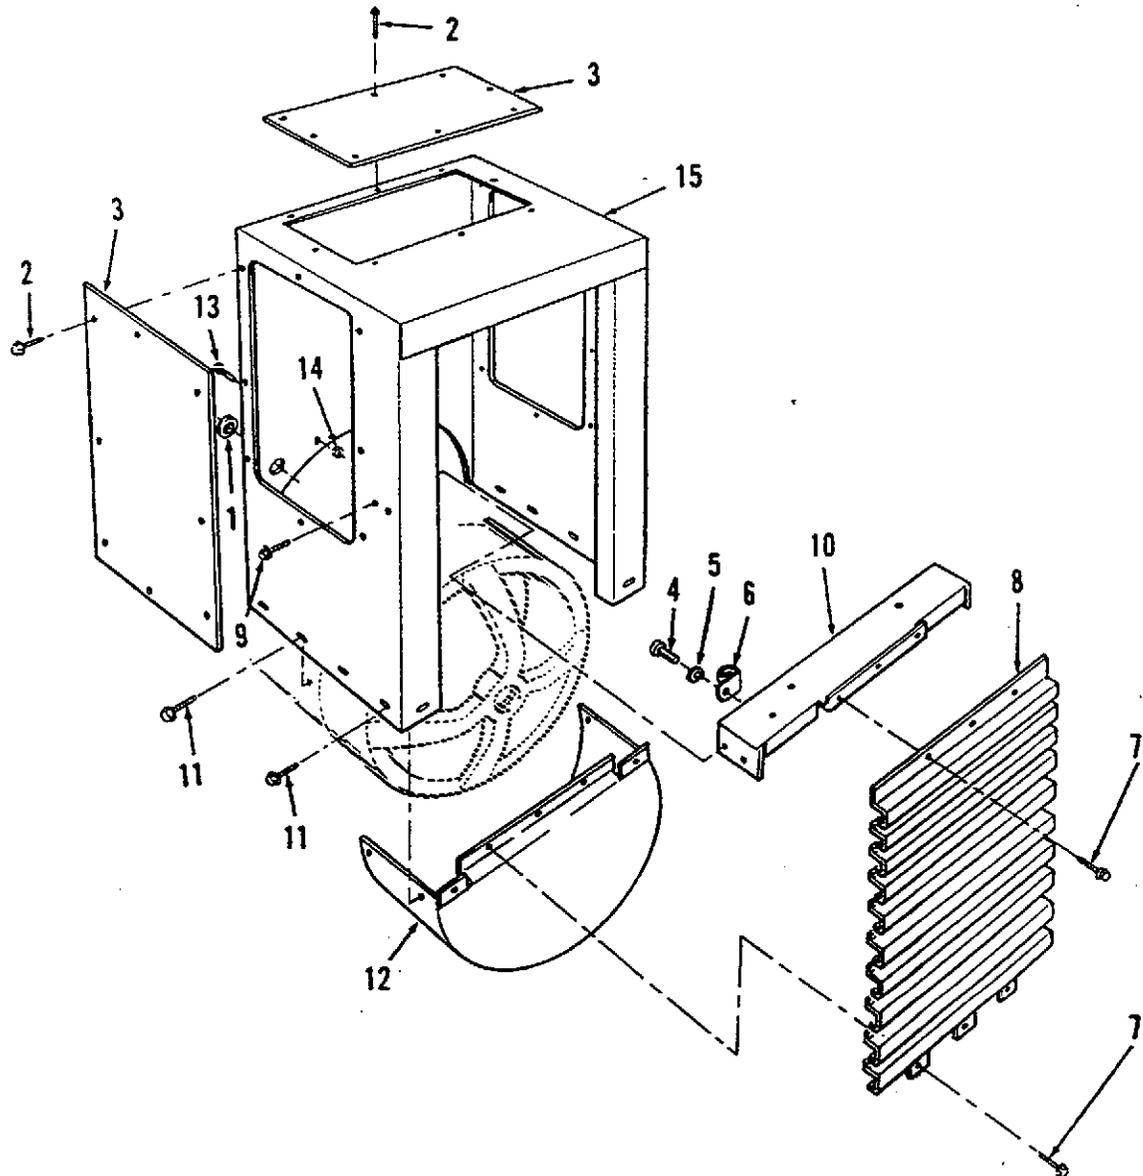

M-1213

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	508-0203	1	Bushing, Grommet - Used Thru 1984	8	234-0490	1	Grille
	508-0051	1	Begin 1985	9	821-0010	4	Screw, Self-locking - Hex
2	821-0010	24	Screw, Self-locking - Hex (1/4-20 x 1/2")	10	301-3604	1	Shelf
3	301-3731	3	Panel, Access	11	821-0014	10	Screw, Self-locking - Hex (5/16-18 x 1/2")
4	813-0102	1	Screw, Machine - Round Head (#10-32 x 5/8")	12	234-0489	1	Cover, End Bell
5	850-0030	1	Washer, Lock - Spring (#10)	13	821-0016	2	Screw, Self-locking - Hex (5/16-18 x 3/4")
6	332-0052	3	Clamp, Loop	14	870-0257	2	Nut, Self-locking - Hex (5/16-18)
7	821-0010	6	Screw, Self-locking - Hex (1/4-20 x 1/2")	15	301-3605	1	Housing, Control


Voltage Regulator Filter

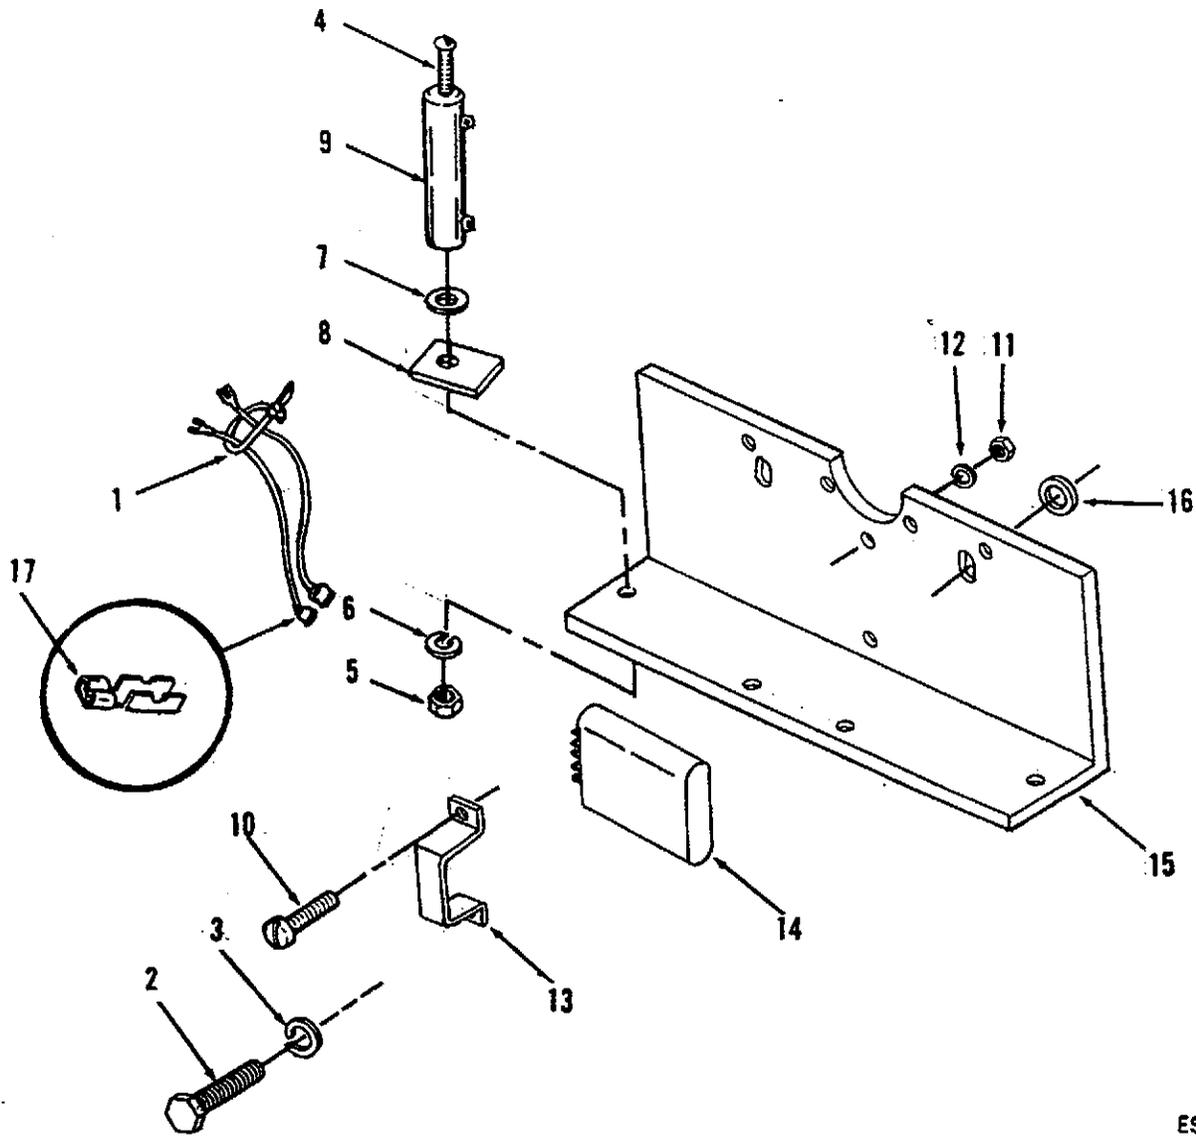

ES1115-1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-0941	5	Tie, Cable	10	813-0098	2	Screw, Machine - Round Head (#10-32 x 3/8")
2	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")	11	870-0053	2	Nut, Hex (#10-32)
3	850-0040	2	Washer, Lock - Spring (1/4")	12	850-0030	2	Washer, Lock - Spring (#10)
4	812-0165	2	Screw, Machine - Round Head (1/4-20 x 4-1/2")	13	312-0189	1	Bracket, Mounting
5	862-0001	2	Nut, Hex (1/4-20)	14	312-0188	1	Capacitor
6	850-0040	2	Washer, Lock - Spring (1/4")	15	232-2218	1	Bracket
7	304-0427	2	Washer, Centering	16	526-0018	15	Washer, Flat (1/4")
8	304-0292	2	Insulator	17			Terminals
9	354-0025	1	Resistor		332-0529	4	Bare
					332-1279	8	Insulated


Voltage Regulator Filter Heavy Duty

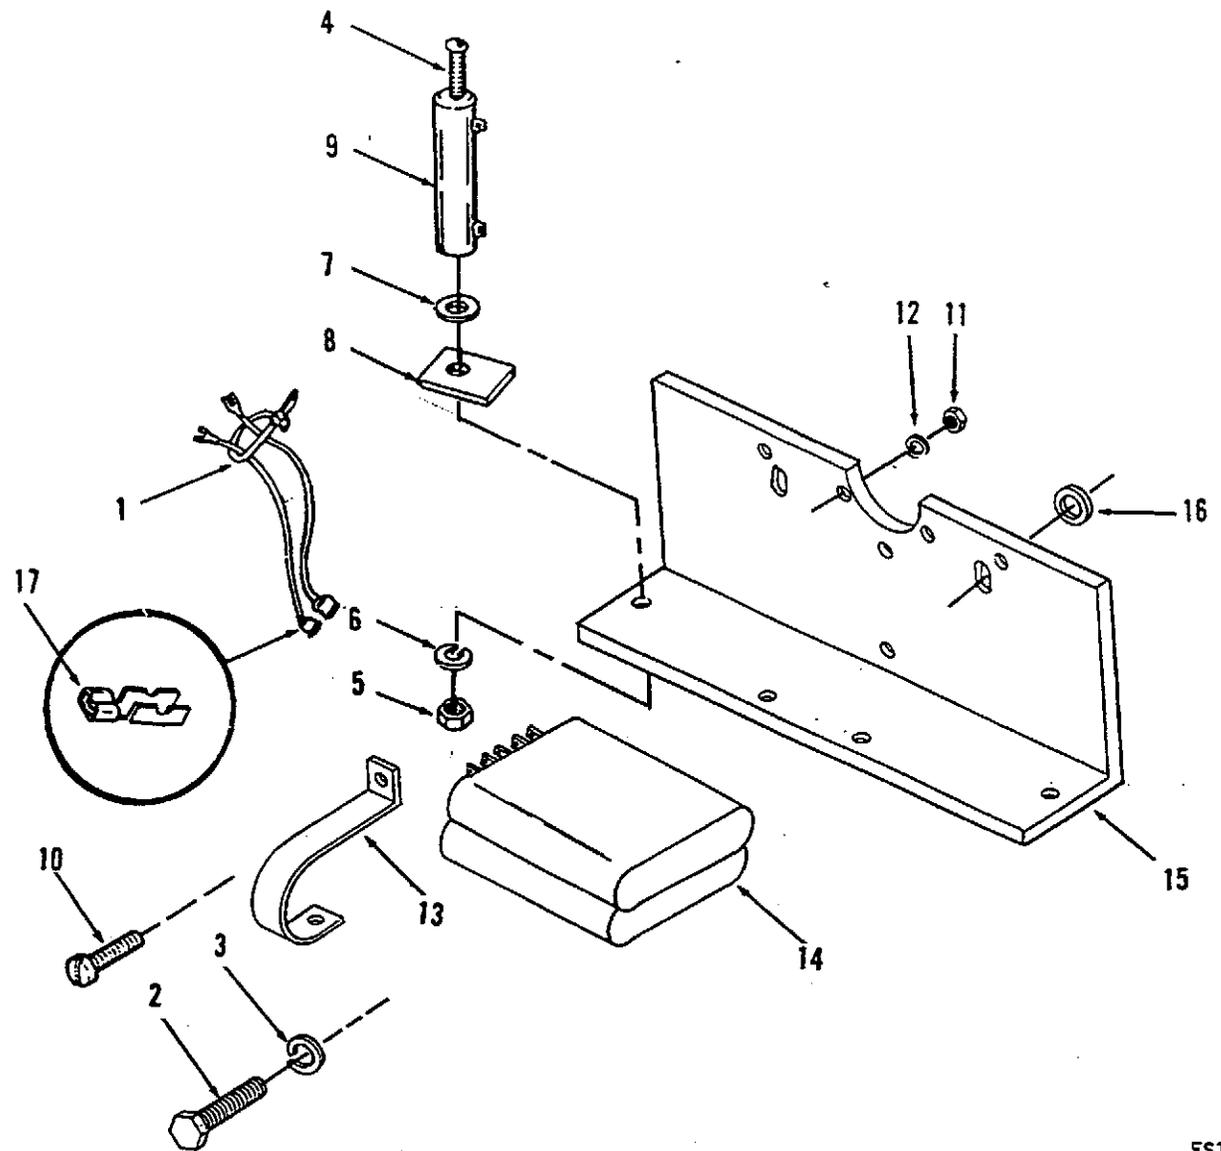

ES1115-2

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-0941	5	Tie, Cable	10	813-0098	4	Screw, Machine - Round Head (#10-32 x 3/8")
2	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")	11	870-0053	4	Nut, Hex (#10-32)
3	850-0040	2	Washer, Lock - Spring (1/4")	12	850-0030	4	Washer, Lock - Spring (#10)
4	812-0165	2	Screw, Machine - Round Head (1/4-20 x 4-1/2")	13	370-0007	2	Strap, Mounting
5	862-0001	2	Nut, Hex (1/4-20)	14	312-0188	2	Capacitor
6	850-0040	2	Washer, Lock - Spring (1/4")	15	232-2218	1	Bracket
7	304-0427	2	Washer, Centering	16	526-0018	15	Washer, Flat (1/4")
8	304-0292	2	Insulator	17	332-0529	8	Terminals Bare
9	354-0025	1	Resistor		332-1279	16	Terminals Insulated



Circuit Breaker
Begin Spec M

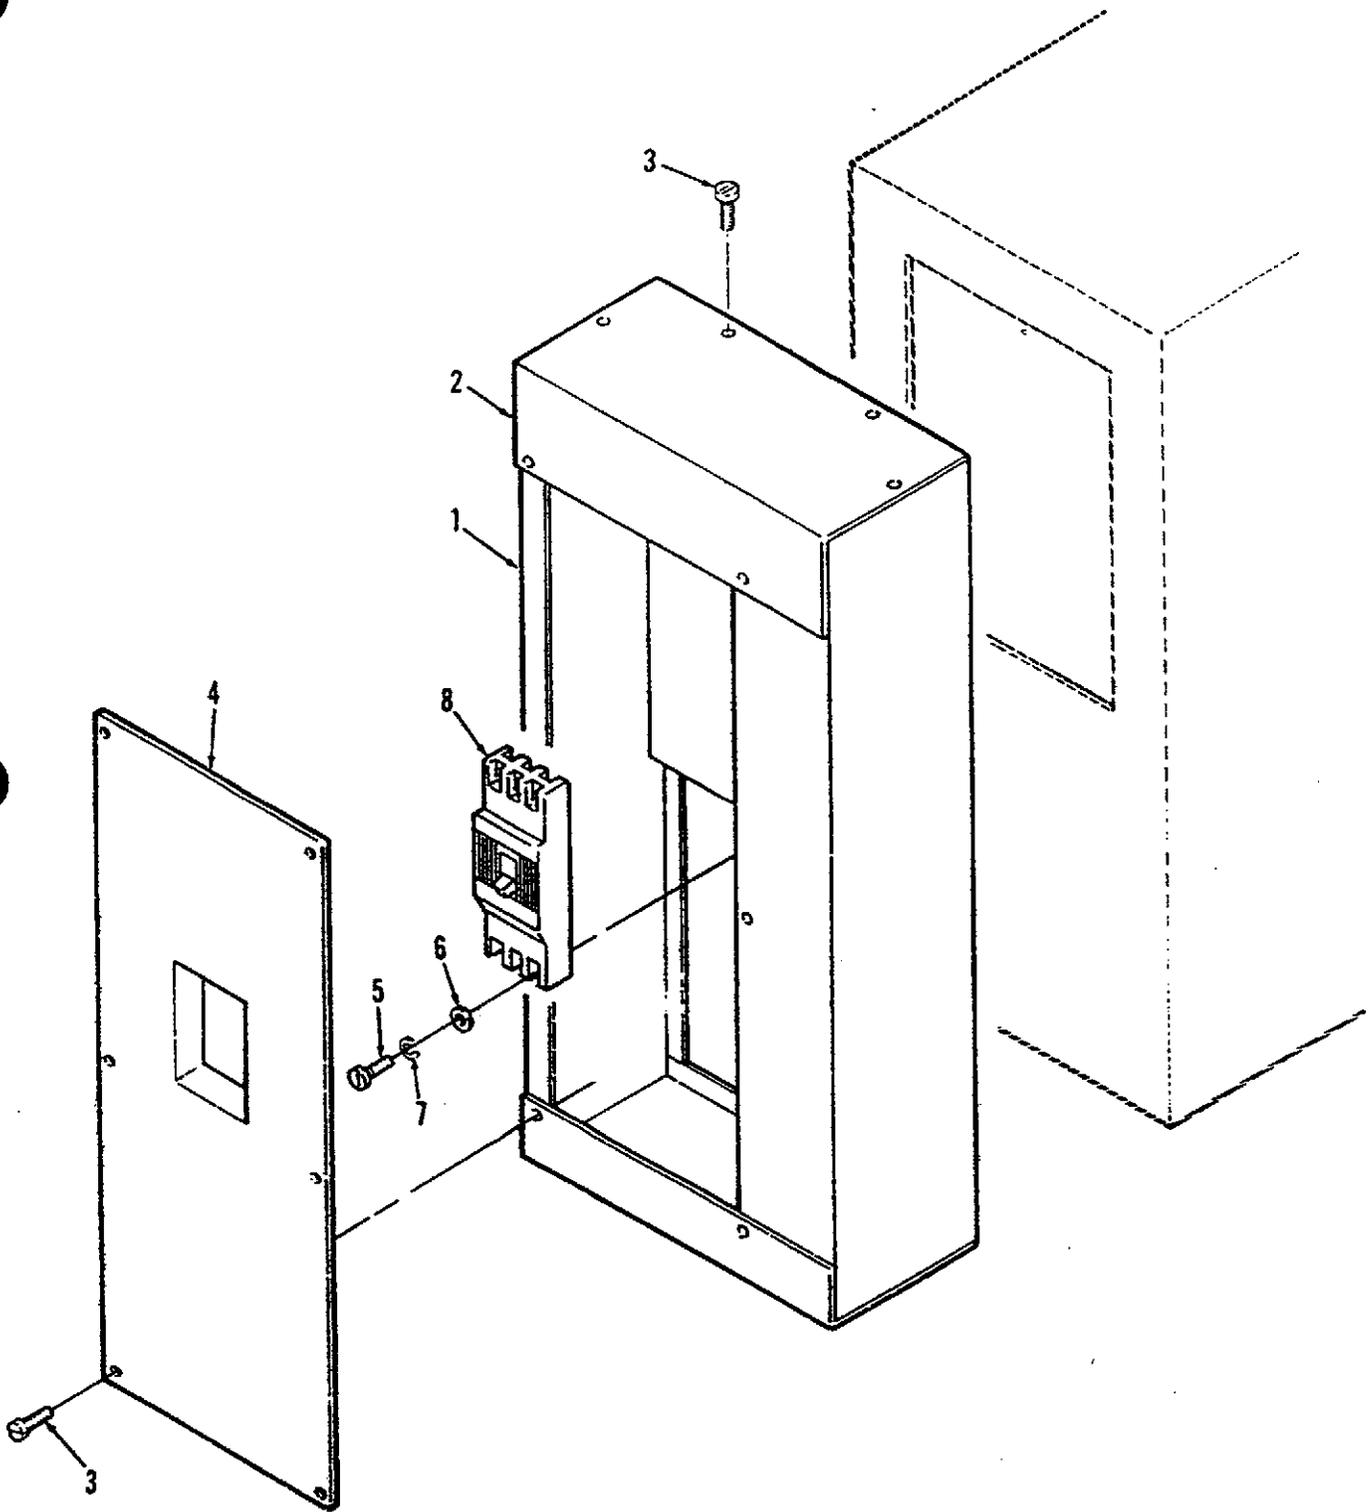

**Circuit Breaker
Begin Spec M**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301-9778	1	Box, Breaker				With 240 VAC Shunt Trip
2	301-9779	2	Panel, Breaker	320-1480-06	1	250 Amp	
3	821-0010	8	Screw, Self-locking - Hex (1/4-20 x 1/2")	320-1480-07	1	300 Amp	
4			Cover, Box - Circuit Breaker	320-1480-08	1	350 Amp	
	301-9781	1	3" x 4" Breaker Hole	320-1480-09	1	400 Amp	
	301-9793	1	2-1/2" x 3-5/8" Breaker Hole	320-1480-12	1	600 Amp	
5			Screw, Mounting	320-1481-07	1	700 Amp	
	812-0094	4	225 Amp Breaker	320-1484-06	1	250 Amp	With 480 VAC Shunt Trip
	812-0157	4	250 - 600 Amp Breaker	320-1484-07	1	300 Amp	
	800-0031	4	700 - 1200 Amp Breaker	320-1484-08	1	350 Amp	
6			Washer, Flat	320-1484-09	1	400 Amp	
	526-0048	4	225 Amp Breaker	320-1484-12	1	600 Amp	
	526-0108	4	250 - 600 Amp Breaker	320-1485-07	1	700 Amp	
	526-0115	4	700 - 1200 Amp Breaker				With 12 VDC Shunt Trip & Auxiliary Contacts
7			Washer, Lock				
	850-0025	4	225 Amp Breaker	320-1488-06	1	250 Amp	
	850-0040	4	250 - 600 Amp Breaker	320-1488-07	1	300 Amp	
	850-0045	4	700 - 1200 Amp Breaker	320-1488-08	1	350 Amp	
8			Breaker, Circuit - 3 Phase	320-1488-09	1	400 Amp	
			Standard	320-1488-12	1	600 Amp	
	320-1460-06	1	250 Amp	320-1489-07	1	700 Amp	
	320-1460-07	1	300 Amp				With 24 VDC Shunt Trip & Auxiliary Contacts
	320-1460-08	1	350 Amp				
	320-1460-09	1	400 Amp	320-1491-06	1	250 Amp	
	320-1460-12	1	600 Amp	320-1491-07	1	300 Amp	
	320-1461-07	1	700 Amp	320-1491-08	1	350 Amp	
			With Auxiliary Contacts	320-1491-09	1	400 Amp	
	320-1464-06	1	250 Amp	320-1491-12	1	600 Amp	
	320-1464-07	1	300 Amp	320-1492-07	1	700 Amp	
	320-1464-08	1	350 Amp				With 120 VAC Shunt Trip & Auxiliary Contacts
	320-1464-09	1	400 Amp				
	320-1464-12	1	600 Amp	320-1495-06	1	250 Amp	
	320-1465-07	1	700 Amp	320-1495-07	1	300 Amp	
			With 12 VDC Shunt Trip	320-1495-08	1	350 Amp	
	320-1468-06	1	250 Amp	320-1495-09	1	400 Amp	
	320-1468-07	1	300 Amp	320-1495-12	1	600 Amp	
	320-1468-08	1	350 Amp	320-1496-07	1	700 Amp	
	320-1468-09	1	400 Amp				With 240 VAC Shunt Trip & Auxiliary Contacts
	320-1468-12	1	600 Amp				
	320-1469-07	1	700 Amp	320-1500-06	1	250 Amp	
			With 24 VDC Shunt Trip	320-1500-07	1	300 Amp	
	320-1472-06	1	250 Amp	320-1500-08	1	350 Amp	
	320-1472-07	1	300 Amp	320-1500-09	1	400 Amp	
	320-1472-08	1	350 Amp	320-1500-12	1	600 Amp	
	320-1472-09	1	400 Amp	320-1501-07	1	700 Amp	
	320-1472-12	1	600 Amp				With 480 VAC Shunt Trip & Auxiliary Contacts
	320-1473-07	1	700 Amp				
			With 120 VAC Shunt Trip	320-1504-06	1	250 Amp	
	320-1476-06	1	250 Amp	320-1504-07	1	300 Amp	
	320-1476-07	1	300 Amp	320-1504-08	1	350 Amp	
	320-1476-08	1	350 Amp	320-1504-09	1	400 Amp	
	320-1476-09	1	400 Amp	320-1504-12	1	600 Amp	
	320-1476-12	1	600 Amp	320-1505-07	1	700 Amp	
	320-1477-07	1	700 Amp				


Circuit Breaker
Spec H thru L

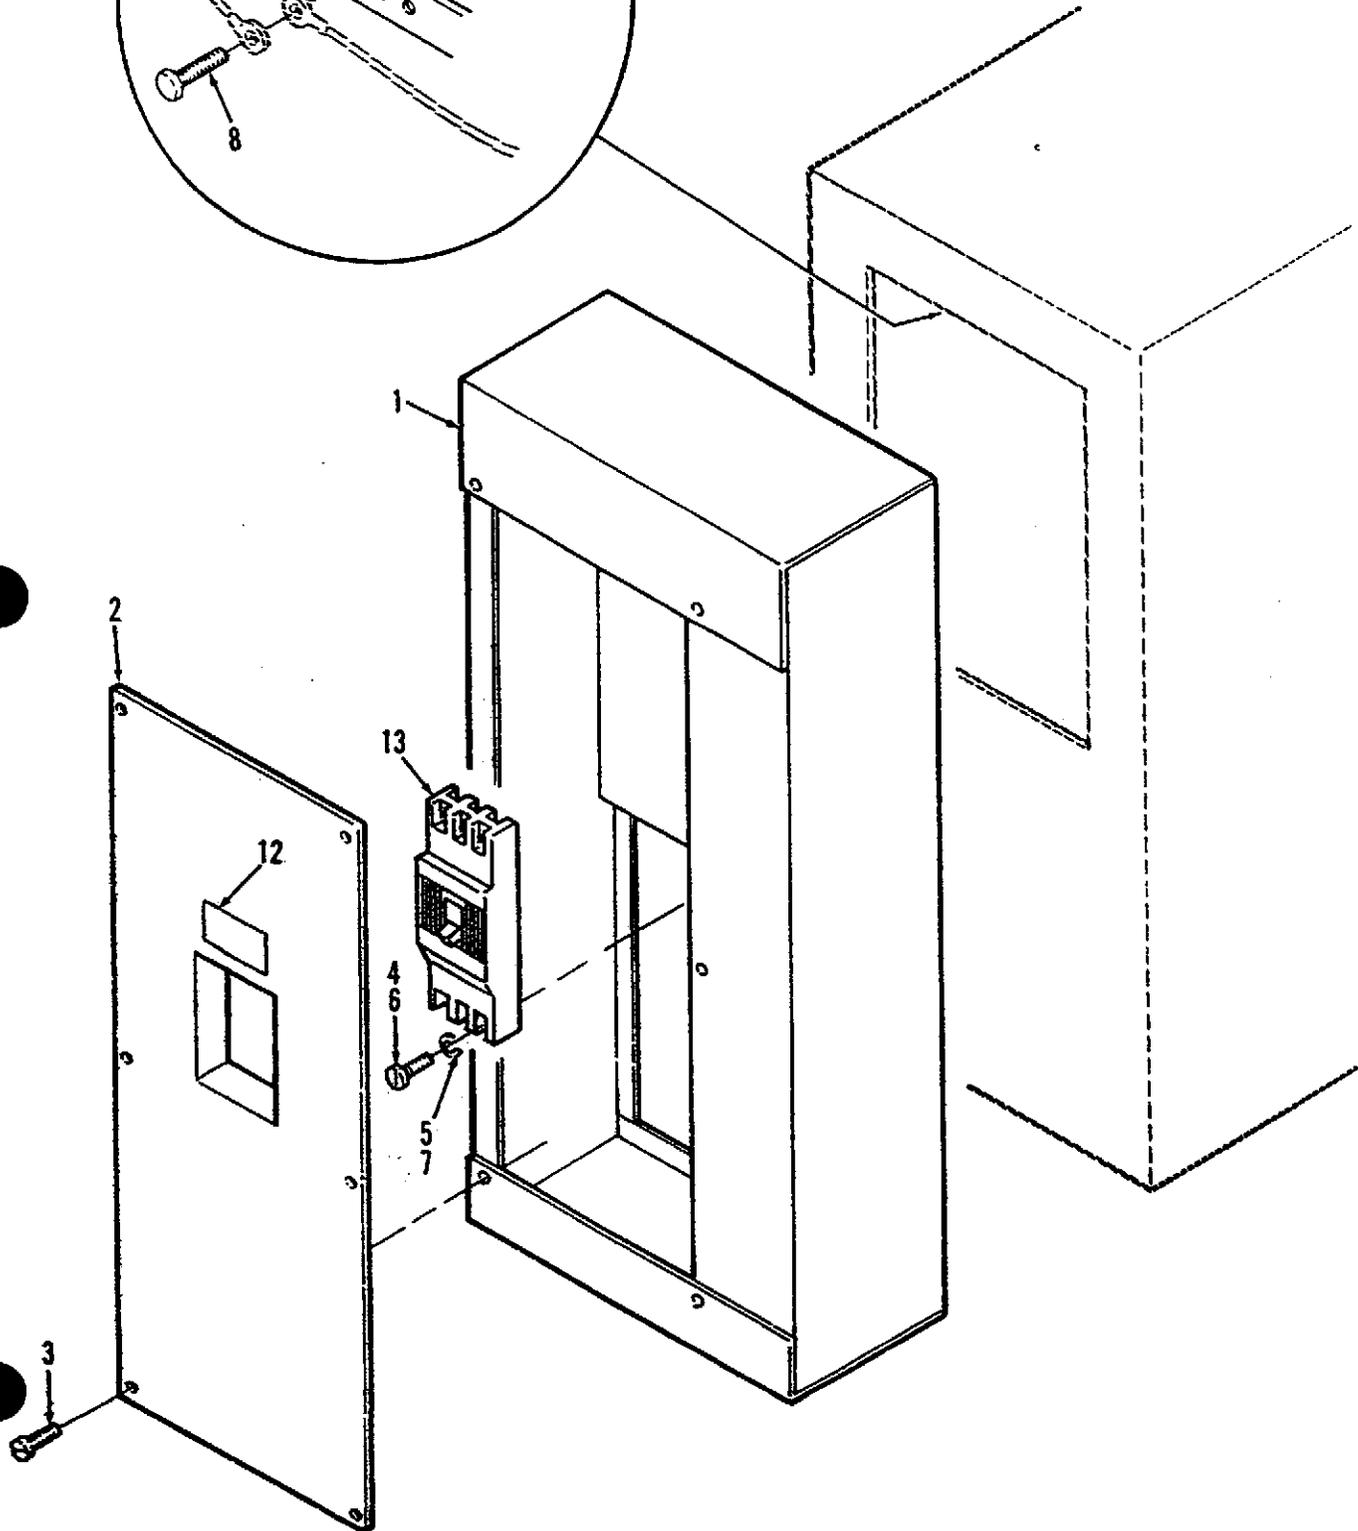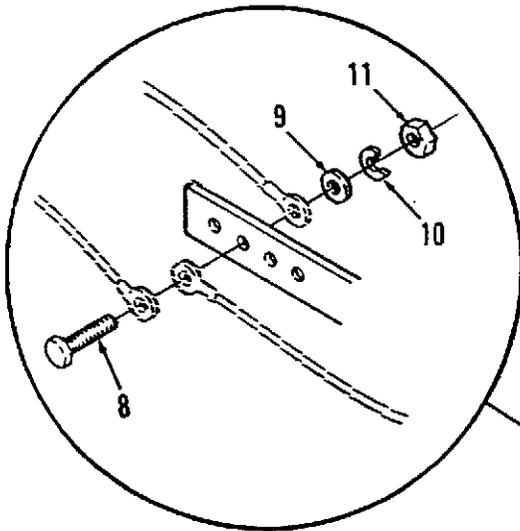

Circuit Breaker
Spec H thru L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301-3728	1	Box, Breaker				With Auxiliary Contacts
2	301-9139	1	Cover, Breaker	320-0741		1	300 Amp
3	815-0026	6	Screw, Machine - Truss Head (#10-32 x 3/8")	320-0730		1	400 Amp
4	812-0156	4	Screw, Machine - Round Head (1/4-20 x 1/2")	320-1305		1	600 Amp
5	850-0040	4	Washer, Lock (1/4")	320-1562		1	800 Amp
6	812-0182	4	Screw, Machine - Round Head (5/16-18 x 1-1/2")				With 12 VDC Shunt Trip
7	850-0045	4	Washer, Lock (5/16)	320-0370		1	300 Amp
8	800-0071	8	Screw, Cap - Hex Head (7/16-14 x 1")	320-0387		1	400 Amp
9	526-0141	8	Washer, Flat (7/16")	320-0245		1	500 Amp
10	850-0055	8	Washer, Lock (7/16")	320-0267		1	600 Amp
11	862-0004	8	Nut, Hex (7/16-14)				With 24 VDC Shunt Trip
12	98-2304	1	Silkscreen, Circuit Breaker (Warning)	320-0438		1	300 Amp
13			Breaker, Circuit - 3 Pole - Standard	320-0524		1	350 Amp
	320-0445	1	250 Amp	320-0429		1	400 Amp
	320-0401	1	300 Amp	320-0403		1	500 Amp
	320-0523	1	350 Amp	320-0432		1	600 Amp
	320-0405	1	400 Amp	320-0436		1	700 Amp
	320-0598	1	500 Amp	320-0466		1	800 Amp
	320-0599	1	600 Amp				With 120 VAC Shunt Trip
	320-0528	1	700 Amp	320-0268		1	300 Amp
	320-0519	1	800 Amp	320-0275		1	350 Amp
				320-0236		1	500 Amp
				320-0386		1	600 Amp
							With 480 VAC Shunt Trip
				320-0331		1	300 Amp
				320-0279		1	350 Amp
				320-0398		1	500 Amp
				320-0338		1	600 Amp

Control Heater

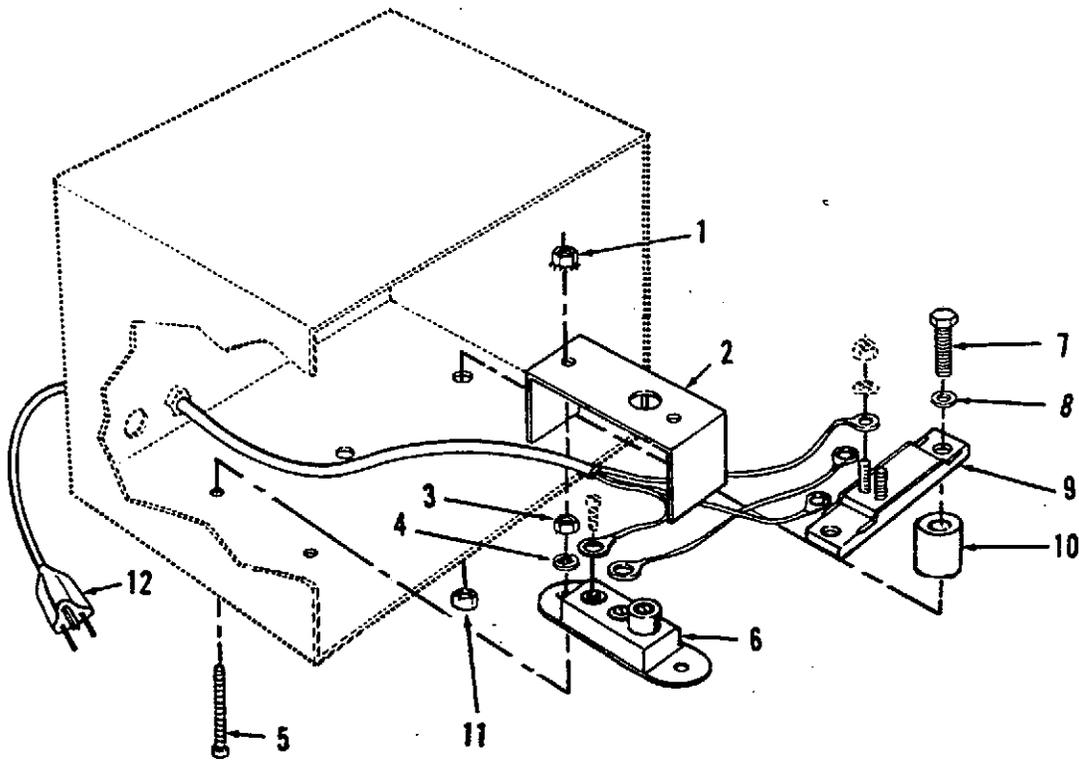

SC1156

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0183	2	Nut, Self-locking - Hex (#6-32)	7	800-0034	2	Screw, Cap - Hex Head (5/16-18 x 2-1/4")
2	301-1886	1	Cover	8	526-0113	2	Washer, Flat (5/16")
3	860-0006	1	Nut, Hex (#6-32)	9	333-0151	1	Heater, Electrical
4	854-0006	2	Washer, Lock - IT (#6)	10	130-1107	2	Spacer
5	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")	11	870-0257	2	Nut, Self-locking - Hex (5/16-18)
6	309-0128	1	Thermostat, Adjustable	12	335-0161	1	Cable, Electrical

Numerical Index

Part No.	Page						
98-2304	71	150-0724	42	155-1639	33	193-0329	16
114-0022	41	150-0724	43	155-1727	33	193-0330	51
114-0023	37	150-1405	44	155-1728	33	193-0351	51
114-0023	39	150-1406	44	155-1729	33	193-0352	51
122-0524	20	150-1407	44	155-1730	33	201-1902	37
122-0526	20	150-1410	44	155-1736	31	201-1902	39
122-0543	20	150-1411	44	155-1736	33	201-1902	45
130-0425	15	150-2104	42	155-1929	31	201-1940	39
130-0442	15	150-2104	43	155-1929	33	201-1942	39
130-0449	11	151-0230	27	159-0020	23	201-2453	37
130-0449	13	151-0399	8	159-0020	25	201-2453	39
130-0797	15	151-0402	51	159-0020	26	201-2453	45
130-0842	11	151-0411	8	159-1100	26	201-2456	39
130-0846	11	151-0419	8	159-1101	26	201-2457	39
130-0848	11	151-0441	8	160-0428	17	201-3338	37
130-0871	15	151-0442	8	191-0548	9	211-0214	37
130-0924	11	151-0443	8	191-0550	9	211-0214	39
130-0992	11	152-0036	27	191-0681	9	220-1912	37
130-1017	11	152-0120	27	191-0688	9	220-1912	39
130-1107	72	152-0158	27	191-0725	9	220-1913	39
130-1132	15	155-0652	31	191-0733	9	220-1920	37
130-1136	13	155-0652	33	191-0781	9	220-1920	39
130-1136	15	155-0676	31	191-0869	9	220-2135	37
130-1177	15	155-0676	33	191-1141	9	220-2135	39
130-1178	15	155-1035	5	191-1144	7	220-2136	39
130-1179	15	155-1035	31	191-1258	9	220-2317	37
130-1191	19	155-1035	33	191-1348	5	220-2317	39
130-1412	11	155-1143	31	193-0029	22	220-2318	39
130-1431	13	155-1158	31	193-0106	53	220-2341	37
130-1833	13	155-1160	31	193-0107	53	220-2341	39
130-1887	13	155-1184	31	193-0108	7	220-2342	39
130-1891	13	155-1275	31	193-0109	7	220-2347	37
130-2053	16	155-1275	33	193-0109	7	220-2347	39
140-0751	33	155-1293	31	193-0128	22	220-2348	39
140-0757	31	155-1299	31	193-0187	53	220-2443	37
140-1345	3	155-1400	33	193-0216	26	220-2443	39
140-1346	3	155-1404	31	193-0232	49	220-2607	37
140-1347	3	155-1425	31	193-0233	49	220-2607	39
140-1349	3	155-1425	33	193-0234	49	220-2610	37
140-1376	3	155-1430	31	193-0235	49	220-2610	39
140-1548	3	155-1430	33	193-0236	49	220-2611	39
140-1685	33	155-1456	31	193-0243	53	232-2218	66
140-1795	3	155-1493	33	193-0244	7	232-2218	67
149-1625	21	155-1568	33	193-0245	53	232-2237	41
149-1689	21	155-1602	33	193-0247	7	232-2238	41
149-1719	21	155-1603	33	193-0248	53	232-2240	41
150-0717	42	155-1604	33	193-0249	7	232-2241	41
150-0717	43	155-1605	33	193-0250	51	232-2242	41
150-0723	42	155-1619	33	193-0250	53	232-2243	41
150-0723	43	155-1639	31	193-0305	49	232-2245	41

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
232-2246	41	301-3604	65	302-0866	64	308-0220	53
232-2248	41	301-3605	65	302-0877	61	308-0284	55
232-2249	41	301-3621	53	302-0878	61	308-0284	61
232-2317	37	301-3629	53	302-0885	51	308-0297	49
232-2317	39	301-3635	53	302-0894	61	308-0337	53
232-2342	64	301-3661	53	302-1082	63	308-0347	53
232-2343	41	301-3728	71	302-1083	63	308-0539	53
232-2344	41	301-3731	65	302-1090	64	308-0784	51
232-2385	29	301-3976	53	302-1102	63	308-0785	51
232-2387	41	301-3977	53	302-1115	63	309-0029	17
232-2389	29	301-3978	53	302-1148	55	309-0128	72
232-2445	46	301-3979	53	302-1362	53	309-0169	7
232-2446	48	301-4009	49	302-1686	55	309-0178	7
232-2582	41	301-6053	53	302-1715	51	309-0179	7
232-2583	41	301-6257	51	302-1720	55	309-0242	15
232-2639	47	301-6987	63	302-1721-09	63	309-0269	7
232-2832	48	301-7079	53	302-1722	63	309-0272	7
232-2898	37	301-8065	55	302-1726	55	309-0307	19
232-2898	39	301-8851	51	302-1790	51	309-0404	25
234-0455	37	301-9054-01	55	303-0032	55	309-0490	19
234-0455	39	301-9054-02	55	303-0032	61	312-0188	66
234-0489	65	301-9054-03	55	303-0076	61	312-0188	67
234-0490	65	301-9055-01	51	303-0170	61	312-0189	66
300-0953	53	301-9055-02	51	303-0261	55	315-0389	64
300-0954	53	301-9139	71	304-0292	66	320-0236	71
300-0955	53	301-9315	61	304-0292	67	320-0240	7
300-0956	53	301-9778	69	304-0427	66	320-0245	71
300-0957	53	301-9779	69	304-0427	67	320-0267	71
300-0958	53	301-9781	69	305-0526	46	320-0268	71
300-0973	53	301-9793	69	305-0526	47	320-0275	71
300-0977	53	302-0061	49	306-0036	42	320-0279	71
300-0987	53	302-0221	61	306-0036	43	320-0307	61
300-2808	51	302-0256	61	307-0061	53	320-0331	71
300-2812	51	302-0413	61	307-0844	13	320-0338	71
300-2856	51	302-0414	61	307-1056	25	320-0370	71
300-2863	51	302-0421	61	307-1056	53	320-0372	71
300-2880	55	302-0422	61	307-1056	55	320-0386	71
300-2880	61	302-0466	61	307-1061	53	320-0387	71
300-2900	51	302-0469	61	307-1061	61	320-0396	71
300-2903	51	302-0547	64	307-1135	15	320-0398	71
300-2904	51	302-0605	61	307-1157	53	320-0401	71
300-2906	51	302-0608	64	307-1157	61	320-0403	71
301-1886	72	302-0609	64	307-1164	19	320-0405	71
301-3158	61	302-0612	61	307-1460	19	320-0429	71
301-3170	61	302-0718	61	307-1816	25	320-0432	71
301-3244	61	302-0749	53	307-1987	55	320-0433	71
301-3253	49	302-0750	7	307-2167	2A	320-0436	71
301-3312	61	302-0753	7	308-0002	53	320-0438	71
301-3342	61	302-0779	61	308-0088	49	320-0445	71
301-3449	61	302-0810	61	308-0091	53	320-0455	61
301-3588	53	302-0811	61	308-0155	49	320-0466	71

Numerical Index

Part No.	Page						
320-0518	71	320-1484-12	69	322-0358-02	51	332-1279	67
320-0519	71	320-1485-07	69	322-0360-02	51	332-1280	53
320-0523	71	320-1488-06	69	322-0361	51	332-1280	61
320-0524	71	320-1488-07	69	322-0363	55	332-1382	7
320-0598	71	320-1488-08	69	322-0369-02	51	332-1383	7
320-0599	71	320-1488-09	69	323-0765	53	332-1473	29
320-0730	71	320-1488-12	69	323-0765	61	332-1506	13
320-0741	71	320-1489-07	69	323-0804	25	332-1554	44
320-1121	55	320-1491-06	69	323-0804	55	332-1559	53
320-1305	71	320-1491-07	69	323-0814	53	332-1560	53
320-1438	55	320-1491-08	69	323-0957	19	332-1561	53
320-1460-06	69	320-1491-09	69	323-1200	5	332-2723	55
320-1460-07	69	320-1491-12	69	323-1200	51	333-0012	17
320-1460-08	69	320-1492-07	69	323-1302	51	333-0013	17
320-1460-09	69	320-1495-06	69	323-1303	51	333-0059	48
320-1460-12	69	320-1495-07	69	323-1304	5	333-0094	19
320-1461-07	69	320-1495-08	69	323-1304	51	333-0131	19
320-1464-06	69	320-1495-09	69	323-1305	51	333-0142	19
320-1464-07	69	320-1495-12	69	323-1306	5	333-0151	72
320-1464-08	69	320-1496-07	69	323-1306	51	333-0165	19
320-1464-09	69	320-1500-06	69	323-1307	51	333-0166	19
320-1464-12	69	320-1500-07	69	323-1308	51	333-0169	19
320-1465-07	69	320-1500-08	69	323-1309	51	333-0172	19
320-1468-06	69	320-1500-09	69	323-1310	51	333-0180	19
320-1468-07	69	320-1500-12	69	331-0027	19	333-0192	48
320-1468-08	69	320-1501-07	69	332-0050	45	333-0194-02	53
320-1468-09	69	320-1504-06	69	332-0051	49	333-0211	19
320-1468-12	69	320-1504-07	69	332-0051	53	333-0224	19
320-1469-07	69	320-1504-08	69	332-0051	61	335-0146	48
320-1472-06	69	320-1504-09	69	332-0052	55	335-0147	48
320-1472-07	69	320-1504-12	69	332-0052	65	335-0161	72
320-1472-08	69	320-1505-07	69	332-0149	19	337-0049	55
320-1472-09	69	320-1562	71	332-0529	66	337-0049	61
320-1472-12	69	321-0094	51	332-0529	67	338-0705	53
320-1473-07	69	321-0231	51	332-0537	53	338-0715	53
320-1476-06	69	321-0270	51	332-0607	55	338-0730	61
320-1476-07	69	322-0017	51	332-0607	61	338-0759	59
320-1476-08	69	322-0017	53	332-0699	53	338-0759	61
320-1476-09	69	322-0052	51	332-0795	49	338-0916	57
320-1476-12	69	322-0119	53	332-0795	61	338-0916	59
320-1477-07	69	322-0120	53	332-0941	66	338-0916	61
320-1480-06	69	322-0121	53	332-0941	67	338-0957	5
320-1480-07	69	322-0122	53	332-1005	53	338-0989	8
320-1480-08	69	322-0123	53	332-1152	41	338-1817	51
320-1480-09	69	322-0129	53	332-1239	53	338-1818	55
320-1480-12	69	322-0130	61	332-1241	49	338-1853	55
320-1481-07	69	322-0130	61	332-1242	61	338-1936	63
320-1484-06	69	322-0131	61	332-1248	61	338-2067	5
320-1484-07	69	322-0137	53	332-1271	53	350-0098	57
320-1484-08	69	322-0149	53	332-1276	53	350-0098	59
320-1484-09	69	322-0315	53	332-1279	66	350-0098	61

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
350-0101	57	415-0463	25	502-0445	49	505-0004	19
350-0101	59	415-0464	25	502-0583	49	505-0007	19
350-0101	61	415-0465	25	502-0594	20	505-0016	25
350-0556	57	415-0466	25	502-0682	20	505-0021	20
350-0556	59	415-0476	25	502-0701	21	505-0022	5
350-0556	61	415-0478	25	502-0702	21	505-0023	15
354-0025	66	415-0479	25	502-0801	16	505-0037	19
354-0025	67	415-0486	25	502-0802	16	505-0038	19
357-0030	16	415-0509	25	503-0189	15	505-0039	13
358-0011	45	415-0515	25	503-0197	5	505-0041	15
358-0012	45	416-0473	5	503-0354	11	505-0041	19
363-0025	47	416-0632	5	503-0354	13	505-0043	13
363-0033	47	416-0635	29	503-0354	15	505-0054	13
363-0049	45	416-0636	5	503-0361	15	505-0056	23
363-0050	45	416-0639	5	503-0429	11	505-0056	25
363-0054	46	416-0674	29	503-0429	13	505-0057	13
363-0055	46	501-0084	7	503-0429	19	505-0057	25
370-0007	67	501-0087	11	503-0539	13	505-0086	19
370-4003	22	501-0087	13	503-0605	31	505-0098	25
402-0078	25	501-0194	23	503-0605	33	505-0099	19
402-0078	57	501-0194	25	503-0617	15	505-0100	5
402-0078	59	501-0211	26	503-0685	16	505-0101	13
402-0078	61	501-0214	23	503-0752	11	505-0110	23
402-0078	63	501-0214	25	503-0752	13	505-0110	25
402-0527	55	501-0214	26	503-0756	15	505-0117	7
403-1200	29	501-0215	23	503-0799	13	505-0140	15
403-1203	29	501-0215	25	503-0806	3	505-0172	13
403-1743	26	501-0216	7	503-0853	19	505-0173	13
403-1896	26	501-0216	23	503-0855	3	505-0175	13
405-1884	11	501-0216	25	503-0858	11	505-0175	15
405-1888	11	501-0227	19	503-0858	13	505-0185	5
405-2016	11	501-0331	21	503-0863	3	505-0187	13
406-0332	55	501-0381	20	503-0863	3	505-0204	15
406-0332	57	501-0382	20	503-0877	11	505-0220	13
406-0332	59	502-0019	13	503-0888	5	505-0247	26
406-0332	61	502-0020	13	503-1077	49	505-0248	20
406-0333	55	502-0029-05	26	503-1092	3	505-0289	19
406-0333	57	502-0034	22	503-1119	16	505-0304	19
406-0333	59	502-0049	13	503-1199	16	505-0324	19
406-0333	61	502-0051	49	504-0003	19	505-0330	15
406-0334	55	502-0054	19	504-0006	15	505-0333	19
406-0334	57	502-0133	23	504-0011	5	505-0334	26
406-0334	59	502-0133	25	504-0028	11	505-0351	15
406-0334	61	502-0143	13	504-0028	13	505-0374	15
415-0170	23	502-0183	26	504-0057	13	505-0375	13
415-0317	26	502-0184	11	504-0062	15	505-0379	15
415-0322	23	502-0184	13	504-0064	22	505-0380	13
415-0329	23	502-0277	20	504-0090	15	505-0402	13
415-0330	23	502-0390	19	505-0003	13	505-0405	13
415-0331	23	502-0444	49	505-0004	15	505-0695	31

Numerical Index

Part No.	Page						
505-0695	33	526-0008	45	800-0005	44	800-0130	7
505-0738	13	526-0008	64	800-0007	15	800-0130	11
505-0740	31	526-0009	45	800-0007	19	800-0130	22
505-0740	33	526-0009	53	800-0007	23	800-0135	5
505-0741	31	526-0013	13	800-0007	41	800-0138	29
505-0741	33	526-0013	26	800-0009	37	800-0153	29
505-0746	15	526-0018	11	800-0009	39	800-0156	26
505-0748	13	526-0018	41	800-0024	55	800-0156	29
505-0748	15	526-0018	66	800-0028	13	800-0160	31
505-0759	11	526-0018	67	800-0028	15	800-0160	33
505-0759	13	526-0022	21	800-0028	21	801-0099	20
505-0759	19	526-0026	21	800-0028	29	801-0119	3
505-0784	31	526-0029	41	800-0028	41	805-0032	37
505-0784	33	526-0030	9	800-0030	9	805-0032	39
505-0785	33	526-0041	13	800-0030	11	805-0035	37
505-0872	13	526-0041	15	800-0030	35	805-0035	39
505-0875	15	526-0048	69	800-0031	69	809-0035	7
505-0939	33	526-0049	64	800-0032	3	812-0061	57
505-0949	15	526-0060	15	800-0033	41	812-0061	59
505-1050	25	526-0061	13	800-0034	72	812-0061	61
505-1072	13	526-0062	49	800-0035	29	812-0063	53
508-0001	57	526-0062	53	800-0037	31	812-0065	55
508-0001	59	526-0063	25	800-0037	33	812-0065	57
508-0001	61	526-0077	11	800-0045	55	812-0065	59
508-0015	7	526-0108	69	800-0045	57	812-0065	61
508-0051	55	526-0113	31	800-0045	59	812-0066	49
508-0051	65	526-0113	33	800-0045	61	812-0066	57
508-0093	45	526-0113	72	800-0048	42	812-0066	59
508-0093	46	526-0115	41	800-0048	43	812-0066	61
508-0093	47	526-0115	69	800-0050	26	812-0070	57
508-0156	45	526-0140	46	800-0050	41	812-0070	72
508-0187	45	526-0140	47	800-0051	13	812-0075	17
508-0203	65	526-0141	71	800-0051	15	812-0075	27
509-0151	37	526-0158	48	800-0051	21	812-0079	19
509-0151	39	526-0219	25	800-0051	26	812-0079	25
510-0106	37	526-0238	29	800-0051	41	812-0094	69
510-0106	39	526-0252	44	800-0052	19	812-0156	71
511-0084	9	526-0259	37	800-0053	20	812-0157	69
515-0145	37	526-0259	39	800-0056	41	812-0165	66
515-0145	39	526-0278	13	800-0071	71	812-0165	67
517-0131	51	526-0278	25	800-0073	37	812-0182	71
517-0131	57	800-0002	25	800-0073	39	813-0097	25
517-0131	59	800-0003	42	800-0088	13	813-0098	53
517-0131	61	800-0003	43	800-0088	15	813-0098	66
517-0221	51	800-0003	66	800-0092	11	813-0098	67
520-0142	41	800-0003	67	800-0092	15	813-0100	45
520-0446	17	800-0004	48	800-0092	44	813-0100	53
520-0780	37	800-0005	7	800-0093	25	813-0100	64
520-0780	39	800-0005	23	800-0094	13	813-0102	65
526-0003	35	800-0005	27	800-0095	9	813-0103	7

Numerical Index

Part No.	Page						
813-0103	64	850-0020	59	850-0045	69	856-0006	7
813-0105	31	850-0020	61	850-0045	71	856-0008	29
813-0105	33	850-0025	17	850-0050	13	856-0008	55
813-0105	53	850-0025	35	850-0050	15	856-0010	42
813-0110	45	850-0025	69	850-0050	20	856-0010	43
813-0112	46	850-0030	7	850-0050	21	860-0005	57
813-0112	47	850-0030	17	850-0050	26	860-0005	59
814-0079	35	850-0030	25	850-0050	41	860-0005	61
815-0026	49	850-0030	45	850-0055	37	860-0006	53
815-0026	53	850-0030	46	850-0055	39	860-0006	72
815-0026	57	850-0030	47	850-0055	71	860-0008	35
815-0026	59	850-0030	49	850-0060	9	860-0008	63
815-0026	61	850-0030	53	850-0060	11	862-0001	7
815-0203	49	850-0030	57	850-0060	13	862-0001	15
815-0203	53	850-0030	59	850-0060	15	862-0001	19
815-0203	57	850-0030	61	850-0060	25	862-0001	23
815-0203	59	850-0030	65	850-0060	37	862-0001	25
815-0203	61	850-0030	66	850-0060	39	862-0001	37
815-0203	64	850-0030	67	850-0060	44	862-0001	39
815-0385	51	850-0038	48	850-0065	20	862-0001	41
815-0544	51	850-0040	7	850-0070	3	862-0001	42
815-0544	55	850-0040	15	850-0070	5	862-0001	43
815-0544	61	850-0040	19	850-0070	7	862-0001	48
818-0150	35	850-0040	23	850-0070	11	862-0001	66
821-0004	25	850-0040	25	850-0070	22	862-0001	67
821-0004	51	850-0040	27	850-0070	29	862-0003	13
821-0004	55	850-0040	37	850-0079	26	862-0003	15
821-0008	25	850-0040	39	850-0079	29	862-0003	19
821-0010	2A	850-0040	41	853-0003	49	862-0003	20
821-0010	35	850-0040	42	853-0003	53	862-0003	21
821-0010	65	850-0040	43	853-0003	53	862-0003	26
821-0010	69	850-0040	44	853-0003	57	862-0003	41
821-0011	16	850-0040	45	853-0003	59	862-0004	71
821-0014	9	850-0040	66	853-0003	61	862-0005	13
821-0014	11	850-0040	67	853-0008	49	862-0005	15
821-0014	25	850-0040	69	853-0008	53	862-0007	29
821-0014	35	850-0040	71	853-0013	42	862-0008	31
821-0014	48	850-0045	9	853-0013	43	862-0008	33
821-0014	65	850-0045	13	854-0006	72	862-0014	13
821-0016	11	850-0045	15	854-0007	19	862-0014	15
821-0016	29	850-0045	21	854-0010	57	862-0014	63
821-0016	35	850-0045	29	854-0010	59	862-0015	9
821-0016	65	850-0045	31	854-0010	61	862-0015	41
821-0017	63	850-0045	33	854-0010	64	862-0016	9
821-0018	11	850-0045	41	854-0031	44	862-0016	11
821-0029	3	850-0045	55	856-0002	63	862-0016	25
821-0029	9	850-0045	57	856-0003	49	862-0016	37
821-0029	11	850-0045	59	856-0003	53	862-0016	39
821-0029	64	850-0045	61	856-0003	64	862-0020	26
850-0020	57	850-0045	63	856-0006	2A	862-0020	29

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
868-0001	45						
868-0007	9						
868-0011	44						
870-0048	11						
870-0048	31						
870-0048	33						
870-0053	17						
870-0053	45						
870-0053	46						
870-0053	47						
870-0053	49						
870-0053	53						
870-0053	57						
870-0053	59						
870-0053	61						
870-0053	64						
870-0053	66						
870-0053	67						
870-0131	51						
870-0131	55						
870-0183	51						
870-0183	72						
870-0188	31						
870-0188	33						
870-0196	7						
870-0212	16						
870-0212	35						
870-0250	42						
870-0250	43						
870-0257	3						
870-0257	11						
870-0257	29						
870-0257	31						
870-0257	33						
870-0257	35						
870-0257	65						
870-0257	72						
870-0258	35						
870-0281	3						
870-0281	11						
870-0281	64						
871-0010	49						
871-0010	53						
871-0010	57						
871-0010	59						
871-0010	61						
871-0010	64						
895-0163	31						
895-0163	33						
960-0222	COVER						