


Parts Catalog

DFHA (Spec A–C) DFHC (Spec A–C) DFHB (Spec A–C) DFHD (Spec A)

Generator Set

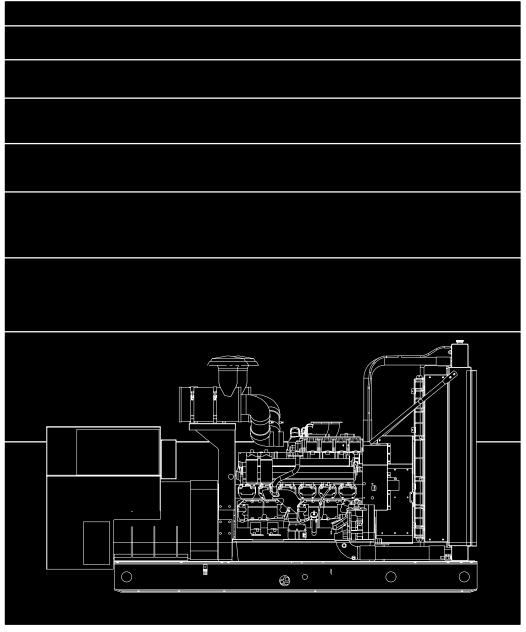

Printed in U.S.A.

960–0241C 12–99 Replaces 960–0241B 12–98

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE) SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

> This symbol warns of immediate hazards which will result in severe personal injury or death.

DANGER

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS

Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUC-TIONS in the Service Manual appropriate for the equipment you are working on.

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This Parts Catalog applies to Onan Generator Models DFHA, DFHB, DFHC and DFHD as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding with the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set.

Engine parts that have been modified or added by Onan are identified in this catalog. All other Engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturers nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

Onan/Cummins Generator Model	Cummins Engine Model
620 DFHA (Spec A, B)	QST30–G2, Configuration No. D573001GX03
750 DFHA (Spec A, B)	QST30–G2, Configuration No. D573001GX03
620 DFHA (Spec C)	QST30–G1, Configuration No. D573001GX03
750 DFHA (Spec C)	QST30–G1, Configuration No. D573001GX03
700 DFHB	QST30–G2, Configuration No. D573001GX03
800 DFHB	QST30–G2, Configuration No. D573001GX03
800 DFHC (Spec C)	QST30–G3, Configuration No. D573001GX03
900 DFHC	QST30–G3, Configuration No. D573001GX03
880 DFHD (Spec A)	QST30–G4, Configuration No. D573001GX03
1000 DFHD (Spec A)	QST30–G4, Configuration No. D573001GX03

Replacement Engine

Generator Set Data Table

Model/		Electri	Battery		
Specification	Volts	Hertz	Wire	Phase	Voltage
620 DFHA/*	#	50	6 or 12	3	24 VDC
750 DFHA/*		60	6 or 12	3	24 VDC
700 DFHB/* 800 DFHB/*	#	50 60	6 or 12 6 or 12	33	24 VDC 24 VDC
800 DFHC/*	#	50	6 or 12	3	24 VDC
900 DFHC/*		60	6 or 12	3	24 VDC
880 DFHD/*	##	50	6 or 12	3	24 VDC
1000 DFHD/*		60	6 or 12	3	24 VDC

* - The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options or deviations from the Standard model. The specification letter advances with major manufacturing changes.

Broad Range Reconnectible.

Adapter, Duct – 40°C Ambient Radiator, 23

- Adapter, Duct 50°C Ambient Radiator DFHA, DFHB, DFHC, **25**
- Adapter, Duct Radiator DFHD, 27
- Alarm, Bell Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, 69
- Ammeter, 47
- Angle, Housing Control Housing DFHA, DFHB, DFHC Begin Spec B, DFHD Spec A, **37**
- Angle, Housing Control Housing DFHA, DFHB, DFHC Spec A, **35**
- Band, Mounting Heavy Duty Air Cleaner, 9
- Band, Mounting Standard Air Cleaner, 8
- Bar Assembly, Neutral Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 71
- Bar Assembly, Neutral Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, 67
- Bar Assembly, Neutral UL Listed Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 63
- Bar Assembly, Neutral UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, **59**
- Bar Assembly, Neutral UL Listed, IEC Conformity Circuit Breaker – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **65**
- Block, Terminal Engine to Control Wiring Harness, 51
- Block, Terminal Generator Heater, 39
- Block, Terminal Water Heater Control, **13**
- Board, Printed Circuit Analog, 45
- Board, Printed Circuit Customer Interface, 45
- Board, Printed Circuit Digital, 45
- Board, Printed Circuit Display, 47
- Board, Printed Circuit Engine Interface, 45
- Box, Control, 45
- Box, Entrance DFHA, DFHB, DFHC Spec A, 31
- Box, Entrance DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **33**
- Box, Terminal Generator Heater, 39
- Box, Terminal Water Heater Control, 13
- Brace Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, 69
- Brace, Access Door Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 73
- Brace, Access Door UL Listed Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 63
- Brace, Cover Entrance Box DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **33**
- Brace, Cover Entrance Box DFHA, DFHB, DFHC Spec A, $\mathbf{31}$
- Brace, Cover Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, **67**
- Brace, Cover UL Listed Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **63**
- Brace, Cover UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, 61
- Brace, Mounting UL Listed, IEC Conformity Circuit Breaker – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **65**
- Bracket Resistive Temperature Detector, 53
- Bracket, Circuit Breaker Mounting Non–UL Listed DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **73**
- Bracket, Circuit Breaker Mounting Non–UL Listed DFHA, DFHB, DFHC Spec A, 67

- Bracket, Circuit Breaker Mounting UL Listed DFHA,
- DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 63 Bracket, Circuit Breaker Mounting – UL Listed – DFHA, DFHB, DFHC Spec A, 59
- Bracket, Circuit Breaker Mounting UL Listed, IEC Conformity – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **65**
- Bracket, Generator Heater Mounting, **39**
- Bracket, Guard Radiator DFHD, 27
- Bracket, Guard Remote Radiator, 21
- Bracket, Mounting Radiator DFHD, 27
- Bracket, Panel Control Housing DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **37**
- Bracket, Panel Control Housing DFHA, DFHB, DFHC Spec A, **35**
- Bracket, Pilot Solenoid, 7
- Bracket, Radiator Support DFHD, 27
- Bracket, Saddle Control Housing DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **37**
- Bracket, Saddle Control Housing DFHA, DFHB, DFHC Spec A, **35**
- Bracket, Water Heater, 11
- Breaker, Circuit Non–UL Listed DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **71**
- Breaker, Circuit Non–UL Listed DFHA, DFHB, DFHC Spec A, 67
- Breaker, Circuit UL Listed DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **63**
- Breaker, Circuit UL Listed DFHA, DFHB, DFHC Spec A, 59
- Breaker, Circuit UL Listed, IEC Conformity DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **65**
- Cable, Battery, 7
- Cable, Jumper, 7
- Cable, Ribbon Control Box, 45
- Cable, Ribbon Control Door, 47
- Cable, Starter, 7
- Cap, Expansion Tank Heat Exchanger DFHA, DFHB, DFHC, **15**
- Cap, Radiator 40°C Ambient Radiator DFHA, DFHB, DFHC, ${\bf 23}$
- Cap, Radiator 50°C Ambient Radiator DFHA, DFHB, DFHC, **25**
- Cap, Radiator Heat Exchanger DFHD, 17
- Cartridge, Generator Heater, 39
- Cleaner, Air Heavy Duty, 9
- Cleaner, Air Standard, 8
- Clip, Socket Mounting Relay, 45
- Cock, Drain Heat Exchanger DFHA, DFHB, DFHC, 15
- Contact, Auxiliary Non-UL Listed Circuit Breaker DFHA,
 - DFHB, DFHC Spec A, 69
- Control, Water Heater, **13**
- Cover, Circuit Breaker Non–UL Listed DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **71**
- Cover, Circuit Breaker Non–UL Listed DFHA, DFHB, DFHC Spec A, 67
- Cover, Circuit Breaker UL Listed DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 63
- Cover, Circuit Breaker UL Listed DFHA, DFHB, DFHC Spec A, **59**
- Cover, Circuit Breaker UL Listed, IEC Conformity DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **65**
- Cover, Control Box Non-UL Listed Circuit Breaker -
- DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 73

Cover, Control Box - Non-UL Listed Circuit Breaker -DFHA, DFHB, DFHC Spec A, 69 Cover, Control Box – UL Listed Circuit Breaker – DFHA. DFHB, DFHC Begin Spec B, DFHD Spec A, 63 Cover, Control Box - UL Listed Circuit Breaker - DFHA, DFHB, DFHC Spec A, 61 Cover, Control Box - UL Listed, IEC Conformity Circuit Breaker – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65 Cover, Control Housing - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Cover, Control Housing - DFHA, DFHB, DFHC Spec A, 35 Cover, Entrance Box – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 33 Cover, Entrance Box - DFHA, DFHB, DFHC Spec A, 31 Cover, Terminal Box - Generator Heater, 39 Cover, Terminal Box - Water Heater, 11 Cover, Water Heater Control, 13 Cup, Circuit Breaker - Non-UL Listed - DFHA, DFHB, DFHC Spec A, 69 Cup, Circuit Breaker - UL Listed - DFHA, DFHB, DFHC Spec A, 61 Cup, Circuit Breaker – UL Listed, IEC Conformity – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65 Detector, Resistive Temperature, 53 Door, Control, 47 Element, Air Cleaner – Heavy Duty – Primary and Safety, 9 Exchanger, Heat – DFHA, DFHB, DFHC, 15 Exchanger, Heat - DFHD, 17 External Engine Parts, 7 Fan, Engine – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Fan, Engine – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Fan, Engine - Radiator - DFHD, 27 Fuse, Control Box, 45 Gasket, Door, 45 Gasket, Terminal Box - Generator Heater, 39 Gauge, Sight – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Gauge, Sight – 50°C Ambient Radiator – DFHA, DFHB, DFHC. 25 Generator (Complete Replacement Part Numbers), 42 Generator Mounting - Model HC6 Generator, 40 Generator Mounting - Model HC7 Generator, 41 Grille, Generator - Control Housing - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Grille, Generator - Control Housing - DFHA, DFHB, DFHC Spec A, 35 Grille, Radiator – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Grille, Radiator – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Guard, Alternator - Remote Radiator, 21 Guard, Belt - Radiator, 28 Guard, Belt - Radiator - DFHD, 27 Guard, Belt - Remote Radiator, 21 Guard, Fan – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Guard, Fan - 50°C Ambient Radiator - DFHA, DFHB, DFHC, 25

Guard, Fan - Radiator - DFHD, 27 Guard, Front - Remote Radiator, 21 Guard, Radiator - DFHD, 27 Guard, Top – Remote Radiator, 21 Harness, Wiring - Control Door. 47 Harness, Wiring - Engine Heater, 13 Harness, Wiring - Engine to Control, 51 Harness, Wiring - Ground Fault Alarm Relay, 52 Harness, Wiring - Interconnect, 49 Harness, Wiring - Water Heater Control, 13 Heater, Control, 43 Heater, Generator, 39 Heater, Water, 11 Hood, Air Inlet - Heavy Duty Air Cleaner, 9 Hose, Bypass – 40°C Ambient Radiator – DFHA, DFHB, **DFHC**, 23 Hose, Bypass – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Hose, Radiator – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Hose, Radiator – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Hose, Radiator – DFHD, 27 Hose, Radiator - Heat Exchanger - DFHA, DFHB, DFHC, 15 Hose, Radiator - Heat Exchanger - DFHD, 17 Hose, Water - Water Heater, 11 Housing, Control – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Housing, Control – DFHA, DFHB, DFHC Spec A, 35 Indicator, Service - Heavy Duty Air Cleaner, 9 Indicator, Service - Standard Air Cleaner, 8 Isolator, Vibration - Control Box, 45 Isolator, Vibration - Control Housing - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Isolator, Vibration – Control Housing – Spec A, 35 Isolator, Vibration - Pilot Solenoid, 7 Key, Replacement - Selector Switch, 47 Kit, Language Chip - EPROM, 45 Lead, Circuit Breaker - UL Listed, IEC Conformity - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65 Line, Fuel – Flexible – Fuel In and Fuel Out, 7 Manifold, Heat Exchanger – DFHD, 17 Manifold, Inlet – Heat Exchanger – DFHA, DFHB, DFHC, 15 Meter, Frequency, 47 Module, Alarm, 54 Paint. 5 Panel, Control Housing - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Panel, Control Housing – DFHA, DFHB, DFHC Spec A, 35 Plate, Radiator Support – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Plate, Radiator Support – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Plate, Radiator Support - DFHD, 27 Pyrometer, 55

Radiator - 40°C Ambient - DFHA, DFHB, DFHC, 23

Index

Radiator - 50°C Ambient - DFHA, DFHB, DFHC, 25 Radiator - DFHD, 27 Radiator, Remote, 21 Rectifier, Silicon – Engine Heater Wiring Harness, 13 Relay, Control, 45 Relay, Ground Fault Alarm, 52 Relay, Power – Water Heater Control, 13 Sealant, Thread, 5 Sender, Low Coolant Level, 29 Sender, Oil Temperature, 7 Separator, Fuel/Water, 19 Shroud, Fan – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Shroud, Fan - 50°C Ambient Radiator - DFHA, DFHB, DFHC, 25 Shroud, Fan – Radiator – DFHD, 27 Skid, 38 Socket, Relay - Control, 45 Solenoid, Pilot, 7 Standoff, Board - Printed Circuit, 45 Strap, Bond, 45 Support, Box - Control Housing - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 37 Support, Box - Control Housing - DFHA, DFHB, DFHC Spec A, **35** Support, Radiator – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Support, Radiator - 50°C Ambient Radiator - DFHA, DFHB, DFHC, 25 Support, Radiator - DFHD, 27 Support, Side - Heavy Duty Air Cleaner, 9 Support, Side - Standard Air Cleaner, 8 Switch, Disconnect – UL Listed, IEC Conformity – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65 Switch, Low Engine Temperature, 7 Switch, Pushbutton - Emergency Stop, 47 Switch, Selector - Key Operated, 47 Switch, Selector - Run/Off/Auto. 47 Switch, Trip or Auxiliary Contact - UL Listed, IEC Conformity - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65 Tank, Expansion – Heat Exchanger – DFHA, DFHB, DFHC, 15 Tank, Expansion – Heat Exchanger – DFHD, 17 Thermostat - Water Heater, 11 Transformer, Current, 56

- Tray, Support Heavy Duty Air Cleaner, 9
- Tray, Support Standard Air Cleaner, 8
- Trip, Shunt Non–UL Listed Circuit Breaker DFHA, DFHB, DFHC Spec A, 69
- Trip, Shunt UL Listed, IEC Conformity Circuit Breaker DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65

Tube, Air Inlet - Heavy Duty Air Cleaner, 9 Tube, Air Inlet - Standard Air Cleaner, 8 Tube, Radiator Fill – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Tube, Radiator Fill – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Tube, Radiator Inlet – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Tube, Radiator Inlet – 50°C Ambient Radiator – DFHA, DFHB, DFHC, 25 Tube, Radiator Inlet - DFHD, 27 Tube, Radiator Outlet – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Tube, Radiator Outlet – 50°C Radiator – DFHA, DFHB, DFHC, 25 Tube, Radiator Outlet - DFHD, 27 Tube, Water Heater, 11 Valve, Gate – Heat Exchanger – DFHA, DFHB, DFHC, 15 Valve, Gate - Heat Exchanger - DFHD, 17 Valve, Shutoff – 40°C Ambient Radiator – DFHA, DFHB, DFHC, 23 Valve, Shutoff - 50°C Ambient Radiator - DFHA, DFHB, DFHC, 25 Valve, Shutoff – Oil Drain, 7 Valve, Solenoid – Heat Exchanger – DFHA, DFHB, DFHC, 15 Valve, Thermostatic - DFHA, DFHB, DFHC, 18 Valve, Thermostatic - DFHD, 17 Voltmeter - Control Cabinet Door, 47 Wattmeter, 47 Wrapper, Circuit Breaker – Entrance Box – DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 33 Wrapper, Circuit Breaker - Entrance Box - DFHA, DFHB, DFHC Spec A, 31 Wrapper, Circuit Breaker - Non-UL Listed - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 71 Wrapper, Circuit Breaker - Non-UL Listed - DFHA, DFHB, DFHC Spec A, 67 Wrapper, Circuit Breaker - UL Listed - DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 63 Wrapper, Circuit Breaker – UL Listed – DFHA, DFHB, DFHC Spec A, 59 Wrapper, Circuit Breaker - UL Listed, IEC Conformity -

DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, 65

- Wrapper, Control Box DFHA, DFHB, DFHC Begin Spec B, DFHD Begin Spec A, **37**
- Wrapper, Control Box DFHA, DFHB, DFHC Spec A, 35
- Wrapper, Fan Shroud 40°C Ambient Radiator DFHA, DFHB, DFHC, 23
- Wrapper, Fan Shroud 50°C Ambient Radiator DFHA, DFHB, DFHC, **25**


Abbreviations

Some of the following abbreviations may	y be used throughout this Parts Catalog:

AC Amp A/R	Alternating Current Ampere As Required	MCM mm MOH	Metric Circular Mils Millimeter Mobile Off Highway
AVR	Automatic Voltage Regulator	NFS	Not For Sale
AWG	American Wire Gauge	NPT	National Pipe Thread
CSA	Canadian Standard	OD	Outside Diameter
	Association	0Z.	Ounce
DC	Direct Current	PC	Printed Circuit
Deg.	Degree	Ph	Phase
EFC	Electronic Fuel Control	PMG	Permanent Magnet Generator
EIT	External/Internal Tooth	PT/CT	Potential Transformer/
EPROM	Erasable Programmable		Current Transformer
	Read Only Memory	RFI	Radio Frequency Interference
ET	External Tooth	RT	Right
GFI	Ground Fault Interrupter	Spec	Specification
ID	Inside Diameter	Thk	Thick
IEC	International Electrotechnical	UL	Underwriters Laboratories Inc.
	Commission	UNC	Union National Coarse
IT	Internal Tooth	UNF	Union National Fine
kW	Kilowatt	VAC	Volts Alternating Current
LPG	Liquid Petroleum Gas	VDC	Volts Direct Current
LT	Left	W/(ET, IT, EIT)	With
M(meter number)	Meter		


Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Onan Green Enamel (Non-Metallic)	51	8–0601	-	Sealant, Thread (6 ml. Tube)
5	25–0305	-	12 oz. Pressurized Spray Can				
5	25–0306	-	Quart Can				
5	25–0304	_	Gallon Can				

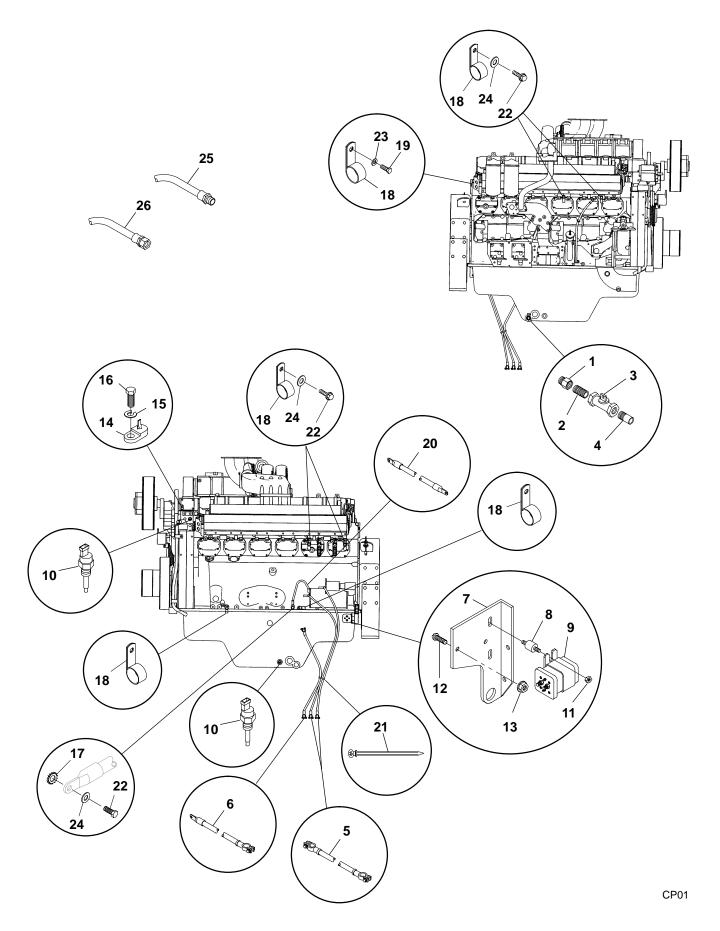

External Engine Parts

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505–1508	1	Adapter, Pipe (M27 to 3/4")	15	850–2010	1	Washer, Lock – Spring (M10)
2	505-0102	1	Nipple, Close (3/4" x 1–3/8")	16	800–2088	1	Screw, Cap – Hex Head
3	504–0171	1	Valve, Shutoff				(M10 x 35mm)
4	505–0324	1	Nipple, Half (3/4" x 2")	17	856-0010	1	Washer, Lock – W/ET (M10)
5	416-0639	2	Cable, Battery	18	332–2634	8	Clamp, J
6	416–0446	1	Cable, Jumper	19	800–2110	2	Screw, Cap – Hex Head
7	319–2236	1	Bracket, Pilot Solenoid				(M12 x 20mm)
8	402-0610	2	Isolator, Vibration	20	416–0680	1	Cable, Starter
9	307-2621-02	1	Solenoid, Pilot (24 Volt) (K4)	21	332–0941	1	Tie, Cable
10	193–0465	2	Sender, Oil Temperature (E4)	22	800–2085	7	Screw, Cap – Hex Head
11	870–0212	4	Nut, Locking – Flange				(M10 x 20mm)
			(1/4–20)	23	526–2140	2	Washer, Flat (M12)
12	812-0067	2	Screw, Machine – Round	24	526–2120	7	Washer, Flat (M10)
			Head (#6–32 x 7/8")	25	501–0522	1	Line, Flex Fuel (Fuel In)
13	870–0183	2	Nut, Locking – Flange W/ET (#6–32)	26	501–0520	1	Line, Flex Fuel (Fuel Out)
14	309–0269	1	Switch, Low Engine Temperature (S4)				

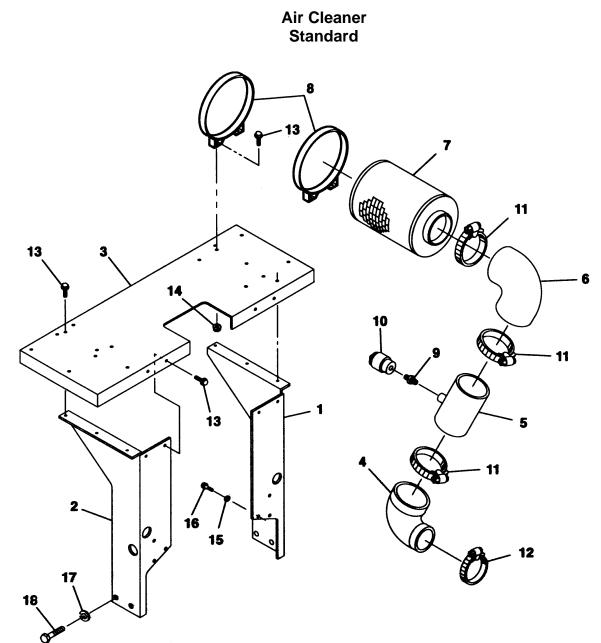

REF

NO.

1

2 3

4

5

6

7

8

9

PART

NO.

140-3020

140-3026

140-3018

503-2017

503-2102

140-2508

503-0970

140-2501

140-3163

140-2502

140-1260

QTY

USED

1

1

1

2

2

2

2

2

2


4

2

PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Support, Side – Right Side	10	140–1548	2	Indicator, Service
Support, Side – Left Side Tray, Support	11 12	503–1870–14	6	Clamp, Hose Clamp, Hose
Elbow, Reducing – 90° DFHA, DFHB Spec A–C,		503–1870–10	2	DFHA, DFHB Spec A–C, DFHC Spec A, B
DFHC Spec A, B DFHC Spec C, DFHD		503–1870–12	2	DFHC Spec C, DFHD Spec A
Spec A Tube, Air Inlet Elbow, 90°	13	821–5003–03	18	Screw, Self-Locking – Hex Washer Head (5/16–18 x 3/4")
Cleaner, Air (No Replaceable	14	870-0550-07	8	Nut, Hex Flange (5/16–18)
Element)	15	526-2140	4	Washer, Flat (M12)
DFHA, DFHB Spec A–C, DFHC Spec A, B	16	800–3017–52	4	Screw, Cap – Hex Head (M12 x 1.75 x 20mm)
DFHC Spec C, DFHD	17	850-2020	4	Washer, Lock – Spring (M20)
Spec A Band, Mounting Fitting, Service Indicator	18	800–2201	4	Screw, Cap – Hex Head (M20 x 2.5 x 35mm)


D041

Air Cleaner Heavy Duty

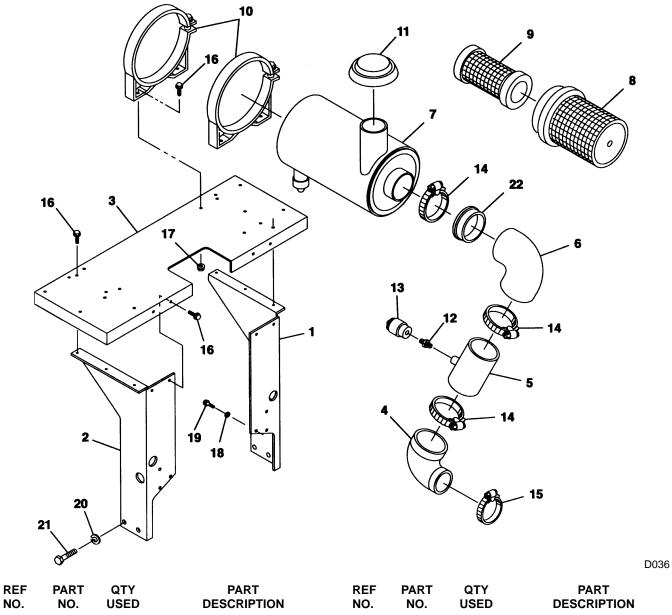

NO.	NO.	USED	DESCRIPTION	NO.
1	140–3020	1	Support, Side – Right Side	13
2	140–3026	1	Support, Side – Left Side	14
3 4	140–3018	1	Tray, Support Elbow, Reducing – 90°	15
	503–2017	2	DFHA, DFHB Spec A–C DFHC Spec A, B	
	503–2102	2	DFHC Spec C, DFHD Spec A	16
5	140–2508	2	Tube, Air Inlet	
6	503–0970	2	Elbow, 90°	
7	140–2301	2	Cleaner Assembly, Air (Includes Element)	17 18
8	140–2409	2	Element, Air Cleaner – Primary	19
9	140–2410	2	Element, Air Cleaner – Safety	20
10	140–2052	4	Band, Mounting	21
11	140–1545	2	Hood, Air Inlet	
12	140–1260	2	Fitting, Service Indicator	22


EF D.	PART NO.	QTY USED	PART DESCRIPTION
3 4 5	140–1548 503–1870–14	2 6	Indicator, Service Clamp, Hose Clamp, Hose
J	503–1870–10	2	DFHA, DFHB Spec A–C, DFHC Spec A, B
	503–1870–11	2	DFHC Spec C, DFHD Spec
6	821–5003–03	18	Screw, Self-Locking – Hex Washer Head (5/16–18 x 3/4")
7	870-0550-07	8	Nut, Hex Flange (5/16–18)
В	526–2140	4	Washer, Flat (M12)
9	800–3017–52	4	Screw, Cap – Hex Head (M12 x 1.75 x 20mm)
C	850-2020	4	Washer, Lock – Spring (M20)
1	800–2201	4	Screw, Cap – Hex Head (M20 x 2.5 x 35mm)
2	503–2031	2	Insert, Reducer

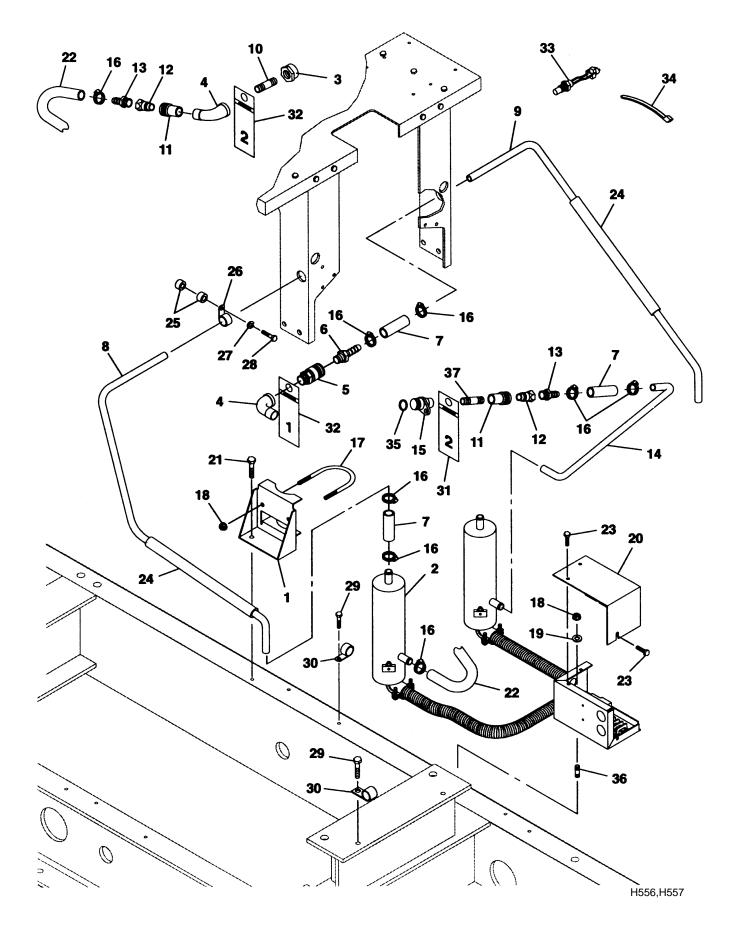

Water Heater

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4546	2	Bracket, Water Heater	22	503–1634–03	1	Hose, Water
2	_	1	Control, Water Heater (See Pages 12 and 13 for Components)	23	821–5002–03	4	(3/4" ID x 12-1/2") Screw, Self-Locking – Hex Washer Head
3	505-0022	1	Bushing, Reducer (1" to 3/4")				(1/4–20 x 1/2")
4	505–0050	3	Elbow, 90° Street (1/2")	24	128–0108	-	Insulation, Water Tube
5	502–1259	2	Coupler, Water Heater (1/2" OD)				(7/8" ID) – Bulk (Order by the Foot – 7 Feet Required)
6	502-1257	2	Connector, Hose Barb –	25	370-4038	4	Spacer (13/32 ID x 1/2")
			Water Heater (3/4" OD)	26	518-0548-15	2	Clamp, Hose
7	503-1634-01	6	Hose, Rubber (3/4" ID x 4")	27	850-0114-07	2	Washer, Lock – Spring (3/8")
8	130–4650	1	Tube, Water Heater	28	800–0054	2	Screw, Cap – Hex Head
9	130–4649	1	Tube, Water Heater				(3/8–16 x 2")
10	505–0106	1	Nipple, Pipe – Short (1/2" x 1-1/2")	29	821–5004–02	5	Screw, Self-Locking – Hex Washer Head
11	502-1260	2	Coupler, Water Heater				(3/8–16 x 3/4")
12	502–1261	2	Nipple, Water Heater	30	332–2634	10	Clamp, J
13	502–0827	2	Barb, Hose (3/4" OD)	31	098-7182-02	2	Tag, Label
14	130–4651	1	Tube, Water Heater	32	098–7182–01	2	Tag, Label
15	502–1282	1	Fitting, Tube (Heater)	33	309–0649	1	Thermostat
16	503–2157–01	14	Clamp, Hose	34	332–0941	1	Tie, Cable (Quantity Used as
17	155–3021	2	Clamp, Water Heater				Required)
18	870-0550-09	6	Nut, Hex Flange (3/8–16)	35	509–0341	1	O-Ring
19	526–0128	2	Washer, Flat (7/16")	36	520–0544	2	Stud, Generator Mounting
20	319–2815	1	Cover, Terminal Box	37	505–0078	1	Nipple, Pipe (1/2" x 2-1/2")
21	821–5004–03	4	Screw, Self-Locking – Hex Washer Head (3/8–16 x 1")				


Water Heater Control

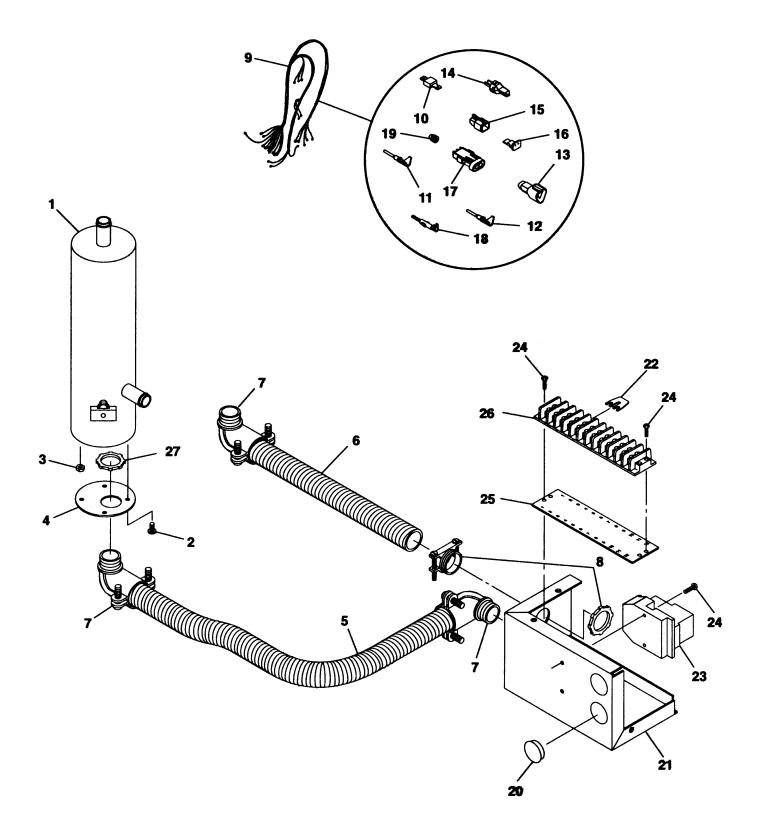

Water Heater Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater, Water	11	323–1491	A/R	* Terminal, Pin
	333-0639-01	2	4990 Watt	12	323–1492	A/R	* Terminal, Socket
	333-0639-02	2 2	6420 Watt	13	323–1494	A/R	* Connector, Receptacle
2	815–0539	6	Screw, Machine – Round				(3 Pin)
			Head, Cross Recessed	14	323–1502	1	* Wedge, Receptacle (3 Pin)
			W/IT (#8–32 x 5/8")	15	323–1504	2	 * Connector, Plug (2 Socket)
3	870–0131	6	Nut, Hex – W/ET (#10–32)	16	323–1500	2	* Wedge, Plug (2 Socket)
4	130–4552	2	Cover, Water Heater Control	17	323–1652	1	* Plug (2 Pin)
5	338-3335-08	3 1	Harness, Water Heater – 42"	18	323–1718	A/R	* Terminal, Pin
			(K11–7, TB1–10,11,12 to	19	323–1576	2	* Seal, Cable
			HTR-4,3,2, HTR-GND)	20	517-0138-0	22	Plug, Hole (1" OD)
			(Includes Two 90° Conduit	21	319–2814	1	Box, Terminal – Water Heater
			Connecter – Ref No. 7)	22	332–3440	2	Jumper, Terminal
6	338-3335-07	' 1	Harness, Water Heater – 18"	23	307–2859	1	Relay, Power – 24V, 50/60Hz
			(TB1–1,2,3 K11–8 to				(25 AMP @ 240 VAC, 20
			HTR–GND, HTR–2,3,4)				AMP @ 277 VAC)
			(Includes One 90° Conduit	24	815–0447	4	Screw, Machine – Round
			Connecter – Ref No. 7)				Head, Cross Recessed
7	331–0554	3	Conduit Connector – 90°				W/IT (#8–32 x 3/4")
			(3/4")	25	332–1469	1	Strip, Marker
8	331–0042	1	Connector, Romex (3/4")	26	332–1468	1	Block, Terminal – 12 Place
9	338–3463	1	Harness, Engine Heater				(TB1)
			(Includes Parts Marked *)	27	331–0555	3	Nut, Connector Lock (3/4–14)
10	357–0030	1	 * Rectifier, Silicon (6 Amp) 				
			(CR1)	* Pa	rts Included in	338–346	33 Engine Heater Harness


Heat Exchanger DFHA, DFHB, DFHC

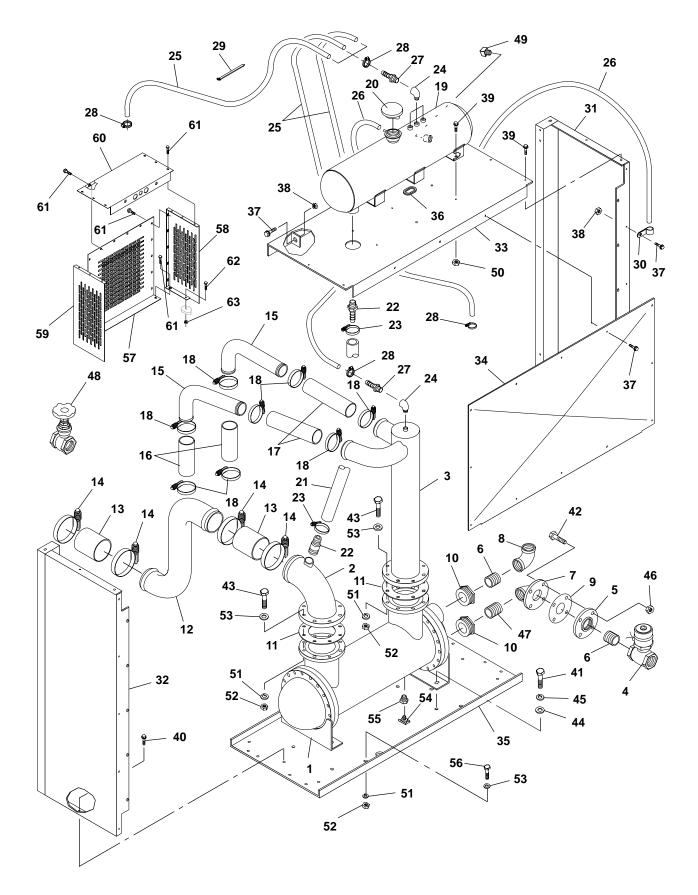

Heat Exchanger DFHA, DFHB, DFHC

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3772	1	Exchanger, Heat	35	130–3770	1	Base, Heat Exchanger
2	130-3773	1	Elbow, Outlet – Heat	36	508-1090	1	Grommet
			Exchanger	37	821-5003-03	15	Screw, Self-Locking, Hex
3	130–3774	1	Manifold, Inlet – Heat				Washer Head (5/16" x 3/4")
			Exchanger	38	870-0550-07	6	Nut, Flange Head (5/6")
4	307–2711	1	Valve, Solenoid (24V)	39	821-5004-02	13	Screw, Self-Locking – Hex
5	155–0899	1	Flange, Companion (2-1/2")				Washer Head
6	505–0103	2	Nipple, Pipe (2-1/2" x 2-1/2")				(3/8–16 x 3/4")
7	505–1442	1	Elbow, 90° Flange	40	821–0033	6	Screw, Locking – Hex
8	505–0044	1	Elbow, 90° (2-1/2")				Washer Head
9	155–2514	1	Gasket, Flange (2-1/2" Ring)				(7/16–14 x 3/4")
10	505–1441	2	Bushing, Hex (4" x 2-1/2")	41	800–0133	4	Screw, Cap – Hex Head
11	155–2503	2	Gasket, Exhaust (6" ID)				(5/8–11 x 1-3/4")
12	130–4571	1	Tube, Outlet – Heat Exchanger	42	800–0135	4	Screw, Cap – Hex Head (5/8–11 x 2-1/4")
13	503–1726	2	Hose, Radiator (5" ID x 6")	43	800–0160	16	Screw, Cap – Hex Head
14	503-1872-1		Clamp, Hose				(3/4–10 x 3-1/4")
15	130–4570	2	Tube, Inlet – Heat Exchanger	44	526–0112	4	Washer, Flat (5/8")
16	503–1762	2	Hose, Coolant (3" ID x 8-1/2")	45	850–0070	4	Washer, Lock – Spring (5/8")
17	503–1727	2	Hose, Coolant (3" ID x 10")	46	862–0007	4	Nut, Hex (5/8–11)
18	503-1872-0	58	Clamp, Hose	47	505–0114	1	Nipple, Short (2-1/2" x 3")
19	130–3766	1	Tank, Expansion	48	504–0175	1	Valve, Gate (2-1/2")
20	130–0449	1	Cap, Expansion Tank	49	505–0054	1	Plug, Square Head (1/4")
21	503–1764	1	Hose, Flex (1-1/2" ID x 30")	50	870-0550-09	6	Nut, Flange Head (3/8–16)
22	505–1429	2	Nipple, Combination (1-1/2")	51	850-0079	20	Washer, Lock (3/4")
23	503-1872-0	2 2	Clamp, Hose	52	862-0008	20	Nut, Hex (3/4–10)
24	505–0011	4	Elbow, 90° Street (1/4")	53	526-0027	24	Washer, Flat (3/4")
25	503–1620	_	Hose – Bulk (3/8" ID)	54	504–0028	1	Cock, Drain (3/8")
			(Order by the Foot – 14 Feet Required)	55	505–0019	1	Bushing, Reducer (1/2" to 3/8")
26	503–1418	_	Hose – Bulk (1/4" ID)	56	800–0158	4	Screw, Cap – Hex Head
			(Order by the Foot – 9 Feet				(3/4–10 x 2-3/4")
			Required)	57	130–3715	1	Cover, Damper Guard
27	502–1162	4	Connector, Hose – Barbed	58	130-3714-01	1	Guard, Damper – Right Side
			(For 3/8" ID Hose)	59	130-3714-02	1	Guard, Damper – Left Side
28	503–0685	7	Clamp, Hose	60	130–3713	1	Guard, Damper – Top
29	332–1389	1	Tie, Cable (Quantity Used As Required)	61	821–5002–03	22	Screw, Hex Head (1/4–20 x 1/2")
30	518-0548-0	8 4	Clamp, Hose	62	821-5004-03	2	Screw, Hex Head
31	130-3592-0		Guard, Radiator – Right Side	-			(3/8–16 x 1")
32	130-3592-0		Guard, Radiator - Left Side	63	870-0281	2	Nut, Hex – Locking (3/8–16)
33	130–3769	1	Panel, Top – Heat Exchanger		-		,
34	130-3767	1	Panel, Front – Heat				
-			Exchanger				


Heat Exchanger DFHD

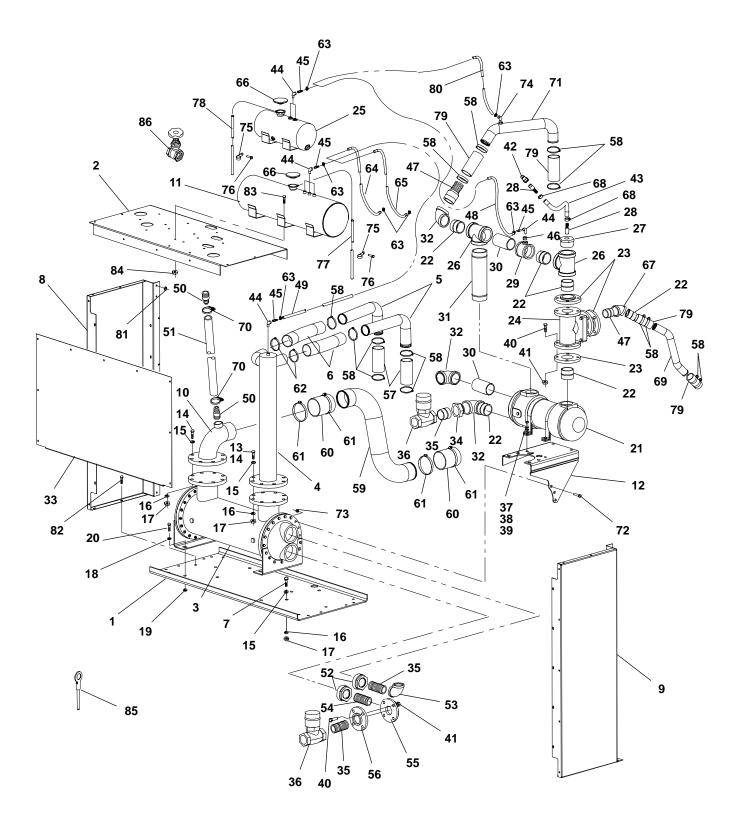

Heat Exchanger DFHD


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3770	1	Base, Heat Exchanger	43	503–2114	1	Hose, Radiator
2	130–3769	1	Panel, Heat Exchanger – Top	44	505-0011	7	Elbow, Street – 90° (1/4)
3	130-3772	1	Exchanger, Heat	45	502-1162	7	Fitting, Barbed Hose
4	130–3774	1	Manifold, Heat Exchanger	46	505-0020	1	Bushing, Reducer (3/4 x 1/4)
5	130–4570	2	Tube, Heat Exchanger	47	505-1549	2	Adapter, Pipe (Male)
6	503-1727	2	Hose, Coolant	48	503-2112	1	Hose, Heat Exchanger
7	800-0158	6	Screw, Cap – Hex Head	49	503-2113	1	Hose, Heat Exchanger
	000 0100	Ū	(3/4–10 x 2.75)	50	505-1429	2	Nipple, Combination
8	130-3592-01	1	Guard, Radiator	51	503–1729	1	Hose, Radiator
9	130-3592-02		Guard, Radiator	52	505–1441	2	Bushing, Reducer (4 x 2-1/2)
10	130–3773	1	Elbow, Heat Exchanger	53	505-0044	1	Elbow, Pipe
11	130–3766	1	Tank, Expansion	54	505-0114	1	Nipple, Pipe (2-1/2 x 3.00)
12	130–5011–02		Bracket, Flange Mounting	55	505-1442	1	Elbow -90° $-$ Flange
13	800-0310-97		Screw, Cap – Hex Head	56	155–0899	1	Flange, Companion (2-1/2)
			(Grade 5) (.750–10 x 3.50)	57	503–1762	2	Hose, Coolant (3 x 8.5)
14	800–0160	12	Screw, Cap – Hex Head	58	503-1872-05	14	Clamp, Hose
• •	000 0100		(.750–10 x 3.25)	59	130–4571	1	Tube, Heat Exchanger
15	526-0027	22	Washer, Flat (3/4)	60	503–1726	2	Hose, Radiator (5 x 6)
16	850-0079	22	Washer, Lock (3/4)	61	503-1872-09	4	Clamp, Hose
17	862-0008	22	Nut, Hex (.75–10)	62	503-1872-06	2	Clamp, Hose
18	526-0399-28		Washer, Flat (Hardened)	63	503-0685	10	Clamp, Hose
	020 0000 20		(5/8)	64	503–2115	1	Hose, Heat Exchanger (3/8
19	850-0114-10) 4	Washer, Lock – Split (5/8)	•	000 200	•	ID)
20	800-0310-79		Screw, Cap – Hex Head	65	503–2116	1	Hose, Heat Exchanger (3/8
			(Grade 5) (.625–11 x 1.75)		000 200	•	ID)
21	130–4982	1	Exchanger, Heat	66	130–0449	2	Cap, Radiator
22	505-0382	6	Nipple, Pipe (3 x 2.63)	67	505-0605	1	Elbow, Pipe – 45° (3")
23	505-0601	3	Flange, Pipe (3")	68	503-1872-01	2	Clamp, Hose
24	309-0665	1	Valve, Thermostatic	69	130-5020-02	1	Tube, Water
25	130–3969	1	Tank, Expansion	70	503-1872-02	2	Clamp, Hose
26	505–1547	2	Tee, Pipe	71	130-5039-02	1	Tube, Water
27	505-0812	1	Bushing, Reducer (3 x 3/4)	72	800-0310-69	3	Screw, Cap – Hex Head
28	505-0758	1	Adapter, Pipe (3/4 x 3/4)				(Grade 5) (.50 x 2.25)
29	505-1553	1	Elbow, Pipe	73	862-0016	3	Nut, Hex (.50–13)
30	505-0667	2	Nipple, Pipe (3 x 6.50)	74	502–1146	1	Elbow – 45°
31	505–1548	1	Nipple, Pipe (3 x 16.25)	75	518-0548-08	8	Clamp, Hose
32	505-0453-01	13	Elbow, Pipe	76	821-5003-03	20	Screw, Hex Head (5/16–18 x
33	130–3767	1	Panel, Heat Exchanger –				.75)
			Front	77	503–2123	1	Hose, Heat Exchanger
34	505-0607	1	Bushing, Reducer (3 x 2-1/2)	78	503–2124	1	Hose, Heat Exchanger
35	505–0103	3	Nipple, Pipe (2-1/2 x 2-1/2)	79	503–2127	4	Hose, Heat Exchanger
36	307–2711	2	Valve, Solenoid (24V)	80	503–2118	1	Hose, Heat Exchanger
37	526-0219	4	Washer, Flat (1/2)	81	870-0550-07	2	Nut, Flange Head (5/6")
38	850-0060	4	Washer, Lock – Split (1/2)	82	821–0033	6	Screw, Self-Locking – Hex
39	800-0310-68	34	Screw, Cap – Hex Head				Head (7/16–14 x .75)
			(Grade 5) (.50–13 x 2.00)	83	821-5004-02	10	Screw, Hex Head (3/8–16 x
40	800-0310-81	1 16	Screw, Cap – Hex Head				.75)
			(Grade 5) (.625–11 x 2.25)	84	870-0550-09	10	Nut, Hex Flange Head
41	862–0007	16	Nut, Hex (.63–11)	85	226–4115	2	Lead
42	505–0287	1	Elbow, Street -45° (3/4)	86	504–0175	2	Valve, Gate (2-1/2)

Thermostatic Valve DFHA, DFHB, DFHC

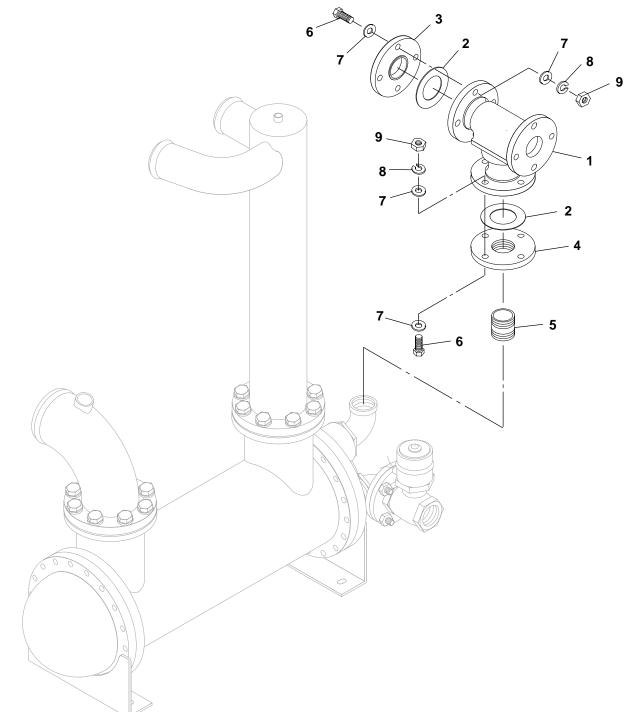

E045


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309–0607	1	Valve, Thermostatic	6	800–0138	8	Screw, Cap – Hex Head
2	155–2514	2	Gasket, Flange (2-1/2" Ring)				(5/8–11 x 3")
3	505–1440	1	Flange, Blind	7	526–0112	16	Washer, Flat (5/8")
4	155–0899	1	Flange, Companion (2-1/2")	8	850-0070	8	Washer, Lock – Spring (5/8")
5	505–0103	1	Nipple, Pipe (2-1/2" NPT x 2-1/2")	9	862–0007	8	Nut, Hex (5/8–11)

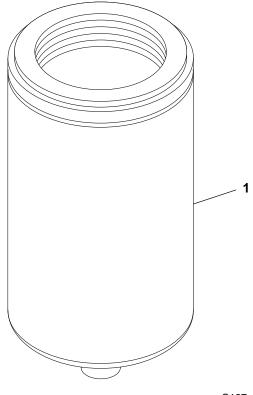

C127

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	149–2228	1	Separator, Fuel/Water				


Remote Radiator

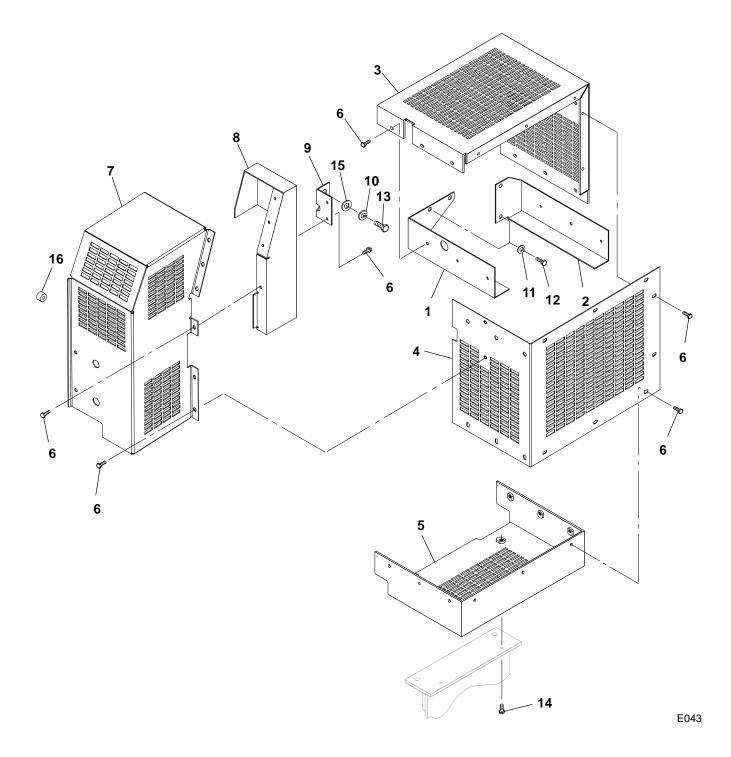

Remote Radiator

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Bracket, Guard – Left Side	7	232–4001	1	Guard, Alternator
	130–4626	1	DFHA, DFHB, DFHC	8	232–3938	1	Guard, Alternator – Remote
	130–5025	1	DFHD				Radiator
2			Bracket, Guard – Right Side	9	232–3939	1	Bracket, Guard Alternator
	130–4625	1	DFHA, DFHB, DFHC	10	850–2020	2	Washer, Lock – Spring (M20)
	130–5024	1	DFHD	11	526-2140	4	Washer, Flat (M12)
3			Guard, Top – Remote	12	800-3017-52	4	Screw, Cap – Hex Head
			Radiator				(M12 x 1.75 x 20mm)
	130–4573	1	DFHA, DFHB, DFHC	13	800–2201	2	Screw, Cap – Hex Head
	130–5022	1	DFHD				(M20 x 2.5 x 35mm)
4			Guard, Front – Remote	14	821-5004-03	2	Screw, Hex Head
			Radiator				(3/8–16 x 1")
	130–4574	1	DFHA, DFHB, DFHC	15	526-0027	2	Washer, Flat (3/4")
	130–5023	1	DFHD	16	130-3660-01	1	Spacer –13/16" Thick
5			Guard, Belt – Bottom				(Replaces Idler Mounting
	130–4477	1	DFHA, DFHB, DFHC				Bracket)
	130–5021	1	DFHD				,
6	821-5003-03	28	Screw, Hex Head				
			(5/16–18 x 3/4")				


Radiator 40°C Ambient DFHA, DFHB, DFHC

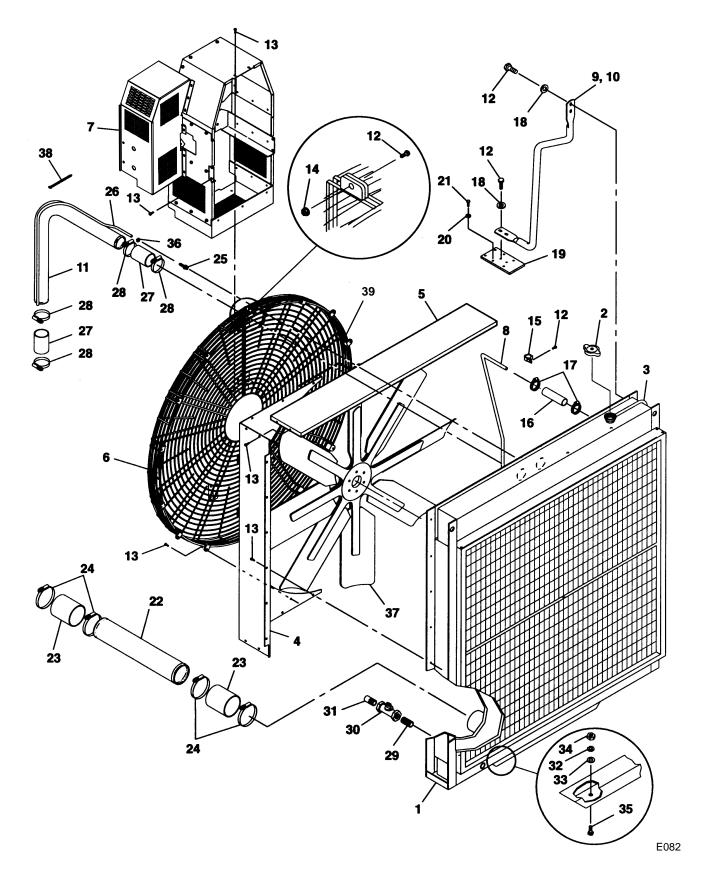

Radiator 40°C Ambient DFHA, DFHB, DFHC

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4436	1	Radiator (Includes Radiator	18	526-0240	8	Washer, Flat (3/8")
			Grille, Radiator Duct	19	130–4503	2	Plate, Radiator Support
			Adapter, Three Radiator	20	526-0399-62	8	Washer, Flat (M10)
			Overflow Hose Clamps,	21	800–2087	10	Screw, Cap – Hex Head
			and Parts Marked *)				(M10 x 30mm)
	130–4362	1	* Kit, Repair – Radiator	22	130–4457	1	Tube, Radiator Outlet
			Sight Gauge (Not	23	503–1726	2	Hose, Radiator (5" ID x 6")
			Illustrated)	24	503-1872-09	4	Clamp, Hose
2	130–3588	1	* Cap, Radiator – 7 PSI	25	502–1162	2	Fitting, Barbed Hose
3	503–1418	-	 * Hose, Radiator Overflow – 	26	503–1620	—	Hose, Bypass – Bulk
			Bulk (1/4" ID) (Order by the				(3/8" ID) (Order by the
			Foot – 7 Feet Required)				Foot – 11 Feet Required)
4	130–4474	2	Wrapper, Fan Shroud	27	503–1728	4	Hose, Radiator (3" ID x
5	130–4473	2	Shroud, Fan				5–1/2")
6	130–4439–01	1	Guard, Fan – Left Side	28	503-1872-05	8	Clamp, Hose
7	—	1	Guard Assembly, Belt (See	29	505–0102	1	Nipple, Pipe
			Page 28 for Components)	30	504–0171	1	Valve, Shutoff (3/4")
8	130–4458	1	Tube, Radiator Fill	31	505–0324	1	Nipple, Half (3/4–14)
9	130–4493	1	Support, Radiator – Right	32	850–0079	2	Washer, Spring – Lock (3/4")
			Side (Illustrated)	33	526-0027	2	Washer, Flat (3/4")
10	130–4494	1	Support, Radiator – Left Side	34	862–0008	2	Nut, Hex (3/4–10)
11	130–4456	2	Tube, Radiator Inlet	35	800–0156	2	Screw, Cap – Hex Head
12	821-5004-03	16	Screw, Self-Locking – Hex				(3/4–10 x 2-1/4")
			Washer Head (3/8–16 x 1")	36	503–0685	4	Clamp, Hose
13	821-5003-03	52	Screw, Self-Locking – Hex	37	130–5210	1	Fan, Engine
			Washer Head (5/16–18 x 3/4")	38	332–3008	1	Tie, Cable (Quantity Used As Required)
14	870-0550-09	6	Nut, Hex Flange (3/8–16)	39	130-4439-02	1	Guard, Fan – Right Side
15	518-0548-20	2	Clip, J				
16	503–1634	2	Hose, Rubber (1" ID x 4")				
17	503–1872–01	4	Clamp, Hose	* Pa	rts Included in	130–4436	Radiator

Radiator 50°C Ambient DFHA, DFHB, DFHC

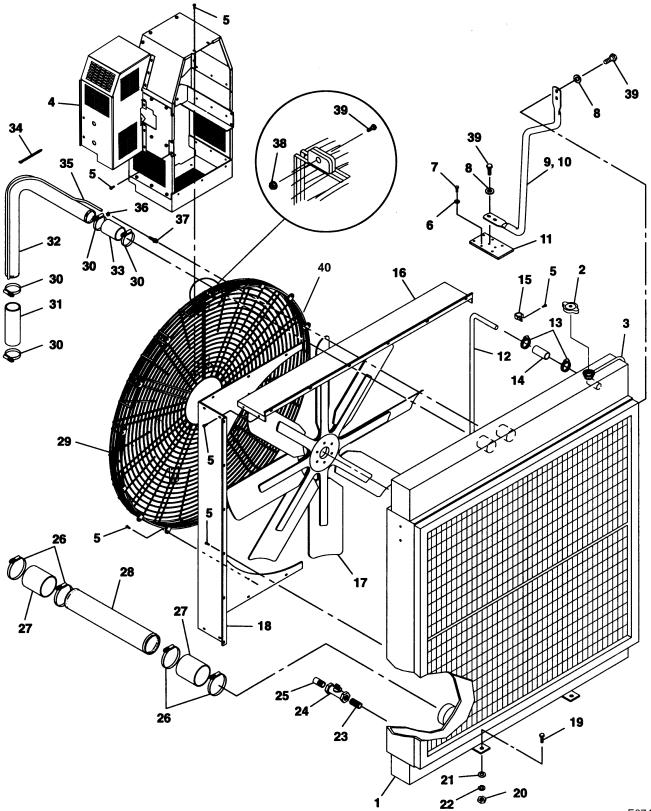


E074

Radiator 50°C Ambient DFHA, DFHB, DFHC

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4490	1	Radiator (Includes Radiator Grille, Radiator Duct	19	800–0156	4	Screw, Cap – Hex Head (3/4–10 x 2–1/4")
			Adapter, Three Radiator	20	862-0008	3	Nut, Hex (3/4–10)
			Overflow Hose Clamps,	21	526-0027	4	Washer, Flat (3/4")
			and Parts Marked *)	22	850-0079	3	Washer, Spring – Lock (3/4")
	130–4362	1	* Kit, Repair – Radiator	23	505-0102	1	Nipple, Pipe
			Sight Gauge (Not	24	504–0171	1	Valve, Shutoff (3/4")
			Illustrated)	25	505-0324	1	Nipple, Half (3/4–14)
2	130–3588	1	* Cap, Radiator	26	503-1872-09	4	Clamp, Hose
3	503–1418	_	 * Hose, Radiator Overflow – 	27	503–1726	2	Hose, Radiator (5" ID x 6")
			Bulk (1/4" ID) (Order by the	28	130–4457	1	Tube, Radiator Outlet
			Foot – 8 Feet Required)	29	130-4439-01	1	Guard, Fan – Left Side
4	—	1	Guard Assembly, Belt (See	30	503-1872-05	8	Clamp, Hose
			Page 28 for Components)	31	503–1727	2	Hose, Radiator (3" ID x 10")
5	821-5003-03	65	Screw, Self-Locking – Hex	32	130–4456	2	Tube, Radiator Inlet
6	526-0399-62	8	Washer Head (5/16" x 3/4") Washer, Flat (M10)	33	503–1728	2	Hose, Radiator (3" ID x 5–1/2")
7	800-2087	о 8		34	332-3008	4	
/	000-2007	0	Screw, Cap – Hex Head (M10 x 30mm)	34	332-3006	1	Tie, Cable (Quantity Used As Required)
8	526-0240	8	Washer, Flat (3/8")	35	503–1620	-	Hose, Bypass – Bulk
9	130–4495	1	Support, Radiator – Right Side (Illustrated)				(3/8" ID) (Order by the Foot – 12 Feet Required)
10	130–4496	1	Support, Radiator – Left Side	36	503-0685	4	Clamp, Hose
11	130-4503	2	Plate, Radiator Support	37	502-1162	2	Fitting, Barbed Hose
12	130-4499	1	Tube, Radiator Fill	38	870-0550-09	6	Nut, Hex Flange (3/8-16)
13	503-1872-02	4	Clamp, Hose	39	821-5004-03		Screw, Self-Locking – Hex
14	503–1863	2	Hose, Radiator (1–1/2" ID x				Washer Head (3/8–16 x 1")
			4")	40	130-4439-02	1	Guard, Fan – Right Side
15	518–0633	2	Clip, J				
16	130–4498	2	Shroud, Fan				
17	130–5210	1	Fan, Engine	* Pa	rts Included in	130–4490	0 Radiator
18	130–4497	2	Wrapper, Fan Shroud				


Radiator DFHD

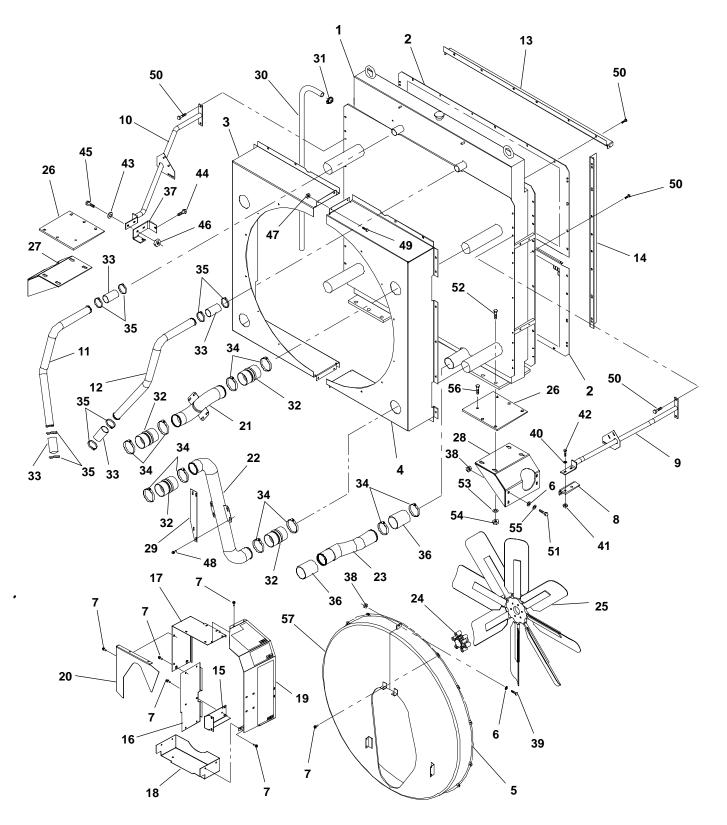


E082

Radiator DFHD

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4894	1	Radiator	31	503-1872-01		Clamp, Hose
2	130-4927-02		Guard, Radiator	32	503–2130	8	Hose, Hump
3	130-4890-02	1	Shroud, Fan (Right Side)	33	503–2132	4	Hose, Radiator (2.75 x 5.00)
4	130-4889-02	1	Shroud, Fan (Left Side)	34	503-1872-07	18	Clamp, Hose
5	130-4893-03	1	Guard, Fan (Left Side)	35	503-1872-04	8	Clamp, Hose
6	526–0219	42	Washer, Flat (1/2)	36	503–2135	2	Hose, Radiator
7	821-5003-03	28	Screw, Hex Head (5/16–18 x	37	123-2142-02		Bracket, Mounting
			.75)	38	862–0005	14	Nut, Hex (1/2")
8	130-4992-02		Bracket, Radiator Support	39	800-0310-65	2	Screw, Cap – Hex Head
9	130-4991-02	1	Support, Radiator (Left Side)				(.50–13 x 1.25) (Grade 5)
10	130-4990-02	1	Support, Radiator (Right	40	526–2141	2	Washer, Flat (M12)
			Side)	41	860–2010	2	Nut, Hex (M12)
11	130-4941-02	1	Tube, Radiator Inlet (Right	42	800–2113	2	Screw, Cap – Hex Head
			Side)				(M12 x 1.75 x 35)
12	130-4942-02	1	Tube, Radiator Inlet (Left	43	526–2120	6	Washer, Flat (M10)
			Side)	44	800–2086	4	Screw, Cap – Hex Head
13	130-4988-02	2	Adapter, Duct (Top and				(M10 x 1.5 x 25)
			Bottom)	45	800–2087	2	Screw, Cap – Hex Head
14	130-4989-02	2	Adapter, Duct (Sides)				(M10 x 1.5 x 30)
15	130-4926-02		Bracket, Guard	46	860–2059	2	Nut, Hex (M10)
16	130-4925-02		Guard, Belt	47	860–2008	14	Nut, Hex (M8)
17	130-4923-02		Guard, Belt	48	821-6003-02	12	Screw, Hex Head (M8 x 1.25
18	130-4924-02		Guard, Belt (Bottom)				x 20)
19	232-4019-02		Guard, Alternator	49	821-6003-03	4	Screw, Hex Head (M8 x 1.25
20	130–5086–02		Guard, Belt (Cover)				x 25)
21	130-4948-02		Tube, Radiator Air Inlet	50	800–2112	48	Screw, Hex Head (M12 x
22	130-4949-02		Tube, Radiator Air Outlet				1.75 x 30)
23	130–4943–02		Tube, Radiator Outlet	51	800–0094	8	Screw, Hex Head (1/2–13 x
24	130–4944	1	Spacer, Fan				2.00)
25	130–5210	1	Fan, Engine	52	800–0159	8	Screw, Hex Head (3/4–10 x
26	130–5015–02		Plate, Radiator Support				3.00)
27	130–5016–02	1	Bracket, Radiator Support	53	800-0114-11	8	Washer, Lock – Split (3/4)
			(Right Side)	54	862–0008	8	Nut, Hex (.75)
28	130–5010–02	1	Bracket, Radiator Support	55	850-0060	12	Washer, Lock – Split (1/2)
			(Left Side)	56	800–0097	4	Screw, Cap – Hex Head
29	130–5044–02		Brace, Air Tubes				(1/2–13 x 2.75)
30	503–2131	1	Hose, Radiator Fill	57	130–4893–04	1	Guard, Fan (Right Side)

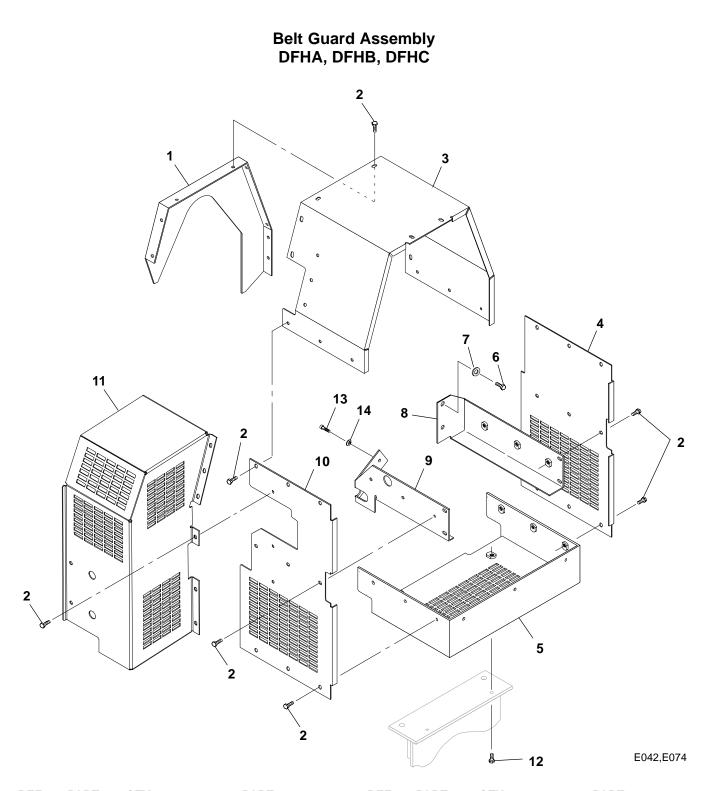


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4606	1	Guard, Belt Cover	8	130–4481	1	Bracket, Guard – Right Side
2	821-5003-03	32	Screw, Self-Locking – Hex	9	130–4482	1	Bracket, Guard – Left Side
			Washer Head (5/16–18 x	10	130–4479	1	Guard, Belt – Left Side
			3/4")	11	232–4001	1	Guard, Alternator
3	130–4476	1	Guard, Belt – Top	12	821-5004-03	32	Screw, Self-Locking – Hex
4	130–4478	1	Guard, Belt – Right Side				Washer Head (3/8–16 x 1")
5	130–4477	1	Guard, Belt – Bottom	13	800–2057	2	Screw, Cap – Hex Head
6	800-3017-52	2	Screw, Cap – Hex Head				(M8 x 1.25 x 20mm)
			(M12 x 20mm)	14	850-2008	2	Washer, Lock (M8)
7	526–2140	2	Washer, Flat (M12)				

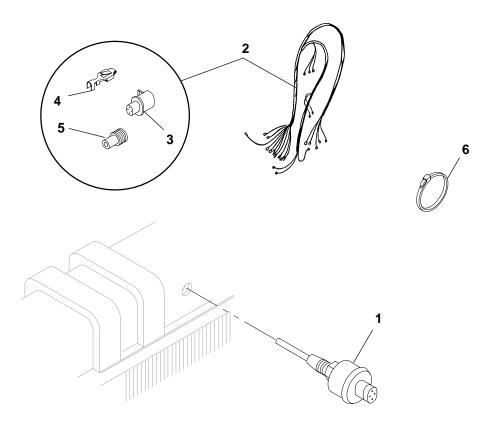

CP01

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0468	1	Sender, Low Coolant Level	5	323–1708	4	*Seal, Cable
2	338–3594	1	(S7) Harness, Pigtail (Includes Parts Marked *)	6	332–1389	1	Tie, Cable (Quantity Used as Required)
3 4	323–1765 323–1709	1 4	*Housing, Connector (4 Pin) *Socket, Contact	* — F	Parts Included	in 338–35	594 Pigtail Harness


Entrance Box DFHA, DFHB, DFHC Spec A

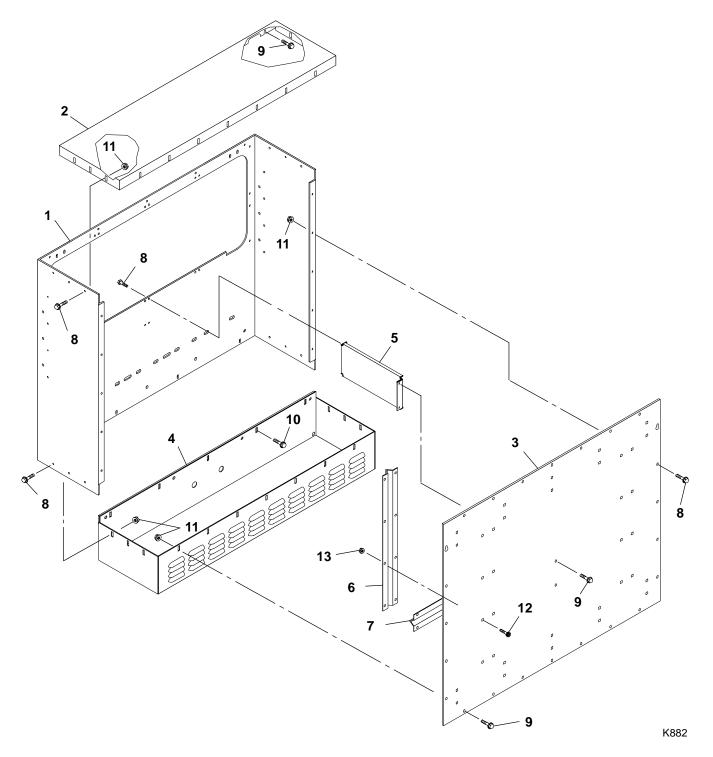

Entrance Box DFHA, DFHB, DFHC Spec A


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1957	1	Wrapper, Circuit Breaker	9	821–0018	21	Screw, Self-Locking –
2	319–1961	1	Cover, Entrance Box – Top				Hex Washer Head
3	319–2378	1	Cover, Entrance Box				(1/4–20 x 5/8")
4	319–1925	1	Cover, Entrance Box – Bottom	10	821–0011	5	Screw, Self-Locking – Hex Washer Head
5	319-2377-01	1	Brace, Entrance Box Cover				(1/4–2– x 7/8")
6	319–2398	2	Brace, Cover (Vertical)	11	870–0494	26	Nut, Self-Retaining (1/4–20)
7	319–2399	2	Brace, Cover (Horizontal)	12	816–0098	36	Bolt, Carriage
8	821-0010	24	Screw, Self-Locking – Hex				(5/16–18 x 5/8")
			Washer Head (1/4–20 x 1/2")	13	870–0257	36	Nut, Locking (5/16–18)

Entrance Box DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A

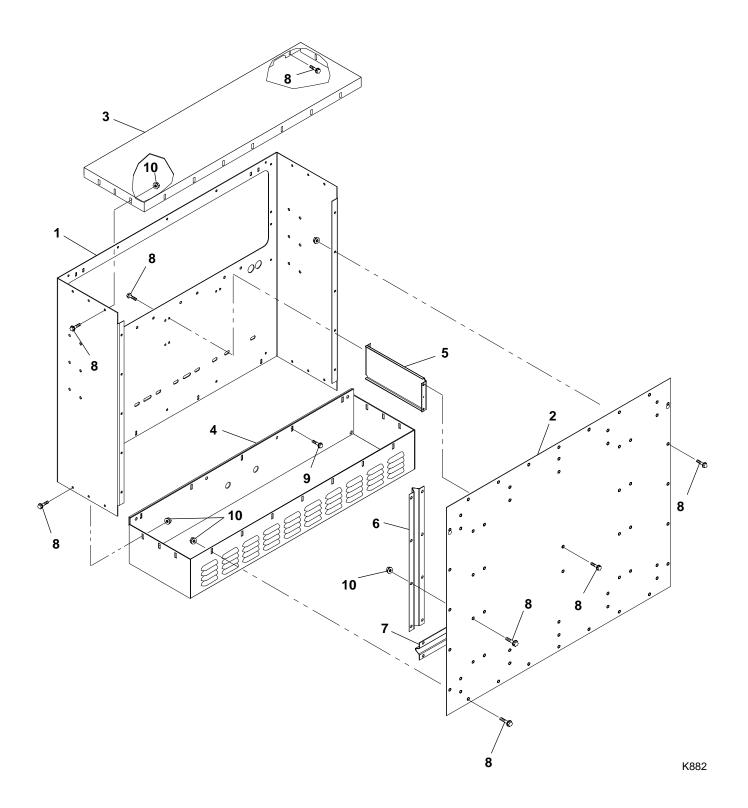

Entrance Box DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Wrapper, Circuit Breaker	7	319–3288	2	Brace, Cover (Horizontal)
2	319–3265	1	Cover, Entrance Box	8	821-6002-03	89	Screw, Hex Head (M6 x 16mm)
3	319–1961	1	Cover, Entrance Box – Top	9	821–2035	5	Screw, Self-Locking –
4	319–1925	1	Cover, Entrance Box – Bottom				Hex Washer Head (M6 x 25mm)
5	319–3264	1	Brace, Cover	10	870–0504	26	Nut, Retaining (M6)
6	319–3286	2	Brace, Cover (Vertical)				,

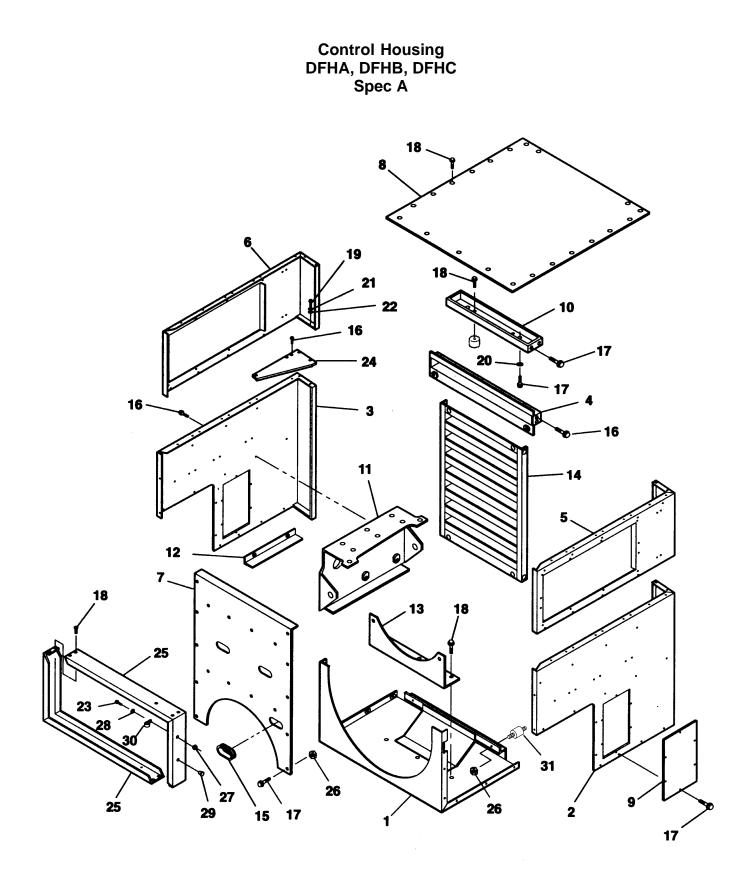

CP01

Control Housing DFHA, DFHB, DFHC Spec A


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–2771–03 319–2781–01	1 1	Panel, Control – Bottom Panel, Control Housing – Right Side	17	821–5002–03	30	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
3	319–2781–02		Panel, Control Housing – Left Side	18	821–5003–01	65	Screw, Self-Locking – Hex Washer Head
4	319–2778	1	Panel, Control Housing –	4.0			(5/16–18 x 1/2")
5	319-2779-01	1	Rear Panel, Control Housing –	19	800–2086	14	Screw, Cap – Hex Head (M10 x 1.5 x 1/4")
Ū	010 2110 01		Right Side	20	856-0006	2	Washer, Lock – EIT (1/4")
6	319-2779-02	1	Panel, Control Housing –	21	850–2010	14	Washer, Lock (M10)
			Left Side	22	526-0141	10	Washer, Flat (3/8")
7	319–2243	1	Panel, Control Housing – Front	23	821–5003–03	11	Screw, Self-Locking – Hex Washer Head
8	319–1093	1	Panel, Control Housing – Top	24	319–1203–01	2	(5/16–18 x 3/4") Gusset, Control Housing
9	319–0881	2	Cover, Lower Housing –	24	319-2244	2	Wrapper, Control Box
3	313-0001	2	Side	26	870-0550-05	_	Nut, Self-Locking (1/4–20)
10	319–0879	2	Support, Box – Control	27	870-0550-07	2	Nut, Lock (5/16–18)
11	319–1096	2	Bracket, Saddle	28	526-1115	2	Washer, Flat (5/16")
12	319–0883	2	Angle, Housing	29	517-0131	2	Plug, Hole
13	319–1091	1	Bracket, Panel	30	332–2634	4	Clamp, J
14	319–2767	1	Grille, Generator	31	402-0610	4	Isolator, Vibration
15	508–1090	3	Grommet				
16	821–5004–02	12	Screw, Self-Locking – Hex Washer Head (3/8–16 x 3/4")				

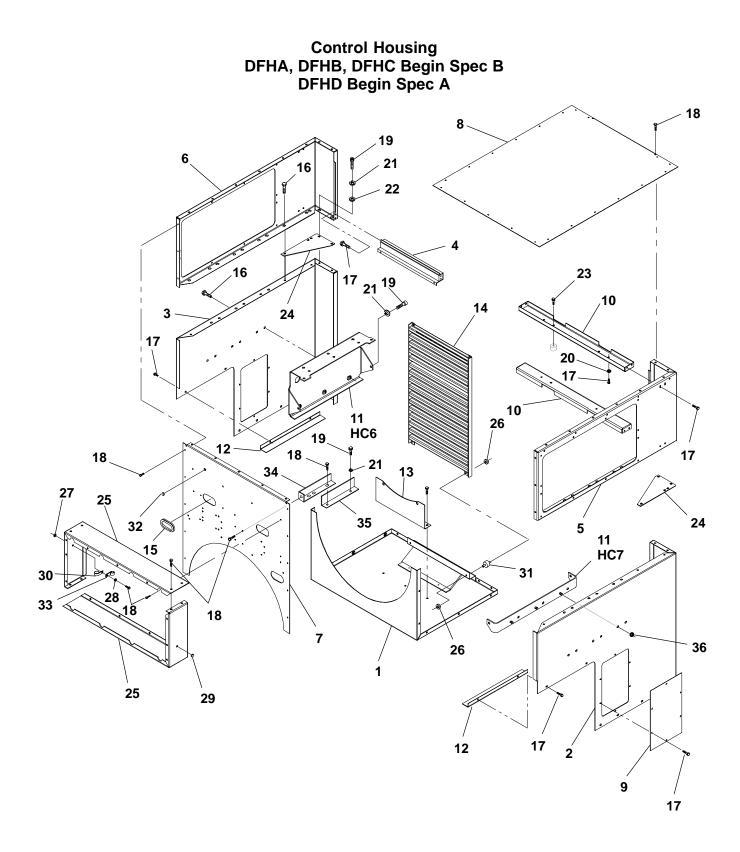

CP01

Control Housing DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Panel, Control – Bottom	18			Screw, Hex Head
	319-3270-03		Model HC6 Generator				(M8 x 20mm)
	319-3270-04	1	Model HC7 Generator –		821-6003-02		Model HC6 Generator
			DFHC Begin Spec C,		821-6003-02	74	Model HC7 Generator –
2	319-3283-01	1	DFHD Begin Spec A Panel, Control Housing –				DFHC Begin Spec C, DFHD Begin Spec A
2	319-3203-01	I	Right Side	19			Screw, Cap – Hex Head
3	319-3283-02	1	Panel, Control Housing –	13			(M10 x 25mm)
Ū	0.0 0200 02	•	Left Side		800–2086	14	Model HC6 Generator
4	319–2778	1	Panel, Control Housing –		800–2086	11	Model HC7 Generator –
			Front				DFHC Begin Spec C,
5	319-3281-01	1	Panel, Control Housing –				DFHD Begin Spec A
•			Right Side	20	856-0006	2	Washer, Lock – EIT (1/4")
6	319-3281-02	1	Panel, Control Housing –	21	050 0040	4.4	Washer, Lock (M10)
7			Left Side Panel, Control Housing –		850–2010 850–2010	14 11	Model HC6 Generator Model HC7 Generator –
1			Rear		000-2010	11	DFHC Begin Spec C
	319–3276	1	Model HC6 Generator				DFHD Begin Spec A
	319-3275	1	Model HC7 Generator –	22			Washer, Flat (3/8")
			DFHC Begin Spec C,		526–0141	10	Model HC6 Generator
			DFHD Begin Spec A		526–0141	6	Model HC7 Generator –
8	319–1093	1	Cover, Control Housing –				DFHC Begin Spec C
•	040 0004	•	Тор	~~~	004 0044		DFHD Begin Spec A
9	319–0881	2	Cover, Lower Housing – Side	23	821–0014	4	Screw, Self-Locking – Hex Washer Head (5/16 x 1/2")
10	319–3258	2	Support, Control Box	24	319-1203-01	2	Gusset, Control Housing
11	040 0007	0	Bracket, Saddle	25	319-3277	2	Wrapper, Control Box
	319–3267	2	Model HC6 Generator – With Weldnuts for	26	870–2054	10	Nut, Locking – Hex Flange Head (M6 x 1")
		•	Mounting	27	870–2055	2	Nut, Locking – Hex Flange
	319–3268	2	Model HC7 Generator –	20	500 444F	0	Head (M8 x $1-1/4$ ")
			DFHC Begin Spec C, DFHD Begin Spec A –	28 29	526–1115 517–0131	2 3	Washer, Flat (5/16") Plug, Hole
			With Welded Studs for	29 30	332–2634	2	Clamp, "J"
			Mounting	31	402-0729	4	Isolator, Vibration
12	319–3260	2	Angle, Housing – Model HC6	32	517-0135	1	Plug, Hole
			Generator	33	518-0548-42	2	Clamp, Hose
13			Bracket, Panel	34	319–3263	1	Support, Angle – Model HC7
	319–1091	1	Model HC6 Generator				Generator – DFHC Begin
	319–1092	1	Model HC7 Generator –				Spec C, DFHD Begin Spec
			DFHC Begin Spec C,	25	240, 2200		A Support Apple Medal 107
11	319–2767	1	DFHD Begin Spec A Grille, Generator	35	319–3269	1	Support, Angle – Model HC7 Generator – DFHC Begin
14 15	508–1090	1 3	Grommet				Spec C, DFHD Begin Spec
16	821-6004-01		Screw, Hex Head				A
	021 0001 01		(M10 x 20mm) – Model	36	870–2056	6	Nut, Hex – Flange (M10 x
			HC6 Generator				1.50) – Model HC7
17			Screw, Hex Head				Generator – DFHC Begin
			(M6 x 16mm)				Spec C, DFHD Begin Spec
	821-6002-03		Model HC6 Generator				A
	821-6002-03	26	Model HC7 Generator –				
			DFHC Begin Spec C,				
			DFHD Begin Spec D				

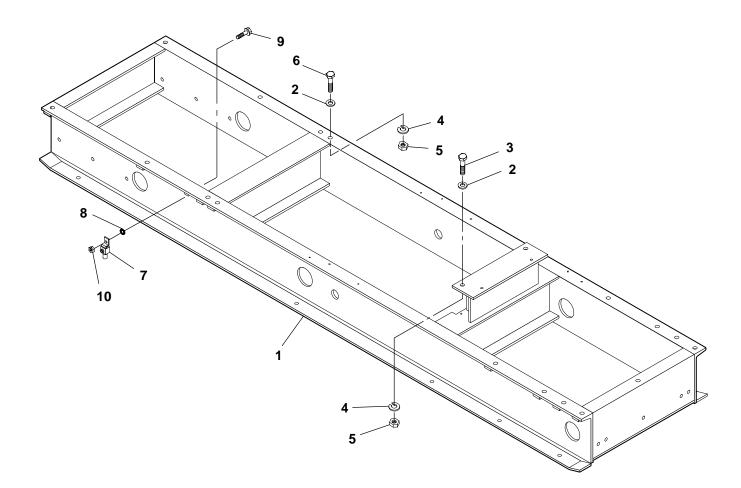

CP01


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Skid	5	862-0008	6	Nut, Hex (3/4–10)
	403–3846	1	Model HC6 Generator	6	800–0159	4	Screw, Cap – Hex Head
	403–4211	1	Model HC7 Generator –				(3/4–10 x 3")
			DFHC Begin Spec C,	7	332-2001	1	Lug, Solderless – Grounding
			DFHD Begin Spec A	8	856-0010	1	Washer – W/EIT (3/8")
2	526-0027	12	Washer, Flat (3/4")	9	800-0051	1	Screw, Self-Locking -
3	800–0161	2	Screw, Cap – Hex Head				Hex Washer Head
			(3/4–10 x 3-1/2")				(3/8–16 x 1-1/4")
4	850-0079	6	Washer, Lock – Spring (3/4")	10	870-0550-09	1	Nut, Hex Flange (3/8–16)

Generator Heater

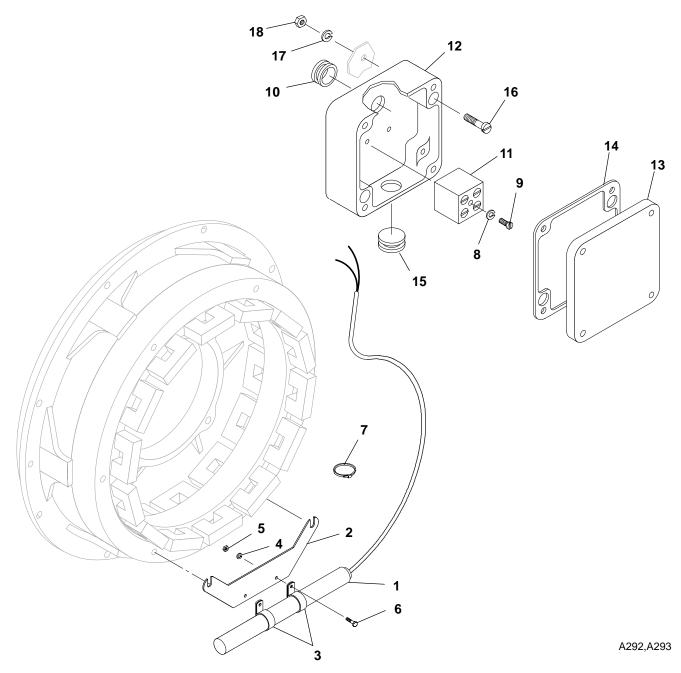

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Cartridge, Heater	9	822–3047	1	Screw, Pan Head (M3 x 20)
	333-0438-05	1	110-125 Volts	10	508-0228	1	Grommet
	333-0438-06	1	220–260 Volts	11	332-3023	1	Block, Terminal
2	232–3849	1	Bracket, Heater Mounting	12	330–0142	1	Box, Terminal – Heater
3	332-3024-14	2	Clamp, Loop				(Includes Cover and
4	850-2005	2	Washer, Lock – Spring (M5)				Gasket)
5	860-2006	2	Nut, Hex – Steel Machine	13	330-0141-03	1	Cover, Terminal Box
			(M5)	14	330-0141-04	1	Gasket, Terminal Box
6	800–2008	2	Screw, Cap – Hex Head	15	517–0021	1	Plug, Dot Button
			(M5 x 16)	16	822-3075	6	Screw, Pan Head (M4 x 16)
7	332–1389	1	Tie, Cable (Quantity Used As	17	850–2004	2	Washer, Lock (M4)
			Required)	18	860–2005	2	Nut, Hex – Steel Machine
8	850–2003	1	Washer, Lock – Spring (M3)				(M4)


Generator Mounting Model HC6 Generator

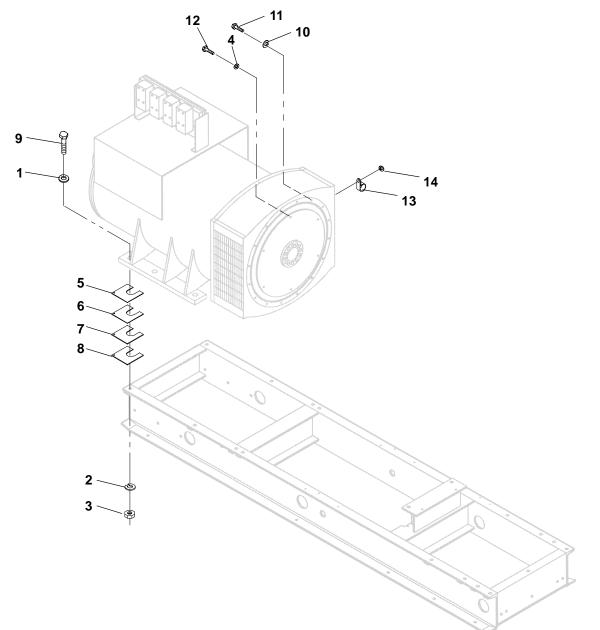

CP01

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	526-0027	4	Washer, Flat (3/4")	10	850-2012	16	Washer, Lock – Spring (M12)
2	850-0079	4	Washer, Lock – Spring (3/4")	11	800-2543-05		Screw, Cap – Hex Head
3	862-0008	4	Nut, Hex (3/4–10)				(M12 x 40mm – Grade
4	526–0416	6	Washer, Flat (5/8")				10.9)
5	232-3941-0)1 A/R	Shim – 2.6mm Thick	12	805–0035	6	Bolt, Place (5/8–11 x 1–1/2" –
6	232-3941-0)2 A/R	Shim – 1.9mm Thick				Grade 8)
7	232-3941-0)3 A/R	Shim – .6mm Thick	13	332–2634	2	Clamp, J
8	232-3941-0)4 4	Shim – 4.8mm Thick	14	526-0018	2	Washer, Flat (1/4")
9	800–0163	4	Screw, Cap – Hex Head (3/4–10 x 4")				

Generator Mounting Model HC7 Generator

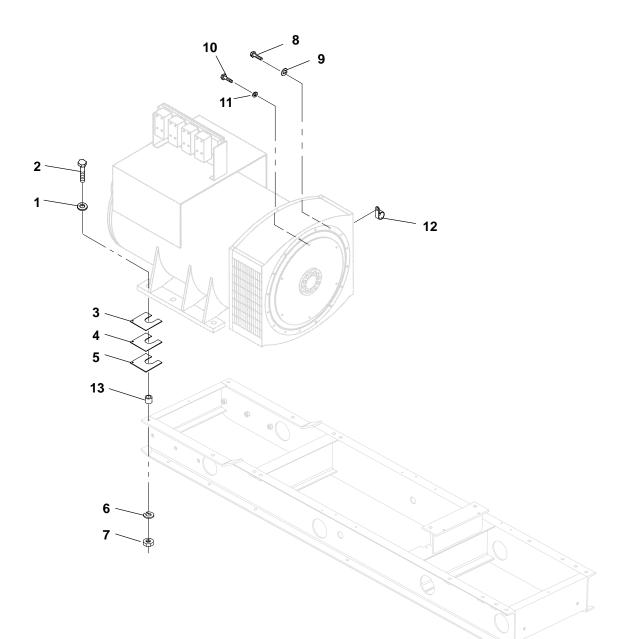

CP01

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	526–0444	4	Washer, Flat (3/4")	8	800-2543-0	08 16	Screw, Cap – Hex Head
2	800–0161	4	Screw, Cap – Hex Head (3/4–10 x 3.25)				(M12 x 1.75 x 55) (Grade 10.9)
3	232-3710-03	3 4	Shim – .1196mm Thick	9	850–2012	16	Washer, Lock (M12)
4	232-3710-01	4	Shim – .0239mm Thick	10	805–0035	6	Bolt, Place (5/8-11 x 1-1/2")
5	232-3710-02	2 4	Shim – .0747mm Thick				(Grade 8)
6	850-0079	4	Washer, Lock – Spring (3/4")	11	526-0416	6	Washer, Flat (5/8")
7	862-0008	4	Nut, Hex (3/4–10)	12	332–3196	1	Clamp, J
				13	403–4239	4	Spacer


Generator

For COMPLETE generator replacement use the 249–XXXX–XX Cummins/Onan identification number.

Frame 6 and Frame 7 generator component parts cannot be ordered from Onan. Refer to the Newage nameplate and supply all available information. Contact your nearest Newage distributor for assistance in ordering component parts. For COMPLETE generator replacement use the 249–XXXX–XX Onan identification number listed below.


Cummins/Onan Identification Number	Generator Model
249–5088–01	HC6G
249–5088–02	HC6H
249–5088–03	HC6J
249–5088–07	HC6K
249–5089–01	HC6G
249–5089–02	HC6H
249–5089–03	HC6J
249–5089–07	HC6K
249–5090–01	HC6G
249–5090–02	HC6H
249–5090–03	HC6J
249–5090–07	HC6K
249–5092–01	HC7E
249–5092–02	HC7F
249–5093–01	HC7E
249–5095–04	MV7E
249–5095–05	MV7F

Control Heater

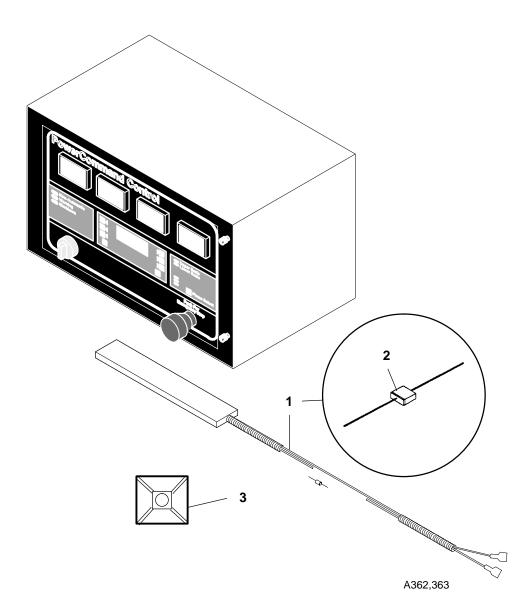

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater Assembly, Control – 100	2	357–0114	1	Rectifier (3 Amp)
			Watt (Includes Rectifier)	3	332–3338	1	Mount, Cable
	300-4515-01	1	120 Volt				
	300-4515-02	1	240 Volt				


Control Box

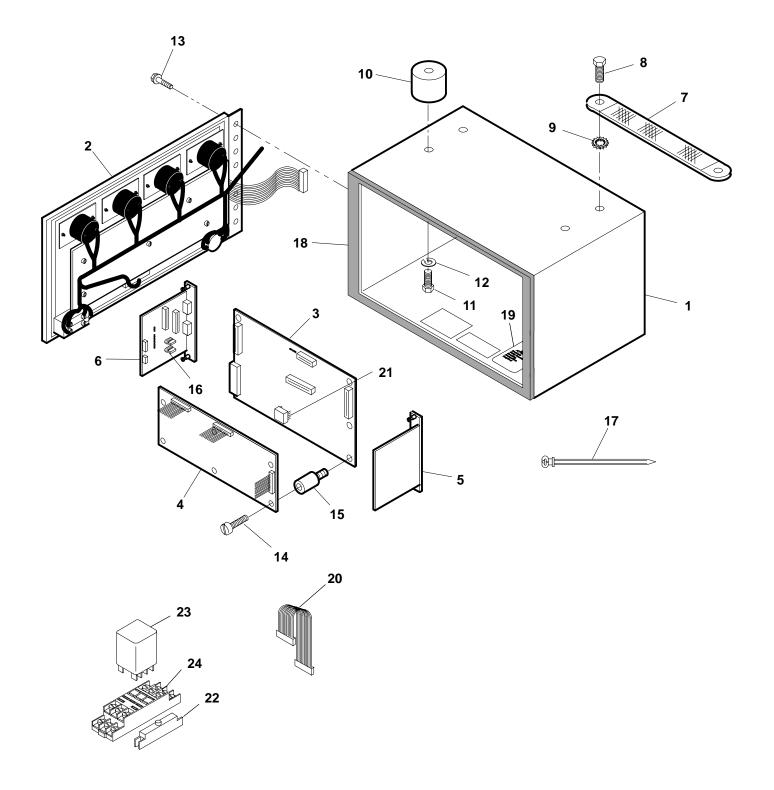

Control Box

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1687	1	Box Assembly – Control (Includes Gasket)	14	815–0549	6	Screw, Machine – Pan Head – Cross Recessed W/ET
2			Door Assembly – Control (See Separate Page For Components)	15	332–3235	6	(#6–32 x 1/4") Standoff, Board – PC (#6–32 IT x #6–32 ET x 3/4")
3	300–4079		Board, Printed Circuit – Digital	16	321-0307-03	2	Fuse, 5 Amp, 32V (F1, F3)
4			(A32) Board, Printed Circuit – Analog	17	332–1445	1	Tie, Cable (Quantity Used As Required) (Door Harness)
			(A33)	18	895–0359	1	Gasket, Door
	300-4080-01	1	Single Set	19	098–6940	1	Label, Static Sensitive
	300-4080-02	1	Paralleling Sets	20			Cable, Ribbon (Used On Early
5			Board, Printed Circuit –				PCC Models With Removable Ribbon Cables)
	300–4462		Customer Interface (A34) Single Set		338-2931-02	1	Customer Interface to
	300-4462-01		Paralleling Sets		550-2951-02	1	Digital
6	300–4819		Board, Printed Circuit – Engine Interface (A31)		338–2932–02	1	Customer Interface to Analog
7	337–0049	2	Strap, Bond		338-2932-01	1	Analog to Digital
8	800–0003	2	Screw, Cap – Hex Head		338–2933	1	Analog to Engine Interface
			(1/4–20 x 1/2")		338–2931–01	1	Engine Interface to Digital
9	856–0006	2	Washer, Lock – EIT (1/4")	21			Kit, Language Chip – EPROM
10	402–0527	4	Isolator, Vibration				(Includes Chip, Instruction
11	800–0024	4	Screw, Cap – Hex Head (5/16–18 x 1/2")		300-4721-04		Sheets and Warranty) Single Set
12	850-0045	4	Washer, Lock (5/16")		300-4721-16		Paralleling Sets
13	821-0004	4	Screw, Self–Locking – Hex	22	323-1411-01	2	Clip, Socket Mounting
			Washer Head (#10–32 x	23	307-1056-01	3	Relay – Control
			5/16")	24	323-1410-01	3	Socket, Relay


Control Door

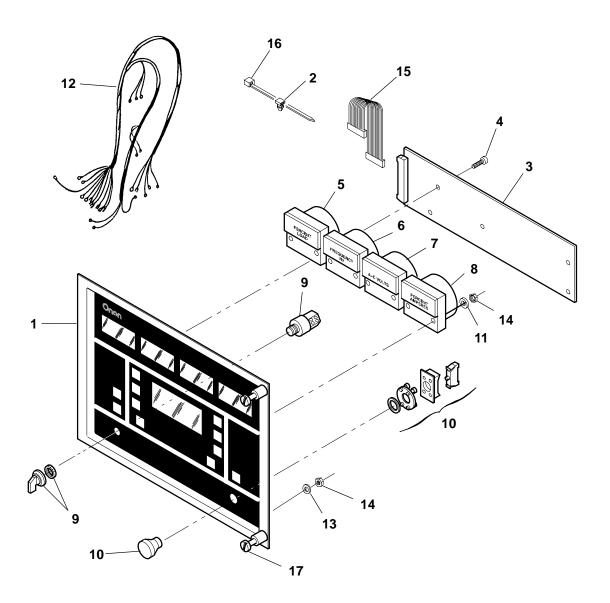

300–4311 300–4431

Control Door


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Door Assembly (Includes Membrane, Display Window and Parts Marked *)	9	308–0998	1	Switch, Selector – Run/Off/Auto (Knob Operated Switch) (S12)
			English		308–1045	1	Switch, Selector (Key
	300-4608-01	1	Single Set				Operated) (Includes 2 Keys)
	300-4608-02	1	Paralleling Sets				(Converts 308–0998 Knob
			Spanish				Operated Selector Switch To
	300-4610-01	1	Single Set				A Key Operated Selector
	300-4610-02	1	Paralleling Sets				Switch) (Not Illustrated)
2	332–3262	4	Mount, Tie – Cable		308–1046	2	Key, Replacement (Not
3			Board, Printed Circuit – Display				Illustrated)
			(A35)	10	308–0999	1	Switch, Pushbutton –
	300–4481	1	Single Set				Emergency Stop (S13)
	300–4286	1	Paralleling Sets	11	526-0257	8	Washer, Flat (#4)
4	815–0550	5	Screw, Machine – Pan Head – Cross Recessed W/ET (#6–32 x 3/8")	12	338–2937	1	Harness, Wiring – Control Door (Includes Selector Switch and Emergency Stop Switch)
5	302-2012	1	Wattmeter (0–125 %) (M24)	13	526-0417	2	* Washer, Flat (#4)
6	302-2010	1	Meter, Frequency (45–65 Hz)	14	870–1220	10	* Nut, Hex – W/ET (#4–40)
			(M23)	15	338–2934	1	Cable, Ribbon (10–1/2") (A32
7			Voltmeter, AC (M21)				to A35)
	302-2009-01	1	0-300/0-600 Volt	16	332–1445	4	Tie, Cable
	302-2009-02	1	0–750 Volt	17	406-0761-03	2	* Fastener, Door
	302-2009-03	1	0–5250 Volt				
	302-2009-04	1	0–15 kV				
8	302–2011	1	Ammeter (0–125 %) (M22)	* – F	Parts Included in	Door A	ssembly

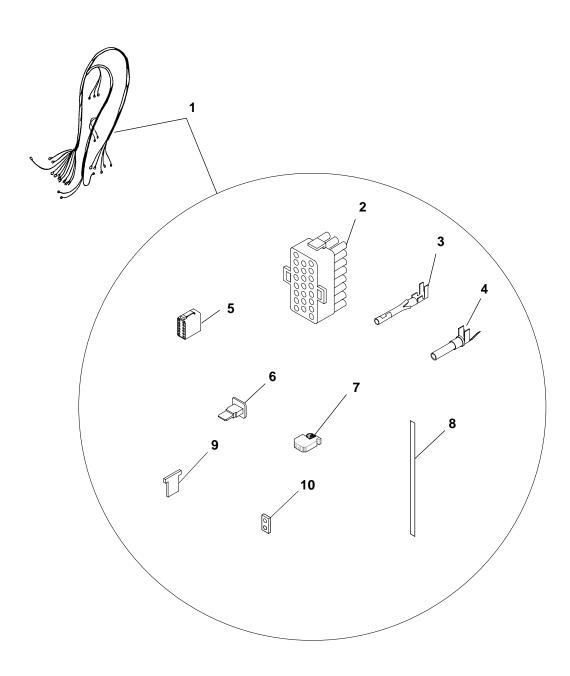

Interconnect Wiring Harness Control


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Interconnect	8	332–2842–21	1 1	Tag, Terminal (Used In TB1) # Single Set – Numbered
	338–3201	1	Single Set (Includes Parts Marked #)				1 Through 50 Paralleling Sets
	338–3202	1	Paralleling Sets (Includes Parts Marked +)		332–2842–2 ² 332–2842–22		+ Numbered 1 Through 50+ Numbered 51 Through
2			Plug, Connector – 23 Place				100
	323-1605-01	1	#+ Colored Black (P1)	9	332-2840-02	2 2	# Partition, Terminal – Single
	323-1605-03 323-1605-04		#+ Colored Grey (P2)#+ Colored Blue (P3)	10			Set (Used On TB1) Jumper, Terminal (Used On
3	020 1000 01	•	Socket, Contact (Used In P1,	10			TB1)
		- 4	P2, P3, P8)		332-2843-01	1 1	# Used On Single Level
	323–1614–01 323–1614–01	-	# Single Set		222 2042 0		Terminal Blocks + Used On Double Level
4	323–1614–01 323–1492	75 9	 Paralleling Sets Socket, Contact (Used In P1, P12) 		332–2843–0		+ Used On Double Level Terminal Blocks
5	323–1582	1	#+ Plug, Connector – 12 Place (Colored Grey) (P12)				
6 7	323–1583	1	#+ Wedge (Used In P12) Block, Terminal (Used In TB1)				
	332–3125–02	4	# Single Set (10 Pole Block, Single Level) Paralleling Sets				
	332–3125–02	5	+ 10 Pole Block, Single Level	# — F	Parts Included Harness	In 338–3	3201 Interconnect Wiring
	332–3125–04	10	+ Single Pole, Double Level	+ — F	Parts Included Harness	In 338–3	3202 Interconnect Wiring

Engine Wiring Harness

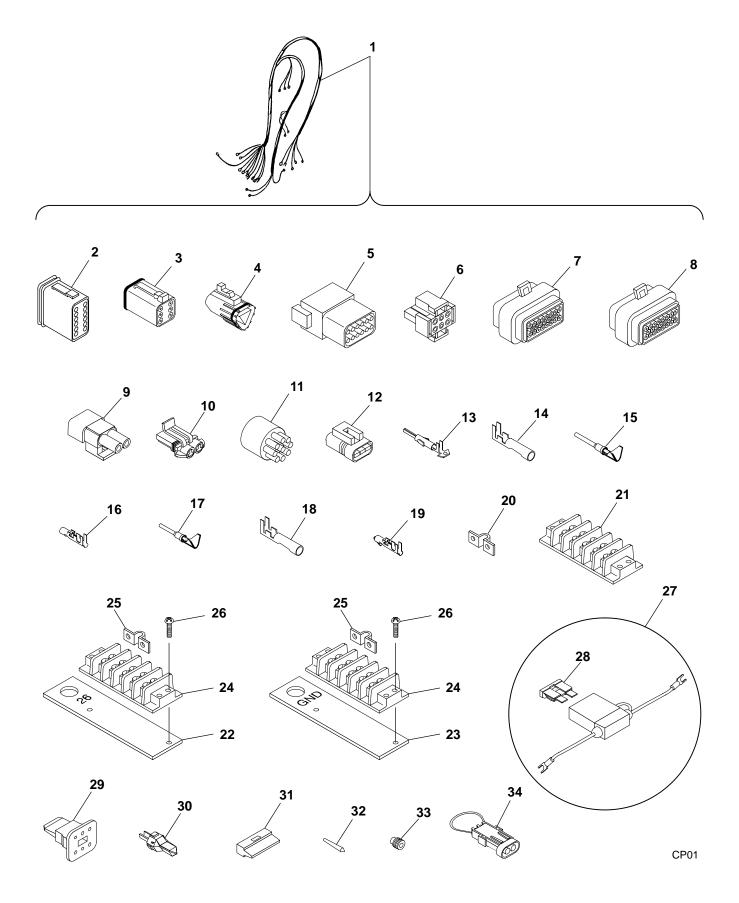


Engine Wiring Harness

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3377	1	Harness, Wiring – Engine to Control (Includes	18	323–1648	5	Terminal, Socket (Used in P10)
			Reference Numbers 2 Thru 34)	19	332–3096–01	4	Terminal, Socket (Used in E2, E4)
2	323–1582	1	Plug (12 Pin) (P13)	20	332–1043	4	Jumper
3	323–1623	1	Plug (6 Pin) (P7)	21	332-0604	1	Block, Terminal
4	323–1493	2	Plug (3 Pin) (P3)	22	319-2006-01	1	Bracket, Terminal Mounting
5	323–1580	1	Housing Receptacle (J12)				(T26)
6	323-1643-01	1	Housing Plug	23	319-2006-02	1	Bracket, Terminal Mounting
7	323-1605-04	1	Connector, Plug (Blue) (P5)				(Ground)
8	323-1605-02	2	Connector, Plug (Natural)	24	332-0604	2	Block, Terminal
			(P4, P6)	25	332–1043	8	Jumper
9	323–1637	3	Connector, Socket (E6, E7, P1)	26	815–0538	4	Screw, Machine – Round Head – Cross Recessed
10	323–1540	2	Connector, Socket (E2, E4)				W/IT (#8–32 x 1/2")
11	323–1730	2	Connector, Actuator (J14, J15)	27	321–0339	1	Holder Assembly, Fuse (Includes Fuse Holder,
12	323–1738	1	Connector, Socket				Fuse, and Spade Terminal)
13	323–1614–01	51	Socket, Contact (Used in P4, P5, P6)	28	321–0307–07	1	Fuse (20 Amp, 32 Volt, Yellow)
14	323–1444	6	Terminal, Socket (Used in E6, E7, P1)	29	323–1624	1	Wedge, Lock – Plug (Used in P7)
15	323–1491	6	Terminal, Socket	30	323-1503	2	Wedge, Lock (3 Pin)
			(Used in J12)	31	323–1581	1	Wedge, Receptacle (12 Pin)
16	323–1667	3	Terminal, Socket	32	323–1615	3	Plug (Used in P4, P5, P6)
			(Used in E1)	33	323–1445	6	Seal, Cable (Used in E2, E4,
17	323–1492	32	Socket, Female (Used in J11,				E6, E7, J11)
			J14, J15, P3, P7, P13)	34	338–3285	2	Harness, Jumper (E6, E7)

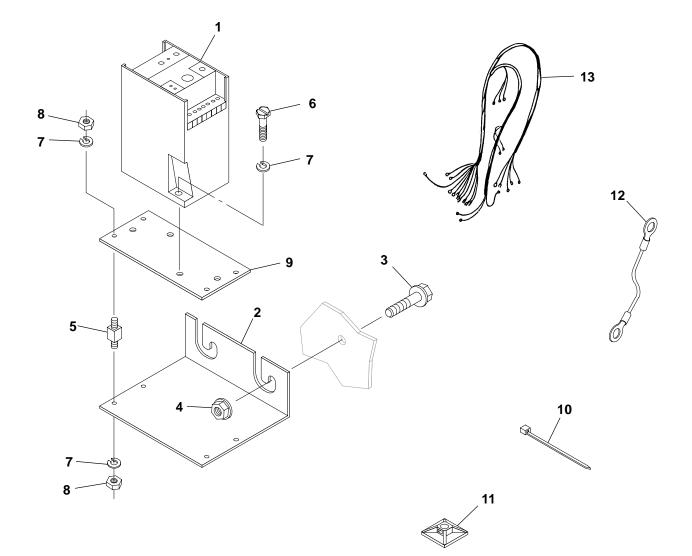

H550


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307–2843	1	Relay, Ground Fault Alarm	8	870–0221	10	Nut, Hex – W/ET (#8–32)
2	301–6987	1	Bracket, Watts Transducer	9	319–0030	1	Plate, Transducer
3	821–0017	2	Screw, Hex Locking Washer	10	332–1445	1	Tie, Wire (Use as Required)
			Head (5/16–18 x 3/4")	11	332–2420	2	Mount, Cable Tie
4	870–0257	2	Nut, Self-Locking (5/16–18)	12	226-4406-06	6 2	Lead (#1 Wire, 1/2" Ring to
5	402–0354	4	Mount, Shock (#8–32)				3/8" Ring – 24" Long)
6	812–0081	2	Screw, Round Head Steel Machine (#8–32 x 5/8")				(From Generator Neutral to Generator Grounding Bolt)
7	853–0005	8	Washer, Lock – W/ET (#8)	13	338–3233	1	Harness, Wiring – Relay

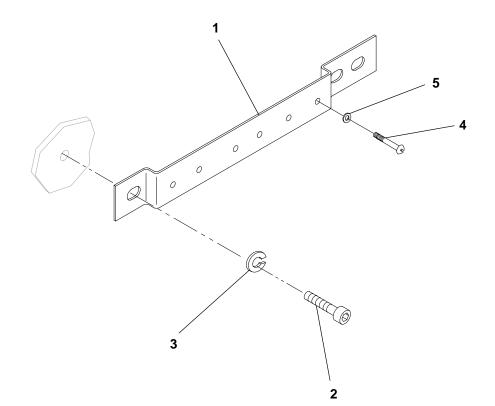

B312,313,372

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1293	1	Bracket	4	812–0070	4	Screw, Machine – Round
2	800–2080	2	Screw, Cap – Hex Head				Head (#6–32 x 1–1/4")
			(M10 x 12)	5	526-0002	4	Washer, Flat (#6)
3	850-2010	2	Washer, Lock – Spring (M10)				


Alarm Module

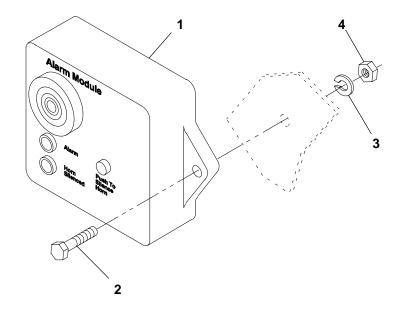

KA08


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	300–3998–01 800–0006	1 2	Module, Alarm Screw, Cap – Hex Head (1/4–20 x 7/8")	3 4	850–0040 862–0001	2 2	Washer, Lock (1/4") Nut, Hex (1/4–20)

Pyrometer

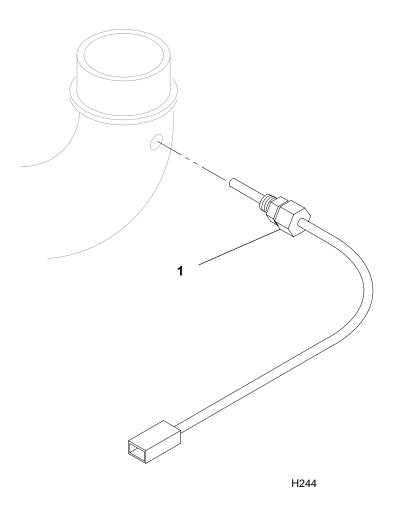


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	193–0446–00	D 1	Pyrometer (22.5") (E6, E7)				

Current Transformer

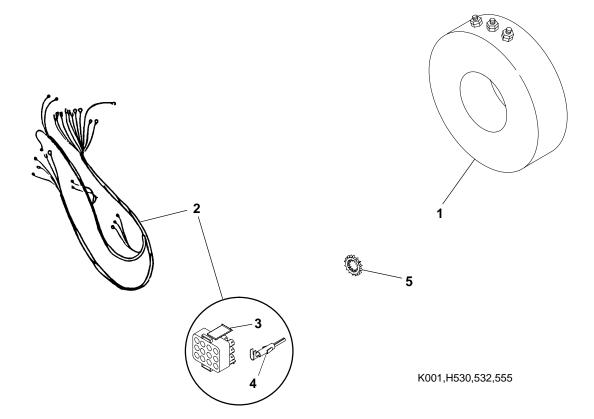


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Transformer, Current
			(CT21, CT22, CT23)
	302-1922-34	3	Ratio 1893/1 or 3786/1
	302-1922-36	3	Ratio 2141/1 or 4282/1
	302-1922-37	3	Ratio 2279/1 or 4558/1
	302-1922-38	3	Ratio 2366/1 or 4732/1
	302-1922-39	3	Ratio 2523/1 or 5046/1
	302-1922-41	3	Ratio 2839/1 or 5678/1
	302-1922-42	3	Ratio 3154/1 or 6308/1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	338–3019	1	Harness, Wiring (Includes Plug and Sockets) (P9 To CT21,22,23 and 5,6,7,8) (60")
3	323-1644-03	1	Plug – 12 Place (P9)
4	323–1648	10	Socket, Contact
5	856–0008	2	Washer, Lock – W/EIT (5/16") (Grounding Wires)

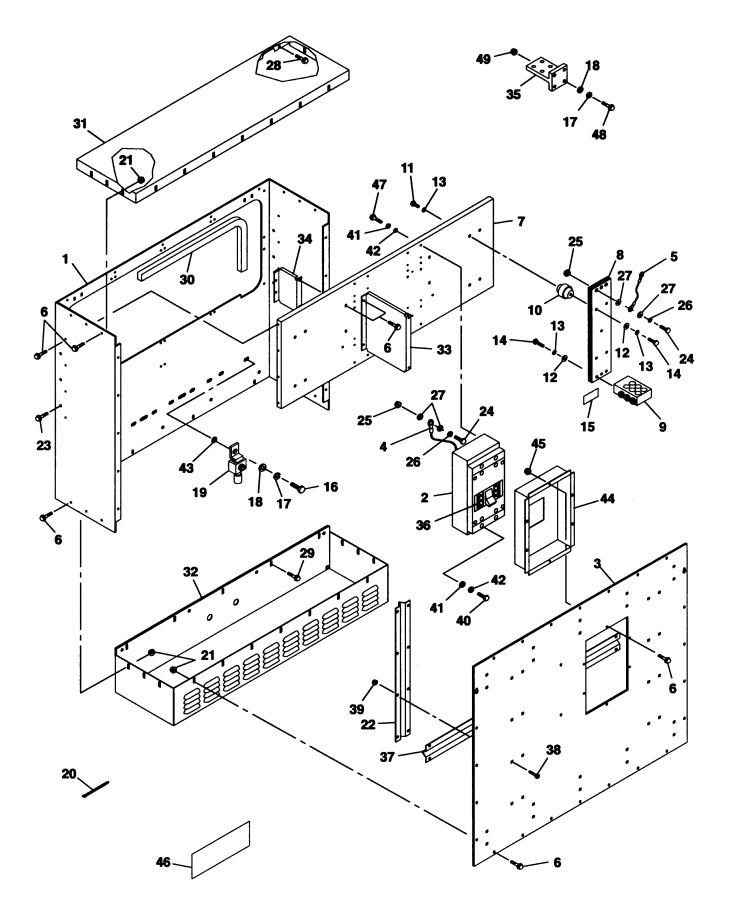

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1957	1	Wrapper, Circuit Breaker Breaker, Circuit – Three Pole, 600 Volt (Includes Lugs) (CB21) General Electric		226–4406–03	18	Circuit Breaker 320–1906–21 Merlin Gerin 1/2" ID Ring to 1/2" Ring – 30" Long
	320-1461-09) 1	Standard (1000 Amp) – DFHA, DFHB		226–4498–03	28	All Circuit Breakers Except
	320–1465–09	9 1	With Auxiliary Contacts (1000 Amp) – DFHA, DFHB		226–4498–03	32	320–1907–01 Circuit Breaker 320–1907–01
	320–1473–09	9 1	With Shunt Trip (1000 Amp) – DFHA, DFHB	5			Lead (#1 Wire) 1/2" ID Ring to 1/2" ID Ring – 39" Long (Not Used
	320–1493–09	9 1	With Shunt Trip and Auxiliary Contacts (1000 Amp) – DFHA, DFHB		226-4406-04	5	With Merlin Gerin Circuit Breakers) General Electric Circuit Breakers Except
	320–1906–20) 1	With Molded Case Switch (1000 Amp) – DFHA, DFHB		226-4406-04	6	320–1906–21 General Electric Circuit Breaker 320–1906–21
	320–1906–21	1	With Molded Case Switch (1200 Amp) Merlin Gerin	6			Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
	000 4700 04		Standard		821–0010	58	General Electric Circuit
	320–1783–01 320–1783 320–1783–02	1	1250 Amp 1600 Amp 2000 Amp – DFHC		821–0010	44	Breakers Merlin Gerin Circuit Breakers
	320–1783–05 320–1783–04		With Shunt Trip 1250 Amp 1600 Amp	7	319–1963	1	Bracket, Circuit Breaker Mounting General Electric Circuit
	320-1783-06		2000 Amp – DFHC With Shunt Trip,		319–1962	1	Breakers Merlin Gerin Circuit
	320–1783–09	ə 1	Auxiliary Contacts, and Bell Alarm 1250 Amp	8	337–2790	1	Breakers Bar Assembly Kit, Neutral (Includes Parts Marked *)
	320-1783-08 320-1783-10		1600 Amp 2000 Amp – DFHC	9 10	332–3303 332–2744–07	1 4	* Lug * Standoff, Insulator
	520-1785-10)	With Auxiliary Contacts and Bell Alarm	11	800-0050	4	* Screw, Cap – Hex Head (3/8–16 x 1")
	320-1783-18		1250 Amp	12	526-0029	7	* Washer, Flat (3/8")
	320-1783-17		1600 Amp		850-0050	11	* Washer, Lock – Spring (3/8")
	320–1783–19	9 1	2000 Amp – DFHC With Molded Case	14	800–0052	7	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")
			Switch	15	091–0002	1	* Strip, Copper (Used for
	320-1907-01		1600 Amp				wrapping ends of leads
3	320-1907-02	2 1	2000 Amp – DFHC Cover, Circuit Breaker Box				before securing to circuit breakers) (Quantity Used
5	319-1959-01	1	Merlin Gerin Circuit				as Required)
	319–1964	1	Breakers General Electric Circuit	16	800–0050	1	Screw, Cap – Hex Head (3/8–16 x 1")
			Breakers	17			Washer, Lock – Spring (3/8")
4			Lead (#1 Wire) General Electric		850–0050	1	All Circuit Breakers Except 320–1907–01
			1/2" ID Ring to 1" Strip – 39" Long		850-0050	26	320–1907–01 Circuit Breaker 320–1907–01
	226-4406-03	3 15	All Circuit Breakers Except	* Pa	rts Included in 3	337–279	0 Neutral Bar Assembly Kit
			320–1906–21	Con	tinued		


Continued...

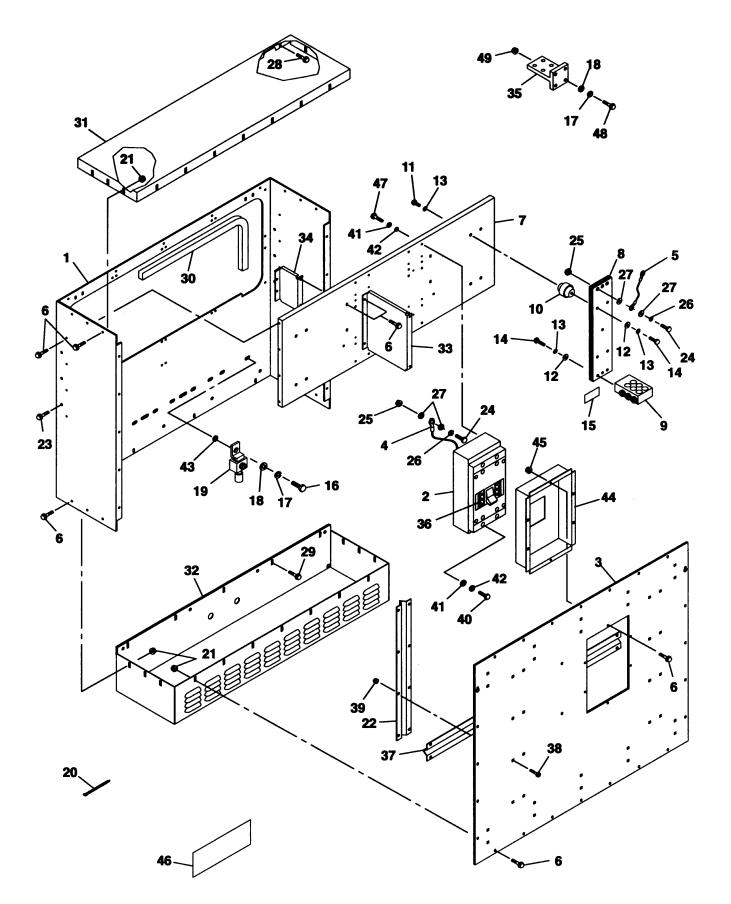

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			34	319–2316–01	1	Brace, Control Box Mount General Electric Circuit
18	526-0029	4	Washer, Flat (3/8") General Electric Circuit		319-2316-02		Breakers Merlin Gerin Circuit
	526–0029	2	Breakers Merlin Gerin Circuit Breakers Except	35	337–2789	2	Breakers Bar, Bus (Sold in Packages of 3 Pieces – 4 Pieces
	526–0029	38	320–1907–01 Merlin Gerin Circuit Breaker 320–1907–01				Required) (Used With Merlin Gerin Circuit Breakers)
19	332–2001	1	Lug, CSA Grounding – Solderless	36			Stripping, Weather – Bulk (Order by the Foot)
20	332–1389	1	Tie, Cable (Quantity Used as Required)		895–0182	-	General Electric Circuit Breakers (1 Foot
21	870-0494	26	Nut, Self-Retaining (1/4–20)				Required)
22 23	319–2398 821–0030	2 6	Brace, Cover (Vertical) Screw, Self-Locking – Hex Washer Head (3/8–16 x 1")		895–0182	_	Merlin Gerin Circuit Breakers (4 Feet Required)
			(Used With Merlin Gerin	37	319–2399	2	Brace, Cover (Horizontal)
24			Circuit Breakers Only) Screw, Cap – Hex Head	38	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
			(1/2–13 x 2")	39	870–0257	36	Nut, Locking (5/16–18)
	800-0094	15	General Electric Circuit Breakers	40	800–0033	4	Screw, Cap – Hex Head (5/16–18 x 2")
05	800–0094	32	Merlin Gerin Circuit Breakers	41	526–0115	8	Washer, Flat (5/16") General Electric Circuit
25	862–0005	15	Nut, Hex Head (1/2–13) General Electric Circuit Breakers		526–0115	4	Breakers Merlin Gerin Circuit Breakers
	862–0005	32	Merlin Gerin Circuit Breakers	42			Washer, Lock – Spring (5/16")
26	850-0060	15	Washer, Lock – Spring (1/2") General Electric Circuit		850–0045	8	General Electric Circuit Breakers
			Breakers		850-0045	4	Merlin Gerin Circuit
	850-0060	32	Merlin Gerin Circuit				Breakers
			Breakers	43	856-0010	1	Washer, Lock W/EIT (3/8")
27	526–0219	30	Washer, Flat (1/2") General Electric Circuit	44	319–2431–18	1	Cup, Circuit Breaker (Used with General Electric Circuit
	526-0219	64	Breakers Merlin Gerin Circuit	45	870–0212	6	Breakers) Nut, Self-Locking (1/4–20)
20		-	Breakers	45	070-0212	0	(Used with General Electric
28	821–0018	5	Screw, Self-Locking – Hex Washer Head	46	091–0002	1	Circuit Breakers) Strip, Copper (Used for
29	821–0011	5	(1/4–20 x 5/8") Screw, Self-Locking – Hex Washer Head				wrapping ends of leads before securing to circuit breakers) (Quantity Used
30			(1/4–20 x 7/8") Edging – Bulk (Order by the Foot – 3 Feet Required)				as Required) (Used with General Electric Circuit Breakers)
	508–1092	-	Circuit Breakers with Molded Case Switch	47	800–0031	4	Screw, Cap – Hex Head (5/16–18 x 1–1/2") (Used
	508–1109	-	Circuit Breakers without Molded Case Switch				on General Electric Circuit Breakers)
31	319-1961	1	Cover, Control Box (Top)	48	800–0054	13	Screw, Cap – Hex Head
32 33	319-1925	1	Cover, Control Box (Bottom) Brace, Cover				(3/8–16 x 2") (Used with Merlin Gerin Circuit Breaker
	319–1926–01		General Electric Circuit Breakers	49	862–0003	12	with Molded Case Switch) Nut, Hex (3/8–16) (Used with
	319–1926–02	2 1	Merlin Gerin Circuit Breakers				Merlin Gerin Circuit Breaker with Molded Case Switch)

* Parts Included in 337-2790 Neutral Bar Assembly Kit


Circuit Breaker UL Listed DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A

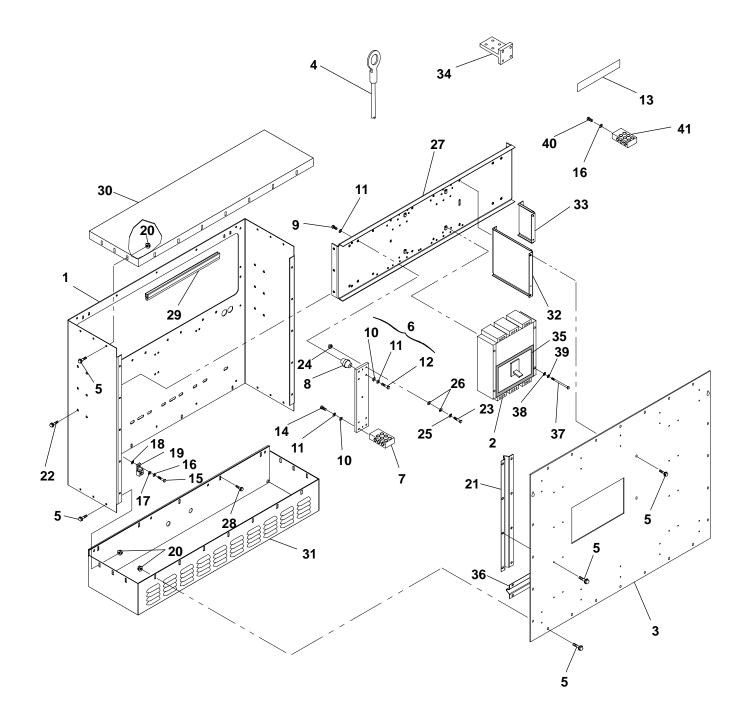

Circuit Breaker UL Listed DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184	1	Wrapper, Circuit Breaker Breaker, Circuit Standard	13	091–0002	1	 Strip, Copper (Used for wrapping ends of leads before securing to circuit
	320-1783-01	1	1250 Amp				Breakers) (Quantity Used
	320-1783	1	1600 Amp		000 0000	0	as Required)
	320-1783-02 320-1783-03	1 1	2000 Amp 2500 Amp	14	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)
	320-1763-03	I	With Shunt Trip	15	800–2086	1	Screw, Cap – Hex Head
	320-1783-05	1	1250 Amp	10	2000		(M10 x 25mm)
	320-1783-04	1	1600 Amp	16			Washer, Lock (M10)
	320-1783-06	1	2000 Amp		850–2010	10	1250 and 1600 Amp
	320-1783-07	1	2500 Amp				Breakers
			With Auxiliary Contacts		850–2010	1	2000 and 2500 Amp
	000 4700 40		and Bell Alarm	47	500 0400		Breakers
	320-1783-18	1	1250 Amp	17	526-2120	1	Washer, Flat (M10)
	320–1783–17 320–1783–19	1 1	1600 Amp 2000 Amp	18 19	856–0010 332–2001	1 1	Washer – W/EIT Lug, Solderless
	320–1783–19	1	2500 Amp 2500 Amp	20	870-0504	26	Nut, Self-Retaining (M6)
	520-1705-20	1	With Shunt Trip,	20	319–3286	20	Brace, Access Door (Vertical)
			Auxiliary Contacts and	22	821-6003-02	6	Screw, Hex Head
			Bell Alarm			-	(M8 x 20mm)
	320-1783-09	1	1250 Amp	23	800–2116	24	Screw, Cap – Hex Head
	320-1783-08	1	1600 Amp				(M12 x 50mm)
	320-1783-10	1	2000 Amp	24	860–2010	24	Nut, Hex (M12)
	320–1783–11	1	2500 Amp	25	850-2012	24	Washer, Lock – Spring (M12)
	000 4007 04		With Molded Case Switch	26	526-2140	48	Washer, Flat (M12)
	320-1907-01	1 1		27 28	319-3153	1	Bracket, Mounting
	320–1907–02	I	2000 Amp – DFHC, DFHD	20	821–2035	5	Screw, Self-Locking – Hex Washer Head (M6 x 25mm)
3	319-3266-01	1	Cover, Circuit Breaker Box	29	508–1109	_	Edging – Bulk (Order By The
4			Lead (Quantity Used As				Foot – 3 Feet Required)
			Required) (Without	30	319–1961	1	Cover, Control Box (Top)
			Markings)	31	319–1925	1	Cover, Control Box (Bottom)
	226-4404-04	1	6" Long	32	319-3252-02	1	Brace, Cover
	220-4404-04	I	.375" Stripped Terminal End to .375" Stripped	33	319–3253–02	1	Brace, Circuit Breaker Mounting
			End	34			Bar, Bus (Sold in Packages
			30" Long				of 3 Pieces)
	226-4498-03	1	1/2" Ring Terminal End		337–2789	2	1250 and 1600 Amp
			to 1/2" Ring Terminal				Breakers (4 Pieces
-			End		007 0700		Required)
5			Screw, Hex Head		337–2789	1	2000 and 2500 Amp Breakers (1 Piece
	821-6002-03	85	(M6 x 16mm) All Circuit Breakers				Required)
	021-0002-03	00	Except 320–1907–01	35	895–0182	_	Stripping, Weather – Bulk
	821–6002–03	89	Circuit Breaker 320–1907–01	00	000 0102		(Order by the Foot – 4 Feet Required)
6	300–4480	1	Bar Assembly, Neutral	36	319–3288	2	Brace, Access Door
			(Includes Parts Marked *)				(Horizontal)
7	332-3303-01	1	* Lug – 6X 600 MCM	37	800–2063	4	Screw, Cap – Hex Head
8	332-2744-07	4	* Standoff, Insulator		500 0400		(M8 x 50mm)
9	800–0048	4	* Screw, Cap – Hex Head	38	526-2100	4	Washer, Flat (M8)
10	526-2120	7	(3/8–16 x 3/4") * Washer, Flat (M10)	39 40	850-2008	4 9	Washer, Lock – Spring (M8) Screw, Cap – Hex Head
10 11	526–2120 850–2010	7 11	* Washer, Lock (M10)	40	800–2089	3	Screw, Cap – Hex Head (M10 x 40mm) (1250 and
12	800-0052	4	* Screw, Cap – Hex Head				1600 Amp Breakers)
	555 556 <u>2</u>	•	(3/8–16 x 1-1/2")	41	332-3303-01	3	Lug – 6X 600 MCM (1250
							and 1600 Amp Breakers)

* - Parts Included in 300-4480 Neutral Bar Assembly

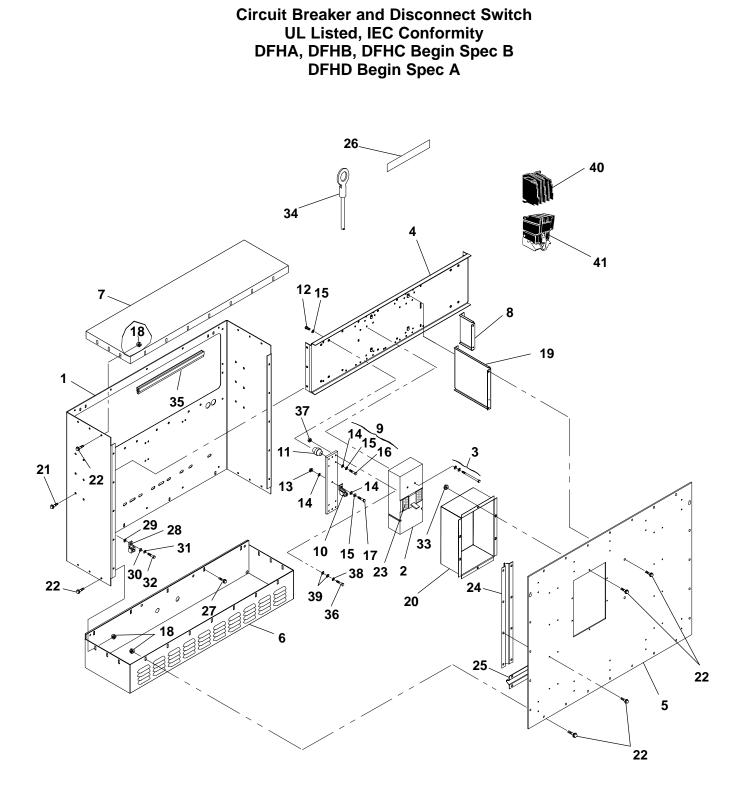


Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184	1	Wrapper, Circuit Breaker Breaker, Circuit – The following Circuit Breakers and Disconnect Switches include mounting hardware.	26	091–0002	1	Strip, Copper (Used for wrapping end of leads before securing to Circuit Breaker) (Quantity Used as Required)
	320–1964–02	1	Three Pole 1000 Amp	27	821–2034	5	Screw, Self-Locking – Hex Washer Head (M6 x 20mm)
	320-1964-01	1	1200 Amp	28	332-2001	1	Lug, Solderless
			Four Pole (IEC)	29	856-0010	1	Washer – W/EIT (3/8")
	320-1964-07	1	1000 Amp – DFHC	30	526-2120	1	Washer, Flat (M10)
	320-1964-06	1	1250 Amp	31	850-2010	1	Washer, Lock (M10)
			Disconnect Switch	32	800-2086	1	Screw, Cap – Hex Head
	320-1992-01	1	1200 Amp				(M10 x 25mm)
3	320–1986–01	1	Package, Hardware – Circuit Breaker Mounting (Includes	33	870–2054	6	Nut, Locking – Hex Flange Head (M6)
			Screws, Nuts and Lock Washers) – Used With 320–1964–XX and	34			Lead (Quantity Used As Required) (Without Markings) (39")
			320–1992–01 Circuit Breakers		226-4406-03	1	1/2" Ring Terminal End to 1" Stripped End
4	319–3153	1	Bracket, Mounting		226-4406-04	1	1/2" Ring Terminal End
5	319–3300	1	Cover, Circuit Breaker Box		220 1100 01		to 1/2" Ring Terminal
6	319–1925	1	Cover, Control Box (Bottom)				End
7	319–1961	1	Cover, Control Box (Top)	35	508–1109	_	Edging – Bulk (Order by the
8	319-3253-01	1	Brace, Mounting	00	000 1100		Foot – 3 Feet Required)
9	300-4318	1	Bar Assembly, Neutral (All	36			Screw, Cap – Hex Head
U	000 1010	•	except 4 Pole Circuit	00			(M12 x 40mm)
			Breakers) (Includes Parts Marked *)		800–2114	10	3 Pole Breakers and Disconnect Switches
10	332-2001	3	* Lug, Solderless		800–2114	8	4 Pole Breakers
11	332-2744-07	2	* Standoff, Insulator	37			Nut, Hex (M12)
12	800-0048	2	* Screw, Cap – Hex Head		860–2010	10	3 Pole Breakers and
			(3/8–16 x 3/4")				Disconnect Switches
13	862-0003	3	* Nut, Hex (3/8")		860–2010	8	4 Pole Breakers
14	526-0029	8	* Washer, Flat (3/8")	38			Washer, Lock – Spring (M12)
15	850-0050	7	* Washer, Lock – Spring (3/8")		850-2012	10	3 Pole Breakers and
16	800-0051	2	* Screw, Cap – Hex Head				Disconnect Switches
			(3/8–16 x 1-1/4")		850-2012	8	4 Pole Breakers
17	800–0052	3	* Screw, Cap – Hex Head	39			Washer, Flat (M12)
			(3/8–16 x 1-1/2")		526–2140	20	3 Pole Breakers and
18	870–0504	30	Nut, Self-Retaining (M6)				Disconnect Switches
19	319-3252-01	1	Brace, Cover		526–2140	16	4 Pole Breakers
20	319-2431-28	1	Cup, Circuit Breaker				Accessories, Circuit
21	821-6003-02	6	Screw, Hex Head				Breaker: The following
			(M8 x 20mm)				are used on 320–1964–XX
22	821-6002-03	91	Screw, Hex Head				Circuit Breakers
			(M6 x 16mm)	40	320-1977-01	1	Switches – Includes 1
23	895–0182	_	Stripping, Weather – Bulk				Trip Alarm and 1
			(Order by the Foot – 1 Foot				Auxiliary Contact
			Required)	41	320-1977-03	1	24 Volt Shunt Trip
24	319–3286	2	Brace, Access Door (Vertical)				
25	319–3288	2	Brace, Access Door				
			(Horizontal)	* – F	Parts Included in	n 300–43′	18 Neutral Bar Assembly

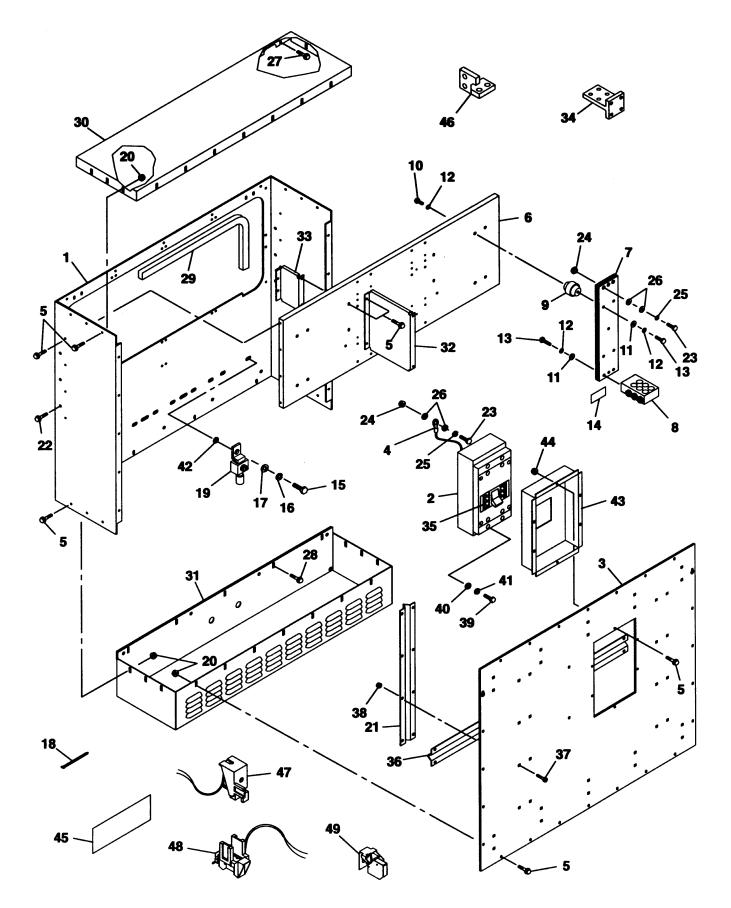


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1957	1	Wrapper, Circuit Breaker Breaker, Circuit (CB21) Three Pole Breakers	5			Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
	320–1730–04	1	Standard – 750 Volt, 1250 Amp		821–0010	58	General Electric Circuit Breakers
			(General Electric) – DFHA, DFHB		821–0010	44	Merlin Gerin Circuit Breakers
	320–1699	1	Standard – 660 Volt, 1600 Amp (Merlin Gerin)	6	319–1963	1	Bracket, Circuit Breaker Mounting General Electric Circuit
	320–1699–04	1	With Shunt Trip – 660 Volt, 1600 Amp		319-1962	1	Breakers Merlin Gerin Circuit
	320–1699–08	1	(Merlin Gerin) With Shunt Trip,	7	337–2790	1	Breakers Bar Assembly Kit, Neutral
			Auxiliary Contacts, and Bell Alarm – 660 Volt, 1600 Amp (Merlin Gerin)				(Used With 3 Pole Breakers) (Includes Neutral Bars, Labels, and Parts Marked *)
			Four Pole Breakers	8	332-3303	1	* Lug
	320-1730-08	1	Standard – 750 Volt,	9	332-2744-07		* Standoff, Insulator
			1250 Amp (General Electric) –	10	800-0050	4	* Screw, Cap – Hex Head (3/8–16 x 1") * Washer, Elet (2/8")
	000 4000 04		DFHA, DFHB	11	526-0029	7	* Washer, Flat (3/8")
	320-1699-21	1	Standard – 660 Volt,	12	850-0050	11	* Washer, Lock – Spring (3/8")
			1600 Amp (Merlin Gerin) – DFHB, DFHC	13 14	800–0052 091–0002	7 1	 * Screw, Cap – Hex Head (3/8–16 x 1-1/2") * Strip, Copper (Used for
	320–1699–25	1	With Shunt Trip – 660 Volt, 1250 Amp (Merlin Gerin) – DFHB, DFHC	14	031-0002	·	wrapping ends of leads before securing to circuit breakers) (Quantity Used as Required)
	320–1699–29	1	With Shunt Trip, Auxiliary Contacts,	15	800–0050	1	Screw, Cap – Hex Head (3/8–16 x 1")
			and Bell Alarm – 660 Volt, 1600 Amp (Martin Carin) – DELIB	16 17	850-0050	1	Washer, Lock – Spring (3/8") Washer, Flat (3/8")
3			(Merlin Gerin) – DFHB, DFHC Cover, Circuit Breaker		526–0029 526–0029	4 2	General Electric Circuit Breakers Merlin Gerin Circuit
5	319–1959–01	1	Merlin Gerin Three Pole Circuit Breakers	18	332-1389	2	Breakers Tie, Cable (Quantity Used As
	319–1959–01	1	Merlin Gerin Four Pole				Required)
			Circuit Breakers (Right Side Mounted) – DFHB	19	332–2001	1	Lug, CSA Grounding – Solderless
	319-1959-02	1	Merlin Gerin Four Pole	20	870–0494	26	Nut, Self-Retaining (1/4–20)
			Circuit Breakers (Left	21	319–2398	2	Brace, Cover (Vertical)
	319–1964	1	Side Mounted) – DFHB General Electric Circuit	22	821–0030	6	Screw, Self-Locking – Hex Washer Head (3/8–16 x 1")
			Breakers				(Used With Merlin Gerin
4			Lead (#1 Wire)	~~			Circuit Breakers)
			General Electric 1/2" ID Ring to 1/2" ID Ring – 39" Long	23	800–0094	15	Screw, Cap – Hex Head (1/2–13 x 2") General Electric Circuit
	226-4406-04	21	Three Pole Circuit Breaker		800-0094	15 30	Breakers Merlin Gerin Circuit
	226-4406-04	18	Four Pole Circuit Breaker		000-0034	50	Breakers
			Merlin Gerin	* Do	rte Included in t	337_ 370	0 Neutral Bar Ascombly Kit
	226 1100 02	22		Pa		551-218	00 Neutral Bar Assembly Kit
	226–4498–03	52	1/2" ID Ring to 1/2" ID Ring – 30" Long	Con	tinued		

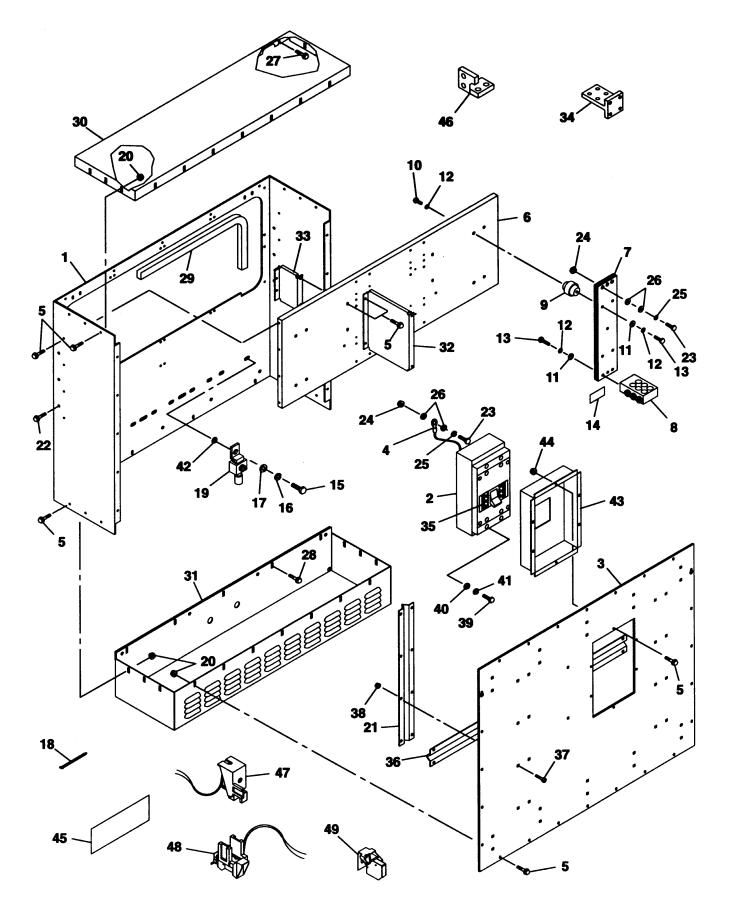

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			36	319–2399	2	Brace, Cover (Horizontal)
0.4				37	816–0098	36	Bolt, Carriage
24	862-0005	15	Nut, Hex Head (1/2–13) General Electric Circuit	38	870–0257	36	(5/16–18 x 5/8") Nut, Locking (5/16–18)
	002-0003	10	Breakers	39	800-0033	4	Screw, Cap – Hex Head
	862-0005	30	Merlin Gerin Circuit				(5/16–18 x 2")
			Breakers	40	526-0115	4	Washer, Flat (5/16")
25	850-0060	15	Washer, Lock – Spring (1/2") General Electric Circuit	41	850–0045	4	Washer, Lock – Spring (5/16")
	850-0000	15	Breakers	42	856-0010	1	Washer, Lock W/EIT (3/8")
	850-0060	30	Merlin Gerin Circuit	43	319-2431-20		Cup, Circuit Breaker (Used
			Breakers				with General Electric Circuit
26			Washer, Flat (1/2")				Breakers)
	526-0219	30	General Electric Circuit	44	870–0212	6	Nut, Self-Locking (1/4–20)
	526-0219	60	Breakers Merlin Gerin Circuit				(Used with General Electric Circuit Breakers)
	520-0215	00	Breakers	45	091–0002	1	Strip, Copper (Used for
27	821–0018	5	Screw, Self-Locking –			-	wrapping ends of leads
			Hex Washer Head				before securing to circuit
00	004 0044	-	(1/4–20 x 5/8")				breakers) (Quantity Used
28	821–0011	5	Screw, Self-Locking – Hex Washer Head				as Required) (Used with General Electric Circuit
			$(1/4-20 \times 7/8")$				Breakers)
29	508–1109	_	Edging – Bulk (Order by the	46			Lug, Breaker
			Foot – 3 Feet Required)		320-1755-05	53	General Electric 3 Pole
30	319–1961	1	Cover, Control Box (Top)		000 4755 05		Circuit Breakers
31 32	319–1925	1	Cover, Control Box (Bottom) Brace, Cover		320-1755-05	5 4	General Electric 4 Pole Circuit Breakers
52	319–1926–01	1	General Electric Circuit	47	320-1749-04	+ 1	Trip, Shunt (1250 Amp
			Breakers				General Electric Circuit
	319-1926-02	2 1	Merlin Gerin Circuit				Breaker)
00			Breakers	48	320-1748-04	1	Alarm, Bell (1250 Amp
33	319–2316–01	1	Brace, Control Box Mount General Electric Circuit				General Electric Circuit Breaker)
	313-2310-01	I	Breakers	49	320-1747-08	3 1	Contact, Auxiliary (1250 Amp
	319-2316-02	2 1	Merlin Gerin Circuit				General Electric Circuit
			Breakers				Breaker)
34	337–2789	2	Bar, Bus (Sold in Packages	* 🗖 -	ata ha ah ada al in	007 0700	
			of 3 Pieces – 4 Pieces Required) (Used With	" Pa	ints included in	337-2790	Neutral Bar Assembly Kit
			Merlin Gerin Circuit				
			Breakers)				
35			Stripping, Weather – Bulk				
			(Order by the Foot)				
	895–0182	—	General Electric Circuit Breakers (1 Foot				
			Required)				
	895–0182	_	Merlin Gerin 3 Pole				
			Circuit Breakers (4 Feet				
	005 0400		Required)				
	895–0182	-	Merlin Gerin 4 Pole Circuit Breakers (6 Feet				
			Required)				
			(toquirou)				



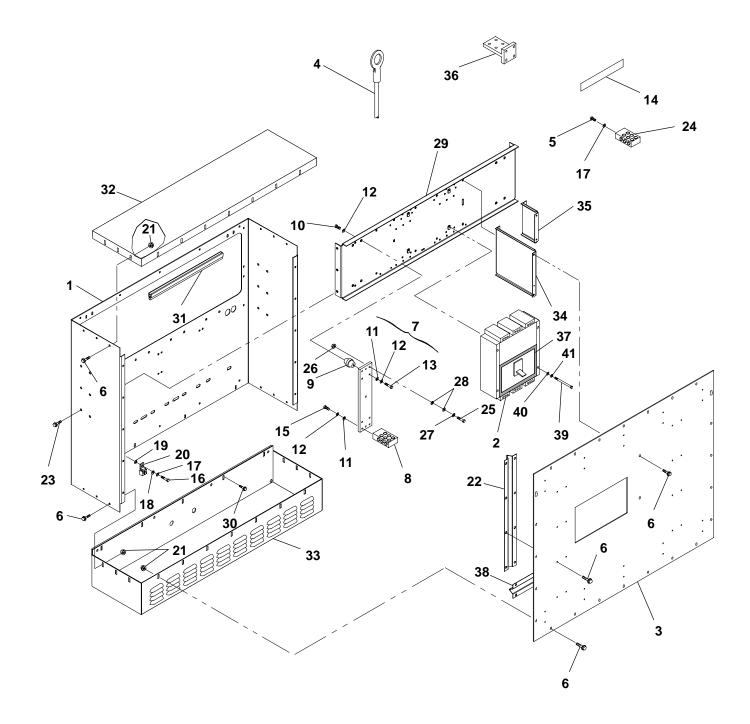


Circuit Breaker Non-UL Listed DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184	1	Wrapper, Circuit Breaker Breaker, Circuit Three Pole Breakers Standard	4			Lead (Quantity Used As Required) (Without Markings) 6" Long
	320–1699 320–1699–02	1 2 1	1600 Amp 2000 Amp – DFHC, DFHD With Shunt Trip		226–4404–04	1	.375" Stripped Terminal End to .375" Stripped End 30" Long
	320–1699–04 320–1699–06		1600 Amp 2000 Amp – DFHC, DFHD		226–4498–03	1	1/2" Ring Terminal End to 1/2" Ring Terminal End
			With Shunt Trip, Auxiliary Contacts and Bell Alarm	5	800–2089	9	Screw, Cap – Hex Head (M10 x 40mm) Three Pole Circuit
	320-1699-08		1600 Amp			-	Breakers
	320-1699-10) 1	2000 Amp – DFHC, DFHD		800–2089	12	Four Pole Circuit Breakers
			Four Pole Breakers Standard	6			Screw, Hex Head (M6 x 16mm)
	320–1699–21	1	1600 Amp – DFHB, DFHC, DFHD		821-6002-03	89	Three Pole Circuit Breakers
	320–1699–23	8 1	2000 Amp – DFHC, DFHD		821–6002–03		Four Pole Circuit Breakers
	320–1699–25	5 1	With Shunt Trip 1600 Amp – DFHB, DFHC, DFHD	7	300–4480	1	Bar Assembly, Neutral – Three Pole Circuit Breakers (Includes Parts Marked *)
	320–1699–27	' 1	2000 Amp – DFHC, DFHD	8 9	332–3303–01 332–2744–07	1 4	* Lug – 6X 600 MCM * Standoff, Insulator
			With Shunt Trip, Auxiliary Contacts and	10	800–0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")
	320-1699-29) 1	Bell Alarm 1600 Amp – DFHB,	11 12	526–2120 850–2010	7 11	* Washer, Flat (M10)* Washer, Lock (M10)
	320-1699-31		DFHC, DFHD	13	800-0052	4	* Screw, Cap – Hex Head (3/8–16 x 1-1/2")
3	320-1699-31	1	2000 Amp – DFHC, DFHD Cover, Circuit Breaker Box	14	091–0002	1	 * Strip, Copper (Used for wrapping ends of leads
0	319–3266–01 319–3266–02		Three Pole Circuit Breakers Four Pole Circuit Breakers				before securing to circuit Breakers) (Quantity Used as Required)
				15	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)

* - Parts Included in 300-4480 Neutral Bar Assembly

Continued...



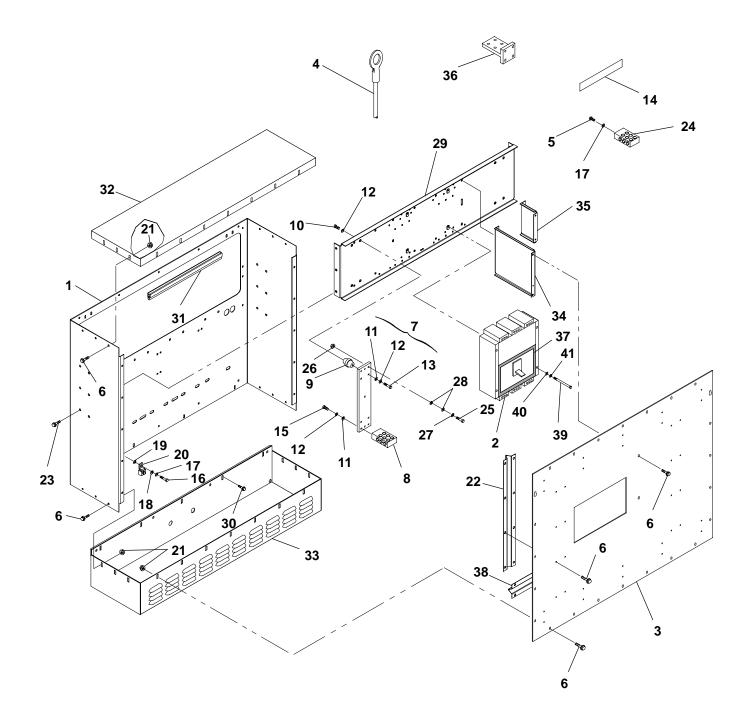

Circuit Breaker Non-UL Listed DFHA, DFHB, DFHC Begin Spec B DFHD Begin Spec A

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			31	508–1109	-	Edging – Bulk (Order By The Foot – 3 Feet Required)
16	800–2086	1	Screw, Cap – Hex Head	32	319–1961	1	Cover, Control Box (Top)
			(M10 x 25mm)	33	319–1925	1	Cover, Control Box (Bottom)
17			Washer, Lock (M10)	34	319-3252-02	2 1	Brace, Cover
	850–2010	10	Three Pole Circuit Breakers	35	319-3253-02	2 1	Brace, Circuit Breaker
	850–2010	13	Four Pole Circuit Breakers				Mounting
18	526-2120	1	Washer, Flat (M10)	36	337–2789	2	Bar, Bus (Šold in Packages
19	856-0010	1	Washer, W/EIT				of 3 Pieces) (4 Pieces
20	332–2001	1	Lug, CSA Grounding –				Required)
			Solderless	37		_	Stripping, Weather – Bulk
21	870–0504	26	Nut, Self-Retaining (M6)				(Order by the Foot)
22			Brace, Access Door (Vertical)		895–0182	_	Three Pole Circuit
	319–3286	2	Three Pole Circuit Breakers				Breakers (4 Feet
	319–3286	1	Four Pole Circuit Breakers				Required)
23	821-6003-02	6	Screw, Hex Head		895–0182	_	Four Pole Circuit
			(M8 x 20mm)				Breakers (6 Feet
24			Lug – 6X 600 MCM				Required)
	332-3303-01	3	Three Pole Circuit Breakers	38	319–3288	2	Brace, Access Door
	332-3303-01	4	Four Pole Circuit Breakers				(Horizontal)
25	800–2116	24	Screw, Cap – Hex Head	39	800–2063	4	Screw, Cap – Hex Head
			(M12 x 50mm)				(M8 x 50mm)
26	860-2010	24	Nut, Hex (M12)	40	526-2100	4	Washer, Flat (M8)
27	850-2012	24	Washer, Lock – Spring (M12)	41	850–2008	4	Washer, Lock – Spring (M8)
28	526-2140	48	Washer, Flat (M12)				
29	319–3153	1	Bracket, Mounting	* – F	Parts Included i	n 300–44	80 Neutral Bar Assembly
30	821–2035	5	Screw, Self-Locking – Hex				-
			Macharlland (MC v OFmun)				

Washer Head (M6 x 25mm)

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
_							
091–0002, 59 , 69 , 71	61, 63, 65, 67,	130–4496, 25		130–5016–0		232–3849, 39	
098–6940, 45		130–4497, 25		130–5020–0		232–3938, 21	
098–7182–01,	. 11	130–4498, 25		130–5021, 2		232–3939, 21	
098–7182–02,		130–4499, 25		130–5022, 2		232–3941–01	
123-2142-02,		130–4503, 23	s, 25	130–5023, 2	1	232–3941–02	2, 40
128–0108, 11		130–4546, 11		130–5024, 2	1	232–3941–03	8, 40
130–0449, 15 ,	17	130–4552, 13		130–5025, 2	21	232–3941–04	l, 40
130–3588, 23 ,		130–4570, 15	5, 17	130–5039–0	02, 17	232–4001, 21	, 28
		130–4571, 15	i, 17	130–5044–0	02, 27	232–4019–02	2, 27
130-3592-01,		130–4573, 21		130–5086–0	02, 27	249–5088–01	, 42
130-3592-02,		130–4574, 21		130–5210, 2	23, 25, 27	249–5088–02	2, 42
130–3660–01,	21	130–4606, 28	;	140–1260, 8	s, 9	249-5088-03	3, 42
130–3713, 15	45	130–4625, 21		140–1545, 9)	249–5088–07	′, 42
130–3714–01,		130–4626, 21		140–1548, 8	s, 9	249–5089–01	, 42
130–3714–02,	15	130–4649, 11		140–2052, 9)	249–5089–02	2, 42
130–3715, 15		130–4650, 11		140–2301, 9)	249–5089–03	8, 42
130–3766, 15 ,		130–4651, 11		140–2409, 9)	249–5089–07	′ , 42
130–3767, 15 ,		130–4889–02	., 27	140–2410, 9)	249–5090–01	, 42
130–3769, 15 ,		130–4890–02	., 27	140–2501, 8	}	249–5090–02	<u>2</u> , 42
130–3770, 15 ,		130–4893–03	, 27	140–2502, 8	}	249–5090–03	8, 42
130–3772, 15 ,		130–4893–04	, 27	140–2508, 8	8, 9	249–5090–07	′, 42
130–3773, 15 ,	17	130–4894, 27	,	140–3018, 8	s, 9	249–5092–01	, 42
130–3774, 15 ,	17	130–4923–02	, 27	140–3020, 8	s, 9	249–5092–02	2, 42
130–3969, 17		130–4924–02	., 27	140–3026, 8	8, 9	249–5093–01	
130–4362, 23 ,	25	130–4925–02	, 27	140–3163, 8		249–5095–04	, 42
130–4436, 23		130–4926–02		149–2228, 1		249–5095–05	
130–4439–01,	23, 25	130–4927–02		155–0899, 1		300–3998–01	
130–4439–02,	23, 25	130–4941–02		155–2503, 1		300–4079, 45	
130–4456, 23 ,	25	130–4942–02		155–2514, 1		300-4080-01	
130–4457, 23 ,	25	130–4943–02		155–3021, 1		300-4080-02	
130–4458, 23		130–4944, 27		193-0446-0		300–4286, 47	
130–4473, 23		130-4948-02		193–0465, 7		300–4318, 65	
130–4474, 23		130-4949-02		193–0468, 2		300–4462, 45	
130–4476, 28		130–4982, 17		226–4115, 1		300-4462-01	
130–4477, 21 ,	28	130-4988-02		226-4404-0		300–4480, 63	
130–4478, 28		130-4989-02		226-4406-0		300–4481, 47	•
130–4479, 28		130-4990-02			94, 59 , 65 , 67	300–4515–01	
130–4481, 28		130-4991-02		226-4406-0		300-4515-02	
130–4482, 28							
130–4490, 25		130–4992–02 130–5010–02		232-3710-0	03, 59 , 63 , 67 , 71	300-4608-01 300-4608-02	
130–4493, 23		130-5010-02		232-3710-0			
130–4494, 23						300-4610-01	
130–4495, 25		130–5015–02	., 21	232–3710–0	JO, 41	300–4610–02	., 47

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
300-4721-04	, 45		1, 33, 61, 63, 65,	319–3263, 37	,	320-1755-05	, 69
300–4721–16	, 45	69, 73		319–3264, 33	3	320–1783, 59	, 63
300–4819, 45		319–1926–0		319–3265, 33	3	320-1783-01	, 59 , 63
301–6987, 52		319–1926–0		319–3266–01	, 63 , 71	320-1783-02	, 59 , 63
302–1922–34	, 56	319–1957, 3		319–3266–02	2, 71	320-1783-03	, 63
302–1922–36	, 56	319–1959–0		319–3267, 37	,	320-1783-04	, 59 , 63
302–1922–37	, 56	319–1959–0		319–3268, 37	,	320-1783-05	, 59 , 63
302–1922–38	, 56	319–1961, 3 69 , 73	1, 33, 61, 63, 65,	319–3269, 37	,	320-1783-06	, 59, 63
302–1922–39	, 56	319–1962, 5	9, 67	319–3270–03	8, 37	320-1783-07	, 63
302–1922–41	, 56	319–1963, 5	9, 67	319–3270–04	l, 37	320-1783-08	, 59 , 63
302–1922–42	, 56	319–1964, 5	9, 67	319–3275, 37	,	320-1783-09	, 59 , 63
302–2009–01	, 47	319–2006–0	1, 51	319–3276, 37	,	320-1783-10	, 59 , 63
302–2009–02	, 47	319-2006-0	2, 51	319–3277, 37	,	320-1783-11	, 63
302–2009–03	, 47	319–2236, 7		319–3281–01	, 37	320-1783-17	, 59 , 63
302–2009–04	, 47	319–2243, 3	5	319–3281–02	2, 37	320-1783-18	, 59 , 63
302–2010, 47		319–2244, 3	5	319–3283–01	, 37	320-1783-19	, 59 , 63
302–2011, 47		319–2316–0		319–3283–02	2, 37	320-1783-20	, 63
302–2012, 47		319–2316–0		319–3286, 33	8, 63, 65, 73	320-1906-20	, 59
307–1056–01	, 45	319–2378, 3		319–3288, 33	8, 63, 65, 7 3	320-1906-21	, 59
307–2621–02	, 7	319–2398, 3	1, 61, 67	319–3300, 65	i	320-1907-01	, 59 , 63
307–2711, 15 ,	, 17	319–2399, 3	1, 61, 69	320-1461-09), 59	320-1907-02	, 59 , 63
307–2843, 52		319-2431-1		320-1465-09	9, 59	320-1964-01	, 65
307–2859, 13		319–2431–2		320-1473-09	9, 59	320-1964-02	, 65
308–0998, 47		319–2431–2		320–1493–09	9, 59	320-1964-06	, 65
308–0999, 47		319–2767, 3		320–1699, 67	' , 71	320-1964-07	, 65
308–1045, 47		319–2771–0	3, 35	320–1699–02	2, 71	320-1977-01	, 65
308–1046, 47		319–2778, 3		320–1699–04	l, 67, 71	320-1977-03	, 65
309–0269, 7		319–2779–0	1, 35	320–1699–06	6, 71	320-1986-01	, 65
309–0607, 18		319–2779–0	2, 35	320–1699–08	8, 67 , 71	320-1992-01	, 65
309–0649, 11		319–2781–0	1, 35	320-1699-10), 71	321-0307-03	, 45
309_0665, 17		319–2781–0	2, 35	320–1699–21	, 67 , 71	321-0307-07	, 51
319–0030, 52		319–2814, 1	3	320–1699–23	8, 71	321–0339, 51	
319–0879, 35		319–2815, 1 1	1	320–1699–25	5, 67 , 71	323-1410-01	, 45
319–0881, 35	, 37	319–3153, 6	3, 65, 73	320–1699–27	7, 71	323-1411-01,	, 45
319–0883, 35		319–3184, 3	3, 63, 65, 71	320–1699–29	9, 67, 71	323–1444, 51	
319–1091, 35	, 37	319–3252–0	1, 65	320–1699–31	, 71	323–1445, 51	
319–1092, 37		319–3252–0	2, 63 , 73	320–1730–04	, 67	323–1491, 13	, 51
319–1093, 35	, 37	319–3253–0	1, 65	320–1730–08	8, 67	323–1492, 13	, 49, 51
319–1096, 35		319-3253-0	2, 63 , 73	320–1747–08	8, 69	323–1493, 51	
319–1203–01	, 35, 37	319–3258, 3	7	320–1748–04	, 69	323–1494, 13	
319–1293, 53		319–3260, 3	7	320–1749–04	, 69	323–1500, 13	
319–1687, 45							

Part No. Page	Part No. Page	Part No. Page	Part No. Page
222 1502 12	222 2001 29 61 62 65 67	220 2222 52	502 1720 17
323–1502, 13 323–1503, 51	332–2001, 38 , 61 , 63 , 65 , 67 , 73	338–3233, 52 338–3285, 51	503–1729, 17 503–1762, 15 , 17
323–1503, 51 323–1504, 13	332–2420, 52	338–3335–07, 13	503–1764, 15
323–1540, 51	332–2634, 7 , 11 , 35 , 37 , 40	338–3335–08, 13	503–1863, 25
323–1576, 13	332–2744–07, 59 , 63 , 65 , 67 ,	338–3377, 51	503–1870–10, 8 , 9
323–1580, 51	71	338–3463, 13	503–1870–11, 9
323–1581, 51	332–2840–02, 49	338–3594, 29	503–1870–12, 8
323–1582, 49 , 51	332–2842–21, 49	357–0030, 13	503–1870–14, 8 , 9
323–1583, 49	332–2842–22, 49	357–0114, 43	503–1872–01, 17 , 23 , 27
323–1605–01, 49	332–2843–01, 49	370–4038, 11	503–1872–02, 15 , 17 , 25
323–1605–02, 51	332–2843–05, 49	402–0354, 52	503–1872–04, 27
323–1605–03, 49	332–3008, 23 , 25	402–0527, 45	503–1872–05, 15 , 17 , 23 , 25
323–1605–04, 49 , 51	332–3023, 39	402–0610, 7 , 35	503–1872–06, 17
323–1614–01, 49 , 51	332–3024–14, 39	402–0729, 37	503–1872–07, 27
323–1615, 51	332–3096–01, 51	403–3846, 38	503–1872–09, 17 , 23 , 25
323–1623, 51	332–3125–02, 49	403–4211, 38	503–1872–10, 15
323–1624, 51	332–3125–04, 49	403–4239, 41	503–2017, 8 , 9
323–1637, 51	332–3196, 41	406–0761–03, 47	503–2031, 9
323–1643–01, 51	332–3235, 45	416–0446, 7	503–2102, 8 , 9
323–1644–03, 56	332–3262, 47	416–0639, 7	503–2112, 17
323–1648, 51 , 56	332–3303, 59 , 67	416–0680, 7	503–2113, 17
323–1652, 13	332–3303–01, 63 , 71 , 73	501–0520, 7	503–2114, 17
323–1667, 51	332–3338, 43	501–0522, 7	503–2115, 17
323–1708, 29	332–3440, 13	502–0827, 11	503–2116, 17
323–1709, 29	332_2001, 65	502–1146, 17	503–2118, 17
323–1718, 13	333–0438–05, 39	502–1162, 15 , 17 , 23 , 25	503–2123, 17
323–1730, 51	333–0438–06, 39	502–1257, 11	503–2124, 17
323–1738, 51	333–0639–01, 13 333–0639–02, 13	502–1259, 11	503–2127, 17
323–1765, 29	337–0039–02, 13 337–0049, 45	502–1260, 11	503–2130, 27
330–0141–03, 39		502–1261, 11	503–2131, 27
330–0141–04, 39	337–2789, 61 , 63 , 69 , 73 337–2790, 59 , 67	502–1282, 11	503–2132, 27
330–0142, 39	338–2931–01, 45	503–0685, 15 , 17 , 23 , 25	503–2135, 27
331–0042, 13	338–2931–01, 45	503–0970, 8 , 9	503–2157–01, 11
331–0554, 13	338–2932–01, 45	503–1418, 15 , 23 , 25	504–0028, 15
331–0555, 13	338–2932–01, 45	503–1620, 15 , 23 , 25	504–0171, 7 , 23 , 25
332–0604, 51	338–2933, 45	503–1634, 23	504–0175, 15 , 17
332–0941, 7 , 11	338–2934, 47	503–1634–01, 11	505–0011, 15 , 17
332–1043, 51	338–2937, 47	503–1634–03, 11	505–0019, 15
332–1389, 15 , 29 , 39 , 61 , 67	338–3019, 56	503–1726, 15 , 17 , 23 , 25	505–0020, 17
332–1445, 45 , 47 , 52	338–3201, 49	503–1727, 15 , 17 , 25	505–0022, 11
332–1468, 13	338–3202, 49	503–1728, 23 , 25	505–0044, 15 , 17
332–1469, 13	,		

Part No. Page	Part No. Page	Part No. Page	Part No. Page
505–0050, 11	525–0305, 5	800–0160, 15 , 17	821–0018, 31 , 61 , 69
505–0054, 15	525–0306, 5	800–0161, 38 , 41	821–0030, 61 , 67
505–0078, 11	526–0002, 53	800–0163, 40	821–0033, 15 , 17
505–0102, 7 , 23 , 25	526–0018, 40	800–0310–65, 27	821–2034, 65
505–0103, 15 , 17 , 18	526–0027, 15 , 17 , 21 , 23 , 25 ,	800–0310–68, 17	821–2035, 33 , 63 , 73
505–0106, 11	38, 40	800–0310–69, 17	821–5002–03, 11 , 15 , 35
505–0114, 15 , 17	526–0029, 59 , 61 , 65 , 67	800–0310–79, 17	821–5003–01, 35
505–0287, 17	526–0112, 15 , 18	800–0310–81, 17	821–5003–03, 8 , 9 , 15 , 17 ,
505–0324, 7 , 23 , 25	526–0115, 61 , 69	800–0310–97, 17	21, 23, 25, 27, 28, 35
505–0382, 17	526–0128, 11	800–2008, 39	821–5004–02, 11 , 15 , 17 , 35
505–0453–01, 17	526–0141, 35 , 37	800–2057, 28	821–5004–03, 11 , 15 , 21 , 23 , 25 , 28
505–0601, 17	526–0219, 17 , 27 , 61 , 69	800–2063, 63 , 73	821–6002–03, 33 , 37 , 63 , 65 ,
505–0605, 17	526–0240, 23 , 25	800–2080, 53	71
505–0607, 17	526–0257, 47	800–2085, 7	821–6003–02, 27 , 37 , 63 , 65 ,
505–0667, 17	526–0399–28, 17	800–2086, 27 , 35 , 37 , 63 , 65 ,	73
505–0758, 17	526–0399–62, 23 , 25	73	821–6003–03, 27
505–0812, 17	526–0416, 40 , 41	800–2087, 23 , 25 , 27	821–6004–01, 37
505–1429, 15 , 17	526–0417, 47	800–2088, 7	822–3047, 39
505–1440, 18	526–0444, 41	800–2089, 63 , 71	822–3075, 39
505–1441, 15 , 17	526–1115, 35 , 37	800–2110, 7	850–0040, 54
505–1442, 15 , 17	526–2100, 63 , 73	800–2112, 27	850–0045, 45 , 61 , 69
505–1508, 7	526–2120, 7 , 27 , 63 , 65 , 71 , 73	800–2113, 27	850–0050, 59 , 65 , 67
505–1547, 17	526–2140, 7 , 8 , 9 , 21 , 28 , 63 ,	800–2114, 65	850–0060, 17 , 27 , 61 , 69
505–1548, 17	65, 73	800–2116, 63 , 73	850–0070, 15 , 18
505–1549, 17	526–2141, 27	800–2201, 8 , 9 , 21	850–0079, 15 , 17 , 23 , 25 , 38 , 40 , 41
505–1553, 17	800–0003, 45	800–2543–05, 40	850–0114–07, 11
508–0228, 39	800–0006, 54	800–2543–08, 41	850–0114–10, 17
508–1090, 15 , 35 , 37	800–0024, 45	800–3017–52, 8 , 9 , 21 , 28	850–0114–11, 27
508–1092, 61	800–0031, 61	805–0035, 40 , 41	850–2003, 39
508–1109, 61 , 63 , 65 , 69 , 73	800–0033, 61 , 69	812–0067, 7	850–2004, 39
509–0341, 11	800–0048, 63 , 65 , 71	812–0070, 53	850–2005, 39
517–0021, 39	800–0050, 59 , 67	812–0081, 52	850–2008, 28 , 63 , 73
517–0131, 35 , 37	800–0051, 38 , 65	815–0447, 13	850–2010, 7 , 35 , 37 , 53 , 63 ,
517–0135, 37	800–0052, 59 , 63 , 65 , 67 , 71	815–0538, 51	65, 71, 73
517–0138–02, 13	800–0054, 11 , 61	815–0539, 13	850–2012, 40 , 41 , 63 , 65 , 73
518–0548–08, 15 , 17	800–0094, 27 , 61 , 67	815–0549, 45	850–2020, 8 , 9 , 21
518–0548–15, 11	800–0097, 27	815–0550, 47	853–0005, 52
518–0548–20, 23	800–0133, 15	816–0098, 31 , 61 , 69	856–0006, 35 , 37 , 45
518–0548–42, 37	800–0135, 15	821–0004, 45	856–0008, 56
518–0601, 5	800–0138, 18	821–0010, 31 , 59 , 67	856–0010, 7 , 38 , 61 , 63 , 65 , 69 , 73
518–0633, 25	800–0156, 23 , 25	821–0011, 31 , 61 , 69	860–2005, 39
520–0544, 11	800–0158, 15 , 17	821–0014, 37	860–2006, 39
525–0304, 5	800–0159, 27 , 38	821–0017, 52	

Part No. Page	Part No. Page	Part No. Page	Part No. Page
860–2008, 27 860–2010, 27 , 63 , 65 , 73 860–2059, 27 862–0001, 54 862–0003, 61 , 65 862–0005, 27 , 61 , 69 862–0007, 15 , 17 , 18	862–0008, 15 , 17 , 23 , 25 , 27 , 38 , 40 , 41 862–0016, 17 870–0131, 13 870–0183, 7 870–0212, 7 , 61 , 69 870–0221, 52 870–0257, 31 , 52 , 61 , 69	870–0281, 15 870–0494, 31 , 61 , 67 870–0504, 33 , 63 , 65 , 73 870–0550–05, 35 870–0550–07, 8 , 9 , 15 , 17 , 35 870–0550–09, 11 , 15 , 17 , 23 , 25 , 38	870–1220, 47 870–2054, 37 , 65 870–2055, 37 870–2056, 37 895–0182, 61 , 63 , 65 , 69 , 73 895–0359, 45



Onan Corporation 1400 73rd Avenue N.E. Minneapolis, MN 55432 612–574–5000 Telex: 275477 Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation Cummins is a registered trademark of Cummins Engine Company