


Parts Catalog

DQKB DQKC

Generator Set

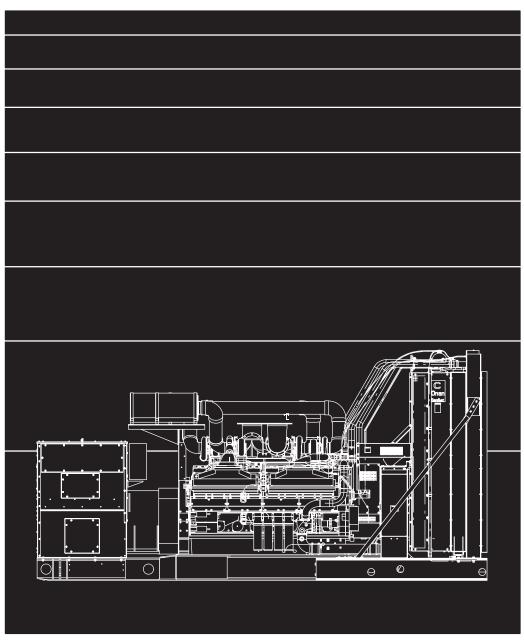

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION

AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

▲ DANGER

This symbol warns of immediate hazards which will result in severe personal injury or death.

△WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

△CAUTION

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS

△WARNING

Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

△WARNING

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

△WARNING

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

△WARNING

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This catalog applies to Onan Generator Models DQKB and DQKC as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set unless noted in the description column.

Engine parts that have been modified or added by Onan are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

Replacement Engine

Onan/Cummins Generator Model	Cummins Engine Model				
DQKB, DQKC (50 Hertz)	QSK60–G3 Technical Configuration Number D593002GX03				
DQKB, DQKC (60 Hertz)	OSK60-G6 Technical Configuration Number D593002GX03				

Replacement engines cannot be ordered from Onan. Order from your nearest Cummins distributor.

Generator Set Data Table

Model and		Battery				
Specification	Watts	Volts	Hertz	Wire	Phase	Voltage
1500DQKB/*	1,500,000	#	50	12	3	24VDC
1650DQKC/*	1,650,000	#	50	12	3	24VDC
1750DQKB/*	1,750,000	#	60	12	3	24VDC
2000DQKC/*	2,000,000	#	60	12	3	24VDC

^{* –} The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options or deviations from the standard model. The specification letter advances (A to B, B to C, etc.) with major manufacturing changes.

- Broad range reconnectible

Index

Adapter, Duct - Radiator, 17 Cover, Circuit Breaker - UL Listed, 55 Cover, Control Housing - Frame 7 Generators, 27 Aftercooler, 21 Cover, Control Housing - Frame 8 Generators, 29 Bar, Neutral - Circuit Breaker - Non-UL Listed, 61 Cover, Cutout - Control, 39 Cover, Damper - Remote Radiator, 13 Bar, Neutral - Circuit Breaker - UL Listed, 55 Cover, Disconnect Switch - Molded Case - UL LIsted, 59 Bar, Neutral - Disconnect Switch - Molded Case - UL Listed, 59 Cover, Engine Coolant Heater, 9 Bearing, Pillow Block - Radiator Fan, 17 Cover, Entrance Box, 25 Belt, Fan, 15 Block, Terminal - Engine Coolant Heater Control, 11 Exchanger, Heat - Fuel Cooler - Sets With Heat Exchanger Cooling - DQKC, 6 Board, Printed Circuit - Backplane, 41 Board, Printed Circuit - Base, 41 Fan. 17 Board, Printed Circuit - Control, 39 Fitting, Grease - Fan Shaft, 17 Board, Printed Circuit - Control Panel, 37 Frame, Control Panel, 37 Board, Printed Circuit - Fuel, 41 Frame, Mounting - Control Housing - Frame 8 Generators, Board, Printed Circuit - Generator Interface, 41 Board, Printed Circuit - Lonworks, 41 Fuse - Printed Circuit Board - Generator Interface and Board, Printed Circuit - Parallel, 41 Base Board, 41 Boot, Battery, 5 Box, Circuit Breaker - Non-UL Listed, 61 Gasket, Aftercooler, 21 Gasket, Cover - Control, 39 Box. Circuit Breaker - UL Listed. 55 Box, Control - Engine Coolant Heater, 11 Gasket, Heatsink - Control, 39 Gasket, Jacketwater, 20 Box, Control - Generator Set, 39 Gasket, Operator Panel, 37 Box, Disconnect Switch - Molded Case - UL Listed, 59 Box, Entrance, 25 Gasket, Switch Panel, 37 Gasket, Water Outlet Tube - Remote Radiator, 13 Box, Terminal - Generator Heater, 23 Gauge, Sight - Radiator, 17 Brace, Skid, 15 Generator, 31, 32, 33, 34, 35 Bracket, Control Mounting - Frame 7 Generators, 27 Guard, Damper - Remote Radiator, 13 Bracket, Isolator - Control, 39 Guard, Fan Drive, 15 Bracket, Mounting - Coolant Heater, 9 Bracket, PT Bus Mounting - Control, 39 Harness, Wiring - AC, 46 Bracket, Terminal Block - Control, 39 Harness, Wiring - AC - Engine Coolant Heater, 11 Breaker, Circuit - Non-UL Listed, 61 Harness, Wiring - Control, 44 Breaker, Circuit - UL Listed, 55 Harness, Wiring - Control Heater, 48 Bushing, Fan, 17 Harness, Wiring - Control Panel, 37 Bushing, Fan Pulley, 17 Harness, Wiring - DC - Engine Coolant Heater, 11 Harness, Wiring - Diode - Starter, 5 Cable, Battery, 5 Harness, Wiring - Engine Extension, 47 Cage, Card - Control, 41 Harness, Wiring - Ground Fault Relay, 49 Cap, Expansion Tank, 17 Harness, Wiring - Lonworks, 41 Cap, Radiator, 17 Harness, Wiring - Low Coolant Level Sender - Remote Cartridge, Heater – Generator Heater, 23 Radiator, 13 Clip, Socket Mounting - Relay, 42 Harness, Wiring - Low Coolant Level Sender - Sets Without Remote Radiator, 7 Control, Engine Coolant Heater, 11 Harness, Wiring – Parallel, 41 Control, PowerCommand, 39 Heater, Control, 48 Cooler, Fuel – Sets With Heat Exchanger Cooling – DQKC, Heater, Coolant, 9 Cooler, Fuel – Sets With Radiator Cooling, 17 Heater, Generator, 23 Core, Aftercooler, 21 Heatsink, Genset - Control, 39 Core, Jacketwater, 20 Hose, Engine Coolant Heater, 9 Cover, Box - Control, 39 Hose, Expansion Tank, 17 Cover, Card Cage, 41 Hose, Grease - Fan Shaft, 17 Cover, Circuit Breaker - Non-UL Listed, 61 Hose, Oil Drain, 5

Index

Hose, Overflow - Radiator, 17 Relay, Ground Fault, 49 Housing, Control - Frame 7 Generators, 27 Relay, Power - Engine Coolant Heater Control, 11 Housing, Control - Frame 8 Generators, 29 Relay, Run, 42 Housing, Operator Panel, 37 Sealant, Thread, 4 Housing, Switch Panel, 37 Sender, Low Coolant Level - Radiator Cooling, 19 Hub, Fan, 17 Sender, Low Coolant Level - Remote Radiator, 13 Isolator, Vibration - Control, 39 Sender, Low Coolant Level - Sets Without Remote Radiator, Isolator, Vibration - Control Housing - Frame 7 Generators, Shaft, Fan Drive, 17 Isolator, Vibration - Control Mounting Bracket - Frame 7 Shim, Generator Mounting, 22 Generators, 27 Shroud, Fan, 17 Skid, Generator Set, 22 Jacketwater, 20 Skid, Radiator, 17 Socket, Relay, 42 Lead, Circuit Breaker - Non-UL Listed, 63 Spacer, Engine Mounting, 22 Lead, Circuit Breaker - UL Listed, 57 Spacer, Generator Mounting, 22 Lead, Disconnect Switch - Molded Case - UL Listed, 59 Standoff, Insulator - Circuit Breaker - Non-UL Listed, 61 Line, Flexible - Fuel Cooler - Sets With Heat Exchanger Standoff, Insulator - Circuit Breaker - UL Listed, 55 Cooling – DQKC, 6 Standoff, Insulator - Disconnect Switch - Molded Case - UL Line, Fuel - Fuel Cooler, 17 Listed, 59 Line, Fuel - Fuel In, Fuel Out, 5 Strap, Ground – Circuit Breaker Box, 43 Line, Radiator Vent, 15, 17 Strap, Ground - Control Housing to Generator and Generator Control to Generator - Frame 7 Generators, 27 Line, Vent - Remote Radiator, 13 Strap, Ground – Engine to Skid, 5 Lug, Solderless - Circuit Breaker - Non-UL Listed, 61 Switch, Disconnect - Molded Case - UL Listed, 59 Lug, Solderless - Circuit Breaker - UL Listed, 55 Switch, Emergency Stop - Control Panel, 37 Lug, Solderless - Disconnect Switch - Molded Case - UL Listed, 59 Switch, Selector - Control Panel, 37 Lug, Solderless - Skid Mounted, 22 Tank, Aftercooler, 21 Membrane, Operator Panel, 37 Tank, Expansion – Radiator, 17 Membrane, Switch Panel, 37 Tank, Jacketwater, 20 Module, Voltage Regulator - Control, 39 Thermostat, Engine Coolant, 9 Mounting Hardware - Generator to Engine, 30 Transformer, Current, 53 Transformer, Current - Differential, 51 Tube, Engine Coolant Heater, 9 Panel, Control Housing - Frame 7 Generators, 27 Tube, Radiator - Lower, 19 Panel, Control Housing - Frame 8 Generators, 29 Tube, Radiator - Upper and Lower, 15 Panel, Operator, 37 Tube, Water Inlet and Outlet - Remote Radiator, 13 Panel, PowerCommand Control, 37 Panel, Switch, 37 Valve, Check - Radiator Vent Line, 15 Pulley, Fan, 17 Valve, Shutoff – Oil Drain, 5 Valve, Shutoff - Radiator, 19 Radiator, 17 Valve, Shutoff - Remote Radiator, 13 Radiator, Remote, 13 Relay, Alarm, 42 Wrapper, Fan Shroud, 17

Abbreviations


Some of the following abbreviations may be used throughout this Parts Catalog:

AC Amp A/R AVR AWG	Alternating Current Ampere As Required Automatic Voltage Regulator American Wire Gauge	mm MOH NFS NPT OD	Millimeter Mobile Off Highway Not For Sale National Pipe Thread Outside Diameter
DC Deg	Direct Current Degree	oz. PC	Ounce Printed Circuit
EFC	Electronic Fuel Control	Ph	Phase
EIT	External/Internal Tooth	PMG	Permanent Magnet Generator
EPROM	Erasable Programmable Read Only Memory	PT/CT	Potential Transformer/Current Transformer
ET	External Tooth	RFI	Radio Frequency Interference
GFI	Ground Fault Interrupter	RT	Right
ID	Inside Diameter	Spec	Specification
IEC	International Electrotechnical	Thk	Thick
	Commission	UL	Underwriters Laboratories Inc.
IT	Internal Tooth	UNC	Union National Coarse
kW	Kilowatt	UNF	Union National Fine
LPG	Liquid Petroleum Gas	VAC	Volts Alternating Current
LT	Left	VDC	Volts Direct Current
M(meter number)	Meter	W/(ET, IT, EIT)	With

Paint and Thread Sealant


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	25–0305	_	Onan Green Enamel (Non–Metallic) 12 oz. Pressurized	51	8–0601	-	Sealant, Thread (6 ml Tube)
5	25–0306	_	Spray Can Quart Can				
5	25-0304	_	Gallon Can				

Engine Accessories

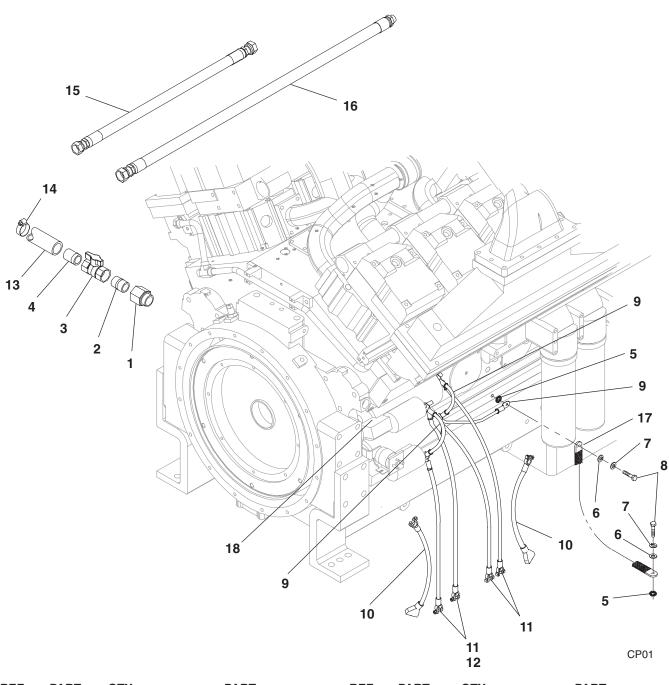


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505–1508	1	Adapter (3/4" Female to M27 Male) (Includes "O" Ring)	12 13	416–1019 503–0249	2	Boot, Battery (Red) Hose, Oil Drain – Bulk (3/4"
2	505-0102	1	Nipple, Pipe – Close (3/4")				ID) (Order By The Foot – 3
3	504-0171	1	Valve, Shutoff (3/4")				Feet Required)
4	505-0324	1	Nipple, Pipe – Half (3/4" x 2")	14	503-0189	1	Clamp, Hose
5	856-0013	2	Washer, Lock – EIT (1/2")	15	501-0682	1	Line, Fuel – Flexible (Fuel In)
6	526-2140	2	Washer, Flat (M12)				(51")
7	850-2012	2	Washer, Lock – Spring (M12)	16	501-0678-02	1	Line, Fuel – Flexible (Fuel
8	800–2111	2	Screw, Cap – Hex Head				Out) (96")
			(M12 x 25mm)	17	337-0090-01	1	Strap, Ground (27")
9	416-0680	3	Cable, Battery (10")	18	338-3894	1	Harness, Wiring – Diode –
10	416-0446	2	Cable, Battery (12-1/2")				Starter
11	416–0639	4	Cable, Battery (60")				

Fuel Cooler Sets With Heat Exchanger Cooling DQKC

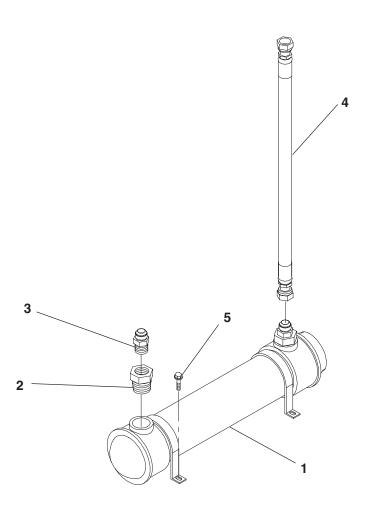


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-5090	1	Exchanger, Heat – Fuel	4	501-0678-0	3 1	Line, Flexible (7/8" ID x 28")
2	505-0024	2	Bushing, Reducer – Pipe (1–1/2" to 1")	5	821–6003–0	3 4	Screw, Self-Locking – Hex Washer Head (M8 x 25mm)
3	502–0656	2	Adapter, Male – Brass (1–5/16" x 1")				

Low Coolant Level Sender Generator Sets Without Remote Radiator

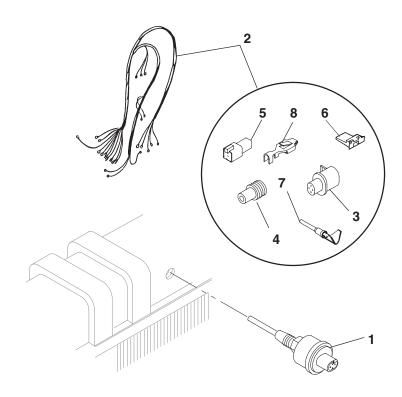

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193-0486	1	Sender, Low Coolant Level	6	323-1547	1	* Wedge, Receptacle (Used
2	338-3832	1	Harness, Wiring – Low				With Inline G)
			Coolant Level Sender (4 Wire, 169") (Includes Parts	7	323–1491	4	* Pin, Contact (Used With Inline G)
			Marked *)	8	323-1709	4	* Socket, Contact (Used With
3	323–1765	1	* Connector, Housing – 4 Place (Station 20)				Station 20)
4	323–1708	4	* Seal, Cable (Used With Station 20)	* – F	arts Included	In 338–3	832 Wiring Harness
5	323–1549	1	* Connector, Receptacle – 4 Place (Inline G)				-


Coolant Heater

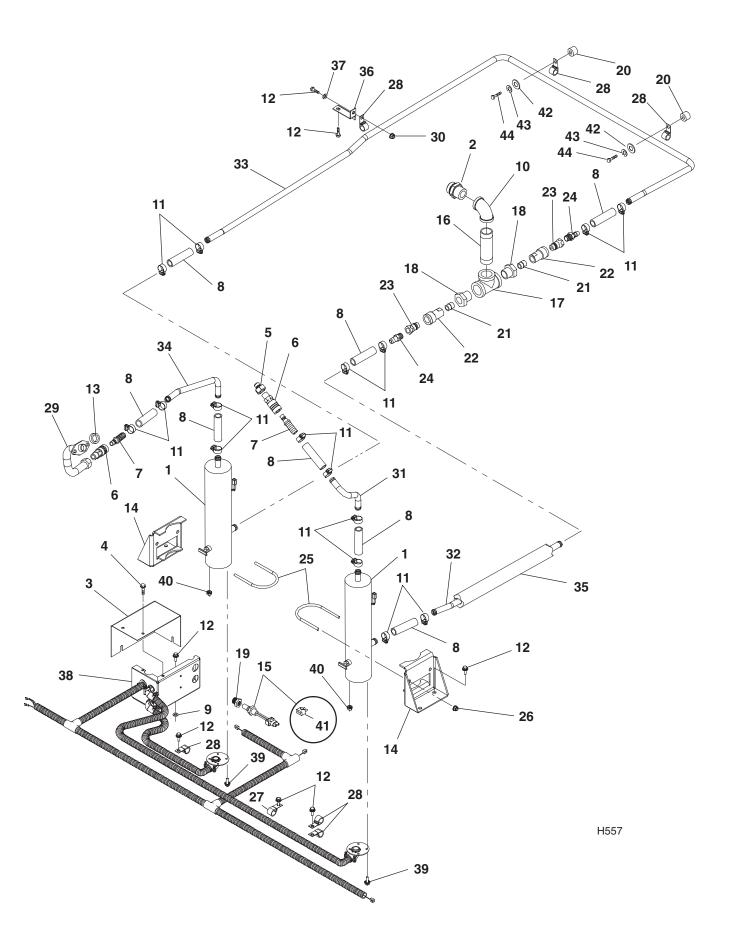

Coolant Heater

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater, Coolant	21	505-0100	2	Nipple, Pipe (1/2" x 1-1/8")
	333-0634-01	2	4990 Watt	22	502-1260	2	Coupler, Brass (1/2")
	333-0634-02	2	6420 Watt	23	502-1261	2	Nipple, Brass (1/2")
2	502-1325	1	Adapter, Pipe (M42 x 1-1/4")	24	502-0827	2	Fitting, Hose – Barbed (1/2"
3	319-2815	1	Cover, Terminal Box				ID Pipe to 3/4" ID Hose)
4	821-5002-03	4	Screw, Self-Locking - Hex	25	155-3021	2	Clamp, Mounting
			Washer Head (1/4-20 x	26	870-0550-09		Nut, Hex - Flange (3/8-16)
			1/2")	27	518-0548-24		Clamp, Hose
5	502-1315	1	Adapter, Brass (Includes "O"	28	332–2634	6	Clamp, "J"
			Ring) (1/2" Female to M18	29	130-5089-02		Tube, Heater
			Male)	30	870-2065-03		Nut, Hex – Flange (M8)
6	502-1259	2	Coupler (1/2" Male)	31	130-5079-02		Tube, Heater
7	502-1257	2	Connector, Hose – Barbed	32	130-5078-02		Tube, Heater
			(Fits 3/4" ID Hose)	33	130–5077–02		Tube, Heater
8	503-1634-01	8	Hose, Rubber (3/4" ID x 4")	34	130-5080-02		Tube, Heater
9	526-0128	2	Washer, Flat (15/32" ID x 1–1/2" OD x 1/4" Thk)	35	128–0108	_	Insulation, Hose – Bulk (Order By The Foot – 12
10	505-0042	1	Elbow, Pipe (1-1/4")	00	100 1500		Feet Required)
11	503-1136	16	Clamp, Hose	36	130–4538	1	Bracket, Support
12	821–6003–02	12	Screw, Self–Locking – Hex	37	526–2100	1	Washer, Flat (M8)
13	509-0283-01	1	Washer Head (M8 x 20mm) Seal	38	_	1	Control Assembly, Coolant
14	130–4546	2					Heater (See Separate
14	130-4546	2	Bracket, Mounting – Coolant Heater	39	815–0539	6	Page For Components) Screw, Machine – Round
15	309-0649	1	Thermostat (Opens at 110	39	015-0559	0	Head – Cross Recessed
15	309-0049	'	Deg F, Closes at 130 Deg				W/IT (#8–32 x 5/8")
			F) (Includes Connector	40	870-0131	6	Nut, Hex – W/ET (#10–32)
			Socket) (S11)	41	323–1637	1	Socket, Connector (2 Place)
16	505-0157	1	Nipple, Pipe (1–1/4" x 5")	42	526–2100	2	Washer, Flat (M8)
17	505-0249	1	Tee, Pipe (1–1/4")	43	850–2008	2	Washer, Lock – Spring (M8)
18	505-0127	2	Bushing, Pipe – Reducer	44	800–2060	2	Screw, Cap – Hex Head (M8
			(1-1/4" to 1/2")	77	000-2000	۷	x 35mm)
19	502–1321	1	Adapter, Brass				
20	130–3660–03	2	Spacer (1/2" ID x 1–1/4" OD x 3/4" Thk)				


Coolant Heater Control

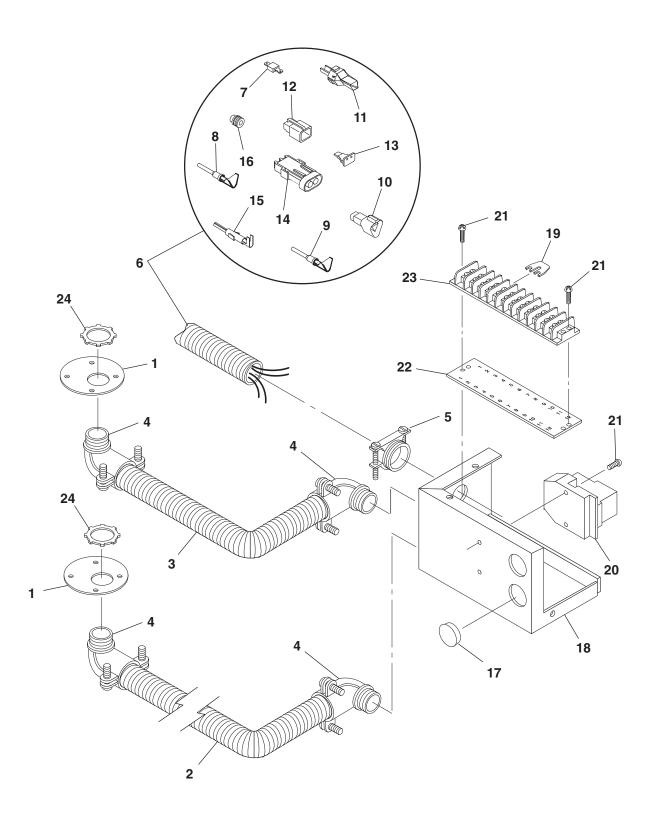

Coolant Heater Control

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	130–4552 338–3335–09	2	Cover, Coolant Heater Harness, Wiring – AC –	10	323-1494	1	* Connector, Receptacle (3 Pin) (Inline F)
_	000 0000 00	•	Coolant Heater (From Coolant Heater Bottom To	11	323–1502	1	* Wedge, Receptacle (Used With Inline F)
			Coolant Heater Control Box) (Includes Conduit	12	323–1504	2	* Connector, Plug (2 Pin) (Stations 18,19)
3	338–3335–01	1	Connectors) (108") Harness, Wiring – AC –	13	323–1500	2	* Wedge, Plug (Used With Stations 18,19)
			Coolant Heater (From Coolant Heater Bottom To	14	323–1652	1	* Connector, Plug – 2–Way (2 Pin) (Station 17)
			Coolant Heater Control Box) (Includes Conduit	15	323–1718	2	* Pin, Contact (Used In Station 17)
4	331–0554	4	Connectors) (30") Connector, Conduit – 90 Deg	16	323–1445	2	 * Seal, Cable (Used With Station 17)
			(3/4")	17	517-0138-02	2	Plug, Hole (Fits 1–1/8" Hole)
5	331-0042	1	Connector, Wiring – DC –	18	319–2814	1	Box, Terminal
			Romex (3/4")	19	332–3440	2	Jumper, Terminal
6	338–3831	1	Harness, Wiring – DC –	20	307–2859	1	Relay, Power – 24VDC (K11)
			Engine Heater (From Coolant Heater Control Box To Engine And Main Engine Harness) (Includes	21	815–0447	4	Screw, Machine – Round Head – Cross Recessed W/IT – Thread Forming (#8–32 x 3/4")
			Parts Marked *)	22	332-1469	1	Strip, Marker
7	357–0030	1	* Rectifier (6 Amp) (Located At K11 End Of Harness)	23	332–1468	1	Block, Terminal – 12 Place (TB1)
			(CR11)	24	331-0555	4	Nut, Connector Lock (3/4–14)
8	323–1491	3	* Pin, Contact (Used In Station Inline F)				
9	323–1492	4	* Socket, Contact (Used In Stations 18, 19)		arts Included I	n 338–3	831 DC Engine Heater Wiring


Remote Radiator

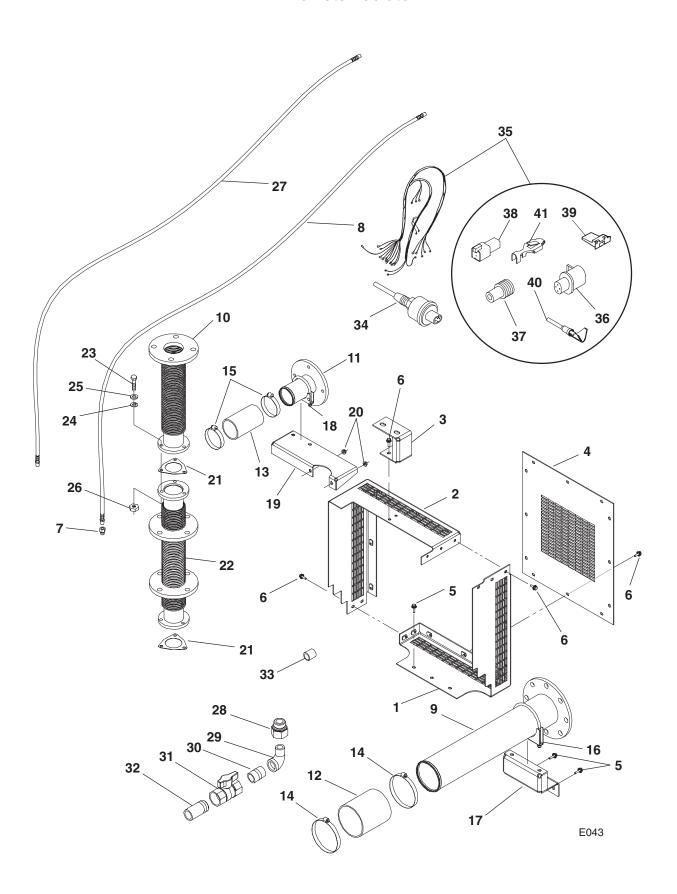

Remote Radiator


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-5069-02	1	Guard, Damper (Left Side)	28	502-1326	1	Adapter, Pipe (M33 x 3/4")
2	130-5071-02		Guard, Damper (Right Side)	29	505-0051	1	Elbow, Pipe – Street – 90
3	130-5145-02		Bracket, Guard				Deg (3/4")
4	130-5070-02		Cover, Damper	30	505-0012	1	Nipple, Pipe (3/4" x 1–3/8")
5	821-6003-03	5	Screw, Self-Locking - Hex	31	504-0171	1	Valve, Shutoff (3/4")
			Washer Head (M8 x 25mm)	32	505-0324	1	Nipple, Pipe – Half (3/4")
6	821-6003-02	19	Screw, Self-Locking - Hex	33	370-4081	8	Spacer (1/2" x 1/2") Used
			Washer Head (M8 x 20mm)				With Crankshaft Pulley
7	502-1318	1	Adapter, Pipe – Brass (M14 x				Mounting Bolts
			1/4" Pipe)	34	193-0486	1	Sender, Low Coolant Level
8	503-2129-04	1	Line, Vent – Flexible – With	35	338-3832	1	Harness, Wiring – Low
			Two Male Pipe Swivel				Coolant Level Sender (4
			Fittings (1/4" ID x 94-1/2")				Wire, 169") (Includes Parts
			Left Side				Marked *)
9	130–4517	1	Tube, Water Inlet (26" Long)	36	323–1765	1	* Connector, Housing – 4
10	130–3687	3	Tube, Water Outlet – Flexible				Place (Station 20)
11	130–5081–02		Tube, Water Inlet (5" Long)	37	323-1708	4	* Seal, Cable (Used With
12	503-1726	1	Hose (5" ID x 6")				Station 20)
13	503–1728	1	Hose (3" ID x 5-1/2")	38	323–1549	1	* Connector, Receptacle – 4
14	503-1872-09		Clamp, Hose (5" ID)				Place (Inline G)
15	503-1872-05		Clamp, Hose (3" ID)	39	323–1547	1	* Wedge, Receptacle (Used
16	155–3290	1	Clamp, Tube (5" ID)	4.0	000 4404		With Inline G)
17	130-5144-02		Bracket, Tube	40	323–1491	4	* Pin, Contact (Used With
18	155–3289	1	Clamp, Tube (3" ID)	4.4	000 1700	4	Inline G)
19	130-5082-02		Bracket, Mounting	41	323–1709	4	* Socket, Contact (Used With
20	870–2065–03		Nut, Hex (M8)				Station 20)
21 22	130–3684	6	Gasket Tube, Water Outlet – Flexible				
23	130-5084-02 800-3017-41			* 5	Porto Includos	11220 2	922 Wiring Harnoos
23	000-3017-41	9	Screw, Cap – Hex Head (M10 x 45mm)		ans included	ı III 330–3	832 Wiring Harness
24	526-0399-62	9	Washer, Flat (M10)				
25	850-0114-55	9	Washer, Lock – Spring (M10)				
26	862-0026-56		Nut, Hex (M10)				
27	503–2129–05	1	Line, Vent – Flexible – With One Male Pipe Swivel and One Female Pipe Swivel With O–Ring Face Seal (1/4" ID x 94–1/2") Right				
			Side				

Radiator Tubes

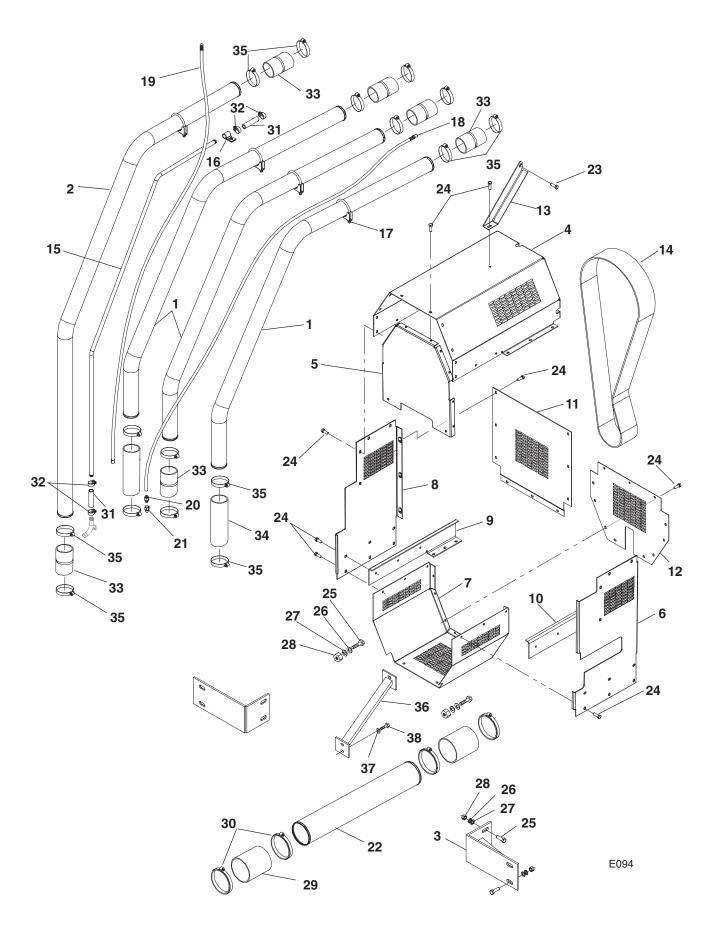


Radiator Tubes

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	130–4908–02 130–4914–02	_	Tube, Radiator Tube, Radiator	21	502-1318	1	Adapter, Pipe (M14 x 1/4" Pipe)
3	130-4919-02	2 2	Brace, Skid	22	130-5067-02	1	Tube, Radiator - Lower
4	130-4921-02	2 1	Guard, Fan Drive – Upper	23	821-6003-03	1	Screw, Self-Locking - Hex
5	130-4934-02	2 1	Guard, Fan Drive – Rear				Washer Head (M8 x 25mm)
6	130-4936-02	2 1	Guard, Fan Drive - Left Side	24	821-6003-02	56	Screw, Self-Locking - Hex
7	130-4937-02	2 1	Guard, Fan Drive - Bottom				Washer Head (M8 x 20mm)
8	130–4935–02	2 1	Guard, Fan Drive – Right Side	25	720–1146	16	Screw, Cap – Hex Head (M20 x 60mm)
9	130-4946-02	2 1	Bracket, Guard - Right Side	26	526-2203	16	Washer, Flat (M20)
10	130-4947-02	2 1	Bracket, Guard - Left Side	27	850-2020	16	Washer, Lock - Spring (M20)
11	130-4950-02	2 1	Guard, Fan Drive - Front -	28	860-2013	16	Nut, Hex (M20)
			Upper	29	503-1726	2	Hose, Radiator (5" ID x 6")
12	130-4951-02	2 1	Guard, Fan Drive - Front -	30	503-1872-09	4	Clamp, Hose
			Lower	31	503-1634-01	2	Hose, Rubber (3/4" ID x 4")
13	130-4966-02	2 1	Bracket, Shroud Guard -	32	503-1136	4	Clamp, Hose
			Upper	33	503-1728	6	Hose, Radiator (3" ID x
14	511-0161-17	' 1	Belt, V Ribbed				5-1/2")
15	130-5045-02	2 1	Tube, Fill	34	503-1727	2	Hose, Radiator (3" ID x 10")
16	518-0548-19) 1	Clamp, Retainer (3/4" ID)	35	503-1872-05	16	Clamp, Hose
17	155-3289	4	Clamp, Tube (3" ID)	36	130-5085-02	1	Bracket, Post
18	503-2129-03	3 1	Line, Radiator Vent (1/4" ID x	37	526-0399-62	4	Washer, Flat (M10)
			101")	38	800-3017-38	4	Screw, Cap – Hex Head
19	503–2129–05	5 1	Line, Radiator Vent (1/4" ID x 94–1/2")				(M10 x 30mm)
20	309-0635-02	2 1	Valve, Check (1/4" Pipe to 3/8" Pipe)				

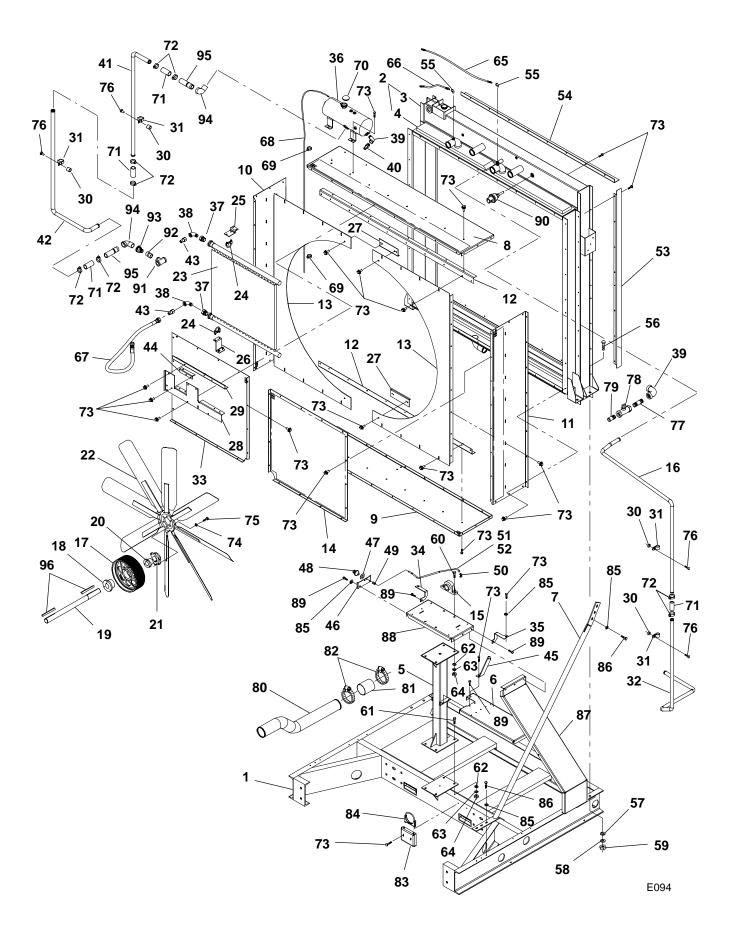

Radiator


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	130–4896–02 130–4885	1 1	Skid, Radiator Radiator (Includes Jacketwater, Aftercooler,	40	502-0836	1	Fitting, Brass – Hose – Barbed (3/4" Pipe to 3/4" Hose)
			Cap, Overflow Hose and	41	130-5119-02	1	Tube, Fill – Upper
	130–3588	1	Sight Gauge Sevice Parts) Radiator Cap (Not Illustrated)	42 43	130–5118–02 502–0656	1 2	Tube, Fill – Lower Adapter, Male (1–5/16–12 Tubing to 1" Pipe)
	503-1418	_	Overflow Hose – Bulk	44	130-4976-02	1	Bracket, Clamp
			(1/4") (Order By The Foot – 11 Feet	45	130–4967–02	1	Bracket, Shroud Guard – Lower
			Required) (Not	46	130-5061-02	1	Bracket, Lube
			Illustrated)	47	526-0346	2	Washer, Flat (3/8")
	130–4362	1	Sight Gauge Service	48	518-0064	2	Fitting, Grease
			Parts (Includes Glass Bulb and "O" Ring) (Not	49	505–1435	2	Connector, Pipe – Female (1/8")
0		_	Illustrated)	50	505–1436	2	Connector, Pipe – Elbow
3	_	1	Jacketwater (See Separate	E 1	E00 174E		(1/8") Hose – Bulk – Front Grease
4	-	1	Page For Components) Aftercooler (See Separate Page For Components)	51	503–1745	_	Fitting (Order By The Foot – 2 Feet Required)
5	130-5037-02	1	Post, Fan Drive	52	503-1745	_	Hose – Bulk – Rear Grease
6	130-5036-02		Tray, Fan Drive – Lower	02	000 17 10		Fitting (Order By The Foot
7	130–4897–02		Support, Radiator				- 2 Feet Required)
8	130-4900-02		Shroud, Fan – Top	53	130-4938-02	2	Adapter, Duct – Sides
9	130-4900-04		Shroud, Fan – Bottom	54	130-4939-02	2	Adapter, Duct – Top and
10	130–4901–04		Wrapper, Fan Shroud – Right				Bottom
11	130-4901-02	1	Side Wrapper, Fan Shroud – Left	55	505-0011	5	Elbow, Pipe – Street – 90 Deg (1/4")
12	130-4902-02	2	Side Bracket, Fan Shroud	56	800–2206	4	Screw, Cap – Hex Head (M20 x 60mm)
13	130-4903-02	2	Shroud, Fan Face	57	526-2203	4	Washer, Flat (M20)
14	130-4904-02	2	Guard, Shroud	58	850-2020	4	Washer, Lock – Spring (M20)
15	510-0194	2	Bearing, Pillow Block	59	860-2013	4	Nut, Hex (M20)
16 17	130-4910-02 130-4888-02		Tube, Fill – Upper Pulley, Fan	60	800–2177	4	Screw, Cap – Hex Head (M16 x 60mm)
18	130–3652	1	Bushing, Pulley (Includes Mounting Hardware)	61	800–2174	4	Screw, Cap – Hex Head (M16 x 45mm)
19	130-4920	1	Shaft, Fan Drive	62	526-2183	8	Washer, Flat (M16)
20	512-0203	1	Bushing, Fan	63	850–2016	8	Washer, Lock – Spring (M16)
21	130–4999	1	Hub, Fan	64	860-2012	8	Nut, Hex (M16)
22 23	130–4940 130–5064	1 1	Fan (8 Blade) Cooler, Fuel	65	503–2129–02	1	Line, Radiator Vent (1/4" ID x 40")
24 25	155–3288 130–4952–02	4 2	Clamp (2" ID) Bracket, Fuel Cooler – Upper	66	503–2129–01	1	Line, Radiator Vent (1/4" ID x 15")
26 27	130-4953-02 130-4955-02	2	Bracket, Fuel Cooler – Lower Support, Shroud	67	501-0678-01	1	Line, Fuel – Flexible (7/8" ID x 89")
28	130-4974-02		Bracket, Clamp	68	503-1418	_	Hose, Rubber – Bulk (1/4" ID)
29 30	130–4975–02 130–3660		Bracket, Clamp Spacer (1/2" ID x 1–1/4" OD				(Order By The Foot – 11 Feet Required)
		•	x 3/8" Thk)	69	518-0548-25	2	Clamp, Hose (3/8" ID)
31	518-0633	4	Clip, "J" (1–1/2" ID)	70	130-0449	1	Cap, Expansion Tank
32	130-5032-02		Tube, Fill – Lower	71	503–1863	6	Hose, Radiator (1–1/2" ID x
33	130-5032-02		Guard, Shroud		300 1000	J	4")
34	130-5046-02		Stiffener, Guard – Right Side	72	503-1872-02	12	Clamp, Hose
35	130-5047-02		Stiffener, Guard – Left Side		300 1072 02		5.amp, 11000
36	130-5062-02		Tank, Expansion				
37	505-0394	2	Bushing, Pipe – Reducer (2" to 1")	Con	tinued		
38	505-0003	2	Elbow, Pipe – Street (1")	0011			
39	505–0051	3	Elbow, Pipe – 90 Deg (3/4")				

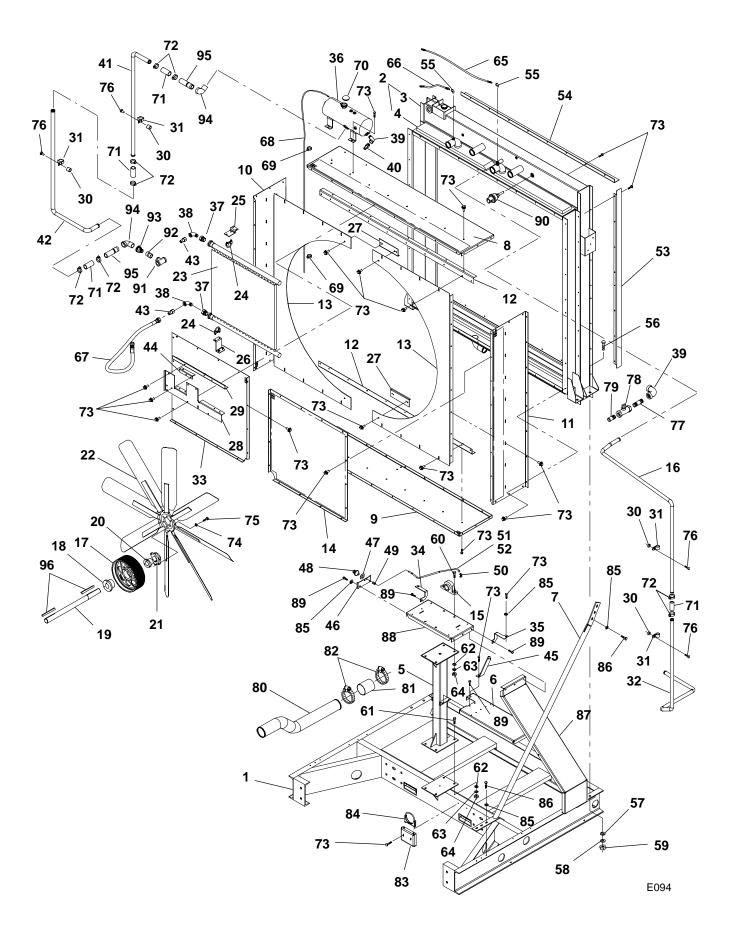

Radiator


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued						
73	821–6003–02	175	Screw, Self-Locking - Hex Washer Head (M8 x 20mm)	86	800–3017–38	12	Screw, Cap – Hex Head (M10 x 30mm)
74	526-0219	6	Washer, Flat (1/2")	87	130-5034-02	2	Mount, Fan Drive - Side
75	800-0094	6	Screw, Cap - Hex Head	88	130-5035-02	1	Tray, Fan Drive – Upper
			(1/2-13 x 2")	89	800-3017-37	20	Screw, Cap - Hex Head
76	821-6003-03	5	Screw, Self-Locking - Hex				(M10 x 25mm)
			Washer Head (M8 x 25mm)	90	193-0486	1	Sender, Low Coolant Level
77	505-0012	3	Nipple, Pipe (3/4" x 1-3/8")	91	505-0060	1	Tee, Pipe (3/8")
78	504-0171	2	Valve, Shutoff (3/4")	92	505-0102	1	Nipple, Pipe – Close (3/4")
79	505-0324	2	Nipple, Pipe – Half (3/4")	93	505-1561	1	Coupling, Pipe – Reducer
80	130-4907-02	1	Tube, Lower Radiator				(1-1/2" to 3/4")
81	503-1726	1	Hose, Radiator (5" ID x 6")	94	505-0462	2	Elbow, Pipe – Street – 90
82	503-1872-09	2	Clamp, Hose				Deg (1-1/2")
83	130-5066-02	1	Bracket, Radiator Tube	95	505-1429	2	Nipple, Pipe – Combination
84	155-3290	1	Clamp, Tube (5" ID)				(1-1/2" Pipe to 1-1/2"
85	526-0399-62	32	Washer, Flat (M10)				Hose)
				96	515-0220	2	Key (1/2" x 1/2")

Jacketwater

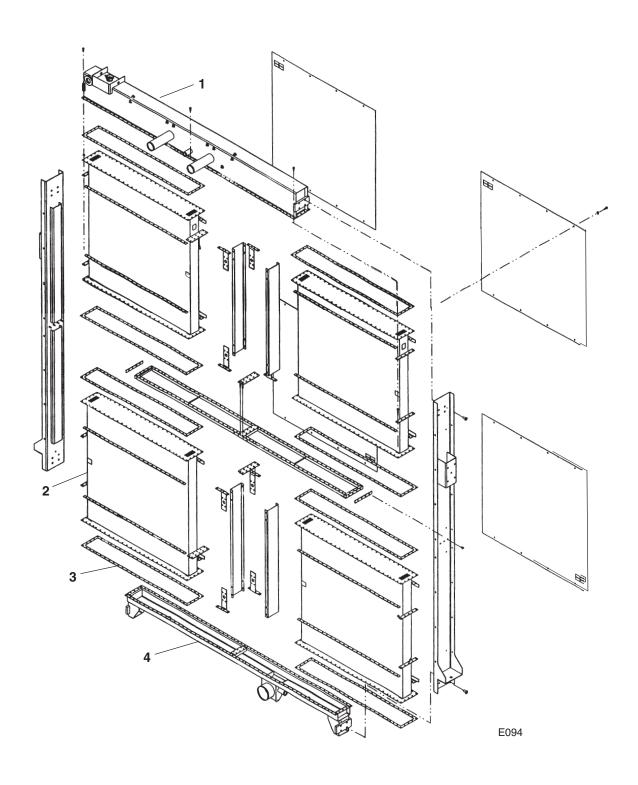


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	130–5101	1	Jacketwater – Complete	2	130-5096	4	Core
			(Includes Replaceable	3	130-5099	8	Gasket
			Parts Listed Below)	4	130-5098	1	Tank, Bottom
1	130-5097	1	Tank, Top				

Aftercooler

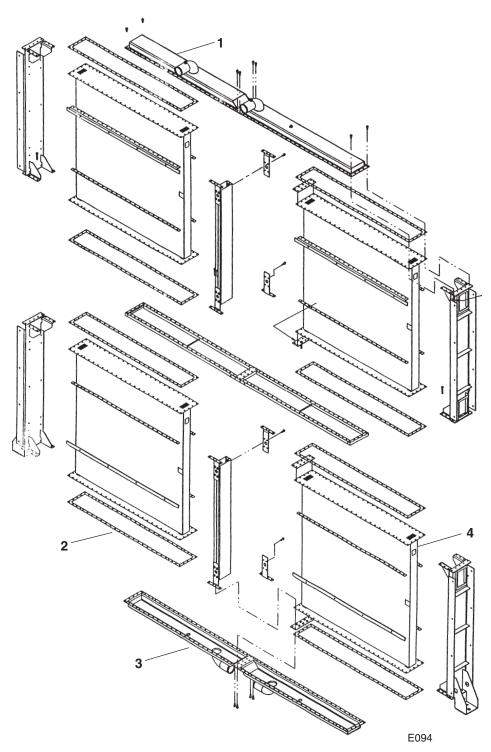


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	130-5102	1	Aftercooler – Complete	2	130-5099	8	Gasket
			(Includes Replaceable	3	130-5103	1	Tank, Bottom
			Parts Listed Below)	4	130-5105	4	Core
1	130–5104	1	Tank, Top				

Skid

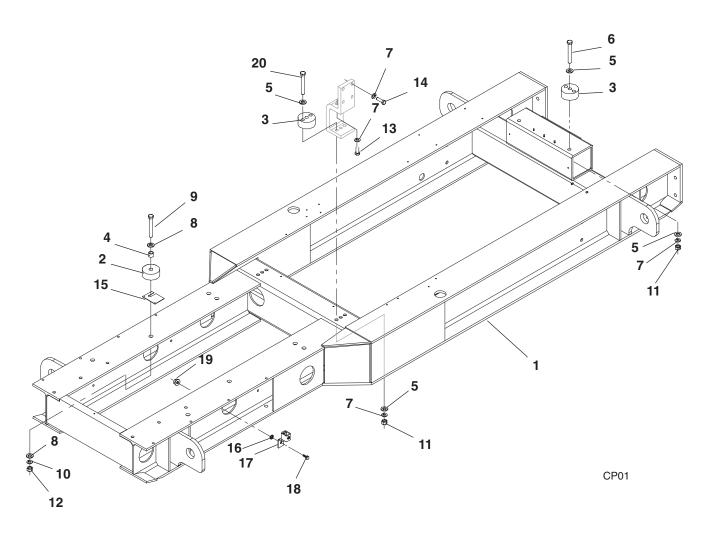


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-4351-02	1	Skid	10	850-2024	4	Washer, Lock – Spring (M24)
2	232-4061	4	Spacer, Generator Mounting	11	860-2023-01	6	Nut, Hex (M20)
			(1-1/16" ID x 5" OD x	12	860-2024-01	4	Nut, Hex (M24)
			2–1/8" Thk)	13	800-2208	4	Screw, Cap – Hex Head
3	403-4332	4	Spacer, Engine Mounting (1"				(M20 x 70mm)
			ID x 5" OD x 2-9/32" Thk)	14	800-2206	8	Screw, Cap – Hex Head
4			Bushing				(M20 x 60mm)
	403-4303-01	4	Frame 7 Generators	15			Shim, Generator Mounting
			(1-1/16" ID x 1-5/16" OD				(Quantity Used As
			x 1–3/16" Long)				Required)
	403-4303-02	4	Frame 8 Generators		232-3710-01	1	1/64" Thk
			(1-1/16" ID x 1-19/32"		232-3710-02	1	5/64" Thk
			OD x 1-3/8" Long)		232-3710-03	1	7/64" Thk
5	526-0399-76	12	Washer, Flat (M20)	16	856-0010	1	Washer, Lock - W/EIT (3/8")
6	800-3047-02	2	Screw, Cap - Hex Head	17	332-2001	1	Lug, Solderless
			(M20 x 160mm)	18	800-0051	1	Screw, Cap – Hex Head
7	850-2020	18	Washer, Lock - Spring (M20)				(3/8–16 x 1–1/4")
8	526-0399-78	8	Washer, Flat (M24)	19	870-0550-09	1	Nut, Hex (3/8-16)
9	800-3048-02	4	Screw, Cap – Hex Head (M24 x 160mm)	20	800–3047–03	4	Screw, Cap – Hex Head (M20 x 130mm)

Generator Heater

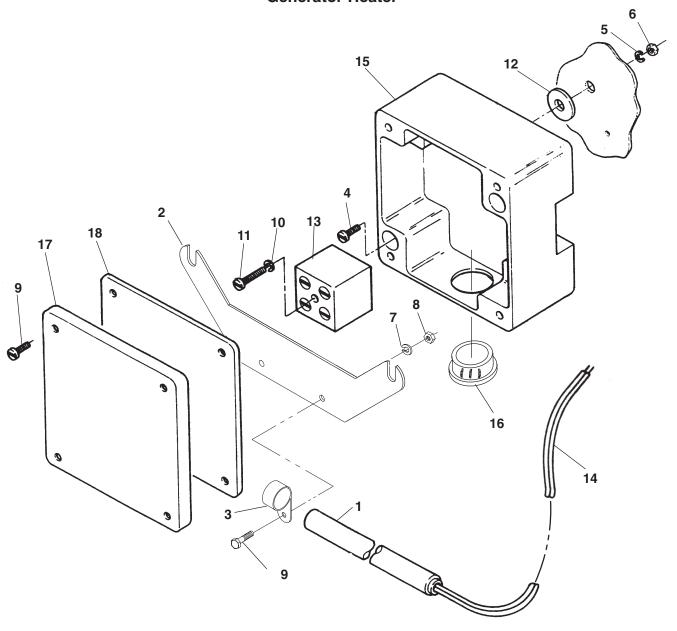

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Cartridge, Heater (300 Watt)	10	850-2003	1	Washer, Lock - Spring (M3)
	333-0438-05	1	120 Volt	11	822-3047	1	Screw, Machine - Pan Head
	333-0438-06	1	240 Volt				(M3 x 20mm)
2	232-3849	1	Bracket, Mounting - Heater	12	508-0228	1	Grommet
3	332-3024-14	2	Clamp, Loop	13	332-3023	1	Block, Terminal
4	822–3075	6	Screw, Machine – Slotted Pan Head (M4 x 16mm)	14	898–1254–25	1	Sleeving – Heater Leads (59")
5	850-2004	2	Washer, Lock - Spring (M4)	15	330-0142	1	Box, Terminal
6	860-2005	2	Nut, Hex (M4)	16	517-0021	1	Plug, Dot Button
7	850-2005	2	Washer, Lock - Spring (M5)	17	330-0141-03	1	Cover, Box
8	860-2006	2	Nut, Hex (M5)	18	330-0141-04	1	Gasket, Cover
9	800–2008	2	Screw, Cap – Hex Head (M5 x 16mm)				


Entrance Box

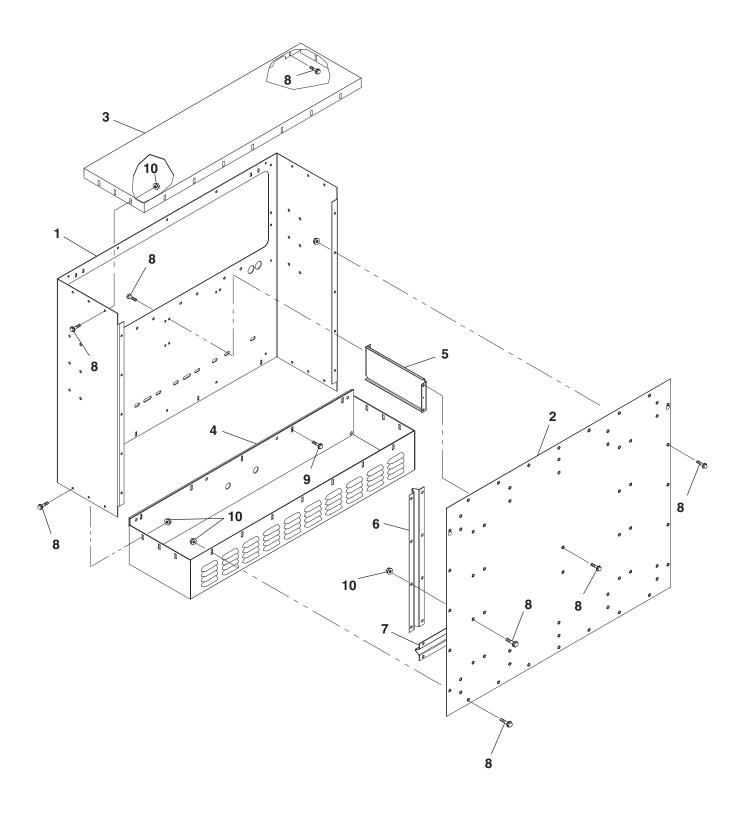

Entrance Box

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Entrance	7	319-3288	2	Brace, Cover (Horizontal)
2	319-3265	1	Cover, Entrance Box	8	821-6002-0	3 89	Screw, Hex Head (M6 x 16mm)
3	319-1961	1	Cover, Entrance Box - Top	9	821-2035	5	Screw, Self-Locking -
4	319–1925	1	Cover, Entrance Box – Bottom				Hex Washer Head (M6 x 25mm)
5	319-3264	1	Brace, Cover	10	870-0504	26	Nut, Retaining (M6)
6	319-3286	2	Brace, Cover (Vertical)				- · ·


Control Housing Frame 7 Generators

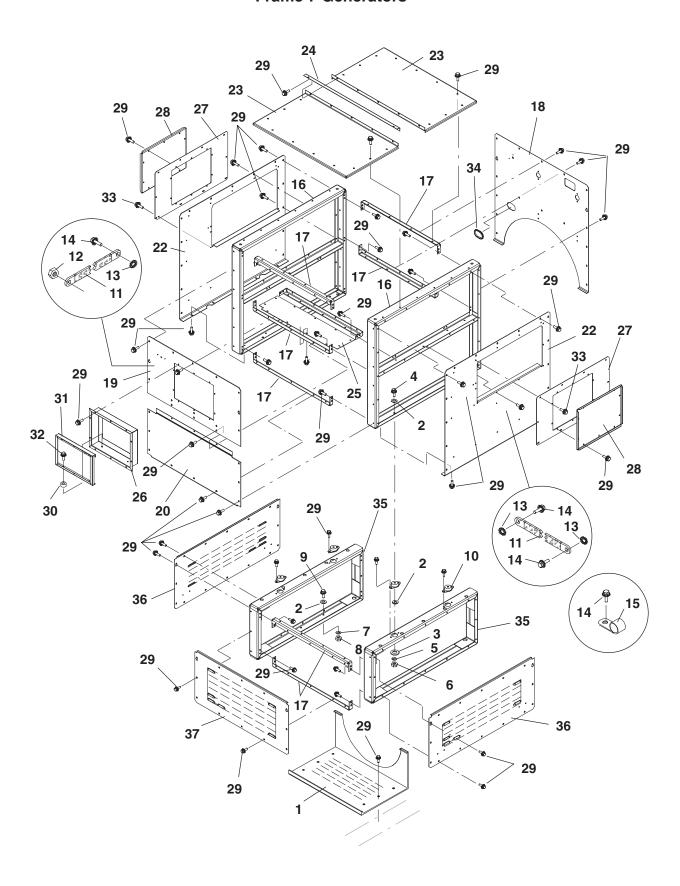

Control Housing Frame 7 Generators

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-4126-02	. 1	Panel, Bottom	20	319-4138-02	2 1	Panel, Rear - Center
2	526-0399-64 526-0172	24 4	Washer, Flat (M12) Washer, Flat (1/2")	21	319–3999–02	2 1	Panel, Side – Upper – Right Side
4	800–2121	4	Screw, Cap – Hex Head (M12 x 75mm)	22	319-4000-02	2 1	Panel, Side – Upper – Left Side
5	850-2012	4	Washer, Lock – Spring (M12)	23	319-4001-02	2	Panel, Top
6	860-2010	4	Nut, Hex (M12)	24	319-4002-02	2 1	Rail, Drip
7	850-0114-56	8	Washer, Lock - Spring (M12)	25	319-4007-02	2 1	Panel, Inner
8	862-0026-57	' 8	Nut, Hex (M12)	26	319-3672-02	2 1	Panel, Control Mounting
9	800-3017-58	8	Screw, Cap – Hex Head	27	319-4003-02		Cover, Housing – Breaker
4.0	100 1001		(M12 x 50mm)	28	319-4004-02		Cover, Housing – Control
10	403–4091	4	Isolator, Vibration	29	821–6003–02	238	Screw, Self-Locking - Hex
11	337–3466–01		Strap, Ground		100 0505		Washer Head (M8 x 20mm)
12	870–2203	1	Nut, Locking – Hex Flange	30	402–0527	4	Isolator, Vibration
4.0	0=0 0010		Head (M10)	31	319–3786–02		Bracket, Control Mounting
13 14	856–0010 821–6004–01	4 7	Washer, Lock – EIT (3/8") Screw, Self-Locking – Hex	32	800–0310–17	' 8	Screw, Cap – Hex Head (5/16–18 x 1/2")
	0 000. 0.	•	Washer Head (M10 x 20mm)	33	821–6002–04	20	Screw, Self-Locking - Hex Washer Head (M6 x 20mm)
15	332-2634	3	Clamp, "J"	34	508-1090	1	Grommet
16	319-3995-02	2	Frame, Side – Upper	35	319-3994-02	2	Frame, Side – Lower
17	319-3996-02	8	Separator, Frame	36	319-4006-02	2	Panel, Side – Lower
18	319-3997-02	. 1	Panel, Front	37	319-4005-02	2 1	Panel, Rear - Lower
19	319–3998–02	! 1	Panel, Rear – Upper				


Control Housing Frame 8 Generators

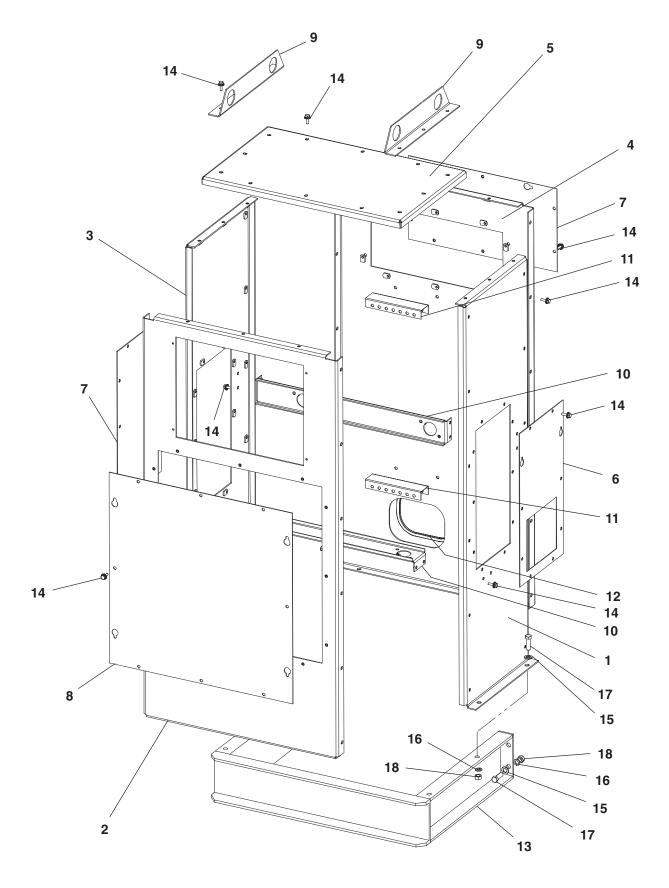

Control Housing Frame 8 Generators

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	319-3910-02	1	Panel, Control – Left Side	13	403-4357-02	2 1	* Frame, Mounting – Control
2	319-3912-02	1	Panel, Control – Rear	14	821-6003-02	90	Screw, Self-Locking - Hex
3	319-3911-02	1	Panel Control - Right Side				Washer Head (M8 x 20mm)
4	319-3913-02	1	Panel, Control – Front	15	526-0399-64	8	* Washer, Flat (M12)
5	319-3916-02	1	Roof	16	850-0114-56	8	* Washer, Lock - Spring (M12)
6	319-3914-02	1	Cover, Side – Left Side	17	800-3017-56	8 6	* Screw, Cap - Hex Head
7	319-3915-02	2	Cover - Right Side and Front				(M12 x 40mm)
8	319-3920-02	1	Cover, Rear	18	862-0026-77	' 8	* Nut, Hex (M12)
9	319-3919-02	2	Support, Housing				,
10	319-3917-02	2	Shelf				
11	319-3921-02	2	Guide, Wire	* - N	lot Used On Al	I Models	
12	508-1088	1	Edging (37–3/4")				

Generator Mounting

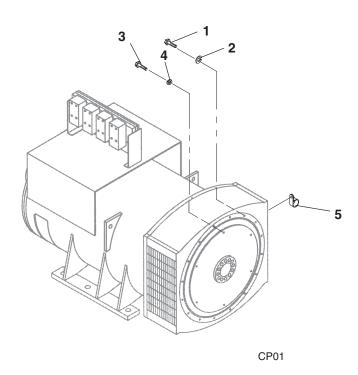

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800–2543–08	16	Screw, Cap – Hex Head (M12 x 55mm) Grade 10.9	4 5	526–0416 332–3196	6 1	Washer, Flat (5/8") Clamp, "J"
2	850-2012	16	Washer, Lock – Spring (M12)	_		-	· · · · · · · · · · · · · · · · · · ·
3	805–2022	6	Bolt, Place (M16 x 35mm) Grade 10.9				

Frame 7 (with two 1-1/4" thick x 32-11/16" long mounting feet) and Frame 8 (with four 1-9/16" thick x 6-1/2" long mounting feet) generator component parts cannot be ordered from Onan. Refer to the Newage nameplate and supply all available information. Contact your nearest Newage distributor for assistance in ordering component parts. For COMPLETE generator replacement use the 249-XXXX-XX Onan identification number listed below.

Onan Identification Number	Generator Model Number
249–5092–01	HC734E
249–5092–02	HC734F
249–5092–03	HC734E
249–5092–04	HC734F
249–5092–05	HC734G
249–5092–06	HC734G
249–5092–07	HC734H
249–5092–08	HC734H
249–5092–09	HC734E
249–5092–10	HC734F
249–5092–11	HC734G
249–5092–12	HC734H
249–5092–13	HC734E
249–5092–14	HC734F
249–5092–15	HC734G
249–5092–16	HC734H
249–5095–01	MV734WE
249–5095–02	MV734WF
249–5095–03	MV734WG
249–5095–04	MV734WE
249–5095–05	MV734WF
249–5095–06	MV734WG
249–5095–07	MV734WH
249–5095–08	MV734WH
249–5104–01	LVS1814C1
249–5104–02	LVS1814D1
249–5104–03	LVS1814F1
249–5104–04	LVS1814F1
Continued	

Identification Number	Model Number
Continued	
249–5104–05	LVS1814G1
249–5104–06	LVS1814H1
249–5104–07	LVS1814C1
249–5104–08	LVS1814D1
249–5104–09	LVS1814E1
249–5104–10	LVS1814F1
249–5104–11	LVS1814G1
249–5104–12	LVS1814H1
249–5104–13	MVS1814C1
249–5104–14	MVS1814D1
249–5104–15	MVS1814E1
249–5104–16	MVS1814F1
249–5104–17	MVS1814G1
249–5104–18	MVS1814H1
249–5104–19	HVS1814C1
249–5104–20	HVS1814D1
249-5104-21	HVS1814E1
249-5104-22	HVS1814F1
249–5104–23	HVS1814G1
249–5104–24	HVS1814H1
249–5104–25	LVS1814C1
249–5104–26	LVS1814D1
249-5104-27	LVS1814E1
249–5104–28	LVS1814C1
249–5104–29	LVS1814D1
249–5104–30	LVS1814E1
249–5104–31	HVS1814C1
249–5104–32	HVS1814D1
249–5104–33	HVS1814E1
Continued	

Onan Identification Number	Generator Model Number
Continued	
249–5104–34	HVS1814C1
249–5104–35	HVS1814D1
249–5104–36	HVS1814E1
249–5104–37	HVS1814C1
249–5104–38	HVS1814D1
249–5104–39	HVS1814E1
249–5104–40	LVS1814C1
249–5104–41	LVS1814D1
249–5104–42	LVS1814E1
249–5104–43	LVS1814C1
249–5104–44	LVS1814D1
249–5104–45	LVS1814E1
249–5104–46	HVS1814C1
249–5104–47	HVS1814D1
249–5104–48	HVS1814E1
249–5104–49	MVS1814C1
249–5104–50	MVS1814D1
249–5104–51	MVS1814E1
249–5107–01	LVS1814C1
249–5107–02	LVS1814D1
249–5107–03	LVS1814E1
249–5107–04	LVS1814F1
249–5107–05	LVS1814G1
249–5107–06	LVS1814H1
249–5107–07	LVS1814C1
249–5107–08	LVS1814D1
249–5107–09	LVS1814E1
249–5107–10	LVS1814F1
249–5107–11	LVS1814G1
Continued	


Onan Identification Number	Generator Model Number
Continued	
249–5107–12	LVS1814H1
249–5107–13	MVS1814C1
249–5107–14	MVS1814D1
249–5107–15	MVS1814E1
249–5107–16	MVS1814F1
249–5107–17	MVS1814G1
249–5107–18	MVS1814H1
249–5107–19	HVS1814C1
249–5107–20	HVS1814D1
249–5107–21	HVS1814E1
249–5107–22	HVS1814F1
249–5107–23	HVS1814G1
249–5107–24	HVS1814H1
249–5107–25	LVS1814C1
249–5107–26	LVS1814D1
249–5107–27	LVS1814E1
249–5107–28	LVS1814C1
249–5107–29	LVS1814D1
249–5107–30	LVS1814E1
249–5107–31	HVS1814C1
249–5107–32	HVS1814D1
249–5107–33	HVS1814E1
249–5107–34	HVS1814C1
249–5107–35	HVS1814D1
249–5107–36	HVS1814E1
249–5107–37	HVS1814C1
249–5107–38	HVS1814D1
249–5107–39	HVS1814E1
249–5107–40	LVS1814C1
Continued	

Generator

Onan Identification Number	Generator Model Number				
Continued					
249–5107–41	LVS1814D1				
249–5107–42	LVS1814E1				
249–5107–43	LVS1814C1				
249–5107–44	LVS1814D1				
249–5107–45	LVS1814E1				
249–5107–46	HVS1814C1				
249–5107–47	HVS1814D1				
249–5107–48	HVS1814E1				
249–5107–49	MVS1814C1				
249–5107–50	MVS1814D1				
249–5107–51	MVS1814E1				

B280,312,461,462


PowerCommand Control Panel

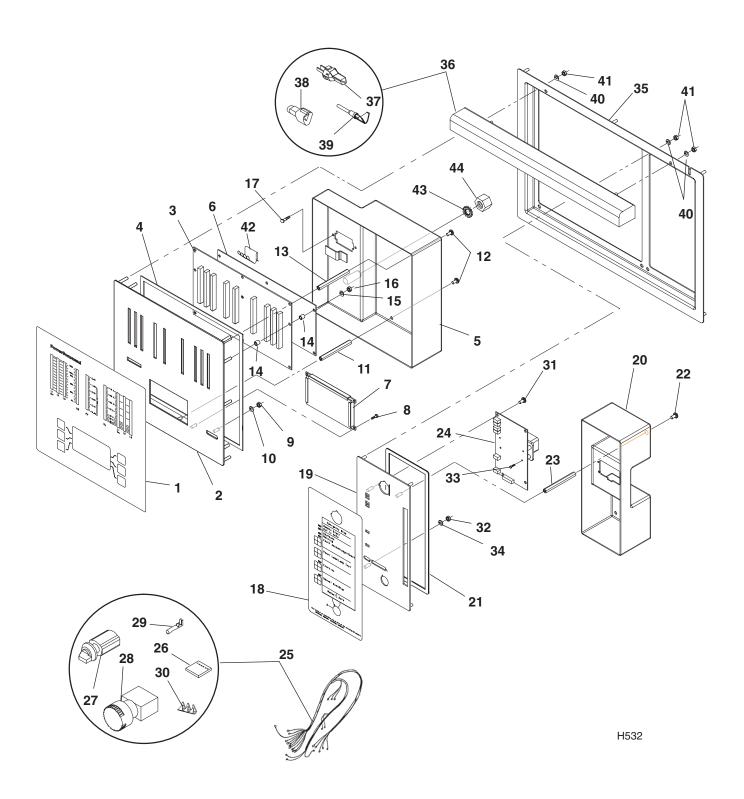

PowerCommand Control Panel


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	110.	OOLD	52501111 11511	110.	110.	OOLD	52001III 11011
1	300-5195	1	Membrane, Operator Panel	26	323-1839	1	* Connector – 6 Pin (P1)
2	319-3924-02	1	Panel, Operator	27	308-1085	1	* Switch, Selector (S12)
3	300–5180	1	Board, Printed Circuit – Bar Graph	28	308–0999	1	* Switch, Emergency Stop (S13)
4	319-3950	1	Gasket, Operator Panel	29	323-1688	6	* Socket, Contact (Used In P1)
5	319-3923-02	1	Housing, Operator Panel	30	332-3491-01	6	* Terminal, Wire Pin (Used In
6	300-5179	1	Board, Printed Circuit –				S12, S13)
			Operator Panel Diagram	31	823-0001-01	4	Screw, Hex Head – Thread
7	326-0230	1	Display, Graphic				Forming (M3 x 6)
8	823-0001-01	4	Screw, Torx (M3 x 6)	32	860-2003	1	Nut, Hex (M3)
9	860-2003	2	Nut, Hex (M3)	33	815-0796	4	Screw, Pan Head – Thread
10	850-0020	2	Washer, Lock (#6)				Forming (#4-24 x 5/16")
11	332–3642	1	Standoff	34	850-0020	1	Washer, Lock (#6)
12	823-0002-01	2	Screw, Torx (M4 x 6)	35	300-5280-02	! 1	Frame, Control Panel
13	332–3643	1	Standoff	36	300-5291	1	Rail, Operator Panel Light
14	332-3644	14	Spacer				(Includes Parts Marked #)
15	850-2004	7	Washer, Lock (M4)	37	323-1502	1	# Wedge, Receptacle
16	860–2005	7	Nut, Hex (M4)	38	323-1494	1	# Connector, Receptacle (3
17	815-0872	2	Screw, Pan Head (#6 x 5/16")				Pin)
18	300-5196-01	1	Membrane, Switch Panel	39	323-1491	3	# Pin, Contact
19	319–3926–02	1	Panel, Switch	40	850-2004	16	Washer, Lock (M4)
20	319–3925–02	1	Housing, Switch Panel	41	860–2005	16	Nut, Hex (M4 x .7)
21	319–3951	1	Gasket, Switch Panel	42	332-3234-02	! 1	Connector, Finger
22	823-0002-01	4	Screw, Torx (M4 x 6)	43	856-0010	1	Washer, Lock – W/EIT (3/8")
23	332-3642	4	Standoff	44	860-2009	1	Nut, Hex (M10)
24	300–5181	1	Board, Printed Circuit – Switch Panel (23)				
25	338-3801	1	Harness, Wiring – Switch	* – F	arts Included i	n 338–3	801 Wiring Harness
			Panel (Includes Parts Marked *)	# — F	Parts Included i	n 300–5	291 Operator Panel Light Rail

PowerCommand Control

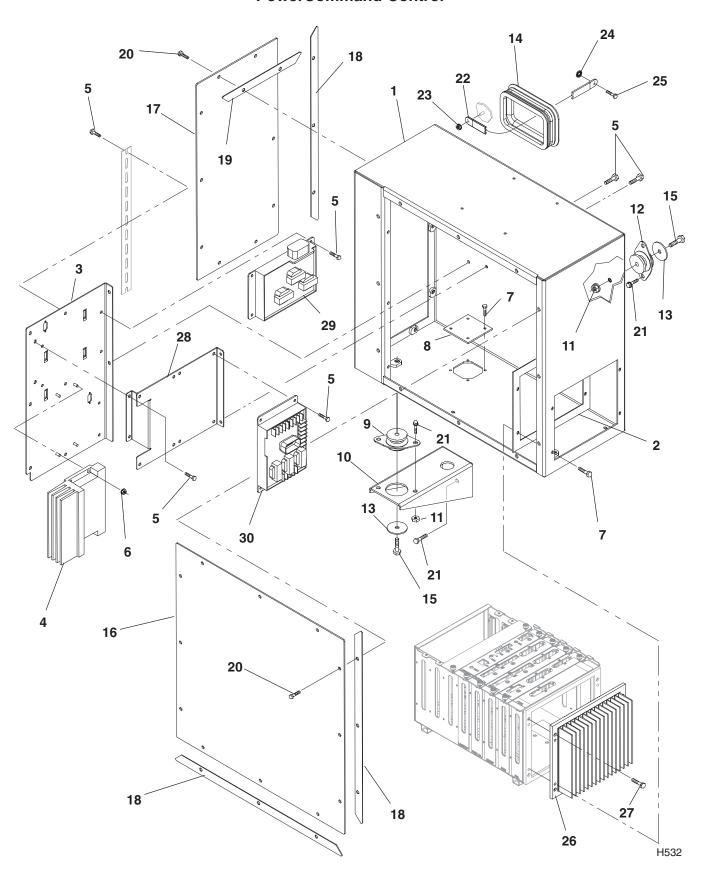

PowerCommand Control


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3586	1	Box, Control	19	363-0187	2	Gasket, Cover
2	363-0189	1	Gasket, Heatsink	20	821-6002-02	22	Screw, Hex Head (M6 x 12)
3	319-3650	1	Bracket, Terminal Block	21	821-6003-01	12	Screw, Hex Head (M8 x 16)
4	300-4306	1	Module, Voltage Regulator	22	337-3466-02	1	Strap, Bond
			(AVR)	23	870-2203	1	Nut, Locking (M10)
5	821-6001-02	24	Screw, Hex Head (M5 x 12)	24	856-0010	1	Washer - W/ET (M10)
6	870-2208	4	Nut, Flange (M5)	25	821-6004-01	1	Screw, Hex Head (M10 x 1.5
7	815-0828-04	8	Screw, Hex Head (M4 x 16)				x 20)
8	319-3968	1	Cover, Cutout	26	363-0183	1	Heatsink, Genset
9	402-0748	2	Isolator, Vibration	27	823-0002-04	8	Screw, Hex Head - Thread
10	319-3583	2	Bracket, Isolator				Forming (M4 x 12)
11	870-2055	4	Nut, Lock (M8)	28	319-3649	1	Bracket, PT Bus Mounting
12	402-0751	2	Isolator, Vibration	29			Board, Printed Circuit -
13	402-0749	4	Washer, Vibration Isolator				PT/CT
14	332-3629	1	Bellows		300-4308-01	1	120 Volt
15	815-0829-02	4	Screw, Flange Head (M8 x		300-4308-02	1	240 Volt
			50)	30			Board, Printed Circuit -
16	319-3585	1	Cover, Box – Main				Power Transformer Bus
17	319-3584	1	Cover, Box – Side		300-4309-01	1	120 Volt
18	363-0188	6	Gasket, Cover		300-4309-02	1	240 Volt

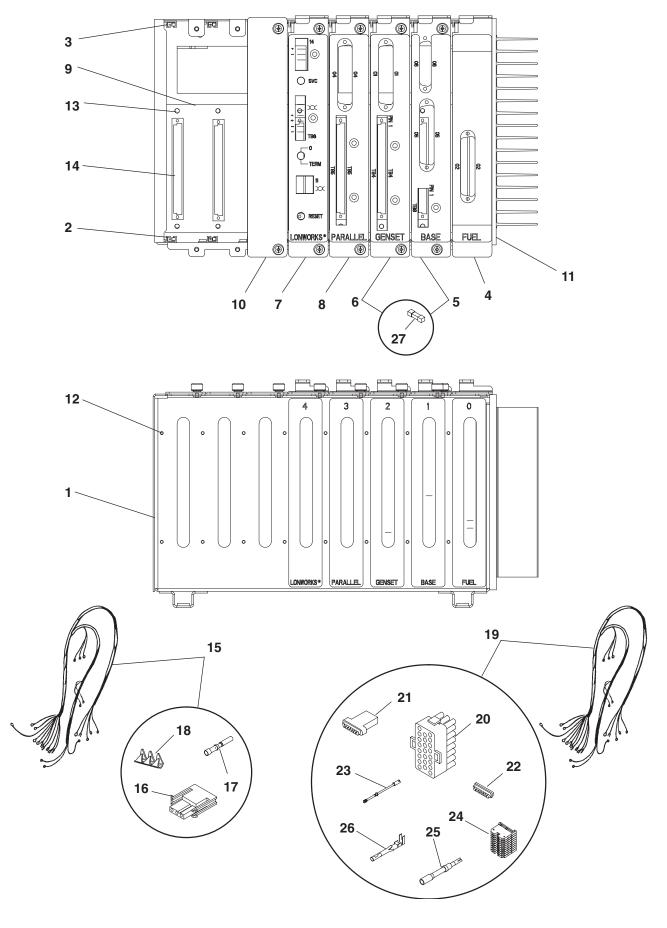

Card Cage


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3606	1	Cage, Card – Genset	15	338–3828	1	Harness, Wiring – Lonworks
2	406–0916	8	Guide, Metal Card – Left	40	000 4040		(Includes Parts Marked *)
3 4	406–0917 300–4970	8 1	Guide, Metal Card – Right Board, Printed Circuit – Fuel	16	323–1849	1	* Connector, Contact (3 Pin) (Station 14)
5	300–4969	1	Board, Printed Circuit – Base (Includes Fuse)	17	323-1850	2	* Socket, Contact (Used With Station 14)
6	300–5187	1	Board, Printed Circuit – Generator Interface	18	332–3491–01	2	 Pin, Contact (Used With B+ and GND)
7	300–5241	1	(Includes Fuses) Board, Printed Circuit –	19	338–3827	1	Harness, Wiring – Parallel (Includes Parts Marked #)
•	000 0211	•	Lonworks	20	323-1605-03	1	# Plug (23 Pin) (Station 8)
8	300–5270	1	Board, Printed Circuit – Parallel	21	323–1837	1	# Connector, Contact (50 Pin) (Station 4)
9	300-4968	1	Board, Printed Circuit -	22	323-1843	1	# Grommet (50 Place)
			Backplane	23	323-1844	2	# Jackscrew
10	319–3605	5	Cover, Card Cage – Blank With Base Board	24	332–3125–02	! 1	# Block, Terminal (10 Pole) (TB3)
	319–3605	4	With Base and Lonworks Boards	25	323–1835	34	# Socket, Contact (Used With Station 4)
	319–3605	3	With Base, Lonworks and Parallel Boards	26	323-1614-01	12	# Pin, Contact (Used With Station 8)
11	815–0947	4	Screw, Hex Head (Used to Mount Fuel Board W/Heatsink to Card Cage) (M3 x 10)	27	340–0475–14	7	Fuse (5 Amp) (Five Used On Generator Interface Board and Two Used On Base Board)
12	815–0949	32	Screw, Hex Head (4–40 x 1/4)				
13 14	815–0948	16	Screw, Hex Head (M4 x 6) Cover, Header – 96 Pin				828 Wiring Harness 827 Wiring Harness
	323-1848	5	With Base Board				-
	323–1848	4	With Base and Lonworks Boards				
	323–1848	3	With Base, Lonworks and Parallel Boards				

Relay

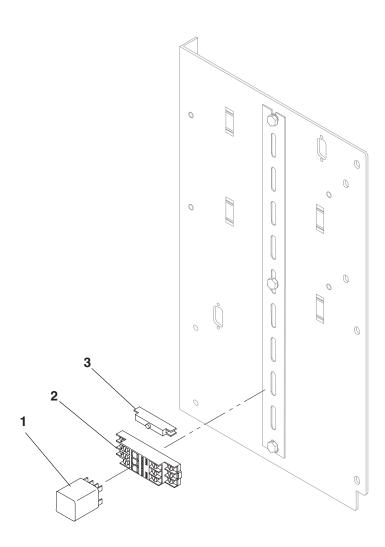


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Relay	2			Socket, Relay
			Alarm Relay (K14)		323-1410-01	1 1	Alarm Relay
	307-1058-01	1 1	12 Volt		323-1410-01	3	Run Relay
	307-1056-01	1 1	24 Volt	3	323-1411-01	2	Clip, Socket Mounting
			Run Relay (K11,12,13)				_
	307-1058-01	1 3	12 Volt				
	307-1056-01	1 3	24 Volt				

Ground Strap Circuit Breaker Box

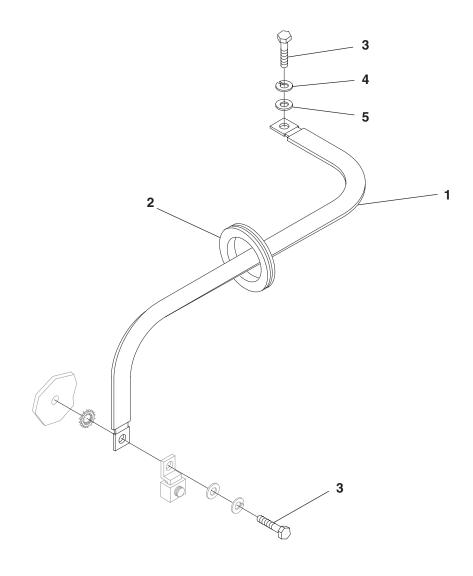

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	337-3465	1	Strap, Ground (25")	4	850-2010	1	Washer, Lock - Spring (M10)
2	508-1090	1	Grommet (Fits 3-1/4" Hole)	5	526-2120	1	Washer, Flat (M10)
3	800–2088	2	Screw, Cap – Hex Head (M10 x 35mm)				. ,


Wiring Harness Control

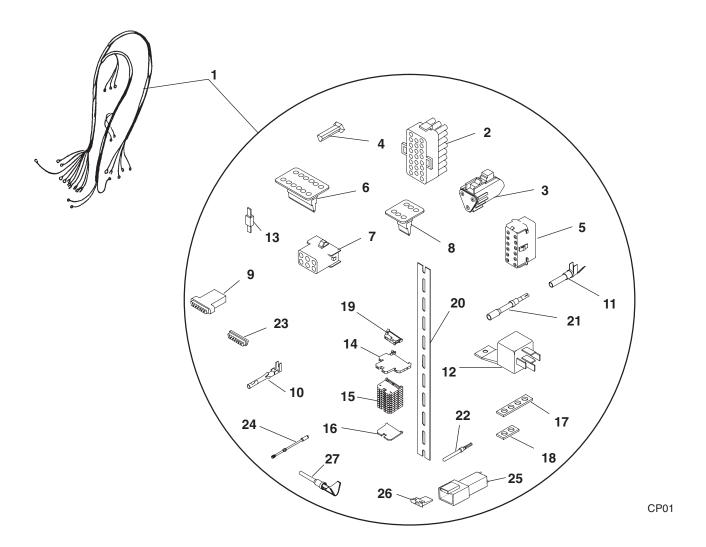

Wiring Harness Control


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3808	1	Harness, Control (Includes	12 13	307–2817–02 357–0030	2 1	Relay (24 Volt) (K14, K15)
2			Parts Listed Below)				Rectifier, Silicon
2	202 1605 01	4	Plug, Connector (23 Place)	14	332-3125-04	-	Block, Terminal (Single)
	323–1605–01 323–1605–03	1	Colored Black (Station 23)	15	332-3125-02		Block, Terminal (10 Terms)
0			Colored Grey (Station 8)	16	332-3126-02	_	Spacer
3	323–1493	1	Plug, Connector (3 Place)	17	332-2843-07		Jumper, Terminal (4 Pole)
4	000 4500	_	(Station 22)	18	332–2843–05		Jumper, Terminal (2 Pole)
4	323–1503	1	Wedge (3 Place) (Used With	19	332–2878	2	Bracket, Terminal End
_	000 4500		Station 22)	20	332–3637	1	Rail, Terminal (18.46")
5	323–1582	1	Plug, Connector (12 Place) (Station 21)	21	323–1835–01	53	Socket, Contact (10 Used With Station 6, 43 Used
6	323-1583	1	Wedge (12 Place) (Used				With Station 1)
			With Station 21)	22	323-1847-01	4	Pin, Contact (Used With
7	323-1623	2	Plug, Connector (6 Place)				Station 12)
			(Station 7, Station Inline D)	23			Grommet
8	323-1624	2	Wedge (6 Place) (Used With		323-1843	1	50 Place
			Stations 7 and Inline D)		323-1845	1	25 Place
9			Contact, Connector	24	323-1844	4	Jackscrew
	323–1841 323–1836	1	9 Place (Station RS232) 25 Place (Station 6)	25	323-1505	1	Plug, Connector (2 Place) (Inline H)
	323–1837	1	50 Place (Station 1)	26	323-1501	1	•
10		•	,	20	323-1301	ı	Wedge (2 Place) (Used With
10	323–1614–01	29	Pin, Contact (17 Used With Station 23, 12 Used With Station 8)	27	323–1491	2	Inline H) Pin, Contact (Used With Inline H)
11	323–1492	26	Socket, Contact (11 Used With Station 21, 2 Used Station 22, 6 Used With Station 7, 5 Used With Station Inline D, 2 Used With Station 6)				

Wiring Harness AC

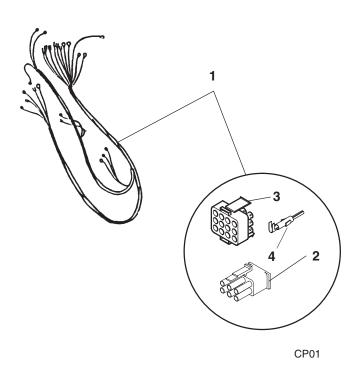


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – AC (15 Wire)	2	323-1643-01	1	Plug, Connector (6 Place) (P10)
			(Includes Parts Listed Below) Standard – Frame 7	3	323–1644–03	1	Housing, Connector (12 Place) (P9)
			Generators (Without	4	323-1648	15	Socket, Contract (10 Each Used
			Remote Control) (09, 10 to				In P9, 5 Each Used In P10)
			PMG, X, XX, 5, 6, 7, 8, CT21, 22, 23) (82")				
	338–3805	1	Low Voltage				
	338–3873	1	Medium Voltage				
			Remote Control				
			Frame 7 Generators (09,				
			10 to PMG, X, XX, 5, 6, 7,				
	000 0004		8, CT21, 22, 23)				
	338–3834	1	Low Voltage (188")				
	338–3874	1	Medium Voltage (188")				
	338–3806	1	Frame 8 Generators (P9, P10 to 8, 9, 10, 13, 14, 42, 43, 48, 49, 54, 55, 65, 66, 67, 68) High Voltage (176")				

Wiring Harness Engine Extension

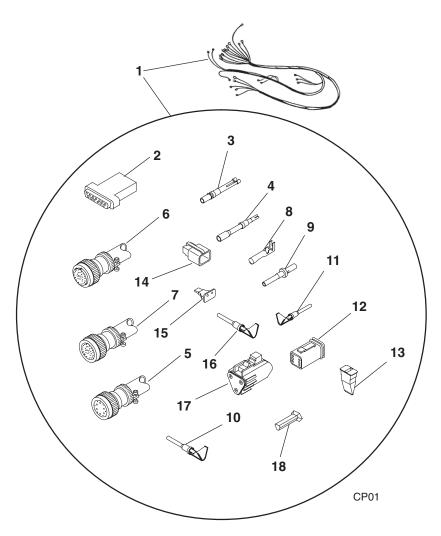


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338-3800	1	Harness, Wiring – Engine	8	323-1752	30	Socket, Contact
			Extension (Includes All Parts	9	323-1838	6	Pin, Contact
			Listed Below) (C1,C2,C3 to J2,J5,J14,J15,J16,)	10	323–1491	12	Pin, Contact (Used With 323–1625 Housing)
2			Connector, Contact	11	323-1834	30	Pin, Contact
	323–1841	1	9 Place (Includes Screws and Locknuts) (Connector 13)	12	323–1625	1	Housing, Connector (6 Place) (Inline D)
	323–1837	2	50 Place (Includes Backshell and Hardware) (Connector 2	13	323–1626	1	Wedge (Used With 323–1625 Housing)
			and 5)	14	323-1504	4	Plug, Connector (2 Place)
3	323-1835-01	20	Socket, Contact (5/8" Long)	15	323-1500	4	Wedge
4	323-1835-02	125	Socket, Contact (7/8" Long)	16	323-1492	8	Socket, Contact
5	323-1833	1	Plug, Connector (19 Place)	17	323-1493	1	Plug, Connector (3 Place)
			(Inline C)	18	323-1503	1	Wedge
6	323–1832	1	Plug, Connector (33 Place) (With Center Collar) (Inline A)				
7	323–1831	1	Plug, Connector (33 Place) (Without Center Collar) (Inline B)				

Control Heater

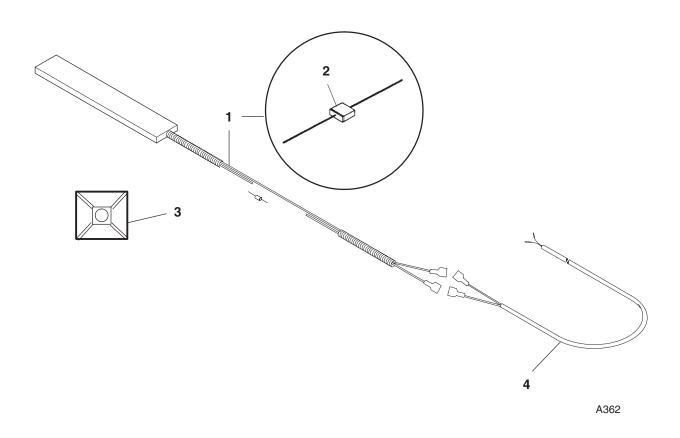


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater Assembly, Control – 100	2	357-0114	1	Rectifier (3 Amp)
			Watt (Includes Rectifier)	3	332-3338	2	Mount, Cable
	300-4515-01	1	120 Volt	4	338-3829	1	Harness, Wiring – Control
	300-4515-02	1	240 Volt				Heater (120 Volt)

Ground Fault Relay

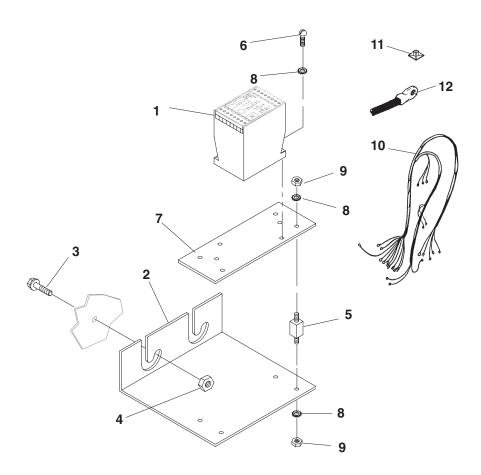

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-2843	1	Relay (GFA)	8	853-0005	8	Washer, Lock - ET (#8)
2	301-6987	1	Bracket, Mounting	9	870-0221	10	Nut, Hex - W/ET (#8-32)
3	821–0017	2	Screw, Self–Locking – Hex Washer Head (5/16–18 x 1/2")	10	338–3233	1	Harness, Wiring (GFA to TB1, GEN NEUTRAL and GND) (5
4	870-0257	2	Nut, Hex - Self-Locking				Wire, 119")
			(5/16–18)	11	332-2420	2	Mount, Cable Tie
5	402-0354	4	Mount, Shock	12	226-4406-06	2	Cable, Generator (Generator
6	812-0081	2	Screw, Machine – Round Head (#8–32 x 5/8")				Neutral to Generator Grounding Bolt) (24")
7	319-0030	1	Plate, Mounting				


Differential Current Transformer

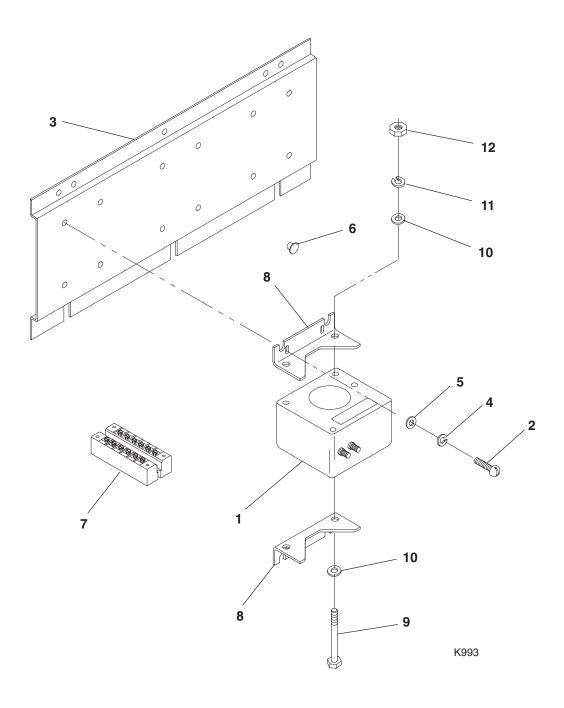

Differential Current Transformer


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Transformer, Current	2	813-0098	12	* Screw, Machine - Round
			(CT1,CT2,CT3)				Head (#10–32 x 3/8")
			5kV	3	319-1265	1	* Bracket, Current Transformer
	302-1945-1	0 3	Ratio 75/5	4	850-0030	12	* Washer, Lock – Spring (#10)
	302-1945-0	3 3	Ratio 100/5	5	526-0008	12	* Washer, Flat (#10)
	302-1945-0	2 3	Ratio 150/5	6	517-0090	1	Plug, Hole (Fits 5/16" Hole)
	302-1945-0	1 3	Ratio 200/5				(Quantity Used As
	302-1945-0	4 3	Ratio 250/5				Required)
	302-1945-0	5 3	Ratio 300/5	7	332-3178-01	1	Block, Terminal (6 Place)
	302-1945-0	6 3	Ratio 400/5				(SCB)
	302-1945-0	7 3	Ratio 500/5	8	319-3297	6	* Bracket, Foot
	302-1945-0	8 3	Ratio 600/5	9	800-0039	6	* Screw, Cap – Hex Head
	302-1945-0	9 3	Ratio 750/5				(5/16-18 x 3-1/2")
	302-1945-1	1 3	Ratio 800/5	10	526-0022	12	* Washer, Flat (5/16")
	302-1945-1	2 3	Ratio 1000/5	11	850-0045	6	* Washer, Lock – Spring
	302-1945-1	3 3	Ratio 1200/5				(5/16")
	302-1945-1	4 3	Ratio 1500/5	12	862-0015	6	* Nut, Hex (5/16–18)
	302-1945-1	5 3	Ratio 1600/5				
			600V				
	302-1961-0	1 3	Ratio 200/5			vare Use	ed With 5kV Current
	302-1961-0	2 3	Ratio 250/5	Т	ransformers		
	302-1961-0	3 3	Ratio 300/5				
	302-1961-0	4 3	Ratio 400/5				
	302-1961-0		Ratio 500/5				
	302-1961-0	6 3	Ratio 600/5				
	302-1961-0	7 3	Ratio 750/5				
	302-1961-0	8 3	Ratio 800/5				
	302-1961-0	9 3	Ratio 1000/5				
	302-1961-1	0 3	Ratio 1200/5				
	302-1961-1	1 3	Ratio 1500/5				
	302-1961-1	2 3	Ratio 1600/5				
	302-1961-1	3 3	Ratio 1800/5				
	302-1961-1		Ratio 2000/5				
	302-1961-1		Ratio 2500/5				
	302-1961-1	6 3	Ratio 3000/5				

Current Transformer

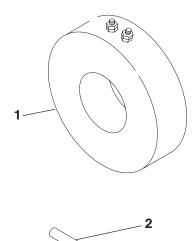


CP01

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	302-1926-36 302-1926-37 302-1926-34 302-1926-32 302-1926-31	3	Transformer, Current (CT21, CT22, CT23) Ratio 670/1 Ratio 1150/1 Ratio 4200/1 Ratio 5750/1 Ratio 6250/1	2	898–1329	3	Sleeving, Insulation – Used On Neutral Ends Of Generator Phase Conductors (2400, 1905 DELTA and 4160, 3300 WYE) (5–1/2")

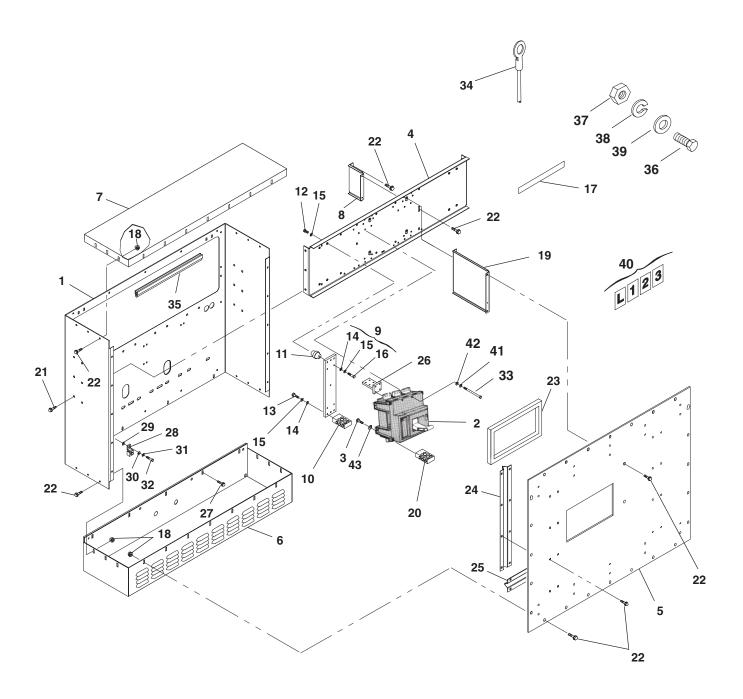


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Circuit Breaker	6	319–1925	1	Panel – Bottom
2			Breaker, Circuit – 3 Pole,	7	319-1961	1	Panel – Top
			100% Rated (Includes Mounting Screws) Frame	8	319–3253–02	1	Brace, Mounting – Circuit Breaker
			Size CM2000-HH Circuit Breakers Include Bus Bars (T-bars) (CB21)	9	300-4480-01	1	Bar Assembly, Neutral (Includes Neutral Bars, Labels and Parts Marked *)
			Standard	10	332-3303-01	1	* Lug, Solderless
	320-1783-0 ⁻	1 1	Frame Size	11	332-2744-07	4	* Standoff, Insulator
	000 1700		CM1250-HH	12	800-0048	4	* Screw, Cap – Hex Head
	320–1783	1	Frame Size	4.0			(3/8–16 x 3/4")
	000 4700 0		CM1600-HH	13	800–2089	3	* Screw, Cap – Hex Head
	320–1783–02	2 1	Frame Size	4.4	F00 0100	7	(M10 x 40mm)
	000 4700 00		CM2000–HH	14	526–2120	7	* Washer, Flat (M10)
	320–1783–03	3 1	Frame Size	15	850–2010	11	* Washer, Lock – Spring (M10)
			CM2500–HH	16	800–0052	4	* Screw, Cap – Hex Head
			With 24 Volt Shunt	47	001 0000	4	(3/8–16 x 1–1/2")
	320-1783-05	5 1	Trip Frame Size	17	091–0002	1	 Strip, Copper (Used for wrapping ends of leads
			CM1250-HH				before securing to neutral
	320-1783-04	4 1	Frame Size				bar lugs) (Quantity Used As
			CM1600-HH				Required)
	320-1783-06	3 1	Frame Size	18	870–0504	26	Nut, Self–Retaining (M6)
			CM2000-HH	19	319-3252-02		Brace, Cover
	320-1783-07	7 1	Frame Size	20	332–3303–01		Lug, Solderless
			CM2500-HH With Auxiliary	21	821–6003–02	6	Screw, Self-Locking - Hex Washer Head (M8 x 20mm)
			Contacts and Bell	22	821-6002-03	85	Screw, Self-Locking - Hex
			Alarm				Washer Head (M6 x 16mm)
	320-1783-18	3 1	Frame Size CM1250–HH	23	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 4
	320-1783-17	7 1	Frame Size				Feet Required)
	020 1700 17	' '	CM1600-HH	24	319–3286	2	Brace, Cover (Vertical)
	320-1783-19	9 1	Frame Size	25	319–3288	2	Brace, Cover (Vertical)
	020 1700 10		CM2000-HH	26	010 0200	_	Bar, Bus (T-Bar) (Includes
	320-1783-20	0 1	Frame Size	20			Mounting Hardware)
	020 1700 20		CM2500-HH		337–2789	4	Sets With CM1250–HH,
			With Auxiliary		007 2700	•	CM1600–HH Breakers
			Contacts, Bell		337–2789	1	Sets With CM2000-HH,
			Alarm and 24 Volt		00. 2.00	•	CM2500-HH Breakers
			Shunt Trip	27	821-2035	5	Screw, Self–Locking – Hex
	320-1783-09	9 1	Frame Size	_,	021 2000	Ü	Washer Head (M6 x 25mm)
	020 1700 00	,	CM1250-HH	28	332-2001	1	Lug, Solderless
	320-1783-08	3 1	Frame Size	29	856–0010	1	Washer, Lock – EIT (3/8")
	020 1700 00	,	CM1600–HH	30	526–2120	1	Washer, Flat (M10)
	320-1783-10	0 1	Frame Size	31	850–2010	1	Washer, Lock – Spring (M10)
	020 1700 10		CM2000–HH	32	800–2086	1	Screw, Cap – Hex Head
	320-1783-1	1 1	Frame Size	02	2000	•	(M10 x 25mm)
			CM2500-HH				
3	800-2089	9	Screw, Cap – Hex Head				
_		-	(M10 x 40mm)	* – F	arts Included I	า 300–4	480-01 Neutral Bar Assembly
			CM1250-HH, CM1600-HH	-			,
	040 0450		Breakers	_			
4	319–3153	1	Bracket, Mounting	Con	tinued		
5	319–3266–0	1 1	Cover, Circuit Breaker				

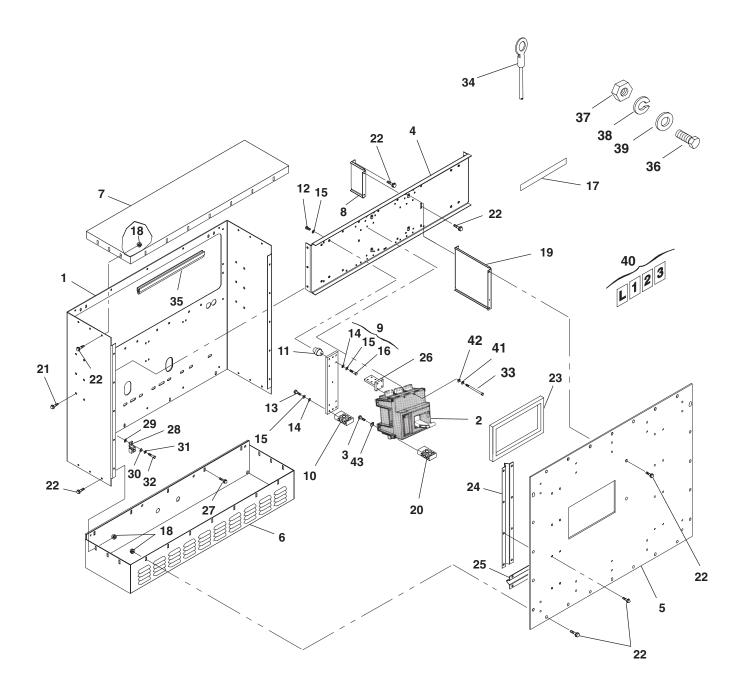


REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
Con	tinued						
33	800–2063	4	Screw, Cap – Hex Head (M8 x 50mm)	39 40	526–2140	48	Washer, Flat (M12) Label, Marker (10 Characters
34	226-4406-08	3 1	Lead – Circuit Breaker (Quantity Used As				Per Card) (Quantity Used As Required)
			Required) 36" (Without Markings) (#1/0 Wire)		098–5854–00 098–5854–0		Marked "L" Marked "1"
35	508-1109	_	Edging – Bulk (Order By The		098-5854-08		Marked "2"
			Foot – 3 Feet Required)		098-5854-09		Marked "3"
			The following four	41	850-2008	4	Washer, Lock - Spring (M8)
			hardware items are used	42	526-2100	4	Washer, Flat (M8)
			to fasten the load leads to the generator, neutral bar and circuit breaker.	43	850–2010	9	Washer, Lock – Spring (M10) CM1250–HH, CM1600–HH Breakers
36	800–2116	24	Screw, Cap – Hex Head (M12 x 50mm)				
37	860-2010	24	Nut, Hex (M12)	* – F	Parts Included	In 300-44	80-01 Neutral Bar Assembly
38	850-2012	24	Washer, Lock - Spring (M12)				

Disconnect Switch Molded Case UL Listed

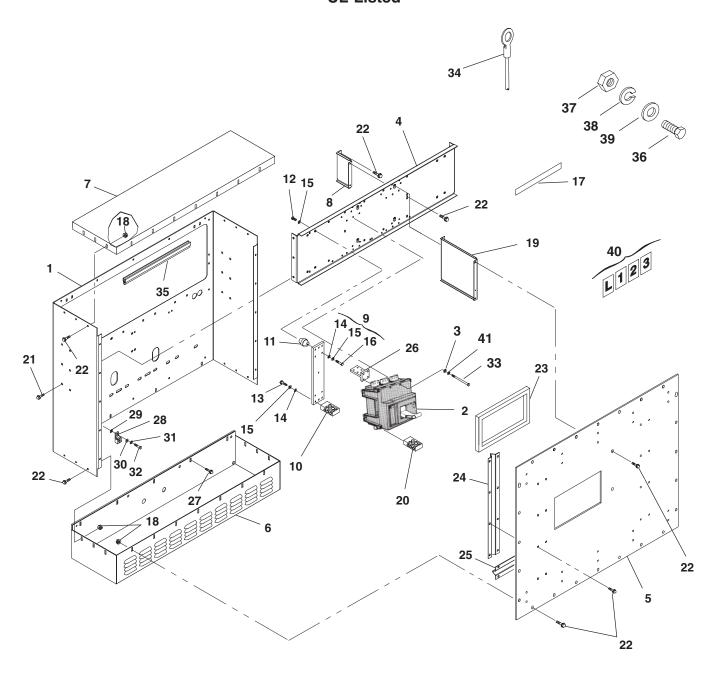


Disconnect Switch Molded Case UL Listed

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Disconnect Switch	25	319–3288	2	Brace, Cover (Horizontal)
2	320–1907–02		Switch, Disconnect – 2000 Amp, 3 Pole (Includes	26	337–2789	1	Bar, Bus (T–Bar) (Includes Mounting Hardware)
3	526–2100	4	Mounting Screws) (CB21) Washer, Flat (M8)	27	821–2035	5	Screw, Self-Locking - Hex Washer Head (M6 x 25mm)
4	319–3153	1	Bracket, Mounting	28	332-2001	1	Lug, Solderless
5	319–3266–01		Cover, Disconnect Switch	29	856-0010	1	Washer, Lock – EIT (3/8")
6	319–1925	1	Panel – Bottom	30	526–2120	1	Washer, Flat (M10)
7	319–1961	i	Panel – Top	31	850–2010	1	Washer, Lock – Spring (M10)
8	319–3253–02		Brace, Mounting –	32	800–2086	1	Screw, Cap – Hex Head
Ü	0.0 0200 02		Disconnect Switch	02	200		(M10 x 25mm)
9	300-4480-01	l 1	Bar Assembly, Neutral (Includes Neutral Bars,	33	800–2063	4	Screw, Cap – Hex Head (M8 x 50mm)
			Labels and Parts Marked *)	34	226-4406-08	1	Lead - Disconnect Switch
10	332-3303-01	l 1	* Lug, Solderless				(Quantity Used As
11	332-2744-07	7 4	* Standoff, Insulator				Required) 36" (Without
12	800-0048	4	* Screw, Cap – Hex Head				Markings) (#1/0 Wire)
			(3/8–16 x 3/4")	35	508-1109	_	Edging – Bulk (Order By The
13	800-2089	3	* Screw, Cap – Hex Head				Foot – 3 Feet Required)
			(M10 x 40mm)				The following four
14	526-2120	7	* Washer, Flat (M10)				hardware items are used
15	850-2010	11	* Washer, Lock – Spring (M10)				to fasten the load leads to
16	800–0052	4	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")				the generator, neutral bar and circuit breaker.
17	091–0002	1	* Strip, Copper (Used for wrapping ends of leads	36	800–2116	24	Screw, Cap – Hex Head (M12 x 50mm)
			before securing to neutral	37	860-2010	24	Nut, Hex (M12)
			bar lugs) (Quantity Used As	38	850–2012	24	Washer, Lock – Spring (M12)
			Required)	39	526–2140	48	Washer, Flat (M12)
18	870-0504	26	Nut, Self–Retaining (M6)	40	020 2110	.0	Label, Marker (10 Characters
19	319–3252–02		Brace, Cover	40			Per Card) (Quantity Used
20	332–3303–01		Lug, Solderless				As Required)
21	821–6003–02		Screw, Self-Locking - Hex		098-5854-06	3	Marked "L"
21	021 0000 02	- 0	Washer Head (M8 x 20mm)		098-5854-07	1	Marked "1"
22	821-6002-03	89	Screw, Self-Locking - Hex		098–5854–08	1	Marked "2"
	021 0002 00	, 00	Washer Head (M6 x 16mm)		098-5854-09	1	Marked 2 Marked "3"
23	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 4 Feet Required)	41	850–2008	4	Washer, Lock – Spring (M8)
24	319–3286	2	Brace, Cover (Vertical)	* – F	arts Included Ir	n 300–44	80-01 Neutral Bar Assembly

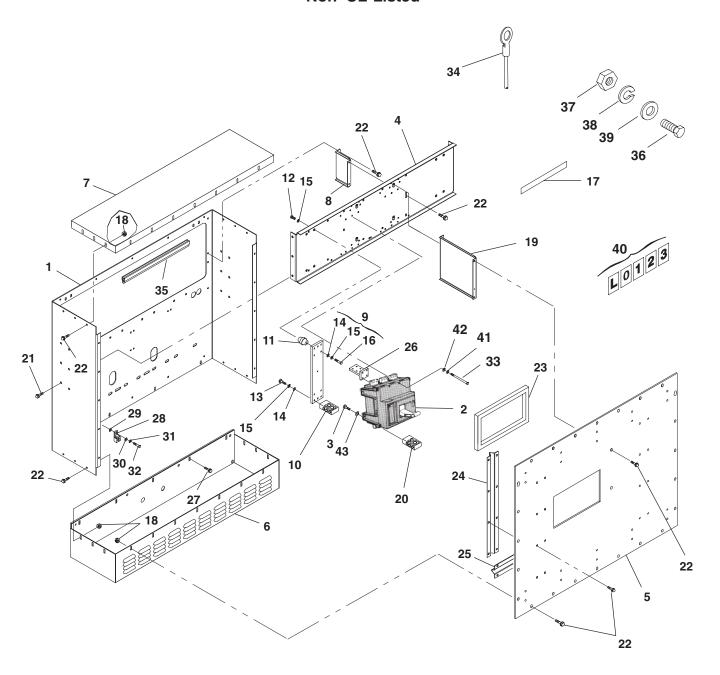

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Circuit Breaker	4	319–3153	1	Bracket, Mounting
2			Breaker, Circuit (Includes	5			Cover, Circuit Breaker
			Mounting Screws) (CB21)		319–3266–01	1	Sets With 3 Pole Circuit
			Three Pole Breakers		010 0000 00	4	Breakers
	320-1699-01	1	Standard Frame Size CM1250		319–3266–02	1	Sets With 4 Pole Circuit Breakers
	320–1699	1	Frame Size CM1230	6	319–1925	1	Panel – Bottom
	320-1699-02	-	Frame Size CM2000	7	319–1961	i	Panel – Top
	0_0 .000 0_	•	With 24 Volt Shunt	8	319–3253–02	1	Brace, Mounting – Circuit
			Trip				Breaker
	320-1699-05	1	Frame Size	9	300-4480-01	1	Bar Assembly, Neutral
			CM1250				(Includes Neutral Bars,
	320–1699–04	1	Frame Size				Labels and Parts Marked *)
	000 1000 00		CM1600				(Used With 3 Pole Circuit
	320–1699–06	1	Frame Size	10	000 0000 01	4	Breakers)
			CM2000 With Auxiliary	10 11	332–3303–01 332–2744–07	1 4	* Lug, Solderless* Standoff, Insulator
			Contacts, Bell Alarm	12	800-0048	4	* Screw, Cap – Hex Head
			and 24 Volt Shunt	12	000 0040	7	(3/8–16 x 3/4")
			Trip	13	800-2089	3	* Screw, Cap – Hex Head
	320-1699-09	1	Frame Size				(M10 x 40mm)
			CM1250	14	526-2120	7	* Washer, Flat (M10)
	320-1699-08	1	Frame Size	15	850–2010	11	* Washer, Lock - Spring (M10)
			CM1600	16	800–0052	4	* Screw, Cap – Hex Head
	320–1699–10	1	Frame Size	17	001 0000	4	(3/8–16 x 1–1/2")
			CM2000 Four Pole Breakers	17	091–0002	1	* Strip, Copper (Used for
			Standard				wrapping ends of leads before securing to neutral
	320-1699-22	1	Frame Size CM1250				bar lugs) (Quantity Used As
	320-1699-21		Frame Size CM1600				Required)
	320-1699-23		Frame Size CM2000	18	870-0504	26	Nut, Self-Retaining (M6)
			With 24 Volt Shunt	19	319-3252-02	1	Brace, Cover
			Trip	20			Lug, Solderless
	320–1699–26	1	Frame Size		332–3303–01	3	Sets With 3 Pole Circuit
	000 1000 05		CM1250		000 0000 04	4	Breakers
	320–1699–25	1	Frame Size CM1600		332–3303–01	4	Sets With 4 Pole Circuit Breakers
	320-1699-27	1	Frame Size	21	821-6003-02	6	Screw, Self-Locking - Hex
	320-1033-27	'	CM2000	21	021-0000-02	O	Washer Head (M8 x 20mm)
			With Auxiliary	22			Screw, Self-Locking - Hex
			Contacts, Bell Alarm				Washer Head (M6 x 16mm)
			and 24 Volt Shunt		821-6002-03	89	Sets With 3 Pole Circuit
			Trip				Breakers
	320–1699–30	1	Frame Size		821–6002–03	81	Sets With 4 Pole Circuit
	000 1000 00		CM1250				Breakers
	320–1699–29	1	Frame Size CM1600				
	320-1699-31	1	Frame Size	* _ F	Parte Included I	300_4	480-01 Neutral Bar Assembly
	320-1099-31	'	CM2000	- 1	arts iriciuded ii	1 300-4	400-01 Neutral Dai Assembly
3			Screw, Cap – Hex Head				
•			(M10 x 40mm)				
	800-2089	9	Sets With 3 Pole Circuit				
			Breakers				
	800–2089	12	Sets With 4 Pole Circuit	Con	tinued		
			Breakers				

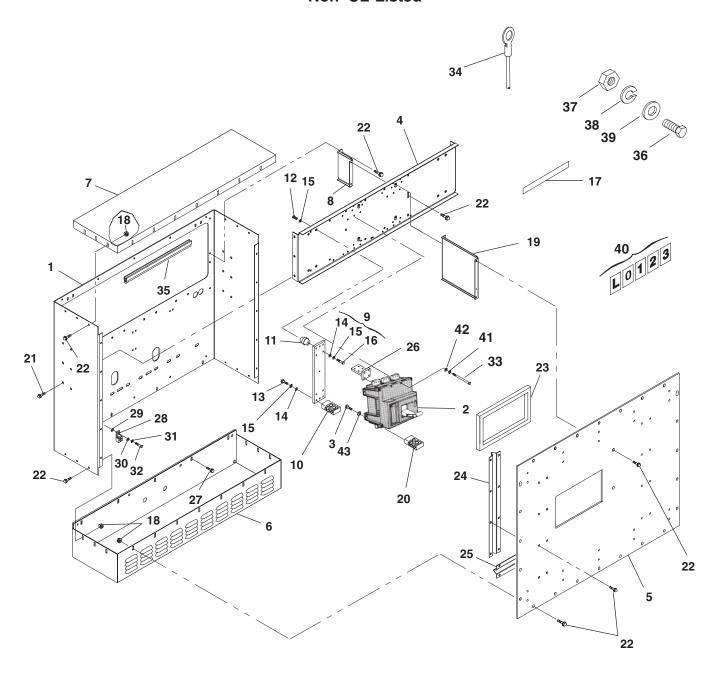

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued						
23	895–0182	_	Stripping, Weather – Bulk (Order By The Foot) Sets With 3 Pole Circuit Breakers (4 Feet	35	508–1109	-	Edging – Bulk (Order By The Foot – 3 Feet Required) The following four hardware items are used to fasten the load leads to
	895–0182	-	Required) Sets With 4 Pole Circuit Breakers (6 Feet Required)	36	800–2116	24	the generator. Screw, Cap – Hex Head (M12 x 50mm)
24	319–3286	2	Brace, Cover (Vertical) Sets With 3 Pole Circuit Breakers	37 38 39	860–2010 850–2012 526–2140	24 24 48	Nut, Hex (M12) Washer, Lock – Spring (M12) Washer, Flat (M12)
	319–3286	1	Sets With 4 Pole Circuit Breakers	40			Label, Marker (10 Characters Per Card) (Quantity Used
25 26	319–3288	2	Brace, Cover (Horizontal) Bar, Bus (T–Bar) (Includes				As Required) Marked "L"
	337–2789	4	Mounting Hardware) Sets With Frame Size CM1250 and CM1600		098–5854–06 098–5854–06		Sets With 3 Pole Circuit Breakers Sets With 4 Pole Circuit
	337–2789	1	Circuit Breakers Sets With Frame Size CM2000 Circuit Breakers		098–5854–07 098–5854–08 098–5854–09	1	Breakers Marked "1" Marked "2" Marked "3"
27	821–2035	5	Screw, Self-Locking – Hex Washer Head (M6 x 25mm)		098–5854–10		Marked '0" (Sets With 4 Pole Circuit Breakers)
28 29 30	332–2001 856–0010 526–2120	1 1 1	Lug, Solderless Washer, Lock – EIT (3/8")	41 42 43	850–2008 526–2100	4 4	Washer, Lock – Spring (M8) Washer, Flat (M8) Washer, Lock – Spring (M10)
31 32	850–2010 800–2086	1	Washer, Flat (M10) Washer, Lock – Spring (M10) Screw, Cap – Hex Head	43	850–2010	9	Sets With 3 Pole Circuit Breakers
33	800–2063	4	(M10 x 25mm) Screw, Cap – Hex Head (M8 x 50mm)		850–2010	12	Sets With 4 Pole Circuit Breakers
34	226-4406-08	1	Lead – Circuit Breaker (Quantity Used As Required) 36" (Without Markings) (#1/0 Wire)	* – F	Parts Included I	n 300–44	80-01 Neutral Bar Assembly

Part No. Page	Part No. Page	Part No. Page	Part No. Page
091–0002, 55 , 59 , 61	130–4940, 17	130–5098, 20	249–5095–05, 31
098–5854–06, 57 , 59 , 63	130–4946–02, 15	130–5099, 20 , 21	249–5095–06, 31
098–5854–07, 57 , 59 , 63	130–4947–02, 15	130–5101, 20	249–5095–07, 31
098–5854–08, 57 , 59 , 63	130–4950–02, 15	130–5102, 21	249–5095–08, 31
098–5854–09, 57 , 59 , 63	130–4951–02, 15	130–5103, 21	249–5104–01, 31
098–5854–10, 63	130–4952–02, 17	130–5104, 21	249–5104–02, 31
128–0108, 9	130–4953–02, 17	130–5105, 21	249–5104–03, 31
130–0449, 17	130–4955–02, 17	130–5118–02, 17	249–5104–04, 31
130–3588, 17	130–4966–02, 15	130–5119–02, 17	249–5104–05, 32
130–3652, 17	130–4967–02, 17	130–5144–02, 13	249–5104–06, 32
130–3660, 17	130–4974–02, 17	130–5145–02, 13	249–5104–07, 32
130–3660–03, 9	130–4975–02, 17	155–3021, 9	249–5104–08, 32
130–3684, 13	130–4976–02, 17	155–3288, 17	249–5104–09, 32
130–3687, 13	130–4999, 17	155–3289, 13 , 15	249–5104–10, 32
130–4362, 17	130–5032–02, 17	155–3290, 13 , 19	249–5104–11, 32
130–4517, 13	130–5033–02, 17	193–0486, 7 , 13 , 19	249–5104–12, 32
130–4538, 9	130–5034–02, 19	226–4406–06, 49	249–5104–13, 32
130–4546, 9	130–5035–02, 19	226-4406-08, 57 , 59 , 63	249–5104–14, 32
130–4552, 11	130–5036–02, 17	232–3710–01, 22	249–5104–15, 32
130–4885, 17	130–5037–02, 17	232–3710–02, 22	249–5104–16, 32
130–4888–02, 17	130–5045–02, 15	232–3710–03, 22	249–5104–17, 32
130–4896–02, 17	130–5046–02, 17	232–3849, 23	249–5104–18, 32
130–4897–02, 17	130–5047–02, 17	232–4061, 22	249–5104–19, 32
130–4900–02, 17	130–5061–02, 17	249–5092–01, 31	249–5104–20, 32
130–4900–04, 17	130–5062–02, 17	249–5092–02, 31	249–5104–21, 32
130–4901–02, 17	130–5064, 17	249–5092–03, 31	249–5104–22, 32
130–4901–04, 17	130–5066–02, 19	249–5092–04, 31	249–5104–23, 32
130–4902–02, 17	130–5067–02, 15	249–5092–05, 31	249–5104–24, 32
130–4903–02, 17	130–5069–02, 13	249–5092–06, 31	249–5104–25, 32
130–4904–02, 17	130–5070–02, 13	249–5092–07, 31	249–5104–26, 32
130–4907–02, 19	130–5071–02, 13	249–5092–08, 31	249–5104–27, 32
130–4908–02, 15	130–5077–02, 9	249–5092–09, 31	249–5104–28, 32
130–4910–02, 17	130–5078–02, 9	249–5092–10, 31	249–5104–29, 32
130–4914–02, 15	130–5079–02, 9	249–5092–11, 31	249–5104–30, 32
130–4919–02, 15	130–5080–02, 9	249–5092–12, 31	249–5104–31, 32
130–4920, 17	130–5081–02, 13	249–5092–13, 31	249–5104–32, 32
130–4921–02, 15	130–5082–02, 13	249–5092–14, 31	249–5104–33, 32
130–4934–02, 15	130–5084–02, 13	249–5092–15, 31	249–5104–34, 33
130–4935–02, 15	130–5085–02, 15	249–5092–16, 31	249–5104–35, 33
130–4936–02, 15	130–5089–02, 9	249–5095–01, 31	249–5104–36, 33
130–4937–02, 15	130–5090, 6	249–5095–02, 31	249–5104–37, 33
130–4938–02, 17	130–5096, 20	249–5095–03, 31	249–5104–38, 33
130–4939–02, 17	130–5097, 20	249–5095–04, 31	249–5104–39, 33

Part No. Page	Part No. Page	Part No. Page	Part No. Page
249–5104–40, 33	249–5107–32, 34	302–1926–32, 53	309–0649, 9
249–5104–41, 33	249–5107–33, 34	302–1926–34, 53	319–0030, 49
249–5104–42, 33	249–5107–34, 34	302–1926–36, 53	319–1265, 51
249–5104–43, 33	249–5107–35, 34	302–1926–37, 53	319–1925, 25 , 55 , 59 , 61
249–5104–44, 33	249–5107–36, 34	302–1945–01, 51	319–1961, 25 , 55 , 59 , 61
249–5104–45, 33	249–5107–37, 34	302–1945–02, 51	319–2814, 11
249–5104–46, 33	249–5107–38, 34	302–1945–03, 51	319–2815, 9
249–5104–47, 33	249–5107–39, 34	302–1945–04, 51	319–3153, 55 , 59 , 61
249–5104–48, 33	249–5107–40, 34	302–1945–05, 51	319–3184, 25 , 55 , 59 , 61
249–5104–49, 33	249–5107–41, 35	302–1945–06, 51	319–3252–02, 55 , 59 , 61
249–5104–50, 33	249–5107–42, 35	302–1945–07, 51	319–3253–02, 55 , 59 , 61
249–5104–51, 33	249–5107–43, 35	302–1945–08, 51	319–3264, 25
249–5107–01, 33	249–5107–44, 35	302–1945–09, 51	319–3265, 25
249–5107–02, 33	249–5107–45, 35	302–1945–10, 51	319–3266–01, 55 , 59 , 61
249–5107–03, 33	249–5107–46, 35	302–1945–11, 51	319–3266–02, 61
249–5107–04, 33	249–5107–47, 35	302–1945–12, 51	319–3286, 25 , 55 , 59 , 63
249–5107–05, 33	249–5107–48, 35	302–1945–13, 51	319–3288, 25 , 55 , 59 , 63
249–5107–06, 33	249–5107–49, 35	302–1945–14, 51	319–3297, 51
249–5107–07, 33	249–5107–50, 35	302–1945–15, 51	319–3583, 39
249–5107–08, 33	249–5107–51, 35	302–1961–01, 51	319–3584, 39
249–5107–09, 33	300–4306, 39	302–1961–02, 51	319–3585, 39
249–5107–10, 33	300–4308–01, 39	302–1961–03, 51	319–3586, 39
249–5107–11, 33	300–4308–02, 39	302–1961–04, 51	319–3605, 41
249–5107–12, 34	300–4309–01, 39	302–1961–05, 51	319–3606, 41
249–5107–13, 34	300–4309–02, 39	302–1961–06, 51	319–3649, 39
249–5107–14, 34	300–4480–01, 55 , 59 , 61	302–1961–07, 51	319–3650, 39
249–5107–15, 34	300–4515–01, 48	302–1961–08, 51	319–3672–02, 27
249–5107–16, 34	300–4515–02, 48	302–1961–09, 51	319–3786–02, 27
249–5107–17, 34	300–4968, 41	302–1961–10, 51	319–3910–02, 29
249–5107–18, 34	300–4969, 41	302–1961–11, 51	319–3911–02, 29
249–5107–19, 34	300–4970, 41	302–1961–12, 51	319–3912–02, 29
249–5107–20, 34	300–5179, 37	302–1961–13, 51	319–3913–02, 29
249–5107–21, 34	300–5180, 37	302–1961–14, 51	319–3914–02, 29
249–5107–22, 34	300–5181, 37	302–1961–15, 51	319–3915–02, 29
249–5107–23, 34	300–5187, 41	302–1961–16, 51	319–3916–02, 29
249–5107–24, 34	300–5195, 37	307–1056–01, 42	319–3917–02, 29
249–5107–25, 34	300–5196–01, 37	307–1058–01, 42	319–3919–02, 29
249–5107–26, 34	300–5241, 41	307–2817–02, 45	319–3920–02, 29
249–5107–27, 34	300–5270, 41	307–2843, 49	319–3921–02, 29
249–5107–28, 34	300–5280–02, 37	307–2859, 11	319–3923–02, 37
249–5107–29, 34	300–5291, 37	308–0999, 37	319–3924–02, 37
249–5107–30, 34	301–6987, 49	308–1085, 37	319–3925–02, 37
249–5107–31, 34	302–1926–31, 53	309–0635–02, 15	319–3926–02, 37

Part No. Page	Part No. Page	Part No. Page	Part No. Page
319–3950, 37	320–1783–06, 55	323–1709, 7 , 13	332–3125–04, 45
319–3951, 37	320–1783–07, 55	323–1718, 11	332–3126–02, 45
319–3968, 39	320–1783–08, 55	323–1752, 47	332–3178–01, 51
319–3994–02, 27	320–1783–09, 55	323–1765, 7 , 13	332–3196, 30
319–3995–02, 27	320–1783–10, 55	323–1831, 47	332–3234–02, 37
319–3996–02, 27	320–1783–11, 55	323–1832, 47	332–3303–01, 55 , 59 , 61
319–3997–02, 27	320–1783–17, 55	323–1833, 47	332–3338, 48
319–3998–02, 27	320–1783–18, 55	323–1834, 47	332–3440, 11
319–3999–02, 27	320–1783–19, 55	323–1835, 41	332–3491–01, 37 , 41
319–4000–02, 27	320–1783–20, 55	323–1835–01, 45 , 47	332–3629, 39
319–4001–02, 27	320–1907–02, 59	323–1835–02, 47	332–3637, 45
319–4002–02, 27	323–1410–01, 42	323–1836, 45	332–3642, 37
319–4003–02, 27	323–1411–01, 42	323–1837, 41 , 45 , 47	332–3643, 37
319–4004–02, 27	323–1445, 11	323–1838, 47	332–3644, 37
319–4005–02, 27	323–1491, 7 , 11 , 13 , 37 , 45 ,	323–1839, 37	333–0438–05, 23
319–4006–02, 27	47	323–1841, 45 , 47	333–0438–06, 23
319–4007–02, 27	323–1492, 11 , 45 , 47	323–1843, 41 , 45	333–0634–01, 9
319–4126–02, 27	323–1493, 45 , 47	323–1844, 41 , 45	333–0634–02, 9
319–4138–02, 27	323–1494, 11 , 37	323–1845, 45	337–0090–01, 5
320–1699, 61	323–1500, 11 , 47	323–1847–01, 45	337–2789, 55 , 59 , 63
320–1699–01, 61	323–1501, 45	323–1848, 41	337–3465, 43
320–1699–02, 61	323–1502, 11 , 37	323–1849, 41	337–3466–01, 27
320–1699–04, 61	323–1503, 45 , 47	323–1850, 41	337–3466–02, 39
320–1699–05, 61	323–1504, 11 , 47	326–0230, 37	338–3233, 49
320–1699–06, 61	323–1505, 45	330-0141-03, 23	338–3335–01, 11
320–1699–08, 61	323–1547, 7 , 13	330-0141-04, 23	338–3335–09, 11
320–1699–09, 61	323–1549, 7 , 13	330–0142, 23	338–3800, 47
320–1699–10, 61	323–1582, 45	331–0042, 11	338–3801, 37
320–1699–21, 61	323–1583, 45	331–0554, 11	338–3805, 46
320–1699–22, 61	323–1605–01, 45	331–0555, 11	338–3806, 46
320–1699–23, 61	323–1605–03, 41 , 45	332–1468, 11	338–3808, 45
320–1699–25, 61	323–1614–01, 45	332–1469, 11	338–3827, 41
320–1699–26, 61	323–1623, 45	332–2001, 22 , 55 , 59 , 63	338–3828, 41
320–1699–27, 61	323–1624, 45	332–2420, 49	338–3829, 48
320–1699–29, 61	323–1625, 47	332–2634, 9 , 27	338–3831, 11
320–1699–30, 61	323–1626, 47	332–2744–07, 55 , 59 , 61	338–3832, 7 , 13
320–1699–31, 61	323–1637, 9	332–2843–05, 45	338–3834, 46
320–1783, 55	323–1643–01, 46	332–2843–07, 45	338–3873, 46
320–1783–01, 55	323–1644–03, 46	332–2878, 45	338–3874, 46
320–1783–02, 55	323–1648, 46	332–3023, 23	338–3894, 5
320–1783–03, 55	323–1652, 11	332–3024–14, 23	340-0475-14, 41
320–1783–04, 55	323–1688, 37	332–3125–02, 41 , 45	357–0030, 11 , 45
320–1783–05, 55	323–1708, 7 , 13		

Part No. Page	Part No. Page	Part No. Page	Part No. Page
357–0114, 48	503–1634–01, 9 , 15	517–0021, 23	800–2121, 27
363–0183, 39	503–1726, 13 , 15 , 19	517–0090, 51	800–2174, 17
363–0187, 39	503–1727, 15	517–0138–02, 11	800–2177, 17
363–0188, 39	503–1728, 13 , 15	518–0064, 17	800–2206, 17 , 22
363–0189, 39	503–1745, 17	518–0548–19, 15	800–2208, 22
370–4081, 13	503–1863, 17	518–0548–24, 9	800–2543–08, 30
402–0354, 49	503–1872–02, 17	518–0548–25, 17	800–3017–37, 19
402–0527, 27	503–1872–05, 13 , 15	518-0601, 4	800–3017–38, 15 , 19
402–0748, 39	503–1872–09, 13 , 15 , 19	518–0633, 17	800–3017–41, 13
402–0749, 39	503–2129–01, 17	525–0304, 4	800–3017–56, 29
402–0751, 39	503–2129–02, 17	525–0305, 4	800–3017–58, 27
403–4091, 27	503–2129–03, 15	525–0306, 4	800–3047–02, 22
403–4303–01, 22	503–2129–04, 13	526–0008, 51	800–3047–03, 22
403–4303–02, 22	503–2129–05, 13 , 15	526–0022, 51	800–3048–01, 22
403–4332, 22	504–0171, 5 , 13 , 19	526–0128, 9	805–2022, 30
403–4351–02, 22	505–0003, 17	526–0172, 27	812–0081, 49
403–4357–02, 29	505–0011, 17	526–0219, 19	813–0098, 51
406–0916, 41	505–0012, 13 , 19	526–0346, 17	815–0447, 11
406–0917, 41	505–0024, 6	526-0399-62, 13 , 15 , 19	815–0539, 9
416–0446, 5	505–0042, 9	526-0399-64, 27 , 29	815–0796, 37
416–0639, 5	505–0051, 13 , 17	526–0399–76, 22	815–0828–04, 39
416–0680, 5	505–0060, 19	526–0399–78, 22	815–0829–02, 39
416–1019, 5	505–0100, 9	526–0416, 30	815–0872, 37
501–0678–01, 17	505–0102, 5 , 19	526–2100, 9 , 57 , 59 , 63	815–0947, 41
501–0678–02, 5	505–0127, 9	526–2120, 43 , 55 , 59 , 61 , 63	815–0948, 41
501–0678–03, 6	505–0157, 9	526–2140, 5 , 57 , 59 , 63	815–0949, 41
501–0682, 5	505–0249, 9	526–2183, 17	821–0017, 49
502–0656, 6 , 17	505–0324, 5 , 13 , 19	526–2203, 15 , 17	821–2035, 25 , 55 , 59 , 63
502–0827, 9	505–0394, 17	720–1146, 15	821–5002–03, 9
502–0836, 17	505–0462, 19	800–0039, 51	821–6001–02, 39
502–1257, 9	505–1429, 19	800–0048, 55 , 59 , 61	821–6002–02, 39
502–1259, 9	505–1435, 17	800–0051, 22	821–6002–03, 25 , 55 , 59 , 61
502–1260, 9	505–1436, 17	800–0052, 55 , 59 , 61	821–6002–04, 27
502–1261, 9	505–1508, 5	800–0094, 19	821–6003–01, 39
502–1315, 9	505–1561, 19	800–0310–17, 27	821–6003–02, 9 , 13 , 15 , 19 ,
502–1318, 13 , 15	508–0228, 23	800–2008, 23	27, 29, 55, 59, 61
502–1321, 9	508–1088, 29	800–2060, 9	821–6003–03, 6 , 13 , 15 , 19
502–1325, 9	508–1090, 27 , 43	800–2063, 57 , 59 , 63	821–6004–01, 27 , 39
502–1326, 13	508–1109, 57 , 59 , 63	800–2086, 55 , 59 , 63	822–3047, 23
503–0189, 5	509–0283–01, 9	800–2088, 43	822–3075, 23
503–0249, 5	510–0194, 17	800–2089, 55 , 59 , 61	823–0001–01, 37
503–1136, 9 , 15	511–0161–17, 15	800–2111, 5	823–0002–01, 37
503–1418, 17	512–0203, 17	800–2116, 57 , 59 , 63	823–0002–04, 39

Part No. Page	Part No. Page	Part No. Page	Part No. Page
850–0020, 37 850–0030, 51 850–0045, 51 850–0114–55, 13 850–0114–56, 27 , 29 850–2003, 23 850–2004, 23 , 37 850–2005, 23 850–2008, 9 , 57 , 59 , 63	850–2012, 5 , 27 , 30 , 57 , 59 , 63 850–2016, 17 850–2020, 15 , 17 , 22 850–2024, 22 853–0005, 49 856–0010, 22 , 27 , 37 , 39 , 55 , 59 , 63 856–0013, 5 860–2003, 37	860–2009, 37 860–2010, 27 , 57 , 59 , 63 860–2012, 17 860–2013, 15 , 17 860–2023–01, 22 860–2024–01, 22 862–0015, 51 862–0026–56, 13 862–0026–57, 27	870–0221, 49 870–0257, 49 870–0504, 25 , 55 , 59 , 61 870–0550–09, 9 , 22 870–2055, 39 870–2065–03, 9 , 13 870–2203, 27 , 39 870–2208, 39 895–0182, 55 , 59 , 63
850–2010, 43 , 55 , 57 , 59 , 61 , 63	860–2005, 23 , 37 860–2006, 23	862–0026–77, 29 870–0131, 9	898–1254–25, 23 898–1329, 53



Onan Corporation 1400 73rd Avenue N.E. Minneapolis, MN 55432 612-574-5000 Telex: 275477

Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation Cummins is a registered trademark of Cummins Engine Company