


Parts Catalog

DFLB DFLC DFLD DFMB

Generator Set

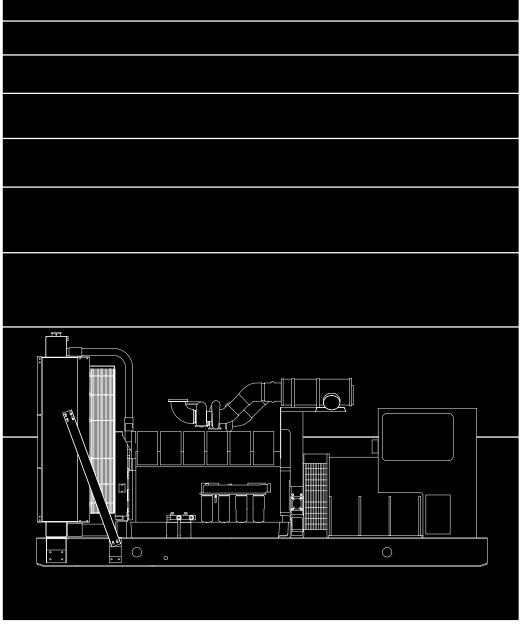

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

A DANGER

This symbol warns of immediate hazards which will result in severe personal injury or death.

△WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

△CAUTION

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS

△WARNING

Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

△WARNING

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

△WARNING

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

△WARNING

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This catalog applies to Onan Generator Models DFLB, DFLC, DFLD, and DFMB as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set unless noted in the description column.

Engine parts that have been modified or added by Onan are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

Replacement Engine

Onan/Cummins Generator Model	Cummins Engine Model					
DFLB	KTA50-G2 Configuration No. D283014DX02					
DFLC	KTA50-G3 Configuration No. D283021DX02					
DFLD	KTA50-G4 Configuration No. D283022DX02					
DFMB	KTTA50–G2 Configuration No. D283025DX02					

Replacement engines cannot be ordered from Onan. Order from your nearest Cummins distributor.

Generator Set Data Table

Model and		Battery				
Specification	Watts Volts		Hertz	Wire	Phase	Voltage
1100DFLB/*	1,100,000	#	60	6	1 or 3	24 VDC
1120DFLC/* 1250DFLC/*	1,120,000 1,250,000	# #	50 60	6 6	1 or 3 1 or 3	24 VDC 24 VDC
1200DFLD/*	1,200,000	#	50	6	1 or 3	24 VDC
1280DFMB/* 1500DFMB/*	1,280,000 1,500,000	# #	50 60	6 6	1 or 3 1 or 3	24 VDC 24 VDC

^{* –} The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options or deviations from the standard model. The specification letter advances (A to B, B to C, etc.) with major manufacturing changes.

- Broad range reconnectible

- Absorber, Shock Fan DFLB, 56
- Absorber, Shock Fan DFLC, DFLD, DFMB Begin Spec N, **58**
- Absorber, Shock Fan DFLC, DFLD, DFMB Spec K Through M, **57**
- Alarm, Audible Sets With Detector Control, 104
- Alarm, Audible Sets With PowerCommand Control, 124
- Alternator 45 Amp, 75
- Alternator 75 Amp, 77
- Ammeter, 123
- Ammeter Sets With Detector Control, 142
- Band, Mounting Water Inlet DFLB, DFLC, DFLD, DFMB Begin Spec M, **27**
- Bar, Bus Circuit Breaker IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **165**
- Bar, Bus Circuit Breaker IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **159**
- Bar, Bus Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**
- Bar, Bus Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, 147
- Bar, Bus Disconnect Switch Molded Case UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **169**
- Bar, Bus Disconnect Switch Molded Case UL Listed DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**
- Bar, Neutral Circuit Breaker IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 163
- Bar, Neutral Circuit Breaker IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**
- Bar, Neutral Circuit Breaker IEC Conformity DFLC Spec M, **161**
- Bar, Neutral Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**
- Bar, Neutral Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, 145, 147
- Bar, Neutral Circuit Breaker UL Listed DFLC Spec N, DFMB Spec L, **153**
- Bar, Neutral Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity – DFLC Spec R Through S, DFMB Begin Spec S, **155**
- Bar, Neutral Disconnect Switch Molded Case UL Listed – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **169**
- Bar, Neutral Disconnect Switch Molded Case UL Listed – DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**

- Base, Heat Exchanger, 61
- Belt. Alternator 45 Amp. 75
- Belt, Alternator 75 Amp, 77
- Belt, Fan DFLC, DFLD, DFMB Begin Spec N, 58
- Belt, Ribbed DFLB, 56
- Block, Auxiliary Terminal Sets With Detector Control, 131
- Block, Terminal Control Box Sets With Detector Control, 139
- Block, Terminal Engine Coolant Heater Control DFLB, DFLC, DFLD, DFMB Begin Spec M, 73
- Block, Terminal Engine to Control Wiring Harness Sets With Detector Control, **128**
- Block, Terminal Engine to Control Wiring Harness Sets With PowerCommand Control, **127**
- Block, Terminal Paralleling Interconnect, 137
- Block, Terminal Woodward Governor, 136
- Board, Printed Circuit Alarm Relay, 113
- Board, Printed Circuit Analog, 121
- Board, Printed Circuit Common Alarm Sets With Detector Control, **117**
- Board, Printed Circuit Customer Interface, 121
- Board, Printed Circuit Digital, 121
- Board, Printed Circuit Display Control Door, 123
- Board, Printed Circuit Electronic Overspeed, 99
- Board, Printed Circuit Engine Interface, 121
- Board, Printed Circuit Engine Monitor Sets With Detector Control, 139
- Board, Printed Circuit Isolation Transformer Sets With Detector Control, **98**
- Board, Printed Circuit Over/Under Voltage Relay DFLB, DFLC, DFLD, DFMB Begin Spec L, **90**
- Board, Printed Circuit Time Delay Start/Stop, 85
- Board, Printed Circuit Voltage Regulator Sets With Detector Control, **98**
- Box, Circuit Breaker IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **163**
- Box, Circuit Breaker IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**
- Box, Circuit Breaker IEC Conformity DFLC Spec M, 161
- Box, Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**
- Box, Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **145**
- Box, Circuit Breaker UL Listed DFLC Spec N, DFMB Spec L, **153**
- Box, Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S, DFMB Begin Spec R, **155**
- Box, Control, 121
- Box, Control Engine Coolant Heater DFLB, DFLC, DFLC, DFMB Begin Spec M, **73**
- Box, Control Sets With Detector Control, 139

- Box, Disconnect Switch Molded Case UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 169
- Box, Disconnect Switch Molded Case UL Listed DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**
- Box, Entrance DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **115**
- Box, Entrance Model HC6 and HC7 Generators DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **114**
- Box, Junction Engine Coolant Heater DFLB Spec K Through L, DFLC Spec K Through L, **105**
- Box, Relay Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Spec K Through L, **67**
- Box, Terminal Generator Heater, 84
- Brace, Air Starter, 31
- Bracket, Adjusting Alternator 45 Amp, **75**
- Bracket, Adjusting Alternator 75 Amp, 77
- Bracket, Battery, 129
- Bracket, Lube, 59
- Bracket, Mounting Resistive Temperature Detectors, 111
- Bracket, Mounting Wattmeter, 86
- Breaker, Circuit AC Control Door, 110
- Breaker, Circuit IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **163**
- Breaker, Circuit IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, 157
- Breaker, Circuit IEC Conformity DFLC Spec M, 161
- Breaker, Circuit UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**
- Breaker, Circuit UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **145**
- Bulb, Panel Light Replacement DC Control Door Sets With Detector Control, 141
- Bulb, Replacement Emergency Stop Switch, 87
- Bumper Skid, 129
- Cable, Battery Sets With Detector Control DFLB Begin Spec M, **15**
- Cable, Battery Sets With Detector Control DFLB Spec K Through L, 13
- Cable, Battery Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, 19
- Cable, Battery Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, **17**
- Cable, Battery Sets With PowerCommand Control DFLB, **21**
- Cable, Battery Sets With PowerCommand Control DFLC, DFLD, DFMB, 23
- Cable, Generator Ground Fault Relay, 125
- Cable, Heater Control Sets With Detector Control, 119

- Cable, Magnetic Pickup Generator Sets With Detector Control, **128**
- Cable, Magnetic Pickup Sets With PowerCommand Control, **127**
- Cable, Ribbon Control Box, 121
- Cable, Ribbon Control Door, 123
- Cable, Shielded Speed Adjusting Potentiometer, 96
- Cap, Expansion Tank Heat Exchanger, 61
- Capacitor Voltmeter Sets With Detector Control, 142
- Cartridge, Heater Generator Heater, 84
- Check Valve, Radiator 40°C Ambient Radiator DFLC Begin Spec T, **53**
- Check Valve, Radiator 50°C Ambient Radiator DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Check Valve, Radiator 50°C Ambient Radiator DFLC Begin Spec T, **55**
- Check Valve, Radiator DFLB Begin Spec M, 47
- Check Valve, Radiator DFLC Spec K Through P, DFLD, DFMB Spec K Through P, **49**
- Cleaner, Air Heavy Duty (Front) DFMB, 40
- Cleaner, Air Heavy Duty (Rear) DFMB, 41
- Cleaner, Air Heavy Duty DFLB, 37
- Cleaner, Air Heavy Duty DFLC, DFLD, 39
- Cleaner, Air Standard (Front) DFMB, 34
- Cleaner, Air Standard (Rear) DFMB, 35
- Cleaner, Air Standard DFLB, 32
- Cleaner, Air Standard DFLC, DFLD, 33
- Clip, End Mounting Rail Over/Under Frequency Relay, 88
- Clip, End Mounting Rail Over/Under Voltage Relay DFLB, DFLC, DFLD, DFMB Spec K, **89**
- Clip, Socket Mounting Relay, 121
- Cock, Drain Heat Exchanger, 63
- Connection, Water Inlet DFLB, DFLC, DFLD, DFMB Spec K Through L, **26**
- Control, Detector, 139
- Control, Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Begin Spec M, **73**
- Control. Governor Electronic. 132
- Control, PowerCommand, 116
- Controller, VAR Power Factor, 95
- Cover, Circuit Breaker IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **163**
- Cover, Circuit Breaker IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**
- Cover, Circuit Breaker IEC Conformity DFLC Spec M, 161
- Cover, Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**
- Cover, Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N,
- Cover, Circuit Breaker UL Listed DFLC Spec N, DFMB Spec L, **153**

- Cover, Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S, DFMB Begin Spec R, **155**
- Cover, Control Box Sets With PowerCommand Control DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**
- Cover, Control Box Sets With PowerCommand Control DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**
- Cover, Damper Guard Sets With Remote Radiator or Heat Exchanger DFLB Begin Spec P, **30**
- Cover, Damper Guard Sets With Remote Radiator or Heat Exchanger DFLB Spec K Through N, DFLC, DFLD, DFMB, **29**
- Cover, Disconnect Switch Molded Case UL LIsted DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **169**
- Cover, Entrance Box DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **115**
- Cover, Entrance Box Model HC6 and HC7 Generators DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, 114
- Cover, Flange Air Starter, 31
- Cover, Hydraulic Hole Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**
- Cover, Side Control Housing DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**
- Cover, Side Control Housing DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**
- Cover, Terminal Box Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Begin Spec M, **71**
- Cover, Top Control Housing DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**
- Cover, Top Control Housing DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**
- Detectors, Resistive Temperature, 111
- Door, Control, 123
- Door, Control AC Sets With Detector Control, 142
- Door, Control DC Sets With Detector Control, 141
- Drive, Fan DFLB, 56
- Drive, Fan DFLC, DFLD, DFMB Begin Spec N, 58
- Drive, Fan DFLC, DFLD, DFMB Spec K Through M, 57
- Drive, Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**
- Elbow, Exhaust Sets With Pyrometer and Detector Control, **92**
- Elbow, Exhaust Sets With Pyrometer and PowerCommand Control, **93**
- Elbow, Outlet Heat Exchanger, 61

- Element, Air Cleaner Heavy Duty (Front) DFMB, 40
- Element, Air Cleaner Heavy Duty (Rear) DFMB, 41
- Element, Air Cleaner Heavy Duty DFLB, 37
- Element, Air Cleaner Heavy Duty DFLC, DFLD, 39
- Element, Oil Bypass Filter, 79
- Exchanger, Heat, 61
- External Engine Parts Sets With Detector Control DFLB Begin Spec M, **15**
- External Engine Parts Sets With Detector Control DFLB Spec K Through L, **13**
- External Engine Parts Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, **19**
- External Engine Parts Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, **17**
- External Engine Parts Sets With PowerCommand Control DFLB, **21**
- External Engine Parts Sets With PowerCommand Control DFLC, DFLD, DFMB, **23**
- Fan Kit DFLC, DFLD, DFMB Spec K Through M, 57
- Fan Shroud 40°C Ambient Radiator DFLC Begin Spec T,
- Fan Shroud 50°C Ambient Radiator DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Fan Shroud 50°C Ambient Radiator DFLC Begin Spec T, 55
- Fan Shroud Radiator DFLB Begin Spec M, 47
- Fan Shroud Radiator DFLB Spec K Through L, 45
- Fan Shroud Radiator DFLC Spec K Through P, DFLD, DFMB Spec K Through P, **49**
- Fan, Alternator 45 Amp, 75
- Fan, Engine DFLC, DFLD, DFMB Begin Spec N, 58
- Fan, Engine DFLC, DFLD, DFMB Spec K Through M, 57
- Filter, Fuel, 13, 15, 17, 19, 21, 23
- Filter, Oil Bypass, 79
- Flange Thermostatic Valve, 66
- Fuse Engine to Control Wiring Harness Sets With PowerCommand Control, 127
- Fuse Printed Circuit Board Engine Monitor Sets With Detector Control, **139**
- Fuse Radio Frequency Interference Module, 112
- Fuse, Control Box, 121
- Gasket, Connection Water Outlet DFLB, 24
- Gasket, Connection Water Outlet DFLC, DFLD, DFMB, 25
- Gasket, Door, 121
- Gasket, Flange Heat Exchanger, 61
- Gasket, Flange Thermostatic Valve, 66
- Gasket, Hand Hole Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**

- Gasket, Heat Exchanger, 61
- Gasket, Louvre Generator, 134
- Gasket, Mounting Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**
- Gasket, Thermostat Housing Water Outlet DFLB, 24
- Gasket, Water Inlet Connection DFLB, DFLC, DFLD, DFMB Spec K Through L, **26**
- Gauge, Fuel Pressure, 135
- Gauge, Oil Pressure, 81
- Gauge, Oil Pressure Control Mounted Sets With Detector Control, **141**
- Gauge, Oil Temperature, 80
- Gauge, Water Temperature Sets With Detector Control, **141**
- Generator (Complete Replacement Part Numbers), 82
- Governor, Electronic, 132
- Governor, Woodward, 136
- Grille, 50°C Ambient Radiator DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Grille, 50°C Ambient Radiator DFLC Begin Spec T, 55
- Grille, Control Housing DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**
- Grille, Control Housing DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**
- Grille, Radiator DFLB Begin Spec M, 47
- Grille, Radiator DFLB Spec K Through L, 45
- Grille, Radiator DFLC Spec K Through P, DFLD, DFMB Spec K through P, **49**
- Guard, Belt 40°C Ambient Radiator DFLC Begin Spec T, **53**
- Guard, Belt 50°C Ambient Radiator DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Guard, Belt 50°C Ambient Radiator DFLC Begin Spec T. **55**
- Guard, Belt Radiator DFLB Begin Spec M), 47
- Guard, Belt Radiator DFLB Spec K Through L, 45
- Guard, Belt Radiator DFLC Spec K Through P, DFLD, DFMB Spec K through P, **49**
- Guard, Fan 40°C Ambient Radiator DFLC Begin Spec T, **53**
- Guard, Fan 50°C Ambient Radiator DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Guard, Fan 50°C Ambient Radiator DFLC Begin Spec T, **55**
- Guard, Fan Radiator DFLB Begin Spec M, 47
- Guard, Fan Radiator DFLB Spec K Through L, 45
- Guard, Fan Radiator DFLC Spec K Through P, DFLD, DFMB Spec K through P, **49**
- Guard, Belt Alternator 45 Amp, 75
- Guard, Belt Alternator 75 Amp, 77
- Guard, Damper Sets With Remote Radiator or Heat Exchanger – DFLB Begin Spec P, **30**

- Guard, Damper Sets With Remote Radiator or Heat Exchanger – DFLB Spec K Through N, DFLC, DFLD, DFMB. 28
- Guard, Heat Exchanger, 61
- Harness, Terminal Block DFMB, 137
- Harness, Wiring AC Engine Coolant Heater Control DFLB, DFLC, DFLD, DFMB Begin Spec M, **73**
- Harness, Wiring AC Control Door Sets With Detector Control, 139
- Harness, Wiring Adapter Woodward Governor to Engine Harness, **136**
- Harness, Wiring Alarm Relay Board, 113
- Harness, Wiring Auxiliary Terminal Block Sets With Detector Control, **131**
- Harness, Wiring Common Alarm Board Sets With Detector Control, 117
- Harness, Wiring Control Door, 123
- Harness, Wiring Current Transformer, 102
- Harness, Wiring DC Engine Coolant Heater Control DFLB, DFLC, DFLD, DFMB Begin Spec M, **73**
- Harness, Wiring DC Control Door Sets With Detector Control, **139**
- Harness, Wiring Electronic Governor, 132
- Harness, Wiring Electronic Overspeed, 99
- Harness, Wiring Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Spec K Through L, **69**
- Harness, Wiring Engine to Control Sets With Detector Control. 128
- Harness, Wiring Engine to Control Sets With PowerCommand Control, **127**
- Harness, Wiring Excitation Loss Module, 100
- Harness, Wiring Governor Paralleling Interconnect Terminal Block, **137**
- Harness, Wiring Ground Fault Relay, 125
- Harness, Wiring Junction Box Engine Coolant Heater DFLB Spec K Through L, DFLC Spec K Through L, **105**
- Harness, Wiring Low Battery Voltage Sensor, 118
- Harness, Wiring Low Coolant Level Sender Sets Without Continuously Monitored Low Coolant Level – Sets With Radiator Cooling, **64**
- Harness, Wiring Low Coolant Level Sender With Continuously Monitored Low Coolant Level 12 Light Indicator Controls Sets With Radiator Cooling, **65**
- Harness, Wiring Neutral Sensor Circuit Breaker UL Listed – DFLB Spec K Through M, DFLC Spec K Through N. 147
- Harness, Wiring Over/Under Frequency Relay, 88
- Harness, Wiring Over/Under Voltage DFLB, DFLC, DFLD, DFMB Spec K, 89
- Harness, Wiring Over/Under Voltage Relay DFLB, DFLC, DFLD, DFMB Begin Spec L, **90**
- Harness, Wiring Paralleling Interconnect Terminal Block, 137

- Harness, Wiring Pigtail Low Coolant Level Sender Sets Without Continuously Monitored Low Coolant Level – Sets With Radiator Cooling, **64**
- Harness, Wiring Power Factor Meter, 94
- Harness, Wiring Time Delay Start/Stop, 85
- Harness, Wiring Transformer Auxiliary Terminal Block Sets With Detector Control, **131**
- Harness, Wiring Wattmeter, 86
- Harness, Wiring Woodward Governor Control, 136
- Head, Oil Bypass Filter, 79
- Heater Components, Engine Coolant DFLB, DFLD, DFLD, DFMB Spec K Through L, **67**
- Heater, Control Sets With Detector Control, 119
- Heater, Control Sets With PowerCommand Control, 143
- Heater, Engine Coolant DFLB, DFLC, DFLD, DFMB Begin Spec M, **71**
- Heater, Engine Coolant DFLB, DFLC, DFLD, DFMB Spec K Through L, **69**
- Heater, Generator, 84
- Heater, Oil Pan, 78
- Hood, Air Inlet- Heavy Duty DFLB, 37
- Hood, Air Inlet- Heavy Duty DFLC, DFLD, 39
- Hose, Check Valve Sets With Remote Radiator DFLB Begin Spec P, **30**
- Hose, Check Valve Sets With Remote Radiator DFLB Spec K Through N, DFLC, DFLD, DFMB, **29**
- Hose, Flexible Oil Bypass Filter, 79
- Hose, Fuel Pump Woodward Governor, 136
- Hose, Heat Exchanger, 61
- Hose, Heater Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Spec K Through L, **69**
- Hose, Lube, 59
- Hose, Oil Drain Sets With Detector Control DFLB Begin Spec M, **15**
- Hose, Oil Drain Sets With Detector Control DFLB Spec K Through L, **13**
- Hose, Oil Drain Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, 19
- Hose, Oil Drain Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, **17**
- Hose, Oil Drain Sets With PowerCommand Control DFLB, **21**
- Hose, Oil Drain Sets With PowerCommand Control DFLC, DFLD, and DFMB, 23
- Hose, Water Inlet DFLB, DFLC, DFLD, DFMB Begin Spec M, 27
- Housing, Control DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**
- Housing, Control DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**
- Housing, Thermostat Water Outlet DFLB, 24

- Idler Assembly, Fan DFLB, 56
- Indicator, Service Air Cleaner Heavy Duty DFLB, 37
- Indicator, Service Air Cleaner Heavy Duty DFLC, DFLD, 39
- Indicator, Service Air Cleaner Standard DFLB, 32
- Indicator, Service Air Cleaner Standard DFLC, DFLD, 33
- Indicator, Service Air Cleaner, Front Standard DFMB, **34**, **40**
- Indicator, Service Air Cleaner,
- ☑Re ar – Standard – DFMB, 41
- Indicator, Service Air Cleaner, Rear Standard DFMB,
- 35
- Inlet, Water DFLB, DFLC, DFLD, DFMB Begin Spec M, **27**Inlet, Water DFLB, DFLC, DFLD, DFMB Spec K Through L, **26**
- Isolator, Vibration Control Box, 121
- Isolator, Vibration Control Box Sets With Detector Control. **139**
- Isolator, Vibration Pilot Solenoid Sets With PowerCommand Control DFLB, **21**
- Isolator, Vibration Pilot Solenoid Sets With PowerCommand Control DFLC, DFLD, DFMB, 23
- Key, Replacement Selector Switch, 123
- Kit, Language Chip EPROM, 121
- Kit, Repair Radiator Sight Gauge 40°C Ambient Radiator DFLC Begin Spec T, **53**
- Kit, Repair Radiator Sight Gauge 50°C Ambient Radiator DFLC Begin Spec T, **55**
- Labels and Tags Models With Heat Exchanger, 174
- Labels and Tags Models With Radiator, 170
- Labels and Tags Models With Remote Radiator, 172
- Lead, Circuit Breaker IEC Conformity DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **165**
- Lead, Circuit Breaker IEC Conformity DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**
- Lead, Circuit Breaker IEC Conformity DFLC Spec M, 161
- Lead, Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **151**
- Lead, Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, 145
- Lead, Circuit Breaker UL Listed DFLC Spec M Through N, DFMB Spec L, **153**
- Lead, Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S, DFMB Begin Spec R, **155**
- Lead, Disconnect Switch Molded Case UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **169**

Lead, Disconnect Switch – Molded Case – UL Listed – DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**

Lead, Thermocouple – Pyrometer – Sets With Detector Control, 92

Lead, Thermocouple – Pyrometer – Sets With PowerCommand Control, 93

Lens, Indicator - Ground Fault Relay, 125

Lens, Indicator - Low Battery Voltage Sensor, 118

Lens, Indicator - Over/Under Frequency Relay, 88

Lens, Indicator – Over/Under Voltage – DFLB, DFLC, DFLD, DFMB Begin Spec L, **90**

Lens, Indicator Light – Low Coolant Level Sender – With Continuously Monitored Low Coolant Level – 12 Light Indicator Controls – Sets With Radiator Cooling, **65**

Light Assembly, Indicator – DC Control Door – Sets With Detector Control, 141

Light, Indicator – Over/Under Voltage Relay – DFLB, DFLC, DFLD, DFMB Spec K, 89

Light, Indicator – Replacement – DC Control Door – Sets With Detector Control, 141

Light, Indicator – Upper/Lower Scale – Sets With Detector Control, 142

Light, Panel – DC Control Door – Sets With Detector Control, 141

Line, Fuel – Flexible – Fuel In and Fuel Out – Sets With Detector Control – DFLB Begin Spec M, **15**

Line, Fuel – Flexible – Fuel In and Fuel Out – Sets With Detector Control – DFLB Spec K Through L, **13**

Line, Fuel – Flexible – Fuel In and Fuel Out – Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M, 19

Line, Fuel – Flexible – Fuel In and Fuel Out – Sets With Detector Control – DFLC, DFLD, DFMB Spec K Through L, 17

Line, Fuel – Flexible – Fuel Transfer Pump – DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**

Louvre, Generator, 134

Lubrication, Fan, 59

Lug, Solderless – Circuit Breaker – IEC Conformity – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 163, 165

Lug, Solderless – Circuit Breaker – IEC Conformity – DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**

Lug, Solderless – Circuit Breaker – UL Listed – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **149**

Lug, Solderless – Circuit Breaker – UL Listed – DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, 145, 147

Lug, Solderless – Circuit Breaker – UL Listed – DFLC Spec M Through N, DFMB Spec L, 153

Lug, Solderless – Circuit Breaker and Disconnect Switch – UL Listed, IEC Conformity – DFLC Spec R Through S, DFMB Begin Spec R, **155**

Lug, Solderless – Disconnect Switch – Molded Case – UL Listed – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 169

Lug, Solderless – Disconnect Switch – Molded Case – UL Listed – DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**

Manifold, Inlet - Heat Exchanger, 61

Meter, Frequency, 123

Meter, Frequency – Sets With Detector Control, 142

Meter, Power Factor, 94

Meter, Time Totalizing - Sets With Detector Control, 141

Module, Audible Alarm – Sets With PowerCommand Control, **124**

Module, Excitation Loss, 100

Module, Radio Frequency Interference, 112

Mount, Shock – Ground Fault Relay – DFLB Begin Spec L, DFLC Begin Spec L, **125**

Mount, Shock - Over/Under Frequency Relay, 88

Mount, Shock – Over/Under Voltage Relay – DFLB, DFLC, DFLD, DFMB Spec K, **89**

Mount, Shock - Power Factor Meter, 94

Mounting, Generator, 133

Outlet, Water - DFLB, 24

Outlet, Water - DFLC, DFLD, DFMB, 25

Paint, 11

Panel, Control Housing – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**

Panel, Control Housing – DFLB Spec K Through M, DFLC Spec L Through N, DFLD, DFMB Spec K Through N, 107

Pickup, Magnetic – Electronic Governor, 132

Pickup, Magnetic – Sets With Detector Control – DFLB Spec K Through L, 13

Pickup, Magnetic – Sets With PowerCommand Control – DFLB, **21**

Pickup, Magnetic – Sets With PowerCommand Control – DFLC, DFLD, DFMB, 23

Pickup, Magnetic - Woodward Governor, 136

Plug – Fuel Pump EFC Cavity – Woodward Governor, 136

Potentiometer – Voltage Adjust – AC Control Door – Sets With Detector Control, **98**

Potentiometer, Speed Adjusting – Governor Controller, 96

Pulley, Alternator – 45 Amp, **75**

Pulley, Alternator – 75 Amp, 77

Pulley, Fan Drive – DFLB, 56

Pulley, Fan Drive - DFLC, DFLD, DFMB Begin Spec N, 58

Pulley, Fan Drive – DFLC, DFLD, DFMB Spec K Through M, 57

Pump, Fuel, 136

Pump, Fuel Transfer – DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**

Pyrometer - Sets With Detector Control, 92

Pyrometer - Sets With PowerCommand Control, 93

Radiator - DFLB Begin Spec M, 47

Radiator - DFLB Spec K Through L, 45

Radiator – DFLC Spec K Through P, DFLD, DFMB Spec K Through P, **49**

Radiator, 40°C Ambient - DFLC Begin Spec T, 53

Radiator, 50°C Ambient - DFLC Begin Spec T, 55

Radiator, 50°C Ambient – DFLC, Begin Spec R, DFMB Begin Spec R, **51**

Rail, Mounting - Over/Under Frequency Relay, 88

Rail, Mounting – Over/Under Voltage Relay – DFLB, DFLC, DFLD, DFMB Spec K, **89**

Rectifier – Control Box Mounted – Sets With Detector Control – Alternator – 75 Amp. 77

Regulator, Voltage - Alternator - 45 Amp, 75

Regulator, Voltage - Manual, 97

Regulator, Voltage - Sets With Detector Control, 98

Relay – Engine Coolant Heater – DFLB, DFLC, DFLD, DFMB Spec K Through L, **67**

Relay Assembly, Engine Coolant Heater – DFLB, DFLC, DFLD, DFMB Spec K Through L, **67**

Relay, Alarm, 113

Relay, Control, 121

Relay, Frequency - Over/Under, 88

Relay, Ground Fault, 125

Relay, Power – Engine Coolant Heater Control – DFLB, DFLC, DFLD, DFMB Begin Spec M, 73

Relay, Solenoid – Start – Sets With Detector Control – DFLB Begin Spec M, **15**

Relay, Solenoid – Start – Sets With Detector Control – DFLB Spec K Through L, 13

Relay, Solenoid – Start – Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M, **19**

Relay, Solenoid – Start – Sets With Detector Control – DFLC, DFLD, DFMB Spec K Through L, **17**

Relay, Thermistor, 121

Relay, Voltage – Over/Under – DFLB, DFLC, DFLD, DFMB Spec K, **89**

Reservoir, Fuel – Fuel Transfer Pump – DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**

Resistor, Oil Temperature Gauge, 80

Seal, O-Ring - EFC Cavity Plug - Woodward Governor, 136

Seal, Thermostat – Water Outlet – DFLB, 24

Sealant, Thread, 11

Sender Assembly – Low Coolant Level – Sets With Continuously Monitored Low Coolant Level – 12 Light Indicator Controls – Sets With Radiator Cooling, **65**

Sender Assembly – Low Coolant Level – Sets Without Continuously Monitored Low Coolant Level – Sets With Radiator Cooling, **64**

Sender, Oil Pressure – Sets With Detector Control – DFLB Begin Spec M, **15**

Sender, Oil Pressure – Sets With Detector Control – DFLB Spec K Through L, **13**

Sender, Oil Pressure – Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M, **19**

Sender, Oil Pressure – Sets With Detector Control – DFLC, DFLD, DFMB Spec K Through L, **17**

Sender, Oil Pressure – Sets With PowerCommand Control – DFLB, **21**

Sender, Oil Pressure – Sets With PowerCommand Control – DFLC, DFLD, DFMB, 23

Sender, Oil Temperature – Engine Block, Oil Pan – Sets With PowerCommand Control – DFLB, **21**

Sender, Oil Temperature – Engine Block, Oil Pan – Sets With PowerCommand Control – DFLC, DFLD, DFMB, 23

Sender, Oil Temperature Gauge - Oil Pan Mounted, 80

Sender, Water Temperature – Low Engine Coolant – Sets With Detector Control – DFLB Begin Spec M, **15**

Sender, Water Temperature – Low Engine Coolant – Sets With Detector Control – DFLB Spec K Through L, **13**

Sender, Water Temperature – Low Engine Coolant – Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M. 19

Sender, Water Temperature – Low Engine Coolant – Sets With Detector Control – DFLC, DFLD, DFMB Spec K Through L, **17**

Sensor - Low Battery Voltage, 118

Separator, Fuel/Water, 13, 15, 17, 19, 21, 23

Shaft, Fan Drive - DFLC, DFLD, DFMB Begin Spec N, 58

Shaft, Fan Drive – DFLC, DFLD, DFMB Spec K Through M, 57

Shim, Generator Mounting, 133

Skid, 129

Socket, Relay - Control, 121

Solenoid, Pilot – Sets With PowerCommand Control – DFLB, **21**

Solenoid, Pilot – Sets With PowerCommand Control – DFLC, DFLD, DFMB, 23

Standoff, Board - Printed Circuit, 121

Standoff, Insulator – Circuit Breaker – IEC Conformity – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **163**

Standoff, Insulator – Circuit Breaker – IEC Conformity – DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **157**

Standoff, Insulator – Circuit Breaker – IEC Conformity – DFLC Spec M, **161**

- Standoff, Insulator Circuit Breaker UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 149
- Standoff, Insulator Circuit Breaker UL Listed DFLB Spec K Through M, DFLC Spec K Through N, DFMB Spec K Through N, **145**, **147**
- Standoff, Insulator Circuit Breaker UL Listed DFLC Spec M Through N, DFMB Spec L, **153**
- Standoff, Insulator Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S, DFMB Begin Spec R, **155**
- Standoff, Insulator Disconnect Switch Molded Case UL Listed – DFLB Begin Spec N, DFLD Begin Spec P, DFMB Begin Spec P, **169**
- Standoff, Insulator Disconnect Switch Molded Case UL Listed – DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**
- Starter, Air, 31
- Strainer, Fuel Sets With Detector Control, 13, 15, 17
- Strainer, Fuel Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, **19**
- Strap, Bond, 121
- Strap, Ground Control Box Sets With Detector Control, 139
- Strip, Marker Terminal Block Woodward Governor, 136
- Support, Alternator 45 Amp, 75
- Support, Alternator 75 Amp, 77
- Support, Fan DFLB, 56
- Support, Fan DFLC, DFLD, DFMB Begin Spec N, 58
- Support, Fan DFLC, DFLD, DFMB Spec K Through M, 57
- Switch, Disconnect Molded Case UL Listed DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, 169
- Switch, Disconnect Molded Case UL Listed DFLB Spec L Through M, DFLC Spec L Through N, DFMB Spec L Through N, **167**
- Switch, Oil Pressure Sets With Detector Control DFLB Begin Spec M, **15**
- Switch, Oil Pressure Sets With Detector Control DFLB Spec K Through L, **13**
- Switch, Oil Pressure Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, **19**
- Switch, Oil Pressure Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, **17**
- Switch, Pushbutton Emergency Stop, 87, 123
- Switch, Rocker DC Control Door Sets With Detector Control, **141**
- Switch, Rotary Voltmeter/Ammeter Sets With Detector Control, **142**
- Switch, Selector Key Operated, 123
- Switch, Selector Left/Right Exhaust Pyrometer Generator Sets With Detector Control, **92**
- Switch, Selector Run/Off/Auto, 123
- Switch, Temperature Low Engine Coolant Sets With Detector Control DFLB Begin Spec M, **15**

- Switch, Temperature Low Engine Coolant Sets With Detector Control DFLB Spec K Through L, **13**
- Switch, Temperature Low Engine Coolant Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M, 19
- Switch, Temperature Low Engine Coolant Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, 17
- Switch, Temperature Low Engine Coolant Sets With PowerCommand Control DFLB, **21**
- Switch, Temperature Low Engine Coolant Sets With PowerCommand Control DFLC, DFLD, DFMB, 23
- Switch, Thermostat High Engine Coolant Temperature Sets With Detector Control – DFLB Begin Spec M, **15**
- Switch, Thermostat High Engine Coolant Temperature Sets With Detector Control – DFLB Spec K Through L, 13
- Switch, Thermostat High Engine Coolant Temperature Sets With Detector Control – DFLC, DFLD DFMB Spec K Through L, **17**
- Switch, Thermostat High Engine Coolant Temperature Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M, **19**
- Switch, Toggle Cross Current Compensation Circuit, 101
- Tachometer, 91
- Tank, Expansion Heat Exchanger, 61
- Terminal Assembly (T26) Sets With Detector Control DFLB Spec K Through L, **13**
- Terminal Assembly (T26) Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L, **17**
- Thermostat, Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Begin Spec M, **71**
- Thermostatic Valve, 66
- Transducer, Watts Power Factor Meter, 94
- Transducer, Watts Wattmeter, 86
- Transformer Auxiliary Terminal Block Sets With Detector Control, **131**
- Transformer, Current, 102
- Transformer, Current Cross Current Compensation Circuit, **101**
- Transformer, Current Differential, 103
- Transformer, Current VAR Power Factor Controller, 95
- Tube, 40°C Ambient Radiator Inlet and Outlet DFLC Begin Spec T, **53**
- Tube, 50°C Ambient Radiator Inlet and Outlet DFLC Begin Spec R, DFMB Begin Spec R, **51**
- Tube, 50°C Ambient Radiator Inlet and Outlet DFLC Begin Spec T, **55**
- Tube, Air Inlet Air Cleaner Heavy Duty DFLB, 37
- Tube, Air Inlet Air Cleaner Heavy Duty DFLC, DFLD, 30
- Tube, Air Inlet Air Cleaner Standard DFLB, 32
- Tube, Air Inlet Air Cleaner Standard DFLC, DFLD, 33
- Tube, Air Inlet Air Cleaner, Front Heavy Duty DFMB, 40

Tube, Air Inlet - Air Cleaner, Front - Standard - DFMB, 34

Tube, Air Inlet - Air Cleaner, Rear - Heavy Duty - DFMB, 41

Tube, Air Inlet - Air Cleaner, Rear - Standard - DFMB, 35

Tube, Copper – Fuel Pressure Gauge, 135

Tube, Heater – Engine Coolant Heater – DFLB, DFLC, DFLD, DFMB Begin Spec M, **71**

Tube, Inlet - Heat Exchanger, 61

Tube, Outlet - Heat Exchanger, 61

Tube, Radiator Inlet and Outlet - DFLB Begin Spec M, 47

Tube, Radiator Inlet and Outlet – DFLB Spec K Through L, 45

Tube, Radiator Inlet and Outlet – DFLC Spec K Through P, DFLD, DFMB Spec K Through P, **49**

Tube, Water Inlet – DFLB, DFLC, DFLD, DFMB Begin Spec M, 27

Tube, Water Outlet - DFLB, 24

Tube, Water Outlet - DFLC, DFLD, DFMB, 25

Valve, Check - Heat Exchanger Expansion Tank, 61

Valve, Check – Radiator – DFLB Spec K Through N, DFLC, DFLD, DFMB, **29**

Valve, Check – Sets With Remote Radiator – DFLB Begin Spec P, **30**

Valve, Fuel Pressure Gauge, 135

Valve, Gate - Heat Exchanger, 61

Valve, Shutoff – Fuel Transfer Pump – DFLB, DFLC, DFLD, DFMB Begin Spec L, **43**

Valve, Shutoff – Oil Drain – Sets With Detector Control – DFLB Begin Spec M, **15**

Valve, Shutoff – Oil Drain – Sets With Detector Control – DFLB Spec K Through L, 13

Valve, Shutoff – Oil Drain – Sets With Detector Control – DFLC, DFLD DFMB Spec L Through L, 17

Valve, Shutoff – Oil Drain – Sets With Detector Control – DFLC, DFLD, DFMB Begin Spec M, **19**

Valve, Shutoff – Oil Drain – Sets With PowerCommand Control – DFLB, **21**

Valve, Shutoff – Oil Drain – Sets With PowerCommand Control – DFLC, DFLD, DFMB, 23

Valve, Solenoid - Heat Exchanger, 61

Valve, Thermostatic, 66

Voltmeter - Control Cabinet Door, 123

Voltmeter, AC - Sets With Detector Control, 142

Voltmeter, DC - Sets With Detector Control, 141

Wattmeter, 86, 123

Wrapper, Control Box – Sets With PowerCommand Control – DFLB Begin Spec N, DFLC Begin Spec P, DFMB Begin Spec P, **109**

Wrapper, Control Box – Sets With PowerCommand Control – DFLB Spec K Through M, DFLC Spec K Through N, DFLD, DFMB Spec K Through N, **107**

Abbreviations


Some of the following abbreviations may be used throughout this Parts Catalog:

AC	Alternating Current	mm	Millimeter
Amp	Ampere	MOH	Mobile Off Highway
A/R	As Required	NFS	Not For Sale
AVR	Automatic Voltage Regulator	NPT	National Pipe Thread
AWG	American Wire Gauge	OD	Outside Diameter
DC	Direct Current	OZ.	Ounce
Deg	Degree	PC	Printed Circuit
EFC	Electronic Fuel Control	Ph	Phase
EIT	External/Internal Tooth	PMG	Permanent Magnet Generator
EPROM	Erasable Programmable Read Only Memory	PT/CT	Potential Transformer/Current Transformer
ET	External Tooth	RFI	Radio Frequency Interference
GFI	Ground Fault Interrupter	RT	Right
ID	Inside Diameter	Spec	Specification
IEC	International Electrotechnical	Thk	Thick
	Commission	UL	Underwriters Laboratories Inc.
IT	Internal Tooth	UNC	Union National Coarse
kW	Kilowatt	UNF	Union National Fine
LPG	Liquid Petroleum Gas	VAC	Volts Alternating Current
LT	Left	VDC	Volts Direct Current
M(meter number)	Meter	W/(ET, IT, EIT)	With

Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Onan Green Enamel				Cummins Beige Enamel
			(Non-Metallic)	52	5-0551-02	_	12 oz. Pressurized
5	25-0305	_	12 oz. Pressurized				Spray Can
			Spray Can	52	5-0551-03	_	Quart Can
5	25-0306	-	Quart Can	52	5-0551-04	_	Gallon Can
5	25-0304	-	Gallon Can	51	8-0601	_	Sealant, Thread (6 ml Tube)


External Engine Parts Generator Sets With Detector Control DFLB Spec K Through L

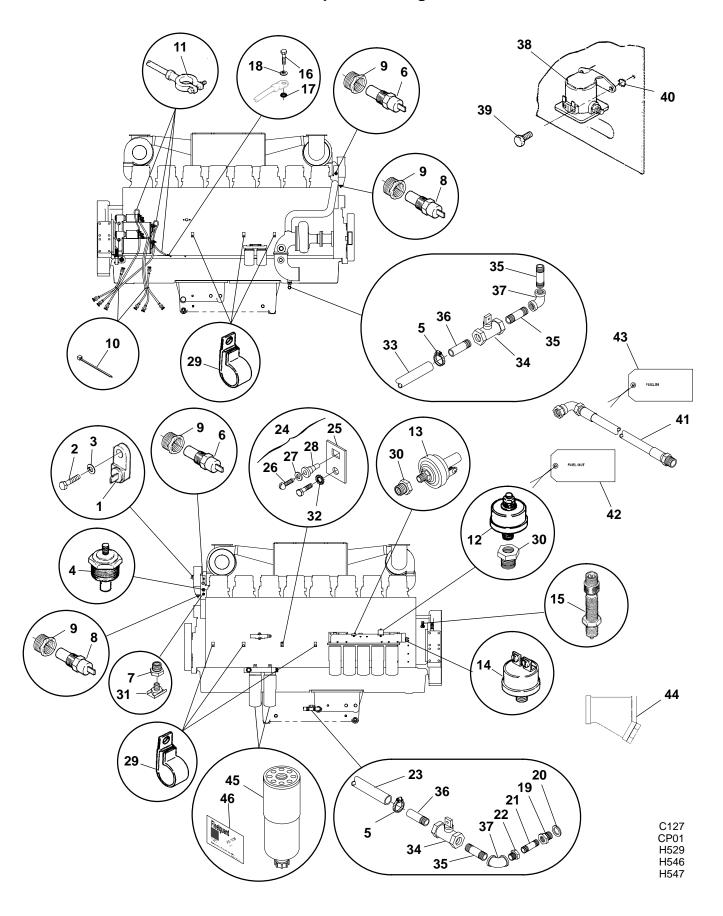

External Engine Parts Generator Sets With Detector Control DFLB Spec K Through L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0269	1	Switch, Temperature – Low	21	505-0100	1	Nipple, Pipe (1/2" x 1-1/8")
2	800-0062	1	Engine Coolant (S4) Screw, Cap – Hex Head	22	505–0021	1	Bushing, Pipe – Reducer (3/4" to 1/2")
2	050 0050	4	(3/8–16 x 4")	23	503-0249	-	Hose – Bulk (1" ID) (Order By
3	850-0050	1	Washer, Lock – Spring (3/8")	0.4	000 4000		The Foot – 3 Feet Required)
4	193–0375	1	Sender, Water Temperature (E2)	24	332–1292	1	Terminal Assembly (Includes Parts Marked *) (T26)
5	503-0189	2	Clamp, Hose	25	332-1281	1	* Bracket, Terminal
6	309–0437	2	Switch, Thermostat – High Engine Coolant	26	809–0036	1	* Screw, Sheet Metal – Round Head (#8 x 7/8")
			Temperature (Opens at 202	27	508-0015	1	* Washer, Fiber
			Deg F – Closès at 222 Deg	28	870-0196	1	* Nut, Insulation
			F) (S2)	29	332-2634	6	Clamp, "J"
7	505-0019	1	Bushing, Pipe – Reducer	30	505-0007	2	Bushing, Pipe – Reducer
			(1/2" to 3/8")				(1/4" to 1/8")
8	309–0436	2	Switch, Thermostat – High	31	504-0028	1	Cock, Drain (3/8")
			Engine Coolant	32	856-0010	1	Washer, Lock – EIT (3/8")
			Temperature (Opens at 196 Deg F – Closes at 216 Deg	33	503–0249	_	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)
			F) (S6 Pre–Alarm)	34	504-0171	2	Valve, Shutoff
9	505-0131	4	Bushing, Pipe – Reducer	35	505-0102	3	Nipple, Pipe (3/4" x 1-3/8")
			(3/4" to 3/8")	36	505-0324	2	Nipple, Pipe – Half (3/4" x 2")
10	332-0941	1	Tie, Cable (Quantity Used As	37	505-0132	2	Elbow, Street - 90 Deg (3/4")
			Required)	38	307-2167	1	Relay, Solenoid - Start (K2)
11			Cable, Battery	39	821–0010	2	Screw, Self-Locking - Hex
	416–0680	3	10" – Starters and Engine Ground (With 2 Ring				Washer Head (1/4–20 x 1/2")
			Terminal Ends)	40	856-0006	1	Washer, Lock – EIT (1/4")
	416-0446	2	12–1/2" – Jumper (With	41	000 0000	•	Line, Fuel – Flexible
	410 0440	_	Red Colored Battery	71			Generator Sets Without
			Boot)				Fuel Transfer Pump –
	416-0964	2	35" – Battery To Starter				Feature Option C174
	410-0304	2	(With 1 Ring End And 1		501-0520	1	Fuel Out (1/2" ID x 50")
					501-0524		Fuel In (5/8" ID x 50")
	416-0639	2	Bolted End)		301-0324	1	Generator Sets With Fuel
	410-0039	2	60" – Battery To Starter				
			(With 1 Ring End And 1				Transfer Pump –
40	100 0044	4	Bolted End)				Feature Option C174 –
12	193-0244	. 1	Sender, Oil Pressure (E1)		F04 0000		Spec L
13	309–0641–07	' 1	Switch, Oil Pressure (Opens at 20 Lbs Descending)		501–0662	1	Fuel In (1" ID x 84" – With 90 Deg Female
			(S5 – Pre–Alarm)				Swivel)
14	309–0561	1	Switch, Oil Pressure (Opens at 14 Lbs Descending) (S1)		501–0652	1	Fuel Out (3/4" ID x 72" – With 90 Deg Female
15	151-0411	1	Pickup, Magnetic				Swivel)
16	800-0090	1	Screw, Cap – Hex Head	42	098-3171	1	Tag, Fuel Out
			(1/2–13 x 1")	43	098-3172	1	Tag, Fuel In
17	856-0013	1	Washer, Lock - EIT (1/2")	44	502-1275	1	Strainer, Fuel – Begin Spec L
18	850-0060	1	Washer, Lock – Spring (1/2")	45	149–2228	2	Separator, Fuel/Water
19	102–1335	1	Plug, Oil Drain (Special)	46	098-6099-03	2	Decal, Fuel Filter
20	508-0292	1	Washer, Sealing – Copper		110 0000 00	_	


External Engine Parts Generator Sets With Detector Control DFLB Begin Spec M

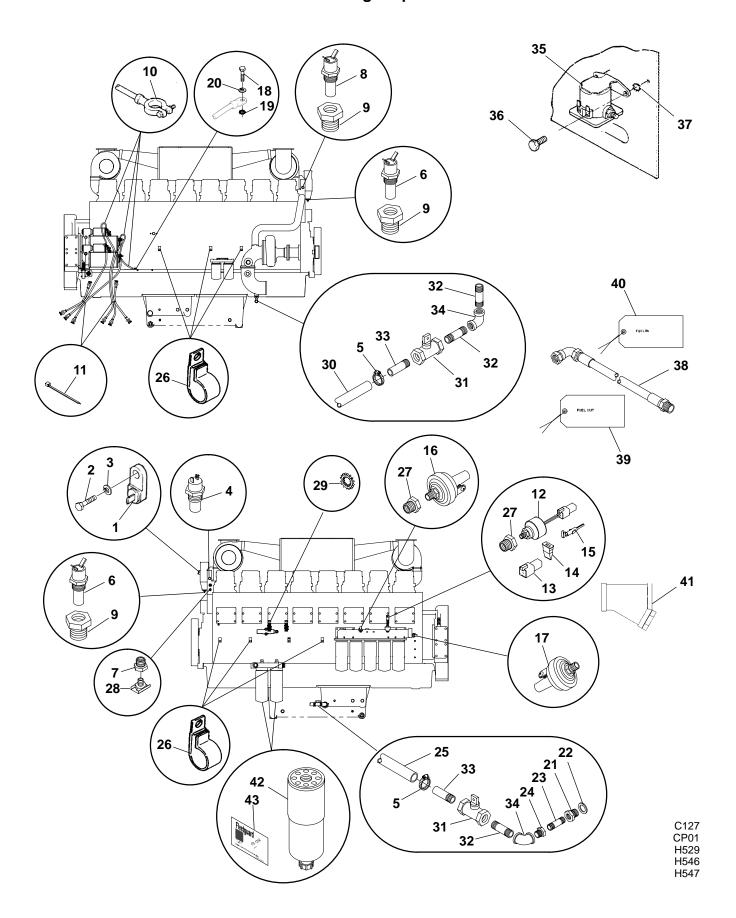

External Engine Parts Generator Sets With Detector Control DFLB Begin Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0269	1	Switch, Temperature – Low	19	856-0013	1	Washer, Lock – EIT (1/2")
2	800-0062	4	Engine Coolant (S4)	20 21	850–0060 102–1335	1	Washer, Lock – Spring (1/2")
2	000-0002	1	Screw, Cap – Hex Head (3/8–16 x 4")	22	508-0292	1 1	Plug, Oil Drain (Special) Washer, Sealing – Copper
3	850-0050	1	Washer, Lock – Spring (3/8")	23	505-0100	1	Nipple, Pipe (1/2" x 1–1/8")
4	193–0447–01		Sender, Water Temperature (E2)	24	505–0021	1	Bushing, Pipe – Reducer (3/4" to 1/2")
5 6	503–0189 309–0576	2 2	Clamp, Hose Switch, Thermostat – High	25	503-0249	-	Hose – Bulk (1" ID) (Order By The Foot – 3 Feet Required)
			Engine Coolant	26	332-2634	6	Clamp, "J"
			Temperature (Opens at 202 Deg F – Closes at	27	505-0007	2	Bushing, Pipe – Reducer (1/4" to 1/8")
			222 Deg F) (S2)	28	504-0028	1	Cock, Drain (3/8")
7	505-0019	1	Bushing, Pipe - Reducer	29	856-0010	1	Washer, Lock – EIT (3/8")
			(1/2" to 3/8")	30	503-0249	_	Hose – Bulk (1" ID) (Order By
8	309-0651-02	2 1	Switch, Thermostat – High				The Foot – 2 Feet Required)
			Engine Coolant	31	504-0171	2	Valve, Shutoff
			Temperature (Opens at 190	32	505-0102	3	Nipple, Pipe (3/4" x 1–3/8")
			Deg F – Closes at 214 Deg	33	505-0324	2	Nipple, Pipe – Half (3/4" x 2")
			F) (S6 Pre–Alarm)	34	505–0132	2	Elbow, Street – 90 Deg (3/4")
9	505–0131	3	Bushing, Pipe – Reducer	35	307–2167	1	Relay, Solenoid – Start (K2)
			(3/4" to 3/8")	36	821–0010	2	Screw, Self-Locking - Hex
10			Cable, Battery				Washer Head (1/4–20 x
	416–0680	3	10" – Starters and Engine				1/2")
			Ground (With 2 Ring	37	856–0006	1	Washer, Lock – EIT (1/4")
			Terminal Ends)	38			Line, Fuel – Flexible
	416–0446	2	12–1/2" – Jumper (With				Generator Sets Without
			Red Colored Battery				Fuel Transfer Pump –
			Boot)				Feature Option C174
	416–0964	2	35" – Battery To Starter		501–0520	1	Fuel Out (1/2" ID x 50")
			(With 1 Ring End And 1		501–0524	1	Fuel In (5/8" ID x 50")
			Bolted End)				Generator Sets With Fuel
	416–0639	2	60" – Battery To Starter				Transfer Pump –
			(With 1 Ring End And 1				Feature Option C174
			Bolted End)		501–0662	1	Fuel In (1" ID x 84" –
11	332–0941	1	Tie, Cable (Quantity Used As Required)				With 90 Deg Female Swivel)
12	193–0448	1	Sender, Oil Pressure		501–0652	1	Fuel Out (3/4" ID x 72" -
			(Includes Parts Marked *) (E1)				With 90 Deg Female Swivel)
13	323–1549	1	* Connector, Receptacle – 4	39	098–3171	1	Tag, Fuel Out
			Place	40	098–3172	1	Tag, Fuel In
14	323–1548	1	* Wedge, Receptacle	41	502–1275	1	Strainer, Fuel
15	323–1492	4	* Socket, Contact	42	149–2228	2	Separator, Fuel/Water
16	309–0641–07	1	Switch, Oil Pressure (Opens at 20 Lbs Descending) (S5	43	098–6099–03	2	Decal, Fuel Filter
17	309-0641-03	3 1	 Pre–Alarm) Switch, Oil Pressure (Opens at 14 Lbs Descending) (S1) 	* – F	Parts Included In	า 193–04	48 Oil Pressure Sender
18	800-0090	1	Screw, Cap – Hex Head				
10	000 0000	'	$(1/2-13 \times 1")$				


External Engine Parts Generator Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L

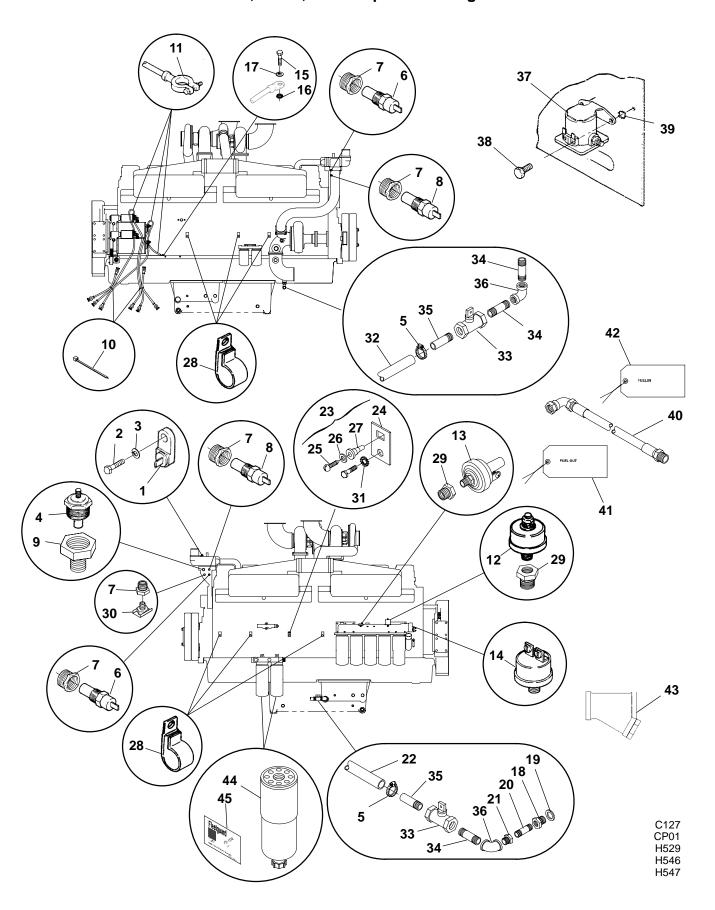

External Engine Parts Generator Sets With Detector Control DFLC, DFLD, DFMB Spec K Through L

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0269	1	Switch, Temperature – Low	20	505-0100	1	Nipple, Pipe (1/2" x 1–1/8")
2	800-0062	1	Engine Coolant (S4) Screw, Cap – Hex Head	21	505–0021	2	Bushing, Pipe – Reducer (3/4" to 1/2")
3	850-0050	1	(3/8–16 x 4") Washer, Lock – Spring (3/8")	22	503–0249	_	Hose – Bulk (1" ID) (Order By The Foot – 3 Feet Required)
4	193–0375	1	Sender, Water Temperature (E2)	23	332–1292	1	Terminal Assembly (Includes Parts Marked *) (T26)
5	503-0189	2	Clamp, Hose	24	332-1281	1	* Bracket, Terminal
6	309–0437	2	Switch, Thermostat – High Engine Coolant	25	809–0036	1	* Screw, Sheet Metal – Round Head (#8 x 7/8")
			Temperature (Opens at	26	508-0015	1	* Washer, Fiber
			202 Deg F – Closes at	27	870-0196	1	* Nut, Insulation
			222 Deg F) (S2)	28	332-2634	6	Clamp, "J"
7	505–0019	5	Bushing, Pipe – Reducer (1/2" to 3/8")	29	505–0007	2	Bushing, Pipe – Reducer (1/4" to 1/8")
8	309-0436	2	Switch, Thermostat – High	30	504-0028	1	Cock, Drain (3/8")
			Engine Coolant	31	856-0010	1	Washer, Lock – EIT (3/8")
			Temperature (Opens at 196 Deg F – Closes at	32	503-0249	_	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)
			216 Deg F) (S6 Pre-Alarm)	33	504-0171	2	Valve, Shutoff
9	505-0021	2	Bushing, Pipe – Reducer	34	505-0102	3	Nipple, Pipe (3/4" x 1-3/8")
			(3/4" to 1/2")	35	505-0324	1	Nipple, Pipe – Half (3/4" x 2")
10	332-0941	1	Tie, Cable (Quantity Used As	36	505-0132	2	Elbow, Street – 90 Deg (3/4")
			Required)	37	307-2167	1	Relay, Solenoid - Start (K2)
11			Cable, Battery	38	821-0010	2	Screw, Self-Locking - Hex
	416–0680	3	10" – Starters and Engine Ground (With 2 Ring				Washer Head (1/4–20 x 1/2")
			Terminal Ends)	39	856-0006	1	Washer, Lock – EIT (1/4")
	416-0446	2	12–1/2" – Jumper (With	40			Line, Fuel – Flexible
			Red Colored Battery Boot)				Generator Sets Without Fuel Transfer Pump –
	416-0964	2	35" – Battery To Starter				Feature Option C174
			(With 1 Ring End And 1		501-0520	1	Fuel Out (1/2" ID x 50")
			Bolted End)		501-0524	1	Fuel In (5/8" ID x 50")
	416-0639	2	60 " – Battery To Starter				Generator Sets With Fuel
			(With 1 Ring End And 1 Bolted End)				Transfer Pump – Feature Option C174 –
12	193-0244	1	Sender, Oil Pressure (E1)				Spec L
13	309–0641–07	7 1	Switch, Oil Pressure (Opens at 20 Lbs Descending) (S5 – Pre–Alarm)		501–0662	1	Fuel In (1" ID x 84" – With 90 Deg Female Swivel)
14	309–0561	1	Switch, Oil Pressure (Opens at 14 Lbs Descending) (S1)		501–0652	1	Fuel Out (3/4" ID x 72" – With 90 Deg Female
15	800–0090	1	Screw, Cap – Hex Head (1/2–13 x 1")	41	098–3171	1	Swivel) Tag, Fuel Out
16	856-0013	1	Washer, Lock – EIT (1/2")	42	098-3172	1	Tag, Fuel In
17	850-0060	1	Washer, Lock - Spring (1/2")	43	502-1275	1	Strainer, Fuel – Begin Spec L
18	102-1335	1	Plug, Oil Drain (Special)	44	149-2228	2	Separator, Fuel/Water
19	508-0292	1	Washer, Sealing – Copper	45	098–6099–03	2	Decal, Fuel Filter


External Engine Parts Generator Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M

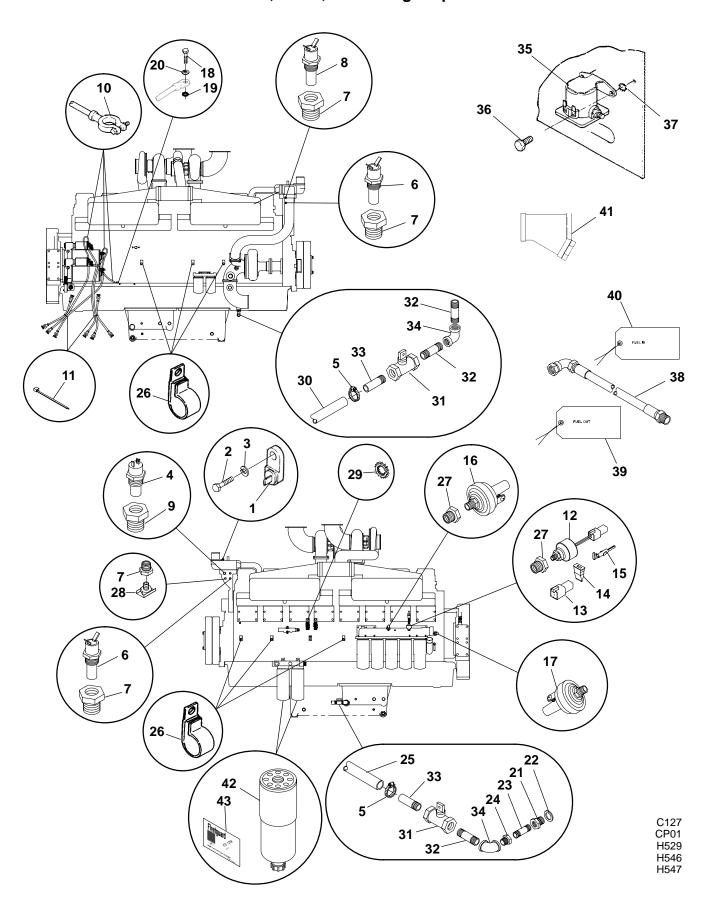

External Engine Parts Generator Sets With Detector Control DFLC, DFLD, DFMB Begin Spec M

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	309–0269	1	Switch, Temperature – Low Engine Coolant (S4)	18	800-0090	1	Screw, Cap – Hex Head (1/2–13 x 1")
2	800-0062	1	Screw, Cap – Hex Head	19	856-0013	1	Washer, Lock – EIT (1/2")
			(3/8–16 x 4")	20	850-0060	1	Washer, Lock – Spring (1/2")
3	850-0050	1	Washer, Lock – Spring (3/8")	21	102-1335	1	Plug, Oil Drain (Special)
4	193-0447-01	1	Sender, Water Temperature	22	508-0292	1	Washer, Sealing - Copper
			(E2)	23	505-0100	1	Nipple, Pipe (1/2" x 1-1/8")
5	503-0189	2	Clamp, Hose	24	505-0021	1	Bushing, Pipe - Reducer
6	309-0576	2	Switch, Thermostat – High				(3/4" to 1/2")
			Engine Coolant Temperature (Opens at	25	503-0249	-	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)
			202 Deg F – Closes at	26	332-2634	6	Clamp, "J"
			222 Deg F) (S2)	27	505-0007	2	Bushing, Pipe - Reducer
7	505-0019	4	Bushing, Pipe - Reducer				(1/4" to 1/8")
			(1/2" to 3/8")	28	504-0028	1	Cock, Drain (3/8")
8	309-0651-02	1	Switch, Thermostat – High	29	856-0010	1	Washer, Lock - EIT (3/8")
			Engine Coolant Temperature (Opens at	30	503-0249	-	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)
			190 Deg F – Closes at	31	504-0171	2	Valve, Shutoff
			214 Deg F) (S6 Pre–Alarm)	32	505-0102	3	Nipple, Pipe (3/4" x 1–3/8")
9	505-0021	1	Bushing, Pipe – Reducer	33	505-0324	1	Nipple, Pipe – Half (3/4" x 2")
			(3/4" to 3/8")	34	505-0132	2	Elbow, Street – 90 Deg (3/4")
10			Cable, Battery	35	307-2167	1	Relay, Solenoid – Start (K2)
	416–0680	3	10" – Starters and Engine Ground (With 2 Ring Terminal Ends)	36	821–0010	2	Screw, Self-Locking – Hex Washer Head (1/4-20 x 1/2")
	416–0446	2	12–1/2" – Jumper (With Red Colored Battery Boot)	37 38	856–0006	1	Washer, Lock – EIT (1/4") Line, Fuel – Flexible Generator Sets Without
	416–0964	2	35" – Battery To Starter (With 1 Ring End And 1 Bolted End)		501–0520	1	Fuel Transfer Pump – Feature Option C174 Fuel Out (1/2" ID x 50")
	416-0639	2	60 " – Battery To Starter		501-0524	1	Fuel In (5/8" ID x 50")
	410-0033	۷	(With 1 Ring End And 1 Bolted End)		301-0324	'	Generator Sets With Fuel Transfer Pump –
11	332-0941	1	Tie, Cable (Quantity Used As				Feature Option C174
• • •	002 0011	•	Required)		501-0662	1	Fuel In (1" ID x 84" –
12	193–0448	1	Sender, Oil Pressure (Includes Parts Marked *)			·	With 90 Deg Female Swivel)
13	323–1549	1	(E1) * Connector, Receptacle – 4 Place		501–0652	1	Fuel Out (3/4" ID x 72" – With 90 Deg Female Swivel)
14	323-1548	1	* Wedge, Receptacle	39	098–3171	1	Tag, Fuel Out
15	323–1492	4	* Socket, Contact	40	098–3172	1	Tag, Fuel In
16	309-0641-07	1	Switch, Oil Pressure (Opens	41	502–1275	1	Strainer, Fuel
. •	200 0011 01	•	at 20 Lbs Descending)	42	149–2228	2	Separator, Fuel/Water
			(S5 – Pre–Alarm)	43	098–6099–03	2	Decal, Fuel Filter
17	309-0641-03	1	Switch, Oil Pressure (Opens	.0		_	
••		•	at 14 Lbs Descending) (S1)	* – F	Parts Included In	า 193–04	48 Oil Pressure Sender


External Engine Parts Generator Sets With PowerCommand Control DFLB

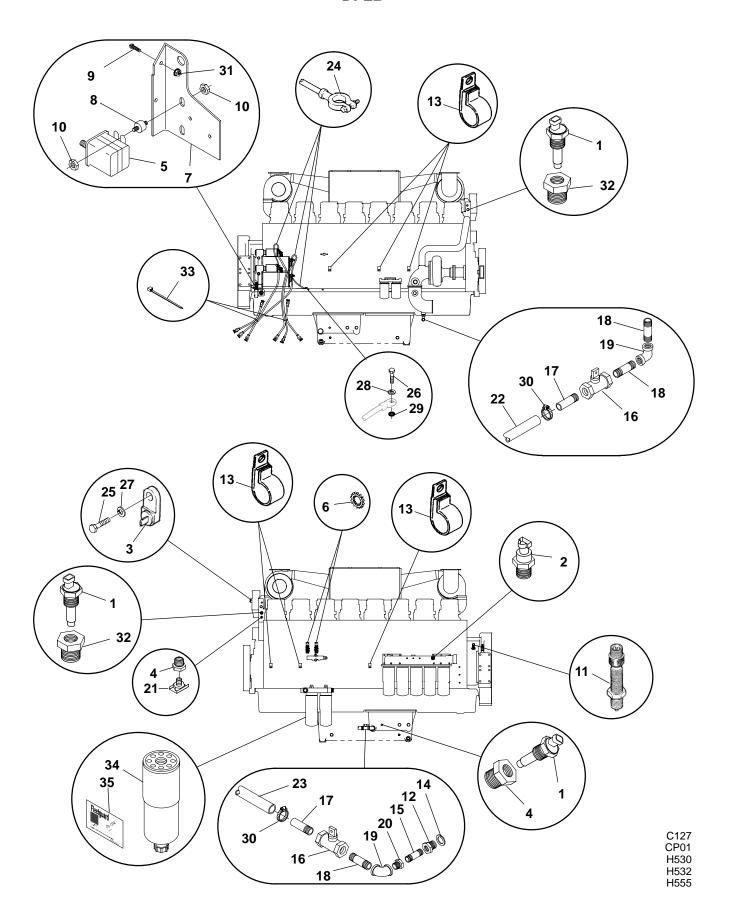

External Engine Parts Generator Sets With PowerCommand Control DFLB

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0432	3	Sender, Oil Temperature (S2 Engine Block, E4 Oil Pan)	24	416–0680	3	Cable, Battery 10" – Starters and Engine
2	193–0444	1	Sender, Oil Pressure (S1)		+10-0000	3	Ground (With 2 Ring
3	309–0269	1	Switch, Temperature – Low				Terminal Ends)
			Engine Coolant (S4)		416-0446	2	12–1/2" – Jumper (With
4	505–0019	2	Bushing, Pipe – Reducer (1/2" to 3/8")				Red Colored Battery Boot)
5	307-2621-02	2 1	Solenoid, Pilot (K4)		416-0964	2	35" - Battery To Starter
6	856-0010	2	Washer, Lock – EIT (3/8")				(With 1 Ring End And 1
7	319–2236	1	Bracket, Mounting				Bolted End)
8	402–0610	2	Isolator, Vibration		416–0639	2	60" – Battery To Starter
9	812–0067	2	Screw, Machine – Round Head (#6–32 x 7/8")				(With 1 Ring End And 1 Bolted End)
10	870-0212	4	Nut, Locking (1/4–20)	25	800-0061	1	Screw, Cap – Hex Head
11	151–0411	1	Pickup, Magnetic				(3/8–16 x 3–3/4")
12	102–1335	1	Plug, Oil Drain	26	800–0090	1	Screw, Cap – Hex Head
13	332–2634	6	Clamp, "J"				(1/2–13 x 1")
14	508-0292	1	Washer, Sealing - Copper	27	850-0050	1	Washer, Lock – Spring (3/8")
15	505–0100	1	Nipple, Pipe – Close (1/2" x	28	850-0060	1	Washer, Lock – Spring (1/2")
4.0	=04 04=4	_	1–1/8")	29	856–0013	1	Washer, Lock – EIT (1/2")
16	504-0171	2	Valve, Shutoff	30	503-0189	2	Clamp, Hose
17	505-0324	2	Nipple, Pipe – Half (3/4" x 2")	31	870–0183	2	Nut, Hex – W/ET (#6–32)
18	505-0102	3	Nipple, Pipe (3/4" x 1–3/8")	32	505–0131	1	Bushing, Pipe – Reducer
19	505-0132	2	Elbow, Pipe – 90 Deg (3/4")		000 0044		(3/4" to 3/8")
20	505–0021	1	Bushing, Pipe – Reducer (3/4" to 1/2")	33	332–0941	1	Tie, Cable (Quantity Used As Required)
21	504-0028	1	Cock, Drain (3/8")	34	149–2228	2	Separator, Fuel/Water
22	503–0249	-	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)	35	098–6099–03	2	Decal, Fuel Filter
23	503–0249	_	Hose – Bulk (1" ID) (Order By The Foot – 3 Feet Required)				


External Engine Parts Generator Sets With PowerCommand Control DFLC, DFLD, DFMB

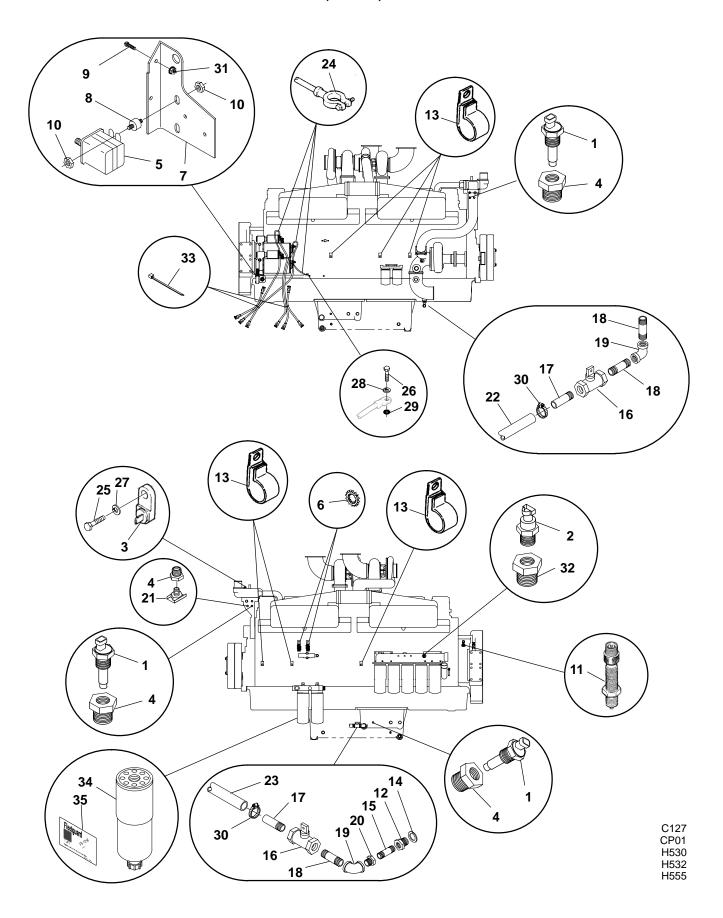

External Engine Parts Generator Sets With PowerCommand Control DFLC, DFLD, DFMB

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0432	3	Sender, Oil Temperature (S2 Engine Block, E4 Oil Pan)	24	416–0680	3	Cable, Battery 10" – Starters and Engine
2	193-0444	1	Sender, Oil Pressure (S1)				Ground (With 2 Ring
3	309-0269	1	Switch, Temperature – Low				Terminal Ends)
			Engine Coolant (S4)		416–0446	2	12–1/2" – Jumper (With
4	505–0019	4	Bushing, Pipe – Reducer (1/2" to 3/8")				Red Colored Battery Boot)
5	307-2621-02	2 1	Solenoid, Pilot (K4)		416-0964	2	35" – Battery To Starter
6	856–0010	2	Washer, Lock - EIT (3/8")				(With 1 Ring End And 1
7	319–2236	1	Bracket, Mounting				Bolted End)
8	402–0610	2	Isolator, Vibration		416–0639	2	60 " – Battery To Starter
9	812–0067	2	Screw, Machine – Round Head (#6-32 x 7/8")				(With 1 Ring End And 1 Bolted End)
10	870-0212	4	Nut, Locking (1/4-20)	25	800-0052	1	Screw, Cap – Hex Head
11	151–0411	1	Pickup, Magnetic				(3/8-16 x 3-3/4")
12	102–1335	1	Plug, Oil Drain	26	800–0090	1	Screw, Cap – Hex Head
13	332–2634	6	Clamp, "J"				(1/2–13 x 1")
14	508-0292	1	Washer, Sealing - Copper	27	850-0050	1	Washer, Lock - Spring (3/8")
15	505–0100	1	Nipple, Pipe – Close (1/2" x	28	850-0060	1	Washer, Lock – Spring (1/2")
			1–1/8")	29	856–0013	1	Washer, Lock – EIT (1/2")
16	504-0171	2	Valve, Shutoff	30	503–0189	2	Clamp, Hose
17	505-0324	2	Nipple, Pipe – Half (3/4" x 2")	31	870–0183	2	Nut, Hex – W/ET (#6–32)
18	505–0102	3	Nipple, Pipe (3/4" x 1–3/8")	32	505-0007	1	Bushing, Pipe – Reducer
19	505–0132	2	Elbow, Pipe – 90 Deg (3/4")				(1/4" to 1/8")
20	505–0021	1	Bushing, Pipe – Reducer (3/4" to 1/2")	33	332–0941	1	Tie, Cable (Quantity Used As Required)
21	504-0028	1	Cock, Drain (3/8")	34	149-2228	2	Separator, Fuel/Water
22	503–0249	-	Hose – Bulk (1" ID) (Order By The Foot – 2 Feet Required)	35	098–6099–03	2	Decal, Fuel Filter
23	503-0249	_	Hose – Bulk (1" ID) (Order By The Foot – 3 Feet Required)				


Water Outlet DFLB

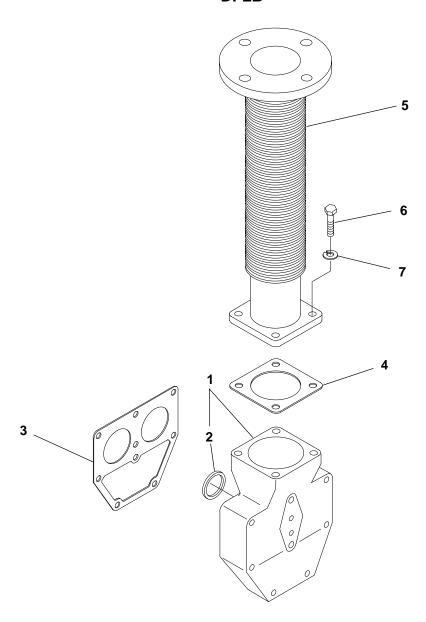

E080

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309–0612	2	Housing, Thermostat	5	130–3686	2	Tube, Water Outlet
			(Includes Seals – Ref No. 2)	6	800–0051	8	Screw, Cap – Hex Head
2	309–0613	4	Seal, Thermostat				(3/8–16 x 1–1/4")
3	130-3679	2	Gasket, Thermostat Housing	7	850-0050	8	Washer, Lock – Spring (3/8")
4	130-3680	2	Gasket, Connection				


Water Outlet DFLC, DFLD, DFMB

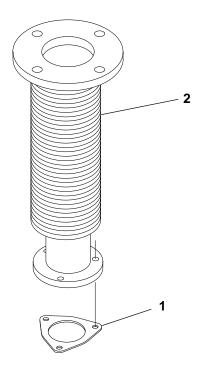

E080

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 1	30_3684	2	Gasket Connection	2 1	130_3687	2	Tube Water Outlet


Water Inlet DFLB, DFLC, DFLD, DFMB Spec K Through L

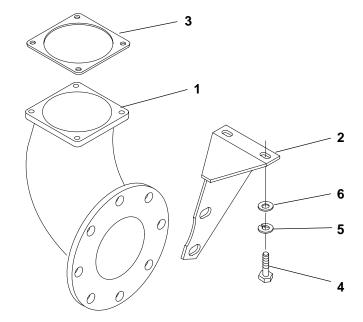

E080


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3681	1	Connection, Water Inlet	5	850-0060	2	Washer, Lock - Spring (1/2")
2	130-3682	1	Brace, Connection	6	526-0028	2	Washer, Flat (1/2")
3	130-3685	1	Gasket				,
4	800-0091	2	Screw, Cap – Hex Head (1/2–13 x 1–1/4")				


Water Inlet DFLB, DFLC, DFLD, DFMB Begin Spec M

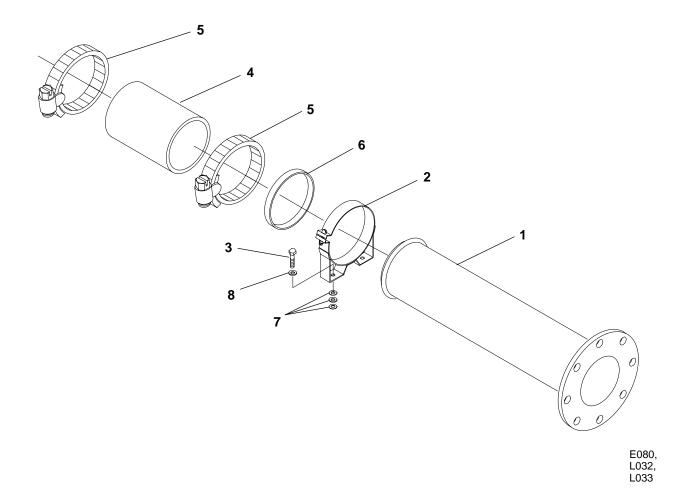

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4517	1	Tube, Water Inlet	6	895–0182	_	Stripping, Weather – Bulk
2	140–0519	1	Band, Mounting Screw, Cap – Hex Head				(1/4" Thk x 3/4" Wide) (Order By The Foot – 2
	800-0006	2	Generator Sets with Standby Power (1/4–20 x 7/8")	7			Feet Required) Washer, Flat (15/32" ID x 1–1/2" OD x 1/4" Thk)
	800–0009	2	Generator Sets with Prime Power (1/4–20 x 1–1/2")		526–0128	6	Generator Sets With Standby Power
4 5	503–1726 503–1872–10	1 2	Hose (5" ID x 6") Clamp, Hose		526–0128	10	Generator Sets With Prime Power
			• /	8	526-0015	2	Washer, Flat (1/4")

Damper Guard Sets with Remote Radiator or Heat Exchanger DFLB Spec K Through N, DFLC, DFLD, DFMB

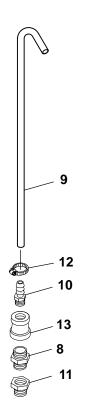

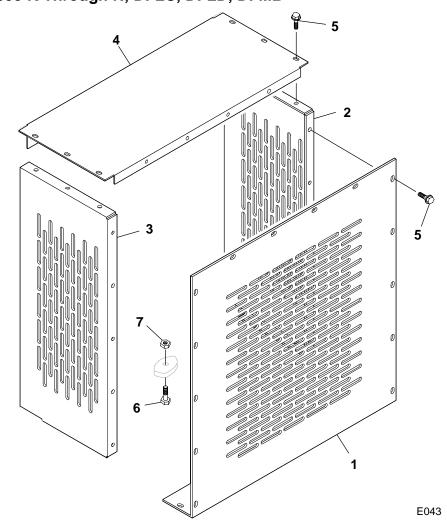


Damper Guard Sets with Remote Radiator or Heat Exchanger DFLB Spec K Through N, DFLC, DFLD, DFMB

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3715	1	Cover, Damper Guard	10			* Connector, Hose (3/8")
2	130–3714–01	1	Guard, Damper – Right Side		502-1162	2	DFLB, DFLB,
3	130–3714–02	1	Guard, Damper – Left Side				DFLC, DFMB
4	130–3713	1	Guard, Damper – Top				Spec K Through R
5	821-5002-03	22	Screw, Self-Locking – Hex		502-1162	3	DFLC, DFMB Begin Spec S
			Washer Head	11			* Bushing, Pipe – Reducer
			(1/4–20 x 1/2")		505-0018	2	1/2" to 1/4"
6	821-5004-03	2	Screw, Self-Locking – Hex				DFLB, DFLD,
			Washer Head (3/8-16 x 1")				DFLC, DFMB
7	870-0281	2	Nut, Self-Locking – Hex				Spec K Through R
			Washer Head (3/8-16)		505-0017	2	DFLC, DFMB Begin Spec S
8			* Valve, Check				(3/8" to 1/4")
	309-0635-02	2	DFLB, DFLD,	12			* Clamp, Hose
			DFLC, DFMB		503-0685	2	DFLB, DFLD,
			Spec K Through R				DFLC, DFMB
	309-0635-02	3	DFLC, DFMB				Spec K Through R
			Begin Spec S		503-0685	3	DFLC, DFMB Begin Spec S
9	503-1620	_	* Hose – Bulk (3/8" ID)	13			* Coupling, Pipe – Reducer
			(Order by the Foot)				(3/8" x 1/4")
			DFLB, DFLD – 5 Feet		505-0153	2	DFLB, DFLD,
			Required				DFLC, DFMB
			DFLC, DFMB				Spec K Through R
			Spec K Through R –		505-0153	3	DFLC, DFMB
			5 Feet Required,				Begin Spec S
			Begin Spec S – 8 Feet				
			Required	* – P	arts used on	sets with	Remote Radiator


²⁹

Damper Guard Sets with Remote Radiator or Heat Exchanger DFLB Begin Spec P

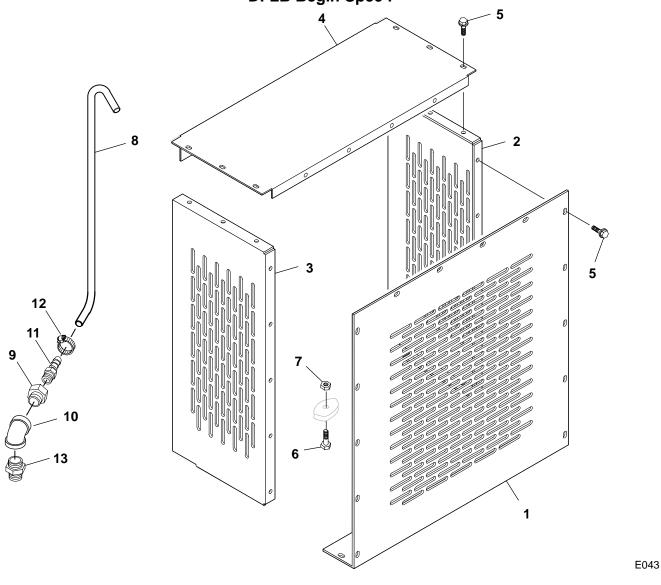

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3715	1	Cover, Damper Guard	8	503-1620	_	* Hose – Bulk (3/8" ID) (Order
2	130-3714-01	1	Guard, Damper – Right Side				by the Foot – 5 Feet
3	130-3714-02	1	Guard, Damper – Left Side				Required)
4	130-3713	1	Guard, Damper – Top	9	505-0017	2	* Bushing, Pipe – Reducer
5	821-5002-03	22	Screw, Self-Locking – Hex				(3/8" to 1/4")
			Washer Head	10	505-0376	2	* Elbow – 45 Deg (3/8")
			(1/4-20 x 1/2")	11	502-1162	2	* Connector, Hose (3/8")
6	821-5004-03	2	Screw, Self-Locking – Hex	12	503-0685	2	* Clamp, Hose
			Washer Head (3/8-16 x 1")	13	309-0635-02	2	* Valve, Check
7	870–0281	2	Nut, Self-Locking – Hex Washer Head (3/8–16)	* – F	Parts used on s	ets with	Remote Radiator


Air Starter

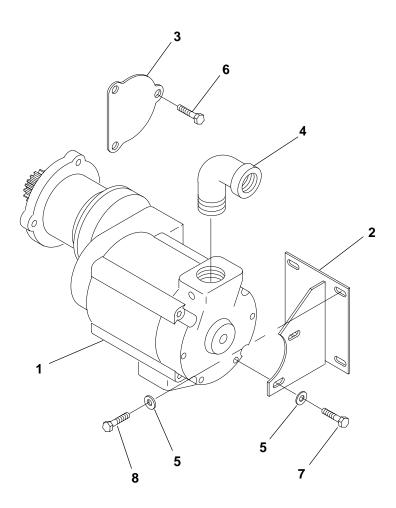

A300


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	127-0390-01	1	Starter, Air	7	800-2526	2	Screw, Cap - Hex Head
2	127-0395	1	Brace, Starter Motor				(M10 x 20)
3	127-0422	1	Cover, Flange – Starter	8	815-0724	4	Screw, Cap – Hex Head
4	502-1054-08	1	Elbow, Street Pipe – 90°				(3/8-16 x 1.25)
5	526-0030	6	Washer, Flat (13/32)				
6	800-0130	3	Screw, Cap - Hex Head				
			(5/8-11 x 1.00)				

Air Cleaner Standard DFLB

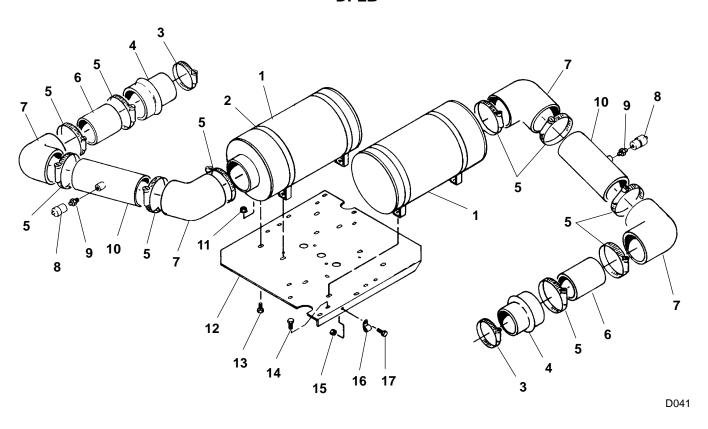


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2501	2	Cleaner, Air (Disposable	12	140-2515	1	Bracket, Mounting
2	140-2502	4	Band, Mounting	13	821-0029	8	Screw, Self-Locking -
3	503-1870-11	2	Clamp, Hose				Hex Washer Head
4	503-1675	2	Hose, Rubber – Reducer				(3/8-16 x 3/4")
			(7" ID to 5-1/2" ID)	14	821-0033	8	Screw, Self-Locking -
5	503-1870-14	10	Clamp, Hose				Hex Washer Head
6	140-2519	2	Tube, Air Inlet (7" x 9")				(7/16–14 x 3/4")
7	503-0970	4	Elbow (90 Deg)	15	870-0257	2	Nut, Hex – Locking (5/16–18)
8	140-1548	2	Indicator, Service	16	518-0548-08	2	Clamp, "J"
9	140-1260	2	Fitting, Safety Filter	17	821-0016	2	Screw, Self-Locking -
10	140-2521	2	Tube, Air Inlet				Hex Washer Head
11	870-0281	8	Nut, Hex – Locking (3/8–16)				(5/16–18 x 3/4")

Air Cleaner Standard DFLC, DFLD

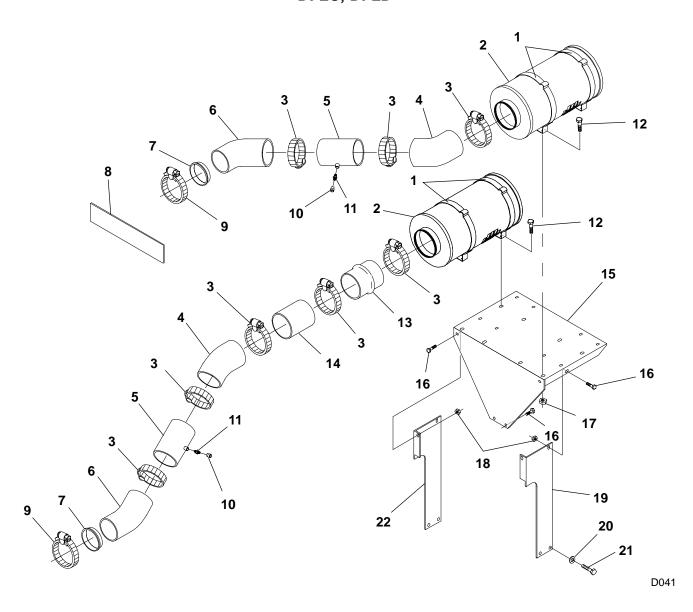


REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	140-2502	4	Band, Mounting - Air Cleaner	13	503-1705	1	Hose, Hump (7" ID)
2	140-2501	2	Cleaner, Air (Disposable)	14	140-2519	1	Tube, Air Inlet (7" x 9")
3	503-1870-14	8	Clamp, Hose	15	140-2503	1	Bracket, Mounting
4	503-1484	2	Elbow, Hose (45 Deg) (7" ID)	16	821-0033	6	Screw, Self-Locking - Hex
5	140-2508	2	Tube, Air Inlet (7" x 9-3/4")				Washer Head
6	503-1717	2	Elbow, Reducer (45 Deg)				(7/16–14 x 3/4")
			(7" ID to 6" ID)	17	870-0281	8	Nut, Locking – Hex (3/8–16)
7	503-1720	2	Insert, Reducer (6" OD to	18	870-0437	4	Nut, Locking – Hex (7/16–14)
			5–1/2" ID)	19	140-2504-01	1	Bracket, Mounting (Right
8	140-2528	1	Shield – Air In Heat				Side)
9	503-1870-12	2	Clamp, Hose	20	850-0079	4	Washer, Lock – Spring (3/4")
10	140-1548	2	Indicator, Service	21	800-0152	4	Screw, Cap - Hex Head
11	140-1260	2	Fitting, Safety Filter				(3/4-10 x 1-1/4")
12	821–0029	8	Screw, Self-Locking – Hex Washer Head (3/8–16 x 3/4")	22	140–2504–02	! 1	Bracket , Mounting (Left Side)

Air Cleaner, Front Standard DFMB

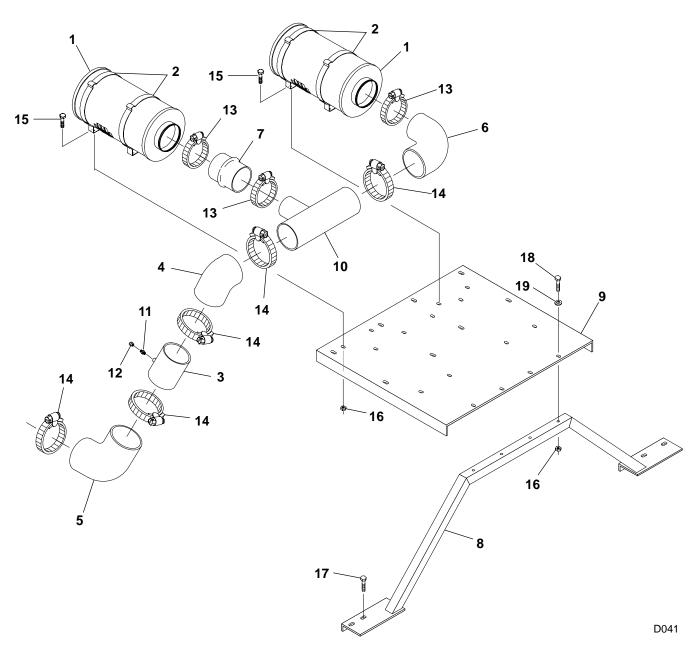


REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	140–2501	2	Cleaner, Air (Disposable)	12	140–1548	1	Indicator, Service
2	140-2502	4	Band, Mounting - Air Cleaner	13	503-1870-14	1 3	Clamp, Hose
3	140-2561	1	Tube, Air Inlet (10" OD)	14	503-1871-04	1 5	Clamp, Hose
4	503-1755	1	Elbow, Hose (63 Deg) (8" ID)	15	821-0029	8	Screw, Self-Locking -
5	503-1756	1	Elbow, Hose (90 Deg) (8" ID)				Hex Washer Head
6	503-1485	1	Elbow, Reducing (90 Deg)				(3/8-16 x 3/4")
			(8" ID to 7" ID)	16	870-0281	16	Nut, Locking – Hex (3/8–16)
7	503-1705	1	Hose, Hump (7" ID)	17	800-0094	8	Screw, Cap - Hex Head
8	140-2548	2	Bracket, Air Cleaner				(1/2-13 x 2")
9	140-2547	1	Plate, Air Cleaner Mounting	18	800-0055	8	Screw, Cap – Hex Head
10	140-2553	1	Manifold, Air Cleaner				(3/8-16 x 2-1/4")
11	140-1260	1	Fitting, Safety Filter	19	526-0030	8	Washer, Flat (3/8")

Air Cleaner, Rear Standard DFMB

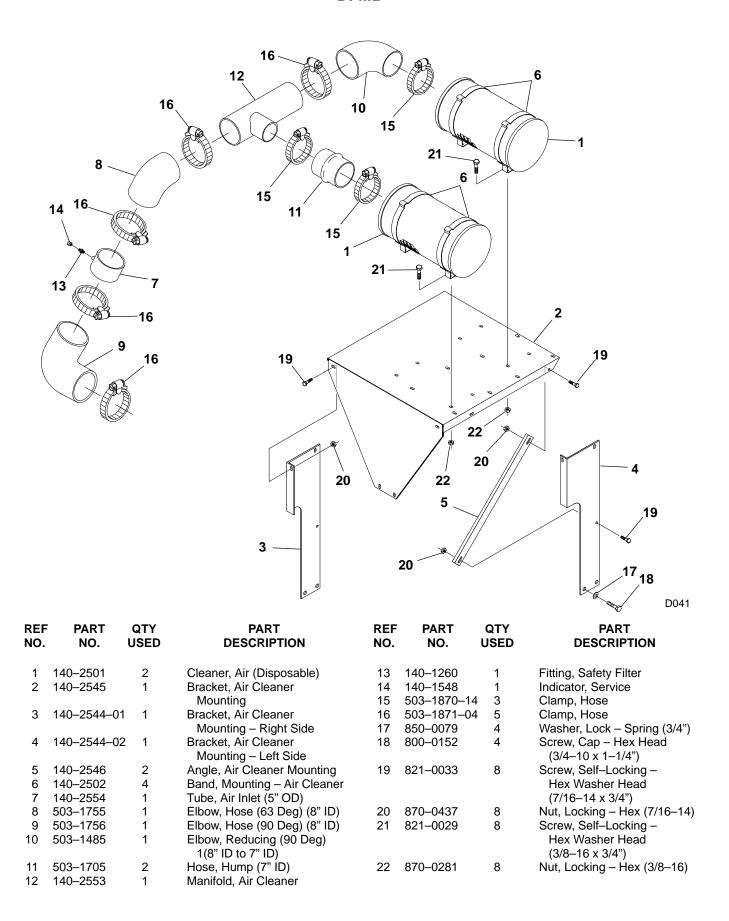

Air Cleaner Heavy Duty DFLB

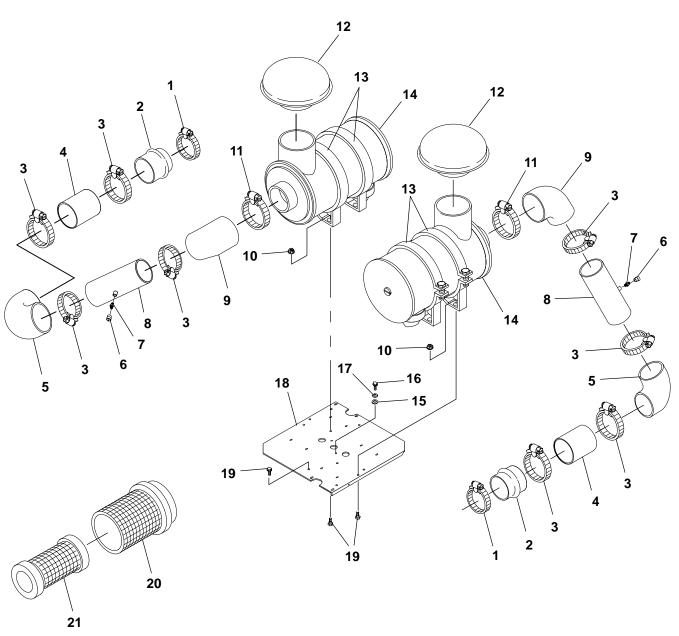


D036

Air Cleaner Heavy Duty DFLB

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-1870-11	2	Clamp, Hose	13	140-2099	4	Band, Mounting
2	503–1675	2	Hose, Rubber – Reducer (7" ID to 5–1/2" ID)	14	140–2097	2	Cleaner, Air (Includes Elements)
3	503-1870-14	8	Clamp, Hose	15	526-0219	2	Washer, Flat (7/16")
4	140-2519	2	Tube, Air Inlet (7" x 9")	16	850-0055	2	Washer, Lock - Spring
5	503-0970	2	Elbow (90 Deg)				(7/16")
6	140-1548	2	Indicator, Service	17	800-0072	2	Screw, Cap - Hex Head
7	140-1260	2	Fitting, Safety Filter				(7/16–14 x 1–1/4")
8	140-2521	2	Tube, Air Inlet (7" x 18-1/2")	18	140-2515	1	Bracket, Mounting
9	503–1485	2	Elbow, Reducer (90 Deg) (8" ID to 7" ID)	19	821–0033	14	Screw, Self-Locking - Hex Washer Head
10	870-0437	8	Nut, Hex – Locking (7/16–14)				(7/16-14 x 3/4")
11	503-1871-04	2	Clamp, Hose	20	140-2096	2	Element, Primary (Outer)
12	140–2098	2	Hood, Air Inlet (Includes Mounting Clamp)	21	140–2467	2	Element, Safety (Inner)

Air Cleaner Heavy Duty DFLC, DFLD

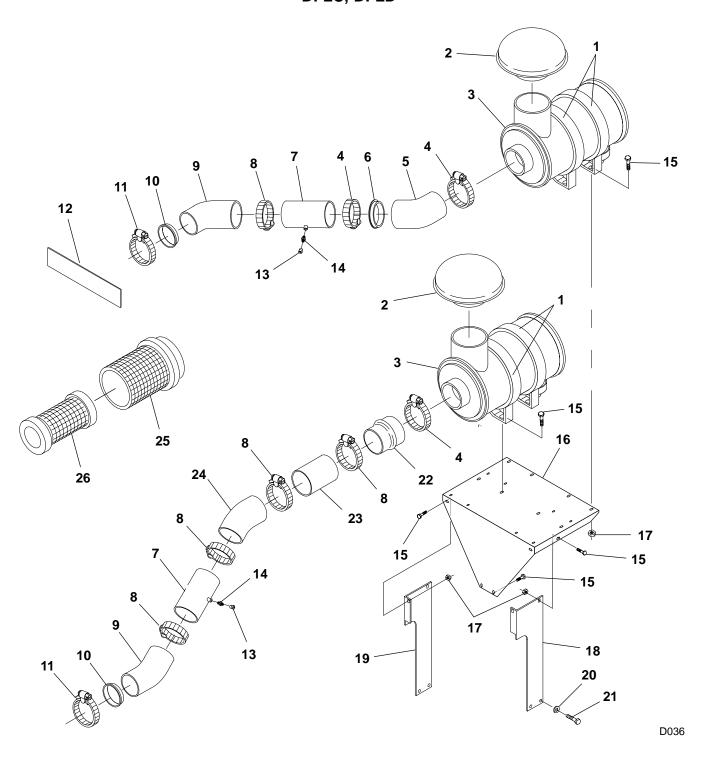

Air Cleaner Heavy Duty DFLC, DFLD


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2099	4	Band, Mounting	14	140–1260	2	Fitting, Safety Filter
2	140–2098	2	Hood, Air Inlet (Includes Mounting Clamp)	15	821–0033	14	Screw, Self–Locking – Hex Washer Head (7/16–14 x
3	140-2097	2	Cleaner, Air (Includes				3/4")
			Elements – See Ref. No.	16	140-2503	1	Bracket, Mounting
			25 and 26)	17	870-0437	12	Nut, Locking – Hex (7/16–14)
4	503-1871-04	3	Clamp, Hose	18	140-2504-01	1	Bracket – Right Side
5	503-1718	1	Elbow, Hose (45 Deg) (8" ID)	19	140-2504-02	1	Bracket – Left Side
6	503-1719	1	Insert, Reducer (8" OD to 7"	20	850-0079	4	Washer, Lock - Spring (3/4")
			ID)	21	800-0152	4	Screw, Cap - Hex Head
7	140-2509	2	Tube, Air Inlet (7" OD x 12")				(3/4-10 x 1-1/4")
8	503-1870-14	5	Clamp, Hose	22	503-1721	1	Hose, Hump – Reducer (8"
9	503-1717	2	Elbow, Reducer (45 Deg)				ID to 7" ID)
			(7" ID to 6" ID)	23	140-2395-01	1	Tube, Air Inlet (7" OD x
10	503-1720	2	Insert, Reducer (6" OD to				10–1/2")
			5–1/2" ID)	24	503-1484	1	Elbow, Hose (45 Deg) (7" ID)
11	503-1870-12	2	Clamp, Hose	25	140-2096	2	Element, Primary (Outer)
12	140-2528	1	Shield	26	140-2467	2	Element, Safety (Inner)
13	140–1548	2	Indicator, Service				, , ,

Air Cleaner, Front Heavy Duty DFMB 1,3


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2301	2	Cleaner, Air (Includes	16	503-1871-04	7	Clamp, Hose
			Elements – Ref No. 2 and 3)	17	821-0033	8	Screw, Self-Locking -
2	140-2465	2	Element, Primary (Outer)				Hex Washer Head
3	140-2466	2	Element, Safety (Inner)				(7/16-14 x 3/4")
4	140-2052	4	Band, Mounting - Air Cleaner	18	870-0437	8	Nut, Locking – Hex (7/16–14)
5	140-2562	1	Tube, Air Inlet (11.63" OD)	19	800-0094	8	Screw, Cap - Hex Head
6	503-1755	1	Elbow, Hose (63 Deg) (8" ID)				(1/2–13 x 2")
7	503-1756	1	Elbow, Hose (90 Deg) (8" ID)	20	800-0055	8	Screw, Cap – Hex Head
8	140-2558	1	Tube, Air Inlet				(3/8-16 x 2-1/4")
9	503-1757	1	Hose, Hump – Reducer	21	862-0016	8	Nut, Hex (1/2-13)
			(8" ID to 6" ID)	22	526-0219	16	Washer, Flat (1/2")
10	140-2548	2	Bracket, Air Cleaner	23	503-1758	1	Hose, Hump – Reducer
11	140-2547	1	Plate, Air Cleaner Mounting				(7" ID to 6" ID)
12	140-2553	1	Manifold, Air Cleaner	24	503-1870-12	2	Clamp, Hose
13	140-1260	1	Fitting, Safety Filter	25	140-1545	2	Hood, Air Inlet
14	140-1548	1	Indicator, Service	26	850-0060	8	Washer, Lock (1/2")
15	503-1870-14	1	Clamp, Hose	27	870–0281	8	Nut, Locking – Hex (3/8–16)

D036

Air Cleaner, Rear Heavy Duty DFMB

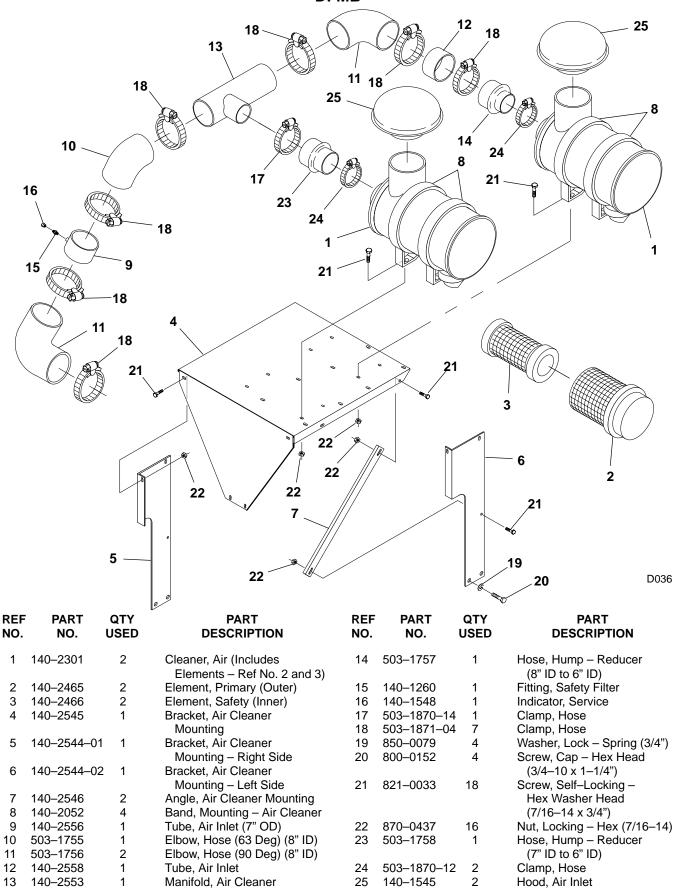


Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L

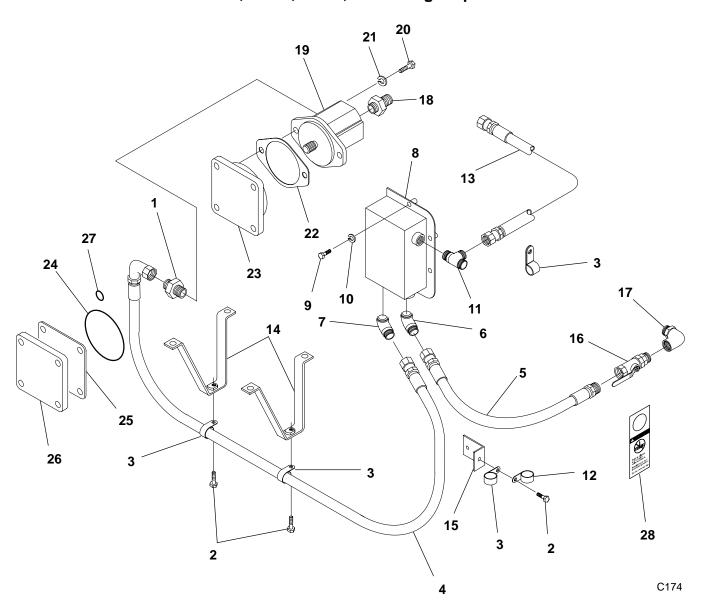

Fuel Transfer Pump DFLB, DFLC, DFLD, DFMB Begin Spec L

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-1267	1	Connector, Straight (7/8–14 x	12	518-0633	1	Clamp, "J"
			1–3/16–12)	13	501-0654	1	Line, Fuel – Flexible (3/4" ID
2	821-5004-02	3	Screw, Self-Locking - Hex				x 40")
			Washer Head (3/8-16 x	14	159-1450	2	Bracket
			3/4")	15	159-1448	1	Bracket
3	518-0548-29	5	Clamp, Hose	16	502-1270	1	Valve, Shutoff
4	501–0651	1	Line, Fuel – Flexible (3/4" ID x 67")	17	502–1271	1	Elbow – 90 Deg (1–5/16–12 x 1–5/16–12)
5	501–0653	1	Line, Fuel – Flexible (1" ID x 26")	18	502–1268	1	Connector, Straight (7/8–14 x 1–5/16–12)
6	502-1266-02	1	Elbow – 45 Deg (1–5/16–12	19	159-1451	1	Pump, Fuel Transfer
			x 1-7/16-12)	20	800-0050	2	Screw, Cap - Hex Head
7	502-1266-01	1	Elbow – 45 Deg (1–1/16–12				(3/8–16 x 1")
			x 1–3/16–12)	21	850-0050	2	Washer, Lock - Spring (3/8")
8	159-1445	1	Reservoir, Fuel	22	121-0113	1	Gasket, Pump
9	800-0081	2	Screw, Cap - Hex Head	23	121-0111	1	Drive, Pump
			(7/16-14 x 3-1/2")	24	509-0336	1	Seal, O-Ring
10	850-0055	2	Washer, Lock - Spring	25	121-0117	1	Gasket, Hand Hole
			(7/16")	26	121-0116	1	Cover, Hydraulic Hole
11	502-1269	1	Tee (1-3/16-12 x 1-3/16-12	27	509-0337	1	Seal, O-Ring
			x 1–1/16–12)	28	098–7301	1	Tag, Label


Radiator DFLB Spec K and L

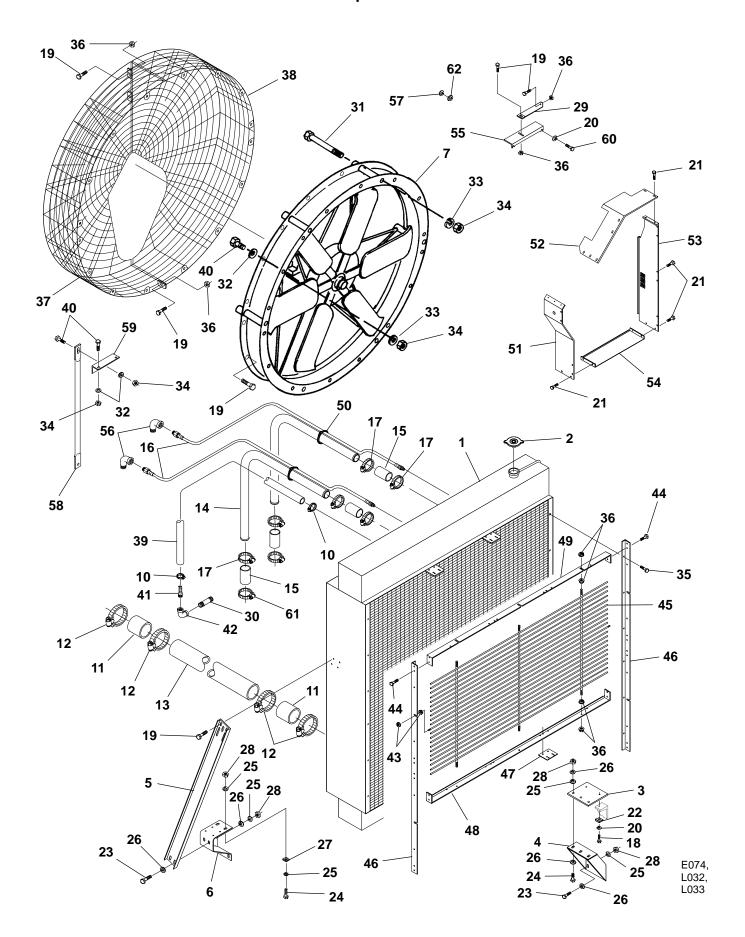

Radiator DFLB Spec K Through L

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3616	1	Radiator (Includes Radiator Cap [Ref No. 2] and	31	800-0305	6	Screw, Cap – Hex head (5/8–11 x 13")
			Overflow Tube)	32	526-0112	8	Washer, Flat (5/8")
2	130–3588	1	Cap, Radiator	33	850-0070	10	Washer, Lock – Spring (5/8")
3	130-3642	2	Spacer, Radiator	34	862-0007	14	Nut, Hex (5/8–11)
4	130–3639	2	Bracket, Radiator Support	35	815–0384	12	Screw, Hex Washer Head –
5	130-4860	2	Support, Radiator				Thread Forming
6	130-3644	2	Support				(3/8-16 x 3/4")
7	130-3651	1	Fan Shroud Assembly	36	870-0550-09		Nut, Hex - Locking (3/8-16)
			(Includes Bearing and	37	130-3647-01	1	Guard, Fan – Right Side
			Shaft – Ref No. 8 and 9)	38	130-3647-02	1	Guard, Fan – Left Side
8	130-4215	2	Bearing (Not Illustrated)	39	503-1730	1	Hose, Radiator
9	130-4216	1	Shaft (Not Illustrated)				(1-1/2" ID x 106")
10	503-1872-02	2	Clamp, Hose	40	800-0132	8	Screw, Cap – Hex Head
11	503-1726	2	Hose, Radiator (5" ID x 6")				(5/8-11 x 1-1/2")
12	503-1872-10	4	Clamp, Hose	41	505-1429	1	Nipple, Comb (1-1/2")
13	130–3650	1	Tube, Radiator Outlet (5" OD x 48")	42	505–0183	1	Elbow Reducer, 90 Deg (1–1/2" to 1–1/4")
14	130-3649	2	Tube, Radiator Inlet (3" OD)	43	870-0212	8	Nut, Hex – Locking (1/4–20)
15	503–1728	4	Hose, Radiator (3" ID x 5–1/2")	44	821–5003–01	20	Screw, Self-Locking - Hex Washer Head
16	501-0559	2	Line, Flex Fuel				(5/16–18 x 1/2")
			(1/4–18 NPTF x 75")	45	130–3827	2	Grille
17	503-1872-05		Clamp, Hose	46	130–3826	2	Support, Grille
18	800-0051	4	Screw, Cap – Hex Head	47	130–3825	6	Plate, Stiffener
			(3/8–16 x 1–1/4")	48	130–3663	2	Support, Grille – Bottom
19	821-5004-03	27	Screw, Self-Locking - Hex	49	130–3662	2	Support, Grille – Top
20	850-0048	6	Washer Head (3/8–16 x 1") Washer, Lock – Spring (3/8")	50	332–3008	1	Tie, Cable (Quantity Used As Required)
21	821-5002-03	21	Screw, Self-Locking - Hex	51	130-3675	1	Guard, Belt - Left Side
			Washer Head	52	130-3677	1	Guard, Belt – Top
			(1/4-20 x 1/2")	53	130-3676	1	Guard, Belt - Right Side
22	403-2733-02	4	Washer, Bevel (3/8")	54	130-3672	1	Guard, Belt – Bottom
23	800-0092	16	Screw, Cap – Hex Head	55	130-3779	1	Angle, Engine
			(1/2–13 x 1–1/2")	56	505-0011	2	Elbow, Pipe - Street (1/4", 90
24	800-0094	10	Screw, Cap – Hex Head (1/2–13 x 2")	57	850-0114-07		Deg) Washer, Lock – Spring (3/8")
25	850-0060	26	Washer, Lock – Spring (1/2")	58	403–3278	1	Brace, Fan
26 26	526–0219	32	Washer, Flat (1/2")	59	403–3277	1	Brace, Fan
20 27	403–2733–01	32 4	Washer, Bevel (1/2")	60	800–0585	2	Screw, Cap – Hex Head
2 <i>1</i> 28	862-0016	4 26	Nut, Hex (1/2–13)	00	000-0000	۷	(3/8–16 x 3–1/2")
26 29	130–3776	20 1	Angle, Stiffener	61	503-1870-05	2	Clamp, Hose
30	505–0219	1		62	526-0399-19		
30	505-0219	ı	Nipple (1-1/4" x 4-1/2")	02	520-0399-19	∠ I	Washer, Flat (3/8")


Radiator DFLB Begin Spec M

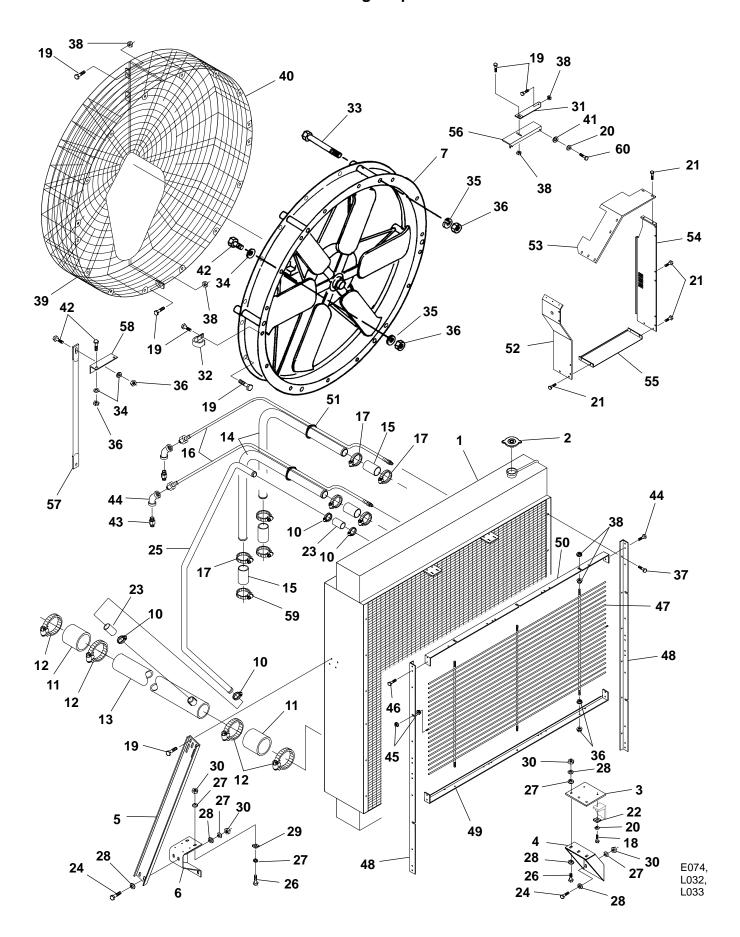

Radiator DFLB Begin Spec M

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3616	1	Radiator (Includes Radiator	29	403-2733-01	4	Washer, Bevel (1/2")
			Cap [Ref No. 2] and	30	862-0016	26	Nut, Hex (1/2-13)
			Overflow Tube)	31	130-3776	1	Angle, Stiffener
2	130-3588	1	Cap, Radiator	32	518-0633	2	Clip, J
3	130-3642	2	Spacer, Radiator	33	800-0305	6	Screw, Cap – Hex head
4	130-3639	2	Bracket, Radiator Support				(5/8-11 x 13")
5	130-4860	2	Support, Radiator	34	526-0112	8	Washer, Flat (5/8")
6	130-3644	2	Support	35	850-0070	10	Washer, Lock – Spring (5/8")
7	130-3651	1	Fan Shroud Assembly	36	862-0007	14	Nut, Hex (5/8-11)
			(Includes Bearing and Shaft – Ref No. 8 and 9)	37	815–0384	12	Screw, Hex Washer Head – Thread Forming
8	130–4215	2	Bearing (Note Illustrated)				(3/8-16 x 3/4")
9	130–4216	1	Shaft (Not Illustrated)	38	870-0550-09		Nut, Hex – Locking (3/8–16)
10	503-1872-02		Clamp, Hose	39	130–3647–01	1	Guard, Fan – Right Side
11	503-1726	2	Hose, Radiator (5" ID x 6")	40	130-3647-02	1	Guard, Fan – Left Side
12	503-1872-10	4	Clamp, Hose	41	526-0029	2	Washer, Flat (3/8")
13	130–4152–02	1	Tube, Radiator Outlet (5" OD x 48")	42	800–0132	8	Screw, Cap – Hex head (5/8–11 x 1–1/2")
14	130-3649	2	Tube, Radiator Inlet	43	309-0635-02	2	Valve, Check
			(3" OD x 5-1/2")	44	505-0376	2	Elbow, 45 Deg (3/8")
15	503-1728	4	Hose, Radiator (3" ID)	45	870-0550-05	8	Nut, Hex – Locking (1/4–20)
16	501-0613-01	2	Line, Flex Fuel	46	821-5003-01	20	Screw, Self-Locking - Hex
17	503-1872-05	8	Clamp, Hose				Washer Head
18	800-0051	4	Screw, Cap – Hex Head				(5/16–18 x 1/2")
			(3/8-16 x 1-1/4")	47	130-3827	2	Grille
19	821-5004-03	28	Screw, Self-Locking - Hex	48	130-3826	2	Support, Grille
			Washer Head (3/8-16 x 1")	49	130-3663	2	Support, Grille – Bottom
20	850-0050	6	Washer, Lock – Spring (3/8")	50	130-3662	2	Support, Grille – Top
21	821-5002-03	21	Screw, Self-Locking - Hex	51	332-3008	10	Tie, Cable
			Washer Head	52	130-3675	1	Guard, Belt – Left Side
			(1/4–20 x 1/2")	53	130-3677	1	Guard, Belt – Top
22	403-2733-02	4	Washer, Bevel (3/8")	54	130-3676	1	Guard, Belt – Right Side
23	503-1863	2	Hose, Radiator (1–1/2" x 6")	55	130-3672	1	Guard, Belt – Bottom
24	800-0092	16	Screw, Cap – Hex Head	56	130-3779	1	Angle, Engine
			(1/2-13 x 1-1/2")	57	403-3278	1	Brace, Fan
25	130-4155	1	Tube, Radiator (1–1/2" ID)	58	403-3277	1	Brace, Fan
26	800-0094	10	Screw, Cap – Hex Head	59	503-1870-05	2	Clamp, Hose
			(1/2-13 x 2")	60	800-0061	2	Screw, Cap - Hex Head
27	850-0060	26	Washer, Lock - Spring (1/2")				(3/8–16 x 3–3/4")
28	526-0219	32	Washer, Flat (1/2")				·


Radiator
DFLC Spec K Through P, DFLD, DFMB Spec K Through P

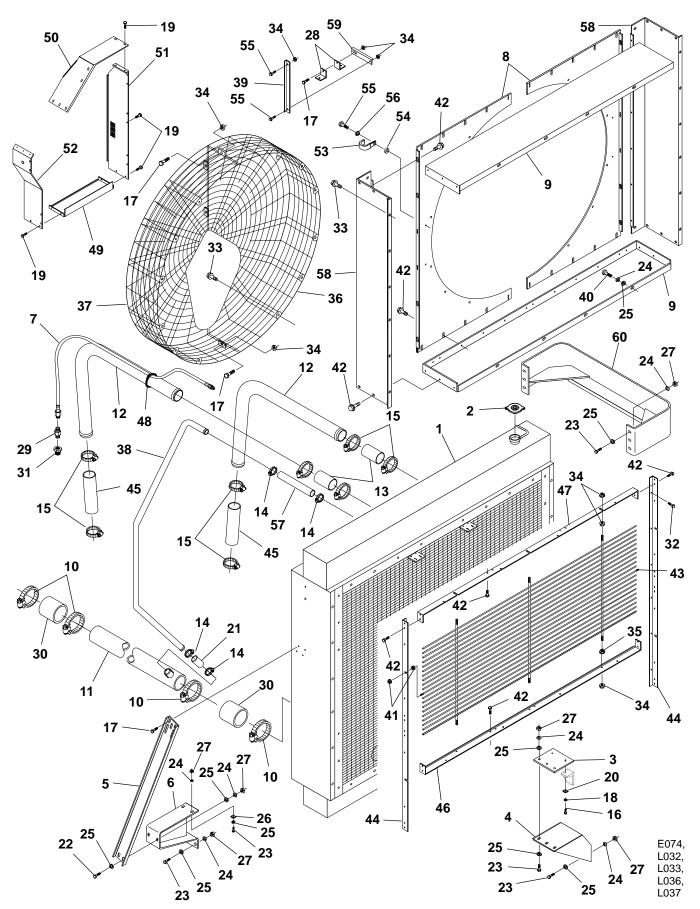

Radiator DFLC Spec K Through P, DFLD, DFMB Spec K Through P

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4195	1	Radiator (Includes Radiator Cap [Ref No. 2] and Overflow Tube)	32	815–0384	12	Screw, Hex Washer Head – Thread Forming (3/8–16 x 3/4")
2	130-3588	1	Cap, Radiator	33	821-0029	24	Screw, Self-Locking - Hex
3	130-3642-01	2	Spacer, Radiator				Washer Head
4	130-4194	2	Bracket, Radiator Support				(3/8-16 x 3/4")
5	130-4860	2	Support, Radiator	34			Nut, Hex – Locking (3/8–16)
6	130-4191	2	Support		870-0550-09	23	Spec K through M
7	501-0614-01		Line, Flex Fuel (62")		870-0281	23	Spec N through P
8	130-4188	2	Fan Shroud	35	870-0550-09	6	Nut, Hex – Locking (3/8–16)
9	130-4187	2	Fan Shroud, Top and Bottom				(Spec K through M)
10	503-1872-09	9 4	Clamp, Hose	36	130-4297-02	1	Guard, Fan – Right Side
11	130-4152-01	1	Tube, Radiator Outlet	37	130-4297-01	1	Guard, Fan – Left Side
			(5" OD x 48")	38	130-4155	1	Tube, Radiator (1-1/2")
12	130-3648	2	Tube, Radiator Inlet (3" OD)	39	130-4219	1	Angle, Stiffener
13	503-1728	2	Hose, Radiator	40	800-0090	8	Screw, Cap - Hex Head
			(3" ID x 5-1/2")				(1/2–13 x 1")
14	503-1872-02	2 4	Clamp, Hose	41	870-0212	8	Nut, Hex – Locking (1/4–20)
15	503-1872-05	5 8	Clamp, Hose	42	821-0014	80	Screw, Self-Locking - Hex
16	800–0051	6	Screw, Cap – Hex Head (3/8–16 x 1–1/4")				Washer Head (5/16–18 x 1/2")
17	821-0030	11	Screw, Self-Locking - Hex	43	130-4292	2	Grille
			Washer Head (3/8-16 x 1")	44	130-3826	2	Support, Grille
18	850-0048	6	Washer, Lock – Spring (3/8")	45	503-1727	2	Hose, Radiator (3" ID x 12")
19	821-0010	21	Screw, Self-Locking	46	130-4291	2	Support, Grille – Bottom
			(1/4–20 x 1/2")	47	130-4290	2	Support, Grille – Top
20	403-2733-02	2 4	Washer, Bevel (3/8")	48	332-3008	8	Tie, Cable
21	503-1863	1	Hose, Radiator	49	130-4294	1	Guard, Belt – Bottom
			(1-1/2" ID x 6")	50	130–4296	1	Guard, Belt – Top
22	800-0092	4	Screw, Cap – Hex Head	51	130-4295	1	Guard, Belt – Right Side
			(1/2–13 x 1–1/2")	52	130–4293	1	Guard, Belt – Left Side
23	800-0094	34	Screw, Cap – Hex Head	53	518–0633	2	Clip, "J"
			(1/2–13 x 2")	54	130–3660	2	Spacer
24	850–0060	46	Washer, Lock – Spring (1/2")	55	821–0035	4	Screw, Self-Locking - Hex
25	526–0219	50	Washer, Flat (1/2")				Washer Head
26	403-2733-01		Washer, Bevel (1/2")				(3/8-16 x 1-1/4")
27	862–0016	38	Nut, Hex (1/2–13)	56	526-0029	2	Washer, Flat (3/8")
28	130–3780	2	Angle, Engine	57	503-1863-01	1	Hose, Radiator
29	309-0635-02		Valve, Check				(1-1/2" x 12-1/2")
30	503–1726	2	Hose, Radiator (5" ID)	58	130–4299	2	Shroud, Fan – Side
31	505–0017	1	Bushing, Reducer	59	130–3777	1	Angle, Stiffener
			(3/8" to 1/4")	60	130–4301	2	Bumper, Radiator


Radiator – 50°C Ambient DFLC, DFMB Begin Spec R

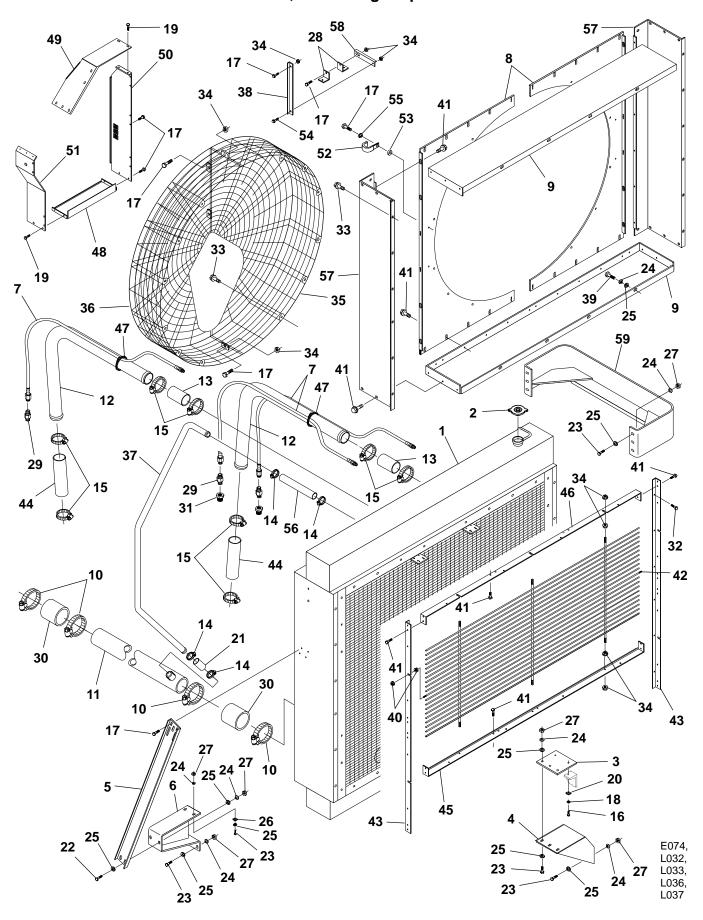

Radiator – 50°C Ambient DFLC, DFMB Begin Spec R

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4195	1	Radiator (Includes Radiator Cap [Ref No. 2] and	31	505-0017	2	Bushing, Reducer (3/8" to 1/4")
2	130–3588	1	Overflow Tube) Cap, Radiator	32	815–0384	12	Screw, Hex Washer Head – Thread Forming
3	130–3642–01		Spacer, Radiator	22	004 5004 00	0.4	(3/8–16 x 3/4")
4 5	130–4194 130–4860	2 2	Bracket, Radiator Support Support, Radiator	33	821–5004–02	24	Screw, Self–Locking – Hex Washer Head
6	130–4800	2	Support Support				(3/8–16 x 3/4")
7	501-0614-01		Line, Flex Fuel (62")	34	870-0550-09	29	Nut, Hex – Locking (3/8–16)
8	130–4188	2	Fan Shroud	35	130–4297–02		Guard, Fan – Right Side
9	130–4187	2	Fan Shroud, Top and Bottom	36	130-4297-01	1	Guard, Fan – Left Side
10	503-1872-09		Clamp, Hose	37	130–4155	1	Tube, Radiator (1–1/2")
11	130-4152-01		Tube, Radiator Outlet	38	130–4219	1	Angle, Stiffener
12	130–3648	2	(5" OD x 48") Tube, Radiator Inlet (3" OD)	39	800–0091	8	Screw, Cap – Hex Head (1/2–13 x 1–1/4")
13	503–1728	2	Hose, Radiator	40	870-0550-05	8	Nut, Hex – Locking (1/4–20)
13	303-1720	2	(3" ID x 5–1/2")	41	821–5003–01	-	Screw, Self-Locking - Hex
14	503-1872-02	. 4	Clamp, Hose		02. 0000 0.	00	Washer Head
15	503-1872-05		Clamp, Hose				(5/16–18 x 1/2")
16	800-0051	6	Screw, Cap – Hex Head	42	130-4292	2	Grille
			(3/8–16 x 1–1/4")	43	130-3826	2	Support, Grille
17	821-5004-03	14	Screw, Self-Locking - Hex	44	503-1727	2	Hose, Radiator (3" ID x 12")
			Washer Head (3/8-16 x 1")	45	130-4291	2	Support, Grille – Bottom
18	850-0050	4	Washer, Lock – Spring (3/8")	46	130-4290	2	Support, Grille – Top
19	821-0010	21	Screw, Self-Locking	47	332-3008	10	Tie, Cable
			(1/4–20 x 1/2")	48	130–4294	1	Guard, Belt – Bottom
20	403–2733–02		Washer, Bevel (3/8")	49	130–4296	1	Guard, Belt – Top
21	503-1863	1	Hose, Radiator	50	130–4295	1	Guard, Belt - Right Side
			(1-1/2" ID x 6")	51	130–4293	1	Guard, Belt – Left Side
22	800–0092	4	Screw, Cap - Hex Head	52	518–0633	2	Clip, "J"
			(1/2–13 x 1–1/2")	53	130–3660	2	Spacer
23	800–0094	34	Screw, Cap – Hex Head (1/2–13 x 2")	54	821–0035	1	Screw, Self–Locking – Hex Washer Head
24	850-0060	46	Washer, Lock – Spring (1/2")				(3/8–16 x 1–1/4")
25	526–0219	50	Washer, Flat (1/2")	55	526-0029	2	Washer, Flat (3/8")
26	403–2733–01		Washer, Bevel (1/2")	56	503-1863-01	1	Hose, Radiator
27	862–0016	38	Nut, Hex (1/2–13)				(1-1/2" x 12-1/2")
28	130–3780	2	Angle, Engine	57	130–4299	2	Shroud, Fan – Side
29	309-0635-02		Valve, Check	58	130–3777	1	Angle, Stiffener
30	503–1726	2	Hose, Radiator (5" ID x 6")	59	130–4301	2	Bumper, Radiator


Radiator – 40°C Ambient DFLC Begin Spec T

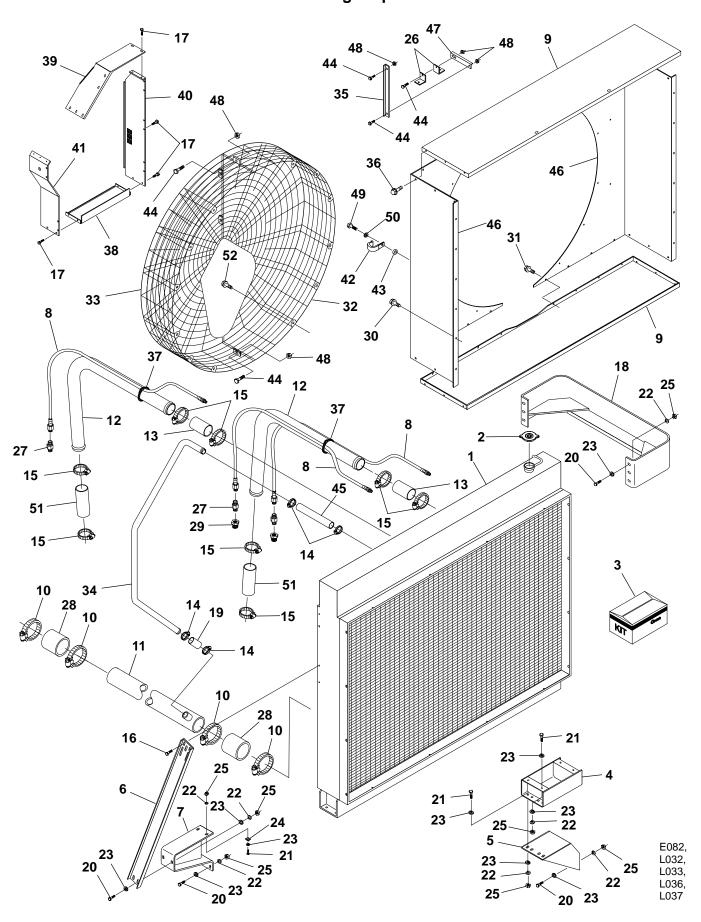

Radiator – 40°C Ambient DFLC Begin Spec T

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-5109	1	Radiator (Includes Radiator	28	503-1726	2	Hose, Radiator (5" ID x 6")
			Cap [Ref No. 2] and Overflow Tube)	29	505–0017	2	Bushing, Reducer (3/8" to 1/4")
2	130-3588	1	Cap, Radiator	30	815-0384	12	Screw, Hex Washer Head -
3	130–4362	1	Kit, Repair – Radiator Sight Guage (Includes Glass				Thread Forming (3/8–16 x 3/4")
	100 5100 00	•	Bulb and O–Ring)	31	821–5004–02	16	Screw, Self–Locking – Hex
4	130-5198-02		Spacer, Radiator				Washer Head
5	130-5194-02	2	Bracket, Radiator Support	00	100 1007 00	4	(3/8–16 x 3/4")
6	130–4860	2	Support, Radiator	32	130-4297-02		Guard, Fan – Right Side
7	130–4191	2	Support	33	130-4297-01	1	Guard, Fan – Left Side
8	501-0614-01	3	Line, Flex Fuel (62")	34	130-5202-02		Tube, Radiator (1–1/2")
9	130-5200-02		Fan Shroud	35	130–4219	1	Angle, Stiffener
10	503-1872-09		Clamp, Hose	36	821–5003–01	12	Screw, Self–Locking – Hex
11	130–4152–01	1	Tube, Radiator Outlet (5" OD x 48")				Washer Head (5/16–18 x 1/2")
12	130–3648	2	Tube, Radiator Inlet (3" OD)	37	332–3008	10	Tie, Cable
13	503-1728	2	Hose, Radiator	38	130–4294	1	Guard, Belt – Bottom
			(3" ID x 5-1/2")	39	130-4296	1	Guard, Belt – Top
14	503-1872-02		Clamp, Hose	40	130–4295	1	Guard, Belt – Right Side
15	503-1872-05		Clamp, Hose	41	130-4293	1	Guard, Belt – Left Side
16	821-5004-03	4	Screw, Self-Locking - Hex	42	518-0633	2	Clip, J
			Washer Head (3/8-16 x 1")	43	130-3660	2	Spacer
17	821–5002–03	21	Screw, Self-Locking (1/4-20 x 1/2")	44	821–0035	6	Screw, Self-Locking - Hex Washer Head
18	130-4301	2	Bumper, Radiator				(3/8-16 x 1-1/4")
19	503–1863	1	Hose, Radiator (1–1/2" ID x 6")	45	503–1863–01	1	Hose, Radiator (1–1/2" x 12–1/2")
20	800-0092	28	Screw, Cap – Hex Head	46	130-5199-02	2	Wrapper, Fan Shroud
			(1/2-13 x 1-1/2")	47	130-3777	1	Angle, Stiffener
21	800-0094	12	Screw, Cap – Hex Head	48	870-0281	5	Nut, Hex – Locking (3/8–16)
			(1/2–13 x 2")	49	821-0022	2	Screw, Self-Locking - Hex
22	850-0060	32	Washer, Lock - Spring (1/2")				Washer Head
23	526-0219	52	Washer, Flat (1/2")				(5/16-18 x 1-1/4")
24	403-2733-01	4	Washer, Bevel (1/2")	50	526-2100	2	Washer, Flat (M8)
25	862-0016	40	Nut, Hex (1/2-13)	51	503-1762	2	Hose (3" ID x 8-1/2")
26	130-3780	2	Angle, Engine	52	821-5003-03		Screw, Cap – Hex Head
27	309-0635-02		Valve, Check	-			(5/16–18 x 3/4")


Radiator – 50°C Ambient DFLC Begin Spec T

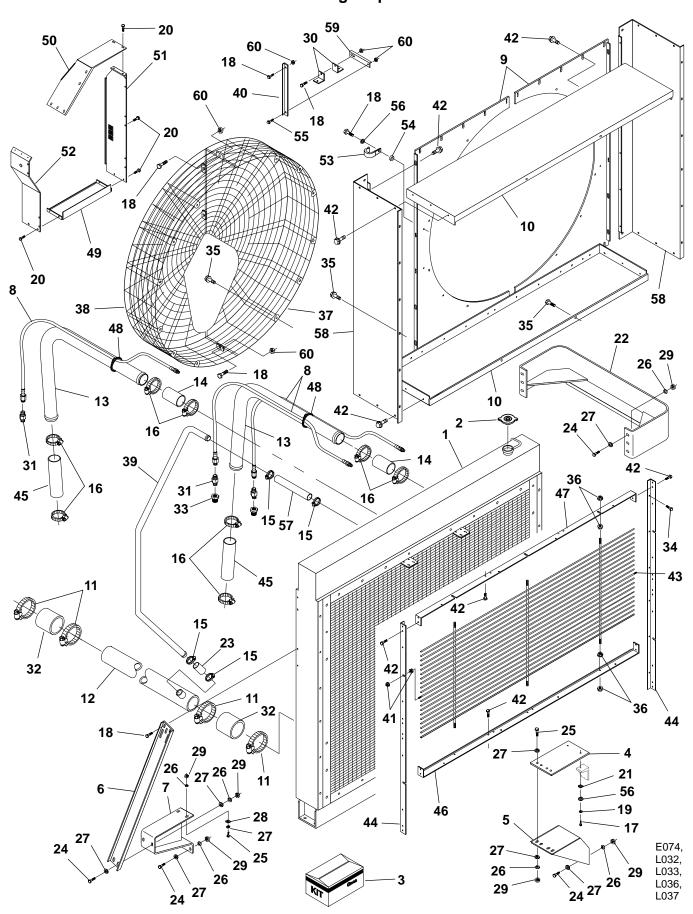

Radiator – 50°C Ambient DFLC Begin Spec T


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-5108	1	Radiator (Includes Radiator	30	130-3780	2	Angle, Engine
			Cap [Ref No. 2] and	31	309-0635-02		Valve, Check
			Overflow Tube)	32	503-1726	2	Hose, Radiator (5" ID x 6")
2	130–3588	1	Cap, Radiator	33	505-0017	2	Bushing, Reducer
3	130–4362	1	Kit, Repair – Radiator Sight				(3/8" to 1/4")
			Guage (Includes Glass	34	815–0384	12	Screw, Hex Washer Head –
_		_	Bulb and O–Ring)				Thread Forming
4	130-5195-02		Spacer, Radiator				(3/8–16 x 3/4")
5	130-5194-02		Bracket, Radiator Support	35	821–5004–02	28	Screw, Self-Locking - Hex
6	130–4860	2	Support, Radiator				Washer Head
7	130–4191	2	Support				(3/8–16 x 3/4")
8	501-0614-01	3	Line, Flex Fuel (62")	36	870-0550-09		Nut, Lock – Hex (3/8–16)
9	130–4188	2	Fan Shroud	37	130-4297-02		Guard, Fan – Right Side
10	130-5192-02		Fan Shroud, Top and Bottom	38	130-4297-01	1	Guard, Fan – Left Side
11	503-1872-09		Clamp, Hose	39	130–4155	1	Tube, Radiator (1–1/2")
12	130–4152–01	1	Tube, Radiator Outlet	40	130–4219	1	Angle, Stiffener
40	100 0010	0	(5" OD x 48")	41	870-0550-05		Nut, Hex – Locking (1/4–20)
13	130–3648	2	Tube, Radiator Inlet (3" OD)	42	821–5003–01	60	Screw, Self-Locking - Hex
14	503–1728	2	Hose, Radiator (3" ID x 5–1/2")				Washer Head (5/16–18 x 1/2")
15	503-1872-02	4	Clamp, Hose	43	130-4292	2	Grille
16	503-1872-05	8	Clamp, Hose	44	130-3826	2	Support, Grille
17	800-0053	6	Screw, Cap – Hex Head	45	503-1727	2	Hose, Radiator (3" ID x 12")
			(3/8-16 x 1-1/4")	46	130-4291	2	Support, Grille – Bottom
18	821-5004-03	4	Screw, Self–Locking – Hex	47	130-4290	2	Support, Grille - Top
			Washer Head (3/8-16 x 1")	48	332-3008	10	Tie, Cable
19	850-0050	4	Washer, Lock – Spring (3/8")	49	130-4294	1	Guard, Belt – Bottom
20	821-5002-03	21	Screw, Self-Locking	50	130-4296	1	Guard, Belt – Top
			(1/4–20 x 1/2")	51	130–4295	1	Guard, Belt – Right Side
21	403–2733–02		Washer, Bevel (3/8")	52	130–4293	1	Guard, Belt – Left Side
22	130–4301	2	Bumper, Radiator	53	518-0633	2	Clip, J
23	503–1863	1	Hose, Radiator	54	130–3660	2	Spacer
			(1–1/2" ID x 6")	55	821–0035	7	Screw, Self-Locking - Hex
24	800–0092	28	Screw, Cap – Hex Head (1/2–13 x 1–1/2")				Washer Head (3/8–16 x 1–1/4")
25	800-0094	8	Screw, Cap – Hex Head	56	526-0029	6	Washer, Flat (3/8")
			(1/2–13 x 2")	57	503-1863-01	1	Hose, Radiator
26	850-0060	36	Washer, Lock - Spring (1/2")				(1-1/2" x 12-1/2")
27	526-0219	44	Washer, Flat (1/2")	58	130-5191-02	2	Shroud, Fan – Side
28	403-2733-01	4	Washer, Bevel (1/2")	59	130-3777	1	Angle, Stiffener
29	862-0016	36	Nut, Hex (1/2-13)	60	870-0281	5	Nut, Hex – Locking (3/8–16)

Fan Drive DFLB

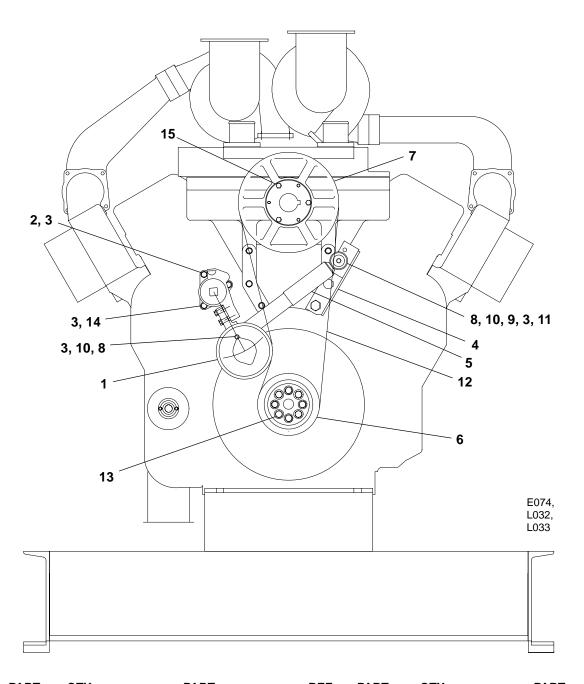


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3668	1	Idler Assembly, Fan (Includes	9	130-3660	1	Spacer
			Idler Lever Assembly, Idler	10	526-0141	2	Washer, Flat (7/16")
			Pulley and Ring Dowel)	11	862-0034	1	Nut, Hex (7/16")
2	800-0500	2	Screw, Cap - Hex Head	12			Belt, Ribbed
			(7/16-14 x 5-1/2", Grade 8)		511-0161-03	3 1	Generator Sets with
3	850-0055	5	Washer, Lock - Spring				Standby Power
			(7/16")		511-0161-12	2 1	Generator Sets with Prime
4	130-3657	1	Support, Fan				Power
5	402-0612	1	Absorber, Shock	13	815-0769-01	8	Screw, Cap - 12 Point
6	130-3812	1	Pulley, Fan Drive (7.4")				(3/4-16 x 4-1/2")
7	130-3654	1	Pulley, Fan Drive (12")	14	800-0507	1	Screw, Cap - Hex Head
8	800-0078	2	Screw, Cap - Hex Head				(7/16-14 x 1-1/2", Grade 8)
			(7/16-14 x 2-3/4")	15	130-3652	1	Bushing (2-3/16" ID)

Fan Drive DFLC, DFLD, DFMB Spec K Through M

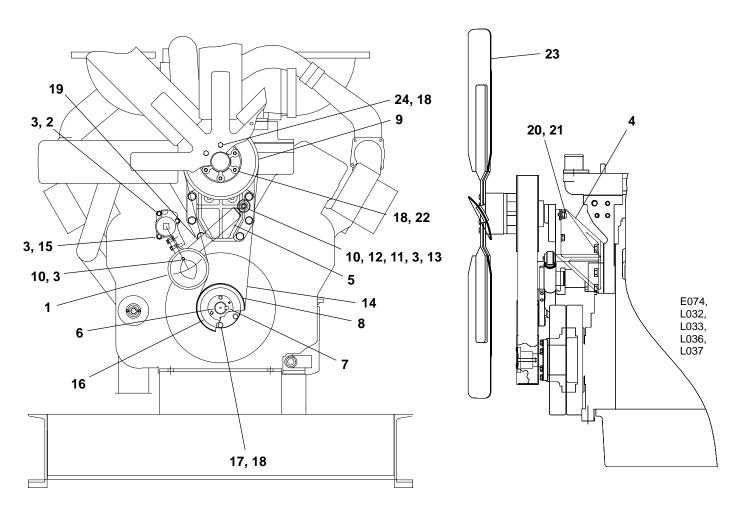


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3668	1	Idler Assembly, Fan (Includes Idler Lever Assembly, Idler	15	800–0507	1	Screw, Cap – Hex Head (7/16–14 x 1–1/2") Grade 8
			Pulley and Ring Dowel)	16	130-3653	1	Bushing (2" ID)
2	800–0500	2	Screw, Cap – Hex Head (7/16–14 x 5–1/2") Grade 8	17	800–0092	6	Screw, Cap – Hex Head (1/2–13 x 1–1/2")
3	850-0055	5	Washer, Lock - Spring	18	526-0219	12	*+ Washer, Flat (1/2")
			(7/16")	19	800-0163	6	Screw, Cap - Hex Head
4	130-4289	1	Support, Fan				(3/4–10 x 4")
5	402-0612	1	Absorber, Shock	20	800-0135	4	Screw, Cap – Hex Head
6	130-3757	1	Shaft, Fan Drive				(5/8–11 x 2–1/4")
7	515-0220	1	Key (1/2:" x 1/2" x 3")	21	850-0070	4	Washer, Lock - Spring (5/8")
8			Pulley, Fan Drive	22	800-0097	6	Screw, Cap - Hex head
	130-4761	1	 0.61:1 Drive Ratio 				(1/2-13 x 2-3/4")
			(7-5/8" Dia.)	23	130-5210	1	*+ Fan, Engine
	130–4762	1	+ 0.69:1 Drive Ratio (8–5/8" Dia.)	24	800–0106	6	*+ Screw, Cap – Hex Head (1/2–13 x 5–1/2")
9	130-4154	1	Pulley, Fan Drive				,
			(12-1/2" Dia.)	* Inc	luded in Fan	Kit 130-4	1883 (0.61:1 Drive Ratio, 60 Hz).
10	800–0078	2	Screw, Cap – Hex Head (7/16–14 x 2–3/4")				the original fan (130–4300) that set needs to be replaced.
11	130-4153	1	*+ Spacer, Fan		. , , , ,		
12	526-0141	2	Washer, Flat (7/16")	+ Ind	cluded in Fan	Kit 130-	4884 (0.69:1 Drive Ratio, 50 Hz).
13	862-0034	1	Nut, Hex (7/16")				the original fan (130-4300) that
14	511-0161-10	1	+ Belt, V - Ribbed				set needs to be replaced.

Fan Drive DFLC, DFLD, DFMB Begin Spec N

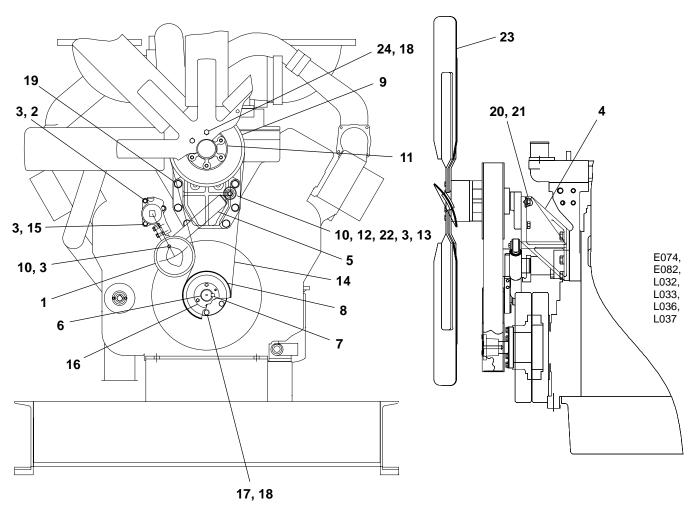


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3668	1	Idler Assembly, Fan (Includes	11	130-4153	1	Spacer, Fan
			Idler Lever Assembly, Idler	12	526-0141	2	Washer, Flat (7/16")
			Pulley and Ring Dowel)	13	862-0034	1	Nut, Hex (7/16")
2	800-0500	2	Screw, Cap - Hex Head	14	511-0161-10	1	Belt, V – Ribbed
			(7/16-14 x 5-1/2") Grade 8	15	800-0507	1	Screw, Cap - Hex Head
3	850-0055	5	Washer, Lock - Spring				(7/16-14 x 1-1/2") Grade 8
			(7/16")	16	130-3653	1	Bushing (2" ID)
4	130-4289	1	Support, Fan	17	800-0092	6	Screw, Cap - Hex Head
5	402-0612	1	Absorber, Shock				(1/2–13 x 1–1/2")
6	130-3757	1	Shaft, Fan Drive	18	526-0219	12	Washer, Flat (1/2")
7	515-0220	1	Key (1/2" x 1/2" x 3")	19	800-0163	6	Screw, Cap – Hex Head
8			Pulley, Fan Drive				(3/4–10 x 4")
	130–4761	1	0.61:1 Drive Ratio (7–5/8" Dia.)	20	800–0135	4	Screw, Cap – Hex Head (5/8–11 x 2–1/4")
	130-4762	1	0.69:1 Drive Ratio	21	850-0070	4	Washer, Lock - Spring (5/8")
			(8-5/8" Dia.)	22	130-3660	1	Spacer
9	130-4154	1	Pulley, Fan Drive	23	130-5210	1	Fan, Engine
			(12–1/2" Dia.)	24	800-0106	6	Screw, Cap – Hex Head
10	800–0078	2	Screw, Cap – Hex Head (7/16–14 x 2–3/4")				(1/2–13 x 5–1/2")


Fan Lubrication

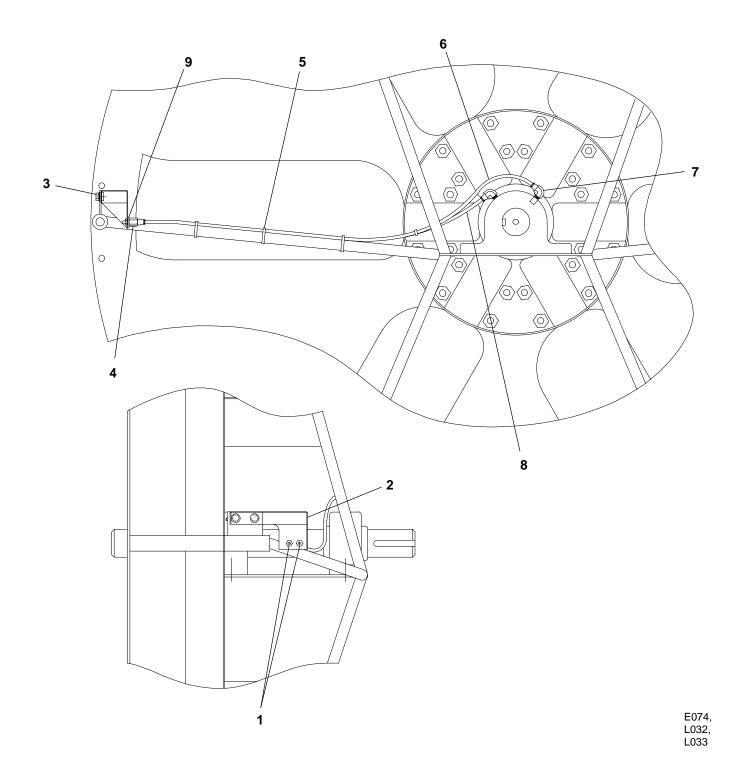

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	518-0064	2	Fitting, Grease	5	332-1389	4	Tie, Cable
2	130-3728	1	Bracket, Lube	6	503-1743-01	1	Hose, Grease (37")
3	821-5003-01	2	Screw, Self-Locking - Hex	7	505-1436	2	Elbow, Connector (1/8" NPT)
			Washer Head	8	503-1743-02	. 1	Hose, Grease (35")
			(5-16-18 x 1/2")	9	526-0346	2	Washer, Flat (13/32")
4	505–1435	2	Connector, Pipe – Female (1/8")				

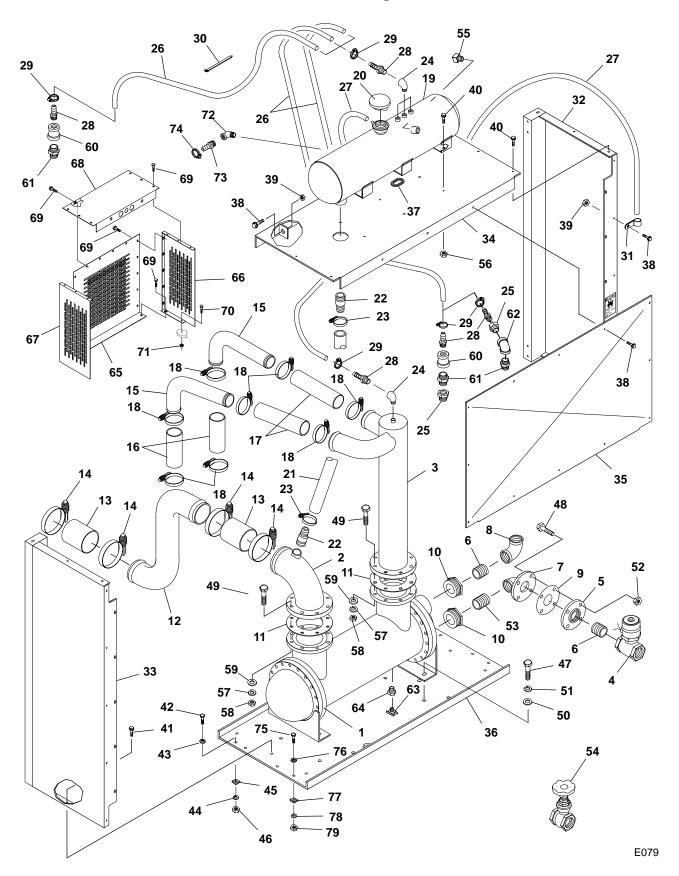


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–3772	1	Exchanger, Heat	32	130-3592-02	1	Guard, Heat Exchanger –
2 3	130–3773 130–3774	1 1	Elbow, Outlet Manifold, Inlet	33	130-3592-01	1	Right Side Guard, Heat Exchanger –
4	307–2711	1	Valve, Solenoid (2–1/2")	33	130-3392-01	1	Left Side
5	155–0899	1	Flange, Companion (2–1/2")	34	130–3769	1	Panel, Top
6	505-0103	2	Nipple, Pipe (2–1/2" ID x	35	130–3767	1	Panel, Front
			2–1/2")	36	130-3770	1	Base, Heat Exchanger
7	505–1442	1	Elbow, Flange – 90 Deg (2–1/2" x 2–5/8")	37	508–1090	1	Grommet, Rubber (Fits 3–1/4" Hole)
8	505–0044	1	Elbow, Pipe – 90 Deg (2–1/2")	38	821–5003–03	15	Screw, Self-Locking - Hex Washer Head
9	155–2514	1	Gasket, Flange				(5/16–18 x 3/4")
10	505–1441	2	Bushing, Pipe – Hex (2–1/2" x 4")	39 40	870–0550–07 821–5004–02	6 13	Nut, Flange Head (5/16–18) Screw, Self–Locking – Hex
11	155–2503	2	Gasket				Washer Head
12 13	130–3765 503–1726	1	Tube, Outlet	41	821-0033	6	(3/8–16 x 3/4") Screw, Self–Locking – Hex
14	503-1726	2) 4	Hose, Radiator (5" ID x 6") Clamp, Hose	41	621-0033	0	Washer Head (
15	130–3764	2	Tube, Inlet				7/16–14 x 3/4")
16	503–1762	2	Hose, Coolant (3" ID x 8–1/2")	42	800-0094	2	Screw, Cap – Hex Head (1/2–13 x 2")
17	503-1727	2	Hose, Coolant (3" ID x 10")	43	526-0219	2	Washer, Flat (1/2")
18	503-1872-05		Clamp, Hose	44	850-0060	2	Washer, Lock - Spring (1/2")
19	130-3766	1	Tank, Expansion	45	403-2733-01	2	Washer, Bevel (9/16" ID)
20	130-0449	1	Cap, Expansion Tank	46	862-0016	2	Nut, Hex (1/2-13)
21	503–1764	1	Hose, Flexible (1–1/2" ID x 30")	47	800–0133	4	Screw, Cap – Hex Head (5/8–11 x 1–3/4")
22	505–1429	2	Nipple, Combination (1–1/2" Pipe to 1–1/2" Hose)	48	800–0135	4	Screw, Cap – Hex Head (5/8–11 x 2–1/4")
23	503-1872-02		Clamp, Hose	49	800–0160	16	Screw, Cap – Hex Head
24	505-0011	4	Elbow, Pipe – Street (1/4")	50	500 0440	4	(3/4–10 x 3–1/4")
25	EOE 0020	2	Bushing, Reducer (3/4" to 1/4")	50 51	526–0112 850–0070	4	Washer, Flat (5/8")
	505–0020	2	DFLB Spec K–N,	52	862–0007	4 4	Washer, Lock – Spring (5/8") Nut, Hex (5/8–11)
			DFLC Spec K-R, and DFMB Spec K-R	53	505–0114	1	Nipple, Pipe – Short (2–1/2" x 3")
	505-0017	2	(3/8" to 1/4")	54	504-0175	1	Valve, Gate (2–1/2")
			DFLB Begin Spec P, DFLC Begin Spec S, and	55	505–0054	1	Plug, Square Head (1/4") DFLB,
26	503–1620	_	DFMB Begin Spec R Hose – Bulk (3/8" ID) (Order				DFLC Spec K–R, and DFMB Spec K–R
			By The Foot)	56	870-0550-09	6	Nut, Flange Head (3/8–16)
			DFLB Spec K-N -11 Feet	57	850-0079	16	Washer, Lock - Spring (3/4")
			Required	58	862-0008	16	Nut, Hex (3/4-10)
			DFLB Begin Spec P – 14 Feet Required	59 60	526-0027	16	Washer, Flat (3/4") Coupling, Pipe – Reducer
			DFLC Spec K–R – 11	00			(3/8" to 1/4")
			Feet Required		505-0153	2	DFLB Spec K-N,
			DFLC Begin Spec S – 14 Feet Required		0.00	_	DFLC Spec K–R, and DFMB Spec K–R
			DFMB Spec K-R - 11 Feet Required	61	505-0153	3	DFLC Begin Spec S Valve, Check (3/8" Pipe to
27	503–1418	-	Hose – Bulk (1/4" ID) (Order By The Foot – 9 Feet		309-0635-02	2	1/4" Pipe) DFLB Spec K–N,
	500 4:55	•	Required)				DFLC Spec K–R, and
28	502–1162	6	Connector, Hose – Barbed (1/4" Pipe to 3/8" Hose)		309-0635-02	3	DFMB Spec K–R DFLC Begin Spec S
29	503-0685	7	Clamp, Hose				
30	332–1389	12	Tie, Cable	Can	tinuad		
31	518–0548–08	3 4	Clamp, Hose	Con	tinued		

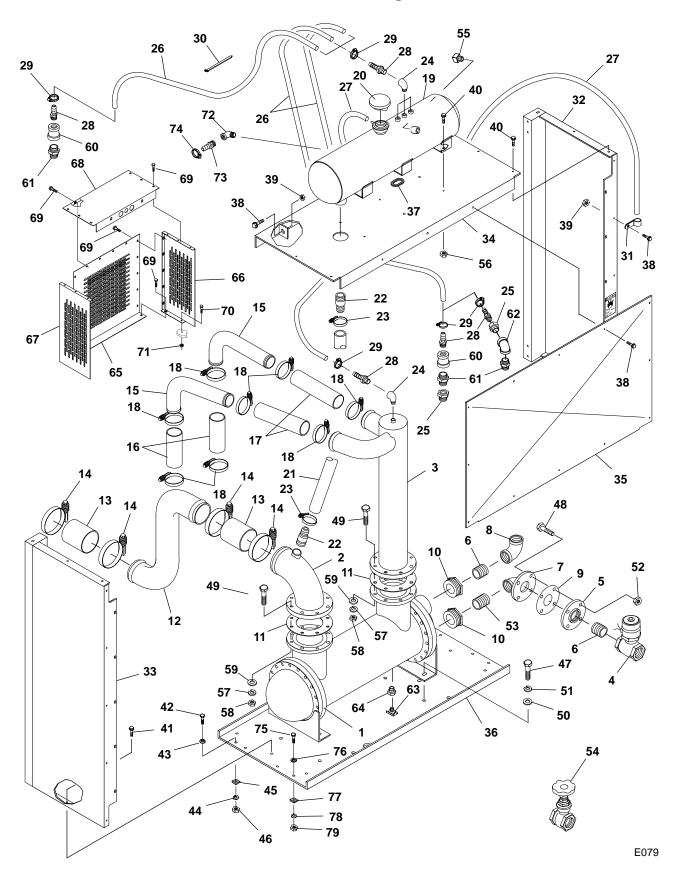

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			72	505-0011	1	Elbow, Pipe – Street (1/4") DFLC Begin Spec S and
62	505-0376	2	Elbow, Pipe – 45 Deg (3/8") DFLB Begin Spec P	73	502–1162	1	DFMB Begin Spec S Connector, Hose – Barbed
63	504-0028	1	Cock, Drain (3/8")	73	302-1102	'	(1/4" Pipe to 3/8" Hose)
64	505-0019	1	Bushing, Pipe – Reducer (1/2" to 3/8")				DFLC Begin Spec S and DFMB Begin Spec S
65	130-3715	1	Cover, Damper Guard	74	503-0685	1	Clamp, Hose
66	130-3714-01	1	Guard, Damper – Right Side				DFLC Begin Spec S and
67	130-3714-02	1	Guard, Damper – Left Side				DFMB Begin Spec S
68	130-3713	1	Guard, Damper – Top	75	800-0053	4	Screw, Cap - Hex Head
69	821-5002-03	22	Screw, Hex Head				(3/8–16 x 1–3/4")
			(1/4–20 x 1/2")	76	526-0030	4	Washer, Flat (3/8")
70	821-5004-03	2	Screw, Hex Head	77	850-0050	4	Washer, Lock - Spring (3/8")
			(3/8–16 x 1")	78	403-2733-02	4	Washer, Bevel (3/8")
71	870-0281	2	Nut, Hex – Locking (3/8–16)	79	862-0003	4	Nut, Hex (3/8")


Low Coolant Level Sender Without Continuously Monitored Low Coolant Level Generator Sets With Radiator Cooling

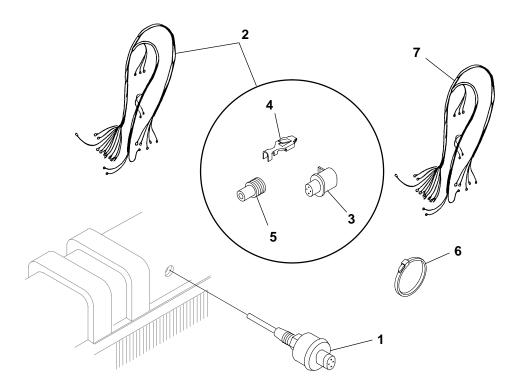

H389 H527


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	193–0481	1	Sender Assembly – Low Coolant Level (Includes Parts Marked *)	5 6	323–1708 332–3008	4 1	*# Seal, Cable Tie, Cable (Quantity Used as Required)
1	193–0468	1	* Sender, Low Coolant Level (S7)	7	338–2010	1	Harness, Wiring – Low Coolant Level Sender
2	338–3594	1	* Harness, Wiring – Pigtail – Low Coolant Level Sender (From S3 to S3–Test, GND, B+, and SIG) (Includes				(From S7 to T26, S2, and GND) – DFLC Spec R~
			Parts Marked #)	* – F	Parts Included	In 193–0	0481 Low Coolant Level Sender
3	323–1765	1	*# Connector, Housing – 4 Pin (S3)		ssembly Parts Included	l In 338–	3594 Pigtail Wiring Harness
4	323-1709	4	*# Socket, Contact	~ - 1	Not used with	all DFLC	Spec R models.

Low Coolant Level Sender With Continuously Monitored Low Coolant Level 12 Light Indicator Controls Generator Sets With Radiator Cooling

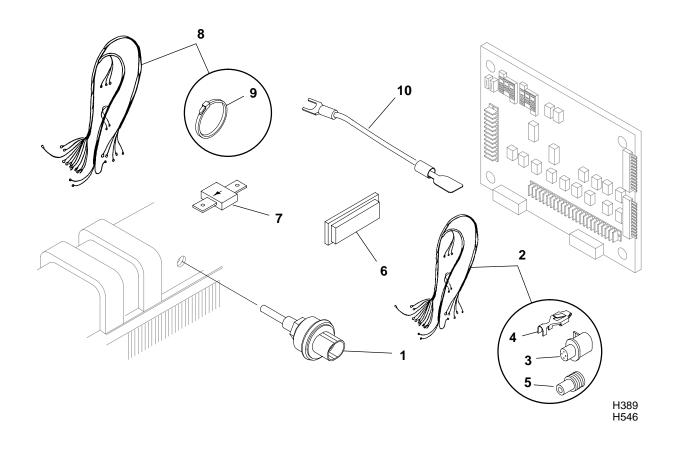

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	193–0481	1	Sender Assembly – Low	7	357-0030	1	Diode (6 Amp)
			Coolant Level (Includes Parts Marked *)	8	338–3035–02	2 1	Harness, Wiring (3 Wire, 308") (S7 to A11) (Includes
1	193-0468	1	* Sender, Low Coolant Level				Cable Tie – Ref No. 9)
			(S7)	9	332-1445	3	Tie, Cable
2	338–3594	1	* Harness, Wiring – Low Coolant Level Sender (Pigtail – 6") (Includes Parts Marked #) (S3 toS3)	10	226–4661–02	2 2	Lead (4") (No Markings) (A11TB2–1 to Diode and A11TB2–16 to Diode)
3	323-1765	1	*# Connector, Housing – 4 Pin				
			(S3)	* – F	Parts Included I	n 193–04	81 Low Coolant Level Sender
4	323-1709	4	*# Socket, Contact	Α	ssembly		
5	323-1708	4	*# Seal, Cable	# — F	Parts Included	In 338–35	594 Pigtail Wiring Harness
6	322-0431-07	1	Lens, Indicator Light (Marked "Coolant Lo")				


Thermostatic Valve

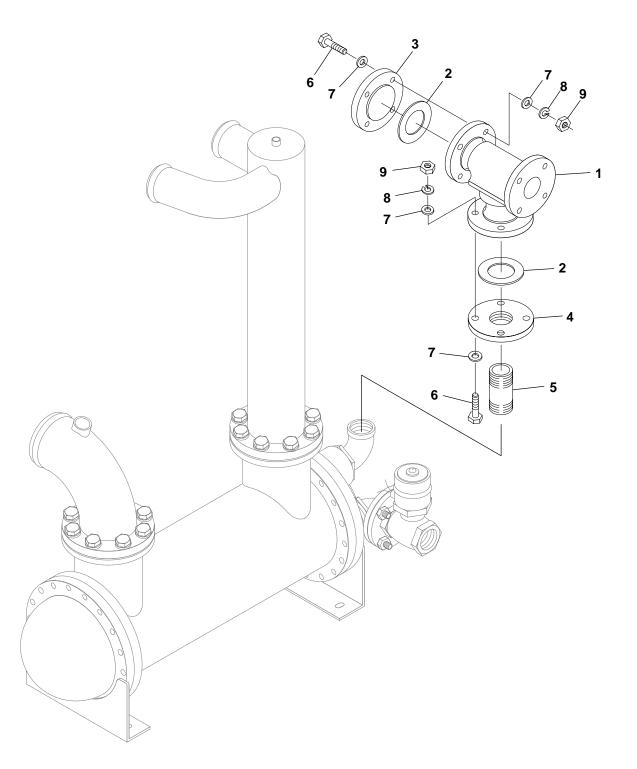

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0607	1	Valve, Thermostatic	6	800-0138	8	Screw, Cap - Hex Head
2	155-2514	2	Gasket, Flange				(5/8–11 x 3")
3	505-1440	1	Flange, Blind	7	526-0112	16	Washer, Flat (5/8")
4	155-0899	1	Flange, Companion	8	850-0070	8	Washer, Lock - Spring (5/8")
5	505–0103	1	Nipple, Pipe (1–1/2" NPT x 2–1/2")	9	862–0007	8	Nut, Hex (5/8–11)

E045


Engine Coolant Heater Components DFLB, DFLC, DFLD, DFMB Spec K Through L

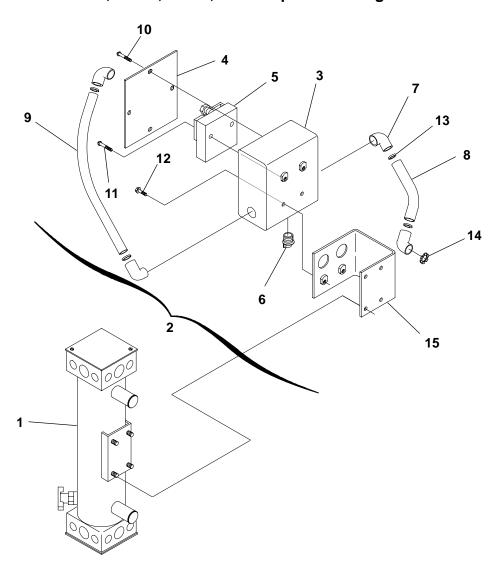

H501 H502

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333-0494-02	2	Heater, Coolant (4000 Watt) 120 Volt	9	331–0531–02	. 1	Conduit, Flexible (1/2" ID x 11-1/2")
	333-0494-01	2	208, 240, 480 Volt	10	813-0100	4	Screw, Machine - Round
2	179–2661	2	Relay Assembly, Heater				Head (#10-32 x 1/2")
			(Includes All Parts Listed Below) (Quantities Listed	11	813–0103	2	Screw, Machine – Round Head (#10–32 x 3/4")
			Below Are For 1 Heater Relay Assembly)	12	821–0010	2	Screw, Self–Locking – Hex Washer Head
3	130-4079	1	Box, Relay				(1/4-20 x 1/2")
4	130-4082	1	Cover, Box	13	331-0533	4	Bushing, Antishort (1/2")
5	307-2762	1	Relay (K1, K2)	14	331-0532	1	Locknut, Sealing (1/2")
6	331-0027	1	Connector, Romex (3/8")	15	130-4083	1	Bracket, Mounting
7	331-0010	4	Connector (1/2" x 90 Deg)				_
8	331–0531–01	1	Conduit, Flexible (1/2" ID x 6")				

Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Spec K Through L

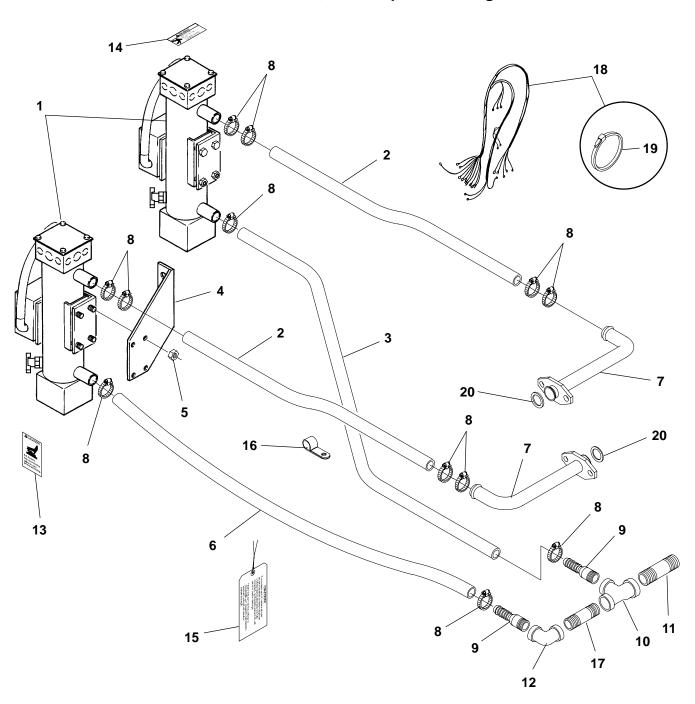


H501 H502

Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Spec K Through L

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater, Coolant (4000 Watt)	8	503-1872-01	12	Clamp, Hose
			(Includes Thermostat Indented Below) (See Page	9	505–0759	2	Nipple, Combination (1" Pipe to 1" Hose)
			67 For Components) (Includes Locking Nut – Ref	10	505–1430	1	Tee, Pipe – Reducing (1–1/4" x 1" x 1")
			No. 5)	11	505-0177	1	Nipple, Pipe (1-1/4" x 1-5/8")
	333-0512-02	2	120 Volt	12	505-0041	1	Elbow, Pipe – 90 Deg (1")
	333-0512-01	2	208, 240, 480 Volt	13	098-6195	2	Label, Caution - Hot Surface
	333–0468	2	Thermostat, Heater (Service	14	098–5347–01	2	Label, Danger – Hazardous Voltage
			Replacement) (Not Illustrated)	15	098–6030	2	Tag, Caution – Coolant and Oil Heater
2	503-1779	_	Hose, Heater – Bulk (1" ID)	16	518-0548-02	2	Clip, Retainer
			(Order By The Foot – 5	17	505-0004	1	Nipple, Pipe (1" x 1–1/2")
			Feet Required)	18			Harness, Wiring (K1, K2 to
3	503-1779	_	Hose, Heater – Bulk (1" ID)				ENG-GND, T26) (Includes
			(Order By The Foot –				Parts Marked *)
			9 Feet Required)		338-2760-01	1	Left Side (121")
4	130-3866	2	Bracket, Mounting		338-2760-02	1	Right Side (85")
5	870-0212	8	Nut, Locking – Hex Head	19	332-0942	5	* Tie, Cable
			(1/4–20)	20	509-0283-01	2	Seal, Retangular Ring
6	503-1779	_	Hose, Heater – Bulk (1" ID)				
			(Order By The Foot –	* – F	Parts Included i	n 338–2	760-01 and 338-2760-02
			6 Feet Required)	1	Viring Harness		
7	130–3692	2	Adapter, Heater Hose				


Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Begin Spec M

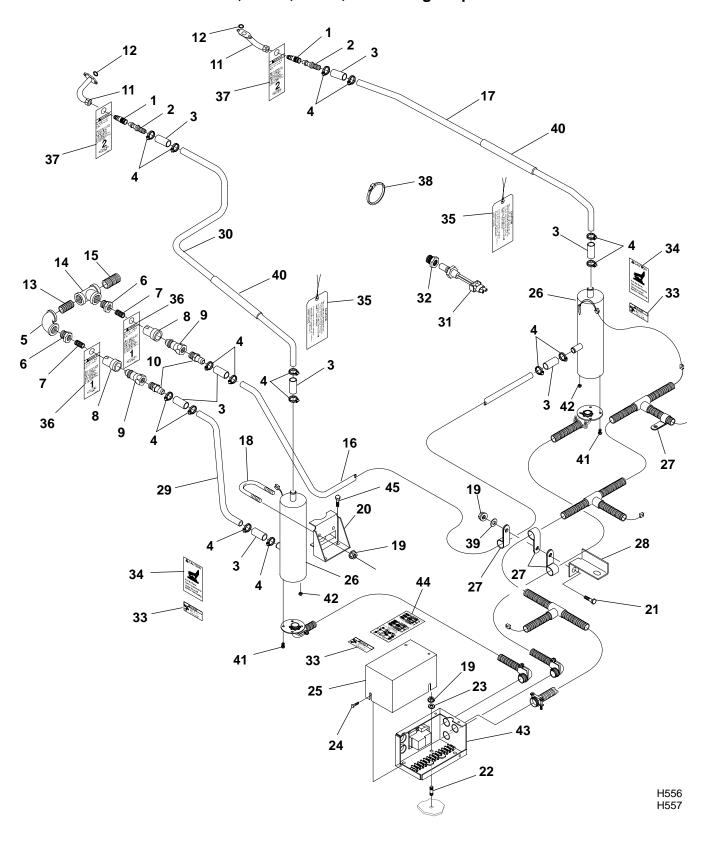

Engine Coolant Heater DFLB, DFLC, DFLD, DFMB Begin Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-1259	2	Coupler (1/2" Male)	27	332-2634	4	Clamp, "J"
2	502-1257	2	Connector, Hose – Barbed	28	130-4538	1	Bracket, Retainer
			(Fits 3/4" ID Hose)	29	130-4540	1	Tube, Heater
3	503-1634-01	8	Hose, Rubber (3/4" ID x 4")	30	130-4544	1	Tube, Heater
4	503-2157-01	16	Clamp, Hose	31	309-0649	1	Thermostat (Opens At 110
5	505-0041	1	Elbow, Pipe – 90 Deg (1")				Deg F, Closes At
6	505-0022	2	Bushing, Pipe – Reducer				130 Deg F) (S11)
			(1" to 1/2")	32			Bushing, Pipe – Reducer
7	505-0100	2	Nipple, Pipe (1/2" x 1–1/8")		502-1337	1	DFLB (3/4" to 3/8 ")
8	502-1260	2	Coupler, Brass (1/2")		502-1336	1	DFLC (1/2" to 3/8")
9	502-1261	2	Nipple, Brass (1/2")	33	098–5347	3	Label, Danger - Hazardwous
10	502-0827	2	Fitting, Hose – Barbed (1/2"				Voltage
		_	ID Pipe to 3/4" ID Hose)	34	098–6195	2	Label, Caution – Hot Surface
11	130–4519	2	Tube, Heater	35	098–6030	2	Tag, Caution – Coolant and
12	509-0283-01		Seal			_	Oil Heater
13	505-0004	1	Nipple, Pipe (1" x 1–1/2")	36	098–7182–01	2	Tag, Label – Hot Engine
14	505–1430	1	Tee, Pipe – Reducing	07	000 7400 00	•	Coolant #1
4.5	505 0477	4	(1–1/4" x 1" x 1")	37	098–7182–02	2	Tag, Label – Hot Engine
15	505-0177	1	Nipple, Pipe (1–1/4 x 1–5/8")	00	000 0044	0	Coolant #2
16	130–4539	1	Tube, Heater	38	332-0941	2	Tie, Cable
17	130–4542	1	Tube, Heater	39 40	526-0029	1 _	Washer, Flat (3/8")
18 19	155–3021 870–0550–09	2) 7	Clamp, Mounting	40	128–0108	_	Insulation, Hose – Bulk
20	130–4546	2	Nut, Hex – Flange (3/8–16) Bracket, Mounting – Coolant				(Order By The Foot – 9 Feet Required)
20	130-4546	2	Heater	41	815-0539	6	Screw, Machine – Round
21	821-5004-03	3 1	Screw, Self-Locking - Hex	41	015-0559	O	Head – Cross Recessed
21	021-3004-03	, ,	Washer Head (3/8–16 x 1")				W/IT (#8–32 x 5/8")
22	520-0544	2	Stud, Mounting	42	870-0131	6	Nut, Hex – W/ET (#10–32)
~~	020 0044	_	(3/8–16 x 1–3/16")	43	- O10 0101	1	Control Assembly, Coolant
23	526-0128	2	Washer, Flat (3/8")	10		•	Heater (See Page 73 For
24	821-5002-03		Screw, Self-Locking - Hex				Components)
- '	02. 0002 00	'	Washer Head	44	098–7183	1	Label, Relay Box
			(1/4–20 x 1/2")	45	821-5004-02	5	Screw, Self-Locking -
25	319–2815	1	Cover, Terminal Box			-	Hex Washer Head
26		•	Heater, Coolant				(3/8–16 x 3/4")
-	333-0639-01	2	4990 Watt				,
	333-0639-02		6420 Watt				


Engine Coolant Heater Control DFLB, DFLC, DFLD, DFMB Begin Spec M

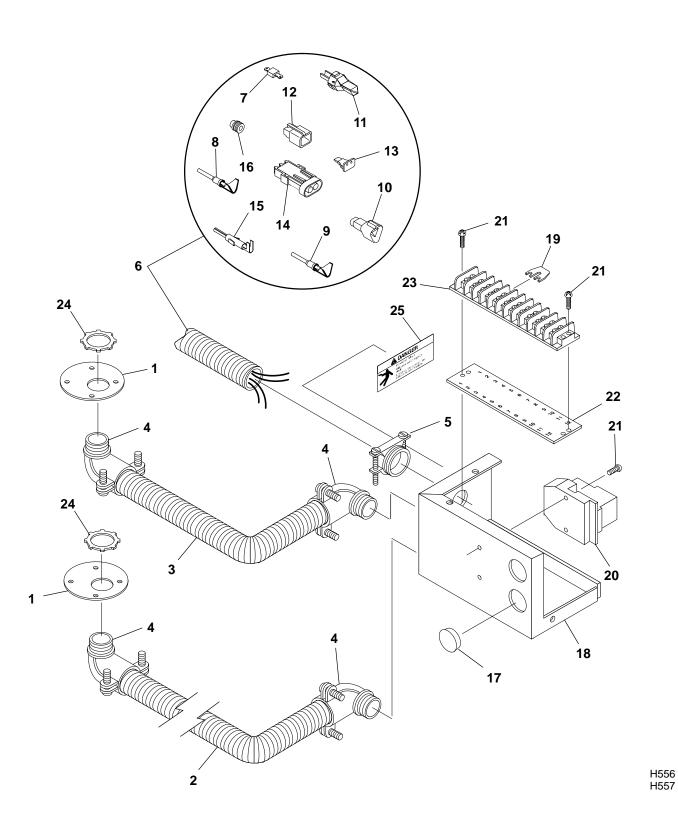

Engine Coolant Heater Control DFLB, DFLC, DFLD, DFMB Begin Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	130–4552 338–3335–02	2	Cover, Coolant Heater Harness, Wiring – AC –	10	323–1494	1	* Connector, Receptacle (3 Pin) (J3)
_			Coolant Heater (From Coolant Heater Bottom To	11	323–1502	1	* Wedge, Receptacle (Used With J3)
			Coolant Heater Control Box) (Includes Conduit	12	323–1504	2	* Connector, Plug (2 Pin) (P4,P5)
			Connectors – Ref No. 4) (108")	13	323–1500	2	* Wedge, Plug (Used With P4,P5)
3	338–3335–01	1	Harness, Wiring – AC – Coolant Heater (From	14	323–1652	1	* Connector, Plug – 2–Way (2 Pin) (P11)
			Coolant Heater Bottom To	15	323-1718	2	* Pin, Contact (Used In P11)
			Coolant Heater Control	16	323-1445	2	* Seal, Cable (Used With P11)
			Box) (Includes Conduit	17	517-0138-02	2	Plug, Hole (Fits 1–1/8" Hole)
			Connectors – Ref No. 4)	18	319–2814	1	Box, Terminal
			(30")	19	332-3440	2	Jumper, Terminal
4	331–0554	4	Connector, Conduit – 90 Deg	20	307–2859	1	Relay, Power – 24VDC (K11)
			(3/4")	21	815–0464	4	Screw, Machine - Round
5	331–0042	1	Connector, Wiring – DC – Romex (3/4")				Head – Cross Recessed W/IT – Thread Forming
6	338–3330	1	Harness, Wiring – DC –				(#8–32 x 1")
			Engine Heater (From	22	332–1469	1	Strip, Marker
			Coolant Heater Control Box To Engine And Main	23	332–1468	1	Block, Terminal – 12 Place (TB1)
			Engine Harness) (Includes	24	331-0555	4	Nut, Connector Lock (3/4-14)
			Parts Marked *)	25	098-5347-01	1	Label, Danger
7	357–0030	1	* Rectifier (6 Amp) (Located At K11 End Of Harness)	* 5	Namba la alcada d	- 220 O	220 DO Engine Heater Wiring
	202 4404	2	(CR1)			11 338–3	330 DC Engine Heater Wiring
8 9	323–1491 323–1492	3 4	 * Pin, Contact (Used In J3) * Socket, Contact (Two Used In P4, Two Used In P5) 	П	arness		


Alternator 45 Amp K38 and K50 Gensets

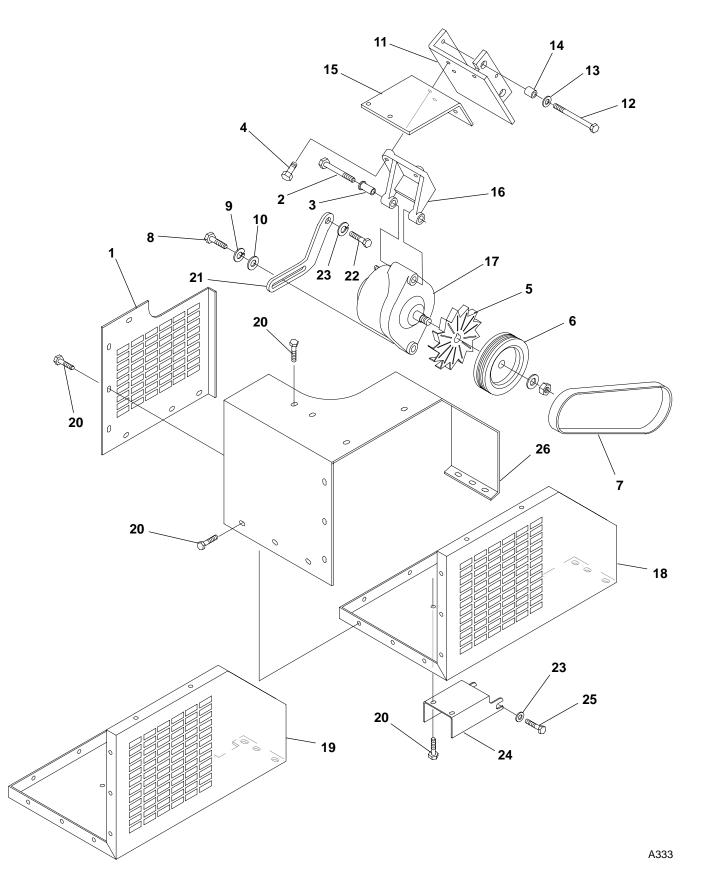

Alternator 45 Amp K38 and K50 Gensets

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130-3870	1	Guard, Belt	17	191–1983–02	1	Alternator – 45 Amp
2	718–1067	1	Screw, Cap – Hex Head (M10 x 1.5 x 90mm)				(Includes M16 Nut, Spring Washer and Regulator)
3	191-1989-07	1	Spacer, Mounting		191–2121	1	Regulator – Service
4	821–0022	3	Screw, Self–Locking – Hex Washer Head				Replacement (Not Illustrated)
			(5/16-20 x 1-1/4")	18	130-3868	1	Guard, Belt
5	191–1981	1	Fan, Alternator	19	130-5309-02	1	Guard, Belt – DFMB Spec K
6	191–1984	1	Pulley, Alternator				(Not Used on All Models)
7	511-0119	1	Belt, V	20	821-5002-04	21	Screw, Self-Locking - Hex
8	800–2059	1	Screw, Cap – Hex Head (M8 x 1.25 x 30mm)				Washer Head (1/4–20 x 5/8")
9	850-2008	1	Washer, Lock - Spring (M8)	21	191–2110	1	Bracket, Adjusting
10	526-0030	1	Washer, Flat (3/8")	22	800-0071	1	Screw, Cap - Hex Head
11	191-2021-01	1	Bracket, Alternator				(7/16–14 x 1")
12	800–0500	2	Screw, Cap – Hex Head (7/16–14 x 5–1/2")	23	850–0055	2	Washer, Lock – Spring (7/16")
13	526-0098	2	Washer, Flat (7/16")	24	130-3871-02	1	Bracket, Belt Guard
14	191-2023	2	Sleeve	25	800-0069	1	Screw, Cap – Hex Head
15	191–2017	1	Bracket, Alternator				(7/16-14 x 3/4")
16	191–1990	1	Support, Alternator	26	130–3869	1	Guard, Belt


Alternator
75 Amp
DFLB Spec K Through M
DFLC Spec K Through N
DFLD
DFMB Spec K Through R

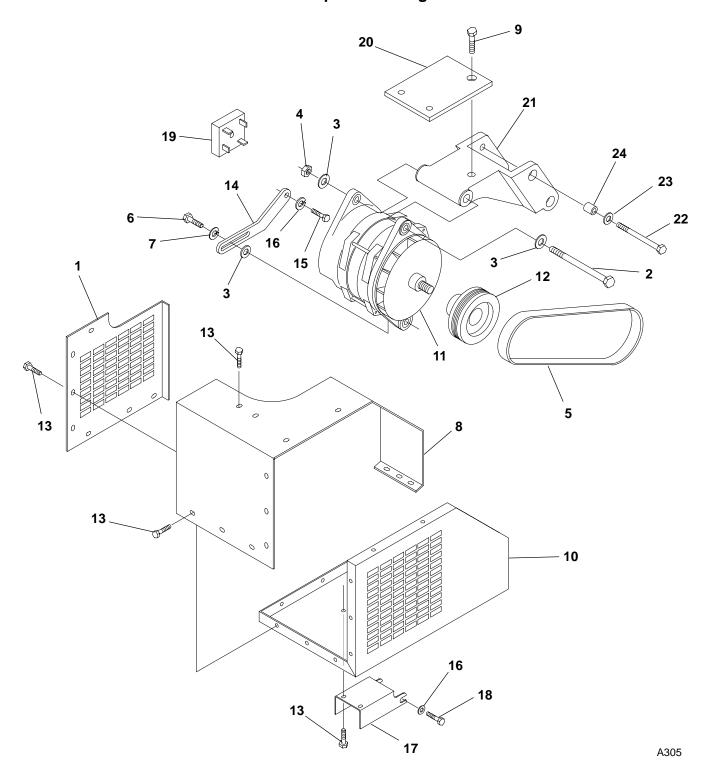

Alternator 75 Amp DFLB Spec K Through M DFLC Spec K Through N DFLD DFMB Spec K Through R


REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	130-3870	1	Guard, Belt	14	191–1942	1	Bracket, Adjusting
2	800–0237	1	Screw, Cap – Hex Head (1/2–20 x 6–1/2")	15	800–0074	1	Screw, Cap – Hex Head (7/16–14 x 1–3/4")
3	526-0353	3	Washer, Flat (1/2")	16	850-0055	2	Washer, Lock – Spring
4	870-0452	1	Nut, Locking (1/2-20)				(7/16")
5	511-0161-02	1	Belt, V	17	130-3871-02	1	Bracket, Belt Guard
6	800–0092	1	Screw, Cap – Hex Head (1/2–13 x 1–1/2")	18	800–0069	1	Screw, Cap – Hex Head (7/16–14 x 3/4")
7	850-0060	1	Washer, Lock - Spring (1/2")	19	305-0653	1	Rectifier (35 Amp) Control
8	130-3869	1	Guard, Belt				Box Mounted – Generator
9	821-5004-03	1	Screw, Self-Locking - Hex				Sets With Detector Control
			Washer Head (3/8-16 x 1")	20	191–2111	1	Bracket, Alternator
10	130-3868	1	Guard, Belt	21	191–2108	1	Support, Alternator
11	191-1926-02	1	Alternator – 75 Amp	22	800-0500	2	Screw, Cap – Hex Head
12	191–2112	1	Pulley, Alternator				(7/16-14 x 5-1/2")
13	821-5002-04	21	Screw, Self-Locking - Hex	23	526-0098	2	Washer, Flat (7/16")
			Washer Head (1/4–20 x 5/8")	24	191–2023	2	Sleeve

Oil Pan Heater

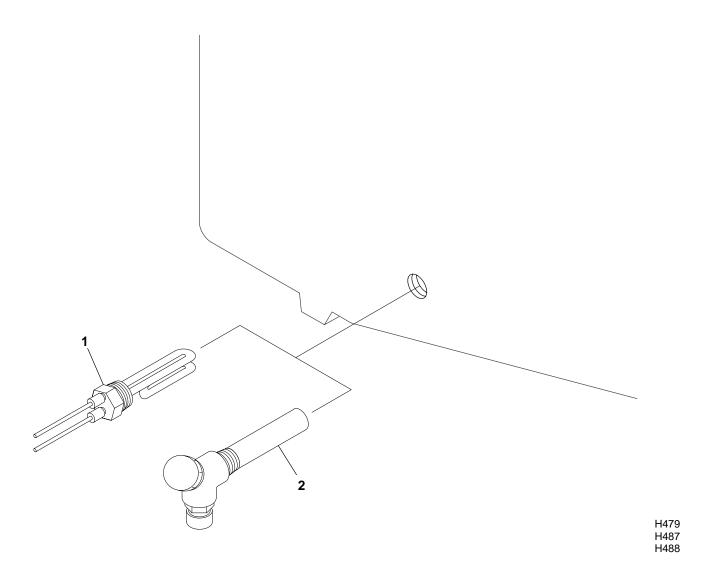


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	333-0407-02		Heater, Oil (300 Watt) 120 Volt	2	333-0407-0	5 1	Heater, Oil (300 Watt, 480 Volt)
	333_0/07_0/	1 1	240 Valt				

Oil Bypass Filter

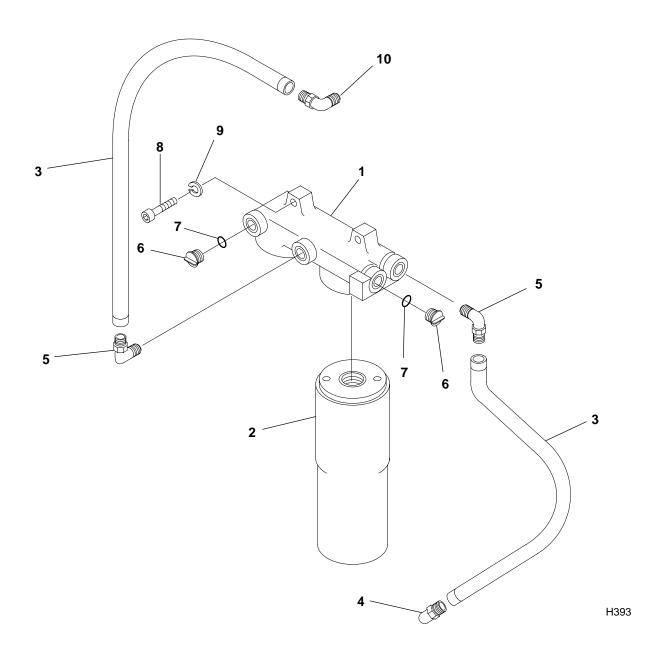

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	122-0776	1	Head, Oil Filter	7	509-0272-01	2	Seal, O-Ring
2	122-0777	2	Element, Oil Filter	8	800-0075	2	Screw, Cap - Hex Head
3	501-0537-49	2	Hose, Flexible (18")				(7/16–14 x 2")
4	502-1043-12	2 1	Elbow, Male Adapter	9	850-0055	2	Washer, Lock - Spring
5	502-1072-14	1 2	Elbow, Male Union				(7/16")
6	505-1428	2	Plug, O-Ring	10	502-1072-30) 1	Elbow, Male Union


Oil Temperature Gauge

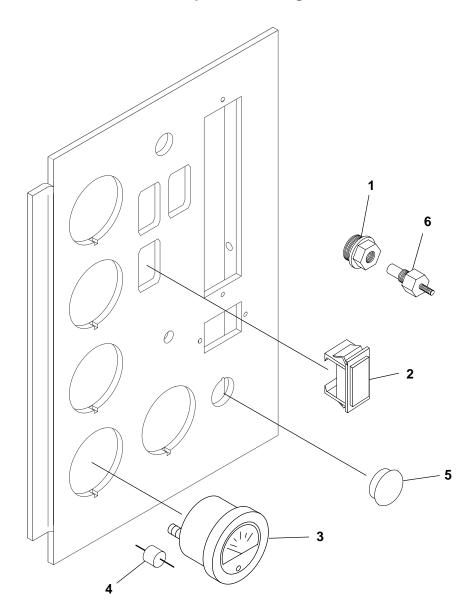

K486

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505–0151	1	Bushing, Pipe – Reducer (1/2" to 1/8") Oil Pan Mounted	4 5 6	193–0250 517–0137 193–0388	1 1 1	Resistor, Gauge (R13) Plug, Hole (7/8" Hole Sender, Oil Temperature – Oil
2	301–6257 193–0435	1	Switch – Blank Gauge, Oil Temperature (M15)				Pan Mounted (E4)

Mechanical Oil Pressure Gauge DFLC Spec K Through L

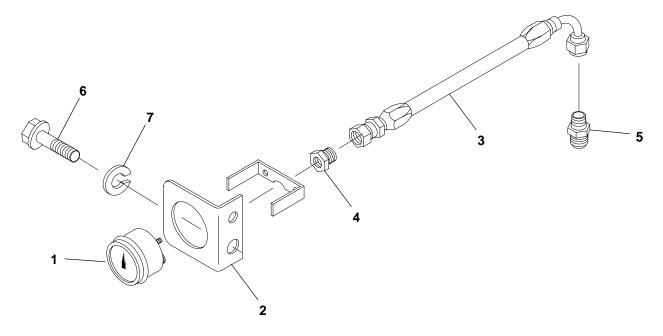

H195

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0451	1	Gauge, Oil Pressure – 0–100 PSI (Includes Mounting	5	502-0746	1	Connector, Male (37 Deg, 7/16–20)
			Hardware)	6	800-0151	1	Screw, Cap - Hex Head
2	193-0029	1	Bracket, Mounting				(3/4–10 x 1")
3	501-0620	1	Hose, Oil Gauge	7	850-0079	1	Washer, Lock – Spring (5/8")
4	502-1232	1	Connector, Female				

Generator

Frame 6 and Frame 7 generator component parts cannot be ordered from Onan. Refer to the Newage name-plate and supply all available information. Contact your nearest Newage distributor for assistance in ordering component parts. For a COMPLETE generator replacement, use the 249–XXXX–XX Cummins/Onan identification number.

Cummins/Onan Identification Number	Generator Model
249-0192-05	MV734WF
249-0192-06	MV734WG
249–5063–07	HC634K
249–5064–01	HC734E
249–5064–02	HC734F
249–5064–04	HC734F
249–5064–05	HC734G
249–5065–07	HC634K
249–5066–07	HC634K
249–5067–01	HC734E
249–5067–02	HC734F
249–5067–05	HC734G
249–5076–08	HC734F
249–5088–07	HC634K
249–5089–07	HC634K
249–5089–08	HC634K
249–5090–07	HC634K
249–5090–08	HC634K
249–5092–01	HC734E
249–5092–02	HC734F
249–5092–03	HC734E
249–5092–04	HC734F
249–5092–05	HC734G
249–5092–06	HC734G
249–5092–14	HC734F


Continued...

Generator

Cummins/Onan Identification Number	Generator Model
249–5093–01	HC734E
249–5093–02	HC734F
249–5093–03	HC734E
249–5093–05	HC734G
249–5093–09	HC734E
249–5094–02	HC734F
249–5094–03	MV734WG
249–5094–08	HC734F
249–5094–09	HC734F
249–5094–10	HC734F
249–5094–11	MV734WG
249–5095–04	MV734WE
249–5095–05	MV734WF
249–5095–06	MV734WG


B246, B276, B282, B283, B284, B288, B300, B301, B302, B306, B312, B313, B348, B360, B362, B372, B373, B401, B422, B439

Generator Heater

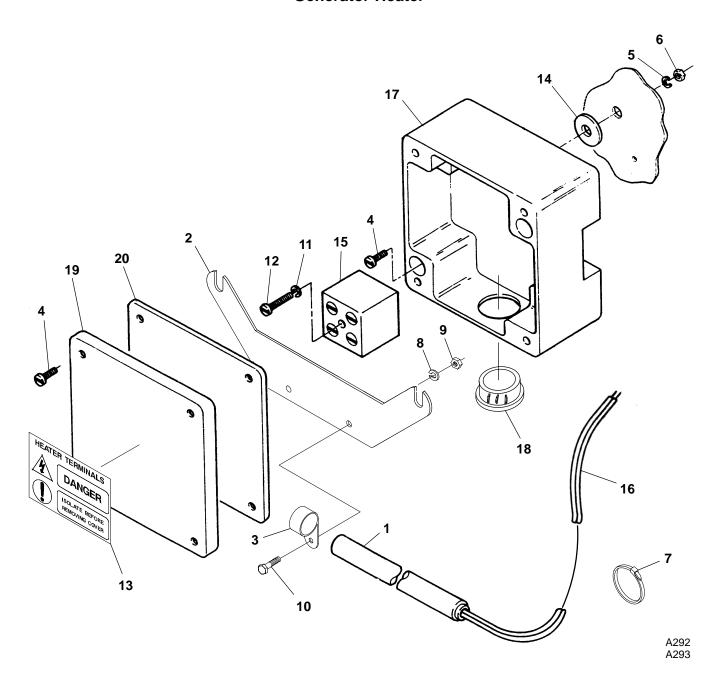


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Cartridge, Heater (300 Watt)	11	850–2003	1	Washer, Lock – Spring (M3)
•	333-0438-05		120 Volt	12	822–3047	1	Screw, Machine - Pan Head
	333-0438-06	1	240 Volt				(M3 x 20mm)
2	232-3849	1	Bracket, Mounting – Heater	13	098–7281	1	Label, Heater Warning
3	332-3024-14	2	Clamp, Loop	14	508-0228	1	Grommet
4	822-3075	6	Screw, Machine - Slotted	15	332-3023	1	Block, Terminal
			Pan Head (M4 x 16mm)	16	898-1254-25	1	Sleeving – Heater Leads
5	850-2004	2	Washer, Lock - Spring (M4)				(59")
6	860-2005	2	Nut, Hex (M4)	17	330-0142	1	Box, Terminal (Includes
7	332-1389	4	Tie, Cable				Cover and Gasket - Ref
8	850-2005	2	Washer, Lock - Spring (M5)				No. 19 and 20)
9	860-2006	2	Nut, Hex (M5)	18	517-0021	1	Plug, Dot Button
10	800-2008	2	Screw, Cap - Hex Head	19	330-0141-03	1	Cover, Box
			(M5 x 16mm)	20	330-0141-04	1	Gasket, Cover

Time Delay Start/Stop

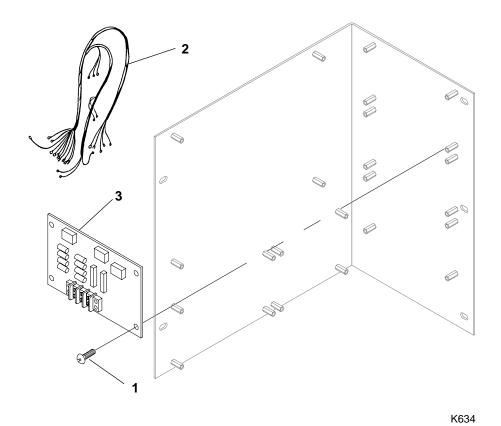

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815–0937	4	Screw, Machine – Round Head – Cross Recessed	2	338–1904	1	Harness, Wiring (5 Wire) (21-1/2") (A15 to A11)
			(6–32 x 1/2")	3	300–2899	1	Board, Printed Circuit – Time Delay (A15)


Wattmeter

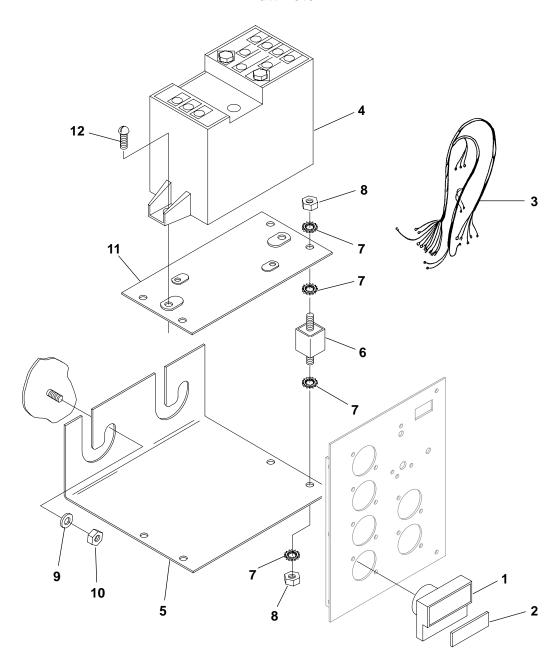

K185


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1722	1	Wattmeter (Dial Not Included)	5	301–6987	1	Bracket, Mounting
			(M24)	6	402-0354	4	Mount, Shock
2			Dial, Wattmeter	7	853-0005	8	Washer, Lock – W/ET (8)
	302-1721-18	3 1	0-1500 kW Rating,	8	870-0221	8	Nut, Hex W/ET (8-32)
	302-1721-19	9 1	0-2000 kW Rating	9	526-0115	2	Washer, Flat (5/16")
3	338-1936	1	Harness, Wiring – Wattmeter	10	870-0048	2	Nut, Locking (5/16–18)
			(M24, TB21, and GND to	11	319-0030	1	Plate, Mounting
			A21)	12	815-0905-06	2	Screw, Machine - Pan Head,
4	302-1833-01	1 1	Transducer, Watts (A21)				Cross Recessed (10-32)

Emergency Stop Switch

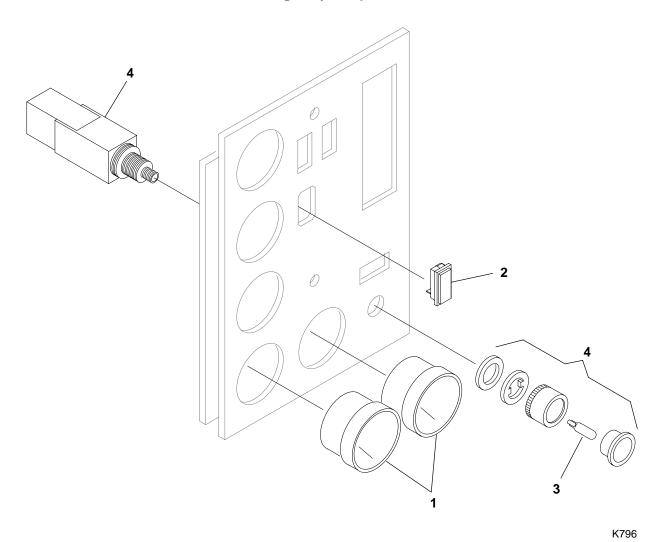


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1723	2	Ammeter – Blank Scale	4	308-0853	1	Switch, Pushbutton -
2	301-6257	1	Switch – Blank				Emergency Stop (Includes
3	322-0394	1	Bulb, Replacement				Bulb - Ref No. 3) (S14)

Over/Under Frequency Relay

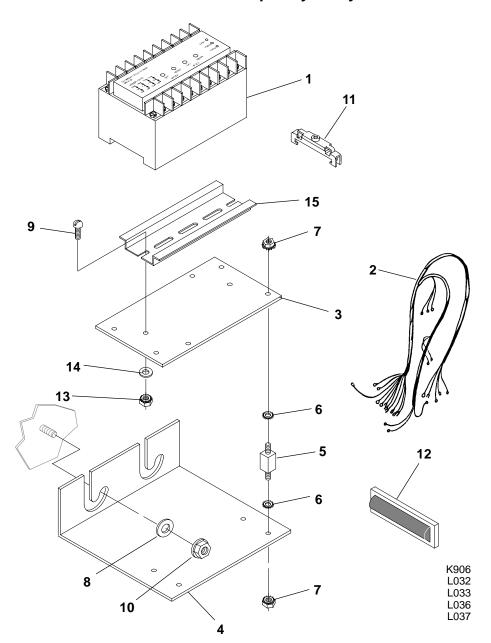


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Relay, Frequency –	7	870-0221	8	Nut, Hex - W/ET (#8-32)
			Over/Under (A18)	8	526-0115	2	Washer, Flat (5/16")
	307-2920	1	50 Hertz Sets	9	813-0100	2	Screw, Machine - Round
	307-2919	1	60 Hertz Sets				Head (#10-32 x 1/2")
2	338–2347	1	Harness, Wiring – Over/Under Frequency (6	10	870–0048	2	Nut, Hex – Self-Locking (5/16–18)
			Wire, 62") (TB21,A11,GND	11	323-1411-01	2	Clip, Rail
			to A19)	12	322-0431-04	- 1	Lens, Replacement - Marked
3	301-9941	1	Plate, Relay Mounting				"O/U HZ" (DS20)
4	301-6987	1	Bracket, Mounting	13	870-0131	2	Nut, Hex – W/ET (#10–32)
5	402-0354	4	Mount, Shock	14	526-0008	2	Washer, Flat (#10)
6	853-0005	8	Washer, Lock - ET (#8)	15	332–2879–07	1	Rail, Mounting

Over/Under Voltage Relay DFLB, DFLC, DFLD, DFMB Spec K

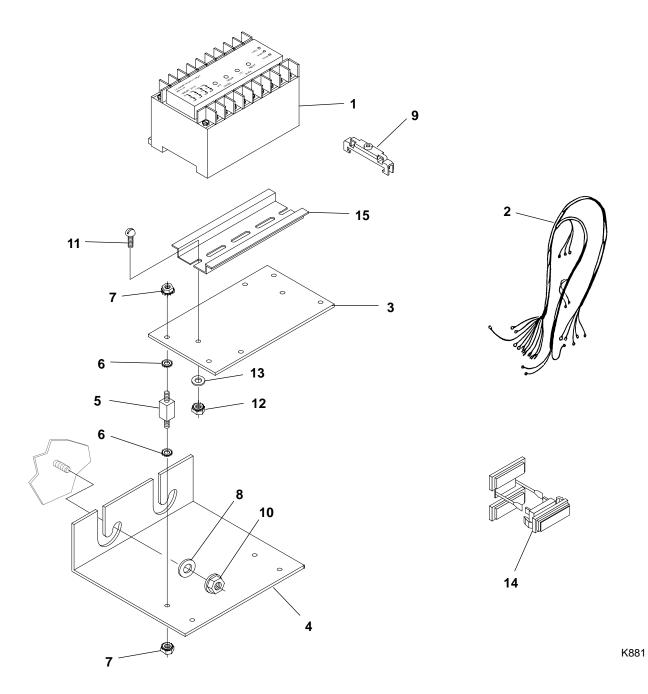


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-2921-0	1 1	Relay, Voltage (A17)	9	323-1411-01	2	Clip, End
2	338–3752	1	Harness, Wiring – Over/Under Voltage (TB21,	10	870–0048	2	Nut, Hex – Self–Locking (5/16–18)
			A11, GND to A17) (4 Wire, 67")	11	813–0100	2	Screw, Machine – Round Head (#10–32 x 1/2")
3	301-9941	1	Plate, Mounting	12	870-0131	2	Nut, Hex - W/ET (#10-32)
4	301-6987	1	Bracket, Mounting	13	526-0008	2	Washer, Flat (#10)
5	402-0354	4	Mount, Shock	14	322-0384-09) 1	Light, Indicator - Marked
6	853-0005	8	Washer, Lock - EIT (#8)				"O/U VOLT"
7	870-0221	8	Nut, Hex - W/ET (#8-32)	15	332-2879-07	1	Rail, Mounting
8	526-0115	2	Washer, Flat (5/16")				

Over/Under Voltage Relay DFLB, DFLC, DFLD, DFMB Begin Spec L

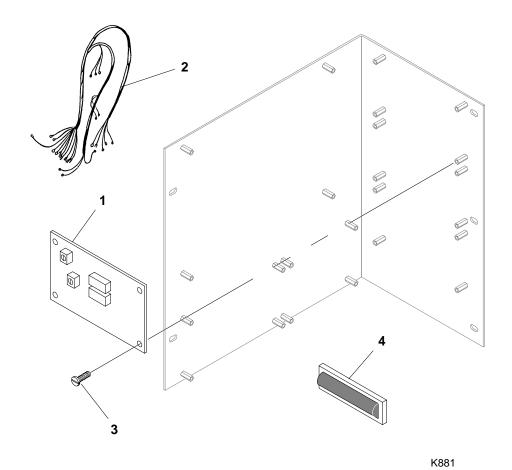

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307–2868	1	Board, Printed Circuit – Over/Under Voltage Relay	3	815–0937	4	Screw, Pan Head – Cross Recessed (#6–32 x 1/2")
2	338–3366	1	(A17) Harness, Wiring (6 Wire) (30")	4	322-0431-03	1	Lens, Indicator Light (Marked "O/U VOLT")


Tachometer

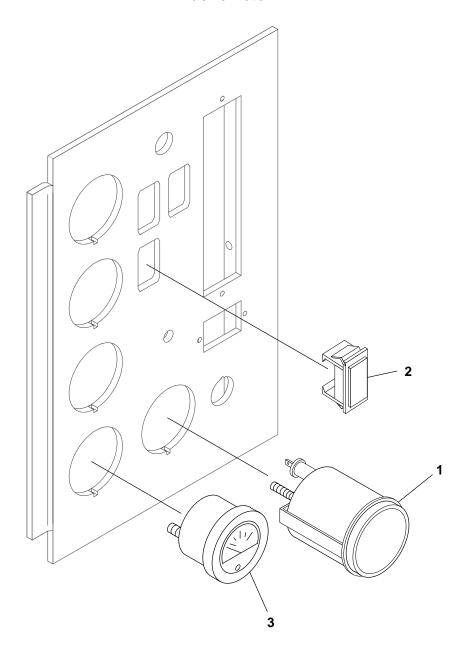

K145


REF QTY **PART PART** QTY **PART REF PART DESCRIPTION DESCRIPTION** NO. NO. **USED** NO. NO. **USED** Tachometer (0–4000 RPM, 12 Volt) (M16) 1 302-1873-01 1 2 301-6257 Switch, Blank 1 Ammeter - Blank Scale 3 302-1723 1

Pyrometer
Generator Sets With Detector Control

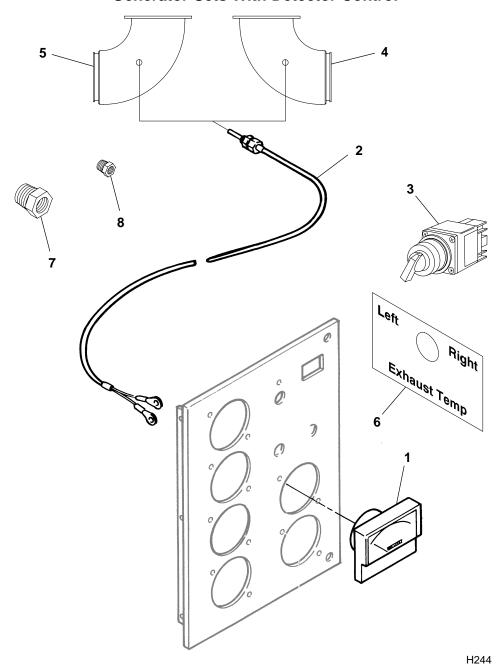

REF PART QTY **PART REF PART** QTY **PART** NO. NO. **USED DESCRIPTION** NO. NO. **USED DESCRIPTION** 302-1874 Pyrometer (M26) 5 Elbow, Exhaust - With 1 1 2 Lead, Thermocouple Tapped Hole On The Elbow DFLB, DFMB Side Illustrated Above 140" **DFLB** 193-0299 155-2531-05 1 1 200" DFLC, DFLD 193-0299-01 1 155-2531-06 1 DFLC, DFLD - 200" 193-0299-01 2 098-6625 1 Label, Exhaust Temperature Switch, Selector (Left/Right 308-0987 Switch Exhaust) Bushing, Pipe - Reducer 505-0018 1 (1/2" to 1/4") – DFLC, DFLD Bushing, Pipe – Reducer Elbow, Exhaust - With 4 Tapped Hole On The Elbow 505-0007 1 (1/4" to 1/8") – DFLC, DFLD Side Illustrated Above **DFLB** 155-2531-02 155-2531-03 DFLC, DFLD 1


Pyrometer
Generator Sets With PowerCommand Control

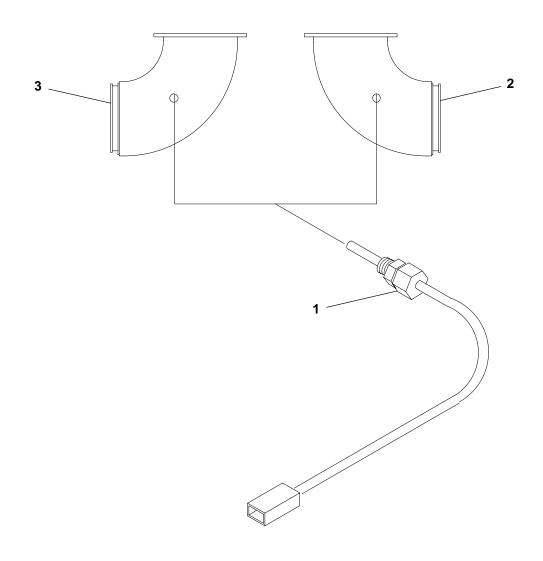

H244


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0446–02 193–0446–01 193–0446–03	1	Lead, Thermocouple All Generator Models – 30" DFLB – 12" DFLC, DFLD, DFMB – 50"	3	155–2531–05		Elbow, Exhaust – With Tapped Hole On The Elbow Side Illustrated Above DFLB
2	155–2531–02 155–2531–03	· ·	Elbow, Exhaust – With Tapped Hole On The Elbow Side Illustrated Above DFLB DFLC, DFLD		155–2531–06	1	DFLC, DFLD

Power Factor Meter

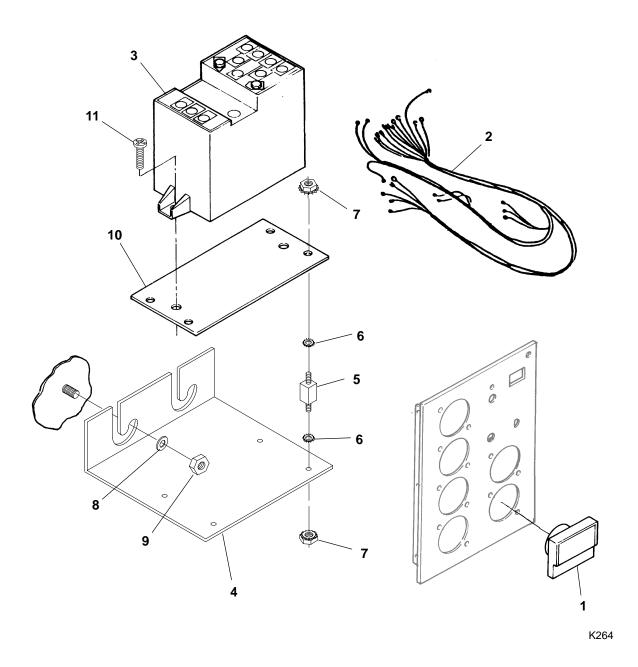


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1883	1	Meter, Power Factor (M25)	7	870-0221	8	Nut, Hex - W/ET (#8-32)
2	338-2368	1	Harness, Wiring - Meter	8	526-0115	2	Washer, Flat (5/16")
			(6 Wire, 44")	9	870-0048	2	Nut, Locking (5/16-18)
			(M25, TB21, GND to A22)	10	319-0030	1	Plate, Mounting
3	302-1833-03	1	Transducer, Watts (A21)	11	815-0905-06	2	Screw, Machine - Pan Head,
4	301-6987	1	Bracket, Mounting				Cross Recessed
5	402-0354	4	Mount, Shock				(#10-32 x 5/8")
6	853-0008	8	Washer Lock – FT (#10)				

VAR Power Factor Controller

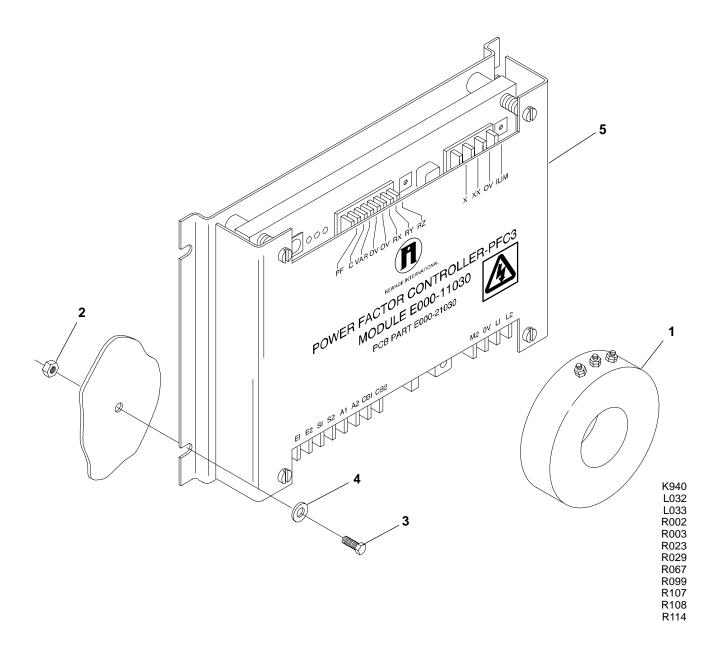


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302–1845–05	1	Transformer, Current (CT25) Ratio 300/5	3	813–0103	4	Screw, Machine – Round Head (#10–32 x 3/4")
	302-1794-11	1	Ratio 1500/5	4	526-0008	4	Washer, Flat (#10)
2	302–1794–13 302–1794–14 870–0131		Ratio 3000/5 Ratio 4000/5 Nut, Hex – W/EIT (#10–32)	5	305–0870	1	Controller, Power Factor (VAR)

Potentiometer Speed Adjusting

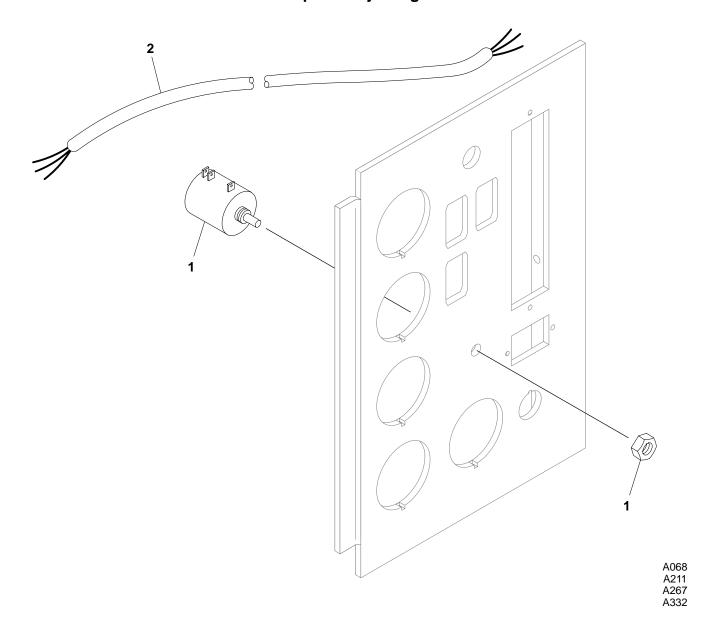


REF		QTY	PART	REF	PART	QTY	PART
NO.		USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	303–0223–05 303–0280	1 1	Potentiometer, Speed Adjusting – Governor Controller (R21) 100 Ohms 5K Ohms	2	334–0116	-	Cable, Shielded – Bulk (Order by the Foot – 7 Feet Required)

Manual Voltage Regulator

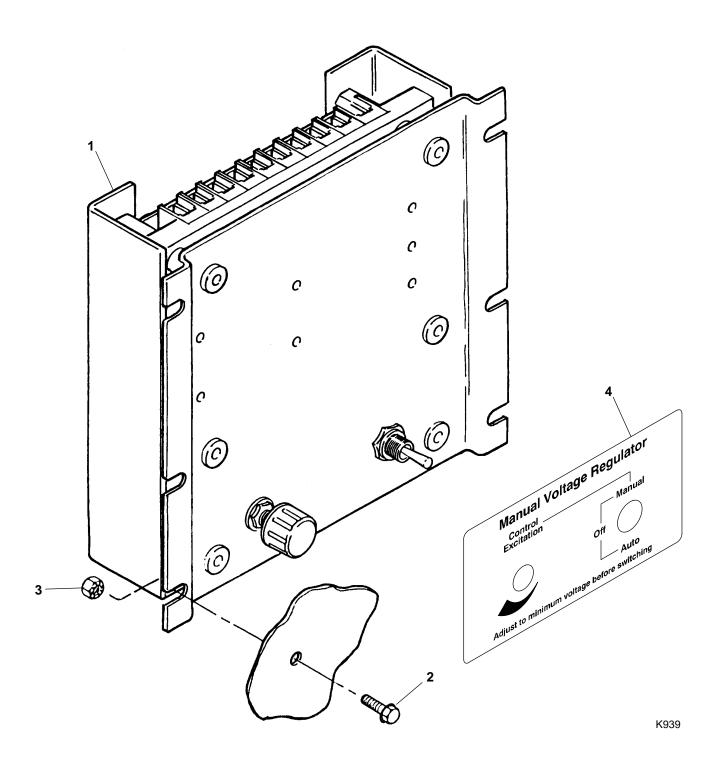

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	305–0817	1	Regulator, Voltage – Manual (MVR)	3 4	870–0131 098–6149	4 1	Nut, Hex – W/ET (10–32) Decal, Manual Voltage
2	821–0005	4	Screw, Self-Locking – Hex Washer Head (10–32 x 1/2")				Regulator


Voltage Regulator Generator Sets With Detector Control

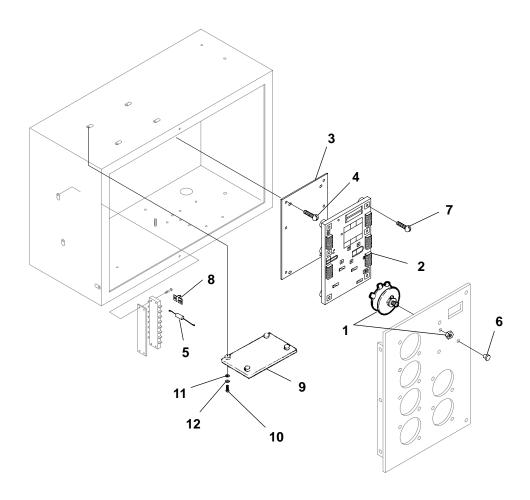

B246 H529 H546 H547 K001


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	303-0285-01	1	* Potentiometer – Voltage Adjust (5K Ohms) (Used	7	812–0084	4	Screw, Machine – Round Head (#8–32 x 1")
			With Model MX321 Voltage	8	332-1043	1	Jumper (Used On TB21)
			Regulator) (R21)	9	305-0868	1	* Board, Printed Circuit –
2	305–0823	1	Board, Printed Circuit – Voltage Regulator (MX321)				Isolation Transformer (T30) DFLB
			(VR21)	10	813-0108	4	* Screw, Machine – Round
3	319-0652	1	Plate, Mounting				Head (#10-32 x 1-1/2")
4	815-0937	6	Screw, Machine - Round				DFLB `
			Head - Cross Recessed	11	526-0008	4	* Washer, Flat (#10) DFLB
			W/IT (#6-32 x 1/2")	12	850-0030	4	* Washer, Lock - Spring (#10)
5	350–1222	1	Resistor (1.5K Ohms) (Used On TB21)				DFLB
6	517-0131	1	Plug, Hole (Fits 3/8" Hole)	* - N	Not Used On A	All Models	

Electronic Overspeed

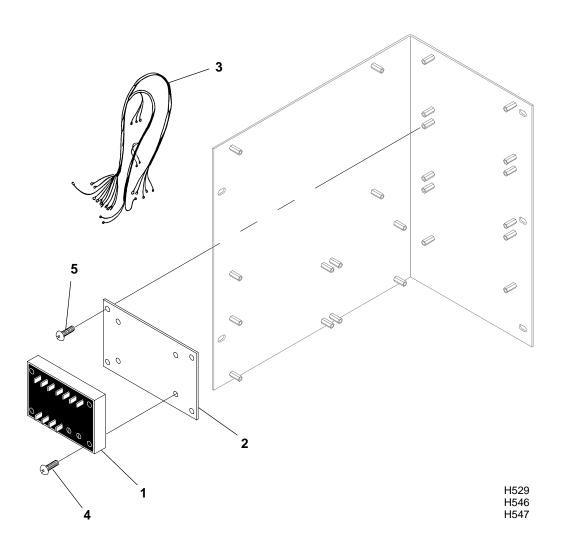

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	305-0902-02	2 1	Board, Printed Circuit – Electronic Overspeed (A16)	4	812–0082	4	Screw, Machine – Round Head (8–32 x 3/4")
2	319-0754	1	Plate, Mounting	5	815-0388	4	Screw, Pan Head - Cross
3	338–2529	1	Harness, Wiring – Electronic Overspeed (AUX to A11, A16) (6 Wire, 74")				Recessed, Thread Forming (6–32 x 1/2")

Excitation Loss Module

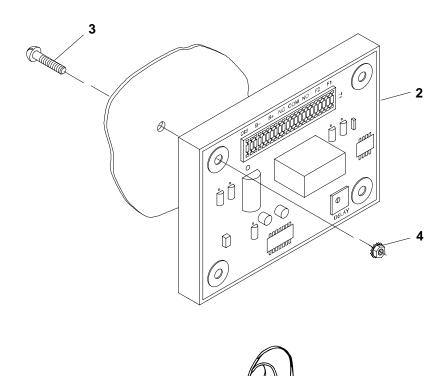




KJ35


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–2455	1	Harness, Wiring – Excitation	3	813-0103	4	Screw, Machine - Round
2	305-0821-0	2 1	Loss Module (AUX to A11) Module (FLM) 24V	4	870-0131	4	Head (#10–32 x 3/4") Nut Hex – W/FT (#10–32)

Cross Current Compensation Circuit

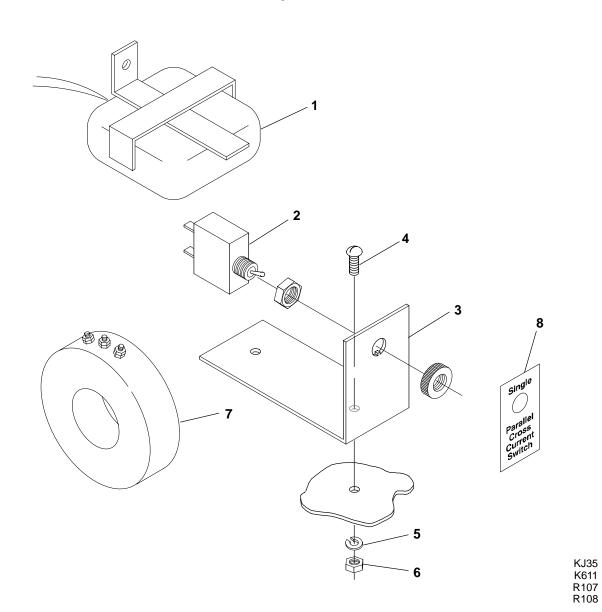


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Transformer, Current (CT)	2	308-0069	1	Switch, Toggle (S22)
	302-1852-02	1	600:0.37 Ratio -	3	301-9657	1	Bracket, Mounting
			DFLB Begin Spec N DFLC, DFMB Begin Spec P	4	813–0100	2	Screw, Machine – Round Head (#10–32 x 1/2")
	302-1852-03	3 1	600:0.38 Ratio -	5	850-0030	2	Washer, Lock - Spring (#10)
			DFLB Spec K Through M	6	870-0053	2	Nut, Hex (#10-32)
			DFLC, DFMB Spec K Through N	7	302–1926–30	1	Transformer, Current – 1667/1 Ratio (CT)
	302-1852-06	5 1	400:0.32 Ratio – DFMB Spec M	8	098–2313	1	Label, Cross Current Switch
	302-1852-07	1	1000:0.38 Ratio – DFLB Begin Spec N				

Current Transformer

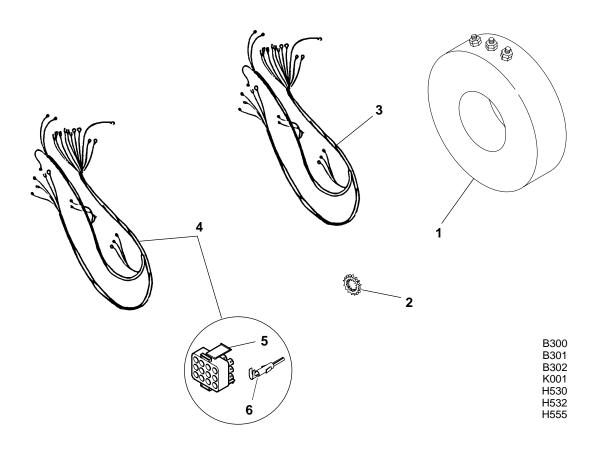


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
			T (0 .			•	D :: 400/4
1			Transformer, Current		302–1926–21		Ratio 122/1
			(CT21, CT22, CT23)		302–1926–23		Ratio 170/1
			Generator Sets With		302–1926–26		Ratio 302/1
			Detector Control		302–1926–28		Ratio 422/1
	302-1845-07	-	Ratio 250/5 or 500/5	2	856–0008	2	Washer, Lock – EIT (5/16")
	302-1845-08	3	Ratio 375/5 or 750/5				(Grounding Wires)
	302-1794-13	3	Ratio 1500/5 or 3000/5	3	338–2532	1	Harness, Wiring – Generator
	302-1794-14	. 3	Ratio 2000/5 or 4000/5				Sets With Detector Control
	302-1794-15	3	Ratio 3000/5 or 6000/5				(7 Wire, 79") (TB21 To
			Generator Sets With Power				GND, CT21, CT22, CT23
			Command Control	4	338-3019	1	Harness, Wiring – Generator
	302-1922-10	3	Ratio 394/1 or 788/1				Sets With PowerCommand
	302-1922-12	3	Ratio 473/1 or 946/1				Control (Includes Plug And
	302-1922-16	3	Ratio 604/1 or 1208/1				Socket Contacts - Ref No.
	302-1922-18	3	Ratio 656/1 or 1312/1				5 and 6) (10 Wire, 60") (P9
	302-1922-21	3	Ratio 789/1 or 1578/1				To CT21, CT22, CT23 And
	302-1922-39	3	Ratio 2523/1 or 5046/1				5, 6, 7, 8)
	302-1922-40	3	Ratio 2762/1 or 5524/1	5	323-1644-03	1	Plug – 12 Place – Generator
	302-1926-11	3	Ratio 3470/1				Sets With PowerCommand
	302-1926-13	3	Ratio 3943/1				Control (P9)
	302-1926-14	. 3	Ratio 4144/1	6	323-1648	10	Socket, Contact – Generator
	302-1926-16	3	Ratio 4731/1				Sets With PowerCommand
	302-1926-17	3	Ratio 8211/1				Control
	302-1926-18	3	Ratio 6832/1				

Differential Current Transformer

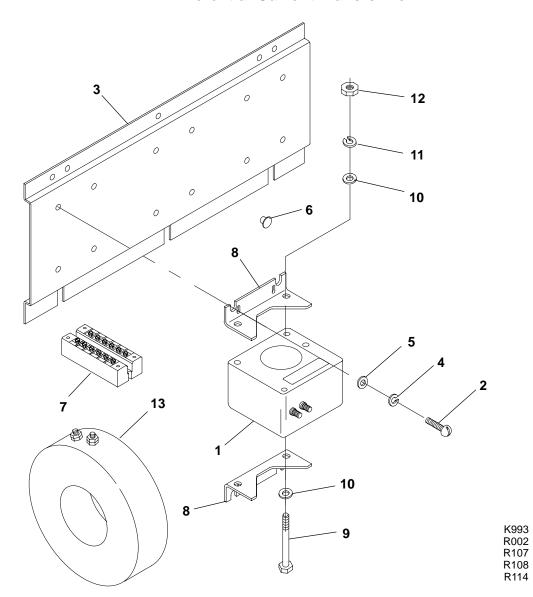

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Transformer, Current – 5kV	8	319-3297	6	* Bracket, Foot
			(U1, V1, W1)	9	800-0039	6	* Screw, Cap – Hex Head
	302-1945-01	3	Ratio 200/5				(5/16-18 x 3-1/2")
	302-1945-03	3	Ratio 100/5	10	526-0022	12	* Washer, Flat (5/16")
	302-1945-04	3	Ratio 250/5	11	850-0045	6	* Washer, Lock – Spring
	302-1945-05	3	Ratio 300/5				(5/16")
	302-1945-06	3	Ratio 400/5	12	862-0015	6	* Nut, Hex (5/16–18)
	302-1945-08	3	Ratio 600/5	13			Transformer, Current – 600V
	302-1945-10	3	Ratio 75/5				(CT1, CT2, CT3)
	302-1945-11	3	Ratio 800/5		302-1961-11	3	Ratio 1500/5
2	813-0098	12	* Screw, Machine - Round		302-1961-12	3	Ratio 1600/5
			Head (#10-32 x 3/8")		302-1961-13	3	Ratio 1800/5
3	319-1265	1	* Bracket, Current Transformer		302-1961-14	3	Ratio 2000/5
4	850-0030	12	* Washer, Lock – Spring (#10)		302-1961-15	3	Ratio 2500/5
5	526-0008	12	* Washer, Flat (#10)		302-1961-16	3	Ratio 3000/5
6	517-0090	1	Plug, Hole (Fits 5/16" Hole)				
			(Quantity Used As Required)		Mounting Hardv Surrent Transfor		Brackets Used with 5kV
7	332–3178–01	1	Block, Terminal (6 Place) (SCB)				


Audible Alarm Generator Sets With Detector Control

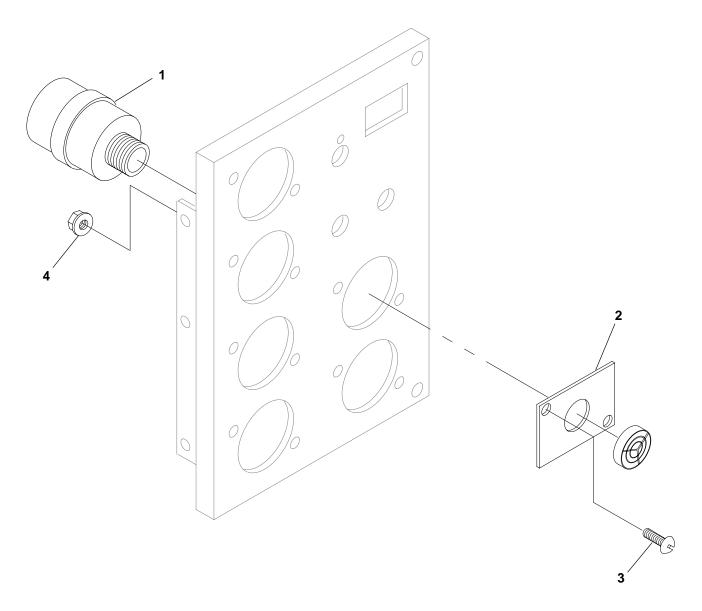

KA08

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333-0133	1	Alarm, Audible (DS2)	3	815-0385	2	Screw, Machine - Round
2	319-0898	1	Plate, Mounting				Head (#6-32 x 1/2")
				4	870-0183	2	Nut. Hex – W/FT (#6–32)


Junction Box Engine Coolant Heater DFLA, DFLB Spec K Through L, DFLC Spec K Through L DFLD Spec K Through ?

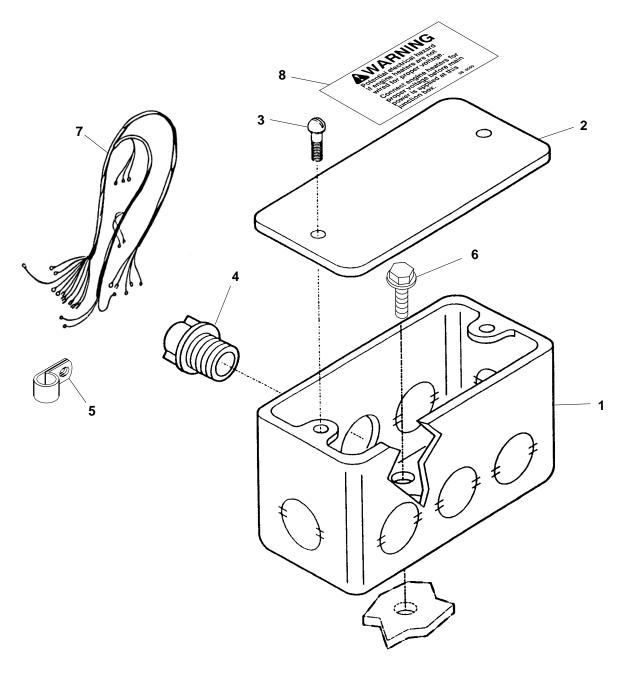

REF PART QTY **PART REF PART** QTY **PART** NO. NO. **USED DESCRIPTION** NO. NO. **USED DESCRIPTION** 330-0005 Box, Junction 7 Harness, Wiring - Junction 1 1 2 330-0004 1 Cover, Junction Box Box to Coolant Heater (3 3 812-0079 Screw, Machine - Round Wire) (GND, Black, White 2 to GND-GND, HTR-TH, Head (#8-32 x 1/2") Connector, Knockout 4 331-0027 4 HTR-EL) Clamp, "J" 5 332-2634 1 338-2544 1 36" 70" 6 815-0340 2 Screw, Locking - Hex 338-2545 1 Washer Head 098-6560 Tag, Warning 1 (#10-32 x 3/8")

K505


Control Housing DFLB Spec K Through M DFLC Spec K Through N, DFLD DFMB Spec K Through N

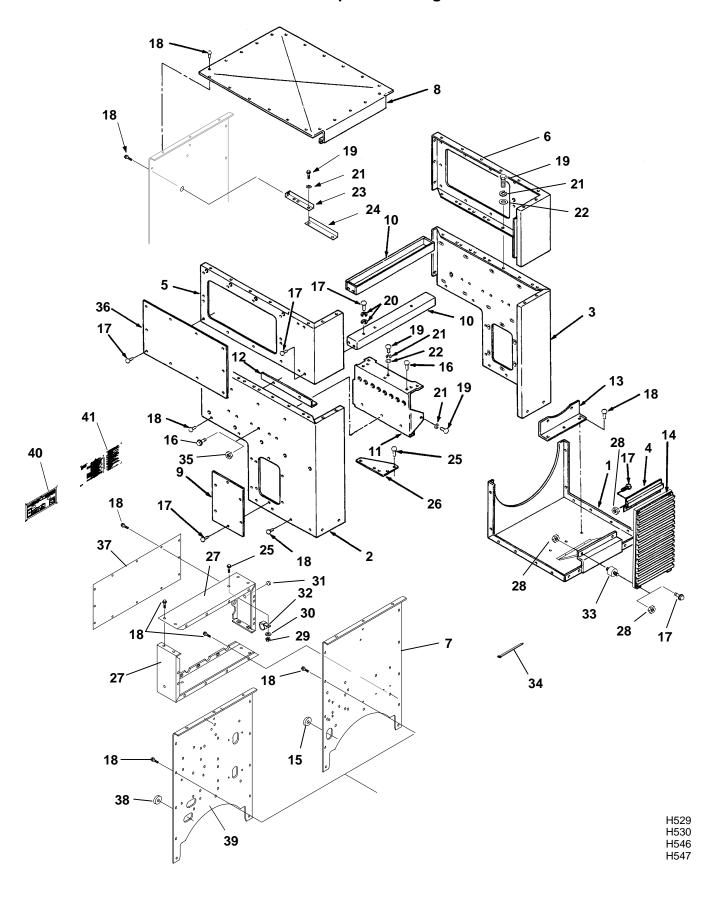

Control Housing DFLB Spec K Through M DFLC Spec K Through N, DFLD DFMB Spec K Through N

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1 2 3	319–2771–03 319–2771–04 319–2781–01 319–2781–02	1 1 1	Panel – Bottom Model HC6 Generators Model HC7 Generators Panel – Right Side – Lower Panel – Left Side – Lower	24 25	319–1118	1	Angle, Support (6–1/2") Screw, Self–Locking – Hex Washer Head (5/16–18 x 3/4") Model HC6 Generators
4	319–2778	1	Panel – Rear		821-5003-03	9	Sets With Detector
5 6 7	319–2779–01 319–2779–02	1	Panel – Right Side – Upper Panel – Left Side – Upper Panel – Front – Sets With Detector Control		821–5003–03	11	Control Sets With PowerCommand Control
8	319–1089 319–1088 319–1093	1 1 1	Model HC6 Generators Model HC7 Generators Cover, Top		821–5003–03	8	Model HC7 Generators Sets With Detector Control
9 10 11	319–0881 319–0879	2 2	Cover, Side – Lower Support – Control Box Bracket, Saddle		821–5003–03	10	Sets With PowerCommand Control
	319-1096	2	Model HC6 Generators	26	319-1203-01	2	Gusset
12 13	319–1097 319–0883	2 2	Model HC7 Generators Angle, Housing Bracket. Panel	27	319–2244	2	Wrapper, Control Box – Sets With PowerCommand Control
	319-1091	1	Model HC6 Generators	28	870-0550-05	10	Nut, Hex (1/4–20)
	319–1092	1	Model HC7 Generators	29	870-0550-07	2	Nut, Hex (5/16–18) Sets With
14	319-2767	1	Grille				PowerCommand Control
15	508–1057	1	Grommet, Rubber – Sets With Detector Control (Fits 2–1/4" Hole)	30	526–1115	2	Washer, Flat (5/16") Sets With PowerCommand Control
16	821–5004–02	12	Screw, Self-Locking - Hex Washer Head (3/8-16 x 3/4")	31	517–0131	2	Plug, Hole (Fits 3/8" Hole) Sets With PowerCommand Control
17			Screw, Self–Locking – Hex Washer Head	32	332–2634	4	Clamp, "J" – Sets With PowerCommand Control
			(1/4-20 x 1/2")	33	402-0610	4	Isolator, Vibration
	821-5002-03	50	Model HC6 Generators	34	332-1389	AR	Tie, Cable
18	821–5002–03	46	Model HC7 Generators Screw, Self–Locking – Hex	35	870–0550–09	6	Nut, Hex (3/8–16) Sets With HC7 Generators
	821–5003–01	58	Washer Head (5/16–18 x 1/2") Sets With Detector	36	319–1095	2	Cover, Side – Upper Without Circuit Breaker, Entrance Box, or BUS Box
	821–5003–01		Control Sets With		319–1095	1	With Circuit Breaker, Entrance Box, or BUS Box
40	021 0000 01		PowerCommand Control	37	319–2245	1	Cover, Control Box – Sets With PowerCommand
19	900 2096	15	Screw, Cap – Hex Head (M10 x 25mm) Model HC6 Generators	38	508-1090	3	Control Grommet, Rubber – Sets With PowerCommand
20	800–2086 800–2086	11	Model HC7 Generators Washer, Lock – EIT (1/4")	39			Control Panel, Front – Sets With
20	956 0006	1	Sets With Detector Control	39			PowerCommand Control
	856–0006 856–0006	1 2	Sets With Detector Control Sets With PowerCommand Control		319–2243 319–2242	1	Model HC6 Generators Model HC7 Generators
21				40	098–6827	1 1	
21	850-2010	15	Washer Lock – Spring (M10) Model HC6 Generators	40	090-0021	ı	Decal, Module Installation – PowerCommand Control
	850–2010 850–2010	11	Model HC7 Generators	41			Decal, Customer Connections –
22	2010	• • • • • • • • • • • • • • • • • • • •	Washer, Flat (3/8")	71			PowerCommand Control
~~	319–2771–03	1	Model HC6 Generators		098–6985	1	Models Without Paralleling
	319–2771–03		Model HC7 Generators		098–7121	1	Models With Paralleling
23	319–1090	1	Angle, Support (5–1/2")		300 1121		modele that I didnoming


Control Housing DFLB Begin Spec N DFLC, DFMB Begin Spec P

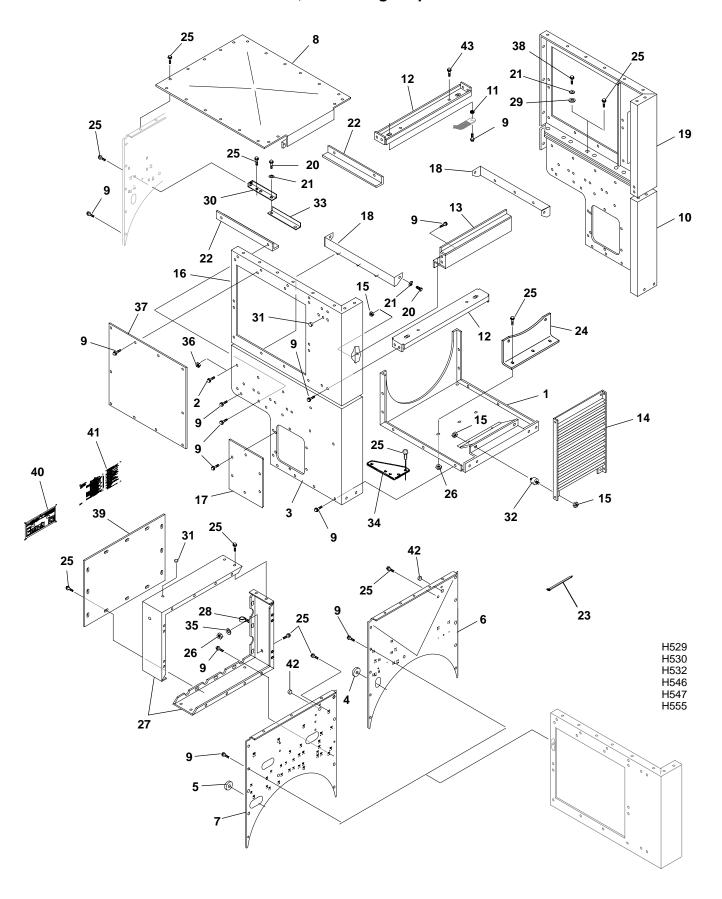

Control Housing DFLB Begin Spec N DFLC, DFMB Begin Spec P

Panel = Bottom	REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
319-3270-04 Model HC6 Generators 319-1091 1 Model HC6 Generators 319-1092 1 Model HC6 Generators 319-328-10 1 Panel – Right Side – Bottom B21-6003-02 62 Generators Model HC6 Generators Model HC6 Generators Model HC6 Generators 319-328-10 1 Panel – Right Side – Bottom B21-6003-02 62 Generators Model HC6 Generators Model HC7 Generator	1			Panel – Bottom	24			Bracket, Panel
319-3270-04 1 Model HC7 Generators 25 Screw, Self-Locking – Hex Washer Head (M10 x 25 25 Washer Head (M10 x 25 25 25 25 25 25 25	•	319-3270-03	1			319-1091	1	
2 821-6004-01 12 Screw, Self-Locking - Hex Washer Head (Mil X 20mm) Model HCG Generators Sets With Detector Control Sets With Se								
Washer Head (Mf 0 x 20mm) Model HC6 Generators Self-Mith Detector Control Self-Mith Detector Control Generators Genera	2				25	0.00.002	•	
3 319-3283-01 1 Panel - Right Side - Bottom Generators Sets With Detector Control Generators Gener	_	021 0001 01	12		20			
Generators Generators Generators Support Suppo								
3 319-3283-01								
Solution Solution	3	319-3283-01	1			821-6003-02	63	
2-1-4" Hole) Sets With Detector Control Sales With Detector Control Sales With Detector Control Sales Sale						021 0000 02	00	
Detector Control Sets With PowerCommand Control Sets With Sets Sets With Sets With Sets Set	•	000 1007	•			821-6003-02	62	
Solution Solution						021 0000 02	02	_
PowerCommand Control Panel - Front - Sets With Detector Control Detector Control Detector Control Detector Control Sal - 6003 - 20 87 Generators Generator	5	508-1090	3					
PowerCommand Control Section S	Ū	000 1000	O					
Panel								
Delector Control Sale-acount Sale-acou	6					821-6003-02	87	
319-3261 1 Model HC7 Generators 821-6003-02 86 Model HC7 Generators 7 Panel - Front - Sets With 26 870-2055 2 PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control PowerCommand Control PowerCommand Control Clamp, Retairer - Sets With PowerCommand Control PowerCommand Contro	Ü					021 0000 02	01	_
319-3261 1 Model HC7 Generators 26 870-2055 2 Nut, Locking (MB) Sets With PowerCommand Control Model HC6 Generators 27 319-3277 2 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 210-6002-03 36 With Circuit Breaker, Entrance Box, or BUS Box 319-3283-02 1 10 10 10 10 10 10 1		319-3262	1			821-6003-02	86	
Panel - Front - Sets With PowerCommand Control Washer, Elatrance Box, or BUS Box						021 0000 02	00	
PowerCommand Control Signature Signa	7	010 0201	•		26	870-2055	2	
319-3276 1 Model HC6 Generators 27 319-3277 2 Wrapper, Control Box - Sets 319-3275 1 Model HC7 Generators 28 319-3275 2 With PowerCommand Control Clamp, Retainer - Sets With PowerCommand Control Clamp, Retainer - Sets With Control Sets With Control Box Sets With Control Box Sets With Clamp, Retainer - Sets With Control Sets Control Sets S	•				20	070 2000	_	
319-3275 1		319_3276	1		27	319_3277	2	
Second Cover, Top Screw, Self-Locking - Hex Washer Head (M6 x 16mm) Model HC6 Generators Self-Locking - Hex Washer Head (M6 x 16mm) Model HC6 Generators Self-Locking - Hex Washer Head (M6 x 16mm) Model HC6 Generators Self-Locking - Hex Washer Head (M6 x 16mm) Model HC6 Generators Self-Locking - Hex Washer, Lock - Spring (M10) Wash					21	010 0277	_	
Washer Head (M\bar{0} x 16mm) Model HC6 Generators Sa2-2634 2 Engine Side (3/4" ID)	g							
Washer Head (M\bar{0} x 16mm) Model HC6 Generators Sa2-2634 2 Engine Side (3/4" ID)	۵	319-1093	'		28			
Model HC6 Generators	9				20			
Second S						222 2624	2	
Entrance Box, or BUS Box Washer, Flat (3/6") Model HC6 Generators S26-0141 10 Model HC7 Generators Angle, Support (5-1/2") Plug, Hole (Fits 3/8" Hole) Sets With Detector Control Sets With Detector Sets With Detector Control Sets With Detector Control Sets With Detector Control Sets With PowerCommand Control Sets With PowerCommand Control Sets With PowerCommand Control Sets With Detector Control Sets With PowerCommand Control Sets With Detector Control Sets With Detector Control Sets With Sets With PowerCommand Control Sets With Sets Wi		921 6002 02	50					
Box With Circuit Breaker, Entrance Box, or BUS Box S26-0141 10 Model HC7 Generators Model HC7 Generators Angle, Support (5-1/2") Plug, Hole (Fits 3/8" Hole) Sets With Detector Control Sets With PowerCommand Control Sets With Detector Control Sets With Detector Control Sets With Detector Sets With Detector Control Sets With PowerCommand Control Sets With Detector Control Sets With PowerCommand Control Sets With PowerCommand Control Sets With Detector Control Sets With Detector Control Sets With Detector Control Sets With Detector Control Sets With PowerCommand Sets With PowerComm		021-0002-03	50		20	310-0340-42	2	
821-6002-03 40 With Circuit Breaker, Entrance Box, or BUS Box S19-3263 1 Angle, Support (5-1/2") Plug, Hole (Fits 3/8" Hole) Sets With Detector Control Sets With DewerCommand Sets With DewerCommand Control Sets With PowerCommand Control Sets With Detector Control Sets With DewerCommand Control Sets With DeverCommand Control Control Sets With PowerCommand Sets With DeverCommand Control Control Sets With PowerCommand Control Control Sets With PowerCommand Sets With PowerCommand Control Sets With PowerCommand					29	EOC 0444	10	
Entrance Box, or BUS Box B		004 0000 00	40					
Box Model HC7 Generators Sets With Detector Control		021-0002-03	40		20			
Model HC7 Generators						319-3263	1	
Sets With PowerCommand Control Solator, Vibration Solator, Vibrati					31	E47 0404		
Entrance Box, or BUS Box 32 402-0729 4 Isolator, Vibration Angle, Support (6-1/2")		004 0000 00	40					
Box With Circuit Breaker, Entrance Box, or BUS Box Soze Soze		821-6002-03	46			517-0131	3	
Second column Second colum					00	100 0700		
Entrance Box, or BUS Box 34 319-1203-01 2 Gusset Washer, Flat (5/16") Sets With PowerCommand Control Sets With PowerCommand Control Sets With Detector Control Sets With Detector Control Sets With Detector Control Control Sets With Detector Sets With Detector Control Sets With Detector Sets With Detector Sets With Detector Control Sets With Detector Co		004 0000 00	00					
Box 319-3283-02 1		821-6002-03	36	•				
10					-			
11	40	040 0000 00			35	526-1115	2	
Sets With Detector Control Sets With PowerCommand Sets With Power		319-3283-02	1					
Sets With PowerCommand Control 37 Generators	11	050 0000			00	070 0050	•	
Control 37			_		36	870-2056	6	_ : :
12 319–3258 2 Support, Control Box 319–1095 2 Without Circuit Breaker, Entrance Box, or BUS Box 13 319–27778 1 Panel – Rear Side – Upper 38 800–2086 5 Screw, Cap – Hex Head 14 319–3281 – 02 1 Panel – Eff Side – Upper 15 870–2054 10 Nut, Locking (M6) Strew, Cap – Hex Head 16 319–3281 – 02 1 Panel – Right Side – Upper 18 319–3267 2 Model HC6 Generators Side – Upper 19 319–3281 – 02 1 Panel – Left Side – Upper 20 Screw, Cap – Hex Head 40 098–6827 1 Decal, Module Installation – PowerCommand Control 20 Screw, Cap – Hex Head 40 098–6827 1 Decal, Customer Connections – PowerCommand Control 21 Screw, Cap – Hex Head 40 098–6985 1 Model HC7 Generators 21 Screw, Cap – Hex Head 40 098–6985 1 Model Without Paralleling 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Washer Head (5/16–18 x Washer Head (5/16–18 x Screw, Self–Locking – Hex Washer Head (5/16–18 x Washer Head (5/16–18 x Screw, Self–Locking – Hex Washer Head (5/16–		856-0006	2					
13 319–2778 1	40	040 0050	•		37	040 4005	•	
14 319–2767 1 Grille 319–1095 1 With Circuit Breaker, Entrance Box, or BUS Box 15 870–2054 10 Nut, Locking (M6) Entrance Box, or BUS Box 16 319–3281–01 1 Panel – Right Side – Upper 38 800–2086 6 Screw, Cap – Hex Head (M10 x 25mm) Model HC7 18 Bracket, Saddle Bracket, Saddle Generators Generators 319–3268 2 Model HC6 Generators With PowerCommand Control 19 319–3281–02 1 Panel – Left Side – Upper Control 20 Screw, Cap – Hex Head (M10 x 25mm) 40 098–6827 1 Decal, Module Installation – PowerCommand Control 21 Bracket, Saddle Model HC6 Generators 41 Decal, Customer Connections – PowerCommand Control 21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling 850–2010 15 Model HC6 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43						319–1095	2	,
15 870-2054 10								·
16 319–3281–01 1 Panel – Right Side – Upper 38 800–2086 6 Screw, Cap – Hex Head (M10 x 25mm) Model HC7 Generators 18 319–3267 2 Model HC6 Generators 39 319–2245 1 Cover, Control Box – Sets With PowerCommand Control 19 319–3268 2 Model HC7 Generators With PowerCommand Control 20 Screw, Cap – Hex Head (M10 x 25mm) 40 098–6827 1 Decal, Module Installation – PowerCommand Control 800–2086 15 Model HC6 Generators (M10 x 25mm) 41 Decal, Customer Connections – PowerCommand Control 21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling Models With Paralleling Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Washer Head (5/16–18 x						319–1095	1	·
17 319-0881 2 Cover, Side - Lower Bracket, Saddle Saddle Generators Generators Generators With PowerCommand Control Decal, Module Installation - PowerCommand Control Decal, Customer Connections - PowerCommand Control Decal, Customer Connections - PowerCommand Control Decal, Customer Connections - PowerCommand Control Model HC7 Generators Washer, Lock - Spring (M10) O98-6985 1 Models Without Paralleling Model HC6 Generators 42 517-0135 1 Plug, Hole (Fits 5/8" Hole) Plug, Hole (Fits 5/8" Hole) Screw, Self-Locking - Hex Generators Washer Head (5/16-18 x Washer							_	
Bracket, Saddle Generators Generators					38	800–2086	6	
319-3267 2 Model HC6 Generators 39 319-2245 1 Cover, Control Box - Sets		319–0881	2					
319-3268 2 Model HC7 Generators With PowerCommand	18							
19 319–3281–02 1 Panel – Left Side – Upper Control 20 Screw, Cap – Hex Head 40 098–6827 1 Decal, Module Installation – PowerCommand Control 800–2086 15 Model HC6 Generators 41 Decal, Customer Connections – PowerCommand Control 21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling 850–2010 15 Model HC6 Generators 098–7121 1 Models With Paralleling 850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x					39	319–2245	1	
Screw, Cap - Hex Head 40 098-6827 1 Decal, Module Installation - PowerCommand Control PowerCommand Control Decal, Customer Connections - PowerCommand Control Decal, Customer Connections - PowerCommand Control PowerCommand Control PowerCommand Control PowerCommand Control Washer, Lock - Spring (M10) 098-6985 1 Models Without Paralleling Models With Paralleling Models With Paralleling Models With Paralleling Plug, Hole (Fits 5/8" Hole) Plug, Hole (Fits 5/8" Hole) Screw, Self-Locking - Hex Washer Head (5/16-18 x Washer Hea								
Model HC6 Generators Washer, Lock - Spring (M10) Model HC6 Generators Washer, Lock - Spring (M10) Model HC6 Generators Washer, Lock - Spring (M10) Model HC7 Generators Washer, Lock - Spring (M10) Model HC6 Generators Washer, Lock - Spring (M10) Washer, L		319–3281–02	1					
800–2086 15 Model HC6 Generators 41 Decal, Customer Connections – PowerCommand Control 21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling 850–2010 15 Model HC6 Generators 098–7121 1 Models With Paralleling 850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x	20				40	098–6827	1	•
800–2086 5 Model HC7 Generators PowerCommand Control 21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling 850–2010 15 Model HC6 Generators 098–7121 1 Models With Paralleling 850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x								
21 Washer, Lock – Spring (M10) 098–6985 1 Models Without Paralleling 850–2010 15 Model HC6 Generators 098–7121 1 Models With Paralleling 850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x		800–2086	15	Model HC6 Generators	41			Decal, Customer Connections –
850–2010 15 Model HC6 Generators 098–7121 1 Models With Paralleling 850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x		800-2086	5					
850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x	21						1	
850–2010 11 Model HC7 Generators 42 517–0135 1 Plug, Hole (Fits 5/8" Hole) 22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x								Models With Paralleling
22 319–3260 2 Angle, Housing – Model HC6 43 821–0014 4 Screw, Self–Locking – Hex Generators Washer Head (5/16–18 x		850-2010	11	Model HC7 Generators			1	
Generators Washer Head (5/16–18 x	22	319-3260	2	Angle, Housing – Model HC6	43	821-0014	4	
	23	332–1389	A/R	Tie, Cable				1/2")


Circuit Breaker AC Control Door

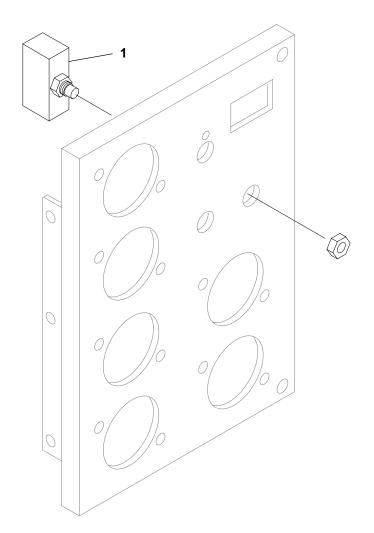

H529 H546 H547 KJ35 K600

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	320–1688–0 320–1688–0		Breaker, Circuit (CB21) Without Auxiliary Contacts With Auxiliary Contacts				


Resistive Temperature Detectors

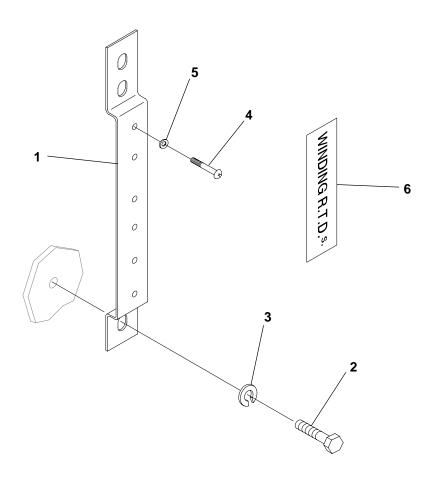

R107 R108

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1293	1	Bracket	4	812-0070	4	Screw, Machine - Round
2	800-2080	2	Screw, Cap - Hex Head				Head (#6-32 x 1-1/4")
			(M10 x 12mm)	5	526-0002	4	Washer, Flat (#6)
3	850-2010	2	Washer, Lock – Spring (M10)	6	098-6488	1	Label, R.T.D.


Radio Frequency Interference Module

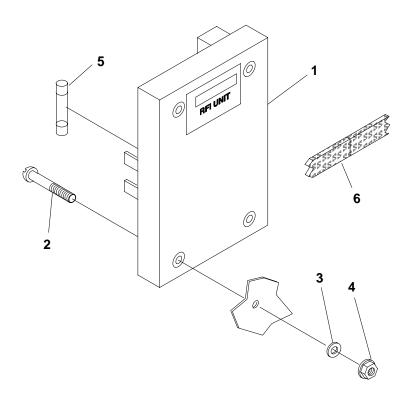


B220 R107 R108

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	314-0212	1	Module (RFI)	6	314-0213	_	Shielding, Wire - Bulk (3"
2	813–0107	4	Screw, Machine – Round Head (#10–32 x 1–1/4")				Wide) (Order By The Foot – 12 Feet Required) Used On
3	526-0008	4	Washer, Flat (#10)				AC Control Harness And
4	870-0131	4	Nut, Hex - W/ET (#10-32)				Leads For RFI Module And
5	321-0327-0	1 4	Fuse (5 Amp)				Current Transformer

Alarm Relay Board

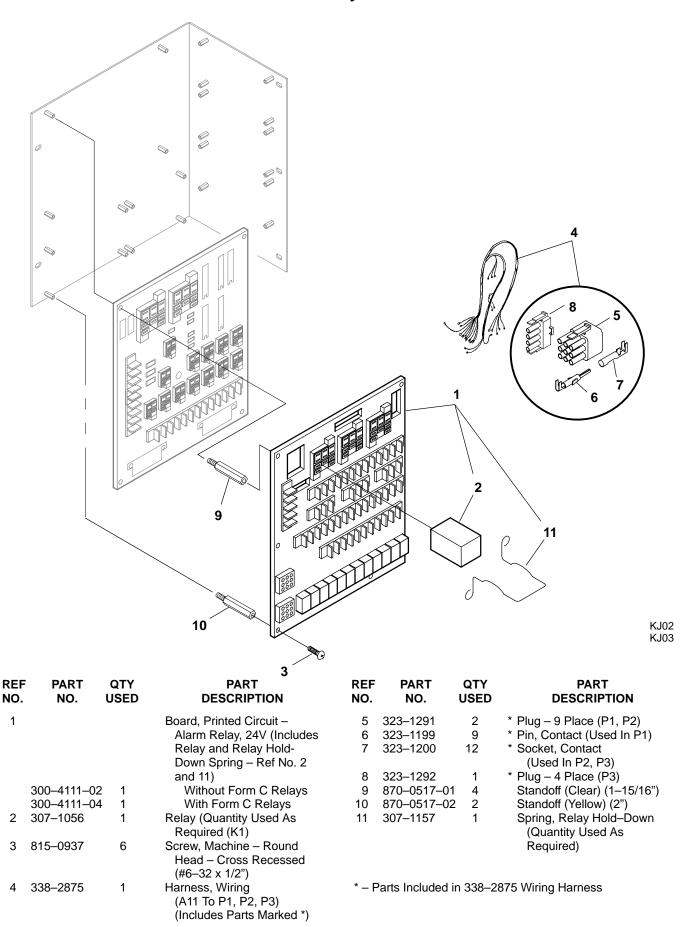


Entrance Box Model HC6 and HC7 Generators DFLB Spec K Through M, DFLC Spec K Through N DFLD, DFMB Spec K Through N

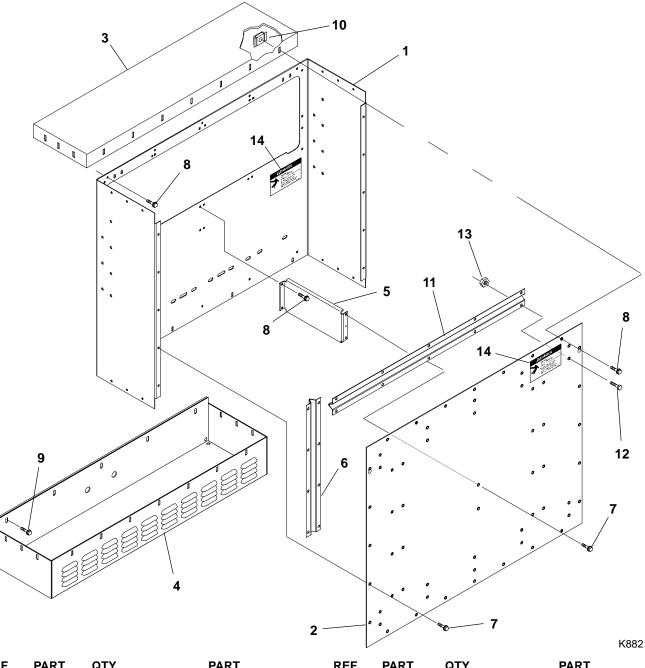


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
		00_2	22001111 11011			00_5	22001111 11011
1	319-1957	1	Box, Entrance	9	821-0011	5	Screw, Self-Locking - Hex
2	319-2378	1	Cover				Washer Head
3	319-1961	1	Cover – Upper				(1/4-20 x 7/8")
4	319-1925	1	Cover – Lower	10	870-0494	26	Nut, Retaining (1/4–20)
5	319-2377-01	1	Brace, Cover	11	319-2399	2	Brace, Cover (40-1/2")
6	319-2398	2	Brace, Cover (24")	12	816-0098	36	Bolt, Carriage
7	821-0010	24	Screw, Self-Locking - Hex				(5/16–18 x 5/8")
			Washer Head	13	870-0257	36	Nut, Locking (5/16-18)
			(1/4–20 x 1/2")	14	098-6650-01	2	Label, Danger – High Voltage
8	821–0018	21	Screw, Self–Locking – Hex Washer Head (1/4–20 x 5/8")				

Entrance Box Model HC6 and HC7 Generators DFLB Begin Spec N DFLC, DFMB Begin Spec P

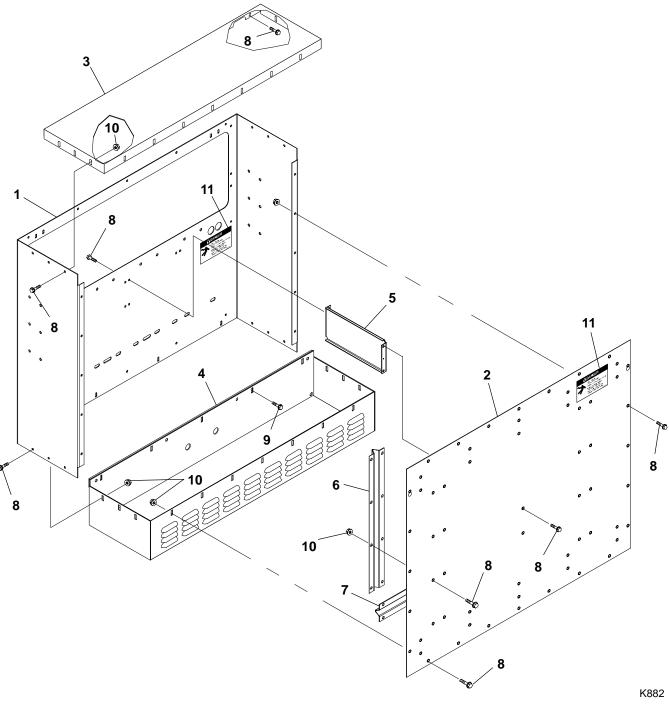

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Entrance	8	821-6002-03	89	Screw, Hex Head
2	319-3265	1	Cover, Entrance Box				(M6 x 16mm)
3	319-1961	1	Cover, Entrance Box – Top	9	821-2035	5	Screw, Self-Locking -
4	319-1925	1	Cover, Entrance Box –				Hex Washer Head
			Bottom				(M6 x 25mm)
5	319-3264	1	Brace, Cover	10	870-0504	26	Nut, Retaining (M6)
6	319-3286	2	Brace, Cover (Vertical)	11	098-6650-01	2	Label, Danger - High Voltage
7	319-3288	2	Brace, Cover (Horizontal)				

PowerCommand Control

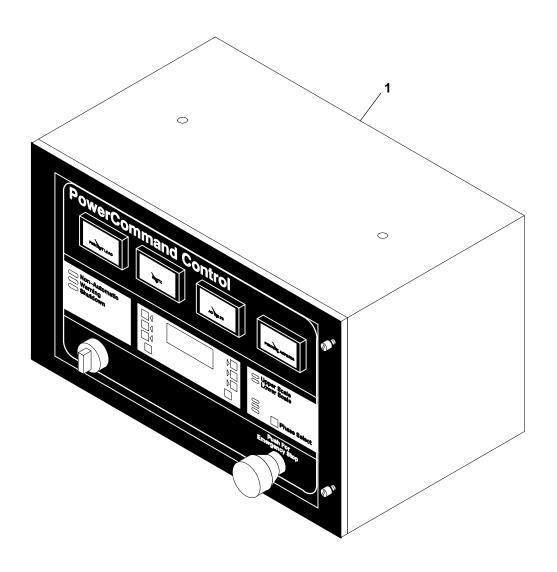

H530 H532 H536 H555

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
1	_	1	Control, PowerCommand

Note: For PowerCommand Control Service Replacement Parts, Order PowerCommand Control For Generator Sets Parts Catalog Number 960–0205B.

QTY USED **PART**

DESCRIPTION


REF

NO.

PART


NO.

Common Alarm Board Generator Sets With Detector Control

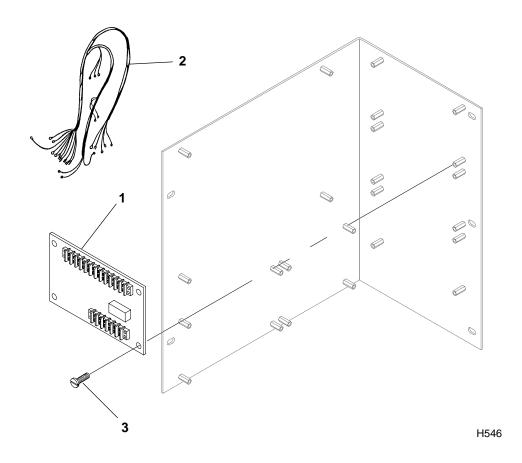


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4218-02	1	Board, Printed Circuit – Common Alarm (A27)	3	812–0063	4	Screw, Machine – Round Head (#6–32 x 1/2")
2	338–3033	1	Harness, Wiring (12 Wire) (A27 to A11)				

Low Battery Voltage Sensor

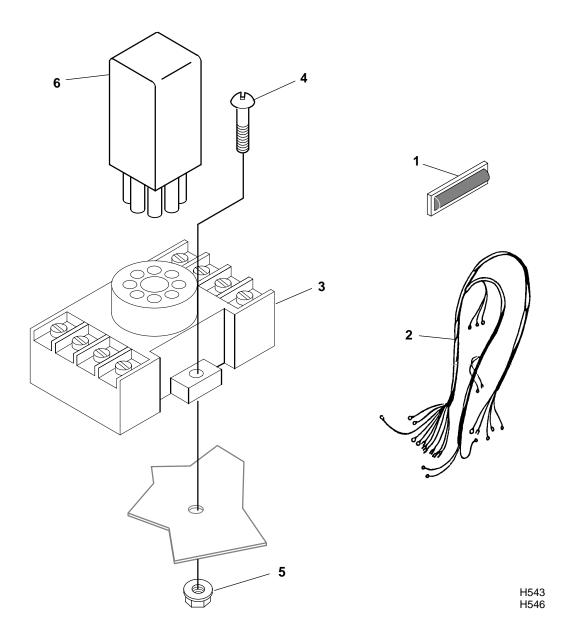


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	322-0431-08	1	Lens, Indicator Light (Marked	5	870-1221	2	* Nut, Hex - W/ET (#8-32)
			"Lo Battery")	6	305-0901	1	* Sensor – Low Battery
2	338–3034	1	* Harness, Wiring (4 Wire) (36") (K15 to A11)				Voltage (K15)
3	323-1410-03	1	* Base, Relay				
4	812–0084	2	* Screw, Machine – Round Head (#8–32 x 1")	* – 1	Not Used on A	All Models	

Control Heater Generator Sets With Detector Control

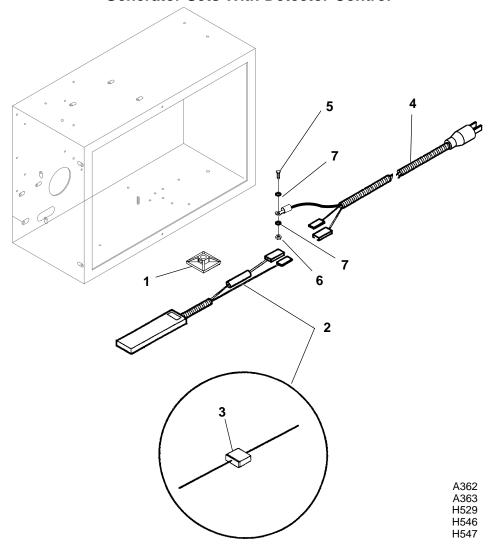

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION		
1	332–3338	2	*# Mount, Cable	5	800–0024	1	* Screw, Cap – Hex Head		
2			Heater Assembly, Control -				(5/16-18 x 3/4")		
			100 Watt (Includes Rectifier	6	870-0257	1	* Nut, Locking – Hex (5/16–18)		
			- Ref No. 3)	7	856-0008	2	* Washer, Lock - EIT (5/16")		
	300-4515-01	1	* 120 Volt						
	300-4515-02	1	# 240 Volt						
3	357-0114	1	*# Rectifier (3 Amp)	* – F	arts Used in	120 Volt C	Control Heater Application		
4	335-0173	1	* Cable, Heater (7')	# - Parts Used in 240 Volt Control Heater Application					


Control Box

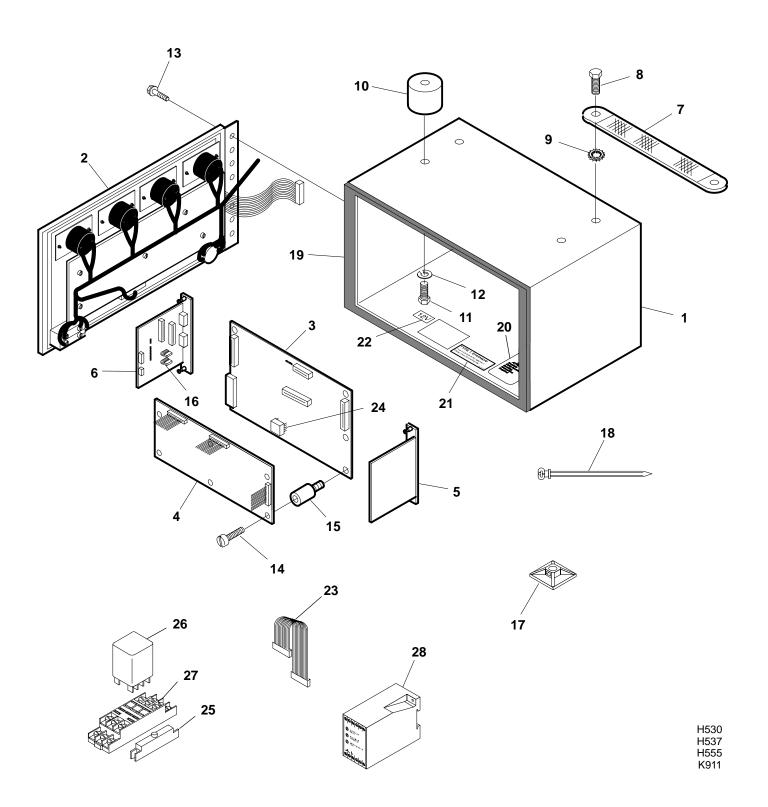

Control Box

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1687	1	Box Assembly - Control	16	321-0307-03	2	Fuse, 5 Amp, 32V (F1, F3)
_			(Includes Gasket)	17	332–2420	1	Mount, Cable Tie (Quantity
2		1	Door Assembly – Control	40	000 4445		Used as Required)
			(See Page 123 For Components)	18	332–1445	1	Tie, Cable (Quantity Used As Required) (Door Harness)
3	300-4079	1	Board, Printed Circuit -	19	895-0359	1	Gasket, Door
			Digital (A32)	20	098-6940	1	Label, Static Sensitive
4			Board, Printed Circuit – Analog (A33)	21	098–6118	1	Label, Cabinet – Type 1 Enclosure
	300-4080-01	1	Single Set	22	098-7452	3	Label, 12V
	300-4080-02	1	Paralleling Sets	23			Cable, Ribbon (Used On
5			Board, Printed Circuit –				Early PCC Models With
			Customer Interface (A34)				Removable Ribbon Cables)
	300–4462	1	Single Set		338–2931–02	1	Customer Interface to
	300-4462-01	1	Paralleling Sets				Digital
6	300–4083	1	Board, Printed Circuit – Engine Interface (A31)		338–2932–02	1	Customer Interface to Analog
7	337-0049	2	Strap, Bond		338-2932-01	1	Analog to Digital
8	800–0003	2	Screw, Cap – Hex Head (1/4–20 x 1/2")		338–2933	1	Analog to Engine Interface
9	856-0006	2	Washer, Lock - EIT (1/4")		338-2931-01	1	Engine Interface to Digital
10	402-0527	4	Isolator, Vibration	24			Kit, Language Chip –
11	800–0024	4	Screw, Cap – Hex Head (5/16–18 x 1/2")				EPROM (Includes Chip, Instruction Sheets and
12	850-0045	4	Washer, Lock (5/16")				Warranty)
13	821-0004	4	Screw, Self-Locking - Hex		300-4721-04	1	Single Set
			Washer Head		300-4721-16	1	Paralleling Sets
			(#10-32 x 5/16")	25	323-1411-01	2	Clip, Socket Mounting
14	815-0549	6	Screw, Machine - Pan Head	26	307-1056-01	3	Relay, Control
			 Cross Recessed W/ET 	27	323-1410-01	3	Socket, Relay
			(#6-32 x 1/4")	28	307-2869	2	Relay, Thermistor
15	332–3235	6	Standoff, Board – PC (#6–32 IT x #6–32 ET x 3/4")				

Control Door

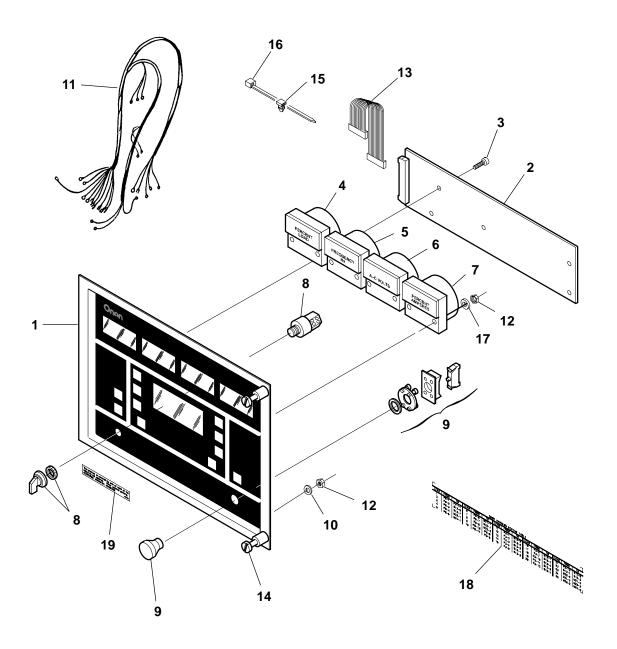


H530 H537 H555

Control Door


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4608-01	1	Door Assembly (Includes Membrane, Display Window and Parts Marked *) English Single Set		308–1045	1	Switch, Selector (Key Operated) (Includes 2 Keys) (Converts 308–0998 Knob Operated Selector Switch To A Key Operated
	300–4608–02	1	Paralleling Sets Spanish				Selector Switch) (Not Illustrated)
	300-4610-01 300-4610-02	1 1	Single Set Paralleling Sets		308–1046	2	Key, Replacement (Not Illustrated)
2	1010 02	•	Board, Printed Circuit – Display (A35)	9	308-0999	1	Switch, Pushbutton – Emergency Stop (S13)
	300-4481	1	Single Set	10	526-0417	2	* Washer, Flat (#4)
	300-4286	1	Paralleling Sets	11	338-2937	1	Harness, Wiring - Control
3	815–0550	5	Screw, Machine – Pan Head – Cross Recessed W/ET (#6–32 x 3/8")				Door (Includes Selector Switch and Emergency Stop Switch)
4	302-2012	1	Wattmeter (0-125 %) (M24)	12	870-1220	10	* Nut, Hex – W/ET (#4–40)
5	302–2010	1	Meter, Frequency (45–65 Hz) (M23)	13	338–2934	1	Cable, Ribbon (10–1/2") (A32 to A35)
6			Voltmeter, AC (M21)	14	406-0761-03	2	* Fastener, Door
	302-2009-01	1	0-300/0-600 Volt	15	332-3262	4	Mount, Tie - Cable
	302-2009-02	1	0-750 Volt	16	332-1445	4	Tie, Cable
	302-2009-03	1	0-5250 Volt	17	526-0257	8	Washer, Flat (#4)
	302-2009-04	1	0–15 kV	18	098-7276	1	* Label, Harness
7	302-2011	1	Ammeter (0-125 %) (M22)	19	098-7395	1	Label, Patent
8	308-0998	1	Switch, Selector – Run/Off/Auto (Knob Operated Switch) (S12)				

Audible Alarm Module Generator Sets With PowerCommand Control

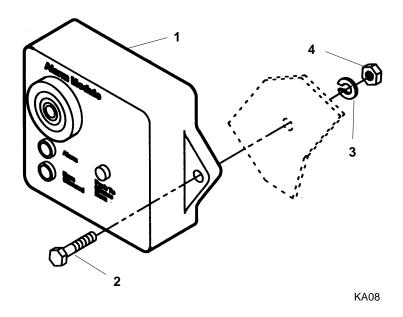


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3998-01	1 1	Module, Audible Alarm (DS2)	3	850-0040	2	Washer, Lock - Spring (1/4")
2	800–0006	2	Screw, Cap – Hex Head (1/4–20 x 7/8")	4	862–0001	2	Nut, Hex (1/4")

Ground Fault Relay DFLB, DFLC, DFLD, DFMB Begin Spec L

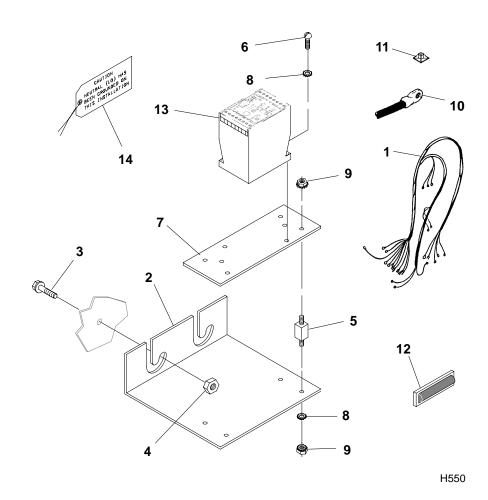

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3235	1	Harness, Wiring Generator Sets With	6	812–0081	2	Screw, Machine – Round Head (#8-32 x 5/8")
			Detector Control (7 Wire, 92")	7	319-0030	1	Plate, Mounting
			(GFA to A11, GND,	8	853-0005	8	Washer, Lock - ET (#8)
			NEUTRAL, CONT GND)	9	870-0221	10	Nut, Hex - W/ET (#8-32)
	338–3233	1	Generator Sets With PowerCommand Control (7 Wire, 119") (GFA to TB1,	10	226-4406-06		Cable, Generator (Generator Neutral to Generator Grounding Bolt) (24")
	004 0007		GEN NEUTRAL, GND)	11	332–2420	2	Mount, Cable Tie
2	301–6987	1	Bracket, Mounting	12	322-0431-09	1	Lens, Indicator Light (Amber
3	821–0017	2	Screw, Self-Locking - Hex Washer Head (5/16-18 x 1/2")				Color, Marked "GROUND FAULT") Generator Sets With Detector Control
4	870-0257	2	Nut, Hex - Self-Locking	13	307-2843	1	Relay (GFA)
			(5/16–18)	14	098-6943	1	Tag, Caution
5	402-0354	4	Mount, Shock				


Wiring Harness Engine to Control Generator Sets With PowerCommand Control

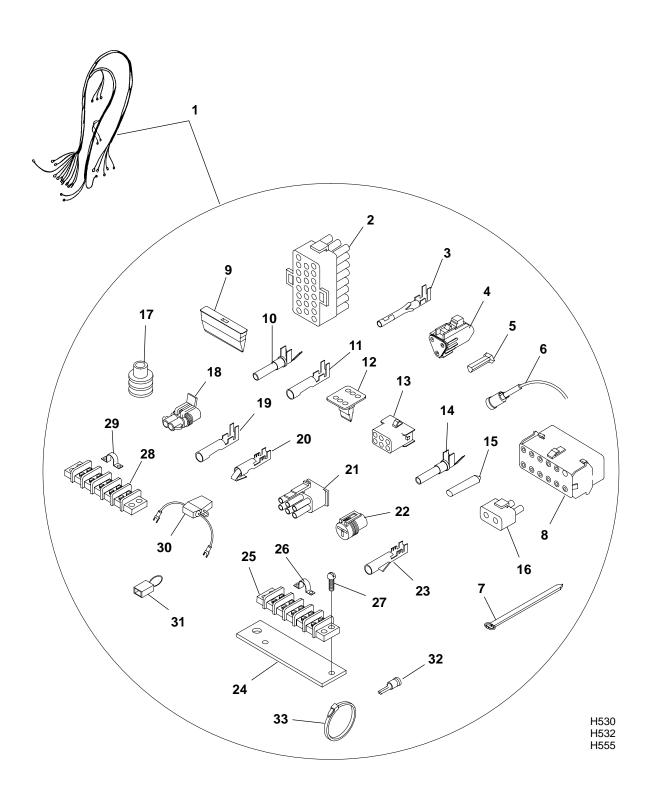

Wiring Harness Engine to Control Generator Sets With PowerCommand Control


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Engine To Control – Generator Sets	17	323–1445	10	*# Seal (Used In E2, E3, E4, E6, E7)
			With PowerCommand Control	18	323–1540	3	*# Socket, Connector (2 Place) (E2, E3, E4)
	338–2607	1	DFLB, DFLC, DFLD, DFMB Spec K and L (Includes	19	323–1444	4	*# Socket, Contact (Used In E6, E7)
	338–3336	1	Parts Marked *) DFLB, DFLC, DFLD, DFMB	20	332–3096–01	6	*# Socket, Contact (Used In E2, E3, E4)
			Begin Spec M (Includes Parts Marked #)	21	323–1643–01	1	*# Plug, Connector (6 Place) (P10)
2	323–1605–03	1	Plug, Connector (23 Place) *# Colored Grey (P5)	22	323–1666	1	*# Socket, Connector (3 Place) (E1)
	323-1605-02		*# Colored Natural (P4, P6)	23	323-1667	3	*# Socket, Contact (Used In E1)
3	323-1614-01		*# Socket, Contact (Used In P4,	24	0_0 .00.		Bracket, Mounting – Terminal
·	020 .0 0.		P5, P6)		319-2006-01	1	*# Marked "26" (T26)
4	323-1493	1	# Plug, Connector (3 Place)		319–2006–02		*# Marked "GND" (GND-ENG)
7	020 1400		DFLB, DFLC, DFLD, DFMB	25	332–0604	2	*# Block, Terminal (5 Place
			Begin Spec M (P3)	26	332–1043	8	*# Jumper
5	323-1503	4	# Wedge – DFLB, DFLC,	27	815–0538	4	*# Screw, Machine – Round
5	323-1303	1	DFLD, DFMB Begin Spec				Head - W/IT (#8-32 x 1/2")
6	338-2592-02	1	M (Used In P3) *# Cable, Magnetic Pickup (97")	28	332–0604	1	*# Block, Terminal (5 Place) (TB-BAT)
			(Includes Indented Sockets	29	332-1043	3	*# Jumper (Used On TB-BAT)
			Listed Below) (P1)	30	321–0339	1	*# Holder Assembly, Fuse (Used
	323-1614-01	3	*# Socket, Contact				On TB-BAT) (Includes
7	332-1445	1	*# Tie, Cable (Quantity Used As				Indented Parts Listed Below)
			Required)		321-0325	1	*# Holder, Fuse
8	323–1580	1	*# Housing, Connector (12 Place) (J12)		321-0307-07	1	*# Fuse – 20 Amp (Colored Yellow)
9	323-1581	1	*# Wedge (Ùsed In J12)	31	338-3285	2	*# Harness Assembly, Jumper
10	323-1491	5	*# Pin, Contact (Used In J12)	-			(Includes Parts Indented
11	323–1648	5	*# Socket, Contact (Used In P10)		323–1652	2	Below) (Used On E6, E7) *# Socket, Connector
12	323-1624	1	*# Wedge (Used In P7)		020 1002	_	(2 Place)
13	323–1623	1	*# Plug, Connector (6 Place)		323-1445	1	*# Seal, Cable
13	323-1023		- · · · · · · · · · · · · · · · · · · ·			4	
4.4			(P7)	20	323–1718	4 2	,
14	323–1492	6	Socket, Contact * DFLB, DFLC, DFLD, DFMB Spec K and L (Used In P7)	32	332–3496	2	# Pin, Contact – DFLB, DFLC, DFLD, DFMB Begin Spec M, (Used In TB1)
	323–1492	9	# DFLB, DFLC, DFLD, DFMB Begin Spec M (Used In P3, P7)	33	332–2774	1	# Tie, Cable (Quantity Used As Required)
15	323–1615	1	*# Plug (Used In P4, P5, P6) (Quantity Used As Required)				2607 Engine Wiring Harness 3336 Engine Wiring Harness
16	323–1637	2	*# Socket, Connector (2 Place) (E6, E7)				3 33

Wiring Harness Engine to Control Generator Sets With Detector Control

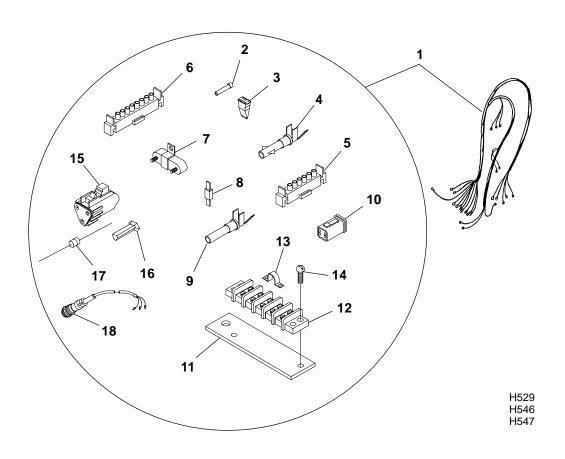


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Engine To Control – Generator Sets	9	323–1492	9	# Socket, Contact (Used In E1, P3)
	338–2995	1	With Detector Control DFLB, DFLC, DFLD	10	323–1546	1	# Plug, Connector (4 Place) (E1)
			Spec K Through L	11	240 2006 04	4	Bracket, Mounting – Terminal *# Marked "26" (T26)
			DFMB Spec K Through M+ (Includes Parts Marked *)		319–2006–01 319–2006–02		*# Marked "26" (T26) *# Marked "GND" (GND-ENG)
	338-3347	1	DFLB, DFLC, DFLD	12	332-0604	2	*# Block, Terminal (5 Place)
			DFMB Begin Spec M	13	332-1043	8	*# Jumper
			(Includes Parts Marked #)	14	815-0538	4	*# Screw, Machine - Round
2	323-1591	1	# Plug, Seal (Used In E1)				Head – W/IT (#8–32 x 1/2")
3	323-1591	1	# Plug, Seal (Used In E1)	15	323-1493	1	# Plug, Connector (3 Place)
4	323-1200	11	*# Socket, Contact (Used In J1,				(P3)
			J2)	16	323-1503	1	# Wedge (Used In P3)
5	323-1304	1	*# Housing, Connector (6 Place)	17	359-0051	1	*# Diode
			(J2)	18	338-1765-04	. 1	* Cable, Magnetic Pickup (60")
6	323–1306	1	*# Housing, Connector (8 Place) (J1)	+ – 1	Not used on all	DFMB	Spec M Models
7	353-0094-01	1	*# Resistor (R1)				2995 Wiring Harness
8	357-0030	1	*# Rectifier (CR1)				3347 Wiring Harness

Skid

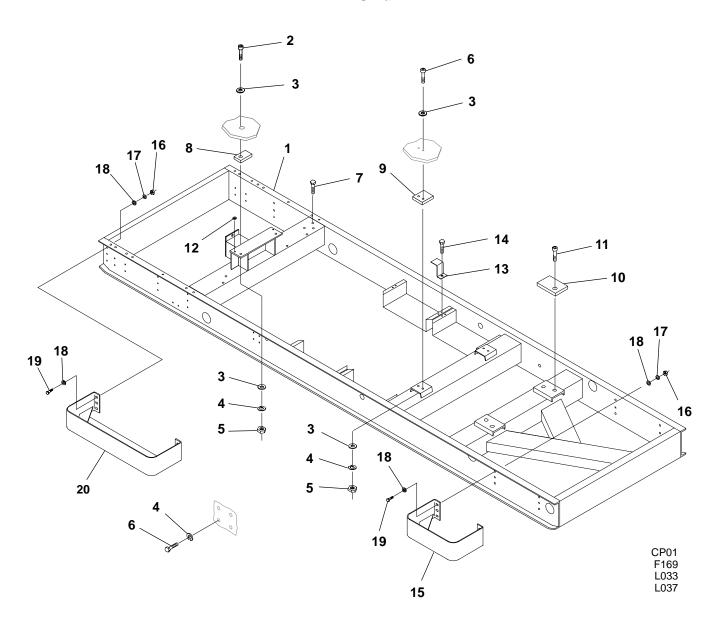

1	403–3141	1	Skid	15	130–4389	2	Bumper
2			Screw, Cap – Hex Head	16			Nut, Hex (1/2-13)
	800-0163	2	(3/4-10 x 4)		862-0016	24	DFLB
	800-0164	2	* (3/4–10 x 4-1/2)		862-0016	12	DFLC, DFLD, DFMB
3	526-0027	12	Washer, Flat (3/4	17			Washer, Lock (1/2)
4	850-0079	14	Washer, Lock (3/4)		850-0060	24	DFLB
5	862-0008	6	Nut, Hex (3/4-10)		850-0060	12	DFLC, DFLD, DFMB
6	800-0158	12	Screw, Cap - Hex Head	18			Washer, Flat (1/2)
			(3/4–10 x 2-3/4)		526-0219	48	DFLB ` `
7	821-5004-03	7	Screw, Cap – Hex Head		526-0219	24	DFLC, DFLD, DFMB
			(3/8–16 x 1.00)	19			Screw, Cap – Hex Head
8	403-3204	2	* Spacer – Engine (Front)				(1/2-13 x 1-3/4)
9	403-3205	2	* Spacer – Engine (Rear)		800-0093	24	DFLB
10	403-3206	2	* Spacer – Generator		800-0093	12	DFLC, DFLD, DFMB
11	800-0316	2	* Screw, Cap – Hex Head	20	130-4301	2	Bumper – DFLB
			(1-1/4-7 x 4-1/2)				·
12	526-0174	8	* Washer, Flat (3/8)	* _	Parte I lead o	n Prima P	ower Remote Radiator
13	416-0850	8	Bracket, Battery		Generator Se		ower remote radiator
14	800-0048	8	Screw, Cap – Hex Head		Generalor Se	:15	
			(3/8–16 x 3/4)				
			*				

Auxiliary Terminal Block Generator Sets With Detector Control

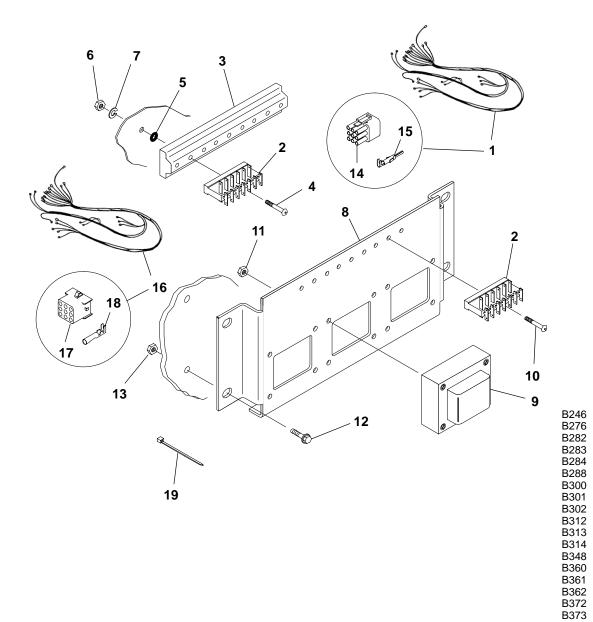


130

Auxiliary Terminal Block Generator Sets With Detector Control


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Auxiliary	7	850-0025	3	Washer, Lock – Spring (#10)
			Terminal Block	8	319–1498	1	< Bracket, Mounting
	338–2530	1	190–240, 380–480, Volt 12 Lead	9	315–0717	3	< Transformer (PTW, PTV, PTU)
			Reconnectable	10	812-0079	2	< Screw, Machine – Round
			Generators (AUX to	10	012-0079	2	Head (#8–32 x 1/2")
			TB21, VR21, A16, X,	11	870-0221	12	< Nut, Hex – W/ET (#8–32)
				12	821–0016	4	
			XX, P2, P3, P4, 5, 8, 7, 4, 6) – DFLB and DFLC	12	021-0010	4	Screw, Self-Locking - Hex Washer Head (5/16-18 x
			Spec R~				3/4")
	338–2713	1	240–480 Delta, 380–480	13	870-0257	4	Nut, Locking – Hex Flange
			600 Volt Wye Generators	4.4	222 4044 04	4	Head (5/16–18)
			(Includes Parts Marked *) (AUX to TB21, VR21,	14	323–1644–01	1	# Plug, Connector (9 Place) (P1)
			A16, X, XX, P2, P3,	15	323-1647	8	# Pin, Contact
			P4, TB2, TB1,8,7,6,5)	16	338-3337	1	Harness, Wiring -
			DFLB, DFLC, DFLD,				Transformer (Includes
			DFMB Spec K Through L				Parts Marked +) DFLB,
	338-2867	1	4160-2400 Volt Wye				DFLC, DFLD, DFMB Begin
			Generators (AUX to				Spec M (J1 to PTW, PTV,
			TB21, VR21, A16, X,				PTU)
			XX, P2, P3, P4, TB1)	17	323-1644-02	1 1	+ Housing, Connector (9 Place)
	338-3360	1	380-480, 600 Volt, Wye				DFLB, DFLC, DFLD, DFMB
			Generators (Includes				Begin Spec M (J1)
			Parts Marked #) (AUX to	18	323-1648	9	+ Socket, Contact -
			8, 7, 6, 5, P1, X, XX, P2,				DFLB, DFLC, DFLD, DFMB
			P3, P4, A16, VR21,				Begin Spec M
			TB21) – DFLB, DFLC,	19	332-1445	1	*# Tie, Cable (Quantity Used As
			DFLD, DFMB Begin				Required)
			Spec M				. ,
2	332-3007	3	*#< Block, Terminal (AUX)	~ No	t used on all D	FLC Sp	ec R Models
3	232-3536	1	*#< Base, Terminal Block				g Harness 338–2713
4	812-0085	3	*#< Screw, Machine - Round				g Harness 338–3360
			Head (#8-32 x 1-1/8")				g Harness 338–3337
5	509-0065	1	*# Seal, O-Ring		Not Used On A		
6	870-0221	3	Nut, Hex - W/ET (#8-32)				

Electronic Governor

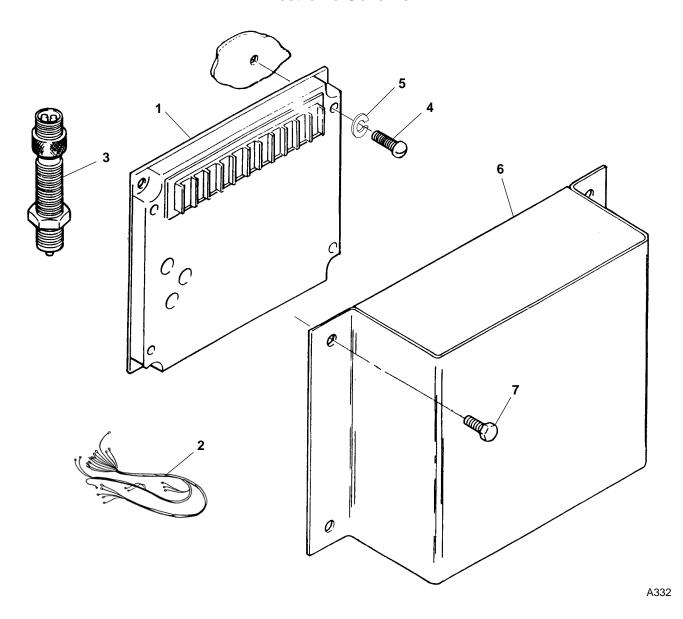


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	151–0637–01 338–2526	1	Control, Governor Harness, Wiring – Electronic	5	850-0030	4	Washer, Lock – Spring (#10) DFLB Spec K Through M.
_	000 2020	'	Governor (7 Wire, 110") (A16 to P1, GND, T26,				DFLC, DFLD, DFMB Spec K Through N
			ACT) – DFLB, DFLC, DFLD	6	150-2213	1	Cover, Governor Control
			Spec K Through L and	7	821-5002-03	4	Screw, Self-Locking - Hex
			DFMB Spec K Through M*				Washer Head
3	151-0411	1	Pickup, Magnetic				1/4–20 x 1/2"
4			Screw, Machine - Round				DFLB Spec K Through M
			Head				DFLC, DFLD, DFMB
	813-0103	4	10–32 x 3/4"				Spec K Through L
			DFLB Spec K Through M		821-6002-03	4	M6 x 1 x 20mm
			DFLC, DFLD, DFMB				DFLB Begin Spec N
			Spec K Through N				DFLC, DFMB Begin
	821-6001-03	4	M5 x .8 x 16mm				Spec P
			DFLB Begin Spec N				
			DFLC, DFMB Begin Spec P	* No	t used with all D	OFMB Spe	ec M models.

Generator Mounting

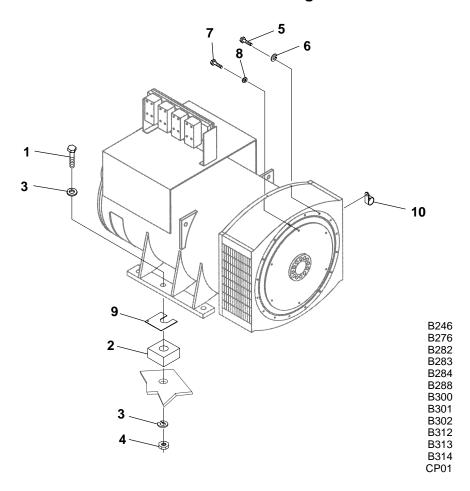

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Screw, Cap – Hex Head	8	526-0416	6	Washer, Flat (5/8")
	800-0304	2	Model HC6 Generators (1–1/4–7 x 5–1/2")	9			Shim (Quantity Used As Required)
	800-0303	2	Model HC7 Generators				Model HC6 Generators
			(1-1/4-7 x 3-1/2")		232-3552-01	4	1/64" Thk
2	232-3551	2	Spacer – Model HC6		232-3552-02	2 4	5/64" Thk
			Generators		403-2921	4	7/64" Thk
3	526-0445	4	Washer, Flat (1-3/8" ID x				Model HC7 Generators
			3" OD x .136" Thk)		232-3941-01	4	2.6 mm Thk
4	862-0017	2	Nut, Hex (1-1/4-7)		232-3941-02	4	1.9 mm Thk
5			Screw, Cap - Hex Head -		232-3941-03	4	.6 mm Thk
			Grade 8		232-3941-04	4	4.8 mm Thk
	800–0576	16	Model HC6 Generators (1/2–13 x 1–3/4")	10	332–3196	1	Clamp, "J"
	800-0596	16	Model HC7 Generators	NOT			used with Models DFLB.
_			(1/2–13 x 2–1/4")				used with Models
6	850–0060	16	Washer, Lock – Spring (1/2")		DFLB, DFL	.C, DFLD	, and DFMB.
7	805–0035	6	Bolt, Place (5/8-11 x 1-1/2") Grade 8				


Generator Louvre

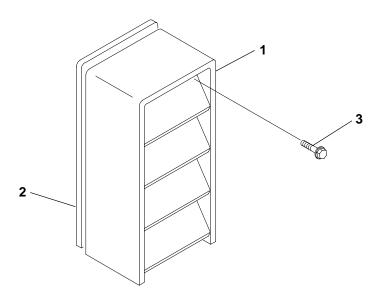

J047

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Louvre	2			Gasket, Louvre
	234-0900-01	2	Frame 6 Generators		234-0901-0)1 2	Frame 6 Generators
	234-0900-02	2	Frame 7 Generators		234-0901-0)2 2	Frame 7 Generators
				3	821-2023	12	Screw, Self-Locking - Hex
							Washer Head (M5 x 20mm)


Fuel Pressure Gauge

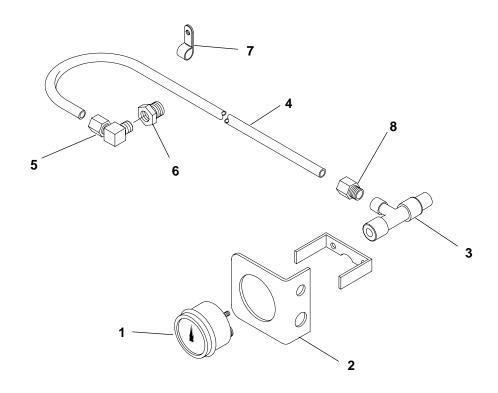

H095

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0128	1	Gauge, Fuel Pressure (Includes Mounting	6	505–0007	1	Bushing, Pipe – Reducer (1/4" to 1/8")
			Hardware)	7	518-0350	2	Clamp, Insulated
2	193-0029	1	Bracket, Mounting	8	502-0067	1	Connector, Compression -
3	504-0064	1	Valve				Male
4	149-2291-02	2 1	Tube, Copper (82")				
5	502-0034	1	Elbow, Compression – 90 Deg (Includes Nut and Ring)				

Woodward Governor

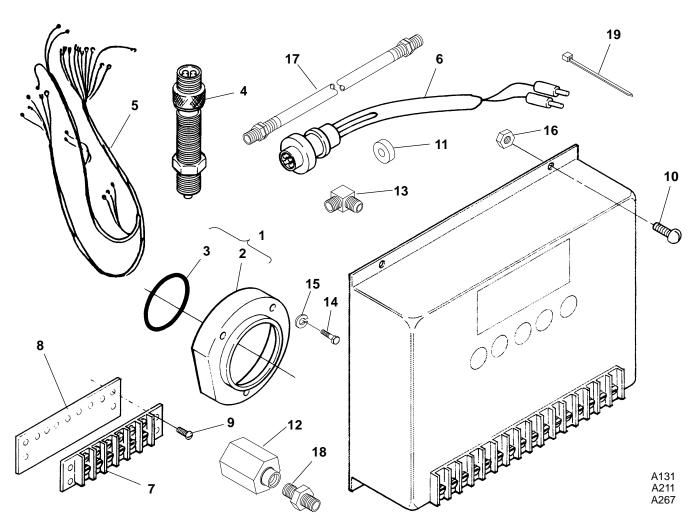

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	149–2287	1	Pump, Fuel (Includes Fuel Pump Plug and O-Ring	12	502–1307	1	Adapter, Female Pipe (1/4" Female x 1/2–20 Male)
2	150–2334	1	Seal – Ref. No. 2 and 3) Plug – Fuel Pump EFC	13	502–1308	1	Elbow, Male – 90 Deg (1/4" Male x 3/4–16 Male Flare)
3	509-0272-02	1	Cavity Seal, O-Ring – EFC Cavity	14	800–0072	4	Screw, Cap – Hex Head (7/16–14 x 1–1/4")
4	151–0411	1	Plug * ⊐ Pickup, Magnetic	15	850–0055	4	Washer, Lock – Spring (7/16")
5	338–2526	1	*= Harness, Wiring – Woodward Governor (7 Wire, 110") (A16 to P1,GND,T26,ACT)	16	864–0017 864–0020–01	1 1	Nut, Hex – Jam (5/16–24) Right Handed Threads Left Harnded Threads
0	000 0500	4	DFLB, DFLC, DFLD, DFMB Spec K Through L	17 18	501–0537–46 502–1045–04	5 1	Hose, Fuel Pump (15") Connector, Male (3/8–18
6	338–2538	1	* ⊫Harness, Wiring – Adapter – Woodward Governor To Engine Harness (12") (ACT to ACT)	19	332–1445	1	Pipe x 3/4–16 Flare) * □ Fie, Cable (Quantity Used As Required)
7	332-0699	2	⊫ lock, Terminal (6 Place)	* —	Used With Ad	der Co	de A211 – Electronic governor with
8	332-0970	2	⊐S trip, Marker				o, hydraulic actuator, adjustable for
9	822-1050	4	□Screw, Machine – Round Head (#8–32 x 3/4")			-	isochronous) to 5%
10	813–0103	4	* Screw, Machine – Round Head (#10–32 x 3/4")		magnetic spee	d pickup	de A267 – Electronic governor with b, hydraulic actuator, load sharing, droop of 0% (isochronous) to 5%
11	151 0662 02	1	Spacor (21/64" ID v 1/4")		and load shari	na withir	5 5 0/

and load sharing within 5%


11

151-0663-02

1


Spacer (21/64" ID x 1/4")

Paralleling Interconnect Terminal Block

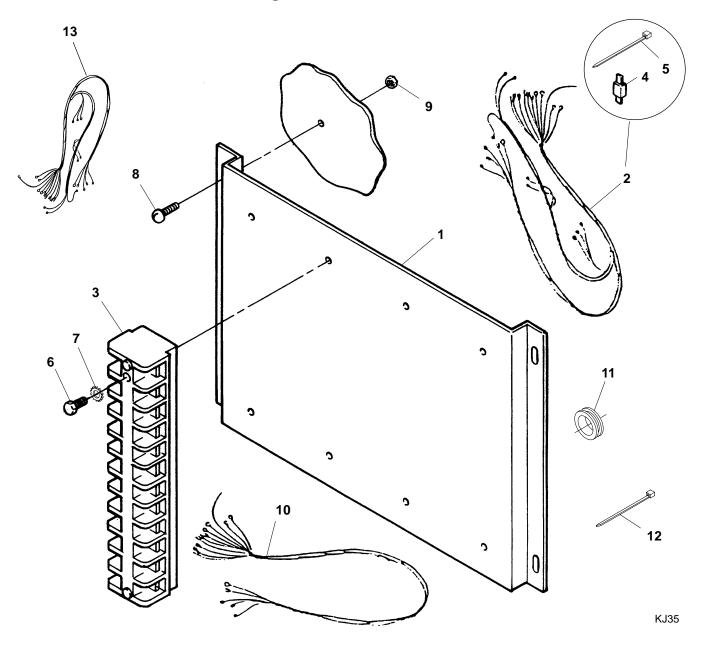

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1137	1	Panel, Mounting	7	853-0005	8	Washer, Lock - W/ET (#8)
2			Harness, Wiring (Includes Terminal Block, Diode, and	8	813–0100	4	Screw, Machine – Round Head (#10-32 x 1/2")
			Cable Tie – Ref No. 3, 4,	9	870-0131	4	Nut, Hex - W/ET (#10-32)
	338–2590	1	and 5) 84" – TB11 to CR1, VR21,	10	338–2172	1	Harness, Wiring – Governor (Shielded) (5 Wire, 39")
			CB21, ELM, A11, and GND	11	508-0051	1	Grommet, Rubber (Fits 2" Hole) (Control Knockout)
	338–3519	1	156" – TB11 to CR1, VR21, TB1, A11, and	12	332–0942	1	Tie, Cable (Quantity Used As Required)
			GND – DFMB	13	338-3520	1	Harness, Terminal Block
3	332-2315	4	Block, Terminal (TB11)				(From TB301 to U1, V1,
4	357-0030	1	Diode (6 Amp) (CR1)				W1, U2, V2, and W2) -
5	332–1445	1	Tie, Cable (Quantity Used As Required)				DFMB
6	812–0085	8	Screw, Machine - Round Head (#8-32 x 1-1/8")				


Detector Control

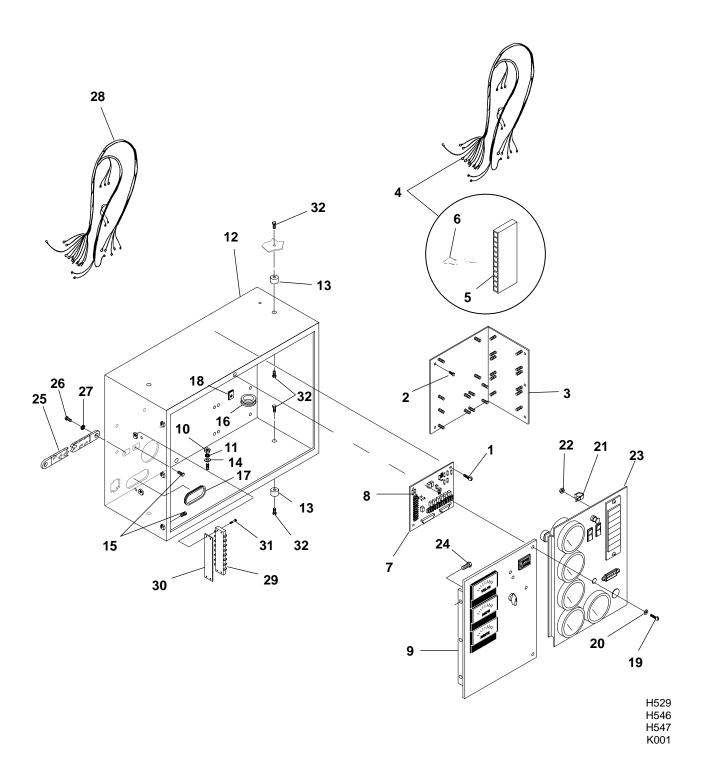

Detector Control

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Screw, Pan Head - Cross	13	402-0527	4	Isolator, Vibration
			Recessed (#6-32 x 1/2")	14	526-0018	1	Washer, Flat (1/4")
2	815–0544 815–0937 821–0004	4 4 5	7 Light Control 12 Light Control Screw, Self–Locking – Hex	15	821–5000–05	3	Screw, Self-Locking – Hex Washer Head (#10-32 x 1/2")
			Washer Head (#10-32 x	16	508-0001	1	Grommet (Fits 1–1/16" Hole)
			5/16")	17	508-0051	1	Grommet (Fits 2" Hole)
3	301-8851	1	Bracket, Mounting - Used On	18	406-0332	2	Receptacle, Fastener
			Some Early Models	19	406-0333	2	Stud, Fastener
4	338-3252	1	Harness, Wiring – DC Control	20	406-0334	2	Washer, Stud Retainer
			Door Assembly to Engine	21	332-0052	2	Clip, Wire
			Monitor Board (Includes	22	870–0131	4	Nut, Hex – W/ET (#10–32)
_	222 4200	4	Connector Housing and Contact Pins) Housing, Connector (12	23	_	1	Door, Assembly – Control – DC (See Page 141 For
5	323–1308	1	Place) (J4)	24	821-0004	3	Components) Screw, Self–Locking – Hex
6 7	323–1302	11	Pin, Contact Board Assembly, Printed	24	62 I <i>-</i> 0004	3	Washer Head (#10–32 x 5/16")
•			Circuit – Engine Monitor	25			Strap, Ground
			(Includes Fuses) (A11)		337-0049	1	Sets Without AC Meters
	300-4295	1	7 Light Control		337–0049	3	Sets With AC Meters
8	300–4297	1	12 Light Control Fuse	26			Screw, Cap – Hex Head (5/16–18 x 1/2")
			Cylinder Shaped (Used		800-0024	1	Sets Without AC Meters
			On Some Early Models)		800-0024	3	Sets With AC Meters
	321-0270	2	20 Amp (F1,F2)	27			Washer, Lock – EIT (5/16")
	321-0231	1	15 Amp (F3)		856-0008	1	Sets Without AC Meters
	321-0094	2	5 Amp (F4,F5)		856-0008	3	Sets With AC Meters
			U Shaped	28	338–2278	1	Harness, Wiring – AC Control
	321-0307-03		5 Amp (Tan) (F4, F5)				Door Assembly to TB21
	321-0307-06	1	15 Amp (Light Blue) (F3)				Terminal Block (Includes
	321-0307-07	2	20 Amp (Yellow) (F1, F2)				TB21 Terminal Block)
9	_	1	Door Assembly – Control – AC (See Page 142 For	29	332–0607	1	Block, Terminal – 12 Place (TB21)
			Components)	30	332–2723	1	Strip, Marker
10	871–0015	1	Nut, Hex (1/4–20)	31	815-0901-06	2	Screw, Machine – Hex Head
11 12	853–0008	1	Washer, Lock – ET (#10) Box, Control	32			(#6–32 x 5/8") Screw, Self–Locking – Hex
			Sets Without AC Meters				Washer Head
	301–8065	1	Sets With PC Boards Mounted On 301–8851		821–0014	1	(5/16–18 x 1/2") Sets Without AC Meters
	319–3030	1	L-Shaped Bracket Sets With PC Boards Mounted To Control Box		821–0014	7	Sets With AC Meters
	301–8065	1	Mounted To Control Box Sets With AC Meters				


DC Control Door Assembly Generator Sets With Detector Control

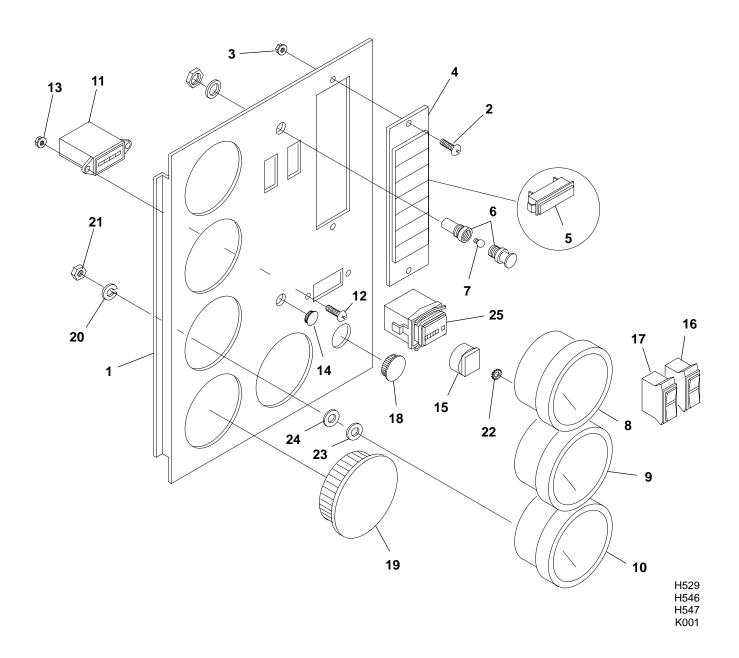

DC Control Door Assembly Generator Sets With Detector Control


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301–9055–02	1 1	Door, Control – DC Doors With Three Round Gauge Holes	13	870–0183	2	Nut, Hex – W/ET (#6–32) Used On Some Earlier Models
0	301–9055–01		Doors With Five Round Gauge Holes	14	517–0131	1	Plug, Hole (Fits 3/8" Hole) Used On Some Early
2	815–0385	2	Screw, Machine – Round Head (#6–32 x 1/2")	15	193–0250	2	Models Resistor (Mounted on Oil
3 4	870–0183	2	Nut, Hex – W/ET (#6–32) Light Assembly, Indicator (Includes Wiring Harness and		.00 0200	_	Pressure and Water Temperature Gauges) (R12, R13)
	322-0359-02 322-0360-02		Connector Housing) (A12) 7 Light Assembly 12 Light Assembly	16	308–1010	1	Switch, Rocker – Lamp Test/Reset Panel Lamp – Preheat (S11)
5	322-0360-02		Light, Indicator – Replacement	17	308–1011	1	Switch, Rocker – Run/Stop/Remote (S12)
6 7	322–0361 322–0017	1 1	Light, Panel (DS11) Bulb, Panel Light – Replacement	18	517–0137	1	Plug, Hole (Fits 7/8" Hole) Used On Some Early Models
8	193-0466	1	Gauge, Oil Pressure (M11)	19	517-0301	1	Plug, Hole (Fits 2" Hole)
9	193–0351	1	Gauge, Water Temperature (M12)				Quantity Used As Required – Used On Some Early
10	302-1642	1	Voltmeter (M13)				Models
11	302-0885	1	Meter, Time Totalizing (M14)	20	850-0030	8	Washer, Lock – Spring (#10)
			Used On Some Earlier Models	21 22	871–0010 853–0008	16	Nut, Hex – Brass (#10–32) Washer, Lock – ET (#10)
12	815–0385	2	Screw, Machine – Round Head (#6–32 x 1/2") Used	23	526–0409	1 8	Washer, Nylon (3/8" OD x .194" ID x 1/8" Thk)
			On Some Earlier Models	24	526-0049	16	Washer, Flat (#10)
				25	302-2002	1	Hourmeter (M14)

AC Control Door Assembly Generator Sets With Detector Control

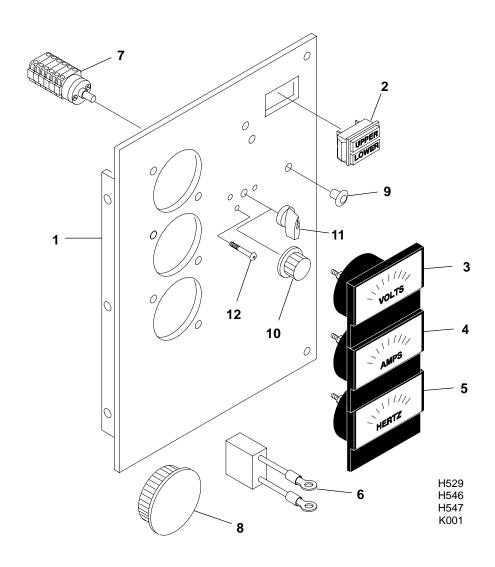


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301–9054–01	1	Door, Control – AC With Four Meter Holes	6	355–0189	1	Capacitor – Voltmeter (.1 Mfd., 500 WVDC) (C21)
	301-9054-04	1	With Six Meter Holes	7	308-1052	1	Switch, Rotary - Voltmeter/
2	322–0363	1	Light, Indicator – Upper/ Lower Scale (DS21, DS22)				Ammeter (Includes Knob) (S21)
3			Voltmeter (M21)	8	517-0302	1	Plug, Hole (Fits 2-1/4" Hole)
	302-1148	1	Scale Reads 0-300/600	9	517-0131	1	Plug, Hole (Fits 3/8" Hole)
	302-1753	1	Scale Reads 0-750				Used On Some Early
	302-1938	1	Scale Reads 0–5200				Models
4			Ammeter (M22)	10	303-0032	1	Knob, Rotary Switch (Earlier
	302-1724	1	Scale Reads 0-250/0-500				Round Style) Used On
	302-1725	1	Scale Reads 0-375/0-750				Some Early Models
	302-1799	1	Scale Reads 0-1500/0-3000	11	308-1082	1	Knob, Rotary Switch (Later
	302-1800	1	Scale Reads 0-2000/0-4000				Wedge Style)
	302-1908	1	Scale Reads 0-3000/0-6000	12	815-0875-02	3	Screw, Machine – Round
5	302–1968	1	Meter, Frequency (M23)				Head (M4 x 8mm)

Control Heater Generator Sets With PowerCommand Control

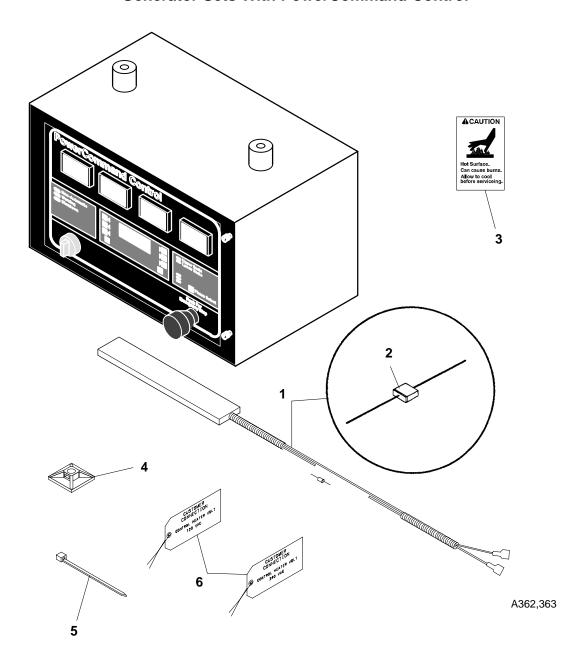


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater Assembly, Control –	4	332-3338	1	Mount, Cable
			100 Watt (Includes Rectifier)	5	332-0942	1	Tie, Cable (Quantity Used As
	300-4515-01	1	120 Volt				Required)
	300-4515-02	. 1	240 Volt	6			Tag, Heater
2	357-0114	1	Rectifier (3 Amp)		098-6927	1	120V
3	098–6195	1	Label, Caution		098–6828	1	240V

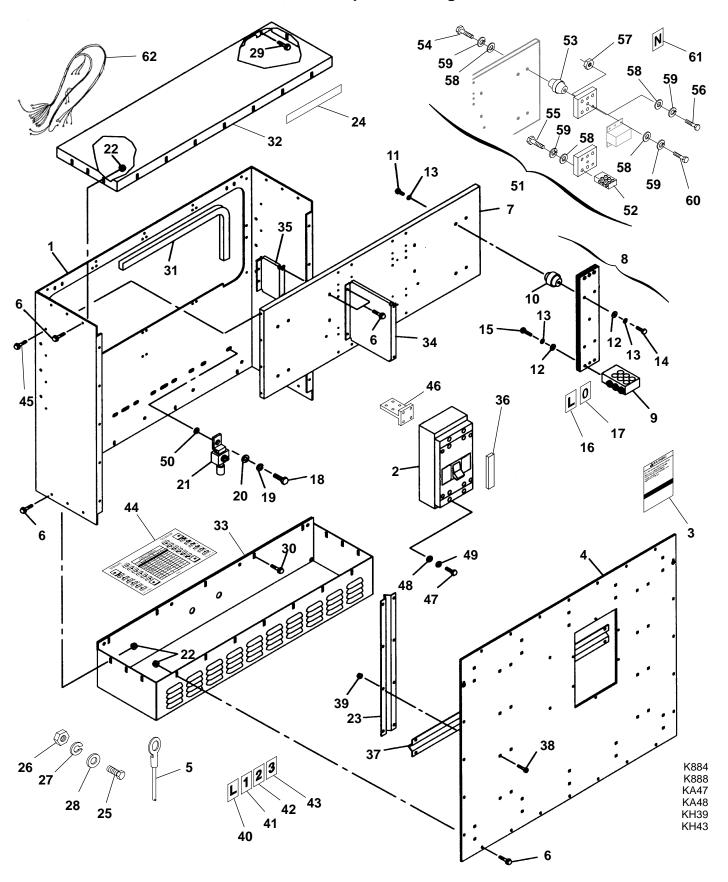

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1957	1	Box, Circuit Breaker Breaker, Circuit (Includes Mounting Screws) 3 Pole (CB21)	5			Lead – Circuit Breaker (Quantity Used As Required) (Without Markings) (#1/0 Wire)
			100% rated circuit breakers. Frame size CM2000–HH circuit breakers		226-4406-05	1	Used with Circuit Breakers With 4 Wire Ground Fault – 3/8" Ring Terminal End to 1"
			include bus bars				Stripped End (39")
			(T–bars).		226-4498-03	1	Used with All Other
			Standard				Circuit Breakers –1/2"
	320–1783	1	Frame Size CM1600-HH				Ring Terminal End to 1/2" Ring Terminal End
	320-1783-02	2 1	Frame Size				(30")
			CM2000-HH	6	821–0010	44	Screw, Self-Locking - Hex
			With 4 Wire Ground Fault				Washer Head (1/4–20 x 1/2")
	320–1783–12	! 1	Frame Size CM1600–HH	7	319–1962	1	Bracket, Mounting – Circuit Breaker
	320–1783–14	1	Frame Size CM2000-HH	8	300–4480–01	1	Bar Assembly, Neutral (Includes Neutral Bars and
			With 24 Volt Shunt				Parts Marked *)
			Trip	9	332–3303–01	1	* Lug, Solderless
	320–1783–04	1	Frame Size	10	332-2744-07	4	* Standoff, Insulator
	320-1783-06	5 1	CM1600–HH Frame Size	11	800–0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")
			CM2000-HH	12	526–2120	7	* Washer, Flat (M10)
			With Auxiliary	13	850–2010	11	* Washer, Lock - Spring (M10)
			Contacts and Bell	14	800–0052	4	* Screw, Cap – Hex Head
	000 4700 47	, ,	Alarm	4.5	000 0000	0	(3/8–16 x 1–1/2")
	320–1783–17		Frame Size CM1600-HH	15	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)
	320–1783–19) 1	Frame Size CM2000–HH	16	098–5854–06	1	* Label, Marker (10 Characters Per Card) Marked "L"
			With Auxiliary Contacts, Bell	17	098–5854–10	1	* Label, Marker (10 Characters Per Card) Marked "0"
			Alarm and 24 Volt Shunt Trip	18	800–0050	1	Screw, Cap – Hex Head (3/8–16 x 1")
	320-1783-08	3 1	Frame Size	19	850-0050	1	Washer, Lock – Spring (3/8")
			CM1600-HH	20	526-0029	2	Washer, Flat (3/8")
	320-1783-10	1	Frame Size	21	332-2001	1	Lug, Solderless
			CM2000-HH	22	870-0494	26	Nut, Self–Retaining –
3	098–2304	1	Label, Warning				Floating (1/4–20)
4	319-1959-01	1	Cover, Circuit Breaker	23	319–2398	2	Brace, Cover (Vertical)


^{* -} Parts Included In 300-4480-01 Neutral Bar Assembly

Continued...

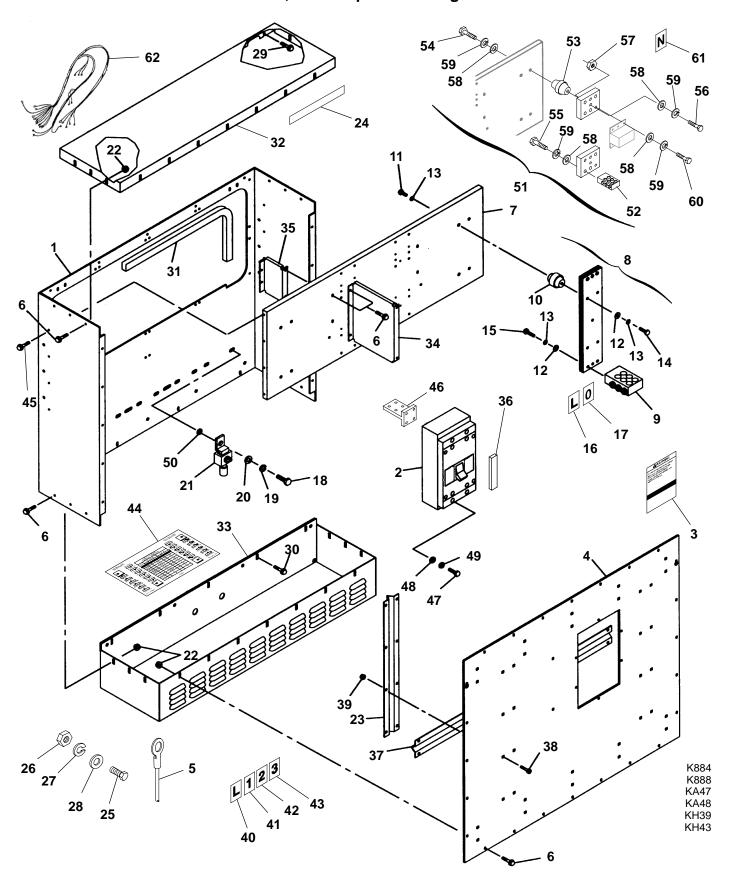


Continued...

24	091–0002	1	Strip, Copper (Used for wrapping ends of leads	43	098–5854–09	1	Label, Marker (10 Characters Per Card) Marked "3"
			before securing to circuit	44	098-6865	1	Label, Conduit Locations
			breakers and neutral bar lug) (Quantity Used As	45	821–0030	6	Screw, Self–Locking – Hex Washer Head (3/8–16 x 1")
			Required)	46			Bar, Bus (T-Bar) (Includes
			The following four				Mounting Hardware)
			hardware items are used		337–2789	4	Sets With CM1600–HH
			to fasten the load leads to				Breakers
			the generator and neutral		337–2789	1	Sets With CM2000–HH
			bar. Quantity used as				Breakers
			required.	47	800–0033	4	Screw, Cap – Hex Head
25	800–0094	1	Screw, Cap – Hex Head				(5/16-18 x 2")
			(1/2-13 x 2")	48	526–0115	4	Washer, Flat (5/16")
26	862-0005	1	Nut, Hex (1/2-13)	49	850-0045	4	Washer, Lock – Spring
27	850-0060	1	Washer, Lock – Spring (1/2")				(5/16")
28	526-0219	1	Washer, Flat (1/2")	50	856-0010	1	Washer, Lock - EIT (3/8")
29	821-0018	5	Screw, Self-Locking - Hex	51	337-2794	1	Bar Assembly, Neutral
			Washer Head (1/4-20 x				(Includes Neutral Bars and
			5/8")				Parts Marked #) (Note:
30	821-0011	5	Screw, Self-Locking - Hex				Used With Circuit Breaker
			Washer Head (1/4–20 x				Applications With 4 Wire
			7/8")				Ground Fault)
31			Edging – Bulk (Order By The	52	332-3303	1	# Lug, Solderless
0.			Foot – 3 Feet Required)	53	332-2744-07	2	# Standoff, Insulated
	508-1092	_	Used with Circuit	54	800-0048	2	# Screw, Cap – Hex Head
	000 1002		Breakers With 4 Wire	0.	000 0010	_	(3/8–16 x 3/4")
			Ground Fault	55	800-0053	3	# Screw, Cap – Hex Head
	508-1109	_	Used With All Other	00	000 0000	Ū	(3/8–16 x 1–3/4")
	000 1100		Circuit Breakers	56	800-0051	2	# Screw, Cap – Hex Head
32	319–1961	1	Panel – Top	00	000 0001	_	(3/8–16 x 1–1/4")
33	319–1925	1	Panel – Bottom	57	862-0003	6	# Nut, Hex (3/8")
34	319–1926–02	1	Brace, Cover	58	526-0030	22	# Washer, Flat (3/8")
35	319–2316–02	1	Brace, Mounting Bracket –	59	850-0050	13	# Washer, Lock – Spring (3/8")
00	010 2010 02	•	Circuit Breaker	60	800–0055	6	# Screw, Cap – Hex Head
36	895–0182	_	Stripping, Weather – Bulk	00	000-0033	U	(3/8–16 x 2–1/4")
30	033-0102		(Order By The Foot)	61	098-5854-04	1	# Label, Marker (10 Characters
			(4 Feet Required)	01	090-3034-04	'	Per Card) Marked "N"
37	319–2399	2	Brace, Cover (Horizontal)	62	338-3012	1	Harness, Wiring – Neutral
38	816–0098	36	Bolt, Carriage (5/16–18 x	02	330-3012	'	Sensor to Circuit Breaker (2
30	010-0090	30	5/8")				Wire, 30") Used With
39	870-0257	36	Nut, Locking (5/16–18)				Circuit Breakers With 4
40	098-5854-06						Wire Ground Fault
40	096-3634-06	3	Label, Marker (10 Characters Per Card) Marked "L"				wire Ground Fauit
44	000 5054 07	4					
41	098–5854–07	1	Label, Marker (10 Characters Per Card) Marked "1"				
40	098–5854–08	4					
42	090-0004-08	1	Label, Marker (10 Characters				
			Per Card) Marked "2"				

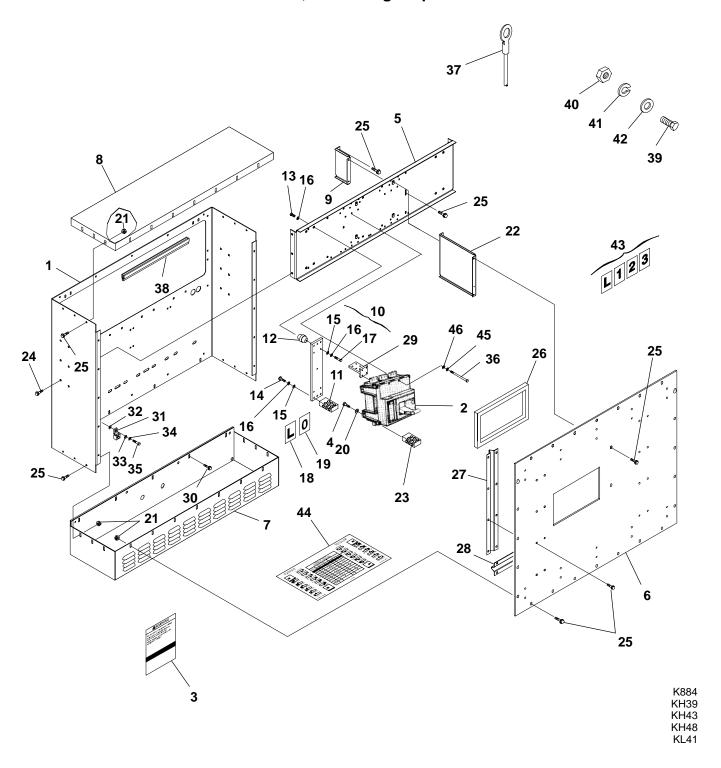


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Circuit Breaker	7	319–1925	1	Panel – Bottom
2	010 0101	•	Breaker, Circuit – 3 Pole,	8	319–1961	1	Panel – Top
_			100% Rated (Includes	9	319–3253–02	1	Brace, Mounting – Circuit
			Mounting Screws) Frame	•	0.0 0200 02	·	Breaker
			Size CM2000–HH Circuit	10	300-4480-01	1	Bar Assembly, Neutral
			Breakers Include Bus Bars				(Includes Neutral Bars and
			(T-bars) (CB21)				Parts Marked *)
			Standard	11	332-3303-01	1	* Lug, Solderless
	320-1783	1	Frame Size	12	332-2744-07	4	* Standoff, Insulator
			CM1600-HH	13	800–0048	4	* Screw, Cap – Hex Head
	320–1783–02	2 1	Frame Size				(3/8–16 x 3/4")
			CM2000-HH	14	800–2089	3	* Screw, Cap – Hex Head
	320–1783–03	3 1	Frame Size			_	(M10 x 40mm)
			CM2500-HH -	15	526–2120	7	* Washer, Flat (M10)
			DFLB Begin Spec N	16	850–2010	11	* Washer, Lock – Spring (M10)
			DFLC Begin Spec R	17	800–0052	4	* Screw, Cap – Hex Head
			With 24 Volt Shunt	10	000 5054 06	4	(3/8–16 x 1–1/2")
	320-1783-04	4 1	Trip Frame Size	18	098–5854–06	1	* Label, Marker (10 Characters
	320-1703-04	+ 1	CM1600–HH	19	098-5854-10	1	Per Card) Marked "L" * Label, Marker (10 Characters
	320-1783-06	6 1	Frame Size	19	090-3034-10	1	Per Card) Marked "0"
	320-1703-00	J 1	CM2000–HH	20	850-2010	10	Washer, Lock – Spring (M10)
	320-1783-07	7 1	Frame Size	20	000 2010	10	CM1600–HH Breakers
	020 1700 0		CM2500-HH -	21	870-0504	26	Nut, Self–Retaining (M6)
			DFLB Begin Spec N	22	319–3252–02		Brace, Cover
			DFLC Begin Spec R	23	332-3303-01	3	Lug, Solderless
			With Auxiliary (24	821-6003-02	6	Screw, Self-Locking - Hex
			Contacts and Bell				Washer Head (M8 x 20mm)
			Alarm	25	821-6002-03	85	Screw, Self-Locking - Hex
	320-1783-17	7 1	Frame Size				Washer Head (M6 x 16mm)
			CM1600-HH	26	895–0182	_	Stripping, Weather – Bulk
	320–1783–19	9 1	Frame Size				(Order By The Foot – 4
			_ CM2000-HH			_	Feet Required)
	320–1783–20	0 1	Frame Size	27	319–3286	2	Brace, Cover (Vertical)
			CM2500–HH –	28	319–3288	2	Brace, Cover (Horizontal)
			DFLB Begin Spec N	29			Bar, Bus (T–Bar) (Includes
			DFLC Begin Spec R With Auxiliary		227 2700	4	Mounting Hardware)
			Contacts, Bell		337–2789	4	Sets With CM1600–HH Breakers
			Alarm and 24 Volt		337–2789	1	Sets With CM2000–HH,
			Shunt Trip		337-2703		CM2500-HH Breakers
	320-1783-08	8 1	Frame Size	30	821-2035	5	Screw, Self-Locking - Hex
	020 1100 0		CM1600-HH	00	02. 2000	Ū	Washer Head (M6 x 25mm)
	320-1783-10	0 1	Frame Size	31	332-2001	1	Lug, Solderless
			CM2000-HH	32	856-0010	1	Washer, Lock – EIT (3/8")
	320-1783-17	1 1	Frame Size	33	526-2120	1	Washer, Flat (M10)
			CM2500-HH -	34	850-2010	1	Washer, Lock - Spring (M10)
			DFLB Begin Spec N	35	800-2086	1	Screw, Cap – Hex Head
			DFLC Begin Spec R				(M10 x 25mm)
3	098–2304	1	Label, Warning	36	800–2063	4	Screw, Cap – Hex Head
4	800–2089	9	Screw, Cap – Hex Head				(M8 x 50mm)
			(M10 x 40mm)				
_	0.10 0.1-5		CM1600–HH Breakers	* – F	Parts Included In	า 300–4	480–01 Neutral Bar Assembly
5	319–3153	1	Bracket, Mounting	_	· · · · · · · · · · · · · · · · · · ·		
6	319–3266–0	1 1	Cover, Circuit Breaker	Con	tinued		

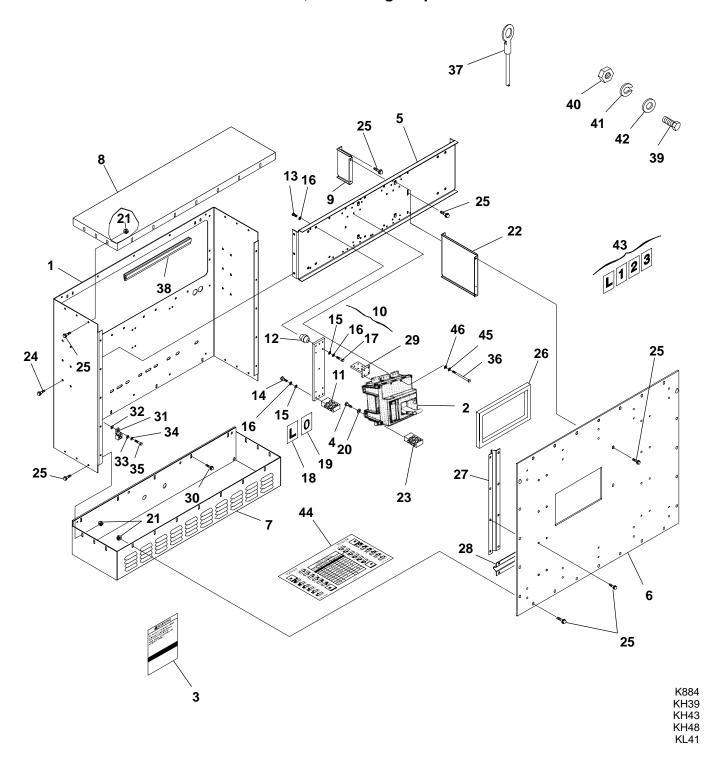

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Cor	ntinued						
37	226–4498–03 508–1109	3 1	Lead – Circuit Breaker (Quantity Used As Required) 30" (Without Markings) (#1/0 Wire) Edging – Bulk (Order By The Foot – 3 Feet Required) The following four	40 41 42 43	860–2010 850–2012 526–2140 098–5854–06	1 1 1 1 3	Nut, Hex (M12) Washer, Lock – Spring (M12) Washer, Flat (M12) Label, Marker (10 Characters Per Card) (Quantity Used As Required) Marked "L"
39	800–2116	1	hardware items are used to fasten the load leads to the generator and neutral bar. Quantity used as required. Screw, Cap – Hex Head (M12 x 50mm)	44 45 46	098-5854-07 098-5854-08 098-5854-09 098-6865 850-2008 526-2100	1	Marked "1" Marked "2" Marked "3" Label, Conduit Locations Washer, Lock – Spring (M8) Washer, Flat (M8)


Circuit Breaker UL Listed DFLC Spec M Through N DFMB Spec L

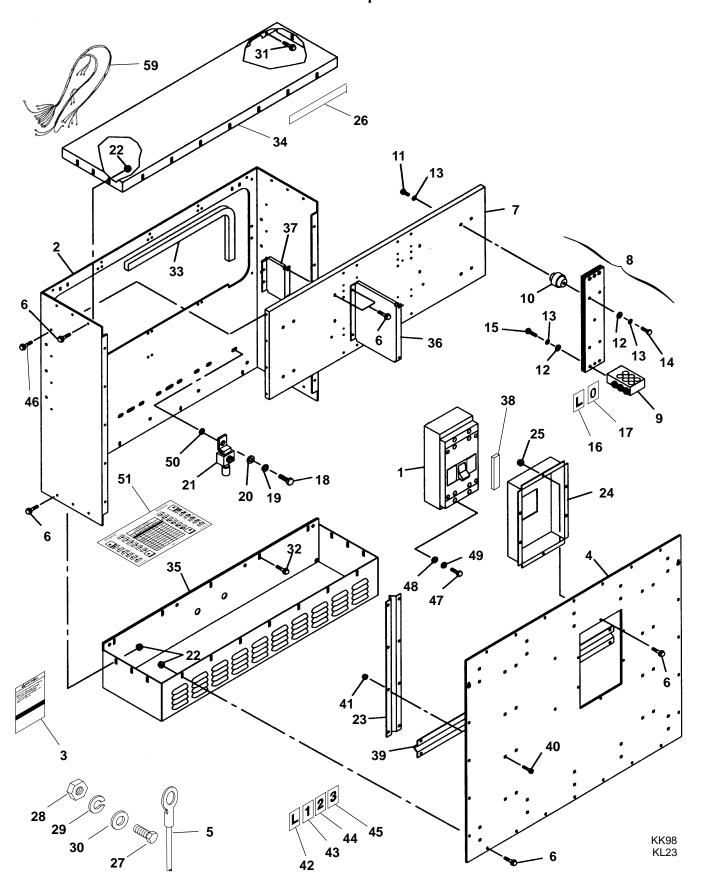

Circuit Breaker UL Listed DFLC Spec M Through N DFMB Spec L


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Breaker, Circuit (Includes Mounting Screws) 3 Pole (CB21) – Standard (Has interchangeable trip and includes the lugs)	26	091–0002	1	Strip, Copper (Used for wrapping ends of leads before securing to circuit breakers and neutral bar lug) (Quantity Used As
	320-1461-07 320-1461-09		700 Amp				Required)
2	319–1957	1 1	1000 Amp Box, Circuit Breaker				The following four hardware items are used
3	098–2304	1	Label, Warning				to fasten the load leads to
4 5	319–1964	1	Cover, Circuit Breaker Lead – Circuit Breaker (Quantity Used As				the generator and neutral bar. Quantity used as required.
			Required) (Without Markings) (#1/0 Wire)	27	800-0094	1	Screw, Cap – Hex Head (1/2–13 x 2")
	226-4406-03	1	1/2" Ring Terminal	28	862-0005	1	Nut, Hex (1/2-13)
	226 4406 04	4	End to 1" Stripped End	29	850-0060	1	Washer, Lock – Spring (1/2")
	226–4406–04	1	1/2" Ring Terminal End to 1/2" Ring Terminal	30 31	526–0219 821–0018	1 5	Washer, Flat (1/2") Screw, Self-Locking - Hex
6	821–0010	52	End Screw, Self-Locking - Hex	01	021 0010	J	Washer Head (1/4–20 x 5/8")
J	02. 00.0	0_	Washer Head (1/4–20 x 1/2")	32	821–0011	5	Screw, Self–Locking – Hex Washer Head (1/4–20 x
7	319–1963	1	Bracket, Mounting - Circuit				7/8")
8	300-4480-01	1	Breaker Bar Assembly, Neutral	33	508–1109	_	Edging – Bulk (Order By The Foot – 3 Feet Required)
			(Includes Neutral Bars,	34	319–1961	1	Panel – Top
			Labels and Parts Marked *)	35	319–1925	1	Panel – Bottom
			(Note: Used In All Circuit	36	319–1926–01	1	Brace, Cover
			Breaker Applications Except CM1250–HH to	37	319–2316–01	1	Brace, Mounting Bracket – Circuit Breaker
0	222 2202 04	4	CM2000–HH With 4 Wire Ground Fault)	38	895–0182	_	Stripping, Weather – Bulk (Order By The Foot – 1
9 10	332–3303–01 332–2744–07	1 4	* Lug, Solderless* Standoff, Insulator	39	319–2399	2	Foot Required) Brace, Cover (Horizontal)
11	800–0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")	40	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
12	526-2120	7	* Washer, Flat (M10)	41	870-0257	36	Nut, Locking (5/16–18)
13	850-2010	11	* Washer, Lock – Spring (M10)	42	098-5854-06	3	Label, Marker (10 Characters
14	800–0052	4	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")	43	098–5854–07	1	Per Card) Marked "L" Label, Marker (10 Characters
15	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)	44	098–5854–08	1	Per Card) Marked "1" Label, Marker (10 Characters
16	098–5854–06	1	* Label, Marker (10 Characters Per Card) Marked "L"	45	098–5854–09	1	Per Card) Marked "2" Label, Marker (10 Characters
17	098–5854–10	1	* Label, Marker (10 Characters Per Card) Marked "0"				Per Card) Marked "3" Screw, Self–Locking – Hex
18	800-0050	1	Screw, Cap - Hex Head	46	821–0010	6	Washer Head
19	850-0050	1	(3/8–16 x 1") Washer, Lock – Spring (3/8")	47	800–0031	4	Screw, Cap – Hex Head (5/16–18 x 1–1/2")
20	526-0029	4	Washer, Flat (3/8")	48	526-0115	4	Washer, Flat (5/16")
21 22	332–2001 870–0494	1 26	Lug, Solderless Nut, Self–Retaining –	49	850-0045	4	Washer, Lock – Spring (5/16")
22	210 2200	2	Floating (1/4–20)	50 51	856-0010	1	Washer, Lock – EIT (3/8")
23 24	319–2398 319–2431–18	2 1	Brace, Cover (Vertical) Cup, Circuit Breaker	51	098–6865	1	Label, Conduit Locations
2 4 25	870-0212	6	Nut, Locking (1/4–20)				
_0	0.0 0212	J		* – F	Parts Included In	n 300–44	80-01 Neutral Bar Assembly

Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S DFMB Begin Spec R

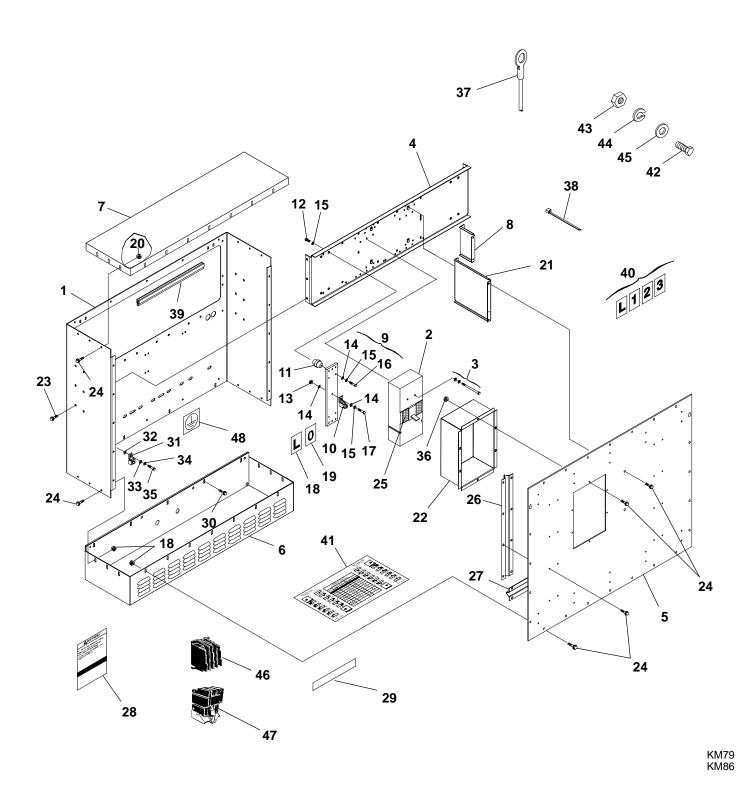


Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity DFLC Spec R Through S DFMB Begin Spec R

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184	1	Box, Circuit Breaker The following listed Circuit Breakers and Disconnect Switch include lugs and mounting hardware. Circuit Breakers	29	091–0002	1	Strip, Copper (Used for wrapping end of leads before securing to circuit breakers and disconnect switch) (Quantity Used As Required)
	320-1964-03	1	3 Pole (UL, IEC) 900 Amp	30	821–2034	5	Screw, Self-Locking - Hex Washer Head (M6 x 20mm)
	320-1964-02	1	1000 Amp	31	332-2001	1	Lug, Solderless
	320-1964-01		1200 Amp	32	856-0010	1	Washer, Lock - EIT (3/8")
3	320-1986-01	1	Package, Hardware –	33	526-2120	1	Washer, Flat (M10)
•			Mounting (Includes Screws,	34	850–2010	1	Washer, Lock – Spring (M10)
			Nuts and Lock Washers – 1	35	800–2086	1	Screw, Cap – Hex Head
			Package Required Per				(M10 x 25mm)
			Switch) Used With	36	870–2054	6	Nut, Hex – Flange (M6)
			320–1964–XX Circuit Breakers	37			Lead (Quantity Used As Required) 39" (Without
4	319–3153	1	Bracket, Mounting				Markings) (#1/0 Wire)
5 6	319–3300 319–1925	1 1	Cover Panel – Bottom		226–4406–03	1	1/2" Ring Terminal End to 1" Stripped End
7	319–1961 319–3253–01	1 1	Panel – Top		226-4406-04	1	1/2" Ring Terminal End to 1/2" Ring Terminal End
8 9		1	Brace, Cover	38	332–1389	4	Tie, Wire (Quantity Used As
9	300–4318–01	1	Bar Assembly, Neutral – Used on 3 Pole Circuit			1	Required)
			Breakers and Disconnect Switch (Includes Neutral	39	508–1109	-	Edging – Bulk (Order By The Foot – 3 Feet Required)
			Bars, Labels and Parts Marked *)	40			Label, Marker (10 Characters Per Card) (Quantity Used
10	332-2001	3	* Lug, Solderless				As Required)
11	332-2744-07	2	* Standoff, Insulator		098-5854-06	3	Marked "L"
12	800-0048	2	* Screw, Cap – Hex Head		098-5854-07	1	Marked "1"
			(3/8–16 x 3/4")		098-5854-08		Marked "2"
13	862-0003	3	* Nut, Hex (3/8")		098-5854-09	1	Marked "3"
14	526-0029	8	* Washer, Flat (3/8")	41	098-6865	1	Label, Conduit Locations
15	850-0050	7	* Washer, Lock - Spring (3/8")				The following four
16	800–0051	2	* Screw, Cap – Hex Head				hardware items are used
17	800-0052	3	(3/8–16 x 1–1/4") * Screw, Cap – Hex Head				to fasten the load leads to the generator and neutral
18	098–5854–06	1	(3/8–16 x 1–1/2") * Label, Marker (10 Characters				bar. Quantity used as required.
.0	000 0001 00	•	Per Card) Marked "L"	42	800–2114	1	Screw, Cap – Hex Head
19	098-5854-10	1	* Label, Marker (10 Characters	72	000 2114	'	(M12 x 40mm)
	000 0001 10	•	Per Card) Marked "0"	43	860-2010	1	Nut, Hex (M12)
20			Nut, Self–Retaining (M6)	44	850–2012	1	Washer, Lock – Spring (M12)
20	870-0504	30	DFLC	45	526–2140	1	Washer, Flat (M12)
	870-0504	26	DFMB	40	320-2140	1	Accessories, Circuit
21							
21 22	319–3252–01	1	Brace, Cover				Breaker: The following
	319–2431–28		Cup				are used on 320–1964–XX
23	821–6003–02		Screw, Self–Locking – Hex Washer Head (M8 x 20mm)	46	320-1977-01	1	Circuit Breakers Switches – Includes 1
24	821–6002–03	91	Screw, Self-Locking - Hex Washer Head (M6 x 16mm)				Trip Alarm and 1 Auxilliary Contact
25	895–0182	_	Stripping, Weather – Bulk (Order By The Foot – 1 Foot Required)	47 48	320–1977–03 098–6537	1	24 Volt Shunt Trip Label, Ground
26	319–3286	2	Brace, Cover (Vertical)				
26 27	319-3288	2	Brace, Cover (Vertical) Brace, Cover (Horizontal)	*. Г	Parte Included I	n 300. 49	18-01 Neutral Bar Assembly
28	098–2304	2 1	Label, Warning	- F	aris micidued I	11 JUU -4 3	TO-01 Neutral Dat ASSETTIBLY

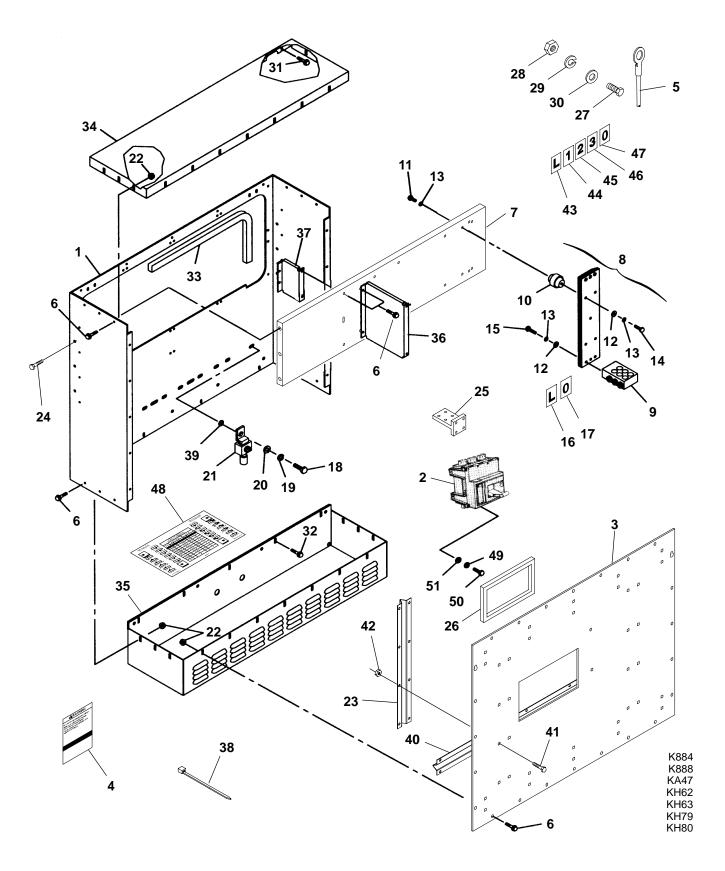


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1957	1	Box, Circuit Breaker Breaker, Circuit (Includes Mounting Screws) (CB21) Three Pole Breakers Standard	4 5	098–2304 226–4498–03	1	Label, Warning Lead – Circuit Breaker (Quantity Used As Required) 30" (Without Markings) (#1/0 Wire)
	320–1699 320–1699–02	1 2 1	Frame Size CM1600 Frame Size CM2000 With 24 Volt Shunt	6	821–0010	44	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
	320–1699–04	1 1	Trip Frame Size	7	319–1962	1	Bracket, Mounting – Circuit Breaker
	320–1699–06	5 1	CM1600 Frame Size CM2000 With Auxiliary	8	300–4480–01	1	Bar Assembly, Neutral (Includes Neutral Bars and Parts Marked *) (Used With 3 Pole Circuit Breakers)
			Contacts, Bell Alarm and 24 Volt Shunt	9 10 11	332–3303–01 332–2744–07	4	* Lug, Solderless* Standoff, Insulator
	320–1699–08	3 1	Trip Frame Size CM1600	12	800–0048 526–2120	4 7	* Screw, Cap – Hex Head (3/8–16 x 3/4") * Washer, Flat (M10)
	320–1699–10) 1	Frame Size CM2000 Four Pole Breakers	13 14	850–2010 800–0052	11 4	* Washer, Lock – Spring (M10) * Screw, Cap – Hex Head
	320–1699–21	1 1	Standard Frame Size CM1600	15	800–2089	3	(3/8–16 x 1–1/2") * Screw, Cap – Hex Head (M10 x 40mm)
	320–1699–23	3 1	Frame Size CM2000 With 24 Volt Shunt	16	098–5854–06		* Label, Marker (10 Characters Per Card) Marked "L"
	320-1699-25	5 1	Trip Frame Size CM1600	17 18	098–5854–10 800–0050	1	* Label, Marker (10 Characters Per Card) Marked "0" Screw, Cap – Hex Head
	320–1699–27	7 1	Frame Size CM2000	19	850–0050	1	(3/8–16 x 1") Washer, Lock – Spring (3/8")
			With Auxiliary Contacts, Bell Alarm and 24 Volt Shunt	20 21 22	526–0029 332–2001 870–0494	2 1 26	Washer, Flat (3/8") Lug, Solderless Nut, Self–Retaining –
	320–1699–29) 1	Trip Frame Size CM1600	23	319–2398	2	Floating (1/4–20) Brace, Cover (Vertical) Sets With 3 Pole Circuit
2	320–1699–31	1 1	Frame Size CM2000		319–2398	1	Breakers Sets With 4 Pole Circuit
3	319–1959–01	1	Cover, Circuit Breaker Sets With 3 Pole Breaker Mounted On Left Or Right Side When Facing Control	24	821–0030	6	Breakers Screw, Self–Locking – Hex Washer Head (3/8–16 x 1")
	319–1959–01	1	Sets With 4 Pole Breaker Mounted On Left Side When Facing Control	* – F	Parts Included I	n 300–4	480–01 Neutral Bar Assembly
	319–1959–02	2 1	Sets With 4 Pole Breaker Mounted On Right Side When Facing Control	Con	tinued		

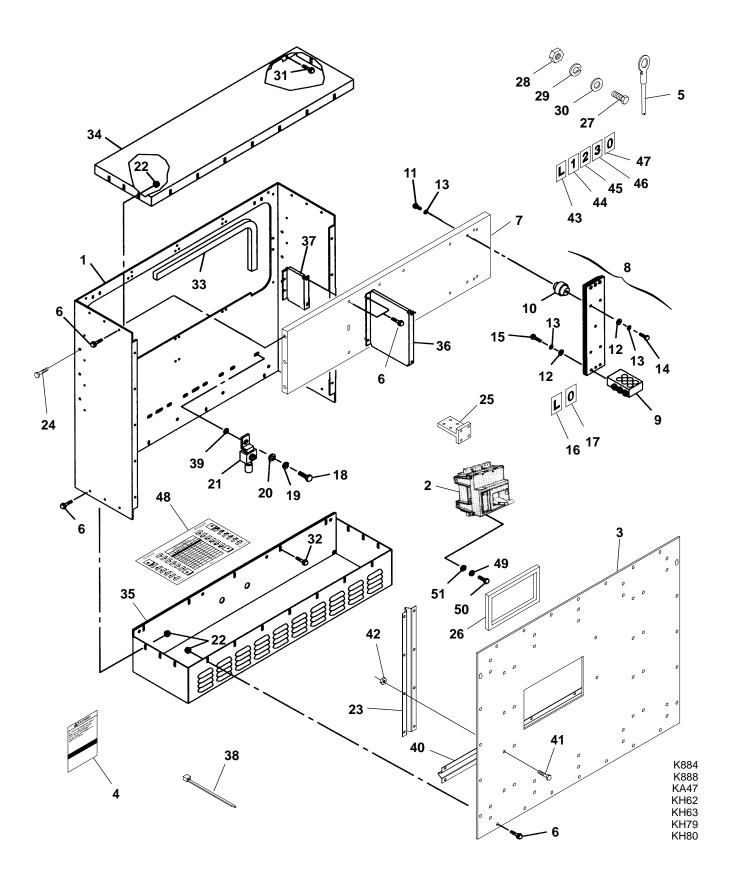


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued						
25			Bar, Bus (T–Bar) (Includes Mounting Hardware)	41			Bolt, Carriage (5/16–18 x 5/8")
	337–2789	4	Sets With Frame Size CM1600 Circuit Breakers		816–0098	36	Sets With 3 Pole Breaker Mounted On Left Or Right Side When
	337–2789	1	Sets With Frame Size CM2000 Circuit Breakers		816–0098	36	Facing Control Sets With 4 Pole Breaker Mounted On Left Side
26			Stripping, Weather – Bulk (Order By The Foot)		816–0098	28	When Facing Control Sets With 4 Pole Breaker
	895–0182	-	Sets With 3 Pole Circuit Breakers (4 Feet Required)	42			Mounted On Right Side When Facing Control Nut, Locking (5/16–18)
	895–0182	-	Sets With 4 Pole Circuit Breakers (6 Feet Required)	72	870–0257	36	Sets With 3 Pole Breaker Mounted On Left Or Right Side When Facing
			The following four hardware items are used to fasten the load leads to the generator. Quantity		870–0257	36	Control Sets With 4 Pole Breaker Mounted On Left Side When Facing Control
27	800–0094	1	used as required. Screw, Cap – Hex Head		870–0257	28	Sets With 4 Pole Breaker Mounted On Right Side
			(1/2–13 x 2")				When Facing Control
28	862-0005	1	Nut, Hex (1/2–13)	43			Label, Marker (10 Characters
29	850-0060	1	Washer, Lock – Spring (1/2")		000 5054 00	0	Per Card) Marked "L"
30	526-0219	1	Washer, Flat (1/2")		098-5854-06		3 Pole Breakers
31	821–0018	5	Screw, Self-Locking - Hex Washer Head (1/4-20 x 5/8")	44	098–5854–06 098–5854–07		4 Pole Breakers Label, Marker (10 Characters Per Card) Marked "1"
32	821–0011	5	Screw, Self-Locking - Hex Washer Head (1/4-20 x	45	098–5854–08		Label, Marker (10 Characters Per Card) Marked "2"
33	508–1109	_	7/8") Edging – Bulk (Order By The	46	098–5854–09	1	Label, Marker (10 Characters Per Card) Marked "3"
			Foot – 3 Feet Required)	47	098–5854–10	1	Label, Marker (10 Characters
34	319–1961	1	Panel – Top				Per Card) Marked "0"
35	319–1925	1	Panel – Bottom				(4 Pole Breakers)
36	319–1926–02		Brace, Cover	48	098–6865	1	Lable, Conduit Locations
37	319–2316–02		Brace, Mounting – Circuit Breaker Bracket	49	850–0045	4	Washer, Lock – Spring (5/16")
38	332–1389	1	Tie, Wire (Quantity Used As Required)	50	800–0033	4	Screw, Cap – Hex Head (5/16–18 x 2")
39 40	856–0010 319–2399	1 2	Washer, Lock – EIT (3/8") Brace, Cover (Horizontal)	51	526–0115	4	Washer, Flat (5/16")

Circuit Breaker IEC Conformity DFLC Spec M

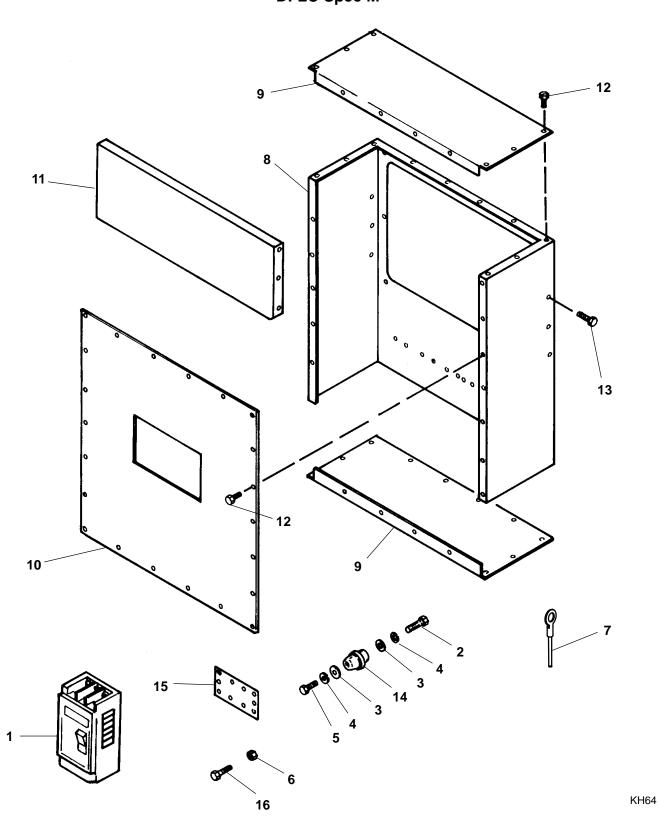


Circuit Breaker IEC Conformity DFLC Spec M

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	320-1699-03	1	Breaker, Circuit (CB21),	9	319–0892	2	Panel
			Three Pole, Standard –	10	319-1121	1	Cover
			Frame Size CM2500	11	319-1120	1	Bracket, Mounting - Circuit
2	800-0052	8	Screw, Cap – Hex Head				Breaker
			(3/8–16 x 1–1/2")	12	821-0010	60	Screw, Self-Locking - Hex
3	526-0030	30	Washer, Flat (3/8")				Washer Head (1/4-20 x
4	850-0050	19	Washer, Lock – Spring (3/8")				1/2")
5	800–0054	9	Screw, Cap – Hex Head (3/8–16 x 2")	13	821–0031	6	Screw, Self-Locking - Hex Washer Head (3/8-16 x
6	862-0003	13	Nut, Hex (3/8-16)				3/4")
7			Lead – Circuit Breaker (1/2" Ring Terminal End to 3/8"	14	332–2744–07	2	Standoff, Insulator (3 Pole Breakers)
			Ring Terminal End) (Quantity Used As	15	337–2702	1	Bar, Neutral (3 Pole Breakers)
			Required) (#1/0 Wire)	16	800-0048	2	Screw, Cap - Hex Head
	226-4498-01	1	56" (Marked "LO")				(3/8-16 x 3/4") (3 Pole
	226-4498-02	1	40" (Without Markings)				Breakers)
8	319-0890	1	Box, Circuit Breaker				

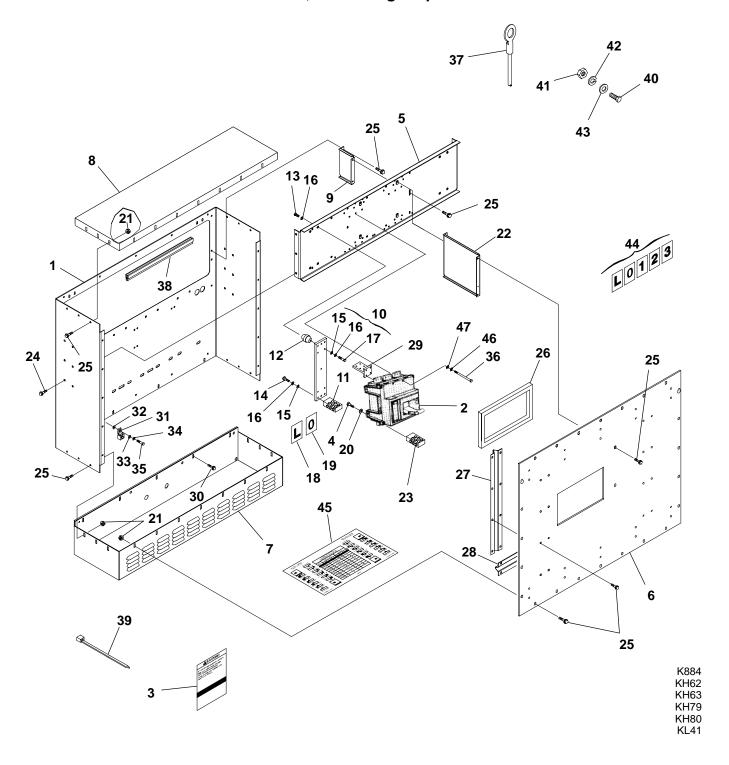


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184	1	Box, Circuit Breaker Breaker, Circuit (Includes	13	800-0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")
_			Mounting Screws) (CB21) Three Pole Breakers	14	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)
			Standard	15	526-2120	7	* Washer, Flat (M10)
	320-1699	1	Frame Size CM1600	16	850-2010	11	* Washer, Lock - Spring (M10)
	320–1699–02	1	Frame Size CM2000 With 24 Volt Shunt Trip	17	800–0052	4	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")
	320–1699–04	1	Frame Size CM1600	18	098–5854–06	1	* Label, Marker (10 Characters Per Card) Marked "L"
	320–1699–06	1	Frame Size CM2000	19	098–5854–10	1	* Label, Marker (10 Characters Per Card) Marked "0"
			With Auxiliary Contacts,	20			Washer, Lock – Spring (M10)
			Bell Alarm and 24 Volt Shunt Trip	20	850–2010	10	Sets With Frame Size CM1600 3 Pole
	320-1699-08	1	Frame Size CM1600				Circuit Breakers
	320-1699-10		Frame Size CM2000		850-2010	13	Sets With Frame Size
			Four Pole Breakers Standard				CM1600 4 Pole Circuit Breakers
	320-1699-21	1	Frame Size CM1600	21	870-0504	26	Nut, Self–Retaining (M6)
	320-1699-23	1	Frame Size CM2000	22	319-3252-02		Brace, Cover
			With 24 Volt Shunt Trip	23			Lug, Solderless
	320-1699-25	1	Frame Size CM1600		332-3303-01	3	Sets With 3 Pole Circuit
	320-1699-27	1	Frame Size CM2000				Breakers
			With Auxiliary		332-3303-01	4	Sets With 4 Pole Circuit
			Contacts, Bell Alarm				Breakers
			and 24 Volt Shunt Trip	24	821–6003–02	6	Screw, Self-Locking - Hex Washer Head (M8 x 20mm)
	320-1699-29	1	Frame Size CM1600	25			Screw, Self–Locking – Hex
	320-1699-31	1	Frame Size CM2000				Washer Head (M6 x 16mm)
3	098–2304	1	Label, Warning		821–6002–03	89	Sets With 3 Pole Circuit
4			Screw, Cap – Hex Head				Breakers
			(M10 x 40mm)		821–6002–03	81	Sets With 4 Pole Circuit
	800–2089	9	Sets With CM1600 3 Pole				Breakers
		4.0	Circuit Breakers	26			Stripping, Weather – Bulk
	800–2089	12	Sets With CM1600 4 Pole		005 0400		(Order By The Foot)
_	040 0450		Circuit Breakers		895–0182	_	Sets With 3 Pole Circuit
5 6	319–3153	1	Bracket, Mounting				Breakers (4 Feet
O	319–3266–01	1	Cover, Circuit Breaker Sets With 3 Pole Circuit		895-0182		Required) Sets With 4 Pole Circuit
	319-3200-01	'	Breakers		095-0102	_	Breakers (6 Feet
	319-3266-02	1	Sets With 4 Pole Circuit				Required)
	0.0 0200 02	•	Breakers	27			Brace, Cover (Vertical)
7	319-1925	1	Panel – Bottom		319-3286	2	Sets With 3 Pole Circuit
8	319–1961	1	Panel – Top				Breakers
9	319–3253–02	1	Brace, Mounting – Circuit Breaker		319–3286	1	Sets With 4 Pole Circuit Breakers
10	300-4480-01	1	Bar Assembly, Neutral (Includes Neutral Bars, Labels and Parts Marked *)	28	319–3288	2	Brace, Cover (Horizontal)
			(Used With 3 Pole Circuit Breakers)	* – F	Parts Included I	n 300–4	480–01 Neutral Bar Assembly
11	332-3303-01	1	* Lug, Solderless				
12	332–2744–07	4	* Standoff, Insulator	Con	tinued		

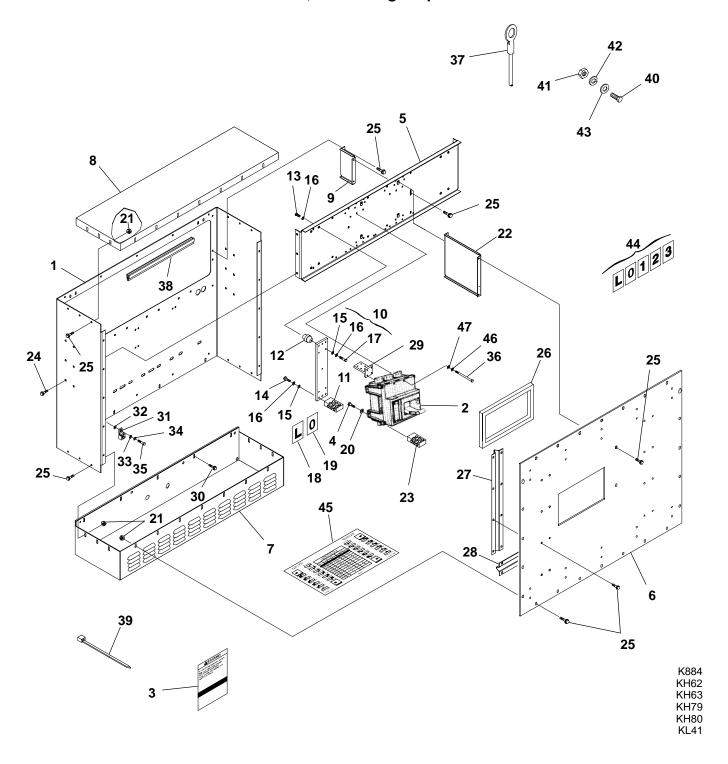

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
Con	tinued						
29	227 2700	4	Bar, Bus (T–Bar) (Includes Mounting Hardware)				The following four hardware items are used
	337–2789	4	Sets With Frame Size CM1600 Circuit Breakers				to fasten the load leads to the generator. Quantity used as required.
	337–2789	1	Sets With Frame Size CM2000 Circuit	40	800–2116	1	Screw, Cap – Hex Head (M12 x 50mm)
00	004 0005	_	Breakers	41	860–2010	1	Nut, Hex (M12)
30	821–2035	5	Screw, Self-Locking - Hex	42	850–2012	1	Washer, Lock – Spring (M12)
24	222 2004	4	Washer Head (M6 x 25mm)	43	526–2140	1	Washer, Flat (M12)
31 32	332–2001 856–0010	1	Lug, Solderless	44			Label, Marker (10 Characters
32 33	526–2120	1	Washer, Lock – EIT (3/8")				Per Card) (Quantity Used
აა 34		1 1	Washer, Flat (M10)				As Required) Marked "L"
34	850–2010	'	Washer, Lock – Spring (M10) Sets With Frame Size CM2000 Circuit Breakers		098–5854–06	3	Sets With 3 Pole Circuit Breakers
35	800–2086	1	Screw, Cap – Hex Head (M10 x 25mm)		098–5854–06	4	Sets With 4 Pole Circuit Breakers
36	800-2063	4	Screw, Cap - Hex Head (M8		098-5854-07	1	Marked "1"
			x 50mm)		098-5854-08	1	Marked "2"
37	226-4498-03	3 1	Lead - Circuit Breaker		098-5854-09	1	Marked "3"
			(Quantity Used As Required) 30" (Without		098–5854–10	1	Marked "0" (Sets With 4 Pole Circuit Breakers)
			Markings) (#1/0 Wire)	45	098-6865	1	Label, Conduit Locations
38	508-1109	_	Edging – Bulk (Order By The	46	850-2008	4	Washer, Lock – Spring (M8)
			Foot – 3 Feet Required)	47	526-2100	4	Washer, Flat (M8)
39	332–1389	1	Tie, Wire (Quantity Used As Required)				


Disconnect Switch Molded Case – UL Listed DFLB Spec L Through M DFLC, DFMB Spec L Through N

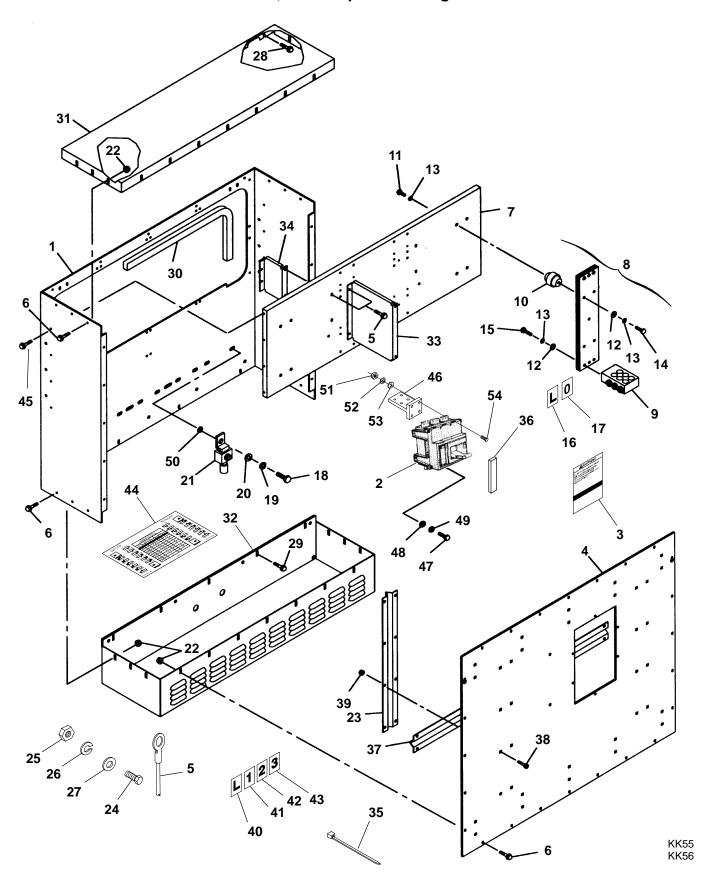

Disconnect Switch Molded Case – UL Listed DFLB Spec L Through M DFLC, DFMB Spec L Through N

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1957	1	Box, Disconnect Switch	26	850-0060	1	Washer, Lock – Spring (1/2")
2			Switch, Disconnect – 3 Pole	27	526-0219	1	Washer, Flat (1/2")
			(Includes Lugs for 1000, 1200 Amp Switches) (CB21)	28	821–0018	5	Screw, Self–Locking – Hex Washer Head (1/4–20 x 5/8")
	320-1907-01	1	1600 Amp	29	821-0011	5	Screw, Self-Locking - Hex
	320-1907-02	1	2000 Amp				Washer Head (1/4-20 x
3	098-2304	1	Label, Warning				7/8")
4	319-1957	1	Box, Disconnect Switch	30	508-1092	_	Edging - Bulk (Order By The
5	226-4498-03	1	Lead - Disconnect Switch -				Foot – 3 Feet Required)
			1/2" Ring Terminal End to	31	319-1961	1	Panel – Top
			1/2" Ring Terminal End	32	319-1961	1	Panel – Top
			(30") (Without Markings)	33	319-1926-02	1	Brace, Cover
			(#1/0 Wire) (Quantity Used	34	319-2316-02	1	Brace, Mounting Bracket -
			As Required)				Disconnect Switch
6	821-0010	44	Screw, Self-Locking - Hex	35	332-1389	1	Tie, Cable (Quantity Used As
			Washer Head (1/4–20 x				Required)
			1/2")	36	895-0182	_	Stripping, Weather – Bulk
7	319-1962	1	Bracket, Mounting –				(Order By The Foot – 4
			Disconnect Switch				Feet Required)
8	300-4480-01	1	Bar Assembly, Neutral	37	319-2399	2	Brace, Cover (Horizontal)
			(Includes Neutral Bars and Parts Marked *)	38	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
9	332-3303-01	1	* Lug, Solderless	39	870-0257	36	Nut, Locking (5/16–18)
10	332-2744-07		* Standoff, Insulator	40	098-5854-06	3	Label, Marker (10 Characters
11	800–0048	4	* Screw, Cap – Hex Head	10	000 0001 00	Ü	Per Card) Marked "L"
• • •	000 00 10	•	(3/8–16 x 3/4")	41	098-5854-07	1	Label, Marker (10 Characters
12	526-2120	7	* Washer, Flat (M10)	• • •	000 0001 01	•	Per Card) Marked "1"
13	850–2010	11	* Washer, Lock – Spring (M10)	42	098-5854-08	1	Label, Marker (10 Characters
14	800–0052	4	* Screw, Cap – Hex Head		000 0001 00	•	Per Card) Marked "2"
	000 0002	•	(3/8–16 x 1–1/2")	43	098-5854-09	1	Label, Marker (10 Characters
15	800-2089	3	* Screw, Cap – Hex Head	.0	000 0001 00	•	Per Card) Marked "3"
10	000 2000	O	(M10 x 40mm)	44	098–6865	1	Label, Conduit Locations
16	098-5854-06	1	* Label, Marker (10 Characters	45	821–0030	6	Screw, Self-Locking - Hex
10	000 000. 00	•	Per Card) Marked "L"	.0	02. 0000	Ū	Washer Head (3/8–16 x 1")
17	098-5854-10	1	* Label, Marker (10 Characters	46			Bar, Bus (T–Bar) (Includes
.,	000 0001 10	•	Per Card) Marked "0"	10			Mounting Hardware)
18	800-0050	1	Screw, Cap – Hex Head		337–2789	4	Sets With 1600 Amp
10	000 0000	ı	(3/8–16 x 1")		007 2700	7	Switches
19	850-0050	1	Washer, Lock – Spring (3/8")		337-2789	1	Sets With 2000 Amp
20	526–0029	2	Washer, Flat (3/8")		007 2700	•	Switches
21	332–2001	1	Lug, Solderless	47	800-0033	4	Screw, Cap – Hex Head
22	870–0494	26	Nut, Self–Retaining –	.,	000 0000	•	(5/16–18 x 2")
	070 0101	20	Floating (1/4–20)	48	526-0115	4	Washer, Flat (5/16")
23	319–2398	2	Brace, Cover (Vertical)	49	850-0045	4	Washer, Lock – Spring
20	313-2330	2	The following four	73	000-00-0	7	(5/16")
			hardware items are used	50	856-0010	1	Washer, Lock – EIT (3/8")
			to fasten the load leads to	51	862–0003	12	Nut, Hex (3/8")
			the generator and neutral	52	850-0050	25	Washer, Lock – Spring (3/8")
			bar. Quantity used as	53	526-0029	36	Washer, Flat (3/8")
			required.	53 54	800-0054	13	Screw, Cap – Hex Head
24	800-0094	1	Screw, Cap – Hex Head	J -1	500 000 1	10	(3/8–16 x 2")
4 7	550 505 1	1	(1/2–13 x 2")				(0/0 10 / 2)
25	862-0005	1	Nut, Hex (1/2–13)	* – F	Parts Included In	n 300–44	80–01 Neutral Bar Assembly


Disconnect Switch Molded Case UL Listed DFLB Begin Spec N DFLC, DFMB Begin Spec P

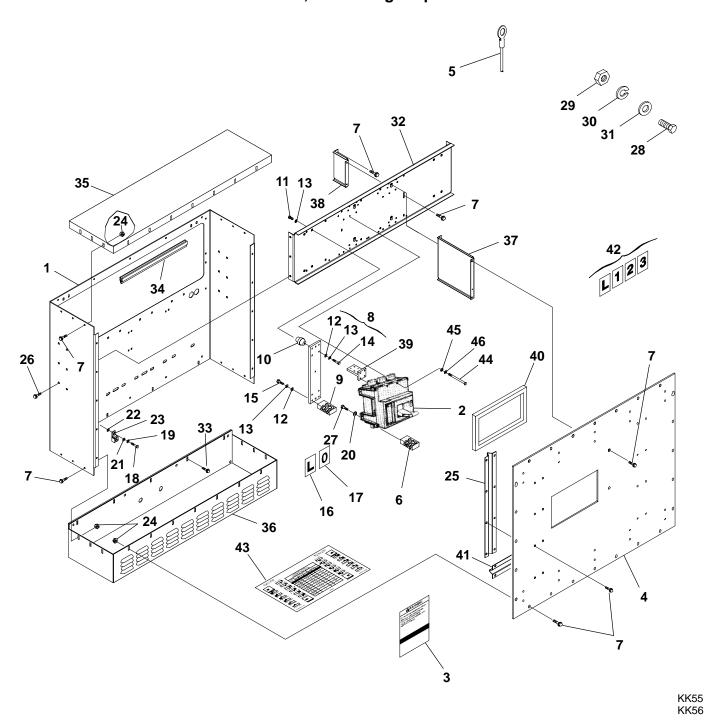

Disconnect Switch Molded Case UL Listed DFLB Begin Spec N DFLC, DFMB Begin Spec P

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–3184 320–1907–01	1	Box, Disconnect Switch Switch, Disconnect – 3 Pole (Includes Mounting Screws) (CB21) 1600 Amp				The following four hardware items are used to fasten the load leads to the generator and neutral bar. Quantity used as
	320-1907-01		2000 Amp				required.
3	098–2304	. ' 1	Label, Warning	28	800–2116	1	Screw, Cap – Hex Head
4	319–3266–01		Cover, Disconnect Switch	20	000-2110	'	(M12 x 50mm)
5	226-4498-03		Lead – Disconnect Switch	29	860–2010	1	Nut, Hex (M12)
3	220-4490-00	, ,	(Quantity Used As	30	850–2012	1	Washer, Lock – Spring (M12)
			Required) 30" (Without	31	526–2140	1	Washer, Flat (M12)
			Markings) (#1/0 Wire)	32	319–3153	1	Bracket, Mounting
6	332-3303-01	3	Lug, Solderless	33	821–2035	5	Screw, Self-Locking - Hex
7	821–6002–03		Screw, Self-Locking - Hex	33	021-2000	J	Washer Head (M6 x 25mm)
,	021-0002-00	09	Washer Head (M6 x 16mm)	34	508-1109	_	Edging – Bulk (Order By The
8	300-4480-01	1	Bar Assembly, Neutral	J -1	300-1103		Foot – 3 Feet Required)
O	300-4400-01		(Includes Neutral Bars,	35	319–1961	1	Panel – Top
			Labels and Parts Marked *)	36	319–1925	1	Panel – Bottom
9	332-3303-01	1	* Lug, Solderless	37	319–3252–02		Brace, Cover
10	332-2744-07		* Standoff, Insulator	38	319–3253–02		Brace, Mounting –
11	800-0048	4	* Screw, Cap – Hex Head	30	319-3233-02	1	Disconnect Switch
		4	(3/8–16 x 3/4")	39			Bar, Bus (T-Bar) (Includes
12	526–2120	7	* Washer, Flat (M10)				Mounting Hardware)
13	850–2010	11	* Washer, Lock – Spring (M10)		337–2789	4	Sets With 1600 Amp
14	800–0052	4	* Screw, Cap – Hex Head				Disconnect Switches
			(3/8–16 x 1–1/2")		337–2789	1	Sets With 2000 Amp
15	800–2089	3	* Screw, Cap – Hex Head				Disconnect Switches
			(M10 x 40mm)	40	895–0182	_	Stripping, Weather – Bulk
16	098–5854–06	5 1	* Label, Marker (10 Characters				(Order By The Foot – 4
			Per Card) Marked "L"				Feet Required)
17	098–5854–10) 1	* Label, Marker (10 Characters	41	319–3288	2	Brace, Cover (Horizontal)
			Per Card) Marked "0"	42			Label, Marker (10 Characters
18	800–2086	1	Screw, Cap – Hex Head				Per Card) (Quantity Used
			(M10 x 25mm)				As Required)
19	850–2010	1	Washer, Lock – Spring (M10)		098–5854–06		Marked "L"
20	850–2010	9	Washer, Lock – Spring (M10)		098–5854–07		Marked "1"
			1600 Amp Switches		098–5854–08		Marked "2"
21	526–2120	1	Washer, Flat (M10)		098–5854–09	1	Marked "3"
22	856–0010	1	Washer, Lock – EIT (3/8")	43	098–6865	1	Label, Conduit Locations
23	332–2001	1	Lug, Solderless	44	800–2063	4	Screw, Cap – Hex Head
24	870–0504	26	Nut, Self–Retaining (M6)				(M8 x 50mm)
25	319–3286	2	Brace, Cover (Vertical)	45	526–2100	4	Washer, Flat (M8)
26	821–6003–02	2 6	Screw, Self-Locking - Hex Washer Head (M8 x 20mm)	46	850–2008	4	Washer, Lock – Spring (M8)
27	800-2089	9	Screw, Cap - Hex Head				
			(M10 x 40mm) 1600 Amp				
			Disconnect Switches				


Labels and Tags Models With Radiator

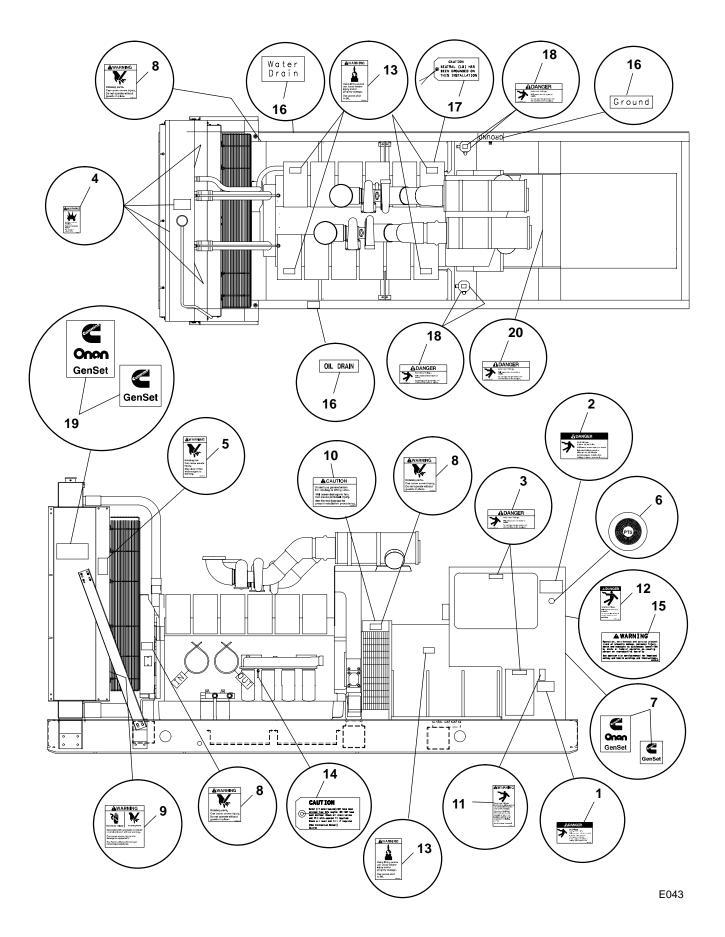

Labels and Tags Models With Radiator

1 2	098–6650–01 098–6650–02	2 2	Label, Danger – High Voltage Label, Danger – High Voltage	12	098–5387	1	Label, Danger – Hazardous Voltage From Electrical
3	098–5347	4	Label, Danger – Hazardous Voltage	13	098–5822	6	Sources – Spec K Through L Label, Warning – Lifting
4	098–4730	4	Label, Warning – Hot				Points
			Pressurized Coolant	14	098–2124	1	Tag, Warning – Water and Oil
5	098–5393	2	Label, Warning – Rotating				Levels
			Fan	15	098–6074–02	1	Label, Warning
6	098–4500	2	Label, Prototype Test	16			Label
			Supported		098–1837–01	1	Spec K Through L –
7			Label, Model				Oil Drain
	098–6111–08	1	Cummins Genset (KT Series)		098–6775	1	Begin Spec M – Ground,
			6" – Spec K				Oil Drain, and Water
	098–6139–04	1	Cummins Onan Genset				Drain
			(International) 5"	17	098–6460	1	Tag, Caution – Battery
8	098–4798	5	Label, Warning – Rotating	18	098–5347	4	Label, Danger – Hazardous
			Parts				Voltage – Spec K
9	098–4732	2	Label, Warning – Automatic	19			Label, Model
			or Remote Control		098–6111–06	2	Cummins Genset
10	098-5842	1	Label, Caution – Generator				(KT Series) 11" – Spec K
			Fan		098–6139–07	2	Cummins Onan Genset
11	098–5759	2	Label, Warning – Hazardous				(International) – 10"
			Voltage Backfeed	20	098–5347	1	Label, Danger – Hazardous
							Voltage – Begin Spec M


Labels and Tags Models With Remote Radiator

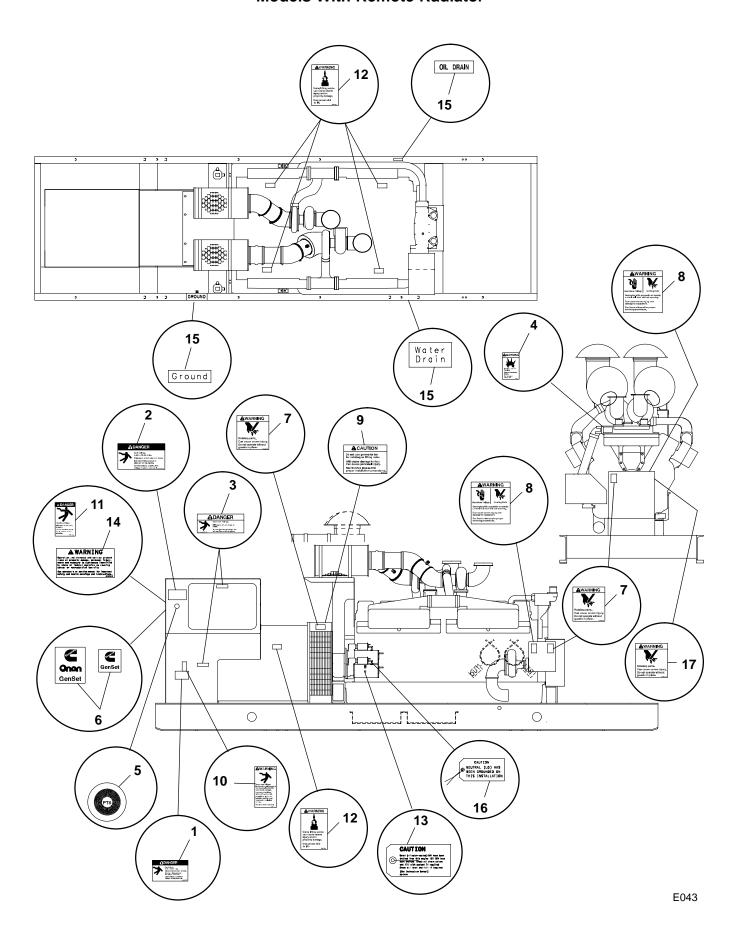

Labels and Tags Models With Remote Radiator

1 2	098–6650–01 098–6650–02	2	Label, Danger – High Voltage Label, Danger – High Voltage	9	098–5842	1	Label, Caution – Generator Fan
3	098–5347	5	Label, Danger – Hazardous Voltage	10	098–5759	2	Label, Warning – Hazardous Voltage Backfeed
4	098–4730	1	Label, Warning – Hot Pressurized Coolant	11	098–5387	1	Label, Danger – Hazardous Voltage From Electrical
5	098-4500	2	Label, Prototype Test				Sources - Spec K Through L
			Supported	12	098-5822	6	Label, Warning - Lifting
6			Label, Model				Points
	098–6111–08	1	Cummins Genset (KT Series) 6" – Spec K Through L	13	098–2124	1	Tag, Warning – Water and Oil Levels
			Cummins Onan Genset	14	098-6074-02	1	Label, Warning
			(International)	15			Label, Oil Drain
	098-6139-04	1	5" – Models with Remote		098-1837-01	1	Spec K Through L
			Radiator		098-6775	1	Begin Spec M
7	098-4798	4	Label, Warning – Rotating	16	098-6460	1	Tag, Caution – Battery
			Parts	17	098-4798	1	Label, Warning – Rotating
8	098–4732	2	Label, Warning – Automatic or Remote Control				Parts – Begin Spec L

Labels and Tags Models With Heat Exchanger

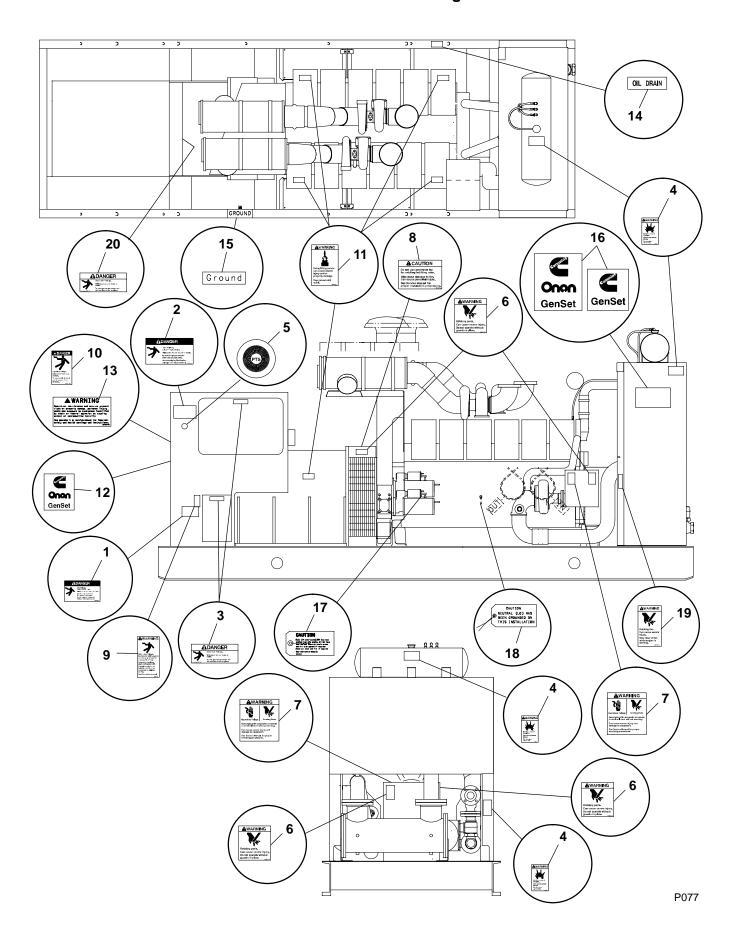

Labels and Tags Models With Heat Exchanger

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	098-6650-01	2	Label, Danger – High Voltage	12			Label, Model
2	098-6650-02	2 2	Label, Danger – High Voltage		098–6111–08	1	Cummins Genset
3	098–5347	4	Label, Danger – Hazardous				(KT Series) – Spec K
			Voltage		098–6139–04	1	Cummins Onan Genset
4			Label, Warning – Hot				(International)
			Pressurized Coolant	13	098–6074–02		Label, Warning
	098–4730	5	Spec K Through L	14	098–1837–01	1	Label, Oil Drain
	098–4730	4	Begin Spec M	15	098–6775	1	Label, Ground, Oil Drain,
5	098–4500	2	Label, Prototype Test				Water Drain – Begin Spec M
			Supported	16			Label, Model
6	098–4798	5	Label, Warning – Rotating		098–6111–06	2	Cummins Genset
			Parts				11" (KT Series) – Spec K
7	098–4732	2	Label, Warning – Automatic				Cummins Onan Genset
			or Remote Control		098–6139–07		10" (International)
8	098–5842	1	Label, Caution – Generator	17	098–6460	1	Tag, Caution – Battery
			Fan	18	098–2124	1	Tag, Warning – Water and Oil
9	098–5759	2	Label, Warning – Hazardous				Levels
			Voltage Backfeed	19	098–5393	2	Label, Warning – Rotating
10	098–5387	1	Label, Danger – Hazardous				Fan – Begin Spec M
			Voltage From Electrical Sources – Spec K Through L	20	098–5347	1	Label, Danger – Hazardous Voltage – Begin Spec M
11	098–5822	6	Label, Warning – Lifting Points				

Part No. Page	Part No. Page	Part No. Page	Part No. Page
091–0002, 147 , 153 , 155	098–6460, 171 , 173 , 175	130–3616, 45 , 47	130–3766, 61
098–1837–01, 171 , 173 , 175	098–6488, 111	130–3639, 45 , 47	130–3767, 61
098–2124, 171 , 173 , 175	098–6537, 155	130–3642, 45 , 47	130–3769, 61
098–2304, 145 , 149 , 153 ,	098–6560, 105	130–3642–01, 49 , 51	130–3770, 61
155, 157, 163, 167, 169	098–6625, 92	130–3644, 45 , 47	130–3772, 61
098–2313, 101	098–6650–01, 114 , 115 , 171 ,	130–3647–01, 45 , 47	130–3773, 61
098–3171, 13 , 15 , 17 , 19	173, 175	130–3647–02, 45 , 47	130–3774, 61
098–3172, 13 , 15 , 17 , 19	098–6650–02, 171 , 173 , 175	130–3648, 49 , 51 , 53 , 55	130–3776, 45 , 47
098–4500, 171 , 173 , 175	098–6775, 171 , 173 , 175	130–3649, 45 , 47	130–3777, 49 , 51 , 53 , 55
098–4730, 171 , 173 , 175	098–6827, 107 , 109	130–3650, 45	130–3779, 45 , 47
098–4732, 171 , 173 , 175	098–6865, 147 , 151 , 153 , 155 , 159 , 165 , 167 , 169	130–3651, 45 , 47	130–3780, 49 , 51 , 53 , 55
098–4798, 171 , 173 , 175	098–6927, 143	130–3652, 56	130–3812, 56
098–5347, 71 , 171 , 173 , 175	098–6928, 143	130–3653, 57 , 58	130–3825, 45
098–5347–01, 69 , 73	098–6940, 121	130–3654, 56	130–3826, 45 , 47 , 49 , 51 , 55
098–5387, 171 , 173 , 175	098–6943, 125	130–3657, 56	130–3827, 45 , 47
098–5393, 171 , 175	098–6985, 107 , 109	130–3660, 49 , 51 , 53 , 55 ,	130–3866, 69
098–5759, 171 , 173 , 175	098–7121, 107 , 109	56, 58	130–3868, 75 , 77
098–5822, 171 , 173 , 175	098–7182–01, 71	130–3662, 45 , 47	130–3869, 75 , 77
098–5842, 171 , 173 , 175	098–7182–02, 71	130–3663, 45 , 47	130–3870, 75 , 77
098–5854–04, 147	098–7183, 71	130–3668, 56 , 57 , 58	130–3871–02, 75 , 77
098–5854–06, 145 , 147 , 149 , 151 , 153 , 155 , 157 ,	098–7276, 123	130–3672, 45 , 47	130–4079, 67
159, 163, 165, 167, 169	098–7281, 84	130–3675, 45 , 47	130–4082, 67
098–5854–07, 147 , 151 ,	098–7301, 43	130–3676, 45 , 47	130–4083, 67
153, 155, 159, 165, 167, 169	098–7395, 123	130–3677, 45 , 47	130–4152–01, 49 , 51 , 53 , 55
098–5854–08, 147 , 151 ,	098–7452, 121	130–3679, 24	130–4152–02, 47
153, 155, 159, 165, 167, 169	102–1335, 13 , 15 , 17 , 19 ,	130–3680, 24	130–4153, 57 , 58
098–5854–09, 147 , 151 ,	21, 23	130–3681, 26	130–4154, 57 , 58
153 , 155 , 159 , 165 , 167 ,	121–0111, 43	130–3682, 26	130–4155, 47 , 49 , 51 , 55
169	121–0113, 43	130–3684, 25	130–4187, 49 , 51
098–5854–10, 145 , 149 , 153 , 155 , 157 , 159 , 163 ,	121–0116, 43	130–3685, 26	130–4188, 49 , 51 , 55
165, 167, 169	121–0117, 43	130–3686, 24	130–4191, 49 , 51 , 53 , 55
098–6030, 69 , 71	122–0776, 79	130–3687, 25	130–4194, 49 , 51
098–6074–02, 171 , 173 , 175	122–0777, 79	130–3692, 69	130–4195, 49 , 51
098–6099–03, 13 , 15 , 17 , 19 , 21 , 23	127–0390–01, 31	130–3713, 29 , 30 , 63	130–4215, 45 , 47
098–6111–06, 171 , 175	127–0395, 31	130–3714–01, 29 , 30 , 63	130–4216, 45 , 47
098–6111–08, 171 , 173 , 175	127–0422, 31	130–3714–02, 29 , 30 , 63	130–4219, 49 , 51 , 53 , 55
098–6118, 121	128–0108, 71	130–3715, 29 , 30 , 63	130–4289, 57 , 58
098–6139–04, 171 , 173 , 175	130–0449, 61	130–3728, 59	130–4290, 49 , 51 , 55
098–6139–07, 171 , 175	130–3588, 45 , 47 , 49 , 51 , 53 , 55	130–3757, 57 , 58 130–3764, 61	130–4291, 49 , 51 , 55
098–6149, 97	130–3592–01, 61	130–3765, 61	130–4292, 49 , 51 , 55
098–6195, 69 , 71 , 143	130–3592–02, 61	100-0700, 01	
, , , -	 , - ·		

Part No. Page	Part No. Page	Part No. Page	Part No. Page
130–4293, 49, 51, 53, 55 130–4294, 49, 51, 53, 55 130–4296, 49, 51, 53, 55 130–4297–01, 49, 51, 53, 55 130–4297–02, 49, 51, 53, 55 130–4299, 49, 51 130–4301, 49, 51, 53, 55, 129 130–4362, 53, 55 130–4389, 129 130–4517, 27 130–4519, 71 130–4538, 71 130–4539, 71 130–4540, 71 130–4540, 71 130–4544, 71 130–4546, 71 130–4552, 73 130–4761, 57, 58 130–4860, 45, 47, 49, 51, 53, 55 130–4883, 57	Part No. Page 140–1548, 32, 33, 34, 35, 37, 39, 40, 41 140–2052, 40, 41 140–2096, 37, 39 140–2098, 37, 39 140–2099, 37, 39 140–2301, 40, 41 140–2395–01, 39 140–2465, 40, 41 140–2466, 40, 41 140–2467, 37, 39 140–2501, 32, 33, 34, 35 140–2502, 32, 33, 34, 35 140–2504–01, 33, 39 140–2504–01, 33, 39 140–2508, 33 140–2509, 39 140–2515, 32, 37 140–2521, 32, 37 140–2528, 33, 39 140–2544–01, 35, 41 140–2544–01, 35, 41	Part No. Page 151-0411, 13, 21, 23, 132, 136 151-0637-01, 132 151-0663-02, 136 155-0899, 61, 66 155-2503, 61 155-2531-02, 92, 93 155-2531-03, 92, 93 155-2531-06, 92, 93 155-3021, 71 159-1445, 43 159-1450, 43 159-1450, 43 179-2661, 67 191-1926-02, 77 191-1942, 77 191-1981, 75 191-1984, 75 191-1989-07, 75 191-2017, 75	Part No. Page 193–0388, 80 193–0432, 21, 23 193–0435, 80 193–0444, 21, 23 193–0446–01, 93 193–0446–02, 93 193–0446–03, 93 193–0447–01, 15, 19 193–0451, 81 193–0466, 141 193–0468, 64, 65 193–0481, 64, 65 226–4406–03, 153, 155 226–4406–04, 153, 155 226–4498–01, 161 226–4498–02, 161 226–4498–03, 145, 151, 157, 165, 167, 169 226–4661–02, 65 232–3536, 131 232–3552–01, 133 232–3552–01, 133
130–4883, 57 130–4884, 57 130–5108, 55 130–5109, 53 130–5191–02, 55 130–5192–02, 55 130–5194–02, 53 , 55 130–5195–02, 55	140–2544–01, 35 , 41	,	
130–5199–02, 53 130–5200–02, 53 130–5202–02, 53 130–5210, 57 , 58 130–5309–02, 75 140–0519, 27 140–1260, 32 , 33 , 34 , 35 , 37 , 39 , 40 , 41	140–2561, 34 140–2562, 40 149–2228, 13 , 15 , 17 , 19 , 21 , 23 149–2287, 136 149–2291–02, 135 150–2213, 132 150–2334, 136	193–0128, 135 193–0244, 13 , 17 193–0250, 80 , 141 193–0299, 92 193–0299–01, 92 193–0351, 141 193–0375, 13 , 17	234–0901–02, 134 249–0192–05, 82 249–0192–06, 82 249–5063–07, 82 249–5064–01, 82 249–5064–02, 82 249–5064–04, 82

Part No. Page	Part No. Page	Part No. Page	Part No. Page
249–5064–05, 82	300–4218–02, 117	302–1794–15, 102	302–1945–10, 103
249–5065–07, 82	300–4286, 123	302–1799, 142	302–1945–11, 103
249–5066–07, 82	300–4295, 139	302–1800, 142	302–1961–11, 103
249–5067–01, 82	300–4297, 139	302–1833–01, 86	302–1961–12, 103
249–5067–02, 82	300–4318–01, 155	302–1833–03, 94	302–1961–13, 103
249–5067–05, 82	300–4462, 121	302–1845–05, 95	302–1961–14, 103
249–5076–08, 82	300–4462–01, 121	302–1845–07, 102	302–1961–15, 103
249–5088–07, 82	300–4480–01, 145 , 149 ,	302–1845–08, 102	302–1961–16, 103
249–5089–07, 82	153, 157, 163, 167, 169	302–1852–02, 101	302–1968, 142
249–5089–08, 82	300–4481, 123	302–1852–03, 101	302–2009–01, 123
249–5090–07, 82	300–4515–01, 119 , 143	302–1852–06, 101	302–2009–02, 123
249–5090–08, 82	300–4515–02, 119 , 143	302–1852–07, 101	302–2009–03, 123
249–5092–01, 82	300–4608–01, 123	302–1873–01, 91	302–2009–04, 123
249–5092–02, 82	300–4608–02, 123	302–1874, 92	302–2010, 123
249–5092–03, 82	300–4610–01, 123	302–1883, 94	302–2011, 123
249–5092–04, 82	300–4610–02, 123	302–1908, 142	302–2012, 123
249–5092–05, 82	300–4721–04, 121	302–1922–12, 102	303–0032, 142
249–5092–06, 82	300–4721–16, 121	302–1922–16, 102	303–0223–05, 96
249–5092–14, 82	301–6257, 80 , 87 , 91	302–1922–18, 102	303–0280, 96
249–5093–01, 83	301–6987, 86 , 88 , 89 , 94 , 125	302–1922–21, 102	303–0285–01, 98
249–5093–02, 83	301–8065, 139	302–1922–39, 102	305–0653, 77
249–5093–03, 83	301–8851, 139	302–1922–40, 102	305–0817, 97
249–5093–05, 83	301–9054–01, 142	302–1926–11, 102	305–0821–02, 100
249–5093–09, 83	301–9054–04, 142	302–1926–13, 102	305–0823, 98
249–5094–02, 83	301–9055–01, 141	302–1926–14, 102	305–0868, 98
249–5094–03, 83	301–9055–02, 141	302–1926–16, 102	305–0870, 95
249–5094–08, 83	301–9657, 101	302–1926–17, 102	305–0901, 118
249–5094–09, 83	301–9941, 88 , 89	302–1926–18, 102	305–0902–02, 99
249–5094–10, 83	302–0885, 141	302–1926–21, 102	307–1056, 113
249–5094–11, 83	302–1148, 142	302–1926–23, 102	307–1056–01, 121
249–5095–04, 83	302–1642, 141	302–1926–26, 102	307–1157, 113
249–5095–05, 83	302–1721–18, 86	302–1926–28, 102	307–2167, 13 , 15 , 17 , 19
249–5095–06, 83	302–1721–19, 86	302–1926–30, 101	307–2621–02, 21 , 23
300–2899, 85	302–1722, 86	302–1938, 142	307–2711, 61
300–3998–01, 124	302–1723, 87 , 91	302–1945–01, 103	307–2762, 67
300–4079, 121	302–1724, 142	302–1945–03, 103	307–2843, 125
300–4080–01, 121	302–1753, 142	302–1945–04, 103	307–2859, 73
300–4080–02, 121	302–1794–11, 95	302–1945–05, 103	307–2868, 90
300–4083, 121	302–1794–13, 95 , 102	302–1945–06, 103	307–2869, 121
300–4111–02, 113	302–1794–14, 95 , 102	302–1945–08, 103	307–2919, 88
300–4111–04, 113			

Part No. Page	Part No. Page	Part No. Page	Part No. Page
307–2920, 88	319–1090, 107	319–2398, 114 , 145 , 153 , 157 , 167	319–3277, 109
307–2921–01, 89	319–1091, 107 , 109	319–2399, 114 , 147 , 153 ,	319–3281–01, 109
308–0069, 101	319–1092, 107 , 109	159, 167	319–3281–02, 109
308–0853, 87	319–1093, 107 , 109	319–2431–18, 153	319–3283–01, 109
308–0987, 92	319–1095, 107 , 109	319–2431–28, 155	319–3283–02, 109
308–0998, 123	319–1096, 107	319–2767, 107 , 109	319–3286, 115 , 149 , 155 , 163 , 169
308–0999, 123	319–1097, 107	319–2771–03, 107	319–3288, 115 , 149 , 155 ,
308–1010, 141	319–1118, 107	319–2771–04, 107	163, 169
308–1011, 141	319–1120, 161	319–2778, 107 , 109	319–3297, 103
308–1045, 123	319–1121, 161	319–2779–01, 107	319–3300, 155
308–1046, 123	319–1137, 137	319–2779–02, 107	320–1461–07, 153
308–1052, 142	319–1203–01, 107 , 109	319–2781–01, 107	320–1461–09, 153
308–1082, 142	319–1265, 103	319–2781–02, 107	320–1688–01, 110
309–0269, 13 , 15 , 17 , 19 ,	319–1293, 111	319–2814, 73	320–1688–02, 110
21, 23	319–1498, 131	319–2815, 71	320–1699, 157 , 163
309–0436, 13 , 17	319–1687, 121	319–3030, 139	320–1699–02, 157 , 163
309–0437, 13 , 17	319–1925, 114 , 115 , 147 ,	319–3153, 149 , 155 , 163 ,	320–1699–03, 161
309–0561, 13 , 17	149, 153, 155, 159, 163, 169	169	320–1699–04, 157 , 163
309–0576, 15 , 19	319–1926–01, 153	319–3184, 115 , 149 , 155 , 163 , 169	320–1699–06, 157 , 163
309–0607, 66	319–1926–02, 147 , 159 , 167	319–3252–01, 155	320–1699–08, 157 , 163
309–0612, 24	319–1957, 114 , 145 , 153 ,	•	320–1699–10, 157 , 163
309–0613, 24	157, 167	319–3252–02, 149 , 163 , 169 319–3253–01, 155	320–1699–21, 157 , 163
309–0635–02, 29 , 30 , 47 , 49 , 51 , 53 , 55 , 61	319–1959–01, 145 , 157	•	320–1699–23, 157 , 163
309–0641–03, 15 , 19	319–1959–02, 157	319–3253–02, 149 , 163 , 169	320–1699–25, 157 , 163
309–0641–07, 13 , 15 , 17 , 19	319–1961, 114 , 115 , 147 ,	319–3258, 109	320–1699–27, 157 , 163
309–0649, 71	153, 155, 159, 163, 167, 169	319–3260, 109	320–1699–29, 157 , 163
309–0651–02, 15 , 19	319–1962, 145 , 157 , 167	319–3261, 109	320–1699–31, 157 , 163
314–0212, 112	319–1963, 153	319–3262, 109	320–1783, 145 , 149
314–0213, 112	319–1964, 153	319–3263, 109	320–1783–02, 145 , 149
315–0717, 131	319–2006–01, 127 , 128	319–3264, 115	320–1783–03, 149
319–0030, 86 , 94 , 125	319–2006–02, 127 , 128	319–3265, 115	320–1783–04, 145 , 149
319–0652, 98	319–2236, 21 , 23	319–3266–01, 149 , 163 , 169	320–1783–06, 145 , 149
319–0754, 99	319–2242, 107	319–3266–02, 163	320–1783–07, 149
319–0879, 107	319–2243, 107	319–3267, 109	320–1783–08, 145 , 149
319–0881, 107 , 109	319–2244, 107	319–3268, 109	320–1783–10, 145 , 149
319–0883, 107	319–2245, 107 , 109	319–3269, 109	320–1783–11, 149
319–0890, 161	319–2316–01, 153	319–3270–03, 109	320–1783–12, 145
319–0892, 161	319–2316–02, 147 , 159 , 167	319–3270–04, 109	320–1783–14, 145
319–0898, 104	319–2377–01, 114	319–3275, 109	320–1783–17, 145 , 149
319–1088, 107	319–2378, 114	319–3276, 109	525 1765 17, 1 45 , 1 45
319–1089, 107	, -		
519-1009, 107			

Part No. Page	Part No. Page	Part No. Page	Part No. Page
320–1783–19, 145 , 149 320–1783–20, 149	323–1410–03, 118 323–1411–01, 88 , 89 , 121	330–0005, 105 330–0141–03, 84	332–3008, 45 , 47 , 49 , 51 , 53 , 55 , 64
320–1907–01, 167 , 169	323–1444, 127	330–0141–04, 84	332–3023, 84
320–1907–02, 167 , 169	323–1445, 73 , 127	330–0142, 84	332–3024–14, 84
320–1964–01, 155	323–1491, 73 , 127	331–0010, 67	332–3096–01, 127
320–1964–02, 155	323–1492, 15 , 19 , 73 , 127 ,	331–0027, 67 , 105	332–3178–01, 103
320–1964–03, 155	128	331–0042, 73	332–3196, 133
320–1977–01, 155	323–1493, 127 , 128	331–0531–01, 67	332–3235, 121
320–1977–03, 155	323–1494, 73	331–0531–02, 67	332–3262, 123
320–1986–01, 155	323–1500, 73	331–0532, 67	332–3303, 147
321–0094, 139	323–1502, 73	331–0533, 67	332–3303–01, 145 , 149 , 153 , 157 , 163 , 167 , 169
321–0231, 139	323–1503, 127 , 128	331–0554, 73	332–3338, 119 , 143
321–0270, 139	323–1504, 73	331–0555, 73	332–3440, 73
321–0307–03, 121 , 139	323–1540, 127	332–0052, 139	332–3440, 73
321–0307–06, 139	323–1546, 128	332–0604, 127 , 128	•
321–0307–07, 127 , 139	323–1548, 15 , 19	332–0607, 139	333–0133, 104
321–0325, 127	323–1549, 15 , 19	332–0699, 136	333–0407–02, 78
321–0327–01, 112	323–1580, 127	332–0941, 13 , 15 , 17 , 19 ,	333–0407–04, 78
321–0339, 127	323–1581, 127	21, 23, 71	333–0407–05, 78
322–0017, 141	323–1591, 128	332–0942, 137 , 143	333–0438–05, 84
322–0359–02, 141	323–1605–02, 127	332–0970, 136	333–0438–06, 84
322–0360–02, 141	323–1605–03, 127	332–1043, 98 , 127 , 128	333–0468, 69
322–0361, 141	323–1614–01, 127	332–1281, 13 , 17	333–0512–01, 67 , 69
322–0363, 142	323–1615, 127	332–1292, 13 , 17	333–0512–02, 67 , 69
322–0369–02, 141	323–1623, 127	332–1389, 59 , 61 , 84 , 107 ,	333–0639–01, 71
322–0384–09, 89	323–1624, 127	109, 155, 159, 165, 167	333–0639–02, 71
322–0394, 87	323–1637, 127	332–1445, 65 , 121 , 123 , 127 , 131 , 136 , 137	3332–0942, 69
322–0431–03, 90	323–1643–01, 127	332–1468, 73	334–0116, 96
322–0431–04, 88	323–1644–01, 131	332–1469, 73	335–0173, 119
322–0431–07, 65	323–1644–02, 131	332–2001, 145 , 149 , 153 ,	337–0049, 121 , 139
322–0431–08, 118	323–1644–03, 102	155, 157, 165, 167, 169	337–2702, 161
322–0431–09, 125	323–1647, 131	332–2315, 137	337–2789, 147 , 149 , 159 , 165 , 167 , 169
323–1199, 113	323–1648, 102 , 127 , 131	332–2420, 121 , 125	337–2794, 147
323–1199, 113 323–1200, 113 , 128	323–1652, 73 , 127	332–2634, 13 , 15 , 17 , 19 ,	338–1765–04, 128
323–1291, 113	323–1666, 127	21, 23, 71, 105, 107, 109	338–1904, 85
	323–1667, 127	332–2723, 139	338–1936, 86
323–1292, 113	323–1708, 64 , 65	332–2744–07, 145 , 147 , 149 , 153 , 155 , 157 , 161 ,	338–2010, 64
323–1302, 139	323–1709, 64 , 65	163, 167, 169	338–2172, 137
323–1304, 128	323–1718, 73 , 127	332–2774, 127	338–2278, 139
323–1306, 128	323–1765, 64 , 65	332–2879–07, 88 , 89	338–2347, 88
323–1308, 139	330–0004, 105	332–3007, 131	200 2011, 00
323–1410–01, 121			

Part No. Page	Part No. Page	Part No. Page	Part No. Page
338–2368, 94 338–2455, 100 338–2526, 132 , 136 338–2529, 99 338–2530, 131 338–2532, 102 338–2538, 136	338–3366, 90 338–3519, 137 338–3520, 137 338–3594, 64 , 65 338–3752, 89 350–1222, 98 353–0094–01, 128	501–0537–46, 136 501–0537–49, 79 501–0559, 45 501–0613–01, 47 501–0614–01, 49 , 51 , 53 , 55 501–0620, 81 501–0651, 43	503–0249, 13, 15, 17, 19, 21, 23 503–0685, 29, 30, 61, 63 503–0970, 32, 37 503–1418, 61 503–1484, 33, 39 503–1485, 34, 35, 37
338–2544, 105 338–2545, 105 338–2590, 137 338–2592–02, 127 338–2607, 127 338–2713, 131	355–0189, 142 357–0030, 65 , 73 , 128 , 137 357–0114, 119 , 143 359–0051, 128 402–0354, 86 , 88 , 89 , 94 , 125	501–0652, 13 , 15 , 17 , 19 501–0653, 43 501–0654, 43 501–0662, 13 , 15 , 17 , 19 502–0034, 135 502–0067, 135	503–1620, 29 , 30 , 61 503–1634–01, 71 503–1675, 32 , 37 503–1705, 33 , 34 , 35 503–1717, 33 , 39
338–2760–01, 69 338–2760–02, 69 338–2867, 131 338–2875, 113 338–2931–01, 121 338–2931–02, 121	402–0527, 121 , 139 402–0610, 21 , 23 , 107 402–0612, 56 , 57 , 58 402–0729, 109 403–2733–01, 45 , 47 , 49 , 51 , 53 , 55 , 61 403–2733–02, 45 , 47 , 49 ,	502–0746, 81 502–0827, 71 502–1043–12, 79 502–1045–04, 136 502–1054–08, 31 502–1072–14, 79	503–1719, 39 503–1720, 33 , 39 503–1721, 39 503–1726, 27 , 45 , 47 , 49 , 51 , 53 , 55 , 61 503–1727, 49 , 51 , 55 , 61 503–1728, 45 , 47 , 49 , 51 ,
338–2932–01, 121 338–2932–02, 121 338–2933, 121 338–2934, 123 338–2937, 123 338–2995, 128	51, 55, 63 403–2921, 133 403–3141, 129 403–3204, 129 403–3205, 129 403–3206, 129	502–1072–30, 79 502–1162, 29 , 30 , 61 , 63 502–1232, 81 502–1257, 71 502–1259, 71 502–1260, 71	53, 55 503–1730, 45 503–1743–01, 59 503–1743–02, 59 503–1755, 34, 35, 40, 41 503–1756, 34, 35, 40, 41
338–3012, 147 338–3019, 102 338–3033, 117 338–3034, 118 338–3035–02, 65 338–3233, 125	403–3277, 45 , 47 403–3278, 45 , 47 406–0332, 139 406–0333, 139 406–0334, 139 406–0761–03, 123	502–1261, 71 502–1266–01, 43 502–1266–02, 43 502–1267, 43 502–1268, 43 502–1269, 43	503–1757, 40 , 41 503–1758, 40 , 41 503–1762, 53 , 61 503–1764, 61 503–1779, 69 503–1863, 47 , 49 , 51 , 53 , 55
338–3235, 125 338–3252, 139 338–3285, 127 338–3330, 73 338–3335–01, 73	416–0446, 13, 15, 17, 19, 21, 23 416–0639, 13, 15, 17, 19, 21, 23 416–0680, 13, 15, 17, 19, 21, 23 416–0850, 129	502–1270, 43 502–1271, 43 502–1275, 13 , 15 , 17 , 19 502–1307, 136 502–1308, 136	503–1863–01, 49 , 51 , 53 , 55 503–1870–05, 45 , 47 503–1870–11, 32 , 37 503–1870–12, 33 , 39 , 40 , 41 503–1870–14, 32 , 33 , 34 , 35 , 37 , 39 , 40 , 41
338–3335–02, 73 338–3336, 127 338–3337, 131 338–3347, 128 338–3360, 131	416–0964, 13, 15, 17, 19, 21, 23 501–0520, 13, 15, 17, 19 501–0524, 13, 15, 17, 19	502–1336, 71 502–1337, 71 503–0189, 13 , 15 , 17 , 19 , 21 , 23	503–1871–04, 34 , 35 , 37 , 39 , 40 , 41 503–1872–01, 69

Part No. Page	Part No. Page	Part No. Page	Part No. Page
503–1872–02, 45 , 47 , 49 ,	505–0759, 69	518–0350, 135	526–0416, 133
51, 53, 55, 61	505–1428, 79	518–0548–02, 69	526–0417, 123
503–1872–05, 45 , 47 , 49 , 51 , 53 , 55 , 61	505–1429, 45 , 61	518–0548–08, 32 , 61	526–0445, 133
503–1872–09, 49 , 51 , 53 , 55	505–1430, 69 , 71	518–0548–29, 43	526–1115, 107 , 109
503–1872–10, 27 , 45 , 47 , 61	505–1435, 59	518–0548–42, 109	526–2100, 53 , 151 , 165 , 169
503–2157–01, 71	505–1436, 59	518–0601, 11	526–2120, 145 , 149 , 153 ,
504–0028, 13 , 15 , 17 , 19 ,	505–1440, 66	518–0633, 43 , 47 , 49 , 51 , 53 , 55	155, 157, 163, 165, 167, 169
21, 23, 63	505–1441, 61	520–0544, 71	526–2140, 151 , 155 , 165 ,
504–0064, 135	505–1442, 61	525–0304, 11	169
504–0171, 13 , 15 , 17 , 19 , 21 , 23	508–0001, 139	525–0305, 11	718–1067, 75
504–0175, 61	508–0015, 13 , 17	525–0306, 11	800–0003, 121
505–0004, 69 , 71	508–0051, 137 , 139	525–0551–02, 11	800–0006, 27 , 124
505–0007, 13 , 15 , 17 , 19 ,	508–0228, 84	525–0551–03, 11	800–0009, 27
23, 92, 135	508–0292, 13 , 15 , 17 , 19 , 21 , 23	525–0551–04, 11	800–0024, 119 , 121 , 139 800–0031, 153
505–0011, 45 , 61 , 63	508–1057, 107 , 109	526–0002, 111	800–0033, 147 , 159 , 167
505–0017, 29 , 30 , 49 , 51 , 53 , 55 , 61	508–1090, 61 , 107 , 109	526–0008, 88 , 89 , 95 , 98 ,	800–0039, 103
505–0018, 29 , 92	508–1092, 147 , 167	103 , 112 526–0015, 27	800–0048, 129 , 145 , 147 ,
505–0019, 13 , 15 , 17 , 19 , 21 , 23 , 63	508–1109, 147 , 151 , 153 , 155 , 159 , 165 , 169	526–0018, 139	149, 153, 155, 157, 161, 163, 167, 169
505–0020, 61	509–0065, 131	526–0022, 103	800–0050, 43 , 145 , 153 ,
505–0021, 13 , 15 , 17 , 19 ,	509–0272–01, 79	526-0027, 61 , 129	157, 167
21, 23	509–0272–02, 136	526–0028, 26	800–0051, 24 , 45 , 47 , 49 , 51 , 147 , 155
505–0022, 71	509–0283–01, 69 , 71	526-0029, 47 , 49 , 51 , 55 ,	800–0052, 23 , 145 , 149 ,
505–0041, 69 , 71	509–0336, 43	71, 145, 153, 155, 157, 167	153, 155, 157, 161, 163, 167, 169
505–0044, 61	509–0337, 43	526–0030, 31 , 34 , 63 , 75 , 147 , 161	800–0053, 55 , 63 , 147
505–0054, 61	511–0119, 75	526-0049, 141	800–0054, 161 , 167
505–0100, 13 , 15 , 17 , 19 , 21 , 23 , 71	511–0161–02, 77	526–0098, 75 , 77	800–0055, 34 , 40 , 147
505–0102, 13 , 15 , 17 , 19 ,	511–0161–03, 56	526-0112, 45 , 47 , 61 , 66	800–0061, 21 , 47
21, 23	511–0161–10, 57 , 58	526-0115, 86 , 88 , 89 , 94 ,	800-0062, 13, 15, 17, 19
505–0103, 61 , 66	511–0161–12, 56	147 , 153 , 159 , 167 526–0128, 27 , 71	800–0069, 75 , 77
505–0114, 61	515–0220, 57 , 58	526–0141, 56 , 57 , 58 , 109	800–0071, 75
505–0131, 13 , 15 , 21	517–0021, 84	526–0174, 129	800–0072, 37 , 136
505–0132, 13 , 15 , 17 , 19 , 21 , 23	517–0090, 103	526–0219, 37 , 40 , 45 , 47 ,	800–0074, 77
505–0151, 80	517–0131, 98 , 107 , 109 , 141 , 142	49 , 51 , 53 , 55 , 57 , 58 , 61 ,	800–0075, 79
505–0153, 29 , 61	517–0135, 109	129, 147, 153, 159, 167	800–0078, 56 , 57 , 58
505–0177, 69 , 71	517–0137, 80 , 141	526–0257, 123	800–0081, 43
505–0183, 45	517–0138–02, 73	526–0346, 59 526–0353, 77	800–0090, 13 , 15 , 17 , 19 , 21 , 23 , 49
505–0219, 45	517–0301, 141	526–0399–19, 45	800–0091, 26 , 51
505–0324, 13 , 15 , 17 , 19 ,	517–0302, 142	526–0409, 141	•
21 , 23 505–0376, 30 , 47 , 63	518–0064, 59	3_3 3.33,	

Part No. Page	Part No. Page	Part No. Page	Part No. Page	
800-0092, 45 , 47 , 49 , 51 , 53 , 55 , 57 , 58 , 77	812–0067, 21 , 23 812–0070, 111	821–0018, 114 , 147 , 153 , 159 , 167	850–0055, 37 , 43 , 56 , 57 , 58 , 75 , 77 , 79 , 136	
800–0093, 129	812–0070, 111 812–0079, 105 , 131	821–0022, 53 , 75	850–0060, 13 , 15 , 17 , 19 ,	
800-0094, 34 , 40 , 45 , 47 , 49 , 51 , 53 , 55 , 61 , 147 ,	812–0081, 125	821–0029, 32 , 33 , 34 , 35 , 49 , 51 , 53 , 55	21, 23, 26, 40, 45, 47, 49, 51, 53, 55, 61, 77, 129, 133, 147, 153, 159, 167	
153, 159, 167	812–0082, 99	821–0030, 49 , 147 , 157 , 167	850-0070, 45 , 47 , 57 , 58 , 61 , 66	
800–0097, 57	812–0084, 98 , 118	821–0031, 161		
800–0106, 57 , 58	812–0085, 131 , 137	821–0033, 32 , 33 , 35 , 37 ,	850–0079, 33 , 35 , 39 , 41 ,	
800–0130, 31	813–0098, 103	39, 40, 41, 61	61, 81, 129	
800–0132, 45 , 47	813–0100, 67 , 88 , 89 , 101 ,	821–0035, 49 , 51 , 53 , 55	850–0114–07, 45	
800–0133, 61	137	821–2023, 134	850–2003, 84	
800–0135, 57 , 58 , 61	813–0103, 67 , 95 , 100 , 132 , 136	821–2034, 155	850–2004, 84	
800–0138, 66	813–0107, 112	821–2035, 115 , 149 , 165 ,	850–2005, 84	
800–0151, 81	813–0108, 98	169	850–2008, 75 , 151 , 165 , 169	
800-0152, 33 , 35 , 39 , 41	815–0340, 105	821–5000–05, 139	850–2010, 107 , 109 , 111 ,	
800–0158, 129		821–5002–03, 29 , 30 , 45 , 47 , 53 , 55 , 63 , 71 , 107 , 132	145, 149, 153, 155, 157, 163, 165, 167, 169	
800–0160, 61	815–0384, 45 , 47 , 49 , 51 , 53 , 55	821–5002–04, 75 , 77	850–2012, 151 , 155 , 165 ,	
800–0163, 57 , 58 , 129	815–0385, 104 , 141	821–5003–01, 45 , 47 , 51 ,	169	
800–0164, 129	815–0388, 99	53, 55, 59, 107	853–0005, 86 , 88 , 89 , 125 ,	
800–0237, 77	815–0464, 73	821–5003–03, 53 , 61 , 107	137	
800–0303, 133	815–0538, 127 , 128	821–5004–02, 43 , 61 , 71 ,	853–0008, 94 , 139 , 141	
800–0304, 133	815–0539, 71	107	856–0006, 13 , 15 , 17 , 19 , 107 , 109 , 121	
800–0305, 45 , 47	815–0544, 139	821–5004–03, 29 , 30 , 45 , 47 , 51 , 53 , 55 , 63 , 71 , 77 ,	856–0008, 102 , 119 , 139	
800–0316, 129	815–0549, 121	129	856–0010, 13 , 15 , 17 , 19 , 21 , 23 , 147 , 149 , 153 , 155 ,	
800–0500, 56 , 57 , 58 , 75 , 77		821–6001–03, 132		
800–0507, 56 , 57 , 58	815–0724, 31	821–6002–03, 109 , 115 ,	159, 165, 167, 169 856–0013, 13, 15, 17, 19, 21, 23	
800–0576, 133	815–0769–01, 56	132, 149, 155, 163, 169		
800–0585, 45	815–0875–02, 142	821–6003–02, 109 , 149 , 155 , 163 , 169	860–2005, 84	
800–0596, 133	815–0901–06, 139	821–6004–01, 109	860–2006, 84	
800–0390, 133 800–2008, 84	815–0901–06, 133	822–1050, 136	860–2010, 151 , 155 , 165 ,	
	• •	822–3047, 84	169	
800–2059, 75	815–0937, 85 , 90 , 98 , 113 , 139	822–3047, 84 822–3075, 84	862–0001, 124	
800–2063, 149 , 165 , 169	816–0098, 114 , 147 , 153 ,	,	862–0003, 63 , 147 , 155 ,	
800–2080, 111	159, 167	850–0025, 131	161, 167	
800–2086, 107 , 109 , 149 , 155 , 165 , 169	821–0004, 121 , 139	850–0030, 98 , 101 , 103 , 132 , 141	862–0005, 147 , 153 , 159 , 167	
800–2089, 145, 149, 153, 157, 163, 167, 169 800–2114, 155	821–0005, 97	850–0040, 124	862–0007, 45 , 47 , 61 , 66	
	821–0010, 13 , 15 , 17 , 19 ,	850–0045, 103 , 121 , 147 ,	862–0008, 61 , 129	
	49, 51, 67, 114, 145, 153, 157, 161, 167	153, 159, 167	862–0015, 103	
800–2116, 151 , 165 , 169	821–0011, 114 , 147 , 153 ,	850–0048, 45 , 49	862–0016, 40 , 45 , 47 , 49 , 51 , 53 , 55 , 61 , 129	
800–2526, 31	159, 167	850–0050, 13 , 15 , 17 , 19 ,		
805–0035, 133	821–0014, 49 , 109 , 139	21, 23, 24, 43, 47, 51, 55, 63, 145, 147, 153, 155,		
809–0036, 13 , 17	821–0016, 32 , 131	157, 161, 167		
812–0063, 117	821–0017, 125			

Part No.	<u>Page</u>	Part No.	<u>Page</u>	Part No.	Page	Part No.	<u>Page</u>
862–0034, 56	, 57, 58	870–0221, 86	, 88, 89, 94,	870–0504, 11	5, 149, 155,	870–2054, 10 9), 155
864–0017, 13	6	125, 131		163, 169		870–2055, 10 9)
864-0020-01	, 136	,	, 114, 119, 125,	870–0517–01	, 113	870–2056, 10 9)
870–0048, 86	88 89 94	131, 147, 153, 159, 167 870–0281, 29, 30, 32, 33, 34, 35, 40, 49, 53, 55, 63	, ,	870–0517–02, 113 870–0550–05, 47 , 51 , 55 , 107		871–0010, 141 871–0015, 139	
870–0053, 10							
870–0131, 71 97 , 100 , 112	, , , ,	870–0437, 33 , 35 , 37 , 39 , 40 , 41		870–0550–07, 61 , 107		895–0182, 27 , 147 , 149 , 153 , 155 , 159 , 163 , 167 ,	
870–0183, 21		870–0452, 77	870–0452, 77 870–0550–09, 45 , 47 , 49 , 51 , 55 , 61 , 71 , 107			169	
870–0196, 13	, 17	870–0494, 114 , 145 , 153 , 157 , 167	4 , 145, 153,	870–1220, 123		895–0359, 121 898–1254–25, 84	
970 0212 21	22 45 40						
870–0212, 21 , 23 , 45 , 49 , 69 , 153				870–1221, 118			



Onan Corporation 1400 73rd Avenue N.E. Minneapolis, MN 55432 612-574-5000 Telex: 275477

Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation Cummins is a registered trademark of Cummins Engine Company