

Parts Catalog


Models

DFEB (Spec J-S)

DFEC (Spec C-K)

DFED (Spec A-G)

DFFB (Spec J-L)

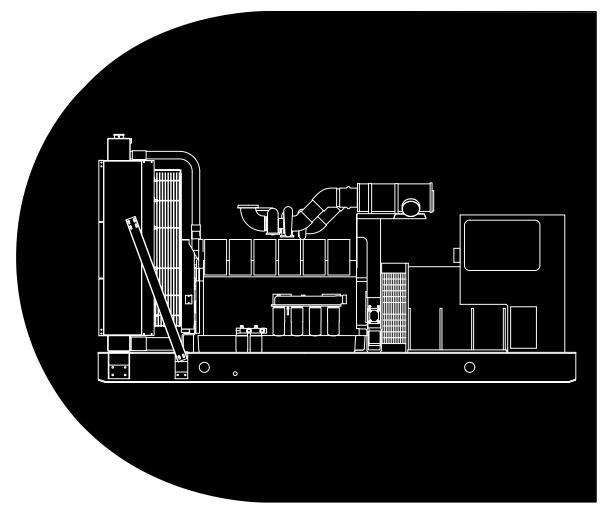

Printed in U.S.A. 960–0286 7–2001

MODEL IDENTIFICATION

This catalog covers models produced under the Cummins®/Onan® and Cummins Power Generation brand names.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Cummins Power Generation nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Cummins Power Generation manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

▲ DANGER

This symbol warns of immediate hazards which will result in severe personal injury or death.

△WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

△CAUTION

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS

△WARNING

Service and repair of Cummins Power Generation equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

△WARNING

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

△WARNING

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

△WARNING

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This catalog applies to Onan Generator Models DFEB, DFEC, DFED, and DFFB as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set unless noted in the description column.

Engine parts that have been modified or added by Onan are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

Replacement Engine

Onan/Cummins Generator Model	Cummins Engine Model
DFEB	KTA19-G2 Configuration No. D193056DX02
DFEC	KTA19-G3 Configuration No. D193088DX02
DFED	KTA19-G4 Configuration No. D193091DX02
DFFB	KTTA19–G2 Configuration No. D193079DX02

Replacement engines cannot be ordered from Onan. Order from your nearest Cummins distributor.

Generator Set Data Table

Model and	Electrical Data				Battery	
Specification	Watts	Volts	Hertz	Wire	Phase	Voltage
330DFEB/*	330,000	#	50	12	1 or 3	24 VDC
400DFEB/*	400,000	#	60	12	1 or 3	24 VDC
400DFEC/*	400,000	#	50	12	1 or 3	24 VDC
450DFEC/*	450,000	#	60	12	1 or 3	24 VDC
450DFED/*	450,000	#	50	12	1 or 3	24 VDC
500DFED/*	500,000	#	60	12	1 or 3	24 VDC
450DFFB/*	450,000	#	50	12	1 or 3	24 VDC
500DFFB/*	500,000		60	12	1 or 3	24 VDC

^{* –} The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options or deviations from the standard model. The specification letter advances (A to B, B to C, etc.) with major manufacturing changes.

- Broad range reconnectible

1

Accessories, 192	Bearing, Ball – Model HC5 Generators, 89
Adapter, Generator – Model HC5 Generators, 89	Bell, End – Model HC5 Generators, 89
Aid, Starting, 147	Belt, Alternator
Alarm, Audible	45 Amp, 55
Sets With Detector Control, 126	75 Amp, 56
Sets With PowerCommand Control, 127	Diagk Tarminal
Alarm, Bell – Circuit Breaker – Non–UL Listed – Model HC5	Block, Terminal Auxiliary – Sets With Detector Control, 141
Generators, 185	Control Box – Sets With Detector Control, 97
Alternator	Engine to Control Wiring Harness
45 Amp, 55	Sets With Detector Control, 101
75 Amp, 56	Sets With PowerCommand Control
	DFEB Begin Spec R, 107
Ammeter	DFEB Spec J Through P, 105
Control Door, 111 Control Door, AC Seta With Detector Control 09, 121	DFEC Begin Spec J, 107
Control Door, AC – Sets With Detector Control, 98, 131	DFEC Spec C Through H, 105
	DFED Begin Spec F, 107
Band, Mounting	DFED Spec A Through E, 105
Heavy Duty Air Cleaner	DFFB Begin Spec J, 105
DFEB, DFEC, DFED, 22	Paralleling Interconnect, 142
DFFB, 23	Water Heater Control Box
Standard Air Cleaner	DFEB Begin Spec R, 43
DFEB, DFEC, DFED, 20	DFEB Spec L Through P, 39 DFEC Begin Spec J, 43
DFFB, 21	DFEC Spec E Through H, 39
Bar, Neutral – Circuit Breaker	DFED Begin Spec F, 43
IEC Conformity – Model HC6 Generators	DFED Spec B Through E, 39
DFED Spec A, 167	Woodward Governor, 69
DFED Spec B, 169	'
DFED Spec C, 171	Board, Printed Circuit
DFFB Begin Spec K, 167	Alarm Relay, 114
Non-UL Listed – Model HC5 Generators	Analog – Control Box, 109 Annunciator
DFEB Spec J Through L, 183 DFEC Spec C Through E, 183	
DFED Spec A Through B, 183	DFEB Begin Spec L, 139 DFEB Spec J Through K, 138
DFFB Begin Spec J, 183	DFEC Begin Spec E, 139
UL Listed	DFEC Spec C Through D, 138
Model HC5 Generators	DFED Begin Spec C, 139
DFEB Spec J Through L, 155	DFED Spec A Through B, 138
DFEC Spec C Through E, 155	DFFB Begin Spec J, 138
DFED Spec A Through B, 155	Common Alarm – Sets With Detector Control, 115
DFFB Begin Spec J, 155	Customer Interface – Control Box, 109
Model HC6 Generators DFED Spec A Through B, 159 , 161	Digital – Control Box, 109
DFED Spec C, 165	Display – Control Door, 111
DFFB Begin Spec K, 159 , 161	Electronic Overspeed, 116
	Engine Interface – Control Box, 109 Fuel Tank Control, 66
Bar, Neutral – Circuit Breaker and Disconnect Switch, UL Listed, IEC Conformity	Isolation Transformer – Sets With Detector Control, 113
Model HC5 Generators	Over/Under Voltage Relay, 119
DFEB Begin Spec N, 175	Time Delay Start/Stop, 117
DFEC Begin Spec F, 175	Voltage Regulator – Sets With Detector Control, 113
DFED Begin Spec D, 175	
Model HC6 Generators, DFED Spec C, 179	Box, Circuit Breaker
Bar, Neutral – Disconnect Switch, Molded Case – UL Listed,	IEC Conformity – Model HC6 Generators
Model HC5 Generators, DFED Spec A and B, 173	DFED Spec B, 169
·	DFED Spec C, 171 Non–UL Listed – Model HC5 Generators
Basin, Rupture Models with Automatic Fuel Transfer Pump Control 63	DFEB Spec J Through L, 183
Models with Automatic Fuel Transfer Pump Control, 63 Models with Float Valve, 65	DFEC Spec C Through E, 183
Models with Float valve, 65 Models with Fuel Transfer Pump and Automatic Pump	DFED Spec A Through B, 183
Control, 61	DFFB Begin Spec J, 183

UL Listed	Heavy Duty Air Cleaner
DFFB Spec J, 151	DFEB, DFEC, DFED, 22
Model HC5 Generators	DFFB, 23
DFEB Spec J Through L, 153	Muffler, 29
DFEC Spec C Through E, 153	Resistive Temperature Detectors, 146
DFED Spec A Through B, 153	Standard Air Cleaner
DFFB Begin Spec J, 153	DFEB, DFEC, DFED, 20
Model HC6 Generators	DFFB, 21
DFED Spec A, 167	Water Heater
DFED Spec A and B, 159	DFEB Begin Spec R, 41
DFED Spec A Through B, 161	DFEB Spec L Through P, 37
DFED Spec C, 165	DFEC Begin Spec J, 41
DFFB Begin Spec K, 159 , 161 , 167	DFEC Spec E Through H, 37
	DFED Begin Spec F, 41
Box, Circuit Breaker and Disconnect Switch, UL Listed, IEC	DFED Spec B Through E, 37
Conformity	Water Heater Control
Model HC5 Generators	DFED Spec B Through E, 37
DFEB Begin Spec N, 175	DFEB Begin Spec R, 41
DFEC Begin Spec F, 175	DFEB Spec L Through P, 37
DFED Begin Spec D, 175	DFEC Begin Spec J, 41
Model HC6 Generators, DFED Spec C, 179	DFEC Spec E Through H, 37
Box, Control, 109	DFED Begin Spec F, 41
Annunciator	Wattmeter, 123
DFEB Begin Spec L, 139	
DFEB Spec J Through K, 138	Bracket, Starting Aid, 147
the contract of the contract o	Breaker, Circuit
DFEC Begin Spec E, 139 DFEC Spec C Through D, 138	AC Control Door, 128
to the control of the	Fuel Tank Control
DFED Spec A Through B 139	AC, 66
DFED Spec A Through B, 138	DC, 66
DFFB Begin Spec J, 138	IEC Conformity – Model HC6 Generators
Engine Coolant Heater	DFED Spec A, 167
DFEB Begin Spec R, 43	DFED Spec B, 169
DFEB Spec L Through P, 39	DFED Spec C, 171
DFEC Begin Spec J, 43	DFFB Begin Spec K, 167
DFEC Spec E Through H, 39	Non-UL Listed – Model HC5 Generators
DFED Segin Spec F, 43	DFEB Spec J Through L, 183
DFED Spec B Through E, 39	DFEC Spec C Through E, 183
Fuel Tank, 66	DFED Spec A Through B, 183
Sets With Detector Control, 97	DFFB Begin Spec J, 183
Box, Disconnect Switch - Molded Case - UL Listed - Model	UL Listed
HC5 Generators – DFED Spec A and B, 173	DFFB Spec J, 151
	Model HC5 Generators
Box, Entrance	DFEB Spec J Through L, 153
Model HC5 Generators	DFEC Spec C Through E, 153
DFEB Begin Spec M, 72	DFED Spec A Through B, 153
DFEB Spec J Through L, 71	DFFB Begin Spec J, 153
DFEC Begin Spec F, 72	Model HC6 Generators
DFEC Spec C Through E, 71	DFED Spec A Through B, 159 , 161
DFED Begin Spec C, 72	DFED Spec C, 165
DFED Spec A Through B, 71	
DFFB Begin Spec J, 71	DFFB Begin Spec K, 159, 161
Model HC6 Generators, DFFB Begin Spec K, 73	UL Listed, IEC Conformity Model HC5 Generators
Box, Junction – Engine Coolant Heater, 30	DFEB Begin Spec N, 175
Box, Relay – Engine Coolant Heater, 35	DFEC Begin Spec F, 175
Dox, rolay Engine Coolant Heaten, 99	DFED Begin Spec D, 175
Box, Terminal – Generator Heater, 93	Model HC6 Generators – DFED Spec C, 179
	Bulb, Panel Light - Replacement - DC Control Door - Sets
Bracket, Mounting	With Detector Control, 99
Float Switch, 143	
Fuel Pressure Gauge, 24	Bulb, Replacement – Emergency Stop Switch, 132

Cable, Battery	Control
Electric Starter, 59	Detector, 97
Sets With Detector Control	Fuel Tank, 66
DFEB Spec J Through K, 15	Governor – Electronic, 70
DFEC Spec C Through D, 15	PowerCommand, 100
DFED Spec A, 15	Remote, 149
DFFB Begin Spec J, 15	Controller, VAR Power Factor, 125
Cable, Generator – Ground Fault Relay, 121	Coupler, Engine Coolant Heater
Cable, Heater - Control - Sets With Detector Control, 94	DFEB Begin Spec R, 41 DFEB Spec L Through P, 37
Cable, Magnetic Pickup	DFEC Begin Spec J, 41
Sets With Detector Control, 101	DFEC Spec E Through H, 37
Sets With PowerCommand Control	DFED Begin Spec F, 41
	DFED Spec B Through E, 37
DFEB Begin Spec R, 107	Cover, Battery Tray, 67
DFEB Spec J Through P, 103	Cover, Dattery Tray, or
DFEC Begin Spec J, 107	Cover, Box – Subbase Fuel Tank Control, 66
DFEC Spec C Through H, 103	Cover, Circuit Breaker
DFED Begin Spec F, 107	IEC Conformity – Model HC6 Generators
DFED Spec A Through E, 103	DFED Spec A, 167
DFFB Begin Spec J, 103	DFED SPEC B, 169
Cable, Ribbon	DFED Spec C, 171
	DFFB Begin Spec K, 167
Control Box, 109	Non–UL Listed – Model HC5 Generators
Control Door, 111	DFEB Spec J Through L, 183
Cable, Shielded – Speed Adjusting Potentiometer, 130	DFEC Spec C Through E, 183
Cable, Official Coposa Adjusting Fotontionicion, 100	
Cap, Day Tank	DFED Spec A Through B, 183
Models with Automatic Fuel Transfer Pump Control, 63	DFFB Begin Spec J, 183
Models with Float Valve, 65	UL Listed
Models with Fuel Transfer Pump and Automatic Pump	Model HC5 Generator
Control, 61	DFEB Spec J Through L, 153
	DFEC Spec C Through E, 153
Cap, Rain, 29	DFED Spec A Through B, 153
One of the Malter of the With Dataster Control 00	DFFB Begin Spec J, 153
Capacitor – Voltmeter – Sets With Detector Control, 98	Model HC6 Generators
Cartridge, Heater – Generator Heater, 93	DFED Spec A and B, 159
Ocherator Fleater, 30	DFED Spec A Through B, 161
Clamp, Muffler, 29	DFED Spec C, 165
	DFFB Begin Spec K, 159 , 161
Cleaner, Air	Cover, Circuit Breaker and Disconnect Switch - UL Listed,
Heavy Duty	IEC Conformity
DFEB, DFEC, DFED, 22	Model HC5 Generators
DFFB, 23	DFEB Begin Spec N, 175
Standard	DFEC Begin Spec F, 175
DFEB, DFEB, DFEC, 20	DFED Begin Spec D, 175
DFFB, 21	Model HC6 Generators – DFED Spec C, 179
Clip, End – Mounting Rail	Cover, Control Box – Sets With PowerCommand Control
Over/Under Frequency Relay, 120	Model HC5 Generators
Over/Under Voltage Relay, 118	DFEB Begin Spec M, 77
Olia Castrat Manustina Dalan (Cantral Day) 400	DFEB Spec J Through L, 75
Clip, Socket Mounting – Relay (Control Box), 109	DFEC Begin Spec F, 77
Connection, Water Inlet	DFEC Spec C Through E, 75
Heat Exchanger, 45	DFED Begin Spec C, 77
Remote Radiator, 53	DFED Spec A Through B, 75
Nomble Natiatol, JJ	DFFB Begin Spec J, 75
Connection, Water Transfer	Model HC6 Generators
Heat Exchanger, 45	DFEB Spec M, 81
Remote Radiator, 53	DFEC Spec F, 81
	DFED Spec A Through B, 79
Contact, Auxiliary - Circuit Breaker - Non-UL Listed -	DFED Spec C, 81
Model HC5 Generators, 185	DFFB Begin Spec J, 79

Cover, Control Housing Model HC5 Generators DFEB Begin Spec M, 77 DFEB Spec J Through L, 75 DFEC Begin Spec F, 77 DFEC Spec C Through E, 75 DFED Begin Spec C, 77 DFED Spec A Through B, 75 DFFB Begin Spec J, 75 Model HC6 Generators DFEB Spec M, 81 DFEC Spec F, 81 DFED Spec C, 81 DFFB Begin Spec J, 79	Elbow, Reducer Heavy Duty Air Cleaner DFEB, DFEC, DFED, 22 DFFB, 23 Standard Air Cleaner DFEB, DFEC, DFED, 20 DFFB, 21 Entrance Box Model HC5 Generators DFEB Begin Spec M, 72 DFEB Spec J Through L, 71 DFEC Begin Spec F, 72 DFEC Spec C Through E, 71 DFED Begin Spec C, 72 DFED Spec A Through B, 71
Cover, Disconnect Switch – Molded Case – UL Listed – Model HC5 Generators – DFED Spec A and B, 173	DFFB Begin Spec J, 71 Model HC6 Generators, DFFB Begin Spec K, 73
Cover, Engine Coolant Heater Control DFEB Begin Spec R, 41, 43 DFEB Spec L Through P, 37, 39 DFEC Begin Spec J, 41, 43 DFEC Spec E Through H, 37, 39 DFED Begin Spec F, 41, 43 DFED Spec B Through E, 37, 39 Cover, Entrance Box Model HC5 Generators DFEB Begin Spec M, 72 DFEB Spec J Through L, 71 DFEC Begin Spec F, 72 DFEC Spec C Through E, 71 DFED Begin Spec C, 72 DFED Spec A Through B, 71 DFED Begin Spec J, 71 Model HC6 Generators, DFFB Begin Spec K, 73 Cover, Meter – Control Door, 133 Cover, Permanent Magnet Generator – Model HC5 Generators, 90	Fan, Alternator – 45 Amp, 55 Fan, Radiator DFEB Begin Spec R, 51 DFEB Spec J Through K, 47 DFEB Spec L Through P, 49 DFEC Begin Spec J, 51 DFEC Spec C Through D, 47 DFEC Spec E Through H, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFED Spec B Through E, 49 DFFB Begin Spec J, 47 Filter, Lube Oil, 26 Fuse Control Box, 109 Engine To Control Wiring Harness – Sets With Power-Command Control, 105 Radio Frequency Interference Module, 137
Detector Control, 97	Gasket
Detectors, Resistive Temperature, 146	Control Box Door, 109 Heat Exchanger Fan Hub, 45
Disc, Drive – Model HC5 Generators, 89	Heat Exchanger Sea Water Pump, 45
Door, Control Housing DFEB Begin Spec K, 85 DFEB Spec J, 83 DFEC Begin Spec D, 85 DFEC Spec C, 83 DFED Begin Spec A, 85 DFED Spec A Through C, 83	Heat Exchanger Water Connection, 45 Louvre, 150 Remote Radiator Water Connection, 53 Gauge Fuel Pressure, 24 Liquid Level – Day Tank, 61, 63 Mechanical Oil Pressure, 25 Oil Pressure – Control Mounted – Sets With Detector
DFFB Begin Spec J, 83, 85 Sets With Detector Control AC, 98 DC, 99	Control, 99 Oil Temperature, 131 Water Temperature – Sets With Detector Control, 99
Sets With PowerCommand Control, 111	Generator – Replacement (Complete) Model HC5 Generators, 86 Model HC6 Generators, 91
Elbow, Exhaust, 28, 29	Generator, Permanent Magnet – Model HC5 Generators, 90

Governor Electronic, 70 Woodward, 69	Guard, Fan – Radiator DFEB Begin Spec R, 51 DFEB Spec J Through K, 47
Grille, Control Housing Model HC5 Generators DFEB Begin Spec M, 77 DFEB Spec J Through L, 75 DFEC Begin Spec F, 77 DFEC Spec C Through E, 75 DFED Begin Spec C, 77 DFED Spec A Through B, 75	DFEB Spec L Through P, 49 DFEC Begin Spec J, 51 DFEC Spec C Through D, 47 DFEC Spec E Through H, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFED Spec B Through E, 49 DFFB Begin Spec J, 47
DFFB Begin Spec J, 75 Model HC6 Generators DFEB Spec M, 81 DFEC Spec F, 81 DFED Spec A Through B, 79 DFED Spec C, 81	Harness, Control – Day Tank Models with Automatic Fuel Transfer Pump Control, 63 Models with Fuel Transfer Pump and Automatic Pump Control, 61
DFFB Begin Spec J, 79	Harness, Wiring
Grille, Housing DFEB Begin Spec K, 85 DFEB Spec J, 83 DFEC Begin Spec D, 85 DFEC Spec C, 83 DFED Begin Spec A, 85 DFED Spec A Through C, 83 DFFB Begin Spec J, 83, 85	AC Control Door – Sets With Detector Control, 97 Adapter – Woodward Governor to Engine Harness, 69 Alarm Relay Board, 114 Auxiliary Terminal Block – Sets With Detector Control, 141 Auxiliary Terminal Block Transformer – Sets With Detecto Control, 141 Common Alarm Board – Sets With Detector Control, 115 Control Door, 111 Current Transformer
Grille, Radiator DFEB Begin Spec R, 51 DFEB Spec J Through K, 47 DFEB Spec L Through P, 49 DFEC Begin Spec J, 51 DFEC Spec C Through D, 47 DFEC Spec E Through H, 49 DFED Begin Spec F, 51	Sets With Detector Control, 145 Sets With PowerCommand Control, 145 Day Tank, 61 Day Tank Control, 66 DC Control Door – Sets With Detector Control, 97 Electronic Overspeed, 116 Engine Coolant Heater DFEB Begin Spec R, 43
DFED Spec A, 47 DFED Spec B Through E, 49 DFFB Begin Spec J, 47	DFEB Spec J Through K, 35 DFEB Spec L Through P, 39 DFEC Begin Spec J, 43 DFEC Spec C Though D, 35
Guard, Belt Heat Exchanger, 45 Remoter Radiator, 53	DFEC Spec E Through H, 39 DFED Begin Spec F, 43 DFED Spec A, 35
Guard, Belt – Radiator DFEB Begin Spec R, 51 DFEB Spec J Through K, 47 DFEB Spec L Through P, 49 DFEC Begin Spec J, 51 DFEC Spec C Through D, 47 DFEC Spec E Through H, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFED Spec B Through E, 49 DFFB Begin Spec J, 47	DFED Spec B Through E, 39 DFFB Begin Spec J, 35 Engine To Control Sets With Detector Control, 101 Sets With PowerCommand Control DFEB Begin Spec R, 107 DFEB Spec J Through P, 103 DFEC Begin Spec J, 107 DFEC Spec C Through H, 103 DFED Begin Spec F, 107 DFED Spec A Through E, 103 DFFB Begin Spec J, 103
Guard, Damper – Radiator DFEB Begin Spec R, 51 DFEC Begin Spec J, 51 DFED Begin Spec F, 51	Excitation Loss Module, 136 Generator – Model HC5 Generators, 89 Governor – Paralleling Interconnect Terminal Block, 142 Ground Fault Relay, 121
Guard, Fan – Generator – Model HC5 Generators, 89	Junction Box – Engine Coolant Heater, 30 Low Battery Voltage Sensor, 122

Low Coolant Level Sender Sets With Continuously Monitored Low Coolant Level DFEB Begin Spec P, 33 DFEB Spec J Through N, 32 DFEC Begin Spec H, 33 DFEC Spec C Through G, 32 DFED Begin Spec E, 33 DFED Spec A Through D, 32 DFFB Begin Spec J, 32 Sets Without Continuously Monitored Low Coolant Level, 31 Over/Under Frequency Relay, 120 Over/Under Voltage Relay DFEB Begin Spec K, 119	Housing, Control Model HC5 Generators DFEB Begin Spec M, 77 DFEB Spec J Through L, 75 DFEC Begin Spec F, 77 DFEC Spec C Through E, 75 DFED Begin Spec C, 77 DFED Spec A Through B, 75 DFFB Begin Spec J, 75 Model HC6 Generators DFEB Spec M, 81 DFEC Spec F, 81 DFED Spec A Through B, 79 DFED Spec C, 81
DFEB Spec J, 118 DFEC Begin Spec D, 119 DFEC Spec C, 118 DFED, 119 DFFB Begin Spec L, 119	DFFB Begin Spec J, 79 Indicator, Service Heavy Duty Air Cleaner
DFFB Spec J Through K, 118 Paralleling Interconnect Terminal Block, 142 Permanent Magnet Generator – Model HC5 Generators, 90	DFEB, DFEC, DFED, 22 DFFB, 23 Standard Air Cleaner DFEB, DFEC, DFED, 20
Power Factor Meter, 124 Remote Control, 149 Time Delay Start/Stop, 117	DFFB, 21 Inlet, Water – Radiator
Wattmeter, 123 Woodward Governor Control, 69	DFEB Begin Spec R, 51 DFEB Spec J Through K, 47 DFEB Spec L Through P, 49
Head, Lube Oil Filter, 26	DFEC Begin Spec J, 51 DFEC Spec C Through D, 47
Heater, Control Sets With Detector Control, 94 Sets With PowerCommand Control, 95 Heater, Engine Coolant	DFEC Spec E Through H, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFED Spec B Through E, 49 DFFB Begin Spec J, 47
DFEB Begin Spec R, 41 DFEB Spec J Through K, 35 DFEB Spec L Through P, 37 DFEC Begin Spec J, 41 DFEC Spec C Through D, 35 DFEC Spec E Through H, 37 DFED Begin Spec F, 41 DFED Spec A, 35	Isolator, Vibration Control Box, 109 Control Box – Sets With Detector Control, 97 Pilot Solenoid – Sets With PowerCommand Control, 19 Remote Control, 149
DFED Spec B Through E, 37 DFFB Begin Spec J, 35	Key, Replacement – Selector Switch, 111
Heater, Generator, 93	Kit, Language Chip – EPROM (Control Box), 109
Heater, Oil Pan, 27	Lamp, Indicator – Replacement – Fuel Tank Control, 66
Hose, Lube Oil Filter, 26	Lead, Circuit Breaker
Hourmeter – Sets With Detector Control, 99 Housing	IEC Conformity – Model HC6 Generators DFED Spec A, 167 DFED Spec B, 169
DFEB Begin Spec K, 85 DFEB Spec J, 83	DFED Spec C, 171 DFFB Begin Spec K, 167
DFEC Begin Spec D, 85 DFEC Spec C, 83 DFED Begin Spec A, 85 DFED Spec A Through C, 83 DFFB Begin Spec J, 83 , 85	Non-UL Listed - Model HC5 Generators DFEB Spec J Through L, 183 DFEC Spec C Through E, 183 DFED Spec A Through B, 183 DFFB Begin Spec J, 183

UL Listed	DFED Spec B Through E, 17
DFFB Spec J, 151	DFFB Begin Spec J, 15
Model HC5 Generators DFEB Spec J Through L, 153	Louvre, Generator, 150
DFEC Spec C Through E, 153	Lug, Solderless – Circuit Breaker
DFED Spec A Through B, 153	IEC Conformity – Model HC6 Generators
DFFB Begin Spec J, 153	DFED Spec A, 167
Model HC6 Generators	DFED Spec B, 169
DFED Spec A Through B, 161	DFED Spec C, 171
DFED Spec and B, 159	DFFB Begin Spec K, 167
DFED Spec C, 165	Non-UL Listed - Model HC5 Generators
DFFB Begin Spec K, 159 , 161	DFEB Spec J Through L, 183
	DFEC Spec C Through E, 183
Lead, Circuit Breaker and Disconnect Switch – UL Listed,	DFED Spec A Through B, 183
IEC Conformity	DFFB Begin Spec J, 183
Model HC5 Generators	UL Listed
DFEB Begin Spec N, 177	Model HC5 Generators
DFEC Begin Spec F, 177 DFED Begin Spec D, 177	DFEB Spec J Through L, 155 , 157
Model HC6 Generators – DFED Spec C, 179	DFEC Spec C Through E, 155 , 157
Model 1100 Generators – DFED Spec C, 179	DFED Spec A Through B, 155 , 157 DFFB Begin Spec J, 155 , 157
Lead, Disconnect Switch - Molded Case - UL Listed -	Model HC6 Generators
Model HC5 Generators – DFED Spec A and B, 173	DFED Spec A and B, 159
Lead, Thermocouple – Pyrometer	DFED Spec A Through B, 161
Sets With Detector Control, 134	DFED Spec C, 165
Sets With PowerCommand Control, 135	DFFB Begin Spec K, 159 , 161
	- · · · · · · · · · · · · · · · · · · ·
Lens, Indicator Light	Lug, Solderless – Circuit Breaker and Disconnect Switch – UL Listed, IEC Conformity
Ground Fault Relay, 121	Model HC5 Generators
Low Battery Voltage Sensor, 122	DFEB Begin Spec N, 175
Low Coolant Level Sender – With Continuously Monitored Low Coolant Level	DFEC Begin Spec F, 175
DFEB Begin Spec P, 33	DFED Begin Spec D, 175
DFEB Spec J Through N, 32	Model HC6 Generators, DFED Spec C, 179
DFEC Begin Spec H, 33	
DFEC Spec C Through G, 32	Lug, Solderless – Disconnect Switch – Molded Case – UL Listed – Model HC5 Generators – DFED Spec A and B,
DFED Begin Spec E, 33	173
DFED Spec A Through D, 32	
DFFB Begin Spec J, 32	
Over/Under Voltage Relay, 119	Meter, Frequency
Long Deplement Over/Under Fraguency Policy 420	Control Door, 111
Lens, Replacement – Over/Under Frequency Relay, 120	Sets With Detector Control, 98
Light Assembly, Indicator	Meter, Power Factor, 124
DC Control Door Assembly – Sets With Detector Control,	Module, Audible Alarm – Sets With PowerCommand
99	Control, 127
Fuel Tank Control, 66	·
Light, Indicator	Module, Excitation Loss, 136
AC Control Door – Upper/Lower Scale – Sets With Detec-	Module, Radio Frequency Interference, 137
tor Control, 98	Mount, Shock
Over/Under Voltage Relay	Ground Fault Relay, 121
DFEB Spec J, 118	Over/Under Frequency Relay, 120
DFEC Spec C, 118	Over/Under Voltage Relay, 118
DFFB Spec J Through K, 118	Power Factor Meter, 124
Light, Panel – DC Control Door – Sets With Detector	Mounting, Generator - Model HC6 Generators, 92
Control, 99	Muffler
Line, Fuel – Fuel Supply and Fuel Return – Generator Sets	Critical, 192
With Detector Control	Housed Sets, 29
DFEB Spec J Through K, 15	Industrial, 192
DFEB Spec L Through P, 17	Residential, 192
DFEC Spec C Through D, 15	. Co.sormon, rem
DFEC Spec E Through H, 17	
DFED Spec A, 15	Paint, 13

Panel, Paralleling Interconnect Terminal Block, 142	Rail, Mounting
Panel, Annunciator	Over/Under Frequency Relay, 120
DFEB Begin Spec L, 139	Over/Under Voltage Relay, 118
DFEB Spec J Through K, 138	Degulator Valtage
DFEC Begin Spec E, 139	Regulator, Voltage
DFEC Spec C Through D, 138	Manual, 112
DFED Begin Spec C, 139	Sets With Detector Control, 113
DFED Spec A Through B, 138	Relay
DFFB Begin Spec J, 138	Alarm, 114
	Auxiliary, 192
Panel, Control Housing	Control Box, 109
Model HC5 Generators	Engine Coolant Heater
DFEB Begin Spec M, 77	DFEB Begin Spec R, 43
DFEB Spec J Through L, 75	DFEB Spec J Through K, 35
DFEC Begin Spec F, 77	DFEB Spec L Through P, 39
DFEC Spec C Through E, 75	DFEC Begin Spec J, 43
DFED Begin Spec C, 77	DFEC Spec C Through D, 35
DFED Spec A Through B, 75	DFEC Spec E Through H, 39
DFFB Begin Spec J, 75	DFED Begin Spec F, 43
Model HC6 Generators	DFED Spec A, 35
DFEB Spec M, 81	DFED Spec B Through E, 39
DFEC Spec F, 81	DFFB Begin Spec J, 35
DFED Spec A Through B, 79	Fuel Pump – Fuel Tank Control, 66
DFED Spec C, 81	Ground Fault Alarm, 121
DFFB Begin Spec J, 79	Over/Under Frequency, 120
Panel, Membrane – Remote Annunciator Panel, 139	Over/Under Voltage, 118
Dielous Magnetie	Start Solenoid, Sets With Detector Control
Pickup, Magnetic	DFEB Begin Spec L, 17
Electronic Governor, 70	DFEB Spec J Through K, 15
Sets With PowerCommand Control, 19	DFEC Begin Spec E, 17
Woodward Governor, 69	DFEC Spec C Through D, 15
Plug – Fuel Pump EFC Cavity – Woodward Governor, 69	DFED Begin Spec B, 17
Potentiometer	DFED Spec A, 15
Speed Adjusting – Governor Controller, 130	DFFB Begin Spec J, 15
Voltage Adjust – AC Control Door – Sets With Detector	Thermistor (Control Box), 109
Control, 113	Thermister (Gentrer Box), 100
	Relay, Power – Engine Coolant Heater – Spec A and B, 35
PowerCommand Control, 100	D : (0"T) (0) 404
Pulley, Alternator	Resistor, Oil Temperature Gauge, 131
45 Amp, 55	Rotor Assembly, Exciter – Model HC5 Generators, 89
75 Amp, 56	·
• ·	Rotor, Generator – Model HC5 Generators, 86
Pump	Dates Daymanant Marinet Consister Madel LICE
Day Tank – Fuel Transfer, 61	Rotor, Permanent Magnet Generator – Model HC5
Fuel – Woodward Governor, 69	Generators, 90
Pyrometer	
Sets With Detector Control, 134	
Sets With PowerCommand Control, 135	Seal, O-Ring - EFC Cavity Plug - Woodward Governor, 69
	Sealant, Thread, 13
	,
Radiator	Sender, Low Coolant Level – Sets With Radiator Cooling
DFEB Begin Spec R, 51	Sets With Continuously Monitored Low Coolant Level
DFEB Spec J Through K, 47	DFEB Begin Spec P, 33
DFEB Spec L Through P, 49	DFEB Spec J Through N, 32
DFEC Begin Spec J, 51	DFEC Begin Spec H, 33
DFEC Spec C Through D, 47	DFEC Spec C Through G, 32
DFEC Spec E Through H, 49	DFED Begin Spec E, 33
DFED Begin Spec F, 51	DFED Spec A Through D, 32
DFED Spec A, 47	DFFB Begin Spec J, 32
DFED Spec B Through E, 49	Sets Without Continuously Monitored Low Coolant Level,
DFFB Begin Spec J, 47	31

Sender, Oil Pressure	Solenoid, Pilot – Sets With PowerCommand Control, 19
Sets With Detector Control	Standoff, Board – Printed Circuit – Control Box, 109
DFEB Begin Spec L, 17 DFEB Spec J Through K, 15 DFEC Begin Spec E, 17 DFEC Spec C Through D, 15 DFED Begin Spec B, 17	Standoff, Insulator – Circuit Breaker IEC Conformity – Model HC6 Generators DFED Spec A, 167 DFED Spec B, 169
DFED Spec A, 15	DFED Spec C, 171
DFFB Begin Spec J, 15	DFFB Begin Spec K, 167
Sets With PowerCommand Control, 19	Non–UL Listed – Model HC5 Generators
Sender, Oil Temperature Sets With Detector Control DFEB Begin Spec L, 17 DFEB Spec J Through K, 15 DFEC Begin Spec E, 17 DFEC Spec C Through D, 15	DFEB Spec J Through L, 183 DFEC Spec C Through E, 183 DFED Spec A Through B, 183 DFFB Begin Spec J, 183 UL Listed Model HC5 Generators DFEB Spec J Though L, 155, 157
DFED Begin Spec B, 17 DFED Spec A, 15	DFEC Spec C Through E, 155, 157
DFFB Begin Spec J, 15	DFED Spec A Through B, 155 , 157 DFFB Begin Spec J, 155 , 157
Sets With PowerCommand Control, 19	Model HC6 Generators
Sender, Oil Temperature Gauge – Oil Pan Mounted, 131	DFED Spec A and B, 159 DFED Spec A Through B, 161
Sender, Water Temperature	DFED Spec C, 165
Generator Sets With Detector Control	DFFB Begin Spec K, 159 , 161
DFEB Begin Spec L, 17	Standoff, Insulator - Circuit Breaker and Disconnect Switch
DFEC Begin Spec E, 17	 UL Listed, IEC Conformity
DFED Begin Spec B, 17 Sets With Detector Control	Model HC5 Generators
DFEB Spec J Through K, 15	DFEB Begin Spec N, 175
DFEC Spec C Through D, 15	DFEC Begin Spec F, 175
DFED Spec A, 15	DFED Begin Spec D, 175 Model HC6 Generators, DFED Spec C, 179
DFFB Begin Spec J, 15	•
Sensor – Low Battery Voltage, 122	Standoff, Insulator – Disconnect Switch – Molded Case – UI Listed – Model HC5 Generators – DFED Spec A and B, 173
Separator, Fuel/Water	
Sets With Detector Control	Starter
DFEB Begin Spec L, 17 DFEB Spec J Through K, 15	Air, 57 Electric, 59
DFEC Begin Spec E, 17	,
DFEC Spec C Through D, 15	Starting Aid, 147
DFED Begin Spec B, 17	Stator, Exciter – Model HC5 Generators, 89
DFED Spec A, 15	Stator, Generator – Model HC5 Generators, 86
DFFB Begin Spec J, 15	
Sets With PowerCommand Control, 19 Shim, Generator Mounting – Model HC6 Generators, 92	Stator, Permanent Magnet Generator – Model HC5 Generators, 90
-	Strap, Bond – Control Box, 109
Shroud, Fan – Radiator DFEB Begin Spec R, 51 DFEB Spec J Through K, 47	Strap, Ground Detector Control, 97
DFEB Spec L Through P, 49	Remote Control, 149
DFEC Begin Spec J, 51	Strip, Marker
DFEC Spec C Through D, 47 DFEC Spec E Through H, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFED Spec B Through E, 49	Engine Coolant Heater DFEB Begin Spec R, 43 DFEB Spec L Through P, 39 DFEC Begin Spec J, 43 DFEC Spec E Through H, 39 DFED Begin Spec F, 43
DFFB Begin Spec J, 47	DFED Spec B Through E, 39
Signal, Audible – Annunciator, 138	Woodward Governor Terminal Block, 69
Skid, 67	Support, Alternator – 45 Amp, 55
Socket, Relay - Control Box, 109	Switch – Emergency Stop, 132

Switch, Disconnect	Thermostat
UL Listed – Molded Case, Model HC5 Generators, DFED	Engine Coolant Heater
Spec A and B, 173	DFEB Begin Spec R, 41
UL Listed, IEC Conformity	DFEB Spec J Through K, 35
Model HC5 Generators	DFEB Spec L Through P, 37
DFEB Begin Spec N, 175	DFEC Begin Spec J, 41
DFEC Begin Spec F, 175	DFEC Spec C Through D, 35
DFED Begin Spec D, 175	DFEC Spec E Through H, 37
Model HC6 Generators, DFED Spec C, 179	DFED Begin Spec F, 41
Switch, Float – Basin, 143	DFED Spec A, 35
Ownori, Float Basin, 140	DFED Spec B Through E, 37
Switch, Oil Pressure – Sets With Detector Control	DFFB Begin Spec J, 35
DFEB Begin Spec L, 17	High Coolant Temperature, Sets With Detector Control
DFEB Spec J Through K, 15	DFEB Begin Spec L, 17
DFEC Begin Spec E, 17	DFEB Spec J Through K, 15
DFEC Spec C Through D, 15	DFEC Begin Spec E, 17
DFED Begin Spec B, 17	DFEC Spec C Through D, 15
DFED Spec A, 15	DFED Begin Spec B, 17
DFFB Begin Spec J, 15	DFED Spec A, 15
Switch Dunbhutton Emergency Ston Central Deer 111	DFFB Begin Spec J, 15
Switch, Pushbutton – Emergency Stop – Control Door, 111	
Switch, Rocker – DC Control Door – Sets With Detector	Transducer, Watts
Control, 99	Power Factor Meter, 124
Switch, Rocker – Fuel Tank Control, 66	Wattmeter, 123
Owiton, Nocker – Fuer rank Control, Co	Transformer
Switch, Rotary – Voltmeter/Ammeter – Sets With Detector	Auxiliary Terminal Block – Sets With Detector Control, 141
Control, 98	Current, 145
Switch, Selector	Cross Current Compensation Circuit, 144
Key Operated – Control Door, 111	VAR Power Factor Controller, 125
Run/Off/Auto – Control Door, 111	With ower radio controller, 120
ran, on race of mor boot, 111	Trip, Shunt – Circuit Breaker
Switch, Temperature – Low Engine Coolant	Non–UL Listed – Model HC5 Generators
Sets With Detector Control	DFEB Spec J Through L, 185
DFEB Begin Spec L, 17	DFEC Spec C Through E, 185
DFEB Spec J Through K, 15	DFED Spec A Through B, 185
DFEC Begin Spec E, 17	DFFB Begin Spec J, 185
DFEC Spec C Through D, 15	UL Listed, IEC Conformity – Model HC5 Generators
DFED Begin Spec B, 17	DFEB Begin Spec N, 177
DFED Spec A, 15	DFEC Begin Spec F, 177
DFFB Begin Spec J, 15	DFED Begin Spec D, 177
Sets With PowerCommand Control, 19	UL Listed, IEC Conformity – Model HC6 Generators,
Switch Togglo	DFED Spec C, 181
Switch, Toggle	Tube Air latet
Cross Current Compensation Circuit, 144	Tube, Air Inlet
Woodward Governor, 69	Heavy Duty Air Cleaner
Switch, Trip Alarm or Auxiliary Contact – Circuit Breaker –	DFEB, DFEC, DFED, 22
UL Listed, IEC Conformity	DFFB, 23
Model HC5 Generators	Standard Air Cleaner
DFEB Begin Spec N, 177	DFEB, DFEC, DFED, 20
DFEC Begin Spec F, 177	DFFB, 21
DFED Begin Spec D, 177	Tube, Radiator Inlet and Outlet
Model HC6 Generators – DFED Spec C, 181	DFEB Begin Spec R, 51
,	DFEB Spec J Through K, 47
	DFEB Spec L Through P, 49
Tachometer, 129	DFEC Begin Spec J, 51
Tank, Day	DFEC Spec C Through D, 47
Models with Automatic Fuel Transfer Pump Control, 63	DFEC Spec E Through H, 49
Models with Float Valve, 65	DFED Begin Spec F, 51
Models with Fuel Transfer Pump and Automatic Pump	DFED Spec A, 47
Control, 61	DFED Spec B Through E, 49
Terminal Assembly – Generator Sets with Detector Control,	DFFB Begin Spec J, 47
15	Tubing, Exhaust – Flexible, 29

Valve, Float, 65	Wrapper, Control Box – Sets With PowerCommand Control
	Model HC5 Generators
Valve, Fuel Pressure Gauge, 24	DFEB Begin Spec M, 77
Valve, Shutoff Sets With Detector Control DFEB Begin Spec L, 17 DFEB Spec J Through K, 15 DFEC Begin Spec E, 17 DFEC Spec C Through D, 15 DFED Begin Spec B, 17	DFEB Spec J Through L, 75 DFEC Begin Spec F, 77 DFEC Spec C Through E, 75 DFED Begin Spec C, 77 DFED Spec A Through B, 75 DFFB Begin Spec J, 75 Model HC6 Generators DFEB Spec M, 81
DFED Spec A, 15	DFEC Spec F, 81
DFFB Begin Spec J, 15 Sets With PowerCommand Control, 19	DFED Spec A Through B, 79 DFED Spec C, 81
Valve, Thermostatic, 45	DFFB Begin Spec J, 79 Wrapper, Fan – Radiator
Voltmeter AC – Sets With Detector Control, 98 Control Door, 111 DC – Sets With Detector Control, 99	DFEB Begin Spec R, 51 DFEB Spec J Through K, 47 DFEB Spec L Through P, 49 DFEC Begin Spec J, 51 DFEC Spec C Through D, 47 DFEC Spec E Through H, 49
Wattmeter AC Control Panel, 123 Control Door, 111	DFED Begin B Through E, 49 DFED Begin Spec F, 51 DFED Spec A, 47 DFFB Begin Spec J, 47

Abbreviations


Some of the following abbreviations may be used throughout this Parts Catalog:

AC Amp A/R AVR AWG DC Deg EFC EIT EPROM	Alternating Current Ampere As Required Automatic Voltage Regulator American Wire Gauge Direct Current Degree Electronic Fuel Control External/Internal Tooth Erasable Programmable Read	mm MOH NFS NPT OD oz. PC Ph PMG PT/CT	Millimeter Mobile Off Highway Not For Sale National Pipe Thread Outside Diameter Ounce Printed Circuit Phase Permanent Magnet Generator Potential Transformer/Current
ET GFI ID IEC	Only Memory External Tooth Ground Fault Interrupter Inside Diameter International Electrotechnical	RFI RT Spec Thk	Transformer Radio Frequency Interference Right Specification Thick
IT kW LPG LT M(meter number)	Commission Internal Tooth Kilowatt Liquid Petroleum Gas Left Meter	UL UNC UNF VAC VDC W/(ET, IT, EIT)	Underwriters Laboratories Inc. Union National Coarse Union National Fine Volts Alternating Current Volts Direct Current With

Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Onan Green Enamel				Cummins Beige Enamel
			(Non-Metallic)	52	5-0551-02	_	12 oz. Pressurized
5	525-0305	_	12 oz. Pressurized				Spray Can
			Spray Can	52	5-0551-03	_	Quart Can
5	525-0306	_	Quart Can	52	5-0551-04	_	Gallon Can
5	525-0304	-	Gallon Can	51	8-0601	_	Sealant, Thread (6 ml Tube)

External Engine Parts Generator Sets With Detector Control DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

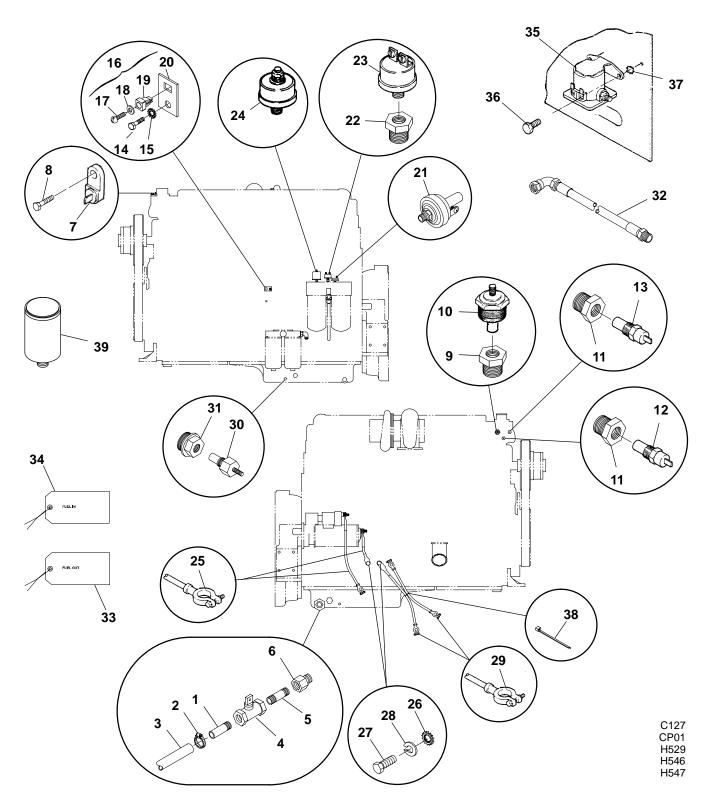


External Engine Parts Generator Sets With Detector Control DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505-0324	1	Nipple, Half (3/4" x 2")	22	505-1503	1	Adapter, Pipe (1/8-27 x
2	503-0189	1	Clamp, Hose				1/8–27)
3	503–0249	_	Hose, Bulk (1" ID x 1-3/8" OD) (Order by the Foot –	23	309–0641–03		Switch Oil Pressure (Closes at 14 lbs. Descending) (S1)
4	504-0171	1	Two Feet Required) Valve, Shutoff	24 25	193–0244–01	1	Sender, Oil Pressure (E1) Cable, Battery
5	505-0102	1	Nipple, Pipe (3/4" x 1-3/8")		416-0444	1	44" – Battery to Starter
6	505-1433	1	Adapter, Pipe				(With 1 Ring and and 1
7	309-0269	1	Switch, Temperature – Low				Bolted End)
			Engine Coolant (S4)		416-0632	1	14–1/2 " – Starter and
8	800-0062	1	Screw, Cap – Hex Head (3/8–16 x 4")				Engine Ground (With 2 Ring Terminal Ends)
9	505-0021	1	Bushing, Reducer (3/4" to	26	856-0013	2	Washer, Lock (EIT) (1/2")
			1/2")	27	800-0090	2	Screw, Cap – Hex Head
10	193-0375	1	Sender, Temperature – Water				(1/2–13 x 1")
			(E2)	28	850-0060	2	Washer, Lock - Spring (1/2")
11	505-0019	2	Bushing, Reducer (1/2" to	29			Cable, Battery
			3/8")		416-0960	1	29" - Battery to Starter (With
12	309–0436	1	Thermostat – High Engine Coolant Temperature (Open				1 Ring End and 1 Bolted End)
			at 196 Deg F, Closes at 216 Deg F) (Includes #8–32 Pan		416–0446	1	12–1/2" – Jumper (With Red Colored Battery Boot)
			Head Screw and #8 Lock Washer) (S6 – Pre-Alarm)	30	193–0388	1	Sender, Oil Temperature (200 Deg) (E4)
13	309–0437	1	Switch, Thermostat – High Engine Coolant Temperature	31	505-0151	1	Bushing, Reducer (1/2" to 1/8")
			(Opens at 202 Deg F –	32			Line, Fuel – Flexible
			Closes at 222 Deg F) (S2)		501-0084	1	Fuel Supply (36")
14	821-5004-02	1	Screw, Cap – Hex Head		501-0216	1	Fuel Return (42")
			(3/8–16 x 3/4")	33	098-3171	1	Tag, Fuel Out
15	856-0010	2	Washer, Lock – EIT (3/8")	34	098-3172	1	Tag, Fuel In
16	332-1292	1	Terminal Assembly (Includes	35	307-2167	1	Relay, Start Solenoid
			Parts Marked *) (T26)	36	821–0010	2	Screw, Lock – Hex Washer
17	809-0036	1	* Screw, Sheet Metal - Round				Head (1/4-20 x 1/2")
40	500 0045		Head (#8 x 7/8")	37	856-0006	1	Washer, Lock – EIT (1/4")
18	508-0015	1	* Washer, Fiber	38	332–0941	A/R	Tie, Cable
19	870-0263	1	* Nut, Insulation (#8)	39	149–2278	2	Separator, Fuel/Water
20	332–1281	1	* Bracket, Terminal	* 0	ata da aboda de e	000 400	Tamaia al Assaulhi.
21	309–0641–07	1	Switch, Oil Pressure (Closes at 20 lbs. Descending) (S5 – Pre-Alarm)	^ Pa	rts included in 3	332–1292	2 Terminal Assembly.

¹⁵


External Engine Parts Generator Sets With Detector Control DFEB Begin Spec L, DFEC Begin Spec E, DFED Begin Spec B

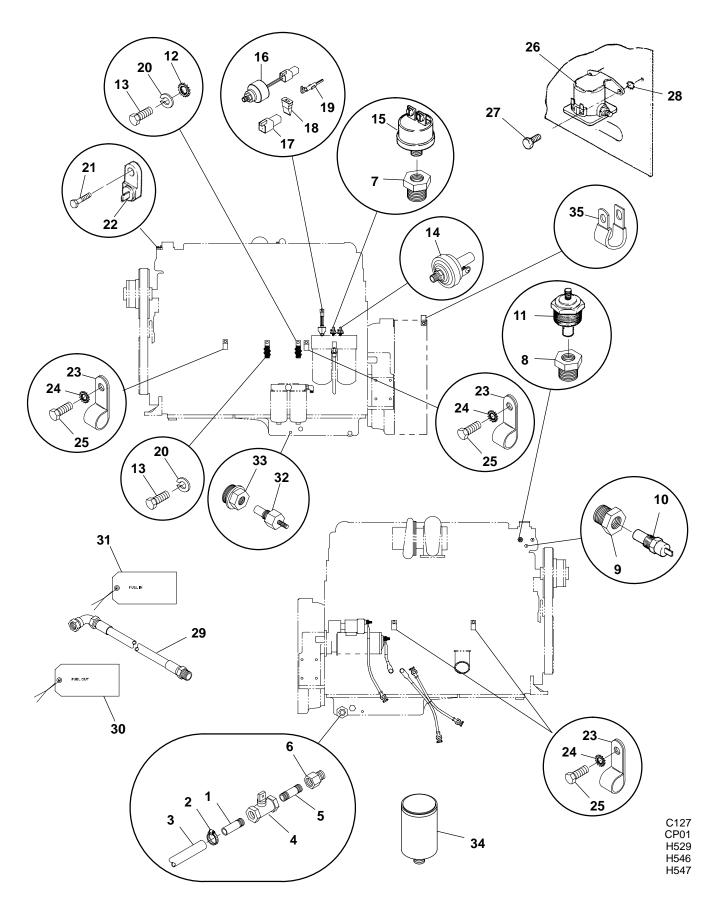

External Engine Parts Generator Sets With Detector Control DFEB Begin Spec L, DFEC Begin Spec E, DFED Begin Spec B

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505-0324	1	Nipple, Half (3/4" x 2")	21	309-0269	1	Switch, Temperature – Low
2 3	503–0189 503–0249	1 –	Clamp, Hose Hose, Bulk (1" ID x 1-3/8" OD) (Order by the Foot –	22	800-0062	1	Engine Coolant (S4) Screw, Cap – Hex Head (3/8–16 x 4")
4	504-0171	1	Two Feet Required) Valve, Shutoff	23	518–0633	4	Clip, "J" (1-1/2" ID) DFEB Spec R
5 6	505–0102 505–1433	1 1	Nipple, Pipe (3/4" x 1-3/8") Adapter, Pipe				DFEC Spec J DFED Spec F
7	505-1503	1	Adapter, Pipe		518-0548-02	4	Clamp, Retainer (1-1/4" ID)
8	505-0021	1	Bushing, Reducer (3/4" to 1/2")				DFEB Begin Spec S DFEC Begin Spec K
9	505–0019	2	Bushing, Reducer (1/2" to 3/8")	24	056 0010	4	DFED Begin Spec G Washer, Lock – EIT (3/8")
10			Thermostat, High Coolant Temperature (Opens at 202 Deg F, Closes at 222	24	856–0010	4	DFEB Begin Spec R DFEC Begin Spec J DFED Begin Spec F
			Deg F) (S2)	25	801-0048	4	Screw, Cap – Hex Head
	309–0576	1	DFEB Spec L Through R DFEC Spec E Through J DFED Spec B Through F				(3/8–24 x 3/4") DFEB Begin Spec R DFEC Begin Spec J
	309–0673	1	DFEB Begin Spec S				DFED Begin Spec F
			DFEC Begin Spec K	26	307–2167	1	Relay, Start
4.4	100 0117 01		DFED Begin Spec G	27	821–0010	2	Screw, Lock – Hex Washer
11	193–0447–01	1	Sender, Water Temperature (Opens at 190 Deg F, Closes at 214 Deg F) (S6)	28 29	856-0006	1	Head (1/4–20 x 1/2") Washer, Lock – EIT (1/4") Line, Fuel – Flexible
12	856-0010	1	Washer, Lock – EIT (3/8")	20	501-0084	1	Fuel Supply (36")
13	801–0048	2	Screw, Cap – Hex Head		501–0216	1	Fuel Return (42")
	00. 00.0	_	(3/8–24 x 3/4")	30	098–3171	1	Tag, Fuel Out
14	309-0641-07	1	Switch, Oil Pressure (Closes	31	098–3172	1	Tag, Fuel In
			at 20 lbs. Descending) (S5 – Pre-Alarm)	32	193–0388	1	Sender, Oil Temperature (200 Deg) (E4)
15	309-0641-03	1	Switch, Oil Pressure (Closes at 14 lbs. Descending) (S1)	33	505–0151	1	Bushing, Reducer (1/2" to 1/8")
16	193–0448	1	Sender, Oil Pressure (E1) (Includes Parts Marked *)	34 35	149–2278 518–0548–60	2 1	Separator, Fuel/Water Clamp, Retainer (1–1/4" ID)
17	323–1549	1	* Connector, Receptacle – 4 Place	00	0.0 00.0 00	·	DFEB Begin Spec S DFEC Begin Spec K
18	323-1548	1	* Wedge, Receptacle				DFED Begin Spec G
19	323–1492	4	* Socket, Contact				=: = = = = =
20	850-0050	2	Washer, Lock – Spring (3/8")	* – F	arts Included I	n 193–04	48 Oil Pressure Sender


External Engine Parts Generator Sets With PowerCommand Control

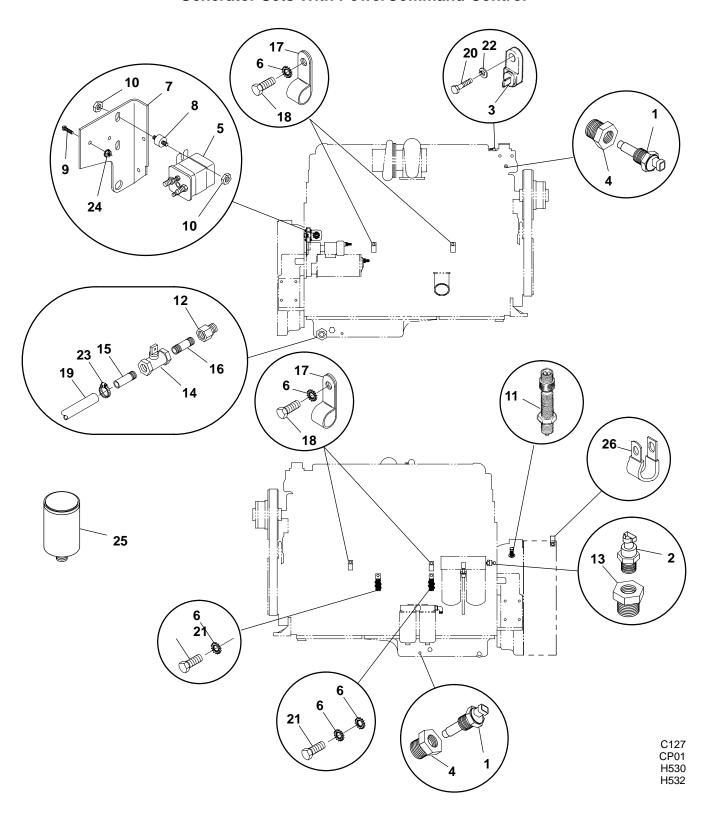

External Engine Parts Generator Sets With PowerCommand Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0432	2	Sender, Oil Temperature (S2 Engine Block, E4 Oil Pan)	17	518–0633	4	Clip, J (1–1/2" ID) DFEB Spec R
2	193-0444	1	Sender, Oil Pressure (S1)				DFEC Spec J
3	309-0269	1	Switch, Temperature - Low				DFED Spec F
			Engine Coolant (S4)		518-0548-02	4	Clamp, Retainer (1–1/4" ID)
4	505–0019	2	Bushing, Pipe – Reducer (1/2" to 3/8")				DFEB Begin Spec S DFEC Begin Spec K
5	307-2621-02	1	Solenoid, Pilot (K4)				DFED Begin Spec G
6			Washer, Lock - EIT (3/8")	18	801-0048	4	Screw, Cap - Hex Head
	856–0010	3	DFEB Spec J Through P DFEC Spec C Through H DFED Spec A Through E DFFB				(3/8–24 x 3/4") DFEB Begin Spec R DFEC Begin Spec J DFED Begin Spec F
	856–0010	7	DFEB Begin Spec R DFEC Begin Spec J	19	503-0249	-	Hose, Bulk (1" ID) (Order By the Foot – 2 Feet Required)
			DFED Begin Spec F	20	800-0062	1	Screw, Cap – Hex Head
7	319-2236	1	Bracket, Mounting			•	(3/8–16 x 4")
8	402-0610	2	Isolator, Vibration	21	800-0270	2	Screw, Cap – Hex Head
9	812-0067	2	Screw, Machine – Round Head (#6–32 x 7/8")				(3/8–24 x 5/8") DFEB Spec J Through P
10	870-0212	4	Nut, Locking (1/4–20)				DFEC Spec C Through H
11	151-0411	1	Pickup, Magnetic				DFED Spec A Through E
12	505-1433	1	Adapter, Pipe (Includes				DFFB
			O-Ring) (3/4–14 to	22	850-0050	1	Washer, Lock - Spring (3/8")
			1–1/16–12)	23	503-0189	1	Clamp, Hose
13	505-0007	1	Reducer, Bushing	24	870-0183	2	Nut, Hex - W/ET (#6-32)
14	504-0171	1	Valve, Shutoff	25	149-2278	2	Separator, Fuel/Water
15	505-0324	1	Nipple, Pipe – Half (3/4" x 2")	26	518-0548-60	1	Clamp, Retainer (1-1/4" ID)
16	505–0102	1	Nipple, Pipe (3/4" x 1–3/8")				DFEB Begin Spec S DFEC Begin Spec K DFED Begin Spec G


Air Cleaner Standard DFEB, DFEC, DFED

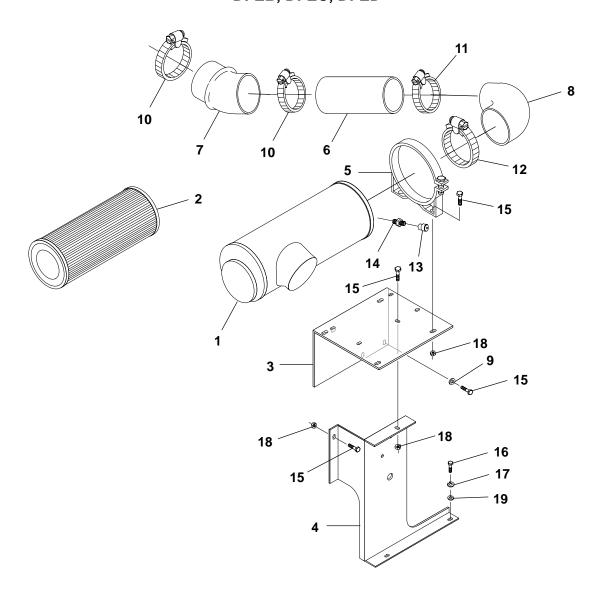

D041

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140–2463	1	Cleaner Assembly, Air (Includes Element – Ref	10 11	503–1870–11 503–1870–12	2	Clamp, Hose (6" ID) Clamp, Hose (6-1/2" ID)
			No. 2)	12	503-1870-12		Clamp, Hose (6–1/2 1D) Clamp, Hose (7–1/2" ID)
2	140-2464	1	Element, Air Cleaner	13	140–1548	1	Indicator, Service
3	140-2460	1	Bracket, Mounting	14	502-0175	1	Adapter, Pipe (1/8")
4	140-2459	1	Bracket, Mounting	15	821-5004-02	8	Screw, Self-Locking - Hex
5	140-1973	2	Band, Mounting				Washer Head
6	140-2516	1	Tube, Air Inlet (6" OD x 11")				(3/8-16 x 3/4")
7	503–1702	1	Elbow, Reducer (6" ID to 5–1/2" ID – 36 Deg)	16	800–0091	2	Screw, Cap – Hex Head (1/2–13 x 1–1/4")
8	503–1703	1	Elbow, Reducer (7" ID to 6" ID – 90 Deg)	17 18	850–0060 870–0550–09	2 6	Washer, Lock – Spring (1/2") Nut, Hex – Locking (3/8–16)
9	526-0030	2	Washer, Flat (13/32")	19	526-0219	2	Washer, Flat (17/32")


Air Cleaner Standard DFFB

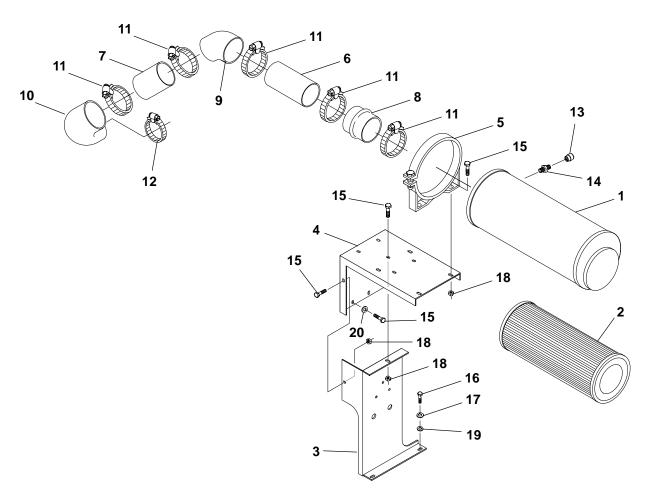

D041


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2463	1	Cleaner Assembly, Air	11	503-1870-14	4 5	Clamp, Hose
			(Includes Element – Ref	12	503-1870-11	1 1	Clamp, Hose
			No. 2)	13	140-1548	1	Indicator, Service
2	140-2464	1	Element, Air Cleaner	14	502-0175	1	Adapter, Pipe (1/8")
3	140-2462	1	Bracket, Mounting	15	821-0029	8	Screw, Self-Locking - Hex
4	140-2461	1	Bracket, Mounting				Washer Head (3/8-16 x
5	140-1973	2	Band, Mounting				3/4")
6	140-2469	1	Tube, Air Inlet (7" OD x 14")	16	800-0091	2	Screw, Cap - Hex Head
7	140-2519	1	Tube, Air Inlet (7" OD x 9")				(1/2–13 x 1–1/4")
8	503-1705	1	Hose, Hump (7" ID)	17	850-0060	2	Washer, Lock - Spring (1/2")
9	503-1484	1	Elbow, 45 Deg (7" ID)	18	870-0281	6	Nut, Hex – Locking (3/8–16)
10	503-2102	1	Elbow, Reducer – 90 Deg	19	526-0219	2	Washer, Flat (17/32")
			(7" ID to 5-1/2" ID)	20	526-0030	2	Washer, Flat (13/32")

Air Cleaner Heavy Duty DFEB, DFEC, DFED

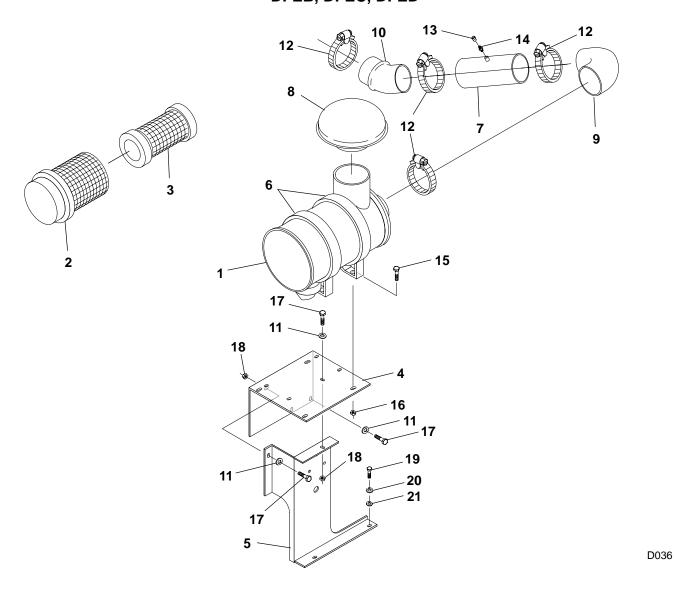


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	110.	OOLD	DESCRIPTION	110.	110.	OOLD	DEGOKII HOK
1	140-2301	1	Cleaner Assembly, Air	11	526-0030	2	Washer, Flat (13/32")
			(Includes Primary and	12	503-1870-11	2	Clamp, Hose
			Safety Elements – Ref. No	13	140-1548	1	Indicator, Service
			2 and 3)	14	140-1260	1	Fitting, Safety Filter
2	140–2465	1	Element, Air Cleaner – Primary (Outer)	15	821–0033	4	Screw, Self-Locking – Hex Washer Head
3	140-2466	1	Element, Air Cleaner –				(7/16-14 x 3/4")
			Safety (Inner)	16	870-0437	4	Nut, Self-Locking (7/16")
4	140-2460	1	Bracket, Mounting	17	821-0029	4	Screw, Locking - Hex
5	140-2459	1	Bracket, Mounting				Washer Head
6	140-2052	2	Band, Mounting				(3/8-16 x 3/4")
7	140-2474	1	Tube, Air Inlet (6" OD x 11")	18	870-0281	2	Nut, Locking (3/8–16)
8	140-1545	1	Hood, Air Inlet	19	800-0091	2	Screw, Cap - Hex Head
9	503-1461	1	Elbow, Hose (90 Deg)				(1/2-13 x 1-1/4")
10	503-1702	1	Elbow, Reducer (6" ID to	20	850-0060	2	Washer, Lock - Spring (1/2")
			5-1/2" ID)	21	526-0219	2	Washer, Flat (17/32")

Air Cleaner Heavy Duty DFFB

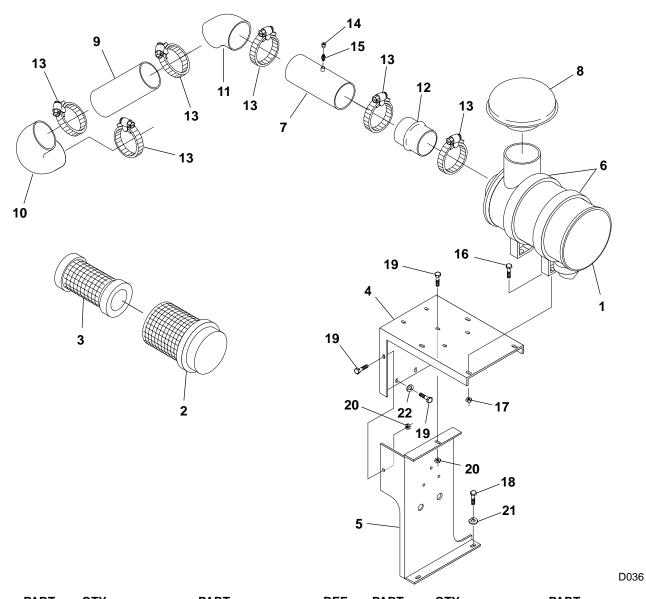

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2301	1	Cleaner Assembly, Air	12	503-1590-12	! 1	Hose, Hump
			(Includes Primary and	13	503-1870-11	2	Clamp, Hose
			Safety Elements – Ref. No	14	140-1548	1	Indicator, Service
			2 and 3)	15	140-1260	1	Fitting, Service Indicator
2	140–2465	1	Element, Air Cleaner – Primary (Outer)	16	821–0033	4	Screw, Self-Locking – Hex Washer Head (7/16–14 x
3	140-2466	1	Element, Air Cleaner –				3/4")
			Safety (Inner)	17	870-0437	4	Nut, Locking – Hex (7/16–14)
4	140-2690	1	Bracket, Mounting	18	800-0091	2	Screw, Cap - Hex Head
5	140-2689	1	Bracket, Mounting				(1/2-13 x 1-1/4")
6	140-2052	2	Band, Mounting	19	821-0029	8	Screw, Self-Locking – Hex
7	140-2688	1	Tube, Air Inlet (6" OD x 12")				Washer Head (3/8-16 x
8	140-1545	1	Hood, Air Inlet				3/4")
9	140-2686	1	Tube, Air Inlet (6" OD x 13")	20	870-0281	2	Nut, Locking – Hex (3/8–16)
10	140-2692	1	Elbow, Reducer – 90 Deg	21	850-0060	2	Washer, Lock - Spring (1/2")
			(6" ID to 5-1/2" ID)	22	526-0030	2	Washer, Flat (13/32")
11	503-1723	1	Elbow, 45 Deg (6" ID)				. ,


Fuel Pressure Gauge

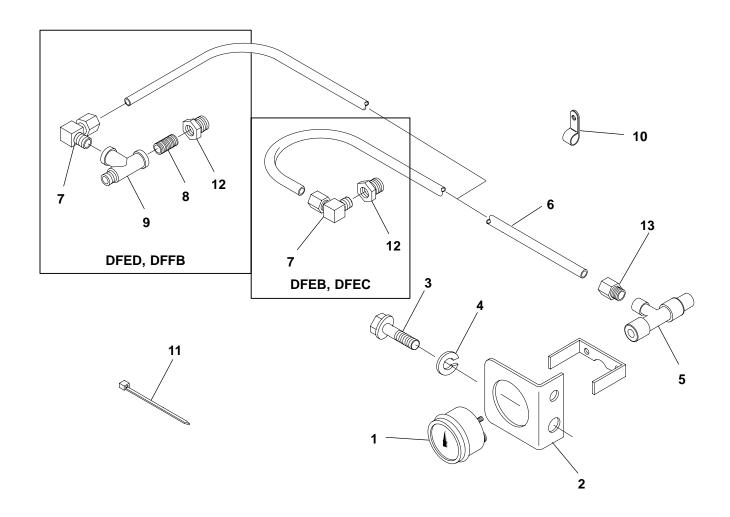

H095


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0128	1	Gauge, Fuel Pressure (0–200 Lbs) (Includes	8	505-0098	1	Nipple, Pipe (1/8") (DFED, DFFB)
			Mounting Hardware)	9	502-1226	1	Tee, Male Run (1/8") (DFED,
2	193-0029	1	Bracket, Mounting				DFFB)
3	800-0050	2	Screw, Cap - Hex Head	10	518-0350	2	Clamp, Insulated
			(3/8–16 x 1")	11	332-1794	A/R	Tie, Cable
4	850-0050	2	Washer, Lock (3/8")	12	502-1302	1	Adapter, Fuel Line
5	504-0064	1	Valve	13	502-0067	1	Connector, Male
6	370-4003	1	Tube, Copper (84")				
7	502-0034	1	Elbow, Male Compression – 90 Deg				

Mechanical Oil Pressure Gauge

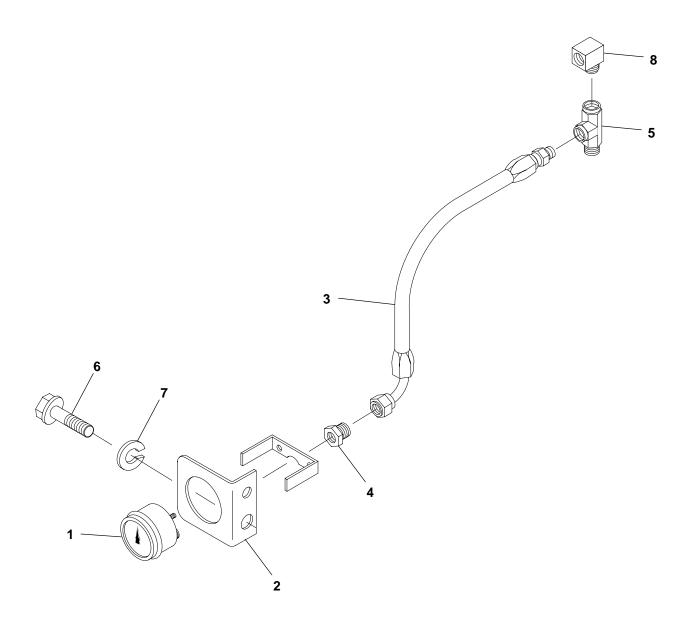


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0451	1	Gauge, Oil Pressure –	5	502-1226	1	Tee, Male Run (1/8–27)
			0-100 PSI (Includes Mounting Hardware)	6	800–0130	1	Screw, Cap – Hex Head (5/8–11 x 1")
2	193-0029	1	Bracket, Mounting	7	850-0070	1	Washer, Lock - Spring (5/8")
3	501-0619	1	Hose, Oil Gauge	8	502-0020	1	Elbow, Street – 90 Deg (1/8")
4	502-1232	1	Connector, Female				

Lube Oil Filter

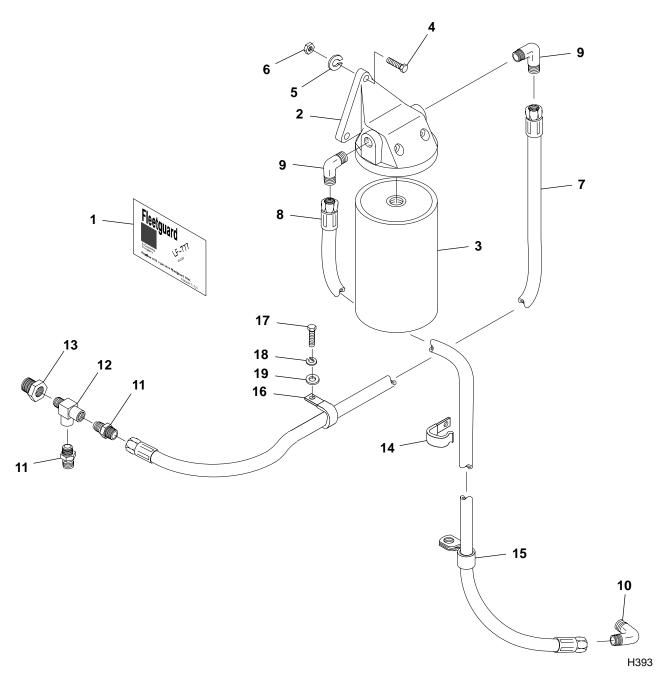


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2	098–5930–04 122–0702	1 1	Decal, Oil Filter Head. Oil Filter	11	502-1045-0)3 2	Connector, Male (5/8–18 x 1/4–18)
3	122–0777	1	Filter, Lube Oil	12	502-1070	1	Tee, Straight Pipe (1/4–18)
4	800-0052	3	Screw, Cap - Hex Head	13	505-1403	1	Bushing, Pipe - Reducer
			(3/8–16 x 4")	14	332-2634	2	Clip
5	850-0103	3	Washer, Lock - Spring (3/8")	15	518-0561	1	Clip
6	862-0033	3	Nut, Hex (3/8-16)	16	332-2921	1	Clip
7	501-0537-29	1	Hose, Oil (29")	17	800-0091	1	Screw, Cap – Hex Head
8	501-0537-18	3 1	Hose, Oil (65")				(1/2-13 x 1-1/4")
9	502-1043-11	2	Elbow, Adapter – Male	18	850-0060	1	Washer, Lock – Spring (1/2")
			(3/8–18 x 5/8–18)	19	526-0219	1	Washer, Flat (17/32")
10	502-1043-12	2 1	Elbow, Adapter – Male (1/2–14 x 5/8–18)				,

Oil Pan Heater

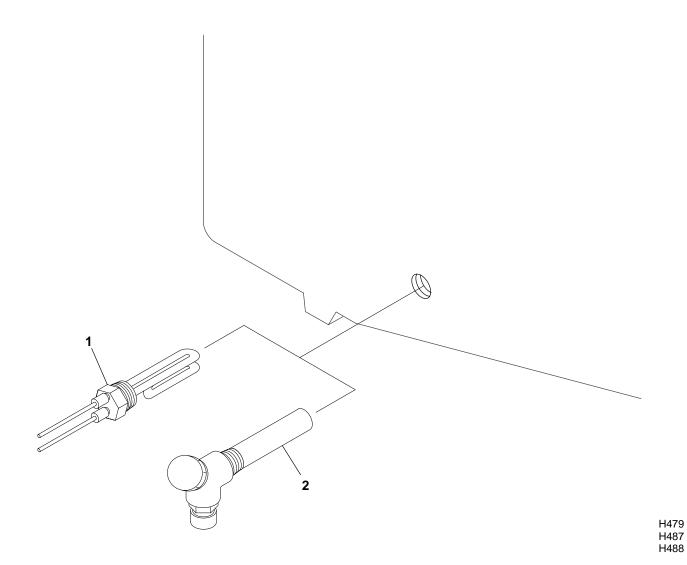


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	222 0407 0	NO 4	Heater, Oil (300 Watt)	2	333-0407-0	5 1	Heater, Oil (300 Watt, 480
	333-0407-0 333-0407-0		120 Volt 240 Volt				Volt)

Exhaust Elbow (Unhoused Sets)

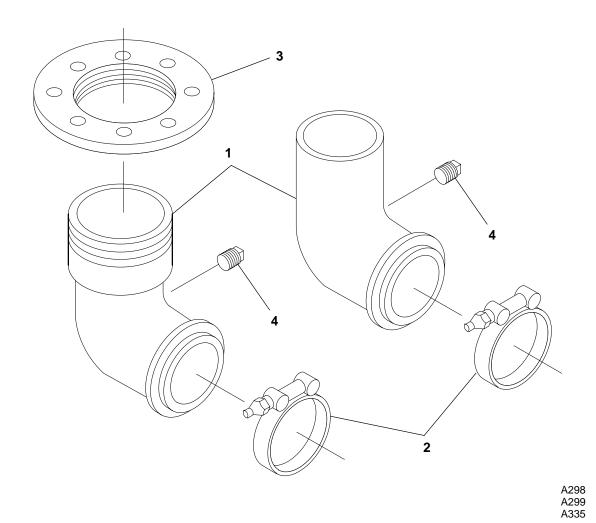


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Elbow, Exhaust (5" OD)	2			Clamp, V Band
			With Threads		503-1619	1	DFEB, DFEC, DFED
	155-2438	1	DFEB, DFEC, DFED		503-1575-02	2 1	DFFB
	155-2437	1	DFFB	3	155-0658	1	Flange, Companion (Not
			Without Threads				Used on All Models)
	155-2435	1	DFEB, DFEC, DFED	4	502-0080	1	Plug, Square Head (1/8")
	155-2436	1	DFFB				- ,

Muffler (Housed Sets)

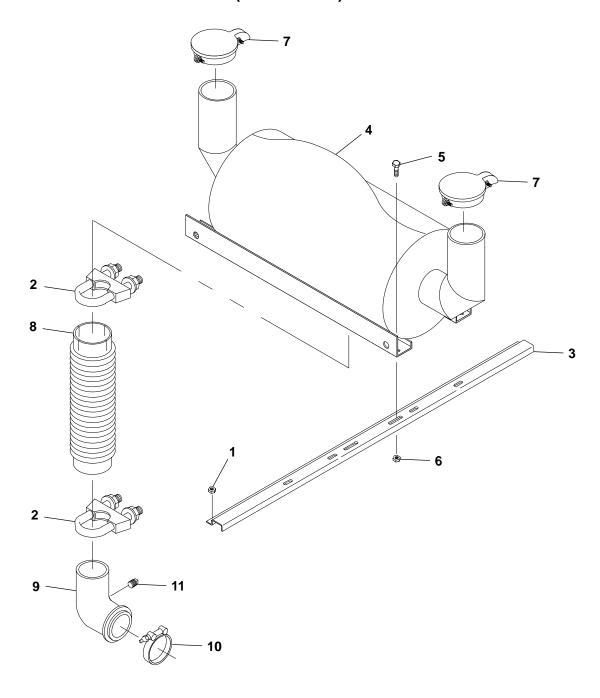


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0257	2	Nut, Locking - Hex (5/16-18)	8			Tubing, Exhaust - Flexible
2	155-2159	2	Clamp, Muffler		155-2441	1	DFEB, DFEC, DFED
3	155-2440	1	Bracket, Mounting - Muffler		155-2442	1	DFFB
4	155-2439	1	Muffler	9			Elbow, Exhaust
5	821-0033	4	Screw, Self-Locking – Hex		155-2435	1	DFEB, DFEC, DFED
			Washer Head (7/16–14 x		155-2436	1	DFFB
			3/4")	10			Clamp, Muffler
6	870-0437	4	Nut, Locking – Hex (7/16–14)		503-1619	1	DFEB, DFEC, DFED
7	155-2062-05	2	Cap, Rain		503-1575-02	<u>)</u>	DFFB
				11	502-0080	1	Plug – Square Head (1/8")

Junction Box (Engine Coolant Heater) DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFEB Begin Spec J

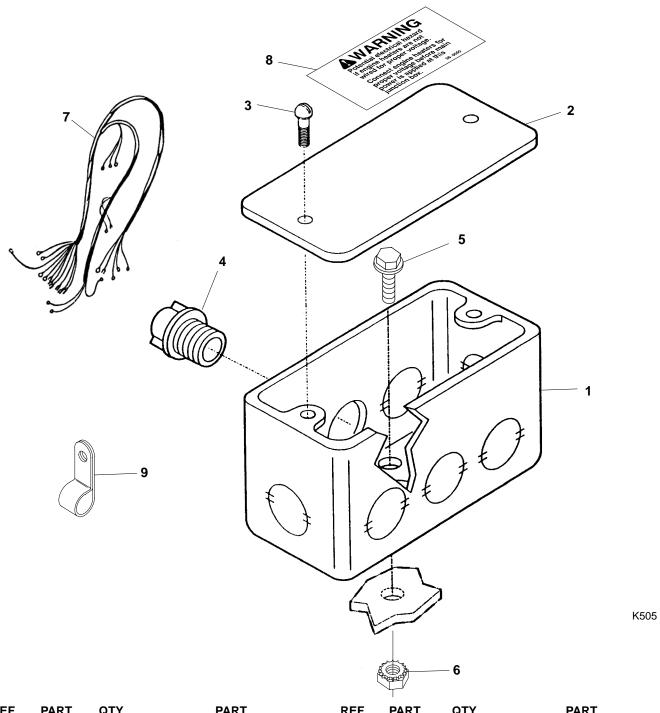

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	330-0005	1	Box, Junction	7	338-2446	1	Harness, Wiring – Junction
2	330-0004	1	Cover, Junction Box				Box to Coolant Heater (3
3	812–0079	2	Screw, Machine - Round Head (#8-32 x 1/2")				Wire) (GND, Black, White to GND-GND, HTR-TH,
4	331-0027	4	Connector, Knockout				HTR-EL) (72")
5	813-0105	2	Screw, Cap - Hex Head	8	098-6560	1	Tag, Warning
			(10-32 x 1")	9	518-0548-08	2	Clamp, "J"
6	870-0131	2	Nut, Hex - W/EIT (10-32)				


Low Coolant Level Sender Without Continuously Monitored Low Coolant Level Generator Sets With Radiator Cooling

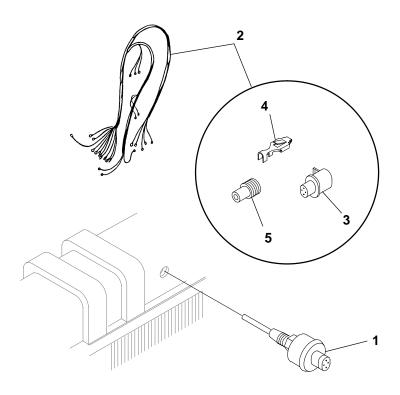

H389 H527


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	193–0481	1	Sender Assembly – Low Coolant Level (Includes	3	323–1765	1	*# Connector, Housing – 4 Pin (S3)
			Parts Marked *)	4	323-1709	4	*# Socket, Contact (S3)
1	193–0468	1	* Sender, Low Coolant Level (S7)	5	323–1708	4	*# Seal, Cable (S3)
2	338–3594	1	* Harness, Wiring – Pigtail – Low Coolant Level Sender (From S3 [A, B, C, D] to S3 [TEST, GND, B+, SIG]) (Includes Parts Marked #)	Δ	ssembly		0481 Low Coolant Level Sender 3594 Pigtail Wiring Harness

Low Coolant Level Sender With Continuously Monitored Low Coolant Level 12 Light Indicator Controls Generator Sets With Radiator Cooling DFEB Spec J Through N, DFEC Spec C Through G DFED Spec A Through D, DFFB Begin Spec J

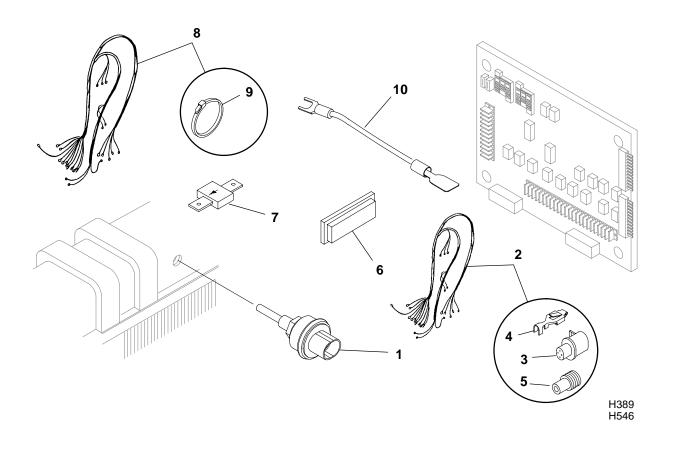


NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	193–0481	1	Sender Assembly – Low Coolant Level (Includes	6	322-0431-0	7 1	Lens, Indicator Light (Marked "Coolant Lo")
			Parts Marked *)	7	357-0030	1	Diode (6 Amp)
1	193–0468	1	* Sender, Low Coolant Level (S7)	8	338–3035–0	2 1	Harness, Wiring (3 Wire, 308") (S7 to A11) (Includes
2	338-3594	1	* Harness, Wiring – Low				Cable Tie – Ref No. 9)
			Coolant Level Sender	9	332-1445	3	Tie, Cable
			(Pigtail – 6") (Includes Parts Marked #) (S3 [A, B, C, D] to S3 [TEST, GND, B+, SIG])	10	226–4661–0	2 2	Lead (4") (No Markings) (A11TB2–1 to Diode and A11TB2–16 to Diode)
3	323–1765	1	*# Connector, Housing – 4 Pin (S3)	* – F	Parts Included	In 193–04	181 Low Coolant Level Sender
4	323-1709	4	*# Socket, Contact (S3)	Д	ssembly		
5	323-1708	4	*# Seal, Cable (S3)	# – [Parts Included	In 338–38	594 Pigtail Wiring Harness

Low Coolant Level Sender With Continuously Monitored Low Coolant Level 12 Light Indicator Controls Generator Sets With Radiator Cooling DFEB Begin Spec P, DFEC Begin Spec H, DFED Begin Spec E

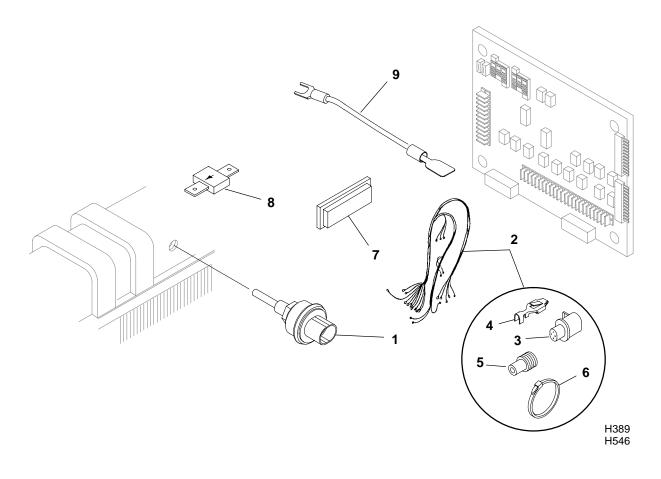

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193–0468	1	Sender, Low Coolant Level (S7)	6	332–1445	-	* Tie, Cable (Quantity Used As Required)
2	338–3763–02	1	Harness, Wiring – Low Coolant Level Sender	7	322-0431-07	1	Lens, Indicator Light (Marked "Coolant Lo")
			(300") (Includes Parts	8	357-0030	1	Diode (6 Amp)
			Marked *) (S7 [A, B, C, D] to A11 [TEST, TB1-5, TB1-7, TB2-1])	9	226–4661–02	2	Lead (4") (No Markings) (A11TB2–1 to Diode and A11TB2–16 to Diode)
3	323–1765	1	* Connector, Housing – 4 Pin (S3)				,
4	323-1709	4	* Socket, Contact (S3)	* – P	arts Included I	n 338–3	763 Wiring Harness
5	323-1708	4	* Seal, Cable (S3)				-


Engine Coolant Heater
DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

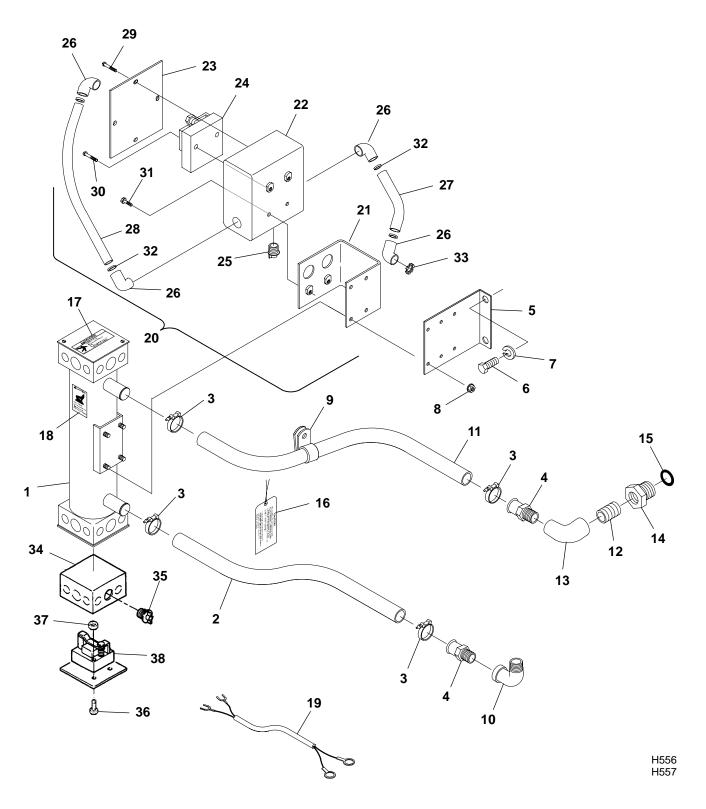

Engine Coolant Heater DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333-0494-02	1	Heater, Coolant (4000 Watts) (Includes Thermostat and Parts Marked #) 120 Volts	20	179–2661	1	Relay Assembly (Includes Parts Marked *) (Quantities Listed Below Are For 1 Heater Relay Assembly)
	333-0494-01	1	208, 240, 480 Volts	21	130-4083	1	* Bracket, Relay Box
	333–0468	1	Thermostat, Heater (Service	22	130–4079	1	* Box, Relay
	000 0100	•	Replacement) (Not	23	130–4082	1	* Cover, Relay Box
			Illustrated)	24	307–2762	1	* Relay, Power (K1, K2)
2	503-1779	_	Hose, Radiator Inlet – Bulk	25	331–0027	1	* Connector, Romex (3/8")
_			(1" ID) (Order by the Foot, 4	26	331–0010	4	* Connector (1/2" x 90 Deg)
			Feet Required)	27	331-0531-01	1	* Conduit, Flexible (1/2" x 6")
3	503-1872-01	4	Clamp, Hose	28	331-0531-02	1	* Conduit, Flexible
4	502-0971	2	Connector, Hose				(1/2" x 11–1/2")
5	130-3719	1	Bracket, Heater Mounting	29	813-0100	6	* Screw, Machine – Round
6	800-0130	2	Screw, Cap – Hex Head				Head (#10-32 x 1/2")
			(5/8–11 x 1")	30	813-0103	2	* Screw, Machine - Round
7	850-0070	2	Washer, Lock - Spring (5/8")				Head (#10-32 x 3/4")
8	870–0212	4	Nut, Locking – Hex Head (1/4–20)	31	821–0010	2	* Screw, Locking – Hex Washer Head
9	518-0548-02	1	Clip, Retainer				(1/4–20 x 1/2")
10	505-0051	1	Elbow, Street (3/4")	32	331–0533	4	* Bushing, Antishort (1/2")
11	503–1779	_	Hose, Radiator Inlet – Bulk	33	331–0532	1	* Locknut, Sealing (1/2")
			(1" ID) (Order by the Foot, 3	34	330–0144	2	# Box, Extension
			Feet Required)	35	331–0027	2	# Connector, Romex
12	505-0004	1	Nipple, Close (1" x 1–1/2")	36	812-0082	4	# Screw, Machine - Round
13	505-0356	1	Elbow, Reducing – 90 Deg				Head (#8-32 x 3/4")
			(1" to 3/4")	37	870-0221	4	# Nut, Hex – With ET (#8–32)
14	505-1384	1	Bushing, Reducer	38	307–2762	2	# Relay, Power
15	509–0272	1	Seal, O-Ring				
16	098–6030	1	Tag, Caution				
17	098–5347–01	1	Label, Danger				e Coolant Heater
18	098–6195	1	Label, Caution	* – P	arts Included i	n Heate	r Relay Assembly
19	338–2760–02	1	Harness, Wiring (Relay to T26 Terminal – Used on Some Early Models)				


Engine Coolant Heater DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

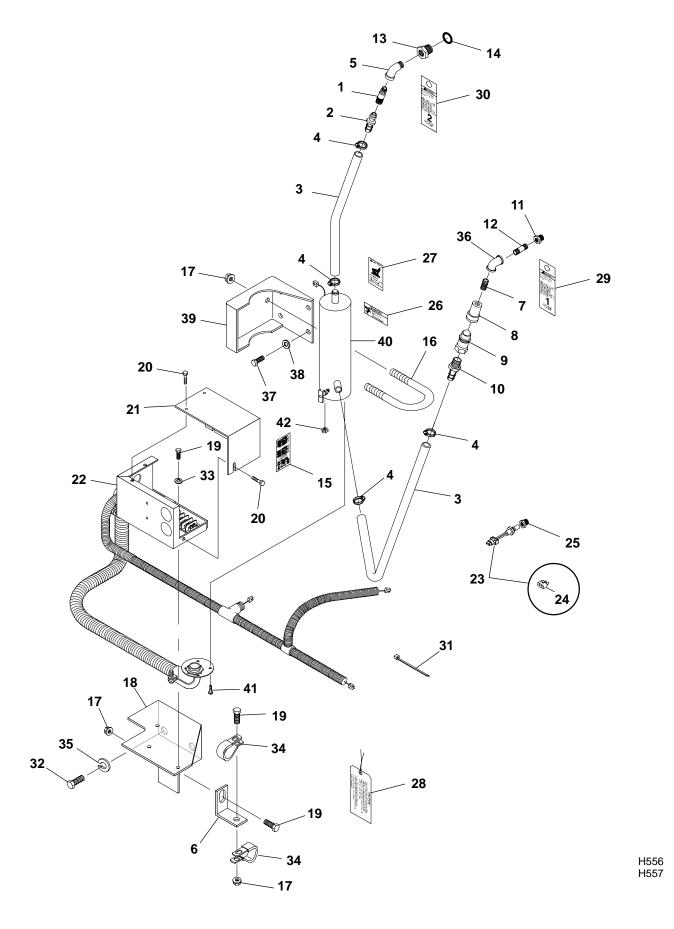

Engine Coolant Heater DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502–1259	1	Coupler, Engine Coolant Heater	23	309–0649	1	Thermostat (S11) (Includes Connector – Ref No. 24)
2	502-1257	1	Connector, Hose - Barbed	24	323-1637	1	Connector
3 4	503–1634–03 503–2157–01		Hose (3/4" ID x 12-1/2") Clamp, Hose	25	502–1336	1	Bushing, Pipe – Reducer (1/2" to 3/8")
5	505-0050	1	Elbow, Pipe – Street (1/2")	26	098-5347	2	Label, Danger
6	130-3861	1	Bracket, Mounting - Tube	27	098-6195	1	Label, Caution
7	505-0100	1	Nipple, Pipe (1/2" x 1-1/8")	28	098-6030	1	Tag, Caution
8	502-1260	1	Coupler, Water Heater	29	098-7182-01	1	Tag, Label
9	502-1261	1	Nipple, Water Heater	30	098-7182-02	1	Tag, Label
10	502-0827	1	Connector, Hose – Barbed	31	332-0941	4	Tie, Cable
11	505–0021	1	Bushing, Pipe – Reducer (3/4" to 1/2")	32	800–0130	2	Screw, Cap – Hex Head (5/8–11 x 1")
12	505-0078	1	Nipple, Pipe (1/2" x 2-1/2")	33	526-0128	2	Washer, Flat (3/8" ID x 1/4"
13	505-1519	1	Bushing, Pipe (1-3/4"-18 x				Thk)
			1/2")	34	332-2634	1	Clamp, "J"
14	509-0272	1	Seal, O-Ring	35	850-0070	2	Washer, Lock – Spring (5/8")
15	098–7183	1	Label, Relay Box	36	505-0040	1	Elbow, Pipe – 90 Deg (1/2")
16	155–3021	1	Clamp, Mounting – Water Heater	37	800–0051	4	Screw, Cap – Hex Head (3/8–16 x 1–1/4")
17	870-0550-09	4	Nut, Flange – Hex Head	38	526-0029	4	Washer, Flat (3/8")
18	130–4618	1	(3/8–16) Bracket, Mounting – Water	39	130–4608	1	Bracket, Mounting – Water Heater
19	821–5004–02	. 4	Heater Control Screw, Self-Locking – Hex	40			Heater, Water (240/480 Volts) (HTR)
13	021 0004 02	. •	Washer Head (3/8–16 x		333-0639-01	1	4990 Watts
			3/4")		333-0639-02		6420 Watts
20	821–5002–03	4	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")	41	815–0539	3	Screw, Machine – Round Head – Cross Recessed W/IT (#8–32 x 5/8")
21 22	319–2815 –	1 –	Cover, Control Engine Coolant Heater Control Assembly (See Page 39 For Components)	42	870–0131	3	Nut, Locking – W/ET (#10–32)


Engine Coolant Heater Control DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

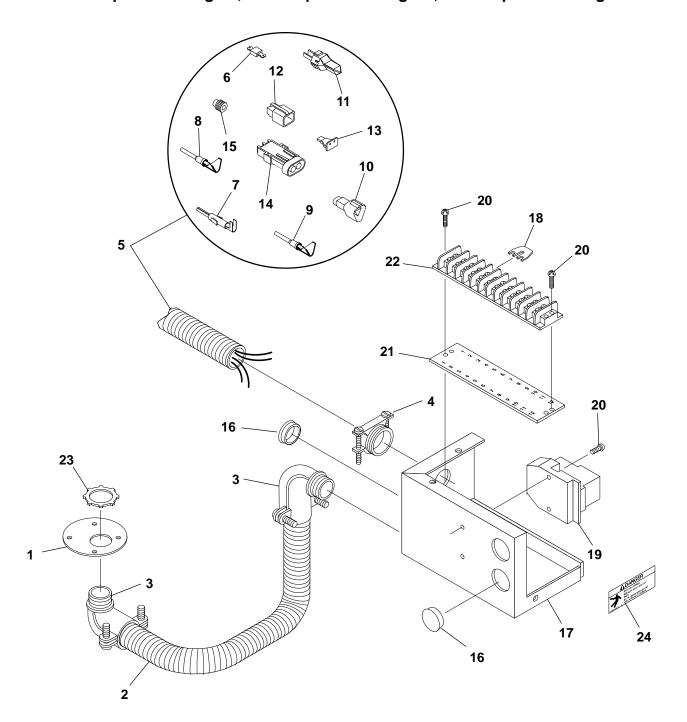

Engine Coolant Heater Control DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4552	1	Cover, Water Heater	10	323-1494	1	* Connector, Receptacle (3
2	338–3335–06	5 1	Harness, Wiring (AC Harness –				Place) (J3)
			TB1-1 To HTR-GND, TB1-2	11	323–1502	1	* Wedge (Used in J3)
			To HTR-2, TB1-3 To HTR-3, TB1-4 and TN1-6 To HTR-4)	12	323–1504	1	* Connector, Plug (2 Place) (P4)
			(49") (Includes Conduit	13	323-1500	1	* Wedge (Used in P4)
			Connectors – Ref No. 3)	14	323-1652	1	* Connector, Plug (2 Place)
3	331-0554	2	Connector, Conduit – 90 Deg				(P11)
			(3/4")	15	323-1445	2	* Seal, Wire (Used in P11)
4	331-0042	1	Connector, Romex (3/4")	16	517-0138-02	2 3	Plug, Hole (Fits 3/4" Hole)
5	338-3399	1	Harness, Wiring (DC	17	319-2814	1	Box, Control
			Harness – J3-C To K11-2,	18	332-3440	1	Jumper, Terminal
			J3-B To CR1-1, P4-2 To	19	307-2859	1	Relay, Power (K11)
			SP1, K11-1 To CR1-2,	20	815-0464	4	Screw, Machine - Round
			P11-B To SP1, J3-A To				Head – Cross Recessed
			SP2, P4-1 To SP2, P11-A				W/IT - Thread Forming
			To SP2) (94") (Includes				(#8-32 x 3/4")
			Parts Marked *)	21	332-1469	1	Strip, Marker (12 Place)
6	357–0030	1	* Rectifier (Located At K11 End Of Harness) (CR1)	22	332–1468	1	Block, Terminal (12 Place) (TB1)
7	323-1718	2	* Pin, Contact (Used In P11)	23	331-0555	2	Nut, Lock – Conduit (3/4")
8	323-1491	3	* Pin, Contact (Used In J3)	24	098-5347-01		Label, Danger
9	323-1492	2	* Socket, Contact (Used In P4)				, 3


Engine Coolant Heater DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

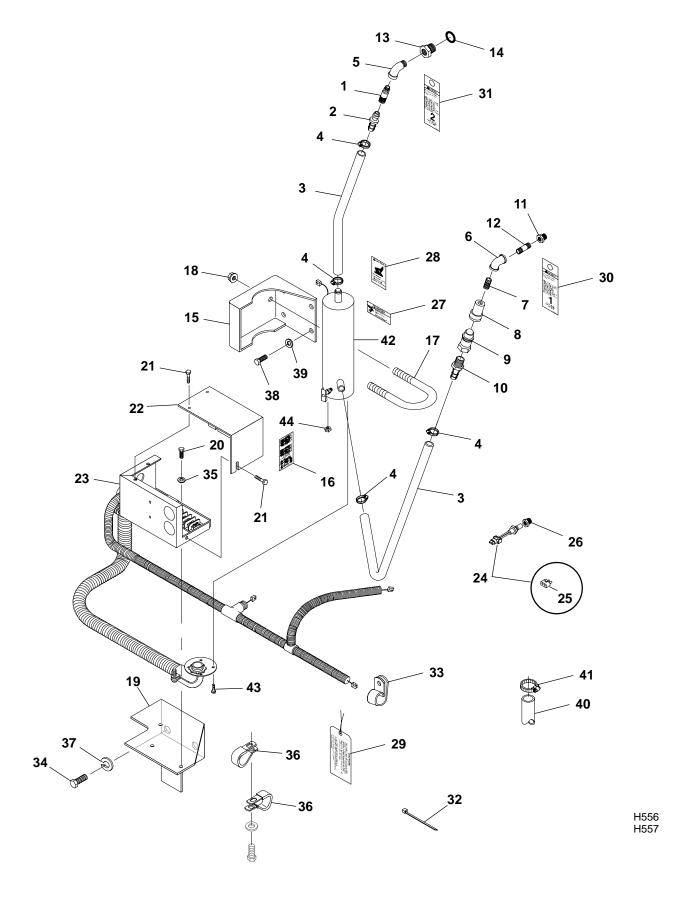

Engine Coolant Heater DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502–1259	1	Coupler, Engine Coolant Heater	24	309–0649	1	Thermostat (S11) (Includes Connector – Ref No. 25)
2	502-1257	1	Connector, Hose – Barbed	25	323-1637	1	Connector
3 4	503-1634-03 503-2157-01		Hose (3/4" ID x 12-1/2") Clamp, Hose	26	502–1336	1	Bushing, Pipe – Reducer (1/2" to 3/8")
5	505-0050	1	Elbow, Pipe – Street (1/2")	27	098–5347	2	Label, Danger
6	505-0040	1	Elbow, Pipe – 90 Deg (1/2")	28	098–6195	1	Label, Caution
7	505-0100	1	Nipple, Pipe (1/2" x 1–1/8")	29	098–6030	1	Tag, Caution
8	502–1260	1	Coupler, Water Heater	30	098-7182-01		Tag, Caulon Tag, Label
9	502-1261	1	Nipple, Water Heater	31	098-7182-02		Tag, Label
10	502-0827	1	Connector, Hose – Barbed	32	332-0941	4	Tie, Cable
11	505-0021	1	Bushing, Pipe – Reducer	33	518-0548-35		Clamp. Hose
			(3/4" to 1/2")	34	800–0130	2	Screw, Cap – Hex Head
12	505-0078	1	Nipple, Pipe (1/2" x 2–1/2")			_	(5/8–11 x 1")
13	505–1519	1	Bushing, Pipe (1–3/4"–18 x 1/2")	35	526–0128	2	Washer, Flat (3/8" ID x 1/4" Thk)
14	509-0272	1	Seal, O-Ring	36	332-2634	1	Clamp, "J"
15	130-4608	1	Bracket, Mounting - Water	37	850-0070	2	Washer, Lock - Spring (5/8")
16	098–7183	1	Heater Label, Relay Box	38	800-0051	4	Screw, Cap – Hex Head (3/8–16 x 1–1/4")
17	155–3021	1	Clamp, Mounting – Water	39	526-0029	4	(3/8-10 x 1-1/4) Washer, Flat (3/8")
17			Heater	40	503-0361	1	Hose, Bulk (1-1/2" ID) (Order
18	870-0550-09	9 2	Nut, Flange – Hex Head (3/8–16)				By the Foot – 1 Foot Required)
19	130–4618	1	Bracket, Mounting – Water Heater Control	41 42	503-0398	1	Clamp, Hose Heater, Water (240/480 Volts)
20	821–5004–02	2 2	Screw, Self-Locking – Hex Washer Head (3/8–16 x		333-0639-01	1	(HTR) 4990 Watts
			3/4")		333-0639-02		6420 Watts
21	821-5002-03	3 4	Screw, Self-Locking – Hex	43	815–0539	3	Screw, Machine – Round
21	021-3002-00) 1	Washer Head (1/4–20 x 1/2")	43	815-0559	3	Head – Cross Recessed W/IT (#8–32 x 5/8")
22	319-2815	1	Cover, Control	44	870-0131	3	Nut, Locking – W/ET
23	_	_	Engine Coolant Heater Control Assembly (See Page 43 For Components)			-	(#10–32)

Engine Coolant Heater Control DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

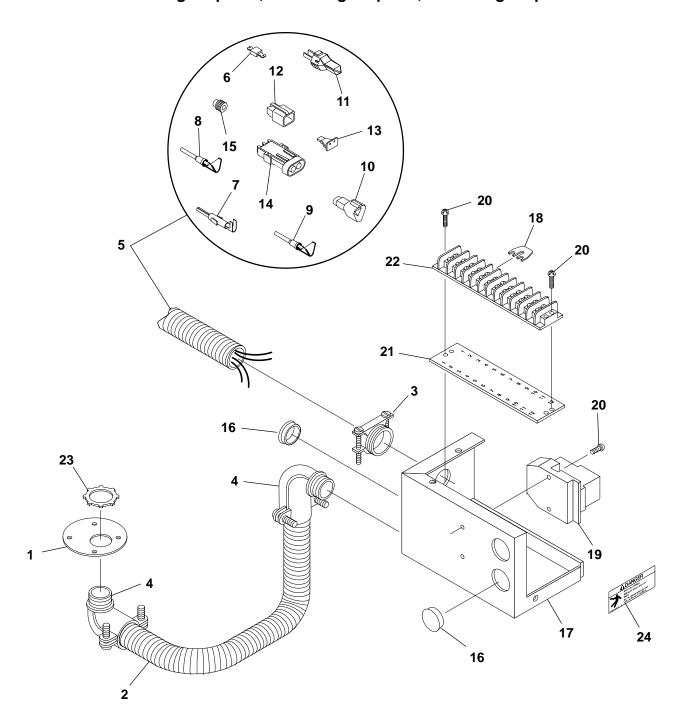


H556 H557

Engine Coolant Heater Control DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4552	1	Cover, Water Heater	10	323-1494	1	* Connector, Receptacle
2	338–3923–06	5 1	Harness, Wiring (AC Harness –				(3 Place) (J3)
			TB1-1 To HTR-GND, TB1-2	11	323–1502	1	* Wedge (Used in J3)
			To HTR-2, TB1-3 To HTR-3, TB1-4 and TN1-6 To HTR-4)	12	323–1504	1	* Connector, Plug (2 Place) (P4)
			(40") (Includes Conduit	13	323-1500	1	* Wedge (Used in P4)
			Connectors – Ref No. 3)	14	323-1652	1	* Connector, Plug (2 Place)
3	331-0554	2	Connector, Conduit – 90 Deg				(P11)
			(3/4")	15	323-1445	2	* Seal, Wire (Used in P11)
4	331-0042	1	Connector, Romex (3/4")	16	517-0138-02	3	Plug, Hole (Fits 3/4" Hole)
5	338-3399	1	Harness, Wiring (DC	17	319-2814	1	Box, Control
			Harness – J3-C To K11-2,	18	332-3440	1	Jumper, Terminal
			J3-B To CR1-1, P4-2 To	19	307-2859	1	Relay, Power (K11)
			SP1, K11-1 To CR1-2,	20	815-0464	4	Screw, Machine - Round
			P11-B To SP1, J3-A To				Head - Cross Recessed
			SP2, P4-1 To SP2, P11-A				W/IT - Thread Forming
			To SP2) (94") (Includes				(#8-32 x 3/4")
			Parts Marked *)	21	332-1469	1	Strip, Marker (12 Place)
6	357-0030	1	* Rectifier (Located At K11 End Of Harness) (CR1)	22	332–1468	1	Block, Terminal (12 Place) (TB1)
7	323-1718	2	* Pin, Contact (Used In P11)	23	331-0555	2	Nut, Lock – Conduit (3/4")
8	323-1491	3	* Pin, Contact (Used In J3)	24	098-5347-01	1	Label, Danger
9	323-1492	2	* Socket, Contact (Used In P4)				

Heat Exchanger

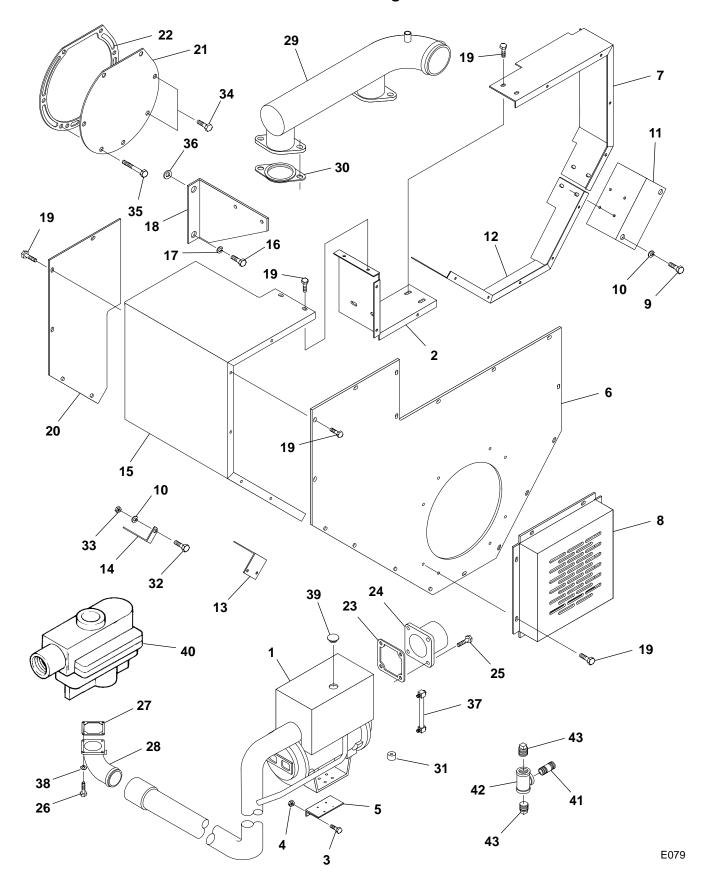


Heat Exchanger

1 — 1 Exchanger, Heat (Includes Cap – Ref No. 39) 24 130–3497 2 Connector, Sea Water Screw, Cap – Hex Washer Head (3/8–16 x 1–1/4") Assembly and Component Parts are Available from Cummins as Modification Number HX 4073) 26 800–0050 4 Screw, Cap – Hex Head (3/8–16 x 1") 2 130–3729 1 Guard, Belt Guard, Belt Screw, Self-Locking – Hex Washer Head (3/8–16 x 1") 28 130–3478 1 Connection, Water Inlet Connection, Water Transfer Washer Head (3/8–16 x 1") 4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise 5 130–3736 1 Bracket, Belt Guard 32 800–0229 1 Screw, Cap – Hex Head	
Cap - Ref No. 39) 25 815-0713 8 Screw, Cap - Hex Washer (Assembly and Component Parts are Available from 26 800-0050 4 Screw, Cap - Hex Head (3/8-16 x 1-1/4") Cummins as Modification (3/8-16 x 1") Number HX 4073) 27 130-3469 1 Gasket, Water Connection 2 130-3729 1 Guard, Belt 28 130-3478 1 Connection, Water Inlet 3 821-0030 2 Screw, Self-Locking - Hex 29 130-3475 1 Connection, Water Transfer Washer Head (3/8-16 x 1") 30 130-3495 2 Gasket, Water Connection 4 870-0281 2 Nut, Locking (3/8-16) 31 130-3486 8 Isolator, Noise	
Parts are Available from 26 800–0050 4 Screw, Cap – Hex Head (3/8–16 x 1") Number HX 4073) 27 130–3469 1 Gasket, Water Connection 2 130–3729 1 Guard, Belt 28 130–3478 1 Connection, Water Inlet 3 821–0030 2 Screw, Self-Locking – Hex 29 130–3475 1 Connection, Water Transfer Washer Head (3/8–16 x 1") 30 130–3495 2 Gasket, Water Connection 4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise	
2 130–3729 1 Guard, Belt 28 130–3478 1 Connection, Water Inlet 3 821–0030 2 Screw, Self-Locking – Hex 29 130–3475 1 Connection, Water Transfer Washer Head (3/8–16 x 1") 30 130–3495 2 Gasket, Water Connection 4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise	Ĺ
3 821–0030 2 Screw, Self-Locking – Hex 29 130–3475 1 Connection, Water Transfe Washer Head (3/8–16 x 1") 30 130–3495 2 Gasket, Water Connection 4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise	ion
Washer Head (3/8–16 x 1") 30 130–3495 2 Gasket, Water Connection 4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise	
4 870–0281 2 Nut, Locking (3/8–16) 31 130–3486 8 Isolator, Noise	ısfer
	ion
5 130–3736 1 Bracket, Belt Guard 32 800–0229 1 Screw. Cap – Hex Head	
	t
6 130–3733 1 Cover, Belt Guard (1/2–13 x 2–1/2)	
7 130–3730 1 Guard, Belt 33 862–0035 2 Nut, Hex (1/2–13)	
8 130-3734 1 Cover, Belt Guard 34 800-0052 2 Screw, Cap - Hex Head	t
9 800–0090 3 Screw, Cap – Hex Head (3/8–16 x 1–1/2")	
(1/2–13 x 1") 35 800–0064 5 Screw, Cap – Hex Head 10 850–0060 3 Washer, Lock – Spring (1/2") (3/8–16 x 4–1/2")	t
11 130–3737 1 Bracket, Belt Guard 36 526–0249 2 Washer, Flat (7/16")	
12 130–3731 1 Guard, Belt 37 130–3314–01 1 Gauge, Sight (Includes Tw	Two
13 130–3738 1 Bracket, Belt Guard Mounting Hex Head Cap	
14 130–3739 1 Bracket, Belt Guard Screws)	, a.b
15 130–3732 1 Guard, Belt 38 850–0050 4 Washer, Lock – Spring (3/8	(3/8")
16 800–0071 1 Screw, Cap – Hex Head 39 — 1 Cap, Filler (Available from (1/2–13 x 1") Cummins as Part Number	m
17 850–0055 1 Washer, Lock – Spring 3088296) (7/16") 40 309–0180 1 Valve, Thermostatic (Not	nt .
18 130–3740 1 Bracket, Belt Guard Used on All Models)	Λ.
19 821–5002–03 48 Screw, Locking – Hex 41 505–0084 1 * Nipple, Pipe (3/4" x 2–1/2"	/2"\
Washer Head 42 505–0166 1 * Tee, Pipe (3/4")	12)
(1/4–20 x 1/2") 43 505–0130 1 * Plug, Pipe – Square Head	had
20 130–3735 1 Cover, Belt Guard (3/4–14)	au
21 130–3746 1 Cover, Belt Guard (3/4–14)	
22 130–3745 1 Gasket, Fan Hub * Used on Some Early Models	
23 130–3312 2 Gasket, Sea Water Pump	

⁴⁵


Radiator
DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

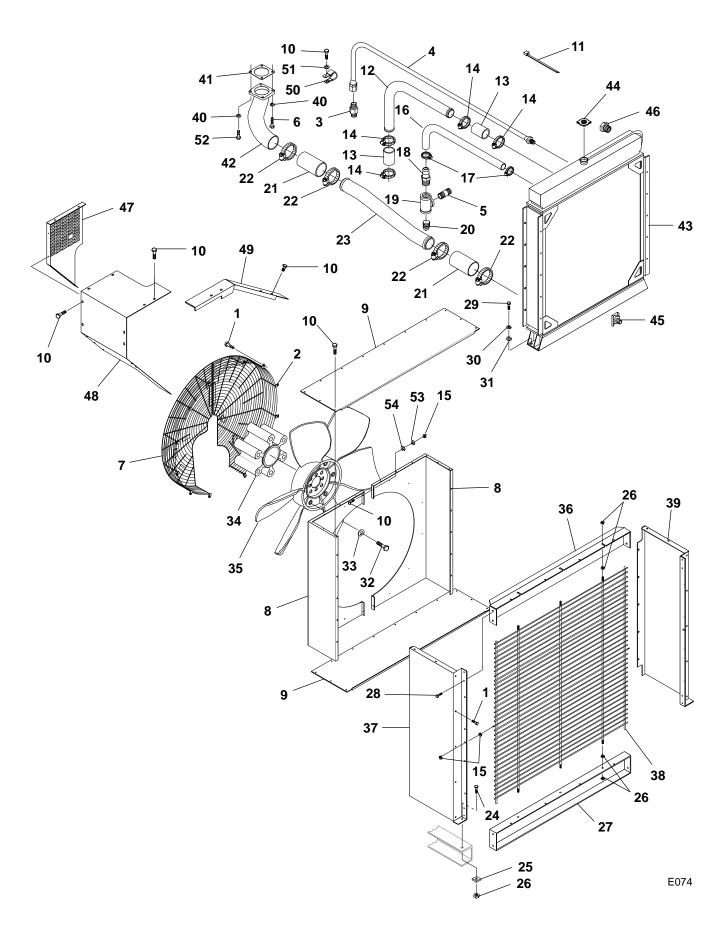

Radiator
DFEB Spec J Through K, DFEC Spec C Through D, DFED Spec A, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0029	42	Screw, Self-Locking – Hex	25	403-2733-02	6	Washer, Bevel
			Washer Head (3/8–16 x	26	870-0550-09	18	Nut, Flange Head (3/8-16)
			3/4")	27	130-3596	1	Support, Grille – Lower
2	130-3589-01	1	Guard, Fan – Right Side	28	821-5003-01	8	Screw, Self-Locking – Hex
3	502-0184	1	Connector, Male (1/4")				Washer Head (5/16–18 x
4	501-0554	1	Line, Flexible (47")				1/2")
5	505-0084	1	Nipple, Pipe (3/4" x 2-1/2")	29	800–0133	4	Screw, Cap – Hex Head
6	800–0051	2	Screw, Cap – Hex Head				(5/8–11 x 1–3/4")
			(3/8–16 x 1–1/4")	30	850-0070	4	Washer, Lock – Spring (5/8")
7	130–3589–02	1	Guard, Fan – Left Side	31	526–0112	4	Washer, Flat (5/8")
8	130–3591	2	Wrapper, Fan	32	800–0106	6	Screw, Cap – Hex Head
9	130–3594	2	Shroud, Fan				(1/2–13 x 5–1/2")
10	821–5002–04	46	Screw, Self-Locking – Hex	33	526-0219	6	Washer, Flat (1/2")
			Washer Head (1/4–20 x	34	130–4211–01	1	Spacer, Fan
			5/8")	35	130–4535	1	Fan, 8 Blade (42")
11	332–1389	1	Tie, Cable (Quantity Used As	36	130–3595	1	Support, Grille – Upper
			Required)	37	130-3592-02	1	Guard, Radiator – Left Side
12	130–3593	2	Tube, Radiator – Inlet	38	130–3597	1	Grille
13	503–1708	4	Hose, Radiator	39	130-3592-01	1	Guard, Radiator – Right Side
			(2-1/2" ID x 4")	40	850-0050	4	Washer, Lock – Spring (3/8")
14	503-1872-05	8	Clamp, Hose (3" ID)	41	130–3469	1	Gasket
15	870-0550-05	6	Nut, Locking – Hex Flange	42	130–1030	1	Inlet, Water
40	502 0240	4	Head (1/4–20)	43	130–3587	1	Radiator (Includes Cap – Ref
16	503-0249	1	Hose (1" ID x 6")	4.4	400 0500	4	No. 44)
17	503-1872-01	2	Clamp, Hose (1–1/2")	44	130–3588	1	Cap, Radiator
18	502-0971	1	Connector, Hose	45	504-0028	1	Cock, Drain
19	505-0166	1	Tee, Pipe (3/4")	46	502-0153	2	Plug, Pipe – Hex (1/4–18)
20	505–0130	1	Plug, Pipe – Square Head	47	130–3601	1	Guard, Belt
0.4	500 0050	•	(3/4–14)	48	130–3600	1	Guard, Belt
21	503-0856	2	Hose, Radiator	49	130–3720	1	Guard, Belt
			(3–1/2" ID x 5–1/2")	50	518-0548-02		Clip, Retainer
22	503-1872-07	4	Clamp, Hose (4" ID)	51	526-0021	1	Washer, Flat (17/64")
23	130–3598	1	Tube, Radiator – Outlet	52	800–0052	2	Screw, Cap – Hex Head
24	821–0035	6	Screw, Self-Locking – Hex	=-	0=0 0444 0=	•	(3/8–16 x 1–1/2")
			Washer Head (3/8–16 x	53	850-0114-05		Washer, Lock – Spring (1/4")
			1–1/4")	54	526-0399-13	6	Washer, Flat (1/4")


Radiator
DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

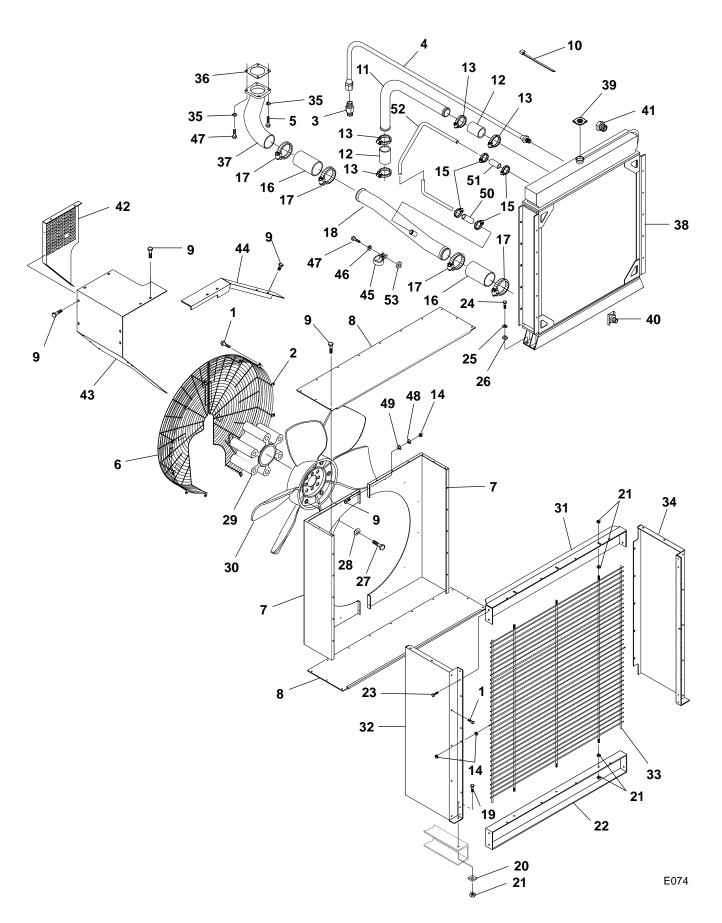

Radiator
DFEB Spec L Through P, DFEC Spec E Through H, DFED Spec B Through E

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-5004-02	40	Screw, Self-Locking – Hex	25	850-0070	4	Washer, Lock - Spring (5/8")
			Washer Head (3/8-16 x	26	526-0112	4	Washer, Flat (5/8")
2	130–3589–01	1	3/4") Guard, Fan – Right Side	27	800–0105	6	Screw, Cap – Hex Head (1/2–13 x 5")
3	502-0184	1	Connector, Male (1/4")	28	526-0219	6	Washer, Flat (1/2")
4	501-0554	1	Line, Flexible (47")	29	130-4211-01	1	Spacer, Fan
5	800-0051	2	Screw, Cap - Hex Head	30	130-4535	1	Fan, 8 Blade (42")
			(3/8–16 x 1–1/4")	31	130-3595	1	Support, Grille – Upper
6	130-3589-02	1	Guard, Fan – Left Side	32	130-3592-02	1	Guard, Radiator - Left Side
7	130-3591	2	Wrapper, Fan	33	130-3597	1	Grille
8	130-4621	2	Shroud, Fan	34	130-3592-01	1	Guard, Radiator - Right Side
9	821-5002-04	46	Screw, Self-Locking - Hex	35	850-0050	4	Washer, Lock - Spring (3/8")
			Washer Head (1/4-20 x	36	130-3469	1	Gasket
			5/8")	37	130-1030	1	Inlet, Water
10	332–1389	1	Tie, Cable (Quantity Used As Required)	38			Radiator (Includes Cap – Ref No. 39)
11	130-3593	2	Tube, Radiator – Inlet		130-3587	1	5 Row Core
12	503-1708	4	Hose, Radiator		130-3587-01	1	3 Row Core
			(2-1/2" ID x 4")	39	130-3588	1	Cap, Radiator
13	503-1872-05	8	Clamp, Hose (3" ID)	40	504-0028	1	Cock, Drain
14	870-0550-05	6	Nut, Locking – Hex Flange	41	502-0153	2	Plug, Pipe – Hex (1/4–18)
			Head (1/4–20)	42	130-3601	1	Guard, Belt
15	503-1872-01	4	Clamp, Hose (1-1/2")	43	130-3600	1	Guard, Belt
16	503-0856	2	Hose, Radiator	44	130-3720	1	Guard, Belt
			(3–1/2" ID x 5–1/2")	45	518-0548-20	2	Clip, Retainer
17	503-1872-07	4	Clamp, Hose (4" ID)	46	526-0029	2	Washer, Flat (3/8")
18	130-4620	1	Tube, Radiator – Outlet	47	800-0052	4	Screw, Cap - Hex Head
19	821-0035	6	Screw, Self-Locking – Hex				(3/8-16 x 1-1/2")
			Washer Head (3/8-16 x	48	850-0114-05	6	Washer, Lock - Spring (1/4")
			1–1/4")	49	526-0399-13	6	Washer, Flat (1/4")
20	403-2733-02	6	Washer, Bevel	50	503-1779	1	Hose, Radiator – Bulk (1" ID)
21	870-0550-09	18	Nut, Flange Head (3/8-16)				(Order by the Foot – 1 Foot
22	130-3596	1	Support, Grille - Lower				Required)
23	821-5003-01	8	Screw, Self-Locking – Hex	51	503-1634	1	Hose, Radiator (1" ID x 4")
			Washer Head (5/16-18 x	52	130-4619	1	Tube, Fill Line
			1/2")	53	130-3660	2	Spacer, Shock Absorb
24	800–0133	4	Screw, Cap – Hex Head (5/8–11 x 1–3/4")				(1/2" ID x 3/8" Thick)


Radiator
DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

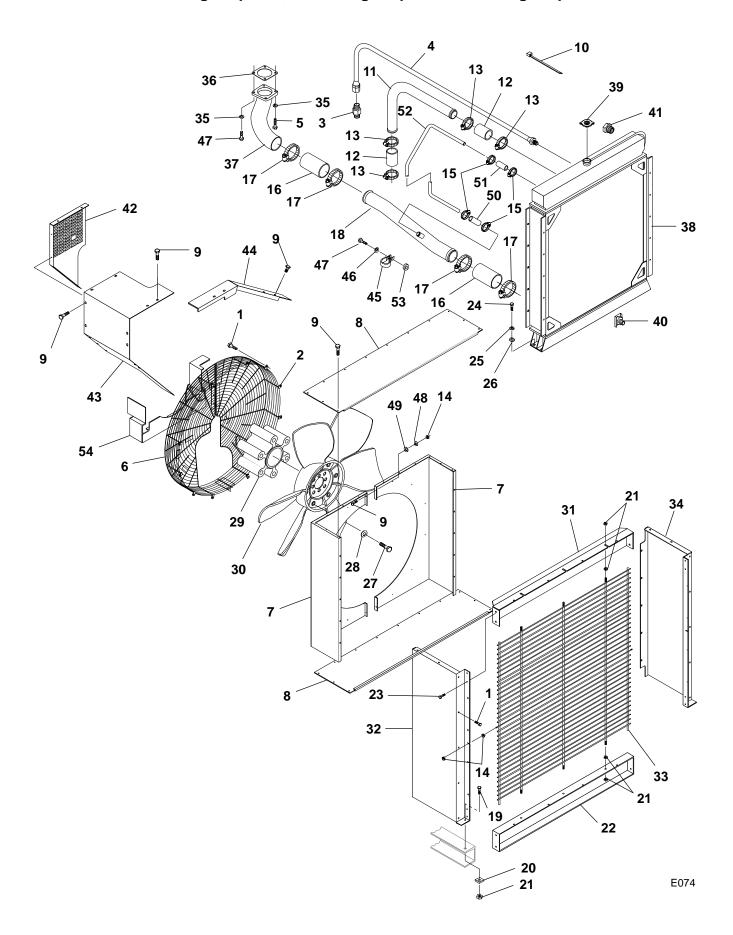

Radiator DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-5004-02	40	Screw, Self-Locking – Hex	25	850-0070	4	Washer, Lock - Spring (5/8")
			Washer Head (3/8–16 x	26	526-0112	4	Washer, Flat (5/8")
			3/4")	27	800-0105	6	Screw, Cap – Hex Head
2	130-5367-03		Guard, Fan – Right Side				(1/2–13 x 5")
3	502-0184	1	Connector, Male (1/4")	28	526-0219	6	Washer, Flat (1/2")
4	501-0554	1	Line, Flexible (47")	29	130-4211-01		Spacer, Fan
5	800-0051	2	Screw, Cap – Hex Head	30	130–4535	1	Fan, 8 Blade (42")
			(3/8–16 x 1–1/4")	31	130–3595	1	Support, Grille – Upper
6	130-5367-04	1	Guard, Fan – Left Side	32	130-3592-02	! 1	Guard, Radiator – Left Side
7	130–3591	2	Wrapper, Fan	33	130–3597	1	Grille
8	130-4621	2	Shroud, Fan	34	130-3592-01	1	Guard, Radiator – Right Side
9	821-5002-04	46	Screw, Self-Locking – Hex	35	850-0050	4	Washer, Lock – Spring (3/8")
			Washer Head (1/4–20 x	36	130-3469	1	Gasket
			5/8")	37	130-1030	1	Inlet, Water
10	332–1389	A/R	Tie, Cable (Quantity Used As	38			Radiator (Includes Cap – Ref
			Required)				No. 39)
11	130–3593	2	Tube, Radiator – Inlet		130–3587	1	5 Row Core
12	503-1708	4	Hose, Radiator		130-3587-01	1	3 Row Core
			(2-1/2" ID x 4")	39	130-3588	1	Cap, Radiator
13	503-1872-05	8	Clamp, Hose (3" ID)	40	504-0028	1	Cock, Drain
14	870-0550-05	6	Nut, Locking – Hex Flange	41	502-0153	2	Plug, Pipe – Hex (1/4–18)
			Head (1/4-20)	42	130-3601	1	Guard, Belt
15	503-1872-01	4	Clamp, Hose (1-1/2")	43	130-3600	1	Guard, Belt
16	503-0856	2	Hose, Radiator	44	130-3720	1	Guard, Belt
			(3-1/2" ID x 5-1/2")	45	518-0548-20		Clip, Retainer
17	503-1872-07	4	Clamp, Hose (4" ID)	46	526-0029	2	Washer, Flat (3/8")
18	130-4620	1	Tube, Radiator – Outlet	47	800-0052	4	Screw, Cap – Hex Head
19	821–0035	6	Screw, Self-Locking – Hex				(3/8-16 x 1-1/2")
			Washer Head (3/8–16 x	48	850-0114-05	6	Washer, Lock – Spring (1/4")
			1–1/4")	49	526-0399-13	6	Washer, Flat (1/4")
20	403-2733-02	6	Washer, Bevel	50	503-1779	1	Hose, Radiator – Bulk (1" ID)
21	870-0550-09	18	Nut, Flange Head (3/8–16)				(Order by the Foot – 1 Foot
22	130-3596	1	Support, Grille – Lower				Required)
23	821-5003-01	8	Screw, Self-Locking – Hex	51	503-1634	1	Hose, Radiator (1" ID x 4")
			Washer Head (5/16–18 x	52	130–4619	1	Tube, Fill Line
			1/2")	53	130-3660	2	Spacer, Shock Absorb
24	800-0133	4	Screw, Cap – Hex Head				(1/2" ID x 3/8" Thick)
			(5/8-11 x 1-3/4")	54	130–5368–02	! 1	Guard, Damper


Remote Radiator

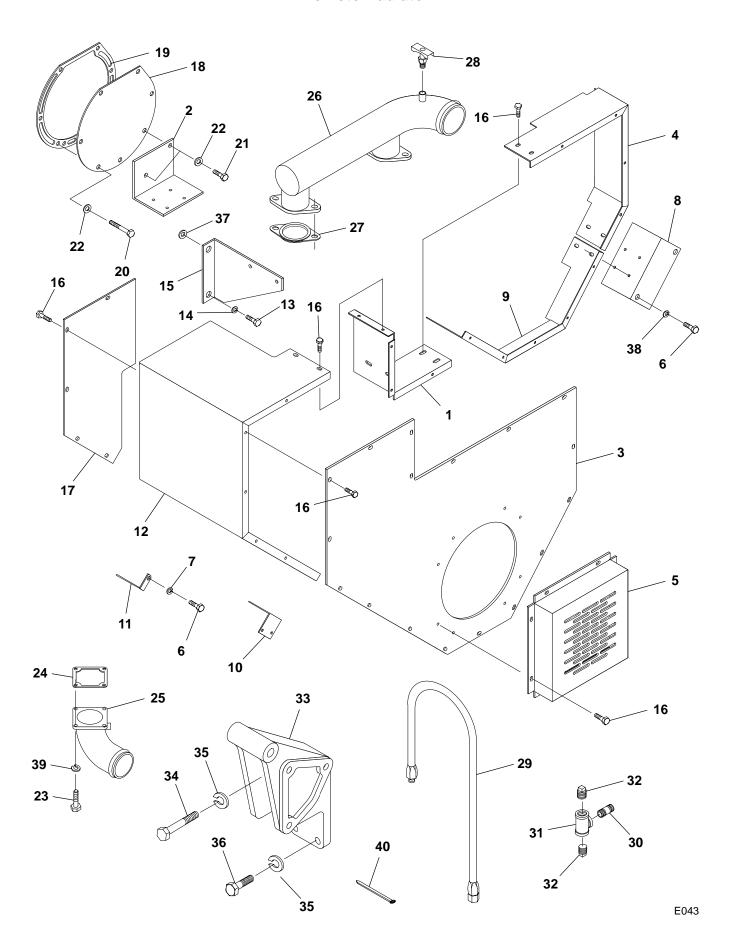

Remote Radiator

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	130-3729	1	Guard, Belt	22	526-0174	7	* Washer, Flat (3/8")
2	130-3744	1	Bracket, Belt Guard	23	800-0050	4	Screw, Cap – Hex Head
3	130–3733	1	Cover, Belt Guard				(3/8–16 x 1")
4	130–3730	1	Guard, Belt	24	130–3469	1	Gasket, Water Connection
5	130-3734	1	Cover, Belt Guard	25	130–3478	1	Connection, Water Inlet
6	800-0310-64	- 3	Screw, Cap – Hex Head	26	130–3475	1	* Connection, Water Transfer
			(1/2–13 x 1")	27	130–3495	2	 Gasket, Water Connection
7	850-0114-09	3	Washer, Lock – Spring (1/2")	28	504-0003	1	Cock, Drain
8	130–3737	1	Bracket, Belt Guard	29	501-0554	1	Line, Flex Fuel
9	130–3731	1	Guard, Belt	30	505-0084	1	+ Nipple, Pipe (3/4" x 2-1/2")
10	130–3738	1	Bracket, Belt Guard	31	505–0166	1	+ Tee, Pipe (3/4")
11	130–3739	1	Bracket, Belt Guard	32	505-0130	2	+ Plug, Pipe – Square Head
12	130–3732	1	Guard, Belt				(3/4–14)
13	800-0071	1	Screw, Cap – Hex Head	33	191–1878	1	# Support, Alternator
			(1/2–13 x 1")	34	800-0061	2	# Screw, Cap – Hex Head
14	850-0055	1	Washer, Lock – Spring				(3/8–16 x 3–3/4")
			(7/16")	35	850-0050	4	# Washer, Lock - Spring (3/8")
15	130–3740	1	Bracket, Belt Guard	36	800-0050	2	# Screw, Cap - Hex Head
16	821–5002–03	48	Screw, Locking – Hex				(3/8–16 x 1")
			Washer Head	37	526-0249	2	Washer, Flat (7/16")
			(1/4–20 x 1/2")	38	626-0399-25	3	Washer, Flat (1/2")
17	130–3735	1	Cover, Belt Guard	39	850-0050	4	Washer, Lock – Spring (3/8")
18	130–3746	1	* Cover, Belt Guard	40	332–1389	1	Tie, Cable
19	130–3745	1	* Gasket, Fan Hub				
20	800–0062	5	* Screw, Cap – Hex Head				or Sets With Dry Manifold
04	000 0054	^	(3/8–16 x 4")				or Sets With Wet Manifold
21	800–0051	2	* Screw, Cap – Hex Head (3/8–16 x 1–1/4")	+ -	Used on Some	e ⊏ arıy l	wodels


Alternator 45 Amp

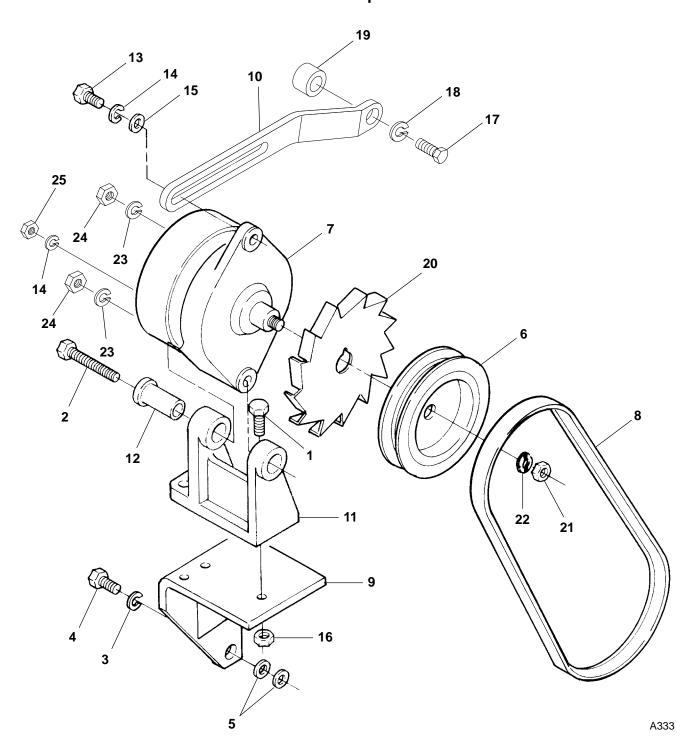

Alternator 45 Amp

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0022	2	Screw, Locking - Hex	11	191–1990	1	Support, Alternator
			Washer Head (5/16–18 x	12	191–1989–0	7 1	Spacer, Mounting
			1–1/4")	13	800-2059	1	Screw, Cap – Hex Head
2	718–1067	1	Screw, Cap – Hex Head				(M8 x 30mm)
			(M10 x 90mm)	14	850-2008	2	Washer, Lock – Spring (M8)
3	850-0060	2	Washer, Lock – Spring (1/2")	15	526-0030	1	Washer, Flat (3/8")
4	800-0092	2	Screw, Cap – Hex Head	16	870-0257	3	Nut, Locking – Hex (5/16")
			(1/2–13 x 1–1/2")	17	800-0073	1	Screw, Cap – Hex Head
5	526-0353	2	Washer, Flat (1/2")				(7/16–14 x 1–1/2")
6	191–1984	1	Pulley	18	850-0055	1	Washer, Lock – Spring
7	191-1983-02	1	Alternator (24 Volt DC, 45				(7/16")
			Amp) (Includes Voltage	19	191–1888	1	Spacer (5/8" Long) (Used on
			Regulator, M16 Nut, and				Some Early Models)
			Spring Washer – Ref No.	20	191-1981	1	Fan, Alternator
			21 and 22)	21	870–2161	1	Nut, Hex (M16)
	191–2121	1	Voltage Regulator (Not	22	851-0039	1	Washer, Spring (M16)
			Illustrated)	23	850-2005	2	Washer, Lock - Spring (M5)
8	511-0161-05	1	Belt (5 Rib)	24	860-2006	2	Nut, Hex (M5)
9	191-1987	1	Bracket, Mounting	25	860-2008	1	Nut, Hex (M8)
10	191–2148	1	Bracket, Adjusting				, ,


Alternator 75 Amp

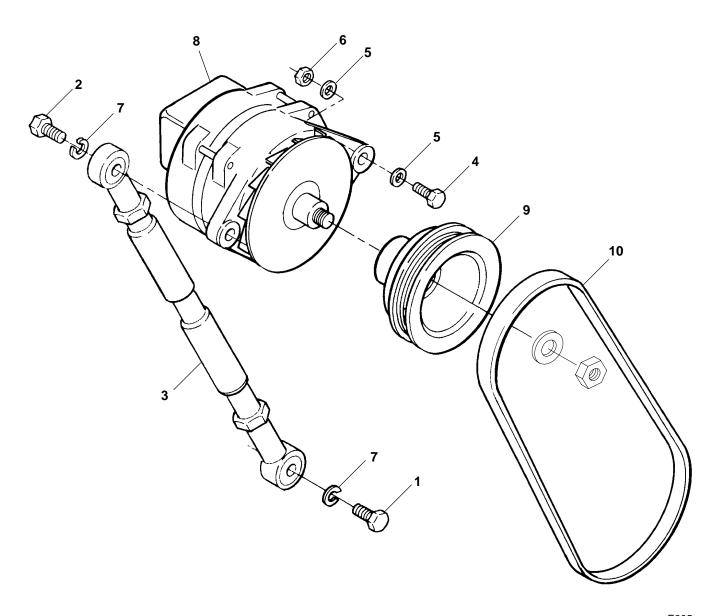

E305


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0236	1	Screw, Cap - Hex Head	6	870-0452	1	Nut, Locking – Hex (1/2–20)
			(1/2-13 x 1-3/4")	7	850-0060	2	Washer, Lock – Spring (1/2")
2	800–0092	1	Screw, Cap – Hex Head (1/2–13 x 1–1/2")	8	191–1926–02	2 1	Alternator (24 Volt DC, 75 Amp) (Includes 5/8–18 Nut
3	191–1879	1	Link, Alternator Adjusting				and Washer)
4	800-0237	1	Screw, Cap - Hex Head	9	130-3254	1	Pulley
			(1/2-20 x 6-1/2")	10	511-0161	1	Belt (5 Rib)
5	526-0353	2	Washer, Flat (1/2")				·

Air Starter

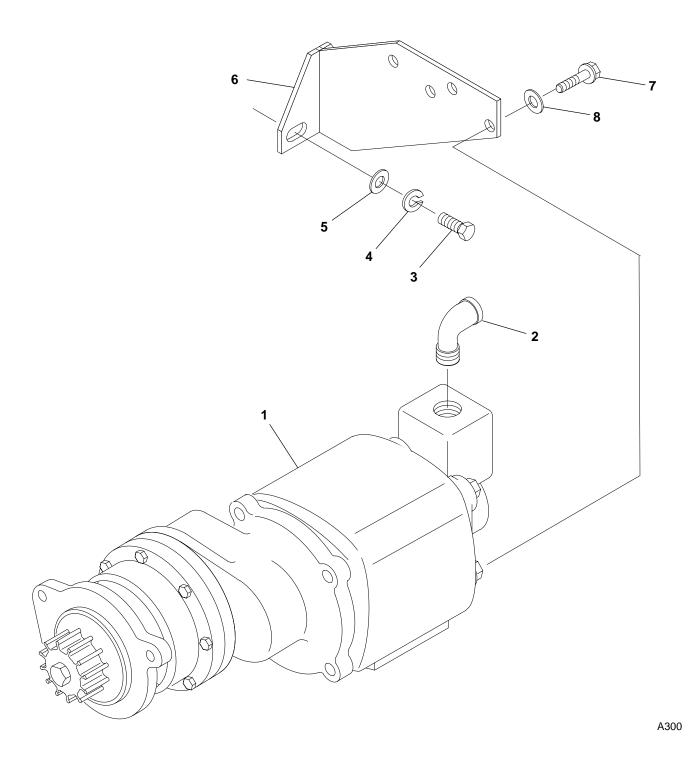

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	127-0390-01	1	Motor, Air Starting	5	526-0380	2	Washer, Flat (1/2")
2	502-1054-08	1	Elbow, Street Pipe	6	127-0393	1	Brace, Starting Motor
3	800–0091	2	Screw, Cap – Hex head (1/2–13 x 1–1/4")	7	800–2526	2	Screw, Cap – Hex Head (M10 x 20mm)
4	850-0105	2	Washer, Lock (1/2")	8	526-2135	2	Washer, Flat (M10)

Electric Starter

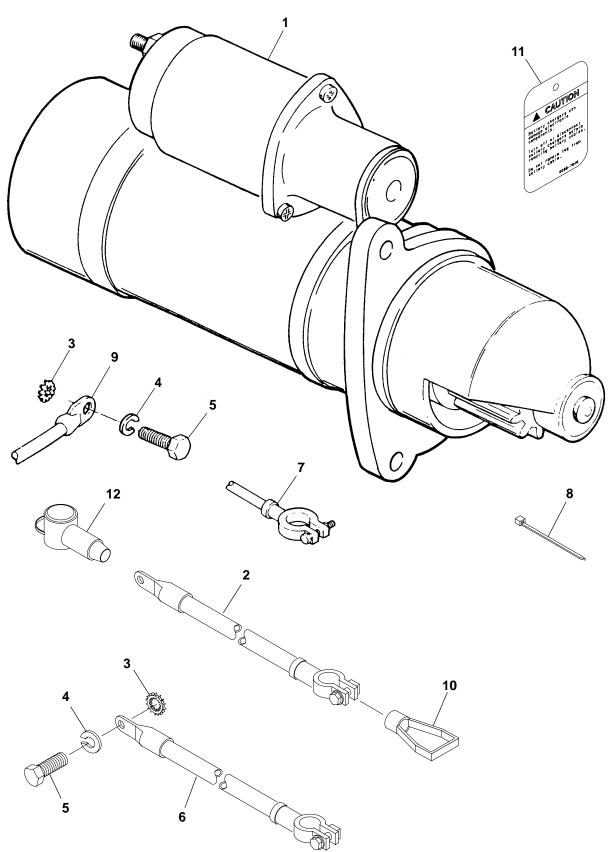


A334

Electric Starter

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	191–2135	1	Starter (24VDC)	7			Cable, Battery – Jumper
2	416–0444	1	Cable, Battery (44") DFEC Spec J Through P DFED Spec C Through H DFED Spec A Through E DFFB Begin Spec J		416–0446	1	(Includes One Battery Cable Boot (Ref No. 10) 12–1/2" DFEC Spec J Through P DFED Spec C Through H
	416–0444	2	DFEB Begin Spec R DFEC Begin Spec J DFED Begin Spec F		416–1076	1	DFED Spec A Through E DFFB Begin Spec J 12"
	416–1088	1	DFED Begin Spec F DFEB Begin Spec S DFEC Begin Spec K DFED Begin Spec G		410-1070	ı	DFEB Begin Spec R DFEC Begin Spec J DFED Begin Spec F
3	856-0013	2	Washer, Lock – EIT (1/2")		416–1097	1	DFEB Begin Spec S
4	850-0060	2	Washer, Lock – Spring (1/2")		110 1001	•	DFEC Begin Spec K
5	800-0090	2	Screw, Cap – Hex Head				DFED Begin Spec G
		_	(1/2–13 x 1")	8	332-0941	A/R	Tie, Cable (Quantity Used As
6	416-0960	1	Cable, Battery (29")				Required)
			DFEC Spec J Through P DFED Spec C Through H	9	416–0632	1	Cable, Battery – Starter to Ground (14–1/2")
			DFED Spec A Through E	10	416-1019	1	Boot, Battery Cable (Red)
			DFFB Begin Spec J	11	098-7646	1	Tag, Battery
				12	416-1084	1	Boot, Starter Cable (Red)


Day Tank and Rupture Basin Models with Fuel Transfer Pump and Automatic Pump Control

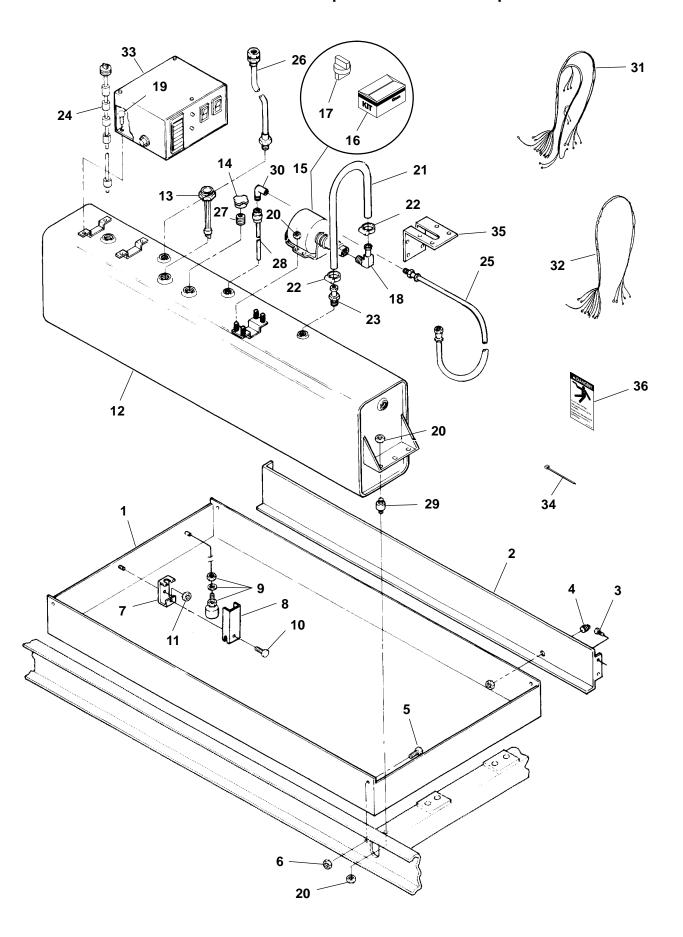

Day Tank and Rupture Basin Models with Fuel Transfer Pump and Automatic Pump Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	159–1231 159–1232	1 1	Basin, Rupture Bracket, Mounting	19	821–5002–04	4	Screw, Locking – Hex Washer Head (1/4–20 x 5/8")
3	815–0236	4	Screw, Thread Forming – Hex Head (5/16–18 x 5/8")	20	870–0212	16	Nut, Locking – Hex Head (1/4–20)
4	505-0055	1	Plug, Pipe – Square Head (1/4")	21	503-1660-02	! 1	Hose, Fuel – Pump to Tank (5/8" ID x 20")
5	821-0016	4	Screw, Locking – Hex Washer	22	503-0183	2	Clamp, Hose
			Head (5/16–18 x 3/4")	23	502-0943	1	Connector, Hose
6	870-0257	4	Nut, Locking – Hex Head	24	308-0913	1	Switch, 5 Float
			(5/16")	25	501-0084	1	Line, Fuel – Flexible (Fuel
7	319-0490	1	* Bracket, Switch				Supply) (36")
8	319-0489	1	* Cover, Basin Switch	26	501-0552	1	Line, Fuel - Flexible (Fuel
9	308-0916	1	* Switch, Basin (Includes				Return) (27")
			Washer and Nut)	27	505-0172	1	Nipple, Close (2")
10	821-0010	1	* Screw, Locking – Hex Washer	28	415-0566-02	. 1	Pipe, Suction
			Head (1/4-20 x 1/2")	29	402-0610	6	Isolator, Vibration
11	870–0212	1	* Nut, Locking – Hex Head (1/4–20)	30	505-0050	1	Elbow, Street – 90 Degree (1/2")
12	415-0616	1	Tank, Day (46 Gallon)	31	338-2397	1	Harness, Wiring (5 Wire, 40")
13	415-0565-02	2 1	Gauge, Level – Liquid				(P103-GND, 1, 3, 4, White
14	159–1208	1	Cap, Day Tank				to TB1-3, 5, 6, 7, 8)
15	399–0117	1	Pump, Fuel Transfer (P103) (Includes Pump Repair Kit and Coupler – Ref No. 16	32	338–2511	1	Harness, Control (2 Wire, 100") (TB1-19, 20 to S1 and GND)
16	399–0121	1	and 17) Kit, Fuel Transfer Pump	33	_	1	Control, Day Tank (See Page 66 for Components)
10	000 0121	'	(Includes Lip Seal, Four	34	332-1445	A/R	Tie, Cable
			Carbon Bearings, Gasket, Drive Gear Assembly, Idle	35	149–2275	1	Bracket, Mounting – Fuel Filter
			Gear Assembly, and Coupler [Ref No. 17])	36	098–5387	1	Label, Danger
17	399-0122	1	Coupler, Fuel Transfer Pump	* No	t Used on All M	1odels.	
18	502-0942	1	Elbow, Hose – 90 Degree (5/8" ID Hose x 3/8" Pipe)				


Day Tank and Rupture Basin Models with Automatic Fuel Transfer Pump Control

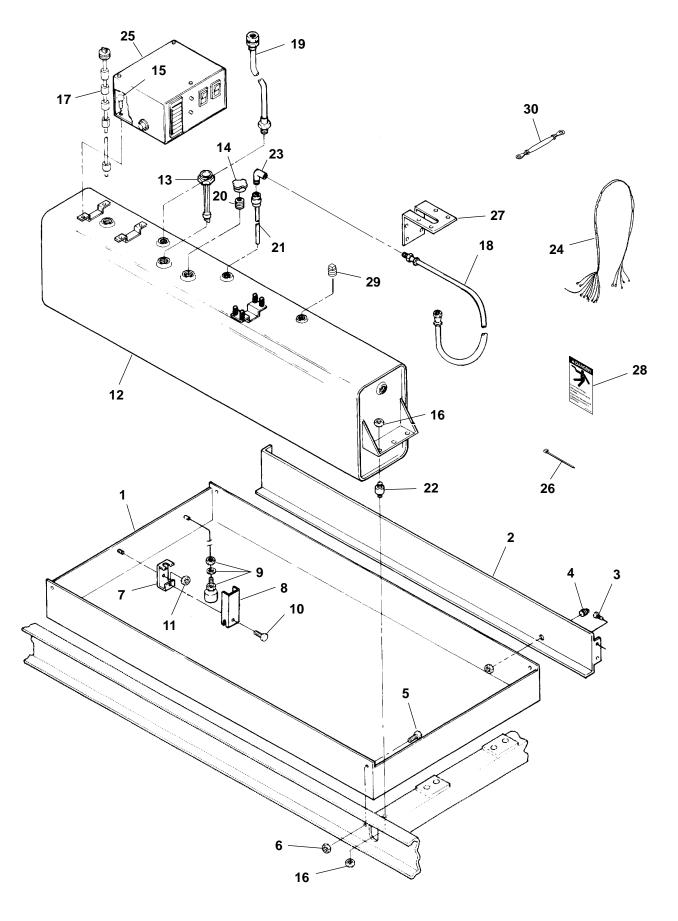

Day Tank and Rupture Basin Models with Automatic Fuel Transfer Pump Control

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	159–1231	1	Basin, Rupture	16	870-0212	12	Nut, Locking – Hex Head
2	159–1232	1	Bracket, Mounting				(1/4–20)
3	815–0236	4	Screw, Thread Forming – Hex Head (5/16–18 x 5/8")	17 18	308–0913 501–0084	1 1	Switch, 5 Float Line, Fuel – Flexible (Fuel
4	505-0055	1	Plug, Pipe – Square Head (1/4")	19	501–0552	1	Supply) (36") Line, Fuel – Flexible (Fuel
5	821-0016	4	Screw, Locking – Hex Washer			•	Return) (27")
			Head (5/16–18 x 3/4")	20	505–0172	1	Nipple, Close (2")
6	870-0257	4	Nut, Locking – Hex Head	21	415-0566-02	2 1	Pipe, Suction
			(5/16")	22	402-0610	6	Isolator, Vibration
7 8	319–0490 319–0489	1 1	* Bracket, Switch * Cover, Basin Switch	23	505-0050	1	Elbow, Street – 90 Degree
9	308-0916	1		24	338–2511	4	(1/2")
		•	* Switch, Basin (Includes Washer and Nut)	24	330-2311	1	Harness, Control (2 Wire, 100") (TB1-19, 20 to S1
10	821–0010	1	* Screw, Locking – Hex				and GND)
			Washer Head (1/4–20 x 1/2")	25	_	1	Control, Day Tank (See Page 66 for Components)
11	870-0212	1	* Nut, Locking – Hex Head	26	332-1445	A/R	Tie, Cable
			(1/4–20)	27	149–2275	1	Bracket, Mounting - Fuel
12	415–0616	1	Tank, Day (46 Gallon)				Filter
13	415-0565-02	1	Gauge, Level – Liquid	28	098–5387	1	Label, Danger
14	159–1208	1	Cap, Day Tank	29	505-0110	1	Plug, Square Head (3/8")
15	821–5002–04	4	Screw, Locking – Hex Washer Head (1/4–20 x	30	337–2402	1	Wire, Ground
			5/8")	* No	t Used on All N	∕lodels.	


Day Tank and Rupture Basin Models with Float Valve

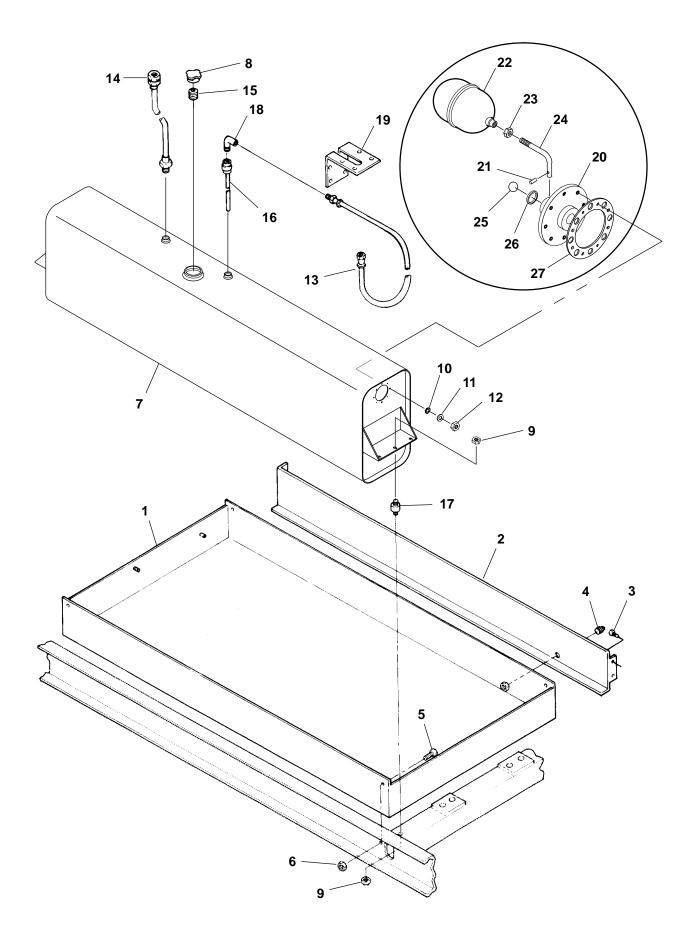

Day Tank and Rupture Basin Models with Float Valve


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	159–1231	1	Basin, Rupture	14	501-0552	1	Line, Fuel – Flexible (Fuel
2	159–1232	1	Bracket, Mounting				Return) (27")
3	815-0236	4	Screw, Thread Forming –	15	505-0172	1	Nipple, Close (2")
			Hex Head (5/16-18 x 5/8")	16	415-0566-02	1	Pipe, Suction
4	505-0055	1	Plug, Pipe – Square Head	17	402-0610	6	Isolator, Vibration
			(1/4")	18	505-0050	1	Elbow, Street – 90 Degree
5	821-0016	4	Screw, Locking – Hex Washer				(1/2")
			Head (5/16-18 x 3/4")	19	149-2275	1	Bracket, Mounting - Fuel
6	870-0257	4	Nut, Locking – Hex Head				Filter
			(5/16")	20	415-0650-01	1	Body, Float Valve
7	415-0680	1	Tank, Day (46 Gallon)	21	415-0651-19	1	Pin, Roll
8	159-1208	1	Cap, Day Tank	22	415-0652	1	Float, Ball
9	870-0212	8	Nut, Locking – Hex Head	23	864-0011	1	Nut, Jam (1/4-20)
			(1/4–20)	24	415-0654	1	Arm, Float
10	853-1008	8	Washer, Lock W/ET (#10)	25	415-0655	1	Ball, Steel
11	526-0008	8	Washer, Flat (#10)	26	415-0656-21	1	Seal, Rectangular Ring
12	867-0028	8	Nut, Hex (10–32)	27	415-0660	1	Gasket, Cover Plate
13	501–0084	1	Line, Fuel – Flexible (Fuel Supply) (36")				

Day Tank Control

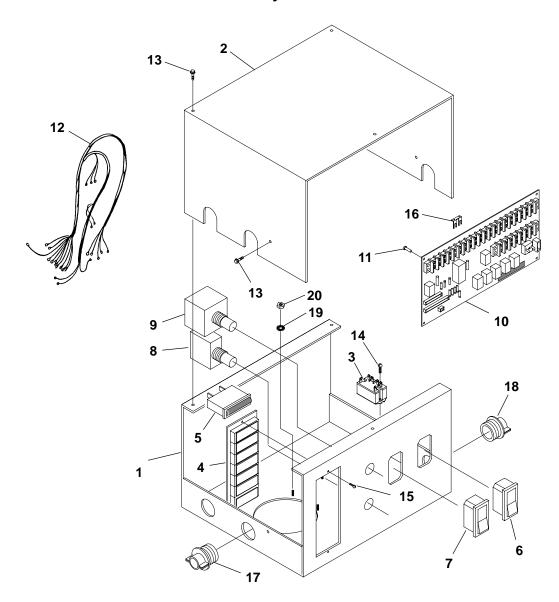


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	625–2141–01	1	Control, Fuel Tank – Complete (Includes Parts	11	870–0458	4	Spacer, Board – Printed Circuit
			Listed Below)	12	338-2382	1	Harness, Wiring - Control Box
1	319–0486	1	Box, Control				(S102, K130, and S111 to
2	319–0485	1	Cover, Control Box				CB101, CB107, CHASSIS,
3	307–2677–02	1	Relay, Pump (K130)				and TB1)
4	322-0403-02	1	Light Assembly, Indicator – Seven Light (Includes Wiring Harness)	13	815–0350	5	Screw, Self-Tapping – Slotted Hex Washer Head (10–32 x 3/8")
5	322-0369-02	1	Lamp, Indicator – Replacement	14	812–0075	2	Screw, Machine – Round Head (8–32 x 1/4")
6	308-0912	1	Switch, Rocker (On/Off)	15	815-0385	2	Screw, Macine, Round Head
7	308-0852	1	Switch, Rocker (Test/Reset)				(6-32 x 1/2")
			(S111)	16	332-2605	2	Jumper, Terminal
8	320-1653	1	Breaker, Circuit – DC	17	331-0027	2	Connector, Romex
			(CB107)	18	331-0042	1	Connector, Knockout
9	320-1654	1	Breaker, Ćircuit – AC	19	856-0002	1	Washer, Lock W/EIT (#8)
			(CB101)	20	860-0008	1	Nut, Hex (8-32)
10	300–3464	1	Board, Printed Circuit – Fuel Tank Control				,

Skid

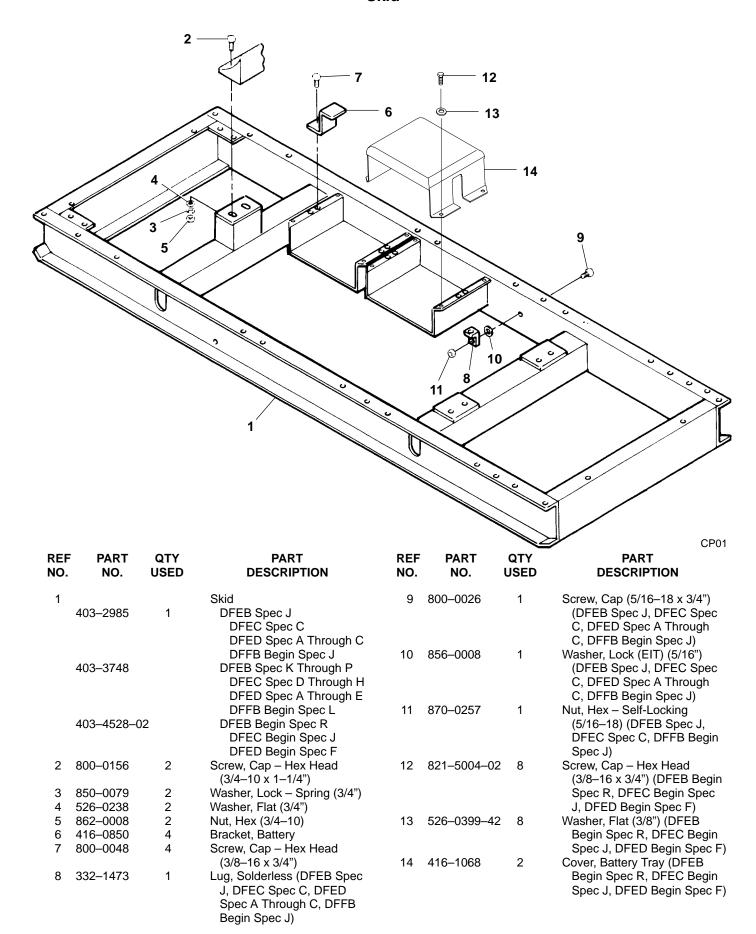


Woodward Governor

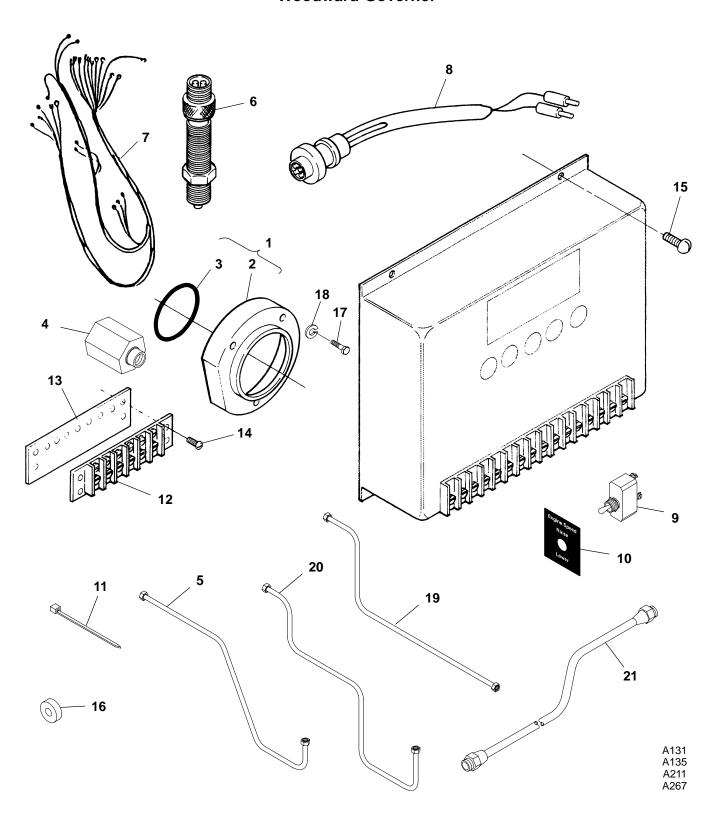

Woodward Governor


REF NO.I	PART NO. USEDDES	QTY CRIF		REF NO.		QTY SCRIPTI	ON	PART
		•			001221	.		
1	440 0007		Pump, Fuel	12	000 0000	4		ock, Terminal (6 Place)
	149–2287	1	DFEB Spec J Through K DFEC Spec C Through D		332–0699	1	# L	Jsed With Adder Code A135
			DFED Spec A, DFFB		332-0699	2	*‡ (Jsed With Adder Code
			(Includes Fuel Pump					A211 and A267
			Plug and O-Ring Seal –	13				rip, Marker
			Ref No. 2 and 3)		332–0970	1	# L	Jsed With Adder Code
	149–2613	1	DFEB Begin Spec L			_		A135
			DFEC Begin Spec E		332–0970	2	*‡ (Jsed With Adder Code
			DFED Begin Spec B	4.4			0-	A211 and A267
			(Includes O-Ring Seal, EFC Cavity Plug, and	14				rew, Machine – Round Head (#8–32 x 3/4")
			Female Pipe Adapter –		822-1050	2		Jsed With Adder Code
			Ref No. 2, 3, and 4)		022-1000	2	π	A135
2	150-2334	1	Plug – Fuel Pump EFC		822-1050	4	*‡ (Jsed With Adder Code
_		-	Cavity			-	'	A211 and A267
3	509-0272-02	1	Seal, O-Ring – EFC Cavity	15	813-0103	4	* Sc	rew, Machine – Round
			Plug					Head (#10-32 x 3/4")
4	502-1302	1	Adapter, Female Pipe (1/8"	16	151-0663-02			acer (21/64" ID x 1/4")
			Female x 1/2–20 Male) –	17	815–0728	4		rew, Cap – Twelve Point
_	4.40, 0000		Includes O-Ring	40	500 0000			7/16–14 x 1–1/2")
5	149–2233	1	Tube, Fuel Supply	18	526-0032	4		asher, Flat (29/32")
6 7	151–0411 338–2563	1 1	<pre>#*‡ Pickup, Magnetic #*‡ Harness, Wiring – Woodward</pre>	19 20	149–2544 149–2543	1 1		be, Fuel Supply be, Fuel Drain
,	330-2303	1	Governor (7 Wire, 110") (A16	_	149-2543	1		be, Fuel Drain
			to P1, GND, T26, ACT) –		143 2014	•		OFEB Begin Spec L
			DFEB Spec J Through K					OFEC Begin Spec E
			DFEC Spec C Through D					OFED Begin Spec B
			DFED Spec A, DFFB					
8			Harness, Wiring – Adapter –	#_	LISAd With Ad	der Cod	lo Δ13	5 – Hydraulic governor with
			Woodward Governor To	"				speed adjustment and is
			Engine Harness (12") (ACT					eed drop of 0% (isochrono-
	220 2526	4	to ACT) # Used With Adder Code		us) to 7%.		-	
	338–2536	1	# Used With Adder Code A135					
	338–2538	1	*‡ Used With Adder Code	* –				1 – Electronic governor with
	2000	•	A211 and Adder Code		a speed droop			aulic actuator, adjustable for
			A267		a speed droop	01 0 70 (1	3001110	5710d3) to 376.
9	308-0226	1	# Switch, Toggle	‡ -	Used With Ad	der Cod	le A26	67 – Electronic governor with
10	098–6167	1	# Label, Toggle Switch		magnetic spee	d pickup	, hydr	aulic actuator, load sharing,
11	332–1445	1	#*‡ Tie, Cable (Quantity Used As					of 0% (isochronous) to 5%
			Required)		and load sharir	ng within	15%.	

Electronic Governor

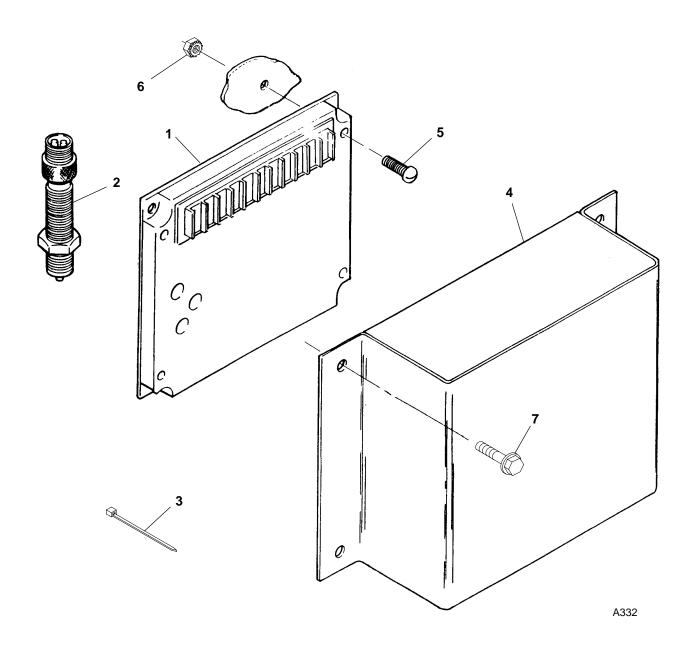


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2 3 4 5	151–0637 151–0411 332–1445 150–2213 813–0103	1 1 A/R 1 4	Control, Governor Pickup, Magnetic Tie, Cable Cover, Governor Control Screw, Machine – Round Head (#10–32 x 3/4") DFEB Spec J Through L DFEC Spec C Through E DFED Spec A Through B DFFB Begin Spec J	7	870–0131 821–6001–03	4 4 4	Nut, Hex W/ET (#10–32) DFEB Spec J Through L DFEC Spec C Through E DFED Spec A Through B DFFB Begin Spec J Screw, Self-Locking, Hex Washer Head (M5 x 16mm) DFEB Begin Spec M DFEC Begin Spec F DFED Begin Spec C

Entrance Box Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

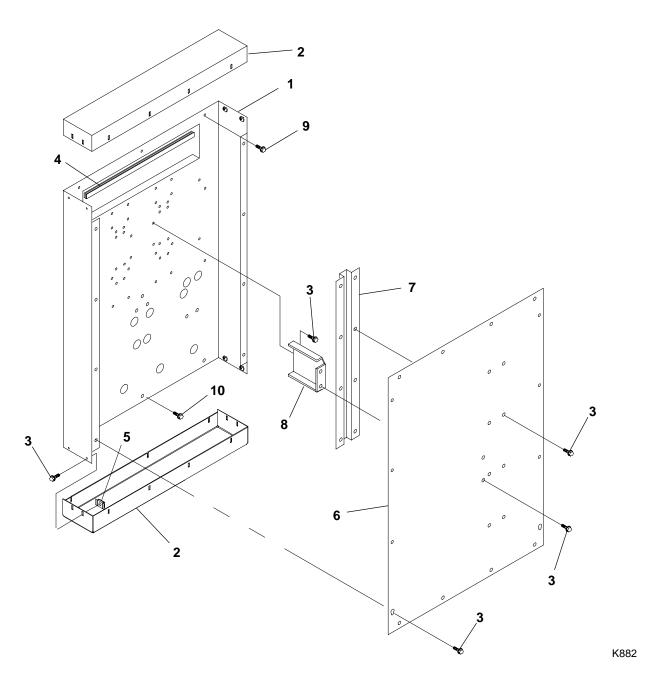


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–2432 319–1915	1 2	Box, Entrance Cover	6 7	319–1916 319–1918	1 1	Cover Brace, Cover
3	821–5002–0	3 41	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")	8 9	319–1927 821–5002–04	1 4 4	Brace, Cover Screw, Self-Locking – Hex Washer Head
4 5	508–1092 870–0494	- 16	Edging – Bulk (Order By The Foot – 3 Feet Required) Nut, Self-Retaining – Floating (1/4–20)	10	821–0009	1	(1/4–20 x 5/8") Screw, Self-Locking – Hex Washer Head (1/4–20 x 3/8")
			,				,

Entrance Box Model HC5 Generators DFEB Begin Spec M, DFEC Begin Spec F, DFED Begin Spec C

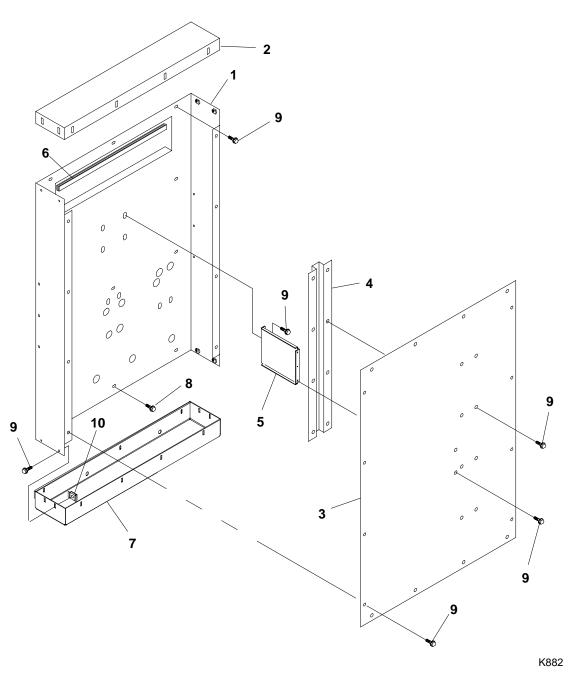


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-3169	1	Box, Entrance	7	319–3183	1	Cover – Lower
2	319-1915	1	Cover – Upper	8	821-2035	2	Screw, Self-Locking – Hex
3	319-1916	1	Cover				Washer Head (M6 x 25mm)
4	319-3284	1	Brace, Cover	9	821-6002-03	44	Screw, Self-Locking – Hex
5	319-3251	1	Brace, Cover				Washer Head (M6 x 16mm)
6	508–1092	-	Edging – Bulk (Order By The Foot – 2 Feet Required)	10	870–0504	16	Nut, Retaining (M6)

Entrance Box Model HC6 Generators DFFB Begin Spec K

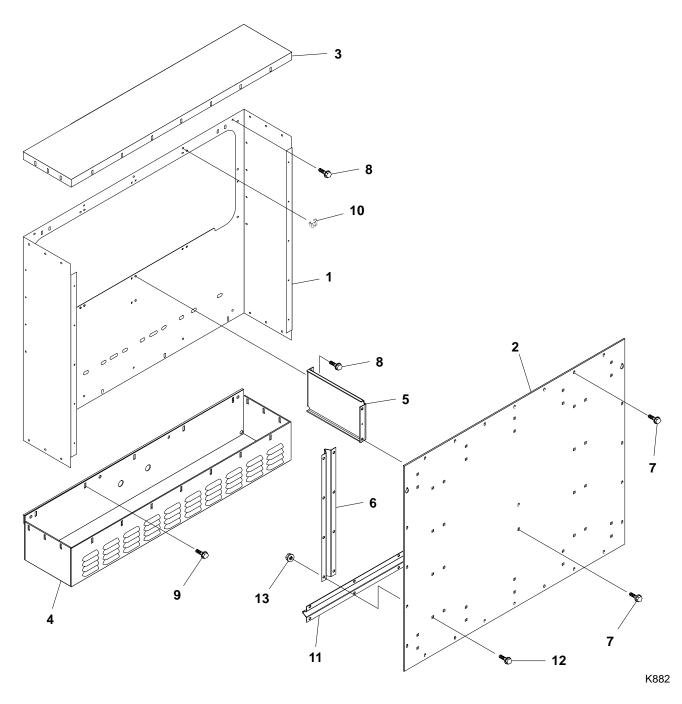

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
140.	110.	OOLD	DESCRIPTION	140.	110.	OOLD	DESCRIPTION
1	319–2337	1	Box, Entrance	8	821-0018	7	Screw, Self-Locking - Hex
2	319-2378	1	Cover, Entrance Box				Washer Head (1/4-20 x 5/8")
3	319-2336	1	Cover, Circuit Breaker Box	9	821-0011	5	Screw, Self-Locking – Hex
4	319-2335	1	Cover Assembly, Circuit				Washer Head (1/4-20 x 7/8")
			Breaker Box	10	870-0494	26	Nut, Self-Retaining (1/4–20)
5	319-2377-02	1	Brace, Cover	11	319-2399	2	Brace, Access Door
6	319-2398	2	Brace, Access Door	12	816-0098	36	Bolt, Carriage (5/16–18 x 5/8")
7	821–0010	38	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")	13	870–0257	36	Nut, Hex – Locking (5/16–18)

Control Housing Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

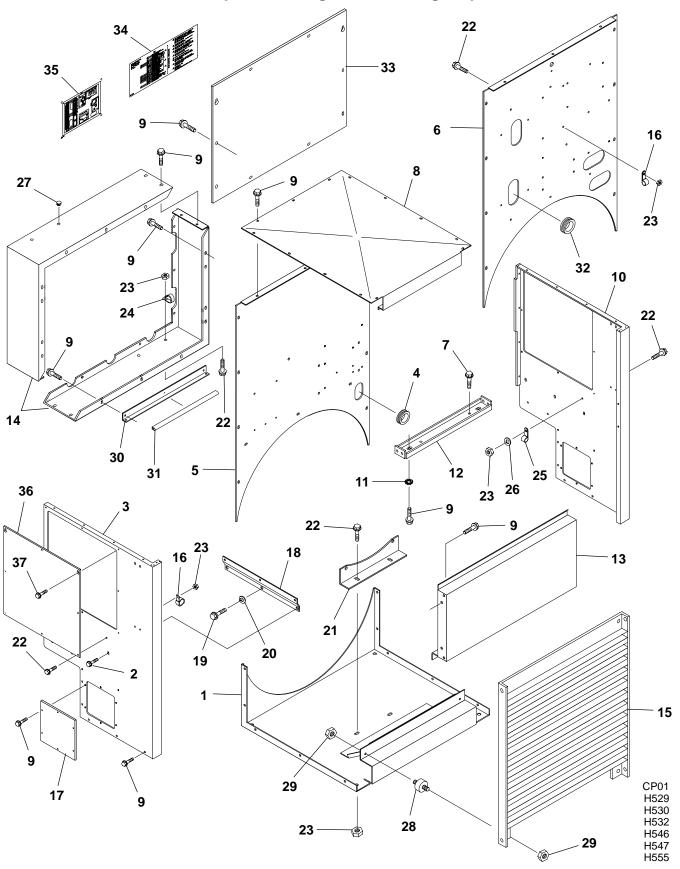


Control Housing Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-2771-02	1	Panel – Bottom	23			Nut, Self-Locking – Flange
2	821-5004-02	6	Screw, Self-Locking – Hex				Head (5/16–18)
			Washer Head (3/8-16 x		870-0257	5	Sets With Detector Control
3	319–2784–01	1	3/4") Panel, Right Side		870–0257	5	Sets With PowerCommand Control
4	508–1057	1	Grommet, Rubber – Sets With Detector Control	24	332–2634	2	Clamp, "J" – Sets With PowerCommand Control
			(Fits 2-1/4" Hole)	25	518-0548-24	1	Clamp, Hose – Sets With
5	319–2786	1	Panel, Rear – Sets With				PowerCommand Control
			Detector Control	26	526-0399-16		Washer, Flat (5/16")
6	319–2217	1	Panel, Rear – Sets With PowerCommand Control	27	517–0131	2	Plug, Hole (Fits 3/8" Hole) Sets With PowerCommand
7	821–5003–01	4	Screw, Self-Locking, Hex				Control
			Washer Head (1/4–20 x	28	402–0508	4	Isolator, Virbration
8	301–9512	1	1/2") Cover, Top	29	870-0550-05	8	Nut, Self-Locking – Flange (1/4–20)
9			Screw, Self-Locking – Hex Washer Head	30	319–2787	1	Angle, Stiffener – Sets With Detector Control
			(1/4–20 x 1/2")	31	508-1109	_	Edging (Order by the Foot –
	821–5002–03		Sets With Detector Control				1 Foot Required) – Sets
	821-5002-03	68	Sets With PowerCommand				With Detector Control
			Control	32	508-1090	4	Grommet, Rubber - Sets
10	319–2784–02	1	Panel, Left Side				With PowerCommand
11			Washer, Lock – EIT (1/4")				Control (Fits 3-1/4" Hole)
	856–0006	1	Sets With Detector Control	33	319–2220	1	Cover, Control Box – Sets
	856–0006	2	Sets With PowerCommand				With PowerCommand
40	204 0540	0	Control	24			Control
12 13	301–9510	2	Support, Control Box	34			Decal, Customer Connections Sets With PowerCommand
13	319–2776	1 2	Panel, Front				
14	319–2476	2	Wrapper, Control Box – Sets With PowerCommand		098–6985	1	Control
			Control		098–7121	1 1	Without Paralleling With Paralleling
15	319–2768	1	Grille	35	098–6826	1	Decal, Module Installation –
16	319-2700	1	Clamp, "J"	33	090-0020	ı	PowerCommand Control
10	332-2634	2	Sets With Detector Control	36			Cover, Side
	332–2634	1	Sets With PowerCommand	50	301–9511	2	Without Circuit Breaker or
	002 200+	•	Control		301 3011	_	Entrance Box
17	301-9629	2	Cover, Side – Lower		301–9511	1	With Circuit Breaker or
18	319–0745	2	Bracket, Panel			•	Entrance Box
19	800–2111	6	Screw, Self-Locking –	37			Screw, Self-Locking – Hex
			Hex Washer Head				Washer Head
20	850–2012	6	(M12 x 25mm)		924 5002 02	16	(1/4–20 x 1/2") Sets With Detector Control
20		6	Washer, Lock – Spring (M12)		821–5002–03		Sets With Detector Control Sets With PowerCommand
21	319–1346	1	Bracket, Panel		821–5002–03	8	
22			Screw, Self-Locking – Hex				Control
			Washer Head (5/16–18 x 3/4")				
	821-5003-03	5	Sets With Detector Control				
	821–5003–03	7	Sets With PowerCommand				

Control


Control Housing Model HC5 Generators DFEB Begin Spec M, DFEC Begin Spec F, DFED Begin Spec C

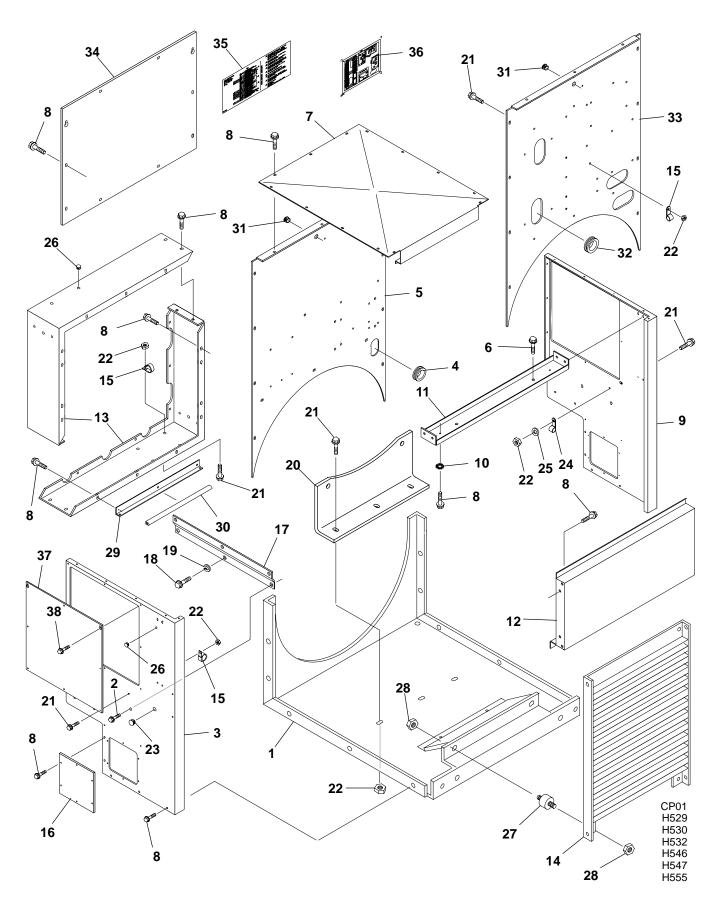

Control Housing Model HC5 Generators DFEB Begin Spec M, DFEC Begin Spec F, DFED Begin Spec C

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-3270-02	1	Panel, Bottom	22			Nut, Locking (M8)
2	821-6004-01	6	Screw, Self-Locking – Hex		870-2055	5	Sets With Detector Control
			Washer Head (M10 x 20mm)		870–2055	7	Sets With Power Command Control
3	319-3287-01	1	Panel, Right Side	23	517-0136	2	Plug, Hole (Fits 3/4" Hole)
4	508–1057	1	Grommet, Rubber – Sets With Detector Control	24	518-0548-24	1	Clamp, Hose – Sets With PowerCommand Control
			(Fits 2–1/4" Hole)	25	526–2100	1	Washer, Flat (M8)
5	319–3290	1	Panel, Rear – Sets With	26			Plug, Hole (Fits 3/8" Hole)
			Detector Control		517–0131	1	Sets With Detector Control
6	821–0014	4	Screw, Self-Locking – Hex Washer Head (5/16–18 x		517–0131	3	Sets With PowerCommand Control
			1/2")	27	402–0729	4	Isolator, Vibration
7	301–9512	1	Cover, Top	28	870–2054	8	Nut, Locking (M6)
8			Screw, Self-Locking – Hex Washer Head (M6 x 16mm)	29	319–3291	1	Angle, Stiffener – Sets With Detector Control
	821-6002-03	61	Sets With Detector Control	30	508-1109	_	Edging (Order by the Foot –
	821–6002–03	68	Sets With PowerCommand Control				1 Foot Required) – Sets With Detector Control
9	319-3287-02	1	Panel, Left Side	31	517-0135	1	Plug, Hole (Fits 5/8" Hole)
10			Washer, Lock – EIT (1/4")	32	508-1090	4	Grommet, Rubber - Sets
	856-0006	1	Sets With Detector Control				With PowerCommand
	856-0006	2	Sets With PowerCommand				Control (Fits 3-1/4" Hole)
			Control	33	319-3273	1	Panel, Rear – Sets With
11	319-3294	2	Support, Control Box				PowerCommand Control
12	319-2776	1	Panel, Front	34	319-2220	1	Cover, Control Box – Sets
13	319–3278	2	Wrapper, Control Box – Sets With PowerCommand				With PowerCommand Control
			Control	35			Decal, Customer Connections
14 15	319–2768	1	Grille Clamp, "J"				Sets With PowerCommand Control
	518-0548-02	2	Sets With Detector Control		098-6985	1	Without Paralleling
	518-0548-02	3	Sets With Power Command		098-7121	1	With Paralleling
16	301–9629	2	Control Cover, Side – Lower	36	098–6826	1	Decal, Module Installation – PowerCommand Control
17	319–3327	2	Bracket, Panel	37			Cover, Side
18	800–2111	6	Screw, Self-Locking –	٥.	301–9511	2	Without Circuit Breaker or
.0	000 2111	Ŭ	Hex Washer Head		001 0011	_	Entrance Box
			(M12 x 25 mm)		301–9511	1	With Circuit Breaker or
19	850-2012	6	Washer, Lock – Spring (M12)		001 0011	•	Entrance Box
20	319–1346	1	Bracket, Panel	38			Screw, Self-Locking – Hex
21	010 1010	•	Screw, Self-Locking – Hex	00			Washer Head (M6 x 20mm)
			Washer Head (5/16–18 x		821-6002-03	16	Sets With Detector
			3/4")		32. 3332 00		Control
	821-6003-02	5	Sets With Detector Control		821-6002-03	8	Sets With PowerCommand
	821–6003–02	7	Sets With PowerCommand Control		521 0002 00	. 0	Control


Control Housing Model HC6 Generators DFED Spec A Through B, DFFB Begin Spec J

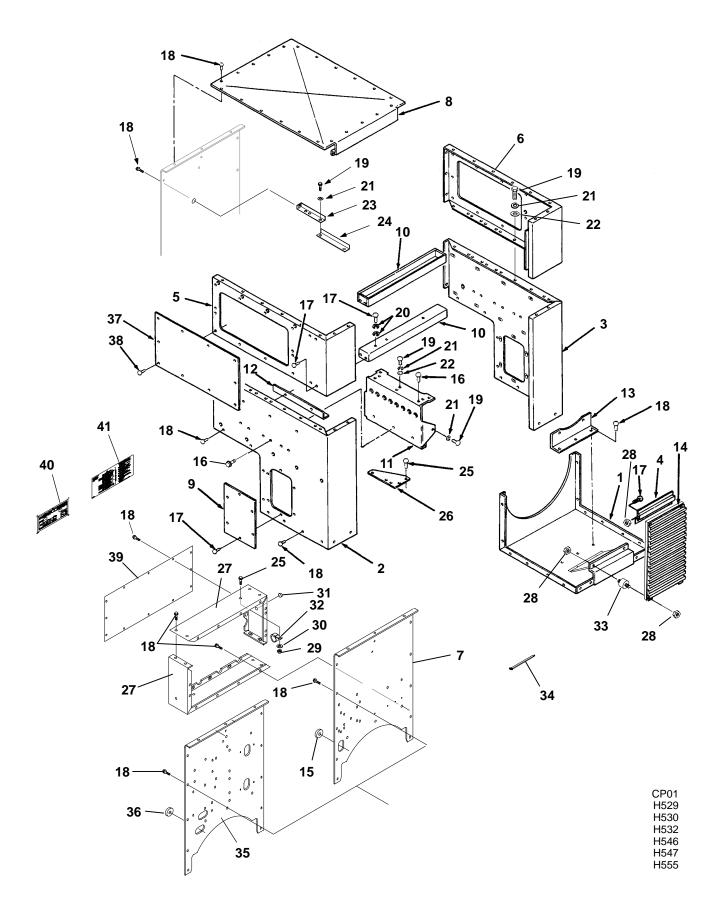

Control Housing Model HC6 Generators DFED Spec A Through B, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-2771-03	1	Panel, Bottom	26	319-1203-01	2	Gusset
2 3 4	319–2781–01 319–2781–02 319–2778	1	Panel – Right Side – Lower Panel – Left Side – Lower Panel – Rear	27	319–2244	2	Wrapper, Control Box – Sets With PowerCommand Control
5	319–2779–01	1	Panel – Right Side – Upper	28	870-0550-05	10	Nut, Hex (1/4–20)
6	319–2779–02		Panel – Left Side – Upper	29	870-0550-07		Nut, Hex (5/16–18) Sets With
7	319–1089	1	Panel – Front – Sets With				PowerCommand Control
8	319–1093	1	Detector Control Cover, Top	30	526–1115	2	Washer, Flat (5/16") Sets With PowerCommand
9	319-0881	2	Cover, Side – Lower				Control
10	319–0879	2	Support – Control Box	31	517-0131	2	Plug, Hole (Fits 3/8" Hole)
11	319–1096	2	Bracket, Saddle	٠.	0	_	Sets With PowerCommand
12	319–0883	2	Angle, Housing				Control
13	319–1091	1	Bracket, Panel	32	332-2634	4	Clamp, "J" - Sets With
14	319–2767	1	Grille				PowerCommand Control
15	508-1057	1	Grommet, Rubber - Sets	33	402-0610	4	Isolator, Vibration
			With Detector Control	34	332-1389	A/R	Tie, Cable
			(Fits 2-1/4" Hole)	35	319-2243	1	Panel, Front - Sets With
16	821-5004-02	12	Screw, Self-Locking – Hex				PowerCommand Control
			Washer Head (3/8–16 x 3/4")	36	508–1090	3	Grommet, Rubber – Sets With PowerCommand
17	821–5002–03	30	Screw, Self-Locking – Hex				Control
			Washer Head	37			Cover, Side – Upper
			(1/4–20 x 1/2")		319–1095	2	Without Circuit Breaker,
18			Screw, Self-Locking - Hex				Entrance Box, or BUS Box
			Washer Head		319–1095	1	With Circuit Breaker,
			(5/16–18 x 1/2")				Entrance Box, or BUS Box
	821–5003–01		Sets With Detector Control	38			Screw, Self-Locking – Hex
	821–5003–01	80	Sets With PowerCommand Control				Washer Head (1/4–20 x 1/2")
19	800-2086	15	Screw, Cap – Hex Head		821-5002-03	10	Sets With Detector Control
			(M10 x 25mm)		821-5002-03	20	Sets With PowerCommand
20	856-0006	1	Washer, Lock – EIT (1/4")				Control
21	850-2010	15	Washer Lock - Spring (M10)	39	319-2245	1	Cover, Control Box - Sets
22	526-0141	10	Washer, Flat (3/8")				With PowerCommand
23	319-1090	1	Angle, Support (5-1/2")				Control
24	319–1118	1	Angle, Support (6-1/2")	40	098–6827	1	Decal, Module Installation -
25			Screw, Self-Locking – Hex				PowerCommand Control
			Washer Head	41			Decal, Customer Connections -
			(5/16–18 x 3/4")				PowerCommand Control
	821-5003-03	9	Sets With Detector		098–6985	1	Models Without Paralleling
			Control		098–7121	1	Models With Paralleling
	821–5003–03	11	Sets With				
			PowerCommand				
			Control				


Control Housing Model HC6 Generators DFEB Spec M, DFEC Spec F, DFED Spec C

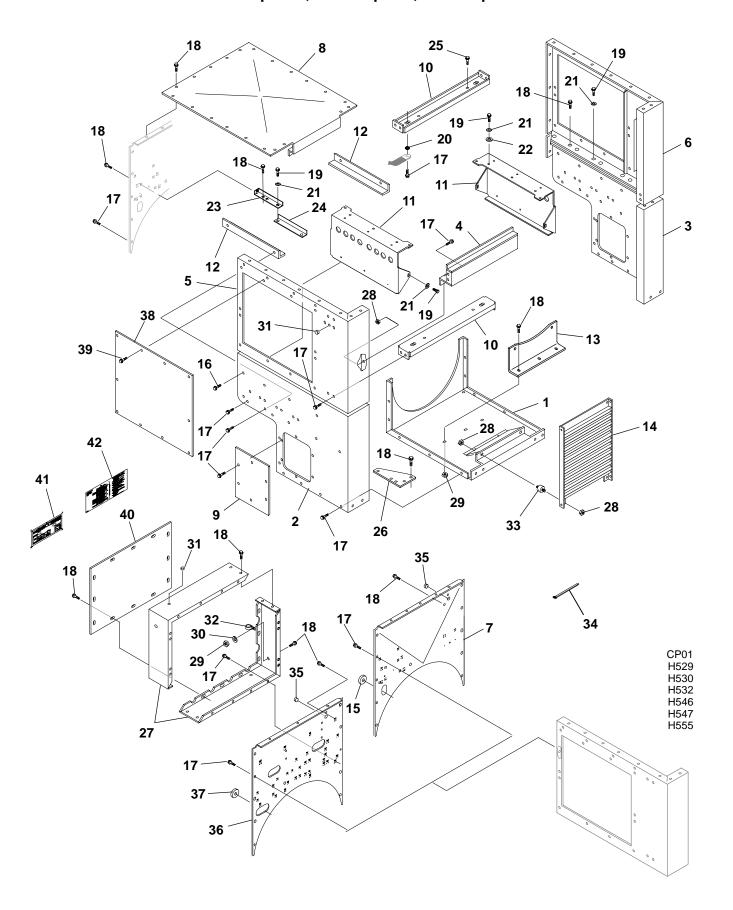

Control Housing Model HC6 Generators DFEB Spec M, DFEC Spec F, DFED Spec C

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-3270-03	1	Panel – Bottom	28	870-2054	10	Nut, Locking (M6)
2	319–3283–01		Panel – Right Side – Bottom	29	870–2055	2	Nut, Locking (M8) Sets With
3	319–3283–02		Panel – Left Side – Bottom		0.0 2000	_	PowerCommand Control
4	319–2778	1	Panel – Rear	30	526-1115	2	Washer, Flat (5/16") Sets
5	319–3281–01		Panel – Right Side – Upper	00	020 1110	-	With PowerCommand
6	319–3281–02		Panel – Left Side – Upper				Control
7	319–3262	1	Panel – Front – Sets With	31			Plug, Hole (Fits 3/8" Hole)
			Detector Control	-	517-0131	1	Sets With Detector Control
8	319-1093	1	Cover, Top		517-0131	3	Sets Wtih PowerCommand
9	319-0881	2	Cover, Side – Lower			-	Control
10	319–3258	2	Support, Control Box	32			Clamp, Retainer – Sets With
11	319-3267	2	Bracket, Saddle				PowerCommand Control
12	319–3260	2	Angle, Housing		332-2634	2	Engine Side (3/4" ID)
13	319–1091	1	Bracket, Panel		518-0548-42		Control Side (1–1/16" ID)
14	319–2767	1	Grille	33	402-0729	4	Isolator, Vibration
15	508-1057	1	Grommet, Rubber (Fits	34	332-1389	A/R	Tie, Cable
			2-1/4" Hole) Sets With	35	517-0135	1	Plug, Hole (Fits 5/8" Hole)
			Detector Control	36	319-3276	1	Panel - Front - Sets With
16	821-6004-01	12	Screw, Self-Locking – Hex				PowerCommand Control
			Washer Head (M10 x	37	508-1090	3	Grommet, Rubber (Fits
			20mm)				3-1/4" Hole) Sets With
17	821-6002-03	30	Screw, Self-Locking – Hex				PowerCommand Control
			Washer Head (M6 x 16mm)	38			Cover, Side – Upper
18			Screw, Self-Locking – Hex		319–1095	2	Without Circuit Breaker,
			Washer Head (M8 x 20mm)				Entrance Box, or BUS Box
	821-6003-02	63	Sets With Detector		319–1095	1	With Circuit Breaker,
			Control				Entrance Box, or BUS Box
	821–6003–02	87	Sets With PowerCommand	39			Screw, Self-Locking – Hex
			Control				Washer Head (M6 x 20mm)
19	800–2086	15	Screw, Cap - Hex Head		821–6002–03		Sets With Detector Control
			(M10 x 25mm)		821–6002–03	3 20	Sets With PowerCommand
20			Washer, Lock - EIT (1/4")				Control
	856-0006	1	Sets With Detector Control	40	319–2245	1	Cover, Control Box – Sets
	856–0006	2	Sets With PowerCommand				With PowerCommand
	050 0040	4-	Control				Control
21	850–2010	15	Washer, Lock – Spring (M10)	41	098–6827	1	Decal, Module Installation –
22	526-0141	10	Washer, Flat (3/8")				Sets With PowerCommand
23	319–3263	1	Angle, Support (5–1/2")	40			Control
24	319–3269	1 4	Angle, Support (6–1/2")	42			Decal, Customer Connections – Sets With PowerCommand
25	821–0014	4	Screw, Self-Locking – Hex Washer Head (5/16–18 x				Control
					000 6005	1	
26	310_1202_04	2	1/2") Gusset		098–6985	1	Models Without
26 27	319–1203–01 319–3277	2	Wrapper, Control Box – Sets		098–7121	1	Paralleling Models With Paralleling
۷1	313-3211	۷	With PowerCommand Control		090-1121	ı	ivioueis vvitti Fatallelling


Housing
DFEB Spec J, DFEC Spec C, DFED Spec A Through C, DFFB Begin Spec J

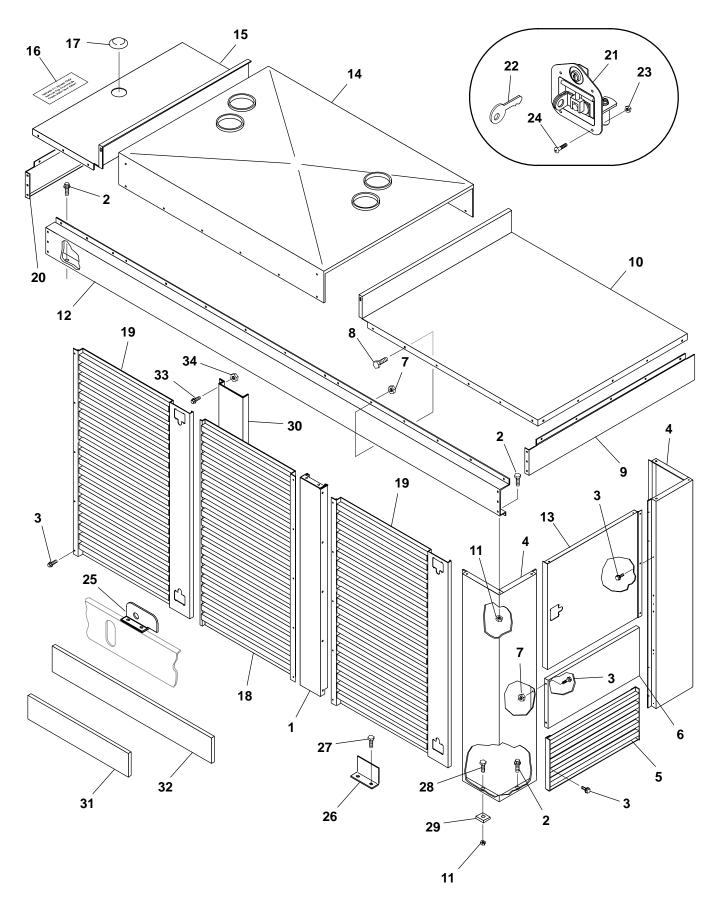

Housing
DFEB Spec J, DFEC Spec C, DFED Spec A Through C, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	405–4202 821–0029	2 16	Post, Center Screw. Locking – Hex	19			Door – Side – With Opening for Door Handles
2	021-0029	10	Washer Head (3/8–16 x 3/4")		405–4213–01	3	Right Side Front and Rear Location, Left Side
3	821–5003–01	41	Screw, Locking – Hex Washer Head (5/16–18 x		405–4213–02	1	Center Location Left Side Rear Location
			1/2")	20	405-4196	1	Cap, End – Front
4	405-4203	2	Post – Rear	21	406-0918	9	Handle, Door (Includes Key
5	405-4104	1	Grille				[Ref No. 22])
6	405-4214	1	Panel – Rear	22	406-0639	9	Key
7	870–0257	60	Nut, Locking – Hex Head (5/16–18 x 1/2")	23	870–0235	36	Nut, Locking – Hex Head (#8–32)
8	816–0098	56	Bolt, Carriage (5/16–18 x 5/8")	24	815–0607	36	Screw, Machine – Round Head (#8–32 x 3/8")
9	405-4197	1	Cap, End – Rear	25	405-3980	2	Stop, Door
10	405-4200	1	Roof – Rear	26	405-4206	2	Stop, Door
11	870–0281	18	Nut, Locking – Hex Head (3/8–16)	27	815–0236	8	Screw, Hex Head – Thread Forming (5/16–18 x 5/8")
12			Rail, Side	28	821-0035	8	Screw, Locking – Hex
	405-4201-02	1	Left Side				Washer Head (3/8–16 x
	405-4201-01	1	Right Side				1–1/4")
13	405-4205	1	Door, Control	29	403-2733-02	8	Washer, Bevel
14			Roof – Center	30	405–4289	2	Bracket, Door
	405-4199-01	1	DFEB, DFEC, DFED	31	128–0127	2	Insulation (37-1/2" x 6-1/2" x
	405–4199–02		DFFB				1/4")
15	405–4198	1	Roof – Front	32	128–0128	4	Insulation (59-1/2" x 7-3/4" x
16	098–5429	2	Label, Coolant Fill				1/4")
17	517–0245	1	Plug	33	821–5002–03	10	Screw, Locking – Hex
18	405–4212	2	Door – Side – Without Opening for Door Handles				Washer Head (1/4–20 x 1/2")
			(Right Side Center Location and Left Side Front Location)	34	870–0212	10	Nut, Locking – Hex Head (1/4–20)


Housing
DFEB Begin Spec K, DFEC Begin Spec D, DFED Begin Spec A, DFFB Begin Spec J

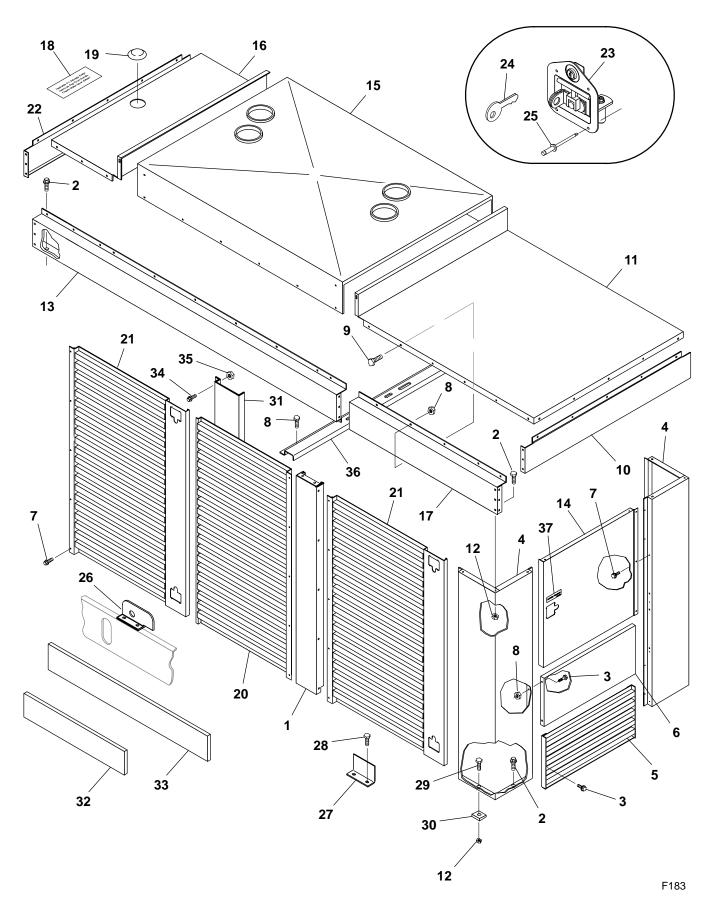

Housing DFEB Begin Spec K, DFEC Begin Spec D, DFED Begin Spec A, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-4202	2	Post, Center	22	405-4196	1	Cap, End – Front
2	821–0029	16	Screw. Locking – Hex Washer Head (3/8–16 x	23	406–0918	9	Handle, Door (Includes Key [Ref No. 24])
			3/4")	24	406-0639	9	Key
3	821-0014	8	Screw, Locking – Hex	25	818-0231-02	36	Rivet, Pop
			Washer head (5/16-18 x	26	405-3980	2	Stop, Door
			1/2")	27	405-4206	2	Stop, Door
4	405-5213	2	Post – Rear	28	815-0236	8	Screw, Hex Head - Thread
5	405-4104	1	Grille				Forming (5/16–18 x 5/8")
6	405-4214	1	Panel – Rear	29	821-0030	8	Screw, Locking – Hex
7	815-0907	33	Screw, Machine - Pan Head				Washer Head (3/8-16 x 1")
			 Cross Recessed 	30	403-2733-02	8	Washer, Bevel
			(5/16-18 x 1/2")	31	405-4289	1	Bracket, Door
8	870–0257	68	Nut, Locking – Hex Head (5/16–18 x 1/2")	32			Insulation (37–1/2" x 6–1/2" x 1/4")
9	816–0098	62	Bolt, Carriage (5/16–18 x 5/8")		128–0127	1	DFEB Spec K Through R DFEC Spec D Through J
10	405-4197	1	Cap, Énd – Rear				DFED Spec A Through F
11	405-5214	1	Roof – Rear				DFFB Begin Sepc J
12	870–0281	18	Nut, Locking – Hex Head (3/8–16)		128–0154–07	1	DFEC Begin Spec S DFEC Begin Spec K
13			Rail, Side – Front				DFED Begin Spec G
	405-5290	1	Left Side	33			Insulation (59–1/2" x
	405-5292	1	Right Side				7–3/4" x 1/4")
14	405-4205	1	Door, Control		128-0128	4	DFEB Spec K Through R
15			Roof – Center				DFEC Spec D Through J
	405-4199-01	1	DFEB, DFEC, DFED				DFED Spec A Through F
	405-4199-02	1	DFFB				DFFB Begin Spec J
16	405-4198	1	Roof – Front		128-0154-08	4	DFEC Begin Spec S
17			Rail, Side – Rear				DFEC Begin Spec K
	405-5289	1	Left Side				DFED Begin Spec G
	405-5291	1	Right Side	34	821-0010	4	Screw, Locking - Hex
18	098–5429	2	Label, Coolant Fill				Washer Head (1/4–20 x
19	517-0245	1	Plug				1/2")
20	405–4212	2	Door – Side – Without Opening for Door Handles	35	870–0212	4	Nut, Locking – Hex Head (1/4–20)
			(Right Side Center Location	36	155-2440	1	Bracket, Silencer
			and Left Side Front Location)	37	098–7868	1	Label, Rainproof Enclosure DFEC Begin Spec S
21			Door – Side – With Opening				DFEC Begin Spec K
			for Door Handles				DFED Begin Spec G
	405–4213–01	3	Right Side Front and Rear Location, Left Side				
	10= 1010 55		Center Location				
	405-4213-02	1	Left Side Rear Location				

Generator Rotor and Stator Part Numbers Model HC5 Generators

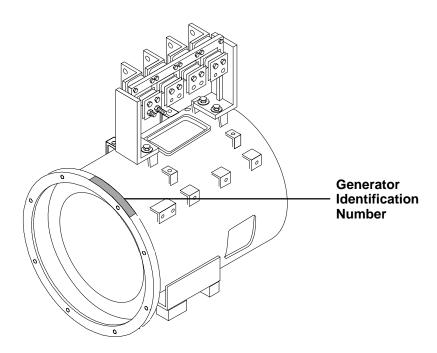

Service replacement part numbers for the main generator stator and rotor can be determined by locating the Cummins/Onan 249–XXXX–XX generator identification number. This number is stamped on the engine end of the main stator adapter ring in the area shown in the above illustration. Find the corresponding number in the chart below for the stator and rotor replacement part numbers and also to determine the generator model number. For COMPLETE generator replacement use the 249–XXXX–XX Cummins/Onan identification number.


Component parts that are included with the main stator and rotor are listed on the "Generator, Model HC5 Generators" pages of this catalog.

Cummins/Onan Identification Number	Generator Model	Stator Assembly Part Number	Rotor Assembly Part Number
249–0175–01	HC534C	220–4398–01	201–3505–01
249–0175–02	HC534D	220–4398–02	201–3505–02
249-0175-03	HC534E	220-4398-03	201–3505–03
249–0175–04	HC534F	220–4398–04	201–3505–04
249-0178-01	HC534C	220–4398–05	201–3505–01
249-0178-02	HC534D	220-4398-06	201–3505–02
249-0178-03	HC534E	220-4398-07	201–3505–03
249-0178-04	HC534F	220–4398–08	201–3505–04
249–5085–01	HC534C	220–4474–01	201–3505–01
249–5085–02	HC534D	220-4474-02	201–3505–02
249–5085–03	HC534E	220–4474–03	201–3505–03
249–5085–04	HC534F	220–4474–04	201–3505–04
249–5085–07	HC534E	220–4474–27	201–3505–03

Generator Rotor and Stator Part Numbers Model HC5 Generators

Cummins/Onan Identification Number	Generator Model	Stator Assembly Part Number	Rotor Assembly Part Number
249–5085–08	HC534F	220–4474–28	201–3505–04
249–5085–11	HC534E	220–4474–63	201–3505–03
249–5086–01	HC534C	220–4474–05	201–3505–01
249–5086–02	HC534D	220–4474–06	201–3505–02
249–5086–03	HC534E	220–4474–07	201–3505–03
249–5086–04	HC534F	220–4474–08	201–3505–04
249–5086–08	HC534F	220–4474–32	201–3505–04
249–5086–10	HC534D	220–4474–66	201–3505–02
249–5086–12	HC534F	220–4474–68	201–3505–04
249–5087–02	HC534D	220–4474–38	201–3505–02


Generator Model HC5 Generators

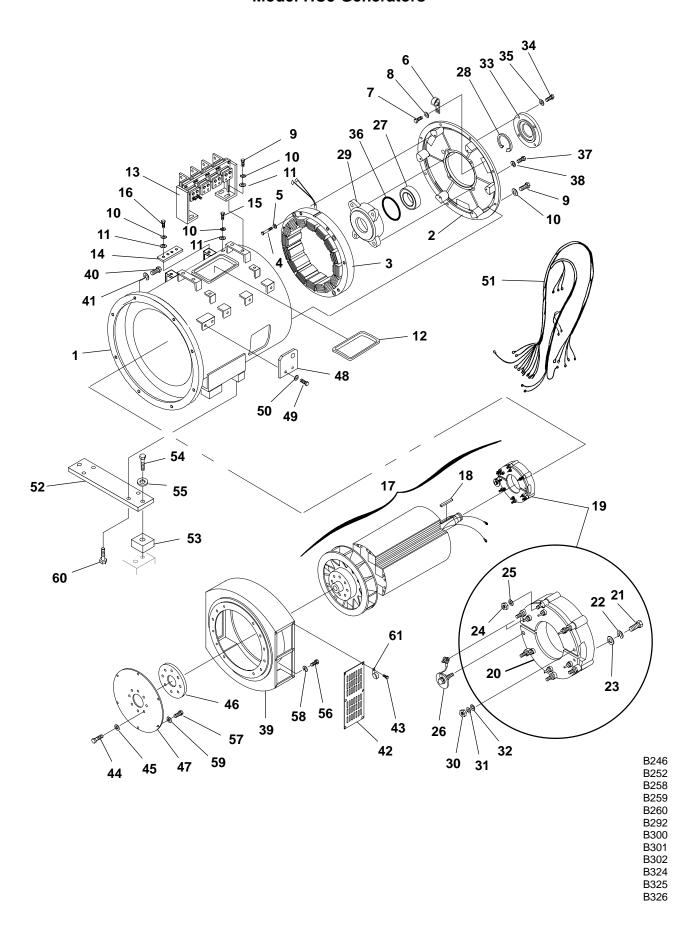

Generator Model HC5 Generators

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	_	1	Stator Assembly, Generator –	35	850-2010	4	# Washer, Lock - Spring (M10)
			Complete (See Page 86	36	509-0266-03		# O-Ring
			For Part Numbers) (Includes Parts Marked *)	37	800–2091	4	Screw, Cap – Hex Head (M10 x 50mm)
2	211-0457	1	* Bell, End	38	850-2010	4	Washer, Lock – Spring (M10)
3	220–4389	1	* Stator, Exciter	39	231–0344	1	Adapter, Generator
4	800–2069	6	* Screw, Cap – Hex Head	40	201 0044	'	Screw
			(M8 x 80mm)	.0	800-3017-56	6	Cap – Hex Head
5	850–2008	6	* Washer, Lock - Spring (M8)			_	(M12 x 40mm)
6	425–1799	1	* Clamp, Cable		725–1103	2	Socket Head
7	800–2004	1	* Screw, Cap – Hex Head (M5 x 12mm)				(M12 x 40mm) (Bottom Holes)
8	850-2005	1	* Washer, Lock – Spring (M5)	41	850-0114-56	8	Washer, Lock - Spring (M12)
9	800-3017-39	12	* Screw, Cap – Hex Head	42	234-0944	2	Guard, Fan
			(M10 x 35mm)	43	821-6001-02	12	Screw, Self-Locking – Hex
10	850-0114-55	5 14	* Washer, Lock – Spring (M10)				Washer Head (M5 x 12mm)
11	526–2120	6	* Washer, Flat (M10)	44	720–1146	8	Screw, Cap - Hex Head
12	508–1086	1	* Grommet (Used On Some			_	(M20 x 60mm)
4.0			Early Models)	45	526-0450	8	Washer, Flat (M20)
13	232–3782	1	* Block, Main Terminal	46	232–3775–01	1	Spacer, Drive Disc (5/8" Thk)
14	232–3785–02		* Bar, Terminal Link	47	232–3744	4	Disc, Drive
15	800–2084	1	* Screw, Cap – Hex Head	48	232–3523	2	Bracket, Generator Lifting
16	200	4	(M10 x 16mm)	49	800–3017–55	4	Screw, Cap – Hex Head
16	800–2090	1	* Screw, Cap – Hex Head	50	850-0114-56	4	(M12 x 35mm)
17		1	(M10 x 45mm) Rotor Assembly, Generator –	50 51	338–3348	1	Washer, Lock – Spring (M12) Harness, Wiring (5 Wire, 23")
17	_	'	Complete (See Page 86	31	330-3340	'	(4,5,6,7,8 to 4,5,6,7,8)
			For Part Numbers)	52	232-4011	1	Spacer, Mounting
			(Includes Parts Marked #)	53	403–2987	2	Spacer, Mounting (4" x 4" x
18	515-0300-06	6 1	# Key			_	1–3/4" Thk)
19	201-3508	1	# Rotor Assembly, Exciter	54	800-0195	2	Screw, Cap - Hex Head
			(Includes Parts Marked +)				(1–8 x 4")
20	357-0093	1	#+ Rectifier Assembly (Includes	55	850-0086	2	Washer, Lock – Spring (1")
			Diodes and Varistor)	56			Screw, Cap – Hex Head –
21	800–2045	4	#+ Screw, Cap – Hex Head				Grade 8
			(M6 x 75mm)		800–0092	8	1/2–13 x 1–1/2"
22	850–2006	4	#+ Washer, Lock – Spring (M6)		800–0094	4	1/2–13 x 2" (3 and 9
23	526–2080	4	#+ Washer, Flat (M6)			_	O'Clock Positions)
24	870-2064-02		#+ Nut, Hex (M5)	57	805–0033	6	Bolt, Place (5/8–11 x 1–1/8")
25	526-2060	6	#+ Washer, Flat (M5)		050 0000	40	Grade 8
26	249–0797	1	Kit, Diode (Includes Varistor	58 50	850-0060	12	Washer, Lock – Spring (1/2")
27	510-0168	1	And All Diodes)	59 60	526–0416 800–2242	6 4	Washer, Flat (5/8") Screw, Cap – Hex Head
27 28	518-0018	1	# Bearing, Ball # Bing, Betaining	00	000-2242	4	(M24 x 70mm)
29	232–3518–01		# Ring, Retaining # Housing, Bearing	61	332–3196	1	Clamp, "J"
30	860–2006	2	# Nut, Hex (M5)	01	332-3130	1	Glamp, 3
31	850–2005	2	# Washer, Lock – Spring (M5)				
32	526–2060	2	# Washer, Flat (M5)	* – F	Parts Included I	n Gener	ator Stator Assemblies
33	232–3981–01		# Cover, Bearing Housing				rator Rotor Assemblies
34	800–2087	4	# Screw, Cap – Hex Head				3508 Exciter Rotor Assembly
			(M10 x 30mm)		-		,

Permanent Magnet Generator Model HC5 Generators

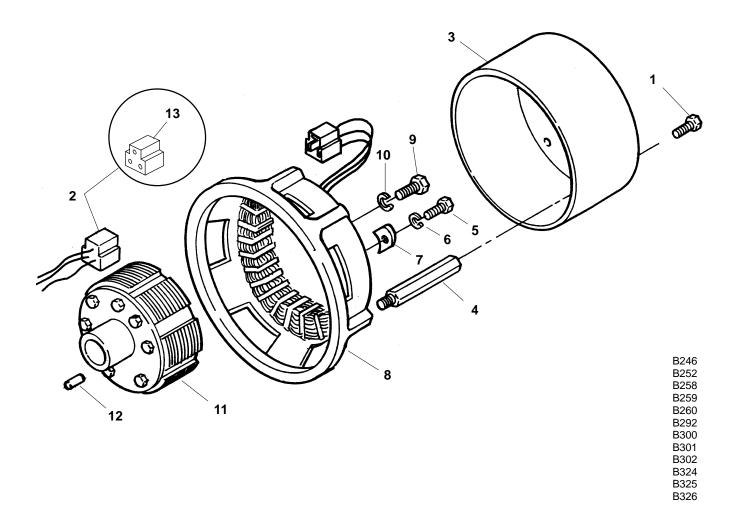

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-6001-02	3	Screw, Self-Locking – Hex	6	850-0114-54	4	Washer, Lock - Spring (M8)
			Washer Head (M5 x 12mm)	7	232-3526	4	Clamp, Stator
2	338–2508	1	Harness, Wiring – PMG (3 Wire, 30") (Includes Housing Connector – Ref	8	220–4396	1	Stator, Exciter – PMG (Includes Four Mounting Spacers)
			No. 13) (P2, P3, P4 to P2, P3, P4)	9	815–0825	1	Bolt, Hex Head (M10 x 120mm)
3	234-0890	1	Cover	10	850-2010	1	Washer, Lock - Spring (M10)
4	232-3527	3	Spacer, Mounting	11	201-3510	1	Rotor, Exciter – PMG
5	800-3017-18	4	Screw, Cap - Hex Head	12	775-0049	1	Pin
			(M8 x 16mm)	13	332-3021	1	Connector, Housing (3 Place)


Generator Assembly Numbers Model HC6 Generators

Component parts for the following Frame 6 generators cannot be ordered from Onan. Refer to the Newage nameplate and supply all available information. Contact your nearest Newage distributor for assistance in ordering component parts. For a COMPLETE generator replacement, use the 249–XXXX–XX Cummins/Onan identification number.

Cummins/Onan Identification Number	Generator Model
249-0191-04	MV634WJ
249–5065–01	HC634G
249–5079–02	MV634WJ
249–5088–01	HC634G
249–5102–01	HC634G


B246, B252, B258, B259, B260, B292, B300, B301, B302, B324, B325, B326

Generator Mounting Model HC6 Generators

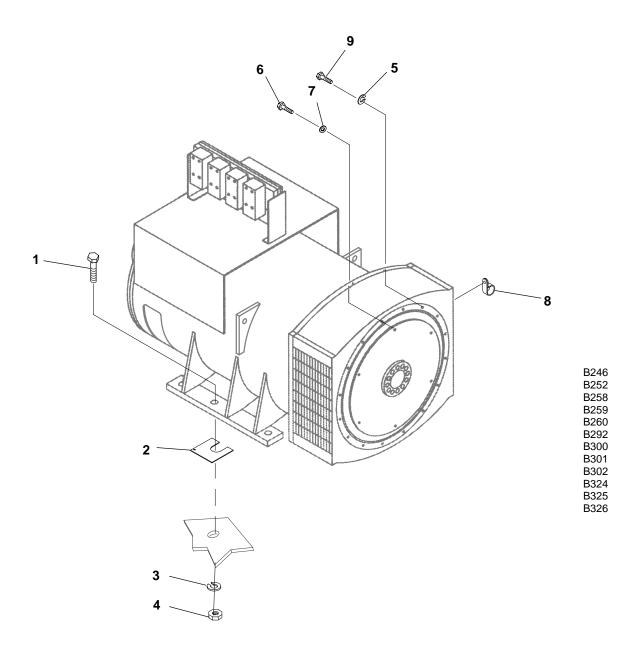


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-0273	2	Screw, Cap – Hex Head	4	862-0017	2	Nut, Hex (1-1/4-7)
			(1-1/4-7 x 4")	5	850-0060	16	Washer, Lock - Spring (1/2")
2			Shim (Quantity Used As	6	805-0033	6	Bolt, Place (5/8-11 x 1-1/8")
			Required) (Used On Some				Grade 8
			Early Models)	7	526-0416	6	Washer, Flat (5/8")
	232-3710-01	4	1/64" Thk	8	332-3196	1	Clamp, "J"
	232-3710-02	4	5/64" Thk	9	800-0576	16	Screw, Cap - Hex Head
	232-3710-03	4	1/8" Thk				(1/2-13 x 1-3/4") Grade 8
3	850–0092	2	Washer, Lock – Spring (1–1/4")				,

Generator Heater

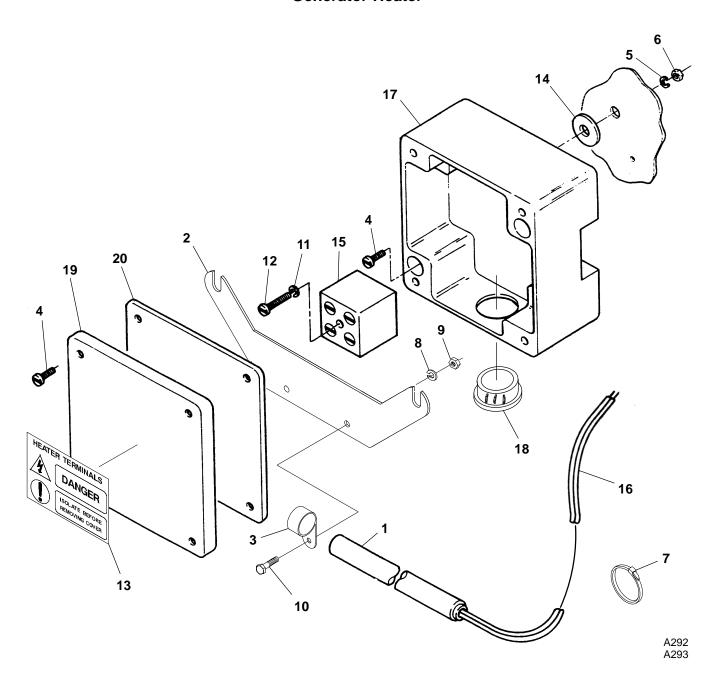


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
110.	140.	OOLD	DESCRIPTION	140.	140.	OOLD	DEGCKII TION
1			Cartridge, Heater (300 Watt)	11	850-2003	1	Washer, Lock - Spring (M3)
	333-0438-05	1	120 Volt	12	822-3047	1	Screw, Machine - Pan Head
	333-0438-06	1	240 Volt				(M3 x 20mm)
2	232-3849	1	Bracket, Mounting - Heater	13	098-7281	1	Label, Heater Warning
3	332-3024-14	- 2	Clamp, Loop	14	508-0228	1	Grommet
4	822-3075	6	Screw, Machine - Slotted	15	332-3023	1	Block, Terminal
			Pan Head (M4 x 16mm)	16	898-1254-25	1	Sleeving – Heater Leads
5	850-2004	2	Washer, Lock - Spring (M4)				(59")
6	860-2005	2	Nut, Hex (M4)	17	330-0142	1	Box, Terminal (Includes
7	332-1389	4	Tie, Cable				Cover and Gasket - Ref
8	850-2005	2	Washer, Lock - Spring (M5)				No. 19 and 20)
9	860-2006	2	Nut, Hex (M5)	18	517-0021	1	Plug, Dot Button
10	800-2008	2	Screw, Cap - Hex Head	19	330-0141-03	1	Cover, Box
			(M5 x 16mm)	20	330-0141-04	1	Gasket, Cover

Control Heater
Generator Sets With Detector Control

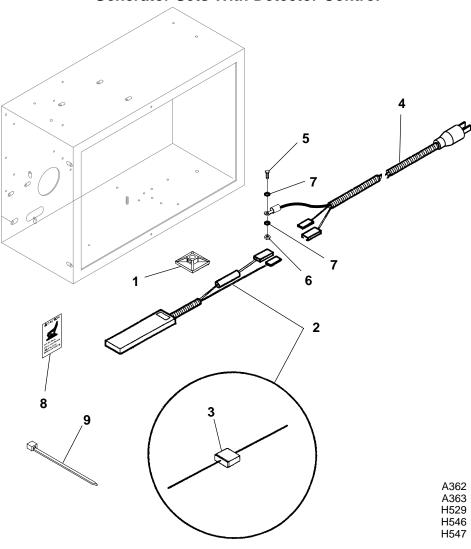


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-2420	2	*# Mount, Cable	6	870-0257	1	* Nut, Locking – Hex (5/16–18)
2			Heater Assembly, Control -	7	856-0008	2	* Washer, Lock - EIT (5/16")
			100 Watt (Includes Rectifier	8	098–6195	1	*# Label, Caution - Hot Surface
			Ref No. 3)	9	332-0942	3	*# Tie, Cable
	300-4515-01	1	* 120 Volt				
	300-4515-02	1	# 240 Volt				
3	357-0114	1	*# Rectifier (3 Amp)	* – F	arts Used in	120 Volt	Control Heater Application
4	335-0173	1	* Cable, Heater (7')	# — F	Parts Used in	240 Volt	Control Heater Application
5	800–0024	1	* Screw, Cap – Hex Head (5/16–18 x 3/4")				·

Control Heater Generator Sets With PowerCommand Control

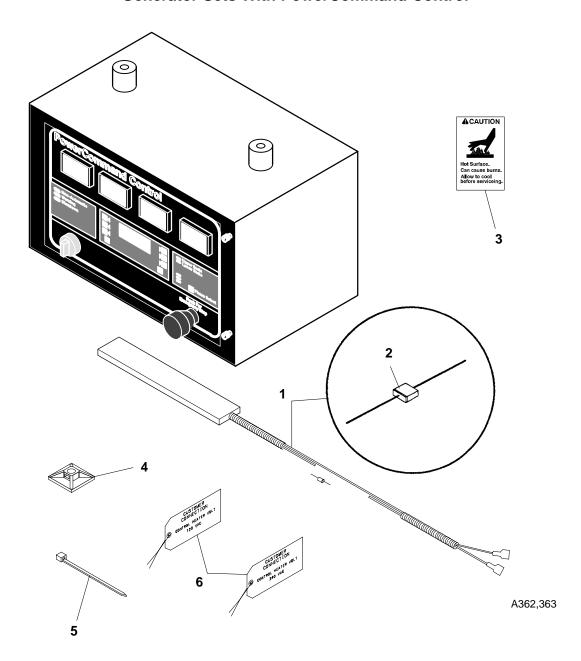

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater Assembly, Control –	4	332-2420	1	Mount, Cable
			100 Watt (Includes Rectifier)	5	332-0942	1	Tie, Cable (Quantity Used As
	300-4515-01	1	120 Volt				Required)
	300-4515-02	2 1	240 Volt	6			Tag, Heater
2	357-0114	1	Rectifier (3 Amp)		098-6927	1	120V
3	098-6195	1	Label, Caution		098-6828	1	240V


Detector Control

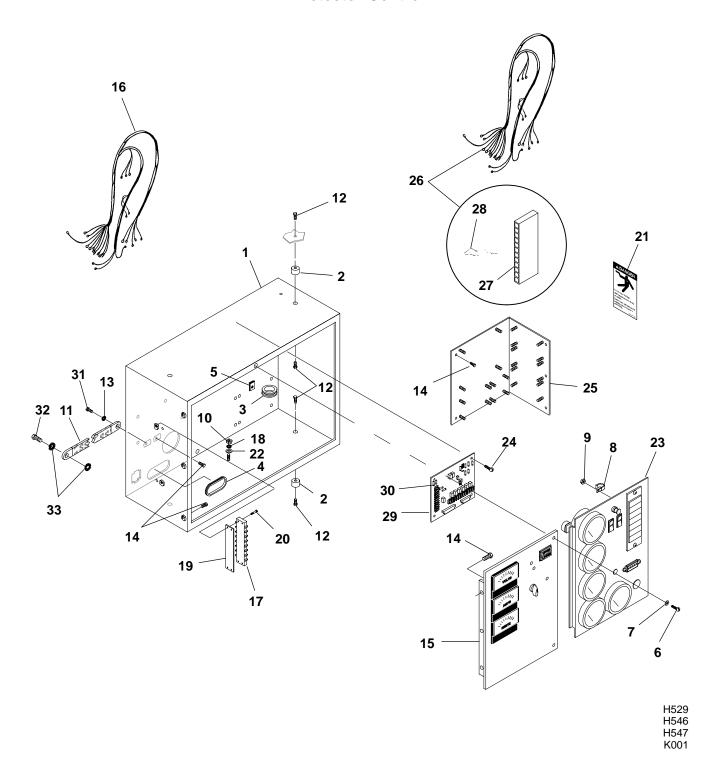

Detector Control


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301-8065	1	Box, Control	23	_	1	Door, Assembly - Control -
2	402-0527	4	Isolator, Vibration				DC (See Page 99 For
3	508-0001	1	Grommet (Fits 1–1/16" Hole)				Components)
4	508–0051	1	Grommet (Fits 2" Hole)	24	815–0937	4	Screw, Pan Head
5	406–0332	2	Receptacle, Fastener				(6–32 x 5/16")
6	406–0333	2	Stud, Fastener	25	301–8851	1	Bracket, DC Control
7	406–0334	2	Washer, Stud Retainer	26	338–3252	1	Harness, DC (Includes
8	332–0052	2	Clip, Wire (5/8")				Connector Housing and
9	870–0131	4	Nut, Hex W/ET (#10-32)				Contact Pins [Ref No. 27
10	871–0015	1	Nut, Hex (1/4–20)	~-	000 4000		and 28)
11	337–0049	3	Strap, Ground	27	323–1308	1	Housing, Connector (12
12	821–0014	8	Screw, Self-Locking – Hex	00	000 1000	40	Place) (J4)
			Washer Head (5/16–18 x	28	323–1302	10	Pin, Contact
40	050 0000	4	1/2")	29			Board, Printed Circuit (24V)
13	856-0008	4	Washer, Lock – W/EIT (5/16")		200 4205	4	(Includes Fuses [Ref No. 30])
14	821–0004	8	Screw, Self-Locking – Hex		300–4295	1	7 Light Assembly
			Washer Head (#10–32 x	30	300–4297	1	12 Light Assembly
15		1	5/16") Door Assembly – Control –	30			Fuse (32V) Cylinder Shaped (Used
15	_	I	AC (See Page 98 For				On Some Early Models)
			Components)		321-0270	2	20 Amp (F1, F2)
16	338–2278	1	Harness, Wiring – AC Control		321–0270	1	15 Amp (F3)
10	330 2270	'	Door Assembly to TB21		321–0291	2	5 Amp (F4, F5)
			Terminal Block (Includes		021 000 -1	_	U Shaped
			TB21 Terminal Block [Ref		321-0307-03	2	5 Amp (Tan) (F4, F5)
			No. 17])		321-0307-06	1	15 Amp (Light Blue) (F3)
17	332-0607	1	Block, Terminal – 12 Place		321-0307-07	2	20 Amp (Yellow) (F1, F2)
			(TB21)	31	800-0024	3	Screw, Cap – Hex Head
18	853-0008	1	Washer, Lock – W/ET (#10)				(5/16–18 x 1/2")
19	332-2723	1	Strip, Marker	32	821-0010	1	Screw, Self-Locking – Hex
20	815–0901–06	2	Screw, Machine – Hex Head (#6–32 x 5/8")				Washer Head (1/4–20 x 1/2")
21	098-5387	2	Label, Danger	33	856-0006	2	Washer, Lock – EIT (1/4")
22	526-0018	1	Washer, Flat (1/4")				. ,

AC Control Door Assembly Generator Sets With Detector Control

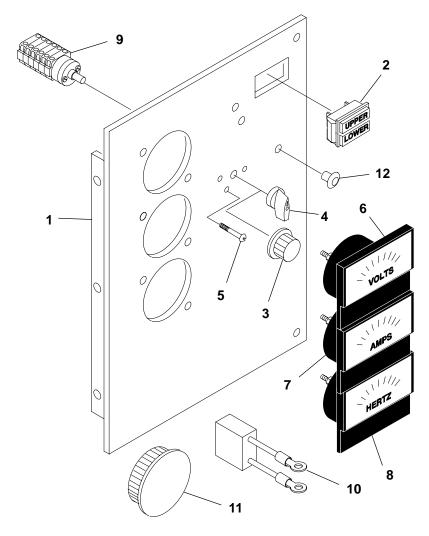


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Door, Control – AC	6			Voltmeter (M21)
	301-9054-01	1	Doors with Four Round		302-1148	1	Scale Reads 0-300/600
			Meter Holes		302-1753	1	Scale Reads 0-750
	301-9054-02	1	Doors with Three Round		302-1938	1	Scale Reads 0-5200
			Meter Holes	7			Ammeter (M22)
	301-9054-03	1	Doors Without Round		302-1683	1	Scale Reads 0-100/200
			Meter Holes		302-1728	1	Scale Reads 0-600/1200
	301-9054-04	1	Doors with Six Round		302-1729	1	Scale Reads 0-750/1500
			Meter Holes		302-1798	1	Scale Reads 0-1000/2000
2	322-0363	1	Light, Indicator – Upper/	8	302-1968	1	Meter, Frequency (M23)
			Lower Scale (DS21, DS22)	9	308-1052	1	Switch, Rotary – Voltmeter/
3	303-0032	1	Knob, Rotary Switch (Earlier Round Style)				Ammeter (Includes Knob) (S21)
4	308-1082	1	Knob, Rotary Switch (Later	10	355-0189	1	Capacitor – Voltmeter
4	300-1002	'	Wedge Style)	10	333-0109	'	(.1 Mfd., 500 WVDC) (C21)
5	815-0875-02	3	Screw, Machine - Round	11	517-0302	1	Plug, Hole (Fits 2-1/4" Hole)
			Head (M4 x 8mm)	12	517–0131	1	Plug, Hole (Fits 3/8" Hole) Used On Some Early Models

DC Control Door Assembly Generator Sets With Detector Control

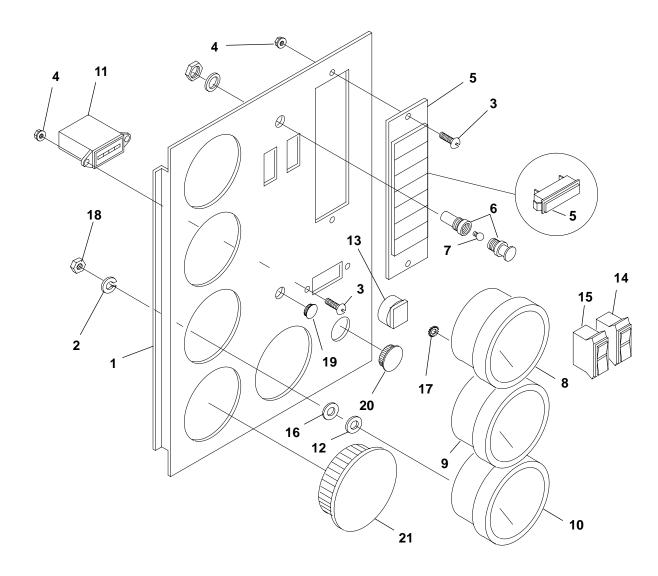

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Door, Control – DC	10	302-1642	1	Voltmeter (M13)
	301-9055-01	1	Doors With Five Round	11	302-2002	1	Hourmeter (M14)
			Gauge Holes	12	526-0409	8	Washer, Nylon (3/8" OD x
	301-9055-02	1	Doors With Three Round				.194" ID x 1/8" Thick)
			Gauge Holes	13	193-0250	2	Resistor (Mounted on Oil
2	850-0030	8	Washer, Lock - Spring (#10)				Pressure and Water
3	815-0385	4	Screw, Machine - Round				Temperature Gauges)
			Head (#6-32 x 1/2")				(R12, R13)
4	870-0183	4	Nut, Hex – W/ET (#6–32)	14	308-1010	1	Switch, Rocker - Lamp
5			Light Assembly, Indicator				Test/Reset Panel Lamp -
			(Includes Wiring Harness and				Preheat (S11)
			Connector Housing) (A12)	15	308-1011	1	Switch, Rocker –
	322-0359-02	1	7 Light Assembly				Run/Stop/Remote (S12)
	322-0360-02	1	12 Light Assembly	16	526-0049	16	Washer, Flat (#10)
6	322-0361	1	Light, Panel (DS11)	17	853-0008	1	Washer, Lock - ET (#10)
7	322-0017	1	Bulb, Panel Light –	18	871-0010	16	Nut, Hex - Brass (#10-32)
			Replacement	19	517-0131	1	Plug, Hole (Fits 3/8" Hole)
8	193-0466	1	Gauge, Oil Pressure (M11)	20	517-0137	1	Plug, Hole (Fits 7/8" Hole)
9	193–0351	1	Gauge, Water Temperature (M12)	21	517–0301	2	Plug, Hole (Fits 2" Hole)

PowerCommand Control

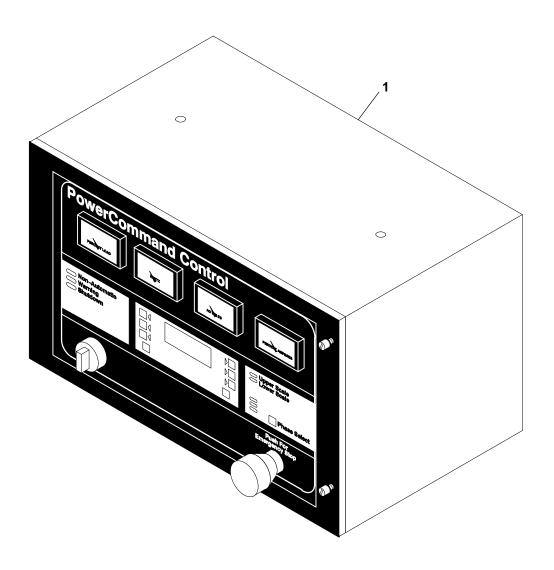

H530 H532 H555

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
1	_	1	Control PowerCommand

NO. NO. USED DESCRIPTION

Note: For PowerCommand Control Service Replacement Parts, Order PowerCommand Control For Generator Sets Parts Catalog Number 960–0205B.


PART

QTY

REF

PART


Wiring Harness Engine to Control Generator Sets With Detector Control

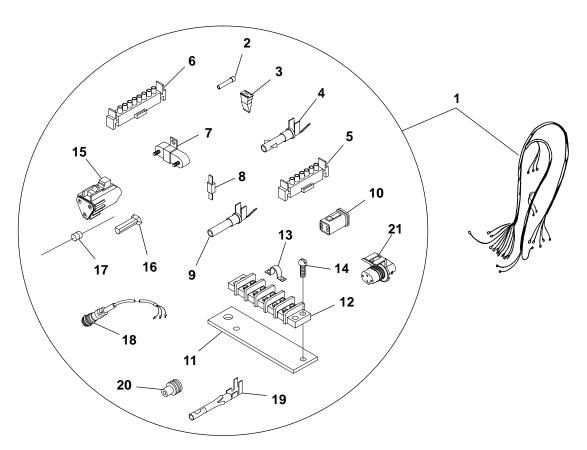

H529 H546 H547

REF NO.	PART NO.	QT\ USE		REF NO.	PART NO.	QT' USE		PART DESCRIPTION
1			Harness, Wiring – Engine To	7	353-0094-01	1	*#♦◊	Resistor (R1)
			Control – Generator Sets	8	357-0030	1	*#♦◊	Rectifier (CR1)
	338–2984	1	With Detector Control DFEB Spec J Through K	9	323–1492	5	#♦◊	Socket, Contact (Used In E1, P3)
			DFEC Spec C Through D DFED Spec A	10	323–1546	1	#♦◊	Plug, Connector (4 Place) (E1)
			DFFB Begin Spec J	11				Bracket, Mounting - Terminal
			(Includes Parts Marked *)		319-2006-01	1	#♦◊	Marked "26" (T26)
	338–3344	1	DFEC Spec L Through N DFEC Spec E Through G		319–2006–02	1	#♦◊	Marked "GND" (GND–ENG)
			DFED Spec B Through D	12	332-0604	2	#♦◊	Block, Terminal (5 Place)
			(Includes Parts Marked #)	13	332-1043	8	#♦◊	Jumper
	338–3761	1	DFEC Spec P DFEC Spec H	14	815–0538	4	#♦◊	Screw, Machine – Round Head – W/IT (#8–32 x 1/2")
			DFED Spec E (Includes Parts Marked ◆)	15	323–1493	1	#♦◊	Plug, Connector (3 Place) (P3)
	338-3974	1	DFEC Begin Spec R	16	323-1503	1	#♦◊	Wedge (Used In P3)
			DFEC Begin Spec J	17	359-0051	1	*#♦◊	Diode
			DFED Begin Spec F	18	338-1765-04	. 1	*	Cable, Magnetic Pickup (60")
			(Includes Parts Marked ◊)	19	323-1709	4	♦◊	Socket, Contact (Used in S7)
2	323-1591	1	#♦◊ Plug, Seal (Used In E1)	20	323-1708	4	$\diamond \diamond$	Seal, Cable (Used in S7)
3	323-1548	1	#♦♦ Plug, Seal (Used In E1)	21	323-1765	1	♦◊	Housing Connector (4-Pin)
4	323–1200	11	*#•♦ Socket, Contact (Used In J1, J2)					(S7)
5	323–1304	1	*#•♦ Housing, Connector (6 Place) (J2)					4 Wiring Harness 4 Wiring Harness
6	323–1306	1		→ - F	Parts Included	In 33	8–376	1 Wiring Harness 4 Wiring Harness


Wiring Harness Engine To Control Generator Sets With PowerCommand Control DFEB Spec J Through P, DFEC Spec C Through H DFED Spec A Through E, DFFB Begin Spec J

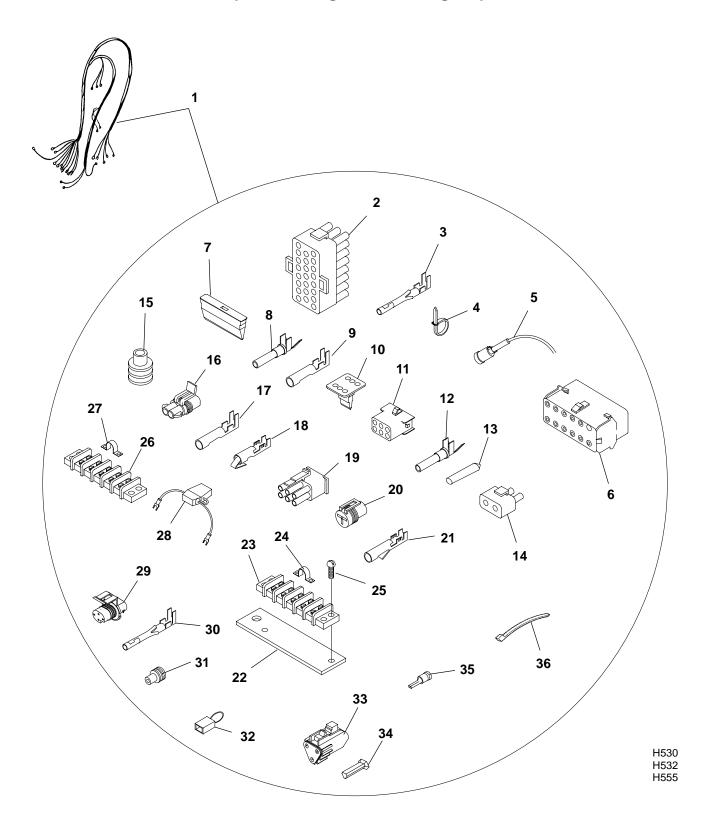

Wiring Harness Engine To Control Generator Sets With PowerCommand Control DFEB Spec J Through P, DFEC Spec C Through H DFED Spec A Through E, DFFB Begin Spec J

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Engine To Control – Generator Sets	9	323–1648	5 *+#♦⟨	Socket, Contact (Used In P10)
			With PowerCommand Control HC5 Generators	10 11	323–1624 323–1623		Wedge (Used In P7) Plug, Connector (6 Place) (P7)
	338–2605	1	DFEB Spec J Through K DFEC Spec C Through D DFED Spec A DFFB Begin Spec J	12	323–1492	6 *•	Socket, Contact HC5 Generators DFEB Spec J Through K DFEC Spec C Through D
	338–3398–01	1	(Includes Parts Marked *) DFEB Spec L Through N DFEC Spec E Through G DFED Spec B Through D (Includes Parts Marked +)		323–1492	9 +#0	DFED Spec A DFFB Begin Spec J DFEB Begin Spec L DFEC Begin Spec E DFED Begin Spec B
	338–3762–01	1	DFEB Spec P DFEC Spec H DFED Spec E		323–1492	6 *◆	HC6 Generators DFED Spec A DFFB Begin Spec J
	338–3038	1	(Includes Parts Marked #) HC6 Generators DFED Spec A	13	323–1492 323–1615	9 +#⟨ 1 *+#◆⟨	Plug (Used In P4, P5, P6) (Quantity Used As
	338–3398–02	1	DFFB Begin Spec J (Includes Parts Marked ◆) DFED Spec B Through D	14	323–1445	6 *+#♦◊	Required) Seal (Used In E2, E3, E4, E6, E7)
		•	(Includes Parts Marked ◊) DFEB Spec P	15	323-1444	2*+#♦◊	Socket, Contact (Used In E6, E7)
	338–3762–02	ı	DFEC Spec F DFEC Spec H DFED Spec E	16	332–3096–01	4 *+#♦◊	Socket, Contact (Used In E2, E3, E4)
2	323–1605–03 323–1605–02		(Includes Parts Marked #) Plug, Connector (23 Place) Colored Grey (P5)	17	323–1637	1 *•	Socket, Connector (2 Place) (E6, E7) HC5 Generators DFEB Spec J Through K DFEC Spec C Through D DFED Spec A
	323–1614–01	51 *	HC5 Generators DFEB Spec J Through K DFEC Spec C Through D DFED Spec A DFFB Begin Spec J		323–1637	2 +#<	DFFB Begin Spec J
	323–1614–01	50 +#			323–1637	1 *◆	DFED Spec A DFFB Begin Spec J
	323–1614–01	50 ◆◊	DFED Spec B Through D	18	323–1637	2 +#0	DFED Spec B Through D Socket, Connector (2 Place) (E2, E3, E4) HC5 Generators
4	332–1445	A/R *+#◆◊	Tie, Cable (Quantity Used As Required)		323–1540	2 *◆	DFEB Spec J Through K DFEC Spec C Through D
5	338–2592–01 338–2592–02	1 *+# 1 •◊	Cable, Magnetic Pickup (Includes Indented Sockets Listed Below) (P1) HC5 Generators (84")		323–1540	3 +#0	DFED Spec A DFFB Begin Spec J
6	323–1614–01 323–1580	3 *+#◆◊ 1 *+#◆◊	Socket, Contact Housing, Connector (12		323–1540	2 *♦	HC6 Generators DFED Spec A
7	323–1581		Place) (J12) Wedge (Used In J12)		323–1540	3 +#0	DFFB Begin Spec J DFED Spec B Through D
8	323–1491	o "+#∳◊	Pin, Contact (Used In J12)	Con	tinued		

Wiring Harness Engine To Control Generator Sets With PowerCommand Control DFEB Spec J Through P, DFEC Spec C Through H DFED Spec A Through E, DFFB Begin Spec J

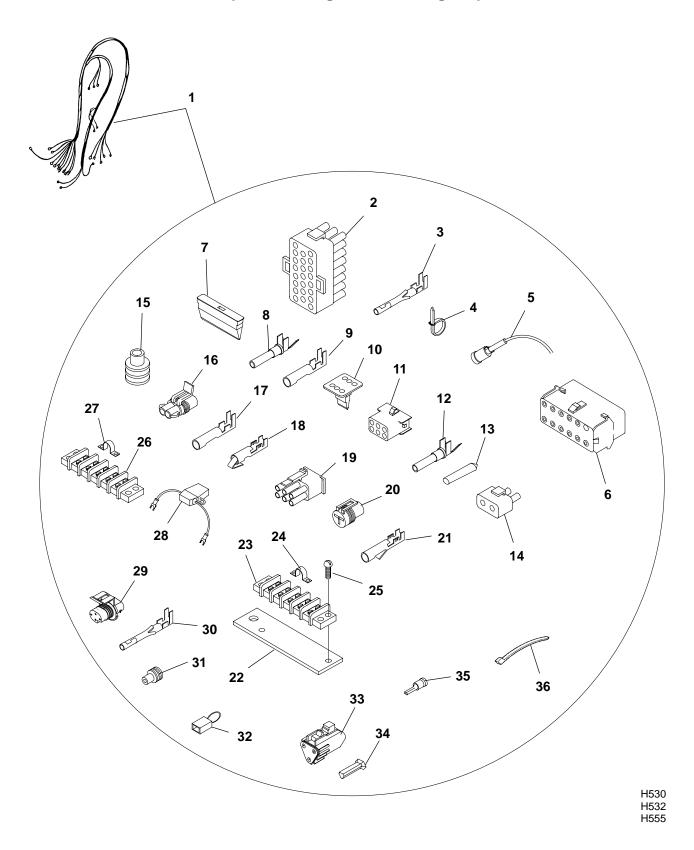

Wiring Harness

Engine To Control Generator Sets With PowerCommand Control DFEB Spec J Through P, DFEC Spec C Through H DFED Spec A Through E, DFFB Begin Spec J


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QT USE		PART DESCRIPTION	
19	323–1643–01	1 *+#♦◊	Plug, Connector (6 Place) (P10)	32				Harness Assembly, Jumper (Includes Parts Indented	
20	323–1666	1 *+#♦◊	Socket, Connector (3 Place) (E1)					Below – Socket, Seal, and Pin) (Used On E6, E7)	
21 22	323–1667	3*+#♦◊	Socket, Contact (Used In E1) Bracket, Mounting – Terminal		338–3285	1	*•	HC5 Generators DFEB Spec J Through K	
	319–2006–01 319–2006–02		Marked "26" (T26)		000 0200		·	DFEC Spec C Through D DFED Spec A	
23	332–0604		Block, Terminal (5 Place)					DFFB Begin Spec J	
24	332-1043	8 *+#♦◊	Jumper		338-3285	2	+#◊	DFEB Begin Spec L	
25	815–0538	4 *+# ♦ ◊	Screw, Machine – Round Head – W/IT (#8–32 x 1/2")					DFEC Begin Spec E DFED Begin Spec B	
26	332-0604	1*+# → •	Block, Terminal (5 Place)					HC6 Generators	
			(TB–BAT)		338–3285	1	*♦	DFED Spec A	
27	332–1043		Jumper (Used On TB-BAT)					DFFB Begin Spec J	
28	321–0339	1 *+#♦≎	Holder Assembly, Fuse (Used		338–3285	2		1 0	
			On TB-BAT)		323–1652	1	*+#♦◊		
			DFEB Spec J Through N					(2 Place)	
			DFEC Spec C Through G		323–1445		*+#♦◊	,	
			DFED Spec A Through D		323–1718	2	*+#♦◊		
			DFFB Begin Spec J	33	323–1493	1		Plug, Connector (3 Place)	
			(Includes Indented Parts	34	323–1503	1		Wedge	
			Listed Below)	35	332–3496	2		Pin, Contact	
	321–0325	1 *+#♦◊	,	36	332–2774	A/R	+#◊	Tie, Cable – Black (Quantity	
	321–0307–07		(Colored Yellow)					Used As Required)	
29	323-1765	1 #	Housing, Connector (S7)						
30	323-1709	4 #	Socket, Contact (Used in S7)	* – F	* – Parts Included In 338–2605 Engine Wiring Harness				
31	323–1708	4 #	Seal, Cable (Used in S7)		+ - Parts Included in 338-3398-01 Engine Wiring Harness # - Parts Included in 338-3762-01 Engine Wiring Harness				

^{# –} Parts Included in 338–3762–01 Engine Wiring Harness

◆ – Parts Included In 338–3038 Engine Wiring Harness

◇ – Parts Included in 338–3398–02 Engine Wiring Harness


Wiring Harness Engine To Control Generator Sets With PowerCommand Control DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

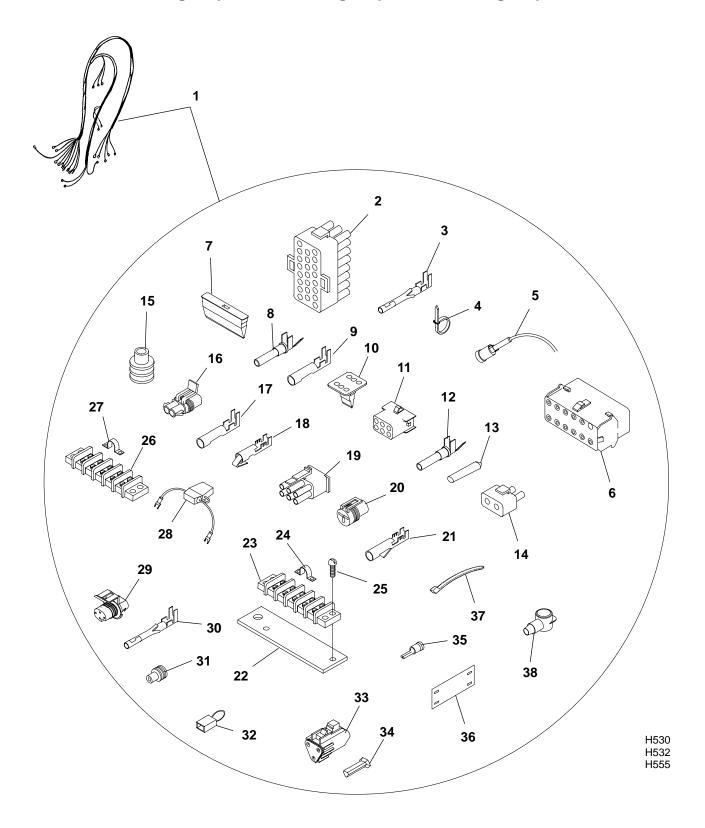

Wiring Harness Engine To Control Generator Sets With PowerCommand Control DFEB Begin Spec R, DFEC Begin Spec J, DFED Begin Spec F

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED		PART DESCRIPTION
1			Harness, Wiring – Engine To Control – Generator Sets	18	323–1540	3		ocket, Connector (2 Place) (E2, E3, E4)
			With PowerCommand Control (HC5 Generators)	19	323–1643–01	1	#+ Pli	ug, Connector (6 Place) (P10)
	338–3976	1	DFEB Spec R DFEC Spec J	20	323–1666	1	#+ Sc	ocket, Connector (3 Place) (E1)
			DFED Spec F (Includes Parts Marked #)	21 22	323–1667	3	#+ Sc	ocket, Contact (Used In E1) racket, Mounting – Terminal
	338-4058-01	1	DFEB Begin Spec S DFEC Begin Spec K		319-2006-01 319-2006-02		# +	Marked "26" (T26) Marked "GND" (GND–ENG)
			DFEC Begin Spec G	23	332-0604	2		ock, Terminal (5 Place)
			(Includes Parts Marked +)	24	332-1043	8	#+ Ju	
_						_		
2	323-1605-03		Plug, Connector (23 Place) #+ Colored Grey (P5)	25	815–0538	4	H	crew, Machine – Round Head – W/IT (#8–32 x 1/2")
3	323–1605–02 323–1614–01		#+ Colored Natural (P4, P6) #+ Socket, Contact (Used In P4,	26	332–0604	1	(ock, Terminal (5 Place) (TB–BAT)
			P5, P6)	27	332-1043	3	#+ Ju	ımper (Used On TB-BAT)
4	332–1445	A/R	#+ Tie, Cable (Quantity Used As Required)	28	321–0370	1		older Assembly, Fuse (Used On TB-BAT) (Includes
5	338–2592–01	1	#+ Cable, Magnetic Pickup (Includes Indented Sockets		321–0371	1		Indented Parts Listed Below) Holder, Fuse
	323–1614–01	3	Listed Below) (P1) #+ Socket, Contact		321–0307–07		#+	Fuse – 20 Amp (Colored Yellow)
6	323–1514–01	1	#+ Housing, Connector (12	29	323-1765	1	#. 4	ousing, Connector (S7)
		-	Place) (J12)	30	323-1709	4	#+ Sc	ocket, Contact (Used in S7)
7	323–1581	1	#+ Wedge (Used In J12)	31	323–1708	4		eal, Cable (Used in S7)
8	323–1491	6	#+ Pin, Contact (Used In J12)	32	338–3285	2		arness Assembly, Jumper
9	323–1648	5	#+ Socket, Contact (Used In P10)					(Includes Parts Indented Below) (Used On E6, E7)
10	323-1624	1	#+ Wedge (Used In P7)		323-1652	1	#+	Socket, Connector (2
11	323–1623	1	#+ Plug, Connector (6 Place) (P7)		323–1445	2	#+	Place) Seal, Cable
12	323-1492	9	#+ Socket, Contact		323–1718	2	# +	Pin, Contact
		-		22				•
13	323–1615	1	#+ Plug (Used In P4, P5, P6) (Quantity Used As	33 34	323–1493 323–1503	1 1	#+ PII	ug, Connector (3 Place) /edge
			Required)	35	332–3496	2		n, Contact
14	323-1445	6	#+ Seal (Used In E2, E3, E4, E6,	36	098-7662-02			ag, Harness
17	323-1443	U	E7)	37	332-2774	A/R		e, Cable – Black (Quantity
15	323–1444	2	#+ Socket, Contact (Used In E6, E7)	38	416–1021–02		ι	Used As Required) bot, Battery Cable (Red)
16	332-3096-01	4	#+ Socket, Contact (Used In E2,	50	710-1021-02	_	+ D(out, battery Cable (INEA)
17	323–1637	2	E3, E4) #+ Socket, Connector (2 Place) (E6, E7)					Engine Wiring Harness 01 Engine Wiring Harness


Control Box

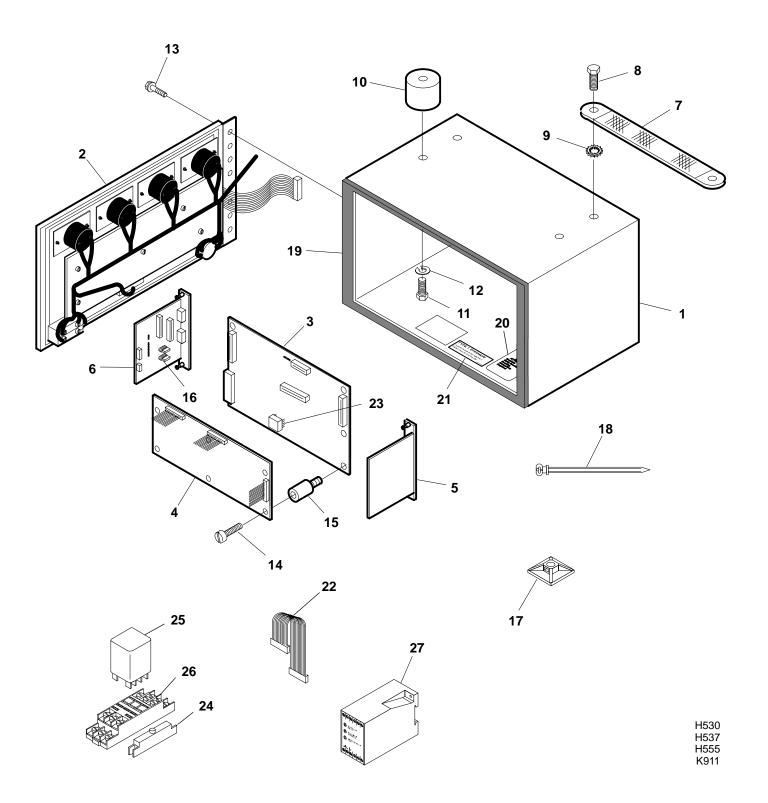

Control Box

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1687	1	Box Assembly - Control	16	321-0307-03	2	Fuse, 5 Amp, 32V (F1, F3)
			(Includes Gasket)	17	332–2420	1	Mount, Cable Tie (Quantity
2		1	Door Assembly – Control				Used as Required)
			(See Page 111 For Components)	18	332–0942	1	Tie, Cable (Quantity Used As Required) (Door Harness)
3	300-4079	1	Board, Printed Circuit -	19	895-0359	1	Gasket, Door
			Digital (A32)	20	098-6940	1	Label, Static Sensitive
4			Board, Printed Circuit – Analog (A33)	21	098–6118	1	Label, Cabinet – Type 1 Enclosure
	300-4080-01	1	Single Set	22			Cable, Ribbon (Used On
	300-4080-02	1	Paralleling Sets				Early PCC Models With
5			Board, Printed Circuit -				Removable Ribbon Cables)
			Customer Interface (A34)		338-2931-02	1	Customer Interface to
	300-4462	1	Single Set				Digital
	300-4462-01	1	Paralleling Sets		338-2932-02	1	Customer Interface to
6	300-4083	1	Board, Printed Circuit –				Analog
			Engine Interface (A31)		338-2932-01	1	Analog to Digital
7	337–0049	2	Strap, Bond		338–2933	1	Analog to Engine
8	800-0003	2	Screw, Cap – Hex Head				Interface
			(1/4–20 x 1/2")		338–2931–01	1	Engine Interface to Digital
9	856–0006	2	Washer, Lock – EIT (1/4")	23			Kit, Language Chip –
10	402–0527	4	Isolator, Vibration				EPROM (Includes Chip,
11	800-0024	4	Screw, Cap – Hex Head				Instruction Sheets and
			(5/16–18 x 1/2")			_	Warranty)
12	850-0045	4	Washer, Lock (5/16")		300-4721-04		Single Set
13	821–0004	4	Screw, Self-Locking – Hex		300-4721-16		Paralleling Sets
			Washer Head	24	323-1411-01	2	Clip, Socket Mounting
		_	(#10–32 x 5/16")	25	307–1056	1	Relay, Control
14	815–0549	6	Screw, Machine – Pan Head	26	323-1410-01		Socket, Relay
			Cross Recessed W/ET (#6–32 x 1/4")	27	307–2869	2	Relay, Thermistor
15	332–3235	6	Standoff, Board – PC (#6-32 IT x #6-32 ET x 3/4")				

Control Door

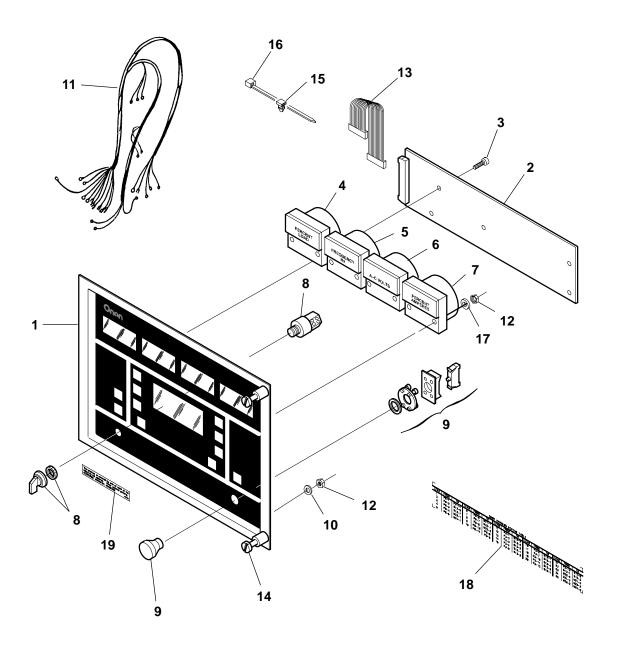


H530 H537 H555

Control Door


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4608-01 300-4608-02	1 1	Door Assembly (Includes Membrane, Display Window and Parts Marked *) English Single Set Paralleling Sets Spanish		308–1045	1	Switch, Selector (Key Operated) (Includes 2 Keys) (Converts 308–0998 Knob Operated Selector Switch To A Key Operated Selector Switch) (Not Illustrated)
	300-4610-01 300-4610-02	1 1	Single Set Paralleling Sets		308–1046	2	Key, Replacement (Not Illustrated)
2		•	Board, Printed Circuit – Display (A35)	9	308-0999	1	Switch, Pushbutton – Emergency Stop (S13)
	300-4481	1	Single Set	10	526-0417	2	* Washer, Flat (#4)
	300-4286	1	Paralleling Sets	11	338-2937	1	Harness, Wiring – Control
3	815–0550	5	Screw, Machine – Pan Head – Cross Recessed W/ET (#6–32 x 3/8")				Door (Includes Selector Switch and Emergency Stop Switch)
4	302-2012	1	Wattmeter (0-125 %) (M24)	12	870-1220	10	* Nut, Hex – W/ET (#4–40)
5	302–2010	1	Meter, Frequency (45–65 Hz) (M23)	13	338–2934	1	Cable, Ribbon (10–1/2") (A32 to A35)
6			Voltmeter, AC (M21)	14	406-0761-03	2	* Fastener, Door
	302-2009-01	1	0-300/0-600 Volt	15	332-3262	4	Mount, Tie - Cable
	302-2009-02	1	0-750 Volt	16	332-1445	4	Tie, Cable
	302-2009-03	1	0-5250 Volt	17	526-0257	8	Washer, Flat (#4)
	302-2009-04	1	0–15 kV	18	098-7276	1	* Label, Harness
7	302-2011	1	Ammeter (0-125 %) (M22)	19	098-7395	1	Label, Patent
8	308–0998	1	Switch, Selector – Run/Off/Auto (Knob Operated Switch) (S12)	* Pa	rts Included in [Door Ass	sembly
			- r - : 2: 2: 2: (• : -)				

Manual Voltage Regulator

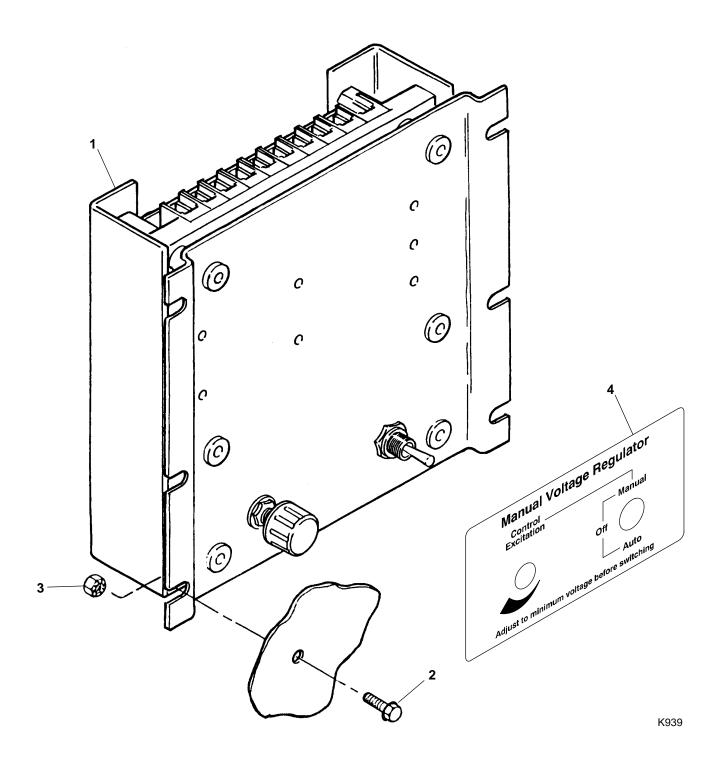

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	305–0817	1	Regulator, Voltage – Manual (MVR)	3 4	870–0131 098–6149	4 1	Nut, Hex – W/ET (10–32) Decal, Manual Voltage
2	821–0005	4	Screw, Self-Locking – Hex Washer Head (10–32 x 1/2")				Regulator


Voltage Regulator Generator Sets With Detector Control

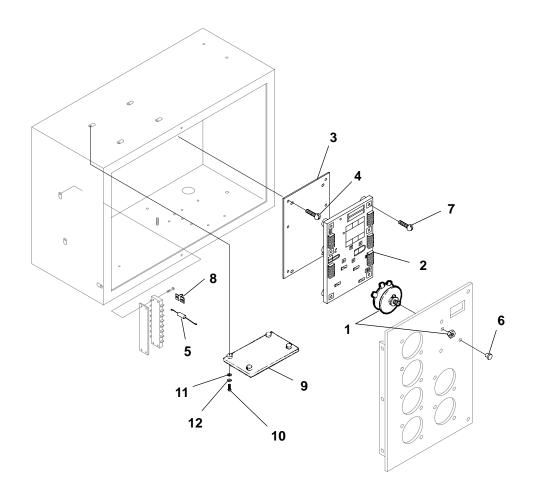


B246 H529 H546 H547 K001

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	303-0285-01	1	* Potentiometer – Voltage	6	517-0131	1	Plug, Hole (Fits 3/8" Hole)
			Adjust (5K Ohms) (Used	7	812-0084	4	Screw, Machine – Round
			With Model MX321 Voltage				Head (#8-32 x 1")
			Regulator) (R21)	8	332–2605	1	Jumper (Used On TB21)
2	305–0823	1	Board, Printed Circuit – Voltage Regulator (MX321)	9	305–0868	1	* Board, Printed Circuit – Isolation Transformer (T30)
			(VR21)	10	813-0108	4	* Screw, Machine – Round
3	319–0652	1	Plate, Mounting	10	013-0100	4	Head (#10–32 x 1–1/2")
4	815-0937	6	Screw, Machine - Round	11	526-0008	4	* Washer, Flat (#10)
			Head – Cross Recessed W/IT (#6–32 x 1/2")	12	850-0030	4	* Washer, Lock – Spring (#10)
5	350–1222	1	Resistor (1.5K Ohms) (Used On TB21)	* – N	lot Used On A	All Models	

Alarm Relay Board

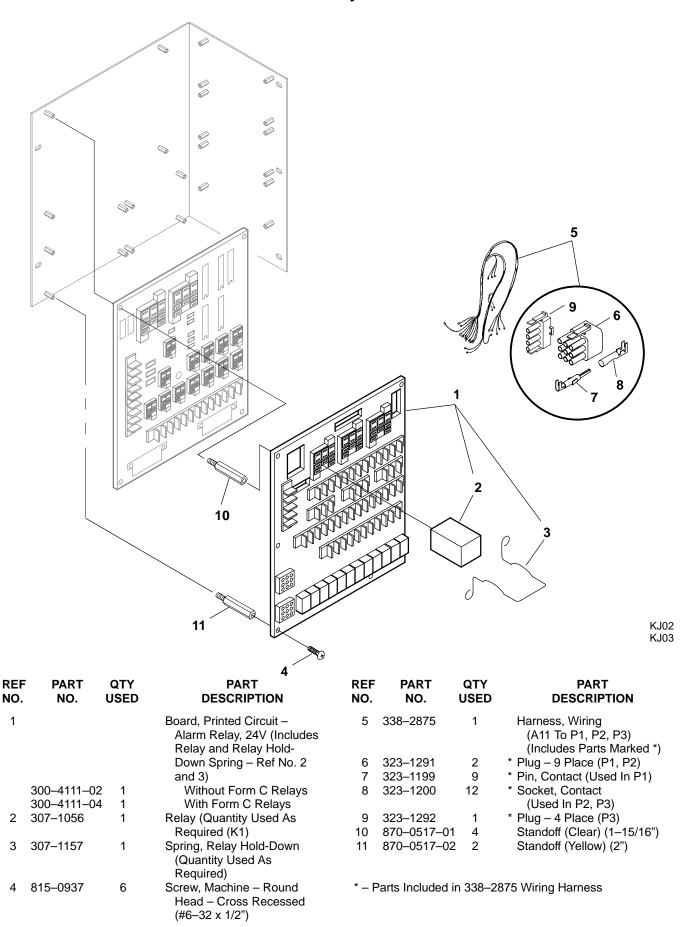


Common Alarm Board Generator Sets With Detector Control

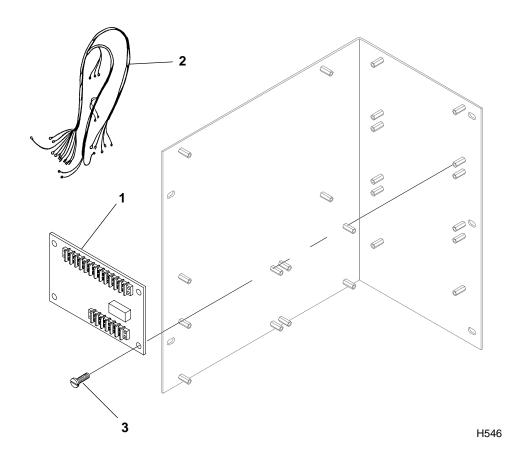


REF NO.		QTY JSED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-4218-02	1	Board, Printed Circuit – Common Alarm (A27)	3	812–0063	4	Screw, Machine – Round Head (#6-32 x 1/2")
2	338–3033	1	Harness, Wiring (12 Wire) (A27 to A11)				

Electronic Overspeed

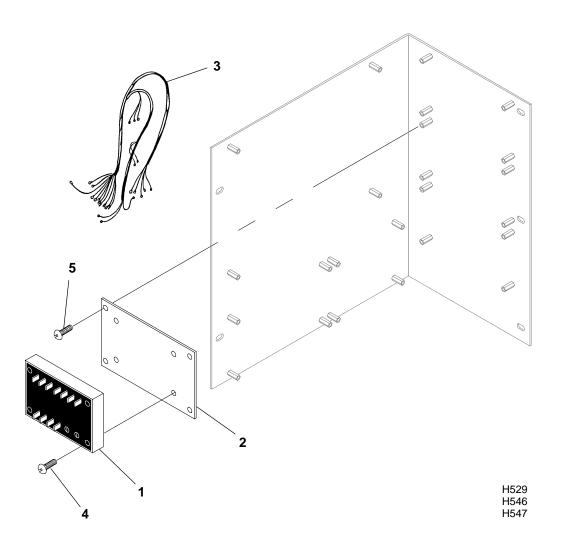


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	305-0902-02	! 1	Board, Printed Circuit – Electronic Overspeed (A16)	4	812–0082	4	Screw, Machine – Round Head (8–32 x 3/4")
2	319-0754	1	Plate, Mounting	5	815-0388	4	Screw, Pan Head - Cross
3	338–2447	1	Harness, Wiring – Electronic Overspeed (AUX to A11, A16) (6 Wire, 74")				Recessed, Thread Forming (6–32 x 1/2")

Time Delay Start/Stop

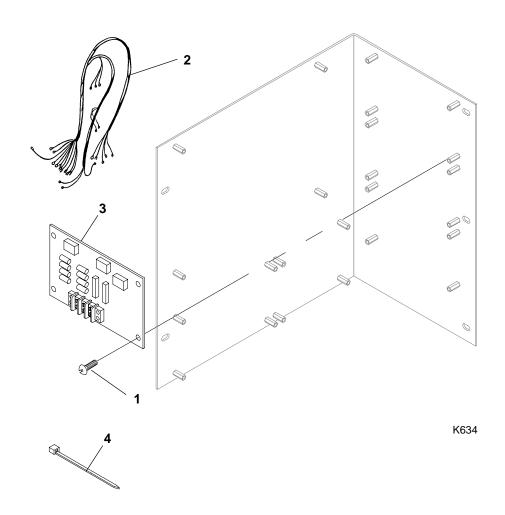


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815–0937	4	Screw, Machine – Round Head – Cross Recessed	3	300–2899	1	Board, Printed Circuit – Time Delay (A15)
2	338–1904	1	(6–32 x 1/2") Harness, Wiring (5 Wire) (21–1/2") (A15 to A11)	4	332–1445	3	Tie, Cable

Over/Under Voltage Relay DFEB Spec J, DFEC Spec C, DFFB Spec J Through K

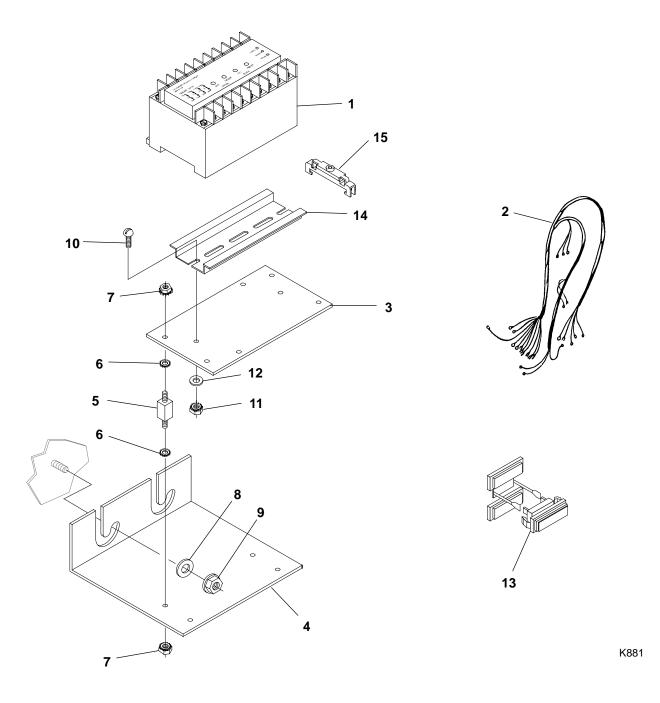

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307-2921-01		Relay, Voltage (A17)	9	870-0048	2	Nut, Hex – Self-Locking
2	338–3752	1	Harness, Wiring –	40	040 0400	•	(5/16–18)
			Over/Under Voltage (TB21, A11, GND to A17)	10	813–0100	2	Screw, Machine – Round Head (#10–32 x 1/2")
			(4 Wire, 67")	11	870-0131	2	Nut, Hex – W/ET (#10–32)
3	301-9941	1	Plate, Mounting	12	526-0008	2	Washer, Flat (#10)
4	301-6987	1	Bracket, Mounting	13	322-0384-09	1	Light, Indicator – Marked
5	402-0354	4	Mount, Shock				"O/U VOLT"
6	853-0005	8	Washer, Lock – EIT (#8)	14	332-2879-07	1	Rail, Mounting
7	870-0221	8	Nut, Hex - W/ET (#8-32)	15	323-1411-01	2	Clip, End (Used on Some
8	526-0115	2	Washer, Flat (5/16")				Early Models)


Over/Under Voltage Relay DFEB Begin Spec K, DFEC Begin Spec D, DFED, DFFB Begin Spec L

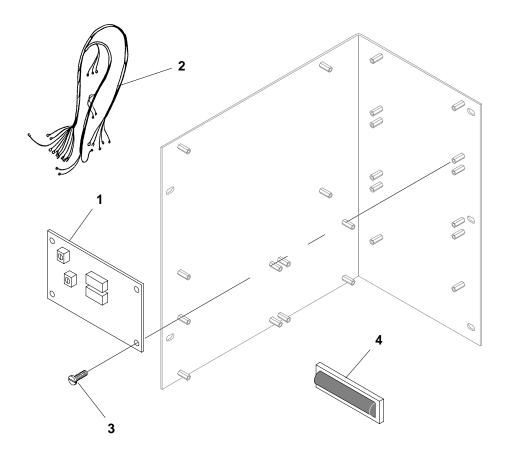

K881


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307–2868	1	Board, Printed Circuit – Over/Under Voltage Relay	3	815–0937	4	Screw, Pan Head – Cross Recessed (#6–32 x 1/2")
2	338–3366	1	(A17) Harness, Wiring (6 Wire) (30")	4	322-0431-03	1	Lens, Indicator Light (Marked "O/U VOLT")

Over/Under Frequency Relay

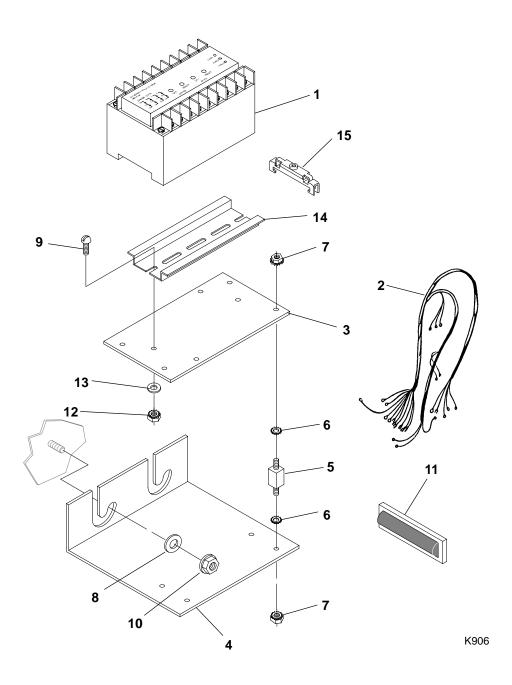


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Relay, Frequency –	8	526–0115	2	Washer, Flat (5/16")
			Over/Under (A18)	9	813-0100	2	Screw, Machine - Round
	307-2920	1	50 Hertz Sets				Head (#10-32 x 1/2")
	307-2919	1	60 Hertz Sets	10	870-0048	2	Nut, Hex – Self-Locking
2	338-2347	1	Harness, Wiring –				(5/16–18)
			Over/Under Frequency (6 Wire, 62") (TB21, A11,	11	322-0431-04	1	Lens, Replacement – Marked "O/U HZ" (DS20)
			GND to A19)	12	870-0131	2	Nut, Hex - W/ET (#10-32)
3	301-9941	1	Plate, Relay Mounting	13	526-0008	2	Washer, Flat (#10)
4	301-6987	1	Bracket, Mounting	14	332-2879-07	1	Rail, Mounting
5	402-0354	4	Mount, Shock	15	323-1411-01	2	Clip, End (Used on Some
6	853-0005	8	Washer, Lock - ET (#8)				Early Models)
7	870-0221	8	Nut, Hex - W/ET (#8-32)				,

Ground Fault Relay DFEB Begin Spec K, DFEC Begin Spec D, DFED, DFFB Begin Spec L

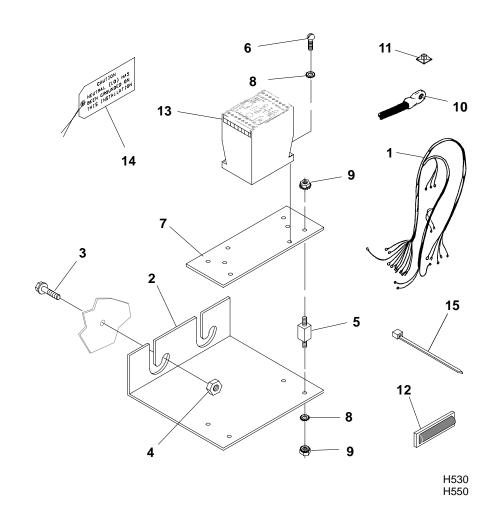


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring	5	402-0354	4	Mount, Shock
	338–3235	1	Generator Sets With Detector Control (7 Wire, 92")	6	812–0081	2	Screw, Machine – Round Head (#8–32 x 5/8")
			(GFA to A11, GND,	7	319-0030	1	Plate, Mounting
			NEUTRAL, CONT GND)	8	853-0005	8	Washer, Lock - ET (#8)
			Generator Sets With	9	870-0221	10	Nut, Hex - W/ET (#8-32)
			PowerCommand Control (GFA to TB1, GEN NEUTRAL, GND)	10	226–4406–06	2	Cable, Generator (Generator Neutral to Generator Grounding Bolt) (24")
	338-3232	1	Generator Sets with	11	332-2420	2	Mount, Cable Tie
			HC5 Frame (7 Wire, 102")	12	322-0431-09	1	Lens, Indicator Light (Amber
	338–3233	1	Generator Sets with HC6 Frame (7 Wire, 119")				Color, Marked "GROUND FAULT") Generator Sets
2	301-6987	1	Bracket, Mounting				With Detector Control
3	821-0017	2	Screw, Self-Locking – Hex	13	307-2843	1	Relay (Ground Fault Alarm)
			Washer Head (5/16-18 x	14	098-6943	1	Tag, Caution
			1/2")	15	332-1445	1	Tie, Wire (Quantity Used As
4	870–0257	2	Nut, Hex – Self-Locking (5/16–18)				Required)

Low Battery Voltage Sensor

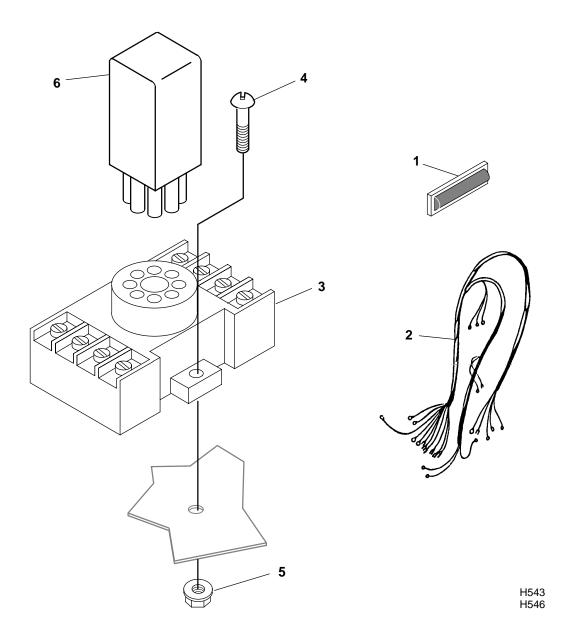

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	322-0431-08	1	Lens, Indicator Light (Marked	5	870-1221	2	* Nut, Hex - W/ET (#8-32)
			"Lo Battery")	6	305-0901	1	* Sensor – Low Battery
2	338–3034	1	* Harness, Wiring (4 Wire) (36") (K15 to A11)				Voltage (K15)
3	323-1410-03	1	* Base, Relay				
4	812–0084	2	* Screw, Machine – Round Head (#8–32 x 1")	* – 1	Not Used on A	All Models	


Wattmeter

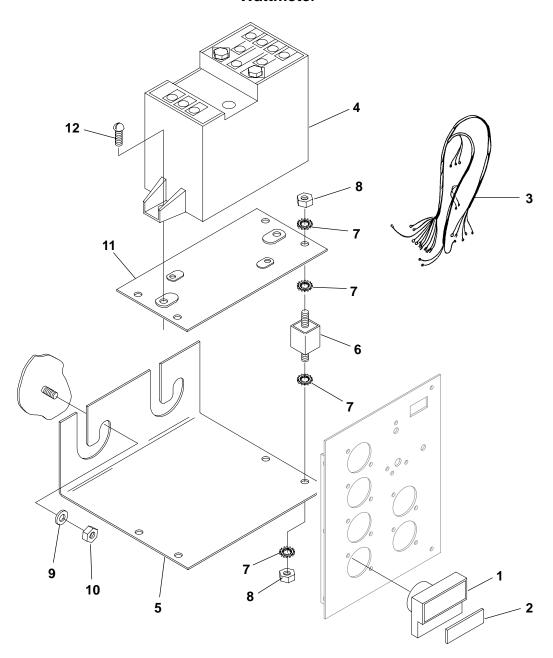

K185


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1722	1	Wattmeter (Dial Not Included)	4			Transducer, Watts (A21)
			(M24)		302-1833-01	1	Reconnectable Wye
2			Dial, Wattmeter				Vertical Control
	302-1721-13	1	0-500 kW Rating,		302-1833-05	5 1	120/240V Delta Vetical
	302-1721-14	. 1	0-600 kW Rating				Control
3			Harness, Wiring – Wattmeter	5	301-6987	1	Bracket, Mounting
			(M24, TB21, and GND to	6	402-0354	4	Mount, Shock
			A21)	7	853-0005	8	Washer, Lock - W/ET (8)
	338-1936	1	Reconnectable Wye	8	870-0221	8	Nut, Hex W/ET (8-32)
			Vertical Control	9	526-0115	2	Washer, Flat (5/16")
	338-2479	1	120/240V Delta Vetical	10	870-0048	2	Nut, Locking (5/16-18)
			Control	11	319-0030	1	Plate, Mounting
				12	815-0905-06	3 2	Screw, Machine – Pan Head, Cross Recessed (10–32)

Power Factor Meter

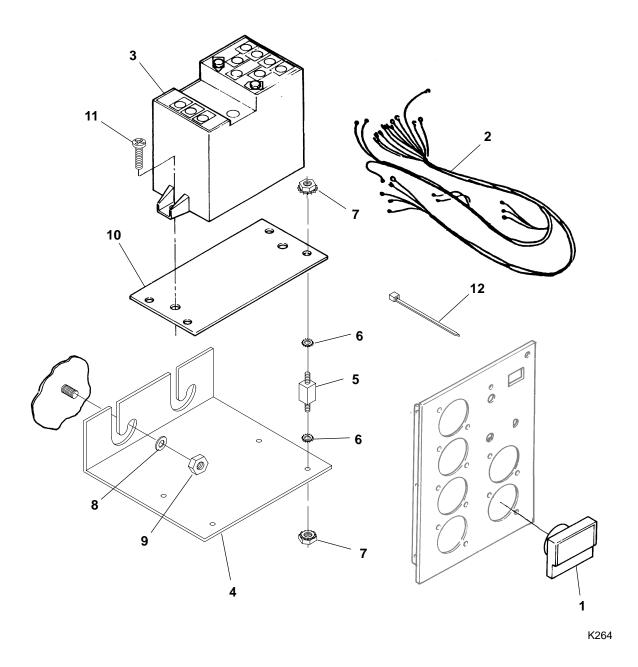


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1883	1	Meter, Power Factor (M25)	7	870-0221	8	Nut, Hex - W/ET (#8-32)
2	338-2368	1	Harness, Wiring – Meter	8	526-0115	2	Washer, Flat (5/16")
			(6 Wire, 44") (M25, TB21,	9	870-0048	2	Nut, Locking (5/16–18)
			GND to A22)	10	319-0030	1	Plate, Mounting
3	302-1833-03	3 1	Transducer, Watts (A21)	11	815-0905-06	2	Screw, Machine - Pan Head,
4	301-6987	1	Bracket, Mounting				Cross Recessed
5	402-0354	4	Mount, Shock				(#10-32 x 5/8")
6	853-0008	8	Washer, Lock - ET (#10)	12	332-0942	3	Tie, Cable

VAR Power Factor Controller

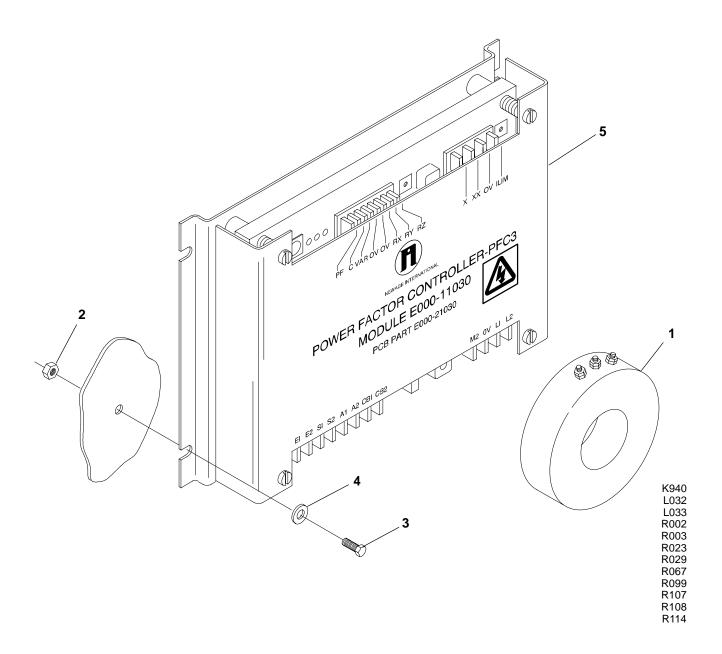

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302–1845–08	1	Transformer, Current (CT25) Ratio 750/5	3	813–0103	4	Screw, Machine – Round Head (#10–32 x 3/4")
	302-1845-10	1	Ratio 1000/5	4	526-0008	4	Washer, Flat (#10)
2	302–1794–11 302–1794–13 870–0131		Ratio 1500/5 Ratio 3000/5 Nut, Hex – W/EIT (#10–32)	5	305–0870	1	Controller, Power Factor (VAR)


Audible Alarm Generator Sets With Detector Control

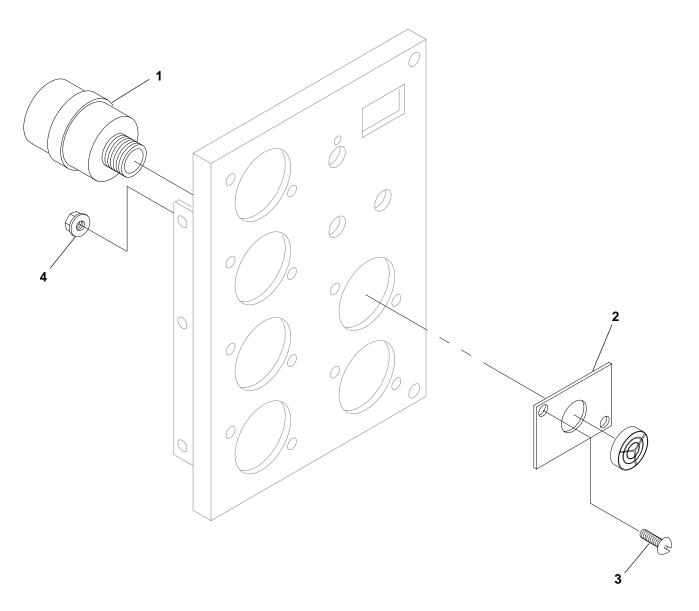

KA08


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333-0133	1	Alarm, Audible (DS2)	3	815-0385	2	Screw, Machine - Round
2	319–0898	1	Plate, Mounting	4	870-0183	2	Head (#6–32 x 1/2") Nut Hex – W/FT (#6–32)

Audible Alarm Module Generator Sets With PowerCommand Control

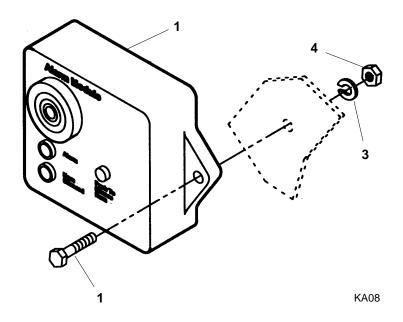

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3998-01	1 1	Module, Audible Alarm (DS2)	3	850-0040	2	Washer, Lock - Spring (1/4")
2	800–0006	2	Screw, Cap – Hex Head (1/4–20 x 7/8")	4	862–0001	2	Nut, Hex (1/4")


Circuit Breaker AC Control Door

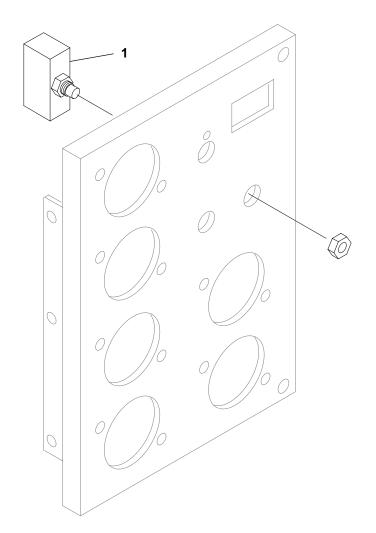

H529 H546 H547 KJ35 K600

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	320–1688–0 320–1688–0		Breaker, Circuit (CB21) Without Auxiliary Contacts With Auxiliary Contacts				


Tachometer

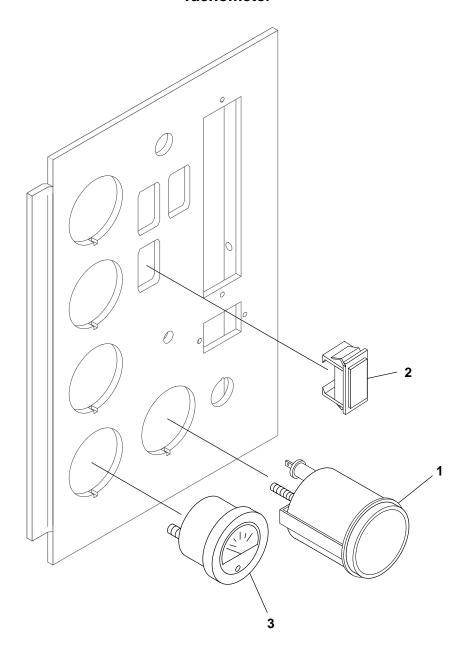

K145


REF QTY **PART PART** QTY **PART REF PART DESCRIPTION DESCRIPTION** NO. NO. **USED** NO. NO. **USED** Tachometer (0–4000 RPM, 12 Volt) (M16) 1 302-1873-01 1 2 301-6257 Switch, Blank 1 Ammeter - Blank Scale 3 302-1723 1

Potentiometer Speed Adjusting

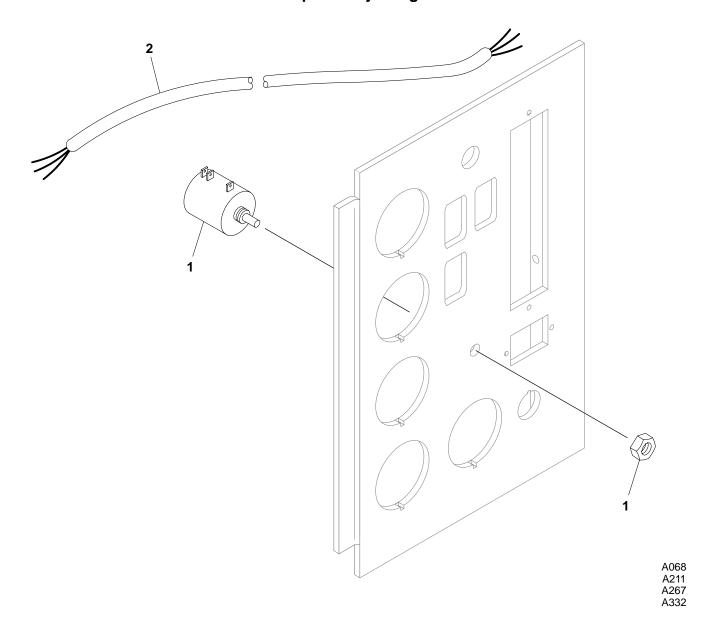


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	303-0223-05	1	Potentiometer, Speed Adjusting – Governor Controller (R21) 100 Ohms	2	334–0116	-	Cable, Shielded – Bulk (Order by the Foot – 7 Feet Required)
	303-0280	1	5K Ohms				

Oil Temperature Gauge

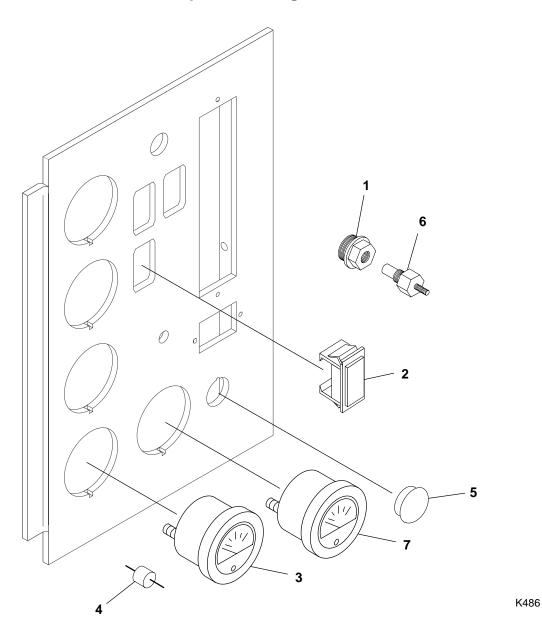

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	505-0151	1	Bushing, Pipe - Reducer	5	517-0137	1	Plug, Hole (7/8" Hole)
			(1/2" to 1/8") Oil Pan Mounted	6	193–0388	1	Sender, Oil Temperature – Oil Pan Mounted (E4)
2	301-6257	1	Switch – Blank	7	302-1723	1	Ammeter (Blank Scale)
3	193–0435	1	Gauge, Oil Temperature (M15)				(Used on Some Early Models)
4	193-0250	1	Resistor, Gauge (R13)				•


Emergency Stop Switch

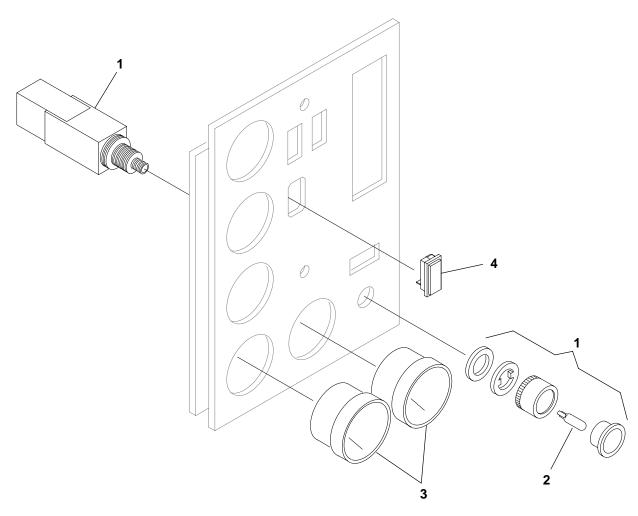

K796


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 3	308–1095	1	Switch, Pushbutton -	2	322-0487	1	Bulb, Replacement
			Emergency Stop (Includes	3	302-1723	2	Ammeter – Blank Scale
			Bulb - Ref No. 2) (S14)	4	301-6257	1	Switch – Blank

Control Door Meter Cover DFEB Begin Spec S, DFEC Begin Spec K, DFED Begin Spec G

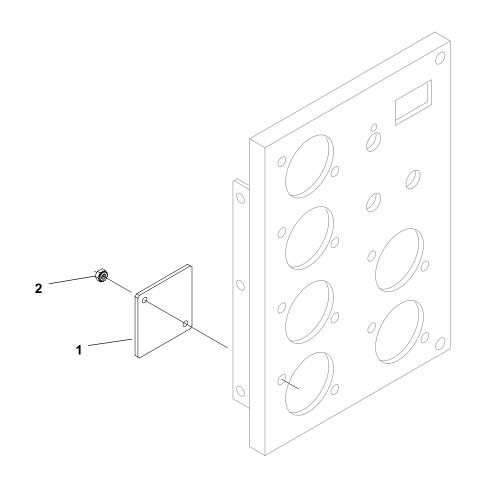

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 3	00–5498–0	02 A/R	Cover, Control Door – Meters	2 8	370-0131	A/R	Nut. Hex – W/ET (#10–32)


Pyrometer
Generator Sets With Detector Control

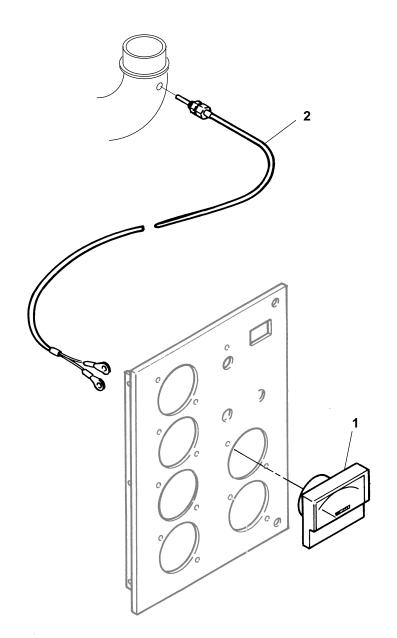

H244


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 3	802–1874	1	Pyrometer (M26)	2	193–0299	1	Lead, Thermocouple, 140"


Pyrometer Generator Sets With PowerCommand Control

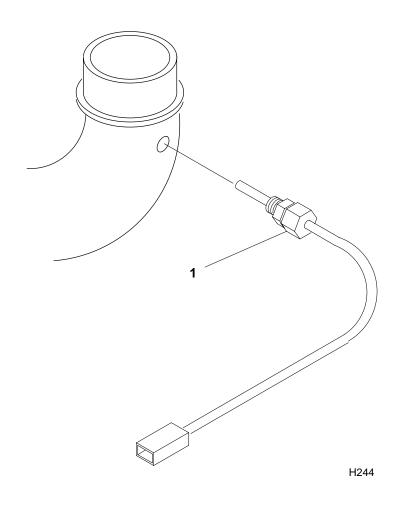

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	193–0446	1	Lead, Thermocouple – 22–1/2" (M26)				

Excitation Loss Module

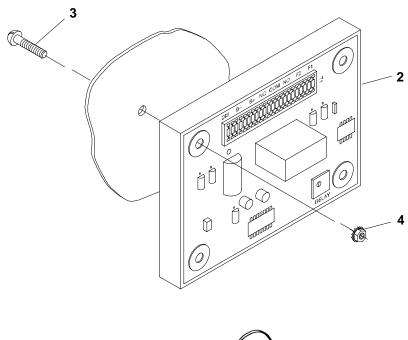


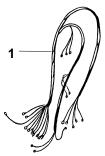

KJ35

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–2455	1	Harness, Wiring – Excitation	3	813–0103	4	Screw, Machine – Round
2	305-0821-0	2 1	Loss Module (AUX to A11) Module (ELM), 24V	4	870-0131	4	Head (#10-32 x 3/4") Nut. Hex - W/ET (#10-32)


Radio Frequency Interference Module

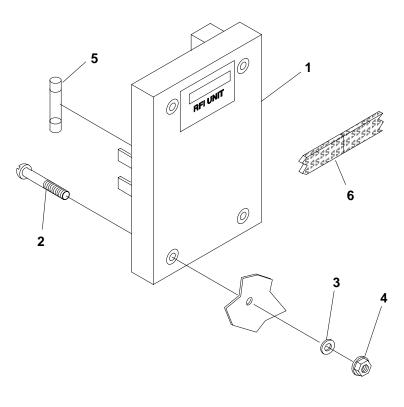

	2	2	\sim	
D	2	2	U	


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	314-0212	1	Module (RFI)	6	314-0213	_	Shielding, Wire – Bulk (3"
2	813–0107	4	Screw, Machine – Round Head (#10–32 x 1–1/4")				Wide) (Order By The Foot – 12 Feet Required) Used On
3	526-0008	4	Washer, Flat (#10)				AC Control Harness and
4	870-0131	4	Nut, Hex – W/ET (#10–32)				Leads For RFI Module and
5	321-0327-01	4	Fuse (5 Amp)				Current Transformer

Remote Annunciator Panel DFEB Spec J Through K, DFEC Spec C Through D DFED Spec A Through B, DFFB Begin Spec J

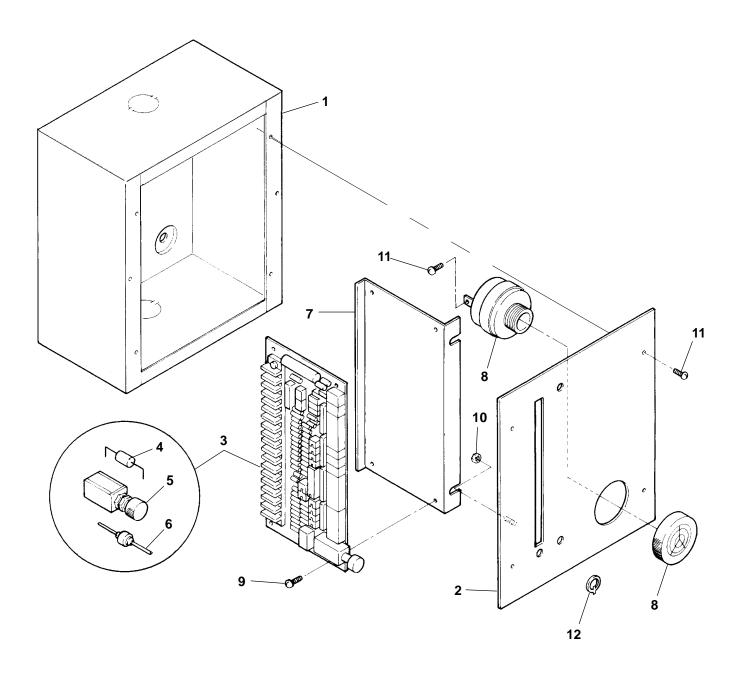


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	301-3090	1	Box, Control	6	359-0048	1	Diode (12 Volt, 5 Watt) (VR1)
2	301-7619	1	Panel	7	301-7620	1	Bracket, Mounting
3	300-2737	1	Board, Printed Circuit -	8	333-0133	1	Signal, Audible
			Annunciator (Includes,	9	812-0028	4	Screw, Machine - Round
			Resistor, Switch, and Diode				Head (#4-40 x 5/15")
			[Ref No. 4, 5, and 6])	10	870-0221	2	Nut, Hex – W/ET (8–32)
4	352–0180	1	Resistor (5 Watt, 100 Ohm) (R1)	11	812–0059	6	Screw, Machine – Round Head (#6–32 x 1/4")
5	308-0333	1	Switch, Push Button (S1)	12	518-0440	1	Ring, Locking

Remote Annunciator Panel DFEB Begin Spec L, DFEC Begin Spec F, DFED Begin Spec C

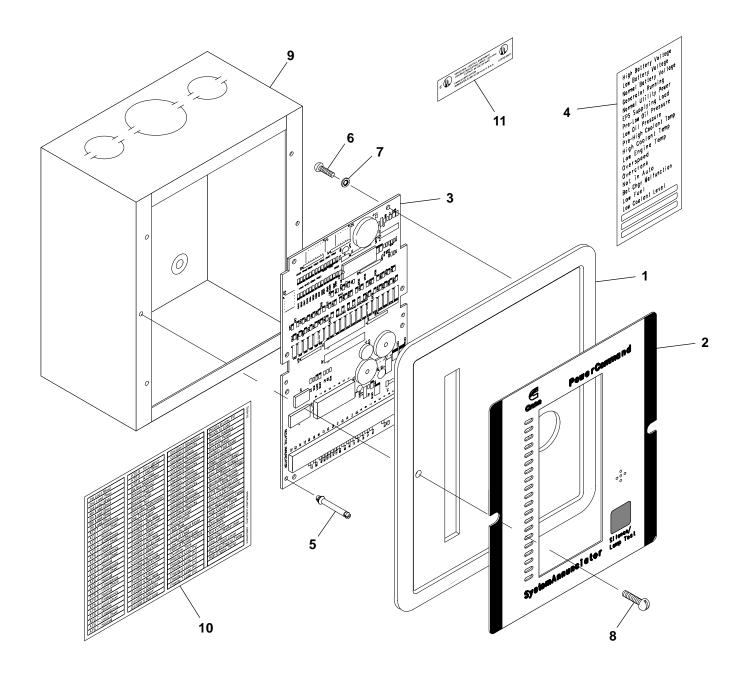

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-2376	1	Panel, Annunciator	7	854-0004	2	Washer, Lock - IT (#4)
2	300-4507	1	Panel, Membrane	8	822-2160-11	2	Screw, Machine - Pan Head
3	300-4508	1	Board, Printed Circuit -				Slot (#6-32 x 3/8")
			Annunciator	9	301-3090	1	Box, Control
4			Insert Card, Membrane	10			Label, Peel Off
	326-5376	1	English		098-6902	1	English
	326-5376-01		Spanish		098-6902-01	1	Spanish
5	332-3332-04	4	Post, Circuit Board	11	098–7184	1	Label, UL
6	812–0029	4	Screw, Machine – Round Head (#4–40 x 3/8")				


Auxiliary Terminal Block Generator Sets With Detector Control

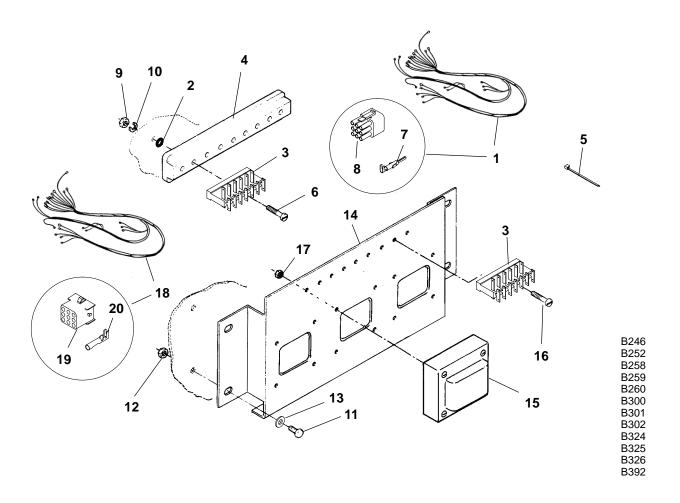

Auxiliary Terminal Block Generator Sets With Detector Control


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring	10	850-0025	3	Washer, Lock - Spring (#10)
			190–240, 380–480 Volt, 12 Lead Reconnectable Generators	11	821–0016	4	Screw, Self-Locking – Hex Washer Head (5/16–18 x 3/4")
	338–2491	1	Model HC5 Generators (AUX to TB21, VR21, A16, 8, 7, 6, 5, 4, X, XX, P2, P3, P4) (Includes Parts Marked *)	12	870–0257	4	Nut, Locking – Hex Flange Head (5/16–18) DFEB Spec J Through K DFEC Spec C Through D DFED Spec A, DFFB
	338–2530	1	Model HC6 Generators (AUX to TB21, VR21, A16, X,XX, P2, P3, P4,				(Used on All Models Except Those that Use Wiring Harness 338–3359)
			5, 8, 7, 4, 6) (Includes Cable Ties [Ref No. 5]) 600 Volt Generators Model HC5 Generators	13	526–2120	4	^ Washer, Flat (M10) DFEB Begin Spec L DFEC Begin Spec E DFED Begin Spec B
	338-2796	1	DFEB Spec J Through K	14	319-1245	1	^ Bracket, Mounting
			DFEC Spec C Through D DFED Spec A, DFFB	15	315–0717	3	^ Transformer (PTW, PTV, PTU)
			(AUX to TB21, A16, VR21, TB1, TB2, 8, 7, 6, 5, X, XX, P2, P3, P4) (Includes Cable Ties	16	812–0079	2	^ Screw, Machine – Round Head (#8–32 x 1/2") (Used with 338–2796 Wiring Harness)
	338–3359	1	[Ref No. 5]) DFEB Begin Spec L DFEC Begin Spec E DFED Begin Spec B (AUX to TB21, A16, VR21, 8, 7, 6, 5, X, XX, P1, P2, P3, P4)	17 18	870–0221 338–3337	12	^ Nut, Hex – W/ET (#8–32) ^ Harness, Wiring – Transformer (Includes Parts Marked ●[Ref No. 19 and 20]) (J1 to PTW, PTV, PTU) DFEB Begin Spec L
	338–2867	1	(Includes Parts Marked #) 4160–2400 Volt Generators				DFEC Begin Spec E DFED Begin Spec B
	2007	·	Model MV6 Generators (AUX to TB21, VR21, A16, X, XX, P2, P3, P4, TB1) (Includes Cable Ties [Ref No. 5])	19	323–1644–02	1	^→Housing, Connector (9 Place) (J1) DFEB Begin Spec L DFEC Begin Spec E DFED Begin Spec B
2	509-0065	3	*# Seal, O-Ring	20	323-1648	9	^●Socket, Contact
3	332-3007	3	*# Block, Terminal (AUX)				DFEB Begin Spec L
4	232-3536	1	*# Base, Terminal Block				DFEC Begin Spec E
5 6	332–1445 812–0085	A/R 3	*# Tie, Cable *# Screw, Machine – Round Head (#8–32 x 1–1/8")				DFED Begin Spec B
7	323-1647	8	# Pin, Contact	* – F	Parts Included In	n 338–2	2491 Wiring Harness
8	323–1644–0		# Plug, Connector (9 Place) (P1)	# — F	Parts Included I	n 338–	3359 Wiring Harness 3337 Wiring Harness
9	870–0221	3	Nut, Hex – W/ET (#8–32)				00 Volt Generators Only

Paralleling Interconnect Terminal Block

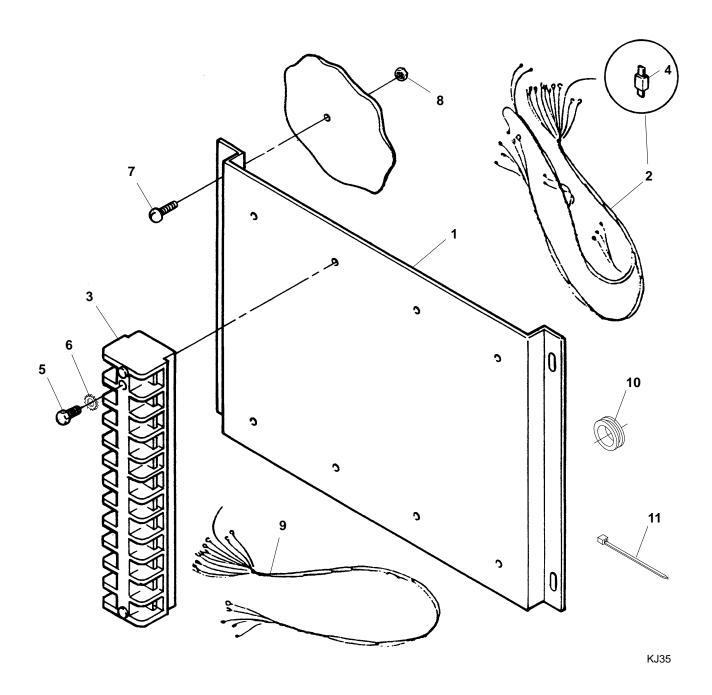


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
						_	
1	319–1137	1	Panel, Mounting	6	853–0005	8	Washer, Lock – W/ET (#8)
2	338–2590	1	Harness, Wiring (Includes Four Terminal Blocks And	7	813–0100	4	Screw, Machine – Round Head (#10–32 x 1/2")
			Diode – Ref No. 3 and 4)	8	870-0131	4	Nut, Hex – W/ET (#10–32)
			(30 Wire, 84") (TB11, CR1 to VR21, CB21, ELM, A11	9	338–2172	1	Harness, Wiring – Governor (Shielded) (5 Wire, 39")
			and GND)	10	508-0051	1	Grommet, Rubber (Fits 2"
3	332-2315	4	Block, Terminal (TB11)				Hole) (Control Knockout)
4	357-0030	1	Diode (6 Amp) (CR1)	11	332-0942	A/R	Tie, Cable (Quantity Used As
5	812–0085	8	Screw, Machine – Round Head (8–32 x 1–1/8")				Required)

Float Switch

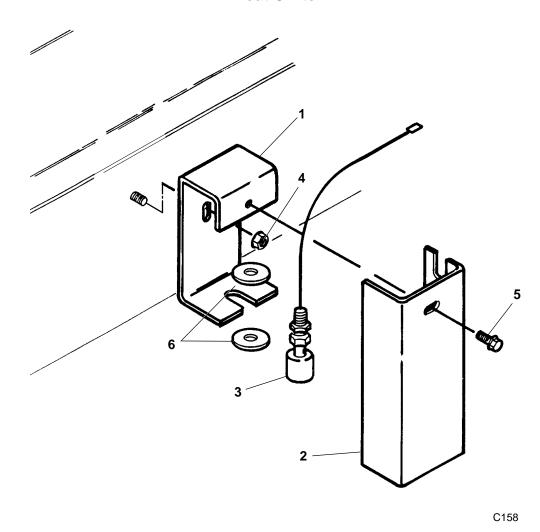


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–0490 319–0489	1 1	Bracket, Mounting Cover, Switch	5	821–5002–0	3 1	Screw, Self-Locking – Hex Washer Head (1/4–20 x
3	308-0916-01	1	Switch, Float – Basin				1/2")
4	870–0257	1	Nut, Locking – Hex Flange (5/16–18)	6	526–0029	2	Washer, Flat (3/8")

Cross Current Compensation Circuit

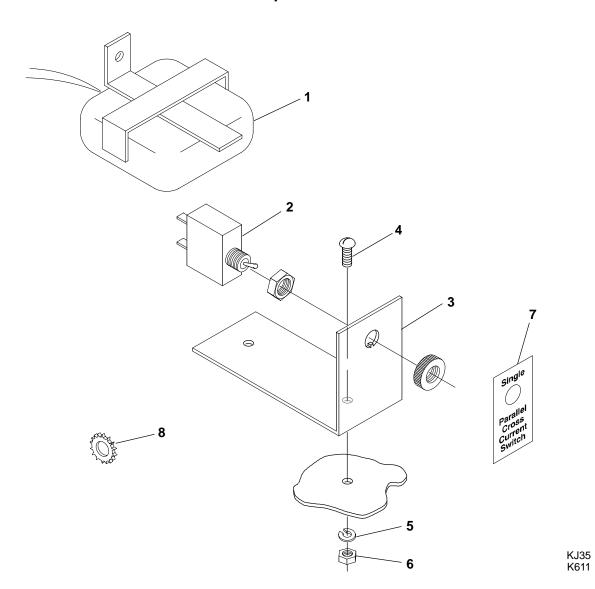


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	302-1852-03	3 1	Transformer, Current (CT) -	7	098–2313	1	Label, Cross Current Switch
			600:0.38 Ratio	8	853-0003	2	Washer, Lock – External
2	308-0069	1	Switch, Toggle (S22)				Thread (#6)
3	301-9657	1	Bracket, Mounting				DFEB Begin Spec K
4	813-0100	2	Screw, Machine - Round				DFEC Begin Spec D
			Head (#10-32 x 1/2")				DFED
5	850-0030	2	Washer, Lock - Spring (#10)				DFFB Begin Spec L
6	870-0053	2	Nut. Hex (#10-32)				•

Current Transformer

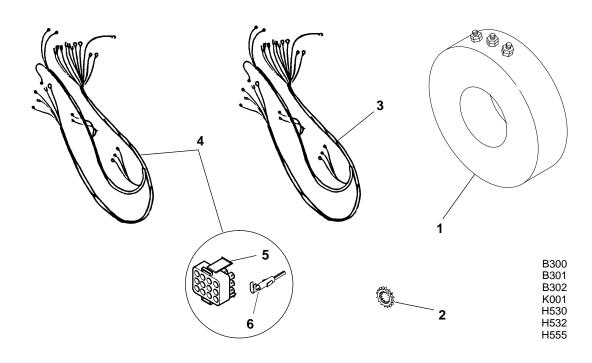


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Transformer, Current				DFEB Begin Spec S
			(CT21, CT22, CT23)				DFEC Begin Spec K
			Generator Sets With				DFED Begin Spec G
			Detector Control		302-2057-24	. 3	Ratio 946/1 or 1892/1
			DFEB Spec J Through R		302-2057-26	3	Ratio 1070/1 or 2140/1
			DFEC Spec C Through J		302-2057-27		Ratio 1104/1 or 2208/1
			DFED Spec A Through F		302-2057-29	3	Ratio 1262/1 or 2524/1
			DFFB Begin Spec J		302-2057-31	3	Ratio 1419/1 or 2838/1
	302-1794-10	3	Ratio 600/5 or 1200/5		302-2057-33	3	Ratio 1577/1 or 3154/1
	302-1794-11	3	Ratio 750/5 or 1500/5	2	856-0008	2	Washer, Lock – EIT (5/16")
	302-1794-12	2 3	Ratio 1000/5 or 2000/5				(Grounding Wires)
			DFEB Begin Spec S	3			Harness, Wiring – Generator
			DFEC Begin Spec K				Sets With Detector Control
			DFED Begin Spec G				(TB21 To GND, CT21,
	302-2055-10) 3	Ratio 600/5 or 1200/5				CT22, CT23)
	302-2055-11	3	Ratio 750/5 or 1500/5		338-1980	1	61", 7 Wire
	302-2055-12	2 3	Ratio 1000/5 or 2000/5		338-2532	1	79", 7 Wire
			Generator Sets With Power	4	338–3019	1	Harness, Wiring – Generator
			Command Control				Sets With PowerCommand
			DFEB Spec J Through R				Control (Includes Plug and
			DFEC Spec C Through J				Socket Terminals – Ref No.
			DFED Spec A Through F				5 and 6) (10 Wire, 60") (P9
			DFFB Begin Spec J				to CT21, CT22, CT23 and
	302–1922–03		Ratio 173/1 or 346/1				5, 6, 7, 8)
	302–1922–24		Ratio 946/1 or 1892/1	5	323-1644-03	1	Plug – 12 Place – Generator
	302–1922–26		Ratio 1070/1 or 2140/1				Sets With PowerCommand
	302–1922–27		Ratio 1104/1 or 2208/1				Control (P9)
	302–1922–29		Ratio 1262/1 or 2524/1	6	323–1648	10	Socket, Terminal – Generator
	302–1922–31	-	Ratio 1419/1 or 2838/1				Sets With PowerCommand
	302–1922–33	3	Ratio 1577/1 or 3154/1				Control

Resistive Temperature Detectors

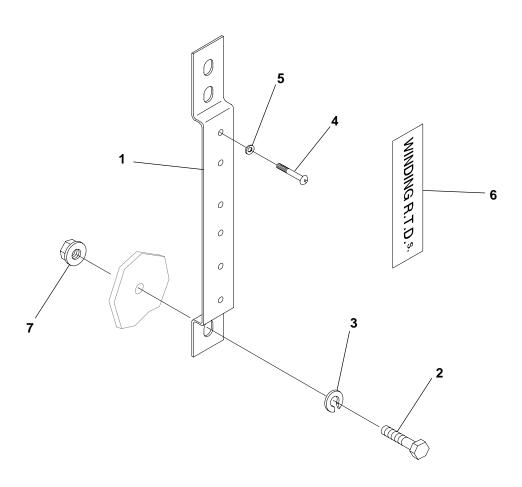


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1293	1	Bracket Screw, Cap – Hex Head	4	812–0070	4	Screw, Machine – Round Head (#6–32 x 1–1/4")
	800-2052	2	M8 x 12mm (Used on	5	526-0002	4	Washer, Flat (#6)
			Generator Sets with HC6	6	098-6488	1	Label, R.T.D.
			Frame)	7	870-0281	2	Nut, Self-Locking (3/8-16)
	821–0029	2	3/8–16 x 3/4" (Used on Generator Sets with HC5 Frame)				(Used on Generator Sets with HC5 Frame)
3	850–2008	2	Washer, Lock – Spring (M10) (Used on Generator Sets with HC6 Frame)				

Starting Aid

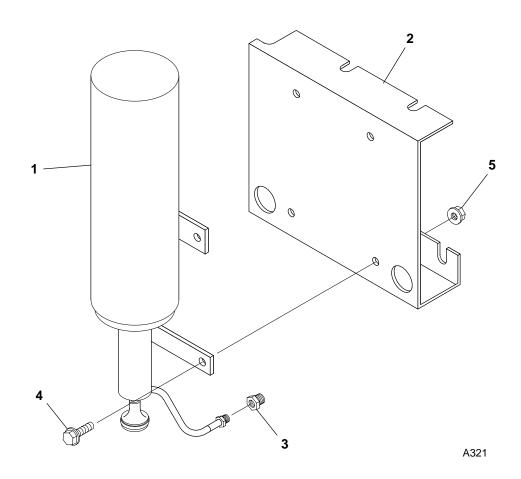

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	140-2306-01	1	Aid, Starting	4	821-0018	4	Screw, Self-Locking - Hex
2	140-2807	1	Bracket, Starting Aid				Washer Head (1/4-20 x
3	505-1405	1	Bushing, Pipe				5/8")
				5	870-0212	4	Nut, Locking (1/4–20)


Remote Control

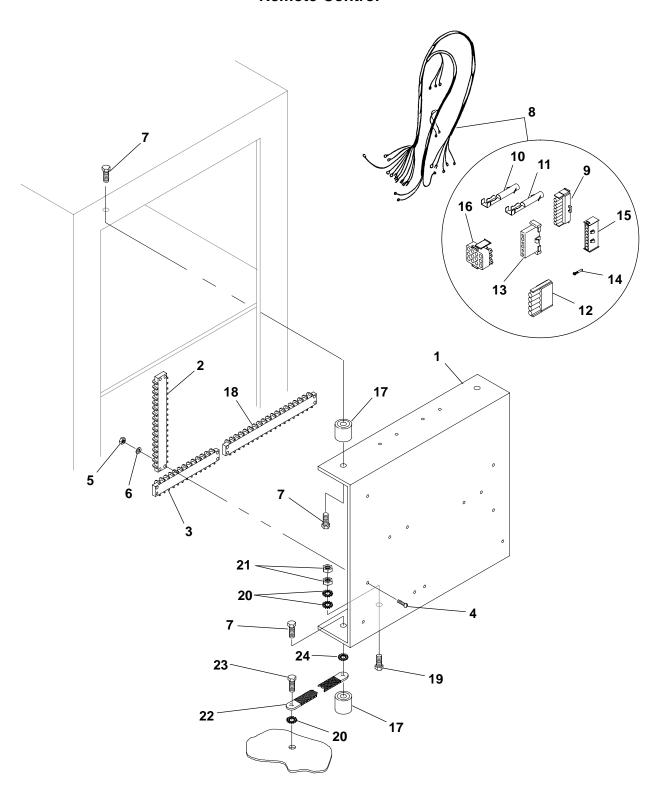

Remote Control


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1017	1	Panel, Control	10			Socket, Contact – Female
2	332–0795	1	Block, Terminal (16 Place)		000 1000		(Quantity Used As Required)
3	332-0607	1	(TB21) Block, Terminal – 12 Place		323–1200	1	Used With Wiring Harnesses 338–2569 And
4	812–0066	6	Screw, Machine – Round				338–2570
			Head (#6-32 x 3/4")	11			Socket, Contact – Female
5	860–1005	6	Nut, Hex (#6-32)				(Quantity Used As Required)
6	526-0003	6	Washer, Flat (#8)		323–1648	1	Used With Wiring Harness
7	821–0014	8	Screw, Self-Locking – Hex				338–3429
•			Washer Head (5/16–18 x 1/2")	12	323–1304	1	Housing, Connector (6 Place) Used With Wiring Harness
8			Harness, Wiring (Includes	40	000 4040		338–2570 (J2)
			Connector Housing And Pins Or Sockets)	13	323–1342	1	Housing, Connector (6 Place) Used With Wiring Harness
	338–2569	1	20" – 6 Wire (J1 To TB21,		000 4400		338–2571 (P2)
			GRD, A11) (Includes Connector Housing and Contact Socket – Ref No. 9 and 10)	14	323–1199	1	Pin, Contact – Male (Quantity Used As Required) Used With Wiring Harnesses 338–2571 And 338–2756
	338–2570	1	12" – 6 Wire (J2 To A11) (Includes Contact Socket and Connector Housing –	15	323–1343	1	Housing, Connector (8 Place) Used With Wiring Harness 338–2756 (P1)
			Ref No. 10 and 12)	16	323-1644-02	1	Housing, Connector (9 Place)
	338–2571	1	12" – 6 Wire (P2 To A11) (Includes Connector			·	Used With Wiring Harness 338–3429 (P2)
			Housing and Contact	17	402-0527	4	Isolator, Vibration
			Pin – Ref No. 13 and 14)	18	332–1243	1	Block, Terminal – 18 Place
	338–2756	1	12" – 3 Wire (P1 To A11) (Includes Contact Pin and	19	800–0007	1	Screw, Cap – Hex Head (1/4–20 x 1")
			Connector Housing – Ref	20	856-0006	3	Washer, Lock - EIT (1/4")
			No. 14 and 15)	21	871-0015	2	Nut, Hex – Brass (1/4–20)
	338-3429	1	11" – 9 Wire (P2 To TB21)	22	337-0049	1	Strap, Ground
			(Includes Contact Socket and Connector Housing – Ref No. 11 and 16)	23	821–0010	2	Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
9	323–1306	1	Housing, Connector (8 Place) Used With Wiring Harness 338–2569 (J1)	24	856–0008	1	Washer, Lock – EIT (5/16")

Louvre DFEC

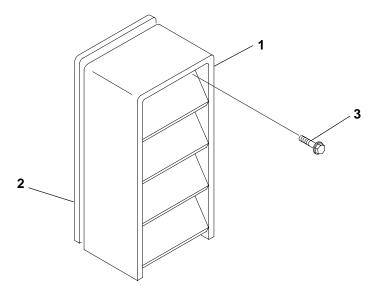


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	234-0900-04	1 2	Louvre – Frame HC5 Generators	3	821–2023	12	Screw, Self-Locking – Hex Washer Head (M5 x 20mm)
2	234-0901-04	1 2	Gasket, Louvre				,

Circuit Breaker UL Listed DFFB Spec J

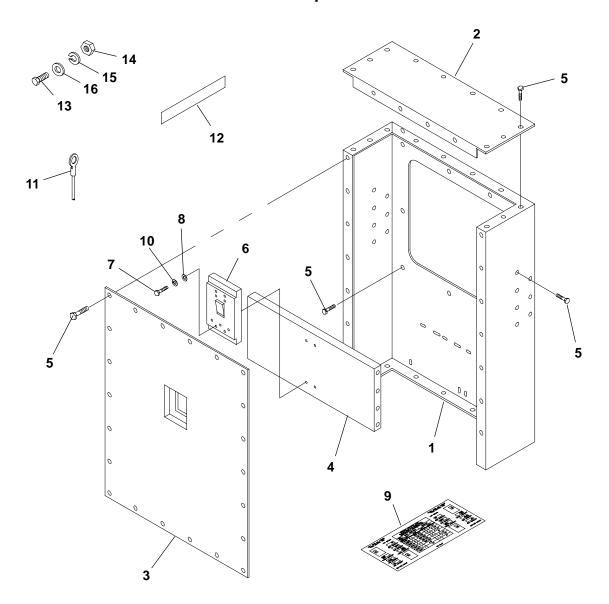


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-0890	1	Box, Circuit Breaker	10	850-0045	4	Washer, Lock - Spring
2	319-0892	2	Panel				(5/16")
3	319-0893	1	Cover	11			Lead, Circuit Breaker
4	319-0891	1	Bracket, Mounting				(Quantity Used As
5	821-0010	60	Screw, Self-Locking – Hex				Required) (#1/0 Wire)
			Washer Head (1/4-20 x 1/2")		226-3371	1	40"
6			Breaker, Circuit (CB21)		226-3376	1	56"
			(Includes Lugs and Interchangeable Trip)	12	091–0002	1	Strip, Copper (Used for wrapping end of leads
	220 4404 00	4	Standard				before securing to circuit
	320–1461–08	1	800 Amp With Shunt Trip				breakers) (Quantity Used As Required)
	320-1473-08	1	800 Amp	13	800-0094	8	Screw, Cap - Hex Head
7	800-0031	4	Screw, Cap - Hex Head				(1/2–13 x 2")
			(5/16-18 x 1-1/2")	14	862-0005	8	Nut, Hex (1/2-13)
8	526-0115	4	Washer, Flat (5/16")	15	850-0060	8	Washer, Lock - Spring (1/2")
9	098–6832	1	Label, Conduit Information	16	526-0219	16	Washer, Flat (1/2")

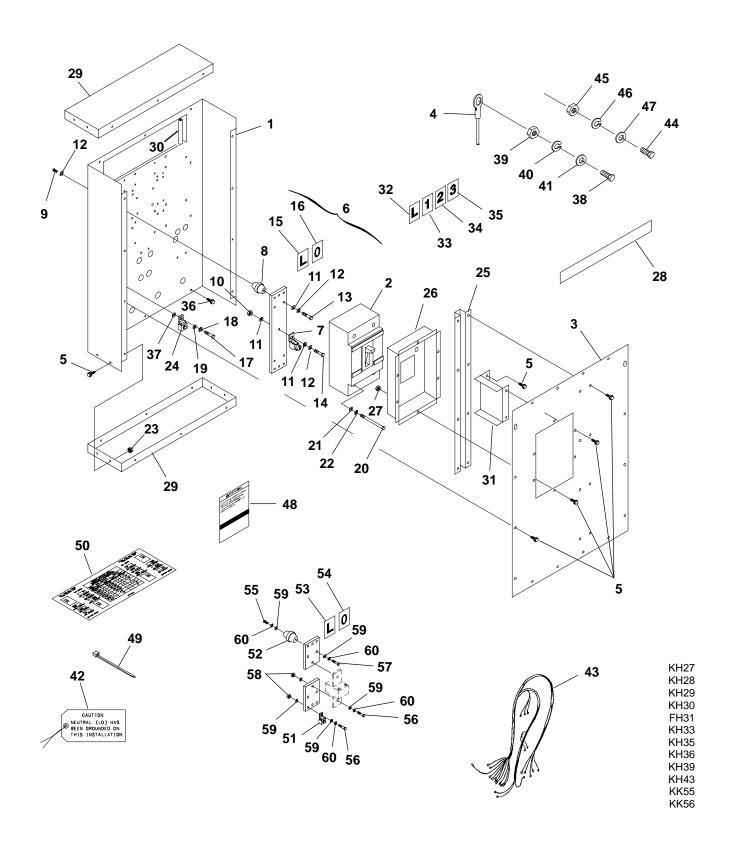

REF NO.	PART NO.	QT USE	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 3 2	319–2432	1	Box, Circuit Breaker Breaker, Circuit – 3 Pole With		000 4404 00		With Auxiliary Contacts and 224 Volt Shunt Trip
			Interchangeable Trip		320-1491-09		200 Amp
			(Includes Lugs) (CB21) Standard		320-1491-10		225 Amp
	220 1450 /	15 1			320–1492–06		250 Amp
	320-1458-4		100 Amp		320–1492–07 320–1492–08	-	300 Amp
	320-1458-4 320-1459-0	-	150 Amp 200 Amp		320-1492-09		350 Amp
	320-1459-0 320-1459-1	-	200 Amp		320-1492-09		400 Amp 450 Amp
	320-1439-1 320-1460-0		250 Amp		320-1492-10	1	500 Amp
	320-1 4 00-0	-	300 Amp		320-1492-12	-	600 Amp
	320-1460-0		350 Amp		320-1493-07		700 Amp
	320-1460-0	-	400 Amp		320-1493-08		800 Amp
	320–1460–1	-	450 Amp		320-1493-09	-	1000 Amp
	320-1460-1		500 Amp		320-1493-10		1200 Amp
;	320–1460–1	2 1	600 Amp				With Auxiliary Contacts
;	320–1461–0	7 1	700 Amp				and Bell Alarm
;	320-1461-0	08 1	800 Amp		320-1641-11	1	800 Amp
;	320–1461–0	9 1	1000 Amp		320-1641-13	1	1200 Amp
;	320–1461–1	10 1	1200 Amp				With Auxiliary Contacts,
			With Auxiliary Contacts				24 Volt Shunt Trip, and
	320–1462–4		150 Amp				Bell Alarm
	320–1463–0		200 Amp		320–1799	1	350 Amp
	320–1463–1		225 Amp		320–1845	1	400 Amp
	320-1464-0		250 Amp		320–1848	1	450 Amp
	320–1464–0		300 Amp		320–1800	1	500 Amp
	320–1464–0		350 Amp		320–1904	1	700 Amp
	320-1464-0		400 Amp		320–1847	1	800 Amp
	320-1464-1		450 Amp				With Auxiliary Contacts and Ground Fault
	320–1464–1 320–1464–1		500 Amp 600 Amp		320-1909-28	1	150 Amp
	320-1404-1 320-1465-0		700 Amp		320-1909-29		200 Amp
	320-1 4 05-0		800 Amp		320-1909-30		300 Amp
	320–1465–0	-	1000 Amp		320-1909-31	1	400 Amp
	320–1465–1	-	1200 Amp		320-1909-32		500 Amp
	0_0		With 24 Volt Shunt Trip		320-1909-33	-	600 Amp
;	320–1471–0	9 1	200 Amp		320-1909-34		800 Amp
	320–1471–1		225 Amp		320-1909-35		1000 Amp
;	320-1472-0	06 1	250 Amp		320-1909-36	1	1200 Amp
	320–1472–0		300 Amp	3	319–1917	1	Cover, Circuit Breaker
;	320–1472–0)8 1	350 Amp	4			Lead, Circuit Breaker
	320–1472–0		400 Amp				(Quantity Used As Required)
	320–1472–1		450 Amp				39" (Without Markings)
	320–1472–1		500 Amp				(#1/0 Wire)
	320–1472–1		600 Amp		226–4406–03	1	1/2" Ring Terminal End to
	320-1473-0		700 Amp		000 4400 04		1" Stripped End
	320–1473–0		800 Amp		226–4406–04	1	1/2" Ring Terminal End to
	320-1818-0	-	900 Amp	_			1/2" Ring Terminal End
	320–1473–0 320–1473–1		1000 Amp	5			Screw, Self-Locking – Hex Washer Head (1/4–20 x 1/2")
•	JZU-141 J-1	i I	1200 Amp With 24 Volt Shunt Trip		821-0010	40	Circuit Breakers with
			and Bell Alarm		02 I-00 IU	70	Auxiliary Contacts and
	320–1637–1	0 1	700 Amp				Ground Faults
	320–1637–1		800 Amp		821-5002-03	40	All Other Circuit Breakers
•					200 _ 00		2 2 3 2 . 3 3

^{* –} Parts Included In 300–4318–01 Neutral Bar Assembly **Continued...**

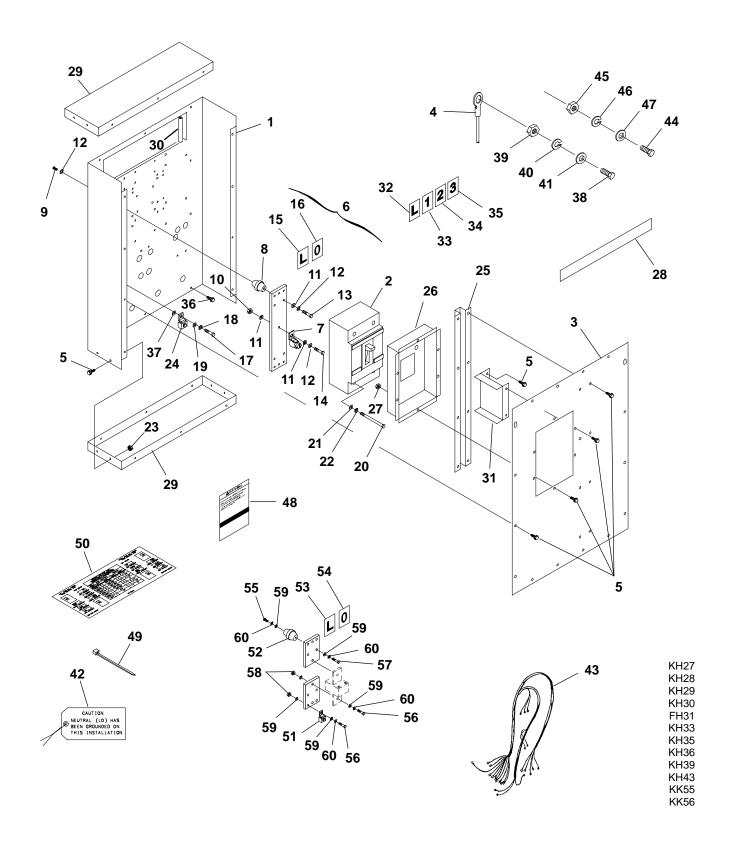


Circuit Breaker UL Listed Model HC5 Generators

DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	300–4318–01	1	Bar Assembly, Neutral (Includes Neutral Bars and Parts Marked *) – All Circuit Breakers Except Those with	26	319–2431–12	. 1	Cup, Circuit Breaker 1–7/16" x 3–9/16" Opening 200 Amp Breakers 2–9/16" x 3–5/8" Opening
7	332–2001	3	Auxiliary Contacts and Ground Fault * Lug, Solderless		319–2431–22	! 1	500 Amp Breakers with Auxiliary Contacts and Ground Fault
8	332-2744-07		* Standoff, Insulator		319–2431–13	3 1	250 To 600 Amp
9	800-0048	2	* Screw, Cap – Hex Head		313-2431-13	, ,	Breakers
			(3/8–16 x 3/4")		319–2431–14	. 1	3-1/8" x 4-1/8" Opening
10	862-0003	3	* Nut, Hex (3/8")				700 to 1200 Amp
11	526-0029	8	* Washer, Flat (3/8")	0.7	070 0010		Breakers
12	850-0050	7	* Washer, Lock – Spring (3/8")	27	870–0212	6	Nut, Locking (1/4–20)
13	800–0051	2	* Screw, Cap – Hex Head (3/8–16 x 1–1/4")	28	091–0002	1	Strip, Copper (Used for wrapping end of leads
14	800-0052	3	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")				before securing to circuit breakers) (Quantity Used
15	098-5854-06	1	* Label, Marker – Marked "L"				As Required)
16	098-5854-10	1	* Label, Marker – Marked "0"	29	319-1915	2	Panel
17	800–0050	1	Screw, Cap – Hex Head (3/8–16 x 1")	30	508–1092	_	Edging – Bulk (Order By The Foot – 3 Feet Required)
18	850-0050	1	Washer, Lock - Spring (3/8")	31	319-1927	1	Brace, Cover
19 20	526-0029	1	Washer, Flat (3/8") Screw	32	098–5854–06	3	Label, Marker (10 Characters Per Card) Marked "L"
	813–0118	4	Machine, – Round Head (#10-32 x 4–1/2")	33	098–5854–07	1	Label, Marker (10 Characters Per Card) Marked "1"
	012 0157	4	200 Amp Breakers	34	098–5854–08	1	Label, Marker (10 Characters
	812–0157	4	Machine – Round Head (1/4–20 x 1–3/4")	35	098-5854-09	1	Per Card) Marked "2" Label, Marker (10 Characters
			250 to 600 Amp Breakers		090-3034-08		Per Card) Marked "3"
	800–0031	4	Cap – Hex Head (5/16–18 x 1–1/2") 700 To	36			Screw, Self-Locking – Hex Washer Head
			1200 Amp Breakers		821-0009	5	(1/4–20 x 3/8") – Breakers
21			Washer, Flat				With Auxiliary Contacts
	526-0008	4	#10 - 200 Amp Breakers				and Ground Fault
	526-0108	4	1/4" – 250 To 600 Amp Breakers		821–5002–04	5	(1/4–20 x 5/8") – All Other Breakers
	526-0115	4	5/16" – 700 To 1200 Amp Breakers	37	856-0010	1	Washer, Lock - EIT (3/8")
22							The following four hardware items are used to fasten
22	050 0000	4	Washer, Lock – Spring				
	850-0030	4	#10 – 200 Amp Breakers				the load leads to the
	850–0040	4	1/4" – 450 To 600 Amp Breakers				generator and neutral bar. Quantity used as required.
	850–0045	4	5/16" – 700 To 1200 Amp Breakers	38	800–0094	1	Screw, Cap – Hex Head (1/2–13 x 2")
23	870-0494	16	Nut, Self-Retaining (1/4–20)	39	862-0005	1	Nut, Hex (1/2-13)
24	332-2001	1	Lug, Solderless	40	850-0060	1	Washer, Lock - Spring (1/2")
25	319–1918	1	Brace, Cover	41	526-0219	1	Washer, Flat (1/2")

^{* –} Parts Included In 300–4318–01 Neutral Bar Assembly **Continued...**

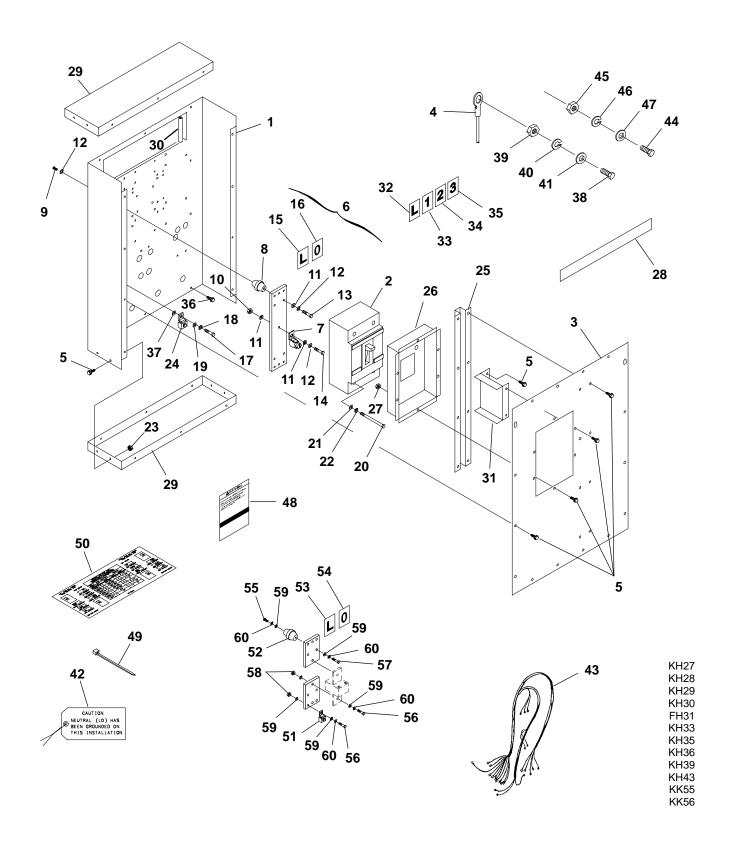


Circuit Breaker UL Listed Model HC5 Generators Spec J Through L, DFEC Spec C Th


DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
42	098–6943	1	The following six hardware items are used only on Breakers with Auxiliary Contacts and Ground Fault.	53 54 55	098–5854–06 098–5854–10 800–0048	1	+ Label, Marker – Marked "L" + Label, Marker – Marked "0" + Screw, Cap – Hex Head (3/8–16 x 3/4") + Screw, Cap – Hex Head
43 44	338–3012 800–0054	1 3	Harness, Transformer Screw, Cap – Hex Head (3/8–16 x 2")	57	800–0051	2	(3/8–16 x 1–1/2") + Screw, Cap – Hex Head (3/8–16 x 1–1/4")
45 46 47	862–0003 850–0050 526–0029	3 3 6	Nut, Hex (3/8–16) Washer, Lock – Spring (3/8") Washer, Flat (3/8")	58 59 60	862–0003 526–0029 850–0050	4 12 8	+ Nut, Hex (3/8") + Washer, Flat (3/8") + Washer, Lock – Spring (3/8")
48 49 50 51 52	098–2304 332–1389 098–6832 332–2001 332–2744–07	1 A/R 1 2 7 2	Label, Warning Tie, Cable Label, Conduit Information + Lug, Solderless + Standoff, Insulator	+ – F	Parts Included	In Neutr	318–01 Neutral Bar Assembly al Bar Assembly – Circuit Contacts and Ground Fault


Circuit Breaker
UL Listed
Model HC6 Generators
DFED Spec A and B, DFFB Begin Spec K

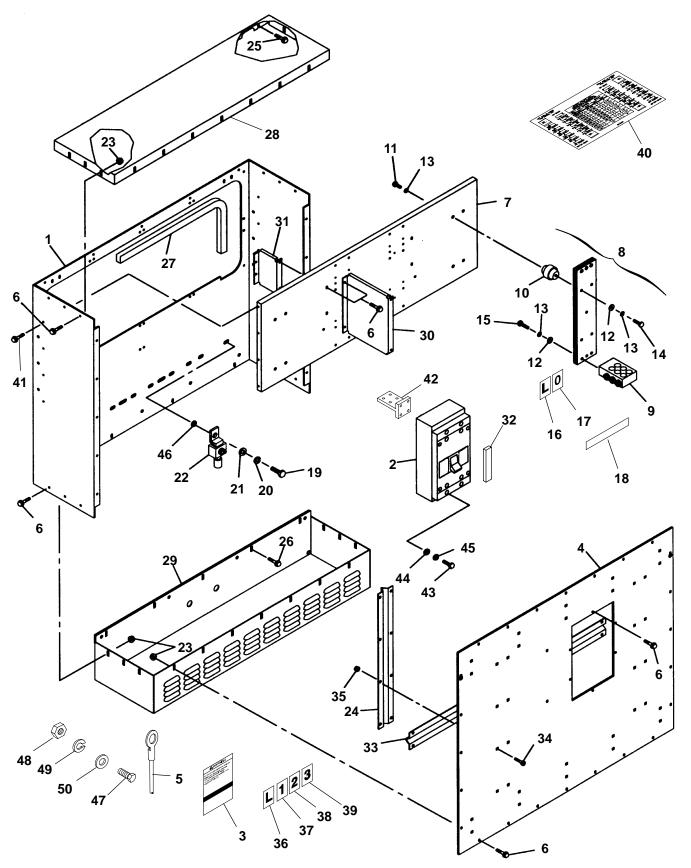

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–1957	1	Box, Circuit Breaker Breaker, Circuit (Includes	27	508–1109	-	Edging – Bulk (Order By The Foot – 3 Feet Required)
			Mounting Screws and Bus	28	319-1961	1	Panel – Top
			Bars) 3 Pole (CB21)	29	319–1925	1	Panel – Bottom
			Standard	30	319–1926–02		Brace, Cover
	320–1783	1	Frame Size CM1600–HH	31	319–2316–02	1	Brace, Mounting Bracket – Circuit Breaker
	320–1783–02	1	Frame Size CM2000–HH With 24 Volt Shunt Trip	32	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 4 Feet Required)
	320-1783-06	1	Frame Size	33	319-2399	2	Brace, Cover (Horizontal)
3	098–2304	1	CM2000–HH Label, Warning	34	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
4	319-1959-01	1	Cover, Circuit Breaker	35	870-0257	36	Nut, Locking (5/16–18)
5	226–4498–03	1	Lead – Circuit Breaker (Quantity Used As	36	098–5854–06	3	Label, Marker (10 Characters Per Card) Marked "L"
			Required) (Without Markings) (#1/0 Wire)	37	098–5854–07	1	Label, Marker (10 Characters Per Card) Marked "1"
6	821–0010	44	Screw, Self-Locking – Hex Washer Head (1/4–20 x	38	098–5854–08	1	Label, Marker (10 Characters Per Card) Marked "2"
7	319–1962	1	1/2") Bracket, Mounting – Circuit	39	098–5854–09	1	Label, Marker (10 Characters Per Card) Marked "3"
•	0.0 .00=	•	Breaker	40	098-6865	1	Label, Conduit Information
8	300–4480–01	1	Bar Assembly, Neutral (Includes Neutral Bars and	41	821–0030	6	Screw, Self-Locking – Hex Washer Head (3/8–16 x 1")
9	332–3303–01	1	Parts Marked *) * Lug, Solderless	42			Bar, Bus (T–Bar) (Includes Mounting Hardware)
10	332-2744-07		* Standoff, Insulator		337–2789	4	Sets With CM1250–HH
11	800–0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")		2.00	·	and CM1600–HH Breakers
12	526-2120	7	* Washer, Flat (M10)		337-2789	1	Sets With CM2000–HH
13	850–2010	11	* Washer, Lock – Spring (M10)				Breakers
14	800-0052	4	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")	43	800-0033	4	Screw, Cap – Hex Head (5/16–18 x 2")
15	800-2089	3	* Screw, Cap – Hex Head	44	526-0115	4	Washer, Flat (5/16")
16	098–5854–06	1	(M10 x 40mm) * Label, Marker – Marked "L"	45	850-0045	4	Washer, Lock – Spring (5/16")
17	098–5854–10		* Label, Marker – Marked "0"	46	856-0010	1	Washer, Lock – EIT (3/8")
18	091–0002	1	* Strip, Copper (Quantity Used As Required)	.0		·	The following four hardware items are used
19	800-0050	1	Screw, Cap – Hex Head (3/8–16 x 1")				to fasten the load leads to the generator and neutral
20	850-0050	1	Washer, Lock – Spring (3/8")				bar. Quantity used as
21	526-0029	2	Washer, Flat (3/8")				required.
22	332–2001	1	Lug, Solderless	47	800-0094	1	Screw, Cap – Hex Head
23	870–0494	26	Nut, Self-Retaining – Floating (1/4–20)	48	862–0005	1	(1/2–13 x 2") Nut, Hex (1/2–13)
24	319–2398	2	Brace, Cover (Vertical)	40 49	850-0060	1	Washer, Lock – Spring (1/2")
25	821–0018	5	Screw, Self-Locking – Hex	50	526–0219	1	Washer, Flat (1/2")
26	821–0011	5	Washer Head (1/4–20 x 5/8") Screw, Self-Locking – Hex Washer Head (1/4–20 x 7/8")	* – F	Parts Included I	n 300–448	30–01 Neutral Bar Assembly

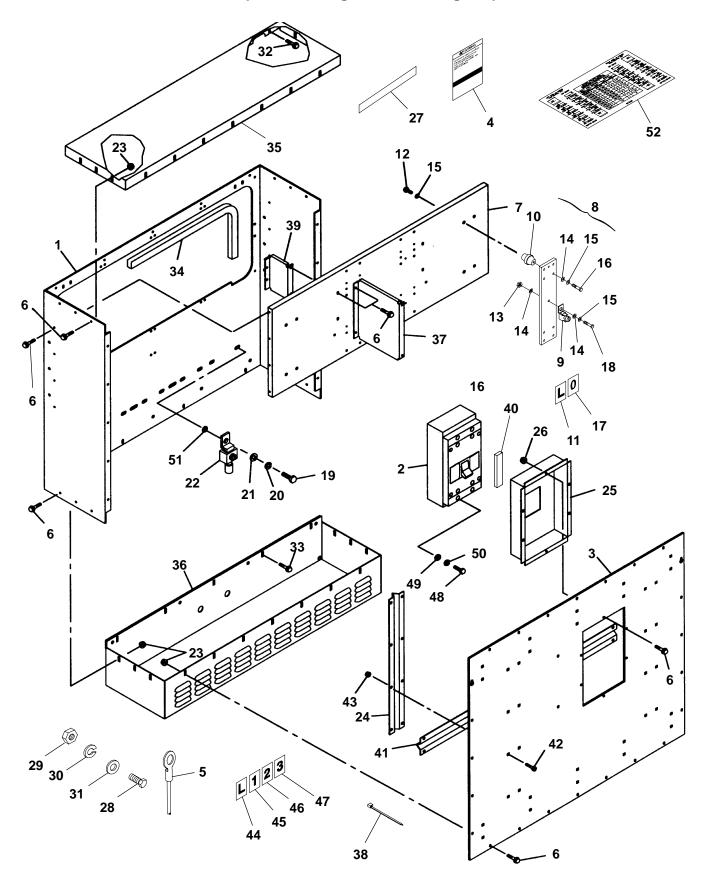


REF NO.	PART NO.	QTY USED)	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–2337	1		Box, Circuit Breaker Breaker, Circuit – With Interchangeable Trip (Includes Lugs and Mounting Screws) (CB21) Three Pole Circuit Breakers		320–1660–34 320–1660–35		With Ground Fault and Adjustable Instantaneous Pickup (G Suffix) 800 Amp 1000 Amp
				Standard		320-1660-36	1	# 1200 Amp
	320-1460-0	9 1	•	400 Amp				# With Ground Fault and
	320-1460-1	0 1	•	450 Amp				Fixed Instantaneous
	320-1460-1	1 1	•	500 Amp				Pickup (NG Suffix)
	320-1460-1	2 1	•	600 Amp		320-1660-34	1	# 800 Amp
	320-1461-0	7 1	#	700 Amp		320-1660-35	1	# 1000 Amp
	320-1461-0)8 1	#	800 Amp		320-1660-36	1	# 1200 Amp
	320-1461-0	9 1	#	1000 Amp				With Ground Fault,
	320-1461-1	0 1	#	1200 Amp				Fixed Instantaneous
				With Bell Alarm				Pickup, and 24 Volt
	320-1656-0)4 1	#	1200 Amp				Shunt Trip (NG Suffix)
				With Auxiliary Contacts		320-1818-36	1	# 1200 Amp
	320-1464-0	9 1	•	400 Amp	3	319-1964	1	Cover, Circuit Breaker
	320-1464-1	0 1	•	450 Amp	4	098-2304	1	Label, Warning
	320-1464-1	1 1	•	500 Amp	5			Lead - Circuit Breaker
	320-1464-1	2 1	•	600 Amp				(Quantity Used As
	320-1465-0	7 1	#	700 Amp				Required) (Without
	320-1465-0)8 1	#	800 Amp				Markings) (#1/0 Wire, 39")
	320-1465-0	9 1	#	1000 Amp		226-4406-03	1	1/2" Ring Terminal
	320-1465-1	0 1	#	1200 Amp				End to 1" Stripped End
				With 24 Volt Shunt Trip		226-4406-04	1	1/2" Ring Terminal
	320-1472-0	9 1	•	400 Amp				End to 1/2" Ring
	320-1472-1	0 1	•	450 Amp				Terminal End
	320-1472-1	1 1	•	500 Amp	6	821-0010	58	Screw, Self-Locking – Hex
	320-1472-1	2 1	•	600 Amp				Washer Head (1/4-20 x
	320-1473-0	7 1	#	700 Amp				1/2")
	320-1473-0)8 1	#	800 Amp	7	319-1963	1	Bracket, Mounting - Circuit
	320-1473-0	9 1	#	1000 Amp				Breaker
	320-1473-1	0 1	#	1200 Amp	8	300-4318-01	1	Bar Assembly, Neutral
				With Auxiliary Contacts and 24 Volt Shunt Trip				(Includes Neutral Bars and Parts Marked *)
	320-1492-0	9 1	•	400 Amp	9	332-2001	3	* Lug, Solderless
	320-1492-1	0 1	•	450 Amp	10	332-2744-07	2	* Standoff, Insulator
	320-1492-1	1 1	•	500 Amp	11	098-5854-06	1	* Label, Marker – Marked "L"
	320-1492-1	2 1	•	600 Amp	12	800-0048	2	* Screw, Cap – Hex Head
	320-1493-0	7 1	#	700 Amp				(3/8-16 x 3/4")
	320-1493-0)8 1	#	800 Amp	13	862-0003	3	* Nut, Hex (3/8")
	320-1493-0	9 1	#	1000 Amp	14	526-0029	8	* Washer, Flat (3/8")
	320-1493-1	0 1	#	1200 Amp	15	850-0050	7	* Washer, Lock – Spring (3/8")
	320-1822-0)1 1	+	700 Amp	16	800-0051	2	* Screw, Cap – Hex Head
	320-1822-0)2 1	+	800 Amp				(3/8-16 x 1-1/4")
	320-1822-0	3 1	+	1000 Amp	17	098-5854-10	1	* Label, Marker – Marked "0"
	320-1822-0)4 1	+	1200 Amp	18	800-0052	3	* Screw, Cap – Hex Head
	000 15			Solid State Microversatrip				(3/8–16 x 1–1/2")
	320-1660-1		#	800 Amp				
	320-1660-1		#	1000 Amp				18–01 Neutral Bar Assembly
	320–1660–1	8 1	#	1200 Amp				o use a Circuit Breaker Cup
				With Fixed Instantane-				Circuit Breaker Cup 319–2431–21
	000 4555 -			ous Pickup (N Suffix)	# Cii	rcuit Breakers th	nat use	Circuit Breaker Cup 319–2431–18
	320-1660-2		#	800 Amp	~	Corred		
	320-1660-2		#	1000 Amp	Con	tinued		
	320–1660–2	27 1	#	1200 Amp				

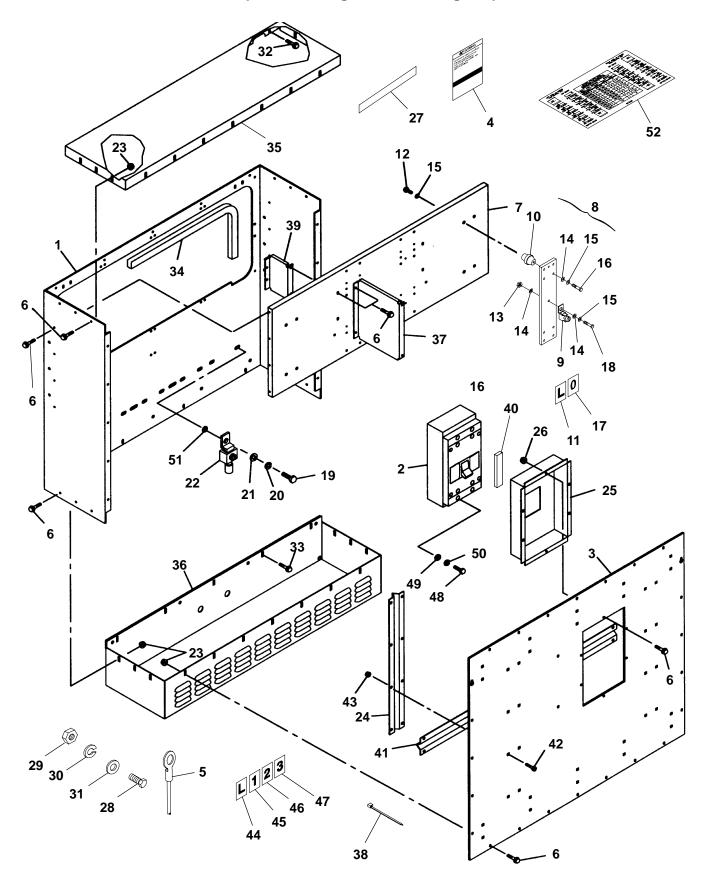

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued						
19	800-0050	1	Screw, Cap – Hex Head (3/8–16 x 1")	38 39	332–1389 319–2316–03	A/R 1	Tie, Cable Brace, Mounting Bracket –
20	850-0050	1	Washer, Lock - Spring (3/8")				Circuit Breaker
21	526-0029	4	Washer, Flat (3/8")	40	895–0182	_	Stripping, Weather – Bulk
22	332–2001	1	Lug, Solderless				(Order By The Foot – 1
23	870–0494	26	Nut, Self-Retaining – Floating (1/4–20)	41	319–2399	2	Foot Required) Brace, Cover (Horizontal)
24 25	319–2398	2	Brace, Cover (Vertical) Cup, Circuit Breaker –	42	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
			Opening Recessed 2–7/8"	43	870-0257	36	Nut, Locking (5/16–18)
	319–2431–21	1	Used with 400, 450, 500, and 600 Amp Circuit	44	098–5854–06	3	Label, Marker (10 Characters Per Card) Marked "L"
	040 0404 40		Breakers	45	098–5854–07	1	Label, Marker (10 Characters
	319–2431–18	3 1	Used With 700, 800, 1000, and 1200 Amp	46	098–5854–08	1	Per Card) Marked "1" Label, Marker (10 Characters
26	870-0212	6	Circuit Breakers Nut, Locking (1/4–20)	47	098–5854–09	1	Per Card) Marked "2" Label, Marker (10 Characters
20 27	091–0002	1	Strip, Copper (Used for	47	090-3034-09	ı	Per Card) Marked "3"
21	091-0002	'	wrapping ends of leads	48			Screw
			before securing to circuit breakers and neutral bar lug) (Quantity Used As Required)	10	812–0157	4	Machine – Round Head (1/4–20 x 1–3/4") Used with 400, 450, 500, and 600 Amp Circuit
			The following four hardware items are used to fasten the load leads to the generator and neutral bar. Quantity used as required.		800–0031	4	Breakers Cap – Hex Head (5/16–18 x 1–1/2") Used With 700, 800, 1000, and 1200 Amp Circuit Breakers
28	800-0094	1	Screw, Cap – Hex Head	49			Washer, Flat
			(1/2–13 x 2")		526-0108	4	1/4" - Used with 400, 450,
29	862-0005	1	Nut, Hex (1/2-13)				500, and 600 Amp Circuit
30	850-0060	1	Washer, Lock – Spring (1/2")				Breakers
31	526-0219	1	Washer, Flat (1/2")		526-0115	4	5/16" - Used With 700,
32	821–0018	5	Screw, Self-Locking – Hex Washer Head (1/4–20 x	50			800, 1000, and 1200 Amp Circuit Breakers
33	821-0011	5	5/8")	50	850-0040	4	Washer, Lock – Spring 1/4" – Used with 400, 450,
33	621-0011	5	Screw, Self-Locking – Hex Washer Head (1/4–20 x 7/8")		650-0040	4	500, and 600 Amp Circuit Breakers
34	508–1109	-	Edging – Bulk (Order By The Foot – 3 Feet Required)		850-0045	4	5/16" – Used With 700, 800, 1000, and 1200
35	319-2336	1	Panel, Top				Amp Circuit Breakers
36	319-2335	1	Panel, Bottom	51	856-0010	1	Washer, Lock – EIT (3/8")
37	319–1926–01	1	Brace, Cover	52	098–6865	1	Label, Conduit Information


Circuit Breaker UL Listed Model HC6 Generators DFED Spec C

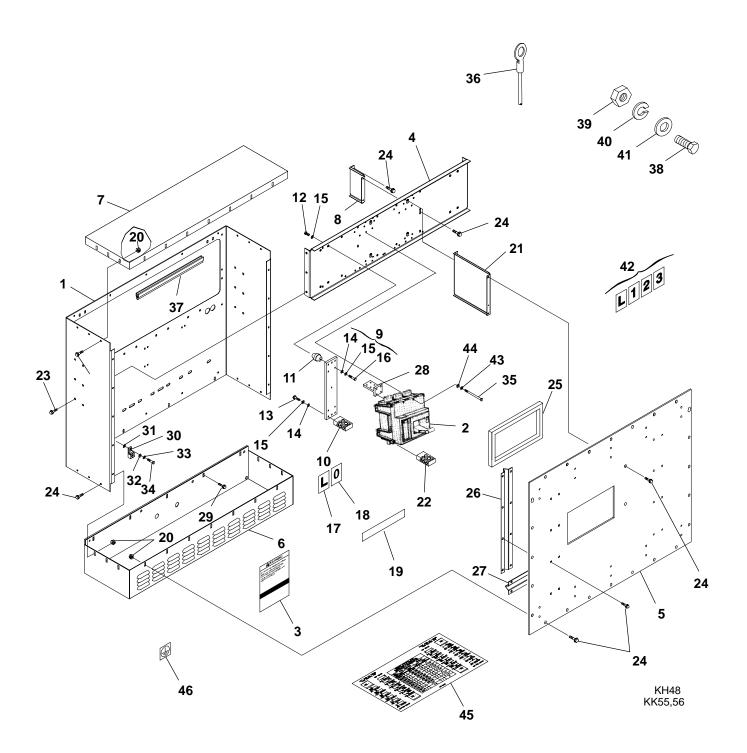

Circuit Breaker UL Listed Model HC6 Generators DFED Spec C

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Circuit Breaker	26	319–3286	2	Brace, Cover (Vertical)
2			Breaker, Circuit – 3 Pole,	27	319-3288	2	Brace, Cover (Horizontal)
			100% Rated (Includes Mounting Screws) Frame	28	337–2789	1	Bar, Bus (T–Bar) (Includes Mounting Hardware)
			Size CM2000–HH Circuit Breakers Include Bus Bars	29	821–2035	5	Screw, Self-Locking – Hex Washer Head (M6 x 25mm)
			(T-bars) (CB21)	30	332-2001	1	Lug, Solderless
	320-1783-02	1	Standard	31	856-0010	1	Washer, Lock - EIT (3/8")
	320-1783-10	1	With Auxiliary	32	526-2120	1	Washer, Flat (M10)
			Contacts, Bell	33	850-2010	1	Washer, Lock – Spring (M10)
			Alarm and 24 Volt Shunt Trip	34	800–2086	1	Screw, Cap – Hex Head (M10 x 25mm)
3	098-2304	1	Label, Warning	35	800-2063	4	Screw, Cap – Hex Head
4	319-3153	1	Bracket, Mounting				(M8 x 50mm)
5	319-3266-01	1	Cover, Circuit Breaker	36	226-4498-03	1	Lead – Circuit Breaker
6	319-1925	1	Panel – Bottom				(Quantity Used As
7	319-1961	1	Panel – Top				Required) (Without
8	319-3253-02	1	Brace, Mounting - Circuit				Markings) (#1/0 Wire, 30")
			Breaker	37	508-1109	_	Edging - Bulk (Order By The
9	300-4480-01	1	Bar Assembly, Neutral				Foot – 3 Feet Required)
			(Includes Neutral Bars and				The following four
			Parts Marked *)				hardware items are used
10	332-3303-01	1	* Lug, Solderless				to fasten the load leads to
11	332-2744-07	4	* Standoff, Insulator				the generator and neutral
12	800-0048	4	* Screw, Cap – Hex Head (3/8–16 x 3/4")				bar. Quantity used as required.
13	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)	38	800–2116	1	Screw, Cap – Hex Head (M12 x 50mm)
14	526-2120	7	* Washer, Flat (M10)	39	860-2010	1	Nut, Hex (M12)
15	850-2010	11	* Washer, Lock - Spring (M10)	40	850-2012	1	Washer, Lock – Spring (M12)
16	800-0052	4	* Screw, Cap - Hex Head	41	526-2140	1	Washer, Flat (M12)
			(3/8–16 x 1–1/2")	42			Label, Marker (10 Characters
17	098-5854-06	1	* Label, Marker – Marked "L"				Per Card) (Quantity Used
18	098-5854-10	1	* Label, Marker – Marked "0"				As Required)
19	091-0002	1	* Strip, Copper (Quantity Used		098-5854-06	3	Marked "L"
			As Required)		098-5854-07	1	Marked "1"
20	870-0504	26	Nut, Self-Retaining (M6)		098-5854-08	1	Marked "2"
21	319-3252-02	1	Brace, Cover		098-5854-09	1	Marked "3"
22	332-3303-01	3	Lug, Solderless	43	850-2008	4	Washer, Lock - Spring (M8)
23	821-6003-02	6	Screw, Self-Locking – Hex	44	526-2100	4	Washer, Flat (M8)
			Washer Head (M8 x 20mm)	45	098-6865	1	Label, Conduit Information
24	821–6002–03	85	Screw, Self-Locking – Hex Washer Head (M6 x 16mm)	46	098–6537	1	Label, Ground
25	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 4 Feet Required)	* – F	Parts Included I	n 300–44	80–01 Neutral Bar Assembly

Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec A, DFFB Begin Spec K

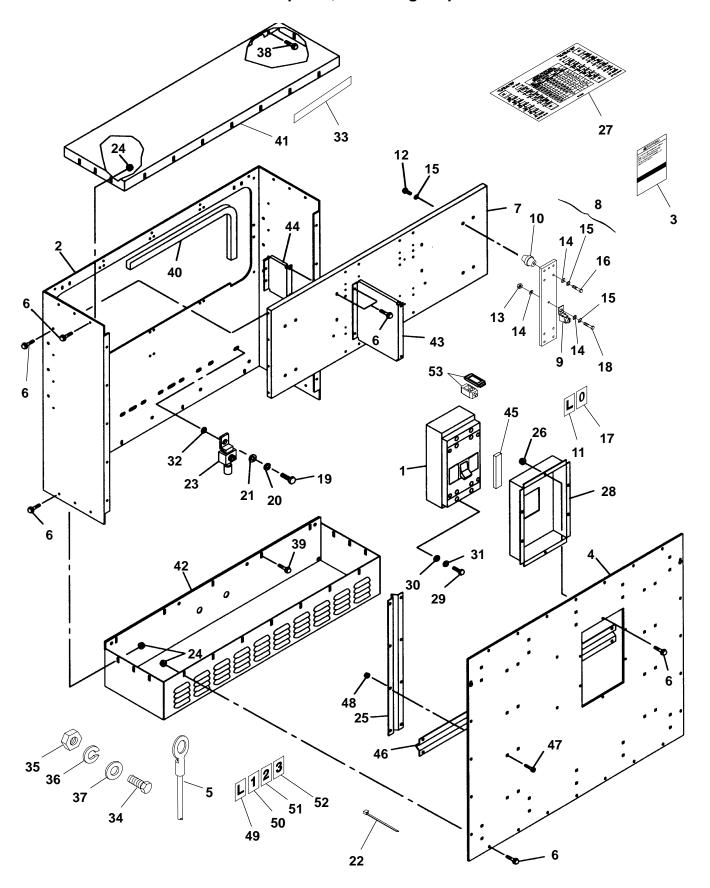


Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec A, DFFB Begin Spec K

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Breaker, Circuit (Includes	28			Cup, Circuit Breaker
			Lugs and Mounting Screws) (CB21)		319–2431–19	1	800 Amp Circuit Breaker – Opening Recessed 3–7/8"
			Three Pole Breakers		319-2431-20	1	1000 Amp Circuit Breaker –
	320-1728-02 320-1728-03		500 Amp 630 Amp				Opening Recessed 2–13/16"
	320-1729-03		800 Amp	29	800-0033	4	Screw, Cap – Hex Head
	320-1730-03		1000 Amp				(5/16–18 x 2")
	320–1730–04	· 1	1250 Amp	30	526-0115	4	Washer, Flat (5/16")
	320-1728-05	1	Four Pole Breakers 500 Amp	31	850–0045	4	Washer, Lock – Spring (5/16")
	320-1728-06		630 Amp	32	856-0010	1	Washer, Lock – EIT (3/8")
	320-1729-06		800 Amp	33	091-0002	1	Strip, Copper (Used for
	320-1730-07		1000 Amp				wrapping ends of leads
_	320-1730-08		1250 Amp				before securing to circuit
2	319–2337	1	Box, Circuit Breaker				breakers and neutral bar
3	098–2304	1	Label, Warning				lug) (Quantity Used As
4 5	319–1964 226–4406–04	. 1 . 1	Cover, Circuit Breaker Lead – Circuit Breaker				Required) The following four hardware
3	220-4400-04		(Quantity Used As				items are used to fasten
			Required) (Without				the load leads to the
			Markings) (#1/0 Wire, 39")				generator and neutral bar.
			1/2" Ring Terminal End to				Quantity used as required.
			1/2" Ring Terminal End	34	800–0092	1	Screw, Cap – Hex Head
6	821–0010	58	Screw, Self-Locking – Hex		000 0010		(1/2–13 x 1–1/2")
7	240 4062	4	Washer Head (1/4–20 x 1/2")	35	862-0016	1	Nut, Hex (1/2–13)
7	319–1963	1	Bracket, Mounting – Circuit	36 37	850–0060 526–0219	1 1	Washer, Lock – Spring (1/2") Washer, Flat (1/2")
8	300-4318-01	1	Breaker Bar Assembly, Neutral –	38	821–0018	5	Screw, Self-Locking – Hex
O	300 4010 01	'	Used on Some 3 Pole	50	021 0010	J	Washer Head (1/4–20 x 5/8")
			Circuit Breakers and	39	821-0011	5	Screw, Self-Locking – Hex
			Disconnect Switches				Washer Head (1/4-20 x 7/8")
			(Includes Neutral Bars and	40	508-1109	-	Edging – Bulk (Order By The
•	000 0004	•	Parts Marked *)	4.4	040 0000		Foot – 3 Feet Required)
9	332–2001	3	* Lug, Solderless	41	319–2336	1	Panel – Top
10 11	332–2744–07 098–5854–06		* Standoff, Insulator* Label, Marker – Marked "L"	42 43	319–2335 319–1926–01	1 1	Panel – Bottom Brace, Cover
12	800-0048	2	* Screw, Cap – Hex Head	44	319–1920–01	1	Brace, Mounting Bracket –
12	000 0040	_	(3/8–16 x 3/4")		010 2010 00	•	Circuit Breaker
13	862-0003	3	* Nut, Hex (3/8")	45	895-0182	_	Stripping, Weather - Bulk
14	526-0029	8	* Washer, Flat (3/8")				(Order By The Foot – 1
15	850-0050	7	* Washer, Lock – Spring (3/8")				Foot Required)
16	800–0051	2	* Screw, Cap – Hex Head	46	319–2399	2	Brace, Cover (Horizontal)
47	000 5054 40		(3/8–16 x 1–1/4")	47	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
17 18	098–5854–10 800–0052	1 3	* Label, Marker – Marked "0"* Screw, Cap – Hex Head	48 49	870–0257 098–5854–06	36 3	Nut, Locking (5/16–18)
10	000-0032	3	(3/8–16 x 1–1/2")	43	090-3034-00	3	Label, Marker (10 Characters Per Card) Marked "L"
19	800-0050	1	Screw, Cap – Hex Head	50	098-5854-07	1	Label, Marker (10 Characters
		-	(3/8–16 x 1")			•	Per Card) Marked "1"
20	850-0050	1	Washer, Lock – Spring (3/8")	51	098-5854-08	1	Label, Marker (10 Characters
21	526-0029	4	Washer, Flat (3/8")				Per Card) Marked "2"
22	332–1389	1	Tie, Cable	52	098–5854–09	1	Label, Marker (10 Characters
23	332–2001	1	Lug, Solderless				Per Card) Marked "3"
24	870–0494	26	Nut, Self-Retaining – Floating	53			Lug Set (Packaged in Sets –
25	319–2398	2	(1/4–20) Brace, Cover (Vertical)				Two Lugs Per Set) (Quantity Used As Required)
26	870–0212	6	Nut, Locking (1/4–20)		320-1755-16	1	800 Amp Circuit Breaker
27	098–6865	1	Label, Conduit Information		320-1755-15	i 1	1000 Amp Circuit Breaker
							•

^{* -} Parts Included In 300-4318-01 Neutral Bar Assembly


Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec B

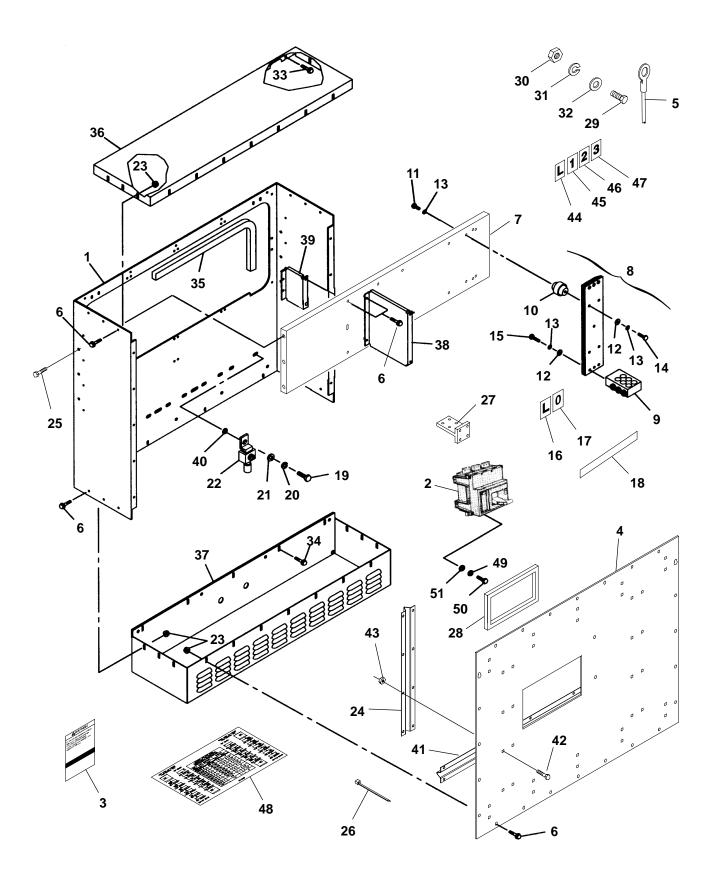

Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec B

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–1957	1	Box, Circuit Breaker	27	337–2789	4	Bar, Bus (T-Bar) (Includes
2	320-1699	1	Breaker, Circuit - Three Pole				Mounting Hardware)
			(Includes Mounting Screws) (CB21) Frame Size CM1600	28	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 4 Feet Required)
3	098-2304	1	Label, Warning				The following four
4	319-1959-01	1	Cover, Circuit Breaker				hardware items are used
5	226-4498-03	3 1	Lead – Circuit Breaker				to fasten the load leads to
			(Quantity Used As				the generator. Quantity
			Required) 30" (Without				used as required.
			Markings) (#1/0 Wire)	29	800-0094	1	Screw, Cap – Hex Head
6	821-0010	44	Screw, Self-Locking – Hex				(1/2–13 x 2")
			Washer Head (1/4–20 x	30	862-0005	1	Nut, Hex (1/2-13)
			1/2")	31	850-0060	1	Washer, Lock – Spring (1/2")
7	319–1962	1	Bracket, Mounting – Circuit	32	526-0219	1	Washer, Flat (1/2")
			Breaker	33	821-0018	5	Screw, Self-Locking – Hex
8	300-4480-01	1	Bar Assembly, Neutral				Washer Head (1/4-20 x 5/8")
			(Includes Neutral Bars and	34	821–0011	5	Screw, Self-Locking – Hex
			Parts Marked *) (Used With				Washer Head (1/4–20 x 7/8")
			3 Pole Circuit Breakers)	35	508–1109	_	Edging – Bulk (Order By The
9	332–3303–01		* Lug, Solderless				Foot – 3 Feet Required)
10	332-2744-07		* Standoff, Insulator	36	319–1961	1	Panel – Top
11	800–0048	4	* Screw, Cap – Hex Head	37	319–1925	1	Panel – Bottom
			(3/8–16 x 3/4")	38	319–1926–02	1	Brace, Cover
12	526–2120	7	* Washer, Flat (M10)	39	319–2316–02	1	Brace, Mounting - Circuit
13	850–2010	11	* Washer, Lock - Spring (M10)				Breaker Bracket
14	800–0052	4	* Screw, Cap – Hex Head	40	856–0010	1	Washer, Lock – EIT (3/8")
		_	(3/8–16 x 1–1/2")	41	319–2399	2	Brace, Cover (Horizontal)
15	800–2089	3	* Screw, Cap – Hex Head (M10 x 40mm)	42	816–0098	36	Bolt, Carriage (5/16–18 x 5/8")
16	098-5854-06		* Label, Marker – Marked "L"	43	870-0257	36	Nut, Locking (5/16–18)
17	098-5854-10) 1	* Label, Marker – Marked "0"	44	098–5854–06	3	Label, Marker (10 Characters
18	091–0002	1	* Strip, Copper (Quantity Used				Per Card) Marked "L"
			As Required)	45	098–5854–07	1	Label, Marker (10 Characters
19	800-0050	1	Screw, Cap – Hex Head				Per Card) Marked "1"
			(3/8–16 x 1")	46	098–5854–08	1	Label, Marker (10 Characters
20	850-0050	1	Washer, Lock – Spring (3/8")				Per Card) Marked "2"
21	526-0029	2	Washer, Flat (3/8")	47	098–5854–09	1	Label, Marker (10 Characters
22	332–2001	1	Lug, Solderless				Per Card) Marked "3"
23	870-0494	26	Nut, Self-Retaining – Floating	48	098–6865	1	Label, Conduit Information
			(1/4–20)	49	850-0045	4	Washer, Lock – Spring
24	319–2398	2	Brace, Cover (Vertical)				(5/16")
25	821–0030	6	Screw, Self-Locking – Hex	50	800–0033	4	Screw, Cap – Hex Head
			Washer Head (3/8-16 x 1")				(5/16–18 x 2")
26	332–1389	A/R	Tie, Wire	51	526–0115	4	Washer, Flat (5/16")


Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec C

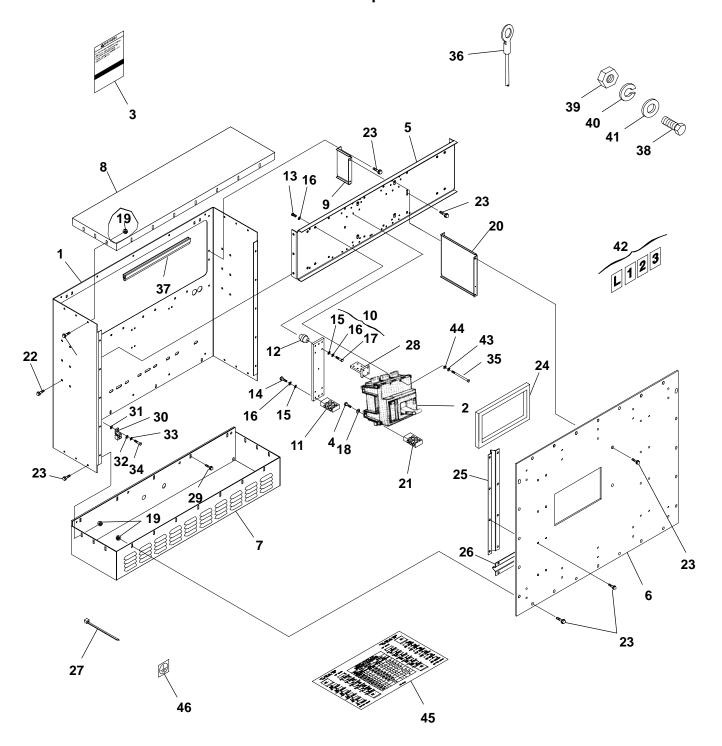

Circuit Breaker IEC Conformity Model HC6 Generators DFED Spec C


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3184	1	Box, Circuit Breaker	26	319–3288	2	Brace, Cover (Horizontal)
2	320-1699-02	1	Breaker, Circuit - Standard	27	332-1389	A/R	Tie, Wire
			(Includes Mounting Screws) (CB21)	28	337–2789	1	Bar, Bus (T-Bar) (Includes Mounting Hardware)
3 4	098–2304 800–2089	1 9	Label, Warning Screw, Cap – Hex Head	29	821–2035	5	Screw, Self-Locking – Hex Washer Head (M6 x 25mm)
			(M10 x 40mm)	30	332-2001	1	Lug, Solderless
5	319-3153	1	Bracket, Mounting	31	856-0010	1	Washer, Lock – EIT (3/8")
6	319-3266-01	1	Cover, Circuit Breaker	32	526-2120	1	Washer, Flat (M10)
7	319-1925	1	Panel – Bottom	33	850-2010	1	Washer, Lock - Spring (M10)
8	319-1961	1	Panel – Top	34	800-2086	1	Screw, Cap - Hex Head
9	319-3253-02	1	Brace, Mounting - Circuit				(M10 x 25mm)
			Breaker	35	800-2063	4	Screw, Cap - Hex Head (M8
10	300-4480-01	1	Bar Assembly, Neutral				x 50mm)
			(Includes Neutral Bars,	36	226-4498-03	1	Lead - Circuit Breaker
			Labels and Parts Marked *)				(Quantity Used As
			(Used With 3 Pole Circuit				Required) 30" (Without
			Breakers)				Markings) (#1/0 Wire)
11	332-3303-01	1	* Lug, Solderless	37	508-1109	_	Edging – Bulk (Order By The
12	332-2744-07	4	* Standoff, Insulator				Foot – 3 Feet Required)
13	800-0048	4	* Screw, Cap – Hex Head				The following four
			(3/8-16 x 3/4")				hardware items are used
14	800-2089	3	* Screw, Cap – Hex Head				to fasten the load leads to
			(M10 x 40mm)				the generator. Quantity
15	526-2120	7	* Washer, Flat (M10)				used as required.
16	850-2010	11	* Washer, Lock – Spring (M10)	38	800–2116	1	Screw, Cap – Hex Head
17	800-0052	4	* Screw, Cap – Hex Head				(M12 x 50mm)
			(3/8–16 x 1–1/2")	39	860-2010	1	Nut, Hex (M12)
18	850-2010	9	Washer, Lock – Spring (M10)	40	850-2012	1	Washer, Lock – Spring (M12)
19	870-0504	26	Nut, Self-Retaining (M6)	41	526-2140	1	Washer, Flat (M12)
20	319-3252-02	. 1	Brace, Cover	42			Label, Marker (10 Characters
21	332-3303-01	3	Lug, Solderless				Per Card) (Quantity Used
			Sets With 3 Pole Circuit				As Required)
22	821–6003–02	6	Screw, Self-Locking – Hex		098–5854–06	-	Marked "L"
			Washer Head (M8 x 20mm)		098-5854-07	' 1	Marked "1"
23			Screw, Self-Locking – Hex		098–5854–08		Marked "2"
			Washer Head (M6 x 16mm)		098–5854–09		Marked "3"
	821-6002-03	89	Sets With 3 Pole Circuit	43	850-2008	4	Washer, Lock – Spring (M8)
			Breakers	44	526–2100	4	Washer, Flat (M8)
	821-6002-03	81	Sets With 4 Pole Circuit	45	098–6865	1	Label, Conduit Information
			Breakers	46	098–6537	1	Label, Ground
24	895–0182	-	Stripping, Weather – Bulk				
			(Order By The Foot – 4				
			Feet Required)	* – F	Parts Included I	n 300–44	80-01 Neutral Bar Assembly
25	319–3286	2	Brace, Cover (Vertical)				

Disconnect Switch Molded Case UL Listed Model HC5 Generators DFED Spec A and B

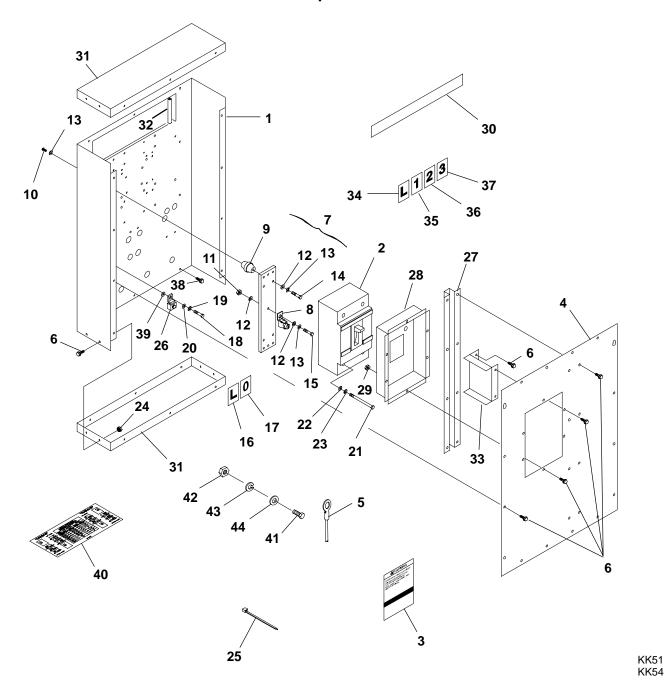


Disconnect Switch Molded Case UL Listed Model HC5 Generators DFED Spec A and B

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–2432	1	Box, Disconnect Switch	23			Washer, Lock - Spring
2			Switch, Disconnect - 3 Pole		850-0040	4	1/4" - 600 Amp Switches
			(Includes Line and Load		850-0045	4	5/16" - 800 to 1200 Amp
			Lugs) (CB21)				Switches
	320–1906–18	1	600 Amp	24	870–0494	16	Nut, Self-Retaining (1/4–20)
	320–1906–19	1	800 Amp	25	332–1389	A/R	Tie, Cable
	320-1906-20	1	1000 Amp	26	332–2001	1	Lug, Solderless
•	320-1906-21	1	1200 Amp	27	319–1918	1	Brace, Cover
3	098–2304	1	Label, Warning Cover	28	240 2424 44		Cup, Disconnect Switch
4 5	319–1917	1			319–2431–13	3 1	Opening Recessed 4–7/8"
5			Lead, Disconnect Switch (Quantity Used As Required)		319–2431–14	4 1	(600 Amp Switches) Opening Recessed 3–1/2"
			39" (Without Markings)		313-2431-1-	+ 1	(800 to 1200 Amp Switches)
			(#1/0 Wire)	29	870-0212	6	Nut, Locking (1/4–20)
	226-4406-03	1	1/2" Ring Terminal End to	30	091–0002	1	Strip, Copper (Used for
		•	1" Stripped End		00. 000_	•	wrapping end of leads
	226-4406-04	1	1/2" Ring Terminal End to				before securing to
			1/2" Ring Terminal End				disconnect switches)
6	821-0010	40	Screw, Self-Locking – Hex				(Quantity Used As
			Washer Head (1/4-20 x 1/2")				Required)
7	300–4318–01	1	Bar Assembly, Neutral	31	319–1915	2	Panel
			(Includes Parts Marked *)	32	508-1092	_	Edging – Bulk (Order By The
8	332–2001	3	* Lug, Solderless				Foot – 3 Feet Required)
9	332-2744-07	2	* Standoff, Insulator	33	319–1927	1	Brace, Cover
10	800–0048	2	* Screw, Cap – Hex Head (3/8–16 x 3/4")	34	098–5854–06		Label, Marker (10 Characters Per Card) Marked "L"
11	862-0003	3	* Nut, Hex (3/8")	35	098–5854–07	7 1	Label, Marker (10 Characters
12	526-0029	8	* Washer, Flat (3/8")				Per Card) Marked "1"
13	850-0050	7	* Washer, Lock – Spring (3/8")	36	098–5854–08	3 1	Label, Marker (10 Characters
14	800–0051	2	* Screw, Cap – Hex Head	0.7	000 5054 00		Per Card) Marked "2"
4.5	000 0050	•	(3/8–16 x 1–1/4")	37	098–5854–09	9 1	Label, Marker (10 Characters
15	800–0052	3	* Screw, Cap – Hex Head	38	821-0018	5	Per Card) Marked "3" Screw, Self-Locking – Hex
16	098-5854-06	1	(3/8–16 x 1–1/2") * Label, Marker – Marked "L"	36	021-0010	5	Washer Head (1/4–20 x 5/8")
17	098-5854-10	1	* Label, Marker – Marked "0"	39	856-0010	1	Washer, Lock – EIT (3/8")
18	800-0050	1	Screw, Cap – Hex Head	40	098–6832	1	Label, Conduit Information
	000 0000	•	(3/8–16 x 1")	.0	000 0002	•	The following four
19	850-0050	1	Washer, Lock - Spring (3/8")				hardware items are used
20	526-0029	1	Washer, Flat (3/8")				to fasten the load leads to
21			Screw				the generator and neutral
	812-0157	4	Machine – Round Head				bar. Quantity used as
			(1/4–20 x 1–3/4") 600				required.
		_	Amp Switches	41	800–0094	1	Screw, Cap – Hex Head
	800–0031	4	Cap – Hex Head				(1/2–13 x 2")
			(5/16–18 x 1–1/2") 800 to	42	862-0005	1	Nut, Hex (1/2–13)
22			1200 Amp Switches	43	850-0060	1	Washer, Lock – Spring (1/2")
22	526_0109	1	Washer, Flat 1/4" – 600 Amp Switches	44	526–0219	1	Washer, Flat (1/2")
	526–0108 526–0115	4 4	5/16" – 800 Amp Switches	* _ [Parte Included	In 300_42	18–01 Neutral Bar Assembly
	020-0110	7	Switches	– F	arts moluueu	III JUU -4 3	10-01 Neutral Dal Assembly

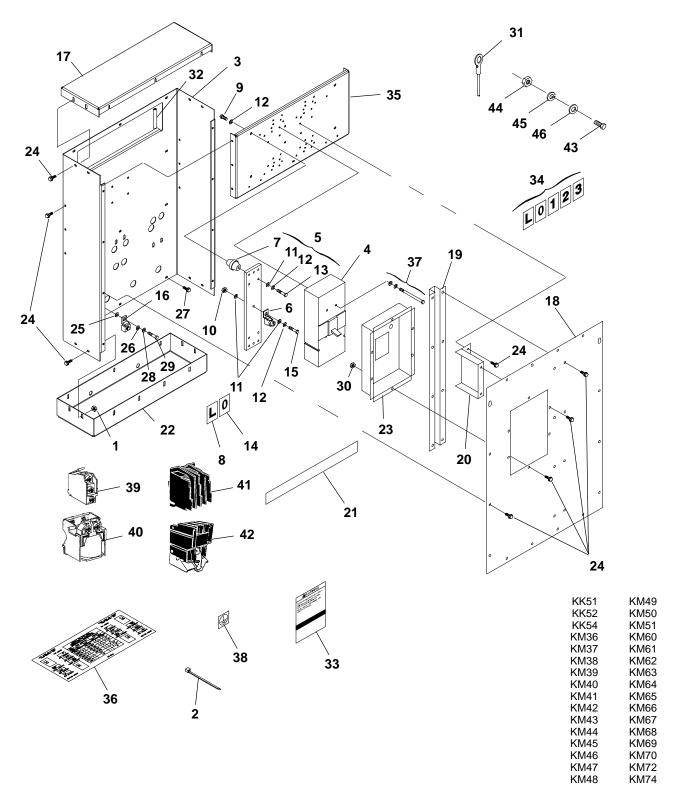


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1 2 3 4	870–0504 332–1389 319–3169	16 A/R 1	Nut, Self-Retaining (M6) Tie, Wire Box, Circuit Breaker The following listed Circuit	5	300–4318–01	1	Bar Assembly, Neutral – Used on Some 3 Pole Circuit Breakers and Disconnect Switches
			Breakers and Disconnect Switches include lugs and				(Includes Neutral Bars and Parts Marked *)
			mounting hardware.	6	332-2001	3	* Lug, Solderless
			Circuit Breakers	7	332-2744-07	2	* Standoff, Insulator
			3 Pole (UL, IEC)	8	098-5854-06	1	* Label, Marker – Marked "L"
	320-1959-0	7 1	100 Amp	9	800-0048	2	* Screw, Cap – Hex Head
	320-1959-0	5 1	150 Amp				(3/8–16 x 3/4")
	320-1959-0	4 1	175 Amp	10	862-0003	3	* Nut, Hex (3/8")
	320-1959-0		200 Amp	11	526-0029	8	* Washer, Flat (3/8")
	320-1959-0		225 Amp	12	850-0050	7	* Washer, Lock – Spring (3/8")
	320-1959-0	1 1	250 Amp	13	800–0051	2	* Screw, Cap – Hex Head
	320-1963-0		300 Amp				(3/8–16 x 1–1/4")
	320-1960-0	5 1	350 Amp	14	098–5854–10	1	* Label, Marker – Marked "0"
			400 Amp	15	800-0052	3	* Screw, Cap – Hex Head
	320-1963-0		DFEC Spec F				(3/8–16 x 1–1/2")
	320-1960-0	4 1	DFEB Begin Spec P	16	332–2001	1	Lug, Solderless
			DFEC Begin Spec H	17	319–1915	1	Panel – Top
			DFED Begin Spec E	18			Cover
	320–1960–0	3 1	450 Amp		319–1917	1	All Except 4 Pole Switches
			500 Amp				Mounted on the Right Side
	320-1963-0		DFEB Spec M				When Facing Control
	320–1960–0	2 1	DFEB Begin Spec P		319–2463	1	4 Pole Switches Mounted on
			DFEC Begin Spec H				the Right Side When
			DFED Begin Spec E	40	040 0004		Facing Control
	000 1000 0		600 Amp	19	319–3284	1	Brace, Cover
	320–1963–0	1 1	DFEB Spec M	20	319–3333	1	Brace, Cover
	320–1960–0	1 1	DFEC Spec F DFEB Begin Spec N DFEC Begin Spec G	21	091–0002	1	Strip, Copper (Used for wrapping end of leads before securing to circuit breakers
			DFED Begin Spec D				and disconnect switches)
	320-1964-0	5 1	700 Amp				(Quantity Used As Required)
	320-1964-0	4 1	800 Amp	22	319–3183	1	Panel – Bottom
	320-1964-0	3 1	900 Amp	23			Cup
	320-1964-0	2 1	1000 Amp		319–2431–26	1	2-7/8" x 4" Opening
	320-1964-0	1 1	1200 Amp		319–2431–27	1	1–7/32" x 3" Opening
			4 Pole (IEC)		319–2431–29	1	1–31/32" x 3–5/16" Opening
	320-1964-0		800 Amp		319–2431–30	1	3-5/16" x 4-3/8" Opening
	320-1964-0		1000 Amp		319–2431–31	1	2-1/2" x 4-9/16" Opening
	320-1964-0	6 1	1250 Amp	24	821–6002–03	53	Screw, Self-Locking – Hex
			Disconnect Switches				Washer Head (M6 x 16mm)
			3 Pole (UL, IEC)	25	856–0010	1	Washer, Lock – EIT (3/8")
			400 Amp	26	526–2120	1	Washer, Flat (M10)
	320–1990–0	2 1	DFEB Begin Spec N DFEC Begin Spec G	27	821–2034	2	Screw, Self-Locking – Hex Washer Head (M6 x 20mm)
			DFED Begin Spec D	28 29	850–2010	1	Washer, Lock – Spring (M10)
	320-1991-0	1 1	600 Amp	29	800–2088	1	Screw, Cap – Hex Head
	320-1991-0	1 1	DFEB Spec M DFEC Spec F DFED Spec C	30	870–2054	4	(M10 x 35mm) Nut, Hex – Flange (M6)
	320-1990-0	1 1	DFEB Begin Spec P				
			DFEC Begin Spec H DFED Begin Spec E			n 300–4	318–01 Neutral Bar Assembly
	320-1992-0		800 Amp	Con	tinued		
	320–1992–0	1 1	1200 Amp				

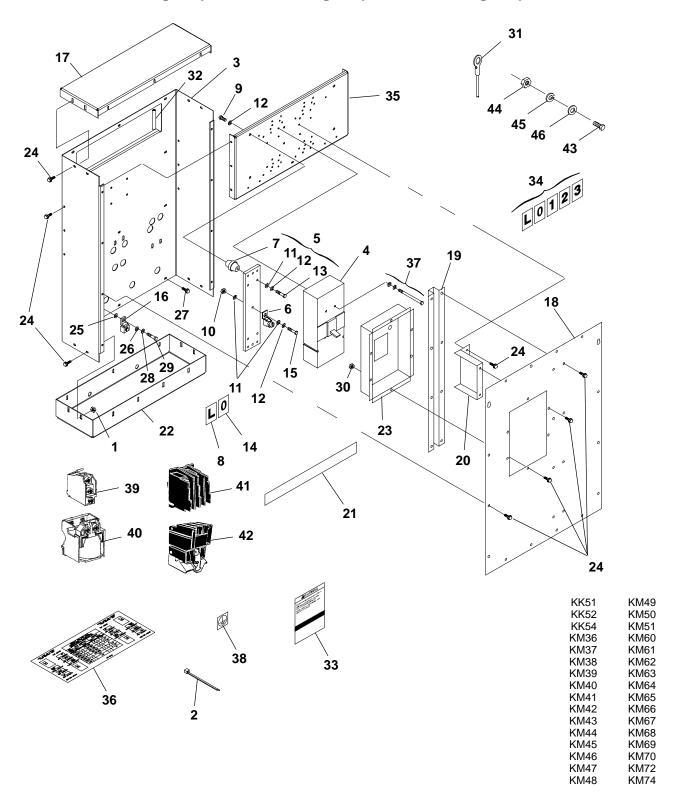

Continued...

31 226–440	6–03 1	Lead (Quantity Used As Required) 39" (Without Markings) (#1/0 Wire) 1/2" Ring Terminal End to	38	098–6537	1	Label, Ground Accessories, Circuit Breaker: The following are used on 320–1960–XX
226–440	6–04 1	1" Stripped End 1/2" Ring Terminal End to 1/2" Ring Terminal End	39	320–1981–01	2	Circuit Breakers Switch – Used as a Trip Alarm or Auxiliary Contact
32 508–109	2 –	Edging – Bulk (Order By The Foot – 3 Feet Required)	40	320–1981–03	1	24 Volt Shunt Trip Accessories, Circuit
33 098–230 34	4 1	Label, Warning Label, Marker (10 Characters Per Card) (Quantity Used As Required)				Breaker: The following are used on 320–1963–XX and 320–1964–XX Circuit Breakers
098–585	4–06 1	Marked "L"	41	320-1977-01	1	Switches – Includes 1
098–585	4–07 1	Marked "1"				Trip Alarm and 1
098–585		Marked "2"				Auxiliary Contact
098–585		Marked "3"	42	320–1977–03	1	24 Volt Shunt Trip
098–585	-	Marked "0"				The following four
35 319–332	-	Bracket, Mounting				hardware items are used
36 098–683	2 1	Label, Conduit Information				to fasten the load leads to
37		Package, Hardware – Mounting (Includes Screws, Nuts and Lock Washers – 1				the generator and neutral bar. Quantity used as required.
		Package Required Per Switch)	43	800–2116	1	Screw, Cap – Hex Head (M12 x 50mm)
320-198	6–07 1	Used With 320-1960-XX	44	860-2010	1	Nut, Hex (M12)
		Circuit Breakers and	45	850-2012	1	Washer, Lock - Spring (M12)
		320–1990–XX Disconnect Switch	46	526–2140	1	Washer, Flat (M12)
320–198	6–02 1	Used With 320–1963–XX Circuit Breakers and 320–1991–XX Disconnect Switch				
320–198	6–01 1	Used With 320–1964–XX Circuit Breakers and 320–1992–XX Disconnect Switches				


Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity Model HC6 Generators DFED Spec C

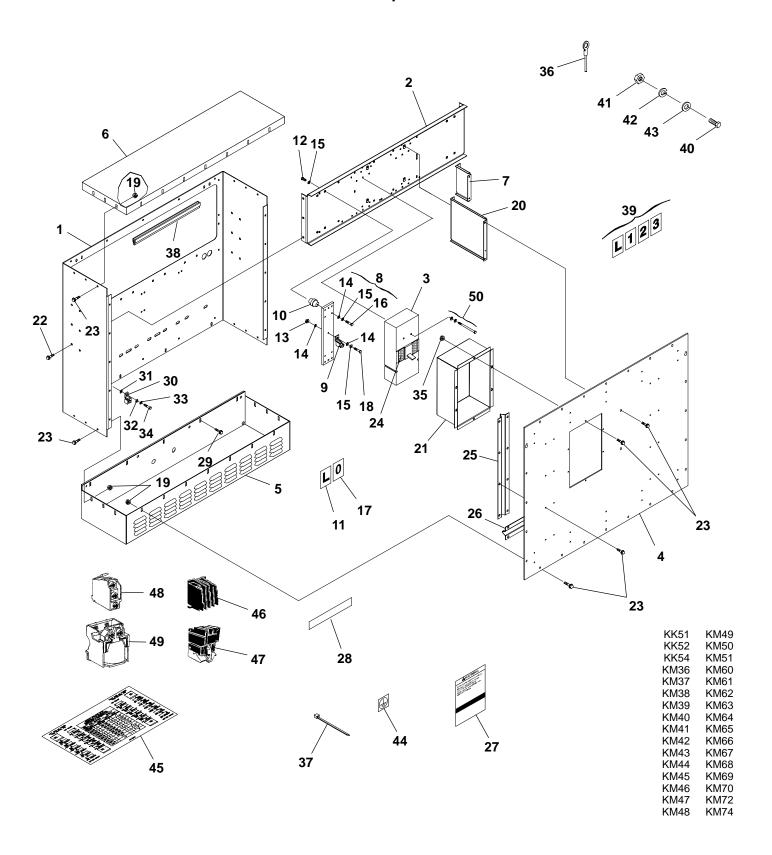

Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity Model HC6 Generators DFED Spec C

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1 2 3	319–3184 319–3153	1 1	Box, Circuit Breaker Bracket, Mounting The following listed Circuit	24	895–0182	-	Stripping, Weather – Bulk (Order By The Foot – 1 Foot Required)
3			Breakers and Disconnect	25	319–3286	2	Brace, Cover (Vertical)
			Switches include lugs and	26	319–3288	2	Brace, Cover (Vertical) Brace, Cover (Horizontal)
			mounting hardware.	27	098–2304	1	Label, Warning
			Circuit Breakers	28	091–0002	1	Strip, Copper (Used for
			3 Pole (UL, IEC)		00. 000_	•	wrapping end of leads
	320-1970-03	1	200 Amp				before securing to circuit
	320-1970-02	1	225 Amp				breakers and disconnect
	320-1970-01	1	250 Amp				switches) (Quantity Used
	320-1963-06	1	300 Amp				As Required)
	320-1963-04	1	400 Amp	29	821-2034	5	Screw, Self-Locking – Hex
	320-1963-03		450 Amp				Washer Head (M6 x 20mm)
	320-1963-01		600 Amp	30	332–2001	1	Lug, Solderless
	320-1964-05		700 Amp	31	856–0010	1	Washer, Lock - EIT (3/8")
	320-1964-04		800 Amp	32	526–2120	1	Washer, Flat (M10)
	320-1964-03		900 Amp	33	850–2010	1	Washer, Lock – Spring (M10)
	320-1964-02		1000 Amp	34	800–2086	1	Screw, Cap – Hex Head
	320–1964–01	1	1200 Amp	25	070 0054	•	(M10 x 25mm)
			Disconnect Switches	35	870–2054	6	Nut, Hex – Flange (M6)
	220 1001 01	1	3 Pole (UL, IEC) 600 Amp	36			Lead (Quantity Used As Required) 39" (Without
	320–1991–01 320–1992–02		800 Amp				Markings) (#1/0 Wire)
	320-1992-01	1	1200 Amp		226-4406-03	1	1/2" Ring Terminal End to
4	319–3300	1	Cover		220 4400 00	'	1" Stripped End
5	319–1925	1	Panel – Bottom		226-4406-04	1	1/2" Ring Terminal End to
6	319–1961	1	Panel – Top		220 1100 01	•	1/2" Ring Terminal End
7	319–3253–01	1	Brace, Cover	37	332-1389	A/R	Tie, Wire
8	300-4318-01	1	Bar Assembly, Neutral –	38	508-1109	_	Edging – Bulk (Order By The
			Used on 3 Pole Circuit				Foot – 3 Feet Required)
			Breakers and Disconnect	39			Label, Marker (10 Characters
			Switches (Includes Neutral				Per Card) (Quantity Used
			Bars and Parts Marked *)				As Required)
9	332–2001	3	* Lug, Solderless		098–5854–06	1	Marked "L"
10	332-2744-07		* Standoff, Insulator		098–5854–07	1	Marked "1"
11	098–5854–06		* Label, Marker – Marked "L"		098–5854–08	1	Marked "2"
12	800–0048	2	* Screw, Cap – Hex Head		098–5854–09	1	Marked "3"
13	862-0003	3	(3/8–16 x 3/4") * Nut, Hex (3/8")				The following four hardware items are used
14	526–0029	8	* Washer, Flat (3/8")				to fasten the load leads to
15	850-0029	7	* Washer, Lock – Spring (3/8")				the generator and neutral
16	800–0051	2	* Screw, Cap – Hex Head				bar. Quantity used as
	000 0001	_	(3/8–16 x 1–1/4")				required.
17	098-5854-10	1	* Label, Marker – Marked "0"	40	800-2114	1	Screw, Cap – Hex Head
18	800-0052	3	* Screw, Cap – Hex Head				(M12 x 40mm)
			(3/8–16 x 1–1/2")	41	860-2010	1	Nut, Hex (M12)
19			Nut, Self-Retaining (M6)	42	850-2012	1	Washer, Lock - Spring (M12)
	870-0504	26	300-630 Amp Circuit	43	526-2140	1	Washer, Flat (M12)
			Breakers	44	098–6537	1	Label, Ground
	870–0504	30	700–1250 Amp Circuit Breakers	45	098–6865	1	Label, Conduit Information
20	319-3252-01	1	Brace, Cover				
21	319–2431–28		Cup	* – F	Parts Included Ir	า 300–43	18–01 Neutral Bar Assembly
22	821–6003–02		Screw, Self-Locking – Hex Washer Head (M8 x 20mm)	Con	tinued		
23	821–6002–03	91	Screw, Self-Locking – Hex Washer Head (M6 x 16mm)				

Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity Model HC6 Generators DFED Spec C

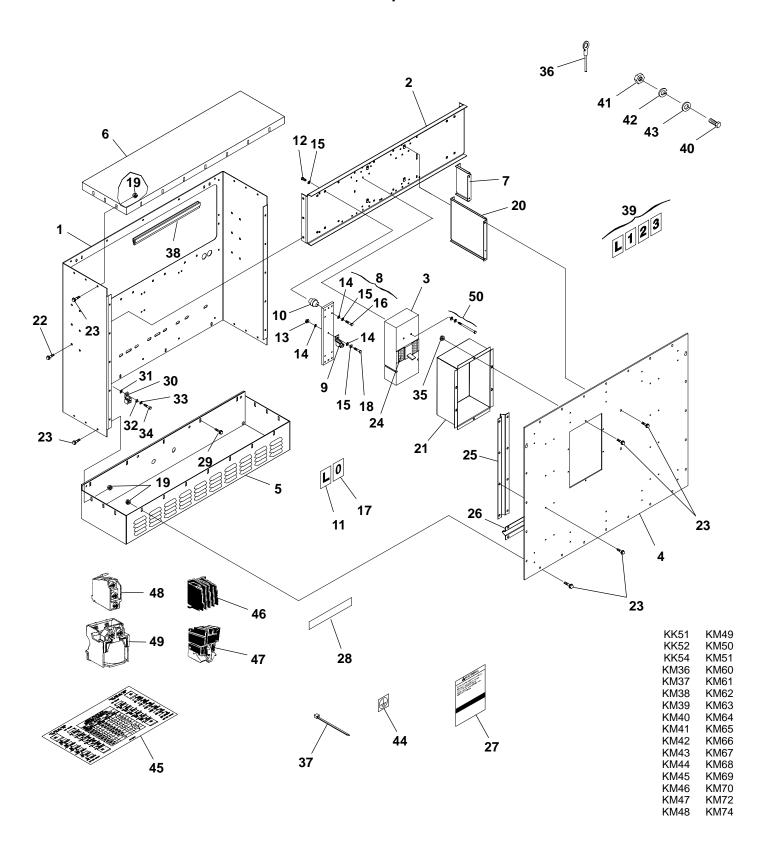


Circuit Breaker and Disconnect Switch UL Listed, IEC Conformity Model HC6 Generators DFED Spec C

Continued...

			Accessories, Circuit Breaker: The following are used on 320–1963–XX and 320–1964–XX Circuit Breakers	49 50	320–1978–03	1	24 Volt Shunt Trip Package, Hardware – Mounting (Includes Screws, Nuts and Lock Washers – 1 Package Required Per
46	320-1977-01	1	Switches - Includes 1				Switch)
			Trip Alarm and 1		320-1986-02	1	Used With 320-1963-XX
			Auxilliary Contact				Circuit Breakers and
47	320-1977-03	1	24 Volt Shunt Trip				320-1991-XX
			Accessories, Circuit				Disconnect Switch
			Breaker: The following		320-1986-01	1	Used With 320-1964-XX
			are used on 320-1970-XX				Circuit Breakers and
			Circuit Breakers				320-1992-XX
48	320-1978-01	2	Switch – Used as a Trip				Disconnect Switches
			Alarm or Auxiliary		320-1986-03	1	Used With 320-1970-XX
			Contact				Circuit Breakers

Circuit Breaker Non-UL Listed Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

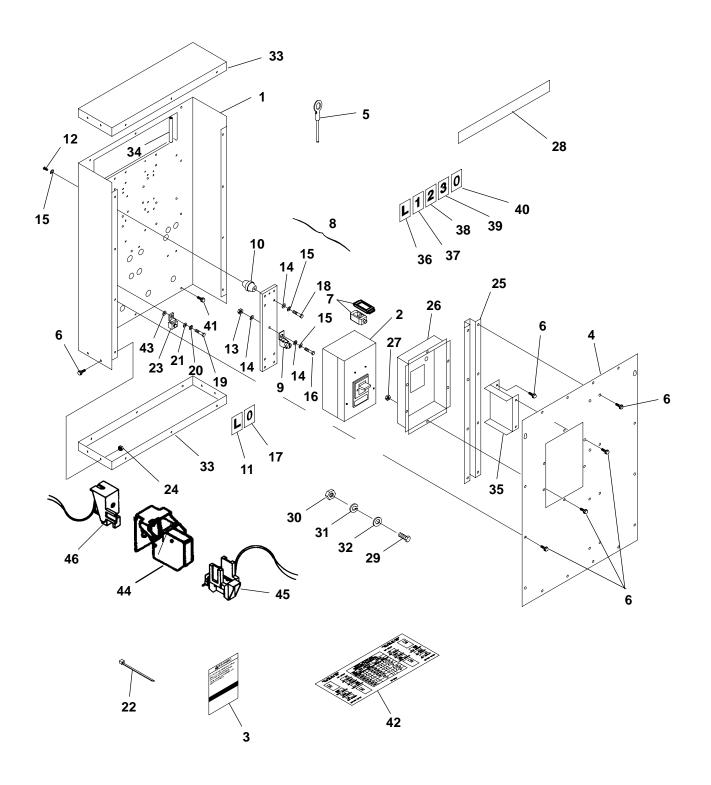


Circuit Breaker Non-UL Listed

Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Box, Circuit Breaker	15	850-0050	7	* Washer, Lock – Spring (3/8")
•	319-2433	1	3 Pole Circuit Breakers	16	800–0051	2	* Screw, Cap – Hex Head
	319-2464	1	4 Pole Circuit Breakers				(3/8–16 x 1–1/4")
2			Breaker, Circuit (Includes	17	098-5854-10) 1	* Label, Marker – Marked "0"
			Mounting Screws (CB21) Three Pole Breakers	18	800–0052	3	* Screw, Cap – Hex Head (3/8–16 x 1–1/2")
	320-1728-02		500 Amp	19	800-0050	1	Screw, Cap – Hex Head
	320–1728–03		630 Amp	20	050 0050	4	(3/8–16 x 1")
	320-1729-03 320-1730-03		800 Amp 1000 Amp	20 21	850–0050 526–0029	1 1	Washer, Lock – Spring (3/8") Washer, Flat (3/8")
	320-1730-03		1250 Amp	22	332–1389	A/R	Tie, Wire
	020 1700 04	•	Four Pole Breakers	23	332–2001	1	Lug, Solderless
	320-1728-05	1	500 Amp	24	870–0494	16	Nut, Self-Retaining – Floating
	320-1728-06		630 Amp				(1/4–20)
	320-1729-06		800 Amp	25	319-1918	1	Brace, Cover
	320-1730-07	1	1000 Amp	26			Cup, Circuit Breaker
	320-1730-08	1	1250 Amp		319-2431-16	3 1	Opening Recessed 4-1/4"
3	098-2304	1	Label, Warning				500, 630, 800 Amp
4			Cover, Circuit Breaker				Breakers
	319–1917	1	Sets With 3 Pole Breaker		319–2431–17	1	Opening Recessed 3"
			Mounted On Left Or Right			_	1000, 1250 Amp Breakers
	040 4047		Side When Facing Control	27	870–0212	6	Nut, Locking (1/4–20)
	319–1917	1	Sets With 4 Pole Breaker	28	091–0002	1	Strip, Copper (Used for
			Mounted On Left Side				wrapping end of leads
	240 2462	1	When Facing Control				before securing to circuit
	319–2463	'	Sets With 4 Pole Breaker Mounted On Right Side				breakers) (Quantity Used As Required)
			When Facing Control				The following four hardware
5			Lead – Circuit Breaker				items are used to fasten
Ŭ			(Quantity Used As				the load leads to the
			Required) 39" (Without				generator, neutral bar and
			Markings) (#1/0 Wire)				circuit breakers that are
	226-4406-03	1	1/2" Ring Terminal End to				800 amp or larger. Quantity
			1" Stripped End				used as required.
	226-4406-04	1	1/2" Ring Terminal End to	29	800–0092	1	Screw, Cap – Hex Head
			1/2" Ring Terminal End				(1/2–13 x 1–1/2")
6	821–5002–03	32	Screw, Self-Locking – Hex	30	862–0016	1	Nut, Hex (1/2–13)
_			Washer Head (1/4–20 x 1/2")	31	850-0060	1	Washer, Lock – Spring (1/2")
7			Lug Set – Circuit Breaker	32	526-0219	1	Washer, Flat (1/2")
			(Packaged In Sets – Two	33	319–1915	2	Panel – Top
			Lugs Per Set) (Quantity Used As Required)	34	508–1092	_	Edging – Bulk (Order By The Foot – 3 Feet Required)
	320-1755-14	. 1	500, 630 Amp Breakers	35	319–1927	1	Brace, Cover
	320–1755–14		800 Amp Breakers	36	313-1321		Label, Marker (10 Characters
	320-1755-15		1000, 1250 Amp Breakers	50			Per Card) Marked "L"
8	300-4318-01		Bar Assembly, Neutral		098-5854-06	3	3 Pole Breakers
_			(Includes Neutral Bars and		098–5854–06		4 Pole Breakers
			Parts Marked *) (Used With 3	37	098-5854-07		Label, Marker (10 Characters
			Pole Circuit Breakers)				Per Card) Marked "1"
9	332-2001	3	* Lug, Solderless	38	098-5854-08	3 1	Label, Marker (10 Characters
10	332-2744-07		* Standoff, Insulator				Per Card) Marked "2"
11	098-5854-06		* Label, Marker – Marked "L"				
12	800-0048	2	* Screw, Cap – Hex Head				
			(3/8–16 x 3/4")	* – F	Parts Included I	n 300–4	318–01 Neutral Bar Assembly
13	862-0003	3	* Nut, Hex (3/8")	_			
14	526–0029	8	* Washer, Flat (3/8")	Con	tinued		


Circuit Breaker Non-UL Listed Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

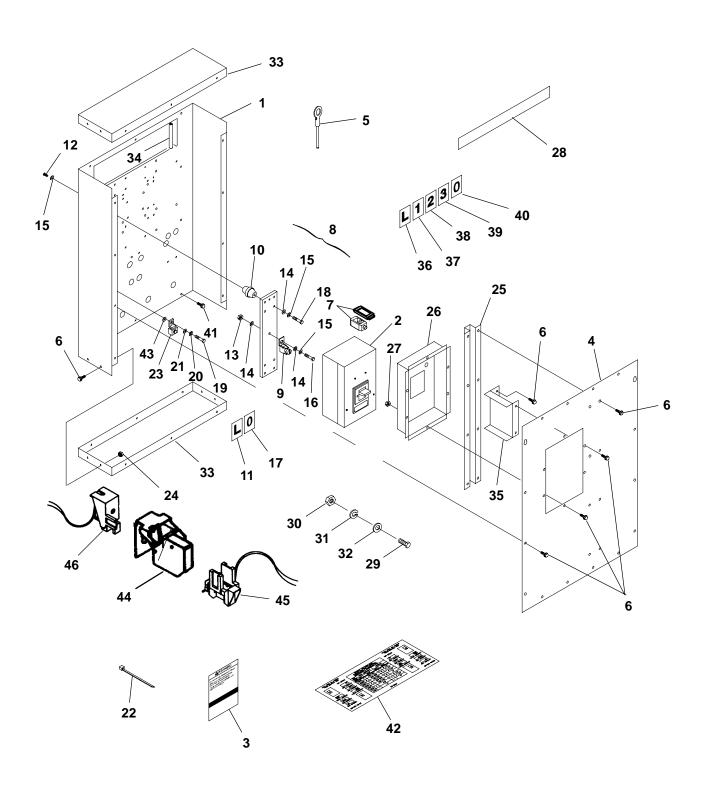

Circuit Breaker Non-UL Listed Model HC5 Generators DFEB Spec J Through L, DFEC Spec C Through E DFED Spec A Through B, DFFB Begin Spec J

REI NO		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Cor	ntinued						
39	098-5854-09	1	Label, Marker (10 Characters	44			Contact, Auxiliary
			Per Card) Marked "3"		320-1747-15	5 1	500, 630, 800 Amp Breakers
40	098-5854-10	1	Label, Marker (10 Characters		320-1747-18	3 1	1000, 1250 Amp Breakers
			Per Card) Marked "0" (4	45			Alarm, Bell
			Pole Breakers)		320-1748-13	3 1	500, 630, 800 Amp Breakers
41	821-0009	5	Screw, Self-Locking – Hex		320-1748-14	1	1000, 1250 Amp Breakers
			Washer Head (1/4-20 x 3/8")	46			Trip, 24 Volt Shunt
42	098-6832	1	Label, Conduit Information		320-1749-13	3 1	500, 630, 800 Amp Breakers
43	856-0010	1	Washer, Lock - EIT (3/8")		320-1749-14	1	1000, 1250 Amp Breakers


Labels and Tags Models With Radiator

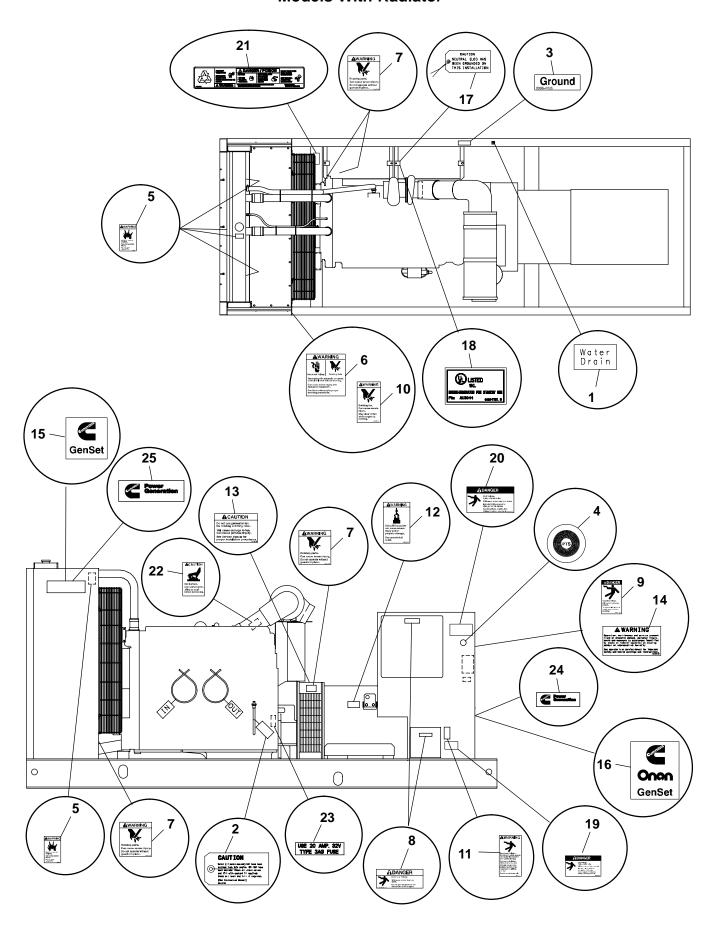

Labels and Tags Models With Radiator

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	098–1837–01	1	Label, Oil Drain (DFEB Spec J and K, DFEC Spec C and D, DFED Spec A, DFFB Begin Spec J)	16	098–6139–07	2	Label, Model Identification (10") (DFEB Spec J Through R, DFEC Spec C Through J, DFED Spec A Through F,
2	098–2124	1	Tag, Warning – Water and Oil	47	000 0400		DFFB Begin Spec J)
3			Levels Label, Ground	17 18	098–6460 098–7737	1 1	Tag, Caution (Battery) Label, UL Certification –
3	098–2235	1	DFEB Spec J Through K DFEC Spec C Through D DFED Spec A DFFB Begin Spec J	10	030-1131	'	Models That Are UL Certified (DFEB Begin Spec R, DFEC Begin Spec J, DFEC Begin Spec F)
	098–6537	1	DFEB Spec L Through R DFEC Spec E Through J	19	098–6650–01	2	Label, Danger – High Voltage (DFEC Spec C)
4	098–4500	2	DFED Spec B Through F Label, Prototype Test	20	098–6650–02	2	Label, Danger – High Voltage (DFEC Spec C)
4	090-4500	2	Supported	21	098–7877	1	Label, Battery Warning
5	098–4730	4	Label, Warning – Hot Pressurized Coolant				(DFEB Begin Spec S, DFEC Begin Spec K,
6	098–4732	2	Label, Warning – Automatic or Remote Control	22	098–6195	1	DFEC Begin Spec G) Label, Caution
7	098–4798	5	Label, Warning – Rotating Parts	22	090-0193	ı	(DFEB Begin Spec S, DFEC Begin Spec K,
8	098–5347	4	Label, Danger – Hazardous	22	000 7070	4	DFEC Begin Spec G)
9	098–5387	1	Voltage Label, Danger – Hazardous Voltage From Electrical Sources	23	098–7878	1	Label, Fuse (20A) (DFEB Begin Spec S, DFEC Begin Spec K, DFEC Begin Spec G)
10	098–5393	2	Label, Warning – Rotating Fan	24	098–7902–03	1	Label, Logo (4") (DFEB Begin Spec S,
11	098–5759	2	Label, Warning – Hazardous Voltage Backfeed				DFEC Begin Spec K, DFEC Begin Spec G)
12	098–5822	4	Label, Warning – Lifting Points	25	098–7902–04	3	Label, Logo (6") (DFEB Begin Spec S,
13	098–5842	1	Label, Caution – Generator Fan				DFEC Begin Spec K, DFEC Begin Spec G)
14	098-6074-02	1	Label, Warning				
15	098–6139–04	1	Label, Model (5") (DFEB Spec J Through R, DFEC Spec C Through J, DFED Spec A Through F, DFFB Begin Spec J)				


Labels and Tags Models With Remote Radiator

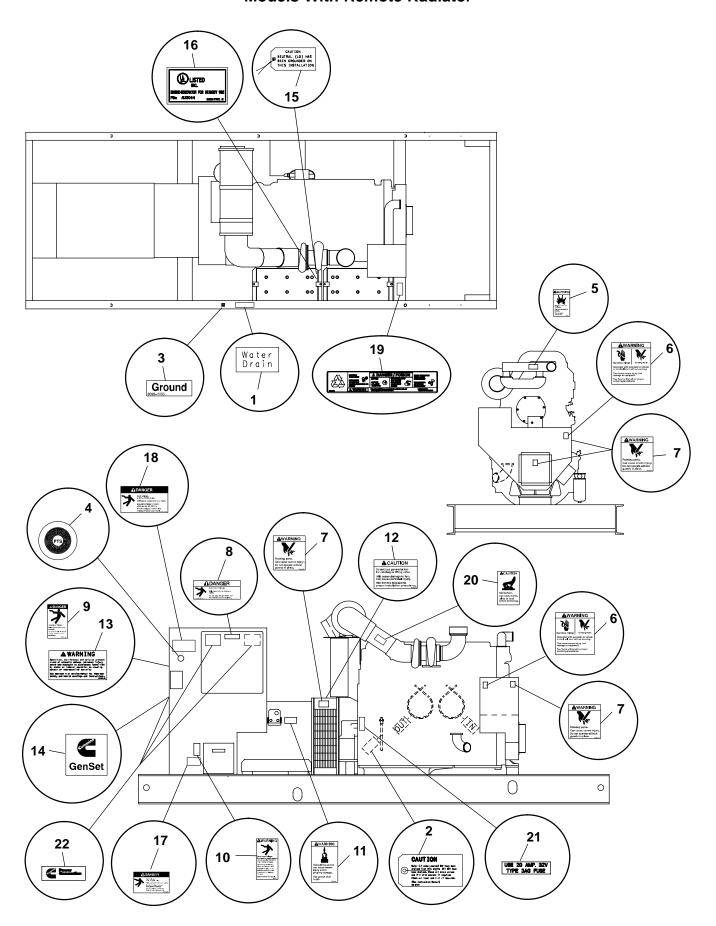

Labels and Tags Models With Remote Radiator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	098–1837–0	1 1	Label, Oil Drain (DFEB Spec J and K, DFEC Spec C and D, DFED Spec A, DFFB Begin Spec J)	13 14	098–6074–02 098–6139–04		Label, Warning Label, Model (5") (DFEB Spec J Through R, DFEC Spec C Through J,
2	098–2124	1	Tag, Warning – Water and Oil Levels				DFED Spec A Through F, DFFB Begin Spec J)
3			Label, Ground	15	098–6460	1	Tag, Caution (Battery)
	098–2235	1	DFEB Spec J Through K DFEC Spec C Through D DFED Spec A DFFB Begin Spec J	16	098–7737	1	Label, UL Certification – Models That Are UL Certified (DFEB Spec R, DFEC Spec J, DFEC Spec F)
	098–6537	1	DFEB Spec L Through R DFEC Spec E Through J	17	098–6650–01	2	Label, Danger – High Voltage (DFEC Spec C)
4	098–4500	2	DFED Spec B Through F Label, Prototype Test	18	098–6650–02	2	Label, Danger – High Voltage (DFEC Spec C)
5	098–4730	4	Supported Label, Warning – Hot Pressurized Coolant	19	098–7877	1	Label, Battery Warning (DFEB Begin Spec S, DFEC Begin Spec K,
6	098-4732	2	Label, Warning – Automatic				DFEC Begin Spec G)
			or Remote Control	20	098–6195	1	Label, Caution
7	098–4798	3	Label, Warning – Rotating Parts				(DFEB Begin Spec S, DFEC Begin Spec K,
8	098–5347	4	Label, Danger – Hazardous				DFEC Begin Spec G)
9	098–5387	1	Voltage Label, Danger – Hazardous Voltage From Electrical Sources	21	098–7878	1	Label, Fuse (20A) (DFEB Begin Spec S, DFEC Begin Spec K, DFEC Begin Spec G)
10	098–5759	2	Label, Warning – Hazardous Voltage Backfeed	22	098–7902–03	3	Label, Logo (4") (DFEB Begin Spec S,
11	098–5822	4	Label, Warning – Lifting Points				DFEC Begin Spec K, DFEC Begin Spec G)
12	098–5842	1	Label, Caution – Generator Fan				9/

Labels and Tags Models With Heat Exchanger

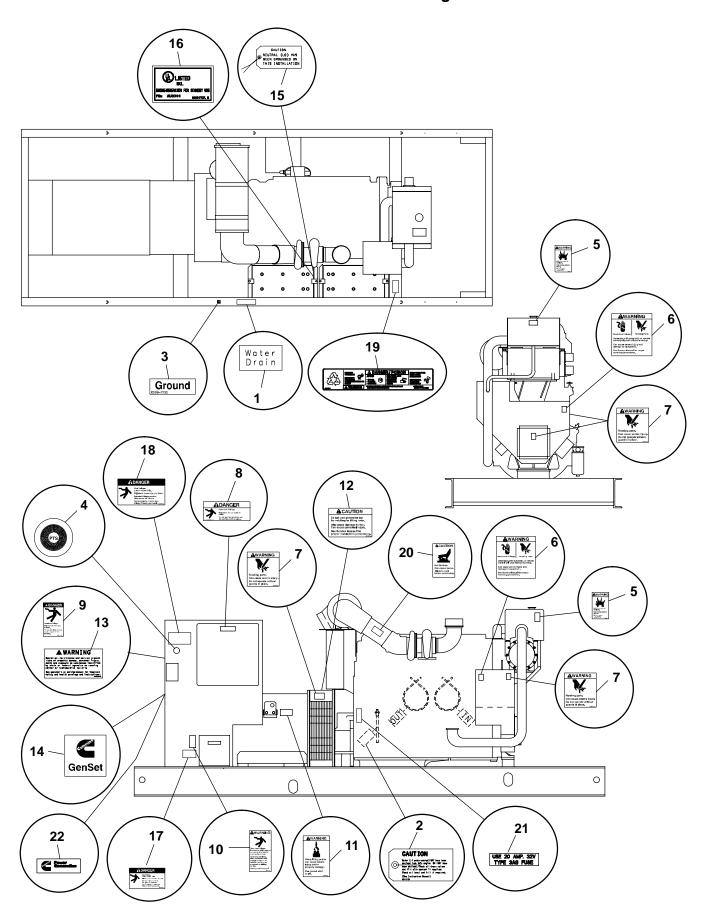

Labels and Tags Models With Heat Exchanger

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	098–1837–01	l 1	Label, Oil Drain (DFEB Spec J and K, DFEC Spec C and D, DFED Spec A, DFFB Begin Spec J)	13 14	098–6074–02 098–6139–04		Label, Warning Label, Model (5") (DFEB Spec J Through R, DFEC Spec C Through J,
2	098–2124	1	Tag, Warning – Water and Oil Levels				DFED Spec A Through F, DFFB Begin Spec J)
3	000 0005	4	Label, Ground	15	098–6460	1	Tag, Caution (Battery)
	098–2235	1	DFEB Spec J Through K DFEC Spec C Through D DFED Spec A DFFB Begin Spec J	16	098–7737	1	Label, UL Certification – Models That Are UL Certified (DFEB Spec R, DFEC Spec J, DFEC Spec F)
	098–6537	1	DFEB Spec L Through R DFEC Spec E Through J	17	098–6650–01	2	Label, Danger – High Voltage (DFEC Spec C)
4	098–4500	2	DFED Spec B Through F Label, Prototype Test	18	098–6650–02	2	Label, Danger – High Voltage (DFEC Spec C)
5	098–4730	1	Supported Label, Warning – Hot Pressurized Coolant	19	098–7877	1	Label, Battery Warning (DFEB Begin Spec S, DFEC Begin Spec K,
6	098-4732	2	Label, Warning – Automatic				DFEC Begin Spec G)
7	098–4798	3	or Remote Control Label, Warning – Rotating Parts	20	098–6195	1	Label, Caution (DFEB Begin Spec S, DFEC Begin Spec K,
8	098-5347	4	Label, Danger – Hazardous				DFEC Begin Spec G)
9	098–5387	1	Voltage Label, Danger – Hazardous Voltage From Electrical Sources	21	098–7878	1	Label, Fuse (20A) (DFEB Begin Spec S, DFEC Begin Spec K, DFEC Begin Spec G)
10	098–5759	2	Label, Warning – Hazardous Voltage Backfeed	22	098–7902–03	1	Label, Logo (4") (DFEB Begin Spec S,
11	098–5822	4	Label, Warning – Lifting Points				DFEC Begin Spec K, DFEC Begin Spec G)
12	098–5842	1	Label, Caution – Generator Fan				3 , ,

Accessories

These parts must be purchased through the Accessories Business Unit, see your Cummins/Onan Distributer. For other accessories such as batteries, fuel tanks, and annunciators contact the Accessories Business Unit.

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
2	155–2340–02 155–2341–02 155–2342–02 307–1056	1	Muffler Industrial Side Inlet Residential Side Inlet Critical Side Inlet Relay, Auxiliary – 3PDT (24V)	3	155–2551	1	Package, Pipe – Exhaust (8" Silencer) (Includes Exhaust Adapter, Reducer Flange, Exhaust Gaskets, Companion Flange, Screws, Washers, and Nuts)

Part No. Page	Part No. Page	Part No. Page	Part No. Page
091–0002, 151 , 155 , 159 ,	098–6139–07, 187	127–0390–01, 57	130–3735, 45 , 53
163, 165, 167, 169, 173, 175, 179, 183	098–6149, 112	127–0393, 57	130–3736, 45
098–1837–01, 187 , 189 , 191	098–6167, 69	128–0127, 83 , 85	130–3737, 45 , 53
098–2124, 187 , 189 , 191	098–6195, 35 , 37 , 41 , 94 ,	128–0128, 83 , 85	130–3738, 45 , 53
098–2235, 187 , 189 , 191	95, 187, 189, 191	128–0154–07, 85	130–3739, 45 , 53
098–2304, 157 , 159 , 161 ,	098–6460, 187 , 189 , 191	128–0154–08, 85	130–3740, 45 , 53
165, 167, 169, 171, 173,	098–6488, 146	130–1030, 47 , 49 , 51	130–3744, 53
177, 179, 183	098–6537, 165 , 171 , 177 , 179 , 187 , 189 , 191	130–3254, 56	130–3745, 45 , 53
098–2313, 144	098–6560, 30	130–3312, 45	130–3746, 45 , 53
098–3171, 15 , 17	098–6650–01, 187 , 189 , 191	130–3314–01, 45	130–3861, 37
098–3172, 15 , 17 098–4500, 187 , 189 , 191	098–6650–02, 187 , 189 , 191	130–3469, 45 , 47 , 49 , 51 , 53	130–4079, 35
098–4730, 187 , 189 , 191	098–6826, 75 , 77	130–3475, 45 , 53	130–4082, 35
098–4732, 187 , 189 , 191	098–6827, 79 , 81	130–3478, 45 , 53	130–4083, 35
098–4798, 187 , 189 , 191	098–6832, 151 , 157 , 173 ,	130–3486, 45	130–4211–01, 47 , 49 , 51
098–5347, 37 , 41 , 187 , 189 ,	177, 185	130–3495, 45 , 53	130–4535, 47 , 49 , 51
191	098–6865, 159 , 163 , 165 , 167 , 169 , 171 , 179	130–3497, 45	130–4552, 39 , 43
098-5347-01, 35 , 39 , 43	098–6902, 139	130–3587, 47 , 49 , 51	130–4608, 37 , 41
098–5387, 61 , 63 , 97 , 187 ,	098–6902–01, 139	130–3587–01, 49 , 51	130–4618, 37 , 41
189, 191	098–6927, 95	130–3588, 47 , 49 , 51	130–4619, 49 , 51
098–5393, 187	098–6928, 95	130–3589–01, 47 , 49	130–4620, 49 , 51
098–5429, 83 , 85	098–6940, 109	130–3589–02, 47 , 49	130–4621, 49 , 51
098–5759, 187 , 189 , 191	098–6943, 121 , 157	130–3591, 47 , 49 , 51	130–5367–03, 51
098–5822, 187 , 189 , 191	098–6985, 75 , 77 , 79 , 81	130–3592–01, 47 , 49 , 51	130–5367–04, 51
098–5842, 187 , 189 , 191	098–7121, 75 , 77 , 79 , 81	130–3592–02, 47 , 49 , 51	130–5368–02, 51
098–5854–06, 155 , 157 , 159 , 161 , 163 , 165 , 167 ,	098–7182–01, 37 , 41	130–3593, 47 , 49 , 51	140–1260, 22 , 23
169, 171, 173, 175, 17 7 ,	098–7182–02, 37 , 41	130–3594, 47	140–1545, 22 , 23
179, 183	098–7183, 37 , 41	130–3595, 47 , 49 , 51	140–1548, 20 , 21 , 22 , 23
098–5854–07, 155 , 159 , 163 , 165 , 167 , 169 , 171 ,	098–7184, 139	130–3596, 47 , 49 , 51	140–1973, 20 , 21
173, 177, 179, 183	098–7276, 111	130–3597, 47 , 49 , 51	140–2052, 22 , 23
098–5854–08, 155 , 159 ,	098–7281, 93	130–3598, 47	140–2301, 22 , 23
163, 165, 167, 169, 171, 173, 177, 179, 183	098–7395, 111	130–3600, 47 , 49 , 51	140–2306–01, 147
098–5854–09, 155 , 159 ,	098–7646, 59	130–3601, 47 , 49 , 51 130–3660, 49 , 51	140–2459, 20 , 22 140–2460, 20 , 22
163, 165, 167, 169, 171, 173, 177, 179, 185	098–7662–02, 107		140–2461, 21
098–5854–10, 155 , 157 ,	098–7737, 187 , 189 , 191	130–3719, 35 130–3720, 47 , 49 , 51	140–2461, 21 140–2462, 21
159, 161, 165, 167, 169,	098–7868, 85	130–3729, 45 , 53	140–2463, 20 , 21
173, 175, 177, 179, 183, 185	098–7877, 187 , 189 , 191	130–3729, 45 , 53	140–2464, 20 , 21
098–5930–04, 26	098–7878, 187 , 189 , 191	130–3731, 45 , 53	140–2465, 22 , 23
098–6030, 35 , 37 , 41	098–7902–03, 187 , 189 , 191	130–3731, 45 , 53	140–2466, 22 , 23
098–6074–02, 187 , 189 , 191	098–7902–04, 187	130–3733, 45 , 53	140–2469, 21
098–6118, 109	122–0702, 26	130–3734, 45 , 53	140–2474, 22
098–6139–04, 187 , 189 , 191	122–0777, 26	· - · - · , · - · ·	,
. , , -			

Part No.	<u>Page</u>	Part No. Page	Part No. Page	Part No. Page
140–2516, 20		191–1888, 55	220–4398–05, 86	232–3981–01, 89
140–2519, 21		191–1926–02, 56	220–4398–06, 86	232–4011, 89
140–2686, 23		191–1981, 55	220–4398–07, 86	234–0890, 90
140–2688, 23		191–1983–02, 55	220–4398–08, 86	234–0900–04, 150
140–2689, 23		191–1984, 55	220–4474–01, 86	234–0901–04, 150
140–2690, 23		191–1987, 55	220–4474–02, 86	234–0944, 89
140–2692, 23		191–1989–07, 55	220–4474–03, 86	249–0175–01, 86
140–2807, 14 7	7	191–1990, 55	220-4474-04, 86	249–0175–02, 86
149–2233, 69		191–2121, 55	220–4474–05, 87	249–0175–03, 86
149–2275, 61 ,	63, 65	191–2135, 59	220–4474–06, 87	249-0175-04, 86
149–2278, 15 ,	17, 19	191–2148, 55	220–4474–07, 87	249–0178–01, 86
149–2287, 69		193–0029, 24 , 25	220–4474–08, 87	249–0178–02, 86
149–2543, 69		193–0128, 24	220–4474–27, 86	249–0178–03, 86
149–2544, 69		193–0244–01, 15	220–4474–28, 87	249–0178–04, 86
149–2613, 69		193–0250, 99 , 131	220–4474–32, 87	249–0191–04, 91
149–2614, 69		193–0299, 134	220–4474–38, 87	249–0797, 89
150–2213, 70		193–0351, 99	220–4474–63, 87	249–5065–01, 91
150–2334, 69		193–0375, 15	220–4474–66, 87	249–5079–02, 91
151–0411, 19 ,	69, 70	193–0388, 15 , 17 , 131	220–4474–68, 87	249–5085–01, 86
151–0637, 70		193–0432, 19	226–3371, 151	249–5085–02, 86
151-0663-02,	69	193–0435, 131	226–3376, 151	249–5085–03, 86
155–0658, 28		193–0444, 19	226-4406-03, 153 , 161 ,	249–5085–04, 86
155–2062–05,	29	193–0446, 135	173, 177, 179, 183	249–5085–07, 86
155–2159, 29		193–0447–01, 17	226–4406–04, 153 , 161 , 167 , 173 , 177 , 179 , 183	249–5085–08, 87
155–2340–02,	192	193–0448, 17	226–4406–06, 121	249–5085–11, 87
155–2341–02,	192	193–0451, 25	226–4498–03, 159 , 165 ,	249–5086–01, 87
155–2342–02,	192	193–0466, 99	169, 171	249–5086–02, 87
155–2435, 28 ,	29	193–0468, 31 , 32 , 33	226–4661–02, 32 , 33	249–5086–03, 87
155–2436, 28 ,	29	193–0481, 31 , 32	231–0344, 89	249–5086–04, 87
155–2437, 28		201–3505–01, 86	232–3518–01, 89	249–5086–08, 87
155–2438, 28		201–3505–02, 86	232–3523, 89	249–5086–10, 87
155–2439, 29		201–3505–03, 86	232–3526, 90	249–5086–12, 87
155–2440, 29 ,	85	201–3505–04, 86	232–3527, 90	249–5087–02, 87
155–2441, 29		201–3508, 89	232–3536, 141	249–5088–01, 91
155–2442, 29		201–3510, 90	232–3710–01, 92	249–5102–01, 91
155–2551, 19 2	2	211–0457, 89	232–3710–02, 92	300–2737, 138
155–3021, 37 ,	41	220–4389, 89	232–3710–03, 92	300–2899, 117
159–1208, 61 ,	63 , 65	220–4396, 90	232–3744, 89	300–3464, 66
159–1231, 61 ,	63 , 65	220–4398–01, 86	232–3775–01, 89	300–3998–01, 127
159–1232, 61 ,	63, 65	220–4398–02, 86	232–3782, 89	300–4079, 109
191–1878, 53		220–4398–03, 86	232–3785–02, 89	300–4080–01, 109
191–1879, 56		220–4398–04, 86	232–3849, 93	300–4080–02, 109

Part No. Page	Part No. Page	Part No. Page	Part No. Page
300–4083, 109	301–9657, 144	302–2012, 111	308–0998, 111
300–4111–02, 114	301–9941, 118 , 120	302–2055–10, 145	308–0999, 111
300–4111–04, 114	302–1148, 98	302–2055–11, 145	308–1010, 99
300–4218–02, 115	302–1642, 99	302–2055–12, 145	308–1011, 99
300–4286, 111	302–1683, 98	302–2057–24, 145	308–1045, 111
300–4295, 97	302–1721–13, 123	302–2057–26, 145	308–1046, 111
300–4297, 97	302–1721–14, 123	302–2057–27, 145	308–1052, 98
300–4318–01, 155 , 161 ,	302–1722, 123	302–2057–29, 145	308–1082, 98
167, 173, 175, 179, 183	302–1723, 129 , 131 , 132	302–2057–31, 145	308–1095, 132
300–4462, 109	302–1728, 98	302–2057–33, 145	309–0180, 45
300–4462–01, 109	302–1729, 98	303–0032, 98	309-0269, 15 , 17 , 19
300–4480–01, 159 , 165 , 169 , 171	302–1753, 98	303–0223–05, 130	309–0436, 15
300–4481, 111	302–1794–10, 145	303–0280, 130	309–0437, 15
300–4507, 139	302–1794–11, 125 , 145	303–0285–01, 113	309–0576, 17
300–4508, 139	302–1794–12, 145	305–0817, 112	309–0641–03, 15
300–4515–01, 94 , 95	302–1794–13, 125	305-0821-02, 136	309-0641-07, 15 , 17
300–4515–02, 94 , 95	302–1798, 98	305–0823, 113	309-0649, 37 , 41
300–4608–01, 111	302–1833–01, 123	305–0868, 113	309–0673, 17
300–4608–02, 111	302–1833–03, 124	305–0870, 125	314–0212, 137
300–4610–01, 111	302–1833–05, 123	305–0901, 122	314–0213, 137
300–4610–02, 111	302–1845–08, 125	305-0902-02, 116	315–0717, 141
300–4721–04, 109	302–1845–10, 125	307–1056, 109 , 114 , 192	319–0030, 121 , 123 , 124
300–4721–16, 109	302–1852–03, 144	307–1157, 114	319–0485, 66
300–5498–02, 133	302–1873–01, 129	307–2167, 15 , 17	319–0486, 66
301–3090, 138 , 139	302–1874, 134	307–2621–02, 19	319–0489, 61 , 63 , 143
301–6257, 129 , 131 , 132	302–1883, 124	307–2677–02, 66	319–0490, 61 , 63 , 143
301–6987, 118 , 120 , 121 ,	302–1922–03, 145	307–2762, 35	319–0652, 113
123, 124	302–1922–24, 145	307–2843, 121	319–0745, 75
301–7619, 138	302–1922–26, 145	307–2859, 39 , 43	319–0754, 116
301–7620, 138	302–1922–27, 145	307–2868, 119	319–0879, 79
301–8065, 97	302–1922–29, 145	307–2869, 109	319–0881, 79 , 81
301–8851, 97	302–1922–31, 145	307–2919, 120	319–0883, 79
301–9054–01, 98	302–1922–39, 145	307–2920, 120	319–0890, 151
301–9054–02, 98	302–1938, 98	307–2921–01, 118	319–0891, 151
301–9054–03, 98	302–1968, 98	308–0069, 144	319–0892, 151
301–9054–04, 98	302–2002, 99	308–0226, 69	319–0893, 151
301–9055–01, 99	302–2009–01, 111	308–0333, 138	319–0898, 126
301–9055–02, 99	302–2009–02, 111	308–0852, 66	319–1017, 149
301–9510, 75	302–2009–03, 111	308–0912, 66	319–1089, 79
301–9511, 75 , 77	302–2009–04, 111	308–0913, 61 , 63	319–1090, 79
301–9512, 75 , 77	302–2010, 111	308–0916, 61 , 63	319–1091, 79 , 81
301–9629, 75 , 77	302–2011, 111	308–0916–01, 143	319–1093, 79 , 81

Part No. Page	Part No. Page	Part No. Page	Part No. Page
319–1095, 79 , 81	319–2398, 159 , 163 , 167 ,	319–3169, 72 , 175	320–1459–10, 153
319–1096, 79	169	319–3183, 72 , 175	320–1460–06, 153
319–1118, 79	319–2399, 73 , 159 , 163 ,	319–3184, 165 , 171 , 179	320–1460–07, 153
319–1137, 142	167 , 169 319–2431–12, 155	319–3251, 72	320–1460–08, 153
319–1203–01, 79 , 81	319–2431–13, 155 , 173	319–3252–01, 179	320-1460-09, 153 , 161
319–1245, 141	319–2431–14, 155 , 173	319–3252–02, 165 , 171	320–1460–10, 153 , 161
319–1293, 146	319–2431–16, 183	319–3253–01, 179	320–1460–11, 153 , 161
319–1346, 75 , 77	319–2431–17, 183	319–3253–02, 165 , 171	320–1460–12, 153 , 161
319–1687, 109	319–2431–18, 163	319–3258, 81	320–1461–07, 153 , 161
319–1915, 71 , 72 , 155 , 173 ,	319–2431–19, 167	319–3260, 81	320–1461–08, 151 , 153 , 161
175, 183	319–2431–20, 167	319–3262, 81	320–1461–09, 153 , 161
319–1916, 71 , 72	319–2431–21, 163	319–3263, 81	320–1461–10, 153 , 161
319–1917, 153 , 173 , 175 , 183	319–2431–22, 155	319–3266–01, 165 , 171	320–1462–48, 153
319–1918, 71 , 155 , 173 , 183	319–2431–26, 175	319–3267, 81	320–1463–09, 153
319–1925, 159 , 165 , 169 ,	319–2431–27, 175	319–3269, 81	320–1463–10, 153
171, 179	319–2431–28, 179	319–3270–02, 77	320–1464–06, 153
319–1926–01, 163 , 167	319–2431–29, 175	319–3270–03, 81	320–1464–07, 153
319–1926–02, 159 , 169	319–2431–30, 175	319–3273, 77	320–1464–08, 153
319–1927, 71 , 155 , 173 , 183	319–2431–31, 175	319–3276, 81	320–1464–09, 153 , 161
319–1957, 159 , 169	319–2432, 71 , 153 , 173	319–3277, 81	320–1464–10, 153 , 161
319–1959–01, 159 , 169	319–2433, 183	319–3278, 77	320–1464–11, 153 , 161
319–1961, 159 , 165 , 169 , 171 , 179	319–2463, 175 , 183	319–3281–01, 81	320–1464–12, 153 , 161
319–1962, 159 , 169	319–2464, 183	319–3281–02, 81	320–1465–07, 153 , 161
319–1963, 161 , 167	319–2476, 75	319–3283–01, 81	320–1465–08, 153 , 161
319–1964, 161 , 167	319–2767, 79 , 81	319–3283–02, 81	320–1465–09, 153 , 161
319–2006–01, 101 , 105 , 107	319–2768, 75 , 77	319–3284, 72 , 175	320–1465–10, 153 , 161
319–2006–02, 101 , 105 , 107	319–2771–02, 75	319–3286, 165 , 171 , 179	320–1471–09, 153
319–2217, 75	319–2771–03, 79	319–3287–01, 77	320–1471–10, 153
319–2220, 75 , 77	319–2776, 75 , 77	319–3287–02, 77	320–1472–06, 153
319–2236, 19	319–2778, 79 , 81	319–3288, 165 , 171 , 179	320–1472–07, 153
319–2243, 79	319–2779–01, 79	319–3290, 77	320–1472–08, 153
319–2244, 79	319–2779–02, 79	319–3291, 77	320–1472–09, 153 , 161
319–2245, 79 , 81	319–2781–01, 79	319–3294, 77	320–1472–10, 153 , 161
319–2316–02, 159 , 169	319–2781–02, 79	319–3300, 179	320–1472–11, 153 , 161
319–2316–03, 163 , 167	319–2784–01, 75	319–3327, 77	320–1472–12, 153 , 161
319–2335, 73 , 163 , 167	319–2784–02, 75	319–3329, 177	320–1473–07, 153 , 161
319–2336, 73 , 163 , 167	319–2786, 75	319–3333, 175	320–1473–08, 151 , 153 , 161
319–2337, 73 , 161 , 167	319–2787, 75	320–1060–05, 175	320–1473–09, 153 , 161
319–2376, 139	319–2814, 39 , 43	320–1458–45, 153	320–1473–10, 153 , 161
319–2377–02, 73	319–2815, 37 , 41	320–1458–48, 153	320–1491–09, 153
319–2378, 73	319–3153, 165 , 171 , 179	320–1459–09, 153	320–1491–10, 153

320-1492-06, 153 320-1747-18, 185 320-1960-01, 175 321-0325, 105 320-1492-08, 153 320-1492-09, 153, 161 320-1749-13, 185 320-1960-02, 175 321-0339, 105 320-1492-09, 153, 161 320-1749-14, 185 320-1960-02, 175 321-0370, 107 320-1492-10, 153, 161 320-1749-14, 185 320-1960-03, 175 321-0370, 107 320-1492-11, 153, 161 320-1755-14, 183 320-1960-01, 175, 179 322-0017, 99 320-1492-12, 153, 161 320-1755-15, 167, 183 320-1963-01, 175, 179 322-0017, 99 320-1493-07, 153, 161 320-1755-15, 167, 183 320-1963-02, 175 322-0359-02, 99 320-1493-09, 153, 161 320-1755-15, 167, 183 320-1963-03, 179 322-0360-02, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0360, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-06, 175, 179 322-0363, 98 320-1493-09, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0363, 98 320-1637-10, 153 320-1783-10, 165 320-1964-01, 175, 179 322-0364, 99, 118 320-1637-16, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0369, 02, 66 320-1641-11, 153 320-180, 153 320-180, 153 320-180, 153 320-180, 153 320-180, 153 320-180, 153 320-1804-04, 175, 179 322-0343-02, 66 320-1641-11, 153 320-188-08, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1654, 66 320-1822-01, 161 320-1964-05, 175, 179 322-0431-03, 119 320-1656, 66 320-1822-01, 161 320-1964-05, 175, 179 322-0431-09, 121 320-1660-16, 161 320-1822-02, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-04, 161 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-26, 161 320-1848, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-26, 161 320-1906-20, 163 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-36, 161 320-1906-19, 173 320-1970-03, 177, 181 323-1200, 101, 114, 149 320-1660-36, 161 320-1906-20, 153 320-1990-20, 175 320-1344, 101, 149 320-1660-36, 161 320-1906-20, 153 320-1990-20, 177 320-1304, 101, 149 320-1660-36, 161 320-1906-20, 153 320-1906-20, 177, 181 323-1342, 149 320-1600-36, 161 320-1909-30, 153 320-1990-30, 177 323-1344, 100, 101,	Part No.	Page	Part No.	<u>Page</u>	Part No.	Page_	Part No.	Page
320-1492-07, 153 320-1748-13, 185 320-1960-01, 175 321-0327-01, 137 320-1492-09, 153 320-1748-14, 185 320-1960-02, 175 321-0339, 105 320-1492-01, 153, 161 320-1749-14, 185 320-1960-04, 175 321-0371, 107 320-1492-11, 153, 161 320-1755-14, 183 320-1963-01, 175, 179 322-0017, 99 320-1492-12, 153, 161 320-1755-15, 167, 183 320-1963-02, 175 322-0359-02, 99 320-1493-07, 153, 161 320-1783, 159 320-1963-04, 175, 179 322-0360-02, 99 320-1493-08, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0360, 98 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0363, 98 320-1493-09, 153, 161 320-1783-06, 159 320-1963-04, 175, 179 322-0364, 99 320-1493-10, 153, 320 320-1783-10, 165 320-1963-06, 175, 179 322-0364, 99 320-1637-16, 153 320-1783-10, 165 320-1964-01, 175, 179 322-0384-09, 118 320-1637-16, 153 320-1799, 153 320-1964-02, 175, 179 322-0384-09, 118 320-1637-16, 153 320-1818-08, 153 320-1964-03, 175, 179 322-0431-03, 119 320-1636, 66 320-1818-08, 153 320-1964-06, 175 322-0431-03, 319 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-07, 32, 33 320-1660-16, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0431-09, 121 320-1660-16, 161 320-1822-04, 161 320-1970-01, 179 323-1199, 114, 149 320-1660-26, 161 320-1847, 153 320-1970-03, 177, 181 323-1290, 114 320-1660-36, 161 320-1906-18, 173 320-1978-01, 181 323-1290, 114 320-1660-36, 161 320-1906-20, 173 320-1980-03, 181 323-1304, 101, 149 320-1660-36, 161 320-1906-20, 173 320-1980-03, 181 323-1304, 101, 149 320-1660-36, 161 320-1906-20, 173 320-1980-03, 181 323-1304, 101, 149 320-1680-03, 161 320-1906-20, 173 320-1980-03, 181 323-1341, 109 320-1728-03, 167, 183 320-1909-31, 153 320-1990-01, 175, 179 323-1440, 3, 43, 103, 105, 105, 105, 105, 1	320–1492–06	, 153	320–1747–18,	, 185	320–1959–07.	, 175	321–0325, 10	5
320-1492-09, 153, 161 320-1749-13, 185 320-1960-03, 175 321-0370, 107 320-1492-10, 153, 161 320-1755-14, 185 320-1960-04, 175 321-0371, 107 320-1492-12, 153, 161 320-1755-14, 183 320-1963-02, 175 322-0369-02, 99 320-1492-12, 153, 161 320-1755-16, 167, 183 320-1963-02, 179 322-0360-02, 99 320-1493-07, 153, 161 320-1755-16, 167, 183 320-1963-04, 175, 179 322-0360-02, 99 320-1493-08, 153, 161 320-1763-06, 159, 165 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-06, 159 320-1493-09, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1493-01, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0380-02, 66 320-1637-10, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0349-09, 118 320-1637-16, 153 320-1783-10, 165 320-1964-03, 175, 179 322-0431-03, 119 320-1641-11, 153 320-1818-80, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1641-13, 153 320-1818-80, 153 320-1964-04, 175, 179 322-0431-04, 120 320-1641-13, 153 320-1818-36, 161 320-1964-06, 175, 179 322-0431-04, 120 320-1656-04, 161 320-1822-01, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1656-04, 161 320-1822-01, 161 320-1964-06, 175 322-0431-09, 121 320-1660-17, 161 320-1822-01, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1847, 153 320-1977-00, 177, 181 323-1291, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-03, 177, 181 323-1290, 101, 114, 149 320-1660-26, 161 320-1847, 153 320-1977-03, 177, 181 323-1291, 114 320-1660-26, 161 320-1947, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-34, 161 320-1906-20, 173 320-1978-03, 181 323-1302, 97 320-1660-34, 161 320-1906-20, 173 320-1978-03, 181 323-1302, 97 320-1660-34, 161 320-1906-29, 153 320-1998-01, 177, 181 323-1304, 101, 149 320-1660-34, 161 320-1906-20, 173 320-1986-01, 177, 181 323-1304, 101, 149 320-1660-34, 161 320-1906-29, 153 320-1998-01, 177, 181 323-1304, 101, 149 320-1660-34, 161 320-1906-29, 153 320-1998-01, 177, 181 323-1343, 149 320-1660-34, 161 320-1909-30, 153 320-1998-01, 177, 181 323-1343, 149 320-1699-02, 177 323-1441, 03, 107 320-1728-02, 167, 183 3					320–1960–01	, 175	321–0327–01	, 137
320-1492-10, 153, 161 320-1749-14, 185 320-1960-04, 175 321-0371, 107 320-1492-11, 153, 161 320-1755-14, 183 320-1963-01, 175, 179 322-0369-02, 99 320-1493-07, 153, 161 320-1755-16, 167, 183 320-1963-02, 175 322-0360-02, 99 320-1493-07, 153, 161 320-1783, 159 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-06, 159 320-1963-04, 175, 179 322-0363, 98 320-1493-09, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1783-10, 165 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1641-11, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-04, 120 320-1653, 66 320-182-01, 161 320-1964-05, 175, 179 322-0431-04, 120 320-1654, 66 320-1822-01, 161 320-1964-05, 175, 179 322-0431-04, 120 320-1656-04, 161 320-1822-01, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1656-04, 161 320-1822-03, 161 320-1970-01, 179 322-0431-09, 122 320-1660-16, 161 320-1822-04, 161 320-1970-01, 179 322-0431-09, 121 320-1660-25, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-194, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904-153 320-1978-01, 177, 181 323-1302, 97 320-1660-34, 161 320-1906-19, 173 320-1978-03, 181 323-1302, 97 320-1660-34, 161 320-1906-29, 153 320-1986-01, 177, 181 323-1302, 97 320-1660-34, 161 320-1906-29, 153 320-1986-01, 177, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-29, 153 320-1986-07, 177 323-1306, 101, 149 320-1660-34, 161 320-1906-29, 153 320-1986-07, 177 323-1304, 101, 149 320-1660-34, 161 320-1906-29, 153 320-1986-07, 177 323-1304, 101, 109 320-1688-01, 128 320-1909-30, 153 320-1986-07, 177 323-1441, 001, 109 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1441, 003,	320–1492–08	, 153	320-1748-14	, 185	320-1960-02	, 175	321–0339, 10	5
320-1492-11, 153, 161 320-1755-14, 183 320-1963-01, 175, 179 322-0359-02, 99 320-1493-07, 153, 161 320-1755-15, 167, 183 320-1963-02, 175 322-0360-02, 99 320-1493-09, 153, 161 320-1783, 159 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0360, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0363, 98 320-1493-01, 153, 161 320-1783-02, 159, 165 320-1963-04, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0384-09, 118 320-1637-16, 153 320-1783-10, 165 320-1964-03, 175, 179 322-0384-09, 118 320-1641-11, 153 320-180, 153 320-1964-04, 175, 179 322-0431-04, 120 320-1653, 66 320-1818-08, 153 320-1964-04, 175, 179 322-0431-04, 120 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-02, 161 320-1964-07, 175 322-0431-09, 121 320-1660-17, 161 320-1822-04, 161 320-1970-01, 179 322-0431-09, 121 320-1660-25, 161 320-1845, 153 320-1970-03, 179 323-1290, 101, 114, 149 320-1660-25, 161 320-1966-34, 161 320-1968-01, 177 323-1308, 97 323-1308, 97 323-1308, 97 320-1688-01, 128 320-1969-02, 177 323-1308, 97 323-1401, 101, 109 320-1688-01, 1	320-1492-09	, 153, 161	320–1749–13,	, 185	320-1960-03	, 175	321–0370, 10	7
320-1492-12, 153, 161 320-1755-15, 167, 183 320-1963-02, 175 322-0359-02, 99 320-1493-07, 153, 161 320-1755-16, 167, 183 320-1963-03, 179 322-0360-02, 99 320-1493-08, 153, 161 320-1783, 159 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-06, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-01, 165 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1799, 153 320-1964-02, 175, 179 322-0384-09, 118 30-1637-16, 153 320-1800, 153 320-1964-03, 175, 179 322-0431-03, 119 320-1641-11, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1653, 66 320-1818-36, 161 320-1964-05, 175, 179 322-0431-04, 120 320-1653, 66 320-1818-36, 161 320-1964-06, 175 322-0431-09, 121 320-1654, 66 320-1822-01, 161 320-1964-06, 175 322-0431-09, 121 320-1660-16, 161 320-1822-04, 161 320-1970-01, 179 322-148, 124 320-1660-17, 161 320-1845, 153 320-1970-02, 179 323-129, 114	320-1492-10	, 153, 161	320-1749-14,	, 185	320-1960-04	, 175	321–0371, 10	7
320-1493-07, 153, 161 320-1755-16, 167, 183 320-1963-03, 179 322-0360-02, 99 320-1493-08, 153, 161 320-1783, 159 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-06, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0384-09, 118 320-1637-10, 153 320-1789, 153 320-1964-02, 175, 179 322-0384-09, 118 320-1641-11, 153 320-1800, 153 320-1964-03, 175, 179 322-0431-03, 119 320-1663, 66 320-1818-08, 153 320-1964-05, 175, 179 322-0431-03, 119 320-1653, 66 320-1818-08, 153 320-1964-05, 175, 179 322-0431-03, 119 320-1654, 66 320-1818-36, 161 320-1964-05, 175 322-0431-03, 119 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1964-07, 175 322-0431-09, 121 320-1660-17, 161 320-1845, 153 320-1970-03, 179 323-1199, 114, 149 320-1660-25, 161 320-1845, 153 320-1970-03, 179 323-129, 114 <t< td=""><td>320–1492–11,</td><td>153, 161</td><td>320-1755-14,</td><td>, 183</td><td>320-1963-01</td><td>, 175, 179</td><td>322–0017, 99</td><td></td></t<>	320–1492–11,	153, 161	320-1755-14,	, 183	320-1963-01	, 175, 179	322–0017, 99	
320-1493-08, 153, 161 320-1783, 159 320-1963-04, 175, 179 322-0361, 99 320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-06, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1799, 153 320-1964-02, 175, 179 322-0384-09, 118 320-1641-11, 153 320-1800, 153 320-1964-03, 175, 179 322-0403-02, 66 320-1641-13, 153 320-1818-08, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1653, 66 320-1818-36, 161 320-1964-05, 175, 179 322-0431-04, 120 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1964-07, 175 322-0431-09, 121 320-1660-17, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-16, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-25, 161 320-1845, 153 320-1970-03, 179 323-1292, 114	320-1492-12	, 153, 161	320-1755-15,	, 167, 183	320-1963-02	, 175	322-0359-02	, 99
320-1493-09, 153, 161 320-1783-02, 159, 165 320-1963-06, 175, 179 322-0363, 98 320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0403-02, 66 320-1641-11, 153 320-1800, 153 320-1964-03, 175, 179 322-0431-03, 119 320-1661-13, 153 320-1818-36, 161 320-1964-05, 175, 179 322-0431-04, 120 320-1653, 66 320-1818-36, 161 320-1964-07, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-09, 121 320-1665-04, 161 320-1822-02, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-04, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-25, 161 320-1845, 153 320-1970-03, 179 323-1290, 101, 114, 149 320-1660-26, 161 320-194, 153 320-1977-01, 177, 181 323-1292, 114 320-1660-27, 161 320-194, 153 320-1978-03, 181 323-1304, 101, 149	320-1493-07	, 153, 161	320-1755-16,	, 167, 183	320-1963-03	, 179	322-0360-02	, 99
320-1493-10, 153, 161 320-1783-06, 159 320-1964-01, 175, 179 322-0369-02, 66 320-1637-10, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0384-09, 118 320-1637-16, 153 320-1799, 153 320-1964-03, 175, 179 322-0403-02, 66 320-1641-13, 153 320-1818-08, 153 320-1964-05, 175, 179 322-0431-03, 119 320-1653, 66 320-1818-36, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-07, 32, 33 320-1656-04, 161 320-1822-02, 161 320-1964-07, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0431-09, 121 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1822-04, 161 320-1970-03, 179 323-1291, 114 320-1660-25, 161 320-1848, 153 320-1977-01, 177, 181 323-1292, 114 320-1660-26, 161 320-1848, 153 320-1977-01, 177, 181 323-1302, 97 320-1660-35, 161 320-1906-18, 173 320-198-01, 181 323-1302, 97 <td< td=""><td>320-1493-08</td><td>, 153, 161</td><td>320–1783, 159</td><td>9</td><td>320-1963-04</td><td>, 175, 179</td><td>322–0361, 99</td><td></td></td<>	320-1493-08	, 153, 161	320–1783, 15 9	9	320-1963-04	, 175, 179	322–0361, 99	
320-1637-10, 153 320-1783-10, 165 320-1964-02, 175, 179 322-0403-02, 66 320-1641-11, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1653, 66 320-1641-13, 153 320-1818-08, 153 320-1964-06, 175 322-0431-04, 120 320-1656, 66 320-1822-01, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1854, 66 320-1822-01, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1656-04, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1847, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1848, 153 320-1977-01, 177, 181 323-1202, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 320-1660-34, 161 320-1906-19, 173 320-198-01, 181 320-1660-35, 161 320-1906-20, 173 320-1688-01, 128 320-1909-31, 153 320-198-00, 177, 181 323-1308, 97 320-1689-02, 171 320-1699-02, 171 320-1699-02, 171 320-1728-02, 167, 183 320-1909-33, 153 320-1990-01, 175, 179 323-1491, 39, 43, 103, 107 320-1728-06, 167, 183 320-1909-35, 153 320-1990-01, 175, 179 323-1491, 39, 43, 103, 107 320-1728-06, 167, 183 320-1909-35, 153 320-1992-02, 175, 179	320-1493-09	, 153, 161	320-1783-02,	, 159, 165	320-1963-06	, 175, 179	322-0363, 98	
320-1637-16, 153 320-1799, 153 320-1964-03, 175, 179 322-0403-02, 66 320-1641-11, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1653, 66 320-1818-08, 153 320-1964-05, 175, 179 322-0431-04, 120 320-1654, 66 320-1822-01, 161 320-1964-06, 175 322-0431-08, 122 320-1656-04, 161 320-1822-01, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-17, 161 320-1845, 153 320-1970-03, 179 323-1290, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-21, 173 320-198-01, 177 323-1306, 101, 149 320-1688-01	320-1493-10	, 153, 161	320-1783-06,	, 159	320-1964-01	, 175, 179	322-0369-02	, 66
320-1641-11, 153 320-1800, 153 320-1964-04, 175, 179 322-0431-03, 119 320-1641-13, 153 320-1818-08, 153 320-1964-05, 175, 179 322-0431-04, 120 320-1653, 66 320-1818-36, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-08, 122 320-1660-16, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1304, 101, 149 320-1688-01, 128 320-1906-20, 173 320-1986-01, 177, 181 323-1342, 149	320-1637-10	, 153	320-1783-10,	, 165	320-1964-02	, 175, 179	322-0384-09	, 118
320-1641-13, 153 320-1818-08, 153 320-1964-05, 175, 179 322-0431-04, 120 320-1653, 66 320-1818-36, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-08, 122 320-1656-04, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1302, 97 320-1660-34, 161 320-1904, 153 320-1978-01, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-18, 173 320-198-03, 181 323-1304, 101, 149 320-1688-01, 128 320-1906-20, 173 320-198-01, 177, 181 323-1306, 101, 149 320-1688-02, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149	320-1637-16	, 153	320–1799, 15 :	3	320-1964-03	, 175, 179	322-0403-02	, 66
320-1653, 66 320-1818-36, 161 320-1964-06, 175 322-0431-07, 32, 33 320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-08, 122 320-1656-04, 161 320-1822-02, 161 320-1964-08, 175 322-0487, 132 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1844, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1906-18, 173 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-19, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1306, 101, 149 320-1660-36, 161 320-1906-21, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1902-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1902-28, 153 320-1986-01, 177, 181 323-1342, 149 320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-01, 109 320-1699-02, 171 320-1909-31, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-03, 167, 183 320-1909-31, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-31, 153 320-1990-01, 175, 179 323-1445, 39, 43, 103, 105, 320-1728-06, 167, 183 320-1909-31, 153 320-1990-01, 175, 179 323-1445, 39, 43, 103, 105, 320-1728-06, 167, 183 320-1909-33, 153 320-1992-01, 175, 179 323-1445, 39, 43, 103, 105, 320-1728-06, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1449, 39, 43, 103, 105, 320-1728-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179	320–1641–11,	153	320–1800, 15	3	320-1964-04	, 175, 179	322-0431-03	, 119
320-1654, 66 320-1822-01, 161 320-1964-07, 175 322-0431-08, 122 320-1656-04, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1904, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1308, 97 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1699, 169 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-01, 109 320-1728-03, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1410-01, 1	320-1641-13	, 153	320-1818-08,	, 153	320-1964-05	, 175, 179	322-0431-04	, 120
320-1656-04, 161 320-1822-02, 161 320-1964-08, 175 322-0431-09, 121 320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-20, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1441, 003, 107 320-1728-05, 167, 183 320-1909-31, 153 320-1990-02, 175	320–1653, 66		320-1818-36,	, 161	320-1964-06	, 175	322-0431-07	, 32, 33
320-1660-16, 161 320-1822-03, 161 320-1970-01, 179 322-0487, 132 320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-03, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1986-07, 177 323-1410-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-33, 153 320-1900-01, 175 323-1441, 03, 107 320-1728-06, 167, 183 320-1909-33, 153 320-1990-01,	320–1654, 66		320-1822-01,	, 161	320-1964-07	, 175	322-0431-08	, 122
320-1660-17, 161 320-1822-04, 161 320-1970-02, 179 323-1199, 114, 149 320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-20, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1342, 149 320-1699, 169 320-1909-29, 153 320-1986-02, 177, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1986-07, 177 323-1410-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-33, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1990-02, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35,	320-1656-04	, 161	320-1822-02,	, 161	320-1964-08	, 175	322-0431-09	, 121
320-1660-18, 161 320-1845, 153 320-1970-03, 179 323-1200, 101, 114, 149 320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107	320-1660-16	, 161	320-1822-03,	, 161	320-1970-01	, 179	322–0487, 13	2
320-1660-25, 161 320-1847, 153 320-1977-01, 177, 181 323-1291, 114 320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699, 169 320-1909-30, 153 320-1986-03, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1410-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1660-17	, 161	320-1822-04,	, 161	320-1970-02	, 179	323–1199, 11 4	1 , 149
320-1660-26, 161 320-1848, 153 320-1977-03, 177, 181 323-1292, 114 320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-20, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-01, 128 320-1906-20, 173 320-1986-01, 177, 181 323-1308, 97 320-1688-02, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1699, 169 320-1909-29, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107	320-1660-18	, 161	320–1845, 15 3	3	320-1970-03	, 179	323–1200, 10	1, 114, 149
320-1660-27, 161 320-1904, 153 320-1978-01, 181 323-1302, 97 320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1306, 101, 149 320-1688-03, 161 320-1906-20, 173 320-1981-03, 177 323-1308, 97 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-03, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1660-25	, 161	320–1847, 15 3	3	320-1977-01	, 177, 181	323–1291, 11	4
320-1660-34, 161 320-1906-18, 173 320-1978-03, 181 323-1304, 101, 149 320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1306, 101, 149 320-1660-36, 161 320-1906-20, 173 320-1981-03, 177 323-1308, 97 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1699, 169 320-1909-29, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-03, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1660-26	, 161	320–1848, 15 3	3	320-1977-03	, 177, 181	323–1292, 11	4
320-1660-35, 161 320-1906-19, 173 320-1981-01, 177 323-1306, 101, 149 320-1660-36, 161 320-1906-20, 173 320-1981-03, 177 323-1308, 97 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1699, 169 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699-02, 171 320-1909-30, 153 320-1986-03, 181 323-1410-01, 109 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-05, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1660-27	, 161	320–1904, 15 3	3	320-1978-01	, 181	323–1302, 97	
320-1660-36, 161 320-1906-20, 173 320-1981-03, 177 323-1308, 97 320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1410-01, 109 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107	320-1660-34	, 161	320-1906-18,	, 173	320-1978-03	, 181	323–1304, 10	1, 149
320-1688-01, 128 320-1906-21, 173 320-1986-01, 177, 181 323-1342, 149 320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1410-01, 109 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1441-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107	320-1660-35	, 161	320-1906-19,	, 173	320-1981-01	, 177	323–1306, 10	1, 149
320-1688-02, 128 320-1909-28, 153 320-1986-02, 177, 181 323-1343, 149 320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1410-01, 109 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107	320-1660-36	, 161	320-1906-20,	, 173	320-1981-03	, 177	323–1308, 97	
320-1699, 169 320-1909-29, 153 320-1986-03, 181 323-1410-01, 109 320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1688-01	, 128	320-1906-21,	, 173	320-1986-01	, 177, 181	323–1342, 14	9
320-1699-02, 171 320-1909-30, 153 320-1986-07, 177 323-1410-03, 122 320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1688-02	, 128	320-1909-28,	, 153	320-1986-02	, 177, 181	323–1343, 14	9
320-1728-02, 167, 183 320-1909-31, 153 320-1990-01, 175 323-1411-01, 109, 118, 120 320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 323-1491, 39, 43, 103, 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320–1699, 16 9	9	320-1909-29,	, 153	320-1986-03	, 181	323-1410-01	, 109
320-1728-03, 167, 183 320-1909-32, 153 320-1990-02, 175 323-1444, 103, 107 320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1699-02	, 171	320-1909-30,	, 153	320-1986-07	, 177	323-1410-03	, 122
320-1728-05, 167, 183 320-1909-33, 153 320-1991-01, 175, 179 323-1445, 39, 43, 103, 105, 107 320-1728-06, 167, 183 320-1909-34, 153 320-1992-01, 175, 179 107 320-1729-03, 167, 183 320-1909-35, 153 320-1992-02, 175, 179 323-1491, 39, 43, 103, 107	320-1728-02	, 167, 183	320-1909-31,	, 153	320-1990-01	, 175	323-1411-01	109, 118, 120
320–1728–06, 167 , 183 320–1909–34, 153 320–1992–01, 175 , 179 320–1729–03, 167 , 183 320–1909–35, 153 320–1992–02, 175 , 179 323–1491, 39 , 43 , 103 , 107	320-1728-03	, 167, 183	320-1909-32,	, 153	320-1990-02	, 175	323–1444, 10	3, 107
320–1729–03, 167 , 183 320–1909–34, 153 320–1992–01, 175 , 179 320–1729–03, 167 , 183 320–1909–35, 153 320–1992–02, 175 , 179 323–1491, 39 , 43 , 103 , 107	320-1728-05	, 167, 183	320-1909-33,	, 153	320-1991-01	, 175, 179	323–1445, 39	, 43, 103, 105,
320-1729-03, 107 , 103 320-1909-35, 133 320-1992-02, 173 , 179	320-1728-06	, 167, 183	320-1909-34	, 153	320-1992-01	, 175, 179		
	320-1729-03	, 167, 183	320-1909-35	, 153	320-1992-02	, 175, 179		
320–1729–06, 167 , 183 320–1909–36, 153 321–0094, 97 323–1492, 17 , 39 , 43 , 101 , 103 , 107	320-1729-06	, 167, 183	320-1909-36	, 153	321–0094, 97			, 39, 43, 101,
320–1730–03, 167 , 183 320–1959–01, 175 321–0231, 97 323–1493, 101 , 105 , 107	320-1730-03	, 167, 183	320-1959-01,	, 175	321–0231, 97			1. 105. 107
320–1730–04, 167 , 183 320–1959–02, 175 321–0270, 97 323–1494, 39 , 43	320-1730-04	, 167, 183	320-1959-02,	, 175	321–0270, 97			
320–1730–07, 167 , 183 320–1959–03, 175 321–0307–03, 97 , 109 323–1500, 39 , 43	320-1730-07	, 167, 183	320-1959-03	, 175	321-0307-03	, 97, 109	•	
320–1730–08, 167 , 183 320–1959–04, 175 321–0307–06, 97 323–1502, 39 , 43	320-1730-08	, 167, 183	320-1959-04,	, 175	321-0307-06	, 97		
320–1747–15, 185 320–1959–05, 175 321–0307–07, 97 , 105 , 107	320-1747-15	, 185	320-1959-05,	, 175	321–0307–07	, 97, 105, 107	100 - , 00	, -

Part No. Page	Part No. Page	Part No. Page	Part No. Page
323–1503, 101 , 105 , 107	331–0042, 39 , 43 , 66	332–2921, 26	338–2447, 116
323–1504, 39 , 43	331–0531–01, 35	332–3007, 141	338–2455, 136
323–1540, 103 , 107	331–0531–02, 35	332–3021, 90	338–2479, 123
323–1546, 101	331–0532, 35	332–3023, 93	338–2491, 141
323–1548, 17 , 101	331–0533, 35	332–3024–14, 93	338–2508, 90
323–1549, 17	331–0554, 39 , 43	332–3096–01, 103 , 107	338–2511, 61 , 63
323–1580, 103 , 107	331–0555, 39 , 43	332–3196, 89 , 92	338–2532, 145
323–1581, 103 , 107	332–0052, 97	332–3235, 109	338–2536, 69
323–1591, 101	332–0604, 101 , 105 , 107	332–3262, 111	338–2538, 69
323–1605–02, 103 , 107	332–0607, 97 , 149	332–3303–01, 159 , 165 ,	338–2563, 69
323–1605–03, 103 , 107	332–0699, 69	169, 171	338–2569, 149
323–1614–01, 103 , 107	332–0795, 149	332–3332–04, 139	338–2570, 149
323–1615, 103 , 107	332–0941, 15 , 37 , 41 , 59	332–3440, 39 , 43	338–2571, 149
323–1623, 103 , 107	332–0942, 94 , 95 , 109 , 124 ,	332–3496, 105 , 107	338–2590, 142
323–1624, 103 , 107	142	333–0133, 126 , 138	338–2592–01, 103 , 107
323–1637, 37 , 41 , 103 , 107	332–0970, 69	333–0407–02, 27	338–2592–02, 103
323–1643–01, 105 , 107	332–1043, 101 , 105 , 107	333–0407–04, 27	338–2605, 103
323–1644–01, 141	332–1243, 149	333–0407–05, 27	338–2756, 149
323–1644–02, 141 , 149	332–1281, 15	333–0438–05, 93	338–2760–02, 35
323–1644–03, 145	332–1292, 15	333–0438–06, 93	338–2796, 141
323–1647, 141	332–1389, 47 , 49 , 51 , 53 ,	333–0468, 35	338–2867, 141
323–1648, 103 , 107 , 141 ,	79, 81, 93, 157, 163, 167, 169, 171, 173, 175, 179, 183	333–0494–01, 35	338–2875, 114
145, 149		333–0494–02, 35	338–2931–01, 109
323–1652, 39 , 43 , 105 , 107	332–1445, 32 , 33 , 61 , 63 ,	333–0639–01, 37 , 41	338–2931–02, 109
323–1666, 105 , 107	69, 70, 103, 107, 111, 117, 121, 141	333–0639–02, 37 , 41	338–2932–01, 109
323–1667, 105 , 107	332–1468, 39 , 43	334–0116, 130	338–2932–02, 109
323–1708, 31 , 32 , 33 , 101 ,	332–1469, 39 , 43	335–0173, 94	338–2933, 109
105, 107	332–1473, 67	337–0049, 97 , 109 , 149	338–2934, 111
323–1709, 31 , 32 , 33 , 101 , 105 , 107	332–1794, 24	337–2402, 63	338–2937, 111
323–1718, 39 , 43 , 105 , 107	332–2001, 155 , 157 , 159 ,	337–2789, 159 , 165 , 169 , 171	338–2984, 101
323–1765, 31 , 32 , 33 , 101 , 105 , 107	161, 163, 165, 167, 169, 171, 173, 175, 179, 183	338–1765–04, 101	338–3012, 157
326–5376, 139	332–2315, 142	338–1904, 117	338–3019, 145
326–5376–01, 139	332–2420, 94 , 95 , 109 , 121	338–1936, 123	338–3033, 115
330–0004, 30	332–2605, 66 , 113	338–1980, 145	338–3034, 122
330–0005, 30	332–2634, 26 , 37 , 41 , 75 ,	338–2172, 142	338–3035–02, 32
330–0141–03, 93	79, 81	338–2278, 97	338–3038, 103
330–0141–04, 93	332–2723, 97	338–2347, 120	338–3232, 121
330–0141–04, 93	332–2744–07, 155 , 157 , 159 , 161 , 165 , 167 , 169 ,	338–2368, 124	338–3233, 121
330–0144, 35	171, 173, 175, 179, 183	338–2382, 66	338–3235, 121
331–0010, 35	332–2774, 105 , 107	338–2397, 61	338–3252, 97
331–0027, 30 , 35 , 66	332–2879–07, 118 , 120	338–2446, 30	338–3285, 105 , 107
55. 552., 55, 55, 55			

Part No. Page	Part No. Page	Part No. Page	Part No. Page
338–3335–06, 39	403–2987, 89	415–0656–21, 65	502–1259, 37 , 41
338–3337, 141	403–3748, 67	415–0660, 65	502–1260, 37 , 41
338–3344, 101	403–4528–02, 67	415–0680, 65	502–1261, 37 , 41
338–3348, 89	405–3980, 83 , 85	416–0444, 15 , 59	502–1302, 24 , 69
338–3359, 141	405–4104, 83 , 85	416–0446, 15 , 59	502–1336, 37 , 41
338–3366, 119	405–4196, 83 , 85	416–0632, 15 , 59	503–0183, 61
338–3398–01, 103	405–4197, 83 , 85	416–0850, 67	503–0189, 15 , 17 , 19
338–3398–02, 103	405–4198, 83 , 85	416–0960, 15 , 59	503–0249, 15 , 17 , 19 , 47
338–3399, 39 , 43	405–4199–01, 83 , 85	416–1019, 59	503–0361, 41
338–3429, 149	405–4199–02, 83 , 85	416–1021–02, 107	503–0398, 41
338–3594, 31 , 32	405–4200, 83	416–1068, 67	503–0856, 47 , 49 , 51
338–3752, 118	405–4201–01, 83	416–1076, 59	503–1461, 22
338–3761, 101	405–4201–02, 83	416–1084, 59	503–1484, 21
338–3762–01, 103	405–4202, 83 , 85	416–1088, 59	503–1575–02, 28 , 29
338–3762–02, 103	405–4203, 83	416–1097, 59	503–1590–12, 23
338–3763–02, 33	405–4205, 83 , 85	425–1799, 89	503–1619, 28 , 29
338–3923–06, 43	405–4206, 83 , 85	501–0084, 15 , 17 , 61 , 63 , 65	503–1634, 49 , 51
338–3974, 101	405–4212, 83 , 85	501–0216, 15 , 17	503–1634–03, 37 , 41
338–3976, 107	405–4213–01, 83 , 85	501–0537–18, 26	503–1660–02, 61
338–4058–01, 107	405–4213–02, 83 , 85	501–0537–29, 26	503–1702, 20 , 22
350–1222, 113	405–4214, 83 , 85	501–0552, 61 , 63 , 65	503–1703, 20
352–0180, 138	405–4289, 83 , 85	501–0554, 47 , 49 , 51 , 53	503–1705, 21
353–0094–01, 101	405–5213, 85	501–0619, 25	503–1708, 47 , 49 , 51
355–0189, 98	405–5214, 85	502–0020, 25	503–1723, 23
357–0030, 32 , 33 , 39 , 43 ,	405–5289, 85	502–0034, 24	503–1779, 35 , 49 , 51
101, 142	405–5290, 85	502–0067, 24	503–1870–11, 20 , 21 , 22 , 23
357–0093, 89	405–5291, 85	502–0080, 28 , 29	503–1870–12, 20
357–0114, 94 , 95	405–5292, 85	502–0153, 47 , 49 , 51	503–1870–14, 20 , 21
359–0048, 138	406–0332, 97	502–0175, 20 , 21	503–1872–01, 35 , 47 , 49 , 51
359–0051, 101	406–0333, 97	502–0184, 47 , 49 , 51	503–1872–05, 47 , 49 , 51
370–4003, 24	406–0334, 97	502–0827, 37 , 41	503–1872–07, 47 , 49 , 51
399–0117, 61	406–0639, 83 , 85	502–0942, 61	503–2102, 21
399–0121, 61	406–0761–03, 111	502–0943, 61	503–2157–01, 37 , 41
399–0122, 61	406–0918, 83 , 85	502–0971, 35 , 47	504–0003, 53
402–0354, 118 , 120 , 121 , 123 , 124	415–0565–02, 61 , 63	502–1043–11, 26	504-0028, 47 , 49 , 51
402–0508, 75	415-0566-02, 61 , 63 , 65	502–1043–12, 26	504–0064, 24
402–0527, 97 , 109 , 149	415–0616, 61 , 63	502–1045–03, 26	504–0171, 15 , 17 , 19
402–0610, 19 , 61 , 63 , 65 , 79	415–0650–01, 65	502–1054–08, 57	505–0007, 19
402–0729, 77 , 81	415–0651–19, 65	502–1070, 26	505–0019, 15 , 17 , 19
403–2733–02, 47 , 49 , 51 ,	415–0652, 65	502–1226, 24 , 25	505–0021, 15 , 17 , 37 , 41
83, 85	415–0654, 65	502–1232, 25	505–0040, 37 , 41
403–2985, 67	415–0655, 65	502–1257, 37 , 41	505–0050, 37 , 41 , 61 , 63 , 65

Part No. Page	Part No. Page	Part No. Page	Part No. Page		
505–0051, 35	517–0136, 77	526–0128, 37 , 41	800–0050, 24 , 45 , 53 , 155 ,		
505–0055, 61 , 63 , 65	517–0137, 99 , 131	526–0141, 79 , 81	159, 163, 167, 169, 173,		
505–0078, 37 , 41	517–0138–02, 39 , 43	526–0174, 53	183		
505–0084, 45 , 47 , 53	517–0245, 83 , 85	526–0219, 20 , 21 , 22 , 26 ,	800–0051, 37 , 41 , 47 , 49 , 51 , 53 , 155 , 157 , 161 , 167 ,		
505–0098, 24	517–0301, 99	47, 49, 51, 151, 155, 159, 163, 167, 169, 173, 183	173, 175, 179, 183		
505–0100, 37 , 41	517–0302, 98	526–0238, 67	800–0052, 26 , 45 , 47 , 49 , 51 , 155 , 157 , 159 , 161 ,		
505–0102, 15 , 17 , 19	518–0018, 89	526–0249, 45 , 53	165, 167, 169, 171, 173,		
505–0110, 63	518–0350, 24	526–0257, 111	175, 179, 183		
505–0130, 45 , 47 , 53	518–0440, 138	526–0353, 55 , 56	800–0054, 157		
505–0151, 15 , 17 , 131	518-0548-02, 17 , 19 , 35 ,	526–0380, 57	800–0061, 53		
505–0166, 45 , 47 , 53	47, 77	526–0399–13, 47 , 49 , 51	800–0062, 15 , 17 , 19		
505–0172, 61 , 63 , 65	518–0548–08, 30	526–0399–16, 75	800–0064, 45		
505–0324, 15 , 17 , 19	518–0548–20, 49 , 51	526–0399–25, 53	800–0071, 45 , 53		
505–0356, 35	518–0548–24, 75 , 77	526–0399–42, 67	800–0073, 55		
505–1384, 35	518–0548–35, 41	526–0409, 99	800–0090, 15 , 45 , 59		
505–1403, 26	518–0548–42, 81	526–0416, 89 , 92	800–0091, 20 , 21 , 22 , 23 , 26 , 57		
505–1405, 147	518–0548–60, 17 , 19	526–0417, 111	800–0092, 55 , 56 , 89 , 167 ,		
505–1433, 15 , 17 , 19	518–0561, 26	526–0450, 89	183		
505–1503, 15 , 17	518–0601, 13	526–1115, 79 , 81	800–0094, 89 , 151 , 155 ,		
505–1519, 37 , 41	518–0633, 17 , 19	526–2060, 89	159, 163, 169, 173		
508–0001, 97	525–0304, 13	526–2080, 89	800–0106, 47 , 49 , 51		
508–0015, 15	525–0305, 13	526–2100, 77 , 165 , 171	800–0130, 25 , 35 , 37 , 41		
508–0051, 97 , 142	525–0306, 13	526–2120, 89 , 141 , 159 ,	800–0133, 47 , 49 , 51		
508–0228, 93	525–0551–02, 13	165, 169, 171, 175, 179	800–0156, 67		
508–1057, 75 , 77 , 79 , 81	525–0551–03, 13	526–2135, 57	800–0195, 89		
508–1086, 89	525–0551–04, 13	526–2140, 165 , 171 , 177 ,	800–0229, 45		
508–1090, 75 , 77 , 79 , 81	526–0002, 146	179	800–0236, 56		
508–1092, 71 , 72 , 155 , 173 ,	526–0003, 149	625–2141–01, 66	800–0237, 56		
177, 183	526–0008, 65 , 113 , 118 , 120 , 125 , 137 , 155	718–1067, 55	800–0270, 19		
508–1109, 75 , 77 , 159 , 163 , 165 , 167 , 169 , 171 , 179	526–0018, 97	720–1146, 89	800–0273, 92		
509–0065, 141	526–0021, 47	725–1103, 89	800–0310–64, 53		
509–0266–03, 89	526–0029, 37 , 41 , 49 , 51 ,	775–0049, 90	800–0576, 92		
509–0272, 35 , 37 , 41	143, 155, 157, 159, 16 1 ,	800–0003, 109	800–2004, 89		
509–0272–02, 69	163, 167, 169, 173, 175, 179, 183	800–0006, 127	800–2008, 93		
510–0168, 89	526-0030, 20 , 21 , 22 , 23 , 55	800–0007, 149 800–0024, 94 , 97 , 109	800–2045, 89		
511–0161, 56	526–0032, 69		800–2052, 146 800–2059, 55		
511–0161–05, 55	526–0049, 99	800–0026, 67			
515–0300–06, 89	526–0108, 155 , 163 , 173	800–0031, 151 , 155 , 163 , 173	800–2063, 165 , 171 800–2069, 89		
517–0021, 93	526-0112, 47 , 49 , 51	800–0033, 159 , 167 , 169	800–2084, 89		
517–0131, 75 , 77 , 79 , 81 , 98 , 99 , 113	526-0115, 118 , 120 , 123 , 124 , 151 , 155 , 159 , 163 ,	800–0048, 67 , 155 , 157 , 159 , 161 , 165 , 167 , 169 ,	800–2086, 79 , 81 , 165 , 171 ,		
517–0135, 77 , 81 167, 169, 173		171, 173, 175, 179, 183	179		

Part No. Page	Part No. Page	Part No. Page	Part No. Page	
800–2087, 89 800–2088, 175	815–0388, 116 815–0464, 39 , 43	821–5002–03, 37 , 41 , 45 , 53 , 71 , 75 , 79 , 83 , 143 ,	850–0114–54, 90 850–0114–55, 89	
800–2089, 159 , 165 , 169 ,	815–0538, 101 , 105 , 107	153, 183	850–0114–56, 89	
171	815–0539, 37 , 41	821–5002–04, 47 , 49 , 51 , 61 , 63 , 71 , 155	850–2003, 93	
800–2090, 89	815–0549, 109	821–5003–01, 47 , 49 , 51 ,	850–2004, 93	
800–2091, 89	815–0550, 111	75, 79, 83	850–2005, 55 , 89 , 93	
800–2111, 75 , 77	815–0607, 83	821–5003–03, 75 , 79	850–2006, 89	
800–2114, 179	815–0713, 45	821–5004–02, 15 , 20 , 37 ,	850–2008, 55 , 89 , 146 , 165 ,	
800–2116, 165 , 171 , 177	815–0728, 69	41, 49, 51, 67, 75, 79	171	
800–2242, 89	815–0825, 90	821–6001–02, 89 , 90	850–2010, 79 , 81 , 89 , 90 ,	
800–2526, 57	815–0875–02, 98	821–6001–03, 70	159, 165, 169, 171, 175, 179	
800–3017–18, 90	815–0901–06, 97	821–6002–03, 72 , 77 , 81 , 165 , 171 , 175 , 179	850–2012, 75 , 77 , 165 , 171 ,	
800–3017–39, 89	815–0905–06, 123 , 124	821–6003–02, 77 , 81 , 165 ,	177, 179	
800–3017–55, 89	815–0907, 85	171, 179	851–0039, 55	
800–3017–56, 89	815–0937, 97 , 113 , 114 , 117 ,	821–6004–01, 77 , 81	853–0003, 144	
801–0048, 17 , 19	119	822–1050, 69	853–0005, 118 , 120 , 121 ,	
805–0033, 89 , 92	816–0098, 73 , 83 , 85 , 159 ,	822–2160–11, 139	123, 142	
809–0036, 15	163, 167, 169	822–3047, 93	853–0008, 97 , 99 , 124	
812–0028, 138	818–0231–02, 85	822–3075, 93	853–1008, 65	
812–0029, 139	821–0004, 97 , 109	850–0025, 141	854–0004, 139	
812–0059, 138	821–0005, 112	850–0030, 99 , 113 , 144 , 155	856–0002, 66	
812–0063, 115	821–0009, 71 , 155 , 185	850–0040, 127 , 155 , 163 ,	856–0006, 15 , 17 , 75 , 77 , 79 , 81 , 97 , 109 , 149	
812–0066, 149	821–0010, 15 , 17 , 35 , 61 , 63 , 73 , 85 , 97 , 149 , 151 ,	173	856–0008, 67 , 94 , 97 , 145 ,	
812–0067, 19	153, 159, 161, 167, 169,	850–0045, 109 , 151 , 155 , 159 , 163 , 167 , 169 , 173	149	
812–0070, 146	173	850–0050, 17 , 19 , 24 , 45 ,	856–0010, 15 , 17 , 19 , 155 ,	
812–0075, 66	821–0011, 73 , 159 , 163 , 167 , 169	47 , 49 , 51 , 53 , 155 , 157 ,	159, 163, 165, 167, 169, 171, 173, 175, 179, 185	
812–0079, 30 , 141	821–0014, 77 , 81 , 85 , 97 ,	159, 161, 163, 167, 169, 173, 175, 179, 183	856–0013, 15 , 59	
812–0081, 121	149	850–0055, 45 , 53 , 55	860–0008, 66	
812–0082, 35 , 116	821–0016, 61 , 63 , 65 , 141	850–0060, 15 , 20 , 21 , 22 ,	860–1005, 149	
812–0084, 113 , 122	821–0017, 121	23, 26, 45, 55, 56, 59, 89,	860–2005, 93	
812–0085, 141 , 142	821–0018, 73 , 147 , 159 ,	92, 151, 155, 159, 163, 167, 169, 173, 183	860–2006, 55 , 89 , 93	
812–0157, 155 , 163 , 173	163, 167, 169, 173	850-0070, 25 , 35 , 37 , 41 ,	860–2008, 55	
813–0100, 35 , 118 , 120 , 142 ,	821–0022, 55	47, 49, 51	860–2010, 165 , 171 , 177 ,	
144	821–0029, 21 , 22 , 23 , 47 , 83 , 85 , 146	850–0079, 67	179	
813–0103, 35 , 69 , 70 , 125 , 136	821–0030, 45 , 85 , 159 , 169	850–0086, 89	862–0001, 127	
813–0105, 30	821–0033, 22 , 23 , 29	850–0092, 92	862–0003, 155 , 157 , 161 , 167 , 173 , 175 , 179 , 183	
813–0107, 137	821–0035, 47 , 49 , 51 , 83	850–0103, 26		
813–0108, 113	821–2023, 150	850–0105, 57	862–0005, 151 , 155 , 159 , 163 , 169 , 173	
813–0118, 155	821–2034, 179	850–0114–05, 47 , 49 , 51	862–0008, 67	
815–0236, 61 , 63 , 65 , 83 , 85	821–2035, 72 , 165 , 171	850–0114–09, 53		
815–0350, 66				
815–0385, 66 , 99 , 126				

Part No.	<u>Page</u>	Part No.	<u>Page</u>	Part No.	<u>Page</u>	Part No.	<u>Page</u>	
862–0016, 167 , 183		870–0212, 19 , 35 , 61 , 63 ,		870–0452, 56		870–1220, 111		
862–0017, 92	862–0017, 92		65, 83, 85, 147, 155, 163, 167, 173, 183		870–0458, 66		870–1221, 122	
862–0033, 26		870–0221. 35	70–0221, 35 , 118 , 120 , 121 ,		870–0494, 71 , 73 , 155 , 159 ,		870–2054, 77 , 81 , 175 , 179	
862–0035, 45					169, 173, 183	870–2055, 77	′ , 81	
864–0011, 65	870–0235, 83		870–0504, 72 , 165 , 171 , 175 , 179		870–2064–02, 89			
867–0028, 65	870–0048, 118, 120, 123, 65, 67, 73, 75, 83, 85, 121, 141, 143, 159, 16			870–0517–01, 114 870–0517–02, 114		870–2161, 55		
870–0048, 118			65, 67, 73, 75, 83, 85, 94, 121, 141, 143, 159, 163,			871–0010, 9 9)	
		167, 169	870–0550–05, 47 , 49 , 51 ,	871–0015, 97	', 149			
870–0053, 14 4		870–0263, 15		75, 79	895–0182, 159 , 163 , 165 ,			
870–0131, 30 , 37 , 41 97 , 112 , 118 , 120 , 1 133 , 136 , 137 , 142		870–0281, 21 , 22 , 23 , 45 , 83 , 85 , 146	, 22 , 23 , 45 ,	870–0550–07, 79		167, 169, 171, 179		
			870-0550-09, 20 , 37 , 41 , 47 , 49 , 51		895–0359, 109			
, ,	870–0183, 19 , 99 , 126 870–0437, 22 , 23 , 29				, 23, 29	898–1254–25, 93		

Cummins Power Generation 1400 73rd Avenue N.E. Minneapolis, MN 55432 1-800-888-6266 763-574-5000 International Use Fax: 763-574-8087

Cummins is a registered trademark of Cummins Inc.

