


Parts Catalog

Models DGGD (Spec B) DGHD (Spec B) DGHE (Spec B)

GENERATOR SET

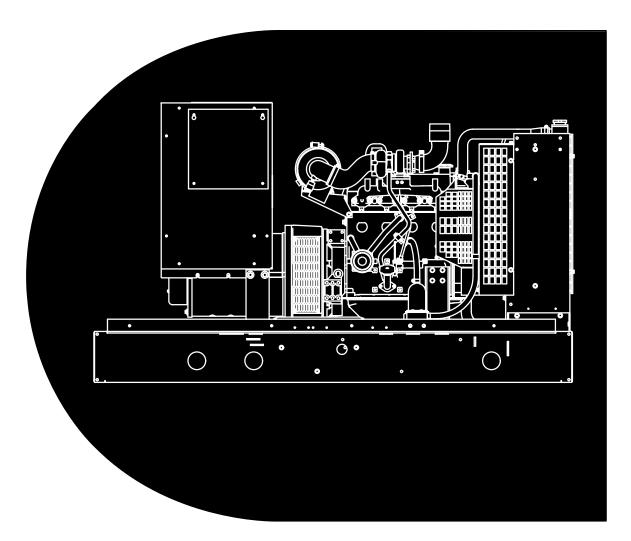

MODEL IDENTIFICATION

This catalog covers models produced under the Cummins[®]/Onan[®] and Cummins Power Generation brand names.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Cummins Power Generation nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Cummins Power Generation manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

A DANGER

This symbol warns of immediate hazards which will result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS

Service and repair of Cummins Power Generation equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

Introduction

This catalog applies to the standard generator models DGGD, DGHD and DGHE as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set.

Engine parts that have been modified or added by Cummins Power Generation are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's nameplate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

Cummins Power Generation Generator Model	Cummins Engine Model
DGGD	4B3.3–G1
DGHD	4BT3.3–G2
DGHE	4BT3.3–G2

Replacement Engine

Generator Set Data Table

Model/	Electrical Data					
Specification	Watts	Volts	Hertz	Wire	Phase	Voltage
28DGGD*	28,000	#	50	4,6,12	1 or 3	12 VDC
35DGGD*	35,000	#	60	4,6,12	1 or 3	12 VDC
32DGHD*	32,000	#	50	4,6,12	1 or 3	12 VDC
40DGHD*	40,000	#	60	4,6,12	1 or 3	12 VDC
40DGHE*	40,000	#	50	4,6,12	1 or 3	12 VDC
50DGHE*	50,000	#	60	4,6,12	1 or 3	12 VDC

* – The Specification number denotes customer requested options or deviations from the standard model. The specification letter advances with major manufacturing changes.

– Broad Range Reconnectible.

Copyright© 2001 Cummins Power Generation. All rights reserved.

Index

Actuator, Linear – Electronic Governor, Adapter, Duct – Radiator, Adapter, Exhaust – DGGD, Adapter, Exhaust – DGHD, DGHE – Slip On, Adapter, Exhaust – DGHD, DGHE – Threaded, Alarm, Basin, Alarm, Low Fuel,

Barrier, Sound, Block, Terminal – Generator Heater, Board, Printed Circuit – Bargraph, Board, Printed Circuit – Base, Board, Printed Circuit – Fuel Tank Control, Board, Printed Circuit – LED, Board, Printed Circuit – Lonworks, Box, Circuit Breaker – UL Listed, IEC Conformity, Box, Control, Box, Terminal – Generator Heater, Bracket, Control Mounting – Control Housing, Bracket, Overflow Tank, Bracket, Pump – Subbase Fuel Tank, Breaker, Circuit – Fuel Tank Control, Breaker, Circuit – UL Listed, IEC Conformity,

Cap, Fill – Subbase Fuel Tank, Cap, Vent – Subbase Fuel Tank, Cartridge, Heater – Generator, Clamp, Stator – PMG, Cleaner, Air – DGGD, Cleaner, Air – DGHD, DGHE, Control, **51** Control, Fuel Tank – Components, Cover, Battery Tray, Cover, Fuel Tank – Sound Barrier, Cover, Housing – Control, Cover, Stub Up – Skidpan, Cushion, Mounting – Vibration Isolation – Basic Skid, Cushion, Mounting – Vibration Isolation – Housing Ready/Fuel Tank Ready Skid,

Diode – Generator, Display, Digital – Control, Drain, Coolant, Drain, Oil – Extension,

Engine Accessories, 5

Gasket, Exhaust – DGGD, **18** Gauge, Fuel Level – Subbase Fuel Tank, **12** Generator, **45** Generator, Permanent Magnet, 43 Governor, Electronic, 40 Grille, Radiator, 29 Guard, Alternator - Radiator, 29 Guard, Fan - Radiator, 29 Harness, Wiring - AC, 55 Harness, Wiring - Engine, 56 Harness, Wiring - Fuel Tank Control, 15 Harness, Wiring - Low Coolant Level Sender, 24 Harness, Wiring - PMG, 43 Harness, Wiring - Subbase Fuel Tank Pump to Control, 13 Heater, Control, 48 Heater, Coolant, 25 Heater, Generator, 42 Hose, Radiator, 29 Housing, Generator Set - F172, 31 Housing, Generator Set - F173, 33 Housing, Generator Set - F182, 35 Hub, Drive - Generator, 45 Lamp, Indicator - Fuel Tank Control, 15 Line, Fuel - Subbase Fuel Tank, 12

Link, Terminal – Control Housing, Module, Alarm, Muffler, **21** Muffler – DGGD,

Muffler - DGHD, DGHE, 23

Paint, **4** Pan, Skid, Pin, Parallel – PMG, Pump, Subbase Fuel Tank,

Radiator, Rectifier – Generator, Relay, Pump – Fuel Tank Control, Rotor, Exciter, Rotor, PMG,

Sealant, Thread, Sender, Low Coolant Level, Skid – Basic, Skid – Housing Ready/Fuel Tank Ready, Stator, Generator, Stator, PMG, Switch, Basin – Basin Alarm, Switch, Basin – Low Fuel Alarm, Switch, Float – Subbase Fuel Tank, Switch, Key Operator,

Index

Switch, Rocker - Fuel Tank Control, 15

Tank, Fuel – Subbase, Tank, Overflow, Transformer, Current, Tray, Battery, Trip, Shunt – UL Listed, IEC Conformity,

Varistor - Generator, 45

Abbreviations


Some of the following abbreviations may be used throughout this Parts Catalog:

AC	Alternating Current	mm MOH	Millimeter Mabile Off Highway
Amp A/R	Ampere As Required	NFS	Mobile Off Highway Not For Sale
AVR	As Required Automatic Voltage Regulator	NPT	National Pipe Thread
AWG	American Wire Gauge	OD	Outside Diameter
Deg	Degree	oz.	Ounce
DC	Direct Current	PMG	Permanent Magnet Generator
EFC	Electronic Fuel Control	Ph	Phase
ET	External Tooth	PC	Printed Circuit
EIT	External/Internal Tooth	RFI	Radio Frequency Interference
GFI	Ground Fault Interrupter	RT	Right
ID	Inside Diameter	Spec	Specification
IT	Internal Tooth	Thk	Thick
IEC	International Electrotechnical	UL	Underwriters Laboratories Inc.
	Commission	UNC	Union National Coarse
kW	Kilowatt	UNF	Union National Fine
LPG	Liquid Petroleum Gas	VAC	Volts Alternating Current
LT	Left	VDC	Volts Direct Current
M(meter Number)	Meter	W/(ET, IT, EIT)	With

Paint and Thread Sealant

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Ę	525–0305	_	Onan Green Enamel (Non-Metallic) 12 oz. Pressurized Spray Can	5	18–0601	-	Sealant, Thread (6 ml Tube)
	525–0306 525–0304	_ _	Quart Can Gallon Can				


Engine Accessories

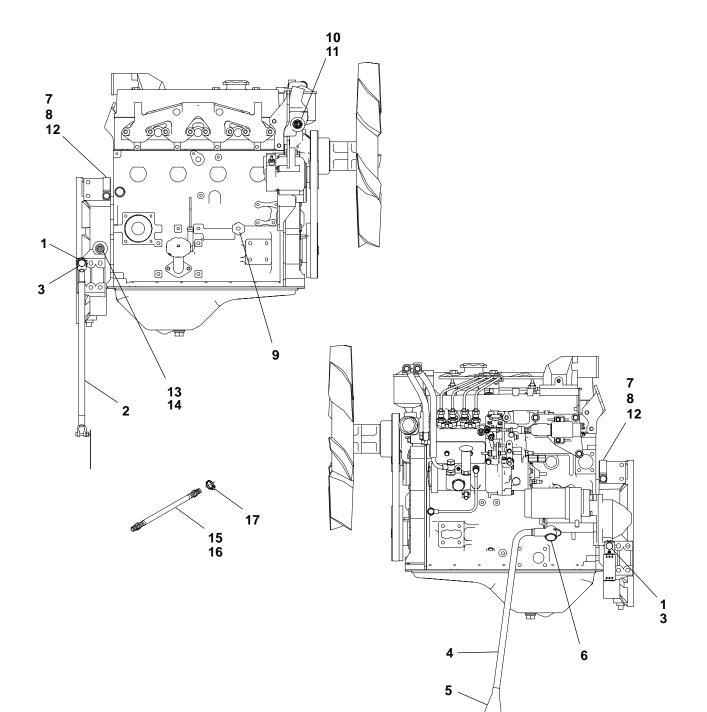

PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	P/ DESC
856–0013	2	Washer, Lock – W/EIT (1/2)	10	505-0019	1	Bushing, R
416–1089	1	Cable, Battery	11	193-0529-01	1	Sensor, Ter
800–2111	2	Screw, Cap – Hex Head (M12 x 1.75 x 25)	12	800–2085	2	Screw, Cap 1.5 x 20)
416–1104	1	Cable, Battery	13	502-1400-02	1	Adapter, Bu
416–1019	1	Boot, Battery – Red	14	150–2651	1	Pick–Up, N
416–1084	1	Boot, Starter – Red	15	501-0502	1	Line, Flexib
332–2634	2	Clamp, "J"	16	501-0729-01	1	Line, Flexib
526–2120	2	Washer, Flat (M10)	17	503–0685	2	Clamp, Hos
193–0444	1	Sender, Oil Pressure				·
	NO. 856-0013 416-1089 800-2111 416-1104 416-1019 416-1084 332-2634 526-2120	NO. USED 856-0013 2 416-1089 1 800-2111 2 416-1004 1 416-1019 1 416-1084 1 332-2634 2 526-2120 2	NO. USED DESCRIPTION 856-0013 2 Washer, Lock - W/EIT (1/2) 416-1089 1 Cable, Battery 800-2111 2 Screw, Cap - Hex Head (M12 x 1.75 x 25) 416-1104 1 Cable, Battery 416-1019 1 Boot, Battery - Red 416-1084 1 Boot, Starter - Red 332-2634 2 Clamp, "J" 526-2120 2 Washer, Flat (M10)	NO. USED DESCRIPTION NO. 856-0013 2 Washer, Lock - W/EIT (1/2) 10 416-1089 1 Cable, Battery 11 800-2111 2 Screw, Cap - Hex Head (M12 x 12 1.75 x 25) 1 13 416-1019 1 Boot, Battery - Red 14 416-1084 1 Boot, Starter - Red 15 332-2634 2 Clamp, "J" 16 526-2120 2 Washer, Flat (M10) 17	NO. USED DESCRIPTION NO. NO. 856-0013 2 Washer, Lock – W/EIT (1/2) 10 505-0019 416-1089 1 Cable, Battery 11 193-0529-01 800-2111 2 Screw, Cap – Hex Head (M12 x 12 800-2085 416-1104 1 Cable, Battery 13 502-1400-02 416-1019 1 Boot, Battery – Red 14 150-2651 416-1084 1 Boot, Starter – Red 15 501-0502 332-2634 2 Clamp, "J" 16 501-0729-01 526-2120 2 Washer, Flat (M10) 17 503-0685	NO. USED DESCRIPTION NO. NO. USED 856-0013 2 Washer, Lock - W/EIT (1/2) 10 505-0019 1 416-1089 1 Cable, Battery 11 193-0529-01 1 800-2111 2 Screw, Cap - Hex Head (M12 x 12 800-2085 2 416-1104 1 Cable, Battery 13 502-1400-02 1 416-1019 1 Boot, Battery - Red 14 150-2651 1 416-1084 1 Boot, Starter - Red 15 501-0502 1 332-2634 2 Clamp, "J" 16 501-0729-01 1 526-2120 2 Washer, Flat (M10) 17 503-0685 2


PART DESCRIPTION Bushing, Reducer (1/2 to 3/8) Sensor, Temperature Screw, Cap – Hex Head (M10 x 1.5 x 20) Adapter, Bushing Pick–Up, Magnetic Line, Flexible Fuel Line, Flexible Fuel Line, Flexible Fuel (With Filter) Clamp, Hose

Oil Drain

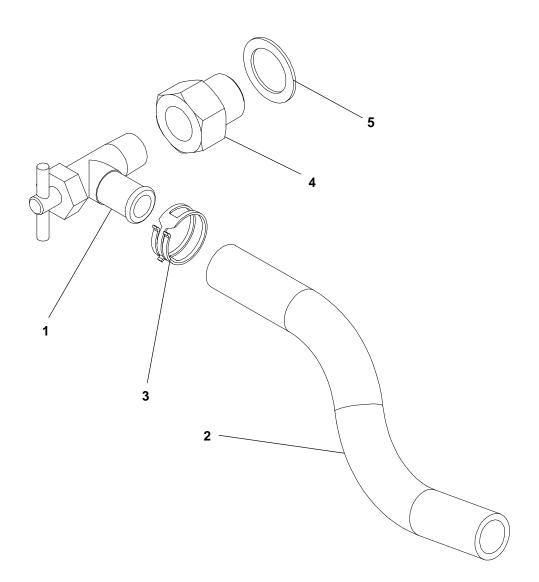


REF	PART	QTY	PART	REF		QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.		USED	DESCRIPTION
1 2	504–0176 503–1657	1 -	Valve, Oil Drain Hose, Oil Drain – Bulk (Order by the Foot – 2 Feet Required)	3 4 5	503–0131 102–1448–02 526–0329	1 1 1	Clamp, Hose Adapter, Oil Drain Washer, Flat

Battery Tray

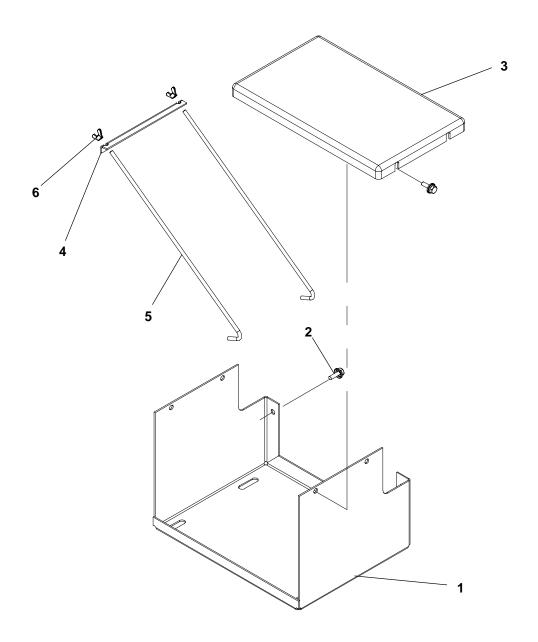


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	416-1100-02	1	Tray, Battery	4	416-1103-02	1	Hold Down, Battery
2	821-6003-02	7	Screw, Hex Head (M8 x 1.25 x	5	416-0993-02	2	Rod, Battery Hold Down
			20)	6	865–0030	2	Nut, Wing
3	416–1101	1	Cover, Battery				

Air Cleaner DGGD

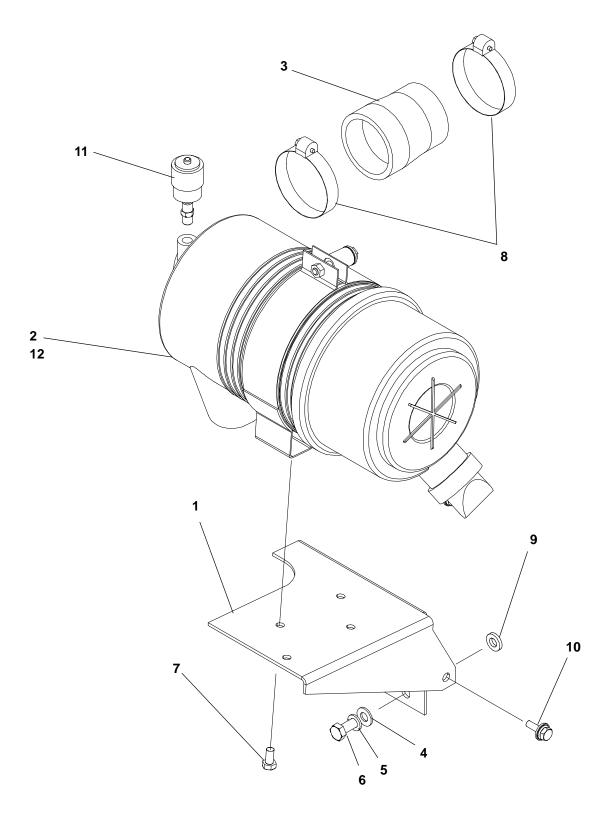


Air Cleaner DGGD

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	140-3319-02	1	Bracket, Air Cleaner	8	503-1870-05	2	Clamp, Hose
2	140–3119	1	Cleaner, Air	9	526-0174	2	Washer, Flat
3	503-2247	1	Hose, Air	10	821-6003-01	1	Screw, Hex Head (M8 x 1.25
4	526-2120	2	Washer, Flat (M10)				x 16)
5	850–2010	2	Washer, Lock – Split (M10)	11	140–1548	1	Indicator, Service
6	800–2086	2	Screw, Cap – Hex Head (M10 x 1.5 x 25)	12	140–3055	1	Element, Replacement
7	800–2056	2	Screw, Cap – Hex Head (M8 x 1.25 x 16)				

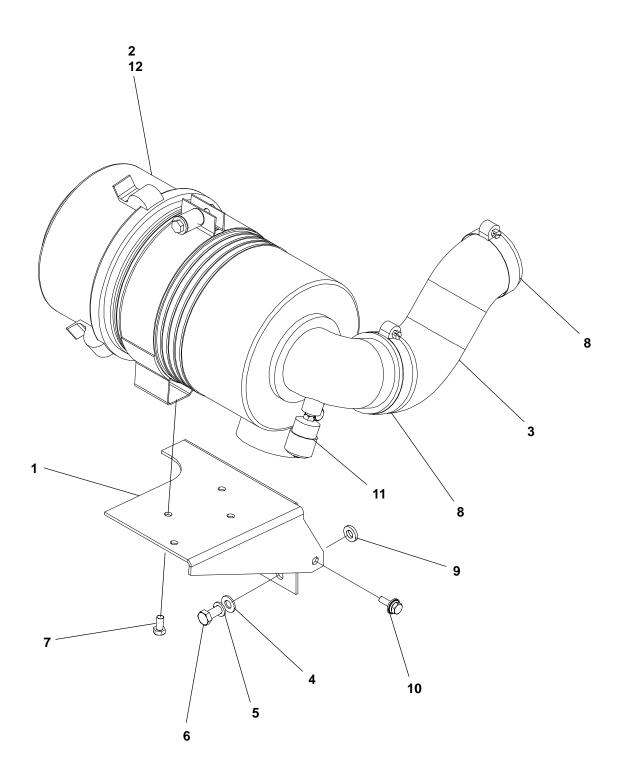


Air Cleaner DGHD, DGHE

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
		0015				0015	
1	140-3319-02	1	Bracket, Air Cleaner	8	503-1870-05	2	Clamp, Hose
2	140–3120	1	Cleaner, Air	9	526-0174	2	Washer, Flat
3	503–2250	1	Elbow, Hose	10	821-6003-01	1	Screw, Hex Head (M8 x 1.25 x
4	526–2120	2	Washer, Flat (M10)				20)
5	850–2010	2	Washer, Lock – Split (M10)	11	140–1548	1	Indicator, Service
6	800–2086	2	Screw, Cap – Hex Head (M10 x 1.5 x 25)	12	140–3067	1	Element, Replacement
7	800–2056	2	Screw, Cap – Hex Head (M8 x 1.25 x 16)				

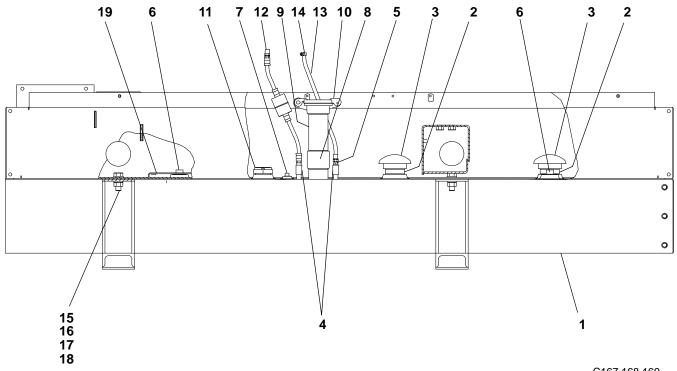


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Tank, Fuel	7	505–0110	1	Plug, Square Head (3/8")
	159–1463	1	70 Gallon (Double Wall Tank)	8	505-0203	1	Coupling, Pipe (2")
	159-1463-01	1	80 Gallon (Single Wall Tank)	9	505-0401	1	Nipple, Pipe (2" x 6" Long)
	159–1464	1	140 Gallon (Double Wall	10	415–0043	1	Cap, Fill – Fuel
			Tank)	11			Gauge, Level – Fuel
2			Nipple, Close (2")		415-0565-61	1	70, 80 Gallon Tank
	505-0172	2	70 Gallon Tank		415-0565-52	2 1	140 Gallon Tank
	505-0172	1	80 Gallon Tank	12	501-0627-03	3 1	Line, Fuel – In
3			Cap, Vent – Pipe	13	501-0502	1	Line, Fuel – Out
	159-1371-03	2	70 Gallon Tank (2")	14	503-0685	1	Clamp, Hose
	159-1371-03	1	80 Gallon Tank (2")	15	526-0399-66	6 4	Washer, Flat (M16)
	159-1371-05	2	140 Gallon Tank (3")	16	800-3017-73	3 4	Screw, Cap – Hex Head (M16 x
4	505-0027	2	Coupling, Pipe (1/4")				2 x 45)
5	505-0007	1	Bushing, Reducer (1/4" x 1/8")	17	850-0114-57	′4	Washer, Lock (M16)
6			Plug, Square Head (1–1/4")	18	862-0026-58	3 4	Nut, Hex (M16 x 2)
	505-0359	2	70, 140 Gallon Tank	19	232-3552-02	2 8	Shim, Tank – Fuel
	505–0359	1	80 Gallon Tank				

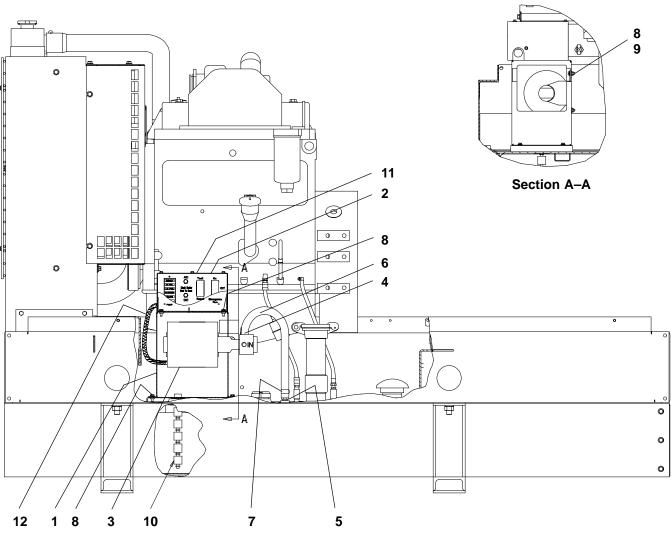


C149

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	159–2693–02	2 1	Bracket, Pump	7	503–0183	2	Clamp, Hose
2	625–2141–02		Control, Fuel Tank (See Separate Page for	8	821–2033	12	Screw, Lock – Flange (M6 x 1 x 16)
			Components)	9	870–2054	4	Nut, Lock – Flange (M6 x 1)
3	399-0117-01	1	Pump	10			Switch, Float
4	502-0942	1	Elbow, Hose – 90°		308-1155-0	1 1	70 gallon tank
5	502-0943	1	Connector, Hose (1/2 x 5/8		308-1155-02	21	140 gallon tank
			hose)	11	098–5387	1	Label, Danger
6	503-1660-05	1	Hose, Fuel (Pump to Tank)	12	338–2397	1	Harness, Pump to Control

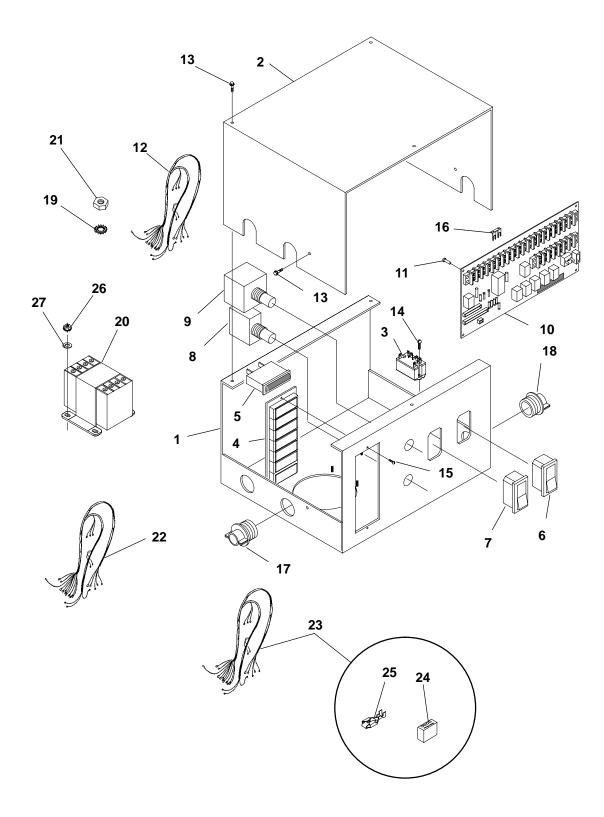


Fuel Tank Control

REF		QTY	PART	REF		QTY	
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	625–2141–02	1	Control, Fuel Tank – Complete (Includes Parts Listed Below)	14	812–0075	2	Screw, Machine – Round Head (#8–32 x 1/4")
1	319–0486	1	Box, Control	15	815–0385	2	Screw, Machine – Round Head
2	319–0485	1	Cover, Box				(#6–32 x 1/2")
3	307-2677-02	1	Relay, Pump (K130)	16	332–2605	2	Jumper, Terminal
4	322-0403-02	1	Light, Assembly, Indicator –	17	331–0027	2	Connector, Romex
			7 Light (Includes Wiring	18	331–0042	1	Connector, Knockout
			Harness)	19	856-0002	1	Washer –EIT (#8)
5	322-0369-02	1	Lamp, Indicator – Replacement	20	315–0686	1	Transformer
6	308–0912	1	Switch, Rocker (On/Off/	21	860–0008	1	Nut, Hex (#8–32)
			Emergency Run) (S102)	22	338–2403	1	Harness, Wiring – Primary –
7	308–0852	1	Switch, Rocker (Reset/Off/Test)				Transformer (10")
			(S111)	23	338–2404	1	Harness, Wiring – Secondary –
8	320–1653	1	Breaker, Circuit – DC (Single Pole) (CB107)				Transformer (6") (Includes Connector and Pin)
9	320–1654	1	Breaker, Circuit – AC (Double	24	323-1374-04	1	Housing, Connector
			Pole) (CB101)	25	323-1302	1	Pin, Contact
10	300–3464	1	Board, Printed Circuit	26	870-0221	4	Nut, Hex – W/ET
11	870–0458	4	Spacer, Board – Printed Circuit	27	526-0003	4	Washer, Flat
12	338–2382	1	Harness, Wiring – Control Box				
13	815–0350	5	Screw, Self–Tapping – Slotted Hex Washer Head (#10–32 x 3/8")				

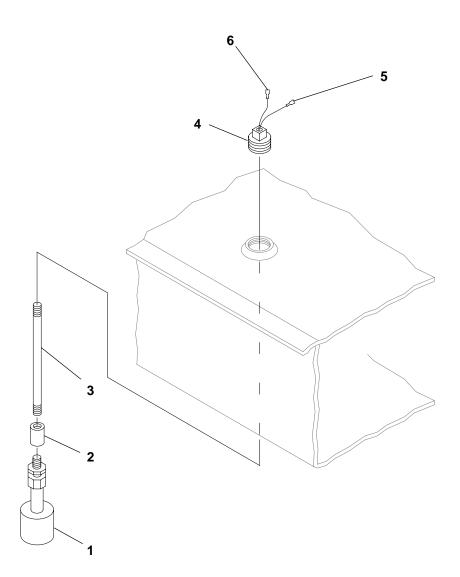


REF NO.		QTY JSED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	308–0963–01 505–0026	1 1	Switch, Basin Coupling, Pipe	4	505–1050–01	1	Plug, Pipe – Square Head (Modified)
3	505–0066	1	Nipple. Pipe 70 gallon tank	5	332–1992	1	Terminal, Receptacle (.25) (#22–18)
	505-1458-14	1	140 gallon tank	6	332–2430	1	Terminal, Tab (.25) (#22–18)

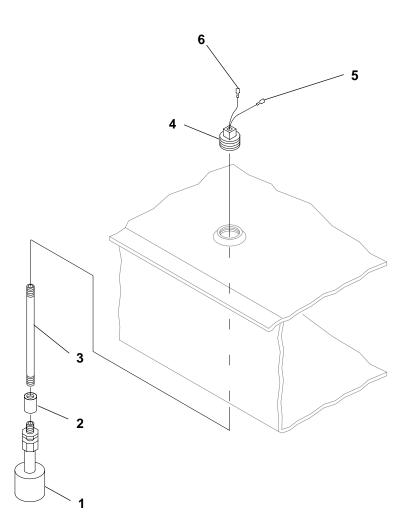


H574

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1 2	308–0916–01 505–0026	1 1	Switch, Basin Coupling, Pipe	4	505–1050	1	Plug, Pipe – Square Head (Modified)
3	505–0069	1	Nipple, Pipe 70 gallon tank	5	332–1992	1	Terminal, Receptacle (.25) (#22–18)
	505-1458-02	1	140 gallon tank	6	332–2430	1	Terminal, Tab (.25) (#22–18)

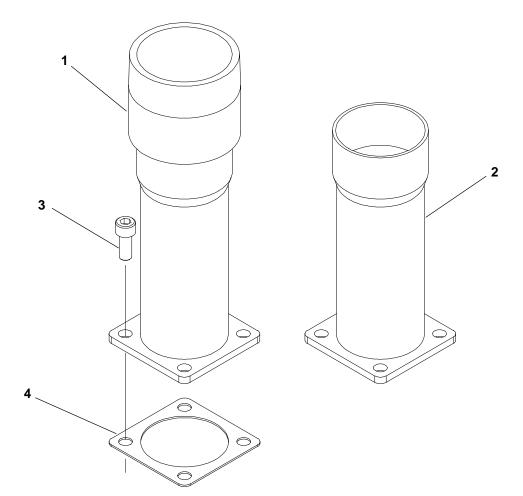

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REI NO		QTY USED	PART DESCRIPTION
1	155–3511–01	1	Adapter, Exhaust (For Threaded Exhaust Pipe)	3	802–2507	4	Screw, Cap – Socket Head (M10 x 1.5 x 25)
2	155–3511–02	2 1	Adapter, Exhaust (For Clamped Slip On Exhaust Pipe)	4	155–3506	1	Gasket, Exhaust


Exhaust Adapter DGHD, DGHE Threaded

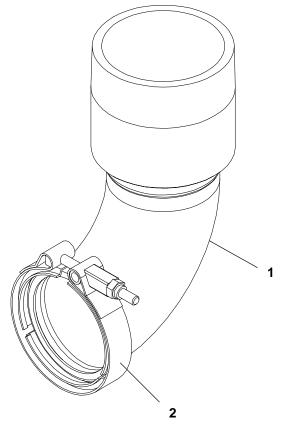

A299


REF	PART	QTY	PART	REF		QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.		USED	DESCRIPTION
1	155–3116	1	Adapter, Exhaust (3")	2	155–2565	1	Clamp, V–Band

Exhaust Adapter DGHD, DGHE Slip On

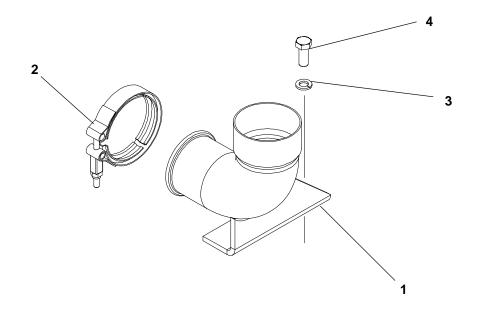

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	155–3632	1	Pipe, Exhaust	4	800–2086	2	Screw, Cap – Hex Head (M10 x
2	155–2565	1	Clamp, V-Band				1.5 x 25)
3	850–2010	2	Washer, Lock – Split (M10)				


Muffler (F172, F173 Housing)

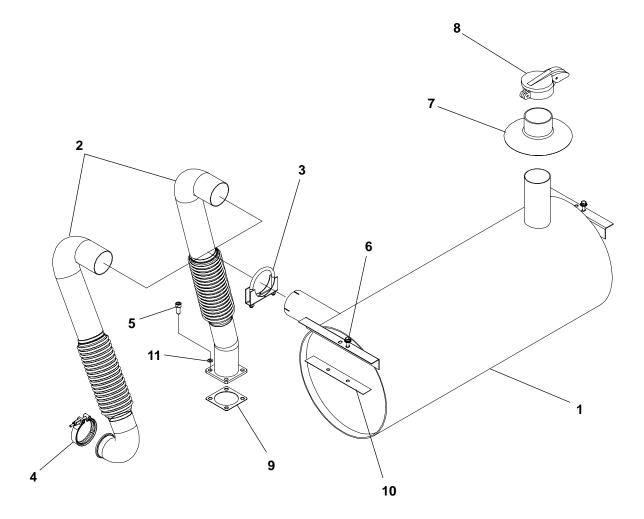

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QT USE
1 2	155–3167	1	Muffler Pipe, Exhaust	6	821–6003–02	2
	155–3507	1	DGGD	7	155-3102-02	1
	155–3508	1	DGHD, DGHE	8	155-2062-10	1
3	155–2175	1	Clamp, Muffler	9	155–3506	1
4	155–2565	1	Clamp, V-Band – DGHD, DGHE	10 11	155–3219 850–2010	2 4
5	802–2507	4	Screw, Cap – Socket Head (M10 x 1.5 x 25) – DGGD			


ι	QTY JSED	PART DESCRIPTION
)	2	Screw, Cap – Hex Head (M8 x 1.25 x 20)
2	1	Shield, Rain (3")
)	1	Cap, Rain (3")
	1	Gasket, Exhaust – DGGD
	2	Gasket, Muffler
	4	Washer, Lock – Spring – DGGD

Muffler DGGD (F182 Housing)

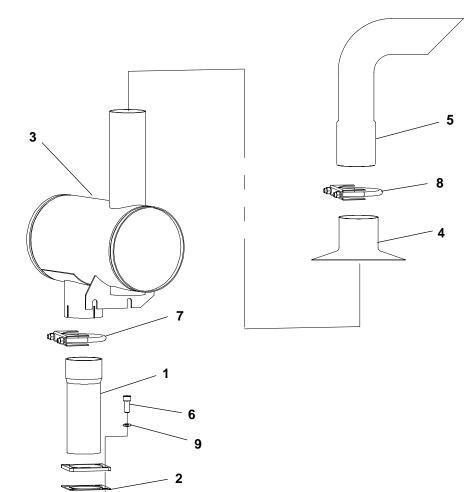


REF	PART	QTY	PART	REF	F PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	155–3511–02	1	Adapter, Exhaust	6	802–2507	4	Screw, Cap – Socket Head
2	155–3506	1	Gasket, Exhaust				(M10 x 1.5 x 25)
3	155–3521	1	Muffler	7	155–2175	1	Clamp, Muffler
4	155-3102-02	1	Shield, Rain	8	155–3260	1	Clamp, Muffler
5	155–3115	1	Pipe, Outlet	9	850–2010	4	Washer, Lock – Split (M10)

Muffler DGHD, DGHE (F182 Housing)

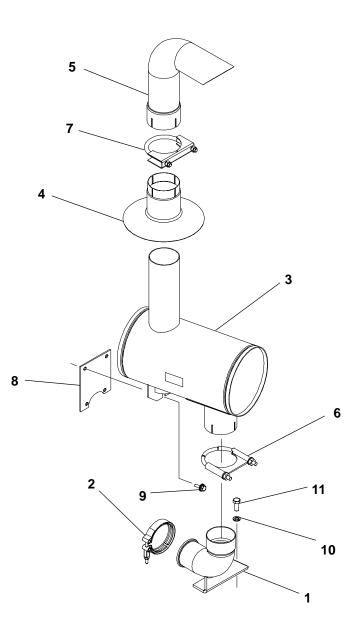


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155–3632	1	Pipe, Exhaust	8	155–3628–02	2 1	Bracket, Muffler
2	155–2565	1	Clamp, V-Band	9	821-6003-02	2	Screw, Hex Head (M8 x 1.25 x
3	155–3521	1	Muffler				20)
4	155-3102-02	. 1	Shield, Rain	10	850-2010	2	Washer, Lock – Split (M10)
5	155–3115	1	Pipe, Outlet	11	800–2086	2	Screw, Cap – Hex Head (M10 x
6	155–2175	1	Clamp, Muffler				1.5 x 25)
7	155–3260	1	Clamp, Muffler				,

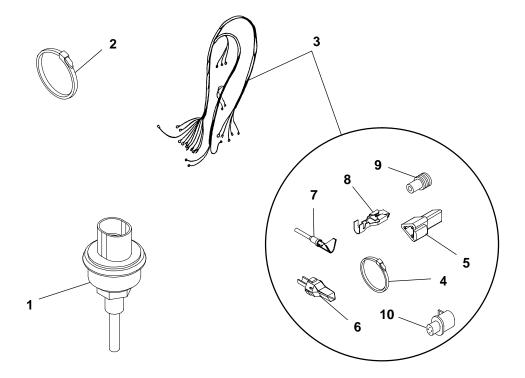


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
4	102 0469	4	Sender Lew Coolent Level (S7)	F	222 4404	4	Connector Decenteele
1	193–0468	1	Sender, Low Coolant Level (S7)	5	323–1494	1	Connector, Receptacle
2	332–1389	3	Tie, Cable	6	323–1502	1	Wedge, Receptacle
3	338-4178-01	1	Harness, Low Coolant Level	7	323–1491	3	Pin, Contact (S7)
			Sender (30.00") (Includes the	8	323–1709	4	Socket, Contact
			Following Parts)	9	323–1708	4	Seal, Cable
4	332–3388	1	Tie, Cable	10	323–1765	1	Housing, Connector (4 Pin)

Coolant Heater

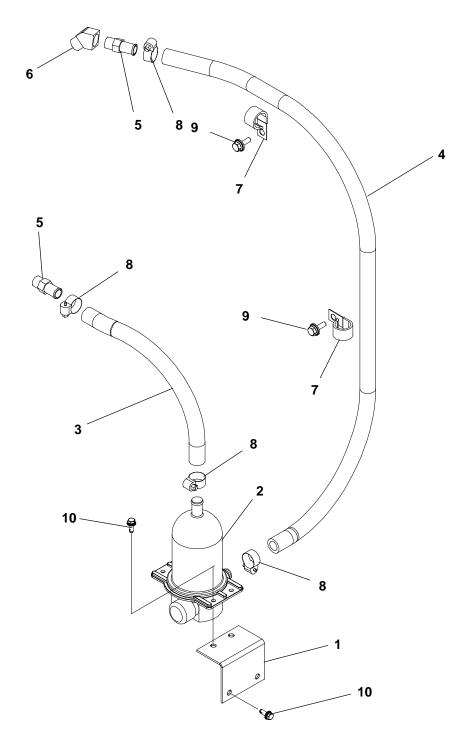


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333–0585	1	Bracket, Heater	6	502–1173	1	Elbow, Pipe – 45°
2			Heater, Engine Coolant	7	332–2634	2	Clamp, "J"
	333-0588-01	1	120 Volt	8	503–0183	4	Clamp, Hose
	333-0588-02	1	208/240 Volt	9	821-6003-02	2	Screw, Hex Head (M8 x 1.25 x
3	503-2293-06	1	Hose, Coolant				20)
4	503-2293-07	1	Hose, Coolant	10	821-6006-01	4	Screw, Hex Head – Stainless
5	502–0943	2	Connector, Hose (3/8 x 5/8)				Steel (M6 x 1.0 x 16)

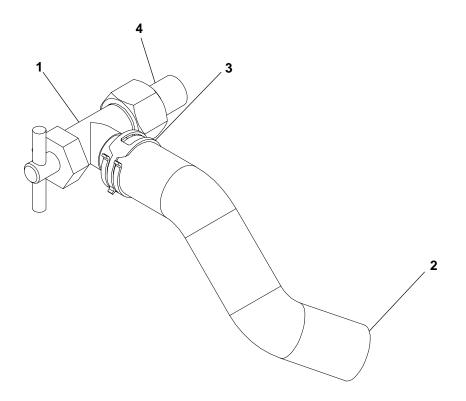


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	504–0176	1	Valve, Drain	3	503–0131	1	Clamp, Hose
2	503–0386	_	Hose, Engine Coolant – Bulk (Order by the Foot – 3 Feet Required)	4	502–0426–01	1	Adapter, Pipe

Duct Adapter

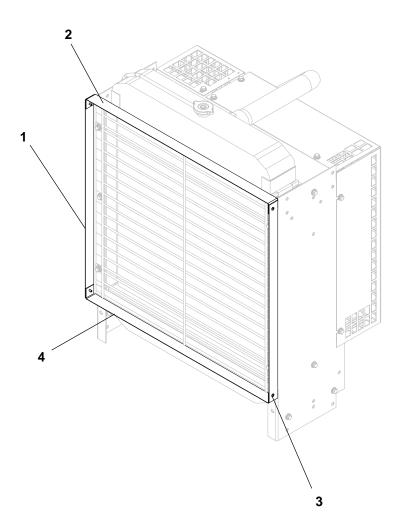


REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
-	130–4623 130–4622	2 1	Adapter, Duct – Side Adapter, Duct – Top	-	818–0231–0 130–5115–0		Rivet, Pop Adapter, Duct – Bottom

Overflow Tank

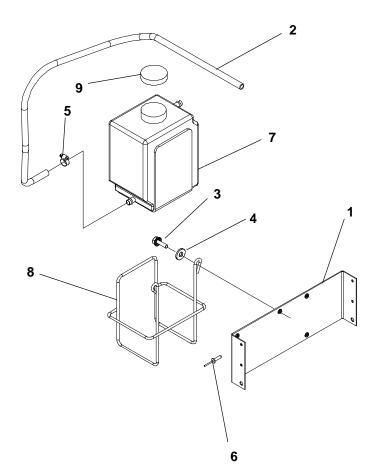


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	130–4878	1	Bracket, Tank – Housed Sets	3	821-6002-03	2	Screw, Hex Head (M6 x 1 x 16)
2			Hose, Overflow – Bulk (Order	4	526-0399-13	2	Washer, Flat
			by the Foot)	5	503-0685	1	Clamp, Hose
	503–0276	_	Unhoused Sets – 3 Feet	6	818-0231-02	4	Rivet, Pop – Housed Sets
			Required	7	130–3570	1	Tank, Coolant
	503–0276	_	Housed Sets – 5 Feet	8	130–3571	1	Hanger, Tank
			Required	9	130–3572	1	Cap, Tank

Radiator

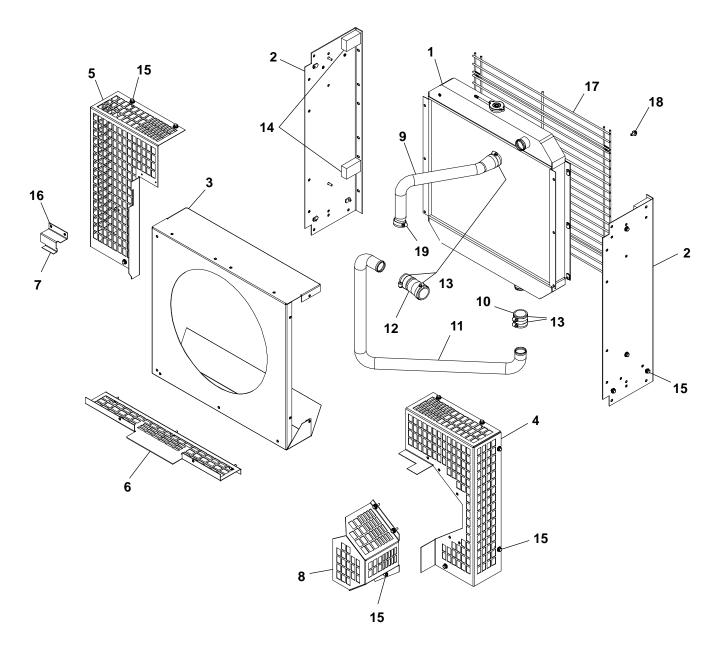


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	100 5111 00			40	500 0045		
1	130-5114-02	1	Radiator	12	503–2245	1	Hose, Radiator – Adapter
2	130–4759	2	Housing, Side	13	503–0365	5	Clamp, Hose
3	130-5500-02	1	Shroud	14	130–5285	1	Block, Air Bypass
4	130-5501-02	1	Guard, Fan – Left	15	821-6003-02	24	Screw, Hex Head (M8 x 1.25 x
5	130-5502-02	1	Guard, Fan – Right				20)
6	130-5503-02	1	Guard, Fan – Bottom	16	818-0231-02	2	Rivet, Pop
7	130-5514-02	1	Guard, Belt	17	130-4602	1	Grille (Unhoused Sets)
8	191-2323-02	1	Guard, Alternator	18	821-6007-02	6	Screw, Hex Head – Stainless
9	503-2243	1	Hose, Radiator – Upper				Steel (M8 x 1.25 x 20)
10	503-1391-02	1	Hose, Radiator				(Unhoused Sets)
11	130–5505–02	1	Hose, Radiator – Lower	19	503–0398	1	Clamp, Hose

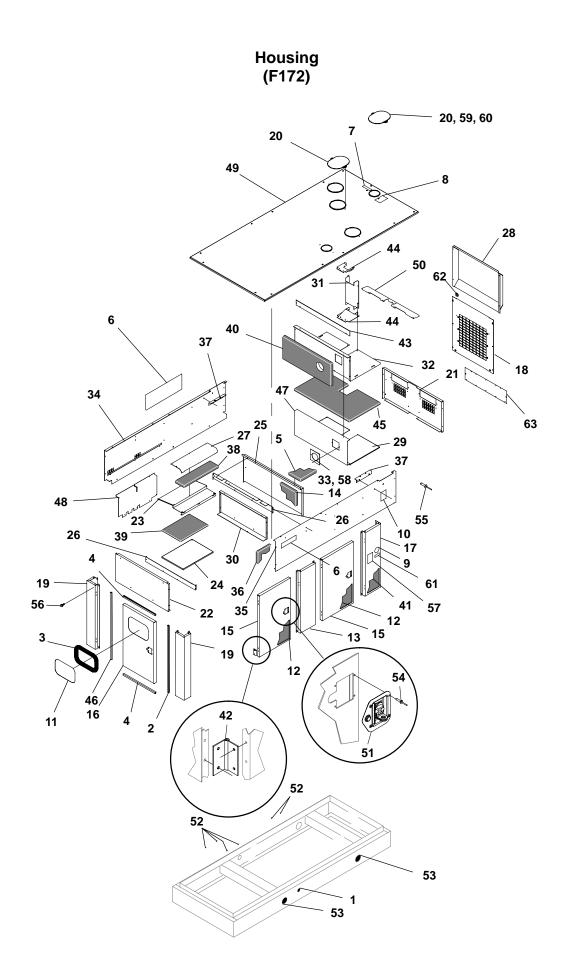

Housing (F172)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	517-0138-07	2	Plug, Hole	31	405–6030	1	Tube, Fill – Radiator
2	895–0385	5	Weather Seal – Side	32	405–5966	1	Box, Muffler
3	895-0363	_	Weather Strip – Window – Bulk	33	405–5987	1	Cover, Exhaust Inlet
			(Order By The Foot – 5 Feet	34	405–5996	1	Extension, Side – RH
			Required)	35	405–5995	1	Extension, Side – LH
4	895–0384	11	Weather Seal – Top & Bottom	36	405–5997	1	Insulation
5	405-6001-01	1	Insulation	37	405–5998	2	Support, Muffler
6	098–7913	2	Label, Logo	38	405-6000-02		Insulation
7	098–5429	1	Label, Coolant Fill	39	405-6000-03		Insulation
8	098–4730	1	Label, Caution	40	405–6109	1	Insulation
9	098–4500	2	Label, Prototype Tested	41	405-6000-06		Insulation
10	098–7451	2	Label, Caution	42	406–0831	10	Hinge, Housing
11	319–2653	1	Window, Control (if equipped)	43	405–6029	1	Baffle
12	405–5734	4	Insulation, Door	44	405–6003	2	Box, Radiator Fill
13	405–5745	2	Post, Housing – Center	45	405-6005	1	Insulation
14	405–5841	2	Insulation	46	895–0386	5	Weather Seal – Side
15			Door, Housing	47	405–6034	1	Retainer, Insulation
	405-5902	4	Sets W/Window	48	405-6015	1	Retainer, Insulation
	405-5902	5	Sets WO/Window	49	405–6018	1	Roof
16	405-5903	1	Door, Housing W/Window Cutout	50	405-6068	1	Baffle, Recirculation – Muffler
17	405–5908	2	Panel, Side – Radiator Housing	51	406-0972-01	5	Latch, Door
18	405–5910	1	Panel, Front – Radiator Housing	52	517-0131	6	Plug, Hole
19	405–5916	2	Post, Corner – Housing	53	517-0322	4	Plug, Hole
20	155-3238	4	Cover, Exhaust	54	818-0231-02		Rivet (3/16")
21	405-5952	1	Extension, Front	55	818-0237-01	-	Rivet (1/8")
22	405-5953	1	Extension, Rear	56	821-6007-02		Screw (M8 x 20)
23	405-5954	1	Baffle, Air	57	098-4732	2	Label, Warning
24 25	405–5955 405–5956	1 1	Retainer, Insulation	58	526-0011	2	Washer, Flat (.203)
-			Support, Center	59 60	870-0504	2	Nut, Captive Floating (M6 x 1.0)
26 27	405–5957 405–5958	2 1	Angle, Support Retainer, Insulation	60 61	821–6006–01 098–7868	2 1	Screw, Hex Head (M6 x 16) Label
27 28	405-5958	1		62	098–7868 526–0451		
28 29	405-6035	1	Baffle, Air – Discharge Retainer, Insulation	62 63	526–0451 403–4215	2 1	Washer, Flat Cover, Stub Up
29 30		2		05	403-4213	I	Cover, Stub Op
30	405–5961	2	Retainer, Insulation				

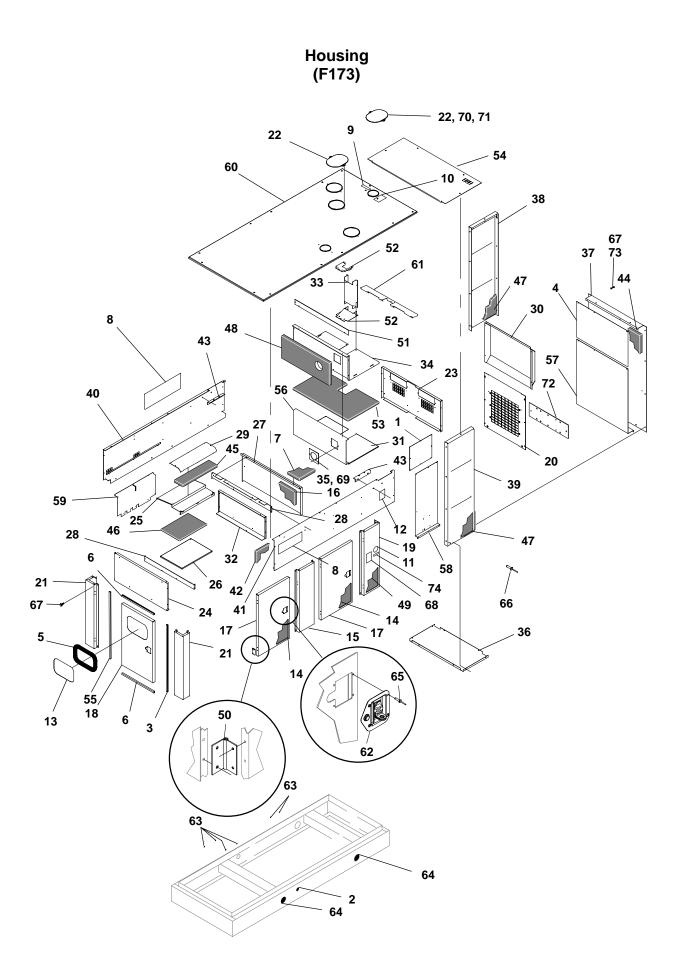

Housing (F173)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405–6044	2	Retainer, Insulation	36	405–5988	1	Panel, Bottom
2	517-0138-07	2	Plug, Hole	37	405–5990	1	Cover, Air Discharge
3	895–0385	5	Weather Seal – Side	38	405-5991-01	1	Side, Discharge – RH
4	405-6132	1	Retainer, Insulation	39	405-5991-02	1	Side, Discharge – LH
5	895–0363	_	Weather Strip – Window – Bulk	40	405-5996	1	Extension, Side – RH
			(Order By The Foot – 4 Feet	41	405–5995	1	Extension, Side – LH
			Required)	42	405–5997	1	Insulation
6	895–0384	12	Weather Seal – Top & Bottom	43	405–5998	2	Support, Muffler
7	405-6001-01	1	Insulation	44	405-6000-07	1	Insulation
8	098–7913	2	Label, Logo	45	405-6000-02	1	Insulation
9	098–5429	1	Label, Coolant Fill	46	405-6000-03	1	Insulation
10	098–4730	1	Label, Caution	47	405-6000-04	2	Insulation
11	098–4500	2	Label, Prototype Tested	48	405–6109	1	Insulation
12	098–7451	2	Label, Caution	49	405-6000-06	2	Insulation
13	319–2653	1	Window, Control (If Equipped)	50	406–0831	10	Hinge, Housing
14	405–5734	4	Insulation, Door	51	405–6029	1	Baffle
15	405–5745	2	Post, Housing – Center	52	405–6003	2	Box, Radiator Fill
16	405–5841	2	Insulation	53	405–6005	1	Insulation
17			Door, Housing	54	405–6010	1	Cover, Air Discharge (Top)
	405–5902	4	Sets W/Window	55	895–0386	5	Weather Seal – Side
	405–5902	5	Sets WO/Window	56	405–6034	1	Retainer, Insulation
18	405–5903	1	Door, Housing W/Window Cutout	57	405–6013	1	Retainer, Insulation
19	405-5908	2	Panel, Side – Radiator Housing	58	405–6014	2	Retainer, Insulation
20	405–5910	1	Panel, Front – Radiator Housing	59	405-6015	1	Retainer, Insulation
21	405–5916	2	Post, Corner – Housing	60	405–6018	1	Roof
22	155–3238	4	Cover, Exhaust	61	405-6068	1	Baffle, Recirculation – Muffler
23	405–5952	1	Extension, Front	62	406-0972-01	5	Latch, Door
24	405–5953	1	Extension, Rear	63	517-0131	6	Plug, Hole
25	405–5954	1	Baffle, Air	64	517-0322	4	Plug, Hole
26	405–5955	1	Retainer, Insulation	65	818-0231-02		Rivet (3/16")
27	405–5956	1	Support, Center	66	818-0237-01		Rivet (1/8")
28	405–5957	2	Angle, Support	67	821-6007-02		Screw (M8 x 20)
29	405–5958	1	Retainer, Insulation	68	098–4732	2	Label, Warning
30	405–6035	1	Baffle, Air Discharge	69	526-0011	2	Washer, Flat (.203)
31	405-5960	1	Retainer, Insulation	70	870-0504	2	Nut, Captive Floating (M6 x 1.0)
32	405-5961	2	Retainer, Insulation	71	821-6006-01	2	Screw, Hex Head (M6 x 16)
33	405-6030	1	Tube, Fill – Radiator	72	403-4215	1	Cover, Stub Up
34	405-5966	1	Box, Muffler	73	526-0451	2	Washer, Flat – Stainless Steel
35	405–5987	1	Cover, Exhaust Inlet	74	098–7868	1	Label

Housing (F182)

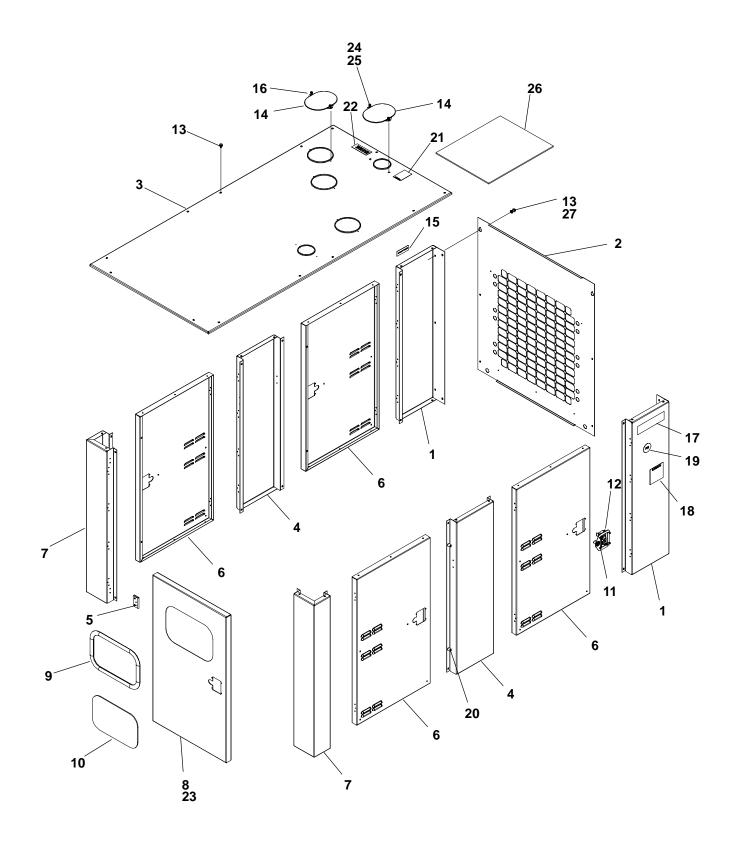


Housing (F182)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405–5908	2	Panel, Side – Radiator Housing	14	155–3238	4	Cover, Exhaust
2	405–5910	1	Panel, Front – Radiator	15	098–7868	1	Label
			Housing	16	818-0237-01	6	Rivet, Pop
3	405–6018	1	Roof	17	098-7902-03	2	Label, Logo
4	405–5745	2	Post, Housing – Center	18	098–4732	2	Label, Warning
5	406–0831	10	Hinge, Housing	19	098–4500	2	Label, Prototype
6	405–5832	4	Door, Housing	20	895–0382	10	Bumper, Door
7	405–5916	2	Corner, Post – Housing	21	098–4730	1	Label, Warning
8	405–5903	1	Door, Housing – W/Window	22	098–5429	1	Label, Coolant Fill
9	895–0363	_	Cutout Weather Strip – Window – Bulk	23	405–5902	1	Door, Housing – W/O Window Cutout
Ū			(Order By The Foot – 4 Feet Required)	24	870–0504	2	Nut, Captive – Floating (M5 x 1.0)
10	319–2653	1	Window, Control (If Equipped)	25	821-6006-01	2	Screw, Hex Head (M6 x 1.0 x
11	818-0231-02	60	Rivet, Pop				16)
12	406-0972-01	5	Latch	26	128-0154-02	1	Insulation, Foam
13	821–6007–02	28	Screw, Hex Head (M8 x 1.25 x 20)	27	526–0451	2	Washer, Flat (M8)

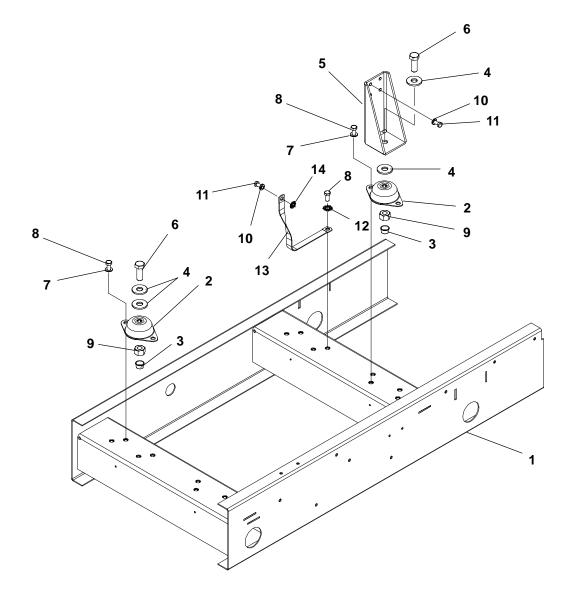


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	F PART NO.	QTY USED	PART DESCRIPTION
	NO.	UULD		NO.	NO.	UULD	
1	403-4616-02	1	Skid	8	800-2543-02	9	Screw, Cap – Hex Head (M12 x
2	402-0779-02	4	Cushion, Mounting – Vibration				1.75 x 25)
			Isolation	9	862-0044	4	Nut, Hex (3/4 x 10)
3	517–0094	4	Plug, Hole	10	526-0174	9	Washer, Flat (3.4)
4	526-0238-01	8	Washer, Flat (3/4)	11	800-2530-03	9	Screw, Cap – Hex Head (M10 x
5	403-4617-02	2	Bracket, Engine				1.5 x 25)
6	800-0607	4	Screw, Cap – Hex Head	12	856-0013	1	Washer, Lock – W/EIT (1/2)
			(3/4–10 x 2)	13	337-0090	1	Strap, Electrical
7	526–0433	8	Washer, Hardened	14	856-0010	1	Washer, Lock – W/EIT (3/8)

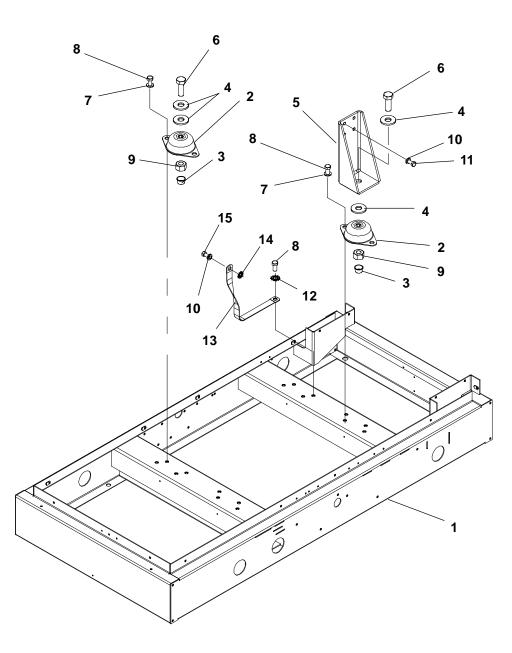


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-4615-02	1	Skid	9	862–0044	4	Nut, Hex (3/4 x 10)
2	402-0779-02	4	Cushion, Mounting – Vibration	10	526-0174	9	Washer, Flat (3.4)
			Isolation	11	800-2530-03	8	Screw, Cap – Hex Head (M10 x
3	517–0094	4	Plug, Hole				1.5 x 25)
4	526-0238-01	8	Washer, Flat (3/4)	12	856-0013	1	Washer, Lock – W/EIT (1/2)
5	403-4617-02	2	Bracket, Engine	13	337–0090	1	Strap, Electrical
6	800-0607	4	Screw, Cap – Hex Head	14	856-0010	1	Washer, Lock – W/EIT (3/8)
			(3/4–10 x 2)	15	800–2086	1	Screw, Cap – Hex Head (M10 x
7	526-0433	8	Washer, Hardened				1.5 x 25)
8	800–2543–02	9	Screw, Cap – Hex Head (M12 x 1.75 x 25)				



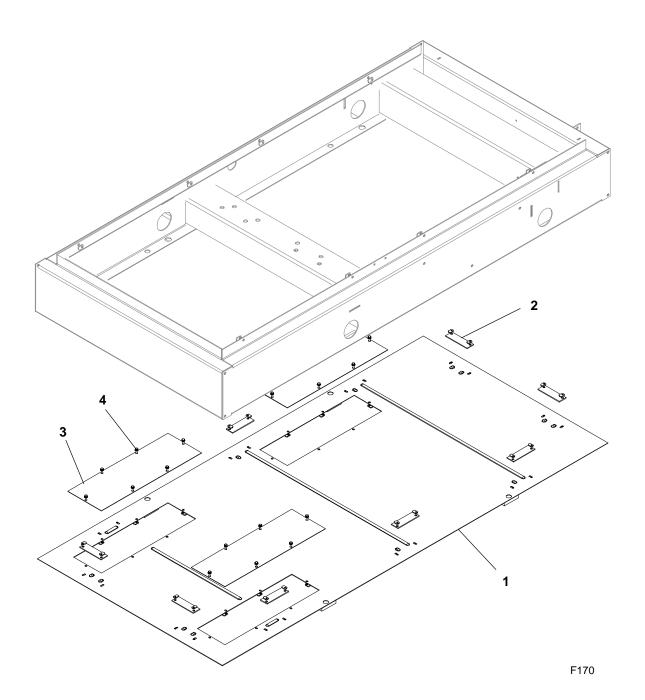


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403–4107	1	Pan, Skid	4	821–6002–	03 38	Screw, SEMS – Hex Head (M6
2	403–4110	10	Clamp				x 1 x 16)
3	403–4116	3	Cover, Stub Up				

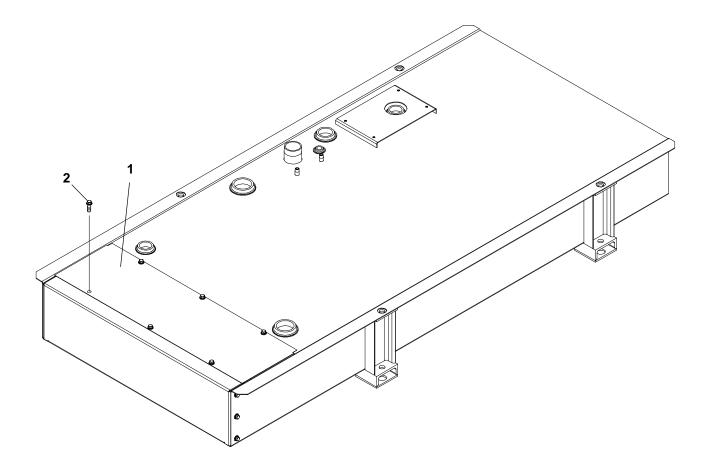


F172,173

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	159–1467	1	Cover, Fuel Tank	2	821–6003–0	26	Screw, Hex Head (M8 X 20)

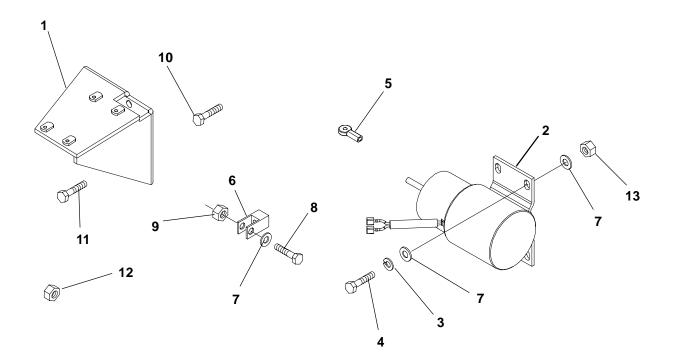


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REI NO		QTY USED	PART DESCRIPTION
1	150-2780-02	1	Bracket, Governor	9	862-0001	1	Nut, Hex (1/4–20)
2	150–2781	1	Actuator, Linear	10	800–2096	2	Screw, Cap – Hex Head (M10 x
3	850-2006	4	Washer, Lock – Split (M6)				1.5 x 75)
4	800–2034	4	Screw, Cap – Hex Head (M6 x 1 x 20)	11	800–2097	1	Screw, Cap – Hex Head (M10 x 1.5 x 80)
5	150–2120	1	Rod, End	12	868–0001	1	Nut, Hex – Jam (1/4–20)
6	150–2682	1	Clevis, Governor	13	860–2007	2	Nut, Hex (M6 x 1)
7	526-0018	8	Washer, Flat (1/4)				
8	800–0007	1	Screw, Cap – Hex Head (1/4 x 20 x 1)				

Control Housing

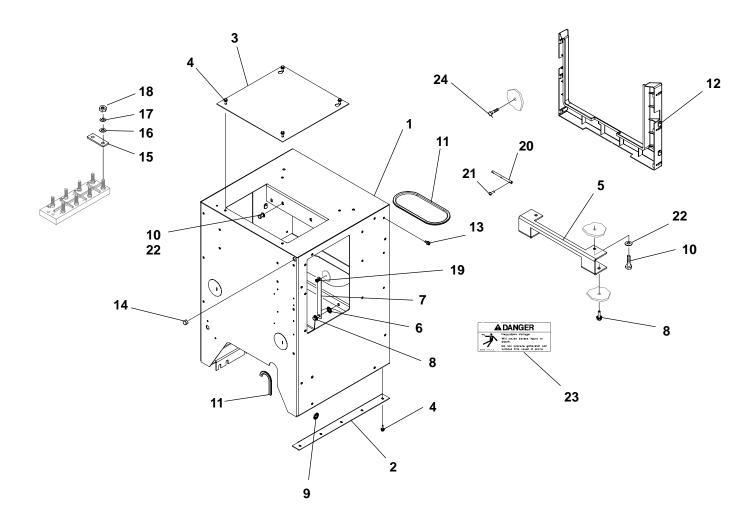


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Panel, Housing – Control	9			Washer, Lock – W/EIT
	319–3208	1	Sets With UCD22		856-0012	1	UCD22 (7/16)
			Generator		856-0013	1	UC27 (1/2)
	319–2967	1	Sets With UC27 Generator	10	800–2052	4	Screw, Cap – Hex Head (M8 x
2	319–3207	1	Bracket, Control Mounting –				1.25 x 12)
			Sets With UCD22 Generator	11	508-0305-02	2 –	Edging – Bulk (Order By The
3			Cover, Housing – Control				Foot – 3 Foot Required)
	319–2996	3	Generator Sets Without	12	319–4457	1	Panel, Control
			Circuit Breaker or	13	815-0943-02	2 6	Screw, Hex Washer Head –
			Entrance Box				Thread Forming (1/4–10 x .5)
	319–2996	2	Generator Sets With Circuit	14	517–0135	1	Plug, Hole
			Breaker or Entrance Box	15	332–2987	4	Link, Terminal
	319–2996	1	Generator Sets With Two	16	526–2120	8	Washer, Flat (M10)
			Circuit Breakers	17	850–2010	8	Washer, Lock (M10)
4			Screw, Hex Head (M6 x 16)	18	860–2009	8	Nut, Hex (M10 x 1.5)
	821-6002-03	4	Sets With UC27 Generator	19	819–1144	1	Screw, Pan Head – Cross
	821-6002-03	9	Sets With UCD22				Recessed (M6 x 8)
			Generator	20	332–3740	1	Clamp, Strain
5	319-4456-02	1	Bracket, Control	21	814–2150	3	Screw, Flat Head – Cross
6	856-0010	1	Washer, Lock – W/EIT (3/8)				Recessed (M3 x 0.5 x 10)
7	337-0049	1	Strap, Bond	22	526-2100	4	Washer, Flat (M8)
8	821-6003-01	3	Screw, Hex Head (M8 x 1.25 x	23	098-5347-01	1	Label, Danger
			16)	24	821-6001-02	2 2	Screw, Hex Head

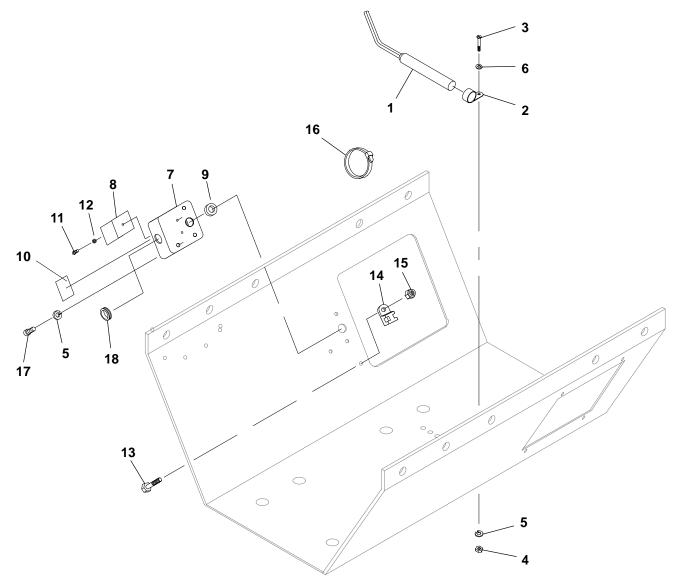

A292,293

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1			Cartridge, Heater	10	098–7281	1	Label, Warning - Heater
	333-0438-07	1	110–125 Volt	11	822-3047	1	Screw, Pan Head (M3 x 20)
	333-0438-08	1	220–260 Volt	12	850-2003	1	Washer, Lock (M3)
2	332-3024-11	2	Clamp, Loop	13	800–3034	1	Screw, Cap – Hex Head
3	822-3075	6	Screw, Pan Head (M4 x 16)				(M4 x .7 x 12)
4	860-2005	2	Nut, Hex (M4)	14	332–3228	1	Mount, Tie – Cable
5	850-2004	4	Washer, Lock (M4)	15	870-2064-01	1	Nut, Nylon
6	526-2050	2	Washer, Flat (M4)	16	332–1389	1	Tie, Cable
7	330–0142	1	Box, Terminal – Heater	17	815-0792-04	- 2	Screw, Countersunk – Pan
8	332-3023	1	Block, Terminal				Head (M4 x .7 x 12)
9	508-0228	1	Grommet	18	517–0021	1	Plug, Dot – Button

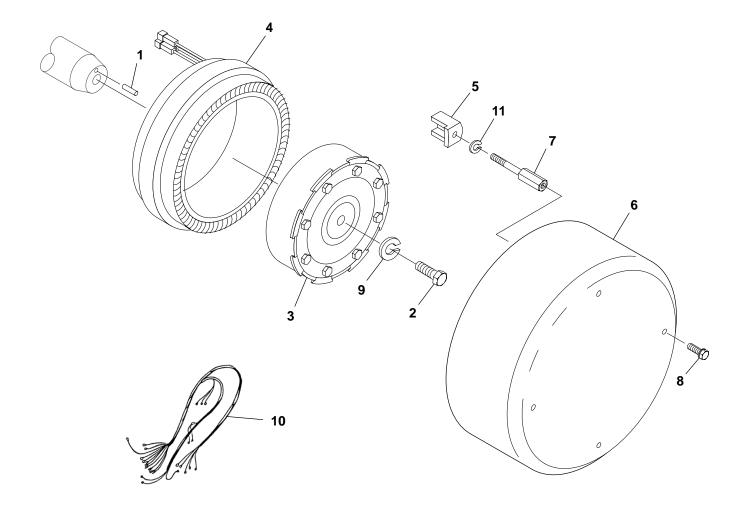


CP01

_ . _ _

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
3 4	775–0049 815–0761–01 201–3446 220–4233 232–3972 234–0875–02	1 1 4	Pin, Parallel Bolt, Mounting – PMG Rotor, PMG Stator, PMG Clamp, Stator Cover, End Bell

PART NO.	QTY USED	PART DESCRIPTION
232-3462-03	4	Spacer, Cover
821-6001-01	4	Screw, Hex Head (M5 x 10)
850–2010	1	Washer, Lock (M10)
338–3011	1	Harness, PMG
850–2006	4	Washer, Lock (M6)
	NO. 232–3462–03 821–6001–01 850–2010 338–3011	NO. USED 232–3462–03 4 821–6001–01 4 850–2010 1 338–3011 1

. .

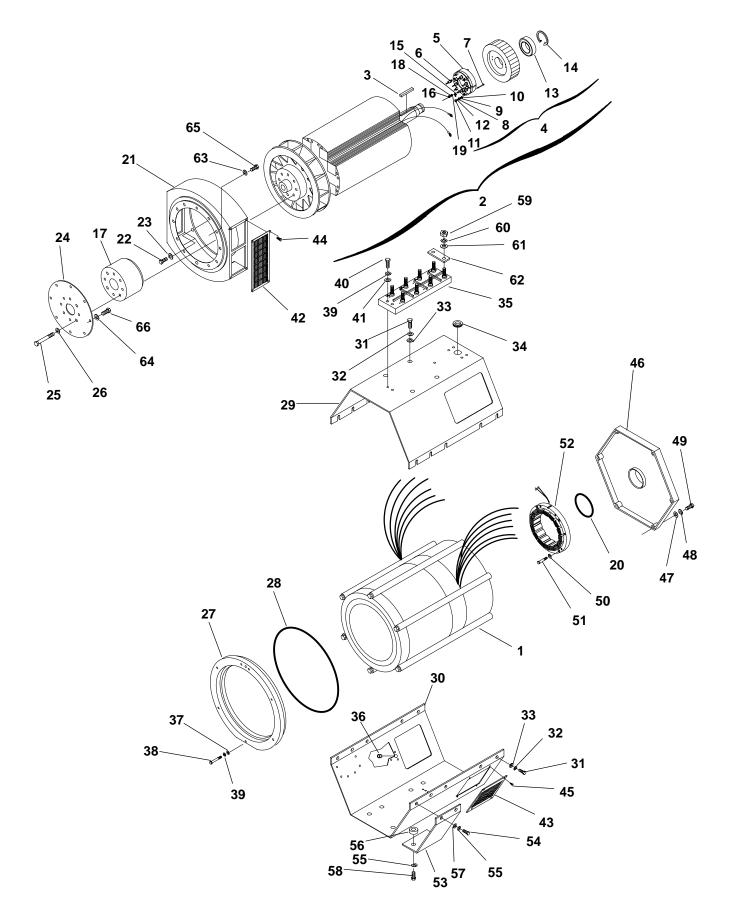


Generator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Stator, Generator DGGD	2			Rotor Assembly, Generator (Includes Parts Marked *)
	220–4447–06	5 1	130mm Stack Length – Winding Code 6		201–3603–01 201–3603–02		130mm Stack Length 160mm Stack Length
	220–4447–07	' 1	160mm Stack Length – Winding Code 6		201–3603–03 201–3603–04	1	180mm Stack Length 240mm Stack Length
	220–4447–11	1	130mm Stack Length – Winding Code 11	3	515-0299-02		* Key, Exciter Rotor 130, 160mm Stack Length
	220–4447–12	1	160mm Stack Length – Winding Code 11	4	515-0299-04		180, 240mm Stack Length * Rotor Assembly, Exciter
	220–4447–16	5 1	130mm Stack Length – Winding Code 14		201–3434–01	1	(Includes Parts Marked #) 130, 160mm Stack
	220–4447–26	5 1	130mm Stack Length – Winding Code 17		201–3434–02	1	Length 180, 240mm Stack
	220–4447–07	′ 1	DGHD 160mm Stack Length – Winding Code 6	5			Length *# Rectifier Assembly (Includes Parts Marked +)
	220–4447–08	i 1	180mm Stack Length – Winding Code 6		357–0091	1	Forward (with Positive Diode)
	220–4447–11	1	130mm Stack Length – Winding Code 11		357–0092	1	Reverse (with Negative Diode)
	220–4447–12	1	160mm Stack Length – Winding Code 11	6	358-0135-01	3	*#+ Diode Positive
	220–4447–13	1	180mm Stack Length – Winding Code 11	7	358–0135–02 800–3009	3 3	Negative *#+ Screw, Cap – Hex Head (M4
	220–4447–14	1	240mm Stack Length – Winding Code 11	8	860–2005	3	x 35mm) (CR1,2,3,4,5,6) *#+ Nut, Hex (M4)
	220-4447-16	5 1	130mm Stack Length – Winding Code 14	9 10	850–2004 526–2050	3 3	*#+ Washer, Lock – Spring (M4) *#+ Washer, Flat (M4)
	220–4447–17	′ 1	160mm Stack Length – Winding Code 14	11 12	870–2064–01 526–2050	6 6	*# Nut, Locking – Nylon (M4) *# Washer, Flat (M4)
	220–4447–26	5 1	130mm Stack Length – Winding Code 17	13 14	510–0165 518–0122	1 1	* Bearing, Ball* Ring, Retaining
	220–4447–27	' 1	160mm Stack Length – Winding Code 17	15 16	304–0807 860–2006	1 2	* Varistor * Nut, Hex (M5)
	220–4447–08	5 1	DGHE 180mm Stack Length – Winding Code 6	17 18 19	232–3438 850–2005 526–2060	1 2 2	* Hub, Coupling * Washer, Lock – Spring (M5) * Washer, Flat (M5)
	220–4447–09	1	240mm Stack Length – Winding Code 6	20 21	509–0266–01 231–0329		O-Ring Adapter, Generator
	220–4447–12	2 1	160mm Stack Length – Winding Code 11	22	800–3017–41		Screw, Cap – Hex Head (M10 x 1.5 x 45)
	220–4447–13	5 1	180mm Stack Length – Winding Code 11	23 24	850–0114–55 232–3698	6 2	Washer, Lock (M10) Disc, Drive
	220–4447–14	- 1	240mm Stack Length – Winding Code 11	25	720–1119	8	Screw, Cap – Hex Head (M16 x 40)
	220–4447–17	' 1	160mm Stack Length – Winding Code 14	26 27	526–0259 231–0318	8 1	Washer, Flat Adapter, Stator
	220–4447–18	5 1	180mm Stack Length – Winding Code 14	28	508–0139	-	Seal, Edging – Bulk (Order by the Foot – 3 Feet
	220–4447–27		160mm Stack Length – Winding Code 17				Required)
	220–4447–28	5 1	180mm Stack Length – Winding Code 17				ator Rotor Assemblies

* Parts Included in Generator Rotor Assemblies # Parts Included in Exciter Rotor Assemblies

+ Parts Included in Rectifier Assemblies


Continued...

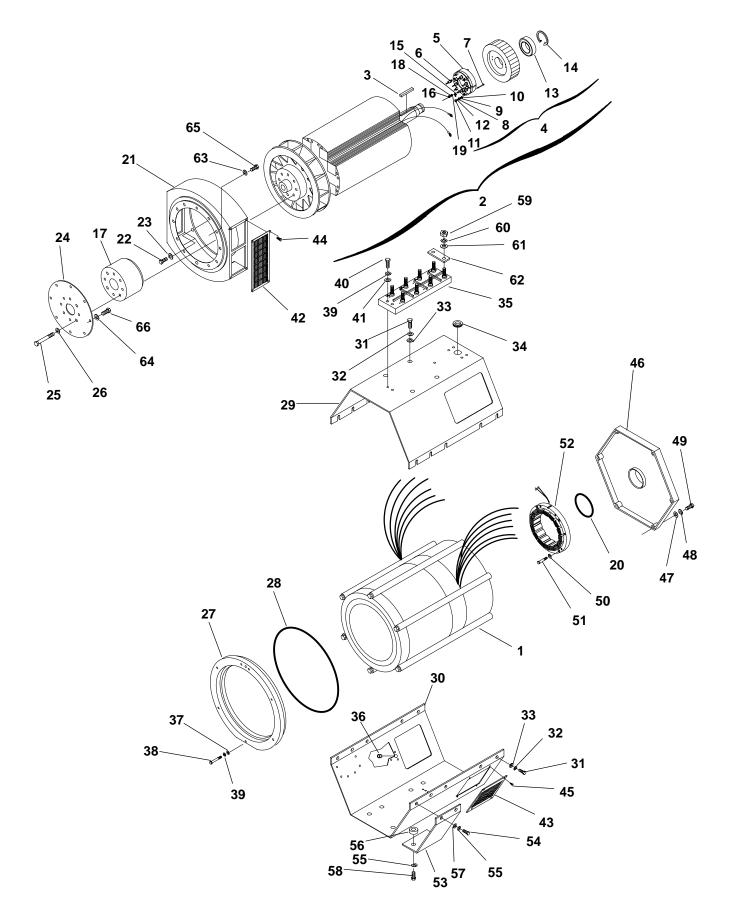

Generator


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued						
29	232-0936-01	1	Cover, Stator (Upper) 130/160mm Stack Length	45	821–6001–02	8	Screw, Hex Head (M5 x 0.8 x 12)
	232-0936-02	1	180/240mm Stack Length	46	211–0422	1	Bell, End
30			Cover, Stator (Lower)	47	232–3441	6	Washer, End Bell
	232-3819-01	1	130/160mm Stack Length	48	850-0114-54	6	Washer, Lock (M8)
	232-3819-02	1	180/240mm Stack Length	49	800-3017-20		Screw, Cap – Hex Head (M8
31			Screw, Cap – Hex Head				x 25)
			(M10 x 25)	50	850-2006	4	Washer, Lock (M6)
	800-3017-37	8	130/160mm Stack Length	51			Screw, Cap – Hex Head (M6)
	800-3017-37	10	180/240mm Stack Length		800–2039	4	130, 160mm Stack Length
32			Washer, Lock (M10)		800–2042	4	180, 240mm Stack Length
	850-0114-55	8	130/160mm Stack Length	52			Stator, Exciter
	850-0114-55	10	180/240mm Stack Length		220-4293-04	1	130, 160mm Stack Length
33			Washer, Flat (M10)		220-4293-05	4	180, 240mm Stack Length
	526-0399-62	8	130/160mm Stack Length	53	232–3940	2	Bracket, Generator Mounting
	526-0399-62	10	180/240mm Stack Length	54	800-3017-39	4	Screw, Cap – Hex Head
34	508–1057	1	Grommet				(M10 x 1.5 x 35)
35	232–3421	1	Block, Terminal	55	850-0114-55	8	Washer, Lock (M10)
36	517–0135	1	Plug, Hole	56	232-3730-03	4	Spacer, Mounting Foot
37	232–3441	6	Washer, End Bell	57	526–0423	8	Washer, Flat
38	800–3017–20	6	Screw, Cap – Hex Head (M8 x 25)	58	800–3017–41	4	Screw, Cap – Hex Head (M10 x 45)
39	850-0114-54	8	Washer, Lock (M8)	59	860–2009	8	Nut, Hex (M10)
40	800–2060	2	Screw, Cap – Hex Head (M8	60	850–2010	8	Washer, Lock – Spring (M10)
			x 1.25 x 35)	61	526–2120	8	Washer, Flat (M10)
41	526–2100	2	Washer, Flat (M8)	62	332–2987	4	Link, Terminal
42	234–0903	2	Guard, Fan	63	850–2010	12	Washer, Lock (M10)
43	234–0878	2	Screen, Air Inlet	64	526–0174	8	Washer, Flat (3/8)
44	821–6001–01	8	Screw, Hex Head (M5 x 0.8 x 10)	65	800–2087	12	Screw, Cap – Hex Head (M10 x 1.5 x 30)
				66	800–2526	8	Screw, Cap – Hex Head (M10 x 1.5 x 20)

Control Heater

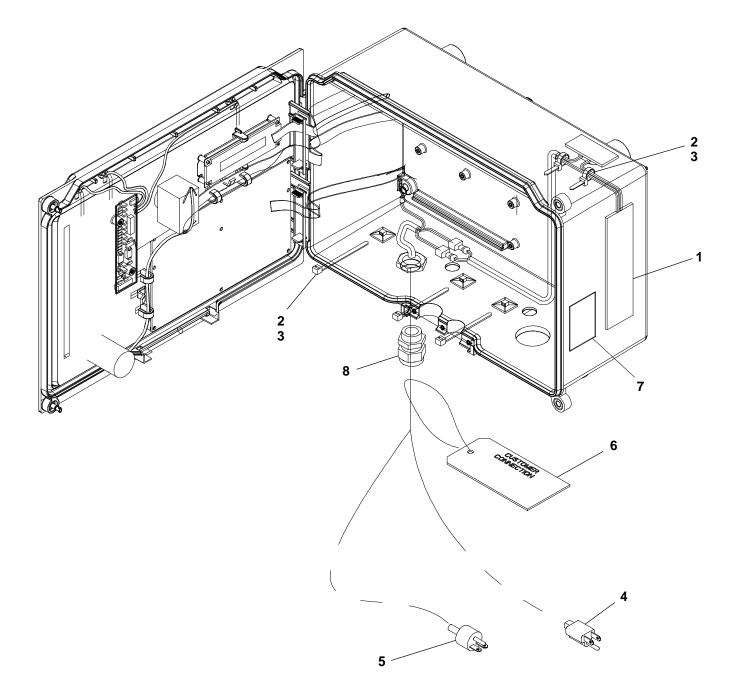


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1			Heater, Control	6			Tag, Heater
	333-0661-01	1	120V		098–6927	1	120V
	333-0661-02	2 1	240V		098–6928	1	240V
2	332–2420	3	Mount, Cable Tie	7	098–6195	1	Label, Caution
3	332–1445	3	Tie, Cable	8	323-2003-02	2 1	Strain Relief
4	335–0173	1	Cable, Control Heater – 120V				
5	335-0173-01	1	Cable, Control Heater – 240V				

Control Relay

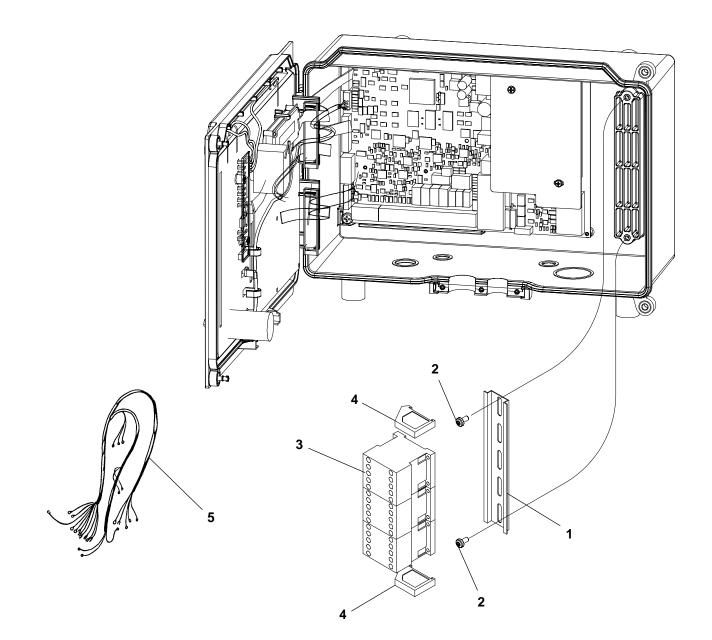

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	332–3842	1	Rail, Terminal Block	4	332–2878	2	Bracket, End – Terminal
2	823-1006-02	2	Screw, Pan Head (M5)	5	338–4209	1	Harness, Relay
3	307–2873	3	Relay, Control – 12V (K10, K11, K12)				


Control

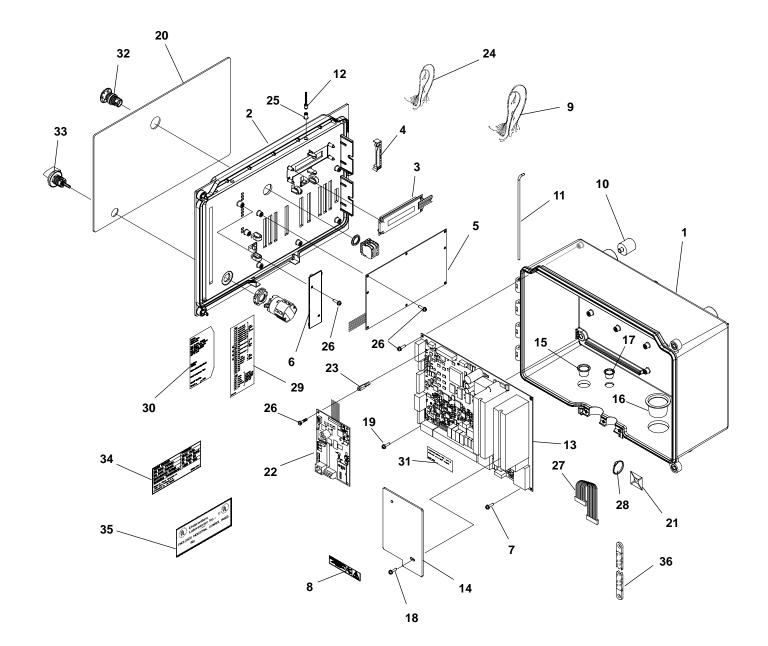

Control


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–4487	1	Box, Control	20			Panel, Membrane
2	319–4488	1	Door Control		300–5446	1	With Bargraph
3	300–5467	1	Display, Digital		300–5447	1	Without Bargraph
4	332–3896	4	Clamp, Cable	21	332–2420	2	Mount, Cable Tie
5	300–5180	1	Board, Printed Circuit –	22	327–1275	1	Board, Printed Circuit – NCM
			Bargraph	23	870-2213-02	4	Standoff, Hex Threaded – With
6	300–5383	1	Board, Printed Circuit – LED				NCM
7	819-1137-02	2 4	Screw, Pan Head – Cross	24	338–3994	1	Harness, Panel Light
			Recessed (M3 x 8)	25	322–0488	3	Lens, LED
8	098–7904	2	Label, Danger	26			Screw, Pan Head – Cross
9	338–3991	1	Harness, Control – Door				Recessed (M3 x 6)
10	402-0764-01	4	Mount, Isolator		819–1137–01	9	Without Bargraph
11	406–0845	1	Pin, Hinge		819–1137–01	15	With Bargraph
12	322–0491	3	Lamp, LED	27	335–0189	1	Cable, Ribbon
13	300–5381	1	Board, Printed Circuit – Base	28	332–1445	3	Tie, Cable
14	319–4497	1	Guard, Electrical	29	098–7918	1	Label, Information
15	517–0356	1	Plug, Hole (Fits 22.5mm DIA. Hole)	30	098–7961–01	1	Label, Information – Panel Insert
16	517–0357	1	Plug, Hole (Fits 38mm DIA.	31	098–7989	1	Label, Instruction – Torque
			Hole)	32	308–0999	1	Switch, Emergency Stop
17	517–0355	2	Plug, Hole (Fits 16mm DIA.	33	308–1085	1	Switch, Selector
			Hole)	34	098–8057	1	Label, Information – Rating
18	815-0792-02	2 2	Screw, Machine – Pan Head	35	098–6984	1	Label, UL
			(M4 x 0.7 x 8)	36	337–0049	1	Strap, Bond
19	819–1144	2	Screw, Pan Head – Cross Recessed (M6 x 8)				

Alarm Module

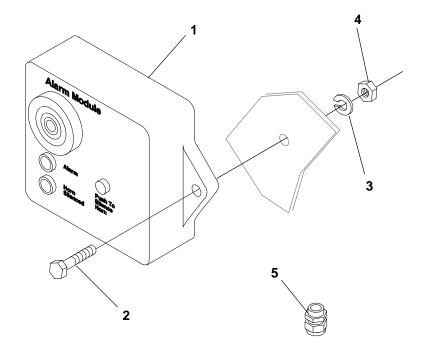


KA08


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	300-3998-02	1	Module, Alarm (12V)	3	850-0040	2	Washer, Lock (1/4)
2	800–0006	2	Screw, Cap – Hex Head (1/4–20 x 7/8)	=	862–0001 323–2003–0 ⁻	2 1 1	Nut, Hex (1/4–20) Strain Relief

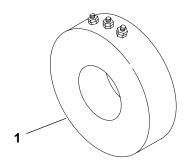


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Transformer, Current				
	302-2057-4	43 A/R	Ratio 122/1 or 244/1				
	302-2057-0	01 A/R	Ratio 138/1 or 276/1				
	302-2057-0	03 A/R	Ratio 173/1 or 346/1				
	302-2057-4	44 A/R	Ratio 209/1 or 418/1				
	302-2058-2	21 A/R	Ratio 122/1				

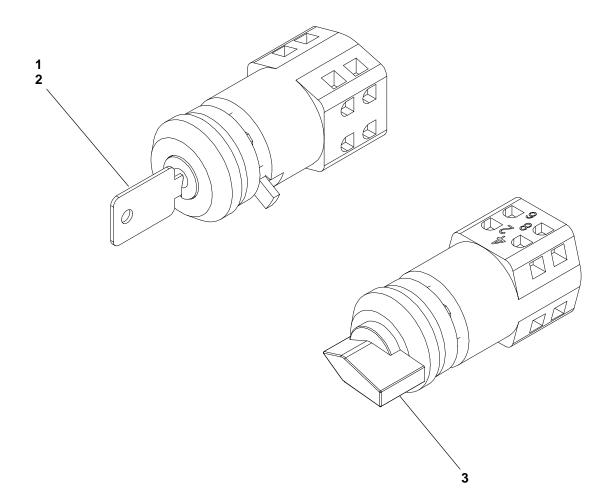

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
-	308–1045 308–1046	1 2	Switch, Key Operator Key – Spare	3	308–1085	1	Switch, Selector

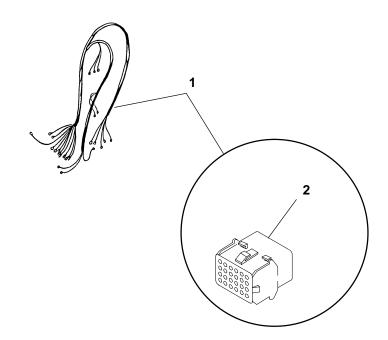


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – AC (Includes Plug)	2	323–1523	1	Plug, Connector (24 Place)
3	338–4180	1	PMG				
3	338–4185	1	Shunt				

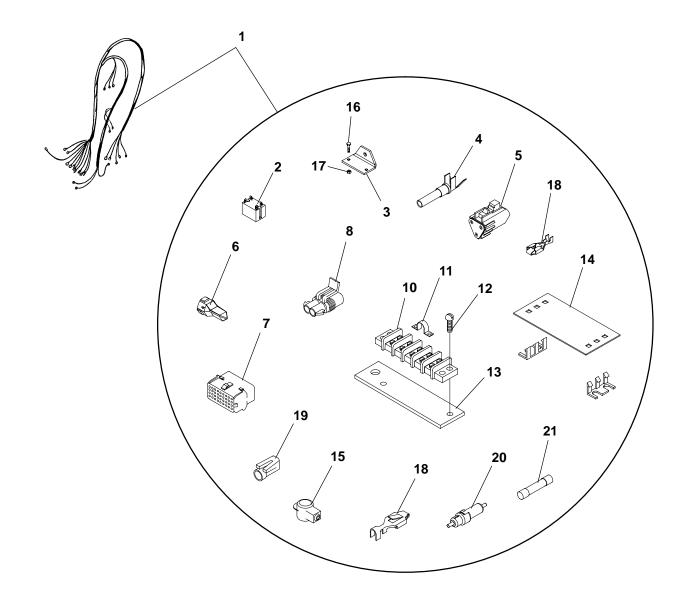

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.		QTY USED	PART DESCRIPTION
1	338–4233	1	Harness, Wiring – Engine to Control (Includes the	13 14	319–2006–05 332–3792–01	1 1	Bracket, Terminal Mounting Cover, Terminal Block (Includes
2	307-2968-03	2	Following Parts) Relay, Power	15	416-1021-03	2	Spring Clips) Boot
2	307-2982-02	2	Bracket, Relay	16	812-0079	2	Screw (#8–32 x .5)
4	323–1492	3	Socket, Contact	17	870-0221	2	Nut, Hex – W/ET (#8–32)
5	323–1493	1	Connector, Plug	18	323–1667	3	Socket, Terminal
6	323-1503	1	Wedge, Plug	19	323-1666	1	Connector, Socket
7	323–1525	1	Connector – 36 Pin	20	321-0371	1	Holder, Fuse
8	323–1755	1	Connector, Socket	21	321–0340	1	Fuse (15 Amp)
9	323–1972	2	Plug (Dummy) (Not Illustrated)	22	323–1970	1	Housing, Connector (Not
10	332–0604	1	Block, Terminal				Illustrated)
11	332–1043	4	Jumper	23	323–1971	1	Seal, Connector (Not
12	815–0538	2	Screw, Cross Recessed – Pan Head – W/ET (#8–32 x .50)				Illustrated)

This Page Intentionally Left Blank.


Circuit Breaker Box (UL Listed, IEC Conformity)

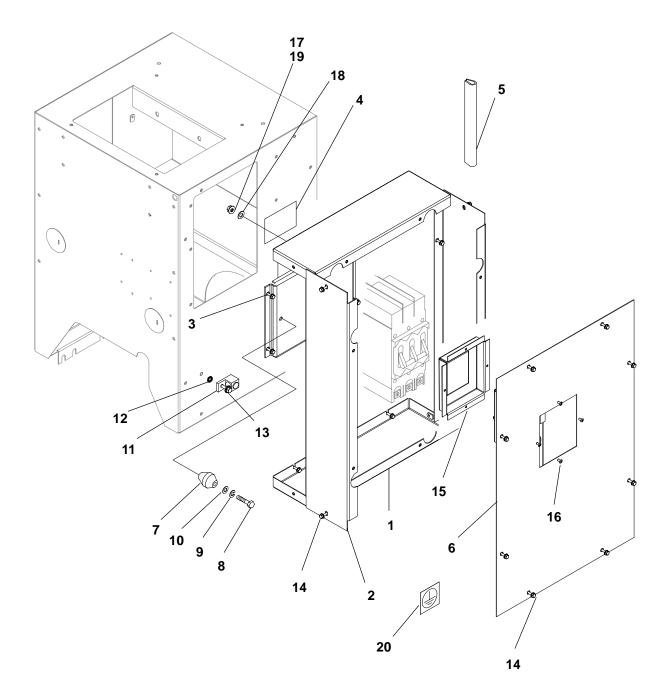

Circuit Breaker Box (UL Listed, IEC Conformity)


REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3072	2	* Panel, End – Circuit Breaker	15			*# Cutout, Box – Circuit Breaker
			Box		319–3241	1	10–100 Amp, 3 Pole, CE
2	319–2978	2	* Panel, Side – Circuit Breaker				(Hole Size 46mm x 84mm)
			Box		319–3242	1	70–250 Amp, 3 Pole, NS
3		1	*# Bracket, Mounting – Circuit				(Hole Size 38mm x 90mm)
			Breaker		319–3242	1	70–250 Amp, 4 Pole, NS
	319–3149	1	Q4, KDL, NS Circuit				(Hole Size 38mm x 90mm)
	040.0040		Breakers		319–3242	1	100–250 Amp, 2 & 3 Pole,
	319–3243	1	CE, CF, CJ Circuit				KDL (Hole Size 38mm x
			Breakers				90mm)
4	098-2304	1	*# Label, Warning		319–3304	1	125–250 Amp, 3 Pole, CF
5	508–0239	_	* Edging – Bulk (Order By The		240 2240	4	(Hole Size 70mm x 112mm)
6			Foot – 2 Feet Required) * Cover, Box – Circuit Breaker		319–3240	1	300–400 Amp, 2 & 3 Pole, Q4 (Hole Size 75mm x
0	319–2979–02	1	Entrance Box Only (No				100mm)
	319-2979-02	I	Breaker)		319–3304	1	300–600 Amp, 3 Pole, CJ
	319–3151	1	Used with Circuit Breaker		319-3304	I	(Hole Size 70mm x 112mm)
7	332-2744-07	1	Standoff, Insulator (2 & 3 Pole		319–3150	1	300–630 Amp, 4 Pole, NS
1	332-21 44-01	1	Only)		515-5150	I	(Hole Size 65mm x 120mm)
8	800–0048	2	Screw, Cap – Hex Head	16	818-0231-02	24	*# Rivet, Pop
			(3/8–16 x .75) (2 & 3 Pole Only)	17	860–0012	4	*# Nut (Q4 Circuit Breakers Only) (#12–24)
9	850-0050	2	Washer, Lock (3/8) (2 & 3 Pole	18	856-0005	4	*# Washer, Lock – W/EIT (Q4
-			Only)	-			Circuit Breakers Only) (#12)
10	526-0029	1	Washer, Flat (3/8) (2 & 3 Pole	19			*# Nut, Hex – W/EIT (#8–32)
			Only)		870-0221	4	70–250 Amp, 3 Pole, NS
11	332–1473	1	* Lug, Solderless		870-0221	4	100–250 Amp, 2 & 3 Pole,
12	856-0008	1	* Washer, Lock – EIT (5/16)				KDL
13	821-6003-02	1	* Screw, SEMS – Hex Head (M8	20	098–6537	1	Label, Ground
			x 1.25 x 20)				
14			Screw, SEMS – Hex Head (M6				
			x 1 x 16)	* No			reaker or Entrance Box
	821-6002-03	8	No Breaker	INC	or used on units	S VVO/DI	reaker of Entrance box
	821–6002–03	24	Entrance Box Only (No Breaker)				
	821-6002-03	28	Used with Circuit Breaker	# No	ot used on units	s W/Ent	rance Box Only – No Breaker

Circuit Breaker (UL Listed, IEC Conformity)

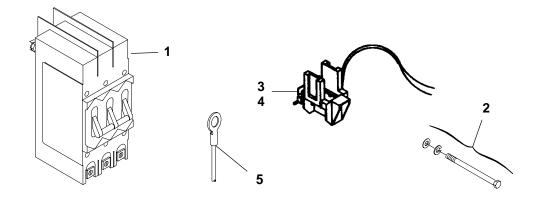

REF NO.	PART NO.	QTY USED		PART DESCRIPTION	REF NO.		QTY USED		PART DESCRIPTION
1			E	Breaker, Circuit		320-1959-05	51	*	150 Amp (600/750 Volts)
				2 Pole (UL)		320-1959-04	11	*	175 Amp (600/750 Volts)
	320-1961-07	1		100 Amp (240 Volts)		320-1959-03	31	*	200 Amp (600/750 Volts)
	320-1961-06	1		125 Amp (240 Volts)		320-1959-02	2 1	*	225 Amp (600/750 Volts)
	320-1961-05	1		150 Amp (240 Volts)		320-1959-01	1	*	250 Amp (600/750 Volts)
	320-1961-04	1		175 Amp (240 Volts)		320-1960-06	51	*	300 Amp (600/750 Volts)
	320-1961-03	1		200 Amp (240 Volts)		320-1960-05	51	*	350 Amp (600/750 Volts)
	320-1961-02	1		225 Amp (240 Volts)		320-1960-04	1 1	*	400 Amp (600/750 Volts)
	320-1961-01	1		250 Amp (240 Volts)					4 Pole (IEC)
	320-1962-03	1	*	300 Amp (240 Volts)		320-1959-16	51	*	80 Amp (750 Volts)
	320-1962-02	1	*	350 Amp (240 Volts)		320-1959-15	51	*	100 Amp (750 Volts)
	320-1962-01	1	*	400 Amp (240 Volts)		320-1959-14	11	*	125 Amp (750 Volts)
				3 Pole (UL)		320-1959-13	31	*	160 Amp (750 Volts)
	320-1961-14	1		100 Amp (240 Volts)		320-1959-12	2 1	*	200 Amp (750 Volts)
	320-1961-13	1		125 Amp (240 Volts)		320-1959-11	1	*	250 Amp (750 Volts)
	320-1961-12	1		150 Amp (240 Volts)		320-1960-10) 1	*	320 Amp (750 Volts)
	320-1961-11	1		175 Amp (240 Volts)	2				Package, Hardware – Circuit
	320-1961-10	1		200 Amp (240 Volts)					Breaker Mounting (Includes
	320-1961-09	1		225 Amp (240 Volts)					Screws, Nuts and Lock
	320-1961-08	1		250 Amp (240 Volts)					Washers)
				3 Pole (UL & IEC)		320-1986-08	31		Used With 320–1959–XX
	320-1959-22	1	*	10 Amp (600/750 Volts)					Circuit Breakers
	320-1959-21	1	*	20 Amp (600/750 Volts)		320-1986-07	7 1		Used With 320–1960–XX
	320-1959-20	1	*	30 Amp (600/750 Volts)					Circuit Breakers
	320-1959-19	1	*	40 Amp (600/750 Volts)					(Screws Only)
	320-1959-18	1	*	50 Amp (600/750 Volts)		320-1986-05	51		Used With 320–1962–XX
	320-1959-17	1	*	60 Amp (600/750 Volts)					Circuit Breakers (Screws
	320-1959-10	1	*	70 Amp (600/750 Volts)					Only)
	320-1959-09	1	*	80 Amp (600/750 Volts)					.,
	320-1959-08		*	90 Amp (600/750 Volts)	* – Ir	cludes Mount	ing Hard	war	е
	320-1959-07		*	100 Amp (600/750 Volts)			5		
	320-1959-06		*	125 Amp (600/750 Volts)	Cont	tinued			

Circuit Breaker (UL Listed, IEC Conformity)

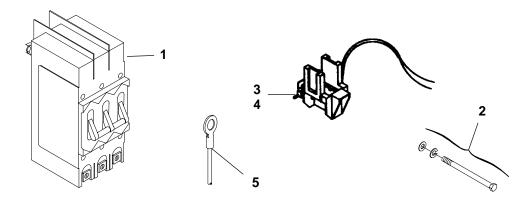

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			5			Lead (Quantity Used As Required)
			Accessories, Circuit Breaker: The following are used on 320–1959–XX and 320–1960–XX Circuit	2:	26–0893	1	3/8" Ring Terminal End to 1" Stripped End – No Markings (33") (#1/0 Wire)
3 4	320–1981–02 320–1981–01	1 2	Breakers Trip, Shunt (12V) Switch – Used as an Auxiliary Contact or Trip	2:	26–3505–01	1	3/8" Ring Terminal End to 1" Stripped End – No Markings (30") (#4 Wire)
			Alarm	2:	26–3505–03	3 1	3/8" Ring Terminal End to 3/8" Ring Terminal End – Marked "LO" (30") (#4 Wire)
				2:	26–3505–04	1	3/8" Ring Terminal End to 3/8" Ring Terminal End – Marked "LO" (30") (#1/0 Wire)

* - Includes Mounting Hardware

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
098–2304, 59		140–3067, 11		201–3603–03	. 45	300–3998–02	. 52
098–4500, 31		140–3119, 9		201–3603–04	,	300–5180, 51	
098–4730, 31		140–3120, 11		211–0422, 47	,	300–5381, 51	
098–4732, 31		140–3319–02		220–4233, 43		300–5383, 51	
098–5347–01		150–2120, 40		220-4293-04		300–5446, 51	
098–5387, 13		150–2651, 5		220-4293-05	,	300–5447, 51	
098–5429, 31		150–2682, 40)	220-4447-06		300–5467, 51	
098–6195, 48	3	150-2780-02	. 40	220–4447–07	, 45	302-2057-01	, 53
098–6537, 59)	150–2781, 40		220–4447–08	, 45	302-2057-03	
098–6927, 48	3	155–2062–10	, 21	220–4447–09	, 45	302-2057-43	, 53
098–6928, 48	3	155–2175, 21	, 22 , 23	220-4447-11	, 45	302–2057–44	, 53
098–6984, 51		155–2565, 19	, 20, 21, 23	220–4447–12	, 45	302–2058–21	, 53
098–7281, 42	2	155–3102–02	, 21 , 22 , 23	220-4447-13	, 45	304–0807, 45	i
098–7451, 31	, 33	155–3115, 22	, 23	220–4447–14	, 45	307–2677–02	., 15
098–7868, 31	, 33, 35	155–3116, 19		220–4447–16	, 45	307–2873, 49	1
098–7902–03	8, 35	155–3167, 21		220–4447–17	, 45	307–2968–03	, 56
098–7904, 51		155–3219, 21		220–4447–18	, 45	307–2982–02	, 56
098–7913, 31	, 33	155–3238, 31	, 33, 35	220–4447–26	, 45	308–0852, 15	1
098–7918, 51		155–3260, 22	, 23	220–4447–27	, 45	308–0912, 15	1
098–7961–01	, 51	155–3506, 18	, 21 , 22	220–4447–28	, 45	308–0916–01	, 17
098–7989, 51		155–3507, 21		226–0893, 61		308–0963–01	, 16
098–8057, 51		155–3508, 21		226–3505–01	, 61	308–0999, 51	
102–1448–02	2, 6	155–3511–01	, 18	226–3505–03	, 61	308–1045, 54	
128–0154–02	2, 35	155–3511–02	, 18 , 22	226–3505–04	, 61	308–1046, 54	
130–3570, 28	3	155–3521, 22	, 23	231–0318, 45		308–1085, 51	, 54
130–3571, 28	3	155–3628–02	, 23	231–0329, 45		308–1155–01	, 13
130–3572, 28	}	155–3632, 20	, 23	232–0936–01	, 47	308–1155–02	, 13
130–4602, 29		159–1371–03	, 12	232–0936–02	, 47	315–0686, 15	,
130–4622, 27	,	159–1371–05	, 12	232–3421, 47		319–0485, 15	,
130–4623, 27	,	159–1463, 12		232–3438, 45		319–0486, 15	,
130–4759, 29		159–1463–01	, 12	232–3441, 47		319–2006–05	, 56
130–4878, 28	3	159–1464, 12		232–3462–03	, 43	319–2653, 31	, 33, 35
130–5114–02	2, 29	159–1467, 39)	232–3552–02	, 12	319–2967, 41	
130–5115–02	2, 27	159–2693–02	., 13	232–3698, 45		319–2978, 59	l.
130–5285, 29)	191–2323–02	, 29	232–3730–03	, 47	319–2979–02	, 59
130–5500–02	2, 29	193–0444, 5		232–3819–01	, 47	319–2996, 41	
130–5501–02	2, 29	193–0468, 24		232–3819–02	, 47	319–3072, 59	l.
130–5502–02	2, 29	193–0529–01	, 5	232–3940, 47		319–3149, 59	l.
130–5503–02	2, 29	201–3434–01	, 45	232–3972, 43		319–3150, 59	
130–5505–02	2, 29	201–3434–02		234–0875–02	, 43	319–3151, 59	E.
130–5514–02	2, 29	201–3446, 43	•	234–0878, 47		319–3207, 41	
140–1548, 9 ,	11	201–3603–01		234–0903, 47		319–3208, 41	
140–3055, 9		201–3603–02	, 45	300–3464, 15		319–3240, 59	1

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
319–3241, 5 9		320–1961–07	7, 60	327–1275, 51		338–3994, 51	
319–3242, 59		320–1961–08	3, 60	330–0142, 42		338–4178–01	, 24
319–3243, 59)	320-1961-09	9, 60	331–0027, 15		338–4180, 55	
319–3304, 59)	320-1961-10), 60	331–0042, 15		338–4185, 55	
319–4456–02	2, 41	320–1961–11	, 60	332–0604, 56		338–4209, 49	1
319–4457, 41		320–1961–12	2, 60	332–1043, 56		338–4233, 56	i
319–4487, 51		320-1961-13	B, 60	332–1389, 24	, 42	357–0091, 45	
319–4488, 51		320–1961–14	l, 60	332–1445, 48	, 51	357–0092, 45	
319–4497, 51		320–1962–01	, 60	332–1473, 59		358–0135–01	, 45
320–1653, 15	5	320–1962–02	2, 60	332–1992, 16	, 17	358–0135–02	, 45
320–1654, 15	5	320-1962-03	8, 60	332–2420, 48	, 51	399–0117–01	, 13
320–1959–01	, 60	320–1981–01	, 61	332–2430, 16	, 17	402–0764–01	, 51
320–1959–02	2, 60	320–1981–02	2, 61	332–2605, 15		402–0779–02	, 36 , 37
320–1959–03	8, 60	320–1986–05	5, 60	332–2634, 5 ,	25	403–4107, 38	ł
320–1959–04	ŀ, 60	320–1986–07	7, 60	332–2744–07	, 59	403–4110, 38	
320–1959–05	5, 60	320–1986–08	B, 60	332–2878, 49		403–4116, 38	
320–1959–06	6, 60	321–0340, 56	5	332–2987, 41	, 47	403–4215, 31	, 33
320–1959–07	7 , 60	321–0371, 56	5	332–3023, 42		403–4615–02	, 37
320–1959–08	8, 60	322-0369-02	2, 15	332–3024–11	, 42	403–4616–02	, 36
320–1959–09	9, 60	322-0403-02	2, 15	332–3228, 42		403–4617–02	, 36 , 37
320-1959-10), 60	322–0488, 5 1		332–3388, 24		405–5734, 31	, 33
320–1959–11	, 60	322–0491, 5 1		332–3740, 41		405–5745, 31	, 33 , 35
320–1959–12	2, 60	323–1302, 15	5	332–3792–01	, 56	405–5832, 35	i
320–1959–13	8, 60	323–1374–04	l, 15	332–3842, 49		405–5841, 31	, 33
320–1959–14	l, 60	323–1491, 24	L .	332–3896, 51		405–5902, 31	, 33 , 35
320–1959–15	5, 60	323–1492, 56	5	333–0438–07	, 42	405–5903, 31	, 33, 35
320–1959–16	6, 60	323–1493, 56	5	333–0438–08	, 42	405–5908, 31	, 33, 35
320–1959–17	7, 60	323–1494, 24	Ļ	333–0585, 25		405–5910, 31	, 33, 35
320–1959–18	8, 60	323–1502, 24	Ļ	333–0588–01	, 25	405–5916, 31	, 33, 35
320–1959–19	9, 60	323–1503, 56	5	333–0588–02	, 25	405–5952, 31	, 33
320–1959–20), 60	323–1523, 55	5	333–0661–01	, 48	405–5953, 31	, 33
320–1959–21	, 60	323–1525, 56	5	333–0661–02	, 48	405–5954, 31	, 33
320–1959–22	2, 60	323–1666, 56	5	335–0173, 48		405–5955, 31	, 33
320–1960–04	l, 60	323–1667, 56	5	335–0173–01	, 48	405–5956, 31	, 33
320-1960-05	5, 60	323–1708, 24	L .	335–0189, 51		405–5957, 31	, 33
320-1960-06	6, 60	323–1709, 24	L .	337–0049, 41	, 51	405–5958, 31	, 33
320-1960-10), 60	323–1755, 56	5	337–0090, 36	, 37	405–5960, 31	, 33
320–1961–01	, 60	323–1765, 24	Ļ	338–2382, 15		405–5961, 31	, 33
320–1961–02	2, 60	323–1970, 56	5	338–2397, 13		405–5966, 31	, 33
320-1961-03	8, 60	323–1971, 56	5	338–2403, 15		405–5987, 31	, 33
320–1961–04	, 60	323–1972, 56	5	338–2404, 15		405–5988, 33	
320-1961-05	5, 60	323–2003–01	, 52	338–3011, 43		405–5990, 33	
320–1961–06	6 , 60	323–2003–02	2, 48	338–3991, 51		405–5991–01	, 33

Part No. Page	Part No. Page	Part No. Page	Part No. Page
405 5004 00 22	504 0700 04 F		000 0007 20 27
405–5991–02, 33	501–0729–01, 5	508–1057, 47	800–0607, 36 , 37
405–5995, 31 , 33	502–0426–01, 26	509–0266–01, 45	800–2034, 40
405–5996, 31 , 33	502–0942, 13	510–0165, 45	800–2039, 47
405–5997, 31 , 33	502–0943, 13 , 25	515–0299–02, 45	800–2042, 47
405–5998, 31 , 33	502–1173, 25	515–0299–04, 45	800–2052, 41
405–6000–02, 31 , 33	502–1400–02, 5	517–0021, 42	800–2056, 9 , 11
405–6000–03, 31 , 33	503–0131, 6 , 26	517–0094, 36 , 37	800–2060, 47
405–6000–04, 33	503–0183, 13 , 25	517–0131, 31 , 33	800–2085, 5 800–2086, 9 , 11 , 20 , 23 , 37
405–6000–06, 31 , 33	503–0276, 28	517–0135, 41 , 47	
405–6000–07, 33 405–6001–01, 31 , 33	503–0365, 29	517–0138–07, 31 , 33	800–2087, 47
	503–0386, 26	517–0322, 31 , 33	800–2096, 40
405–6003, 31 , 33	503–0398, 29	517–0355, 51	800–2097, 40
405–6005, 31 , 33	503–0685, 5 , 12 , 28	517–0356, 51	800–2111, 5
405–6010, 33	503–1391–02, 29	517–0357, 51	800–2526, 47
405–6013, 33	503–1657, 6	518–0122, 45	800–2530–03, 36 , 37
405–6014, 33	503–1660–05, 13	518–0601, 4	800–2543–02, 36 , 37
405–6015, 31 , 33	503–1870–05, 9 , 11	525–0304, 4	800–3009, 45
405–6018, 31 , 33 , 35	503–2243, 29	525–0305, 4	800–3017–20, 47
405–6029, 31 , 33	503–2245, 29	525–0306, 4	800–3017–37, 47
405–6030, 31 , 33	503–2247, 9	526–0003, 15	800–3017–39, 47
405–6034, 31 , 33	503–2250, 11	526–0011, 31 , 33	800–3017–41, 45 , 47
405–6035, 31 , 33 405–6044, 33	503–2293–06, 25 503–2293–07, 25	526–0018, 40	800–3017–73, 12
		526–0029, 59	800–3034, 42
405–6068, 31 , 33	504–0176, 6 , 26	526–0174, 9 , 11 , 36 , 37 , 47	802–2507, 18 , 21 , 22
405–6109, 31 , 33 405–6132, 33	505–0007, 12	526–0238–01, 36 , 37	812–0075, 15 812–0079, 56
	505–0019, 5	526–0259, 45	
406–0831, 31 , 33 , 35 406–0845, 51	505–0026, 16, 17 505–0027, 12	526–0329, 6 526–0399–13, 28	814–2150, 41 815–0350, 15
406–0972–01, 31 , 33 , 35	505–0027, 12 505–0066, 16	526–0399–13, 25	815–0385, 15
415–0043, 12	505–0069, 17	526–0399–66, 12	815–0538, 56
415–0565–52, 12	505–0003, 11	526–0423, 47	815–0761–01, 43
415–0565–61, 12	505–0172, 12	526–0433, 36 , 37	815–0792–02, 51
416–0993–02, 7	505–0203, 12	526–0451, 31 , 33 , 35	815–0792–04, 42
416–1019, 5	505–0359, 12	526–2050, 42 , 45	815–0943–02, 41
416–1021–03, 56	505–0401, 12	526–2060, 45	818–0231–02, 27 , 28 , 29 ,
416–1084, 5	505–0401, 12 505–1050, 17	526–2100, 41 , 47	31, 33, 35, 59
416–1089, 5	505–1050–01, 16	526–2120, 5 , 9 , 11 , 41 , 47	818–0237–01, 31 , 33 , 35
416–1100–02, 7	505–1458–02, 17	625–2141–02, 13 , 15	819–1137–01, 51
416–1101, 7	505–1458–14, 16	720–1119, 45	819–1137–02, 51
416–1103–02, 7	508–0139, 45	775–0049, 43	819–1144, 41 , 51
416–1104, 5	508–0228, 42	800–0006, 52	821–2033, 13
501–0502, 5 , 12	508–0239, 59	800–0007, 40	821–6001–01, 43 , 47
501–0627–03, 12	508–0305–02, 41	800–0048, 59	821–6001–02, 41 , 47
001 0021 00, I Z	000 0000 02, 41		

Part No. Page	Part No. Page	Part No. Page	Part No. Page	
821–6002–03, 28 , 38 , 41 , 59	850–0114–55, 45 , 47	856–0012, 41	868–0001, 40	
821–6003–01, 9 , 11 , 41	850–0114–57, 12	856–0013, 5 , 36 , 37 , 41	870–0221, 15 , 56 , 59	
821–6003–02, 7 , 21 , 23 , 25 ,	850–2003, 42	860–0008, 15	870–0458, 15	
29, 39, 59	850–2004, 42 , 45	860–0012, 59	870–0504, 31 , 33 , 35	
821–6006–01, 25 , 31 , 33 , 35	850–2005, 45	860–2005, 42 , 45	870–2054, 13	
821–6007–02, 29 , 31 , 33 , 35	850–2006, 40 , 43 , 47	860–2006, 45	870–2064–01, 42 , 45	
822–3047, 42	850–2010, 9 , 11 , 20 , 21 , 22 ,	860–2007, 40	870–2213–02, 51	
822–3075, 42	23, 41, 43, 47	860–2009, 41, 47	895–0363, 31 , 33 , 35	
823–1006–02, 49	856–0002, 15	862–0001, 40 , 52	895–0382, 35	
850–0040, 52	856–0005, 59	862–0026–58, 12	895–0384, 31 , 33	
850–0050, 59	856–0008, 59	,		
850–0114–54, 47	856–0010, 36 , 37 , 41	862–0044, 36 , 37	895–0385, 31 , 33	
		865–0030, 7	895–0386, 31 , 33	

Cummins Power Generation 1400 73rd Avenue N.E. Minneapolis, MN 55432 1-800-888-6626 763-574-5000 International Use Fax: 763-528-7229



