


# **Parts Catalog**

GGKB GGKC GGKD

# **Generator Set**

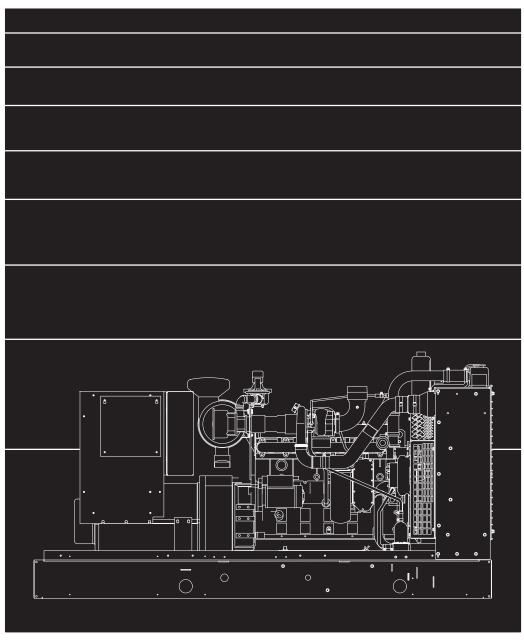

#### MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION

AND DATE (IF APPLICABLE)

#### SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

**▲ DANGER** 

This symbol warns of immediate hazards which will result in severe personal injury or death.

**△WARNING** 

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

**△CAUTION** 

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

#### PRODUCT SAFETY PRECAUTIONS

#### **△WARNING**

Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

#### **△WARNING**

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

#### **△**WARNING

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

#### **△WARNING**

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

#### Introduction

This catalog applies to the standard generator models GGKB, GGKC and GGKD as listed in the Generator Set Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set.

Engine parts that have been modified or added by Onan are identified in this catalog. All other engine replacement parts must be ordered from the engine manufacturer by referring to the engine manufacturer's name-plate and supplying all available information. Contact your nearest engine parts distributor for assistance in ordering replacement parts.

#### Replacement Engine

Onan/Cummins Generator Model	Cummins Engine Model
GGKB	GTA 8.3 G1
GGKC	GTA 8.3 G2
GGKD	GTA 8.3 G2

#### **Generator Set Data Table**

Model/		Battery				
Specification	Watts	Volts	Hertz	Wire	Phase	Voltage
105GGKB*	105,000	#	50	4,6,12	1 or 3	12 VDC
125GGKB*	125,000	#	60	4,6,12	1 or 3	12 VDC
110GGKC*	110,000	#	50	4,6,12	1 or 3	12 VDC
140GGKC*	140,000	#	60	4,6,12	1 or 3	12 VDC
115GGKD*	115,000	#	50	4,6,12	1 or 3	12 VDC
150GGKD*	150,000	#	60	4,6,12	1 or 3	12 VDC

<sup>\* –</sup> The Specification number denotes customer requested options or deviations from the standard model. The specification letter advances with major manufacturing changes.

# - Broad Range Reconnectible.

#### Index

Adapter, Duct – Radiator, <b>14</b>	Hose, Oil Drain, 6
Adapter, Exhaust, <b>7</b>	Hose, Radiator, 13
Adapter, Generator, 31	Housing, Control, 27
•	Housing, Generator Set – Quiet Site First Stage, 19
Bar, Neutral – Circuit Breaker Box – 700–1000 Amp, 43	Housing, Generator Set – Quiet Site Second Stage, 21
Bell, End – Generator, 31	Housing, Generator Set – Standard Weather Protective, 17
Block, Terminal – Generator, <b>31</b>	Hub, Drive – Generator, 31
Block, Terminal – Generator Heater, 28	
Box, Circuit Breaker – 10–630 Amp, <b>41</b>	Labels, Miscellaneous, 37
Box, Circuit Breaker – 700–1000 Amp, 43	Lug, Solderless - Circuit Breaker Box - 10-630 Amp, 41
Box, Entrance, 25	Lug, Solderless - Circuit Breaker Box - 700-1000 Amp, 43
Box, Terminal – Generator Heater, 28	Lug, Solderless – Entrance Box, 25
Bracket, Bottle – Radiator, 13	
Bracket, Charge Air Cooler – Radiator, 13	Module, Alarm, 35
Bracket, Heater – Water Heater, 11	Muffler - Critical, 8
Bracket, Mounting - Circuit Breaker - 700-1000 Amp, 43	Muffler – Residential, 9
Bracket, Mounting – Circuit Breaker Box – 10–630 Amp, <b>41</b>	
Bracket, Mounting – Generator, <b>31</b>	Paint, 3
Bracket, Muffler – Residential, 9	Pan, Skid, 23
Breaker, Circuit, 44	Pin, Parallel – PMG, 29
	Pyrometer, 34
Cable, Battery, 4	
Cable, Magnetic Pickup – Engine to Control Wiring Harness,	Radiator, 13
39	Rectifier – Control Heater, 33
Cap, Radiator, <b>13</b>	Rectifier – Engine to Control Wiring Harness, 39
Cap, Rain – Muffler – Critical, 8	Rotor, Generator, 31
Cap, Rain – Muffler – Residential, 9	Rotor, PMG, 29
Cartridge, Heater – Generator, 28	
Control, PowerCommand, 33	Sealant, Thread, 3
Cooler, Charge Air – Radiator, 13	Sender, Low Coolant Level, 10
Cover, Box – Control, <b>27</b>	Sender, Oil Pressure, 4
Cover, Circuit Breaker Box – 10–630 Amp, <b>41</b>	Sender, Temperature, 4
Cover, Circuit Breaker Box – 700–1000 Amp, <b>43</b>	Shield, Rain – Muffler – Critical, 8
Cover, End Bell, 29	Shield, Rain – Muffler – Residential, 9
Cover, Housing – Control, 27	Shroud, Charge Air Cooler – Radiator, 13
Cover, Shroud – Radiator, <b>13</b>	Skid, <b>22</b>
Cover, Stator, <b>31</b>	Stator, Generator, 32
Cover, Stub Up – Skid Pan, 23	Stator, PMG, 29
Cushion, Vibration Isolating – Skid, 22	Strap, Electrical – Skid, <b>22</b>
	Support, Engine – Skid, 22
Disk, Drive – Generator, <b>31</b>	Switch, Low Engine Temperature, 4
Drain, Oil, 6	Switch, Pressure, 4
Drain, Radiator, 15	Switch, Trip Alarm or Auxiliary Contact, 45
E. 15 1 D. 1	
External Engine Parts, 4	Tank, Coolant Recovery – Radiator, 13
5 D E	Transformer, Current, <b>36</b>
Fan, Radiator, 13	Tray, Battery, <b>24</b>
	Trip, Shunt, 45
Generator, 31	Tube, Charge Air Cooler – Radiator, 13
Grille, Radiator, 13	Tube, Radiator, 13
Guard, Alternator – Radiator, 13	Tube, Water Heater, 11
Guard, Fan – Generator, 31	VI 01 / " 01 D : 0
Guard, Fan – Radiator, <b>13</b>	Valve, Shutoff – Oil Drain, 6
	Valve, Shutoff – Radiator Drain, <b>15</b>
Harness, Wiring – Engine To Control, <b>39</b>	Vaporizer, 5
Harness, Wiring – PMG, <b>29</b>	Varistor – Generator, <b>31</b>
Heater, Control, 33	Varistor, Metaloxide – Engine to Control Wiring Harness, 39
Heater, Engine Coolant, 11	
Hose, Engine Coolant – Vaporizer, 5	Wrapper, Box – Control, 27

#### **Abbreviations**


Some of the following abbreviations may be used throughout this Parts Catalog:


AC	Alternating Current	mm	Millimeter
Amp	Ampere	MOH	Mobil Off Highway
A/R	As Required	NFS	Not For Sale
AVR	Automatic Voltage Regulator	NPT	National Pipe Thread
AWG	American Wire Gauge	OD	Outside Diameter
Deg	Degree	OZ.	Ounce
DC	Direct Current	PMG	Permanent Magnet Generator
EFC	Electronic Fuel Control	Ph	Phase
ET	External Tooth	PC	Printed Circuit
EIT	External/Internal Tooth	RFI	Radio Frequency Interference
GFI	Ground Fault Interrupter	RT	Right
ID	Inside Diameter	Spec	Specification
IT	Internal Tooth	Thk	Thick
IEC	International Electrotechnical	UL	Underwriters Laboratories Inc.
	Commission	UNC	Union National Coarse
kW	Kilowatt	UNF	Union National Fine
LPG	Liquid Petroleum Gas	VAC	Volts Alternating Current
LT	Left	VDC	Volts Direct Current
M(meter Number)	Meter	W/(ET, IT, EIT)	With


#### **Paint and Thread Sealant**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
F	525–0305	_	Onan Green Enamel (Non-Metallic) 12 oz. Pressurized	ŧ.	518–0601	-	Sealant, Thread (6 ml Tube)
	20 0000		Spray Can				
5	525-0306	_	Quart Can				
5	25-0304	_	Gallon Can				

# **External Engine Parts**

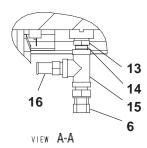


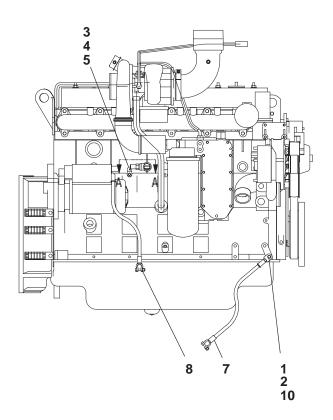

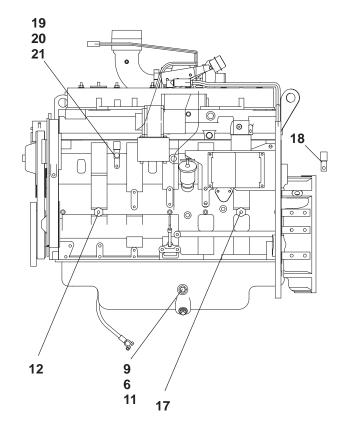

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	856-0013	1	Washer, Lock – W/EIT (1/2)	11	102–1356	1	Gasket, Oil Drain
2	800-2111	1	Screw, Cap – Hex Head	12	193-0444	1	Sender, Oil Pressure (E1)
			(M12 x 1.25 x 25mm)	13	505-0019	1	Bushing, Reducer (1/2 x 3/8)
3	800–2058	1	Screw, Cap – Hex Head (M8 x 1.25 x 25)	14	505–0101	1	Nipple, Close (3/8) - GGKB, GGKC
4	850-2008	1	Washer, Lock (M8)	15	505-0060	1	Tee, Pipe - GGKB, GGKC
5	309–0269	1	Switch, Low Engine Temperature (S4)	16	502-0943	1	Connector, Hose (3/8 x 5/8) – GGKB, GGKC
6	193-0432	2	Sender, Temperature	17	309-0159	1	Switch, Pressure (S77)
			(E4, E2)	18	332-3196	1	Clamp, J
7	416-1000	1	Cable, Battery	19	526-2133	1	Washer, Flat
8 9	416–0619 102–1448–02	1 1	Cable, Battery Adapter, Oil Drain	20	800–2084	1	Screw, Cap – Hex Head (M10 x 16)
10	526-2140	1	Washer, Flat (M12)	21	332-2634	1	Clamp, Hose


# Vaporizer

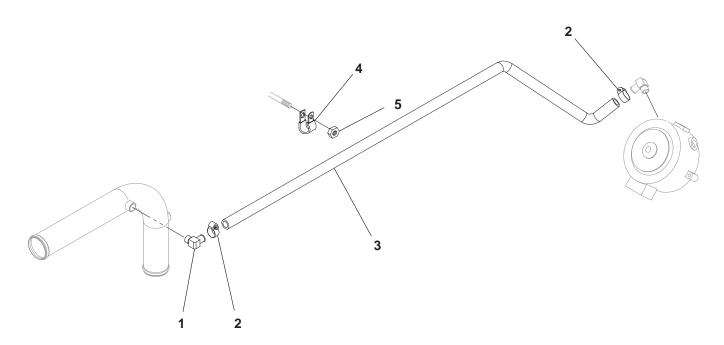

C065,C090


REF	PART	QTY	PART	RE	 PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO	NO.	USED	DESCRIPTION
1 2 3	502–0942 503–0183 503–0386	1 2 -	Elbow – 90° Clamp, Hose Hose, Engine Coolant – Bulk (Order By The Foot – 4 Feet Required)	4 5	 3–0548–05 2–0026–55	1	Clamp, Hose Nut, Hex (M8 x 1.25)

# Oil Drain

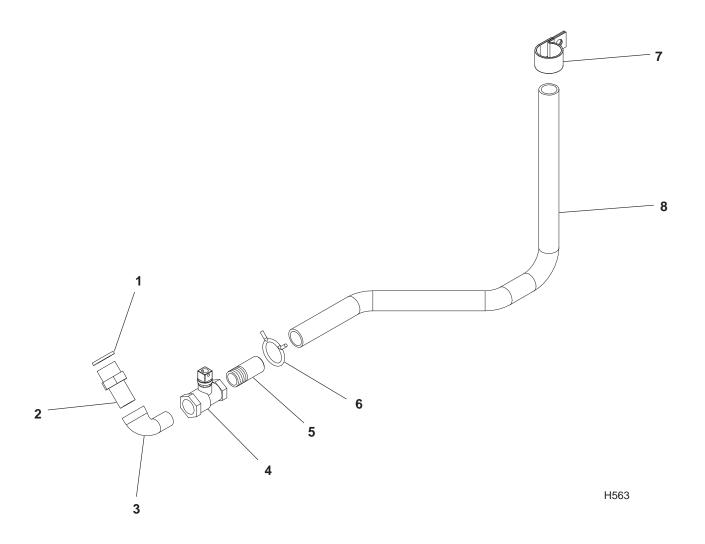

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	RE NO		QTY USED	PART DESCRIPTION
1	102-1147	1	Gasket, Oil Drain	6	503-0197	1	Clip, Hose
2	102-1237	1	Adapter, Oil Drain	7	518-0548-02	2 1	Clamp, Hose
3	505-0050	1	Elbow, Street (1/2" x 90°)	8	503-0098	_	Hose, Oil Drain - Bulk (Order
4	504-0011	1	Valve, Shutoff (1/2")				By The Foot – 3 Feet
5	505-0185	1	Nipple, Half (1/2" x 1.5" lg)				Required)


# **Exhaust Adapter**

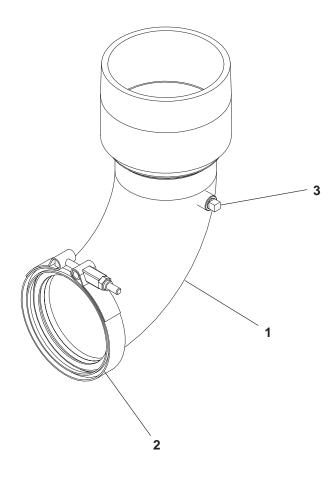

A299

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1 2	155–3163–01 155–2570	1 1	Adapter, Exhaust Clamp, V-Band	3	505-0057	2	Plug, Square Head (1/8")


Muffler – Critical Housed Sets

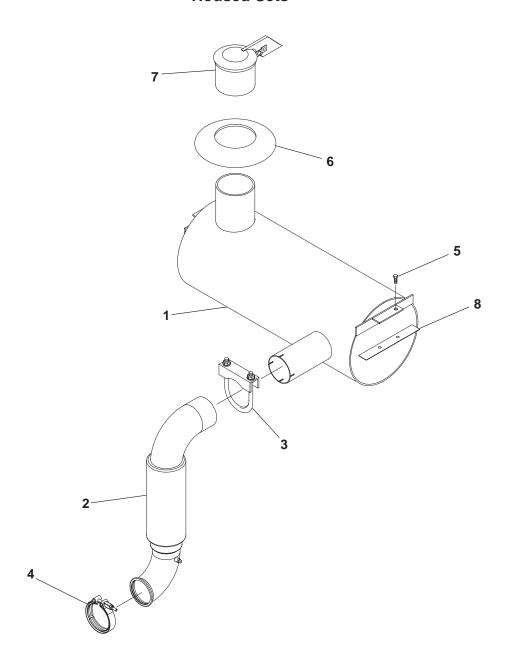

F172,F173

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-3150-02	1	Muffler	6	155-3180	1	Shield, Rain
2	155-3164-03	1	Pipe, Exhaust	7	155-2062-13	1	Cap, Rain
3	155-2305	1	Clamp, Muffler	8	155-3219	2	Gasket, Muffler
4	155-2570	1	Clamp, V-Band				
5	821-6003-02	2	Screw, Cap - Hex Head				
			(M8 x 1.25 x 25mm)				


# Muffler – Residential

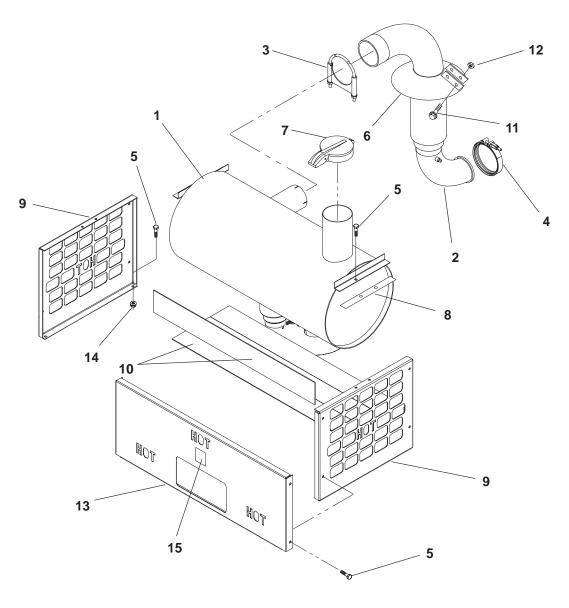

A276


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155–3150–03	1	Muffler	10	130–4848	_	Insulation, Exhaust – Bulk
2	155-3164-04		Pipe, Exhaust				(Order By The Foot – 13 Feet
3	155-3260-01	1	Clamp, Muffler				Required)
4	155-2570	1	Clamp, V-Band	11	821-5000-05	2	Screw, Hex Head (#10-32 x .50)
5	821-6003-02	8	Screw, Cap – Hex Head	12	870-0320	2	Nut, Whizlock (#10-32)
			(M8 x 1.25 x 20mm)	13	405-6306-02	1	Bracket, Muffler
6	155-3278-03	1	Shield, Rain	14	870-2055	2	Nut, Locking – Hex Head
7	155-2062-13	1	Cap, Rain				(M8 x 1.25mm)
8	155-3219	2	Gasket, Muffler	15	098-7451	1	Label, Caution
9	405-6302-02	2	Bracket, Muffler				

#### **Low Coolant Level Sender**

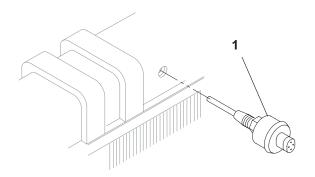


REF **PART** QTY **PART** REF **PART** QTY **PART** NO. NO. **USED DESCRIPTION** NO. NO. **USED DESCRIPTION** Sender, Low Coolant (E2) 1 193-0468 1

# **Coolant Heater**

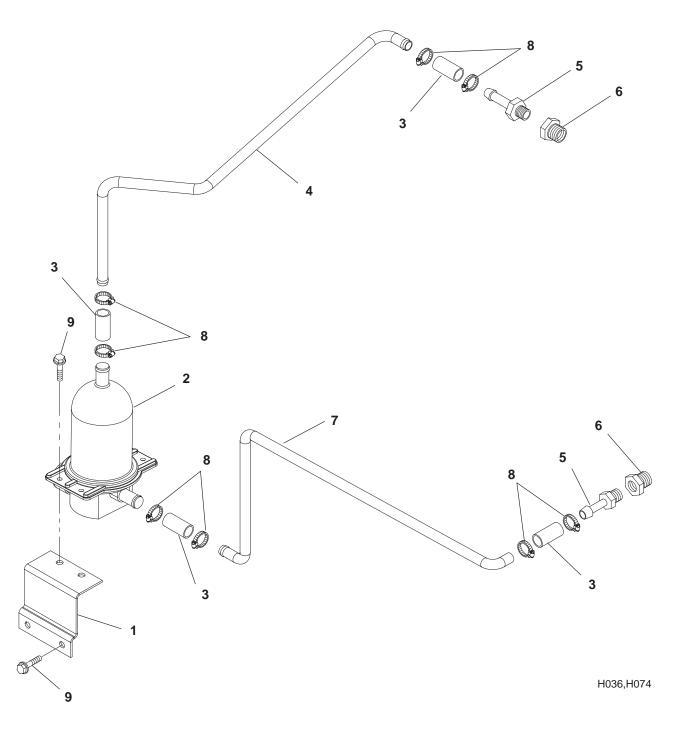

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	333-0615	1	Bracket, Heater	6	505-0019	2	Bushing, Reducer (3/8 x 1/2)
2			Heater, Engine Coolant	7	130-4720	1	Tube, Water Heater
	333-0588-03	1	120 Volt	8	503-0183	8	Clamp, Hose
	333-0588-04	1	240 Volt	9	821-6002-03	4	Screw, SEMS - Hex Head
3	503-1634-02	4	Hose, Silicon Rubber (5/8 x 2.5)				(M6 x 1.0 x 16mm)
4	130-4719	1	Tube, Water Heater				
5	502-0943	2	Connector, Hose (3/8 NPT x 5/8 Hose)				


#### Radiator

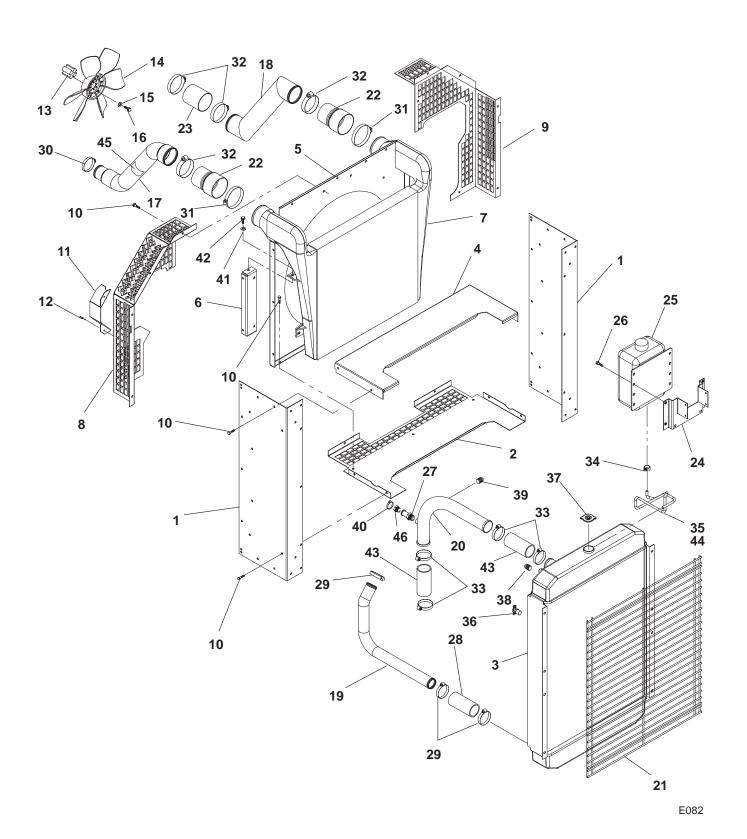

#### Radiator

REF NO.		QTY USED	PART DESCRIPTION	RE NO		QTY USED	PART DESCRIPTION
1	130-4694	2	Side, Housing	26	821-6002-03	4	Screw, Hex Head (M6 x 16)
2	130-4693	1	Cover, Shroud – Bottom	27	502-1162	1	Connector, Hose
3	130-4691-02	1	Radiator	28	503-1554	1	Hose, Radiator
4	130-4700	1	Cover, Shroud – Top	29	503-0365	3	Clamp, Hose
5	130-4692	1	Shroud, Charge Air Cooler	30	503-1872-04	1	Clamp, Hose
6	130-4699	2	Bracket, Charge Air Cooler	31	503-1872-07	2	Clamp, Hose
7	154-3021	1	Cooler, Charge Air	32	503-1872-06	4	Clamp, Hose
8	130-4697	1	Guard, Fan – Left	33	503-0465	4	Clamp, Hose
9	130-4695	1	Guard, Fan – Right	34	503-1445-06	1	Clamp, Hose
10	821–6003–02	48	Screw, Hex Head (M8 x 1.25 x 20mm)	35	898–1195–02	-	Sleeving, Convoluted – Bulk (Order By The Foot – 4
11	130–4716	1	Guard, Alternator				Feet Required)
12	818-0231-02	2	Rivet, Pop	36	504-0003	1	Cock, Drain
13	130-3216-01	1	Spacer, Fan	37	130-3721-01	1	Cap, Radiator (15 PSI)
14	130-4733	1	Fan, Radiator	38	502-0153	1	Plug, Square Head (1/4)
15	526-2120	4	Washer, Flat	39	505-0110	1	Plug, Square Head (3/8)
16	800-2099	4	Screw, Cap – Hex Head	40	503-0685	1	Clamp, Hose
			(M10 x 90)	41	526-0113	4	Washer, Flat (M8)
17	502-1310	1	Tube, Turbo Connector (3.5")	42	800-2059	4	Screw, Cap – Hex Head
18	502-1311	1	Tube, Charge Air Cooler				(M8 x 30)
19	503-2045	1	Tube, Radiator Outlet	43	503-1379-01	2	Hose, Radiator
20	503-2095	1	Tube, Radiator Inlet	44	503-0276	_	Hose, Overflow - Bulk (Order
21	130-4735	1	Grille (Unhoused Sets)				By The Foot – 5 Feet
22	502-1292	2	Connector, Turbo Tube				Required)
23	502-1313	1	Connector, Turbo Tube	45	098-7451	1	Label, Caution
24	130-4750	1	Bracket, Bottle	46	502-0050	1	Bushing, Pipe
25	130-3984	1	Tank, Coolant Recovery				-


# **Duct Adapter**

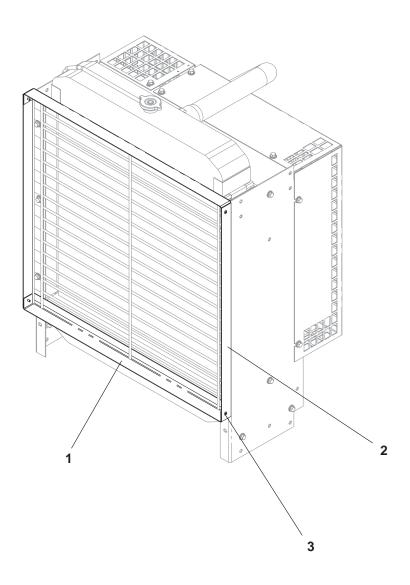

F013

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	130–4622 130–4734	2 2	Adapter, Duct Adapter, Duct – Side	3	818-0231-02	2 4	Rivet, Pop


# **Radiator Drain**

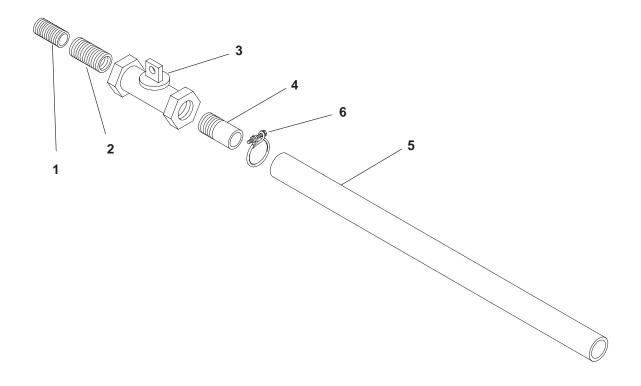

E089

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-0047	1	Nipple, Pipe (1/4)	4	505-0185	1	Nipple, Half
2	502-0802	1	Bushing, Flush (1/4 x 1/2)	5	503-1195	1	Hose (24")
3	504-0011	1	Valve, Shutoff (1/2)	6	503-0197	1	Clamp, Hose


Housing Standard Weather Protective

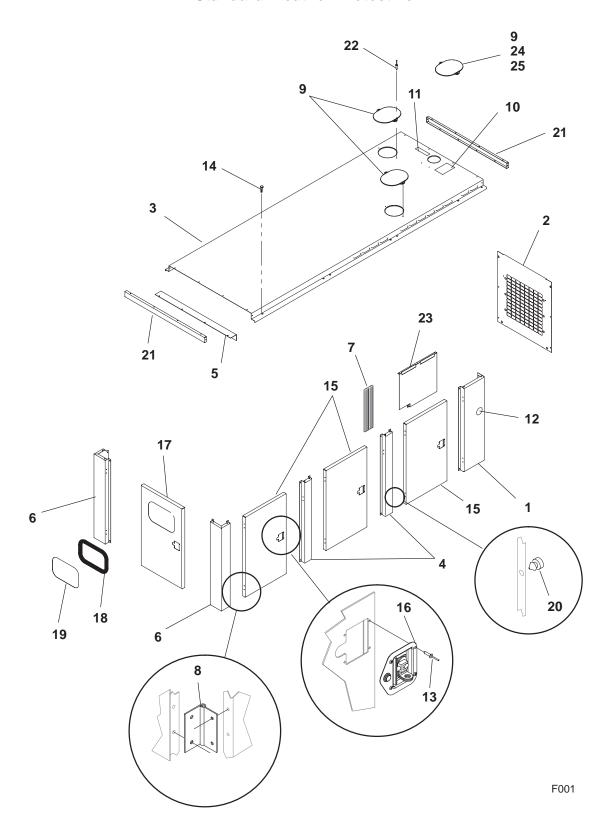

# Housing Standard Weather Protective

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-5908	2	Panel, Side – Radiator Housing	16	406-0835	7	Latch, Door
2	405-5909	1	Panel, Front - Radiator Housing		406-0782	1	Key, Replacement (fits Latch
3	405-6303-02	1	Roof				406-0835)
4	405-5744	4	Post, Housing – Center	17			Door, Housing
5	405-5915	1	Angle, Roof		405-5903	1	Sets With Control Window
6	405-5916	2	Post, Corner – Housing		405-5902	1	Sets W/O Control Window
7	130-4848	_	Insulation, Exhaust – Bulk	18	895-0363	_	Weatherstrip – Window – Bulk
			(Order By The Foot – 3 Feet Required)				(Order By The Foot – 5 Feet Required)
8	406-0831	14	Hinge, Door	19	319-2653	1	Window, Control (If Equipped)
9	155-3238	3	Cover, Exhaust	20	895-0382	14	Bumper, Door
10	098-4730	1	Label, Warning	21	405-5917	2	Panel, End – Roof
11	098-5429	1	Label, Coolant Fill	22	818-0237-01	6	Rivet, Pop (1/8)
12	098-4500	2	Label, Prototype Tested	23	405-6301-02	1	Shield, Heat
13	818-0231-02	113	Rivet, Pop (3/16)	24	870-0504	2	Nut, Captive Floating (M6 x 1.0)
14	821-6003-02	36	Screw, Hex Head - SEMS (M8)	25	821-6002-03	2	Screw, Hex Head (M6 x 16)
15	405-5832	6	Door, Housing				

# Housing Quiet Site First Stage

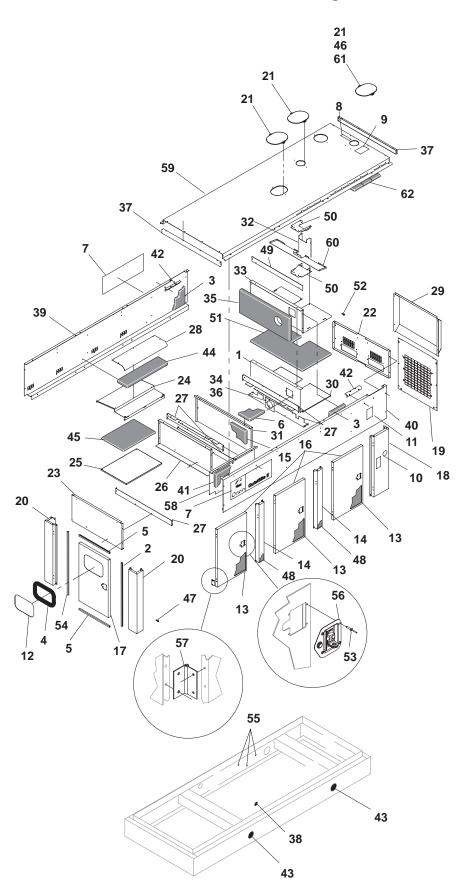


F172

# Housing Quiet Site First Stage

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-6034	1	Retainer, Insulation	32	405-5963	1	Fill Neck – Radiator
2	895–0385	7	Weather Seal – Side	33	405–5966	1	Box. Muffler
3	128-0252	2	Insulation, Foam	34	405-5986	1	Cover, Exhaust Inlet
4	895-0363	_	Weather Strip – Window – Bulk	35	405-6109	1	Fiberglass
			(Order By The Foot – 5 Feet	36	526-0011	2	Washer, Flat
			Required)	37	405-5917	2	Panel, End – Roof
5	895-0384	14	Weather Seal – Top & Bottom	38	517-0138-07	2	Plug
6	405-6001-01	2	Fiberglass	39	405-5950	1	Extension, Side – RH
7	098-7470	2	Label, Model	40	405-5951	1	Extension, Side – LH
8	098-5429	1	Label, Coolant Fill	41	405-5997	2	Fiberglass
9	098-4730	1	Label, Caution	42	405-5998	2	Support, Muffler
10	098-4500	2	Label, Prototype Tested	43	517-0322	4	Plug
11	098–7451	2	Label, Caution	44	405-6000-02		Fiberglass
12	319-2653	1	Window, Control	45	405-6000-03		Fiberglass
13	405-5734	6	Insulation, Door	46	821-6002-03		Screw, Hex Head (M6 x 16)
14	405-5744	4	Post, Housing – Center	47	821-6003-02	54	Screw, Hex Head (M8 x 20)
15	405-5841	3	Fiberglass	48	405-6001-02	4	Fiberglass
16			Door, Housing	49	405-6002	1	Barrier, Air Flow
	405-5902	6	Sets W/Control Window	50	405-6003	2	Box, Radiator Fill
	405-5902	7	Sets WO/Control Window	51	405-6005	1	Fiberglass
17	405-5903	1	Door W/Window Cutout	52	818-0237-01		Rivet (1/8)
18	405-5908	2	Panel, Side – Radiator Housing	53	818-0231-02		Rivet (3/16)
19	405–5909	1	Panel, Front – Radiator Housing	54	895–0386	7	Weather Seal
20	405–5916	2	Post, Corner – Housing	55	517–0131	3	Plug
21	155–3238	3	Cover, Exhaust	56	406–0835	7	Latch, Door
22	405–5952	1	Extension, Front		406–0782	1	Key, Replacement (fits Latch
23	405–5953	1	Extension, Rear				406–0835)
24	405–5954	2	Baffle, Air	57	406–0831	14	Hinge, Door
25	405–5955	2	Retainer, Insulation	58	405–6015	2	Retainer, Insulation
26	405–5956	1	Duct, Support	59	405–5926	1	Roof
27	405–5957	5	Angle, Support	60	405–5959	1	Baffle, Recirculation – Muffler
28	405–5958	2	Retainer, Insulation	61	870-0504	2	Nut, Captive Floating (M6 x 1.0)
29	405–5962	1	Baffle, Air - Discharge	62	130–4848	_	Insulation, Exhaust – Bulk
30	405–5960	1	Retainer, Insulation				(Order By The Foot – 10 Feet
31	405–5961	3	Retainer, Insulation				Required)


# Housing Quiet Site Second Stage

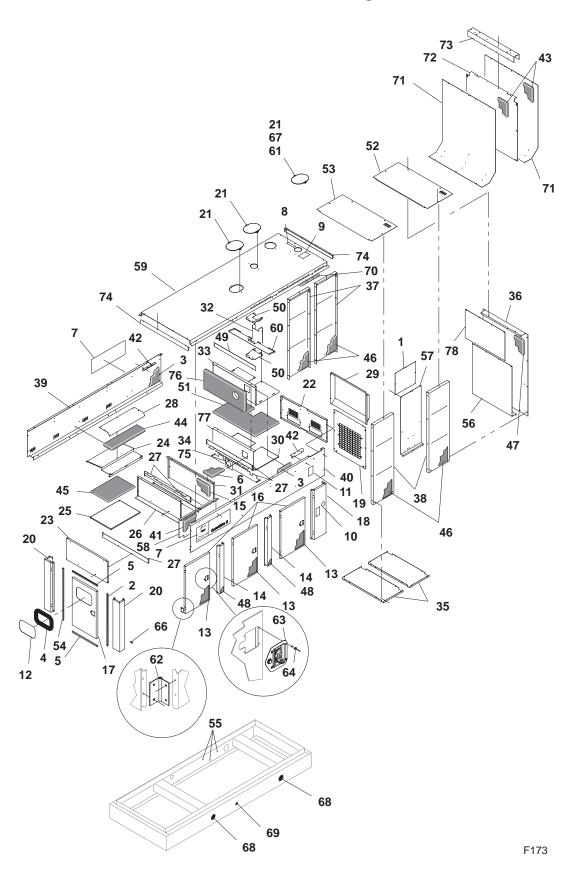

# Housing Quiet Site Second Stage


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-6044	4	Retainer, Insulation	40	405-5951	1	Extension, Side – LH
2	895–0385	7	Weather Seal – Side	41	405–5997	2	Fiberglass
3	128-0252	2	Insulation, Foam	42	405–5998	2	Support, Muffler
4	895–0363	_	Weather Strip – Window – Bulk	43	405-6000-01	2	Fiberglass
			(Order By The Foot – 5 Feet	44	405-6000-02	2	Fiberglass
			Required)	45	405-6000-03	2	Fiberglass
5	895-0384	14	Weather Seal – Top & Bottom	46	405-6000-04	4	Fiberglass
6	405-6001-01	2	Fiberglass	47	405-6000-07	1	Fiberglass
7	098-7470	2	Label, Model	48	405-6001-02	4	Fiberglass
8	098-5429	1	Label, Coolant Fill	49	405-6002	1	Barrier, Air Flow
9	098-4730	1	Label, Caution	50	405-6003	2	Box, Radiator Fill
10	098-4500	2	Label, Prototype Tested	51	405-6005	1	Fiberglass
11	098-7451	2	Label, Caution	52	405-5989	1	Cover, Discharge
12	319-2653	1	Window, Control	53	405-6010	1	Cover, Discharge
13	405-5734	6	Insulation, Door	54	895-0386	7	Weather Seal
14	405-5744	4	Post, Housing – Center	55	517-0131	3	Plug
15	405-5841	3	Fiberglass	56	405-6013	1	Retainer, Insulation
16			Door, Housing	57	405-6014	4	Retainer, Insulation
	405-5902	6	Sets W/Control Window	58	405-6015	2	Retainer, Insulation
	405-5902	7	Sets WO/Control Window	59	405-5926	1	Roof
17	405-5903	1	Door W/Window Cutout	60	405-5959	1	Baffle, Recirculation - Muffler
18	405-5908	2	Panel, Side - Radiator Housing	61	870-0504	2	Nut, Captive Floating (M6 x 1.0)
19	405-5909	1	Panel, Front – Radiator Housing	62	406-0831	14	Hinge, Door
20	405-5916	2	Post, Corner – Housing	63	406-0835	7	Latch, Door
21	155-3238	3	Cover, Exhaust		406-0782	1	Key, Replacement (fits Latch
22	405-5952	1	Extension, Front				406-0835)
23	405-5953	1	Extension, Rear	64	818-0231-02	162	Rivet (3/16)
24	405-5954	2	Baffle, Air	65	818-0237-01	105	Rivet (1/8)
25	405-5955	2	Retainer, Insulation	66	821-6003-02	94	Screw, Hex Head (M8 x 20)
26	405-5956	1	Duct, Support	67	821-6002-03	2	Screw, Hex Head (M6 x 16)
27	405-5957	5	Angle, Support	68	517-0322	4	Plug
28	405-5958	2	Retainer, Insulation	69	517-0138-07	2	Plug
29	405-5962	1	Baffle, Air – Discharge	70	130-4848	_	Insulation, Exhaust – Bulk
30	405-5960	1	Retainer, Insulation				(Order By The Foot – 10 Feet
31	405-5961	3	Retainer, Insulation				Required)
32	405-5963	1	Fill Neck – Radiator	71	405-5994	2	Retainer, Insulation
33	405-5966	1	Box, Muffler	72	405-5992	1	Panel, Center
34	405-5986	1	Cover, Exhaust Inlet	73	405-5993	1	Cover, Duct
35	405-5988	2	Bottom, Discharge	74	405-5917	2	Panel, End – Roof
36	405-5990	1	Cover, Air Discharge	75	526-0011	2	Washer, Flat
37	405-5991-01	2	Side, Discharge – RH	76	405-6109	1	Fiberglass
38	405-5991-02	2	Side, Discharge – LH	77	405-6034	1	Retainer, Insulation
39	405–5950	1	Extension, Side – RH	78	406–6132	1	Retainer, Insulation

# Skid

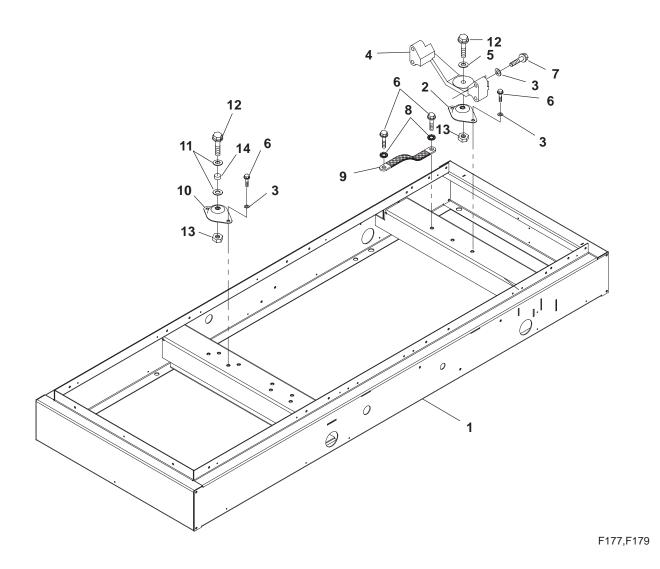

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	RE NC		QTY USED	PART DESCRIPTION
1			Skid	8	856-0013	2	Washer, Lock - EIT (1/2)
	403-4188-01	1	Basic	9	337-0090	1	Strap, Electrical
	403-4154-01	1	Housing Compatible	10	402-0371	2	Cushion, Vibration Isolating
2	402-0644	1	Cushion, Vibration Isolating	11	526-0238-	01 4	Washer, Flat (3/4)
3	526-0433	10	Washer, Hardend (M12)	12	800-0607	3	Screw, Cap - Hex Head
4	403-4218	1	Support, Engine				(3/4-10 x 2.00) (Grade 8)
5	526-0443	1	Washer, Hardend (3/4)	13	862-0044	3	Nut, Hex (3/4-10)
6	800–2543–02	8	Screw, Cap – Hex Head (M12 x 25)	14	517-0094	2	Plug, Plastic
7	800–2124	4	Screw, Cap – Hex Head (M12 x 90)				


# **Skid Pan**

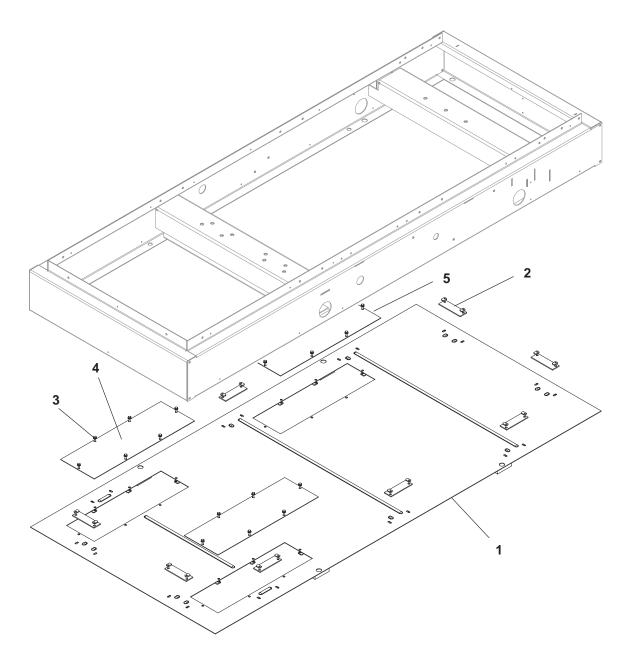

F170


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-4183	1	Pan, Skid	4	403-4215	2	Cover, Stub up
2	403-4110	12	Clamp	5	403-4116	1	Cover, Stub up
3	821–6002–03	42	Screw, SEMS – Hex Head (M6 x 1 x 16)				·

# **Battery Tray**

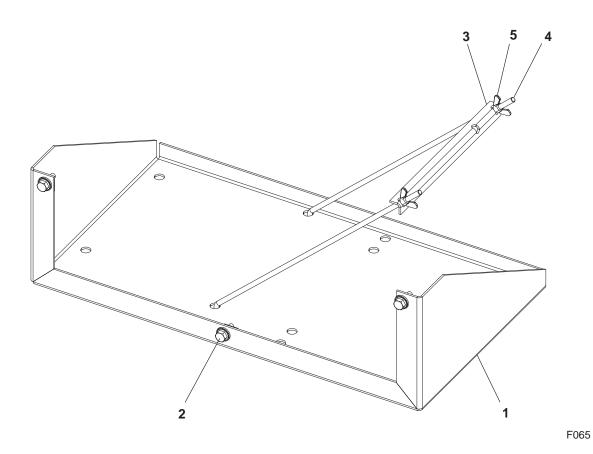


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	403–4058 821–6003–02	1 3	Tray, Battery Screw, Hex Head (M8 x 20)		416–0993–02 865–0030	2 2 2	Rod, Hold Down – Battery Nut, Wing
3	416–1033	1	Hold Down, Battery				

# **Entrance Box**

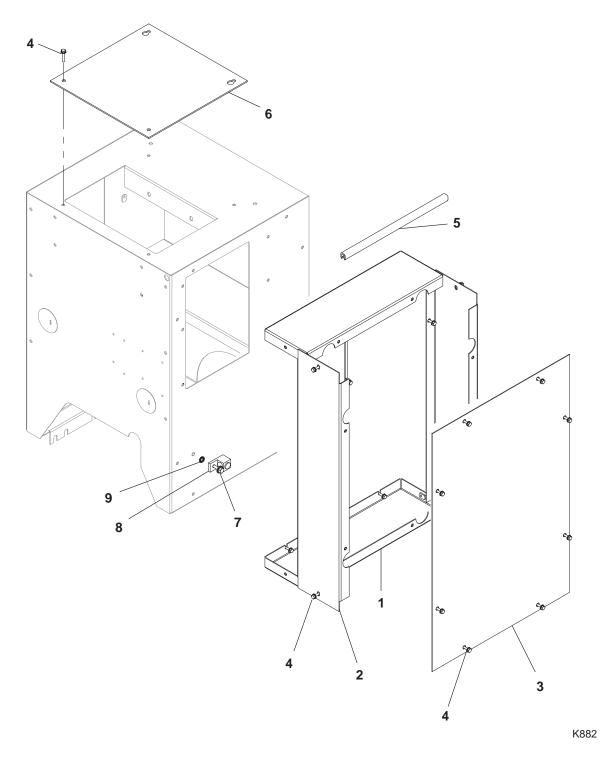

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3072	2	Panel, End – CB Box	6	319–2996	1	Cover, Control Housing
2	319–2978	2	Panel, Side – CB Box	7	821-6003-02	1	Screw, Hex Head (M8 x 20)
3	319-2979-02	1	Cover, CB Box	8	332-1473	1	Lug, Solderless
4	821-6002-03	24	Screw, Hex Head (M6 x 16)	9	856-0008	1	Washer, Lock – EIT (5/16)
5	508–0239	-	Edging – Bulk (Order By The Foot – 2 Feet Required)				


# **Control Housing**

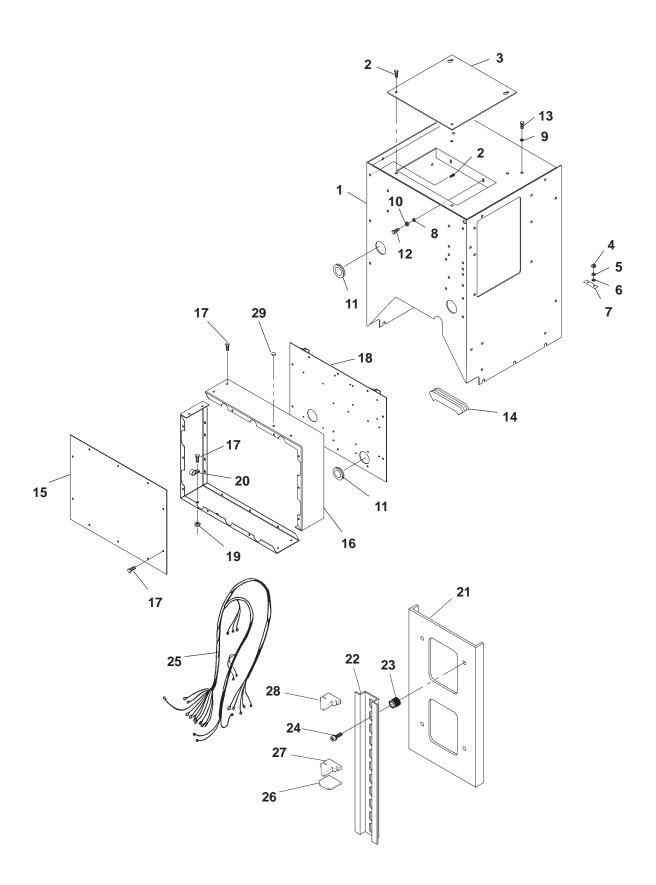

# **Control Housing**

REF NO.		QTY USED	PART DESCRIPTION	REF NO.		QTY SED	PART DESCRIPTION
1	319-2967	1	Housing, Control	17	821-6002-03	24	Screw, Hex Head (M6 x 16)
2	821-6002-03	3 10	Screw, SEMS (M6 x 1 x 16)	18	319-3148	1	Panel, Assembly – PCC Box
3	319-2996	1	Cover, Housing – Control	19	870-2055	2	Nut, Hex – Flange
4	860-2009	8	Nut, HMS (M10 x 1-1/2")				(M8 x 1.25)
5	850-2010	8	Washer, Lock (M10)	20	332-2634	2	Clamp
6	526-2120	8	Washer, Flat (M10)	21	319-2247	1	Mount, Rail - Control Box
7	332-2987	4	Link, Terminal	22	332-2879-05	2	Rail, Terminal
8	856-0008	2	Washer, Lock – ET (5/16")	23	402-0510	4	Isolator, Vibration
9	526-0013	2	Washer, Flat (5/16")	24	815-0839	4	Screw, Pan Head – Cross
10	870-2055	2	Nut, Whizlock (M8)				Recessed – W/ET
11	508-1119	4	Grommet				(10-32 x 3/8")
12	821-6003-02	2 2	Screw, SEMS	25			Harness, Interconnect
			(M8 x 1.25 x 20)		338-3525	1	Single Paralleling
13	821-5003-01	1 4	Screw, SEMS		338-3709	1	Paralleling
			(5/16-18 x 1/2")	26	332-2878	2	Bracket, End – Terminal
14	508-0305-02	2 –	Edging – Bulk (Order by the	27	332-3126-01	1	Plate, End – Terminal
			Foot – 1 Foot Required)	28	332-3126-02	1	Plate, End – Terminal
15	319-2220	1	Cover, Box - Control				(Paralleling)
16	319–3278	2	Wrapper, Box - Control	29	517-0131	2	Plug, Hole


#### **Generator Heater**

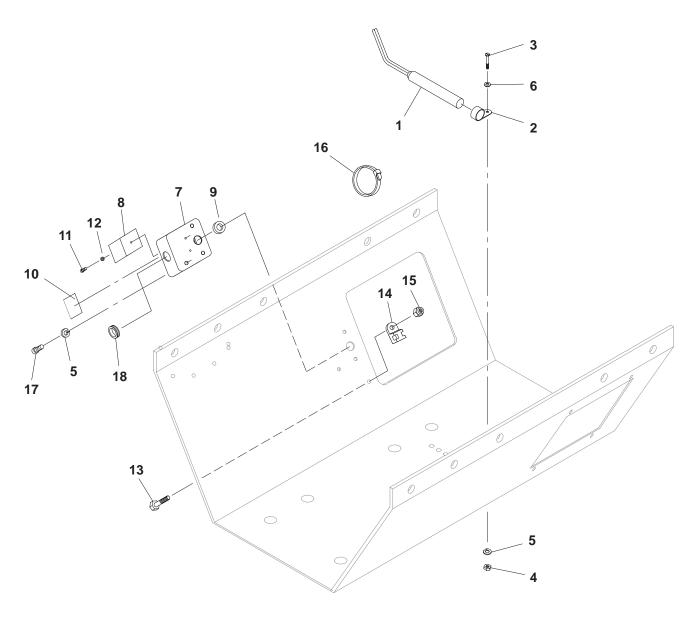

A292,A293

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
			0	40	000 7004	4	
1			Cartridge, Heater	10	098–7281	1	Label, Warning – Heater
	333-0438-07	1	110-125 Volt	11	822-3047	1	Screw, Pan Head (M3 x 20)
	333-0438-08	1	220-260 Volt	12	850-2003	1	Washer, Lock (M3)
2	332-3024-11	2	Clamp, Loop	13	800-3034	1	Screw, Cap – Hex Head
3	822-3075	6	Screw, Pan Head (M4 x 16)				(M4 x .7 x 12)
4	860-2005	2	Nut, Hex (M4)	14	332-3228	1	Mount, Tie – Cable
5	850-2004	4	Washer, Lock (M4)	15	870-2064-01	1	Nut, Nylon
6	526-2050	2	Washer, Flat (M4)	16	332-1389	1	Tie, Cable
7	330-0142	1	Box, Terminal – Heater	17	815-0792-04	2	Screw, Countersunk - Pan
8	332-3023	1	Block, Terminal				Head (M4 x .7 x 12)
9	508-0228	1	Grommet	18	517-0021	1	Plug, Dot – Button


# **Permanent Magnet Generator**

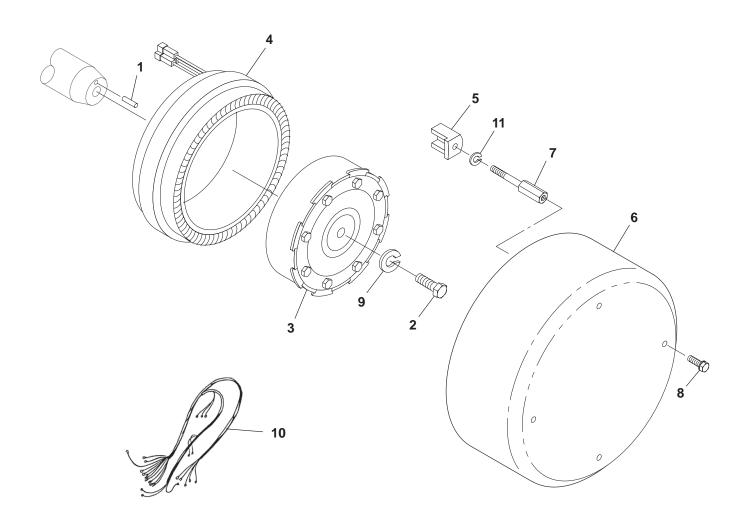

REF NO.		QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2 3 4	775–0049 815–0761–01 201–3446 220–4233	1 1 1	Pin, Parallel Bolt, Mounting – PMG Rotor, PMG Stator, PMG	7 8 9 10	232–3462–03 821–6001–01 850–2010 338–3011	4 1 1	Spacer, Cover Screw, Hex Head (M5 x 10) Washer, Lock (M10) Harness, PMG
5 6	232–3972 234–0875–02	4 1	Clamp, Stator Cover, End Bell	11	850–2006	4	Washer, Lock (M6)

CP01


# Generator

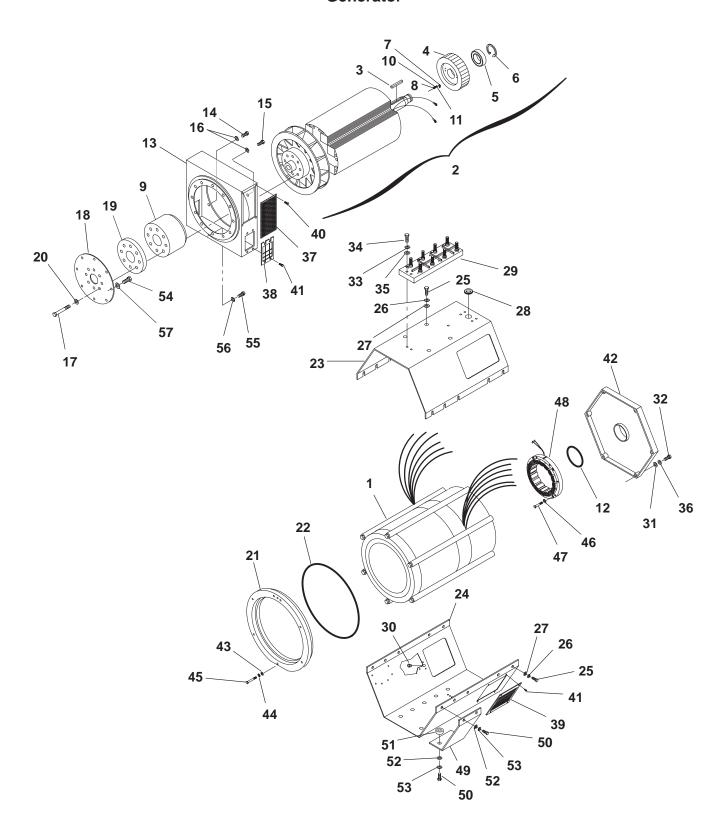

#### Generator


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Stator, Generator (See Separate Page for Part Numbers)	24	232-3820-02	1	Cover, Stator – Bottom UC27 Stack Length 230/285
2			Rotor, Wound		232-3820-03	1	UC27 Stack Length 335
_	201-3497-04	1	UC27 Core Length 285		232–3820–04	1	UC27 Stack Length 375
	201–3497–05	1	UC27 Core Length 335		232–3820–05	1	UCD27 Stack Length 450
	201–3497–06	1	UC27 Core Length 375	25	800-3017-54		Screw, Cap – Hex Head
	201–3497–03		UC27 Core Length 230			. •	(M12 x 30)
	201-3561-07		UCD27 Core Length 450	26	850-0114-56	10	Washer, Lock (M12)
3	515-0298-03		Key, Exciter	27	526-0399-64	10	Washer, Flat (M12)
4	201-3434-03	1	Rotor, Wound – Exciter	28	508-1057	1	Grommet
5	510-0164	1	Bearing, Ball	29	232-3421	1	Block, Terminal
6	518-0083	1	Ring, Split – External	30	517-0135	1	Plug, Hole
7	304-0807	1	Varistor	31	526-0423	6	Washer
8 9	860–2006	2	Nut, Hex (M5 x .8) Hub, Drive – Generator	32	800–3017–38	6	Screw, Cap – Hex Head (M10 x 30)
	232-3695	1	UC27 Generator	33	850-2008	3	Washer, Lock (M8)
	232-4012	1	UCD27 Generator	34	800–2060	3	Screw, Cap – Hex Head
10	850–2005	2	Washer, Lock (M5)				(M8 x .35)
11	526–2060	2	Washer, Flat (M5)	35	526–2100	3	Washer, Flat (M8)
12	509-0266-02	1	O-Ring	36	850-0114-55	6	Washer, Lock (M10)
13			Adapter, Generator	37			Guard, Fan
	231–0317	1	UC27 Generator		234–0867	2	UC27
	231–0373	1	UCD27 Generator		234–0983	2	UCD27
14			Screw, Cap – Hex Head	38	234–0984	2	Cover, Adapter – UCD27
		_	(M10)	39	234–0879	2	Screen, Air Inlet
	800–3017–42		UC27	40	821–6001–01	8	Screw (M5 x 10) – UC27
4.5	800–3017–39	5	UCD27	41	004 0004 00	•	Screw (M5 x 12)
15			Screw, Cap – Hex Head		821–6001–02	8	UC27
	000 0047 44	4	(M10)	40	821–6001–02		UCD27
	800-3017-44	1	UC27	42	211-0423	1	Bell, End
16	800–3017–42		UCD27	43	526-0423	6	Washer Look (M10)
16 17	850-0114-55	6	Washer, Lock (M10)	44 45	850-0114-55	6	Washer, Lock (M10)
17	700 4440	0	Screw, Cap – Hex Head (M16)	45	800–3017–38	6	Screw, Cap – Hex Head (M10 x 30)
	720–1119	8	UC27	46	850–2006	4	Washer, Lock (M6)
10	720–1123	8	UCD27	47	800–2046	4	Screw, Cap – Hex Head (M6)
18	232–3699 232–3696–01	3	Disk, Drive – Generator	48	220–4293–06 232–3925	1	Stator, Wound – Exciter
19 20		1 8	Spacer, Disc Drive – UCD27	49	232-3925	2	Bracket, Mounting –
21	526–0259 231–0319	1	Washer, Flat Adapter, Stator UC27	50	800-2543-05	8	Generator Screw, Cap – Hex Head (M12)
	231–0374	1	UCD27	51	232-3730-04	4	Spacer, Mounting Foot
22	508-0139	_	Seal Edging – Bulk (Order By	52	526-0433	8	Washer – Hardened (M12)
22	300-0133		The Foot – 3 Feet Required)	53	850–0117	8	Washer, Lock – Hardened (M12)
23			Cover, Stator – Top	54	805-0015	8	Bolt, Place (3/8–16 x .75)
_0	234-0937-02	1	UC27 Stack Length 230/285	55		Ü	Screw, Cap – Hex Head (M10 x 35)
	234-0937-03	1	UC27 Stack Length 335		800-2088	12	UC27
	234-0937-04		UC27 Stack Length 375		800-2088	10	UCD27
	234-0937-05		UCD27 Stack Length 450	56	-		Washer, Lock (M10)
			3		850-2010	12	UC27
					850-2010	10	UCD27
				57	526-0174	8	Washer, Flat (3/8)

#### **Generator Stator**

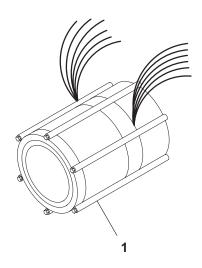


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Stator 60 Hz 4 Lead		220–4448–18	1	GGKB, GGKC (B267, B268, B340)
			105C		220-4448-21	1	GGKB (B416, B417)
	220-4448-11	1	GGKB		220-4448-22	1	GGKC (B418)
	220-4448-12	1	GGKC		220-4448-23	1	GGKD (B418)
	220–4448–38	1	GGKD <b>125C</b>		220–4448–39	1	GGKD (B268) <b>150C</b>
	220-4448-10	1	GGKB		220-4448-15	1	GGKB (B413, B414,
	220-4448-11	1	GGKC, GGKD				B420)
			6 Lead 105C		220–4448–16	1	GGKC, GGKD (B327, B328,
	220-4448-33	1	GGKB				B415)
	220-4448-34	1	GGKC, GGKD		220-4448-21	1	GGKB (B416, B417)
			125C		220-4448-22	-	GGKC (B418)
	220-4448-33		GGKB, GGKC		220-4448-23	1	GGKD (B418)
	220-4448-34	1	GGKD				50 Hz
			150C				12 Lead
	220–4448–33	1	GGKB, GGKC, GGKD				Broad Range
			12 Lead				Reconnectible,
			Broad Range		000 4440 40	4	105C
			Reconnectible, <b>105C</b>		220–4448–16		GGKB (B327, B328, B415)
	220–4448–16	1	GGKB (B327, B328, B415)		220–4448–17	1	GGKC, GGKD (B339)
	220–4448–17	1	GGKC, GGKD (B339)		220–4448–18	1	GGKB (B267, B268, B340)
	220–4448–18	1	GGKB (B267, (B268), (B340)		220–4448–39	1	GGKD (B268) <b>125C</b>
	220-4448-22	1	GGKB (B418)		220-4448-16	1	GGKB, GGKC,
	220–4448–23	1	GGKC, GGKD (B418)				GGKD (B327, B328, B415)
	220-4448-39	1	GGKC, GGKD (B268)		220–4448–17	1	GGKB, GGKĆ (B339)
			125C		220-4448-18	1	GGKD (B267,
	220–4448–15	1	GGKB (B413, B414, B420)				(B268), (B340) <b>150C</b>
	220-4448-16	1	GGKC (B327, B328,		220-4448-15	1	GGKB
			B415)		220-4448-16	1	GGKC, GGKD
	220–4448–17	1	GGKD (B339)				,

#### **Control and Control Heater**

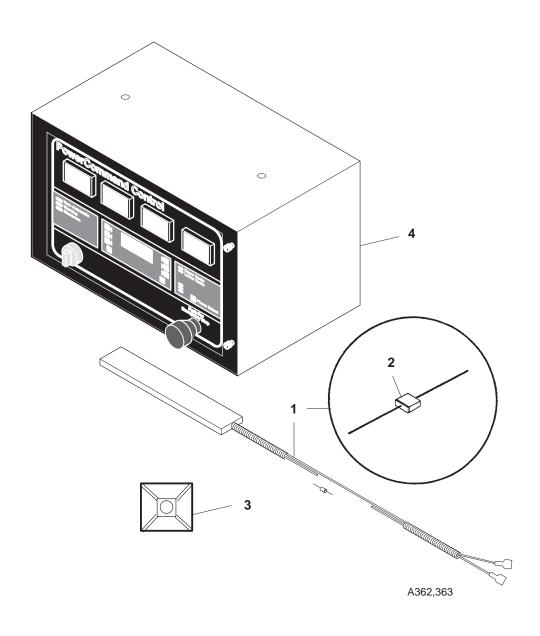

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater Assembly, Control – 100 Watt (Includes Rectifier)	4	_	1	Control, PowerCommand
	300-4515-01	1	120 Volt	Note:	For Powe	rCommand	Control Service Replacement
	300-4515-02	1	240 Volt	Parts,	Order Pow	/erCommar	nd Control for Generator Sets
2 3	357–0114 332–3338	1 1	Rectifier (3 Amp) Mount, Cable	Parts	Catalog Nu	ımber 960–	-0205.

# Pyrometer

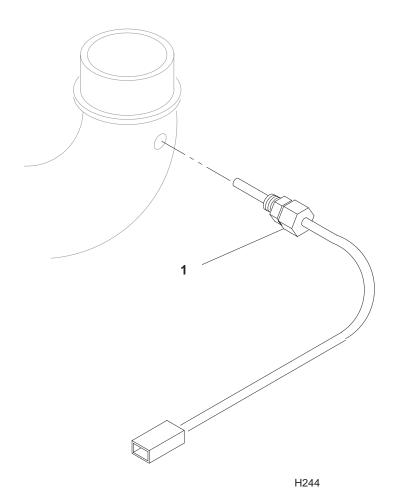


REF PART QTY PART REF PART QTY PART NO. NO. USED DESCRIPTION NO. NO. USED DESCRIPTION

1 193-0446-01


Pyrometer (12 Inches)


## Alarm Module

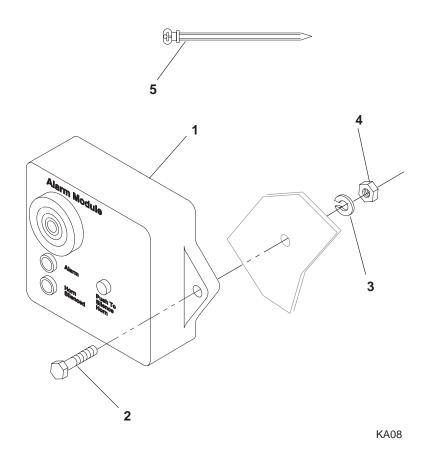

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-3998-02	1	Module, Alarm	3	850-0040	2	Washer, Lock (1/4)
2	800-0006	2	Screw, Cap – Hex Head	4	862-0001	2	Nut, Hex (1/4-20)
			(1/4-20 x 7/8)	5	332-0942	3	Tie, Cable

#### **Current Transformer**

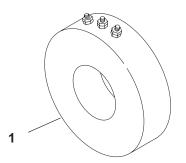


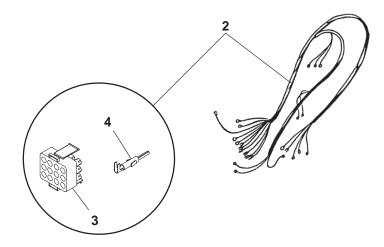

H530,H532,H555


REF		QTY	PART	REF	PART	QTY	PART
NO.		USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	302–1922–10 302–1922–11 302–1922–14 302–1926–26 302–1926–27	3	Transformer, Current (CT21, CT22, CT23) Ratio 394/1 or 788/1 Ratio 432/1 or 864/1 Ratio 518/1 or 1036/1 Ratio 302/1 Ratio 362/1	-	338–3561 323–1644–03 323–1648	1 1 10	Harness, AC (Includes Plug and Sockets) (P9 to CT21,22,23 and 5,6,7,8) Plug – 12 Place (P9) Socket, Contact

#### **Miscellaneous Labels**

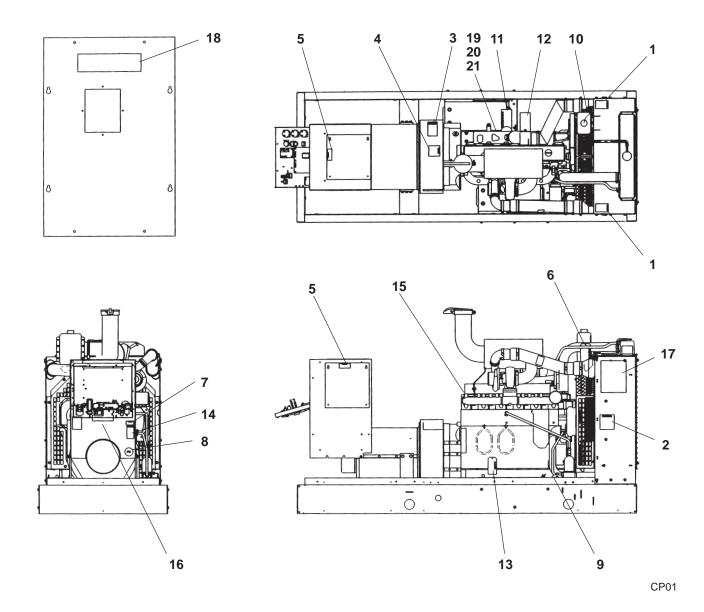

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	098–4730	2	Label, Warning (Not used	11	098-7537	4	Tag, Oil Fill
_		•	W/Remote Radiator)	12	098–2124	1	Tag, Caution
2	098–4732	2	Label, Warning (Not used	13	098–6460	1	Tag, Battery
			W/Remote Radiator)	14	098–5759	1	Label, Warning
3	098–5842	1	Label, Caution	15	098-5822	2	Label, Warning
4	098-4798	1	Label, Warning	16	098-6139-04	1	Label, Model Identification
5	098-5347	3	Label, Danger				(Used W/Remote Radiator
6	098-7047	1	Tag, Water Fill (Not used				Only)
			W/Remote Radiator)	17	098-6139-06	2	Label, Model Identification
7	098-6074-02	1	Label, Warning	18	098-2304	1	Label, Warning (Used
8	098-4500	1	Label, Prototype				W/Circuit Breaker Only)
9	098-6030	1	Tag, Caution	19	098-7536	1	Tag, Natural Gas Fuel
10	098-7450	1	Label, Coolant (Not used	20	098-7161	1	Tag, LPG Vapor Fuel
			W/Remote Radiator)	21	098–7162	1	Tag, LPG Liquid Fuel


# Wiring Harness Engine to Control

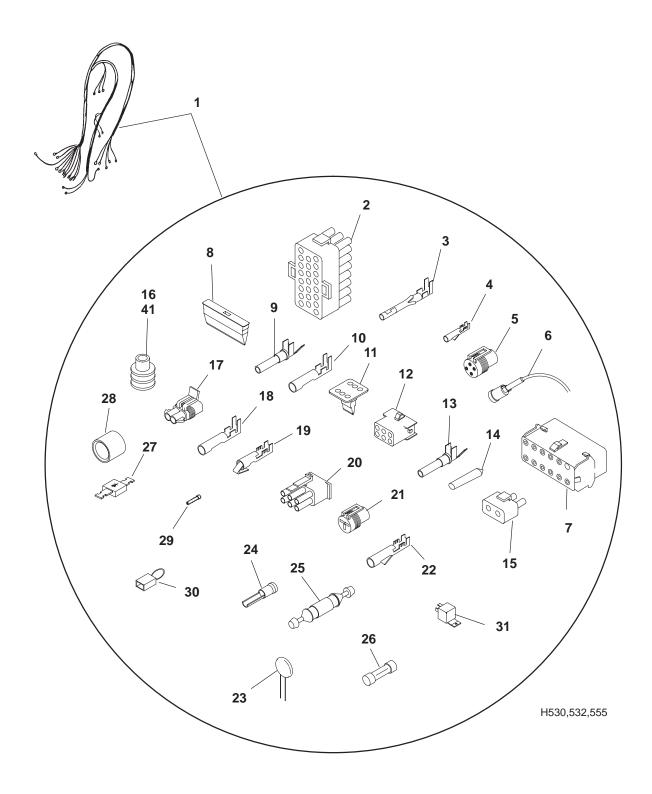

# Wiring Harness Engine to Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	338–3729	1	Harness, Wiring – Engine To Control (Includes Parts Listed	17	323–1540	2	Socket, Connector (2 Place) (E2, E4)
			Below)	18	323-1444	2	Socket, Contact (Used In K1)
2	323–1605–03	1	Plug, Connector (23 Place) Colored Grey (P5)	19	332–3096–01	4	Socket, Contact (Used In E2, E4)
	323-1605-02	1	Colored Natural (P4)	20	323-1643-01	1	Plug, Connector (6 Place) (P10)
3	323–1614–01	34	Socket, Contact (Used In P4, P5)	21	323–1666	1	Socket, Connector (3 Place) (E1)
4	323-1709	3	Socket, Contact	22	323-1667	3	Socket, Contact (Used In E1)
5	323-1765	1	Housing, Connector (4 Pin)	23	304-0800	1	Varistor, Metaloxide
6	338-2592-01	1	Cable, Magnetic Pickup (84")	24	332-3496	1	Pin, Contact
			(Includes Indented Sockets Listed Below) (P1)	25 26	321–0362	3	Holder, Fuse Fuse
	323-1614-01	3	Socket, Contact		321-0364-04	2	10 Amp (F2, F3)
7	323-1580	1	Housing, Connector (12 Place)		321-0364-02	1	20 Amp (F1)
			(J12)	27	357-0030	2	Rectifier
8	323-1581	1	Wedge (Used In J12)	28	332-0418-01	1	Connector, Parallel
9	323-1491	5	Pin, Contact (Used In J12)				(Quantity Used As Required)
10	323-1648	5	Socket, Contact (Used In P10)	29	323-1591	2	Plug, Connector (P15)
11	323-1624	1	Wedge (Used In P7)	30	338-3285	1	Harness Assembly, Jumper
12	323-1623	1	Plug, Connector (6 Place) (P7)				(Includes Parts Indented
13	323-1492	9	Socket, Contact (Used In P7)				Below) (E6)
14	323-1615	1	Plug (Used On P4, P5)		323-1652	1	Socket, Connector (2 Place)
			(Quantity Used As Required)		323-1445	2	Seal
15	323-1637	2	Socket, Connector (2 Place)		323-1718	2	Pin, Contact
			(K1)	31	307-2817-01	2	Relay
16	323-1445	3	Seal (Used On E2, E4, E6)				


# Circuit Breaker Box 10 – 630 Amp

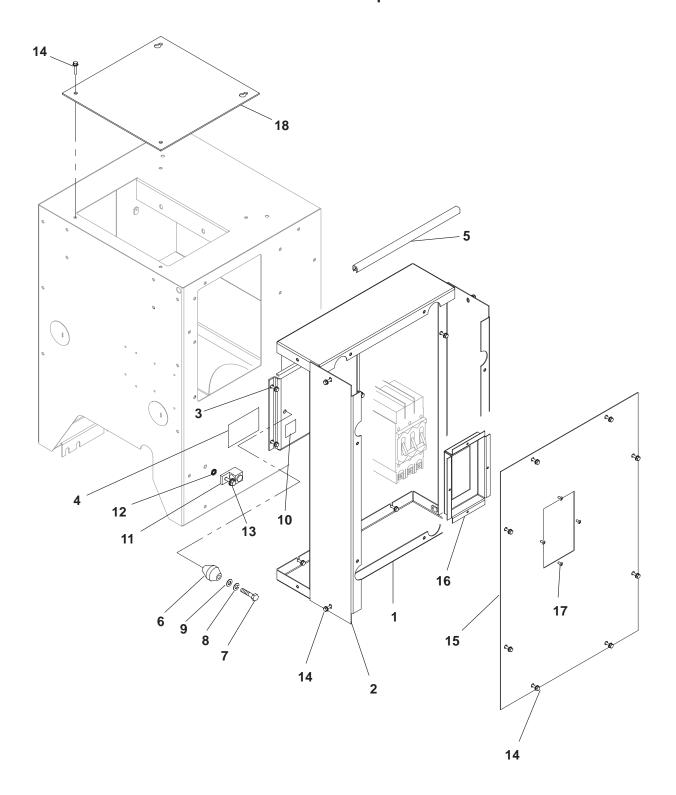

### Circuit Breaker Box 10 – 630 Amp

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319–3072	2	Panel, End – CB Box	16			Cutout, CB Box
2	319-2978	2	Panel, Side – CB Box				UL
3	319-3149	1	Bracket, Mounting - CB		319-3150	1	600 Volt, 300-630 Amp,
4	098-2304	1	Label, Warning				3 Pole
5	508-0239	-	Edging – Bulk (Order By The Foot – 2 Feet Required)		319–3240	1	240 Volt, 300–400 Amp, 2/3 Pole
6	332-2744-07	1	*Standoff, Insulator		319-3242	1	240 Volt, 100-250 Amp,
7	800-0048	2	*Screw, Cap - Hex Head				2/3 Pole
			(3/8-16 x .75)		319-3242	1	600 Volt, 50-250 Amp,
8	850-0050	2	*Washer, Lock (3/8)				3 Pole
9	526-0029	1	*Washer, Flat (3/8)				IEC
10	098-5854-04	1	*Label, Bus – Warning		319-3150	1	690 Volt, 300-630 Amp,
11	332-1473	1	Lug, Solderless				3/4 Pole
12	856-0008	1	Washer, Lock - EIT (5/16)		319-3242	1	690 Volt, 70-250 Amp,
13	821-6003-02	1	Screw, SEMS – Hex Head				3/4 Pole
			(M8 x 1.25 x 20)	17	818-0231-02	4	Rivet, Pop
14	821–6002–03	24	Screw, SEMS – Hex Head (M6 x 1 x 16)	18	319–2996	1	Cover, Housing – Control
15	319–3151	1	Cover, CB Box	* = l	JL Rated Break	ers only	

# Circuit Breaker Box 700 – 1000 Amp

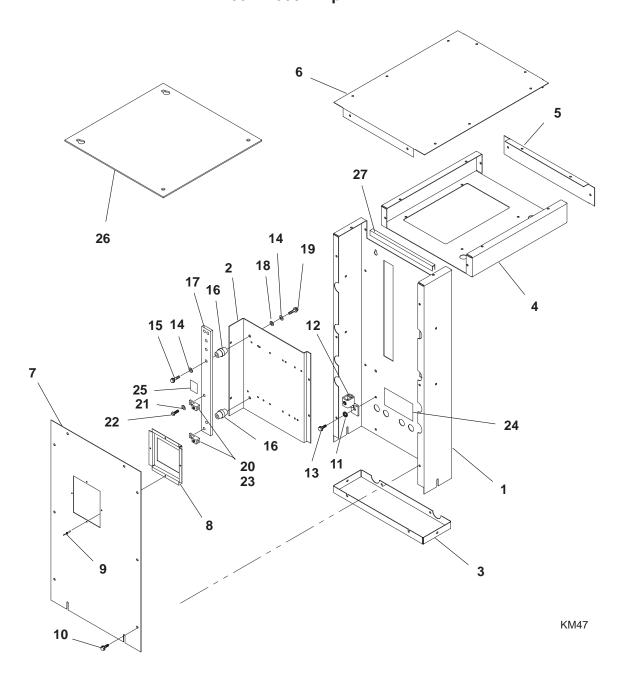


### Circuit Breaker Box 700 – 1000 Amp

REF		QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
1	319–3136	1	Box, Circuit Breaker	16	332-2305	2	*Standoff, Insulator
2	319-3135	1	Bracket, Mounting –	17	337-2974	1	*Bar, Neutral
			Circuit Breaker	18	526-0113	2	*Washer, Flat (5/16)
3	319-3072	1	Panel, End – CB Box	19	800-0029	2	*Screw, Cap – Hex Head
4	319-3236	1	Box, Output				(5/16-18 x 1-1/8)
5	319-3237	1	End, Box – Output	20	332-2660	2	*Lug, Solderless
6	319-3238	1	Cover, Box – Output	21	850-0039	4	*Washer, Lock (1/4)
7	319-3137	1	Cover, Box – CB	22	822-0085	2	*Screw, Pan Head (1/4-20 x 5/8)
8	319-3134	1	Cutout, Box – CB	23	822-0091	2	*Screw, Pan Head
9	818-0231-02	4	Rivet, Pop				(1/4-20 x 1-1/2)
10	821-6002-03	46	Screw, SEMS - Hex Head	24	098-2304	1	*Label, Warning
			(M6 x 1 x 16)	25	098-5854-04	1	*Label, Bus – Warning
11	856-0008	1	Washer, Lock - EIT (5/16)	26	319-2996	1	Cover, Control Housing
12	332-2001	1	Lug, Solderless	27	508-0305-02	_	Edging – Bulk (Order By The
13	821-6003-02	1	Screw, SEMS - Hex Head				Foot – 4 Feet Required)
			(M8 x 1.25 x 20)				
14	850-0045	4	*Washer, Lock (5/16)				
15	800-0025	2	*Screw, Cap - Hex Head				
			(5/16–18 x 5/8)	* = \	Jsed with 3 pole	e breake	er only.

<sup>43</sup> 

# Circuit Breaker

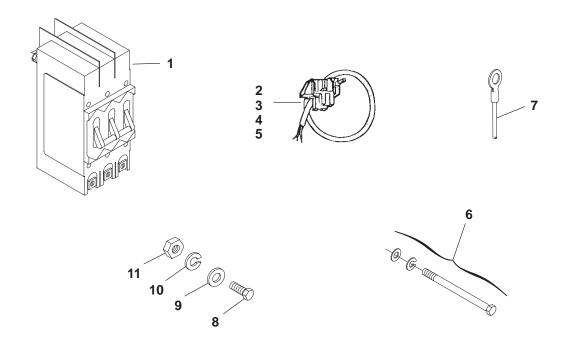

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Breaker, Circuit UL Listed (240V)				UL (600V) IEC (690V) 3 Pole
			2 Pole		320-1959-18	1	50 Amp
	320-1961-07	1	100 Amp		320-1959-17	1	60 Amp
	320-1961-06	1	125 Amp		320-1959-10	1	70 Amp
	320-1961-05	1	150 Amp		320-1959-09	1	80 Amp
	320-1961-04	1	175 Amp		320-1959-08	1	90 Amp
	320-1961-03	1	200 Amp		320-1959-07	1	100 Amp
	320-1961-02	1	225 Amp		320-1959-06	1	125 Amp
	320-1961-01	1	250 Amp		320-1959-05	1	150 Amp
	320-1962-03	1	300 Amp		320-1959-04	1	175 Amp
	320-1962-02	1	350 Amp		320-1959-03	1	200 Amp
	320-1962-01	1	400 Amp		320-1959-02	1	225 Amp
			3 Pole		320-1959-01	1	250 Amp
	320-1961-14	1	100 Amp		320-1960-06	1	300 Amp
	320-1961-13	1	125 Amp		320-1960-05	1	350 Amp
	320-1961-12	1	150 Amp		320-1960-04	1	400 Amp
	320-1961-11	1	175 Amp		320-1960-03	1	450 Amp
	320-1961-10	1	200 Amp		320-1960-02	1	500 Amp
	320-1961-09	1	225 Amp		320-1960-01	1	600 Amp
	320-1961-08	1	250 Amp		320-1964-05	1	700 Amp
	320-1962-06	1	300 Amp		320-1964-04	1	800 Amp
	320-1962-05	1	350 Amp				IEC
	320-1962-04	1	400 Amp				4 Pole
			·		320-1959-13	1	160 Amp
					320-1959-12	1	200 Amp
					320-1959-11	1	250 Amp
					320-1960-10	1	320 Amp
					320-1960-09	1	400 Amp
					320-1960-08	1	500 Amp
					320-1960-07	1	630 Amp

Continued...

#### **Circuit Breaker**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
Con	tinued			7			Lead (Quantity Used As
			Accessories, Circuit				Required) 30" Leads
			Breaker: The following		226-3505-01	1	3/8" Ring Terminal End
			are used on 320-1964-XX				to 1" Stripped End (#4
			Circuit Breakers				Wire)
2	320–1977–01	1	Switches – Includes 1		226-3505-03	1	3/8" Ring Terminal End
			Trip Alarm and 1				to 3/8" Ring Terminal
3	320-1977-02	1	Auxiliary Contact 12 Volt Shunt Trip		226-3505-04	1	End (#4 Wire) 3/8" Ring Terminal End
3	320-1377-02	'	Accessories, Circuit		220 3303 04	'	to 3/8" Ring Terminal
			Breaker: The following				End (#1 Wire)
			are used on 320-1959-XX				33" Leads
			and 320-1960-XX Circuit		226-0893	1	3/8" Ring Terminal End
	000 1001 01	0	Breakers				to 3/8" Ring Terminal
4	320–1981–01	2	Switch – Used as Trip				End <b>38" Leads</b>
			Alarm or Auxiliary Switch		226-3505-07	1	3/8" Ring Terminal End
5	320-1981-02	1	12 Volt Shunt Trip		220 0000 07	•	to 1" Stripped End (#1
6			Package, Hardware –				Wire)
			Mounting (Includes Screws,		226-3505-08	1	3/8" Ring Terminal End
			Nuts and Lock Washers – 1				to 3/8" Ring Terminal
			Package Required Per	0	000 0050	0	End (#1 Wire)
	320-1986-08	1	Switch) Used With 320–1959–XX	8 9	800–0052 526–0029	2	Screw (3/8–16 x 1-1/2)
	320-1900-00	ı	Circuit Breakers	10	850–0029 850–0050	4 2	Washer, Flat (3/8) Washer, Lock (3/8)
	320-1986-07	1	Used With 320–1960–XX	11	862-0003	2	Nut (3/8)
	0_0 .000 0.	•	Circuit Breakers	• •	002 0000	_	1141 (5/5)
	320-1986-06	1	Used With 320-1961-XX				
			Circuit Breakers				
			(Screws Only)				
	320–1986–05	1	Used With 320–1962–XX Circuit Breakers				
			(Screws Only)				
	320-1986-01	1	Used With 320–1964–XX				
	323 .000 01	•	Circuit Breakers				

#### **Numerical Index**

Part No. Page	Part No. Page	Part No. Page	Part No. Page
098–2124, <b>37</b>	130–4716, <b>13</b>	220–4448–21, <b>32</b>	302–1922–11, <b>36</b>
098–2304, <b>37</b> , <b>41</b> , <b>43</b>	130–4719, <b>11</b>	220–4448–22, <b>32</b>	302–1922–14, <b>36</b>
098–4500, <b>17</b> , <b>19</b> , <b>21</b> , <b>37</b>	130–4720, <b>11</b>	220–4448–23, <b>32</b>	302–1926–26, <b>36</b>
098–4730, <b>17</b> , <b>19</b> , <b>21</b> , <b>37</b>	130–4733, <b>13</b>	220–4448–33, <b>32</b>	302–1926–27, <b>36</b>
098–4732, <b>37</b>	130–4734, <b>14</b>	220–4448–34, <b>32</b>	304–0800, <b>39</b>
098–4798, <b>37</b>	130–4735, <b>13</b>	220–4448–38, <b>32</b>	304–0807, <b>31</b>
098–5347, <b>37</b>	130–4750, <b>13</b>	220–4448–39, <b>32</b>	307–2817–01, <b>39</b>
098–5429, <b>17</b> , <b>19</b> , <b>21</b>	130–4848, <b>9</b> , <b>17</b> , <b>19</b> , <b>21</b>	226–0893, <b>45</b>	309–0159, <b>4</b>
098–5759, <b>37</b>	154–3021, <b>13</b>	226–3505–01, <b>45</b>	309–0269, <b>4</b>
098–5822, <b>37</b>	155–2062–13, <b>8</b> , <b>9</b>	226–3505–03, <b>45</b>	319–2220, <b>27</b>
098–5842, <b>37</b>	155–2305, <b>8</b>	226–3505–04, <b>45</b>	319–2247, <b>27</b>
098–5854–04, <b>41</b> , <b>43</b>	155–2570, <b>7</b> , <b>8</b> , <b>9</b>	226–3505–07, <b>45</b>	319–2653, <b>17</b> , <b>19</b> , <b>21</b>
098–6030, <b>37</b>	155–3150–02, <b>8</b>	226–3505–08, <b>45</b>	319–2967, <b>27</b>
098–6074–02, <b>37</b>	155–3150–03, <b>9</b>	231–0317, <b>31</b>	319–2978, <b>25</b> , <b>41</b>
098–6139–04, <b>37</b>	155–3163–01, <b>7</b>	231–0319, <b>31</b>	319–2979–02, <b>25</b>
098–6139–06, <b>37</b>	155–3164–03, <b>8</b>	231–0373, <b>31</b>	319–2996, <b>25</b> , <b>27</b> , <b>41</b> , <b>43</b>
098–6460, <b>37</b>	155–3164–04, <b>9</b>	231–0374, <b>31</b>	319–3072, <b>25</b> , <b>41</b> , <b>43</b>
098–7047, <b>37</b>	155–3180, <b>8</b>	232–3421, <b>31</b>	319–3134, <b>43</b>
098–7161, <b>37</b>	155–3219, <b>8</b> , <b>9</b>	232–3462–03, <b>29</b>	319–3135, <b>43</b>
098–7162, <b>37</b>	155–3238, <b>17</b> , <b>19</b> , <b>21</b>	232–3695, <b>31</b>	319–3136, <b>43</b>
098–7281, <b>28</b>	155–3260–01, <b>9</b>	232–3696–01, <b>31</b>	319–3137, <b>43</b>
098–7450, <b>37</b>	155–3278–03, <b>9</b>	232–3699, <b>31</b>	319–3148, <b>27</b>
098–7451, <b>9</b> , <b>13</b> , <b>19</b> , <b>21</b>	193–0432, <b>4</b>	232–3730–04, <b>31</b>	319–3149, <b>41</b>
098–7470, <b>19</b> , <b>21</b>	193–0444, <b>4</b>	232–3820–02, <b>31</b>	319–3150, <b>41</b>
098–7536, <b>37</b>	193–0446–01, <b>34</b>	232–3820–03, <b>31</b>	319–3151, <b>41</b>
098–7537, <b>37</b>	193–0468, <b>10</b>	232–3820–04, <b>31</b>	319–3236, <b>43</b>
102–1147, <b>6</b>	201–3434–03, <b>31</b>	232–3820–05, <b>31</b>	319–3237, <b>43</b>
102–1237, <b>6</b>	201–3446, <b>29</b>	232–3925, <b>31</b>	319–3238, <b>43</b>
102–1356, <b>4</b>	201–3497–03, <b>31</b>	232–3972, <b>29</b>	319–3240, <b>41</b>
102–1448–02, <b>4</b>	201–3497–04, <b>31</b>	232–4012, <b>31</b>	319–3242, <b>41</b>
128–0252, <b>19</b> , <b>21</b>	201–3497–05, <b>31</b>	234–0867, <b>31</b>	319–3278, <b>27</b>
130–3216–01, <b>13</b>	201–3497–06, <b>31</b>	234–0875–02, <b>29</b>	320-1959-01, <b>44</b>
130–3721–01, <b>13</b>	201–3561–07, <b>31</b>	234–0879, <b>31</b>	320-1959-02, <b>44</b>
130–3984, <b>13</b>	211–0423, <b>31</b>	234–0937–02, <b>31</b>	320-1959-03, <b>44</b>
130–4622, <b>14</b>	220–4233, <b>29</b>	234–0937–03, <b>31</b>	320-1959-04, <b>44</b>
130–4691–02, <b>13</b>	220–4293–06, <b>31</b>	234–0937–04, <b>31</b>	320–1959–05, <b>44</b>
130–4692, <b>13</b>	220–4448–10, <b>32</b>	234–0937–05, <b>31</b>	320–1959–06, <b>44</b>
130–4693, <b>13</b>	220–4448–11, <b>32</b>	234–0983, <b>31</b>	320–1959–07, <b>44</b>
130–4694, <b>13</b>	220–4448–12, <b>32</b>	234–0984, <b>31</b>	320–1959–08, <b>44</b>
130–4695, <b>13</b>	220–4448–15, <b>32</b>	300–3998–02, <b>35</b>	320–1959–09, <b>44</b>
130–4697, <b>13</b>	220–4448–16, <b>32</b>	300–4515–01, <b>33</b>	320–1959–10, <b>44</b>
130–4699, <b>13</b>	220–4448–17, <b>32</b>	300–4515–02, <b>33</b>	320–1959–11, <b>44</b>
130–4700, <b>13</b>	220–4448–18, <b>32</b>	302–1922–10, <b>36</b>	320–1959–12, <b>44</b>

#### **Numerical Index**

Part No. Page	Part No. Page	Part No. Page	Part No. Page
320–1959–13, <b>44</b>	320–1986–08, <b>45</b>	332–3096–01, <b>39</b>	405–5916, <b>17</b> , <b>19</b> , <b>21</b>
320–1959–17, <b>44</b>	321–0362, <b>39</b>	332–3126–01, <b>27</b>	405–5917, <b>17</b> , <b>19</b> , <b>21</b>
320–1959–18, <b>44</b>	321–0364–02, <b>39</b>	332–3126–02, <b>27</b>	405–5926, <b>19</b> , <b>21</b>
320–1960–01, <b>44</b>	321–0364–04, <b>39</b>	332–3196, <b>4</b>	405–5950, <b>19</b> , <b>21</b>
320-1960-02, <b>44</b>	323–1444, <b>39</b>	332–3228, <b>28</b>	405–5951, <b>19</b> , <b>21</b>
320-1960-03, <b>44</b>	323–1445, <b>39</b>	332–3338, <b>33</b>	405–5952, <b>19</b> , <b>21</b>
320–1960–04, <b>44</b>	323–1491, <b>39</b>	332–3496, <b>39</b>	405–5953, <b>19</b> , <b>21</b>
320–1960–05, <b>44</b>	323–1492, <b>39</b>	333–0438–07, <b>28</b>	405–5954, <b>19</b> , <b>21</b>
320–1960–06, <b>44</b>	323–1540, <b>39</b>	333–0438–08, <b>28</b>	405–5955, <b>19</b> , <b>21</b>
320–1960–07, <b>44</b>	323–1580, <b>39</b>	333–0588–03, <b>11</b>	405–5956, <b>19</b> , <b>21</b>
320–1960–08, <b>44</b>	323–1581, <b>39</b>	333–0588–04, <b>11</b>	405–5957, <b>19</b> , <b>21</b>
320–1960–09, <b>44</b>	323–1591, <b>39</b>	333–0615, <b>11</b>	405–5958, <b>19</b> , <b>21</b>
320–1960–10, <b>44</b>	323–1605–02, <b>39</b>	337–0090, <b>22</b>	405–5959, <b>19</b> , <b>21</b>
320–1961–01, <b>44</b>	323–1605–03, <b>39</b>	337–2974, <b>43</b>	405–5960, <b>19</b> , <b>21</b>
320–1961–02, <b>44</b>	323–1614–01, <b>39</b>	338–2592–01, <b>39</b>	405–5961, <b>19</b> , <b>21</b>
320–1961–03, <b>44</b>	323–1615, <b>39</b>	338–3011, <b>29</b>	405–5962, <b>19</b> , <b>21</b>
320–1961–04, <b>44</b>	323–1623, <b>39</b>	338–3285, <b>39</b>	405–5963, <b>19</b> , <b>21</b>
320–1961–05, <b>44</b>	323–1624, <b>39</b>	338–3525, <b>27</b>	405–5966, <b>19</b> , <b>21</b>
320–1961–06, <b>44</b>	323–1637, <b>39</b>	338–3561, <b>36</b>	405–5986, <b>19</b> , <b>21</b>
320–1961–07, <b>44</b>	323–1643–01, <b>39</b>	338–3709, <b>27</b>	405–5988, <b>21</b>
320–1961–08, <b>44</b>	323–1644–03, <b>36</b>	338–3729, <b>39</b>	405–5989, <b>21</b>
320–1961–09, <b>44</b>	323–1648, <b>36</b> , <b>39</b>	357–0030, <b>39</b>	405–5990, <b>21</b>
320–1961–10, <b>44</b>	323–1652, <b>39</b>	357–0114, <b>33</b>	405–5991–01, <b>21</b>
320–1961–11, <b>44</b>	323–1666, <b>39</b>	402–0371, <b>22</b>	405–5991–02, <b>21</b>
320–1961–12, <b>44</b>	323–1667, <b>39</b>	402–0510, <b>27</b>	405–5992, <b>21</b>
320–1961–13, <b>44</b>	323–1709, <b>39</b>	402–0644, <b>22</b>	405–5993, <b>21</b>
320–1961–14, <b>44</b>	323–1718, <b>39</b>	403–4058, <b>24</b>	405–5994, <b>21</b>
320–1962–01, <b>44</b>	323–1765, <b>39</b>	403–4110, <b>23</b>	405–5997, <b>19</b> , <b>21</b>
320–1962–02, <b>44</b>	330–0142, <b>28</b>	403–4116, <b>23</b>	405–5998, <b>19</b> , <b>21</b>
320–1962–03, <b>44</b>	332–0418–01, <b>39</b>	403–4154–01, <b>22</b>	405–6000–01, <b>21</b>
320–1962–04, <b>44</b>	332–0942, <b>35</b>	403–4183, <b>23</b>	405–6000–02, <b>19</b> , <b>21</b>
320–1962–05, <b>44</b>	332–1389, <b>28</b>	403–4188–01, <b>22</b>	405–6000–03, <b>19</b> , <b>21</b>
320–1962–06, <b>44</b>	332–1473, <b>25</b> , <b>41</b>	403–4215, <b>23</b>	405–6000–04, <b>21</b>
320–1964–04, <b>44</b>	332–2001, <b>43</b>	403–4218, <b>22</b>	405–6000–07, <b>21</b>
320–1964–05, <b>44</b>	332–2305, <b>43</b>	405–5734, <b>19</b> , <b>21</b>	405–6001–01, <b>19</b> , <b>21</b>
320–1977–01, <b>45</b>	332–2634, <b>4</b> , <b>27</b>	405–5744, <b>17</b> , <b>19</b> , <b>21</b>	405–6001–02, <b>19</b> , <b>21</b>
320–1977–02, <b>45</b>	332–2660, <b>43</b>	405–5832, <b>17</b>	405–6002, <b>19</b> , <b>21</b>
320–1981–01, <b>45</b>	332–2744–07, <b>41</b>	405–5841, <b>19</b> , <b>21</b>	405–6003, <b>19</b> , <b>21</b>
320–1981–02, <b>45</b>	332–2878, <b>27</b>	405–5902, <b>17</b> , <b>19</b> , <b>21</b>	405–6005, <b>19</b> , <b>21</b>
320–1986–01, <b>45</b>	332–2879–05, <b>27</b>	405–5903, <b>17</b> , <b>19</b> , <b>21</b>	405–6010, <b>21</b>
320–1986–05, <b>45</b>	332–2987, <b>27</b>	405–5908, <b>17</b> , <b>19</b> , <b>21</b>	405–6013, <b>21</b>
320–1986–06, <b>45</b>	332–3023, <b>28</b>	405–5909, <b>17</b> , <b>19</b> , <b>21</b>	405–6014, <b>21</b>
320–1986–07, <b>45</b>	332–3024–11, <b>28</b>	405–5915, <b>17</b>	405–6015, <b>19</b> , <b>21</b>

#### **Numerical Index**

Part No. Page	Part No. Page	Part No. Page	Part No. Page
405–6034, <b>19</b> , <b>21</b>	503–2095, <b>13</b>	526–2050, <b>28</b>	821–6002–03, <b>11</b> , <b>13</b> , <b>17</b> , <b>19</b> , <b>21</b> , <b>23</b> , <b>25</b> , <b>27</b> , <b>43</b>
405–6044, <b>21</b>	504–0003, <b>13</b>	526–2060, <b>31</b>	821–6003–02, <b>8</b> , <b>9</b> , <b>13</b> , <b>17</b> ,
405–6109, <b>19</b> , <b>21</b>	504–0011, <b>6</b> , <b>15</b>	526–2100, <b>31</b>	19, 21, 24, 25, 27, 41, 43
405–6132, <b>21</b>	505–0019, <b>4</b> , <b>11</b>	526–2120, <b>13</b> , <b>27</b>	821–6003–03, <b>41</b>
405–6301–02, <b>17</b>	505–0050, <b>6</b>	526–2133, <b>4</b>	822–0085, <b>43</b>
405–6302–02, <b>9</b>	505–0057, <b>7</b>	526–2140, <b>4</b>	822–0091, <b>43</b>
405–6303–02, <b>17</b>	505–0060, <b>4</b>	720–1119, <b>31</b>	822–3047, <b>28</b>
405–6306–02, <b>9</b>	505–0101, <b>4</b>	720–1123, <b>31</b>	822–3075, <b>28</b>
406–0782, <b>17</b> , <b>19</b> , <b>21</b>	505–0110, <b>13</b>	775–0049, <b>29</b>	850–0039, <b>43</b>
406–0831, <b>17</b> , <b>19</b> , <b>21</b>	505–0185, <b>6</b> , <b>15</b>	800–0006, <b>35</b>	850–0040, <b>35</b>
406–0835, <b>17</b> , <b>19</b> , <b>21</b>	508–0139, <b>31</b>	800–0025, <b>43</b>	850–0045, <b>43</b>
416–0619, <b>4</b>	508–0228, <b>28</b>	800–0029, <b>43</b>	850–0050, <b>41</b> , <b>45</b>
416–0993–02, <b>24</b>	508–0239, <b>25</b> , <b>41</b>	800–0048, <b>41</b>	850–0114–55, <b>31</b>
416–1000, <b>4</b>	508–0305–02, <b>43</b>	800–0052, <b>45</b>	850–0114–56, <b>31</b>
416–1033, <b>24</b>	508–1057, <b>31</b>	800–0607, <b>22</b>	850–0117, <b>31</b>
502–0047, <b>15</b>	508–1119, <b>27</b>	800–2046, <b>31</b>	850–2003, <b>28</b>
502–0050, <b>13</b>	509–0266–02, <b>31</b>	800–2058, <b>4</b>	850–2004, <b>28</b>
502–0153, <b>13</b>	510–0164, <b>31</b>	800–2059, <b>13</b>	850–2005, <b>31</b>
502–0802, <b>15</b>	515–0298–03, <b>31</b>	800–2060, <b>31</b>	850–2006, <b>29</b> , <b>31</b>
502–0942, <b>5</b>	517–0021, <b>28</b>	800–2084, <b>4</b>	850–2008, <b>4</b> , <b>31</b>
502–0943, <b>4</b> , <b>11</b>	517–0094, <b>22</b>	800–2088, <b>31</b>	850–2010, <b>27</b> , <b>29</b> , <b>31</b>
502–1162, <b>13</b>	517–0131, <b>19</b> , <b>21</b> , <b>27</b>	800–2099, <b>13</b>	856–0008, <b>25</b> , <b>27</b> , <b>41</b> , <b>43</b>
502–1292, <b>13</b>	517–0135, <b>31</b>	800–2111, <b>4</b>	856–0013, <b>4</b> , <b>22</b>
502–1310, <b>13</b>	517–0138–07, <b>19</b> , <b>21</b>	800–2124, <b>22</b>	860–2005, <b>28</b>
502–1311, <b>13</b>	517–0322, <b>19</b> , <b>21</b>	800–2543–02, <b>22</b>	860–2006, <b>31</b>
502–1313, <b>13</b>	518–0083, <b>31</b>	800–2543–05, <b>31</b>	860–2009, <b>27</b>
503–0098, <b>6</b>	518-0548-02, <b>6</b>	800–3017–38, <b>31</b>	862–0001, <b>35</b>
503–0183, <b>5</b> , <b>11</b>	518–0548–05, <b>5</b>	800–3017–39, <b>31</b>	862–0003, <b>45</b>
503–0197, <b>6</b> , <b>15</b>	518–0601, <b>3</b>	800–3017–42, <b>31</b>	862–0026–55, <b>5</b>
503–0276, <b>13</b>	525–0304, <b>3</b>	800–3017–44, <b>31</b>	862–0044, <b>22</b>
503–0365, <b>13</b>	525–0305, <b>3</b>	800–3017–54, <b>31</b>	865–0030, <b>24</b>
503–0386, <b>5</b>	525–0306, <b>3</b>	800–3034, <b>28</b>	870–0320, <b>9</b>
503–0465, <b>13</b>	526–0011, <b>19</b> , <b>21</b>	805–0015, <b>31</b>	870–0524, <b>17</b> , <b>19</b> , <b>21</b>
503–0685, <b>13</b>	526–0013, <b>27</b>	815–0761–01, <b>29</b>	870–2055, <b>9</b> , <b>27</b>
503–1195, <b>15</b>	526–0029, <b>41</b> , <b>45</b>	815–0792–04, <b>28</b>	870–2064–01, <b>28</b>
503–1379–01, <b>13</b>	526–0113, <b>13</b> , <b>43</b>	815–0839, <b>27</b>	,
503–1445–06, <b>13</b>	526–0174, <b>31</b>	818–0231–02, <b>13</b> , <b>14</b> , <b>17</b> ,	895–0363, <b>17</b> , <b>19</b> , <b>21</b>
503–1554, <b>13</b>	526–0238–01, <b>22</b>	19, 21, 41, 43	895–0382, <b>17</b>
503–1634–02, <b>11</b>	526–0259, <b>31</b>	818–0237–01, <b>17</b> , <b>19</b> , <b>21</b>	895–0384, <b>19</b> , <b>21</b>
503–1872–04, <b>13</b>	526–0399–64, <b>31</b>	821–5000–05, <b>9</b>	895–0385, <b>19</b> , <b>21</b>
503–1872–06, <b>13</b>	526–0423, <b>31</b>	821–5003–01, <b>27</b>	895–0386, <b>19</b> , <b>21</b>
503–1872–07, <b>13</b>	526–0433, <b>22</b> , <b>31</b>	821–6001–01, <b>29</b> , <b>31</b>	898–1195–02, <b>13</b>
503–2045, <b>13</b>	526–0443, <b>22</b>	821–6001–02, <b>31</b>	
500 Z070, I <b>J</b>	020 0770, <b>22</b>		



Onan Corporation 1400 73rd Avenue N.E. Minneapolis, MN 55432 612-574-5000 Telex: 275477

Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation Cummins is a registered trademark of Cummins Engine Company