


The following catalog
has gaps in its page
numbers, or doesn't
have any numbers.
We have chosen to
leave the page
numbering in the
order that Acrobat
assigns it.

Onan

Parts Manual

T-260G Engine

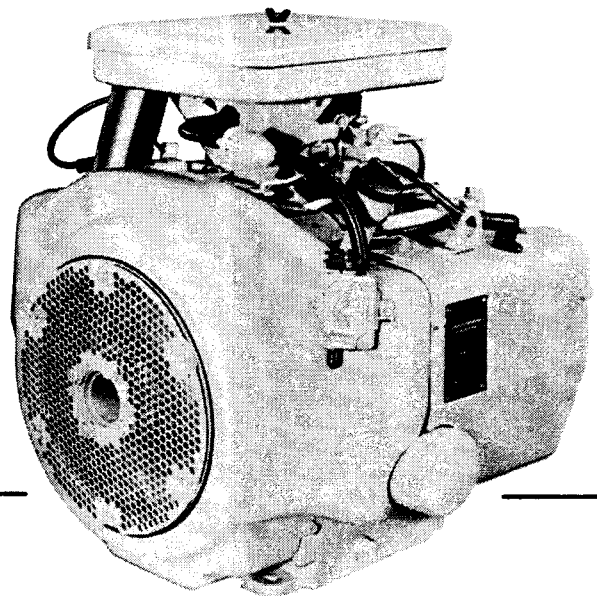

965-0260
2-91 (SPEC A-G)
Replaces 2-89 (SPEC A-G)
Printed in U.S.A.

Introduction

This Catalog applies to the standard T260G-GA024 Engines. Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number in the parts list for that group. Parts illustrations are typical. Using the **Model** and **Spec No.** from the nameplate, select **Parts** that apply to your engine. Unless otherwise mentioned in the description, parts are interchangeable between models. Right and left sides are determined by facing the blower end (front) of the engine.

NOTICE!

ITEMS REFERENCED AS **OPTIONAL**, INDICATE PART IS FACTORY INSTALLED AND MAY NOT BE APPLICABLE TO ALL MODELS. FOR FIELD CONVERSIONS ADDITIONAL PARTS ARE USUALLY REQUIRED.

Index

- Adapter, Air Cleaner (Remote) 34
- Adapter, Carburetor 14
- Adapter, Carburetor - Remote Air Cleaner 34
- Adapter, Exhaust (Flange Type) 26,41
- Adapter, Governor Arm 31
- Adapter, Oil Filter 10,37
- Arm, Governor Control 13,30
- Armature, Starter 23,24

- Baffle, Breather Tube 4
- Ball, Governor 7
- Base, Oil 9
- Base, Remote Oil Filter 37
- Bearing, Camshaft 4
- Bearing, Crankshaft 4
- Bearing, Governor Shaft 11
- Block, Cylinder 4
- Bolt, Connecting Rod 8
- Box, Breaker 19, 21
- Bracket, Cable - Choke 14,35
- Bracket, Dashpot 11
- Bracket, Fill Tube - Oil 9
- Bracket, Governor Control 31
- Bracket, Ignition Coil 19,20
- Bracket, Lifting 40
- Bracket, Remote Oil Filter 37
- Brush, Ground-Starter 23,24,38
- Bushing, Control Arm 30
- Bushing, Governor Control 13,31

- Cable, Spark Plug 19,20
- Camshaft 7
- Cap and Indicator, Oil Fill 9
- Cap and Valve, Breather 4
- Cap, Fuel Tank 32
- Capacitor, Electronic Ignition 20
- Carburetor, Components 16,17,18
- Carburetor, Gasoline 14
- Clamp, Coil 19
- Clamp, Hose 14,33,34
- Clamp, Loop - Breather Tube 4
- Clamp, Muffler 41
- Cleaner, Air 14,40
- Cleaner, Air (Remote) 34
- Coil, Ignition 19,20
- Condenser, Ignition 19,21
- Control, Ignition 20
- Cover, Air - Cleaner 14,40
- Cover, Breaker Box 21
- Cover, Dust - Starter 23,24
- Cover, Exhaust 40
- Cover, Inner 14
- Cover, Valve 4
- Cover, Voltage Regulator 25
- Crankshaft 6
- Cup, Governor 7
- Cup, Intake 10

- Dashpot 14
- Drain, Oil Filter 10

- Elbow, Air Inlet Remote 34
- Element, Air Cleaner 14,40

- Filter, Fuel Gasoline 33
- Filter, Oil 10,40
- Filter, Oil - Remote 37
- Flywheel 6

- Gasket, Breaker Box 19,21
- Gasket, Bearing Plate 4
- Gasket, Carburetor 4,16,17,18
- Gasket, Cylinder Head 4
- Gasket, Exhaust 26,41
- Gasket, Gearcase 11
- Gasket, Manifold - Intake 14
- Gasket, Oil Base 9
- Gasket, Oil Filter Adapter 10,37
- Gasket, Plate - Ignition Plunger Cover 20
- Gasket, Valve Cover 4
- Gear, Camshaft 7
- Gear, Crankshaft 6
- Gear, Ring 6
- Gearcase 11
- Governor 13,30,31
- Guard, Flywheel 6
- Guide, Valve 4

- Harness, Wiring 42
- Head, Cylinder 4
- Holder, Brush 23,24,38
- Horn Assembly 39
- Hose, Fuel - Gasoline 14,33
- Hose, Oil - Remote 37
- Hose, Vacuum - Fuel Pump 14
- Housing, Air Cleaner 14
- Housing, Blower 25
- Housing, Cylinder 25
- Hub, Governor Cup 7

- Ignition, Electronic 20
- Index, Numerical 44,45,46
- Insert, Valve Seat - Intake and Exhaust 4
- Insulator, Ignition Module 20

- Key, Flywheel 6
- Kit, Gasket - Engine 4,43
- Kit, Gasket - Oil Pump 10
- Kit, Gasket - Valve Grind 4
- Kit, Piston Ring 8
- Kit, Points and Condenser 21
- Kit, Repair - Carburetor 16,17,18
- Kit, Repair - Starter 23,24
- Knob, Air Cleaner 14

- Lever, Choke 35
- Line, Fuel 30
- Lock, Valve Spring 4
- Loctite, Bottle 43

- Manifold, Exhaust 41
- Manifold, Intake 14
- Muffler, Exhaust 41

- Nut, Wing - Air Cleaner 14

Index

- Paint, Enamel 43
- Pin, Alignment - Gear Cover 4
- Pin, Center - Camshaft 7
- Pin, Drive - Bearing Stop 4
- Pin, Piston 8
- Piston 8
- Plate, Air Deflector 14
- Plate, Bearing - Rear 4
- Plate, Ignition Plunger 20
- Plug, Breather Hole 4
- Plug, Core Hole 4
- Plug, Oil Base 9
- Plug, Spark 19,20
- Plug, Welch - Camshaft 4
- Plunger, Breaker Points 19
- Plunger, Bypass Valve 10,37
- Pump, Fuel - Vacuum (Gasoline) 14
- Pump, Oil 10

- Regulator, Voltage 28,29
- Relay, Start 40
- Ring, Piston 8
- Rod, Connecting 8
- Rod, Control - Governor 13,30,31
- Rotor, Ignition 20

- Screen, Breather Tube 4
- Seal, Air - Oil Filter 10
- Seal, Oil 4,11
- Seal, Oil - Governor Shaft 11
- Sealant, Thread 43
- Seat, Valve 4
- Sender, Oil Pressure Gauge 37,40
- Shaft, PTO 40
- Shaft and Arm, Governor 11
- Shim Crankshaft 4


- Solenoid, Fuel Cut - Off 17,18
- Solenoid, Starter 38
- Spring, Bypass Valve 10,37
- Spring, Governor Arm 13,30,31
- Spring, Governor Rod 13
- Spring, Idle Setting 30
- Spring, Valve 4
- Stator, Alternator 28,29
- Starter 22
- Starter Components 23,24
- Strap, Fuel Tank 32
- Support, Air Cleaner 14
- Support, Exhaust Cover 40
- Switch, High Temperature 36,39,40
- Switch, Pressure - Oil (LOPKO) 37,40
- Swivel, Choke Lever/Throttle Lever 13,30,31,35

- Tank, Fuel 32,40
- Tappet, Valve 4
- Tube, Air Intake 14
- Tube, Breather 4,14,34
- Tube, Crankcase Breather 14
- Tube, Oil 4
- Tube, Vacuum Port 11

- Valve, Exhaust 4
- Valve, Intake 4
- Valve, Rotator 4
- Valve, Shut - Off 32
- Venturi, Blower Wheel 8
- Washer, Thrust 4
- Wrapper, Air Cleaner Element 14,40

- Yoke, Governor Shaft 11

Cylinder Block

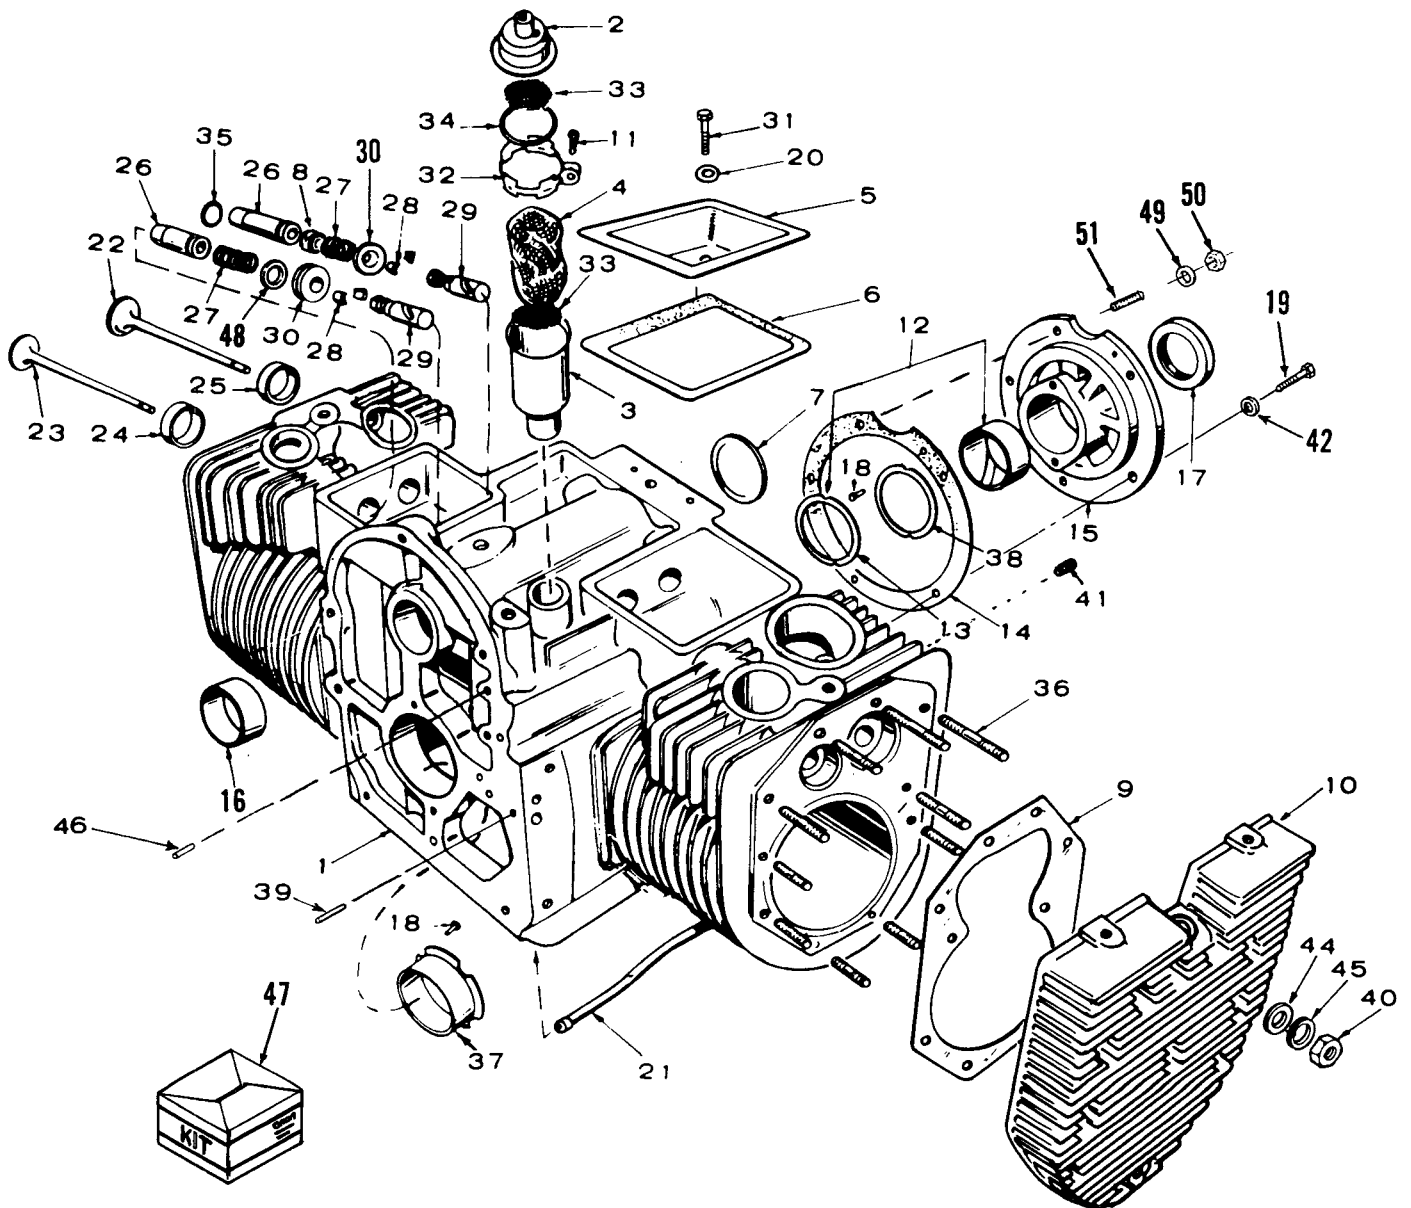


C-1019

Cylinder Block

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Block, Cylinder (See Short Block Catalog #932-0109)	26		4	Guide, Valve
2	123-0954	1	Cap and Valve, Breather		110-3167	4	Engines w/o Intake Valve Seals
3	123-0952	1	Tube, Breather		110-3167	2	Engines w/Intake Valve Seals
4	123-1417	1	Baffle, Breather Tube		110-3168	2	Exhaust
5	110-1624	2	Cover, Valve Compartment	27	110-0539	4	Intake
6	110-3575	2	Gasket, Valve Cover	28	110-0639	8	Spring, Valve
7	517-0048	1	Plug, Expansion	29			Lock, Valve Spring
8	110-3604	2	Seal, Intake Valve (Optional)		115-0006	4	Tappet, Valve
9	110-2987	2	Gasket, Cylinder Head		115-0006-05	4	Standard
10			Head, Cylinder				.005" Oversize
	110-3044	2	Spec A, B	30			Rotator, Valve
	110-3549	2	Begin Spec C		110-0904	4	Spec A Through E
11	809-0035	1	Screw, Tapping - Round Head (#8 x 3/4")		110-0904	2	Begin Spec F
12			Bearing, Crankshaft - Rear	31	800-0011	2	Screw, Cap - Hex Head (1/4-20 x 2")
	101-0450	1	Standard	32	123-0951	1	Clamp, Loop - Breather Tube Cap
	101-0450-02	1	.002" Undersize	33	123-0958	2	Screen, Breather Tube
	101-0450-10	1	.010" Undersize	34	509-0117	1	Seal, O-Ring - Breather Cap
	101-0450-20	1	.020" Undersize	35	110-0068	2	Gasket, Valve Guide (Intake)
	101-0450-30	1	.030" Undersize	36			Stud, Cylinder Head Mounting
13	104-0575	2	Washer, Thrust - Crankshaft Bearing		520-0919	8	3/8 x 2-19/32" (Install 4 Bottom Holes - RH, LH Heads)
14	101-0773	1	Gasket, Bearing Plate				3/8 x 2-3/4" (Install 2 Top Holes - RH, LH Heads)
15			Plate, Bearing - Rear		520-0876	4	3/8 x 3" (Install 4 Middle Holes - RH, LH Heads)
	101-0439	1	Standard		520-0918	8	Bearing, Sleeve - Flanged
	101-0439-01	1	Standard (Cadmium Plated)				*Standard
	101-0551	1	Optional - 4 Boss		101-0432	1	.002" Undersize
	101-0430	1	Optional - SAE B		101-0432-02	1	.010" Undersize
	101-0437-01	1	Optional - SAE A		101-0432-10	1	.020" Undersize
16	101-0405	2	Bearing, Camshaft		101-0432-20	1	.030" Undersize
17	509-0041	1	Seal, Oil - Crankshaft (1/2" W)		101-0432-30	1	
18	516-0072	4	Pin, Bearing Stop	38	104-0776	AR	Shim, Crankshaft Thrust (.005")
19	800-0051	5	Screw, Cap - Hex Head (3/8 - 16 x 1-1/4") - Spec C	39	516-0141	2	Pin, Gearcase Alignment
20	526-0063	2	Washer, Flat - Copper (1/4" Screw)	40	104-0091	20	Nut, Hex (Special)
21	120-0680	1	Tube, Oil - Crankcase	41	803-0071	2	Screw, Set (3/8-16 x 1/2")
22			Valve, Intake	42	850-0050	5	Washer, Lock (3/8") Spec C
	110-1974	2	Specs A Through E	44	526-0250	24	Washer, Flat - Heat Treated (3/8" Screw)
	110-1718	2	Begin Spec F	45	851-0029	24	Washer, Lock - Compression (Special)
23	110-1719	2	Valve, Exhaust	46	517-0067	1	Plug, Core Hole
24			Insert, Valve Seat - Exhaust	47			Kit, Gasket
	110-1716	2	Standard		168-0190	1	Carbon Removal
	110-1716-02	2	.002" Oversize		168-0191	1	Engine
	110-1716-05	2	.005" Oversize	48	110-0893	2	Washer, Exhaust Valve Spring Retainer - Begin Spec F
	110-1716-10	2	.010" Oversize	49	526-0251	5	Washer, Flat (3/8" Screw) SAE A,B - 4 Boss Rear
	110-1716-25	2	.025" Oversize				Bearing Plate
25			Insert, Valve Seat - Intake	50	104-0091	5	Nut, Hex (Special) Spec A,B - SAE A,B - 4 Boss Rear
	110-3655	2	Standard				Bearing Plate
	110-3655-02	2	.002" Oversize	51	520-0736	5	Stud (3/8 x 1-21/32") Spec A, B - SAE A,B - 4 Boss Rear
	110-3655-05	2	.005" Oversize				Bearing Plate
	110-3655-10	2	.010" Oversize				
	110-3655-25	2	.025" Oversize				


Crankshaft and Flywheel

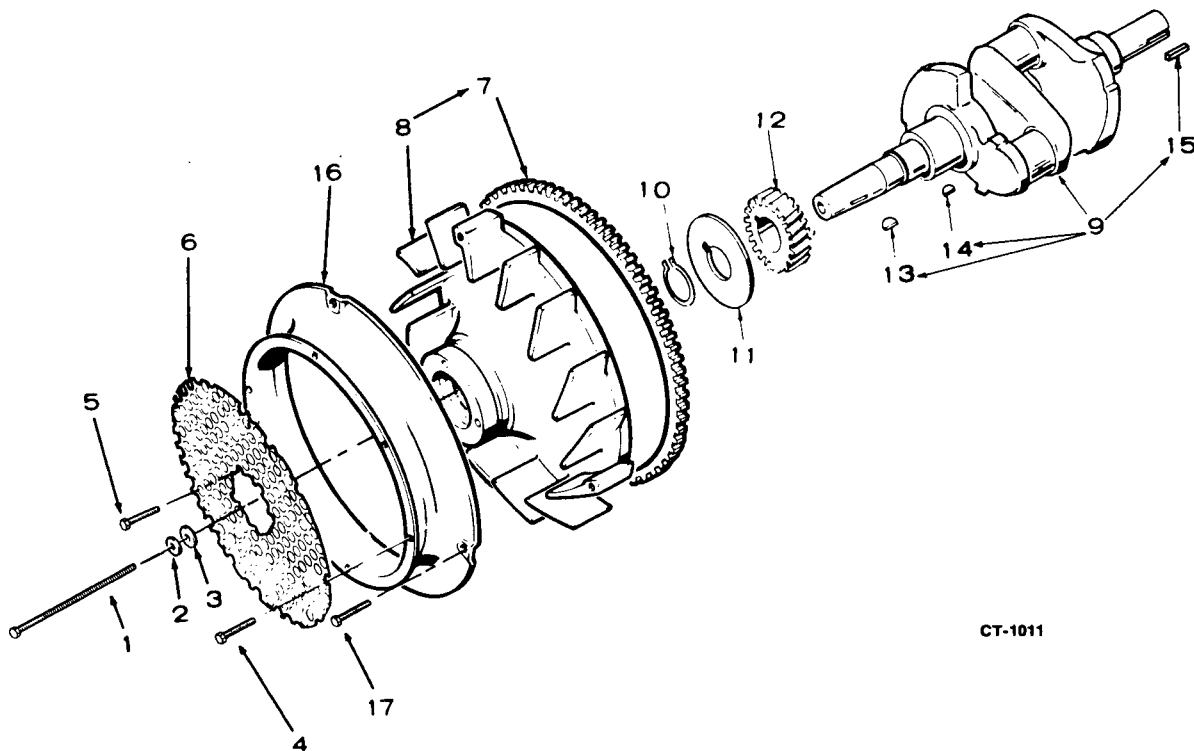

CT-1011


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	104-0170	1	Screw, Cap - Hex Head (Special)	9		1	Crankshaft (Includes Keys)
2			Washer	104-1340		1	1.125" Dia. Stub - Keyway Added
	850-0055	1	Lockspring (7/16") Spec A-F	104-1500		1	11 Tooth Spline (Includes Key 515-0198)
	526-0356	1	Flat (7/16" Screw) Begin Spec G	104-1310		1	13 Tooth Spline
3			Washer, Flat	104-1314		1	1-1/8" Dia. Tapered Stub
	526-0262	1	Spec A (7/16" Screw)	104-1596		1	1.437 Dia. Stub - No Taper
	526-0017	1	Begin Spec B (7/16" Screw)	104-1312		1	1-7/16" Dia. Stub - No Taper (Includes Key 515-0198)
4	815-0519	6	Screw, Tapping - Hex Washer Head (#10-32 x 1/2")	10	518-0014	1	Ring, Retaining
5	821-0014	4	Screw, Cap - Hex Head Locking (5/16-18 x 1/2")	11	104-0043	1	Washer, Gear Retaining
6	134-4120	1	Guard, Flywheel	12	104-0032	1	Gear, Crankshaft
7	104-0779	1	Gear, Ring	13			Key, Flywheel
8			Flywheel (Includes Ring Gear)	515-0227		1	Specs A through E
	134-3806	1	Engines w/o Flywheel	515-0284		1	Begin Spec F
			Alternator - Specs A through E	14	515-0001	1	Key, Crankshaft Gear
	134-3938	1	Engines w/Flywheel	15	515-0103	1	Key, Crankshaft Stub - Used on Crankshaft 104-1340 Only
			Alternator - Specs A through E	16	134-3847	1	Venturi, Blower Wheel
	134-4641	1	Begin Spec F (With or Without Flywheel Alternator)	17	821-0010	5	Screw, Cap - Hex Washer Head (1/4-20 x 1/2")
	134-4641-01	1	Begin Spec G				

Camshaft

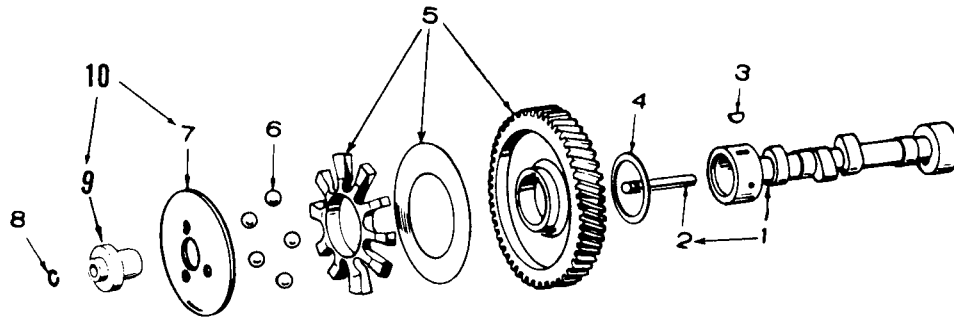

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	105-0382	1	Camshaft (Includes Center Pin)	6	510-0015	5	Ball, Fly - Governor
	105-0594	1	Spec A, B		510-0015	10	5 Ball Governor
	105-0638	1	Begin Spec C		150-1520	1	10 Ball Governor
	105-0638	1	Begin Spec G	7	150-1520	1	Cup, Governor
2	150-0075	1	Pin, Camshaft	8	150-0078	1	Ring, Retaining
3	515-0001	1	Key, Camshaft Gear	9	150-1519	1	Hub, Governor Cup
4	105-0541	1	Washer, Thrust	10	150-1695	1	Governor Cup (Kit)
5	105-0332	1	Gear, Camshaft (Includes Plate & Spacer)				(Includes Cup & Hub)

Piston and Rod

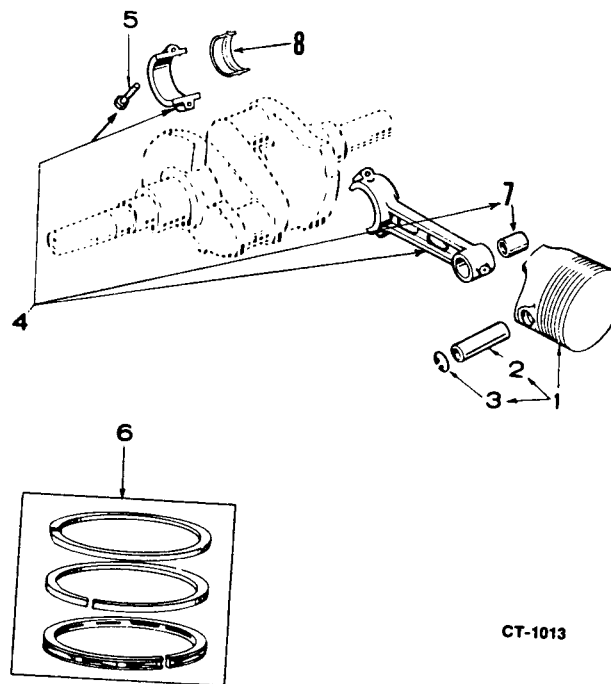


CT-1013

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Piston and Pin (Includes Pin and Retaining Rings)	5			Bolt, Rod Cap
	112-0228	2	Standard		806-0036	4	(5/16-18 x 1-1/4") Specs A
	112-0228-05	2	.005" Oversize		805-0010	4	(5/16-24 x 1-1/4") Begin
	112-0228-10	2	.010" Oversize				Spec F
	112-0228-20	2	.020" Oversize	6			Kit, Piston Ring
	112-0228-30	2	.030" Oversize		113-0203	2	Standard
2	112-0069	2	Pin, Piston		113-0203-05	2	.005" Oversize
3	518-0294	4	Ring, Retaining		113-0203-10	2	.010" Oversize
4			Rod, Connecting (Includes Bolts) (Forged Aluminum)		113-0203-20	2	.020" Oversize
			Specs A Through E		113-0203-30	2	.030" Oversize
	114-0324	2	Standard	7	114-0036	2	Bushing, Piston Pin - Begin
	114-0324-10	2	.010" Undersize				Spec F
	114-0324-20	2	.020" Undersize	8			Bearing, Half - Connecting
	114-0324-30	2	.030" Undersize				Rod - Begin Spec F
			Begin Spec F		114-0188	4	Standard
	114-0203	2	Standard (Forged Steel)		114-0188-02	4	.002" Undersize
			(Includes Bushing & Bolts)		114-0188-10	4	.010" Undersize
					114-0188-20	4	.020" Undersize
					114-0188-30	4	.030" Undersize

This diagram shows an exploded view of a mechanical assembly. The main component is a rectangular housing (2) with a central vertical post (9) and a base plate (10). A curved arm (11) is attached to the side of the housing. A bolt (4) is shown passing through the housing and the base plate. A screw (3) is shown passing through the base plate. A pin (7) and a washer (8) are shown near the base plate. A nut (6) is shown on the end of a bolt (5) that is attached to the arm (11). A small pin (1) is shown near the base of the arm.

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Base, Oil	6	509-0142	1	Gasket, Cap - Oil Fill
	102-1231	1	Spec A Through G (Includes Drain Plug & Dowel Pin)	7	850-0050	4	(O-Ring) Washer, Lock - Spring (3/8")
	102-1232	1	Spec A - with Tapped Mounted Feet (Includes Drain Plug)	8	526-0026	4	Washer, Flat (3/8" Screw)
2	102-1387	1	Gasket, Base - Oil	9	516-0212	2	Pin, Dowel
3	110-1264	4	Screw, Cap - Hex Head (Special)	10	123-1640	1	Bracket, Support - Oil Tube Begin Spec C
4	505-0110	1	Plug, Drain (3/8")	11	815-0340	1	Screw, Tapping - Hex Washer Head (#10-32 x 3/8") - Begin Spec C
5	123-1921	1	Cap and Indicator, Oil Fill				

Oil System

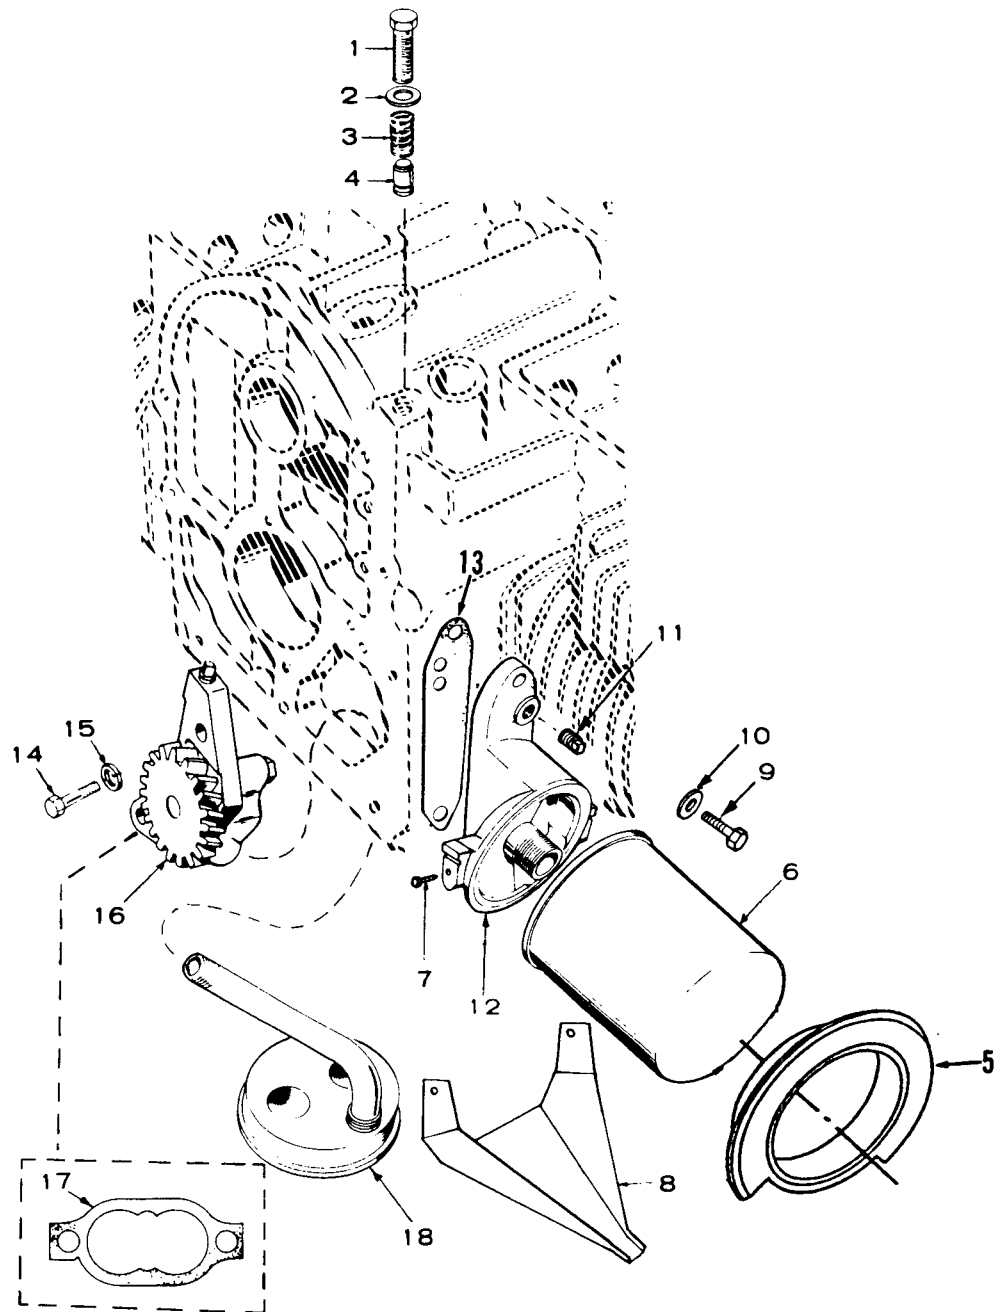

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	801-0050	1	Screw, Cap - Hex Head (3/8-24 x 1")
2	526-0066	1	Washer, Flat - By-Pass Valve (3/8" Screw)
3	120-0140	1	Spring, Valve - By-Pass
4	120-0398	1	Valve, Check - Oil By-Pass
5	122-0502	1	Seal, Air - Oil Filter
6	122-0323	1	Filter, Oil Without Hex Nut
	122-0469	1	With Hex Nut (Optional)
7	815-0194	2	Screw, Tapping - Hex Head with External Tooth Lockwasher (#10-32 x 3/8")
8	122-0352		Drain, Oil Filter

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
9	800-0028	2	Screw, Cap - Hex Head (5/16-18 x 1")
10	526-0065	2	Washer, Flat - Copper (5/16" Screw)
11	505-0057	1	Plug, Pipe - 1/8 NPT
12	122-0320	1	Adapter, Filter - Oil
13	122-0771	1	Gasket, Adapter
14	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")
15	850-0040	2	Washer, Lock - Spring (1/4")
16	120-0491	1	Pump, Oil
17	120-0161	1	Gasket Kit, Pump - Oil
18	120-0905	1	Cup, Intake - Oil Pump


This diagram shows an exploded view of a mechanical assembly. The main components are numbered as follows:

- 1**: A large, circular, textured housing or bellows.
- 2**: A small circular gasket or seal.
- 3**: A long vertical rod or shaft.
- 4**: A bracket or mounting arm on the left side.
- 5**: A small pin or screw.
- 6**: A small circular component, possibly a pin or washer.
- 7**: A small circular component, possibly a pin or washer.
- 8**: A small circular component, possibly a pin or washer.
- 9**: A circular flange or ring.
- 10**: The outer rim of the main housing.
- 11**: A small pin or screw.
- 12**: A small circular component, possibly a pin or washer.
- 13**: A small circular component, possibly a pin or washer.
- 14**: A small circular component, possibly a pin or washer.
- 15**: A small circular component, possibly a pin or washer.
- 16**: A small circular component, possibly a pin or washer.
- 17**: A small rectangular component, possibly a plug or cap.
- 18**: A small rectangular component, possibly a plug or cap.
- 19**: A small circular component, possibly a pin or washer.
- 20**: A small circular component, possibly a pin or washer.

The diagram illustrates the assembly sequence and relative positions of these parts. The main housing (1) is the central component, with various seals (2, 6, 7, 8) and pins (5, 11, 12, 13, 14, 15, 16, 19, 20) used to secure it. The rod (3) passes through the top, and the bracket (4) is attached to the side. The flange (9) is shown at the bottom right, and the rectangular components (17, 18) are at the top right.

* - Parts Included in 103-0791 Gearcase.


Governor

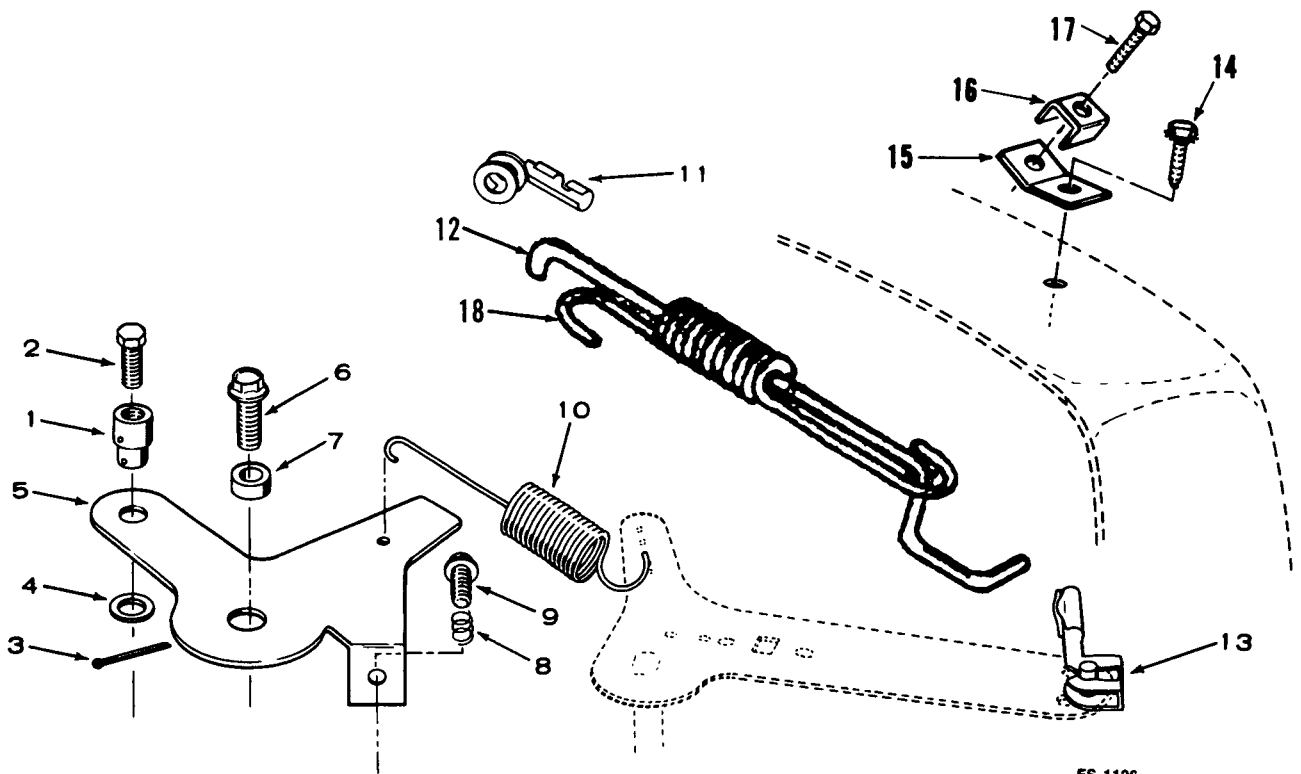

FS-1128

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	152-0155	1	Swivel, Lever - Choke	9	815-0563	1	Screw, Hex Washer Head - Thread Forming (#6-32 x 1-3/8")
2	815-0104	1	Screw, Machine - Fillister Head (#8-32 x 5/16")	10	150-1831	1	Spring, Governor
3	516-0059	1	Pin, Cotter	11	518-0004	1	Clip, Retaining - Rod
4	526-0006	1	Washer, Flat (#12 Screw)	12	150-2400	1	Rod, Control
5	150-1832	1	Arm, Governor Control Use With Swivel	13	518-0406	1	Clip, Retaining - Rod
	150-2039	1	Use Without Swivel	14	815-0378	1	Screw, Hex Head W/ET (#14 x 1/2")
6	815-0436	1	Screw, Cap - Hex Head (Special)	15	150-1881	1	Bracket, Clamp - Throttle
7	150-1269	1	Bushing, Governor Arm Mounting	16	153-0514	1	Clip, Cable - Choke
8	150-1398	1	Spring, Idle - Governor	17	815-0359	1	Screw, Tapping - Slotted Hex Washer Head (#10-32 x 7/8")
				18	150-2409	1	Spring, Gov. Rod


Fuel System

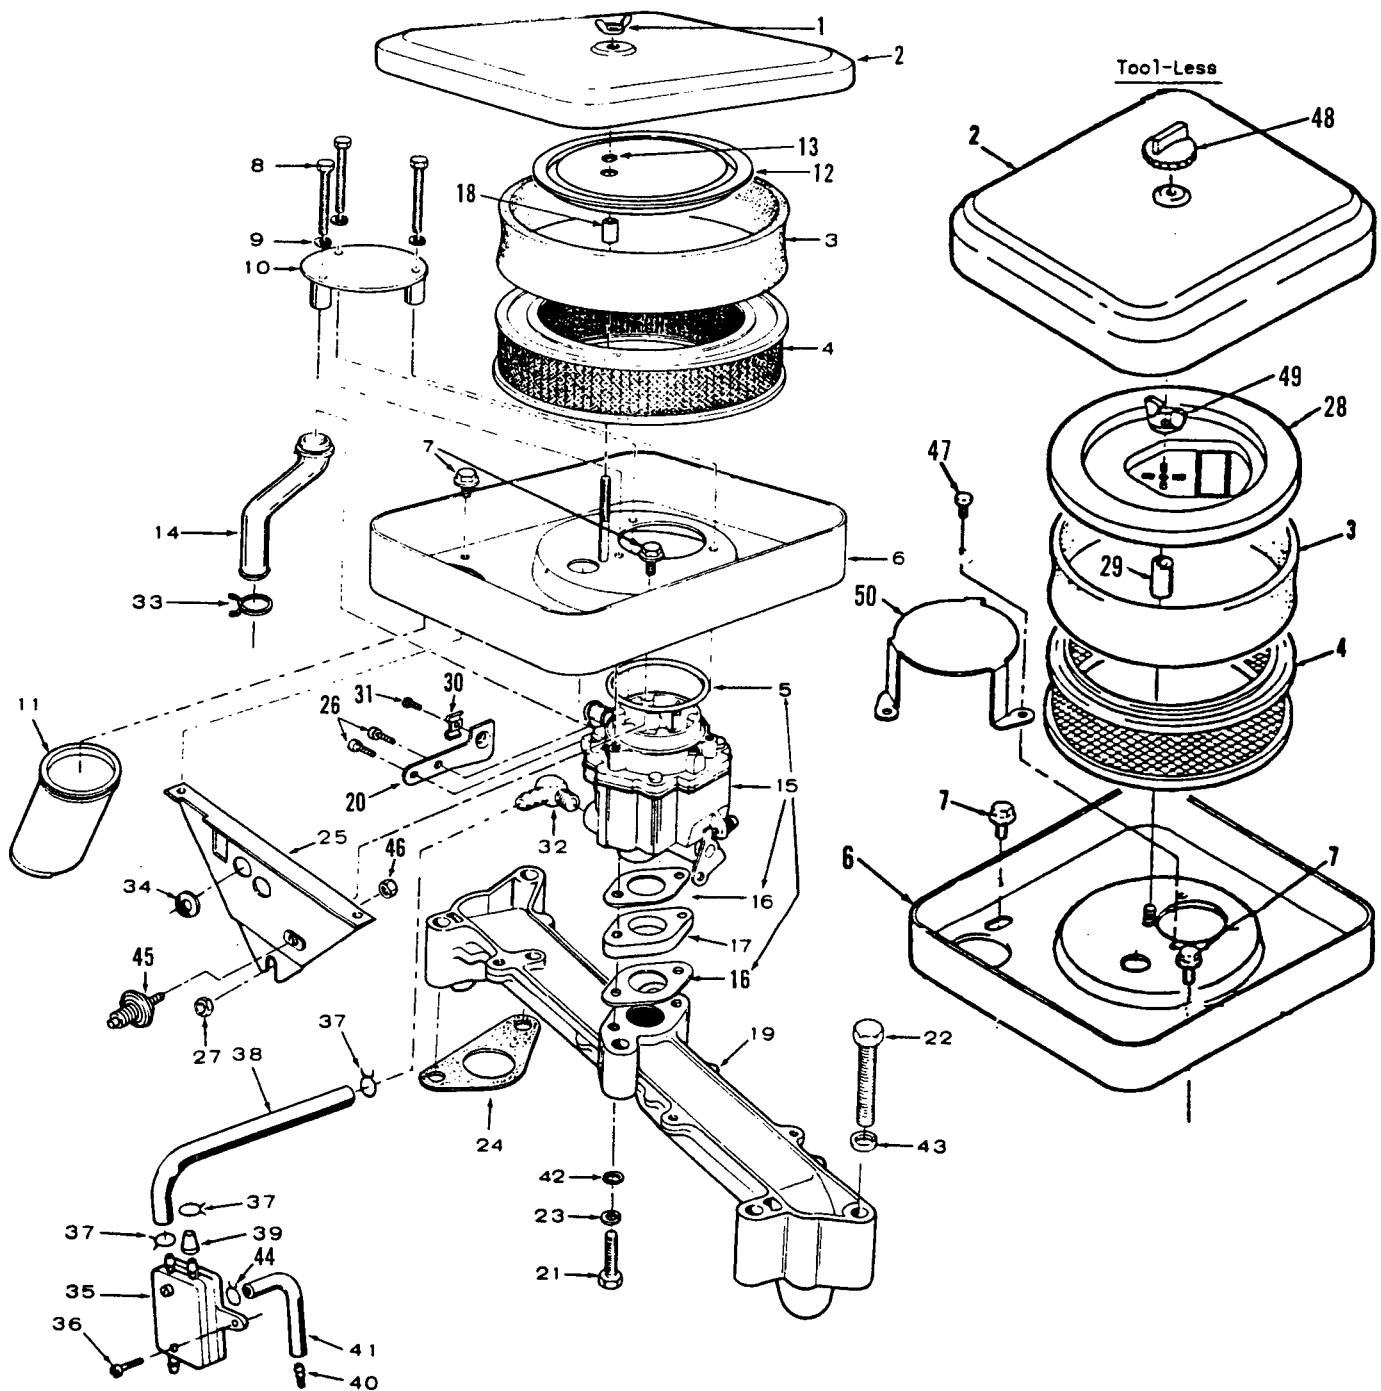

Fuel System


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	865-0020	1	Nut, Wing (1/4-20)	23	850-0045	2	Washer, Lock - Spring (5/16")
2	140-1663	1	Cover, Cleaner - Air	24	154-2219	2	Gasket, Manifold to Block
3	140-1496	1	Wrapper, Element - Air	25	140-1987	1	Support, Cleaner - Air
			Cleaner - Optional	26			Screw, Cap - Hex Washer Head
4			Element, Cleaner - Air		821-0002	2	Specs A Through E
	140-2522	1	Standard Capacity - XSL				(#10-32 x 1/4")
	140-2523	1	High Capacity		821-0004	2	Begin Spec F
5	509-0145	1	Seal, O-Ring				(#10-32 x 5/16")
6			Housing, Cleaner - Air	27	870-0399	1	Nut, Hex - Self-Lock (5/16-18)
	140-2625-51	1	Standard Capacity - XSL	28	140-2441	1	Cover, Inner - Tool-Less
	140-2625-52	1	High Capacity	29			Spacer, Air Cleaner
7	815-0261	2	Screw, Tapping - Hex Washer Head (1/4-20 x 1/2")		140-2536-01	1	Standard Capacity - XSL
8	815-0470	3	Screw, Machine - Hex Head (#10-32 x 1-1/2")		140-2536-02	1	High Capacity
9	526-0008	3	Washer, Flat (#10 Screw)	30	153-0514	2	Clip, Cable - Choke
10	145-0522	1	Plate, Deflector - Air	31	815-0359	1	Screw, Tapping - Hex Head (#10-32 x 7/8")
11	140-1712	1	Tube, Intake - Air	32	502-0313	1	Elbow, Hose (Spec A Through E)
12	140-1692	1	Cover, Element - Optional	33	503-0171	1	Clamp, Hose - Breather (11/16" Dia.)
13	870-0365	1	Nut, Self-Lock (1/4-20) Optional	34	508-0021	1	Grommet, Rubber (3/4" Hole)
14	123-1263	1	Tube, Breather - Crankcase	35			Pump, Fuel (Includes Hose Clamp and Fuel Cap)
15			Carburetor, Complete (See Separate Page for Components) (Includes Mounting Gasket)		149-1982	1	3 Open Ports
					149-2187-02	1	2 Open Ports
	146-0312	1	Spec A, B, C, D	36	815-0555	2	Screw, Tapping - Pan Head (#10-24 x 5/8")
	146-0398	1	Begin Spec E	37	503-0301	3	Clamp, Hose (7/16")
	146-0497	1	With Semi-Automatic Choke - Begin Spec F (Note: This carburetor can also be used on Specs A through G)	38	503-1199	1	Hose, Fuel (14")
16	154-0733	2	Gasket, Carburetor to Adapter	39	149-1321	1	Cap, Outlet - Fuel
17	145-0525	1	Adapter, Carburetor	40	502-0395	1	Connector, Hose - Fuel Pump Vacuum
18	301-0458	1	Spacer, Stud - Air Cleaner - Optional (1/8 x 1")	41	503-0707	1	Hose, Vacuum - Fuel Pump
19	154-2293	1	Manifold, Intake	42	526-0115	2	Washer, Flat (5/16" Screw)
20	153-0515	1	Bracket, Cable - Choke (Chrome-Plated)	43	850-0050	4	Washer, Lock - Spring (3/8")
21			Screw, Cap - Hex Head	44	503-0731	2	Clamp, Wire (1/2")
	800-0040	2	Specs A, B, C (5/16-18 x 3-3/4")	45	150-2091	1	Dashpot - Spec E Only
	800-0039	2	Begin Spec D (5/16-18 x 3-1/2")	46	868-0002	1	Nut, Hex - Jam (5/16-24)
22	800-0058	4	Screw, Cap - Hex Head (3/8-16 x 3")	47	815-0463	3	Screw, Slotted - Hex Washer Head (#10-32 x 3/8")
				48	140-2537	1	Knob (1/4-20)
				49	865-0029	1	Nut, Wing (1/4-20)
				50	145-0614	1	Plate, Air Deflector - High Capacity

Carburetor - Components Walbro

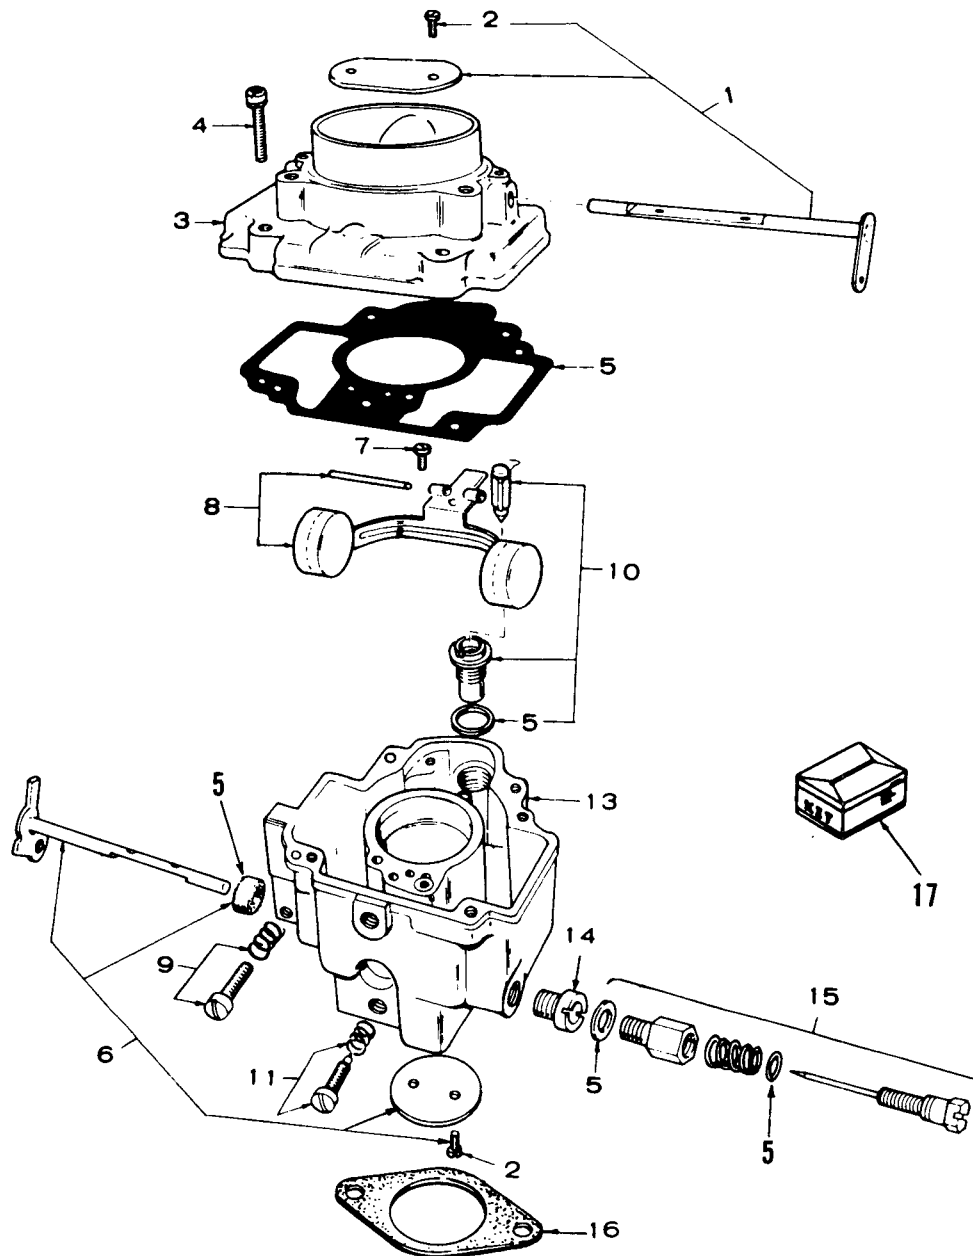


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Carburetor, Complete (Includes Mounting Gasket)	8	146-0262	1	Float Package
	146-0312	1	Spec A Through D	9	146-0261	1	Screw Package - Idle Speed Adjusting
	146-0398	1	Begin Spec E	10	146-0289	1	Valve and Seat Package
1	146-0260	1	Shaft Package, Choke	11	146-0209	1	Idle Needle Package
2	146-0142	4	Screw, Mounting - Valve	13		1	Body (Not Sold Separately)
3		1	Intake, Air (Not Sold Separately)	14		1	Jet, Power
4	146-0247	4	Screw, Body to Intake		146-0238	1	Spec A Through D
5	146-0220	1	Gasket Package - Carburetor		146-0510	1	Begin Spec E
6	146-0270	1	Shaft Package - Throttle	15	146-0282	1	Power Needle Package
7	146-0222	1	Screw, Pin - Lever	16	154-0733	1	Gasket, Carburetor Mounting
				17	146-0292	1	Kit, Repair

Carburetor - Components Nikki Spec F

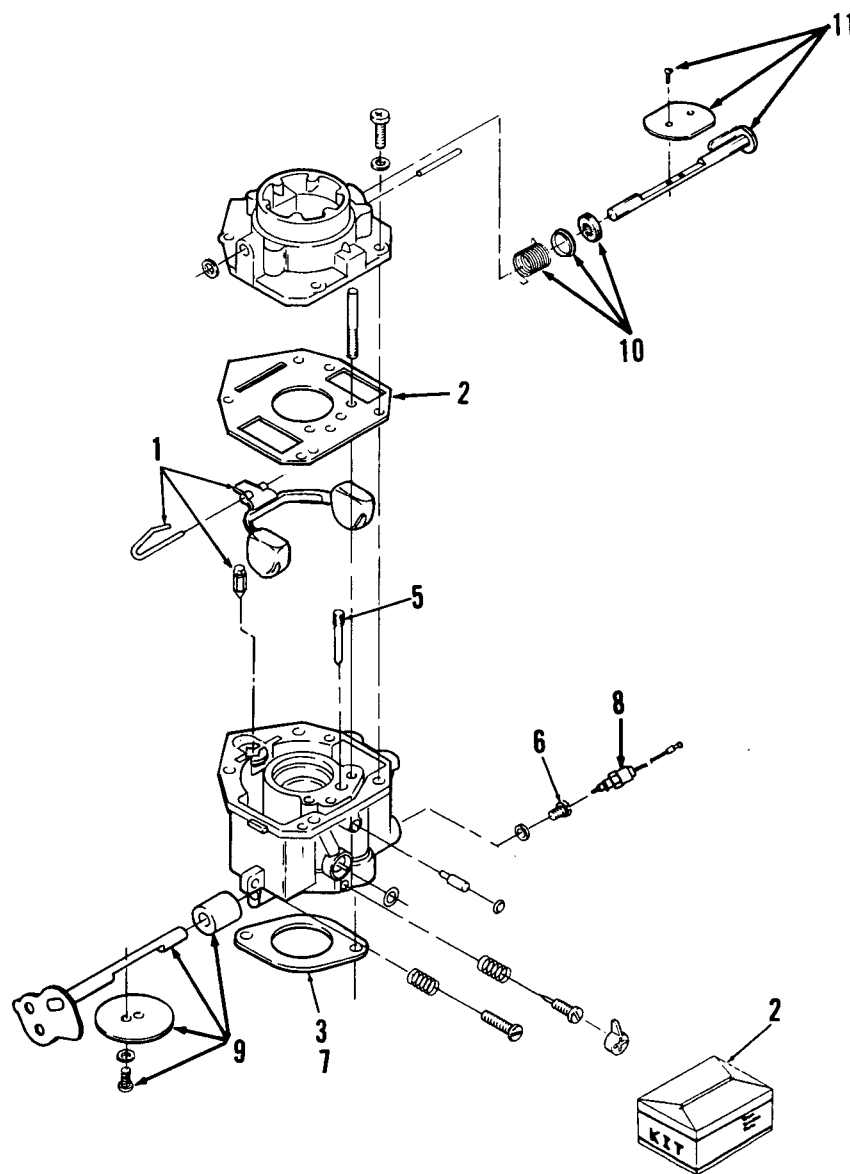


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Carburetor, Complete (Includes Mounting Gasket) Spec F	5	146-0426	1	Jet, Idle
	146-0431	1		6	146-0334	1	Jet, Power - Fixed
1	146-0437	1	Float Package (Includes Float, Pin and Valve)	7	145-0438	1	Gasket, Mounting
2	146-0500	1	Kit, Repair (Includes Screw and Plug Package, Gasket Package, Float Valve, Idle Adjust Needle and Spring, Mounting Gaskets, Idle Limit Cap)	8	146-0467	1	Solenoid, Fuel Cut-Off (Includes Gasket)
3	154-0733	2	Gasket, Carburetor Mounting	9	146-0505	1	Kit, Throttle Shaft
				10	146-0435	1	Kit, Choke Lever
				11	146-0433	1	Kit, Choke Shaft

Carburetor - Components
Nikki
Begin Spec G

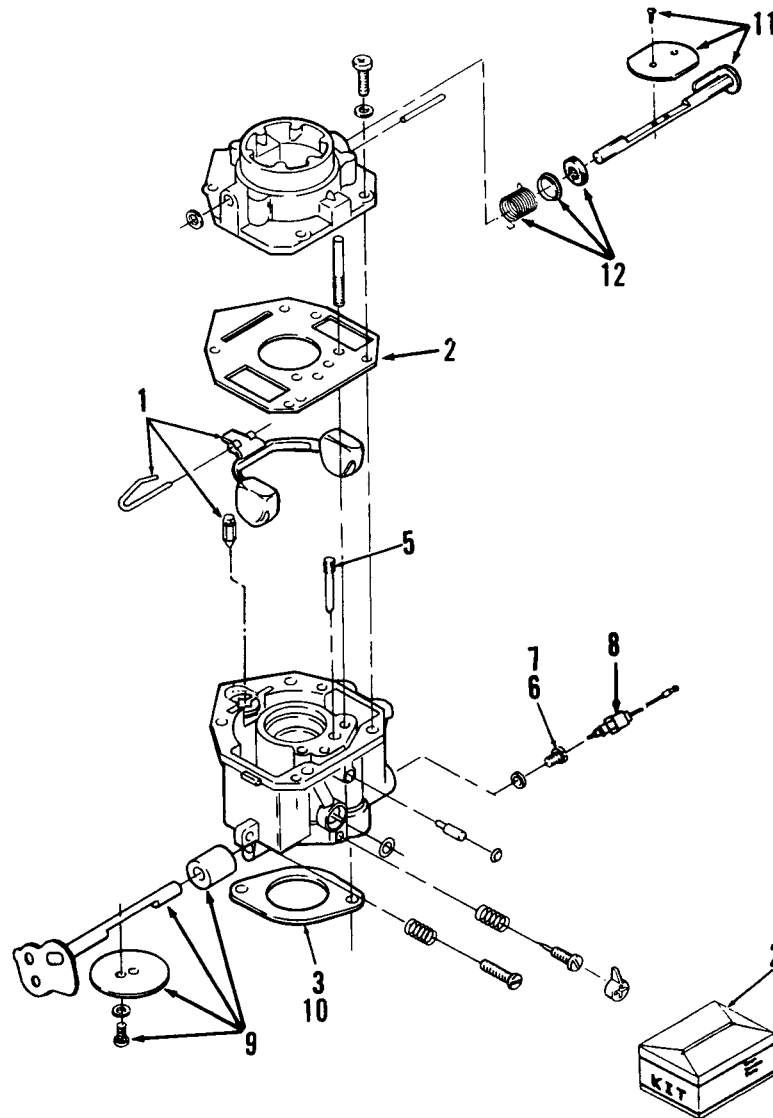


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Carburetor, Complete (Includes Mounting Gasket)	5	146-0426	1	Jet, Idle
	146-0497	1	Begin Spec G	6	146-0501	1	Jet, Power (Kit)
1	146-0437	1	Float Package (Includes Float, Pin and Valve)	7	146-0510	1	Jet, Fixed - High Altitude
2	146-0500	1	Kit, Repair (Includes Screw and Plug Package, Gasket Package, Float Valve, Idle Adjust Needle and Spring, Mounting Gaskets, Idle Limit Cap)	8	146-0502	1	Solenoid, Fuel Cut-Off (Includes Gasket)
3	154-0733	2	Gasket, Carburetor Mounting	9	146-0505	1	Kit, Throttle Shaft
				10	145-0438	1	Gasket, Mounting
				11	146-0433	1	Kit, Choke Shaft
				12	146-0435	1	Kit, Choke Lever

Ignition System Specs A Through E

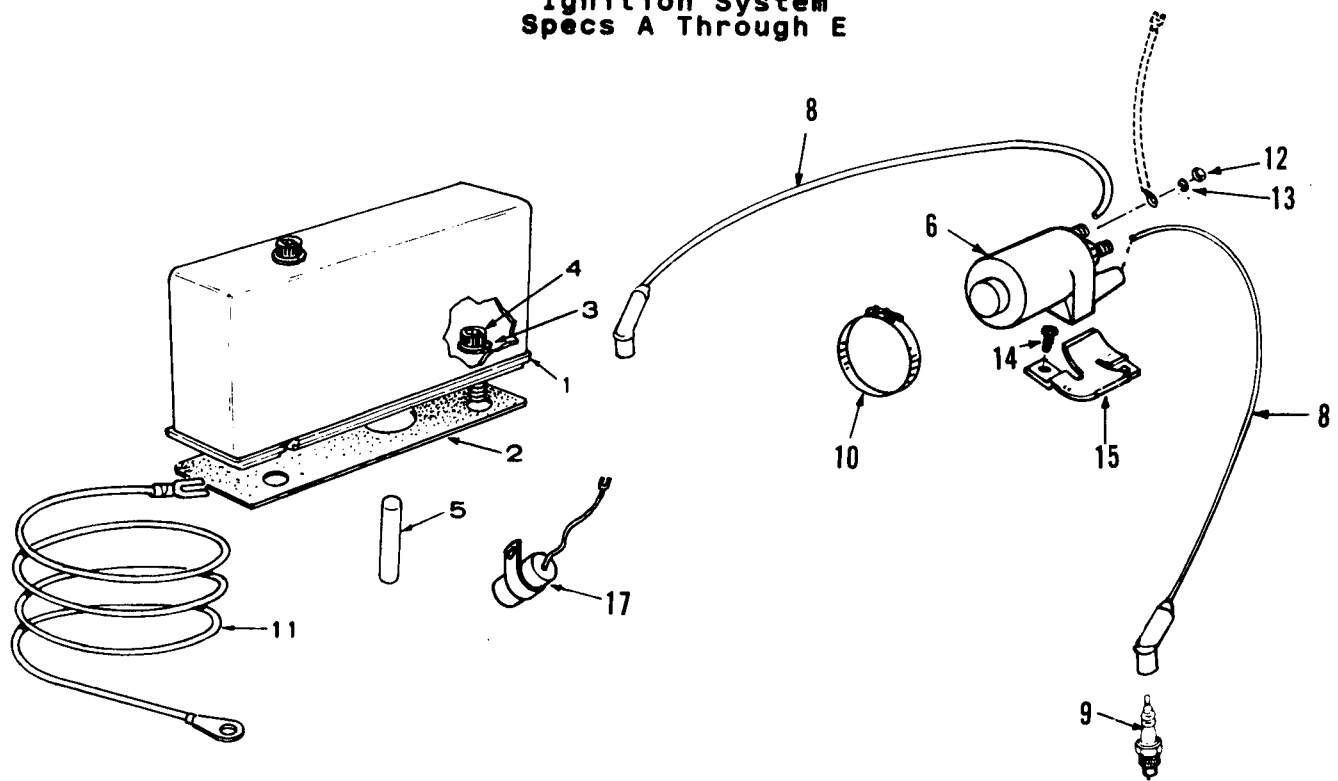

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	160-1303	1	Box, Breaker (See Separate Page for Components) (Includes Mounting Gasket)	9	167-0291	2	Plug, Spark Specs A Through D
2	160-1368	1	Gasket, Breaker Box Mounting		167-0263	2	Begin Spec E
3	850-0040	2	Washer, Lock - Spring (1/4")	10	503-0311	1	Clamp, Coil (2-1/8" Dia.)
4	802-0034	2	Screw, Head - Socket (1/4-20 x 3/4")	11	336-2378	1	Lead, Breaker Box to Coil
5	160-1151	1	Plunger, Points - Breaker	12	166-0554	2	Nut, Hex (Special)
6	166-0772	1	Coil, Ignition (Includes Nuts and Washers)	13	850-2005	2	Washer, Lock - Spring (Metric)
8	167-1602	2	Cable, Plug - Spark	14	815-0261	2	Screw, Tapping - Hex Washer Head (1/4-20 x 1/2")
				15	166-0741	1	Bracket, Coil - Ignition
				17	312-0256	1	Condenser, Mounted Outside Breaker Box (Note: See Breaker Box Specs A through E for Condenser Mounted Inside Breaker Box)

Electronic Ignition Begin Spec F

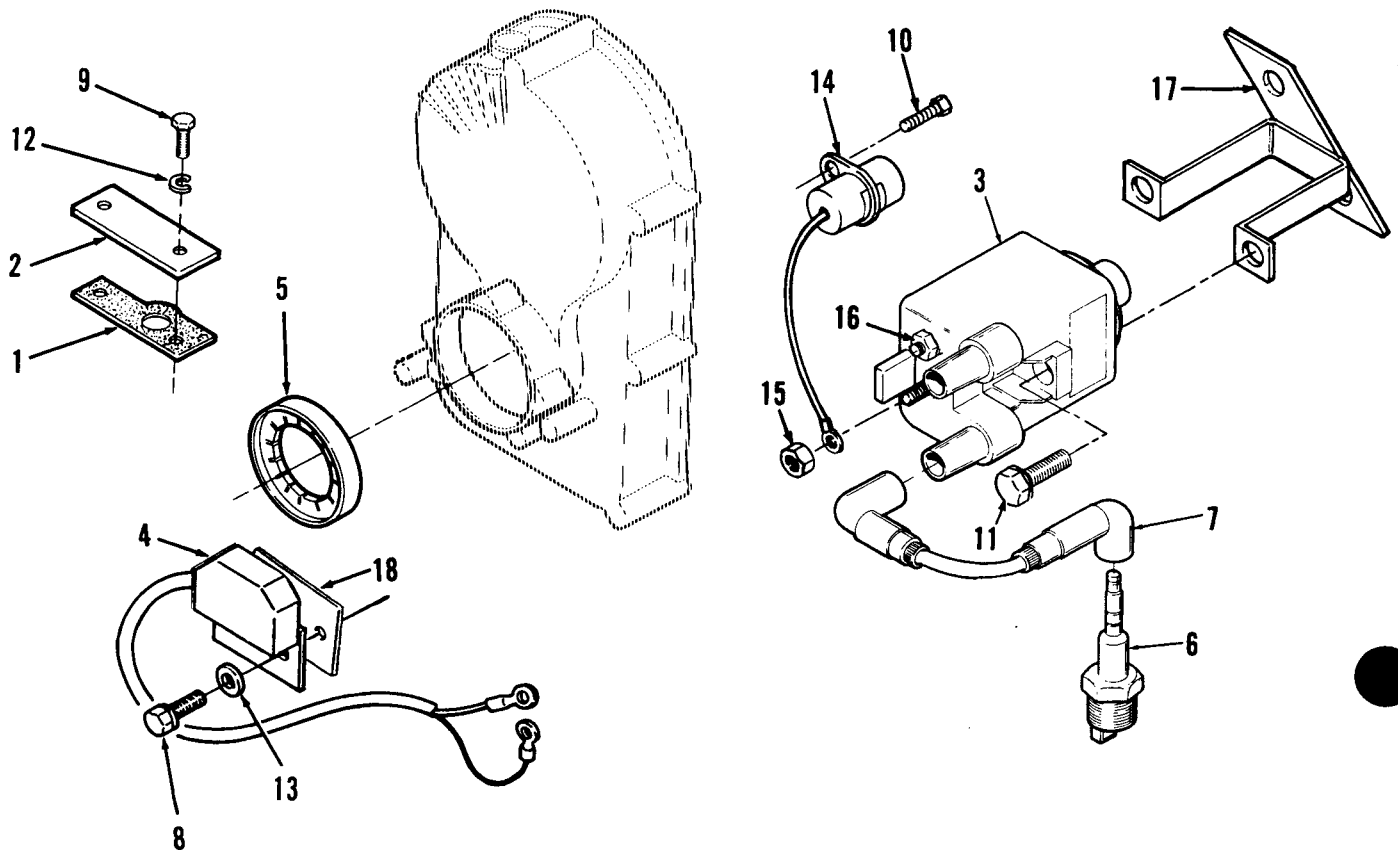


ES-1668

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	160-1150	1	Gasket, Plate
2	160-1345	1	Plate, Cover - Ignition Plunger
3	166-0761	1	Coil, Ignition - Battery
4	166-0785	1	Control, Ignition
5	166-0767	1	Rotor, Ignition
6	167-0263	2	Plug, Spark
7			Cable, Plug - Spark
	167-1615-01	1	9" Long
	167-1615-04	1	18" Long
8	815-0340	2	Screw, Hex Washer Head (#10-32 x 3/8")
9	800-0004	2	Screw, Cap - Hex Head (1/4-20 x 5/8")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
10	815-0178	1	Screw, Hex Head (#10-32 x 5/8")
11	815-0650	2	Screw, Hex Washer Head (1/4-20 x 1")
12	850-0040	2	Washer, Lock (1/4")
13	854-0010	2	Washer, Lock - Int. Tooth (#10)
14	312-0255	1	Capacitor (300 VDC)
15	166-0770	1	Nut, Flange - Hex (M4, Pos. Terminal)
16	166-0771	1	Nut, Flange - Hex (M5, Neg. Terminal)
17	166-0775	1	Bracket, Coil - Ignition
18	166-0786	1	Insulator, Module - Ignition

Breaker Box Specs A Through E

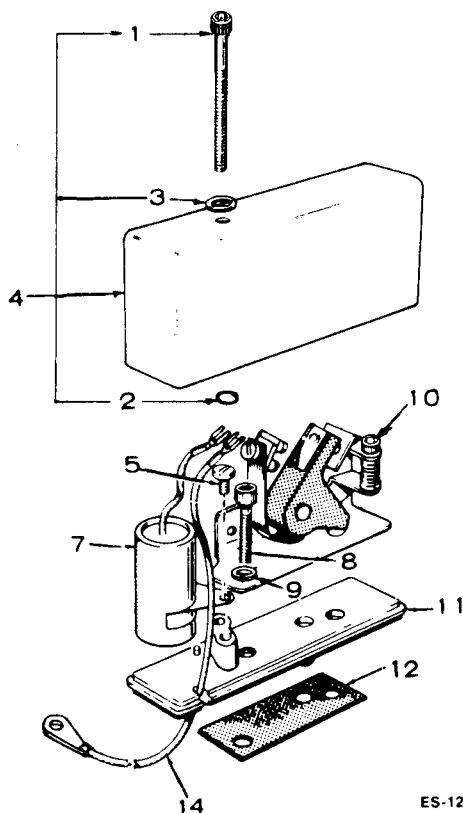


ES-1217

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	160-1303	1	Breaker Box (Includes Parts Marked *)	8	802-0034	2	*Screw, Cap - Socket Head (1/4-20 x 3/4")
1	802-0022	1	*Screw, Cap - Hex Socket (#10-24 x 1-1/2")	9	850-0038	2	*Washer, Lock (1/4")
2	509-0065	1	*Retainer (O-Ring)	10	160-1183	1	*Point Set, Breaker
3	526-0008	1	*Washer, Flat (#10 Screw)	11	160-1219	1	*Base, Breaker
4	160-1285	1	*Cover, Breaker Box	12	160-1150	1	*Gasket, Breaker Box
5	815-0358	1	*Screw, Cap - Slotted (#8-32 x 5/16")	14	336-2378	1	Lead, Breaker Box to Coil
7	312-0246	1	*Condenser - Mounted Inside Breaker Box (Note: See Ignition System Specs A through E for Condenser Mounted Outside the Breaker Box)		160-1311	1	Tune Up Kit (Includes Points and Condenser)

* - Parts Included in 160-1303 Breaker Box.


Starter - Solenoid Shift
Begin Spec G

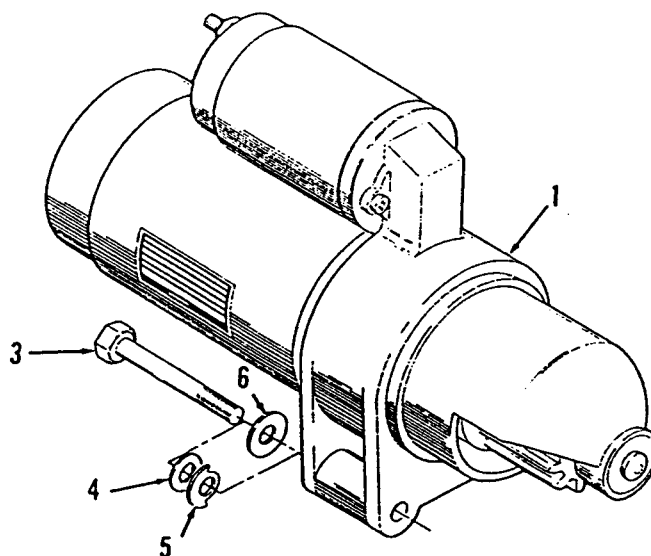

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1808-01	1	Starter - Solenoid Shift (See Option 11 for Components)	4	854-0017	1	Washer, Lock - IT (5/16")
3	815-0570	2	Screw, Cap - Hex Washer Head (5/16-18 x 1")	5	526-0337	1	Washer (Special) - Outside Mounting Bolt
				6	526-0122	1	Washer, Flat (5/16" Screw) - Inside Mounting Bolt

NOTE: Onan Part Number Stamped on the Starter
Nameplate for Identification.

Starter - Components Begin Spec B-F

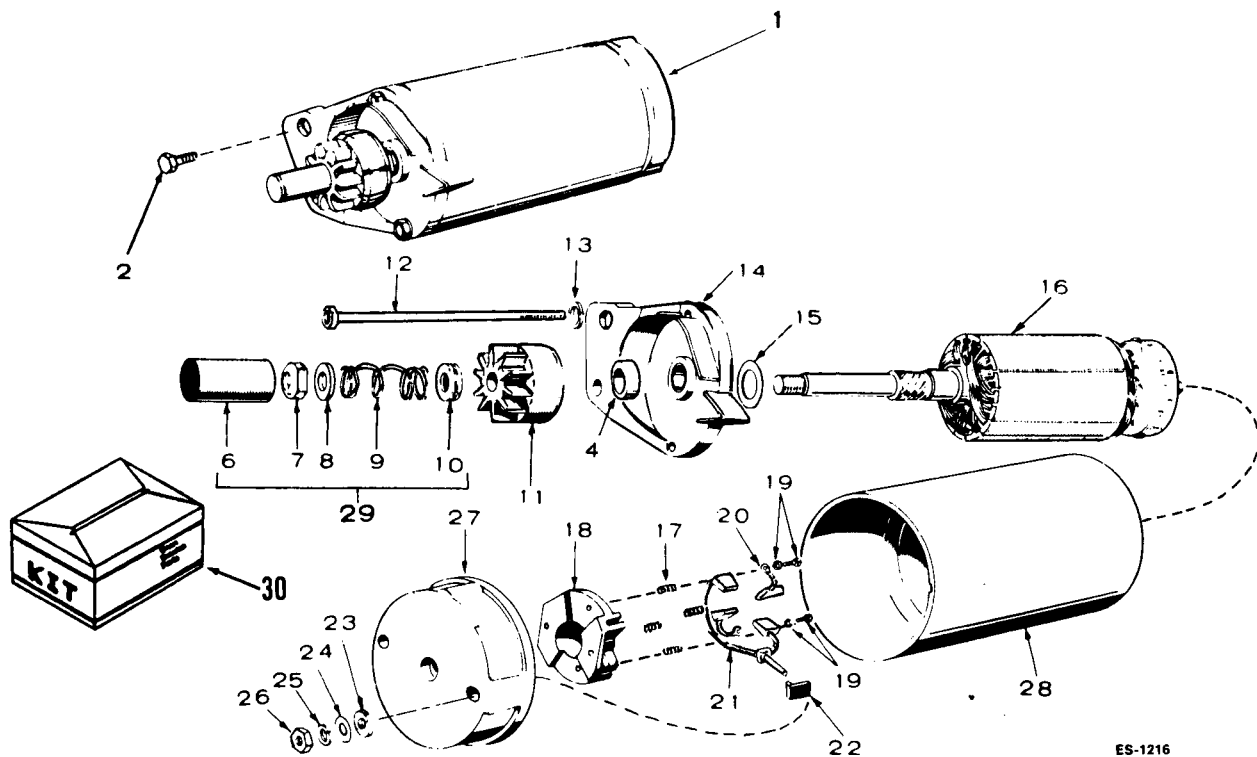

ES-1216

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1587	1	Motor, Starter (Complete)	20	§	2	†*Brush, Ground
2	815-0570	2	Screw, Cap - Hex Washer Head (5/16-18 x 1")	21	§	1	†*Stud and Brush, Input
4	191-1534	1	Cap, Dust - Drive End	22	§	1	†Bushing, Insulation - Input Stud
6	§	1	#Cover, Dust	23	§	1	†Washer, Insulation - Input Stud
7	§	1	#Nut, Stop	24	§	1	†Washer, Flat - Input Stud
8	§	1	#Washer, Stop Nut	25	§	1	†Washer, Lock - Input Stud
9	§	1	#Spring, Anti-drift	26	§	1	†Nut, Securing - Input Stud
10	§	1	#Spacer, Cover - Dust	27	191-1532	1	Cap, Commutator (Includes Parts Marked †)
11	191-1156	1	Drive	28	§	1	Housing, Starter Motor
12	191-1157	2	Screw, Hex Cap - Special	29	191-1359	1	Dust Cover (Includes Parts Marked #)
13	850-0040	2	Washer, Lock (1/4")	30	191-1533	1	Kit, Repair - Brush, Spring and Stud (Includes Parts Marked *)
14	191-1597	1	Cap, Drive End				
15	191-1038	1	Washer, Armature Thrust				
16	191-1154	1	Armature				
17	§	4	†*Spring, Brush				
18	§	1	†Brush Holder				
19	§	2	†Screw and Lockwasher				


† - Included in the 191-1532 Cap.

* - Included in the 191-1533 Brush, Spring and Stud Kit.

- Included in the 191-1359 Dust Cover.

§ - Not Sold Separately.


Starter - Components Spec A

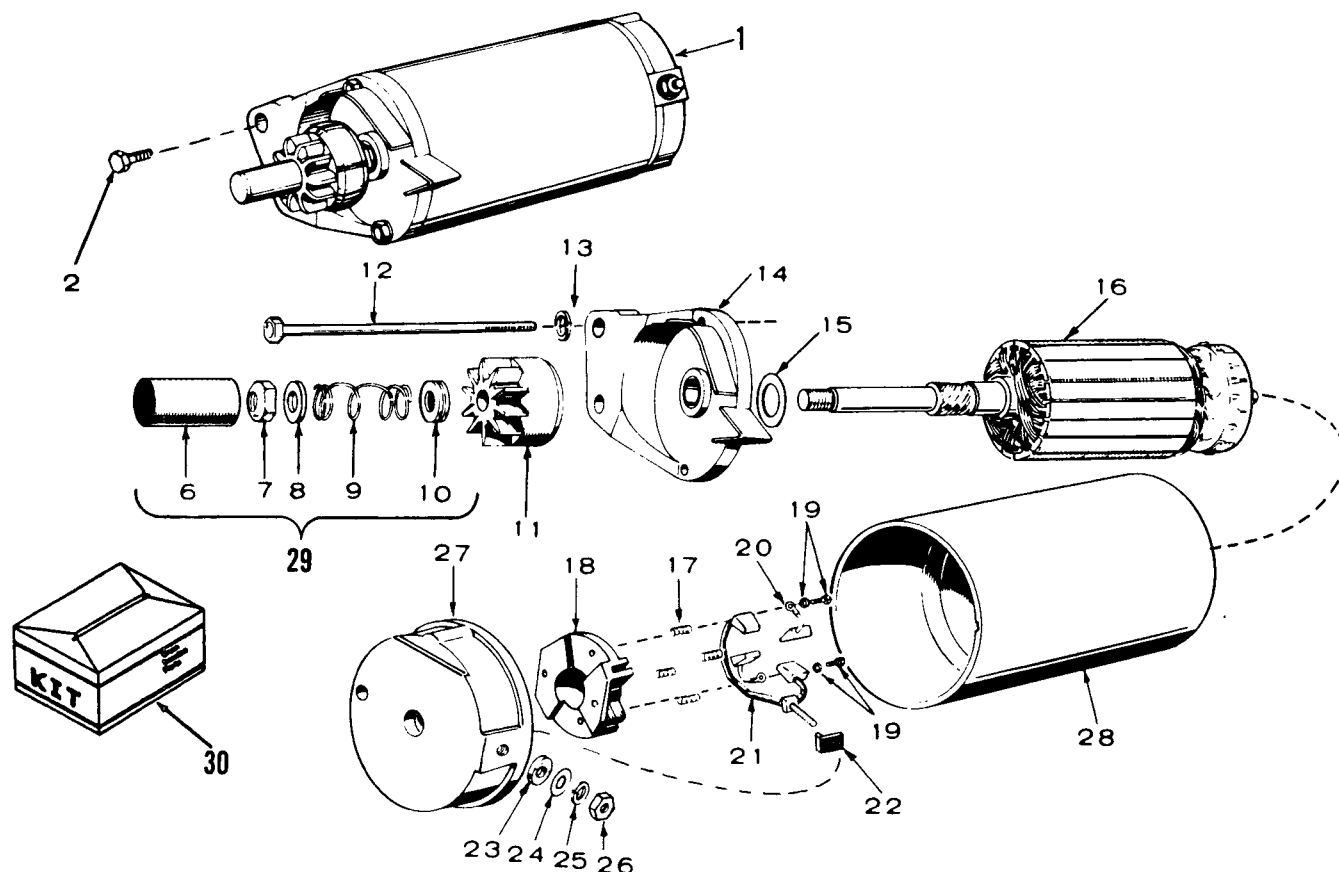

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1294	1	Motor, Starter (Complete)	21	§	1	†*Stud and Brush, Input
2	815-0570	2	Screw, Cap - Hex Washer Head (5/16-18 x 1")	22	§	1	†Bushing, Insulation - Input Stud
6	§	1	#Cover, Dust	23	§	1	†Washer, Insulation - Input Stud
7	§	1	#Nut, Stop	24	§	1	†Washer, Flat - Input Stud
8	§	1	#Washer, Stop Nut	25	§	1	†Washer, Lock - Input Stud
9	§	1	#Spring, Anti-drift	26	§	1	†Nut, Securing - Input Stud
10	§	1	#Spacer, Dust Cover	27	191-1155	1	Cap, Commutator (Includes Parts Marked †)
11	191-1156	1	Drive	28	§	1	Housing, Motor - Starter
12	191-1157	2	Screw, Hex Cap	29	191-1359	1	Dust Cover (Includes Parts Marked #)
13	850-0040	2	Washer, Lock (1/4")	30	191-1222	1	Kit, Repair - Brush, Spring and Stud (Includes Parts Marked *)
14	191-1597	1	Cap, Drive End				
15	191-1038	1	Washer, Armature Thrust				
16	191-1154	1	Armature				
17	§	4	†*Spring, Brush				
18	§	1	†Brush Holder				
19	§	2	†Screw and Lockwasher				
20	§	2	†*Brush, Ground				


† - Included in the 191-1155 Cap.
 * - Included in the 191-1222 Brush, Spring and Stud Kit.
 # - Included in the 191-1359 Dust Cover.
 § - Not Sold Separately.

Air Housing

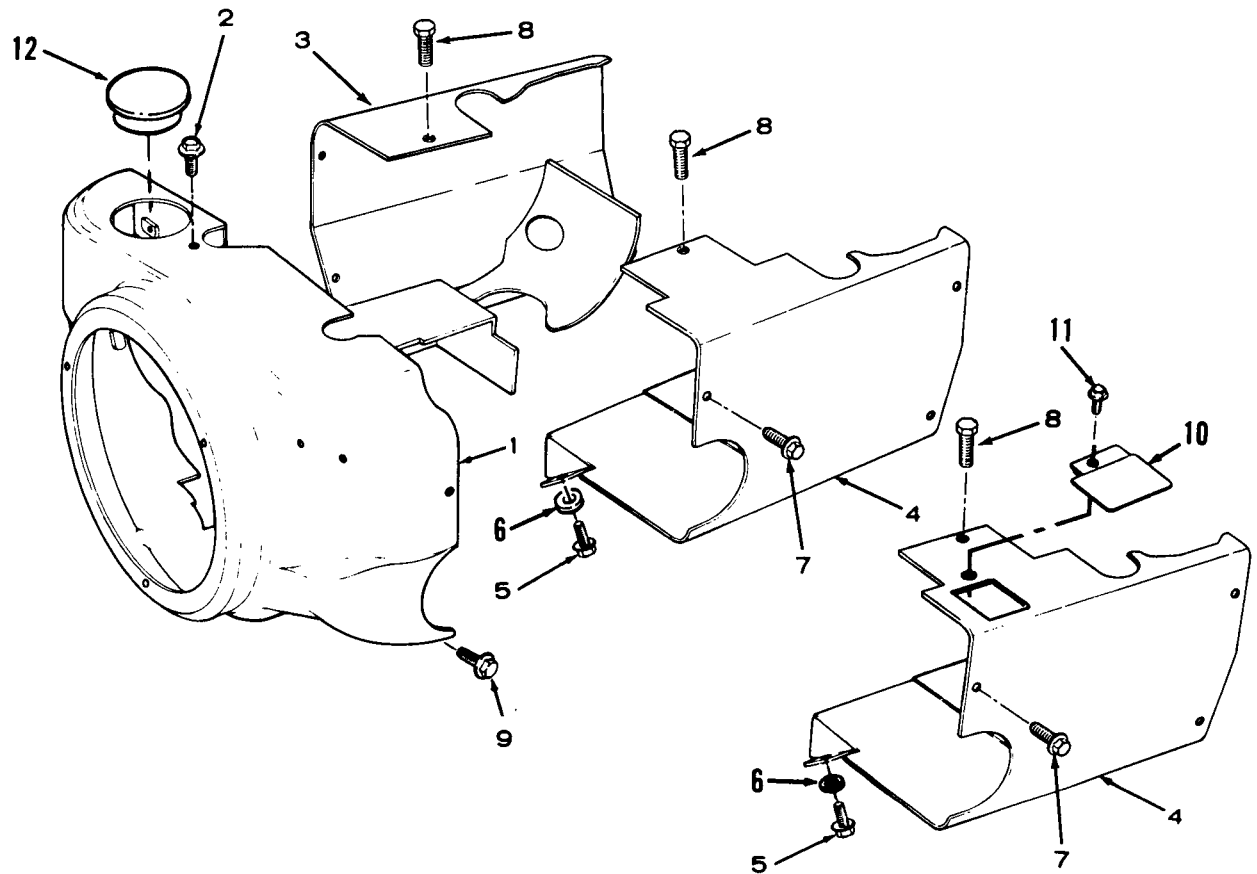

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Housing, Blower	5	815-0290	2	Screw, Cap - Hex Head (1/4-20 x 5/8")
	134-4816-01	1	Front Pull Governor, Std. Filter	6	526-0021	2	Washer, Flat (1/4" Screw)
	134-4816-02	1	Side Pull Governor, Std. Filter	7	821-0010	2	Screw, Cap - Hex Washer Head (1/4-20 x 1/2")
	134-4816-03	1	Side Pull Governor, Remote Filter	8	815-0508	2	Screw, Hex Head - Thd Form - Tap-Tite (5/16-18 x 3/4")
	134-4816-04	1	Front Pull Governor, Remote Filter	9	821-0010	2	Screw, Cap - Hex Head (1/4-20 x 1/2")
2	800-0003	1	Screw, Cap - Hex Head (1/4-20 x 1/2")	10	134-3626	1	Plate, Cover - Voltage Regulator
3	134-4668-50	1	Housing, Air - Cylinder - Left Side - Painted	11	821-0008	1	Screw, Cap - Hex Washer Head (1/4-20 x 5/16")
4			Housing, Air - Cylinder - Right Side	12	517-0151	1	Plug, Blower Housing
	134-4814-01	1	Engines Without Voltage Regulator				
	134-4814-01	1	Engines With Voltage Regulator - With Oil Filter - Begin Spec G				
	134-4814-02	1	Engines With Voltage Regulator - With Remote Oil Filter - Begin Spec G				

Exhaust System

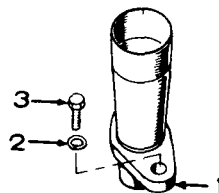


EXS-1018

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-1484	2	Adapter, Exhaust	3	800-0512	4	Screw, Cap - Hex Head (5/16-18 x 1")
2	850-0045	4	Lock, Spring (5/16") Spec A-F	4	154-2747	2	Gasket, Exhaust
	740-1006	4	Flat (5/16" Screw) Begin Spec G				

Optional Equipment Section

This section contains illustrated parts listing of factory installed options for these industrial engines. Options may not be applicable to all models; for field conversions additional parts are usually required. Optional parts listed in this section are in addition or in place of those shown in the standard engine parts section.

Option 1
Flywheel Alternator - 15 Ampere (Phelon)
Spec A-F

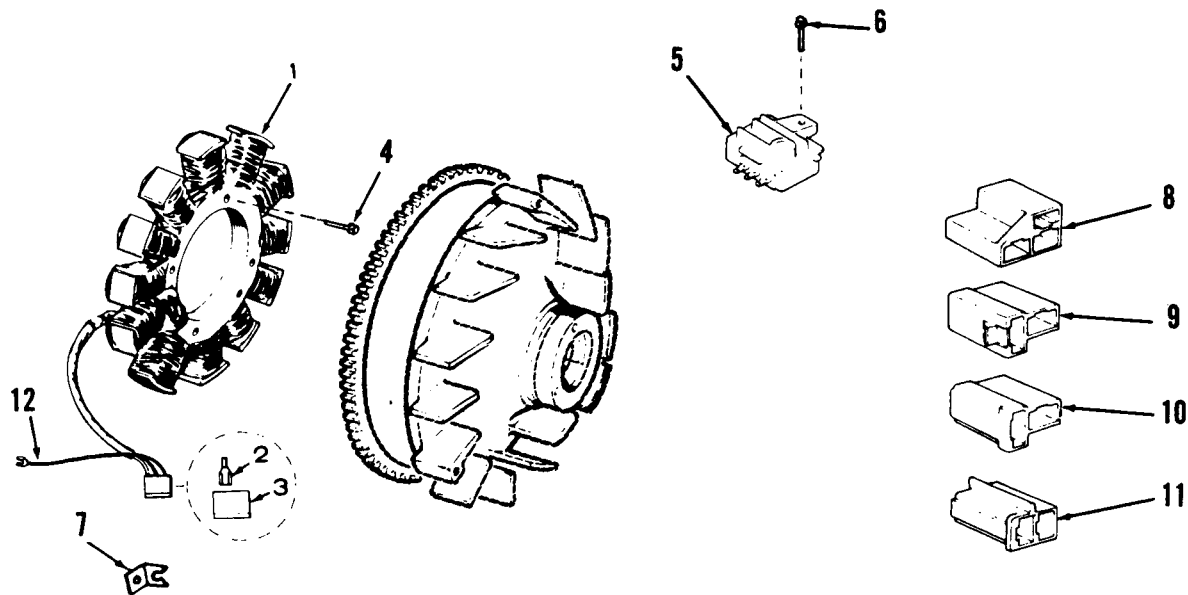


ES-1059

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1256	1	Stator (Includes Parts Marked *)	6	821-0007	1	Screw, Cap - Hex Washer Head (1/4-20 x 1/4")
2	332-2423	2	Terminal, Stator Leads	7	167-0188	1	Clip, Cable
3	323-1257	2	*Body, Terminal Connector - Kit (Includes Terminals)	8	323-0853	1	*Body, Terminal Connector
4	815-0593	3	Screw, Machine - Hex Head - Self-Lock (#10-32 x 1-3/8")	9	323-1085	1	*Body, Terminal Connector
5	191-1206	1	Regulator, Voltage	10	323-0892	1	*Body, Terminal Connector
				11	323-0890	1	*Body, Terminal Connector
				12	336-4542	1	Lead, Electrical

* - Parts Included in 191-1256 Stator Kit.


Option 2
Flywheel Alternator - 20 and 35 Ampere (Phelon)

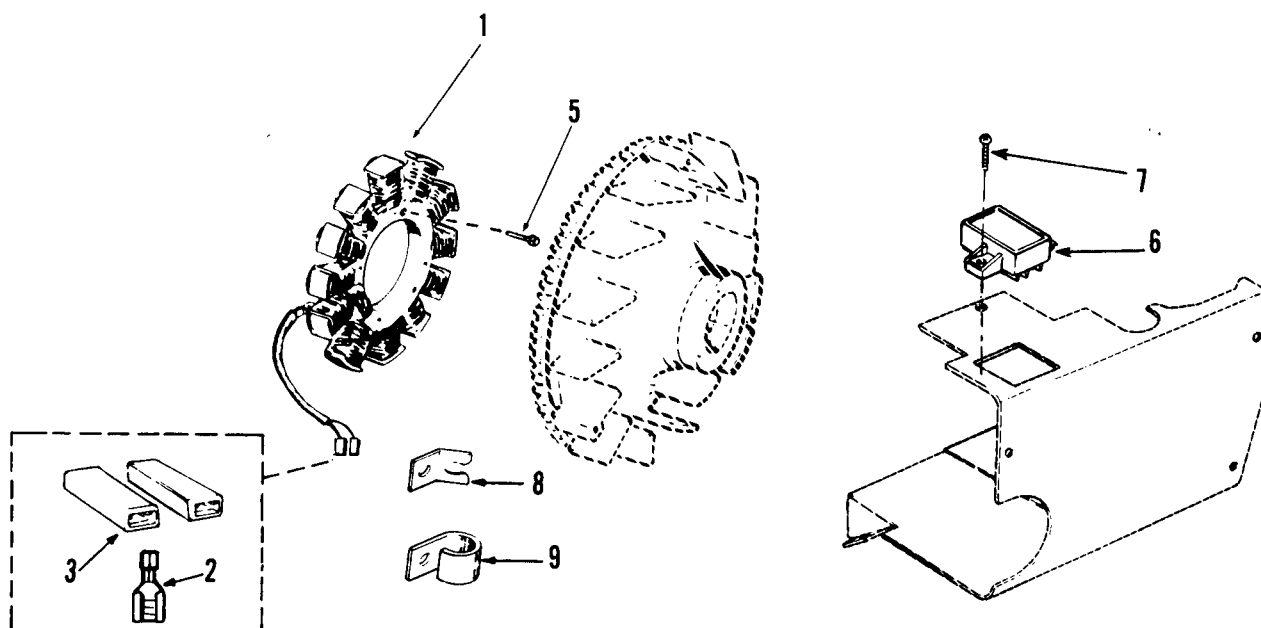

ES-1353

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Stator (Includes Terminals and Connector Bodies)	6			Regulator, Voltage
	191-1256	1	Begin Spec G (20 Amp)		191-1748	1	20 Ampere
	191-1276	1	Begin Spec G (35 Amp)		191-1847	1	35 Ampere
2	332-2423	3	Terminal, Stator Leads	7	821-0007	1	Screw, Cap - Hex Washer Head (1/4-20 x 1/4")
3	323-1257	2	Body, Terminal Connector - Kit (Includes Terminals)	8	167-0188	1	Clip, Cable
5	815-0470	3	Screw, Machine - Hex Head - Self-Lock (#10-32 x 1-1/2")	9	332-2319	1	Clamp, Wire - Alternator Leads (5/16" Dia.)


Option 3
Governor Control - Variable Speed
(Side Pull)

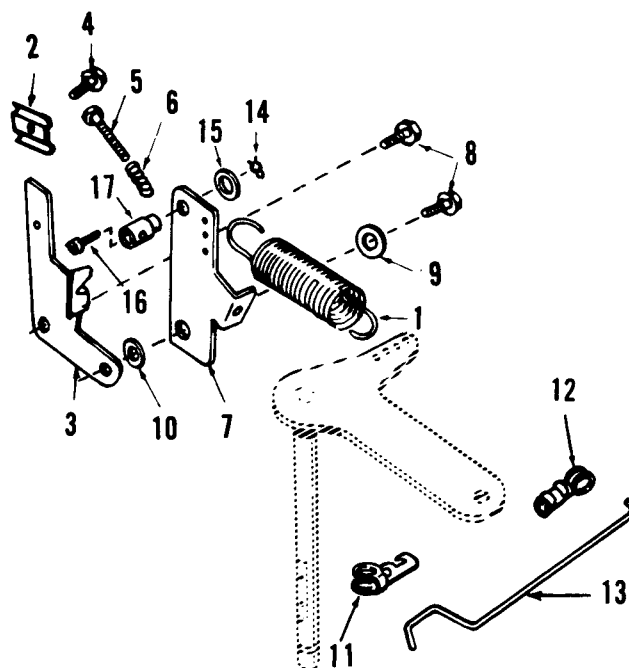

FS-1274

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-1214	1	Spring, Governor	9	526-0021	2	Washer, Flat (1/4" Screw)
2	153-0514	1	Clamp, Cable	10	150-1269	1	Bushing, Arm - Control
3	150-1952	1	Bracket, Cable	11	518-0406	1	Clip, Retaining - Control Rod to Governor Shaft
4	815-0359	1	Screw, Tapping - Hex Head (#10-32 x 7/8")	12	518-0004	1	Clip, Retaining - Control Rod to Carburetor
5	815-0563	1	Screw, Tapping - Hex Head (#6-32 x 1-3/8")	13	150-2417-02	1	Rod, Governor Control - Zinc Plated
6	150-1398	1	Spring, Idle Setting	14	516-0059	1	Pin, Cotter
7	150-1832	1	Arm, Governor Control Use With Swivel	15	526-0006	1	Washer, Flat (#12 Screw)
	150-1953	1	Use Without Swivel	16	815-0104	1	Screw, Machine - Fillister Head (#8-32 x 5/16")
8	815-0436	2	Screw, Cap - Hex Washer Head (1/4-20 x 1/2")	17	152-0155	1	Swivel, Cable Holding


Option 4
Governor Control - Variable Speed
(Front Pull)

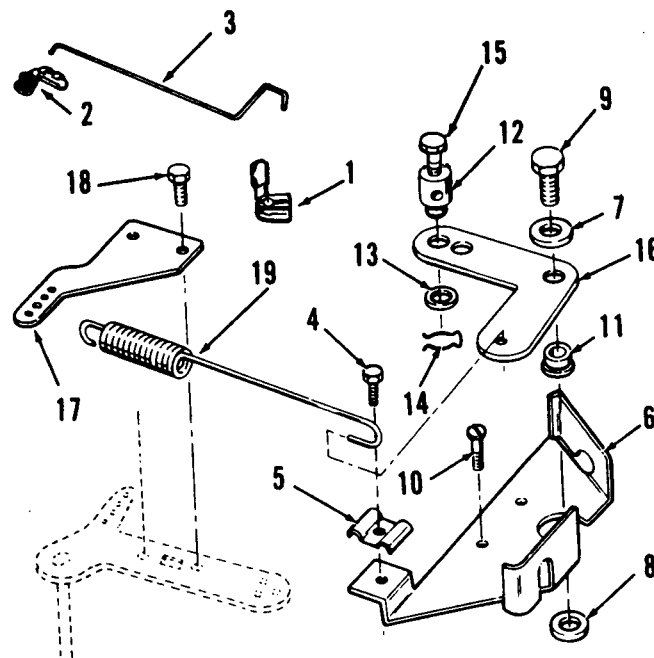

FS-1138

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	518-0406	1	Clip, Retaining - Control Rod to Governor Arm	10	815-0439	3	Screw, Tapping - Hex Washer Head (8-15 x 1/2")
2	518-0004	1	Clip, Retaining - Control Rod to Carburetor	11	150-1727	1	Bushing, Control - Governor
3	150-2417-02	1	Rod, Control - Zinc Plated	12	152-0155	1	Swivel, Throttle Lever
4	815-0359	1	Screw, Tapping - Hex Head (#10-32 x 7/8")	13	526-0006	1	Washer, Flat (#12 Screw)
5	153-0514	1	Clamp, Cable - Throttle	14	516-0059	1	Pin, Cotter
6	150-1726	1	Bracket, Mounting - Governor Control	15	815-0693	1	Screw, Machine - Hex Head (#8-32 x 5/16")
7	526-0021	1	Washer, Flat (1/4" Screw)	16	150-1366	1	Link, Control - Governor
8	850-0040	1	Washer, Lock - Spring (1/4")	17	150-1754	1	Adapter, Arm - Governor
9	800-0007	1	Screw, Cap - Hex Head (1/4-20 x 1")	18	815-0181	2	Screw, Tapping - Hex Head w/ET (#10-32 x 1/2")
				19	150-1755	1	Spring, Governor


Option 5
Fuel Tank (Side Mounted)

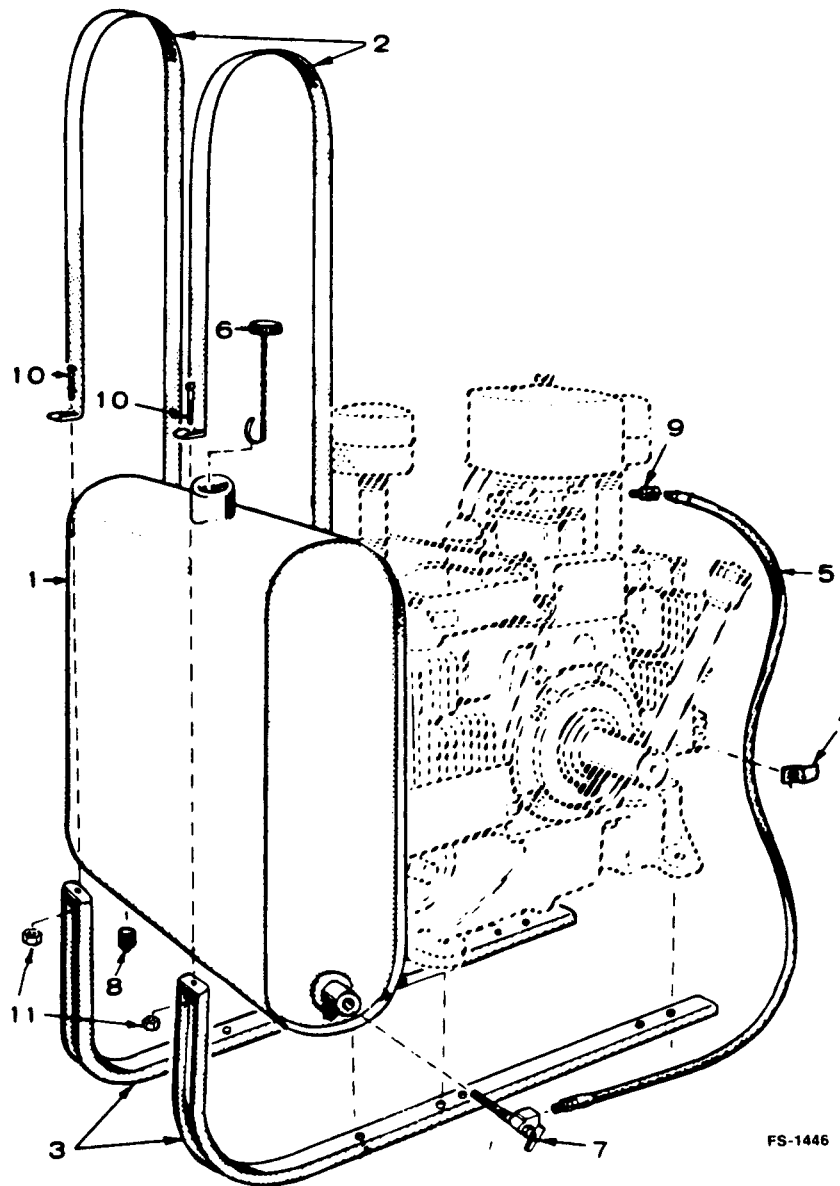

FS-1446

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	159-0597	1	Kit, Fuel Tank	7	504-0013	1	Valve, Shut-off
1	159-0981	1	Tank, Fuel (Less Cap)	8	505-0057	1	Plug, Drain - Tank
2	159-0596	2	Strap, Fuel Tank	9	502-0020	1	Elbow, Carburetor Inlet
3	159-0595	2	Bracket, Fuel Tank	10	813-0108	2	Screw, Machine - Round Head (#10-32 x 1-1/2")
4	134-0599	1	Clip, Line - Fuel	11	870-0053	2	Nut, Hex (#10-32)
5	501-0008	1	Line, Fuel				
6	159-0020	1	Cap, Fuel Tank				

Option 6 Fuel Line Filter

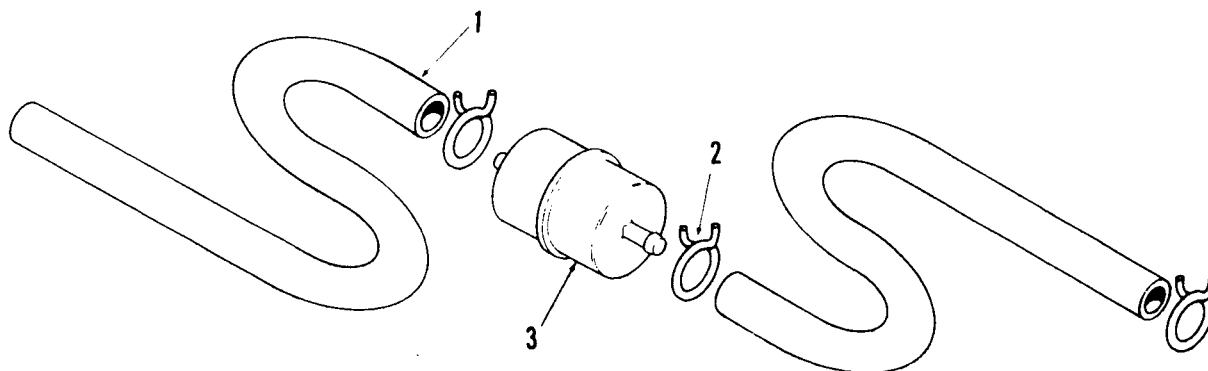


FS-1522-1

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-1016	2	Hose (1/4" ID x 7/16" OD x 12" Long)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	503-0731	3	Clamp, Hose (7/16")
3	149-2206-01	1	Filter, Fuel

Option 7
Remote Air Cleaner Adapter

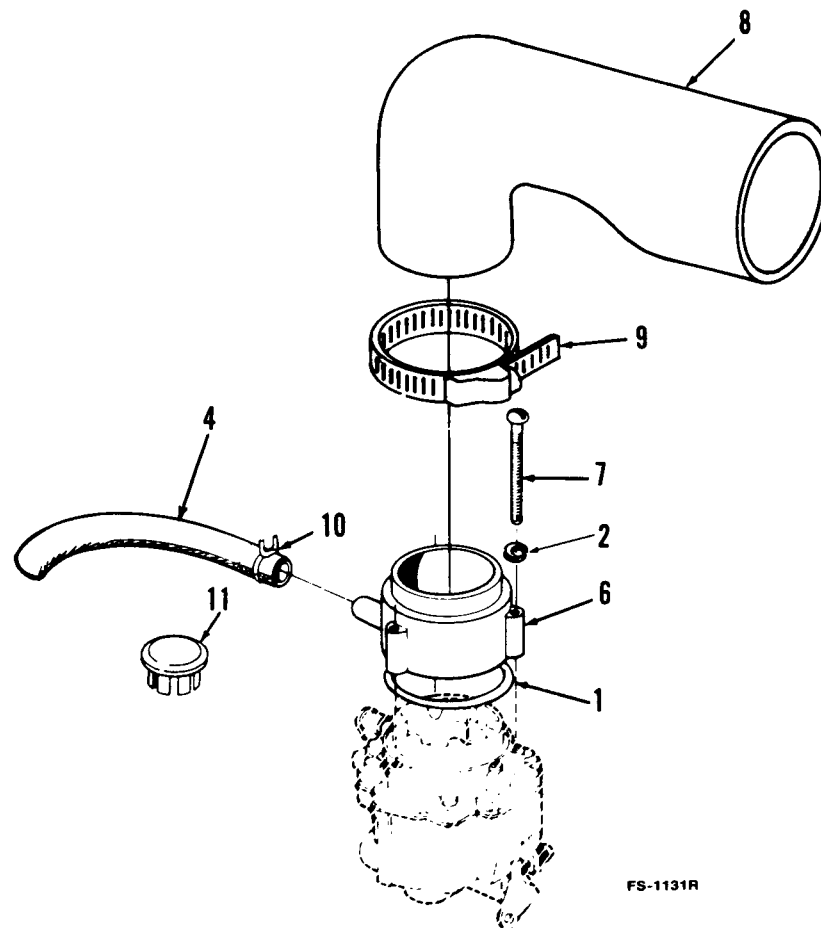


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	509-0145	1	Seal, O-Ring	8	140-1428	1	Elbow, Intake - Air
2	850-0030	3	Washer, Lock - Spring (#10)	9	503-0274	1	Clamp, Hose - Air Intake (2-3/8" Dia.)
4	503-1396	1	Tube, Breather - Crankcase	10	503-0171	1	Clamp, Hose (11/16" Dia.)
6	140-1714	1	Adapter, Intake - Carburetor Air	11	517-0151	1	Plug, Dot Button - Blower Housing Air Hole
7	813-0106	3	Screw, Machine - Round Head (#10-32 x 1-1/8")				

Option 8
Choke Control (Front Pull)

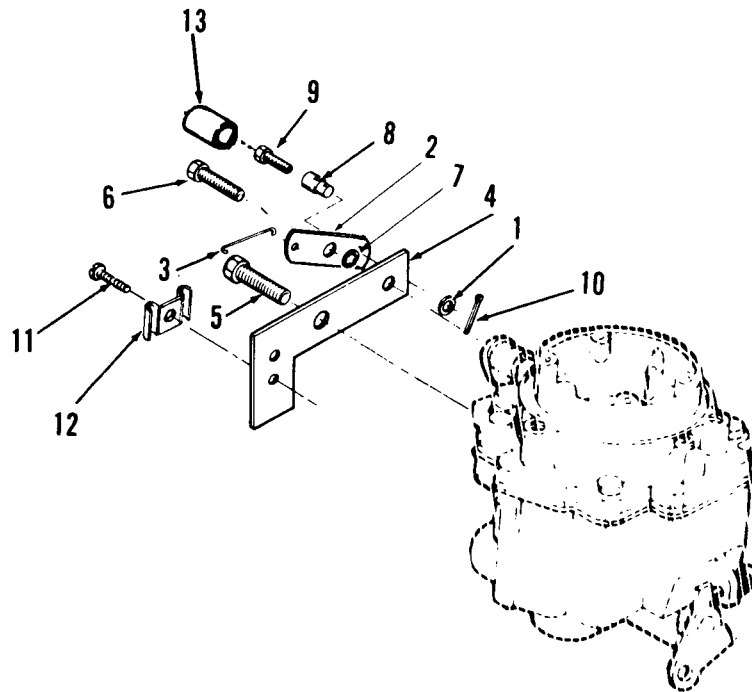


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	526-0140	1	Washer, Flat (#10 Screw)	7	854-0010	1	Washer, Lock - IT (#10)
2	153-0523	1	Lever, Choke	8	152-0155	1	Swivel, Choke Lever
	153-0501	1	Use With Swivel (Chrome-Plated)	9	815-0693	1	Screw, Machine - Hex Head (#8-32 x .31")
3	153-0500	1	Use Without Swivel	10	516-0059	1	Pin, Cotter
4	153-0524	1	Link, Choke	11	815-0359	1	Screw, Tapping - Slotted Hex Washer Head (#10-32 x 7/8")
		1	Bracket, Cable - Choke (Chrome-Plated)	12	153-0514	1	Clip, Choke Cable
5	821-0002	1	Screw, Cap - Hex Washer Head (#10-32 x 1/4")	13	517-0177	1	Plug, Cap
6	815-0480	1	Screw, Shoulder (#10-32 x .34")				

Option 9
High Temperature Switch
Cut-Off

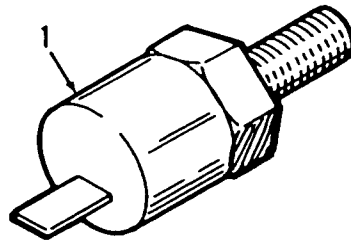

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0559	1	Switch, Cut-Off - High Temperature (1 Terminal)				


Option 10
Remote Oil Filter

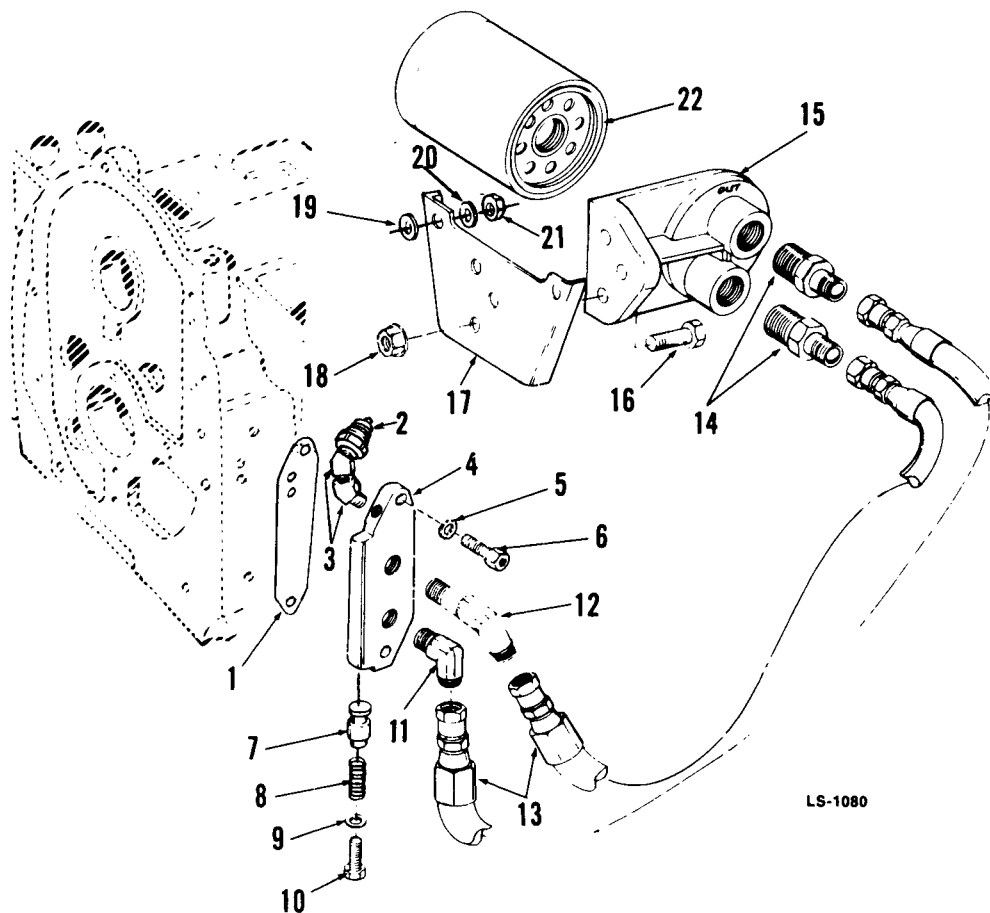

LS-1080

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	122-0771	1	Gasket, Adapter - Oil Filter	11	502-0805	1	Elbow, Male (From Filter)
2	309-0510	1	Switch, Pressure - Low Oil	12	502-0806	1	Elbow, Male (To Filter)
3	502-0053	2	Elbow, Street (45°)	13	501-0499	2	Hose, Oil
4	122-0369	1	Adapter, Filter - Oil	14	502-0804	2	Connector, Male
5	526-0065	2	Washer, Flat - Copper (5/16" Screw)	15	122-0476	1	Base, Filter - Remote Oil
6	802-0056	2	Screw, Cap - Socket (5/16-18 x 1-1/4")	16	800-0027	3	Screw, Cap - Hex Head (5/16-18 x 7/8")
7	120-0398	1	Valve, Plunger - Bypass	17	122-0559	1	Bracket, Filter - Remote Oil
8	120-0140	1	Spring, Bypass	18	870-0257	3	Nut, Self-Lock (5/16-18")
9	526-0066	1	Washer, Flat (3/8" Screw)	19	526-0030	2	Washer, Flat (3/8" Screw)
10	801-0047	1	Screw, Cap - Hex Head (3/8-24 x 5/8")	20	526-0174	2	Washer, Flat (.406 Screw)
				21	862-0003	2	Nut, Hex (5/16-18")
				22	122-0469	1	Filter, Oil

Option 11
Starter Components - Solenoid Shift
 191-1682-01, 191-1808-01 & 191-1949-01 (Standard Begin Spec G)

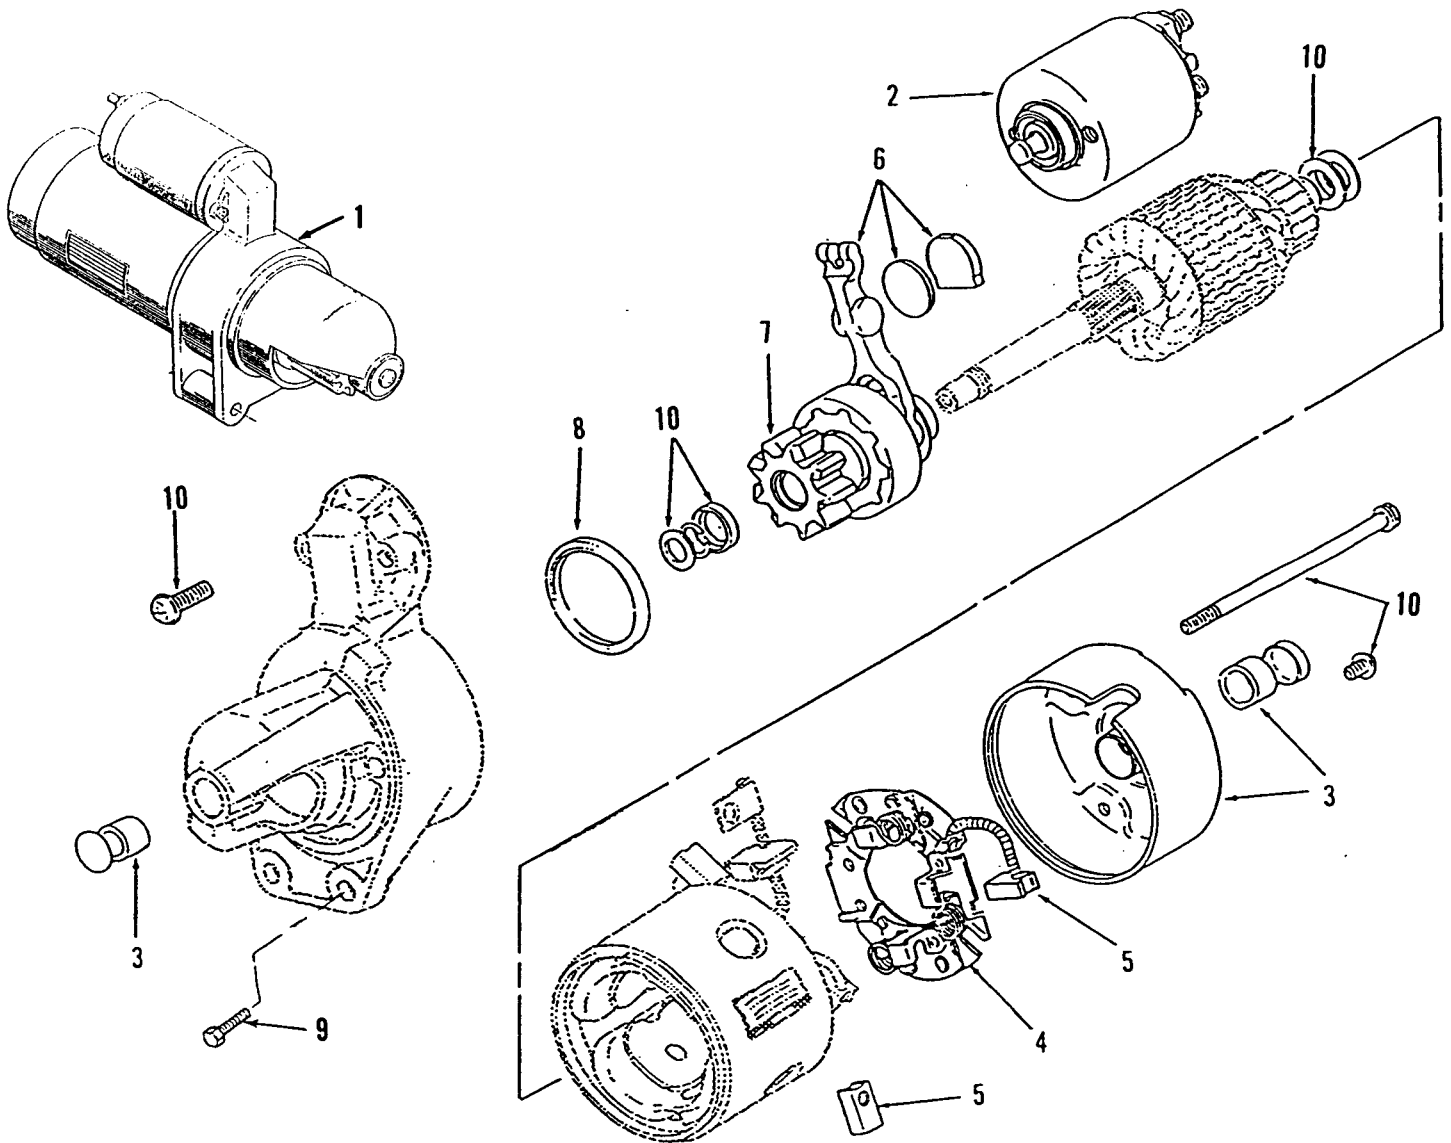

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-1949-01	1	Starter, Solenoid Shift
2	191-1809	1	Kit, Solenoid - Starter (Includes Solenoid and Spring Plunger)
3	191-1762	1	Kit, Bushing - Starter (Includes Rear Cap with Bushing and Front Bushing)
4	191-1951	1	Holder, Brush (Includes Negative Brush)
5	191-1951	1	Kit, Brush - Starter (Includes (2) Negative and (1) Positive Brushes)
6	191-1766	1	Kit, Shift Lever - Starter (Includes Lever, Wear Plate and Rubber Plug)


NOTE: Onan Part Number Stamped on the Starter Nameplate for Identification.

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	191-1810	1	Clutch, Starter (Includes Pinion Gear)
8	191-1811	1	Seal, Dust (Used on 191-1808-01 Only)
9	815-0570	2	Screw, Cap - Hex Washer Head Start Mount (5/16-18 x 1")
10	191-1765	1	Kit, Hardware - Starter (Includes (2) Solenoid Mtg Screws, 2 Thru Bolts, Armature Shims, Pinion Collar and Retaining Ring)

NOTE: Phantom Items Not For Sale, For Replacement Order Complete Starter.

Option 12
Horn and Switch
(High Temperature Warning)


541-0334

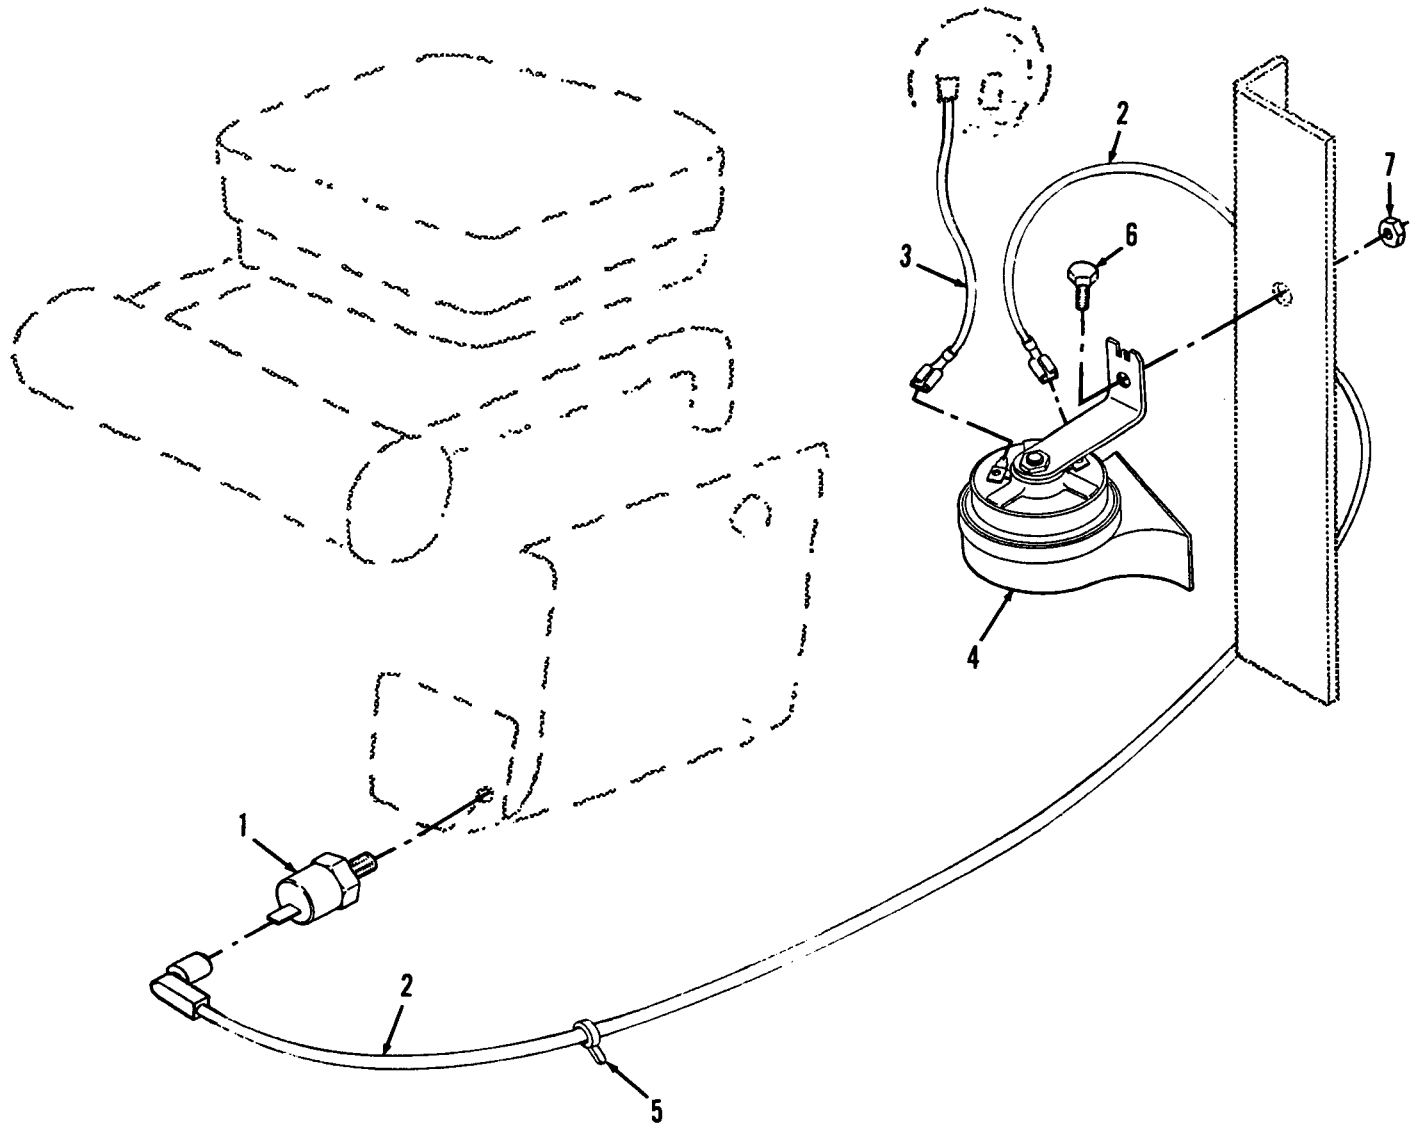

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0559	1	Switch, High Temperature
2	226-3997-01	1	Lead, 16 Gauge - 48" Long
3	226-3997-02	1	Lead, 16 Gauge - 9" Long
4	333-0434	1	Horn Assembly


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	332-0942	2	Tie - Cable
6	800-0050	1	Screw, Cap - Hex Head (3/8-16 x 1")
7	870-0281	1	Nut, Whizlock (3/8" x 16)

Miscellaneous Optional Parts

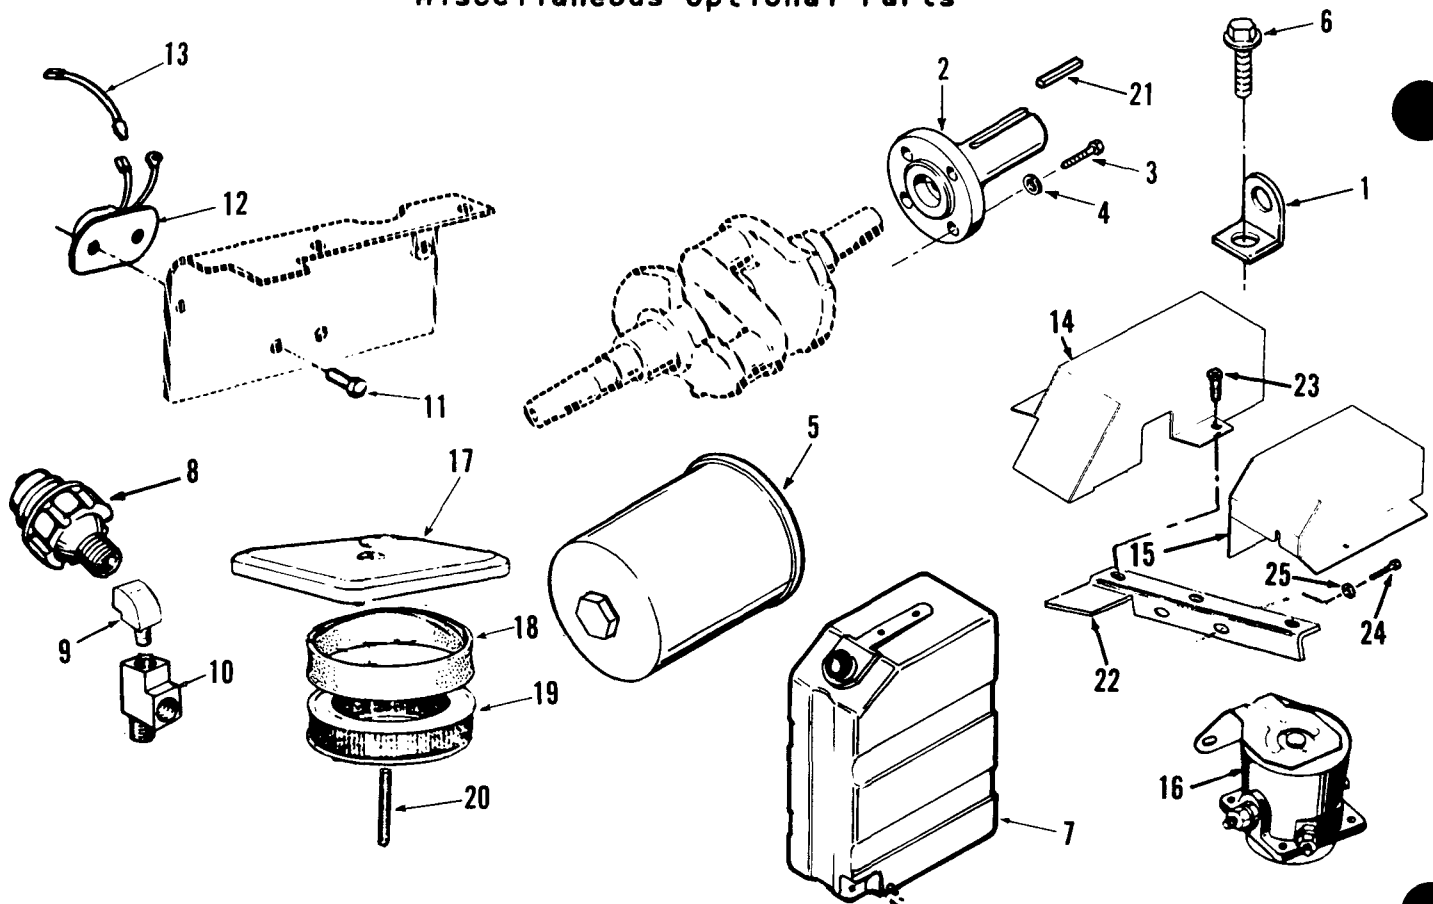

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-1523	2	Bracket, Lifting	9			Elbow, Street - Pipe
2	190-0577	1	Shaft, Front PTO - Stub	502-0053	1	45°	
	190-0687	1	1-7/16" Diameter	502-0020	1	90°	
3	800-0552	4	1" Diameter	10	502-0058	1	Tee, Street - Pipe
4	850-0045	4	Screw, Cap - Hex Head	11	818-0076	2	Rivet, Switch (1/8")
			(5/8-18 x 1") - Spec A, B	12	309-0497	1	Switch, Temperature - High
5	122-0469	1	Washer, Lock (5/16") -				Air
6	815-0508	2	Spec A, B	13		1	Lead, Switch - High Air
7	159-1150	1	Filter, Oil (w/Hex Nut)				Temperature - Use Bulk #16
8			Screw, Hex Head - Thread Form -				Wire
			Tap-Tite (5/16-18 x 3/4")	14	134-4678-50	1	Cover, Exhaust - LH (Use with
							154-2265 Exhaust Adapter)
			Tank, Fuel - Plastic	15	134-4656	1	Cover, Exhaust - RH (Use with
			(3.5 Gal. Cap.)				154-2263 Exhaust Adapter)
			Switch, Pressure - Oil	16	307-1031	1	Relay, Solenoid - Start
			(Lopko)	17	140-1913	1	Cover, Cleaner - Air - High
	309-0105	1	Two Terminal - Close at 5				Capacity
			P.S.I. with Increasing	18	140-1912	1	Wrapper, Element - Filter -
			Pressure - 1.87" Long				High Capacity
	309-0237	1	One Terminal - Close at	19	140-2523	1	Element, Cleaner - Air -
			8-10 P.S.I. at Lowering				High Capacity
			Pressure	20	520-0948	1	Stud, Cleaner - Air - High
	309-0546	1	One Terminal - Open at				Capacity
			4.5-7.5 P.S.I. on	21	515-0007	1	Key (1/4 x 2")
			Increasing Pressure	22	134-3984-51	1	Support, Exhaust Cover
	309-0558	1	Two Terminal, Normally Open	23	821-0008	2	Screw, Flange - Lock Head
			to Close at 5 PSI with				(1/4-20 x 5/16")
			Increasing Pressure -	24	800-0048	2	Screw, Hex Head - Cap
			2" Long				(3/8-16 x 3/4")
	309-0609	1	3 Terminal-Dual Circuit-to	25	850-0050	2	Washer, Lock (3/8")
			Open/Close at 10 PSI				


Miscellaneous Exhaust Options

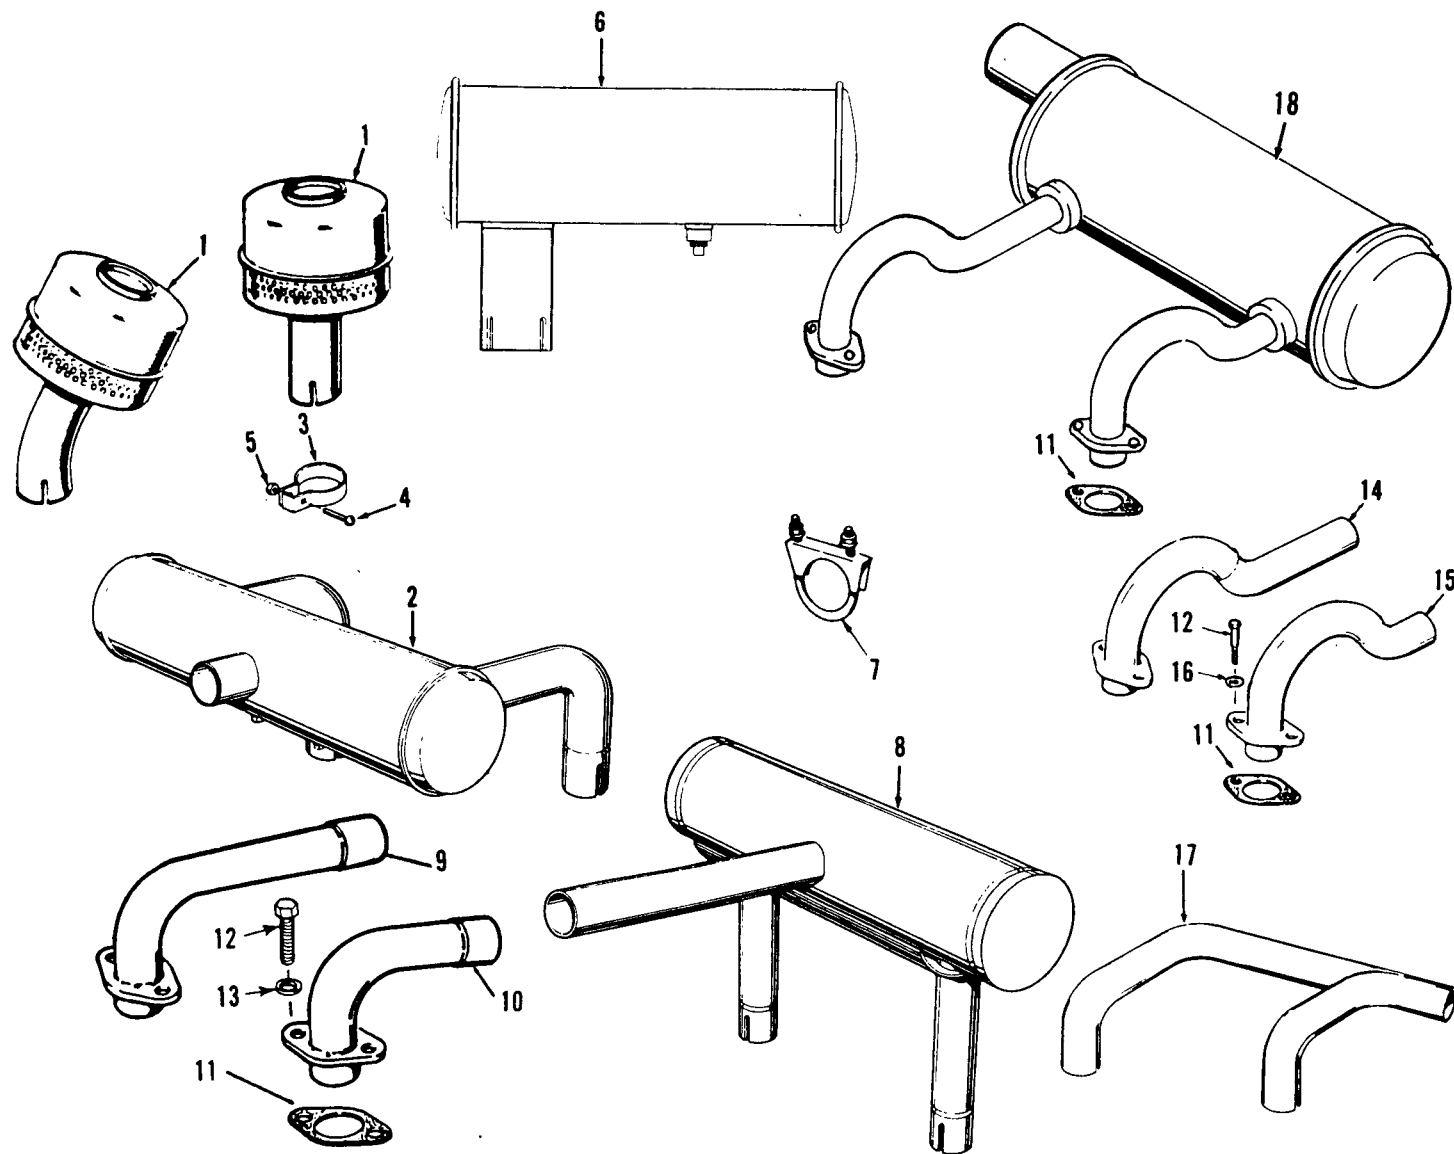

NOTE: Various exhaust options are used on T260G engines. Select according to illustration.

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-1217	2	Muffler, Exhaust - Pepper Pot	9	154-2113	1	Adapter, Exhaust - Left (1-1/2" OD Outlet)
	155-1216	2	Angled Out	10	154-2112	1	Adapter, Exhaust - Right (1-1/2" OD Outlet)
2	155-1686	1	Muffler, Exhaust - Crossover	11	154-2747	2	Gasket, Exhaust
3	155-1219	2	Clamp, Muffler (1.62" Dia.)	12	802-0055	4	Screw, Hex Socket Head (5/16-18 x 1")
4	805-0019	2	Screw, Cap - Hex Head (3/8-16 x 1")	13	526-0022	4	Washer, Flat (5/16" Screw)
5	862-0003	2	Nut, Hex (3/8-16)	14	154-2265-50	1	Tube, Exhaust - Left Side
6	155-1698	2	Muffler, Exhaust - Raygun	15	154-2263-50	1	Tube, Exhaust - Right Side
	155-1660	2	With Spark Arrestor	16	850-0045	4	Washer, Lock (5/16")
	155-1660	2	Without Spark Arrestor	17	154-1609	1	Manifold, Exhaust - Crossover
7	155-1239	2	Clamp, Muffler (1-3/8")	18	155-2245-02	1	Muffler, Exhaust - Crossover Left Rear Outlet
8	155-1379	1	Muffler, Exhaust				

Option 13 Wiring Harness

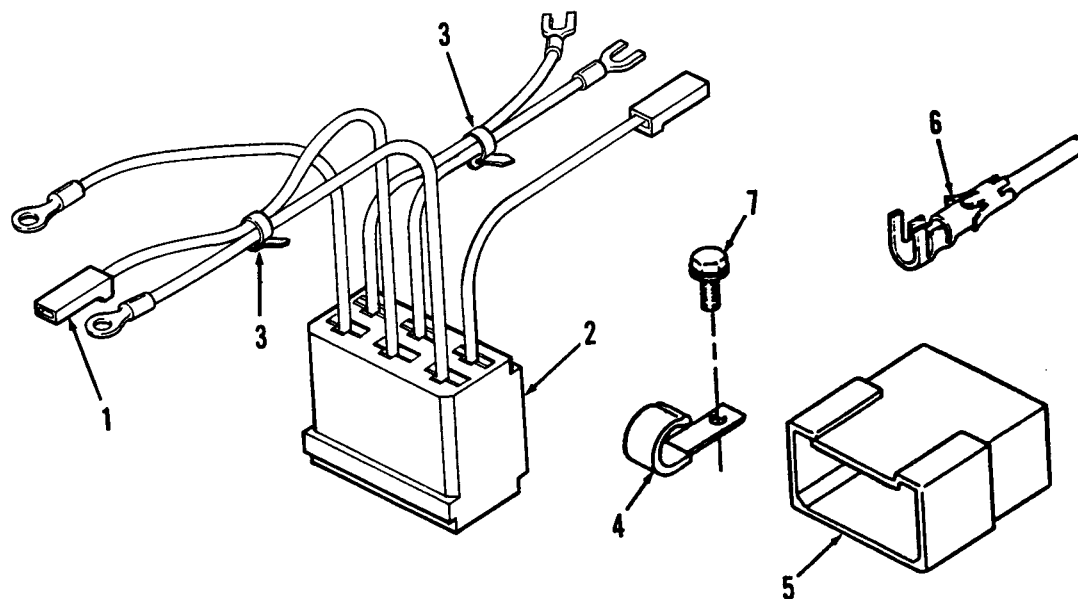

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	338-2104-02	1	Harness, Wiring - Engine Units With Pressure Switch (6 Leads)
1	332-0819	2	Housing, Receptacle
2	323-1386	1	Housing, Receptacle - 6 Way
3	332-1567	2	Tie, Cable

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	518-0515	1	Clamp, Cable (1/2" Dia.)
5	323-0916	1	Housing, Connector - Tab
6	332-2301	6	Tab, Faston
7	815-0474	1	Screw, Hex Washer Head (1/4-20 x 1/2")

Labels, Paint, Thread Sealant and Gasket Kits

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	518-0452	1	Sealant, Thread (50cc Bottle)		110-3136	2	+Gasket, Valve Guide (Intake)
	518-0347	1	Loctite, Bottle (250cc)		110-3575	3	+Gasket, Valve Box Cover
	525-0454	1	Paint, Enamel (Touch-Up) - Greige, Pressurized Can (13 oz.)		110-2987	2	+Gasket, Cylinder Head
	525-0394	1	Paint, Enamel (Touch-Up) - Flat Black, Pressurized Can (16 oz.)		120-0161	1	+Gasket Kit, Oil Pump
	98-6266	1	Label, Maintenance (Oil Check)		122-0771	1	+Gasket, Oil Filter Adapter to Block
	168-0190	1	Kit, Gasket - Carbon Removal (Includes Parts Marked *)		110-3604	2	+Seal, Intake Valve
	110-3575	3	*Gasket, Valve Compartment Cover		509-0142	1	+Seal, Oil Fill Cap O-Ring
	110-2987	2	*Gasket, Cylinder Head		509-0145	1	+Seal, Air Cleaner O-Ring
	154-2219	2	*Gasket, Intake Manifold		154-0733	1	+Gasket, Carburetor Flange
	154-2747	2	*Gasket, Exhaust Adapter		154-2219	2	+Gasket, Intake Manifold
	110-3604	2	*Seal, Oil (Valve)		154-2747	2	+Gasket, Exhaust Adapter
	110-3136	2	*Gasket, Valve Guide (Intake)		160-1368	1	+Gasket, Breaker Box
	168-0191	1	Kit, Gasket - Engine Complete (Includes Parts Marked +)		509-0008	1	+Seal, Governor Shaft
	101-0782	1	+Gasket, Bearing Plate - 1/64"		509-0040	1	+Seal, Oil - Gear Cover
	102-1387	1	+Gasket, Oil Base		509-0041	1	+Seal, Oil - Bearing Plate
	103-0810	1	+Gasket, Gear Cover		509-0117	1	+Seal, Breather Cap O-Ring
					145-0438	1	+Gasket, Carburetor

* - Parts Included in 168-0190 Gasket Kit.
+ - Parts Included in 168-0191 Gasket Kit.

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
98-6266	43	110-1716-02	5	120-0161	43	140-1692	15
101-0405	5	110-1716-05	5	120-0398	10	140-1712	15
101-0430	5	110-1716-10	5	120-0398	37	140-1714	34
101-0432	5	110-1716-25	5	120-0491	10	140-1912	40
101-0432-02	5	110-1718	5	120-0680	5	140-1913	40
101-0432-10	5	110-1719	5	120-0905	10	140-1987	15
101-0432-20	5	110-1974	5	122-0320	10	140-2441	15
101-0432-30	5	110-2987	5	122-0323	10	140-2522	15
101-0437-01	5	110-2987	43	122-0352	10	140-2523	15
101-0439	5	110-3044	5	122-0369	37	140-2523	40
101-0439-01	5	110-3136	43	122-0469	10	140-2536-01	15
101-0450	5	110-3167	5	122-0469	37	140-2536-02	15
101-0450-02	5	110-3168	5	122-0469	40	140-2537	15
101-0450-10	5	110-3549	5	122-0476	37	140-2625-51	15
101-0450-20	5	110-3575	5	122-0502	10	140-2625-52	15
101-0450-30	5	110-3575	43	122-0559	37	145-0438	17
101-0551	5	110-3604	5	122-0771	10	145-0438	18
101-0773	5	110-3604	43	122-0771	37	145-0438	43
101-0782	43	110-3655	5	122-0771	43	145-0522	15
102-1231	9	110-3655-02	5	123-0951	5	145-0525	15
102-1232	9	110-3655-05	5	123-0952	5	145-0614	15
102-1387	9	110-3655-10	5	123-0954	5	146-0142	16
102-1387	43	110-3655-25	5	123-0958	5	146-0209	16
103-0791	11	112-0069	8	123-1263	15	146-0220	16
103-0798	11	112-0228	8	123-1417	5	146-0222	16
103-0810	43	112-0228-05	8	123-1640	9	146-0238	16
104-0032	6	112-0228-10	8	123-1921	9	146-0247	16
104-0043	6	112-0228-20	8	134-0599	32	146-0260	16
104-0091	5	112-0228-30	8	134-3626	25	146-0261	16
104-0170	6	113-0203	8	134-3806	6	146-0262	16
104-0575	5	113-0203-05	8	134-3847	6	146-0270	16
104-0776	5	113-0203-10	8	134-3847-50	6	146-0282	16
104-0779	6	113-0203-20	8	134-3938	6	146-0289	16
104-1310	6	113-0203-30	8	134-3984-51	40	146-0292	16
104-1314	6	114-0036	8	134-4120	6	146-0312	15
104-1340	6	114-0188	8	134-4120-50	6	146-0312	16
104-1500	6	114-0188-02	8	134-4641	6	146-0334	17
104-1698	6	114-0188-10	8	134-4641-01	6	146-0398	15
105-0332	7	114-0188-20	8	134-4656	40	146-0398	16
105-0382	7	114-0188-30	8	134-4668-50	25	146-0426	17
105-0541	7	114-0203	8	134-4678-50	40	146-0426	18
105-0594	7	114-0324	8	134-4814-01	25	146-0431	17
105-0638	7	114-0324-10	8	134-4814-02	25	146-0433	17
110-0068	5	114-0324-20	8	134-4816-01	25	146-0433	18
110-0539	5	114-0324-30	8	134-4816-02	25	146-0435	17
110-0893	5	115-0006	5	134-4816-03	25	146-0435	18
110-0904	5	115-0006-05	5	134-4816-04	25	146-0437	17
110-1264	9	120-0140	10	140-1428	34	146-0437	18
110-1624	5	120-0140	37	140-1496	15	146-0467	17
110-1716	5	120-0161	10	140-1663	15	146-0497	15

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
146-0497	18	153-0501	35	160-1368	19	191-1682-01	38
146-0500	17	153-0514	13	160-1368	43	191-1748	29
146-0500	18	153-0514	15	166-0554	19	191-1763	38
146-0501	18	153-0514	30	166-0741	19	191-1764	38
146-0502	18	153-0514	31	166-0761	20	191-1765	38
146-0505	17	153-0514	35	166-0767	20	191-1766	38
146-0505	18	153-0515	15	166-0770	20	191-1767	38
146-0510	16	153-0523	35	166-0771	20	191-1808-01	22
146-0510	18	153-0524	35	166-0772	19	191-1808-01	38
149-1299	11	154-0733	15	166-0775	20	191-1809	38
149-1321	11	154-0733	16	166-0785	20	191-1810	38
149-1321	15	154-0733	17	166-0786	20	191-1811	38
149-1982	15	154-0733	18	166-0787	20	191-1847	29
149-2187-02	15	154-0733	43	167-0188	28	191-1931	38
149-2206-01	33	154-1484	26	167-0188	29	226-3997-01	39
150-0075	7	154-1609	41	167-0263	19	226-3997-02	39
150-0078	7	154-2112	41	167-0263	20	301-0458	15
150-1187	11	154-2113	41	167-0291	19	307-1031	40
150-1214	30	154-2219	15	167-1602	19	309-0105	40
150-1269	13	154-2219	43	167-1615-01	20	309-0237	40
150-1269	30	154-2265-50	41	167-1615-04	20	309-0497	40
150-1366	31	154-2293	15	168-0190	5	309-0510	37
150-1398	13	154-2747	26	168-0190	43	309-0546	40
150-1398	30	154-2747	41	168-0191	5	309-0558	40
150-1470	11	154-2747	43	168-0191	43	309-0559	36
150-1519	7	155-1216	41	190-0577	40	309-0559	39
150-1520	7	155-1217	41	190-0687	40	309-0609	40
150-1695	7	155-1219	41	191-1038	23	312-0246	21
150-1726	31	155-1239	41	191-1038	24	312-0255	20
150-1727	31	155-1379	41	191-1154	23	312-0256	19
150-1754	31	155-1660	41	191-1154	24	312-0256	20
150-1755	31	155-1686	41	191-1155	24	323-0853	28
150-1831	13	155-1698	41	191-1156	23	323-0890	28
150-1832	13	155-2245-02	41	191-1156	24	323-0892	28
150-1832	30	159-0020	32	191-1157	23	323-0916	42
150-1881	13	159-0595	32	191-1157	24	323-1085	28
150-1952	30	159-0596	32	191-1206	28	323-1257	28
150-1953	30	159-0597	32	191-1222	24	323-1257	29
150-2039	13	159-0981	32	191-1256	28	323-1386	42
150-2090	11	159-1150	40	191-1256	29	332-0819	42
150-2091	15	160-1150	20	191-1276	29	332-0942	39
150-2400	13	160-1150	21	191-1294	24	332-1567	42
150-2409	13	160-1151	19	191-1359	23	332-2301	42
150-2417-02	30	160-1183	21	191-1359	24	332-2319	29
150-2417-02	31	160-1219	21	191-1532	23	332-2423	28
152-0155	13	160-1285	21	191-1533	23	332-2423	29
152-0155	30	160-1303	19	191-1534	23	333-0434	39
152-0155	31	160-1303	21	191-1587	23	336-2378	19
152-0155	35	160-1311	21	191-1597	23	336-2378	21
153-0500	35	160-1345	20	191-1597	24	336-4542	28

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
338-2104-02	42	515-0007	40	526-0065	11	815-0194	10
403-1523	40	515-0103	6	526-0065	37	815-0194	11
501-0008	32	515-0227	6	526-0066	10	815-0261	15
501-0499	37	515-0284	6	526-0066	37	815-0261	19
502-0020	32	516-0059	13	526-0115	15	815-0290	25
502-0020	40	516-0059	30	526-0122	22	815-0340	9
502-0053	37	516-0059	31	526-0140	35	815-0340	20
502-0053	40	516-0059	35	526-0174	37	815-0358	21
502-0058	40	516-0072	5	526-0250	5	815-0359	13
502-0313	15	516-0130	11	526-0251	5	815-0359	15
502-0395	15	516-0141	5	526-0262	6	815-0359	30
502-0804	37	516-0212	9	526-0337	22	815-0359	31
502-0805	37	517-0048	5	526-0356	6	815-0359	35
502-0806	37	517-0067	5	740-1006	26	815-0378	13
503-0171	15	517-0151	25	800-0003	25	815-0436	13
503-0171	34	517-0151	34	800-0004	20	815-0436	30
503-0274	34	517-0177	35	800-0007	10	815-0439	31
503-0301	11	518-0004	13	800-0007	31	815-0463	15
503-0301	15	518-0004	30	800-0011	5	815-0470	15
503-0311	19	518-0004	31	800-0027	37	815-0470	29
503-0707	15	518-0014	6	800-0028	10	815-0474	42
503-0731	15	518-0294	8	800-0032	11	815-0480	35
503-0731	33	518-0347	43	800-0039	15	815-0508	25
503-1016	33	518-0406	13	800-0040	15	815-0508	40
503-1199	15	518-0406	30	800-0048	40	815-0519	6
503-1396	34	518-0406	31	800-0050	39	815-0555	15
504-0013	32	518-0452	43	800-0051	5	815-0563	13
505-0057	10	518-0515	42	800-0058	15	815-0563	30
505-0057	32	520-0736	5	800-0512	26	815-0570	22
505-0110	9	520-0876	5	800-0545	11	815-0570	23
508-0021	15	520-0918	5	800-0552	40	815-0570	24
509-0008	11	520-0919	5	801-0047	37	815-0570	38
509-0008	43	520-0933	11	801-0050	10	815-0593	28
509-0040	11	520-0948	40	802-0022	21	815-0650	20
509-0040	43	525-0394	43	802-0034	19	815-0693	31
509-0041	5	525-0454	43	802-0034	21	815-0693	35
509-0041	43	526-0006	13	802-0055	41	818-0076	40
509-0065	21	526-0006	30	802-0056	37	821-0002	15
509-0117	5	526-0006	31	803-0071	5	821-0002	35
509-0117	43	526-0008	15	805-0010	8	821-0004	15
509-0142	9	526-0008	21	805-0019	41	821-0008	25
509-0142	43	526-0017	6	806-0036	8	821-0008	28
509-0145	15	526-0021	25	809-0035	5	821-0008	29
509-0145	34	526-0021	30	813-0106	34	821-0008	40
509-0145	43	526-0021	31	813-0108	32	821-0010	6
510-0014	11	526-0022	41	815-0046	11	821-0010	25
510-0015	7	526-0026	9	815-0104	13	821-0014	6
510-0105	11	526-0030	37	815-0104	30	850-0030	34
515-0001	6	526-0063	5	815-0178	20	850-0038	21
515-0001	7	526-0065	10	815-0181	31	850-0040	10

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
850-0040	19						
850-0040	20						
850-0040	23						
850-0040	24						
850-0040	31						
850-0045	15						
850-0045	26						
850-0045	40						
850-0045	41						
850-0050	5						
850-0050	9						
850-0050	15						
850-0050	40						
850-0055	6						
850-2005	19						
851-0029	5						
854-0010	20						
854-0010	35						
854-0017	22						
862-0003	37						
862-0003	41						
862-0015	11						
865-0020	15						
865-0029	15						
868-0002	15						
870-0053	32						
870-0257	37						
870-0281	39						
870-0365	15						
870-0399	15						