


# **Parts Catalog**

Models GCAA (Begin Spec C) GCAB (Begin Spec C) GCAC (Begin Spec C)

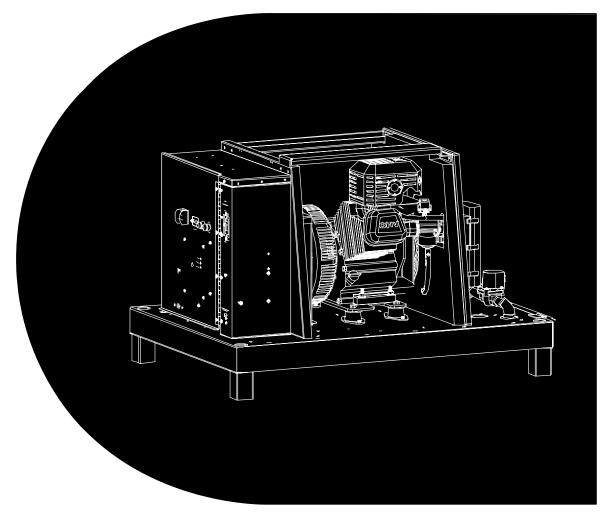

Printed in U.S.A.



965-0270 (Spec C) 12-2001

Supplement 965–1080 Date: 8–27–04 *Insert with-*Title: GCAA, GCAB, GCAC Parts Catalog Number: 965–0270

## PURPOSE

This publication adds supplementary information to the following page of the GCAA, GCAB, GCAC Parts Catalog.

Page 43 – Added part number to item 11 (PC Board) for 24V unit.

## SUPPLEMENT USE

Refer to the corresponding page of your manual and write "IMPORTANT: REFER TO SUPPLEMENT".

Please keep this supplement with the Parts Catalog (965–0270).



### **Control Door**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-4276-02	1	Door, Control	14	187–5042–01	1	Holder, Fuse (Includes
2	819–1136–02	4	Screw, Machine Pan Head				Cap and Nut)
			(7/16–40 x 3/8")	15	332–3682	1	Clamp, Cable
3	870-2226-01	6	Nut and Captive Washer	16	187–5038–01	1	Strap, Ground
			(7/16"–40	17	405-6668-02	1	Bracket, Fuel Switch
4	406–0948	2	Latch, Spring				(GCAC)
5			Nut and Captive Washer	18	308–1108	1	Switch, Toggle (GCAC)
			(3/16"–32)	19	406-0949-02	1	Hinge
	870-2226-05	17	GCAA	20	319–4279	1	Gasket, Cover Plate
	870-2226-05	19	GCAC	21	319-4277-02	1	Plate, Cover
6	187–5127	1	Switch (S1) (Includes Nuts)	22			Screw, Machine Hex Washer
			(Part of Wiring Harness				Head (3/16–32 x 1/2")
7	319–4188	4	Standoff		815-0973-30	17	GCAA
8			Clamp, Cable		815-0973-30	19	GCAC
	332-0905	2	GCÁA	23			Screw, Machine Pan Head
	332-0905	4	GCAC		819-1136-05	4	GCAA (9/64–32 x 1/4")
9	870-2226-02	4	Nut and Captive Washer		819-1136-04	4	GCAC (9/64–32 x 3/16")
			(9/64"-32)	24	098–7738	1	Label, Door
10	326-0330-xx		Microcontroller (Refer to Label	25	187-5012-28	1	Fuse (F2) (5A)
		1	on Existing Microcontroller	26			Fuse (F1)
			for Specific Part Number)		187-5012-32	1	GCAA (10A)
11			Control Unit-PC Board		187-5012-35	1	GCAC (20A)
	300-5414-01	1	24V	27	187-5080-02	1	Guard, Switch
	300-5414-02	1	48V	28	819-1136-03	2	Screw, Machine Pan Head
12	302-0885	1	Meter, Hour	-			(7/64–40 x 1/2")
13	187–5042–02	1	Holder Assembly, Fuse (Includes Cap and Nut)	29	098–7727	1	Label, Fuel Switch



## MODEL IDENTIFICATION

This catalog covers models produced under the Cummins  $^{\ensuremath{\mathbb{R}}}/\ensuremath{\text{Onan}}^{\ensuremath{\mathbb{R}}}$  and Cummins Power Generation brand names.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Cummins Power Generation nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION AND DATE (IF APPLICABLE)

## SAFETY PRECAUTIONS

The following symbols are used in Cummins Power Generation manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.

This symbol warns of immediate hazards which will result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

## **PRODUCT SAFETY PRECAUTIONS**

Service and repair of Cummins Power Generation equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.

## 

Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.

## 

Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!

## 

Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!

PSP-1



#### Index

Alternator, 38 Angle, Door, 31 Back, Enclosure – GCAA, GCAB, 33 Baffle - GCAA, GCAB, 33 Baffle, Alternator Air, 40 Baffle, Front - GCAA, 24 Baffle, Front - GCAB, GCAC, 25 Baffle, Front - GCAC, 35 Baffle, Hot/Cold Rear, 27 Baffle, Rear - GCAC, 35 Bar, Bus, 27, 45 Base, Enunciator, 21 Base, Mounting, 31 Block, Terminal, 27, 39 Board, Enunciator, 21 Board, Terminal, 27 Bracket, Actuator Switch, 37 Bracket, Detector, 22 Bracket, Door Lock, 33, 35, 37 Bracket, Exerciser Clock Mounting, 17 Bracket, Fan - GCAC, 36 Bracket, Heatsink - GCAA, 45 Bracket, Lug, 31 Bracket, Motor - Stepper - GCAB, GCAC, 9 Bracket, Mounting, 51 Bracket, Mounting - Heatsink - GCAB, 47 Bracket, Mounting - Heatsink - GCAC, 49 Bracket, Shear Pad, 23 Bracket, Stepper Motor - GCAB, GCAC, 9 Bracket, Stepper Motor Mounting - GCAA, 8 Bracket, Thermostat, 40 Breaker, Circuit, 41 Bumper – GCAA, GCAB, 33 Bumper - GCAC, 35 Bushing, 38 Cable - GCAA, 45 Cable - GCAC, 49 Cable Assembly - GCAA, 18 Cable Assembly - GCAB, 47 Cable Assembly - GCAB, GCAC, 19 Cable, Enunciator, 21 Capacitor, 51 Carburetor, Modification – GCAA, 7 Carburetor, Modified - GCAC, 6 Charger, Battery, 15 Cleaner, Air - GCAA, 24 Contactor - GCAC, 49 Contactor, DC, 27 Control Box Assembly, 52 Control, PC Board, 43

Cover Assembly, Alternator, 39 Cover, Alternator, 39 Cover, Base, 21 Decal, Rotor, 38 Deflector, Exhaust - GCAA, GCAB, 33 Deflector, Exhaust - GCAC, 35 Detector, Gas, 22 Detector, Shear Pad, 23 Diode, 27, 45, 55 Door Assembly, Access, 37 Door, Access, 37 Door, Control Box, 43 Edging, Trim, 35 Elbow, Regulator - GCAA, 11 Elbow, Regulator – GCAB, GCAC, 12 Enclosure Assembly - GCAA, GCAB, 33 Enclosure Assembly – GCAC, 35 Enunciator, 21 Fan Assembly - GCAC, 36 Fan, Cooling, 38 Foam, Enclosure - GCAA, GCAB, 33 Foam, Enclosure - GCAC, 35 Foam, Enclosure - Right Panel - GCAC, 36 Foam, Hot/Cold Baffle, 52 Foam, Hot/Cold Baffle - GCAA, 24 Foam, Hot/Cold Baffle - GCAB, GCAC, 25 Fuse, 43, 55 Gasket - GCAA, 24 Gasket, Carburetor - GCAC, 6 Gasket, Carburetor to Manifold - GCAC, 6 Gasket, Cover Plate, 43 Gasket, Intake – GCAA, 7 Gasket, Intake Manifold - GCAC, 6 Gasket, Muffler Mounting – GCAA, 7 Grommet, 21, 23, 39, 40, 52 Guard, Switch, 41, 43 Harness, Wiring, 17, 51, 55 Heatsink - GCAA, 45 Heatsink - GCAB, 47 Heatsink - GCAC, 49 Hinge, 43 Hinge, Female, 37 Hinge, Female - GCAC, 35 Hinge, Male, 31, 33, 35 Holddown, Stepper Motor - GCAA, 8 Holder, Fuse, 43, 55 Hose, Air Cleaner - GCAA, 24 Hose, Fuel - GCAA, 11



Power Generation

#### Index

Hose, Fuel - GCAB, GCAC, 12, 14 Hose, Regulator - GCAA, 11 Hose, Regulator – GCAB, GCAC, 12 Housing, Stator, 38 Keepers, 33 Key, Rotor, 38 Kit, AC Terminal Block Cover, 27 Kit, Cable, 51 Kit, Muffler Bracket - GCAA, 7 Label, Circuit Breaker, 41 Label, Door, 43 Label, Fuel Switch, 43 Label, LED, 21 Label, Terminal Strip, 27 Labels. 56 Latch, Access Door, 37 Latch, Spring, 43, 53 Link, Stepper Motor - GCAA, 8 Link, Stepper Motor - GCAC, 6 Meter, Hour, 43 Microcontroller Processor, Programmed, 43 Motor Assembly, Stepper - GCAA, 8 Motor, Stepper - GCAA, 7, 8 Mount, Engine - GCAA, 4 Mount, Engine - GCAB, 5 Mount, Engine – GCAC, 6 Mount, Shock, 31 Muffler - GCAB, 5 Muffler - GCAC, 6 Nipple, Regulator Close – GCAA, 11 Pad Assembly, Heater, 16 Panel, Control Box - Left Side - GCAA, 45 Panel, Control Box - Left Side - GCAB, 47 Panel, Control Box - Left Side - GCAC, 49 Panel, Enclosure - GCAA, GCAB, 33 Panel, Enclosure - GCAC, 35 Panel, Enclosure - Rear, GCAA, GCAB, 33 Panel, Filler - GCAA, 24 Panel, Front - GCAA, GCAB, 33 Plate Assembly, Engine – GCAB, 5 Plate Assembly, Engine - GCAC, 6 Plate, Adapter, 41 Plate, Cover, 40, 43 Plate, Cover - GCAA, 24 Plate, Heater Pad - GCAA, 7 Plate, Multi-Tie, 51

Rectifier - GCAC, 49 Regulator Assembly - GCAA, 11 Regulator, Low Pressure - GCAB, GCAC, 12, 14 Reinforcement, Hinge - GCAA, GCAB, 33 Reinforcement, Hinge - GCAC, 35 Relay, 41 Resistor, 51, 55 Resistor Assembly, 51 Rotor, Generator, 38 Seal, Regulator – GCAB, GCAC, 12 Shield, Heat - GCAC, 6 Skid, 31 Solenoid Asembly – GCAA, 11 Solenoid Assembly - GCAB, GCAC, 14 Solenoid Assembly GCAB, GCAC, 12 Spring, Stepper Motor – GCAA, 7 Standoff, 21, 43 Standoff, Insulator, 31 Stepper Motor Assembly – GCAB, GCAC, 9 Strap, Battery, 31 Strap. Ground. 43 Strap, Ground – GCAA, 18 Strap, Ground – GCAB, GCAC, 19 Stud, Ground, 20 Support, Baffle - GCAA, 28 Support, Baffle - GCAB, GCAC, 29 Support, Baffle - Right Side - GCAA, 28 Support, Cable - GCAA, 45 Support, Cable - GCAB, 47 Support, Cable - GCAC, 49 Support, Charger, 15 Support, Heatsink - GCAA, 45 Support, Heatsink - GCAB, 47 Support, Heatsink - GCAC, 49 Switch, 43 Switch Assembly, Pressure, 13 Switch Assembly, Shear Pad, 23 Switch, Door, 41, 55 Switch, Master, 55 Switch, Oil Pressure – GCAB, 5 Switch, Oil Pressure – GCAC, 6 Switch, Pressure, 13 Switch, Pressure – GCAB, GCAC, 14 Switch, Shear Pad, 23 Switch, Solenoid, 27, 40 System, Fuel - GCAA, 11 System, Fuel – GCAB, GCAC, 12

Tee, Solenoid Reducing – GCAA, Tee, Solenoid Reducing – GCAB, GCAC, Thermostat, Thermostat – GCAA, **4**,




#### Index


Thermostat – GCAB, **5**, Thermostat – GCAC, **6**, Thermostat, Air, Timer, Exercise, Transformer, Current, **40**, Tray, Battery, Tube, Air – GCAA, Tube, Air Cleaner – GCAA,

Valve, Oil Drain – GCAA, Valve, Oil Drain – GCAB, Valve, Solenoid – GCAA, Valve, Solenoid – GCAB, GCAC,

Wire, Safety – GCAA, **7** Wiring, Control Box, **50** 



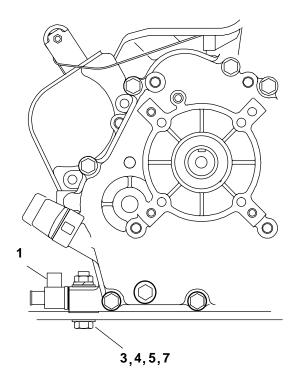


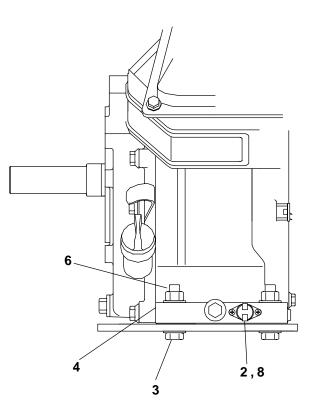


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2 3 4 5	100–3592 504–0201 187–5082–02 800–0053 526–0346 850–0050	1 1 4 8 1	Engine–Replacement Valve–Oil Drain Thermostat Bolt–Hex (3/8–16 x 1–3/4") Washer–Flat (3/8") Washer–Lock (3/8")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	187–5208–03	3	Nut–Lock (3/8"–16)
7	864–1003	1	Nut–Jam
8	809–0009	2	Screw–Thread Cutting (7/64–40 x 1/4")



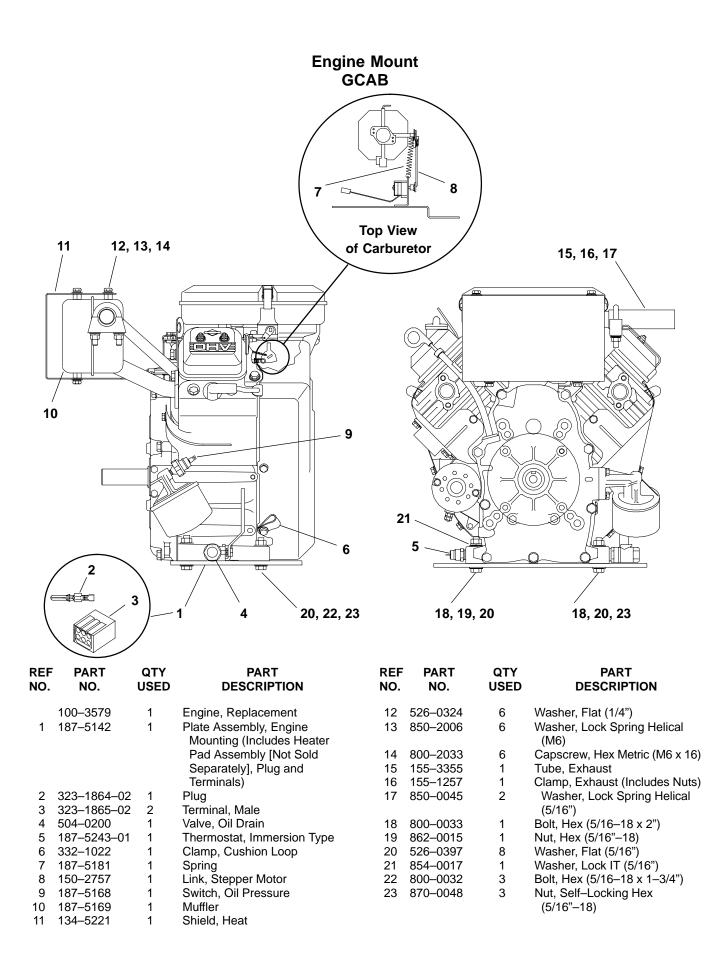




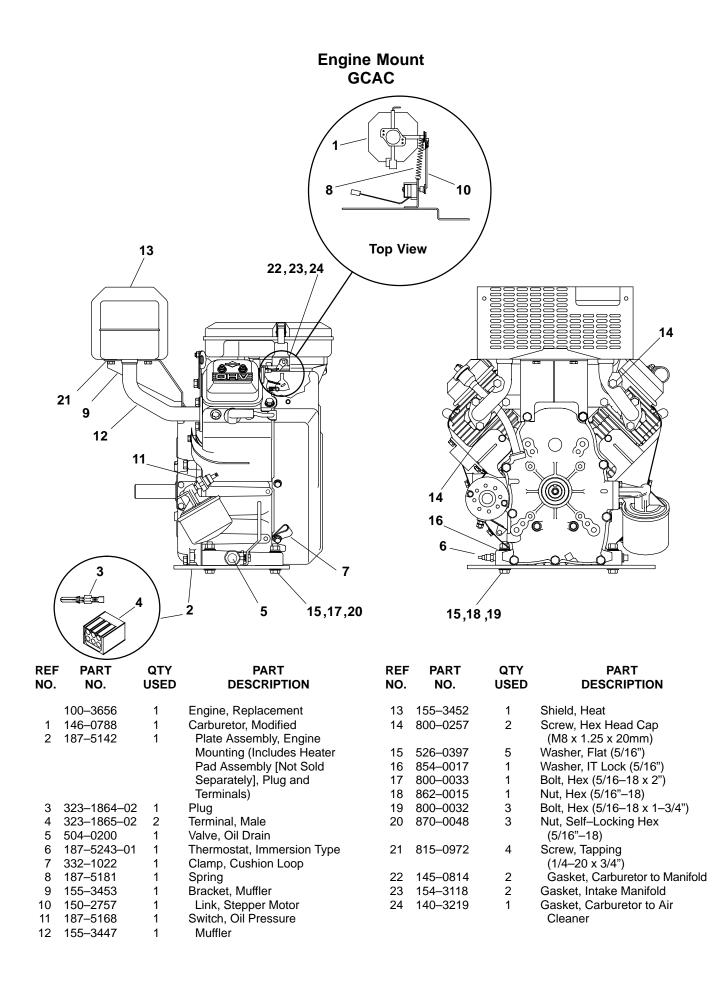




Carburetor GCAA

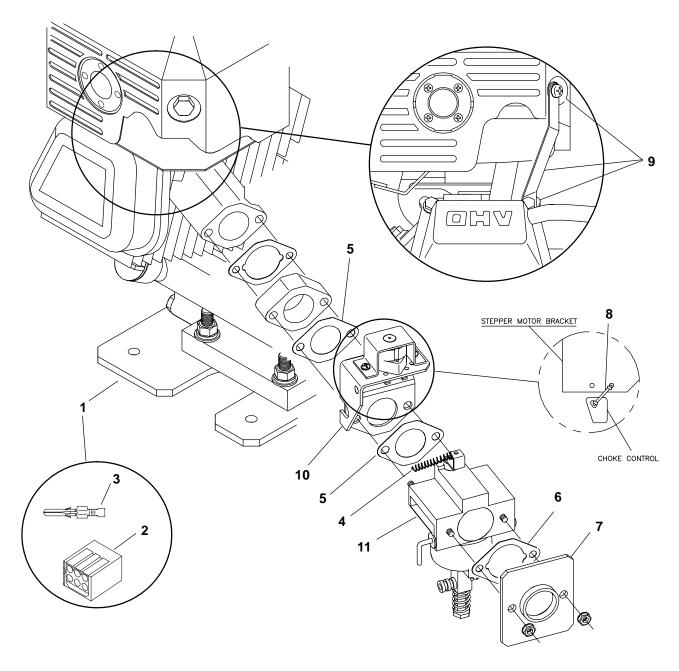

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	187–5021	1	Plate Assembly (Includes	6	140–3239	1	Gasket, Intake
			Heater Pad Assembly [Not	7	140-3237-02	1	Tube, Air Cleaner
			Sold Separately], Plug and	8	187–6222	AR	Wire, Safety
			Terminals)	9	155–3357	1	Kit, Muffler Bracket (Includes
2	323-1864-02	1	Plug				Bracket and Screws)
3	323-1865-02	2	Terminal, Male	10	150–2758	1	Motor, Stepper (See Separate
4	187–5091	1	Spring				Page for Components)
5	140–3240	2	Gasket, Mounting	11	539–2051	1	Modification, Carburetor



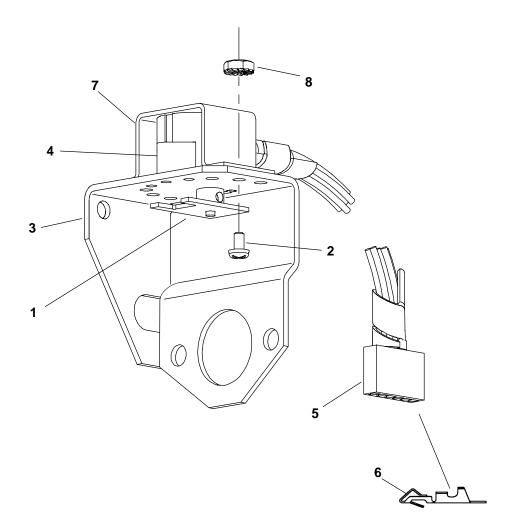


REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
1	150–2758	1	Motor Assembly, Stepper
	187–5017–02	1	Link, Stepper Motor
2	822–1016	4	Screw, Pan Head (7/64–40 x 3/8")
3 4	187–5207–02 187–5023–01	1 1	Bracket, Mounting Motor, Stepper (Includes Connector and Terminal)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	323-1868-06	1	Connector, 6 Position
6	332–3622	6	Terminal, Connector
7	150-2755-02	1	Holddown, Motor
8	187–5007–01	2	Nut and Captive Washer (7/64"–40)





## Stepper Motor Components/Mounting GCAB, GCAC

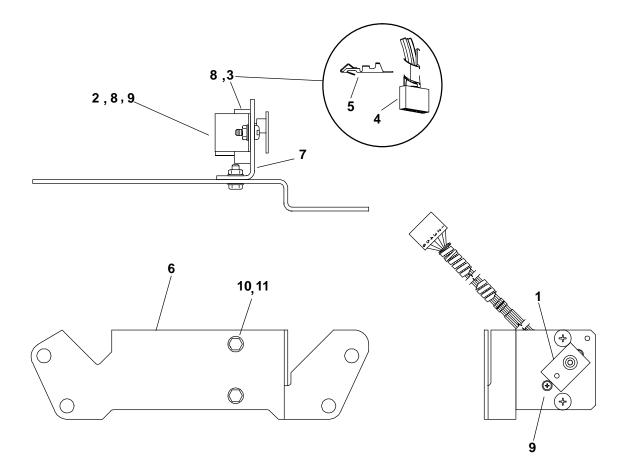

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	187–5022–02	1	Link	8	822–1016	4	Screw, Pan Head
2	150-2755-02	1	Clamp, Stepper Motor				(7/64–40 x 3/8")
3	187–5023–02	1	Motor Assembly, Stepper (Includes Connector and	9	187–5007–01	2	Nut and Captive Washer (7/64"–40)
			Terminal)	10	187-5095-21	2	Screw, Hex Washer Head
4	323-1868-06	1	Connector, 6 Position				Machine (#10–32 x 1/2")
5	332–3622	6	Terminal, Connector	11	187-5007-05	2	Nut and Captive Washer
6	187-5163-02	1	Bracket, Stepper Motor				(#10–32)
7	187–5162–02	1	Bracket, Motor – Stepper				



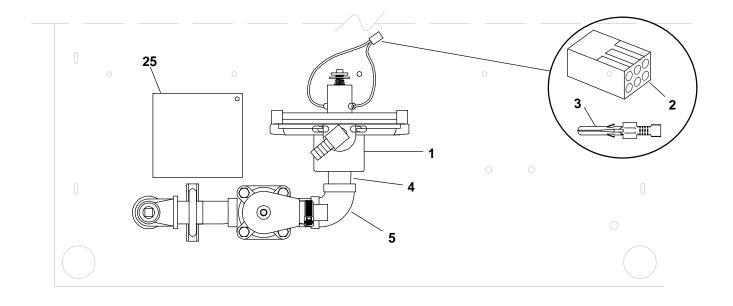

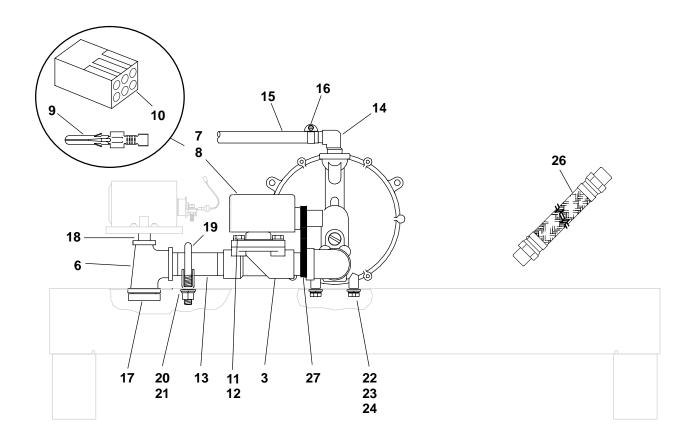





## Fuel System GCAA

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	187–5024	1	Regulator Assembly	14	502–1171	1	Elbow, 90° Brass
			(Includes Plug and Terminals)	15	503–1797	1	Hose
2	323-1864-02	1	Plug	16	503–1133	1	Clamp, Hose
3	323-1865-02	2	Terminal, Male	17	517–0094	1	Caplug
4	505-0102	2	Nipple, Close	18	502-1286-02	1	Plug, Pipe
5	505–0132	1	Elbow	19	155–1257	2	Clamp, Muffler
6	505-1496	1	Tee, Reducing	20	526-0397	2	Washer, Flat (5/16")
7	187–5028	1	Solenoid Assembly	21	850-0045	2	Washer, Lock (5/16")
			(Includes Parts Marked *)	22	800–0005	2	Bolt, Hex (1/4–20 x 3/4")
8	307–2930	1	*Valve, Solenoid	23	526-0054	2	Washer, Flat (1/4")
9	323-1865-02	2	*Terminal, Male	24	850-0040	2	Washer, Lock (1/4")
10	323-1864-02	1	*Plug	25	187-5073-02	1	Cover, Hole
11	331–0567	1	*Connector	26	501–0648	1	Hose, Fuel (Spec 778, 1378)
12	850-0025	2	*Washer, Lock	27	332–1389	1	Strap, Tiedown
13	505–0332	1	Nipple				



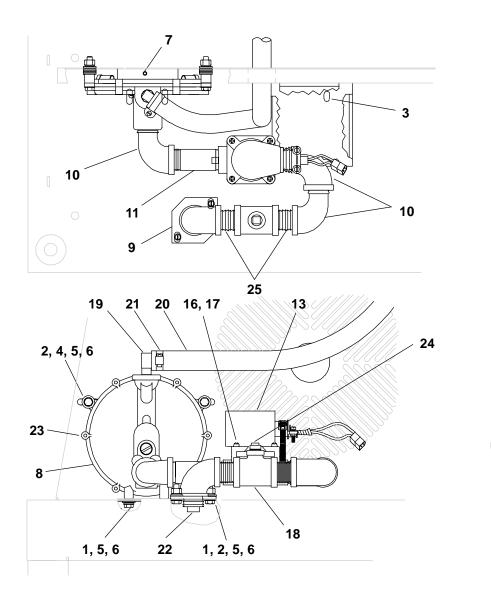

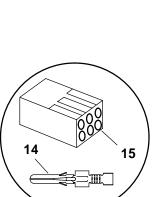

**26** (


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800–0005	4	Bolt, Hex
			(1/4–20 x 3/4")
2	862–0001	4	Nut, Hex (1/4"–20)
3	187–5073	1	Cover, Hole
4	187–5095–36	2	Screw, Machine Hex Washer
			Head (1/4–20 x 1–1/2")
5	526-0054	16	Washer, Flat (1/4")
6	850-0040	6	Washer, Spring Lock Helical
			(1/4")
7	509–0356	1	Seal, Regulator
8	187–5206	1	Regulator, Low Pressure
9	187-5253-02	1	Elbow, 90°
10	505-1565-05	3	Elbow–90° Street
11	505–0332	1	Nipple, Black Steel
12	187–5028	1	Solenoid Assembly (Includes
			Parts Marked *)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	NO.	UULD	
13	307–2930	1	*Valve, Solenoid
14	323-1865-02	2	*Terminal, Male
15	323-1864-02	1	*Plug
16	331–0567	1	*Connector
17	850-0025	2	*Washer, Lock
18	505-1496	1	Tee, Reducing
19	502-1352	1	Fitting–90° Hose Barb
20	503–0633	1	Hose
21	503–1135	2	Clamp, Hose
22	517-0094	1	Caplug
23	502-0308	2	Plug, Pipe Socket Head
24	502-1286-02	1	Plug, Pipe
25	505-0102	2	Nipple, Close
26	501–0648	1	Hose, Fuel (Spec 1385)


\* - Parts Included in Solenoid Assembly 187-5028



Pressure Switch (H545)

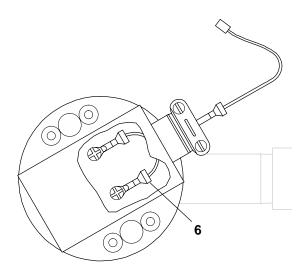

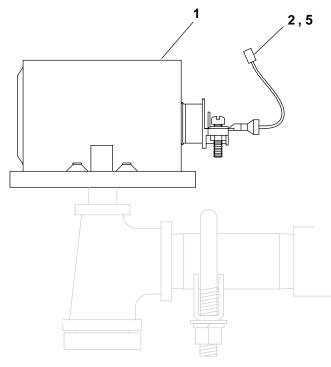


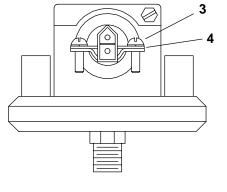


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	148–1155	1	Switch Assembly, Pressure	4	331–0567	1	Connector
1	307–2951	1	Switch, Pressure	5	323-1865-02	2	Terminal, Male
2	323-1864-02	1	Plug (J12)	6	332–2569	2	Terminal, Lug
3	850-0025	2	Washer, Lock				



Dual Fuel System GCAB, GCAC

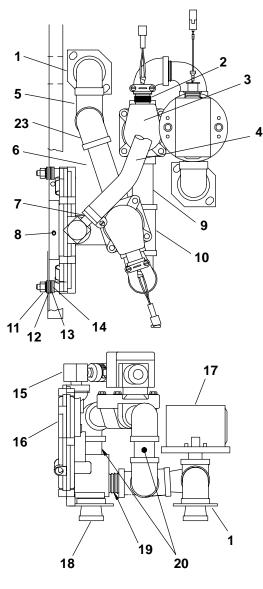

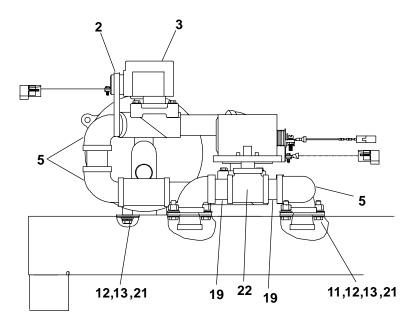


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3 4 5	187–5253–02 332–1389 187–5028 503–0633 505–1565–05 505–1569	2 2 AR 5 1	Elbow, 90° Strap, Tiedown Solenoid Assembly Hose Elbow, Street – 90° (3/4") Nipple, Black Steel $(3/4 \times 3-1/2")$
	503-1135	2	Clamp, Hose
8 9	509–0356 505–0332	1 1	Seal, Regulator Nipple, Black Steel (3/4 x 3")
10	505–0166	1	Tèe, Black Iron Pipe (3/4")
11		6	Nut, Hex (1/4"–20)
12	850–0040	8	Washer, Lock Spring Helical (1/4")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	526-0054	16	Washer, Flat (1/4")
14	187–5095–36	2	Screw, Machine Hex Washer Head (1/4–20 x 1–1/2")
15	502-1352	1	Fitting, Hose Barb – 90°
16	187–5206	1	Regulator, Low Pressure NG
17	148–1155	1	Switch Assembly, Pressure
18	517–0094	2	Caplug
19	505-0102	3	Nipple, Close (3/4")
20	505–0085	2	Nipple, Black Steel (3/4" x 2)
21	800-0005	6	Bolt, Hex (1/4–20 x 3/4")
22	505–1496	1	Tee, Reducing (3/4 X 1/4 x 3/4")
23	505–0132	1	Elbow, 90° (3/4")




\_ \_

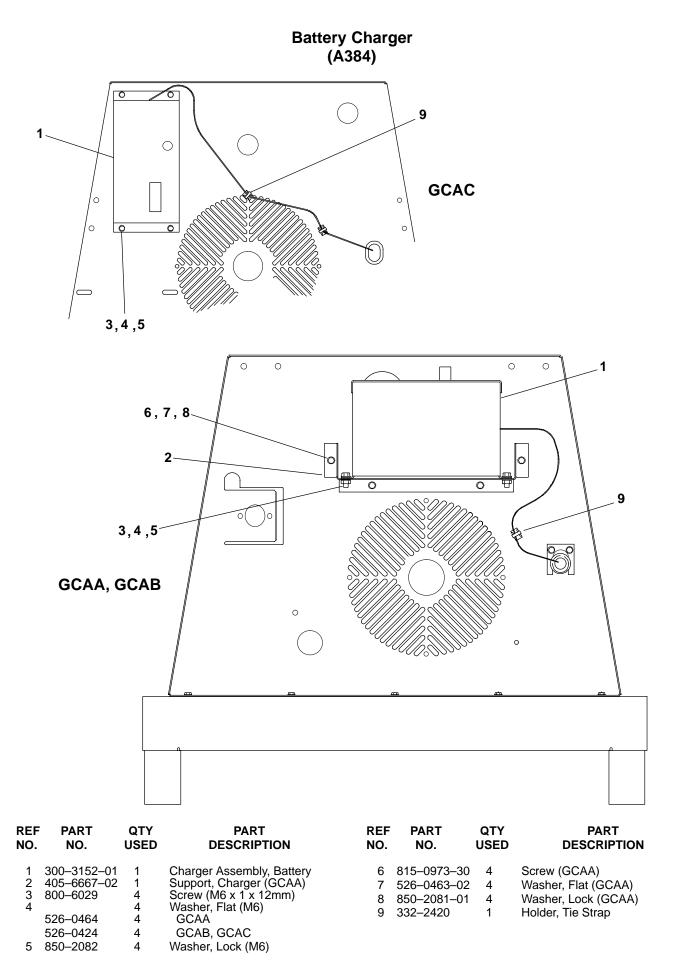




Battery Pad (A381)

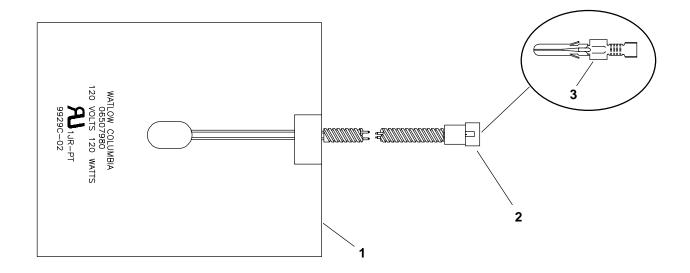

REF	PART	QTY	PART	REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION	NO.	NO.	USED	DESCRIPTION
	333–0647 333–0648	1 1	Pad Assembly, Heater Pad, Heater		323–1864–02 323–1865–02		Plug Terminal, Male




16

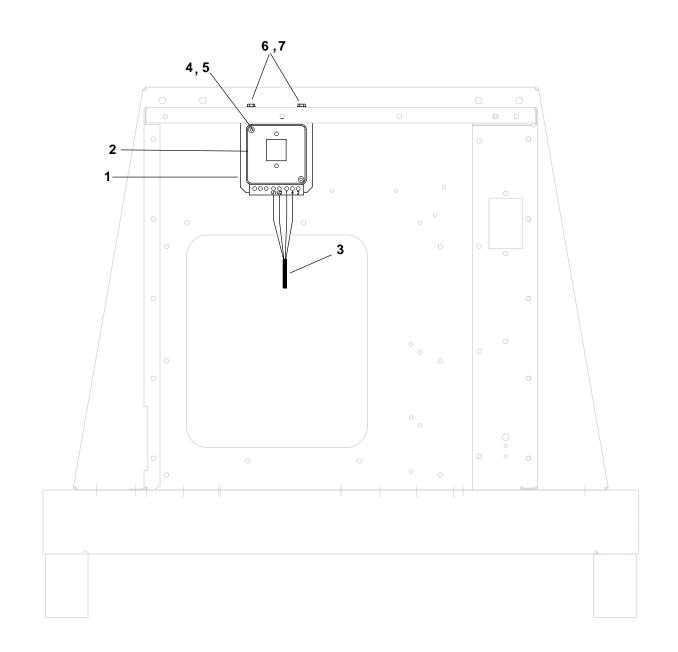

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1 2	319–4281–02 307–2954	1 1	Bracket, Mounting Timer, Exercise	5	870–0183	2	Nut and Captive Washer (#6–32)
3 4	338–3935 812–0061	1 2	Harness, Wiring Screw, Slotted Round	6	815–0973–30	2	Screw, Machine (#10–32 x 1/2")
			Head (#6–32 x 3/8")	7	870-2226-05	2	Nut, Hex (#10–32)




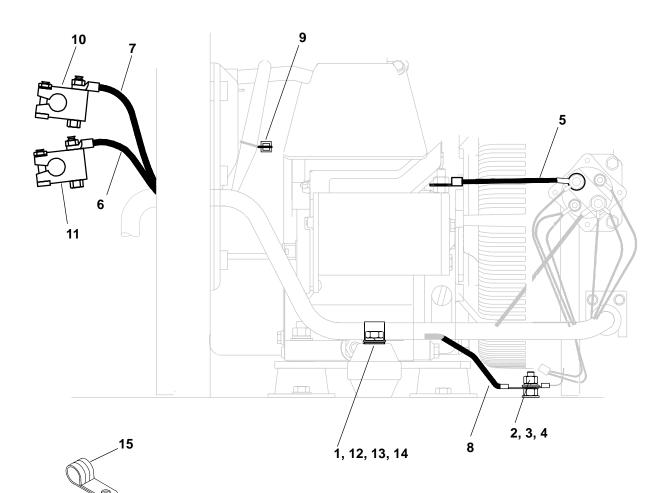

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
	000 0740		Oleman Orighting Lang
1	332–3712	1	Clamp, Cushion Loop
2	862–0001	1	Nut, Hex (1/4"–20)
3	526–0354	1	Washer, Flat (1/4")
4	850-0040	1	Washer, Lock (1/4")
5	187-5034-01	1	Cable Assembly
6	187-5034-02	1	Cable Assembly
7	187-5034-04	1	Cable Assembly
8	187-5038-02	1	Strap, Ground
9	332–2420	AR	Holder, Tie Down

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
10	416–1054	1	Adapter, Battery – Pos.
11	416-1055	1	Adapter, Battery – Neg.
12	800-3052-06	1	Bolt, Hex Head
			(3/8–16 x 3/4")
13	850-2081-04	1	Washer, Lock (3/8")
14	526-0463-05	1	Washer, Flat (3/8")
15	332-1022	2	Clamp, Cushion Loop




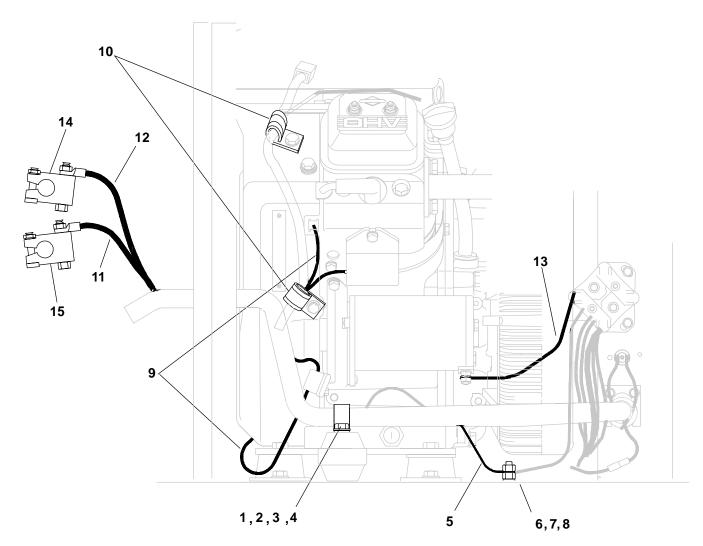

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332–3712	1	Clamp, Cushion Loop	9	187–5159	1	Wire, Engine
2	800-3052-06	1	Bolt, Hex Head	10	332-1022	2	Clamp, Cushion Loop
			(3/8–16 x 3/4")	11	187-5034-04	1	Cable
3	850-2081-04	1	Washer, Lock (3/8")	12	187-5034-02	1	Cable
4	526-0463-05	1	Washer, Flat (3/8")	13	187-5034-01	1	Cable
5	187-5038-02	1	Strap, Ground	14	416–1055	1	Adapter, Battery – Neg.
6	862-0001	1	Nut, Hex (1/4"–20)				GCAC
7	526-0354	1	Washer, Flat (1/4")	15	416–1054	1	Adapter, Battery – Pos.
8	850–0040	1	Washer, Lock (1/4")				GCAC




## **Ground Stud**

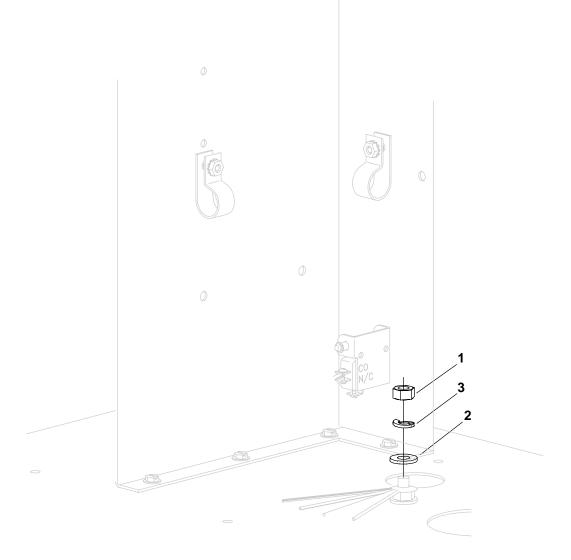


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	1	Nut, Hex (1/4"–20)
2	526-0354	1	Washer, Flat (1/4")
3	850-0040	1	Washer, Lock (1/4")



Enunciator (H514)

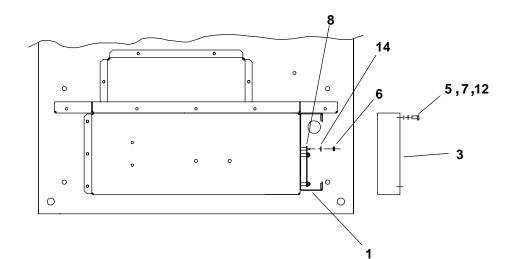

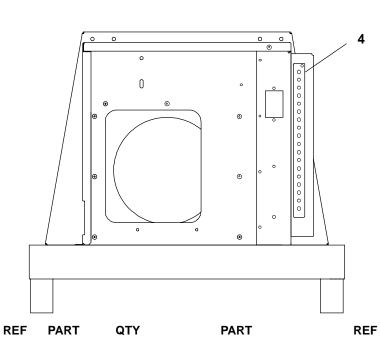

		9	10, 11
			_{
-	QTY	PAR	T

13

NO.	NO.	USED	DESCRIPTION
1	319-4314-02	1	Base, Enunciator
2	319–4329	1	Board, Enunciator
3	319-4315-02	1	Cover, Base
4	098–7714	1	Label, LED
5	800–2029	6	Screw, Full Thread Cap (M6–1 x 12mm)
6	187-5007-02	6	Nut and Washer (9/64")
7	526-2080	6	Washer, Flat (M6)
8			Standoff (9/64–32 x 1/2")
	319–4188	6	GCAB
	332–3621	6	GCAC
9	187–5001	1	Grommet

PART	QTY
NO.	USED

6

1

6

- 10 815–0973–30 4 11 870–2226–05 4
- 12 850–2006
- 13 335–0185
- 14 526–1002

NO.


Screw, Machine (3/16–32 x 1/2") Nut and Washer (3/16"–32) Washer, Lock (M6) Cable Assembly


DESCRIPTION

Washer, Flat (#6)



Gas Detector (H625)

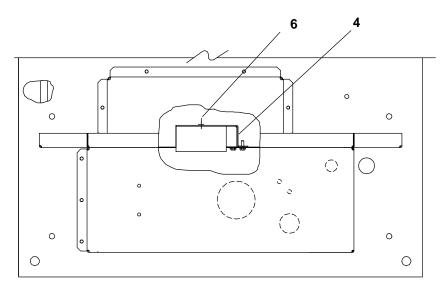


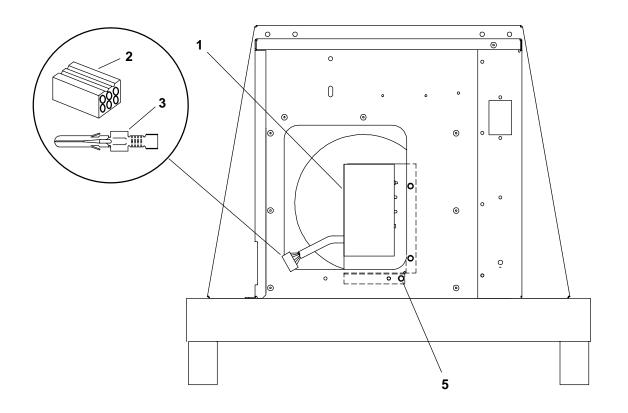

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300–5416	1	Detector Assembly, Gas (Includes Plug and Terminal)	-	319–4353–02 815–0973–30	-	Bracket, Detector Screw, Machine
2	323–1892	1	Plug, 6 Pin				(3/16–32 x 1/2")
3	323–1865–02	6	Terminal, Male	6	818–0245	2	Rivet, Blind




### Pad Shear Detector (H626)

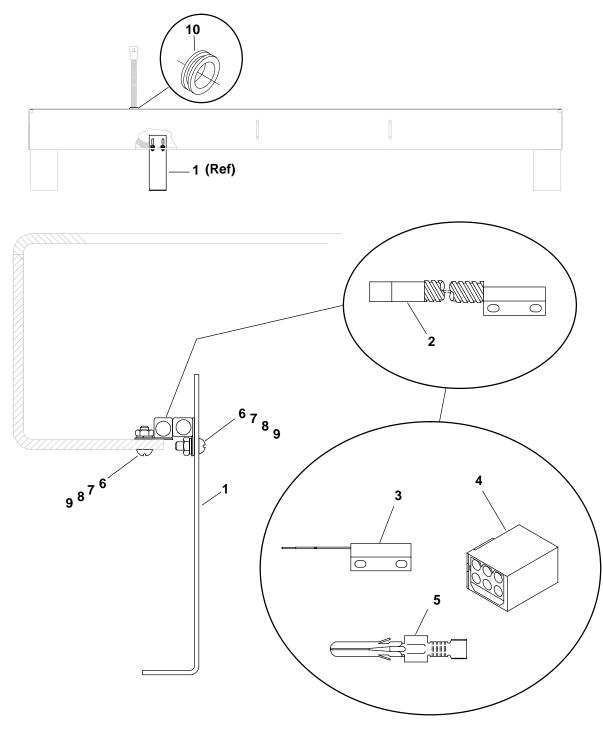

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-6666-02	1	Bracket, Shear Detector	6	819-1136-02	4	Screw, Machine
2	405-6669	1	Switch Assembly (Includes				(7/64–40 x 3/8")
			Switch, Plug and Terminal)	7	526-0463-06	4	Washer, Flat (#4)
3	319–4331	1	Switch, Shear Pad	8	850-2081-05	4	Washer, Lock (#4)
4	323-1864-02	1	Plug	9	860-2026-17	4	Nut, Hex (7/64"–40)
5	323–1865–02	1	Terminal, Male	10	508–0141	1	Grommet



Front Baffle GCAA

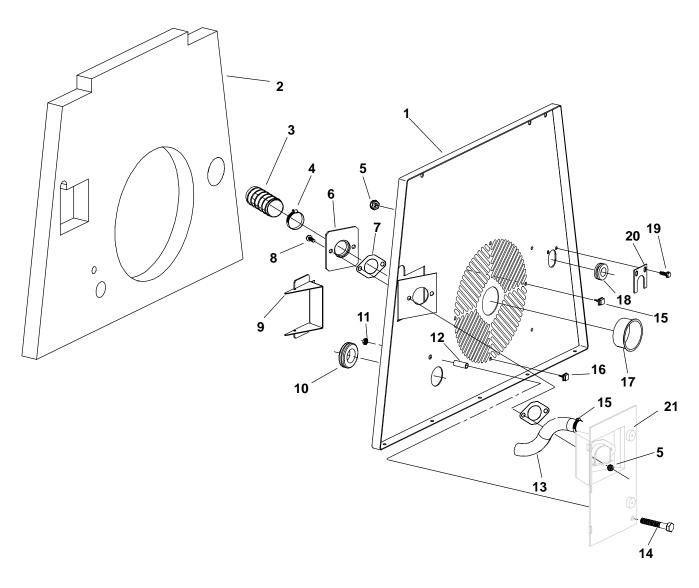


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134–5224–02	1	Baffle, Front
2	187–5103	1	Foam, Hot/Cold Baffle
3	140–3241	1	Hose, Air Cleaner (0140–3242 Bulk)
4	503–1139	1	Clamp, Hose
5	870-2226-05	4	Nut and Captive Washer (3/16"–32)
6	140-3237-02	1	Tube, Air
7	140–3239	2	Gasket
8	815–0973–32	2	Screw, Machine Hex (3/16–32 x 3/4")
9	405-6401-02	1	Panel, Filler
10	187–5001	1	Grommet
11	870-2226-06	1	Nut and Captive Washer (1/4"–20)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12	187–5081–02	1	Spacer, Air Cleaner
13	148–1136	1	Hose (0149–2631 Bulk)
14	800-3052-03	1	Bolt, Hex (1/4–20 x 1–3/4")
15	332–2420	2	Holder, Tie Strap
16	503–1133	1	Clamp, Hose
17	517-0089	1	Caplug
18	187–5002	1	Grommet
19	187–5095–21	2	Screw, Machine Hex Head (3/16–32 x 1/2")
20 21	187–5078–02	1	Plate, Cover Cleaner, Air (See Engine Dealer for Replacement Parts)




Front Baffle GCAB, GCAC

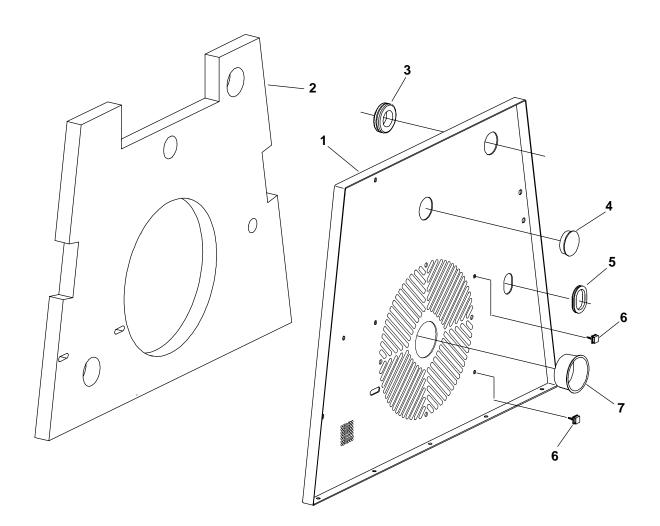

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	134–5219–02	1	Baffle, Front	4	517-0138-05	1	Plug, Hole
2			Foam, Hot/Cold Baffle	5	508–1136	1	Grommet
	187–5179	1	GCAB	6	332–2420	2	Holder, Tie Strap
	187–5180	1	GCAC	7	517-0089	1	Caplug
3	187–5001	1	Grommet				



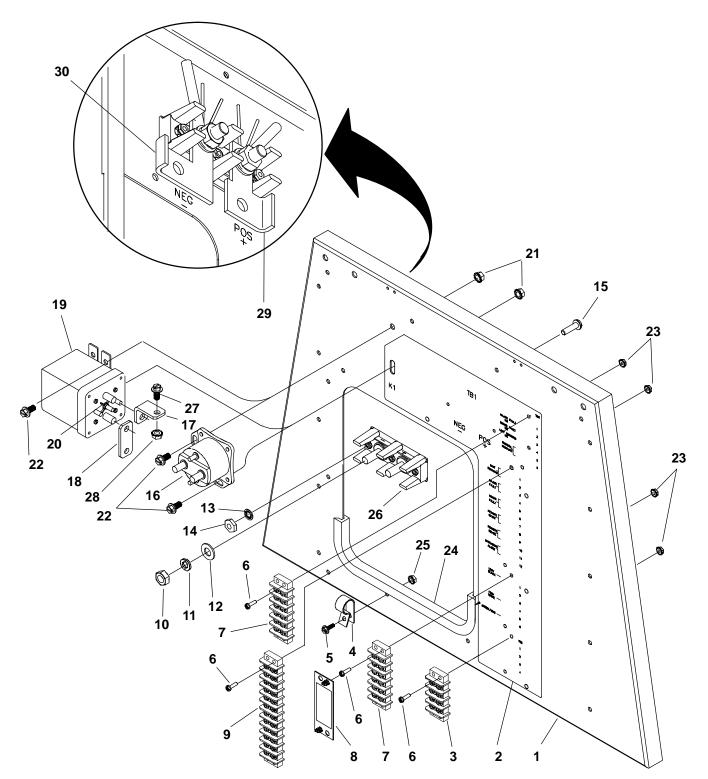




## **Rear Baffle**


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Baffle, Hot/Cold – Rear				(100A) (48V Sets GCAA)
	134-5225-02	1	GCAA	17	337-3445-02	1	Bar, Bus (24V Sets GCAA)
	187–5149	1	GCAB		001 0110 02	•	(48V Sets GCAC)
	134-5215-02	1	GCAC	18	337-3448-02	1	Bar, Bus (24V Sets GCAA)
2			Label, Terminal Strip				(48V Sets GCAC)
	098–7740	1	GCÁA	19	187-5005-01	1	Contactor, DC (200A)
	098–7695	1	GCAB, GCAC				(24V Sets GCAA) (48V Sets
3	187–5133–04	1	Block, Terminal (TB5) (2–1/2")				GCAC) (Includes Diode Assy.)
4	332–1114	2	Clamp, Cable	20	187-5257-02	1	Diode Assembly
5	815-0973-30	2	Screw, Machine Hex Washer	21	870-2226-06	2	Nut and Captive Washer
			Head (3/16–32 x 1/2")				(1/4"–20) (48V)
6	819-1136-06	8	Screw, Machine Pan Head	22			Screw, Machine
			(9/64–32 x .5/8")		815-0973-40	2	GCAA (1/4–20 x 1/2")
7	332–3741	2	Block, Terminal (TB3, TB6)		815-0973-10	2	GCAC (9/64–32 x 3/8")
			(Part of Wiring Harness)	23	870-2226-02	8	Nut and Captive Washer
8	300–5355	1	Kit, AC Terminal Block Cover				(9/64"–32)
			(Includes Cover and Latch)	24	508–1136	1	Grommet, Extruded (12")
9	187–5133–12	1	Block, Terminal (TB2) (6")	25	870-2226-05	2	Nut and Captive Washer
			(Part of Wiring Harness)				(3/16"–32)
10	860-2026-04	2	Nut, Hex (3/8"–24)	26	187–5256	1	Board, Terminal
11	850-2081-04	2	Washer, Lock (3/8")	27	187–5095–30	2	Screw, Machine Hex Washer
12	526-0463-05	2	Washer, Flat (3/8")				(1/4–20 x 1/2")
13	854-0038-01	2	Washer, Lock IT (9/64")	28	187-5007-06	2	Nut & Captive Washer
14	860-2026-18	2	Nut, Hex (9/64"–40)				(1/4"–20)
15	815–0973–11	2	Screw, Machine Pan Head	29	337-3453-02	1	Bus Bar (GCAC)
			(9/64–40 x 1/2")	30	337-3454-02	1	Bus Bar (GCAC)
16	307–2943	1	Switch, Solenoid (K1)				



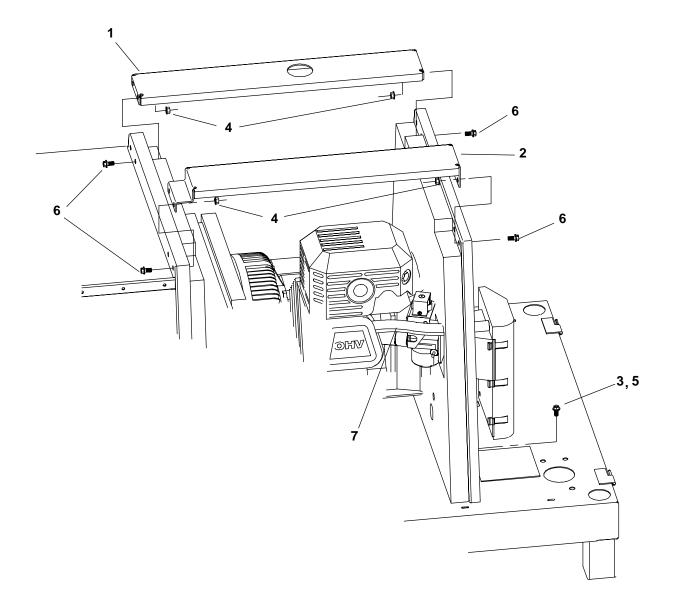

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	187–5070–02	1	Support, Baffle	5	815-0973-30	5	Screw, Hex Washer
2	187-5077-02	1	Support, Right Side	6	815-0973-40	8	Screw, Hex Washer
3	870-2226-05	5	Nut and Captive Washer	7	503–1137	1	Clamp, Hose – Low Pressure
4	870-2226-06	8	Nut and Captive Washer				•


Current Power Generation Baffle Support GCAB, GCAC

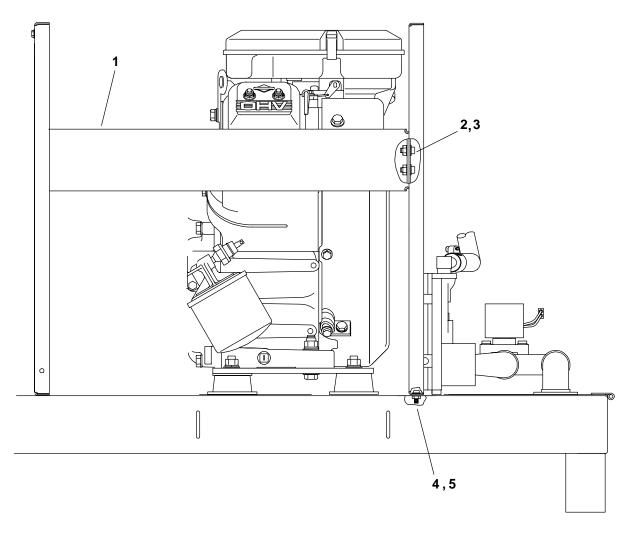


PART NO.	QTY USED	PART DESCRIPTION
187–5070–02	2	Support, Baffle
870-2226-06	8	Nut and Captive Washer (1/4"–20)
815–0973–40	8	Screw, Hex Washer Head Machine (1/4–20 x 1/2")
	NO. 187–5070–02 870–2226–06	NO.   USED     187–5070–02   2     870–2226–06   8

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	815–0973–30	5	Screw, Hex Washer Head Machine (3/16–32 x 1/2")
5	870–2226–05	5	Nut and Captive Washer (3/16"–32)



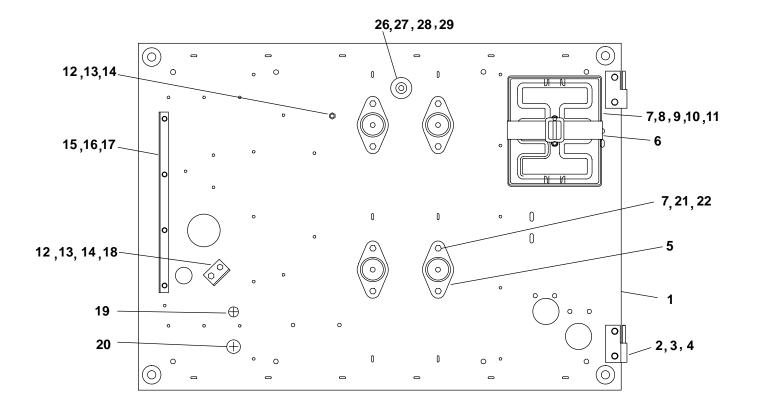

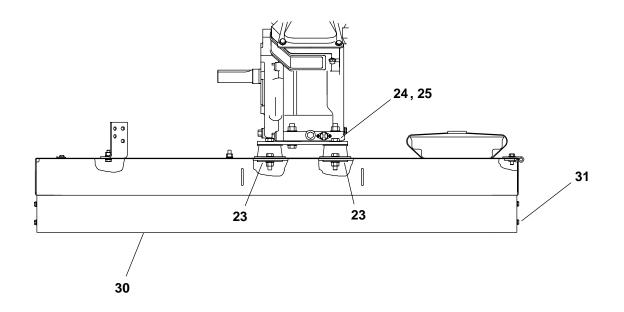




## Base Assembly

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Skid	16	815-0973-30	4	Screw, Hex Washer Head
	187-5015-02	1	GCAA				(3/16–32 x 1/2")
	187–5150–02	1	GCAB, GCAC	17	870-2226-05	4	Nut and Captive Washer
2	406–0924	2	Hinge, Male				(3/16"–32)
3	403-4337-02	2	Plate, Nut	18	332-3722-02	1	Bracket, Lug
4	815-0973-41	4	Screw, Hex Washer	19	517-0136-01	1	Plug, Hole
			(1/4–20 x 5/8")	20	517-0138-02	1	Plug, Hole
5			Mount, Shock	21	800-3052-05	8	Bolt, Hex (5/16–18 x 1")
	187–5011	4	GCAA	22	870-2227-01	8	Nut, Lock (5/16"–18)
	187–5093	4	GCAB, GCAC	23	526-0462-01	6	Washer, Snubbing
6	416-1052	1	Strap, Battery	24	800-3052-07	4	Bolt, Hex (3/8–16 x 2–1/4")
7	526-0463-04	18	Washer, Flat (5/16")	25	870-2227-02	4	Nut, Self Locking Hex
8	416-1050	1	Tray, Battery				(3/8"–16)
9	800-3052-04	2	Bolt, Hex (5/16–18 x 3/4")	26	332-2512	1	Standoff, Insulator
10	850-2081-03	2	Washer, Lock (5/16")	27	800-3052-06	1	Bolt, Hex (3/8–16 X 3/4")
11	860-2026-02	2	Nut, Hex (5/16"–18)	28	850-2081-04	1	Washer, Lock (3/8")
12	800-3052-02	3	Bolt, Hex (1/4–20 x 1")	29	526-0463-05	1	Washer, Flat (3/8")
13	856-0022	6	Washer–EIT Lock (1/4")	30	405-6702-02	2	Skirt
14	860-2026-01	3	Nut, Plain Hex (1/4"–20)	31	821-6002-02	4	Screw, Hex Head SEMS
15	187–5075–02	1	Angle, Door				(M6x1x12)



Enclosure Assembly GCAA, GCAB

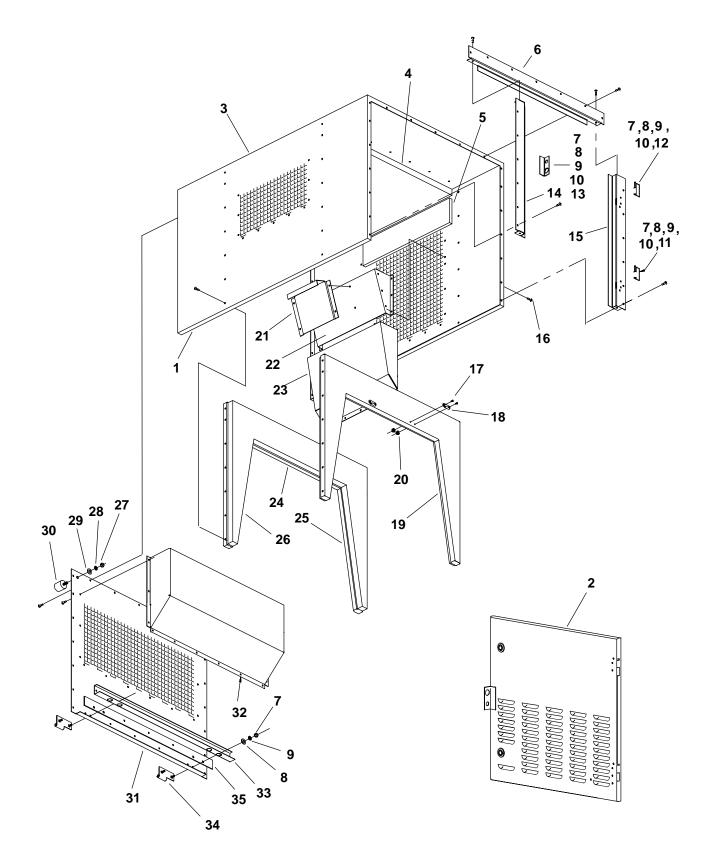




# Enclosure Assembly GCAA, GCAB

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405–6528	AR	Edging, Trim (25.4 FT.)	20	187–5007–01	4	Nut
2	405–6417	1	Door Assembly, Access (See Separate Page for	21 22	155–3293	1	Deflector, Exhaust Baffle
			Components)		134–5226–02	1	Upper Right Side
3	405–6396	1	Back, Enclosure		134-5217-02	1	Left Side
4	187–5099	1	Foam, Enclosure – Top	23	134–5222–02	1	Baffle, Housing
5	187–5098	1	Foam, Enclosure – Upper	24	187–5097	2	Foam, Baffle – Top
6	405–6397	1	Panel, Rear – Upper	25	187–5100	2	Foam, Baffle – Left Side
7	862-0001	10	Nut, Hex	26	187–5101	2	Foam, Baffle – Right Side
8	526-0354	10	Washer, Flat	27	862-0015	2	Nut
9	850-0040	10	Washer, Lock	28	850-0045	2	Washer, Lock
10	816-0093	6	Bolt, Carriage	29	526-0397	2	Washer, Flat
11	406-0942	1	Hinge, Male	30	187–5102	2	Bumper
12	406-0960	1	Hinge, Male	31	405–6411	1	Panel, Front
13	406-0939	1	Bracket, Door – Lock	32	134-5216-02	1	Baffle, Front Panel
14	405–6413	1	Panel, Rear – Left Side	33	405-6410-02	1	Reinforcement, Hinge
15	405–6415	1	Panel, Rear – Right Side	34	406–0941	2	Hinge, Female
16	818-0242-01	127	Rivet, Aluminum	35	405–6634	1	Spacer, Hinge
17	187-5008-01	4	Screw		187–5018	1	Enclosure Assembly
18	406-0945	2	Keeper				(Includes All Parts on this Page
19	134–5218–02	2	Baffle				Except the Trim Edging)



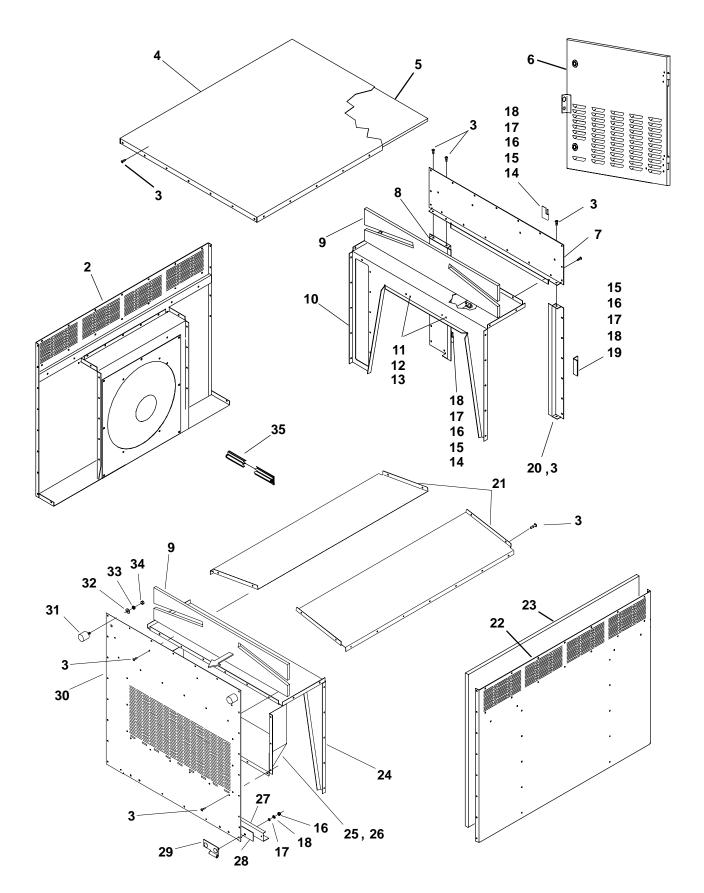




### Enclosure Assembly GCAC

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	187–5148	1	Enclosure Assembly, Complete	16	860-2026-01	10	Nut, Hex (1/4"–20)
			(Includes All Parts on this	17	526-0463-03	10	Washer, Flat (1/4")
			Page Except the Edging)	18	850-2081-02	10	Washer, Lock
2	405–6495	1	Panel, Right Side (See Sepa-	19	406–0939	2	Bracket, Door – Lock
			rate Page for Components)	20	405–6413	1	Panel, Rear – Left Side
3	818-0242-01	157	Rivet, Aluminum	21	155-3296-02	2	Deflector, Exhaust
4	405–6501	1	Panel, Top	22	405–6496	1	Panel, Left Side
5	187–5183–04	1	Foam, Enclosure	23	187–5183–02	1	Foam, Enclosure
6	405–6417	1	Door Assembly, Access	24	134–5227–02	1	Baffle, Front
			(See Separate Page for	25	134–5216–02	1	Baffle, Front Panel
			Components)	26	187–5254	1	Foam
7	405–6498	1	Panel, Rear – Upper	27	405-6407-02	1	Reinforcement, Hinge
8	405–6506	1	Panel, Rear – Right Side	28	405–6635	1	Spacer, Hinge
9	187–5187	2	Foam, Enclosure	29	406–0941	2	Hinge, Female
10	134–5228–02	1	Baffle, Rear	30	405–6500	1	Panel, Front
11	406–0945	2	Keeper	31	187–5102	2	Bumper
12	819–1136–01	4	Screw, Machine – Pan Head	32	850-2081-03	2	Washer, Lock (5/16")
			(#4–40 x 5/16")	33	526-0463-04	2	Washer, Flat (5/16")
13	870-2226-01	4	Nut (#4–40)	34	860-2026-02	2	Nut (5/16"–18)
14			Hinge, Male	35	405–6528	AR	Edging, Trim (25.4 FT.)
	406–0960	1	Top Hinge				
	406–0942	1	Bottom Hinge				
15	816–0093	6	Bolt, Carriage				




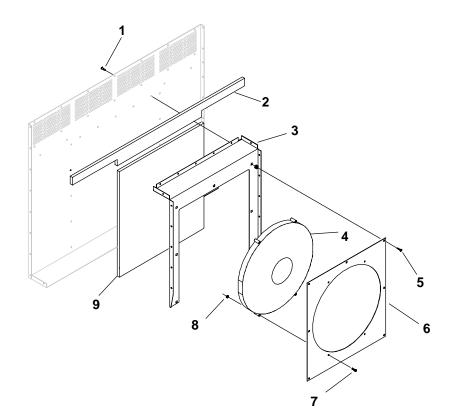

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	518–0696	7	Screw, Panel	6	399-0126-02	1	Plate, Fan
2	187–5188	1	Foam, Enclosure	7	815-0973-32	4	Screw, Hex Washer Head
3	399-0127-02	1	Bracket, Fan				(3/16–32 x 3/4")
4	187–5160	1	Fan Assembly	8	870-2226-05	4	Nut and Captive Washer
5	815–0378	7	Screw, Self–Tapping				(3/16"–32)
			(#14 x 3/4")	9	187–5183–01	1	Foam, Enclosure




Service Door

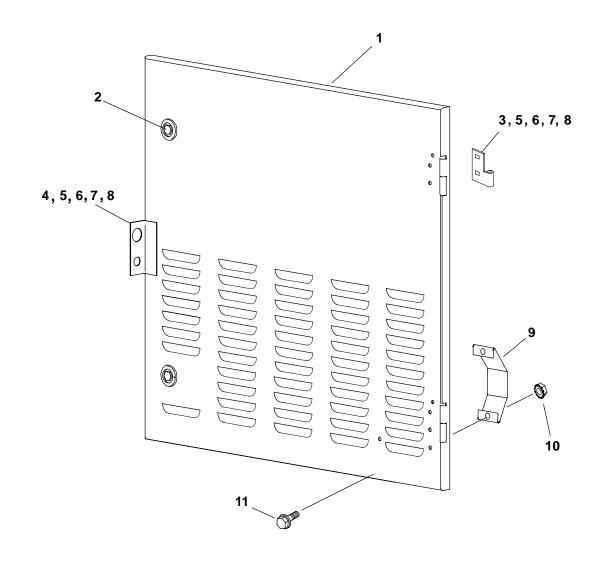

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	405–6417	1	Door Assembly, Complete	6	526-0354	12	Washer, Flat (1/4")
1	405–6499	1	Door, Access	7	850-0040	12	Washer, Lock (1/4")
2	187–5086	2	Latch, Bellcore	8	862-0001	6	Nut, Hex (1/4"–20)
3	406–0943	2	Hinge, Female	9	405–6512	1	Bracket, Actuator Switch
4	406–0939	1	Bracket, Door Lock	10	187-5007-05	2	Nut and Captive Washer
5	816-0093	6	Bolt, Carriage				(3/16"-32)
			(1/4"–20 x 1/2")	11	187–5095–21	2	Screw, Hex (3/16-32 x 1/2")



## Alternator

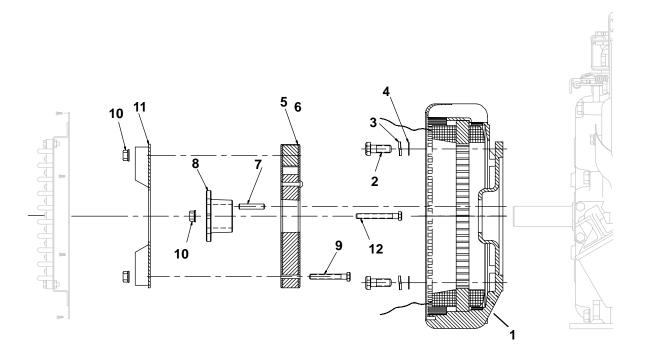


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.
1			Housing Assembly, Stator	8
	187–5232	1	GCAA	9
	187–5227	1	GCAB	
	187–5234	1	GCAC	
2	800–0050	4	Bolt, Hex (3/8–16 x 1")	
3	850-0050	4	Washer, Lock (3/8")	10
4	526–0459	4	Washer, Flat (13/32")	11
5			Rotor Assembly (Includes	12
			Decal)	
	201–3579	1	GCAA	
	201–3578	1	GCAB	
	201–3577	1	GCAC	
6			Decal, Rotor	
	098-7578-04	1	GCAA	
	098-7578-03	1	GCAB	
	098-7578-02	1	GCAC	
7	515-0318-03	1	Кеу	

PART NO.	QTY USED	PART DESCRIPTION
187–5228–02	1	Bushing
		Bolt, Hex
800-3049	4	GCAA (1/4–20 x 1–3/8")
800-0011	6	GCAB (1/4–20 x 2")
800–0010	4	GCAC (1/4"–20 x 1–3/4")
870–2219	6	Nut, Lock (1/4"–20)
187–5229	1	Fan, Cooling
800–0010	2	Bolt, Hex (1/4"–20 x 1–3/4") (GCAA)
	NO. 187–5228–02 800–3049 800–0011 800–0010 870–2219 187–5229	187-5228-02 1   800-3049 4   800-0011 6   800-0010 4   870-2219 6   187-5229 1




### **Alternator Cover**

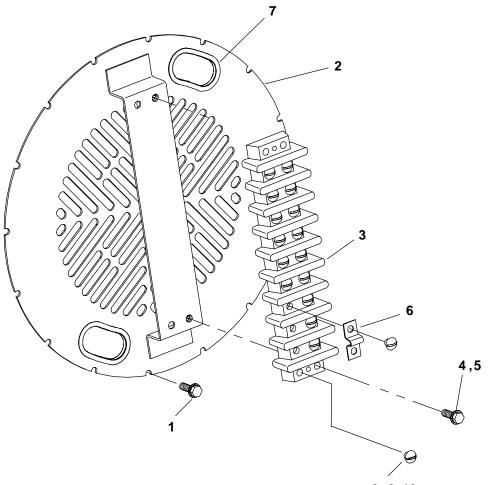

8	,	9	,1	0

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	187–5143	1	Cover Assembly – Complete	6	332-3625-03	2	Jumper
1	815–0266	8	Screw	7	508–1136	AR	Grommet, Extruded (3/4")
2	187-5267-02	1	Cover, Alternator	8	332–1081	2	Clamp, Cushion (GCAA)
3	332-3624-09	1	Block, Terminal	9	187-5095-25	2	Screw (3/16-32 x 1") (GCAA)
4	187-5095-23	2	Screw, Hex (3/16–32 x 3/4")	10	870–0131	2	Nut (3/16"–32) (GCAA)
5	870–0131	2	Nut (3/16"-32)				




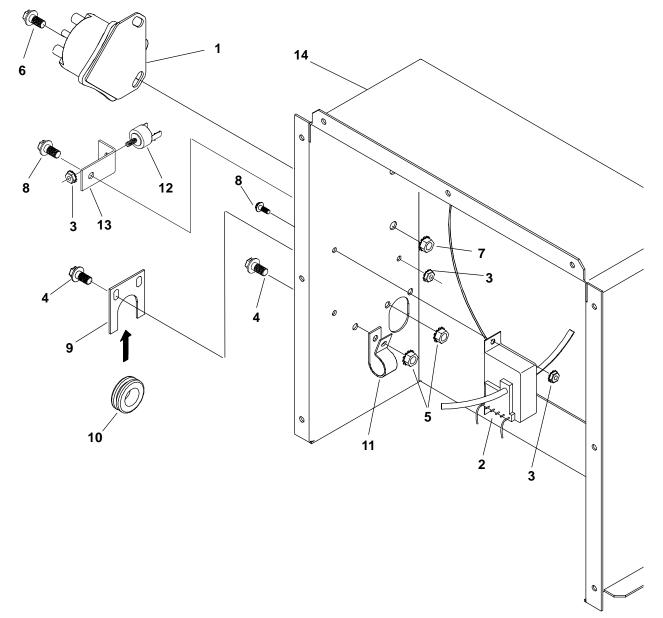

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	307–2943	1	Switch, Solenoid (100A) (K2)	8			Screw, Machine Hex Washer
2	315–0818	1	Transformer, Current				Head (9/64–32 x 3/8")
			(CT1) (Part of Wiring Harness)		815-0973-10	2	GCAA, GCAB
3			Nut and Captive Washer		815-0973-10	3	GCAC
			(9/64"-32)	9	187-5078-02	1	Plate, Cover
	870-2226-02	2	GCAA	10	187–5002	1	Grommet, Extruded
	870-2226-02	4	GCAB	11	332–3682	1	Clamp, Cable (GCAA, GCAB)
4	815–0973–30	3	Screw, Machine Hex Washer Head (3/16–32 x 1/2")	12	187–5172	1	Thermostat, Air Temperature (GCAC)
5	870–2226–05	3	Nut and Captive Washer (3/16"–32)	13	399–0128–02	1	Bracket, Thermostat (GCAC)
6	815-0973-40	2	Screw, Machine Hex Washer	14			Panel, Air Baffle
			Head (1/4–20 x 1/2")		134-5223-02	1	GCAA
7	870–2226–06	2	Nut and Captive Washer (1/4"–20)		134–5229–02	1	GCAB, GCAC



Control Panel (Right Side)

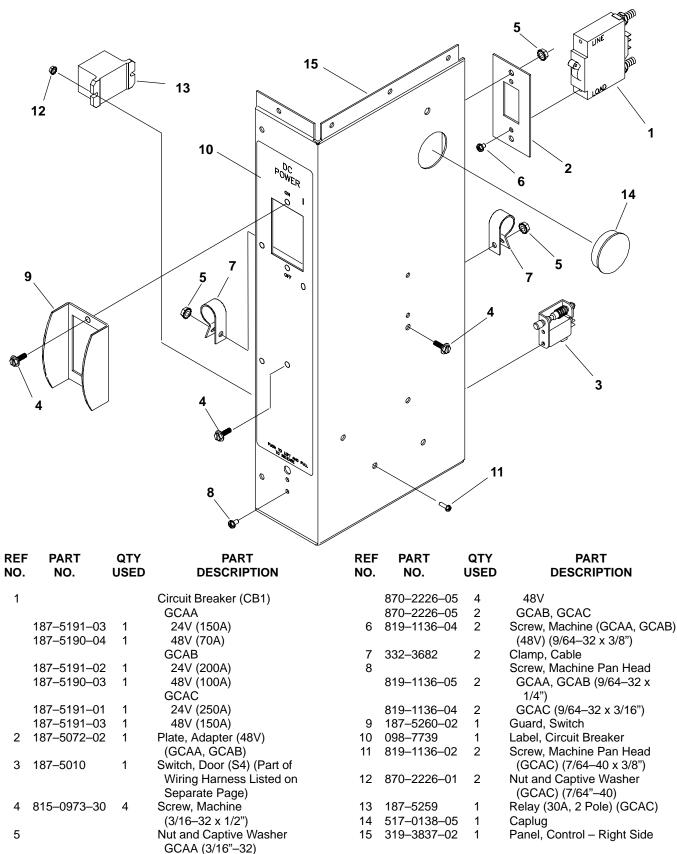




870-2226-05

2

24V

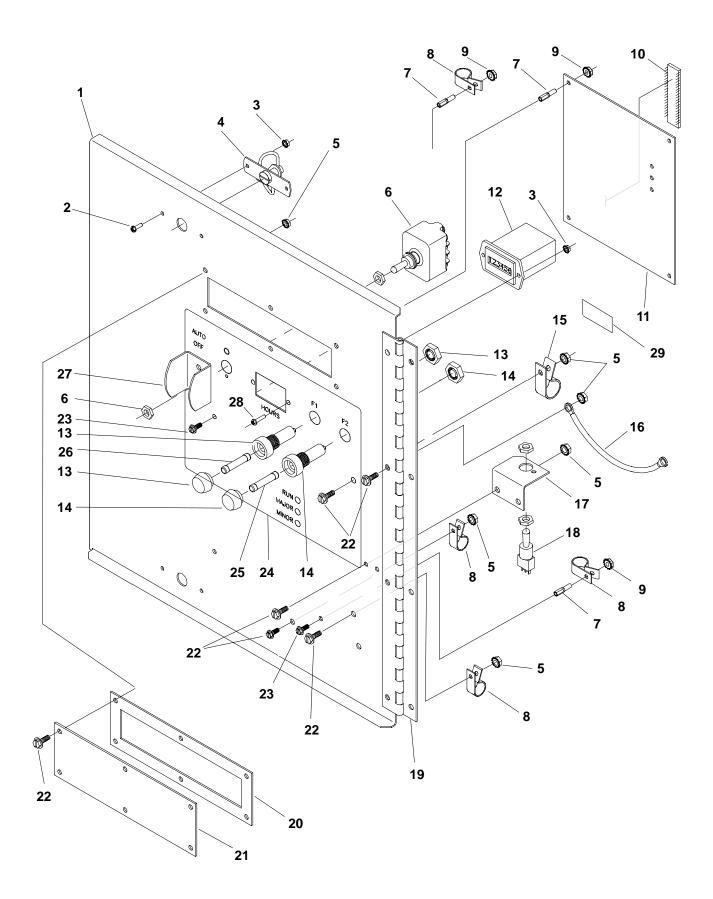




## **Control Door**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	-						
1	319-4276-02	1	Door, Control	15	332–3682	1	Clamp, Cable
2	819–1136–02	4	Screw, Machine Pan Head	16	187–5038–01	1	Strap, Ground
			(7/16–40 x 3/8")	17	405-6668-02	1	Bracket, Fuel Switch
3	870–2226–01	6	Nut and Captive Washer				(GCAC)
			(7/16"–40	18	308–1108	1	Switch, Toggle (GCAC)
4	406–0948	2	Latch, Spring	19	406-0949-02	1	Hinge
5			Nut and Captive Washer	20	319–4279	1	Gasket, Cover Plate
			(3/16"–32)	21	319-4277-02	1	Plate, Cover
	870-2226-05	17	GCAA	22			Screw, Machine Hex Washer
	870-2226-05	19	GCAC				Head (3/16–32 x 1/2")
6	187–5127	1	Switch (S1) (Includes Nuts)		815-0973-30	17	GCAÀ
			(Part of Wiring Harness		815-0973-30	19	GCAC
7	319–4188	4	Standoff	23			Screw, Machine Pan Head
8			Clamp, Cable		819-1136-05	4	GCAA (9/64–32 x 1/4")
	332-0905	2	GCAA		819-1136-04	4	GCAC (9/64–32 x 3/16")
	332-0905	4	GCAC	24	098–7738	1	Label, Door
9	870-2226-02	4	Nut and Captive Washer	25	187-5012-28	1	Fuse (F2) (5A)
			(9/64"-32)	26			Fuse (F1)
10	326-0330-xx		Microcontroller (Refer to Label		187-5012-32	1	GCAA (10A)
		1	on Existing Microcontroller		187-5012-35	1	GCAC (20A)
			for Specific Part Number)	27	187-5080-02	1	Guard, Switch
11	300-5414-02	1	Control Unit–PC Board	28	819-1136-03	2	Screw, Machine Pan Head
12	302-0885	1	Meter, Hour				(7/64–40 x 1/2")
13	187-5042-02	1	Holder Assembly, Fuse	29	098–7727	1	Label, Fuel Switch
			(Includes Cap and Nut)				
14	187–5042–01	1	Holder, Fuse (Includes				
			Cap and Nut)				



Control Panel (Left Side) GCAA

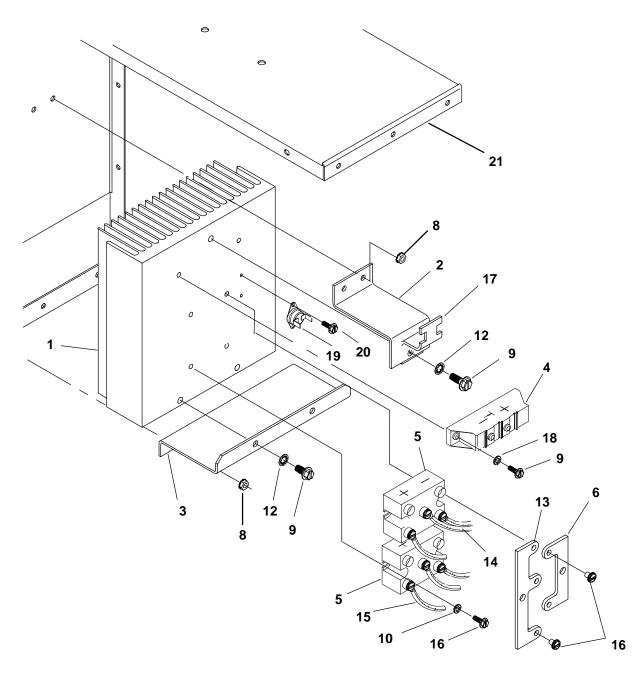




#### Control Panel (Left Side) GCAA

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	363–0192	1	Heatsink	11	860-2026-18	2	Nut, Hex (9/64"-32)
2	187-5076-02	1	Bracket, Heatsink	12	854-0038-02	3	Washer, Lock IT (1/4")
3	187-5068-02	1	Support, Heatsink	13			Bar, Bus
4			Diode Module		337-3447-02	1	24V
	358-0150-02	1	24V		337-3446-02	1	48V
	358-0148-01	1	48V	14			Cable
5			Diode Module		187–5040–01	1	Position 1
	358-0152-08	2	24V		187-5040-02	2	Position 2 & 3
	358-0152-08	1	48V	15	187-5040-03	3	Cable Assembly(24V)
6	337-3442-02	1	Bar, Bus (24V)				(Position 1, 2 & 3)
7	815-0973-30	16	Screw, Machine Hex Washer	16	815–0364	4	Screw (3/16–32 x 1/2")
			Head (3/16–32 x 1/2")	17	405-6408-02	1	Support, Cable
8	870-2226-05	16	Nut and Captive Washer (3/16"–32)	18	850-2081-02	2	Washer, Lock Spring Helical (1/4")
9	815–0973–40	9	Screw, Machine Hex Washer Head (1/4–20 x 1/2")	19	187–5082–01	1	Thermostat (S6) (Part of Wiring Harness)
10			Washer, Lock Spring Helical	20	815-0973-01	2	Screw (7/64–40 x 5/16")
			(3/16")	21	319-3838-02	1	Panel, Control Box – Left Side
	850-2081-01	14	24V				
	850-2081-01	7	48V				



Control Panel (Left Side) GCAB

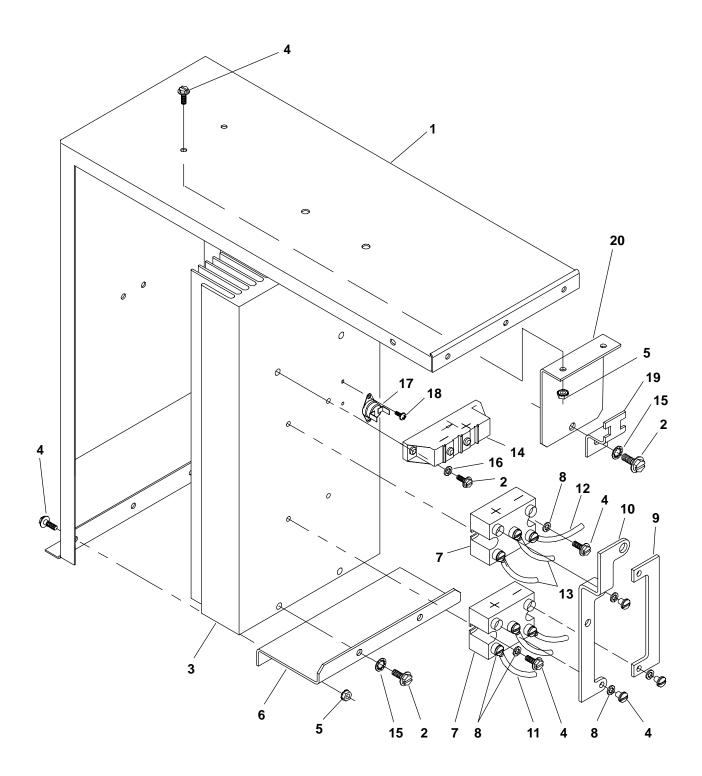




46

#### Control Panel (Left Side) GCAB

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	319-3838-02	1	Panel, Control Box – Left Side	10			Bar, Bus
2	815-0973-40	5	Screw, Machine Hex Washer		337-3457-02	1	24V
			Head (1/4–20 x 1/2")		337-3450-02	1	48V
3	363–0191	1	Heatsink	11	187–5040–03	3	Cable Assembly (24V)
4			Screw, Machine Hex Washer				(Position 1, 2, & 3)
			Head (3/16–32 x 1/2")	12	187–5040–01	1	Cable, Position 1
	815-0973-30	15	24V	13	187-5040-02	2	Cable, Position 2 & 3
	815-0973-30	10	48V	14			Diode Module
5	870-2226-05	5	Nut and Captive Washer		358-0150-01	1	270A (24V)
			(3/16"–32)		358-0150-02	1	165A (48V)
6	187–5068–02	1	Support, Heatsink	15	854-0038-02	3	Washer, Lock IT (1/4")
7			Diode Module	16	850-2081-02	2	Washer, Lock Spring (1/4")
	358-0152-08	2	24V	17	187–5082–01	1	Thermostat (S6) (Part of the
	358-0152-08	1	48V				Wiring Harness)
8			Washer, Lock Spring (3/16")	18	815–0973–01	2	Screw (7/64–40 x 5/16")
	850-2081-01	14	24V	19	405-6408-02	1	Support, Cable
	850-2081-01	7	48V	20	187–5161–02	1	Bracket, Mounting Heatsink
9	337-3441-02	1	Bar, Bus (24V)				



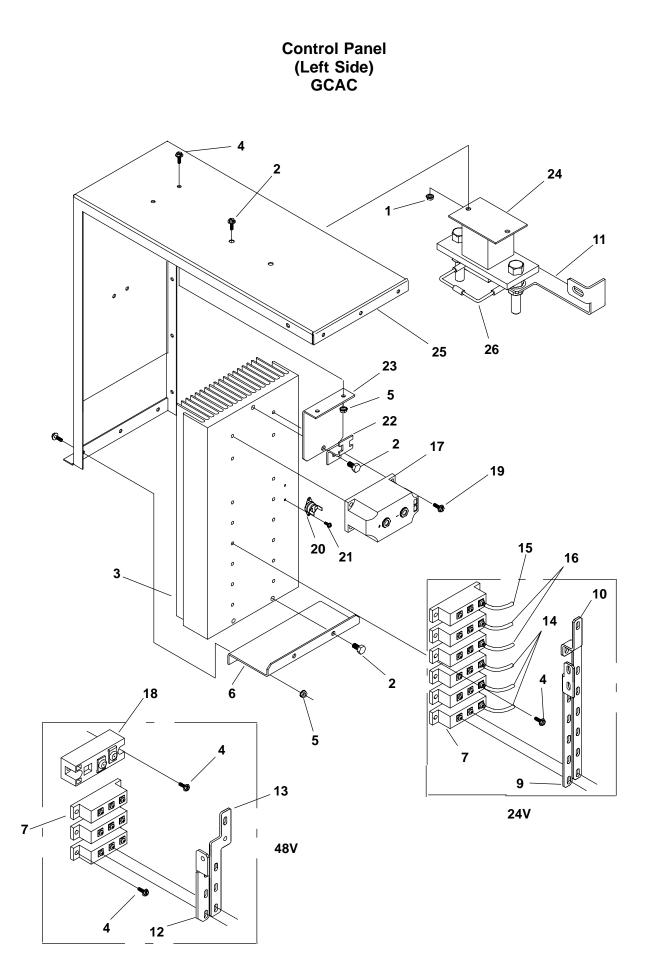




#### Control Panel (Left Side) GCAC

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-2226-06	2	Nut and Captive Washer	12	337–3443–02		Bar, Bus (48V)
			(1/4"–20)	13	337-3444-02	1	Bar, Bus (48V)
2	815–0973–40	5	Screw, Machine Hex Washer Head (1/4–20 x 1/2")	14	187–5040–03	3	Cable Assembly (24V) (Position 1, 2, & 3)
3	363–0193	1	Heatsink	15	187-5040-01	1	Cable, Position 1
4			Screw, Machine Hex Washer	16	187-5040-02	2	Cable, Position 2 & 3
			Head (3/16–32 x 1/2")	17	358-0150-01	1	Diode–270A (24V)
	815-0973-30	17	24V	18	358-0150-02	1	Diode-165A (48V)
	815-0973-30	13	48V	19	815-0973-32	4	Screw, Machine
5	870-2226-05	5	Nut and Captive Washer				(3/16–32 x 3/4") (24V)
			(3/16"–32)	20	187-5082-01	1	Thermostat (S6) (Part of the
6	187-5068-02	1	Support, Heatsink				Wiring Harness)
7			Rectifier, Model (91A)	21	815-0973-01	2	Screw (7/64–40 x 5/16")
	358-0149-01	6	24V	22	405-6408-02	1	Support, Cable
	358-0149-01	3	48V	23	187-5161-02	1	Bracket, Mounting Heatsink
8	815–0364	4	Screw	24	187–5193	1	Contactor-400A (24V)
9	337-3438-02	1	Bar, Bus (24V)	25	319-3838-02	1	Panel, Control Box – Left Side
10	337-3437-02	1	Bar, Bus (24V)	26	187-5257-01	1	Diode Assembly
11	337-3439-02	1	Bar, Bus (24V)				



# Control Wiring (Left Side)

Typical Wiring (for Reference Only)

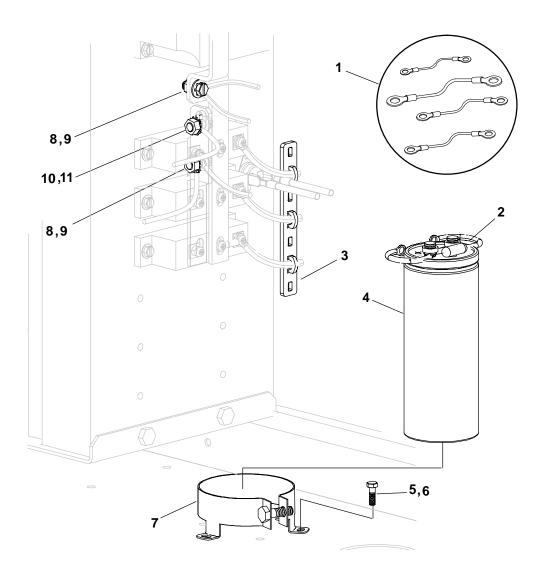



# Control Wiring (Left Side)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
		0022				0010	
1			Cables	2	187–5037	1	Resistor Assembly (Includes
			GCAA				Terminal and Resistor)
	187–5044–04	1	17"		332–0147	2	Terminal, Lug (#10)
	187–5044–06	1	9.5"		350–1236	1	Resistor (500 OHM)
	187–5044–08	1	16"	3	319–4189	1	Plate, Multi Tie
	187–5044–09	1	16"	4	187–5124	1	Capacitor
	187–5044–10	1	15"	5	812-0079	3	Screw, Machine
	187–5044–11	1	23"	6			Nut and Captive Washer
	187-5044-12	1	11.5"		870-0221	3	GCAA
	187–5063	1	17.75"		187-5007-03	3	GCAB, GCAC (5/32–32 x 1/2")
			GCAB	7	187–5014–01	1	Bracket, Mounting
	187–5044–01	1	17"	8	187-5095-22	2	Screw, Machine Hex Washer
	187-5044-02	1	9.5"				Head (GCAC) (3/16–32 x 5/8")
	187-5044-03	1	16"	9	187–5007–05	2	Nut and Captive Washer
	187-5044-05	1	16"				(3/16"–32) (GCAC)
	187-5044-07	1	15"	10	187-5095-30	1	Screw, Machine Hex Washer
	187–5063	1	23"				Head (1/4–20 x 1/2") (GCAC)
			GCAC	11	187-5007-06	1	Nut and Captive Washer
	187-5044-13	1	14"				(1/4"–20) (GCAC)
	187–5044–14	1	14"				
	187-5044-15	1	14"				
	187–5044–16	1	12"				
	187–5044–17	1	14"				
	187–5044–18	1	10"				




187–5063

1

17.75"



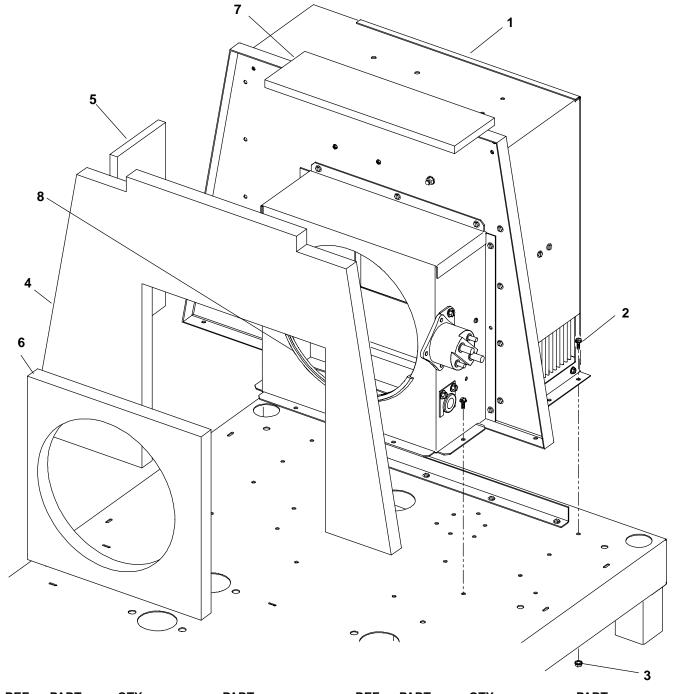


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PA N
1			Box, Control – Complete	4	
			(See Separate Page for		187–
			Internal Components)		187–
	300-5349-01	1	GCAA (24V)		187–
	300-5349-02	1	GCAA (48V)	5	
	300–5351–01	1	GCAB (24V)		187–
	300-5351-02	1	GCAB (48V)		187–
	300–5353–01	1	GCAC (24V)	6	187–
	300-5353-02	1	GCAC (48V)	7	187–
2	815-0973-30	16	Screw, Machine	8	508–
3	870-2226-05	16	Nut and Captive Washer		

EF O.	PART NO.	QTY USED	PART DESCRIPTION	
4			Foam, Hot/Cold – Rear Baffle	
	187–5104	1	GCAA	
	187–5177	1	GCAB	
	187–5189	1	GCAC	
5			Foam, Baffle – Right Side	
	187–5105	1	GCAA, GCAC	
	187–5176	1	GCAB	
6	187–5106	1	Foam, Baffle	
7	187–5175	1	Foam, Baffle (GCAA)	
8	508–1136	1	Grommet, Extruded (.85ft.)	




# Latch Spring

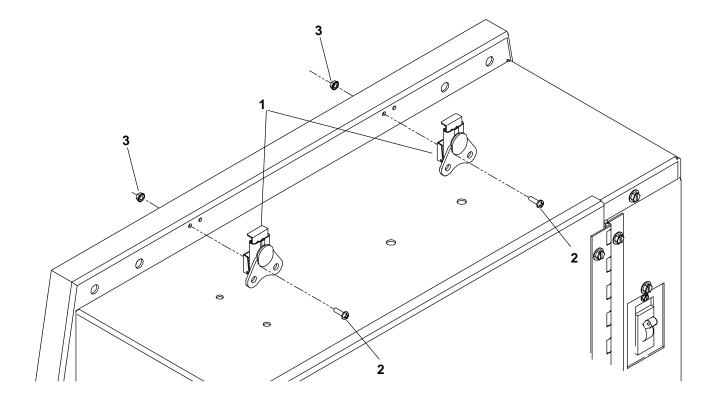

REF	PART	QTY	PART
NO.	NO.	USED	DESCRIPTION
	406–0947 819–1136– 870–2226–		Latch, Spring Screw, Pan Head (7/64–40 x 3/8") Nut and Captive Washer (7/64"–40)



## Wiring Harness

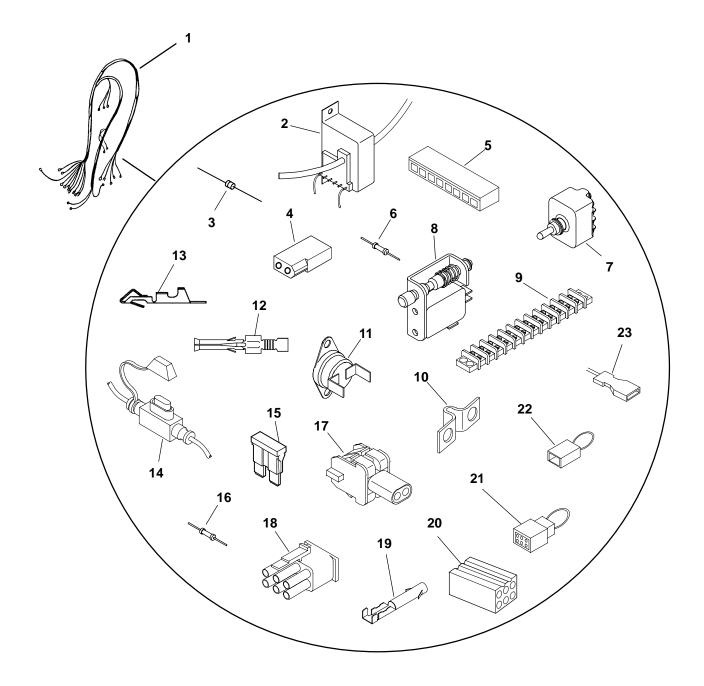



## Wiring Harness

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Harness, Wiring – Complete	9			Block, Terminal (TB2–6",
	187–5033	1	GCAA				TB3–3–1/3", TB6–1–5/8",
	187–5151	1	GCAB				TB5–2–1/2") (See Rear Baffle
	187–5225	1	GCAC				Page for Part Numbers)
2	315–0818	1	Transformer, Current (CT1)	10	332-3625-04	2	Jumper, J Type (TB3)
3	357–0132	2	Diode (D2, D3)	11	187–5082–01	1	Thermostat (S6)
4			Receptacle, 2 Position (J12,	12	332-3702	10	Terminal, Female (J12,
			J15, J17, J19, J20, J21)				J13, J15, J16, J19, J20, J22)
	323–1872	6	GCAA, GCAB	13	332-3622	35	Terminal, Connector PCB (P1,
	323–1872	7	GCAC				P2, P3, P4, P5, P7, P8, P9)
5			Plug	14	321–0374	1	Holder Assembly, Fuse
	323-1868-10	1	10 Position (P1)	15			Fuse, ATO
	323-1868-03	1	3 Position (P2)		321-0372-05	1	GCAA (10A)
	323-1868-02	2	2 Position (P3, P5)		321-0372-07	1	GCAB, GCAC (20A 32V)
	323-1868-07	1	7 Position (P4)	16	350-1237-01	1	Resistor (3.00HM 25W) GCAC
	323-1868-06	1	6 Position (P7)	17	323–1894	1	Connector, 2 Pin (J14) (GCAB,
	323-1868-04	1	4 Position (P8)				GCAC)
	323-1868-12	1	12 Position (P9)	18	323–1317	1	Plug, 6 Pin (J19)
6			Resistor (R3)	19	323–1199	6	Pin (J14, J19))
	351-5005-11	2	GCAA (121 Ohm)	20	323–1891	1	Receptacle, 6 Pin (J22)
	351-5001-86	2	GCAB (90.9 Ohm)	21	338–4014	1	Harness, Jumper – 6 Pin (J22)
	351-5001-52	2	GCAC (60.4 Ohm)	22	338–4013	1	Harness, Jumper – 2 Pin (J21)
7	187–5127	1	Switch, Master (S1)	23	332–1992	2	Terminal, Female (S8)
8	187–5010	1	Switch, Door (S4)				



### Labels

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	098–6195	1	Decal – Caution Hot Surface		098–7727	1	Label – Fuel Select (GCAC)
			(Allow to Cool)		098–7800	2	Label – Maintenance
	098–6387	2	Decal–Caution Hot Surface		098–7799	2	Label – Oil
			(Do Not Touch)		098-6074-01	1	Decal – Warning (Operation)
	098–7335	2	Decal – Caution Lifting		187–5251	2	Label – Warning (GCAC)
	098-6139-08	1	Decal – Cummins/Onan		098–7615	1	Label – Warning Electric Shock
	098-5387-01	1	Decal – Danger High Voltage		098–7797	1	Label – Positive
	098-2235-02	2	Decal – Ground		098–7796	1	Label – Negative
	098–7798	1	Label – Annunciator				ů.



# **Numerical Index**

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
000 0005 00	50	145 0014 <b>C</b>		407 5004 04	40.40	407 5000 24	
098-2235-02		145–0814, <b>6</b>		187–5034–04	, 18, 19	187–5093, <b>31</b>	
098-5387-01		146–0788, <b>6</b>		187–5037, <b>51</b>	40	187-5095-21	
098-6074-01		148–1136, <b>24</b>		187-5038-01		187-5095-22	
098-6139-08		148–1155, <b>13</b>		187-5038-02		187–5095–23	
098–6195, <b>56</b>		150-2755-02		187-5040-01		187-5095-25	
098–6387, <b>56</b>		150–2757, <b>5</b> ,		187-5040-02		187-5095-30	
098–7335, <b>56</b>		150–2758, <b>7</b> ,	8	187-5040-03		187-5095-36	
098-7578-02		154–3118, <b>6</b>	44	187-5042-01		187–5097, <b>33</b>	
098-7578-03		155–1257, <b>5</b> ,		187-5042-02		187–5098, <b>33</b>	
098-7578-04		155–3293, <b>33</b>		187-5044-01		187–5099, <b>33</b>	
098–7615, <b>56</b>		155–3296–02	, 35	187-5044-02		187–5100, <b>33</b>	
098–7695, <b>27</b>		155–3355, <b>5</b>		187-5044-03		187–5101, <b>33</b>	
098–7714, <b>2</b> 1		155–3357, <b>7</b>		187-5044-04		187–5102, <b>33</b>	
098–7727, 43		155–3447, <b>6</b>		187-5044-05		187–5103, <b>24</b>	
098–7738, 43		155–3452, <b>6</b>		187-5044-06		187–5104, <b>52</b>	
098–7739, <b>4</b> 1		155–3453, <b>6</b>	04.05	187-5044-07		187–5105, <b>52</b>	
098–7740, <b>27</b>		187–5001, <b>21</b>		187-5044-08		187–5106, <b>52</b>	
098–7796, <b>56</b>		187–5002, <b>24</b>		187-5044-09		187–5124, <b>51</b>	
098–7797, <b>56</b>		187-5005-01		187-5044-10		187–5127, <b>43</b>	
098–7798, <b>56</b>		187-5007-01		187-5044-11		187–5133–04	
098–7799, <b>56</b>		187-5007-02		187-5044-12		187–5133–12	
098–7800, <b>56</b>	)	187-5007-03		187-5044-13		187–5142, <b>5</b> ,	
100–3579, <b>5</b>		187-5007-05		187-5044-14		187–5143, <b>39</b>	
100–3656, <b>6</b>		187-5007-06		187-5044-15		187–5148, <b>35</b>	
134-5215-02		187-5008-01		187-5044-16		187–5149, <b>27</b>	
134-5216-02		187–5010, <b>41</b>	, 55	187-5044-17		187–5150–02	
134-5217-02		187–5011, <b>31</b>	10	187–5044–18	, 51	187–5151, <b>55</b>	
134-5218-02		187-5012-28		187–5063, <b>51</b>	45 47 40	187–5159, <b>19</b>	
134–5219–02	2, 25	187-5012-32		187-5068-02		187–5160, <b>36</b>	
134–5221, <b>5</b>		187-5012-35		187-5070-02		187-5161-02	
134-5222-02		187-5014-01		187-5072-02		187-5162-02	
134-5223-02		187-5015-02		187–5073, <b>12</b>		187–5163–02	
134-5224-02		187-5017-02		187-5073-02		187–5168, <b>5</b> ,	0
134–5225–02 134–5226–02		187–5018, <b>33</b> 187–5021, <b>7</b>		187-5075-02		187–5169, <b>5</b>	
		187–5021, 7	0	187-5076-02		187–5172, <b>40</b>	
134-5227-02				187-5077-02		187–5175, <b>52</b>	
134-5228-02		187-5023-01		187-5078-02		187–5176, <b>52</b>	
134–5229–02 140–3219, <b>6</b>	-, <b>40</b>	187–5023–02	, J	187-5080-02		187–5177, <b>52</b>	
	7 24	187–5024, <b>11</b>	12 14	187-5081-02		187–5179, <b>25</b>	
140–3237–02		187–5028, <b>11</b>			, 45, 47, 49, 55 <i>4</i>	187–5180, <b>25</b>	
140–3239, <b>7</b> ,	24	187–5033, <b>55</b>		187–5082–02		187–5181, <b>5</b> ,	
140–3240, <b>7</b>		187-5034-01		187–5086, <b>37</b>		187-5183-01	
140–3241, <b>24</b>	•	187–5034–02	, 10, 19	187–5091, <b>7</b>		187–5183–02	, 30



# **Numerical Index**

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
107 5100 04	25	202 0885 42		222 0005	10	251 5001 57	- EE
187–5183–04		302–0885, <b>43</b>		332–0905, 4		351-5001-52	
187–5187, <b>35</b>		307–2930, <b>11</b>		332–1022, 5		351-5001-86	
187–5188, <b>36</b>		307–2943, <b>27</b>		332–1081, 3		351-5005-11	
187–5189, <b>52</b>		307–2951, <b>13</b>		332–1114, <b>2</b>		357–0132, <b>55</b>	
187-5190-03		307–2954, <b>17</b>		332–1389, 1		358-0148-01	
187-5190-04		308–1108, <b>43</b>		332–1992, 5		358-0149-01	
187–5191–01		315–0818, <b>40</b>			15, 18, 24, 25	358-0150-01	
187-5191-02		319-3837-02		332–2512, 3		358-0150-02	
187–5191–03		319-3838-02		332–2569, 1		358-0152-08	
187–5193, <b>49</b>		319–4188, <b>21</b>		332–3621, 2		363–0191, <b>47</b>	
187–5206, <b>12</b>		319–4189, <b>51</b>		332–3622, <b>8</b>		363–0192, 45	
187-5207-02		319-4276-02		332-3624-0		363–0193, <b>49</b>	
187–5208–03		319-4277-02	,	332-3625-0	,	399-0126-02	
187–5225, <b>55</b>		319–4279, <b>43</b>		332-3625-0		399-0127-02	
187–5227, <b>38</b>		319-4281-02		332–3682, 4		399-0128-02	
187-5228-02		319-4314-02		332–3702, <b>5</b>		403-4337-02	
187–5229, <b>38</b>		319-4315-02	,	332–3712, 1		405–6396, <b>33</b>	
187–5232, <b>38</b>		319–4329, <b>21</b>		332-3722-0		405–6397, <b>33</b>	
187–5234, <b>38</b>		319–4331, <b>23</b>		332–3741, 2		405-6401-02	
187–5243–01		319-4353-02		333–0647, 1		405–6407–02	
187–5251, <b>56</b>		321-0372-05		333–0648, 1		405-6408-02	
187–5253–02		321-0372-07		335–0185, 2		405–6410–02	
187–5254, <b>35</b>		321–0374, <b>55</b>		337–3437–0		405–6411, <b>33</b>	
187–5256, <b>27</b>		323–1199, <b>55</b>		337–3438–0		405–6413, <b>33</b>	
187–5257–01		323–1317, <b>55</b>		337–3439–0		405–6415, <b>33</b>	
187–5257–02		323–1864–02 13, 16, 23	, 5, 6, 7, 11, 12,	337–3441–0	02, <b>47</b>	405–6417, <b>33</b>	8, 35, 37
187–5259, <b>41</b>			, 5, 6, 7, 11, 12,	337–3442–0		405–6495, <b>35</b>	
187–5260–02	, 41	13, 16, 22, 23		337–3443–0	02, <b>49</b>	405–6496, <b>35</b>	
187–5267–02	, <b>39</b>	323–1868–02	, 55	337–3444–(		405–6498, <b>35</b>	
187–6222, <b>7</b>		323–1868–03	, 55	337–3445–0	)2, <b>27</b>	405–6499, <b>37</b>	
201–3577, <b>38</b>		323–1868–04	, 55	337–3446–0	)2, <b>45</b>	405–6500, <b>35</b>	
201–3578, <b>38</b>		323–1868–06	, 8, 9, 55	337–3447–0	02, <b>45</b>	405–6501, <b>35</b>	
201–3579, <b>38</b>		323–1868–07	, 55	337–3448–0	)2, <b>27</b>	405–6506, <b>35</b>	5
300–3152–01	, <b>15</b>	323–1868–10	, <b>55</b>	337–3450–0	)2, <b>47</b>	405–6512, <b>37</b>	,
300–5349–01	, <b>52</b>	323–1868–12	, <b>55</b>	337–3453–0	02, <b>27</b>	405–6528, <b>33</b>	s, <b>35</b>
300–5349–02	, <b>52</b>	323–1872, <b>55</b>		337–3454–0	02, <b>27</b>	405–6634, <b>33</b>	6
300–5351–01	, <b>52</b>	323–1891, <b>55</b>		337–3457–0	02, <b>47</b>	405–6635, <b>35</b>	5
300-5351-02	, <b>52</b>	323–1892, <b>22</b>		338–3935, 1	17	405–6666–02	2, 23
300–5353–01	, <b>52</b>	323–1894, <b>55</b>		338–4013, 5	55	405–6667–02	2, 15
300–5353–02	, <b>52</b>	326–0330–xx	, <b>43</b>	338–4014, 5	55	405–6668–02	2, 43
300–5355, <b>27</b>		331–0567, <b>11</b>	, <b>12</b> , <b>13</b>	350–1236, <b>5</b>	51	405–6669, <b>23</b>	5
300–5414–02	, <b>43</b>	332–0147, <b>51</b>		350–1237–0	01, <b>55</b>	405–6702–02	2, 31
300–5416, <b>22</b>							



# **Numerical Index**

Part No. Page	Part No. Page	Part No. Page	Part No. Page
406–0924, <b>31</b>	508–1136, <b>25</b> , <b>27</b> , <b>39</b> , <b>52</b>	800–3049, <b>38</b>	850–0040, <b>11</b> , <b>12</b> , <b>14</b> , <b>18</b> , <b>19</b> ,
406–0939, <b>33</b> , <b>35</b> , <b>37</b>	509–0356, <b>12</b> , <b>14</b>	800–3052–02, <b>31</b>	20, 33, 37
406–0941, <b>33</b> , <b>35</b>	515–0318–03, <b>38</b>	800–3052–03, <b>24</b>	850–0045, <b>5</b> , <b>11</b> , <b>33</b>
406–0942, <b>33</b> , <b>35</b>	517–0089, <b>24</b> , <b>25</b>	800–3052–04, <b>31</b>	850–0050, <b>4</b> , <b>38</b>
406–0943, <b>37</b>	517–0094, <b>11</b> , <b>12</b> , <b>14</b>	800–3052–05, <b>31</b>	850–2006, <b>5</b> , <b>21</b>
406–0945, <b>33</b> , <b>35</b>	517–0136–01, <b>31</b>	800–3052–06, <b>18</b> , <b>19</b> , <b>31</b>	850–2081–01, <b>15</b> , <b>45</b> , <b>47</b>
406–0947, <b>53</b>	517–0138–02, <b>31</b>	800–3052–07, <b>31</b>	850–2081–02, <b>35</b> , <b>45</b> , <b>47</b>
406–0948, <b>43</b>	517–0138–05, <b>25</b> , <b>41</b>	800–6029, <b>15</b>	850–2081–03, <b>31</b> , <b>35</b>
406–0949–02, <b>43</b>	518–0696, <b>36</b>	809–0009, <b>4</b>	850–2081–04, <b>18</b> , <b>19</b> , <b>27</b> , <b>31</b>
406–0960, <b>33</b> , <b>35</b>	526–0054, <b>11</b> , <b>12</b> , <b>14</b>	812–0061, <b>17</b>	850–2081–05, <b>23</b>
416–1050, <b>31</b>	526–0324, <b>5</b>	812–0079, <b>51</b>	850–2082, <b>15</b>
416–1052, <b>31</b>	526–0346, <b>4</b>	815–0266, <b>39</b>	854–0017, <b>5</b> , <b>6</b>
416–1054, <b>18</b> , <b>19</b>	526–0354, <b>18</b> , <b>19</b> , <b>20</b> , <b>33</b> , <b>37</b>	815–0364, <b>45</b> , <b>49</b>	854–0038–01, <b>27</b>
416–1055, <b>18</b> , <b>19</b>	526–0397, <b>5</b> , <b>6</b> , <b>11</b> , <b>33</b>	815–0378, <b>36</b>	854–0038–02, <b>45</b> , <b>47</b>
501–0648, <b>11</b> , <b>12</b>	526–0424, <b>15</b>	815–0972, <b>6</b>	856–0022, <b>31</b>
502–0308, <b>12</b>	526–0459, <b>38</b>	815–0973–01, <b>45</b> , <b>47</b> , <b>49</b>	860–2026–01, <b>31</b> , <b>35</b>
502–1171, <b>11</b>	526–0462–01, <b>31</b>	815–0973–10, <b>27</b> , <b>40</b>	860–2026–02, <b>31</b> , <b>35</b> 860–2026–04, <b>27</b>
502–1286–02, <b>11</b> , <b>12</b>	526–0463–02, <b>15</b>	815–0973–11, <b>27</b>	860–2026–17, <b>23</b>
502–1352, <b>12</b> , <b>14</b>	526–0463–03, <b>35</b>	815–0973–30, <b>15</b> , <b>17</b> , <b>21</b> , <b>22</b> , <b>27</b> , <b>28</b> , <b>29</b> , <b>31</b> , <b>40</b> , <b>41</b> , <b>43</b> ,	860–2026–18, <b>27</b> , <b>45</b>
503–0633, <b>12</b> , <b>14</b>	526–0463–04, <b>31</b> , <b>35</b>	45, 47, 49, 52	862–0001, <b>12</b> , <b>14</b> , <b>18</b> , <b>19</b> ,
503–1133, <b>11</b> , <b>24</b>	526–0463–05, <b>18</b> , <b>19</b> , <b>27</b> , <b>31</b>	815–0973–32, <b>24</b> , <b>36</b> , <b>49</b>	<b>20</b> , <b>33</b> , <b>37</b>
503–1135, <b>12</b> , <b>14</b>	526–0463–06, <b>23</b>	815–0973–40, <b>27</b> , <b>28</b> , <b>29</b> ,	862–0015, <b>5</b> , <b>6</b> , <b>33</b>
503–1137, <b>28</b>	526–0464, <b>15</b>	40, 45, 47, 49	864–1003, <b>4</b>
503–1139, <b>24</b>	526–1002, <b>21</b>	815–0973–41, <b>31</b>	870–0048, <b>5</b> , <b>6</b>
503–1797, <b>11</b>	526–2080, <b>21</b>	816–0093, <b>33</b> , <b>35</b> , <b>37</b>	870–0131, <b>39</b>
504–0200, <b>5</b> , <b>6</b>	539–2051, <b>7</b>	818–0242–01, <b>33</b> , <b>35</b>	870–0183, <b>17</b>
504–0201, <b>4</b>	800–0005, <b>11</b> , <b>12</b> , <b>14</b>	818–0245, <b>22</b>	870–0221, <b>51</b>
505–0085, <b>14</b>	800–0010, <b>38</b>	819–1136–01, <b>35</b>	870–2219, <b>38</b>
505–0102, <b>11</b> , <b>12</b> , <b>14</b>	800–0011, <b>38</b>	819–1136–02, <b>23</b> , <b>41</b> , <b>43</b> , <b>53</b>	870–2226–01, <b>35</b> , <b>41</b> , <b>43</b> , <b>53</b>
505–0132, <b>11</b> , <b>14</b>	800–0032, <b>5</b> , <b>6</b>	819–1136–03, <b>43</b>	870–2226–02, <b>27</b> , <b>40</b> , <b>43</b>
505–0166, <b>14</b>	800–0033, <b>5</b> , <b>6</b>	819–1136–04, <b>41</b> , <b>43</b>	870–2226–05, <b>17</b> , <b>21</b> , <b>24</b> ,
505–0332, <b>11</b> , <b>12</b> , <b>14</b>	800–0050, <b>38</b>	819–1136–05, <b>41</b> , <b>43</b>	27, 28, 29, 31, 36, 40, 41, 43, 45, 47, 49, 52
505–1496, <b>11</b> , <b>12</b> , <b>14</b>	800–0053, <b>4</b>	819–1136–06, <b>27</b>	870–2226–06, <b>24</b> , <b>27</b> , <b>28</b> ,
505–1565–05, <b>12</b> , <b>14</b>	800–0257, <b>6</b>	821–6002–02, <b>31</b>	29, 40, 49
505–1569, <b>14</b>	800–2029, <b>21</b>	822–1016, <b>8</b> , <b>9</b>	870–2227–01, <b>31</b>
508–0141, <b>23</b>	800–2033, <b>5</b>	850–0025, <b>11</b> , <b>12</b> , <b>13</b>	870–2227–02, <b>31</b>

Cummins Power Generation 1400 73rd Avenue N.E. Minneapolis, MN 55432 1-800-888-6626 763-574-5000 International Use Fax: 763-574-8087

Cummins is a registered trademark of Cummins Inc.



