


OPERATOR'S MANUAL AND PARTS CATALOG

FOR


DEF

SERIES

ELECTRIC GENERATING SETS

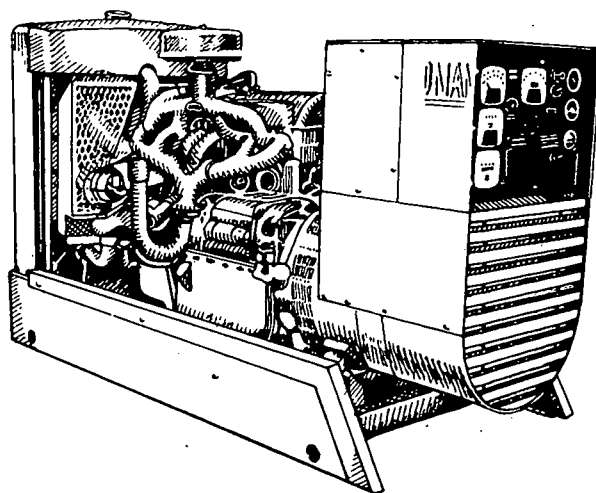

OBS.

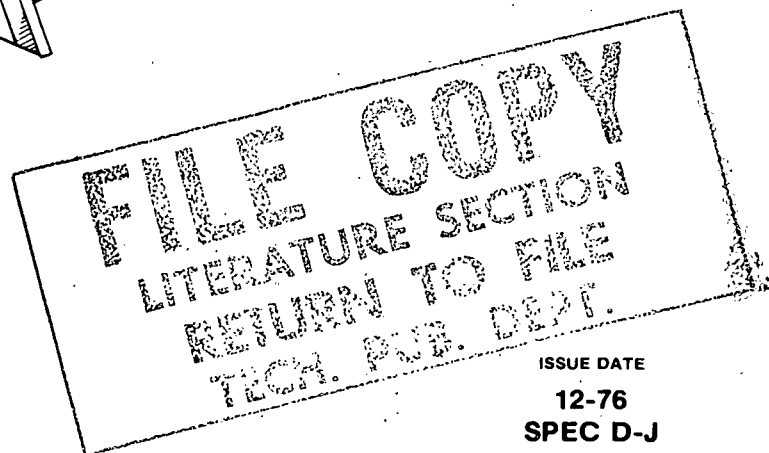

FORM NUMBER
977-0307

ISSUE DATE
12-76
SPEC D-J
Printed in U.S.A.

SAFETY PRECAUTIONS

The following symbols in this manual signal potentially dangerous conditions to the operator or equipment. Read this manual carefully. Know when these conditions can exist. Then, take necessary steps to protect personnel as well as equipment.

ONAN recommends that you read your manual and become thoroughly acquainted with it and your equipment before you start your unit. These recommendations and the following safety precautions are for your protection.

Fuels, electrical equipment, batteries, exhaust gases and moving parts present potential hazards that could result in serious, personal injury. Take care in following these recommended procedures.

WARNING Onan uses this symbol throughout this manual to warn of possible serious personal injury.

CAUTION This symbol refers to possible equipment damage.

General

- Keep your electric generating set and the surrounding area clean and free from obstructions. Remove any debris from set and keep the floor clean and dry.
- Provide appropriate fire extinguishers and install them in convenient locations. Consult your local fire department for the correct type of extinguisher to use. Do not use foam on electrical fires. Use extinguisher rated ABC by NFPA.
- Make sure that all fasteners on the generating set are secure. Tighten supports and clamps, keep guards in position over fans, driving belts, etc.
- Do not wear loose clothing in the vicinity of moving parts, or jewelry while working on electrical equipment. Loose clothing and jewelry can become caught in moving parts. Jewelry can short out electrical contacts; cause shock or burning.
- If adjustment *must* be made while the unit is running, use extreme caution around hot manifolds, moving parts, etc.
- Do not work on this equipment when mentally or physically fatigued.
- Coolants under pressure have a higher boiling point than water. DO NOT open a radiator or heat exchanger pressure cap while the engine is running. Bleed the system pressure first.

Protect Against Moving Parts

- Keep your hands away from moving parts.

- Before starting work on the generating set, disconnect batteries. This will prevent starting the set accidentally.

Fuel System

- DO NOT fill fuel tanks while engine is running, unless tanks are outside engine compartment. Fuel contact with hot engine or exhaust is a potential fire hazard.
- DO NOT SMOKE OR USE AN OPEN FLAME in the vicinity of the generator set or fuel tank. Internal combustion engine fuels are highly flammable.
- Fuel lines must be of steel piping, adequately secured, and free from leaks. Piping at the engine should be approved flexible line. Do not use copper piping on flexible lines as copper will work harden and become brittle.
- Be sure all fuel supplies have a positive shutoff valve.

Guard Against Electric Shock

- Remove electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling electrical equipment.
- Use extreme caution when working on electrical components. High voltages cause injury or death. DON'T tamper with interlocks.
- Follow all state and local electrical codes. Have all electrical installations performed by a qualified licensed electrician. Tag open switches.
- DO NOT SMOKE while servicing batteries. Lead acid batteries emit a highly explosive hydrogen gas that can be ignited by electrical arcing or by smoking.

Exhaust Gases Are Toxic

- Provide an adequate exhaust system to properly expel discharged gases. Check exhaust system regularly for leaks. Ensure that exhaust manifolds are secure and not warped. Do not use exhaust gases to heat a compartment.
- Be sure the unit is well ventilated.

Keep the Unit and Surrounding Area Clean

- Make sure that oily rags are not left on or near the engine.
- Remove all oil deposits. Remove all unnecessary grease and oil from the unit. Accumulated grease and oil can cause overheating and subsequent engine damage and may present a potential fire hazard.

TABLE OF CONTENTS

TITLE	PAGE
Introduction	2
Specifications	4
Description	8
Installation	13
Operation	22
General Maintenance	28
Parts Catalog	32

The need for an international standard of measurement has been increased by today's improved communication and transportation between countries.

This has prompted formation of modernized metrics known as the International System of Units, officially abbreviated SI.

ONAN products appear on the world market, therefore both metric and the present American system of units (CU) will be found in this manual.

To assist in familiarization, refer to the following terms.

TERM	METRIC	ENGLISH
Length	millimetre (mm)	Inch (in)
Pressure	kilopascals (kPa)	pounds per square inch (PSI)
Mass (Weight)	kilogram (kg)	pound (lb)
Volume (Liquid)	litre	gallon (gal)
Power	kilowatt	horsepower (HP)
Frequency	hertz (Hz)	cycles per second (CPS)
Energy	Joules (J)	BTU
Battery Capacity	Coulomb (C)	Ampere Hour AH

The customary unit of Brake Horsepower (BHP) becomes kilowatts (kW) when converted to SI metric units. This kW rating should not be confused with the kW rating of the generator which will always be lower due to losses inherent with any electrical induction device.

INTRODUCTION

FOREWORD

This manual is applicable to the DEF Series electric generating set, consisting of an ONAN 45.0 kW, UR generator, driven by a Ford Dorset, Diesel Engine.

The manual is divided into two sections.

Section 1 provides information on installation, operation and troubleshooting.

Section 2 is a Parts Catalog for ONAN optional and standard equipment.


The manual should be used in conjunction with the Ford engine manual, for specific engine information.

When contacting a dealer or the factory regarding the set, always mention the complete Model, Spec No. and Serial No. as given on the Onan nameplate. This nameplate information is necessary to properly identify your unit among the many manufactured. Refer to the engine nameplate when requesting information from its manufacturer. The Onan nameplate is located on the right side of the generator; the Ford nameplate is on the upper left side, on flywheel housing.

Left side and right side are considered when viewed from the engine or front end of the generating set.

MODEL IDENTIFICATION

Identify your model by referring to the MODEL and SPECIFICATION NO. as shown on the Onan nameplate. Electrical characteristics are shown on the lower portion of the nameplate.

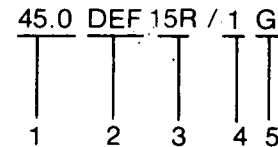

1. Indicates Kilowatt rating.
2. Factory code for SERIES identification.
3. Indicates voltage and frequency code.
i.e.—15 = 60 Hz. Reconnectible
515 = 50 Hz. Reconnectible
R—Indicates remote starting feature.
4. Factory code for designating optional equipment.
5. Specification letter. (Advances when factory makes production modifications.)

WARNING

TO AVOID POSSIBLE PERSONAL INJURY OR EQUIPMENT DAMAGE, A QUALIFIED ELECTRICIAN OR AN AUTHORIZED SERVICE REPRESENTATIVE MUST PERFORM INSTALLATION AND ALL SERVICE.

WARNING

ENGINE EXHAUST GAS (CARBON MONOXIDE) IS DEADLY!

Carbon monoxide is an odorless, colorless gas formed by incomplete combustion of hydrocarbon fuels. Carbon monoxide is a dangerous gas that can cause unconsciousness and is potentially lethal. Some of the symptoms or signs of carbon monoxide inhalation are:

- Dizziness
- Intense Headache
- Weakness and Sleepiness
- Vomiting
- Muscular Twitching
- Throbbing in Temples

If you experience any of the above symptoms, get out into fresh air immediately.

The best protection against carbon monoxide inhalation is a regular inspection of the complete exhaust system. If you notice a change in the sound or appearance of exhaust system, shut the unit down immediately and have it inspected and repaired at once by a competent mechanic.

SPECIFICATIONS

ENGINE DETAILS

Engine Manufacturer	FORD
Engine Series	2713E
Numbers of Cylinders	6
Displacement	362-cubic inches (5.93 litres)
BHP @ 1800 RPM	87 (64.9 kW)
Compression Ratio	16.0:1
Bore	4.12-inches (104.65 mm)
Stroke	4.52-inches (114.81 mm)
Fuel	ASTM No. 2 Diesel
Battery Voltage	12 Volt Negative Ground
Battery Group (Two 6-Volt, 135 A.H. [486 kC])	2H
Starting Method	Solenoid Shift
Governor Regulation	5% Maximum
Battery Charging Current	35-Ampere

GENERATOR DETAILS

Type	UR
Rating (Watts)	
60 Hertz Continuous Standby	45,000 (56.25 kVA)
50 Hertz Continuous Standby	37,500 (46.88 kVA)
AC Voltage Regulation	±2%
60 Hertz RPM	1800
50 Hertz RPM	1500
Output Rating	0.8 PF
AC Frequency Regulation	3 Hz Max. No Load to Full Load

CAPACITIES AND REQUIREMENTS

Cooling System (Including Radiator)	18-Quarts (17-litres)
Engine Oil Capacity (Filter, Lines, Crankcase)	14-Quarts (13.25-litres)
Exhaust Connection (inches pipe thread)	2 (Male)

AIR REQUIREMENTS (1800 RPM)

Engine Combustion	146-CFM (4.2 m ³ /min)
Radiator Cooled Engine	7300-CFM (207 m ³ /min)
Total for Radiator Cooled Model	7446-CFM (211 m ³ /min)
Alternator Cooling Air (1800 RPM)	1000-CFM (29m ³ /min)
(1500 RPM)	833-CFM (24m ³ /min)
Fuel Consumption at Rated Load ASTM No. 2 Diesel	3.5-GPH (13.3 litres/hr)

GENERAL


Height	45.56-inches (1.16 m)
Width	33-inches (0.84 m)
Length	80-inches (2.03 m)
Approximate Weight (Mass) 1-Phase	2170-lbs (985.2 kg)
3-Phase	2070-lbs (940 kg)

TABLE 1.
UR GENERATOR VOLTAGE OPTIONS


VOLTS	FREQ	PHASE	AMPERES	DOUBLE DELTA	SERIES DELTA	PARALLEL WYE	SERIES WYE	REF. VOLTAGE WIRE (W12) TAP
120/240	60 Hz	1	90	x				H5
115/230	50 Hz	1	78	x				H6
120/240	60 Hz	3	135		x			H5
115/230	50 Hz	3	118		x			H6
120/208	60 Hz	3	156			x		H3
127/220	60 Hz	3	148			x		H4
139/240	60 Hz	3	135			x		H5
110/190	50 Hz	3	142			x		H3
115/200	50 Hz	3	135			x		H4
240/416	60 Hz	3	78				x	H3
254/440	60 Hz	3	74				x	H4
277/480	60 Hz	3	68				x	H5
220/380	50 Hz	3	71				x	H3
230/400	50 Hz	3	68				x	H4
9XR 347/600	60 Hz	3	54					H3—Not Reconnectible
3 120/240	60 Hz	1	234					Not Reconnectible
53 115/230	50 Hz	1	204					Not Reconnectible

Table 1 and Figure 1 indicate the versatility of the 12-lead UR generator to produce various voltage options. Proper connection of all 12 leads and the voltage reference wire (W12) are essential to obtain each of the available voltage codes. Refer to the Wiring Connections on pages 20 and 21 for instructions.

120/240 VOLT, 1 PHASE, 60 HERTZ

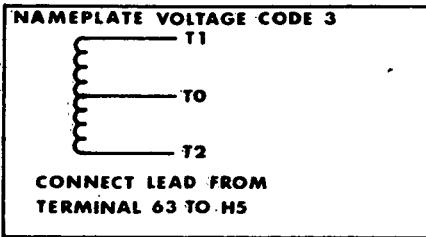

347/600 VOLT, 3 PHASE, 60 HERTZ

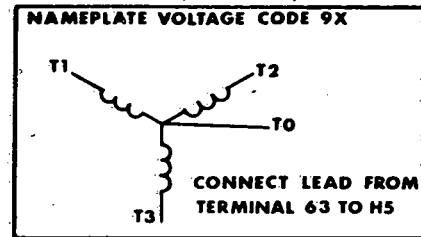

THIS DIAGRAM APPLIES TO 12 LEAD GENERATORS ONLY

NAMEPLATE VOLTAGE CODE	VOLTAGE	PHASES	FREQUENCY	CONNECT LEAD FROM TERMINAL 63 TO:	GENERATOR CONNECTION	GENERATOR CONNECTION SCHEMATIC DIAGRAM	GENERATOR CONNECTION WIRING DIAGRAM (WITH CURRENT TRANSFORMERS WHEN USED)
15	120/240	1	60	H5	DOUBLE DELTA		
515	115/230	1	50	H6			
15	120/240	1	60	H5			
15	120/240	3	60	H5	SERIES DELTA		
515	115/230	3	50	H6			
15	120/240	3	60	H5			
15	120/240	3	60	H3	PARALLEL WYE		
515	110/190	3	50	H3			
15	120/240	3	60	H5			
15	240/416	3	60	H3	SERIES WYE		
515	220/380	3	50	H3			
15	254/440	3	60	H4			

98C2193

FIGURE 1. GENERATOR RECONNECTIONS

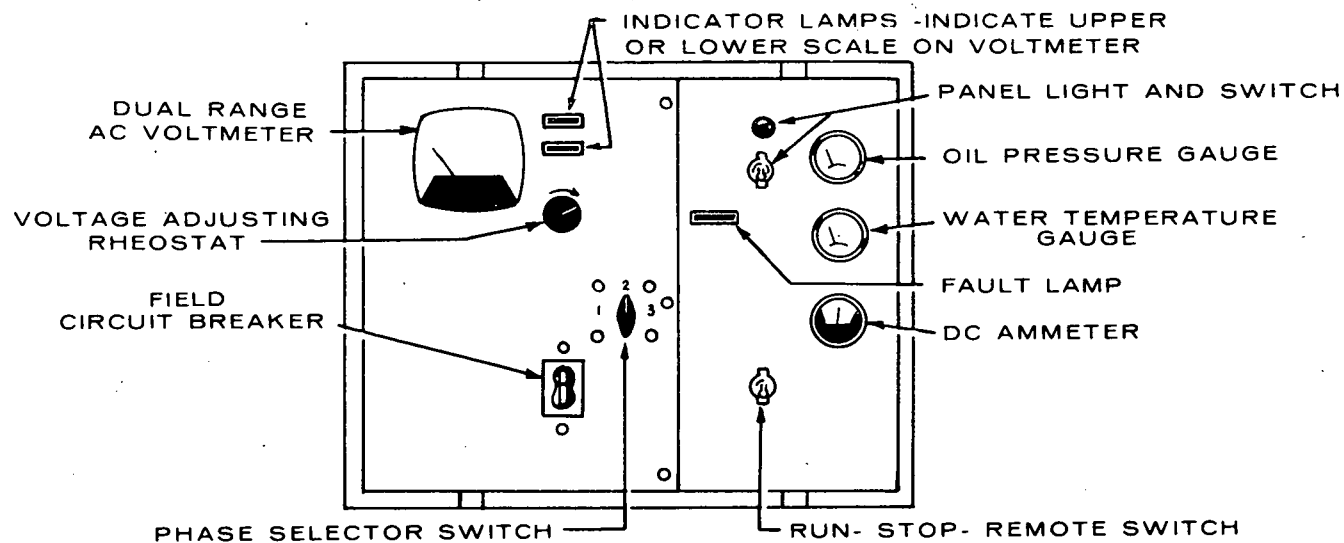


FIGURE 2. STANDARD CONTROL PANEL (ONE FAULT LAMP)

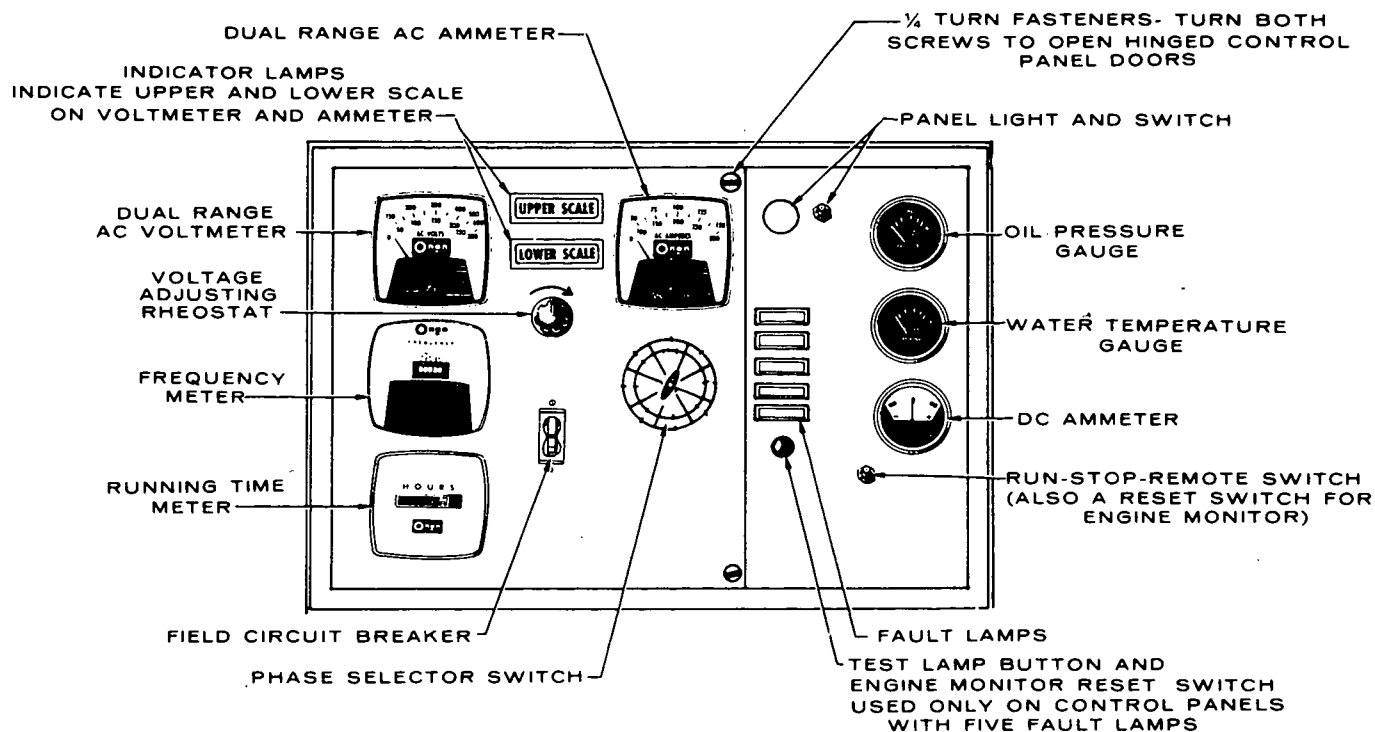


FIGURE 3. OPTIONAL CONTROL PANEL (FIVE FAULT LAMPS)

DESCRIPTION

GENERAL

An Onan DEF series electric generating set is a complete unit consisting of an engine driven AC generator, with standard and optional controls and accessories as ordered.

ENGINE

The engine on the DEF is a Ford-Dorset 2713 E as described in the engine manual. Basic measurements and requirements will be found under *Specifications*. For operation, maintenance and service information, consult the Ford-Dorset manual.

AC GENERATOR

The generator is an ONAN Type UR, 12 lead, 4-pole revolving field, reconnectible, brushless unit. The main rotor is attached directly to the engine flywheel, therefore engine speed determines generator output frequency. The 60 Hz set operates at 1800 rpm, the 50 Hz at 1500 rpm. Excitation is achieved as follows—

Residual alternating current from the stator winding is applied to the voltage regulator, where it is compared with a reference voltage, rectified and returned to the field winding of the exciter. Current then induced in the exciter rotor is rectified and fed into the generator rotor. This induces a current in generator stator which is applied to the load.

CONTROL PANEL

The following is a brief description of each of the standard controls and instruments located on the face of the panel. See Figure 2.

DC Panel

Panel Light and Switch: Illuminates control panel.

Oil Pressure Gauge: Indicates pressure of lubricating oil in engine (wired to a sensor unit located on the engine).

Water Temperature Gauge: Indicates temperature of circulating coolant in engine. (Wired to a sensor unit located on the engine.)

Battery Charge Rate DC Ammeter: Indicates battery charging current.

Run-Stop/Reset-Remote Switch: Starts and stops the unit locally or from a remote location. Resets engine monitor relay in Stop/Reset position.

Warning Light: Indicates "Fault" in engine operation.

AC Panel

AC Voltmeter: Indicates AC generator output voltage. Dual range instrument: measurement range in use shown on indicator light.

AC Ammeter: Indicates AC generator output current. Dual range in use shown on indicator lights.

Voltmeter-Ammeter Phase Selector Switch: Selects the phases of the generator output to be measured by the AC voltmeter and AC ammeter.

Voltage Regulator: Rheostat, provides approximately plus or minus 5% adjustment of the rated output voltage.

Exciter Circuit Breaker: Provides generator exciter and regulator protection from overheating in the event of certain failure modes of the generator, exciter and voltage regulator.

Running Time Meter: Registers the total number of hours, to 1/10th, that the unit has run. Use it to keep a record for periodic servicing. Time is accumulative, meter cannot be reset.

Frequency Meter: Indicates the frequency of the generator output in hertz. It can be used to check engine speed. (Each hertz equals 30 rpm).

OPTIONAL EQUIPMENT

DC Panel

Warning Lights: Eliminates the one "Fault" light and substitutes five indicator (see Figure 3) lights to give warning of—

- Overcrank
- Overspeed
- Low oil pressure
- High engine temperature
- Low engine temperature

Operation of these lights will be discussed in conjunction with engine monitor panel.

Reset Switch: Manual reset for engine monitor after shut-down.

Lamp Test: Press to test warning lamp bulbs (when engine is running only).

CONTROL PANEL INTERIOR

The only equipments discussed in this section will be those which the operator may have reason to adjust or inspect for service.

Terminal Board (TB) 21: Connection of wire W12 to terminals H3, H4, H5, and H6 is made at this point, to change reference voltage when reconnecting generator for different voltages. Refer to Figure 1.

Voltage Regulator, Begin Spec J: A solid state unit, consisting of printed circuit board VR21; an SCR bridge CR21, with a commutating reactor L21 are located in the control panel as part of the voltage regulator system. AC output from the generator is controlled at a predetermined level regardless of load; regulation is plus or minus 2% from no load to full load, at 0.8 P.F.

Voltage Regulator, Prior to Spec J: A solid state unit consisting of printed circuit board VR21 controls AC output from generator at predetermined level regardless of load. Regulation plus or minus 2% from no load to full load, 0.8 P.F.

An exciter-regulator assembly designated VR22 containing an SCR bridge circuit and commutating reactor is mounted on the generator end bell (see Figure 4) and works in conjunction with VR21.

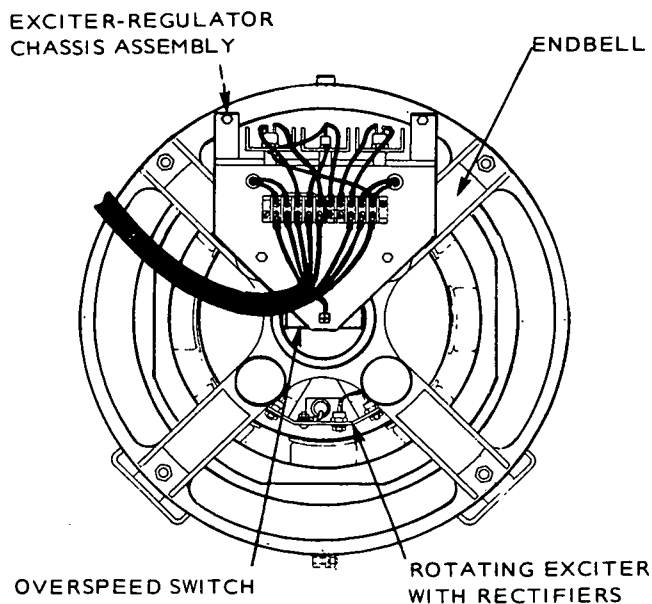


FIGURE 4. GENERATOR (GRILLE REMOVED)

Engine Monitor: Printed circuit plug-in modules provide the following functions:

1. A 75 second cranking period.
2. Approximately a 12.5-second time delay for oil pressure buildup.
3. An external alarm contact to light a fault lamp and shut down the set for alarm conditions such as:
 - a. Overcrank (failed to start after cranking 75 seconds).
 - b. Overspeed (engine speed reaches 2100 rpm).
 - c. Low oil pressure 14 psi (96.5 kPa).
 - d. High engine temperature 215° F (102° C).

On standard control panels, all four alarms are wired into one common fault lamp; on units with five fault lamps, four have shutdown alarms, the fifth (low engine temperature) lights a fault lamp only. Refer to Table 2.

Standard Cranking Module: Limits engine cranking time to 75 seconds. If engine fails to start after 75 seconds the engine monitor lights a fault lamp and opens the cranking circuit.

OPTIONAL MODULES

Cycle Cranker: Plug-in module replaces standard cranking circuit. Automatically provides a 15-second crank time and a 10-second rest time for three ON and two OFF cycles in 65 seconds. If engine fails to start, after 75 seconds the engine monitor lights a fault lamp and opens the cranking circuit. The ON and OFF cycle times are nominal and can be adjusted at potentiometers on the cranker module board.

Pre-Alarm: Gives advance warning for low oil pressure or high engine temperature. Requires two sensors each for engine temperature and oil pressure.

TABLE 2. FAULT LAMP OPTIONS

SYSTEM	FAULT	FAULT LAMP	STOP ENGINE	EXTERNAL ALARM	PRE- ALARM
PENN STATE SINGLE LIGHT	Overcrank	x	x	x	
	Overspeed	x	x	x	
	Low Oil Pressure	x		x	
	High Engine Temperature	x		x	
STANDARD SINGLE LIGHT	Overcrank	x	x	x	
	Overspeed	x	x	x	
	Low Oil Pressure	x	x	x	
	High Engine Temperature	x	x	x	
5 LIGHT	Overcrank	x	x	x	
	Overspeed	x	x	x	
	Low Oil Pressure	x	x	x	
	High Engine Temperature	x	x	x	
	Low Engine Temperature	x			
5 LIGHT PRE-ALARM	Overcrank	x	x	x	
	Overspeed	x	x	x	
	Low Oil Pressure	x	*	x	x
	High Engine Temperature	x	*	x	x
	Low Engine Temperature	x			

* - With additional optional sensors.

ENGINE SENSORS

Resistance units and switches in the engine temperature and oil pressure monitoring and shut-down systems are sealed units and are not repairable.

For location, refer to Figures 5 and 6. When replacing a sensor, do not substitute, use recommended items. Resistance units are matched to the gauge they supply, and cut-off switches are close-tolerance actuation parts, made for a specific application.

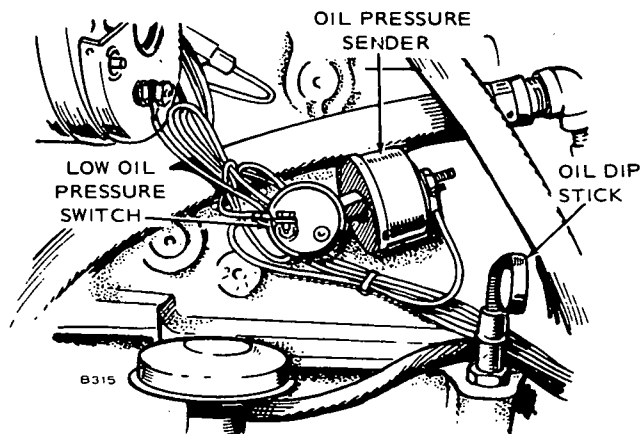


FIGURE 5. OIL PRESSURE MONITORS

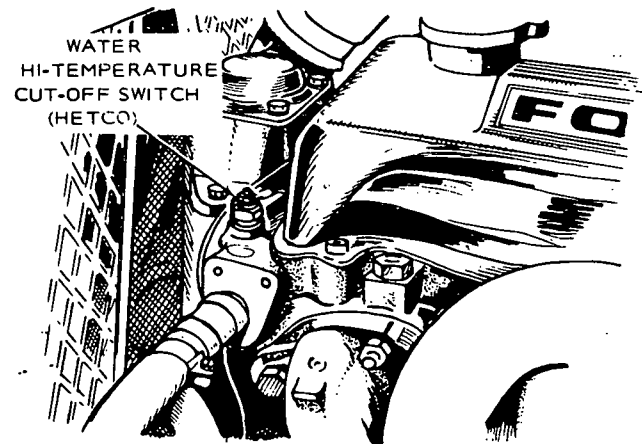
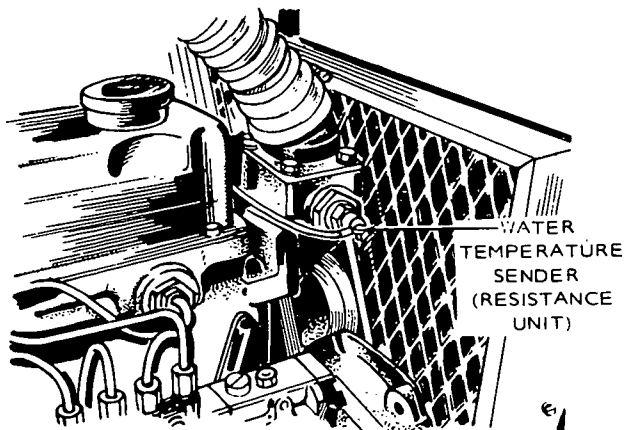


FIGURE 6. ENGINE TEMPERATURE MONITORS

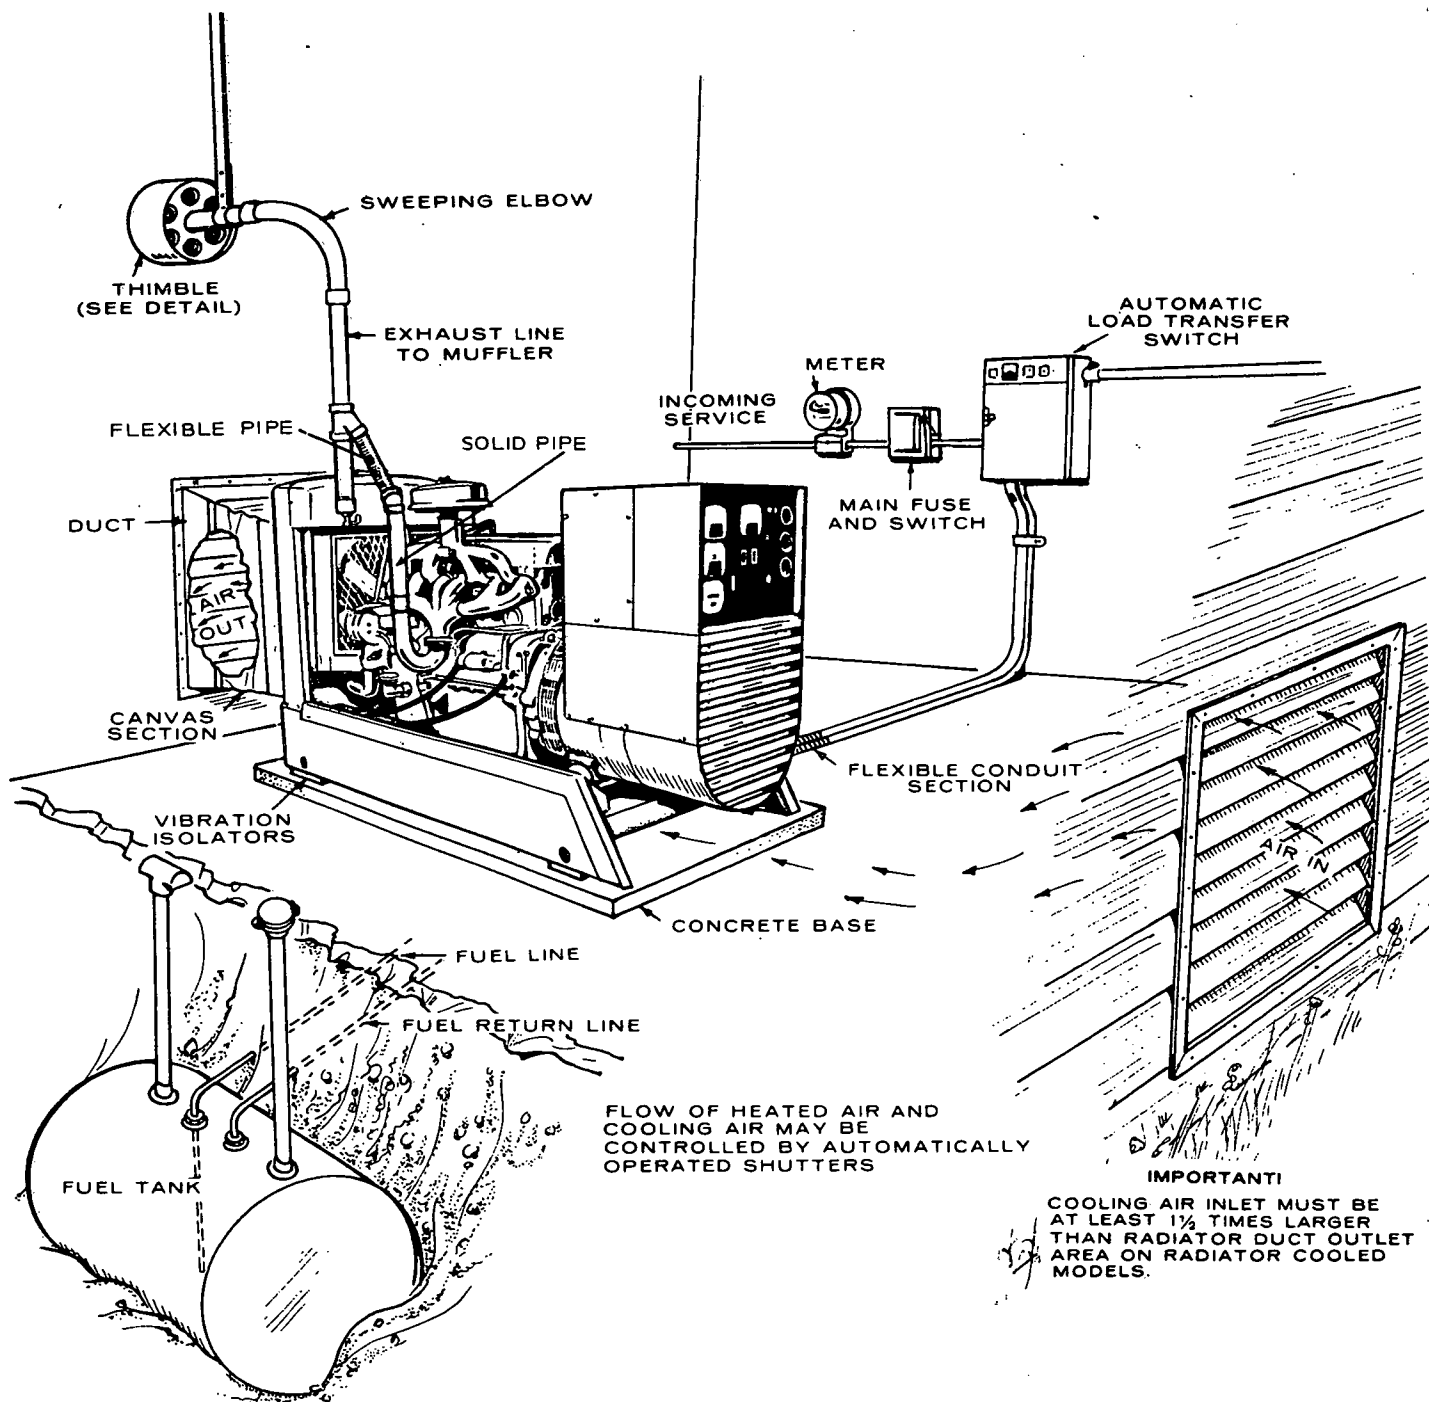


FIGURE 7. TYPICAL MODEL DEF INSTALLATION

INSTALLATION

GENERAL

Installations must be considered individually. Use these instructions as a general guide. All installations must meet regulations of state and local building codes, fire ordinances, etc., which may affect installation details. See Figure 7.

Requirements to be considered prior to installation:

1. Level mounting surface.
2. Adequate cooling air.
3. Adequate fresh induction air.
4. Discharge of circulated air.
5. Discharge of exhaust gases.
6. Electrical connections.
7. Fuel installation.
8. Water supply (city water cooling).
9. Accessibility for operation and servicing.
10. Vibration isolation.
11. Noise levels.

LOCATION

Provide a location that is protected from the weather and is dry, clean, dust free and well ventilated. If practical, install inside a heated building for protection from extreme weather conditions.

MOUNTING

Generator sets are mounted on a rigid skid base which provides proper support. Install vibration isolators between skid base and foundation. For convenience in draining crankcase oil and general servicing, mount set on raised pedestals (at least 6 inches high). Refer to ONAN Technical Bulletin T-030 for further installation information.

VENTILATION

Generator sets create considerable heat which must be removed by proper ventilation. Outdoor installations rely on natural air circulation but indoor installations need properly sized and positioned vents for the required air flow. See *Specifications* for the air required to operate with rated load under normal conditions at 1800 rpm.

Radiator set cooling air travels from the rear of the set and is removed by a pusher fan which blows out through the radiator. Locate the air inlet to the rear of the set. Make the inlet opening at least 1½-times larger than the radiator.

Locate the cooling air outlet directly in front of the radiator and as close as possible. The opening size should be at least as large as the radiator area. Length and shape of the air outlet duct should offer minimum restriction to air flow. Use a duct of canvas or sheet metal between the radiator and the air outlet opening. The duct prevents recirculation of heated air.

Provide a means of restricting the air flow in cold weather to keep the room or compartment temperature at a normal point.

For operation outside a building, a shelter housing with electrically operated louvres is available as an option. Transformers connected across the generator output supply current to the motors.

When the generator is operating, current in the transformers actuate the motors and open the louvres. The louvres are held open for the duration of the set operation, then are closed by return springs when the set is shut down.

City water cooled sets do not use the conventional radiator. A constant water flow cools the engine. Ventilation is seldom a problem, but sufficient air movement and fresh air must be available to properly cool the generator, disperse heat convected off the engine and support combustion in the engine.

For small compartments, a duct of equal or larger area than generator outlet is recommended to remove the heated air from the generator air outlet to the outside atmosphere. Limit bends and use radius type elbows where needed. A larger, well ventilated compartment or room does not require a hot air duct.

Installations made in a small room may require installation of an auxiliary fan (connected to operate only when the unit is running) of sufficient size to assure proper air circulation and evacuation of fumes.

CITY WATER COOLING

An optional method of engine cooling, in place of the conventional radiator and fan, uses a constant pressure water supply. This is referred to as CITY WATER COOLING. There are two varieties of city water cooling; the HEAT EXCHANGER SYSTEM and STANDPIPE SYSTEM. See Figures 8 and 9.

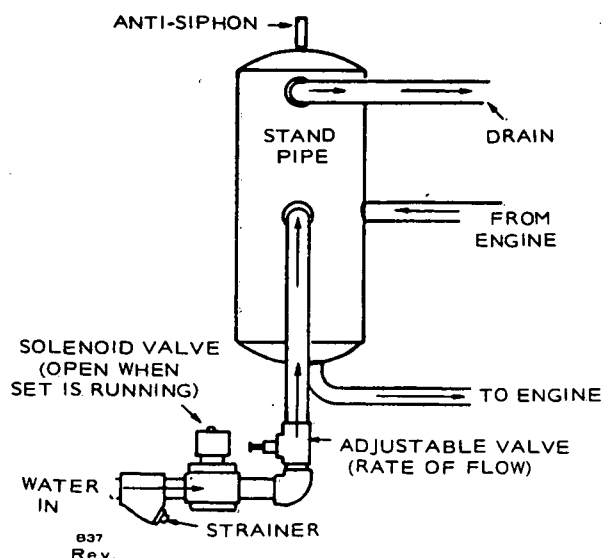


FIGURE 8. TYPICAL HEAT EXCHANGER SYSTEM

The HEAT EXCHANGER provides for a closed engine cooling system. Engine coolant flows through a tubed chamber, keeping the coolant separate from the cool "raw" water supply. The coolant chamber must be filled for operation, as for a radiator cooled set.

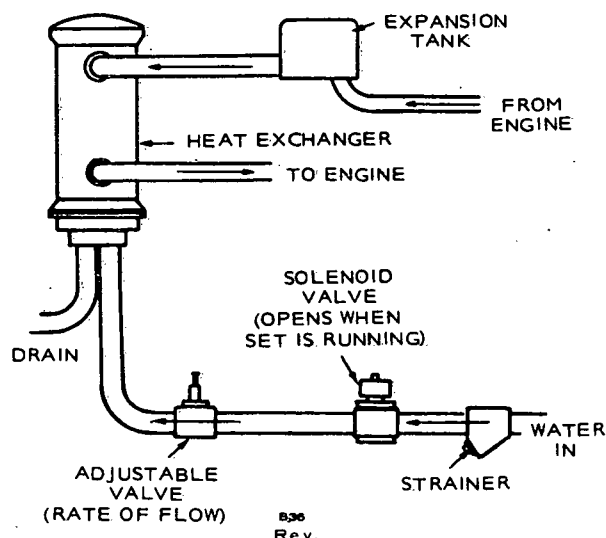


FIGURE 9. TYPICAL STANDPIPE SYSTEM

The STANDPIPE SYSTEM uses a mixing or tempering tank. Cooling water that circulates through the engine mixes with a source of cool "raw" water. The "raw" water supply must be free of scale forming lime or other impurities.

With either system use flexible pipe for connecting water supply and outlet flow pipes to engine. Pipe the outlet flow to a convenient drain. Install an electric solenoid valve and a rate of flow valve in the water supply line. The electric solenoid valve opens and allows water flow through the system only when the set operates. The rate of flow valve, either automatic or manual, provides for the proper flow rate to the engine. Adjust the flow to maintain water temperature between 165° F and 195° F (73.9° C and 90.6° C) while viewing the water temperature gauge.

Before filling cooling system check all hardware for security. This includes hose clamps, capscrews, fittings and connections. Use flexible coolant lines with heat exchanger, standpipe or remote mounting radiator.

WATER FILTER

Some generator sets are equipped with a cooling system filter (corrosion resistor). This unit directs coolant from the system through a filtering and treating device. It softens water, neutralizes acidity and protects against corrosion with a replaceable, chemically-activated filter element. In addition, the unit contains a sacrificial metal plate which arrests pitting of metals in the system by electro-chemical action.

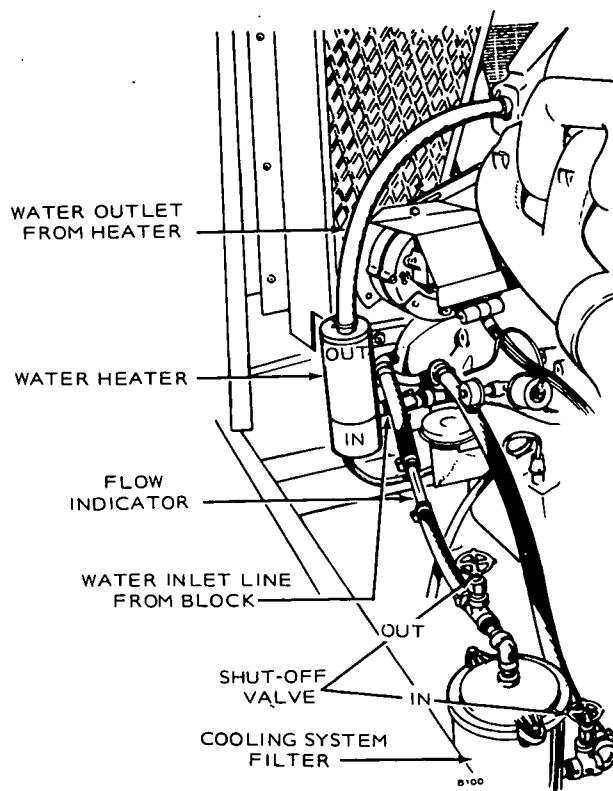


FIGURE 10. COOLING SYSTEM (RADIATOR)

Exact location of filter will vary because of other optional equipment which may also be installed. See Figure 10.

Two types of elements are available from your Onan dealer or distributor.

1. Regular formula (chromate)
2. PAF formula (borate) year round type

CAUTION Do not use anti-freeze with an anti-leak formula. The stop-leak element can prevent or retard the flow through the filter, thereby eliminating the filtering process completely.

The regular formula can be used with plain water and selected antifreezes. The best protection results will be gained by using the borate formula element with a permanent antifreeze.

ONAN recommends that shutoff valves be installed to the engine side of the inlet and outlet of the coolant filter, for ease in changing elements. Further, it is good practice to insert and clamp a thick-walled pyrex tube into the line at a convenient point to serve as a flow indicator. This flow indicator will act in the capacity of a sight gauge to observe general condition, possible air pockets and presence of contaminants in the coolant flow. See Figure 10 for installation recommendations.

WATER JACKET HEATER (Optional)

This heater is installed to maintain an elevated engine temperature in lower ambient temperature applications. It heats and circulates engine coolant, and is thermostatically controlled.

EXHAUST

Engine exhaust gas must be piped outside building or enclosure. Do not terminate exhaust pipe near inlet vents or combustible materials. An approved thimble (Figure 11) must be used where exhaust pipes pass through walls or partitions. Pitch exhaust pipes downward or install a condensation trap (Figure 12) at the point where a rise in the exhaust system begins. Avoid sharp bends; use sweeping long radius elbows. Provide adequate support for mufflers and exhaust pipes. Refer to Figure 4 for a typical exhaust installation. Shield or insulate exhaust lines if there is danger of personal contact. Allow at least 9-inches (230 mm) of clearance if the pipes run close to a combustible wall or partition. Use a pipe at least as large as the 2-inch (50 mm) pipe size outlet of the engine with a flexible portion between the engine and the muffler.

WARNING

Do not use exhaust heat to warm a room or compartment occupied by people due to possible leakage of harmful exhaust gases. Inhalation of exhaust gases can result in death.

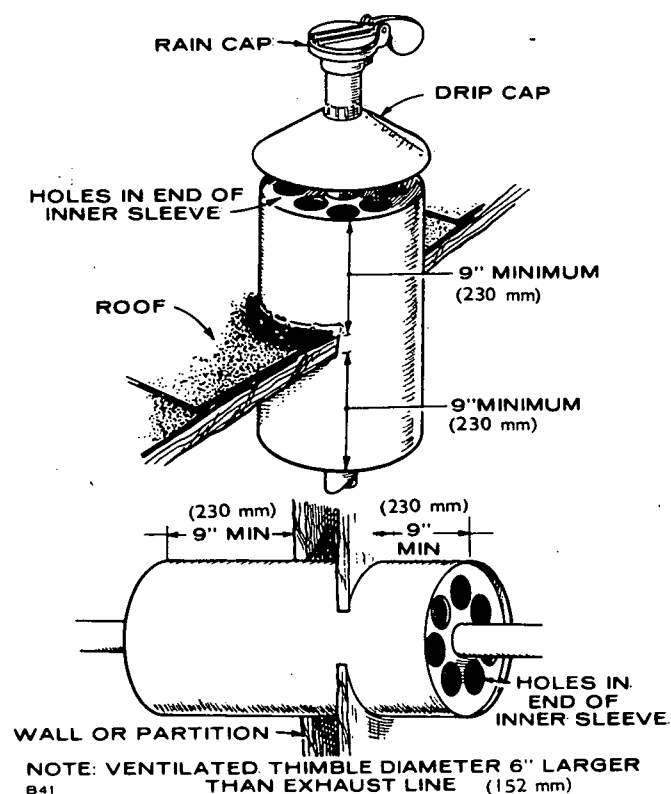


FIGURE 11. EXHAUST THIMBLE

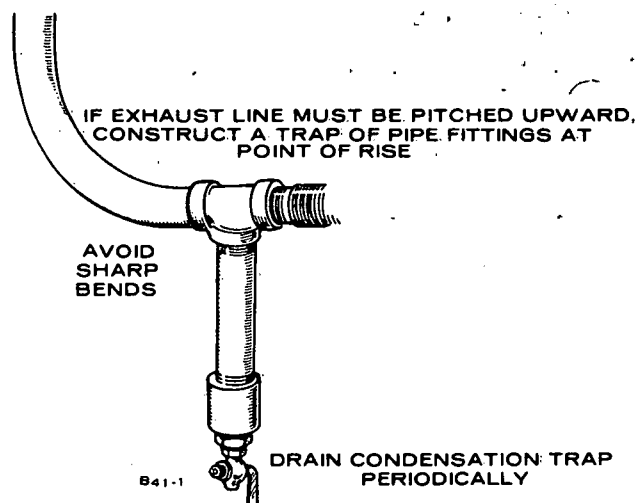


FIGURE 12. EXHAUST CONDENSATION TRAP

Do not connect a flexible line to the exhaust manifold. Minimum diameters and maximum lengths of pipe (with critical muffler[s]) are as follows:

Single Exhaust system:

3-inch (76 mm) pipe 67 feet (20 m)
3.5-inch (89 mm) pipe 167 feet (51 m)

Maximum permissible exhaust restriction (back pressure) is 20.4-inches H₂O (5.1 kPa).

FUEL SYSTEM

Ford-Dorset engines used on DEF sets are designed for use with ASTM No. 2 Diesel fuel with a minimum Cetane rating of 43 and maximum Sulphur content of 0.40.

FUEL CONNECTIONS

Check local regulations governing the installation of a fuel supply tank.

In any diesel engine installation, fuel system cleanliness is of utmost importance. Make every effort to prevent entrance of moisture or contaminants of any kind. Do not use lines or fittings of galvanized material.

A fuel lift in excess of 6 feet (1.8 m) is not recommended without a day tank installation, because of fuel drainage. Horizontal run, if the supply tank is level with the fuel pump, should not exceed 12.5-feet (3.9 m). However, a day tank is again recommended. A fuel sediment trap should be installed between fuel transfer pump and supply tank.

The fuel inlet is to the transfer pump and is threaded for 3/8-inch pipe. Injectors' return line requires a 1/8-inch low pressure hose connection. Refer to Figure 13.

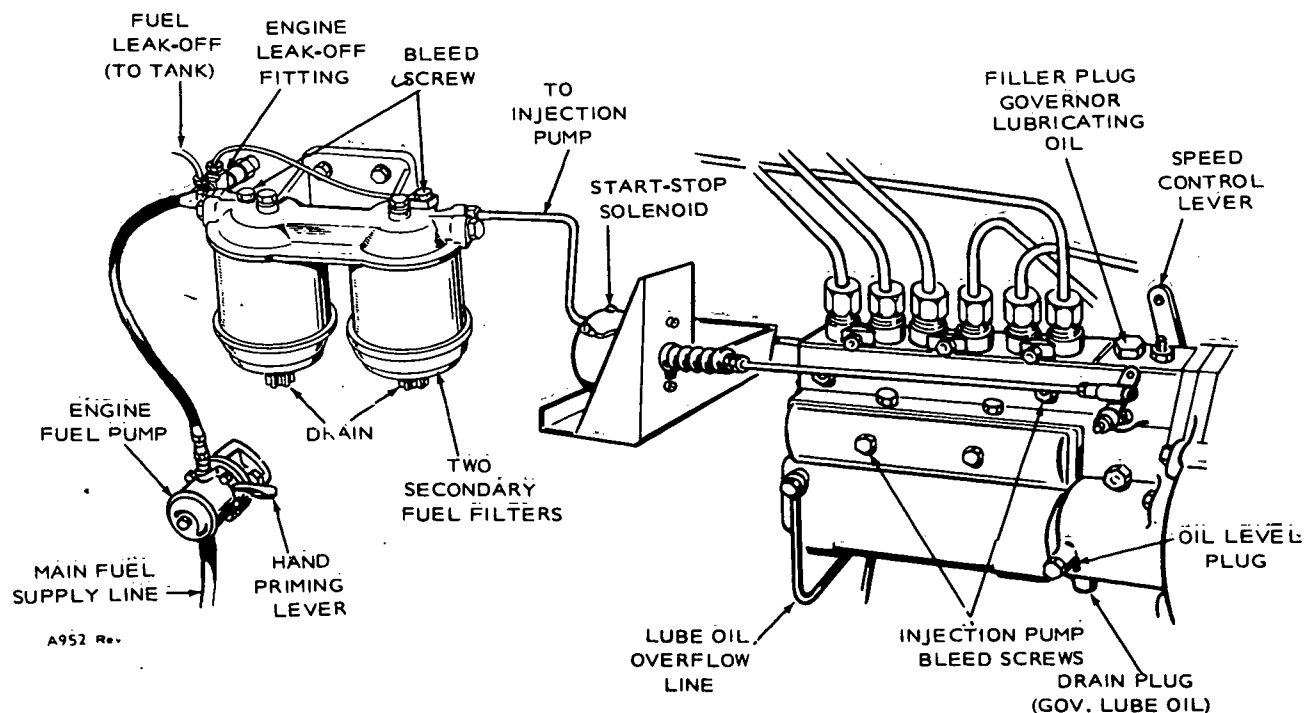


FIGURE 13. FUEL SYSTEM

DAY TANK

Generator set installations may be equipped with an optional separate fuel day tank. A float operated valve controls fuel flow into the fuel tank. The correct level is maintained to assure a constant source of fuel. It is necessary to install an overflow line between the day tank and the main fuel tank. Refer to the installations included with the tank. See Figure 14 for an example of a day tank installation. Tank and lines must be below level of injector pump return outlet.

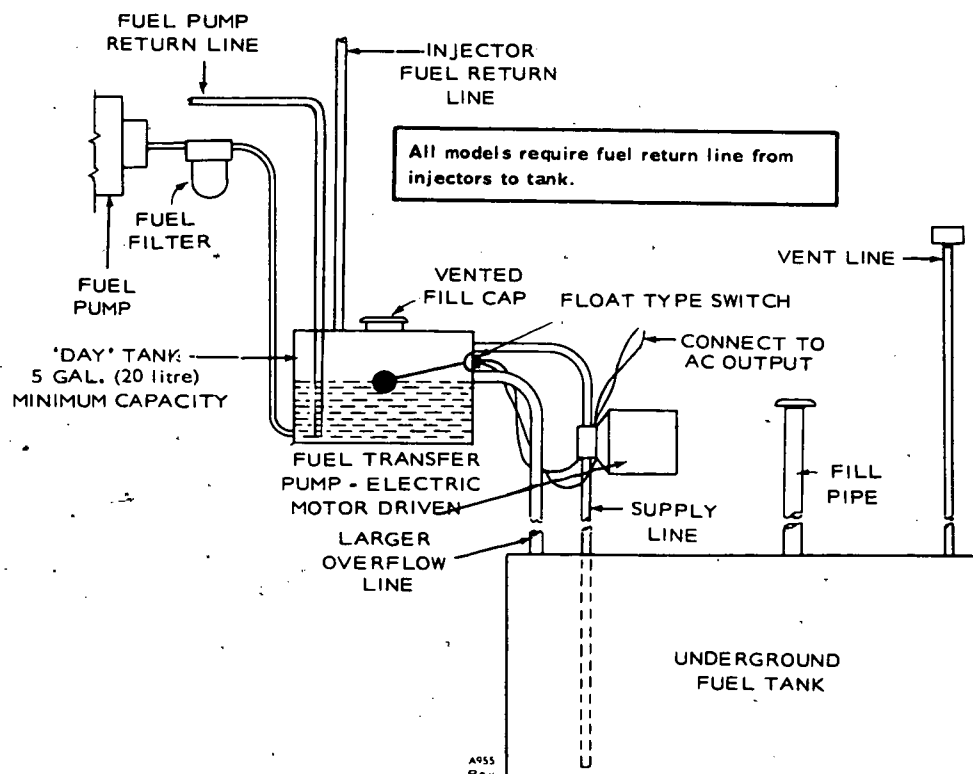


FIGURE 14. DAY TANK (TYPICAL)

BATTERY

Starting the unit requires 12-volt battery current. Use two 6-volt (see *Specifications*) batteries for a normal installation. Connect the batteries in series (negative post of first battery to positive post of second) as in Figure 15. Necessary battery cables are on unit. Service the batteries as necessary. Infrequent unit use (as in emergency standby service) may allow the batteries to self-discharge to the point where they cannot start the unit. If installing an automatic transfer switch that has no built-in charge circuit, connect a separate trickle charger. Onan automatic transfer switches include such a battery charging circuit.

WARNING

being charged.

Do not smoke while servicing batteries. Lead acid batteries give off explosive gases while

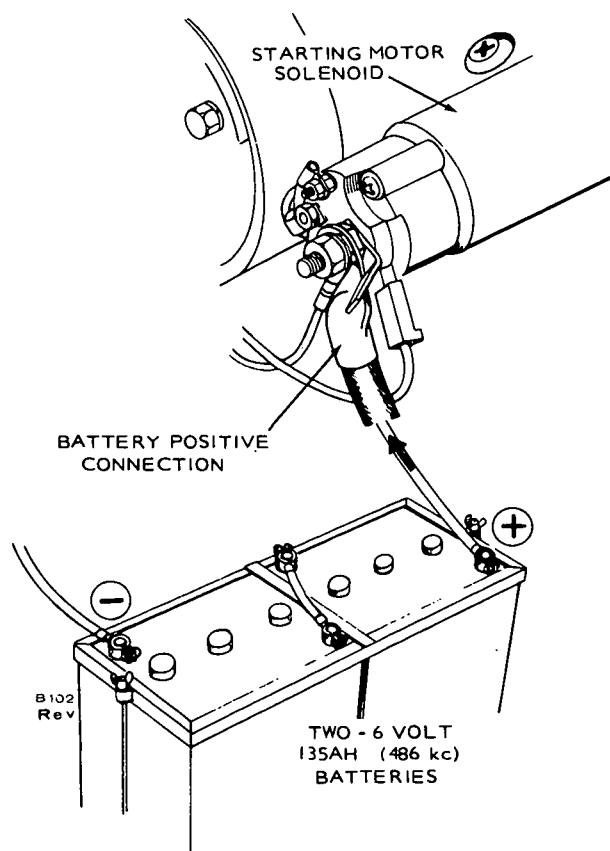


FIGURE 15. BATTERY CONNECTION

BATTERY, HOT LOCATION

Batteries will self discharge very quickly when installed where the ambient temperature is consistently above 90° F (32.2° C) such as in a boiler room. To lengthen battery life, dilute the electrolyte from its normal 1.265 specific gravity reading at full charge to a 1.225 reading. The cranking power is reduced slightly when the electrolyte is so diluted, but if the temperature is above 90° F (32.2° C), this should not be noticed. The lengthened battery life will be worth the effort.

1. Fully charge the battery.
2. With the battery still on charge, draw off the electrolyte above the plates in each cell. DO NOT ATTEMPT TO POUR OFF; use a hydrometer or filler bulb and dispose of it in a safe manner. Avoid skin or clothing contact with the electrolyte.
3. Refill each cell with distilled water, to normal level.
4. Continue charging for 1 hour at a 4 to 6 hour rate.
5. Test each cell. If the specific gravity is still above 1.255, repeat steps 2, 3, and 4 until the reading is reduced to 1.225. Usually, repeating steps twice is sufficient.

REMOTE CONTROL CONNECTIONS

Provision is made for addition of remote starting. This is accomplished on a 4 place terminal block situated within the control box. Connect one or more remote switches across remote terminal and B+ terminal as shown in Figure 16. If the distance between the set and remote station is less than 1000-feet (305 m), use No. 18 AWG wire; between 1000- and 2000-feet (305 m) and 610 m), use No. 16 AWG wire.

WARNING

Improper electrical connections could result in damage to electrical equipment or cause injuries to personnel.


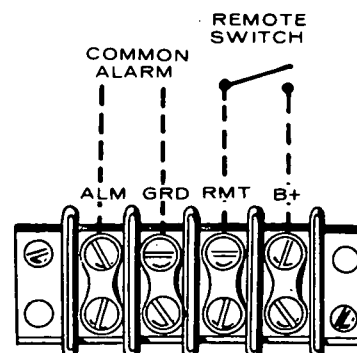


FIGURE 16. REMOTE START CONNECTION (TB12)

WIRING CONNECTIONS

Most local regulations require that wiring connections be made by a licensed electrician and that the installation be inspected and approved before operation. All connections, wire sizes, etc. must conform to requirements of electrical codes in effect at the installation site.

If the installation is for standby service, a double throw transfer switch must always be used. Connect this switch (either automatic or manual) so that it is impossible for commercial power and generator current to be connected to the load at the same time. See Figure 17. Instructions for connecting an automatic load transfer control are included with such equipment.

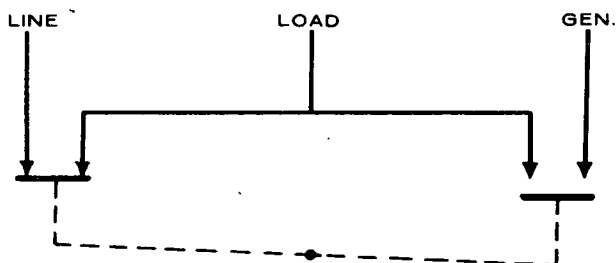

NOTE: SHOWN WITH LINE CONNECTED TO LOAD.

FIGURE 17. LOAD TRANSFER SWITCH
(TYPICAL FUNCTION)

Control Box Connections: The factory ships these 12 lead generators with load connection wires NOT connected together in the control box. These 12 wires are labeled T1 through T12 and must be brought together before making load connections. Proceed as follows:

1. Remove either right, left or top panel from control box. See Figure 18.
2. Connect wires together as shown on panel drawing and in Figure 1 according to voltage desired.

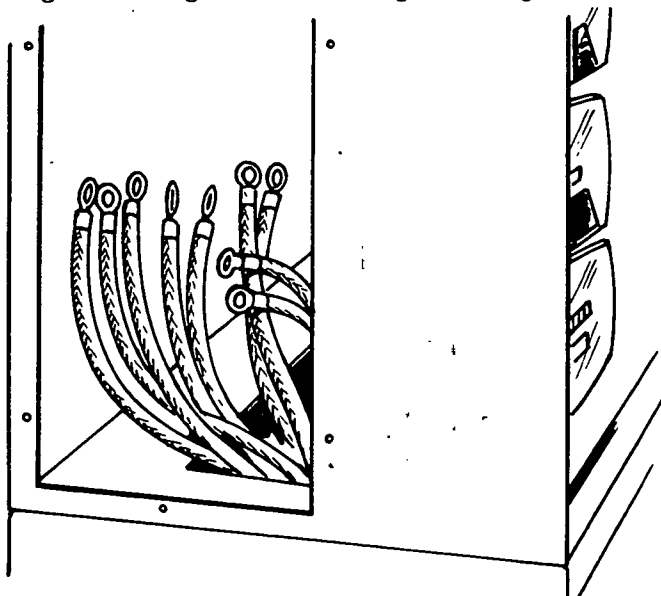


FIGURE 18. CONTROL BOX (SIDE PANEL REMOVED)

3. Open hinged control panel doors. Connect lead from terminal 63 to correct terminal for voltage desired. These terminals are labeled H2, H3, H4, H5 and H6. See Figure 19.
4. Close front panel and secure with 1/4 turn fasteners.
5. Connect load wires to generator leads.

Preceding instructions do not apply to models designated Code 3 or 9X; this connection is made at the factory. The installer must only connect load wires.

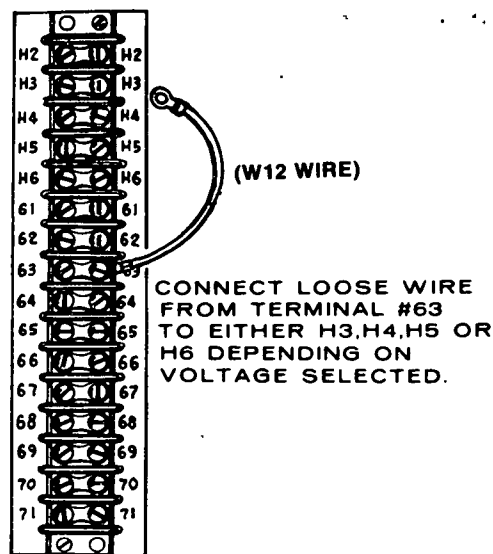


FIGURE 19. REFERENCE VOLTAGE CONNECTION (TB21)

120/240 Volt, Single Phase, 12 Lead: Terminal connection L0 can be grounded (neutral). For 120 volts, connect the hot load wires to either the L1 or L2 connection, Figure 20. Connect the neutral load wire to the grounded L0 connection. Two 120 volt circuits are thus available, with not more than 1/3 the rated capacity of the set available on either circuit. If using both circuits, be sure to balance the load between them.

For 240 volts, connect one load wire to the L1 connection and the second load wire to the L2 connection. Terminal connection L0 is not used for 240 volt service.

Only 2/3 of rated current is available from this connection.

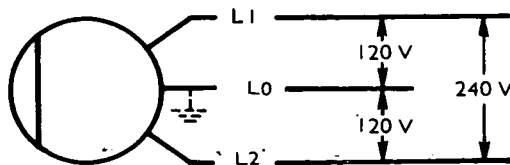


FIGURE 20. 120/240 V. 1-PHASE DOUBLE DELTA

120/240 Volt, 3 Phase, Delta Connected Set; 12 Lead:

The 3 phase Delta connected set is designed to supply 120 and 240 volt, 1 phase current and 240 volt, 3 phase current, Figure 21. For 3 phase operation, connect the three load wires to generator terminals L1, L2 and L3—one wire to each terminal. For 3 phase operation the L0 terminal is not used.

For 120/240 volt, 1 phase, 3 wire operation, terminals L1 and L2 are the "hot" terminals. The L0 terminal is the neutral, which can be grounded if required. For 120 volt service, connect the black load wire to either the L1 or L2 terminal. Connect the neutral (white) wire to the L0 terminal. Two 120 volt circuits are available. Connect between any two 3-phase terminals for 240 volt 1-phase loads.

Any combination of 1 phase and 3 phase loading can be used at the same time as long as total current does not exceed the NAMEPLATE rating of the generator. If no 3 phase output is used, usable 1 phase output is 2/3 of 3 phase kVA.

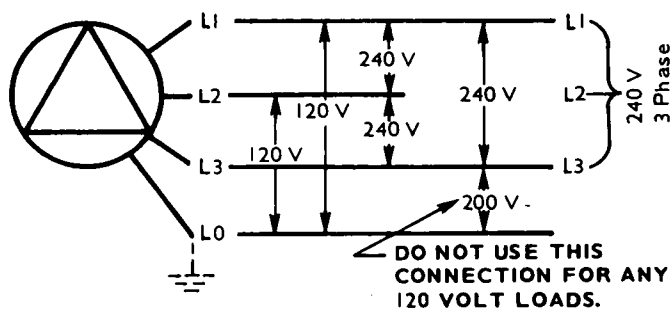


FIGURE 21. 120/240 V. 3-PHASE DELTA

3 Phase, Wye Connected Set: The 3 phase, 4 wire set produces line to neutral voltage and line to line voltage. The line to neutral voltage is the lower voltage as noted on the unit nameplate, and the line to line voltage is the higher nameplate voltage.

For 3 phase loads, connect separate load wires to each of the set terminals L1, L2 and L3. Single phase output of the higher nameplate voltage is obtained between any two 3 phase terminals as shown in Figure 22.

The terminal marked L0 can be grounded. For 1 phase loads, connect the neutral (white) load wire to the L0 terminal. Connect the black load wire to any one of the other three terminals—L1, L2 or L3. Three separate 1 phase circuits are available, with not more than 1/6 the rated capacity of the set from any one circuit.

If using 1 phase and 3 phase current at the same time, use care to properly balance the 1 phase load, and not to exceed rated line current.

Figure 22 shows load connections for 120/208 voltage. Other voltages are available from either parallel wye or series wye illustration in Figure 1.

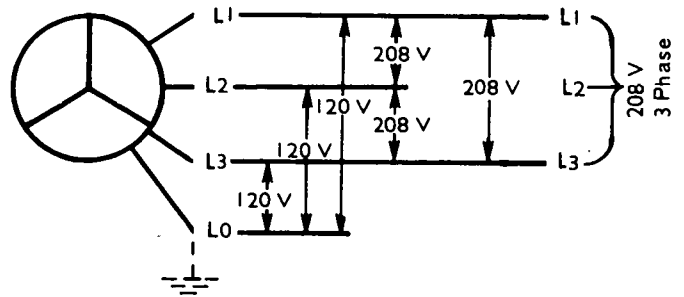


FIGURE 22. 120/208 V. 3-PHASE WYE

120/240 Volt, 1 Phase, 3 Wire Unit; 3 Lead (3R or 53R units): Terminal post T0 is the grounded (neutral) terminal. For 120 volt current, connect the "hot" load wire to either the T1 or T2 terminal. Connect the neutral load wire to the T0 terminal. Two 120 volt circuits are thus available, with not more than 1/2 the rated capacity of the set available on each circuit. Balance the load as closely as possible (Figure 23).

For 240 volt current, connect one load wire to terminal T1 and the second load wire to terminal T2. Terminal T0 is not used for 240 volt service.

CAUTION If using both 120 and 240 volt current at the same time, use care not to overload either circuit.

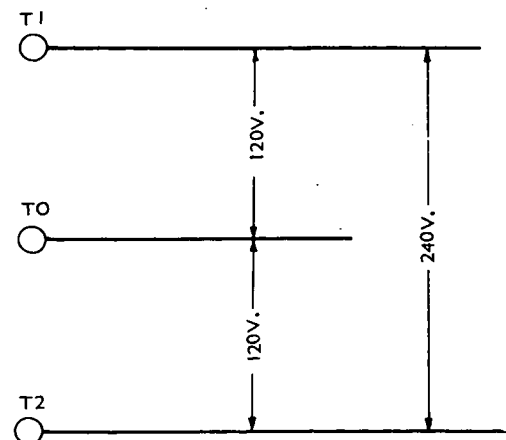


FIGURE 23. 120/240 V. 1-PHASE (CODE 3)

OPERATION

GENERAL

Onan DEF Series electric generating sets are given a complete running test under various load conditions and are thoroughly checked before leaving the factory. Inspect your unit closely for loose or missing parts and damage which may have occurred in transit. Tighten loose parts, replace missing parts and repair any damage before putting set into operation.

PRESTART SERVICING

Lubrication System: Engine oil was drained prior to shipment. Fill engine to capacities shown. After engine has been run, check dipstick, add oil to bring level to full mark. Record total capacity for future oil changes. For most operating conditions grade CC/CD lubricating oil is recommended. Do not mix brands nor grades of lubricating oils.

Oil viscosity should be as follows:

AMBIENT TEMPERATURE	USE SAE VISCOSITY
Below -10° F (-23° C)	5W-20
-10° F to +40° F (-23° C to 4.5° C)	10-10W
40° F to 70° F (4.5° C to 21° C)	20-20W
70° F to 100° F (21° C to 38° C)	30
90° F and above (32° C)	40

Oil Capacities (nominal)

Oil Pan and Filter — 14-quarts (13.25 litres)

Cooling System: Cooling system was drained prior to shipment. Fill cooling system before starting. Nominal capacity is 18-quarts (17-litres). For units using either a radiator or heat exchanger (city water cooled), fill the system with clean soft water. Use a good rust and scale inhibitor additive. If a possibility

exists of a radiator cooled set being exposed to freezing temperatures use anti-freeze with an ethylene glycol base. During initial engine run, check the coolant level several times and replenish if necessary to compensate for air pockets which may have formed during filling. Refer to Ford-Dorset engine manual for additional information.

CAUTION

1. Verify that the electric solenoid valve used with city water cooled sets is open before initial starting of unit to allow coolant chambers to fill. Overheating and damage to the engine could result from noncompliance.

2. If engine is equipped with a cooling system filter, do not use antifreeze with an anti-leak formula. The stop leak chemicals can prevent or retard the coolant flow through the filter, thereby eliminating the filtering process completely.

WARNING

Be careful when checking coolant under pressure. It is advisable to shut engine down and bleed off pressure before removing pressure cap. Severe burns could result from contact with hot coolant.

Fuel System: Refer to the Ford-Dorset engine manual for fuel oil specifications. Check with fuel supplier and ensure that fuel supplied meets the specifications. Filter or strain fuel when filling tank. Fuel supply tanks should be kept as nearly full as possible by topping up each time engine is used. Warm fuel returning from the injector pump heats the fuel in the supply tank. If the fuel level is low in cold weather, the upper portion of the tank not heated by returning fuel tends to increase condensation. In warm weather both the supply tank and fuel are warm. Cool night air lowers the temperature of the tank more rapidly than the temperature of the fuel. Again this tends to increase condensation.

Condensate mixing with the sulphur in the fuel forms a sulphurous acid which will corrode and damage the engine. KEEP FUEL CLEAN.

WARNING

DO NOT SMOKE while handling fuel. Diesel fuel is flammable.

Priming Fuel System: Verify that all connections in the fuel system are secure and no leaks exist. Proceed with priming as follows:

1. Open bleed screw on the inlet side of fuel filter. See Figure 24.
2. Actuate priming lever on the side of the fuel transfer pump (Figure 13) until fuel flows from filter bleed screw without showing air bubbles.
3. Close filter inlet bleed screw.
4. Open bleed screw on the outlet side of filter. See Figure 24.
5. Again, actuate priming lever until a bubble free flow of fuel comes out of the bleed screw.
6. Close filter outlet bleed screw.
7. Open one or two bleed screws on fuel injection pump.
8. Repeat priming lever actuation until bubble free fuel is emitted from bleed screws on injection pump.
9. Close bleed screw(s).
10. Torque all the bleed screws.
 Filter - 5-7 lb-ft (6.88 to 9.5 N•m)
 Pump - 3-5 lb-ft (4.1 to 6.8 N•m)

1. SECURING BOLT
2. BLEED SCREWS
3. SEAL
4. FILTER ELEMENT
5. BOWL
6. DRAIN CAP
7. SEAL

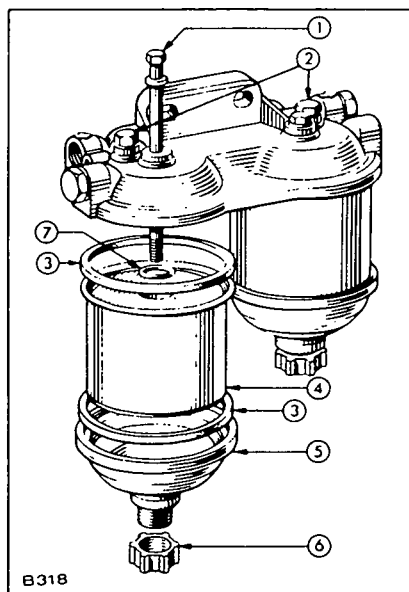


FIGURE 24. FUEL FILTER

BATTERIES

Ensure that the cable connections to the batteries are secure. Coat connections with petroleum based or non-conductive grease to retard formation of corrosive deposits.

Check level of electrolyte to be at split ring mark. Measure specific gravity of electrolyte: SG 1.265 at 80° F (26.7° C). If distilled water has been added or specific gravity is less than 1.265, place batteries on charge until desired reading is reached. Do not over charge.

STARTING

When the preceding service functions have been performed, recheck to verify unit is ready to start.

1. Crankcase filled.
2. Cooling system filled—input solenoid valve open.
3. Batteries charged and connected.
4. Fuel solenoid valve open.

To start, move the "run-stop/reset-remote" switch to the "run" position. The engine should start after a few seconds of cranking. Immediately after start, observe the oil pressure gauge. Normal oil pressure is between 30 psi (207 kPa) and 55 psi (380 kPa). Check the following gauges:

1. DC Ammeter—10 to 30 amperes.
2. AC Voltmeter—AC generator output voltage.
3. Frequency Meter—AC generator output frequency.

After running 10 minutes under load the water temperature gauge should have stabilized at 180° F to 195° F (82° C to 90.6° C). On city water cooled units an adjustable valve is connected in the water supply line. Adjust the hand wheel valve to provide a water flow that will keep the water temperature gauge reading within the range of 170° F to 200° F (76.7° C to 93.3° C).

Break-In Note: Run set at 50 percent rated load for the first half-hour of initial operation after reaching operating temperature.

Non-Start: If engine fails to start after a few seconds of cranking, or starts and runs then stops and the fault lamp lights, refer to appropriate troubleshooting chart, Table 3 or Table 4.

STOPPING

To reduce and stabilize the engine temperatures, run the engine at no load for three to five minutes before shutting down.

Move the run-stop/reset-remote switch to stop position to shut down the set.

TABLE 3.
TROUBLESHOOTING ENGINE SHUTDOWN SYSTEM
(Engines with only one fault lamp)

SYMPTOM	CORRECTIVE ACTION
1. Engine stops cranking and fault lamp lights, after cranking approximately 75 seconds.	1. See engine service manual for troubleshooting fuel system. After correcting problem, reset engine monitor relay by placing Run-Stop/Reset-Remote switch to Stop/Reset, then back to the required running position.
2. Fault lamp lights immediately after engine starts.	2. Check for: Overspeed condition as engine starts.
3. Fault lamp lights and engine shuts down after running for a period.	3. Check the following: a. Oil level. Engine will shut down if sensor is closed. b. Check engine manual for troubleshooting oil system. c. High engine temperature. Check coolant level; check water flow (city water cooled systems); check radiator for free air flow, and fan belts for tightness. See engine manual for troubleshooting cooling system. d. Check for faulty oil pressure sensor or faulty high engine temperature sensor.
4. Engine runs, shuts down and cranks for 75-seconds. Cranking cycle stops; fault lamp lights.	4. Check fuel supply.
5. Fault lamp lights, no fault exists.	5. To check a no-fault condition, disconnect leads from TB11 terminals 29, 30 and 31. If fault lamp lights with leads disconnected, replace engine monitor board. Reconnect leads.

TABLE 4.
TROUBLESHOOTING ENGINE SHUTDOWN SYSTEM
(Units with five fault lamps)

SYMPTOM	CORRECTIVE ACTION
1. Overcrank fault lamp lights and engine stops cranking after approximately 75-seconds.	1. See engine service manual for troubleshooting fuel system. After correcting fault, reset engine monitor relay by placing Run-Stop/Reset-Remote switch to Stop/Reset position, depressing Reset button, then to the required running position.
2. Engine runs, shuts down, cranks for 75-seconds, cranking cycle stops, overcrank light ON.	2. Check fuel supply.
3. *Low oil pressure shutdown.	3. Check— a. Oil level. Replenish if necessary. b. Sensor. Faulty sensor will shut down engine. c. Refer to engine service manual for troubleshooting guide for oil system.
4. *High engine temperature shutdown.	4. Check— a. Coolant level. Replenish if necessary. b. City water cooled sets. Check water flow, valves, etc. c. Check sensor; check thermostat. d. Radiator model, check fan belts, radiator for obstructions, etc.
5. Overspeed shutdown.	5. Check governor and throttle linkages for freedom of movement. Check overspeed switch.
6. Overspeed light on, no shutdown.	6. Disconnect wire at TB11-29. Light on after reset; replace engine monitor board.
7. *Low oil pressure light ON. No shutdown.	7. Disconnect wire at TB11-30. Light ON after relay reset. Replace engine monitor board.
8. *High engine temperature light ON. No shutdown.	8. Disconnect wire at TB11-31. Light ON after relay reset. Replace engine monitor board.

*NOTE: Not applicable on Pennsylvania State models.

EXERCISE PERIOD

Generator sets on continuous standby service are required to be operative at essential loads from a cold start in a short period of time in the event of a power outage.

This imposes severe conditions on the engine. Friction of dry piston rings upon dry cylinder walls causes scuffing and rapid wearing. These can be relieved by exercising the set at least once a week for a minimum time of 30-minutes per exercise period. Preferably, run the set under at least 50 percent load to allow the engine to reach normal operating temperature. This will keep engine parts lubricated, maintain fuel prime, prevent electrical relay contacts from oxidizing and insure easy emergency starts. Onan automatic transfer switches contain an optional exercise switch which, by pre-selection, will start, determine run period and shut down a set on a weekly frequency. For example, the switch can be set for time of start, length of run, A.M. or P.M. and day of week.

After each exercise period, top off fuel tank, check engine for leaks and unit for general condition. Locate cause of leaks (if any) and correct.

NO LOAD OPERATION

Periods of no load operation should be held to a minimum. If it is necessary to keep the engine running for long periods of time when no electric output is required, best engine performance will be obtained by connecting a "dummy" electrical load. Such a load could consist of heater elements, etc.

OUT-OF-SERVICE PROTECTION

Generator sets removed from service for extended periods of time should be protected from rust and corrosion. The natural lubrication qualities of ASTM No. 2 Diesel fuel should protect a diesel engine for at least 30-days when unit is not in service. To protect a unit that will be out of service over 30 days, Onan recommends the following procedure:

1. Check coolant, top up if necessary using recommended anti-freeze.

2. Run set until thoroughly warm; generator under at least 50% load.
3. Shut down engine and drain oil base while still warm. Refill and attach a warning tag indicating viscosity of oil used.
4. Service air cleaner.
5. Clean throttle and governor linkage and protect by wrapping with a clean cloth.
6. Plug exhaust outlets to prevent entrance of moisture, bugs, dirt, etc.
7. Clean off dirt and dry entire unit. Coat parts likely to rust with a light coat of grease or oil.
8. Disconnect battery and follow standard battery storage procedure. Apply a film of non-conductive grease (e.g., vaseline) to battery cable lugs.
9. Fill fuel tank to prevent condensation contamination.
10. Provide a suitable cover for the entire unit.

RETURNING A UNIT TO SERVICE

1. Remove cover and all protective wrapping. Remove plug from exhaust outlet.
2. Check warning tag on oil base and verify that oil viscosity is still correct for existing ambient temperature.
3. Clean and check battery. Measure specific gravity (1.260 at 77° F [25° C]) and verify level to be at split ring. If specific gravity is low, charge until correct value is obtained. If level is low, add distilled water and charge until specific gravity is correct. DO NOT OVERCHARGE.

WARNING

Do not smoke while servicing batteries. Explosive gases are emitted from batteries in operation. Ignition of these gases can cause severe personal injury.

4. Check coolant level, adjust if necessary.
5. Connect batteries.
6. Verify that no loads are connected to generator.
7. Start engine.
8. After start, apply load to at least 50 percent of rated capacity.
9. Check all gauges to be reading correctly. Unit is ready for service.

HIGH ALTITUDE

Ratings apply to altitudes up to 1000-feet (305 m), standard cooling, normal ambients and with No. 2 Diesel fuel. Consult factory or nearest authorized Onan distributor for operating characteristics under other conditions.

Engine horsepower loss is approximately 3 percent for each 1000 feet (305 m) of altitude above sea level. Use lower power requirement at high altitudes to prevent smoke, over-fuelling and high temperatures.

HIGH TEMPERATURES

1. See that nothing obstructs air flow to-and-from the set.
2. Keep cooling system clean.
3. Use correct SAE No. oil for temperature conditions.

LOW TEMPERATURES

1. Use correct SAE No. oil for temperature conditions. Change oil only when engine is warm.
2. Use fresh fuel. Protect against moisture condensation.
3. Keep fuel system clean and batteries in a well charged condition.
4. Partially restrict cool air flow but use care to avoid overheating.
5. Connect water jacket heater when set is not running.
6. Refer to Ford-Dorset manual for further information.

Water Jacket Heater: The function of this optional heater is to keep the engine warm enough to assure starting under adverse weather conditions. Connect the heater to a source of power that will be on during the time the engine is not running. Be sure the voltage rating is correct for the heater element rating.

GENERAL MAINTENANCE

GENERAL

Follow a definite schedule of inspection and servicing, based on operating hours (Table 5). Keep an accurate logbook of maintenance, servicing, and operating time. Use the running time meter to keep a record of operation and servicing. Service periods outlined are recommended for normal service and operating conditions. For continuous duty, extreme temperature, etc., service more frequently. For infrequent use, light duty, etc., service periods can be lengthened accordingly. Refer to Ford-Dorset engine manual for details of engine service and maintenance procedures.

WARNING

Before performing any maintenance work on the engine, generator, control panel, automatic transfer switch or associated wiring, disconnect batteries. Failure to do so could result in damage to the unit or serious personal injury in the event of inadvertent starting.

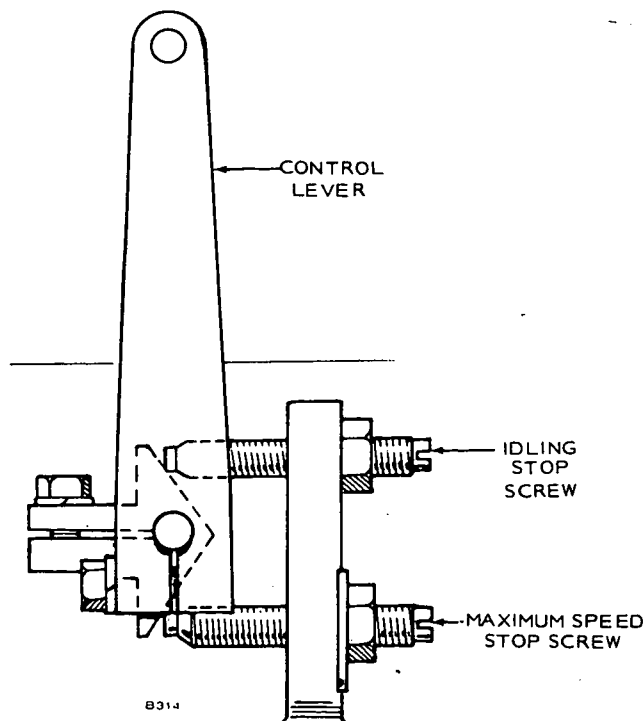


FIGURE 25. GOVERNOR SPEED ADJUSTMENT

ENGINE SPEED

Generator frequency is in direct ratio to engine speed which is controlled by the governor. The governor controlling the DEF set is integral with the injector pump. High and low speed limit stops are set at the ONAN testing facility and normally do not require further adjustment, therefore if your set is on continuous standby service, the governor may never need to be touched.

If however the unit is removed for repair or the set is used frequently, adjustment may be necessary due to wear of internal components.

To adjust governor, proceed as follows:

1. Loosen lock nuts on idle stop screw and maximum speed stop screw. Refer to Figure 25.
2. Start engine; apply full load.

If governor setting is considerably out of adjustment, adjust low speed stop screw until frequency meter indicates approximately 63 Hz before applying load.

3. Back off maximum speed stop screw (screwdriver slot).
4. Turn idle speed stop screw clockwise until frequency meter indicates 60 Hz. (Counterclockwise reduces rpm.)
5. Turn maximum speed stop until it bottoms on governor control lever.
6. Secure lock nuts.

DUST AND DIRT

1. Keep set clean. Keep cooling system free of dirt, etc.
2. Service air cleaners frequently.
3. Store oil and fuel in dust-tight containers.
4. See engine operation and maintenance manual.

COOLANT CORROSION RESISTOR (Water Filter)

The PAF formula elements can be used with most permanent antifreezes, but is not recommended for use with plain water. It is necessary to drain and flush the system thoroughly when changing from one element formula to the other if a non-compatible antifreeze is in use. See Figure 10 for view of the system.

At each 300 to 500 hour interval of operation, depending on conditions, service the coolant filter as follows:

1. Thoroughly clean filter body and surrounding area.
2. Close coolant inlet and outlet shutoff valves.
3. Remove drain plug from bottom of filter body and drain coolant.
4. Remove capscrews attaching filter cover to body and remove cover (Figure 26).

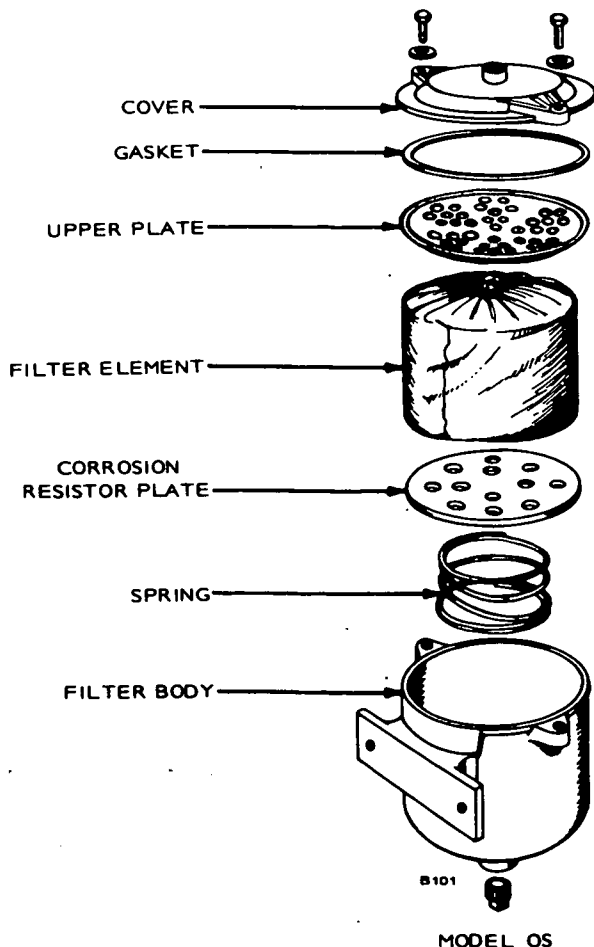


FIGURE 26. CHANGING CORROSION RESISTOR ELEMENT AND PLATE

5. Lift upper plate and filter element out of filter body. Discard filter element.
6. Remove lower corrosion resistor plate and spring from filter body.
7. Inspect and clean lower corrosion resistor plate, buffing it to a bright finish. If plate is thin and pliable, or has developed holes, replace it.
8. Remove and clean sump plate. Clean sump area in filter body.
9. Install sump plate, spring, and lower corrosion resistor plate.
10. Install new filter element.
11. Position upper plate in filter body.
12. Make certain gasket is in good condition, then install cover and secure with attaching capscrews.
13. Replace drain plug and open inlet and outlet shutoff valves.

Initially the element should be changed after 150 hours of operation for borate (PAF) formula filter elements.

Do not use soluble oil or other conditioners in the cooling system. However, filter efficiency is not affected by use of permanent type antifreeze in the system.

CAUTION If a stop-leak is added to the coolant, do not allow it to circulate through the filter. Shutoff valves are provided in inlet and outlet lines for isolating the filter from remainder of cooling system.

Whenever coolant supply is changed (spring and fall), the system must be drained and flushed.

On an extremely dirty system, the coolant should be drained and flushed before a new element is installed. In a few rare cases, additional flushing and change of filter may be necessary in order to completely purge the system. Generator sets subject to excessive idling or frequent start and stop cycles, or units located in areas with dust, air contaminants, or other noxious atmospheric conditions, will require more frequent servicing.

After maintenance has been completed, check flow indicator if one has been installed to see if air bubbles (which can cause pump cavitation) are in the system. If air is present, bleed the system by disconnecting the filter outlet line momentarily until the coolant flows in a solid stream.

GENERAL ENGINE MAINTENANCE

Refer to the engine manual furnished with the generating set for additional details on servicing procedures not covered by this manual. Refer to Table 5 for general information on clearing the electric generating set of any malfunctions which have developed during the period of operation.

START-STOP SOLENOID (Failure to Shut Down)

In case the set does not shut down when moving Run-Stop/Reset-Remote switch to *Stop* position, the stop solenoid linkage may be out of adjustment. See Figure 27. Adjust as follows:

1. Remove the joint that attaches the stop solenoid rod to injection pump arm.
2. With the engine running, move the lever arm on the injection pump back slowly towards radiator just until engine stops.
3. Hold lever in this same position and adjust linkage accordingly.
4. Snap rod joint back on injection pump arm.

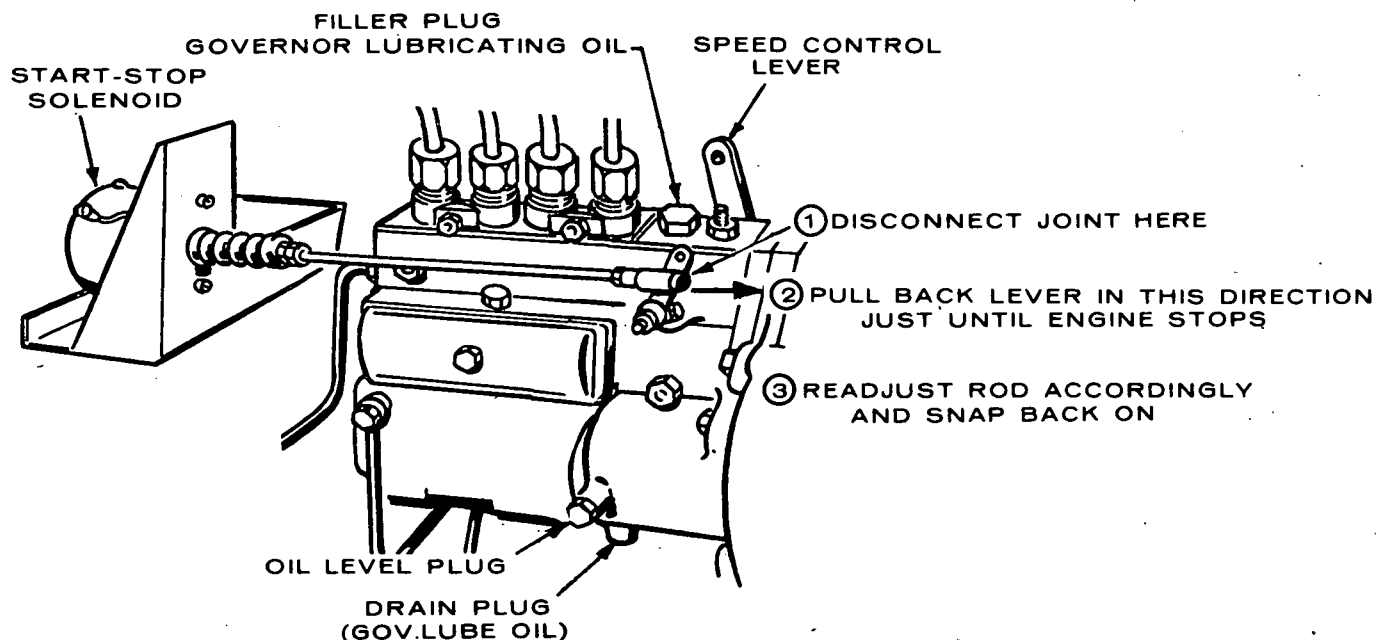


FIGURE 27. STOP-SOLENOID LINKAGE ADJUSTMENT

AC GENERATOR

There are no brushes, brush springs or collector rings on these generators, therefore they require very little servicing. Periodic inspections, to coincide with engine oil changes, will ensure good performance.

Generator Bearing: Inspect the bearing every 1000 hours with the unit running. Apply light smear of Molykote grease if unit appears dry.

If using the unit for "prime power," replace the bearing every 10,000 hours or two years. If using the set for "standby," replace the bearing every five years.

Check generator voltage. It may be necessary to make a slight readjustment of the voltage rheostat to obtain the preferred voltage at average load.

INSPECTION AND CLEANING

When inspecting the rotating rectifier assembly, make sure diodes are free of dust, dirt and grease. Excessive foreign matter on these diodes and heat sinks will cause the diodes to overheat and will result in their failure. Blow out the assembly periodically, with filtered, low pressure air. Also check to see that diodes and leadwires are properly torqued. The diodes should be torqued to 30 in. lb. (3.4 N•m) or finger tight plus a quarter turn. Blow dust out of control panel.

BATTERIES

Check the condition of the starting batteries at least every two weeks. See that connections are clean and tight. A light coating of non-conductive grease will retard corrosion at terminals. Keep the electrolyte at the proper level above the plates by adding distilled water. Check specific gravity, recharge if below 1.265.

CONNECTIONS (Fuel, Exhaust, etc.)

Operator should periodically make a complete visual inspection of the set while running at rated load. Some of the things to check for are as follows:

1. Check all fuel and oil lines for possible leakage.
2. Inspect exhaust lines and mufflers for possible leakage and cracks.
3. Periodically or daily, drain moisture from condensation traps.
4. Inspect water lines and connections to be sure they are secure and do not leak.
5. Inspect electrical wires for fray damage and be sure all connections are secure.

If generator requires major repair or servicing, contact an authorized Onan dealer or distributor.

TABLE 5. OPERATOR MAINTENANCE SCHEDULE

MAINTENANCE ITEMS	OPERATIONAL HOURS			
	10	50	200	400
Inspect Complete Set	x*			
Check Engine Oil Level	x			
Check Radiator Coolant Level	x			
Check Fuel	x1			
Check Governor Oil Level		x		
Check Air Cleaner (Clean if Required)		x2		
Check Electrolyte Level of Battery		x		
Stop-Solenoid Linkage		x2		
Adjust Fan Belt Tension			x3	
Change Governor Oil			x	
Change Engine Oil & Filter			x2	
Clean Fuel Lift Pump			x	
Clean Sediment Bowl & Filter			x	
Check Starter			x5	
Clean & Inspect Battery Charging (DC) Alternator			x	
Check AC Generator			x6	
Replace Fuel Filter Element				x2
Replace Air Cleaner Element				x2
Remove & Service Injectors				x4
Adjust Valve Clearances				x
Examine Water Filter Element				x

x1 - After every run.

x2 - Perform more often in extremely dusty conditions.

x3 - Adjust to 1/2-inch (12.5 mm) depression between pulleys. Refer to Ford engine manual.

x4 - Check for proper spray pattern, etc. Refer to the Ford manual.

x5 - Oil front bearing sparingly; check brushes.



* - Inspect exhaust system for leaks during each daily operating period.

PARTS CATALOG

INSTRUCTIONS FOR ORDERING REPAIR PARTS

ONAN PARTS

All parts in this list are Onan parts. For Onan parts or service, contact the dealer from whom you purchased this equipment or your nearest authorized service station. To avoid errors or delay in filling your order, please refer to the Onan nameplate and give the complete MODEL, SERIAL and SPECIFICATION NUMBER.

 ELECTRIC GEN SET			
MODEL <input type="text"/>			
SERIAL NO. <input type="text"/>			
IMPORTANT ALWAYS GIVE ABOVE NOS. WHEN ORDERING PARTS			
CONTINUOUS <input type="text"/>		RATING <input type="text"/>	
HERTZ-60 RPM - 1800			
3 PHASE		1 PHASE	
KW <input type="text"/>	KVA <input type="text"/>	KW <input type="text"/>	KVA <input type="text"/>
VOLTS 120/208 127/220 139/240 120/240/416			
AMPS <input type="text"/>			
VOLTS 254/440 277/480 347/600 120/240			
AMPS <input type="text"/>			
BAT. <input type="text"/> VOLTS			
MANUFACTURED BY ONAN DIV. OF ONAN CORPORATION MINNEAPOLIS, MINN. 55432, U.S.A. FOR ELECT. EQUIPMENT ONLY 			

FORD PARTS

All Ford parts must be ordered from the Ford Motor Company of Dearborn Michigan, or their nearest authorized distributor. When ordering parts, refer to the Ford nameplate and give the complete SERIAL, TYPE and OPTIONS NUMBER.


 REG. U.S. PAT. OFF. INDUSTRIAL ENGINE SERIAL <input type="text"/>	
TYPE <input type="text"/>	OPTIONS <input type="text"/>

TABLE OF CONTENTS

TITLE	PAGE
Electric Generating Set Data Table	34
Replacement Engine	34
Cooling System Group	35
Alternator Group	35
Miscellaneous Engine Parts Group	36,37
Mounting and Housing Group	38,39
Control Group (AC Portions)	40,41
Control Group (Engine Portions)	42,43
Printed Circuit Board Assembly Group	44,45
Cranker Cycle Control Group	46
Engine Control Monitor Group	47
Generator Group	48,49
Voltage Regulator Group	50,51
Exciter Rotor Group	52

OPTIONAL EQUIPMENT

Mounted Fuel Tank Group	53
Water Filter Group	53
Heat Exchanger Cooling Installation	54
Heat Exchanger with Regulator Installation	56
Water Cooled Manifold Installation	57
Water Jacket Heater Installation (120 Volt)	58
Water Jacket Heater Installation (208/240 Volt)	59
City Water Cooling Installation	60
City Water Cooling with Regulator Installation	61
Standpipe Cooling Installation	62
Standpipe Cooling with Regulator Installation	63
Exhaust Muffler Installation	64

This catalog applies to the standard DEF generator sets as listed below. These sets are powered by a Ford engine (see Ford manual). Engine parts modified or added by Onan will be in this list and have Onan part numbers. These supersede similar parts listed in the Ford manual. Onan parts are arranged in groups of related items and are identified by a reference. All parts illustrations are typical. Using the Model and Spec No. from the set nameplate, select the parts that apply to your set. *Right* and *left* sides are determined by *facing* the front end of the engine.

ELECTRIC GENERATING SET DATA TABLE

MODEL AND SPEC NO.*	ELECTRICAL DATA			
	WATTS	HERTZ	PHASE	WIRE
37.5 DEF - 53R	37,500	50	1	3
37.5 DEF - 515R	37,500	50	£	12
40.0 DEF - 3R50	40,000	60	1	3
40.0 DEF - 15R50	40,000	60	£	12
45.0 DEF - 3R	45,000	60	1	3
45.0 DEF - 9XR	45,000	60	3	4
45.0 DEF - 15R	45,000	60	£	12

* - The Specification Letter advances (A to B, B to C, etc.) with manufacturing changes.

£ - These sets are reconnectible; refer to Specifications (Generator details).

NOTE: Hertz is a unit of frequency equal to one cycle per second.

REPLACEMENT ENGINE:

100-0994 1

Engine, Replacement (Ford Motor Company Model 2713E)

General Description:

Includes—Complete Cylinder Block, Fuel Pump, Fuel Filter, Oil Filter, Starter Motor, Governor, Flywheel, Water Pump, Oil Pan, Exhaust Manifold.


Excludes—Alternator, Alternator Mounting Brackets, Alternator Belt, Temperature Sender, Oil Pressure Sender, Air Cleaner, Radiator, Fan Blades, Fan Belt and Front Mounting Brackets.

NOTE: Above engine for standard Radiator cooled set. Refer to Factory for all other sets.

NOTICE!


ITEMS REFERENCED AS **OPTIONAL** INDICATE PART IS FACTORY INSTALLED AND MAY NOT BE APPLICABLE TO ALL MODELS. FOR FIELD CONVERSIONS ADDITIONAL PARTS ARE USUALLY REQUIRED.

COOLING SYSTEM GROUP (RADIATOR COOLED SETS)

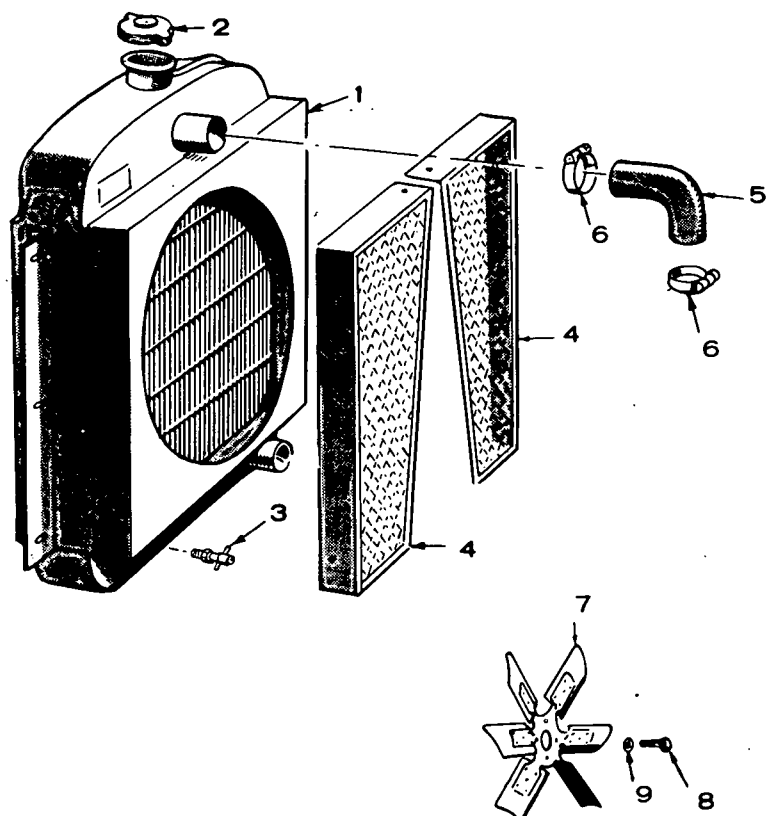

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0713	1	Radiator
2	130-0449	1	Cap, Radiator
3	504-0028	1	Valve, Radiator Drain
4	GUARD, FAN		
	130-0351	1	Left Hand
	130-0352	1	Right Hand
5	503-0441	2	Hose, Radiator
6	CLAMP, RADIATOR HOSE		
	503-0311	3	2-1/8" x 1/2"
	503-0365	1	2-1/2" x 1/2"
7	130-0605	1	Blade, Fan
8	801-0024	4	Screw
9	850-0045	4	Washer, Lock - Spring (5/16") - Fan Blade Mounting

ALTERNATOR GROUP

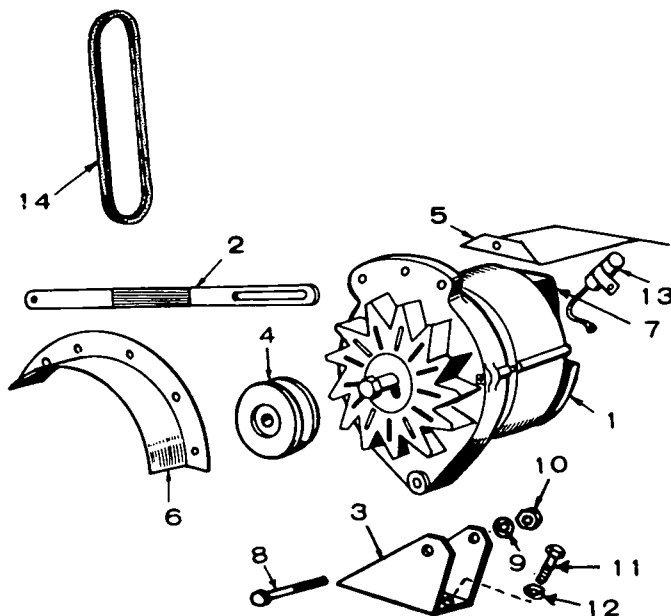

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	191-0665	1	*Alternator, Charge - Includes Regulator & Fan (Motorola #70D44039B)
2	191-0101	1	Bracket, Alternator Adjusting
3	191-0786	1	Bracket, Alternator Mounting
4	191-0781	1	Pulley, Charge Alternator
5	191-0619	1	Shield, Heat - Alternator
6	191-0725	1	Guard, Alternator Belt
7	191-0732	1	Regulator, Alternator
8	800-0095	1	Screw, Cap - Hex Head (1/2-13 x 2-1/4") - Alternator Mounting
9	850-0060	1	Washer, Lock - Spring (1/2") - Alternator Mounting
10	862-0016	1	Nut, Hex (1/2-13) - Alternator Mounting
11	800-0048	2	Screw, Cap - Hex Head - (3/8-16 x 3/4") - Bracket to Engine
12	850-0050	2	Washer, Lock - Spring (3/8") - Bracket to Engine
13	312-0201	1	Condenser (.5 Mfd)
14	511-0084	1	Belt, Charging Alternator

* - For Components, contact your nearest Motorola Dealer or Motorola Automotive Products, Inc., 9401 W. Grand Avenue, Franklin Park, Illinois 60131.

This diagram illustrates the exploded view of a vehicle's electrical and mechanical components, numbered 1 through 50. The components are as follows:


- 1**: Battery cover
- 2**: Battery terminal cap
- 3**: Battery terminal cap
- 4**: Alternator mounting bracket
- 5**: Alternator mounting bracket
- 6**: Alternator mounting bracket
- 7**: Alternator mounting bracket
- 8**: Alternator mounting bracket
- 9**: Alternator mounting bracket
- 10**: Alternator mounting bracket
- 11**: Alternator mounting bracket
- 12**: Alternator mounting bracket
- 13**: Alternator mounting bracket
- 14**: Alternator mounting bracket
- 15**: Alternator mounting bracket
- 16**: Alternator mounting bracket
- 17**: Alternator mounting bracket
- 18**: Alternator mounting bracket
- 19**: Alternator mounting bracket
- 20**: Alternator mounting bracket
- 21**: Alternator mounting bracket
- 22**: Alternator mounting bracket
- 23**: Alternator mounting bracket
- 24**: Alternator mounting bracket
- 25**: Alternator mounting bracket
- 26**: Alternator mounting bracket
- 27**: Alternator mounting bracket
- 28**: Alternator mounting bracket
- 29**: Alternator mounting bracket
- 30**: Alternator mounting bracket
- 31**: Alternator mounting bracket
- 32**: Alternator mounting bracket
- 33**: Alternator mounting bracket
- 34**: Alternator mounting bracket
- 35**: Alternator mounting bracket
- 36**: Alternator mounting bracket
- 37**: Alternator mounting bracket
- 38**: Alternator mounting bracket
- 39**: Alternator mounting bracket
- 40**: Alternator mounting bracket
- 41**: Alternator mounting bracket
- 42**: Alternator mounting bracket
- 43**: Alternator mounting bracket
- 44**: Alternator mounting bracket
- 45**: Alternator mounting bracket
- 46**: Alternator mounting bracket
- 47**: Alternator mounting bracket
- 48**: Alternator mounting bracket
- 49**: Alternator mounting bracket
- 50**: Alternator mounting bracket

MISCELLANEOUS ENGINE PARTS GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	140-1091	1	Cleaner, Air	33	102-0532	1	Gasket, Oil Drain
2	503-0597	1	Hose, Air Cleaner	34	505-0135	1	Nipple, Half - Oil Drain
3	503-0354	2	Clamp, Air Cleaner Hose	35	504-0030	1	Valve, Oil Drain
4	306-0214	1	Bracket, Solenoid Mounting	36		1	Hose, Oil Drain (Order 14" of Bulk Hose #503-0227)
5	307-0628	1	Solenoid, Stop (12 Volt)	37	503-0131	1	Clamp, Hose - Oil Drain
6	306-0222	1	Plunger, Stop Solenoid	38	505-0224	1	Nipple, Pipe - Oil Drain
7	518-0203	1	Ring, Retaining	39	CABLE, BATTERY		
8	518-0218	2	Ring, Retaining		416-0446	1	9" Long
9	306-0161	1	Spring, Plunger		416-0530	1	16" Long
10	306-0162	1	Spacer, Solenoid Mounting		416-0531	1	24" Long
11	306-0226	1	Brace, Solenoid Bracket	40	130-1015	1	Outlet, Water (Begin Spec H)
12	306-0193	1	Cover, Solenoid Plunger	41	130-1016	1	Gasket, Water Outlet (Begin Spec H)
13	516-0103	1	Pin, Roll - Spring Retaining (1/8 x 1/2")	42	193-0104	1	Sender, Water Temperature
14	306-0218	1	Rod, Stop Solenoid to Joint	43	193-0108	1	Sender, Oil Pressure
15	150-0638	1	Joint, Rod to Injection Pump	44	193-0202	1	Sender, Oil Temperature (Optional)
16	312-0058	1	Condenser	45	309-0169	1	Switch, Low Oil Pressure Cutoff - NOTE: Used for Pre Alarm along with 309-0064
17	338-0538	1	Harness, Engine Control				Low Oil Pressure Cutoff Switch - Optional
18	502-0051	1	Coupling, Pipe (1/8")	46	309-0064	1	Switch, Low Oil Pressure Cutoff - Used only with Pre Alarm - Optional
19	191-0802	1	Cover, Starter Motor Hole	47	309-0178	1	Switch, High Engine Temper- ature Cutoff - NOTE: Used for Pre Alarm along with 309-0179
20	502-0361	1	Tee, Fuel Return (1/8")				High Engine Temperature Cutoff Switch - Optional
21	140-1089	1	Element, Air Cleaner	48	309-0179	1	Switch, High Engine Temper- ature Cutoff - Used only with Pre Alarm - Optional
22	152-0157	1	Control, Vernier Throttle - Optional	49	309-0269	1	Switch, Low Engine Tempera- ture Cutoff - Optional
23	151-0230	1	Bracket, Vernier Throttle Control - Optional				
24	152-0036	1	Clamp, Vernier Throttle Control - Optional				
25	152-0158	1	Swivel, Vernier Throttle Control - Optional				
26	115-0025	2	Nut, Hex (1/4-28) - Ball Joint				
27	502-0193	1	Connector, Fuel Pump Outlet				
28	332-1292	1	Bracket, Terminal				
29	155-1116	1	Elbow, Exhaust Outlet				
30	155-0917	1	Muffler, Exhaust				
31	155-0633	1	Tube, Flexible Exhaust				
32	102-0619	1	Adapter, Oil Drain				

MOUNTING AND HOUSING GROUP

(NOTE: Mounting Hardware Listed Under Associated Part, Not Illustrated.)

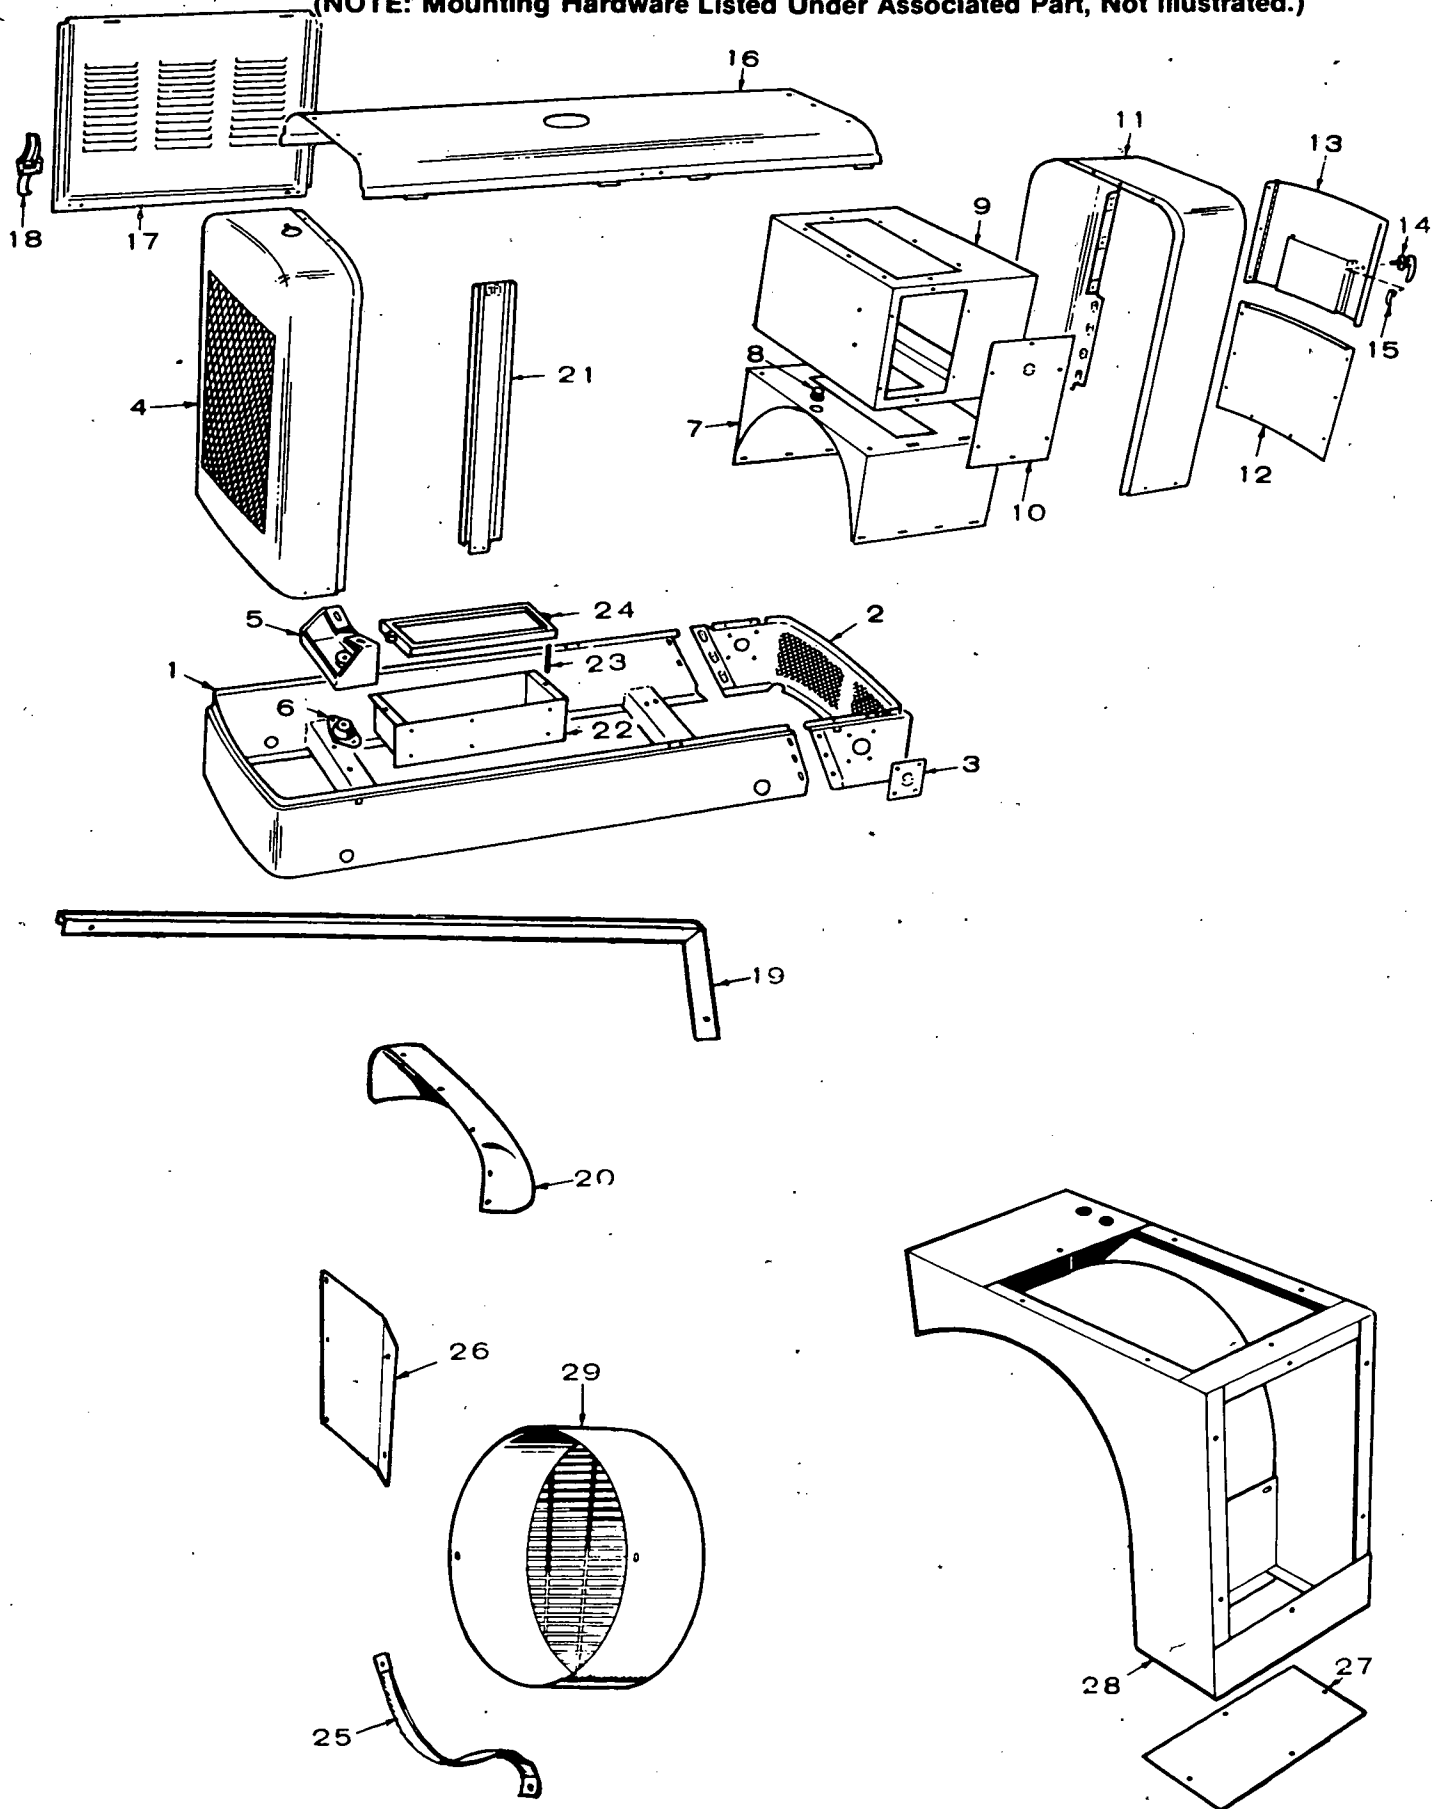


MOUNTING AND HOUSING GROUP

(NOTE: Mounting Hardware Listed Under Associated Part, Not Illustrated.)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	403-0909	1	Chassis, Front	14	406-0157	1	Handle, Door (Includes Keys) - Housed Sets
2	403-0894	1	Chassis, Rear (Housed Sets)	15	406-0089	1	Catch, Door Handle - Housed Sets
	800-0046	6	Screw, Cap - Hex Head (3/8-16 x 3/4" lg)	16	405-1827	1	Panel, Top - Housed Sets
	850-0050	6	Washer, Lock - Spring (3/8")		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
3	403-0895	2	Cover, Conduit Opening (Housed Sets)		870-0113	As Req.	Nut, Retainer (5/16-18)
	821-0010	8	Screw, Locking Head (1/4-20 x 1/2" lg)	17	405-1808	4	Panel, Side Door - Housed Sets
4	405-1811	1	Panel, Front End Housing - Radiator Cooled Sets	18	406-0105	8	Clamp, Door - Housed Sets
	821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)		813-0098	16	Screw, Machine - Roundhead (#10-32 x 3/8" lg)
5	403-0910	1	Support, Engine Mounting (Front End)		850-0030	16	Washer, Lock - Spring (#10)
	800-0050	2	Screw, Cap - Hex Head (3/8-16 x 1" lg)		870-0053	16	Nut, Hex (10-32)
	850-0050	2	Washer, Lock Spring (3/8")	19	TRIM, CHASSIS - UNHOUSED SETS		
6	402-0371	1	Cushion, Vibration Isolating Mtg.		403-0915	1	Right Hand Side
	800-0090	2	Screw, Cap - Hex Head (1/2-13 x 1" lg)		403-0916	1	Left Hand Side
	850-0060	2	Washer, Lock Spring (1/2")		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
	862-0016	2	Nut, Hex (1/2-13)	20	405-1409	1	Extension, Radiator Hood - Unhoused Radiator Cooled Sets
7	301-3154	1	Saddle, Control Box Housing (Unhoused Sets)		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
	821-0010	As Req.	Screw, Locking Head (1/4-20 x 1/2" lg)		870-0113	As Req.	Nut, Retainer (5/16-18)
	821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)	21	405-1828	2	Support, Housing Center - Housed Sets
8	508-0001	As Req.	Grommet, Rubber - Control Box Housing - (1 used on Unhoused Sets - 2 used on Housed Sets)		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
9	301-3155	1	Housing, Control Box - Unhoused Sets	22	416-0666	1	Tray, Battery Mounting
	800-0003	4	Screw, Cap - Hex Head (1/4-20 x 1/2" lg)		821-0029	6	Screw, Self Locking (3/8-16 x 3/4" lg)
	526-0013	8	Washer, Flat (25/64" ID x 1" OD x 1/16" THK)		870-0281	6	Nut, Self Locking (3/8-16)
	850-0040	4	Washer, Lock - Spring (1/4")	23	416-0480	1	Frame, Battery Holddown
	862-0001	4	Nut, Hex (1/4-20)	24	520-0663	2	Stud, Battery Holddown
10	PANEL, CONTROL BOX HOUSING				526-0115	2	Washer, Flat (11/32" ID x 11/16" OD x 1/16" THK)
	301-3156	3	Unhoused Sets		850-0045	2	Washer, Lock - Spring (5/16")
	301-3156	2	Housed Sets Without Circuit Breakers - Unhoused Sets with Circuit Breaker	25	865-0007	2	Nut, Wing (5/16-18)
	301-3156	1	Housed Sets with Circuit Breaker		337-0090	1	Strap, Ground
	815-0350	As Req.	Screw, Slotted Head - Self Tapping (#10-32 x 3/8" lg)		800-0091	1	Screw, Cap - Hex Head (1/2-13 x 1-1/4" lg)
11	405-1812	1	Panel, Rear - Housed Sets		850-0060	1	Washer, Lock - Spring (1/2")
	821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)		856-0013	1	Washer, Lock - External/Internal (1/2")
12	403-1780	1	Panel, Rear Housing Access - Housed Sets		862-0016	1	Nut, Hex (1/2-13)
	813-0098	As Req.	Screw, Machine - Roundhead (#10-32 x 3/8" lg)	26	301-3196	1	Bracket, Junction Box - Housed Sets
	850-0030	As Req.	Washer, Lock - Spring (#10)		821-0010	As Req.	Screw, Locking Head (1/4-20 x 1/2" lg)
13	405-1777	1	Panel, Rear Door - Housed Sets		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
	809-0059	3	Screw, Sheet Metal - Pan Head (#14 x 1/2" lg)	27	301-3195	1	Plate, Bottom - Junction Box - Housed Sets
	870-0106	3	Nut, Speed (#14)		821-0014	As Req.	Screw, Locking Head (5/16-18 x 1/2" lg)
				28	301-3191	1	Junction Box, Output - Housed Sets
					821-0010	As Req.	Screw, Locking Head (1/4-20 x 1/2" lg)
				29	234-0369	1	Cover, End Bell - Housed Sets

NOTE: For Hardware Illustration, refer to Hardware Identification page (back cover).

CONTROL GROUP (AC PORTION)

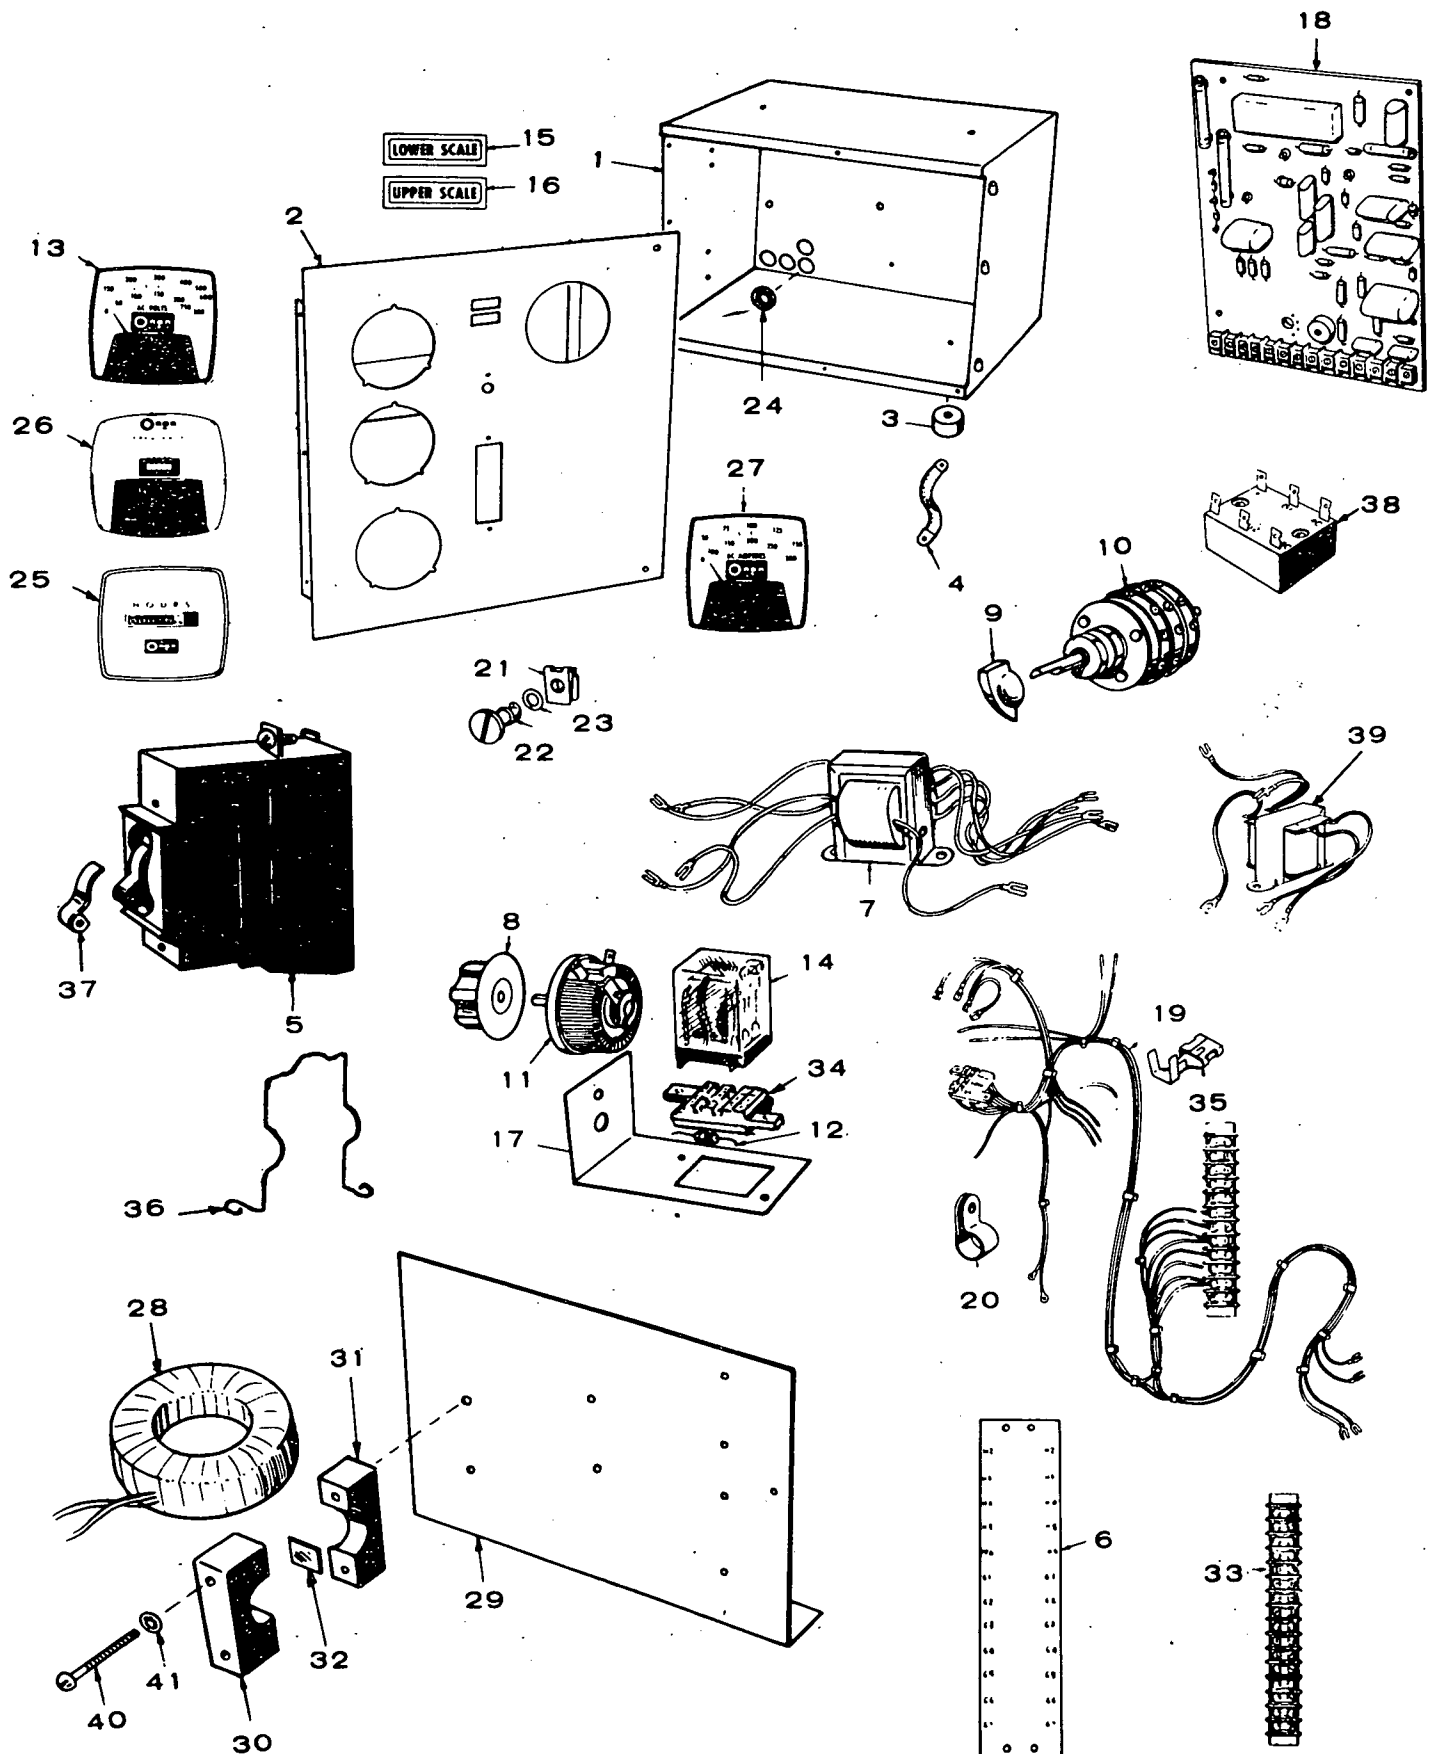


CONTROL GROUP (AC PORTION)

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	301-3158	1	Box Only, Control	19	HARNESSES, WIRING - AC CONTROL (INCLUDES PARTS MARKED *) - BEGIN SPEC J		
2	PANEL ONLY, CONTROL						
	301-3167	1	Sets Without Meter Panel 37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets		338-0765	1	Sets Without Meter Panel 37.5DEF-53R, 40.0DEF-3R50 & 45.0DEF-3R Sets
	301-3168	1	37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		338-0766	1	45.0DEF-9XR Sets
	301-3341	1	45.0DEF-9XR Sets		338-0730	1	37.5DEF-515R, 40.0DEF-15R & 45.0DEF-15R Sets
	301-3169	1	Sets With Meter Panel 37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets		338-0735	1	Sets With Meter Panel 37.5DEF-53R, 40.0DEF-3R50 & 45.0DEF-3R Sets
	301-3170	1	37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		338-0759	1	45.0DEF-9XR Sets
	301-3342	1	45.0DEF-9XR Sets		338-0764	1	37.5DEF-515R, 40.0DEF-15R50 & 45.0DEF-15R Sets
3	402-0078	4	Rubber, Mounting - Control Box	20	332-0050	2	Clip, Tinnerman
4	337-0049	1	Strap, Ground	21	406-0332	2	Fastener
5	BREAKER, CIRCUIT			22	406-0333	2	Stud, Fastener
	320-0002	1	Brush Type Generator	23	406-0334	2	Washer, Stud Fastener
	320-0431	1	Brushless Generator	24	508-0001	4	Grommet
6	STRIP, MARKER			25	METER, RUNNING TIME (SETS WITH METER PANEL)		
	332-1248	1	Sets Without Meter Panel		302-0469	1	50 Hertz Sets
	332-1242	1	Sets With Meter Panel		302-0466	1	60 Hertz Sets
7	315-0342	1	Transformer, Voltage	26	METER, FREQUENCY (SETS WITH METER PANEL)		
8	303-0032	1	Knob, Rheostat		302-0256	1	50 Hertz Sets
9	303-0076	1	Knob, Selector Switch		302-0221	1	60 Hertz Sets
10	SWITCH, SELECTOR - 37.5DEF-515R, 45.0DEF-15R, 40.0DEF-15R50 and 45.0DEF-9XR SETS			27	AMMETER, AC (SETS WITH METER PANEL)		
	308-0012	1	Sets Without Meter Panel		302-0412	2	37.5DEF-53R & 45.0DEF-3R Sets
	308-0284	1	Sets With Meter Panel		302-0719	1	37.5DEF-515R Sets
11	303-0170	1	Rheostat		302-0720	1	45.0DEF-15R Sets
12	350-0556	1	*Resistor (47,000-Ohm, 1/2 Watt) - 37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		302-0406	1	45.0DEF-9XR Sets
13	VOLTMETER			28	TRANSFORMER, CURRENT (SETS WITH METER PANEL)		
	302-0421	1	37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets		302-0209	2	37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets
	302-0718	1	37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		302-0079	3	37.5DEF-515R & 40.0DEF-15R50 Sets
	302-0779	1	45.0DEF-9XR Sets		302-0106	3	45.0DEF-15R Sets
14	307-1061	1	Relay, Voltage Selector - 37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		302-0076	3	45.0DEF-9XR Sets
15	322-0130	1	Light, Lower Scale - 37.5DEF- 515R & 45.0DEF-15R Sets	29	302-0729	1	Bracket, Transformer Mounting
16	322-0131	1	Light, Upper Scale - 37.5DEF- 515R & 45.0DEF-15R Sets	30	CLAMP, TRANSFORMER MOUNTING - UPPER (SETS WITH METER PANEL)		
17	301-3244	1	Bracket, Relay Mounting - 37.5DEF-515R & 45.0DEF- 15R Sets		302-0235	2	37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets
18	BOARD ASSEMBLY, PRINTED CIRCUIT (SEE SEPARATE GROUP FOR COMPONENTS)				302-0235	3	37.5DEF-515R, 45.0DEF-15R, 40.0DEF-15R50 & 45.0DEF-9XR Sets
	332-1264	1	Brush Type Generator	31	CLAMP, TRANSFORMER MOUNTING - LOWER (SETS WITH METER PANEL)		
	332-1268	1	Brushless Generator		302-0236	2	37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets
19	HARNESSES, WIRING - AC CONTROL (INCLUDES PARTS MARKED *) - SPEC C THROUGH H				302-0236	3	37.5DEF-515R, 45.0DEF-15R, 40.0DEF-15R50 & 45.0DEF-9XR Sets
	338-0522	1	Sets Without Meter Panel 37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets	32	SHIM, TRANSFORMER MOUNTING (SETS WITH METER PANEL)		
	338-0524	1	37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		302-0253	2	37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets
	338-0570	1	45.0DEF-9XR Sets		302-0253	3	37.5DEF-515R, 45.0DEF-15R, 40.0DEF-15R50 & 45.0DEF-9XR Sets
	338-0523	1	Sets With Meter Panel 37.5DEF-53R, 45.0DEF-3R & 40.0DEF-3R50 Sets	33	*BLOCK, TERMINAL		
	338-0525	1	37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets		332-0607	1	Sets Without Meter Panel - 12 Place
	338-0571	1	45.0DEF-9XR Sets		332-0795	1	Sets With Meter Panel - 16 Place
				34	323-0764	1	*Socket, Relay - 37.5DEF-515R, 40.0DEF-15R50 & 45.0DEF-15R Sets
				35	332-1280	As Req.	*Terminal, Crimp - 37.5DEF-515R, 40.0DEF-15R50 & 45.0DEF-15R Sets
				36	307-1157	1	Spring, Relay Hold-down - 37.5DEF-515R, 45.0DEF-15R & 40.0DEF-15R50 Sets
				37	320-0307	1	Lock, Circuit Breaker Handle - Penn. State Units
				38	315-0384	1	Reactor Assembly, Commutator
				39	305-0524	1	Bridge, Rectifier

* - Parts Included in Wiring Harness Assembly.

CONTROL GROUP — ENGINE PORTION

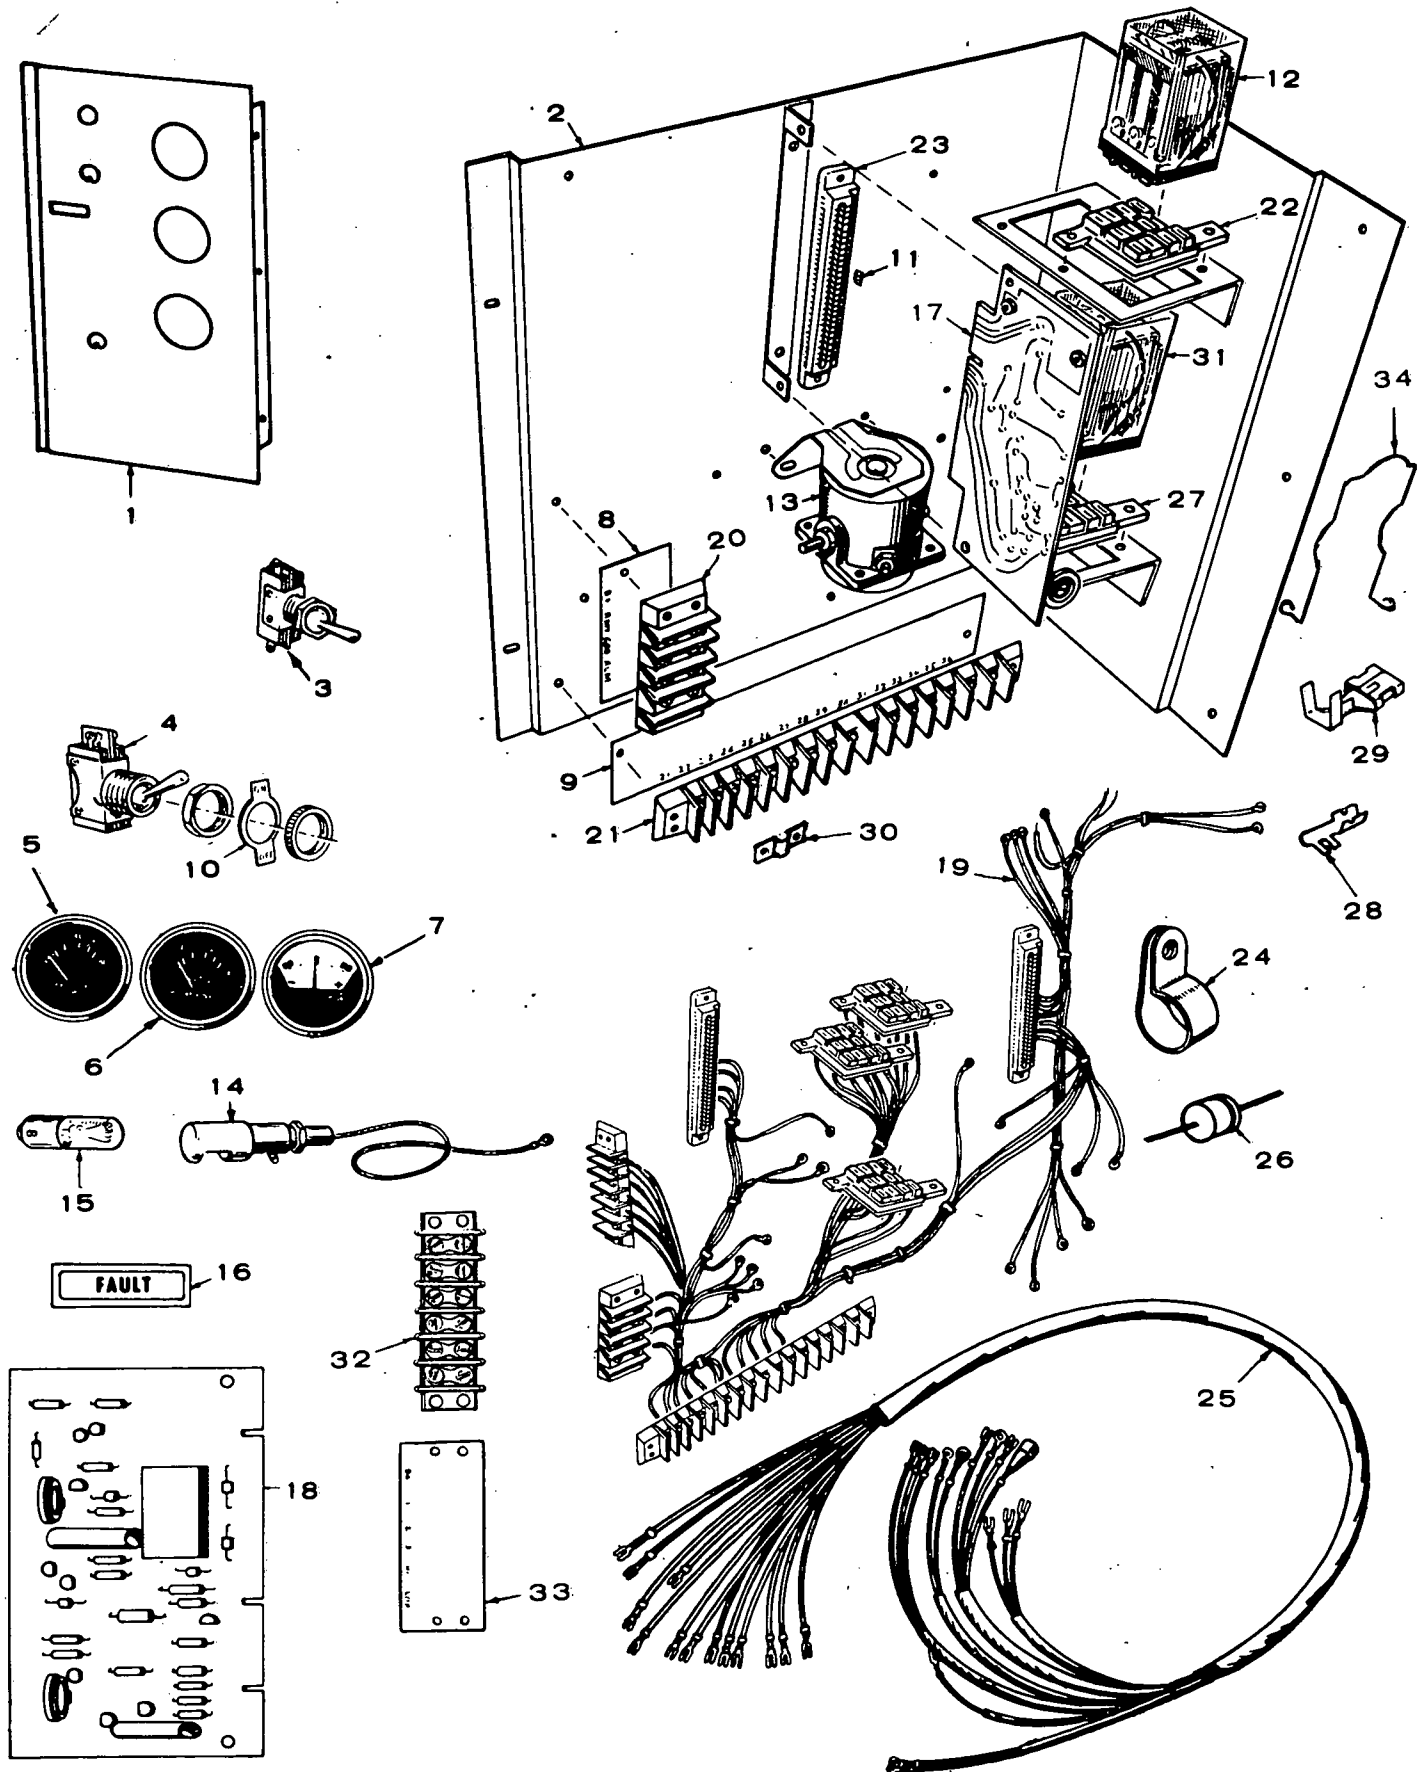

CONTROL GROUP — ENGINE PORTION


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	PANEL ONLY, ENGINE CONTROL			18	MONITOR, ENGINE CONTROL (See Separate Group for Components)		
	301-3165	1	Sets With One Fault Light		300-0679	1	Sets With One Fault Light - Standard
	301-3267	1	Sets With Five Fault Lights - Optional		300-0730	1	Sets With One Fault Light - Penn State
2	301-3253	1	Bracket, Engine Control		300-0681	1	Sets With Five Fault Lights - Optional
3	SWITCH, SELECTOR			19	HARNESS ASSEMBLY, WIRING - CONTROL (Includes Parts Marked *)		
	308-0138	1	Standard		338-0528	1	Sets With One Fault Light - Standard
	308-0327	1	Penn State (Optional) - Begin Spec F		338-0534	1	Sets With Five Fault Lights - Optional
4	308-0002	1	Switch, Panel Light	20	332-0537	1	*Block, Terminal - 4 Place
5	193-0107	1	Gauge, Oil Pressure	21	332-0795	1	*Block, Terminal - 16 Place
6	193-0106	1	Gauge, Water Temperature	22	323-0765	2	tSocket, Relay - 11 Place
7	302-0061	1	Ammeter, Charge (30-0-30)	23	332-1271	2	*Housing, Printed Circuit Board Terminal
8	332-1239	1	Strip, Marker (B+, Remote, Ground Alarm)	24	332-0051	1	Clip, Tinnerman
9	332-1241	1	Strip, Marker (21 through 36)	25	338-0538	1	Harness Assembly, Wiring - Engine to Control
10	308-0003	1	Plate, Switch (On-Off)	26	357-0004	1	Rectifier, Diode (Part of Standard Cranker Control)
11	332-1276	2	Plug, Keying (Sets With Five Fault Lights Use Qty. of 1)	27	323-0764	1	*Socket, Relay - 8 Place
12	307-1058	2	Relay (1) Start-Disconnect, (1) Ignition	28	332-1269	As Req.	*Terminal, PC Board
13	307-1031	1	Relay, Start Solenoid	29	332-1280	As Req.	*Terminal, Crimp
14	322-0149	1	Holder, Lamp	30	332-1043	1	*Jumper, Terminal - Sets With One Fault Light
15	322-0004	1	Lamp, Panel	31	307-1061	1	Relay, Starter Protection - Begin Spec D
16	LAMP, FAULT			32	332-0699	1	*Block, Terminal (6 Place) - Sets With Five Fault Lights
	322-0128	1	Standard Sets	33	332-1240	1	Strip, Marker (53 through 58) - Sets With Five Fault Lights
	322-0107	1	Overcrank (Optional)	34	307-1157	3	Spring, Relay Hold-down
	322-0111	1	Overspeed (Optional)				
	322-0108	1	Low Oil Pressure (Optional)				
	322-0109	1	High Engine Temperature (Optional)				
	322-0110	1	Low Engine Temperature (Optional)				
17	CONTROL, CRANKER						
	300-0733	1	Standard Cranker				
	300-0714	1	Cycle Cranker (Optional) - See Separate Group for Components				

* - Included in Wiring Harness Assembly.

PRINTED CIRCUIT BOARD ASSEMBLY GROUP (AC)

332-1264 - Printed Circuit Board, Complete


BRUSH TYPE GENERATOR

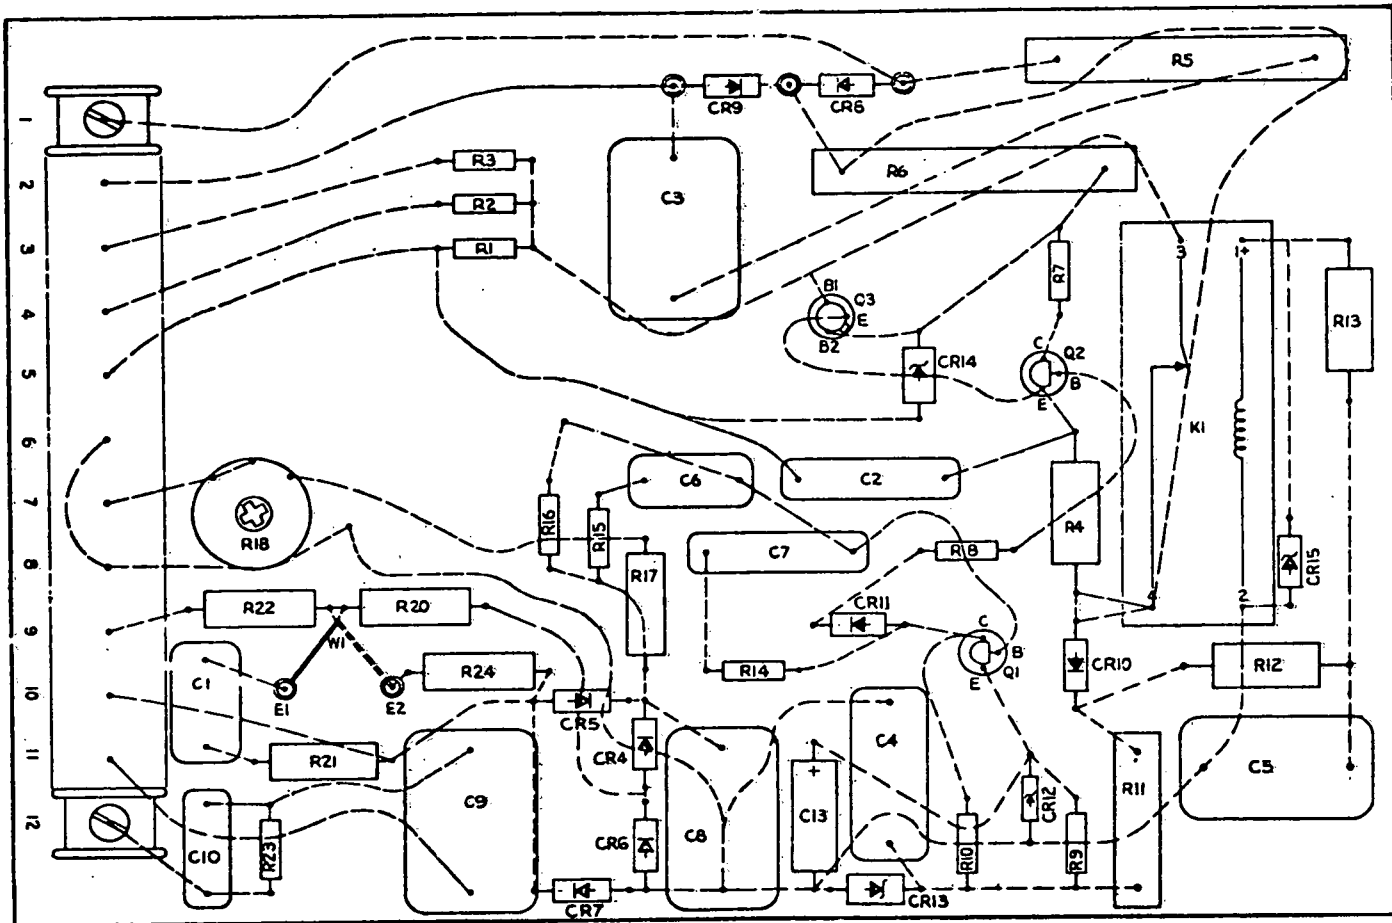

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
TB1	332-1252	1	Terminal Block	R6	353-0039	1	Resistor, Fixed (5,000-Ohm, 15 Watt)
C1	355-0018	1	Capacitor (.47 Mfd., 100 Volt)	R7	350-0398	1	Resistor (3,000-Ohm, 1/2 Watt)
C2, C7	355-0005	2	Capacitor (.22 Mfd., 200 Volt)	R8, R16	350-0447	2	Resistor (330,000-Ohm, 1/2 Watt)
C3, C9	355-0017	2	Capacitor (.47 Mfd., 400 Volt)	R9, R10	350-0423	2	Resistor (33,000-Ohm, 1/2 Watt)
C4	355-0006	1	Capacitor (.47 Mfd., 200 Volt)	R11	352-0151	1	Resistor, Fixed (15,000-Ohm, 5 Watt)
C5, C8	355-0016	2	Capacitor (1 Mfd., 100 Volt)	R12	350-1014	1	Resistor (13,000-Ohm, 2 Watt)
C6	355-0015	1	Capacitor (.1 Mfd., 200 Volt)	R13	350-1007	1	Resistor (6,800-Ohm, 2 Watt)
C10	355-0014	1	Capacitor (.047 Mfd., 200 Volt)	R14	350-0443	1	Resistor (220,000-Ohm, 2 Watt)
C13	356-0039	1	Capacitor (100 Mfd., 10 Volt)	R15	350-0435	1	Resistor (100,000-Ohm, 1/2 Watt)
CR4 thru 11	357-0014	8	Rectifier, Silicon	R17	351-0524	1	Resistor, Metal Film (13,000-Ohm, 1/4 Watt)
CR12	359-0035	1	Diode, Zener (6.8 Volt)	R18	303-0168	1	Potentiometer
CR13	359-0025	1	Diode, Zener (20 Volt)	R20, R22	351-0520	2	Resistor, Metal Film (28,000-Ohm, 1/4 Watt)
CR14	359-0026	1	Diode, Zener (18 Volt)	R21	351-0522	1	Resistor, Metal Film (5,110-Ohm, 1/4 Watt)
CR15	359-0015	1	Diode, Zener (24 Volt)	R24	351-0523	1	Resistor, Metal Film (8,870-Ohm, 1/4 Watt)
K1	307-1063	1	Relay, Magnetic Reed				
Q1, Q2	362-0017	2	Transistor, Silicon (NPN)				
Q3	361-0004	1	Transistor, Unijunction				
R1, R23	350-0355	2	Resistor (47-Ohm, 1/2 Watt)				
R2, R3	350-0351	2	Resistor (33-Ohm, 1/2 Watt)				
R4	350-1075	1	Resistor (4.7-Megohm, 2 Watt)				
R5	353-0040	1	Resistor, Fixed (270-Ohm, 10 Watt)				


PRINTED CIRCUIT BOARD ASSEMBLY GROUP (AC,

332-1268 - Printed Circuit Board, Complete

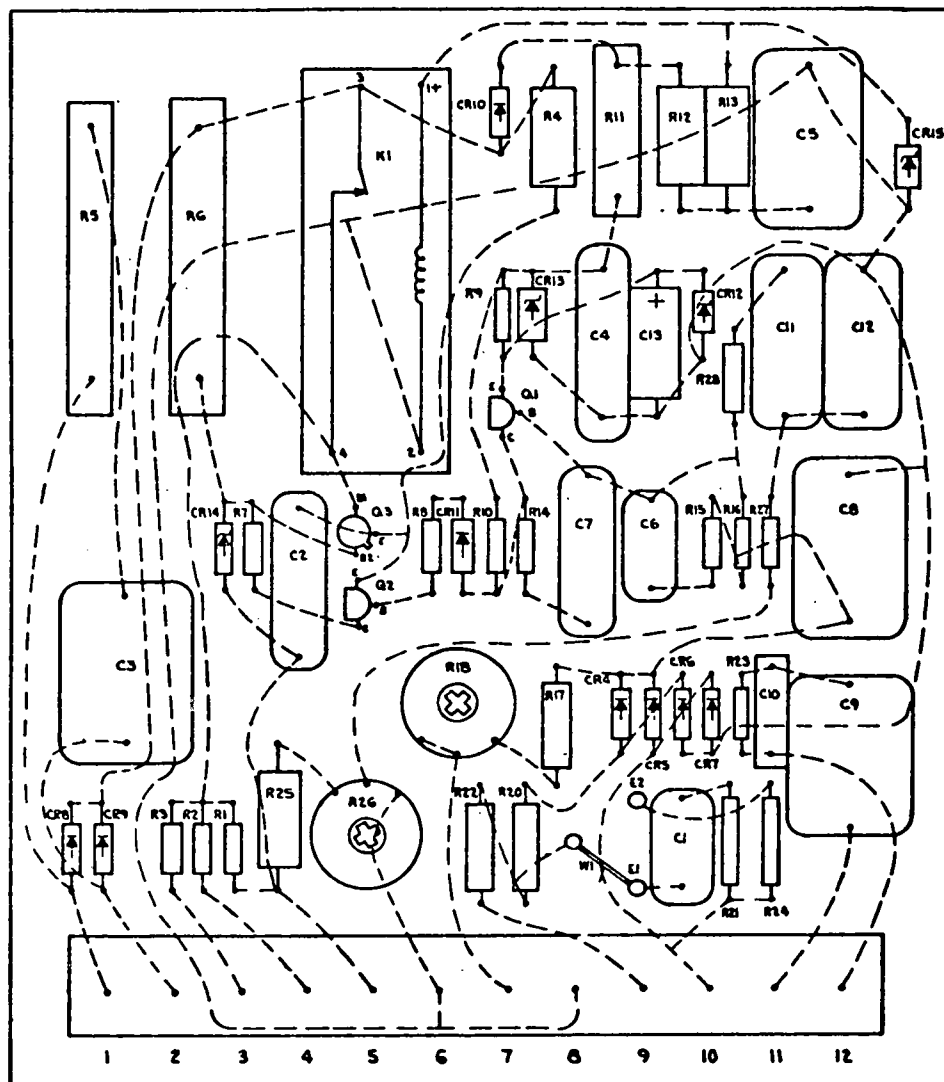

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
TB1	332-1252	1	Terminal Block	R6	353-0039	1	Resistor, Fixed (5,000-Ohm, 15 Watt)
C1	355-0018	1	Capacitor (.47 Mfd., 100 Volt)	R7	350-0398	1	Resistor (3,000-Ohm, 1/2 Watt)
C2, C7	355-0005	2	Capacitor (.22 Mfd., 200 Volt)	R8, R16	350-0447	2	Resistor (330,000-Ohm, 1/2 Watt)
C3, C9	355-0017	2	Capacitor (.47 Mfd., 400 Volt)	R9, R10	350-0423	2	Resistor (33,000-Ohm, 1/2 Watt)
C4, C12	355-0006	2	Capacitor (.47 Mfd., 200 Volt)	R11, R12	352-0151	2	Resistor, Fixed (15,000-Ohm, 5 Watt)
C5, C8	355-0016	2	Capacitor (1 Mfd., 100 Volt)	R13	350-1007	1	Resistor (6,800-Ohm, 2 Watt)
C6	355-0015	1	Capacitor (.1 Mfd., 200 Volt)	R14	350-0443	1	Resistor (220,000-Ohm, 2 Watt)
C10	355-0014	1	Capacitor (.047 Mfd., 200 Volt)	R15, R27	350-0435	2	Resistor (100,000-Ohm, 1/2 Watt)
C11	355-0020	1	Capacitor (.1 Mfd., 400 Volt)	R17	351-0521	1	Resistor, Metal Film (12,100 Ohm, 1/4 Watt)
C13	356-0039	1	Capacitor (100 Mfd., 10 Volt)	R18	303-0168	1	Potentiometer
CR4 thru 11	357-0014	8	Rectifier, Silicon	R20, R22	351-0520	2	Resistor, Metal Film (28,000-Ohm, 1/4 Watt)
CR12	359-0016	1	Diode, Zener (6.8 Volt)	R21	351-0522	1	Resistor, Metal Film (5,110-Ohm, 1/4 Watt)
CR13	359-0025	1	Diode, Zener (20 Volt)	R24	351-0523	1	Resistor, Metal Film (8,870-Ohm, 1/4 Watt)
CR14	359-0026	1	Diode, Zener (18 Volt)	R25	350-1011	1	Resistor (10,000-Ohm, 2 Watt)
CR15	359-0015	1	Diode, Zener (24 Volt)	R26	303-0164	1	Potentiometer
K1	307-1063	1	Relay, Magnetic Reed	R28	350-0459	1	Resistor (1.0 Megohm, 1 Watt)
Q1, Q2	362-0017	2	Transistor, Silicon (NPN)		517-0127	2	Cover, Potentiometer (Not Illustrated)
Q3	361-0004	1	Transistor, Unijunction				
R1, R23	350-0355	2	Resistor (47-Ohm, 1/2 Watt)				
R2, R3	350-0351	2	Resistor (33-Ohm, 1/2 Watt)				
R4	350-1075	1	Resistor (4.7 Megohm, 2 Watt)				
R5	353-0040	1	Resistor, Fixed (270-Ohm, 10 Watt)				


CRANKER CYCLE CONTROL GROUP - 12 VOLT

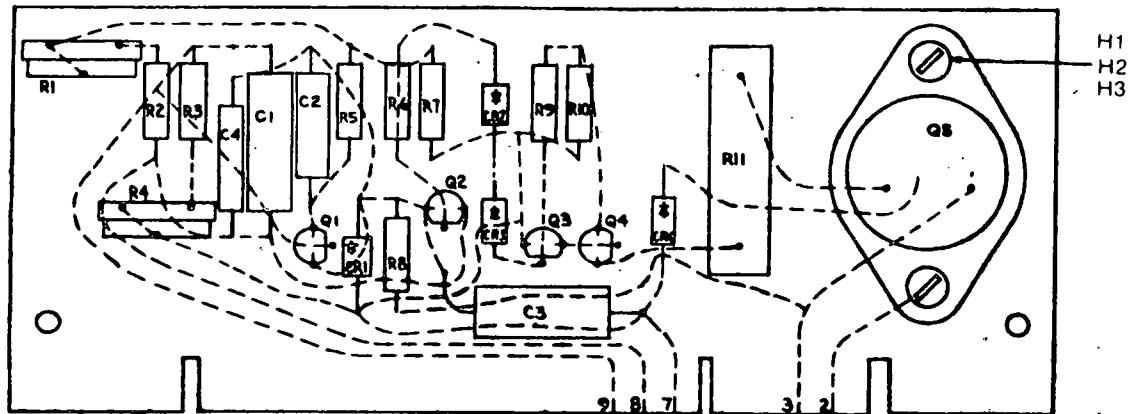

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-0714		Control, Cranker Cycle - 12 Volt
C1	356-0039	1	Capacitor, Electrolytic (100 Mfd, 10 Volt)
C2	355-0029	1	Capacitor, Plastic Dielectric (.015 Mfd, 100 VDC, 10%)
C3	356-0045	1	Capacitor, Electrolytic (25 Mfd, 15 Volt)
C4	355-0010	1	Capacitor, Plastic Dielectric (.0022 Mfd, 100 VDC, 10%)
CR1	359-0027	1	Diode, Zener
CR2	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)
CR3	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)
CR4	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)
H1	812-0061	2	Screw, Machine, Round Head (#6-32 x 3/8")
H2	853-0003	2	Washer, Lock - External Tooth (#6)
H3	860-0006	2	Nut, Hex (#6-32)
Q1	362-0008	1	Transistor
Q2	362-0008	1	Transistor
Q3	362-0017	1	Transistor
Q4	362-0026	1	Transistor
Q5	362-0033	1	Transistor


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
R1	303-0171	1	Potentiometer (100,000-Ohm, 1/4 Watt)
R2	350-0560	1	Resistor, Composition (0.1 Megohm, 1/2 Watt, 10%)
R3	350-0548	1	Resistor, Composition (10,000-Ohm, 1/2 Watt, 10%)
R4	303-0171	1	Potentiometer (100,000-Ohm, 1/4 Watt)
R5	350-0558	1	Resistor, Composition (68,000-Ohm, 1/2 Watt, 10%)
R6	350-0420	1	Resistor, Composition (24,000-Ohm, 1/2 Watt, 5%)
R7	350-0546	1	Resistor, Composition (6800-Ohm, 1/2 Watt, 10%)
R8	350-0526	1	Resistor, Composition (150-Ohm, 1/2 Watt, 5%)
R9	350-0548	1	Resistor, Composition (10,000-Ohm, 1/2 Watt, 10%)
R10	350-0500	1	Resistor, Composition (1-Ohm, 1/2 Watt, 10%)
R11	352-0152	1	Resistor, Wirewound (25-Ohm, 5 Watt, 5%)
TB1	332-1275	1	Printed Wiring Board

ENGINE CONTROL MONITOR GROUP - 12 VOLT

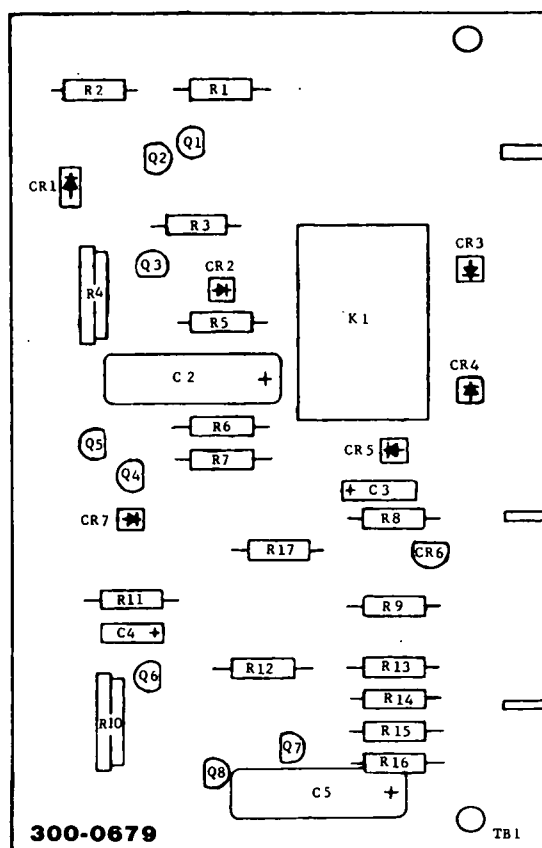

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	300-0679		Monitor, Engine Control - 12 Volt	R1	350-0536	1	Resistor, Composition (1000-Ohm, 1/2 Watt, 10%)
C1			Not used	R2	350-0526	1	Resistor, Composition (100-Ohm, 1/2 Watt, 10%)
C2	355-0005	1	Capacitor, Plastic Dielectric (.22 Mfd, 200 VDC, 10%)	R3	350-0548	1	Resistor, Composition (10,000-Ohm, 1/2 Watt, 10%)
C3	356-0040	1	Capacitor, Electrolytic (10 Mfd, 20 Volt)	R4	303-0169	1	Potentiometer (3.5 Meg Ohm, 1/4 Watt, 30%)
C4	356-0030	1	Capacitor, Electrolytic (1 Mfd, 35 Volt)	R5	350-0572	1	Resistor, Composition (1-Meg Ohm, 1/2 Watt, 10%)
C5	355-0005	1	Capacitor, Plastic Dielectric (.22 Mfd, 200 VDC, 10%)	R6	350-0552	1	Resistor, Composition (22,000-Ohm, 1/2 Watt, 10%)
CR1	359-0027	1	Diode, Zener (1 Watt, 7.5 Volt, 5%)	R7	350-0536	1	Resistor, Composition (1000-Ohm, 1/2 Watt, 10%)
CR2	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)	R8	350-0505	1	Resistor, Composition (2.7-Ohm, 1/2 Watt, 10%)
CR3	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)	R9	350-0517	1	Resistor, Composition (27-Ohm, 1/2 Watt, 10%)
CR4	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)	R10	303-0169	1	Potentiometer (3.5-Meg Ohm, 1/4 Watt, 30%)
CR5	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)	R11	350-0584	1	Resistor, Composition (10-Meg Ohm, 1/2 Watt, 10%)
CR6	364-0017	1	Diode, Rectifier (8 Amp, 30 Volt)	R12	350-0529	1	Resistor, Composition (270-Ohm, 1/2 Watt, 10%)
CR7	357-0004	1	Diode, Rectifier (400 MA, 400 Volt)	R13	350-0529	1	Resistor, Composition (270-Ohm, 1/2 Watt, 10%)
K1	307-1039	1	Relay, Armature (12 Volt)	R14	350-0529	1	Resistor, Composition (270-Ohm, 1/2 Watt, 10%)
Q1	361-0003	1	Transistor	R15	350-0540	1	Resistor, Composition (2200-Ohm, 1/2 Watt, 10%)
Q2	362-0025	1	Transistor	R16	350-0540	1	Resistor, Composition (2200-Ohm, 1/2 Watt, 10%)
Q3	362-0025	1	Transistor	R17	350-1128	1	Resistor, Composition (220-Ohm, 2 Watt, 10%)
Q4	361-0003	1	Transistor	TB1	332-1246	1	Printed Wiring Board
Q5	362-0025	1	Transistor				
Q6	362-0025	1	Transistor				
Q7	362-0008	1	Transistor				
Q8	362-0008	1	Transistor				

GENERATOR GROUP



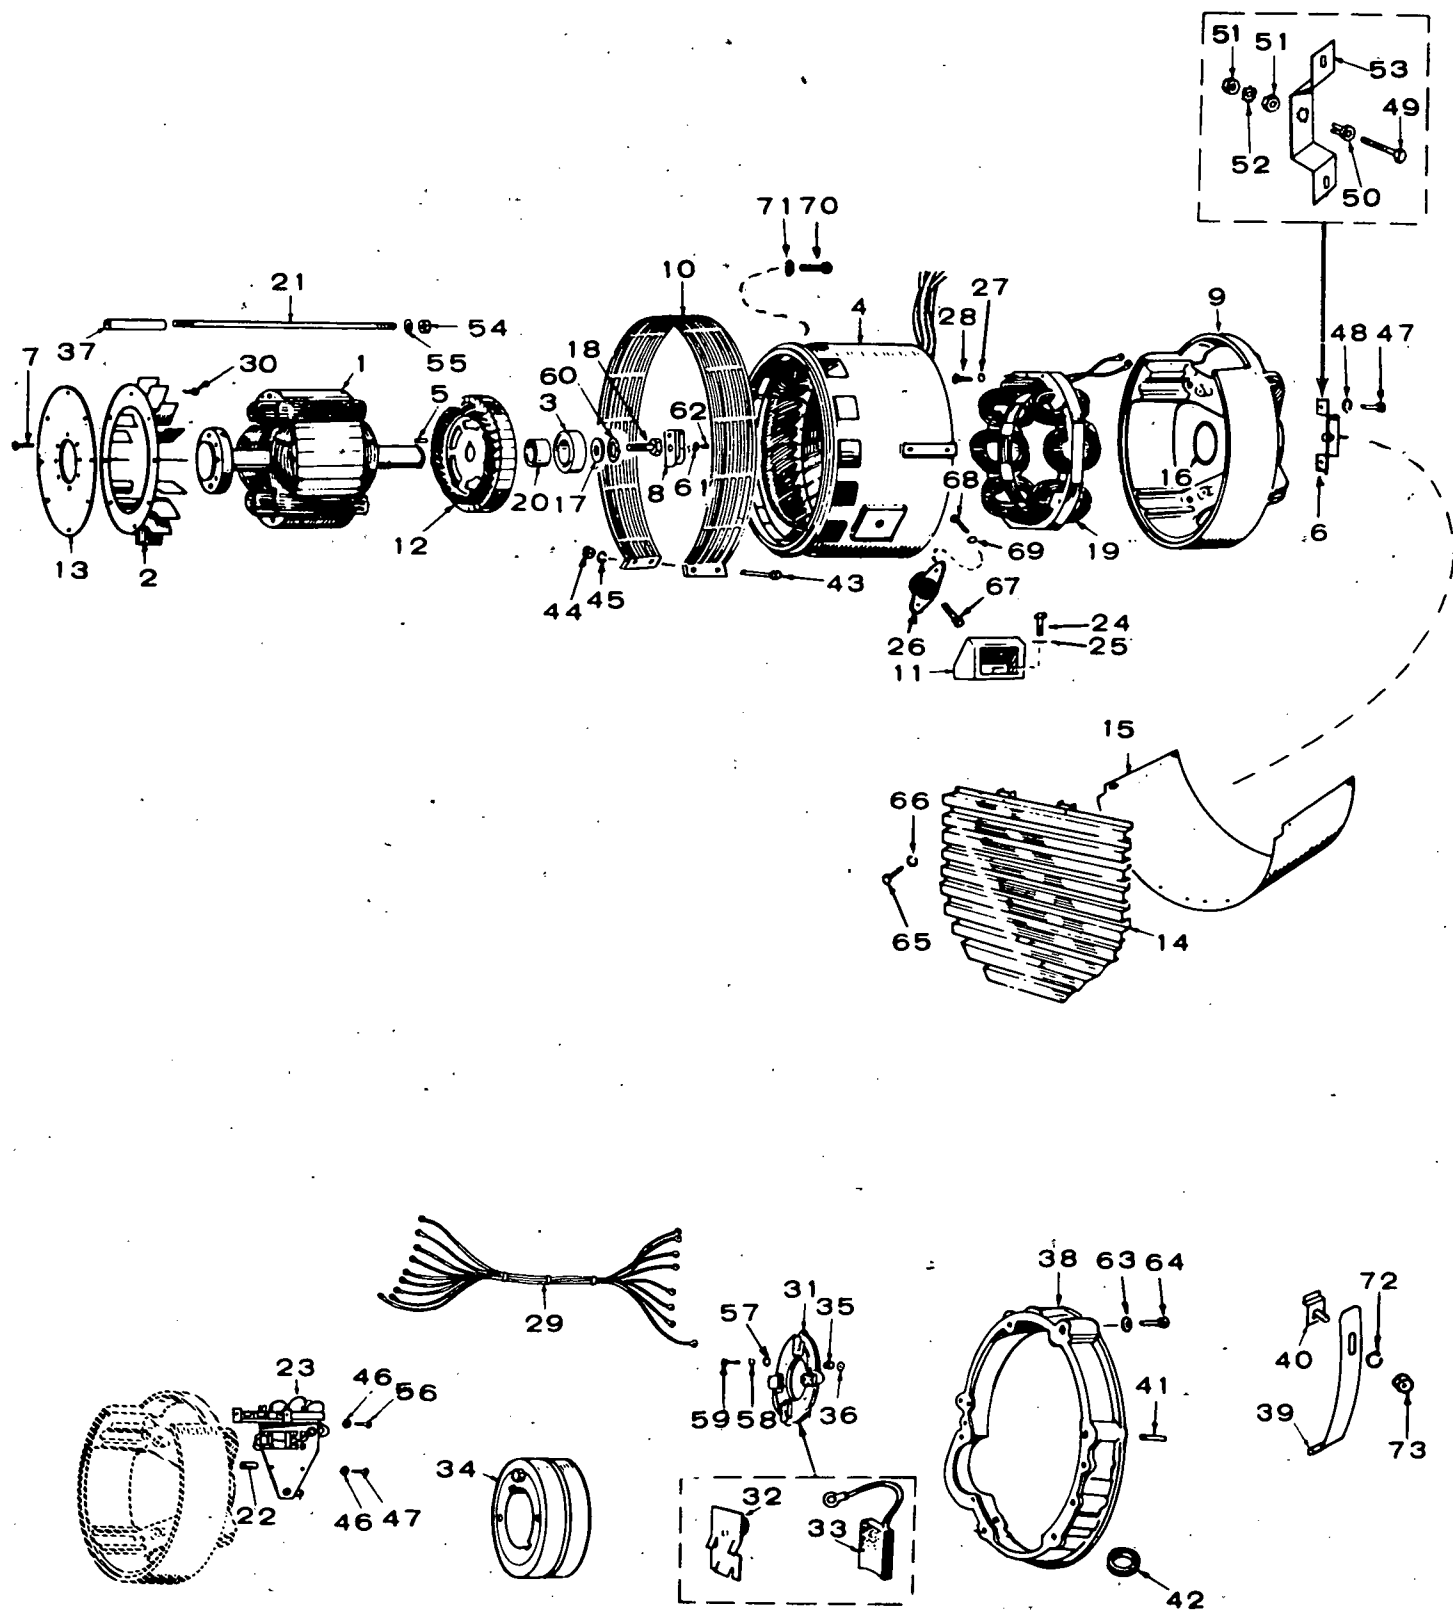


GENERATOR GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	ROTOR ASSEMBLY, WOUND			35	212-1225	4	Spacer, Brush Rig Mounting - (Early Brush Type Generators)
	201-1719	1	37.5DEF-515R, 40.0DEF-15R50, 45.0DEF-9XR & 45.0DEF-15R Sets	36	526-0018	4	Washer, Brush Rig Mounting - (Early Brush Type Generators)
	201-1721	1	37.5DEF-53R, 40.0DEF-3R50 & 45.0DEF-3R Sets	37	503-0611	4	Hose, Insulator
2	205-0089	1	Blower	38	231-0149	1	Adapter, Generator
3	510-0101	1	Bearing	39	232-2210	2	Cover, Adapter Slot - (Unhoused Models)
4	STATOR ASSEMBLY, WOUND			40	232-2211	2	Catch, Adapter Slot Cover - (Unhoused Models)
	220-1454	1	40.0DEF-15R50 & 45.0DEF-15R Sets	41	516-0152	2	Pin, Generator Adapter Alignment
	220-1554	1	37.5DEF-53R, 40.0DEF-3R50 & 45.0DEF-3R Sets	42	508-0001	1	Grommet, Rubber - Generator Adapter
	220-1602	1	45.0DEF-9XR Sets	43	800-0008	2	Screw, Cap - Hex Head (1/4-20 x 1-1/4")
	220-1997	1	37.5DEF-515R Sets	44	862-0001	2	Nut, Hex (1/4-20)
5	515-0145	1	Key, Exciter Rotor - Brushless Generator	45	850-0040	2	Washer, Lock - Spring (1/4")
6	150-1456	1	Bracket and Contact Assembly Begin Spec H (Includes Parts Marked †)	46	853-0013	4	Washer, Lock ET (1/4") - Spec C Through H
7	805-0033	8	Bolt, Place (5/8-11 x 1")	47	800-0003	2	Screw, Cap - Hex Head (1/4-20 x 1/2")
8	150-0717	1	Switch Assembly, Overspeed	48	850-0040	2	Washer, Lock - Spring (1/4")
9	211-0185	1	Bell, End	49	150-0723	1	†Point, Overspeed Switch - Begin Spec J
10	234-0368	1	Screen, Generator	50	870-0250	1	†Nut, Insulation - Overspeed Switch - Begin Spec J
11	232-2106	2	Bracket, Generator Mounting	51	862-0001	2	†Nut, Hex (1/4-20) - Begin Spec J
12	201-1739	1	Rotor Assembly, Wound - Exciter (See Separate Group for Components) - Brushless Generator	52	853-0013	1	†Washer, Lock - ET (1/4") - Begin Spec J
13	232-2078	1	Disc, Generator Drive	53	150-1356	1	†Bracket, Overspeed Switch - Begin Spec J
14	234-0370	1	Grille, Generator Air Inlet (Unhoused Sets)	54	862-0011	4	Nut, Hex - Machine (3/8-16)
15	234-0361	1	Wrapper, Generator End Bell	55	850-0050	4	Washer, Lock - Spring (3/8")
16	509-0125	1	Seal, "O" Ring - Bearing	56	800-0009	2	Screw, Cap - Hex Head (1/4-20 x 1-1/2") - Spec C Through H
17	526-0238	1	Washer, Bearing Retainer	57	526-0018	4	Washer, Flat (17/64" ID x 5/8" OD x 1/16" Thk) (Brush Type Generators)
18	800-0513	1	Screw, Cap - Hex Head (3/4-10 x 1-1/2")	58	850-0040	4	Washer, Lock - Spring (1/4") (Brush Type Generator)
19	220-2353	1	Stator, Wound (Exciter)	59	114-0023	4	Screw, Cap - Hex Head (1/4-20 x 1-1/4") - (Brush Type Generator)
20	232-2102	1	Spacer, Bearing - Brushless Generator	60	850-0079	1	Washer, Lock - Spring (3/4")
21	STUD, GENERATOR THROUGH			61	856-0010	1	Washer, Lock EIT (3/8")
	520-0721	4	37.5DEF-515R, 40.0DEF-15R50 45.0DEF-9XR & 45.0DEF-15R Sets	62	812-0189	1	Screw, Machine - Round Head (3/8-16 x 3/4")
	520-0723	4	37.5DEF-53R, 40.0DEF-3R50 & 45.0DEF-3R Sets	63	850-0055	9	Washer, Lock - Spring (7/16")
22	305-0481	1	Spacer, Voltage Regulator Chassis Mounting - Spec C Through H	64	800-0072	9	Screw, Cap - Hex Head (7/16-14 x 1-1/4")
23	CHASSIS ASSEMBLY, VOLTAGE REGULATOR (See Separate Group for Components)- Spec C Through H			65	812-0146	4	Screw, Machine - Round Head (1/4-20 x 3/8")
	305-0489	1	Brush Type Generator	66	850-0040	4	Washer, Lock - Spring (1/4")
	305-0491	1	Brushless Generator	67	800-0250	2	Screw, Cap - Hex Head (3/4-10 x 1")
24	800-0091	4	Screw, Cap - Hex Head (1/2-13 x 1-1/4")	68	800-0071	4	Screw, Cap - Hex Head (7/16-14 x 1")
25	850-0060	4	Washer, Lock - Spring (1/2")	69	850-0055	4	Washer, Lock - Spring (7/16")
26	402-0371	2	Mount, Vibration - Generator End	70	800-0051	8	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
27	850-0040	4	Washer, Lock - Spring (1/4")	71	850-0050	8	Washer, Lock - Spring (3/8")
28	800-0009	4	Screw, Cap - Hex Head (1/4-20 x 1-1/2")	72	850-0040	2	Washer, Lock - Spring (1/4") (Unhoused Models)
29	338-0521	1	Harness Assembly, Voltage Regulator	73	862-0001	2	Nut, Hex (1/4-20) - (Unhoused Models)
30	805-0018	8	Bolt, Place (3/8-16 x 1")				
31	212-0342	1	Rig Assembly, Brush - Includes Brushes and Springs - (Early Brush Type Generators)				
32	212-1105	4	Spring, Brush - (Early Brush Type Generator)				
33	214-0046	4	Brush - (Early Brush Type Generator)				
34	204-0083	1	Ring, Collector - (Early Brush Type Generator)				

† - Included in 150-1456 Bracket and Contact Assembly - Begin Spec J

100-443887-100

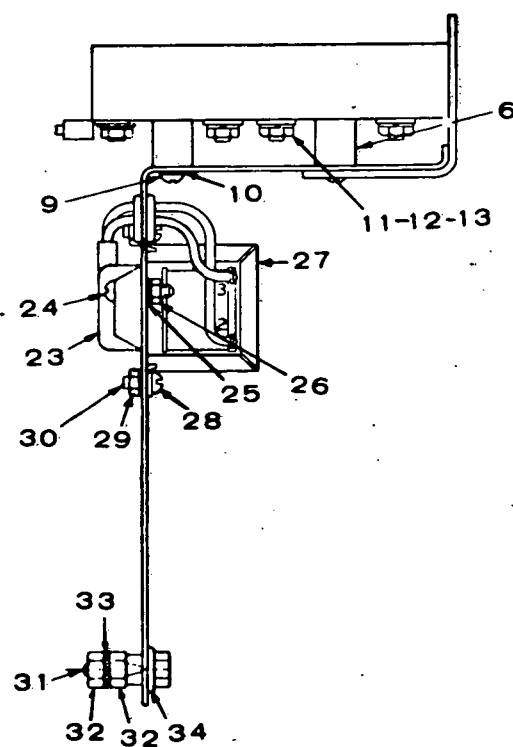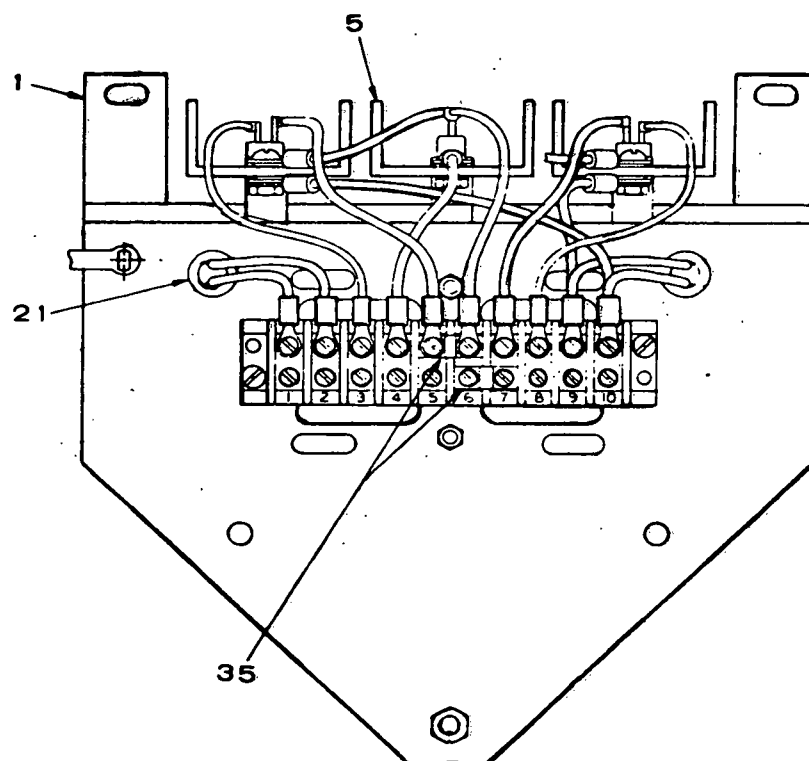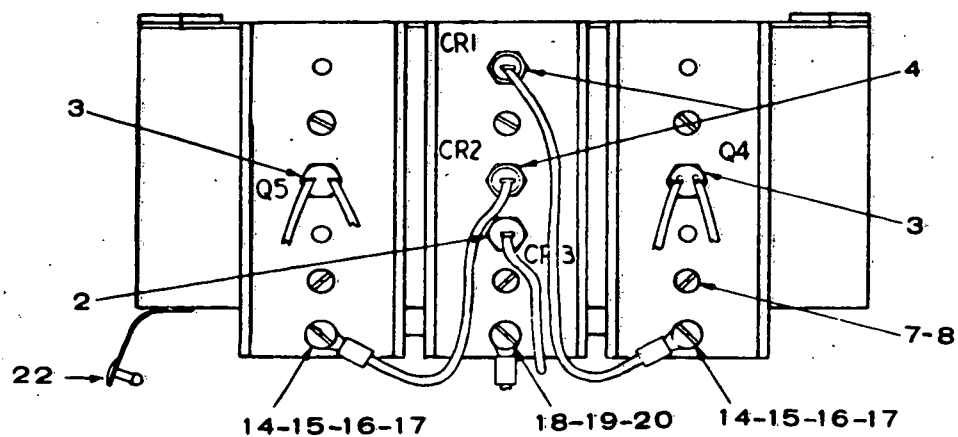



VOLTAGE REGULATOR GROUP

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	CHASSIS ASSEMBLY, VOLTAGE REGULATOR			17	871-0007	2	*†Nut, Hex - Rectifier Lead to Heat Sink (#8-32)
	(Complete)			18	812-0079	1	*†Screw, Machine Roundhead - Terminal Block Lead to Heatsink (#8-32 x 1/2")
	305-0491		Brushless Generator (Includes Parts Marked *)	19	853-0005	1	*†Washer, Lock - ET - Terminal Block to Heat Sink (#8)
	305-0489	1	Brush Type Generator (Includes Parts Marked †)	20	871-0007	1	*†Nut, Hex - Terminal Block Lead to Heat Sink (#8-32)
1	305-0482	1	*†Chassis, Voltage Regulator	21	508-0002	2	*†Grommet, Rubber
2	358-0029	1	*†Rectifier, Silicon (CR3)	22	332-1415	1	*†Clamp, Cable
3	RECTIFIER, SILICON CONTROLLED			23	332-1266	1	*†Block, Terminal
	364-0014	2	*Brushless Generator (Q4 & Q5)	24	812-0081	2	*†Screw Machine - Roundhead - Terminal Block Mounting (#8-32 x 5/8")
	364-0012	2	†Brush Type Generator (Q4 & Q5)	25	853-0005	2	*†Washer, Lock - ET - Terminal Block Mounting (#8)
4	RECTIFIER, SILICON			26	860-0008	2	*†Nut, Hex - Terminal Block Mounting (#8-32)
	358-0035	2	*Brushless Generator (CR1 & CR2)	27	REACTOR ASSEMBLY, COMMUTATOR		
	358-0031	2	†Brush Type Generator (CR1 & CR2)	315-0343	1		*Brushless Generator
5	363-0048	3	*†Heat Sink, Rectifier	315-0341	1		†Brush Type Generator
6	332-1265	6	*†Insulator, Stand off	28	812-0077	2	*†Screw, Machine - Roundhead - Reactor Mtg. (#8-32 x 3/8")
7	812-0077	6	*†Screw, Roundhead - Heat Sink Mtg. (8-32 x 3/8")	29	853-0005	2	*†Washer, Lock - ET - Reactor Mounting (#8)
8	853-0005	6	*†Washer, Lock - ET - Heat Sink Mtg. (#8)	30	860-0008	2	*†Nut, Hex - Reactor Mtg. (#8-32)
9	812-0077	6	*†Screw, Machine Roundhead - Stand off Insulator Mtg. (#8-32 x 3/8")	31	150-0723	1	*†Point, Contact - Overspeed Switch
10	853-0005	6	*†Washer, Lock - ET Stand off Insulator Mtg. (#8)	32	862-0001	2	*†Nut, Hex - Contact Point (1/4-20)
11	871-0010	3	*†Nut, Hex - Rectifier Mounting (CR1, CR2 & CR3) (#10-32)	33	853-0013	1	*†Washer, Lock - ET Contact Point (1/4)
12	526-0009	3	*†Washer, Flat (7/32" I.D. x 1/2" O.D. x 1/16" Thick) - Rectifier Mtg. (CR1, CR2 & CR3)	34	870-0250	2	*†Nut, Insulator - Contact Point (1/4)
13	850-0030	3	*†Washer, Lock - Spring - Rectifier Mtg. (CR1, CR2 & CR3) (#10)	35	332-1043	2	*†Jumper - Terminal Block
14	812-0079	2	*†Screw, Machine - Roundhead - Rectifier Lead to Heat Sink (#8-32 x 1/2")				
15	526-0048	2	*†Washer, Flat (Brass) (.172" I.D. x 3/8" O.D. x 1/32" Thick)				
16	853-0005	2	*†Washer, Lock - ET - Rectifier Lead to Heat Sink (#8)				

* - Parts included in 305-0491 Voltage Regulator.


† - Parts included in 305-0489 Voltage Regulator.

EXCITER ROTOR GROUP

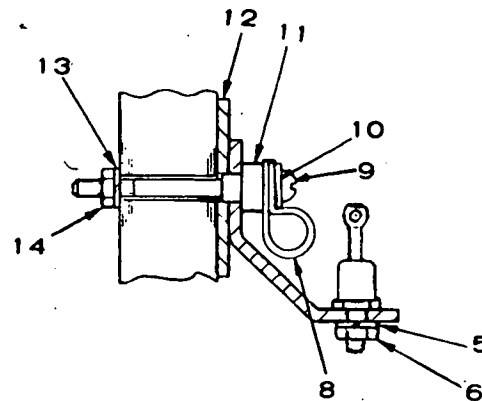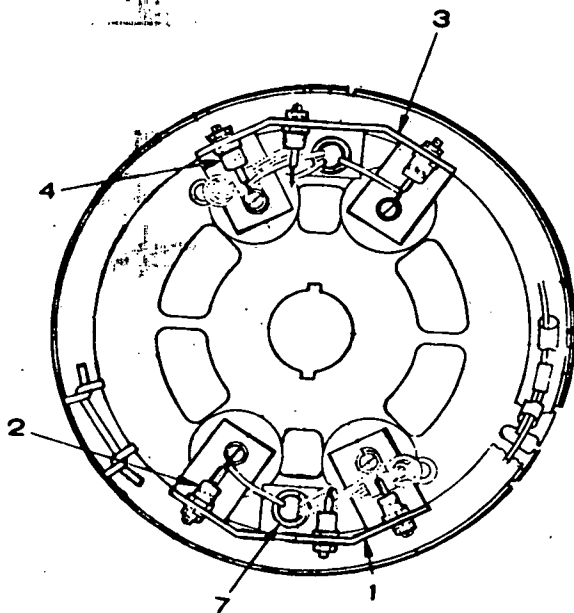


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
	201-1739	1	Rotor Assembly, Wound - Exciter (Complete)
1	363-0055	1	Heat Sink, Rectifier - Negative
2	358-0015	3	Rectifier, Diode - Negative (CR4, CR5 & CR6)
3	363-0054	1	Heat Sink, Rectifier - Positive
4	358-0016	3	Rectifier, Diode - Positive (CR1, CR2 & CR3)
5	850-0030	6	Washer, Lock Spring (#10) Diode Mounting
6	870-0053	6	Nut, Hex - Diode Mounting (10-32)
7	508-0093	2	Grommet, Rubber
8	332-0050	2	Clip, Wire
9	813-0110	4	Screw, Roundhead - Heat Sink Mounting (10-32 x 2")
10	526-0009	4	Washer, Flat - Heat Sink Mounting (#10)
11	508-0124	4	Bushing, Insulating - Heat Sink Mounting
12	508-0156	4	Washer, Insulating - Heat Sink Mounting
13	850-0030	4	Washer, Lock Spring - Heat Sink Mounting (#10)
14	870-0053	4	Nut, Hex - Heat Sink Mtg. (10-32)

MOUNTED FUEL TANK GROUP (OPTIONAL EQUIPMENT)

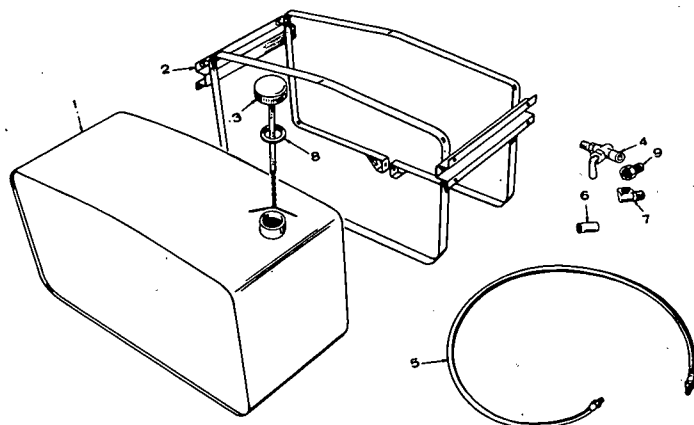

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	159-0490	1	Tank, Fuel
2	159-0489	1	Strap Assembly, Fuel Tank Mounting
3	159-0512	1	Cap & Indicator, Fuel Tank
4	VALVE, SHUT-OFF		
	504-0013	1	Fuel Supply - With Screen
	504-0075	1	Fuel Supply - With Screen - Three Way
	504-0007	1	Fuel Return
	504-0004	1	Fuel Return - Three Way
5	LINE, FUEL		
	501-0009	1	Fuel Supply (36")
	501-0007	1	Fuel Return (24")
6	505-0026	1	Coupling, Pipe (1/8")
7	502-0020	1	Elbow, Street
8	159-0751	1	Gasket, Gas Tank Filler Neck
9	502-0003	1	Connector, Inverted Male (Use with Three Way Valve)

WATER FILTER GROUP - OPTIONAL

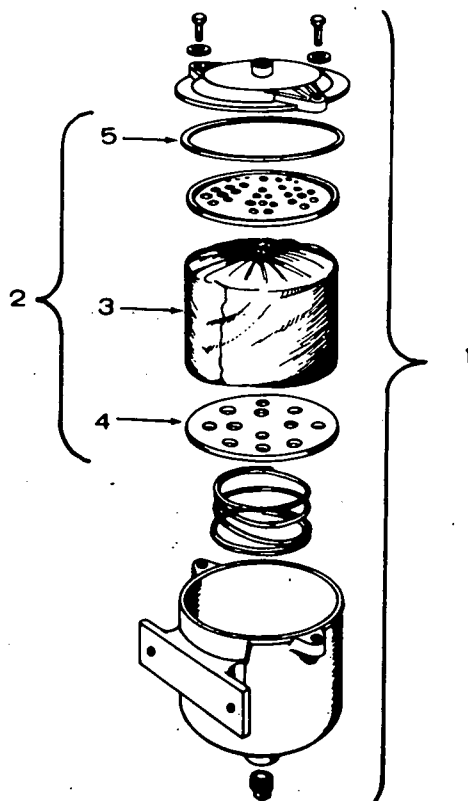


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0497	1	Filter, Water - Complete
2	ELEMENT REPLACEMENT KIT, WATER FILTER		
	130-0771	1	Chromate Element (Includes (Parts Marked *) - Original Equipment
	130-0772	1	All Purpose, Year Around Element (Includes Parts Marked †)
3	ELEMENT, FILTER		
	130-0775	1	*Chromate Element
	130-0776	1	†All Purpose, Year Around
4	130-0780	1	*†Plate, Sacrificial
5	130-0778	1	*†Gasket, Cover

* - Included in #130-0771 Element Replacement Kit.

† - Included in #130-0772 Element Replacement Kit.

HEAT EXCHANGER COOLING INSTALLATION— OPTIONAL EQUIPMENT


179-0371

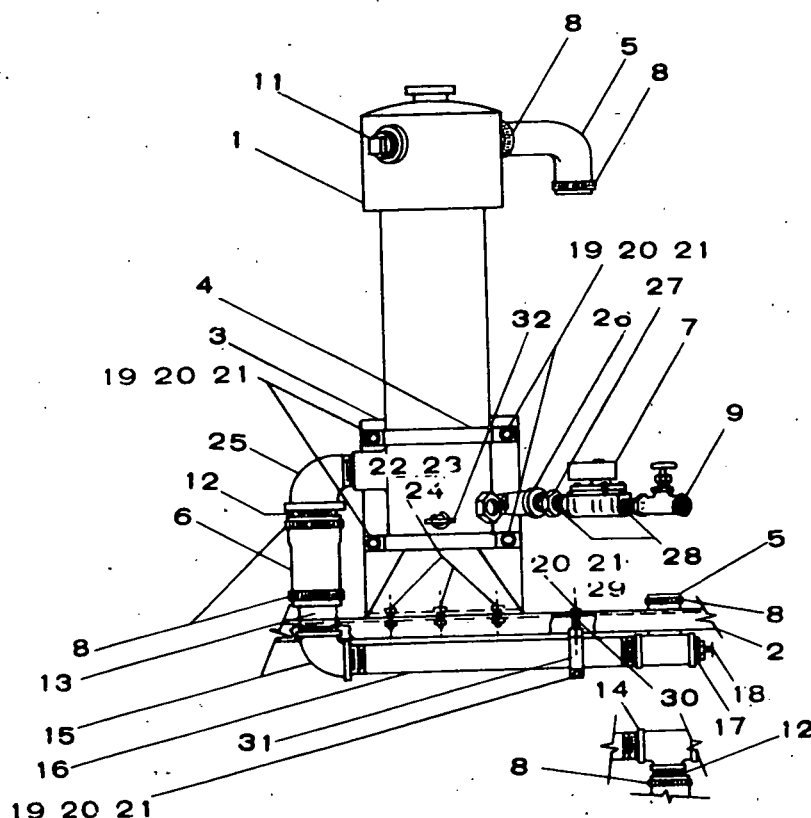

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0796	1	Exchanger, Heat
2	130-0805	1	Bracket, Heat Exchanger
3	130-0819	1	Bracket, Heat Exchanger Mounting
4	130-0802	2	Strap, Heat Exchanger Mounting
5	503-0441	2	Hose, Radiator (1-3/4" ID) - (Molded)
6		1	Hose, Radiator (Order 8" of Bulk Hose #503-0356)
7	307-0833	1	Valve, Solenoid
8	503-0311	6	Clamp, Hose
9	504-0019	1	Valve, Globe
11	505-0140	1	Plug, Pipe (1")
12	505-0444	1	Nipple, Half (1-1/2 x 2-1/4")
13	505-0628	2	Nipple, Half (1-1/2 x 3")
14	505-0317	1	Tee, Pipe (1-1/2)
15	505-0043	1	Elbow, Pipe (1-1/2 x 90°)
16	505-0424	1	Nipple, Pipe (1-1/2 x 16-1/2")
17	505-0426	1	Bushing, Reducer (1-1/2 x 1/4)


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
18	504-0003	1	Cock, Drain (1/4 NPT)
19	800-0004	5	Screw, Cap - Hex Head (1/4-20 x 5/8")
20	850-0040	6	Washer, Lock - Spring (1/4")
21	862-0001	6	Nut, Hex (1/4-20)
22	800-0026	3	Screw, Cap - Hex Head (5/16-18 x 3/4")
23	850-0045	3	Washer, Lock - Spring (5/16")
24	862-0015	3	Nut, Hex (5/16-18)
25	505-0462	1	Elbow, Street (1-1/2 x 90°)
26	505-0691	1	Elbow, Street (3/4 x 45°)
27	505-0021	1	Bushing, Reducer (3/4 x 1/2)
28	505-0100	2	Nipple, Pipe (1/2 x 1-1/8")
29	800-0012	1	Screw, Cap - Hex Head (1/4-20 x 2-1/4")
30	232-1197	1	Spacer (1-11/16" Lg)
31	331-0101	1	Hanger
32	504-0005	1	Cock, Drain (1/8 NPT)
33	130-0785	1	Guard, Belt (Not Illustrated)

179-0388

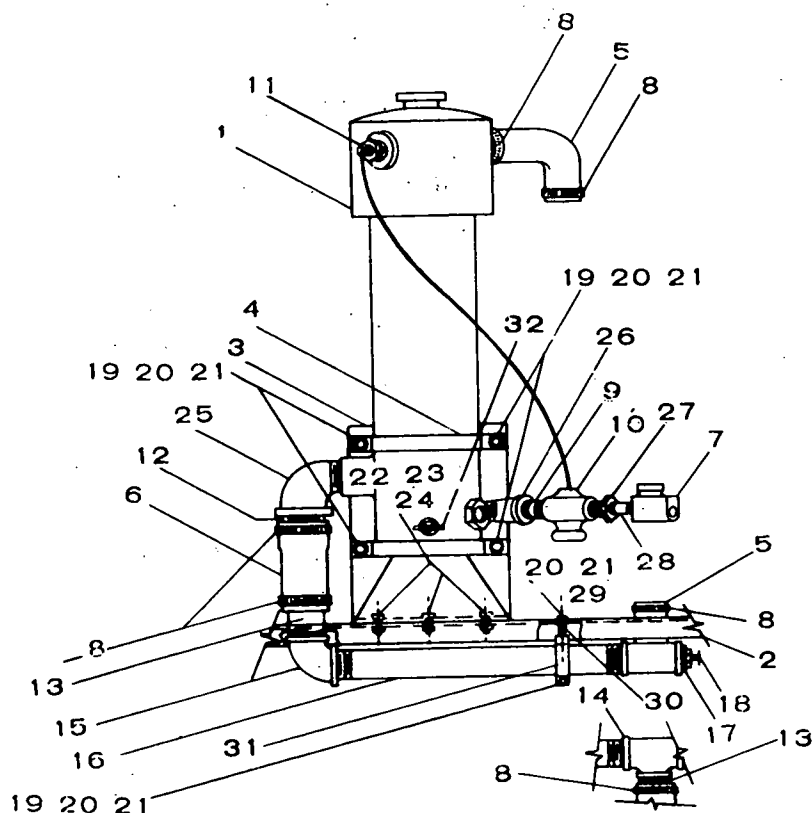55

HEAT EXCHANGER WITH WATER TEMPERATURE CONTROL VALVE INSTALLATION—OPTIONAL EQUIPMENT

179-0380

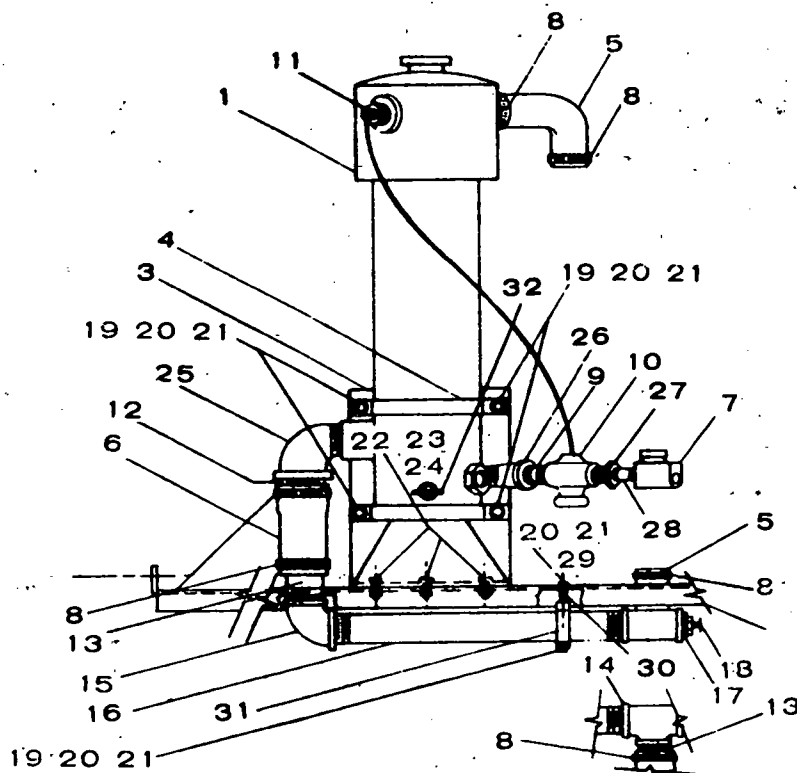


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0796	1	Exchanger, Heat
2	130-0805	1	Bracket, Heat Exchanger
3	130-0819	1	Bracket, Heat Exchanger Mounting
4	130-0802	2	Strap, Heat Exchanger Mounting
5	503-0441	2	Hose, Radiator (1-3/4" ID)
6		1	Hose (Order 8" of Bulk Hose #503-0356)
7	307-0833	1	Valve, Solenoid
8	503-0311	6	Clamp, Hose
9	505-0102	1	Nipple, Pipe (3/4")
10	309-0241	1	Valve, Regulator (Marsh)
11	505-0129	1	Bushing, Reducer (1 x 3/4")
12	505-0444	1	Nipple, Half (1-1/2 x 2-3/4")
13	505-0628	2	Nipple, Half (1-1/2 x 3")
14	505-0317	1	Tee (1-1/2")
15	505-0043	1	Elbow, Pipe (1-1/2" x 90°)
16	505-0424	1	Nipple, Pipe (1-1/2 x 16-1/2")
17	505-0426	1	Bushing, Reducer (1-1/2 x 1/4")

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
18	504-0003	1	Valve, Drain (1/4")
19	800-0004	5	Screw, Cap - Hex Head (1/4-20 x 5/8" Lg)
20	850-0040	6	Washer, Lock - Spring (1/4")
21	862-0001	6	Nut, Hex (1/4-20)
22	800-0026	3	Screw, Cap - Hex Head (5/16-18 x 3/4" Lg)
23	850-0045	3	Washer, Lock - Spring (5/16")
24	862-0015	3	Nut, Hex (5/16-18)
25	505-0462	1	Elbow, Street (1-1/2" x 90°)
26	505-0691	1	Elbow, Street (3/4" x 45°)
27	505-0021	1	Bushing, Reducer (3/4 x 1/2")
28	505-0100	1	Nipple, Pipe (1/2 x 1-1/2")
29	800-0012	1	Screw, Cap - Hex Head (1/4-20 x 2-1/4" Lg)
30	232-1197	1	Spacer (1-11/16" Lg)
31	331-0101	1	Hanger
32	504-0005	1	Valve, Drain (1/8")
33	130-0785	1	Guard, Belt (Not Illustrated)

WATER COOLED MANIFOLD INSTALLATION— OPTIONAL EQUIPMENT


179-0265

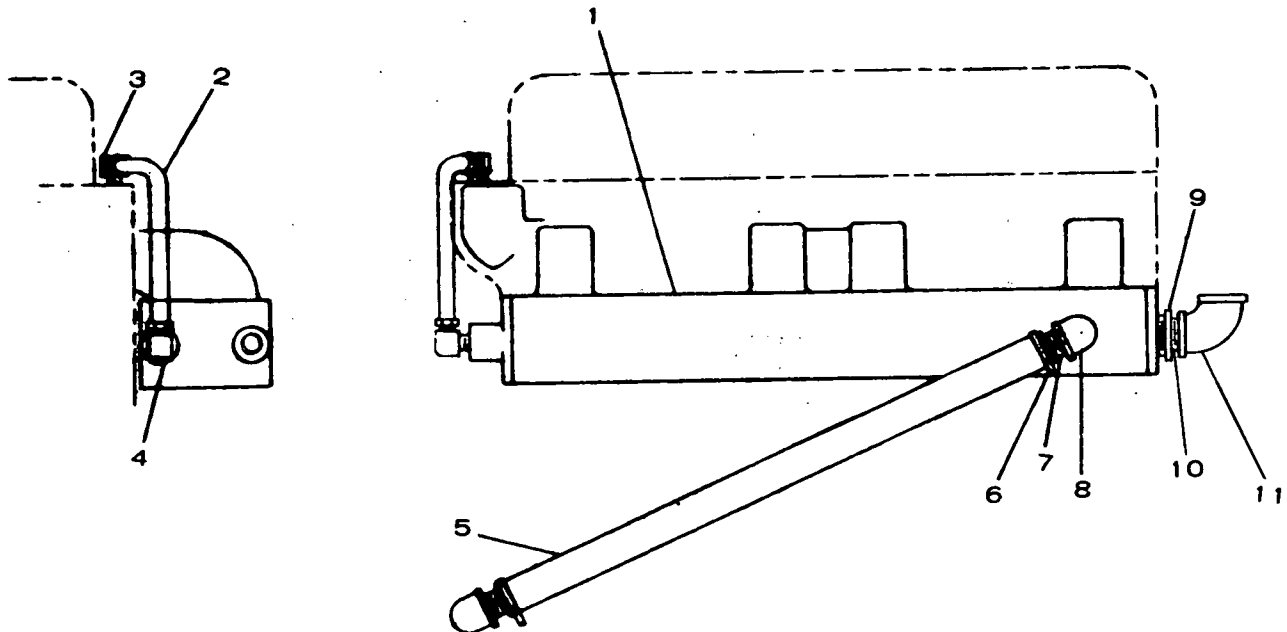

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	154-0889	1	Manifold
2	130-0674	1	Water Line Assembly
3	502-0074	1	Elbow, Inverted Male (1/2" Tubing x 3/8 NPT)
4	502-0073	1	Elbow, Inverted Male (1/2" Tubing x 1/2 NPT)
5		1	Hose - 5/8" ID (Order 30" of Bulk Hose #503-0386)
6	503-0183	2	Clamp, Hose
7	505-0135	2	Nipple, Half (3/8 x 1-1/2" Lg)
8	505-0120	2	Elbow, Street (3/8 x 90°)
9	505-0207	1	Bushing, Pipe (2-1/2 x 2")
10	505-0172	1	Nipple, Pipe (2" x Close)
11	505-0175	1	Elbow, Pipe (2" x 90°)

WATER JACKET HEATER INSTALLATION (120 VOLT) OPTIONAL EQUIPMENT

179-0180

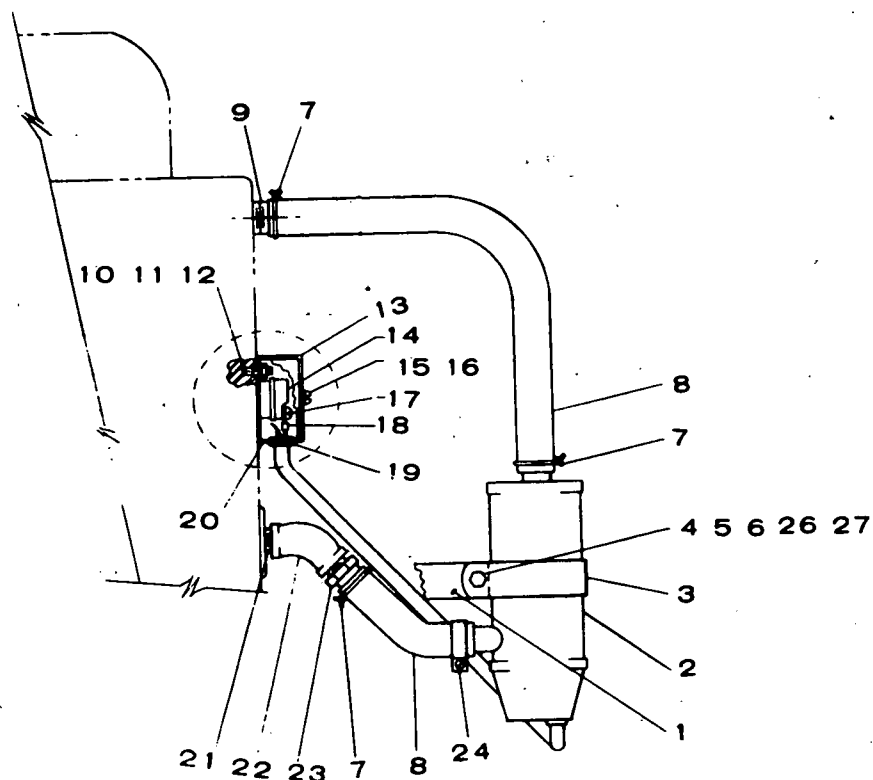


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0755	1	Bracket, Water Heater
2	333-0052	1	Heater, Engine
3	(Part of Item 2)		Clamp
4	800-0030	1	Screw, Cap - Hex Head - (5/16-18 x 1-1/4" Lg)
5	850-0045	1	Washer, Lock - Spring (5/16)
6	862-0015	1	Nut, Hex (5/16-18)
7	503-0197	3	Clamp, Hose
8		1	Hose, Water (Order 36" of Bulk Hose #503-0386)
9	505-0135	1	Nipple, Half (3/8 x 1-1/2")
10	520-0446	2	Stud
11	850-0030	2	Washer, Lock - Spring (#10)
12	870-0053	2	Nut, Hex (10-32)
13	333-0013	1	Cover, Thermostat Box
14	309-0106	1	Switch, Thermostat

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
15	850-0025	2	Washer, Lock - Spring (#8)
16	812-0076	2	Screw, Machine - Round Head (8-32 x 5/16" Lg)
17	(Part of Item 14)		Screw
18	332-0149	1	Terminal, Crimp
19	508-0008	1	Grommet, Rubber
20	333-0012	1	Box, Thermostat
21	505-0071	1	Nipple, Pipe (1/4 x 2" Lg)
22	505-0112	1	Elbow (1/4 x 45°)
23	(Part of Item 2)		Adapter
24	503-0183	1	Clamp, Hose (For Draining)
25	(Part of Item 2)		Tag, Form #24A046 (On Cover)
26	526-0030	2	Washer, Flat (13/32" ID x 7/8" OD x 1/8" Thk)
27	856-0008	2	Washer, Lock (EIT)

WATER JACKET HEATER INSTALLATION (208/240 VOLT) OPTIONAL EQUIPMENT


179-0376

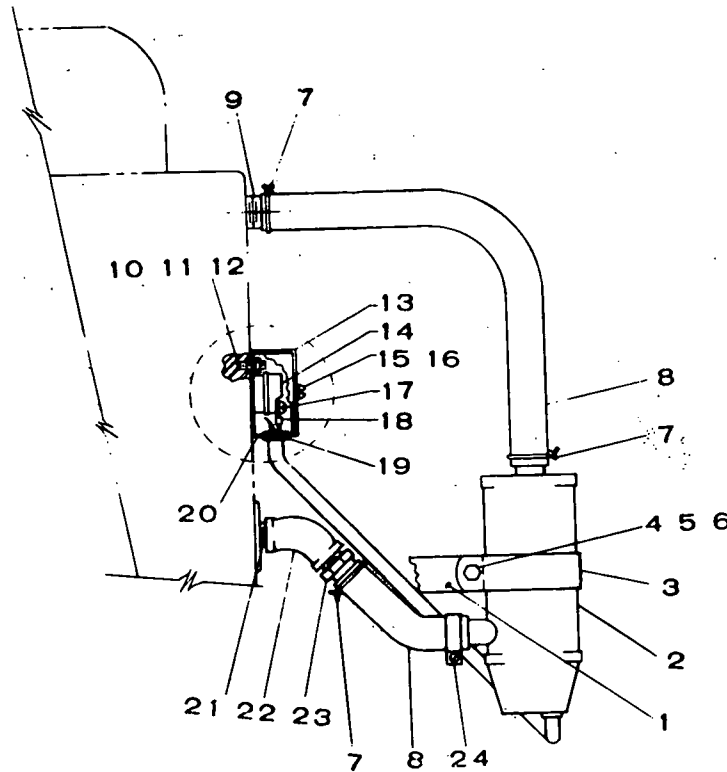

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	130-0755	1	Bracket, Water Heater
2	333-0073	1	Heater, Engine
3	(Part of Item 2)		Clamp
4	800-0030	1	Screw, Cap - Hex Head (5/16-18 x 1-1/4" Lg)
5	850-0045	1	Washer, Lock - Spring (5/16")
6	862-0015	1	Nut, Hex (5/16-18)
7	503-0197	3	Clamp, Hose
8		1	Hose, Water (Order 36" of Bulk Hose #503-0386)
9	505-0135	1	Nipple, Half (3/8 x 1-1/2")
10	332-0672	2	Stud
11	850-0030	2	Washer, Lock - Spring (#10)
12	870-0053	2	Nut, Hex (10-32)
13	333-0056	1	Cover, Thermostat Box
14	309-0256	1	Switch, Thermostat
15	850-0025	2	Washer, Lock - Spring (#8)
16	812-0076	2	Screw (8-32 x 5/16" Lg)
17	(Part of Item 14)		Screw
18	332-0149	1	Terminal, Crimp
19	508-0008	1	Grommet, Rubber
20	333-0057	1	Box, Thermostat
21	505-0071	1	Nipple, Pipe (1/4 x 2" Lg)
22	505-0112	1	Elbow (1/4 x 45°)
23	(Part of Item 2)		Adapter
24	503-0183	1	Clamp, Hose (For Draining)
25	(Part of Item 2)		Tag, Form #240A046 (On Cover)

CITY WATER COOLING INSTALLATION—OPTIONAL EQUIPMENT

179-0255

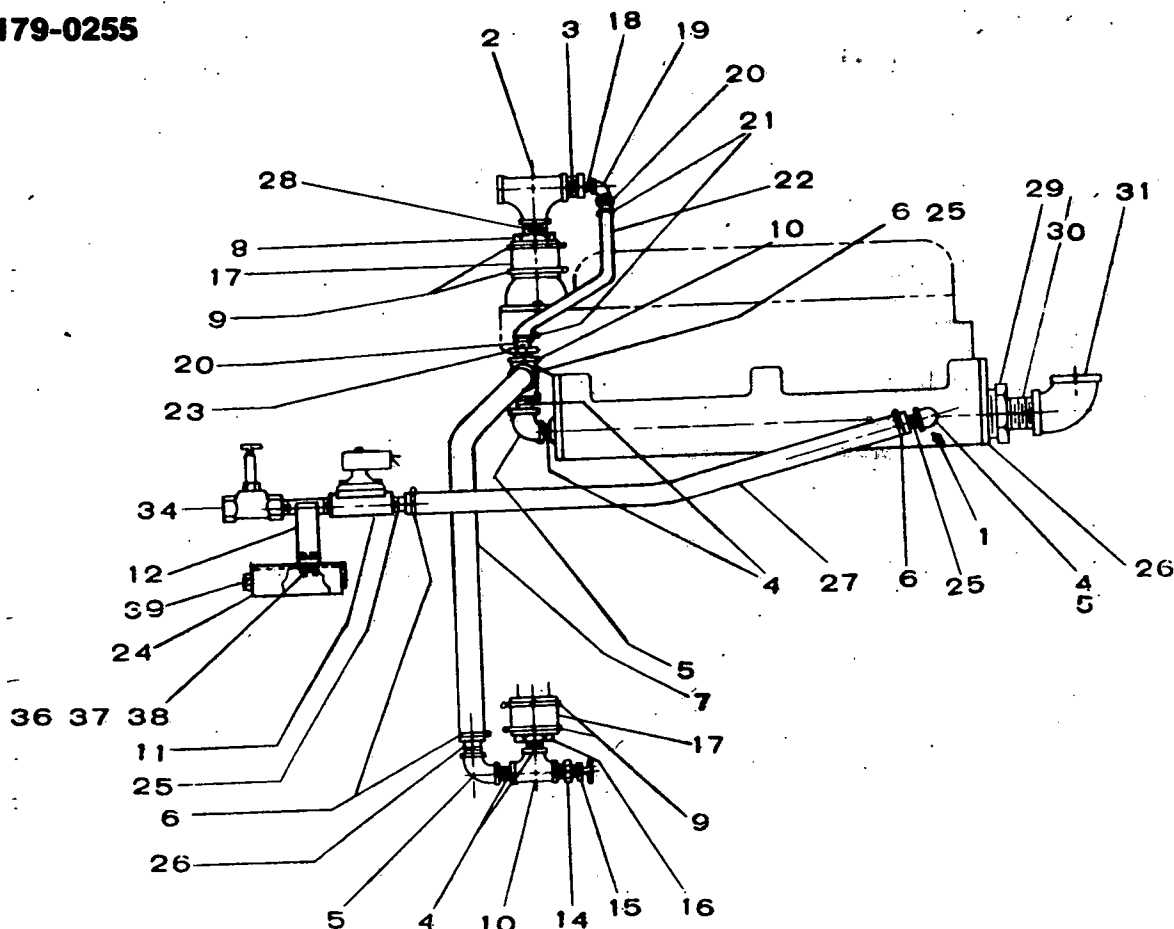


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	504-0005	1	Cock, Drain
2	505-0166	1	Tee, Pipe (3/4)
3	505-0020	1	Bushing, Reducer (3/4 x 1/4)
4	505-0100	5	Nipple, Pipe (1/2 x Close)
5	505-0040	3	Elbow, Pipe (1/2)
6	503-0189	4	Clamp, Hose
7		1	Hose, Water (Order 14" of Bulk Hose #503-0386)
8	110-1543	1	Plug, Hose Adapter
9	503-0311	4	Clamp, Hose
10	505-0108	2	Tee, Pipe (1/2)
11	307-0833	1	Valve
12	110-0526	1	Bracket and Nipple Assembly
14	505-0019	1	Bushing, Reducer (1/2 x 3/8)
15	504-0028	1	Cock, Drain
16	110-0576	1	Adapter (1-3/4 x 1/2)
17		2	Hose, Water (Order 3" of Bulk Hose #503-0356)
18	505-0099	1	Nipple, Pipe (1/4 x Close)
19	505-0038	1	Elbow, Pipe (1/4)
20	505-0302	2	Nipple, Half (1/4 x 1-1/2")
21	503-0183	2	Clamp, Pipe

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
22		1	Hose, Water (Order 12" of Bulk Hose #503-0110)
23	505-0018	1	Bushing, Reducer (1/2 x 1/4)
24	130-0499	1	Bracket, Heat Exchanger
25	505-0185	4	Nipple, Half (1/2 x 1-1/2")
26	154-0889	1	Manifold, Water Cooled Exhaust
27		1	Hose, Water (Order 36" of Bulk Hose #503-0386)
28	505-0102	1	Nipple, Pipe (3/4 x Close)
29	505-0207	1	Bushing, Reducer (2-1/2 x 2)
30	505-0172	1	Nipple, Pipe (2" x Close)
31	505-0175	1	Elbow, Pipe (2")
32	130-0785	1	Guard, Generator Belt (Not Illustrated)
33	526-0030	2	Washer, Belt Guard Mounting (13/32" ID x 7/8" OD x 1/8" Thk) (Not Illustrated)
34	504-0010	1	Valve, Globe
36	800-0007	2	Screw, Cap - Hex Head (1/4-20 x 1")
37	850-0040	2	Washer, Lock - Spring (1/4")
38	862-0001	2	Nut, Hex (1/4-20)
39	821-0014	6	Screw, Cap - Locking (5/16-18 x 1/2")

CITY WATER COOLING WITH REGULATOR INSTALLATION—OPTIONAL EQUIPMENT


179-0344

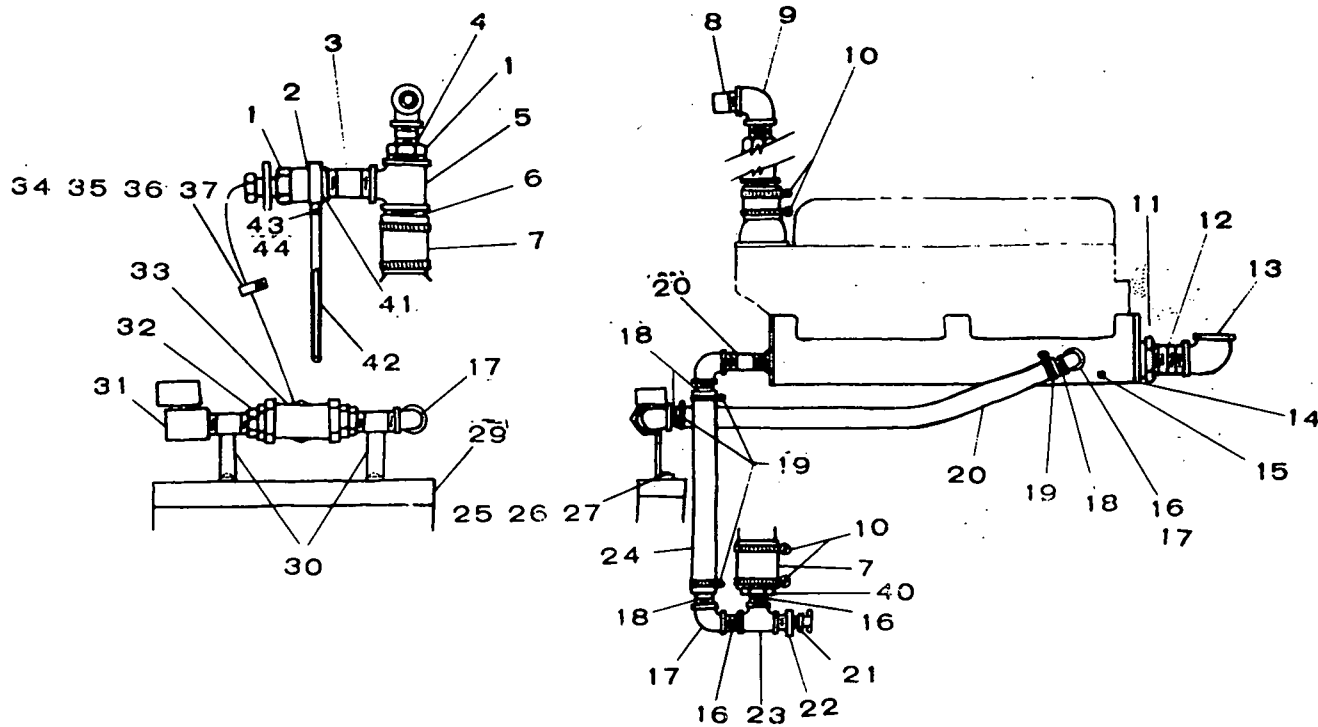

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	505-0289	2	Bushing, Reducer (1-1/2 x 3/4)	24		1	Hose, Water (Order 14" of Bulk Hose #503-0386)
2	505-0032	1	Coupling, Pipe (1-1/2)	25	800-0027	4	Screw, Cap - Hex Head - (5/16-18 x 7/8")
3	505-0109	1	Nipple, Pipe (1-1/2 x 2-1/2")	26	850-0045	4	Washer, Lock - Spring (5/16")
4	505-0102	1	Nipple, Pipe (3/4 x Close)	27	862-0015	4	Nut, Hex (5/16-18)
5	505-0317	1	Tee, Pipe (1-1/2)	28	505-0176	1	Nipple, Pipe (1/2 x 3-1/2")
6	505-0385	1	Nipple, Half (1-1/2 x 2")	29	130-0499	1	Bracket, Heat Exchanger
7		2	Hose, Water (Order 3" of Bulk Hose #503-0356)	30	110-0526	2	Bracket and Nipple Assembly
8	505-0324	1	Nipple, Half (3/4 x 2")	31	307-0833	1	Valve, Solenoid
9	505-0051	1	Elbow, Street (3/4 x 90°)	32	505-0021	2	Bushing, Reducer (3/4 x 1/2)
10	503-0311	4	Clamp, Hose	33	309-0241	1	Valve, Water Temperature Control
11	505-0207	1	Bushing, Reducer (2-1/2 x 2)	34	332-0050	1	Clip, Wire
12	505-0172	1	Nipple, Pipe (2" x Close)	35	812-0079	1	Screw, Machine - Round Head (8-32 x 1/2")
13	505-0175	1	Elbow, Pipe (2" x 90°)	36	860-0009	1	Nut, Hex (8-32)
14	154-0889	1	Manifold, Water Cooled Exhaust	37	850-0025	1	Washer, Lock - Spring (#8)
15	504-0005	1	Cock, Drain	38	130-0785	1	Guard, Belt (Not Illustrated)
16	505-0100	3	Nipple, Pipe (1/2 x Close)	39	526-0030	2	Washer, Flat (13/32" ID x 7/8" OD x 1/8" Thk) (Not Illustrated)
17	505-0040	3	Elbow, Pipe (1/2 x 90°)	40	110-0576	1	Adapter
18	505-0185	4	Nipple, Half (1/2 x 1-1/2")	41	130-0522	1	Clamp
19	503-0189	4	Clamp, Hose	42	191-0235	1	Strap
20		1	Hose, Water (Order 36" of Bulk Hose #503-0386)	43	800-0005	1	Screw, Cap - Hex Head (1/4-20 x 3/4")
21	504-0028	1	Cock, Drain	44	850-0040	1	Washer, Lock - Spring (1/4")
22	505-0019	1	Bushing, Reducer (1/2 x 3/8)				
23	505-0108	1	Tee, Pipe (1/2)				

STANDPIPE COOLING INSTALLATION—OPTIONAL EQUIPMENT



179-0288

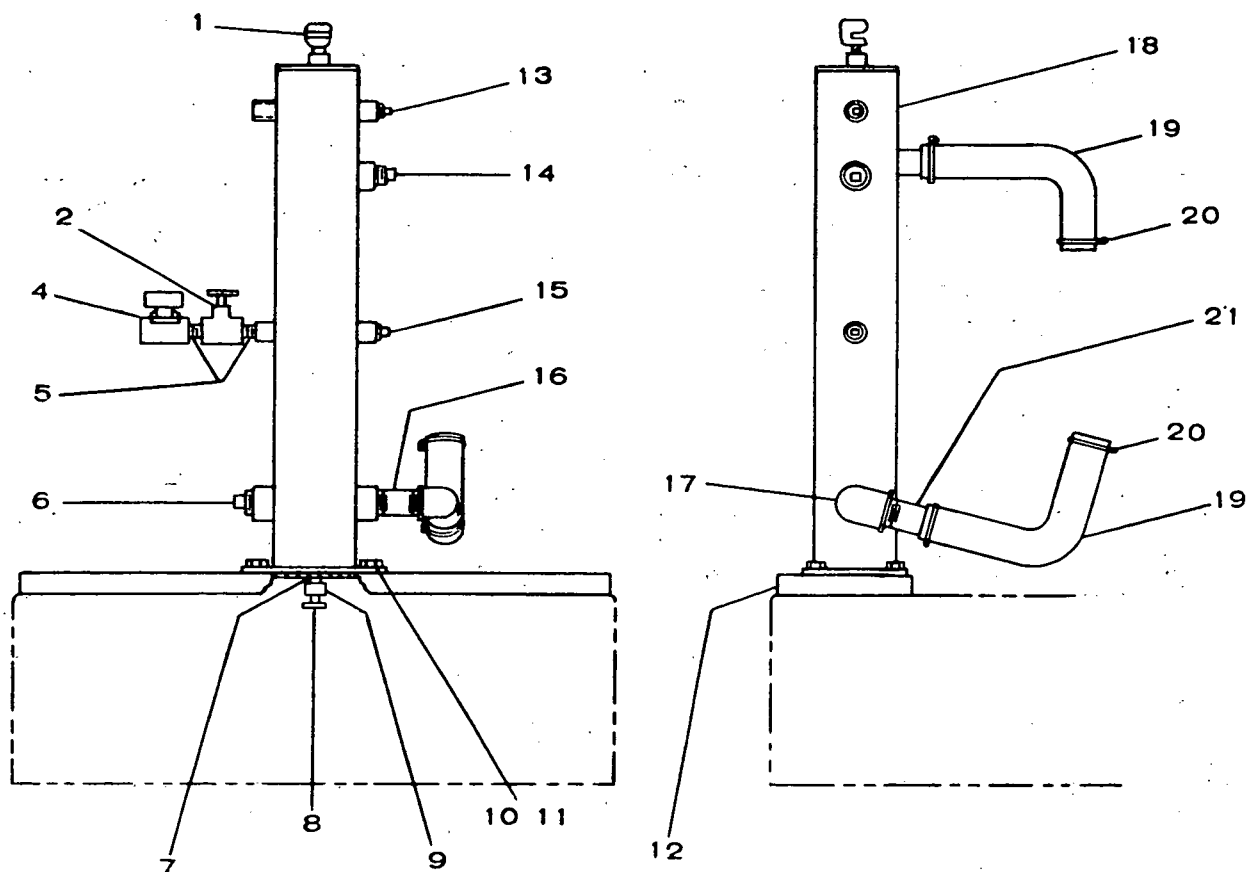

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	504-0062	1	Valve, Vacuum Relief
2	504-0019	1	Valve, Globe
4	307-0833	1	Valve, Solenoid
5	505-0100	2	Nipple, Pipe (1/2 x Close)
6	505-0359	1	Plug, Pipe (1-1/4)
7	505-0101	1	Nipple, Pipe (3/8 x Close)
8	504-0028	1	Cock, Drain
9	505-0028	1	Coupling (3/8)
10	850-0050	4	Washer, Lock - Spring (3/8)
11	800-0048	4	Screw, Cap - Hex Head (3/8-16 x 3/4")
12	130-0860	1	Support, Standpipe
13	505-0130	1	Plug, Pipe (3/4)
14	505-0140	1	Plug, Pipe (1")
15	505-0056	1	Plug, Pipe (1/2)
16	505-0258	1	Nipple, Pipe (1-1/4 x 3")
17	505-0183	1	Elbow, Reducer (1-1/2 x 1-1/4)
18	130-0659	1	Standpipe
19	503-0441	2	Hose
20	503-0365	4	Clamp
21	505-0385	1	Nipple, Half (1-1/2 x 2")
22	130-0785	1	Guard, Belt (Not Illustrated)

STANDPIPE COOLING WITH REGULATOR INSTALLATION— OPTIONAL EQUIPMENT


179-0287

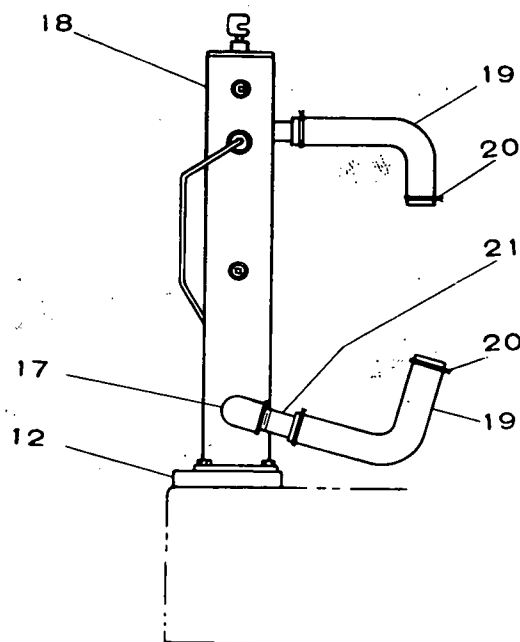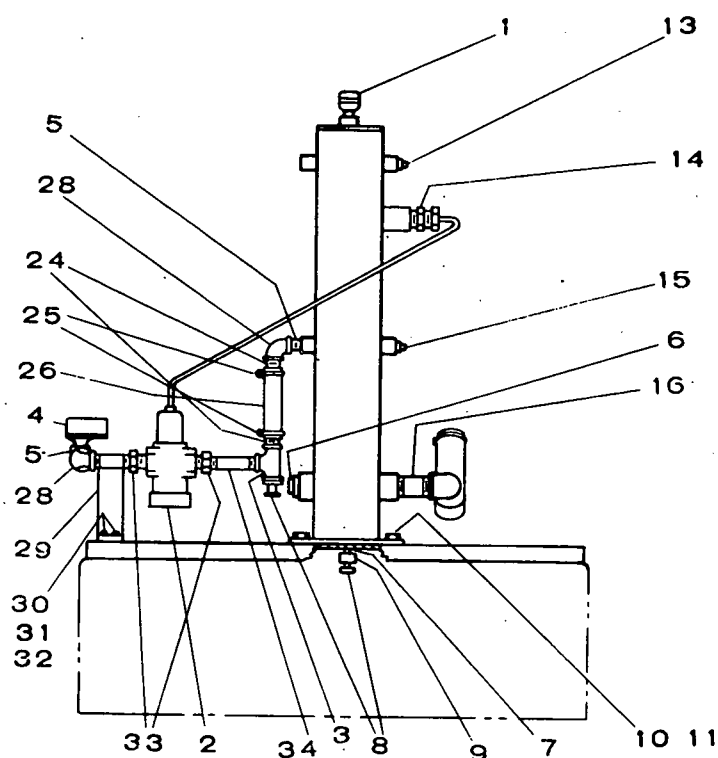

REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	504-0062	1	Valve, Vacuum Relief
2	309-0241	1	Valve, Water Temperature Control (Marsh)
3	505-0108	1	Tee (1/2")
4	307-0833	1	Valve, Solenoid
5	505-0100	2	Nipple, Pipe - Close (1/2")
6	505-0359	1	Plug, Pipe (1-1/4")
7	505-0101	1	Nipple, Close (3/8")
8	504-0028	2	Valve, Drain
9	505-0028	1	Coupling, Pipe (3/8")
10	850-0050	4	Washer, Lock - Spring (3/8")
11	800-0048	4	Screw, Cap - Hex Head (3/8-16 x 3/4" Lg)
12	130-0860	1	Support, Standpipe
13	505-0130	1	Plug (3/4")
14	505-0129	1	Reducer, Pipe (1 x 3/4")
15	505-0056	1	Plug, Pipe
16	505-0258	1	Nipple, Pipe (1-1/4 x 3")
17	505-0183	1	Elbow, Reducer (1-1/2 x 1-1/4")
18	130-0659	1	Standpipe
19	503-0441	2	Hose
20	503-0365	4	Clamp, Hose
21	505-0474	1	Nipple, Half (1-1/2 x 5")
22	130-0785	1	Guard, Belt (Not Shown)
24	505-0185	2	Nipple, Half (1/2")
25	503-0189	2	Clamp, Hose
26	503-0437	1	Hose (3/4" ID x 7-1/2")
28	505-0040	2	Elbow, Pipe (1/2")
29	110-0526	1	Nipple and Bracket Assembly
30	862-0015	2	Nut, Hex (5/16-18)
31	850-0045	2	Washer, Lock - Spring (5/16")
32	800-0027	2	Screw, Cap - Hex Head (5/16-18 x 7/8" Lg)
33	505-0021	2	Bushing, Reducer (3/4 x 1/2")
34	505-0002	1	Nipple, Pipe (1/2 x 3")

EXHAUST MUFFLER INSTALLATION—OPTIONAL EQUIPMENT.

179-0367

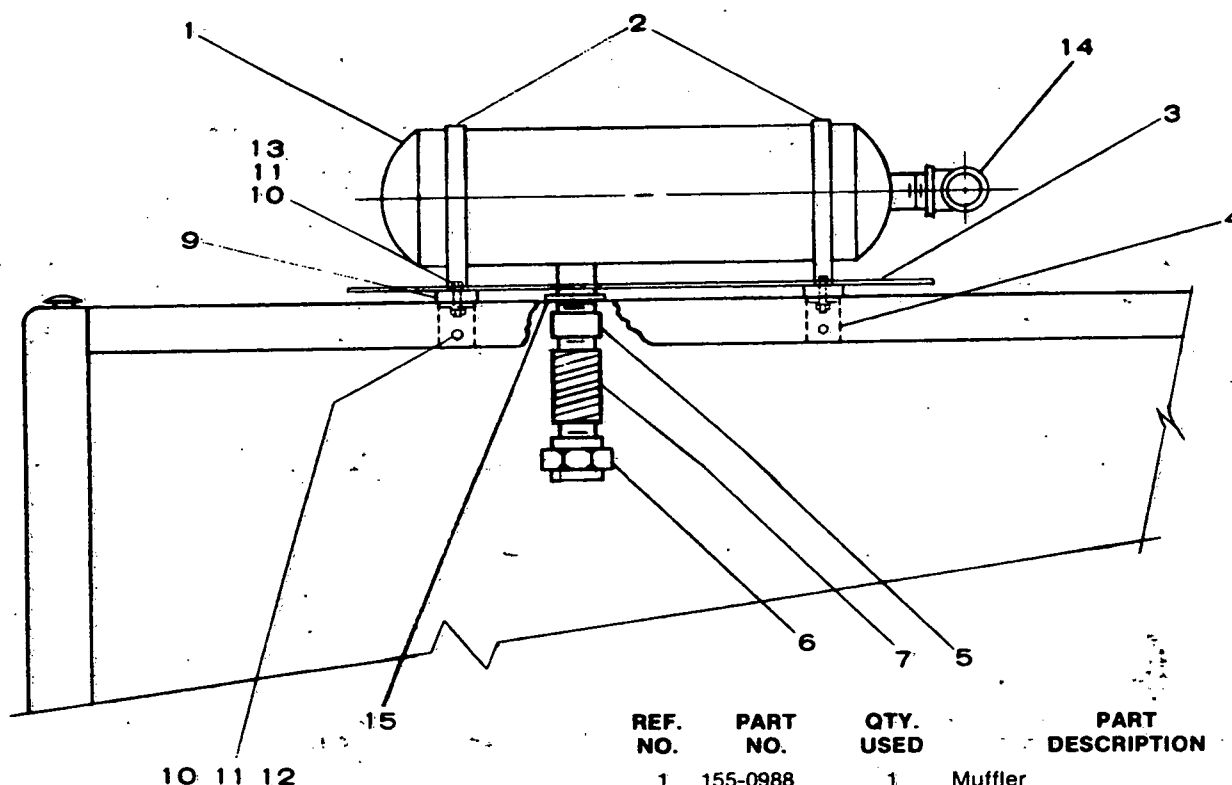


REF. NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	155-0988	1	Muffler
2	140-0649	2	Band
3	155-0978	1	Shield, Heat
4	155-0789	2	Support
5	505-0203	1	Coupling, Pipe (2")
6	505-0454	1	Union, Pipe (2")
7	TUBE ASSEMBLY, EXHAUST 115-1115	1	Spec D Through Serial #K76018859 During Spec J
	155-1484	1	Begin Serial #K760188598 During Spec J
9	SPACER 526-0172	4	Spec D Through Serial #K760188597 During Spec J
	155-1430	4	Begin Serial #K760188598 During Spec J
10	862-0015	10	Nut, Hex (5/16-18)
11	850-0045	10	Washer, Lock - Spring (5/16")
12	800-0026	6	Screw, Cap - Hex Head (5/16-18 x 3/4")
13	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")
14	505-0453	1	Elbow, Pipe (3" x 90°)
15	SHIELD, MAIN 155-1383	1	Spec D Through Serial #K760188597 During Spec J
	155-1420	1	Begin Serial #K760188598 During Spec J
16	895-0157	1	Asbestos - Begin Serial #K760188598 During Spec J
	800-0037	1	Screw, Cap - Hex Head (5/16-18 x 3" lg)
	870-0048	1	Nut, Lock - Hex (5/16-18)
	813-0105	1	Screw, Machine - Round Head (#10-32 x 1" lg)
	870-0188	1	Nut, Lock - Hex (#10-32)

HARDWARE IDENTIFICATION


Illustrated hardware items are only for identification purposes. All hardware items listed throughout this parts catalog are steel SAE grade five (5) or lower (zinc plated with clear chromate dip) unless parts description indicates differently. All dimensions are in inches.

WASHER TYPES

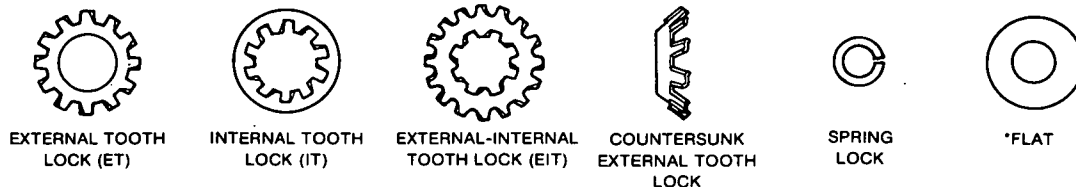


* - Flat washer dimensions given are: Inside Diameter (ID), Outside Diameter (OD) and Thickness (Thk).

BOLT AND SCREW TYPES

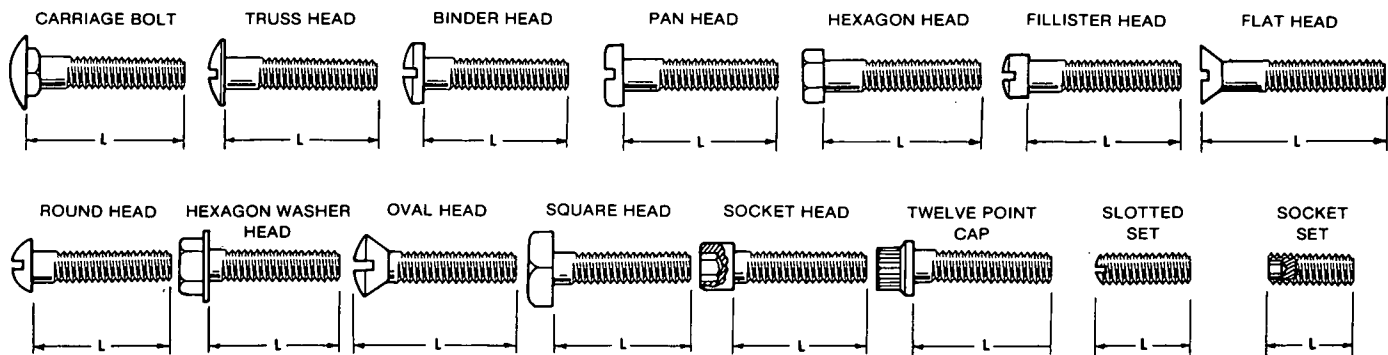

L - Measure length between these points.


INTERNAL DRIVE TYPES

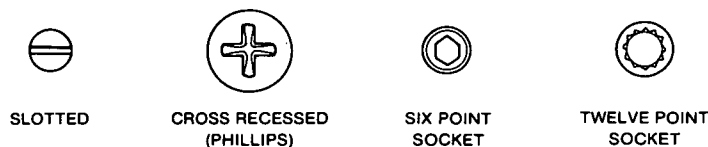

Nominal size (fractional diameter or screw number)
 Number of threads per inch
 Length in inches
 1/4-20 x 3/4"

NUT TYPES



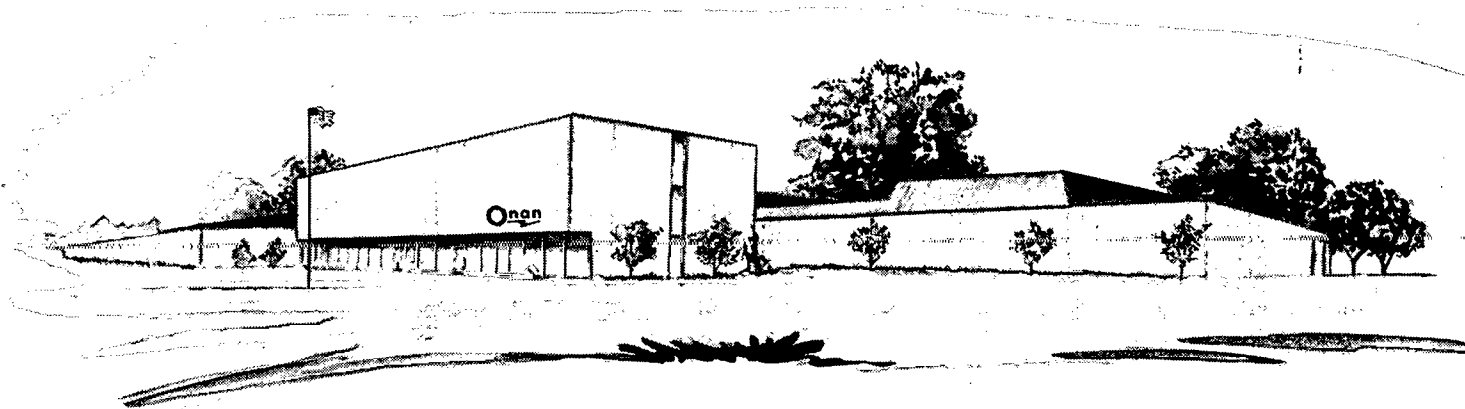

ONAN 1400 73RD AVENUE N.E. • MINNEAPOLIS, MINNESOTA 55432
A DIVISION OF ONAN CORPORATION

