

Cummins **Onan**



Parts Manual

Marine Generator Set

MDKBT (Spec A–C)

MDKBU (Spec A–C)

Introduction

This catalog applies to the standard marine generator sets listed below. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Unless otherwise mentioned in the description or page heading, parts are interchangeable between models. Throughout this catalog left and right sides are determined by facing the engine end (front) of the set.

<u>MODEL</u>	<u>HERTZ</u>
MDKBT/*	50/60
MDKBU/*	50/60

* – The diagonal line (/) in the model and specification number separates generator set characteristics from the specification number and letter. The specification number denotes customer requested options or deviations from the standard model. The specification letter advances (A to B, B to C, etc.) with major manufacturing changes.

WIRING DIAGRAM

630–2694	DC
----------	----

Index

A

Actuator, **21**
Actuator, Electronic Governor, **21**
Adapter, Coupling, **52**
Adapter, Pipe, **52**
Alternator, **35**
Alternator (Neg Gnd), **35**
Alternator (ISO Ground), **37**
Alternator (Isolated Ground), **36**
Alternator, ISO Ground, **37**
Assy ,Cylinder Head, **8**
Assy Bracket, Front, **36**
Assy Bracket, Rear, **36**
Assy Cover, Bearing Case, **16**
Assy Fork, Lever, **23**
Assy Holder, Nozzle, **26 , 27**
Assy Lever, Engine Stop, **22**
Assy Manifold, Intake, **32**
Assy Pipe, Over Flow, **26**
Assy Plug, Oil Filler, **30**
Assy Rectifier, **36**
Assy Rocker Arm Internal, **11**
Assy Rocker Arm, Exhaust, **11**
Assy Rotor, **36**
Assy Rotor, Oil Pump, **29**
Assy Shaft, Balancer, **12**
Assy. Arm, Valve, **11**
Assy. Shaft, Rocker Arm, **11**
Assy., Starter, **15**
Assy, Blank Panel, **71**
Assy, Connecting Rod, **9**
Assy, Control (eSDD), **71**
Assy, Drip Pan, **57**
Assy, Engine Mount, **57**
Assy, Engine Panel, **71 , 73**
Assy, Flywheel, **13**
Assy, Generator Rotor, **68**
Assy, NIM PCB, **70**
Assy, Rocker Arm, **11**
Assy, Water Separator Drain, **43**
Assy, Water Separator Pump, **43**

Assy, Water Separator Replacement Head, **43**

B

Balancer, **12**
Base, Injection Pump, **28**
Base, Mounting, **57**
Belt Guard, **58**
Block, Cylinder, **7**
Bolt, Flange, **10**
Bolt, Flywheel, **13**
Bolts, Mechanical Governor Adjusting, **24**
Box, Control , **69**
Bracket, Air Silencer, **31**
Bracket, Alternator, **37**
Bracket, Clutch, **52**
Bracket, Engine (Lifting), **13**
Bracket, Fan Guard, **58 , 59**
Bracket, Fuel Pump, **39**
Bracket, Heat Exchanger, **45**
Bracket, Isolated Ground, **56**
Bracket, Mounting Pad, **52**
Bracket, Oil Drain, **19**
Bracket, PTO (Left), **52**
Bracket, PTO (Right), **52**
Bracket, Remote Separator Mounting, **42**
Bracket, Rocker Arm, **11**
Breaker, Circuit (15 Amp), **73**
Breaker, Circuit (50 Amp), **73**
Bulkhead, Connector, **50**
Bush, Idle Gear, **10**
Bushing (Nylon), **31**
Bushing, Connecting Rod, **9**

C

Cam, **48**
Camshaft, **10**
Camshaft, Fuel, **28**
Cap, Coolant Recovery Tank, **51**
Cap, Cylinder Block Sealing, **7**
Cap, Radiator, **53**

Index

Cap, Valve, **11**
Catch, Door, **64**
Circuit, Breaker, **70**
Circular Clip, External, **11**
Clamp, Hose, **31**
Clamp, Pipe, **26**
Clutch, **52**
Collar, Idle Gear, **10**
Collet, Valve Spring, **11**
Comp. Flange, Water, **33**
Comp. Gear, Idle, **10**
Comp., Valve Breather, **30**
Comp. Oil Pan, **19**
Components, Alternator , **36**
Components, Control Panel (Breaker Switch), **73**
Components, Control Panel (NIM), **71**
Components, Starter, **15**
Components, Water Pump, **34**
Components, Water Separator, **43**
Connector, Hose, **44**
Connector, Hose (Rear), **50**
Control Harness, **76**
Control, Box, **70**
Cooler, Oil, **18**
Cooling, Keel, **46**
Cord, Glow Plug, **26**
Coupling, Flexible, **52**
Cover, **70**
Cover, Access, **63**
Cover, Access (Housed Only), **61 , 62**
Cover, Bearing Case, **16**
Cover, Box, **70**
Cover, Breather, **30**
Cover, Cylinder Head, **30**
Cover, Enclosure (Rear), **60**
Cover, Flywheel, **13**
Cover, Flywheel Housing, **13**
Cover, Fuel Camshaft, **28**
Cover, Gear Case, **29**
Cover, Governor Rod, **22**
Cover, Hydraulic Pump, **49**
Cover, Injection Pump, **28**

Cover, Oil Pump, **29**
Cover, Plate, **48**
Cover, Thermostat, **33**

D

Dipstick, **17**
Door, **64**
Drive, Auxiliary (Sea Water Pump), **49**

E

Elbow, Exhaust (Wet), **53**
Elbow, Street Pipe, **39**
Element, Breather, **30**
Element, Water Separator, **43**
Endbell, **68**
Engine, Replacement, **7**
Exchanger, Heat, **45**
Exhaust, Bulkhead, **54**

F

Filter, Fuel, **38 , 79**
Filter, Oil, **79**
Flange, Water Outlet, **33**
Flywheel, **13**

G

Gasket, **25 , 29 , 33**
Gasket, Crankcase, **29**
Gasket, Cylinder Head, **8**
Gasket, Enclosure, **63**
Gasket, Exhaust Manifold, **53**
Gasket, Governor Housing, **23**
Gasket, Head Cover, **30**
Gasket, Injection Pump, **28**
Gasket, Injection Pump Base, **28**
Gasket, Injection Pump Cover, **28**
Gasket, Shaft Cover, **28**
Gasket, Water Pump, **47 , 48**
Gauge, Oil, **17**

Index

Gear, Camshaft, **10**
Gear, Crankshaft, **9**
Gear, Injection Pump, **28**
Gear, Ring, **13**
Gearcase Assy, **29**
Generator, **68**
Governor, Mechanical, **22**
Ground, Isolated, **56**
Guard, Belt, **59**
Guard, Belt W/O PTO, **58**
Guard, Coupling, **59**
Guard, Coupling (PTO), **66**
Guard, PTO (Front), **66**
Guide, Card, **70**
Guide, Exhaust Valve, **11**
Guide, Inlet Valve, **11**
Guide, Oil Gauge, **17**

H

Hanger, Coolant Recovery Tank, **51**
Harness, Accessory, **70**
Harness, Battery, **61 , 62**
Harness, Battery (Front Bulkhead), **61**
Harness, Battery (Rear Bulkhead), **62**
Harness, Control , **76**
Harness, Ground, **56**
Harness, Junction, **78**
Harness, Remote Control Panel, **74**
Harness, Remote Extension, **78**
Harnesses, **77**
Head, Cylinder, **8**
Holder, Nozzle, **27**
Hose, Fuel, **40 , 41**
Hose, Intake, **31**
Housing Assy, Injection Pump, **28**
Housing, Flywheel, **13**
Housing, Generator, **60**
Housing, Governor, **22**
Housing, Injection Pump, **28**
Housing, Main Bearing, **16**

I

Impeller, Water Pump, **47**
Injection, Fuel, **26**
Instalation Roof (End), **65**
Insulation, Cover, **60**
Insulation, Duct, **65 , 66**
Insulation, Panel, **60**
Insulation, Roof, **63**
Insulation, Sound, **64 , 66**
Intake, **31**
Isolation, Vibration, **70**
Isolator, Mounting, **57**

J

Joint, Breaher, **32**
Joint, Breather Pip, **30**
Joint, Breather Pipe, **34**
Joint, Water Pipe, **34**

K

Kit Holder, Nozzle, **27**
Kit, Adapter Fuel (5/16 ID Hose), **39**
Kit, Control Panel, **72**
Kit, Coolant Recovery, **51**
Kit, Cruise, **79**
Kit, Exhaust (Adapter w/ Elbow), **53**
Kit, Exhaust (Adapter,No Elbow), **53**
Kit, Exhaust (Water Seperator), **55**
Kit, Exhaust (Wet, Front Out), **53**
Kit, Exhaust (Wet, Rear Out), **53**
Kit, Fitting Adapter, **39**
Kit, Fuel Adapter, **39**
Kit, Fuel Filter, **39**
Kit, Generator Heater, **68**
Kit, Holder Nozzle, **26**
Kit, Hose (Raw Water Front), **50**
Kit, Hose (Raw Water Rear), **50**
Kit, Impeller Service, **47 , 48**

Index

Kit, Muffler/Water Separator, **55**
Kit, PCB (J1939 No Cover), **70**
Kit, PCB (SmartCraft No Cover), **70**
Kit, PTO, **52**
Kit, Pump Repair , **47 , 48**
Kit, Remote Control Panel, **74**
Kit, Remote Control Panel Switch Harness, **74**
Kit, Remote Fuel/Water Separator, **42**
Kit, Siphon Break, **44**
Kit, Sound Shield (Full), **63**
Kit, Sound Shield (PTO), **66**
Kit, Terminal Boot, **61**
Kit, Water Separator Metal Bowl Replacement, **43**
Kit, Water Separator O'Ring , **43**
Kits, **79**

L

Label, Control , **73**
Labels, **79**
Latch, Door, **64**
Lever, Engine Stop, **22**
Lever, Speed Control, **22**
Lever, Stop, **22**
Lever, Mechanical Governor Fork, **23**
Lines, Fuel Transfer (Front), **40**
Lines, Fuel Transfer (Rear), **41**

M

Manifold Assy. (Exhaust), **53**
Manifold, Exhaust, **53**
Manifold, Intake, **32**
Meter, Hour, **73**
Mounting, Governor, **20**
Muffler, **55**

P

Pan, Oil, **19**
Panel, Access, **60 , 64**
Panel, Air Baffle, **60**
Panel, Control, **73**

Panel, Control(Gnd), **73**
Panel, Duct, **65 , 66**
Panel, Enclosure, **60 , 66**
Panel, Enclosure (Front), **65**
Panel, Housing, **60**
Panel, Remote Control, **74 , 74**
Panel, Roof, **63**
Panel, Roof (End), **65**
PCB Assy, Control, **60**
Pickup, Oil, **19**
Piece, Nozzle, **27**
Pin, Cylinder Block Straight, **7**
Pin, Piston, **9**
Pin, Spring, **11**
Pipe, Injection, **26**
Pipe, Water Return, **33**
Piston, **9**
Plug, Cylinder Block, **7**
Plug, Hole, **70**
Plug, Oil Filler, **30**
Plug, Water Outlet Flange, **33**
Plug, Water Separator, **43**
PTO, **52**
PTO Belt Guard, **59**
Pulley, Alternator, **37**
Pump Assy., Water, **34**
Pump, Comp. Base Hydraulic, **49**
Pump, Electric Fuel, **39**
Pump, Injection, **25**
Pump, Injection , **25**
Pump, Sea Water, **47 , 48**

R

Relay, Isolated Ground Solenoid, **56**
Relay, SPDT (12V), **70**
Relay, SPDT (24V), **70**
Resonator, Air Intake, **31**
Retainer, Spring, **11**
Retainer, Valve Spring, **11**
Ring, Retaining, **47 , 48**
Rivet, Drive Plastic, **71**

Index

Rod, Push, **10**
Rotor, Exciter, **68**

S

Screw, Adjusting, **11**
Seal, Heat, **26**
Seal, Oil, **16**
Seal, Shaft, **47 , 48**
Seal, Valve Stem, **11**
Seal, Weather, **64**
Separator, Fuel/Water, **55**
Separator, Remote Fuel/Water, **42**
Separator, Remote Fuel/Water Separator, **42**
Separator, Water, **55**
Set, Regulator, **36**
Set, Ring, **9**
Shaft, **48**
Shaft, Fork Lever, **23**
Shaft, Idle Gear, **10**
Shaft, Valve, **11**
Shield, Breather, **30**
Shield, Engine Panel Sound, **64**
Shield, Panel Engine Sound (Front and Rear), **65**
Shield, Panel Engine Sound (Front w/PTO), **66**
Shield, Sound, **63**
Shim, Injection Pump Mounting, **25**
Siphon, Break, **44**
Slinger, Water Pump, **47**
Socket, Relay, **76**
Spacer, **48**
Spacer, Alternator, **37**
Spacer, Guard, **58 , 59**
Spacer, Water Pump, **47 , 48**
Spring, **11**

Spring, Governor, **23**
Spring, Nozzle, **27**
Spring, Return, **22**
Spring, Stop Lever, **23**
Spring, Valve, **11**
Spring, Valve Seat, **29**
Standoff, Insulation, **70**
Starter, **14**
Starter Assy, **14**
Stator, Generator, **68**
Stopper, Camshaft, **10**
Stopper, Fuel Camshaft, **28**
Strap, Bond, **70**
Supply, Fuel, **39**
Switch, Pressure, **45 , 46**
Switch, Remote Control Panel Rocker (S11), **74**
Switch, Rocker, SPDT, **73**
Switch, Temperature (Wet), **53**

T

Tank, Coolant Recovery, **51**
Tappet, **10**
Tube, Breather, **30**


V

Valve, Check, **44**
Valve, Exhaust, **11**
Valve, Inlet, **11**
Valve, Relief, **29**

W

Water Inlet, **50**
Weight, Governor, **22**

Cylinder Block

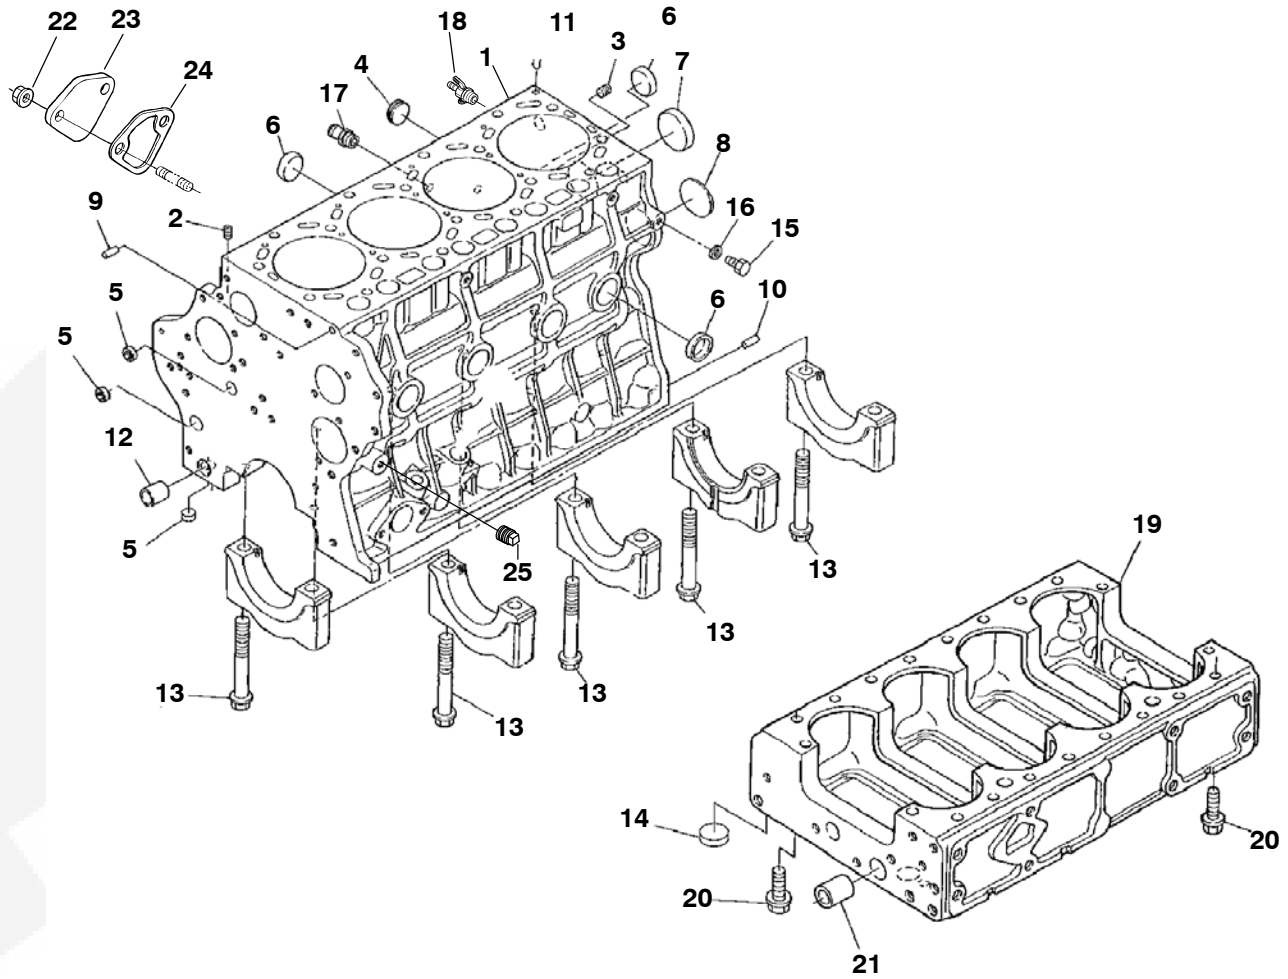


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
			Engine, Replacement				
	100-3977-01	1	12V (Spec A)	14	185-5840	1	#Cap, Sealing
	100-3977-02	1	24V (Spec A)	15	185-5845	1	Plug
	A030U215	1	(Begin Spec B)	16	185-2338	1	Gasket
1	110-3977	1	Block Assy, Cylinder (Includes Parts Marked #)	17	502-1604	1	Joint, Water Pipe
2	185-2233	2	#Plug	18	504-0310	1	Valve, Ball
3	505-2371	1	#Plug	19	110-3980	1	Crankcase
4	185-6856	1	#Plug	20	800-6418	16	Bolt, Flange
5	185-2413	4	#Cap, Sealing	21	516-2117	1	Pin, Gear Case
6	185-5840	9	#Cap, Sealing	22	185-7166	2	Nut, Flanged
7	185-5841	1	#Cap, Sealing	23	185-5798	1	Cover
8	517-0404	1	#Plug, Expansion	24	185-6580	1	Gasket, Fuel Pump
9	516-2122	1	#Pin, Straight	25	185-5502	1	Plug
10	516-2123	4	#Pin, Straight				
11	185-5842	2	#Pin, Pipe				
12	516-2116	1	#Pin, Gear Case				
13	800-6405	10	#Bolt, Bearing Case				

- Parts included in Cylinder Block Assy.


* - Parts Included in Keel Cooling Kit Listed on Keel Cooling-Dry Exhaust Page.

Cylinder Head

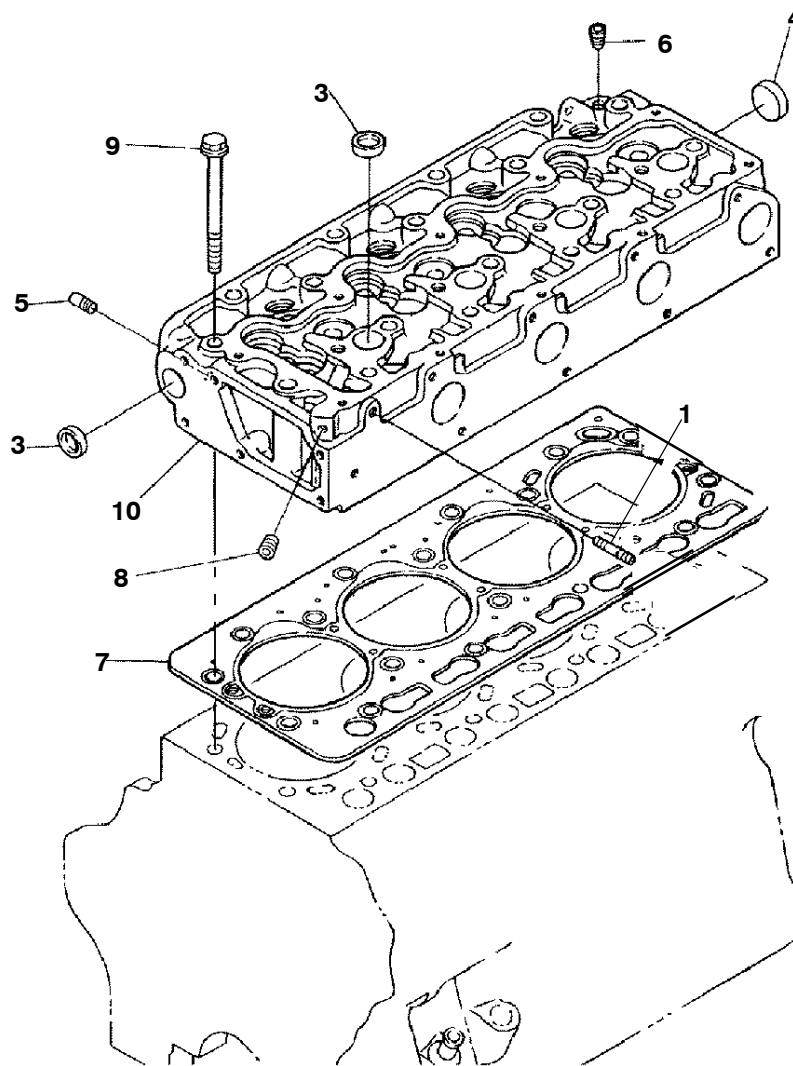


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-6033	1	#Stud	8	185-5502	1	Plug
2	110-3985	1	Assy ,Cylinder Head (Includes Parts Marked #)	9	800-6407	18	Bolt, Cylinder Head
3	185-5861	5	#Cap, Sealing	10	110-3986	1	#Head, Cylinder
4	185-2412	1	#Cap, Sealing	* - Parts Included in Cylinder Head Assy.			
5	185-2188	4	#Plug				
6	185-2233	1	#Plug				
7			Gasket, Cylinder Head				
	110-3976	1	0.90mm				
	110-3978	1	1.00mm				
	110-3979	1	1.05mm				

Piston

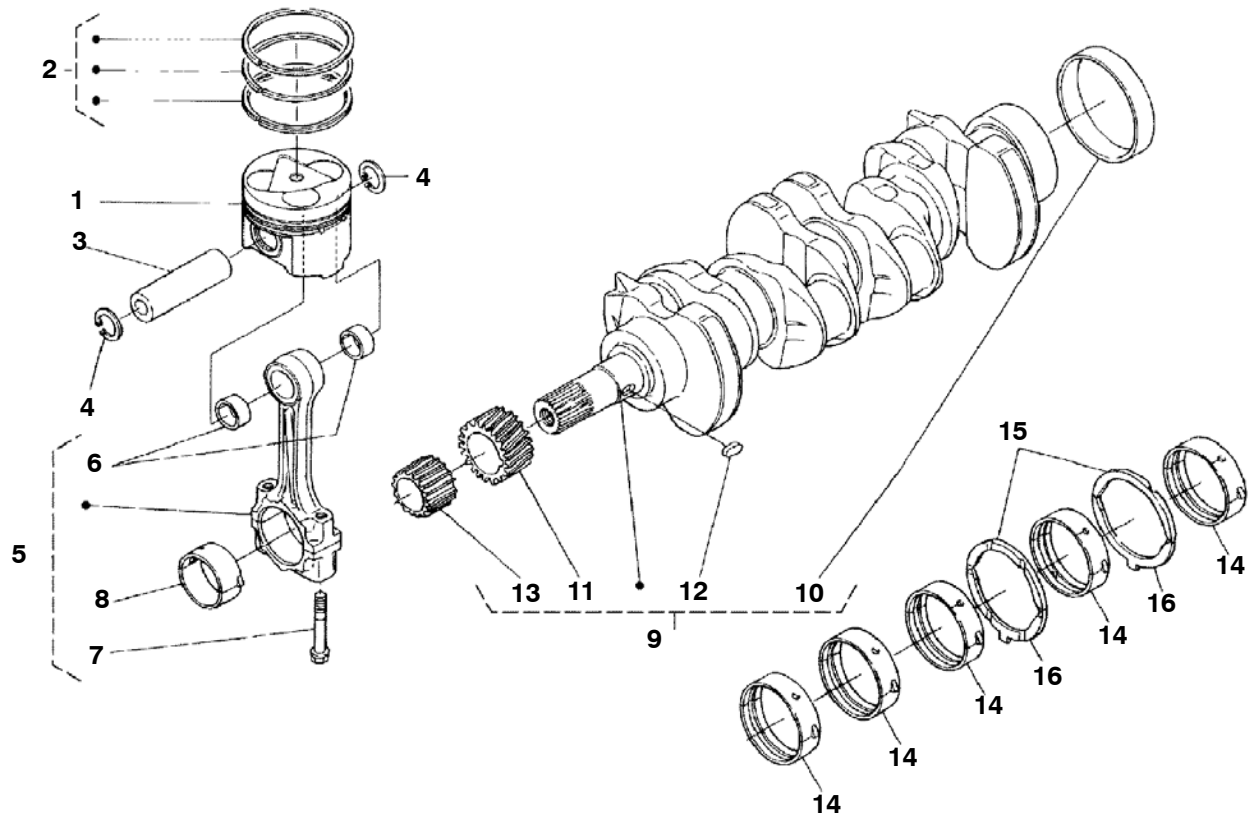

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	112-0311	4	Piston	10	104-2096	1	Sleeve, Crankshaft
	112-0310	4	Standard	11	507-0017	1	Gear, Crankshaft
2			Set, Ring	12	185-2353	1	Key, Feather
	541-1403	4		13	507-0020	1	Gear, Oil Pump Drive
	541-1402	4	Standard	14			Bushing, Crankshaft
3	112-0312	4	Pin, Piston		104-2088	5	Standard
4	518-0761	8	Circle Clip, Internal		104-2082	5	0.20 mm Oversize
5	114-0425	4	Rod Assy, Connecting (Includes Bushing, Bearing and Bolts)		104-2085	5	0.40 mm Oversize
6	510-0244	8	Bushing	15			Bushing
7	800-6406	8	Bolt, Connecting Rod		104-2086	2	Standard
8			Bushing		104-2080	2	0.20 mm Oversize
	114-0423	4	Standard		104-2083	2	0.40 mm Oversize
	114-0421	4	0.20 mm Oversize	16			Bushing
	114-0422	4	0.40 mm Oversize		104-2087	2	Standard
	114-0424	4	Standard		104-2081	2	0.20 mm Oversize
9	104-2092	1	Comp., Crankshaft		104-2084	2	0.40 mm Oversize

Camshaft

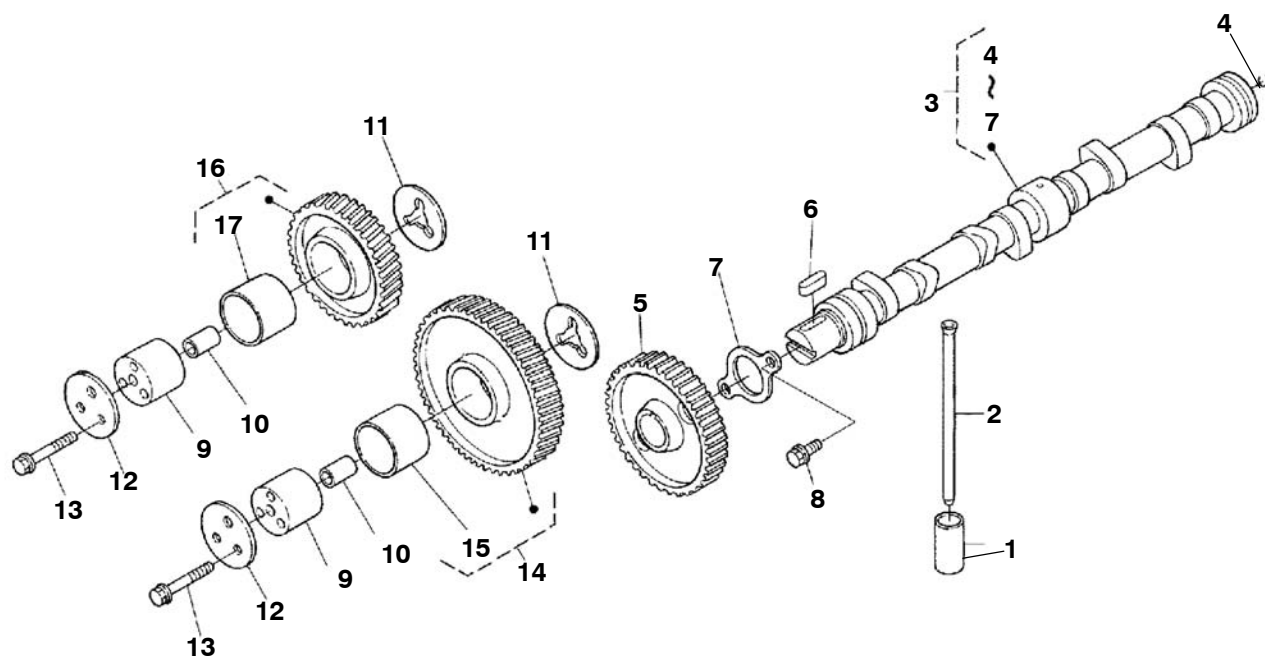


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	185-5900	8	Tappet
2	115-0527	8	Rod, Push
3	105-0746	1	Camshaft Assy (Includes Parts Marked *)
4	105-0748	1	*Ball
5	507-0016	1	*Gear, Camshaft
6	185-2354	1	*Key, Feather
7	518-0769	1	*Stopper, Camshaft
8	185-2826	1	*Bolt, Flange
9	120-1369	2	*Shaft, Idle Gear
10	516-2118	2	Pin, Gear Idle
11	406-1170	2	Collar, Idle Gear

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12	406-1171	2	Collar, Idle Gear
13	800-6335	6	Bolt, Flange
14	507-0014	1	Comp. Gear, Idle
15	510-0243	1	Bush, Idle Gear
16	507-0013	1	Comp. Gear, Idle
17	510-0243	1	Bush, Idle Gear


* - Parts Included in Camshaft Assy

Rocker Arm

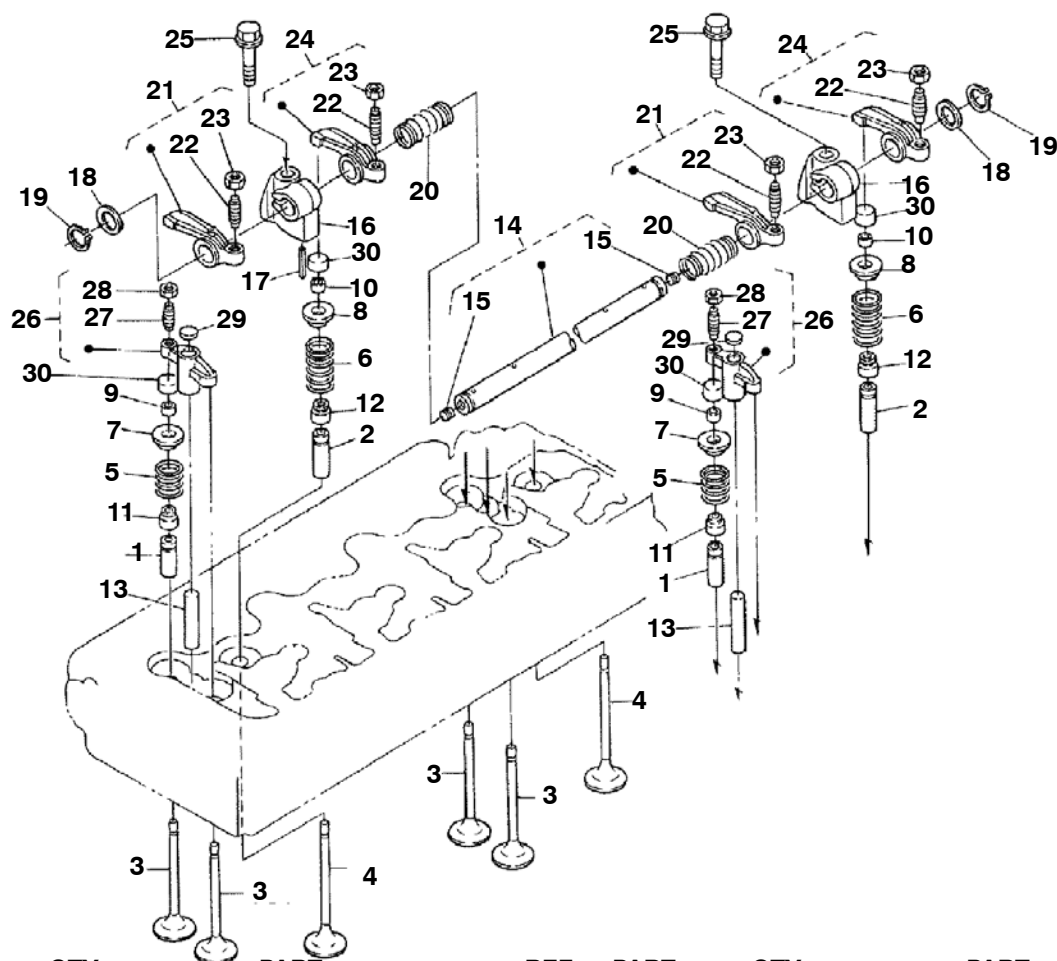

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	110-3960	8	Guide, Inlet Valve	17	185-6749	1	Pin, Spring
2	185-5863	4	Guide, Exhaust Valve	18	526-2343	2	Washer
3	110-3984	8	Valve, Inlet	19	518-0766	2	Circular Clip, External
4	110-3983	4	Valve, Exhaust	20	506-0043	3	Spring
5	110-3982	8	Spring, Valve	21	115-0520	4	Assy Rocker Arm Internal
6	185-6016	4	Spring, Valve	22	185-6029	8	Screw, Adjusting
7	110-3959	8	Retainer, Spring	23	185-6030	8	Nut
8	185-6017	4	Retainer, Valve Spring	24	115-0521	4	Assy Rocker Arm, Exhaust
9	185-2077	8	Collet, Valve Spring	25	800-6420	4	Bolt, Flange
10	110-3948	4	Collet, Valve Spring	26	115-0519	4	Assy. Arm, Valve
11	185-7300	8	Seal, Valve Stem	27	800-6429	4	Screw, Adjustment
12	110-3975	4	Seal, Valve Stem	28	185-6695	4	Nut
13	115-0524	4	Shaft, Valve	29	517-0406	4	Pad
14	115-0522	1	Assy. Shaft, Rocker Arm	30	185-6019	4	Cap, Valve
15	803-2013	2	Screw, Set				
16	115-0526	4	Bracket, Rocker Arm				


Balancer

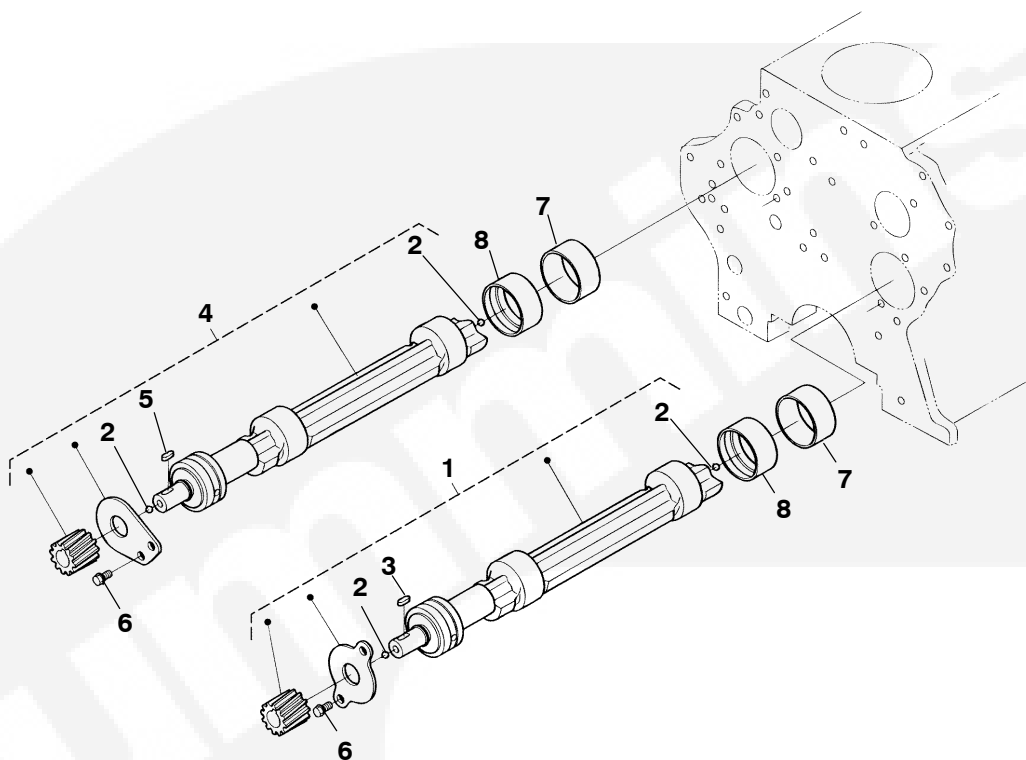

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	104-2090	1	Assy Shaft, Balancer
2	185-5924	4	Ball
3	515-0321	1	Key, Feather
4	104-2089	1	Assy Shaft, Balancer

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	515-0321	1	Key, Feather
6	185-2826	4	Bolt, Flanged
7	510-0241	2	Metal, Balancer
8	510-0242	2	Metal, Balancer


Flywheel

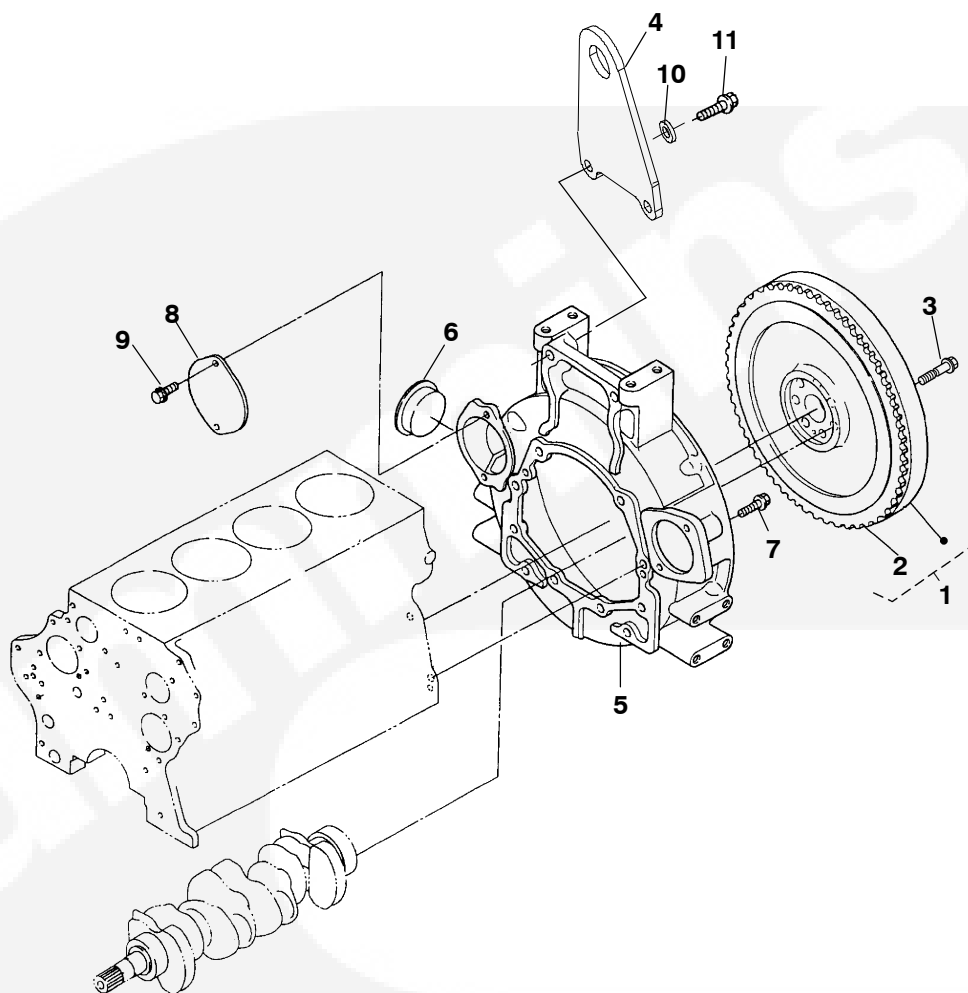

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	104-2095	1	Flywheel Assy (Includes Ring Gear)	9	800-6417	2	Bolt, Flange
2	507-0021	1	Gear, Ring	10	526-0399-73	2	Washer, Flat (M12)
3	800-6423	7	Bolt, Flywheel	11	800-6392	2	Screw, Hex Head (M14 x 1.5 x 60mm)
4	403-6089-03	1	Bracket, Engine (Lifting)				
5	104-2091	1	Housing, Flywheel				
6	104-2094	1	Cover, Flywheel				
7	800-6422	10	Bolt, Flange				
8	104-2093	2	Cover, Flywheel Housing				

* - Engine Bracket Mounted with embossed "M" faces flywheel.


Starter

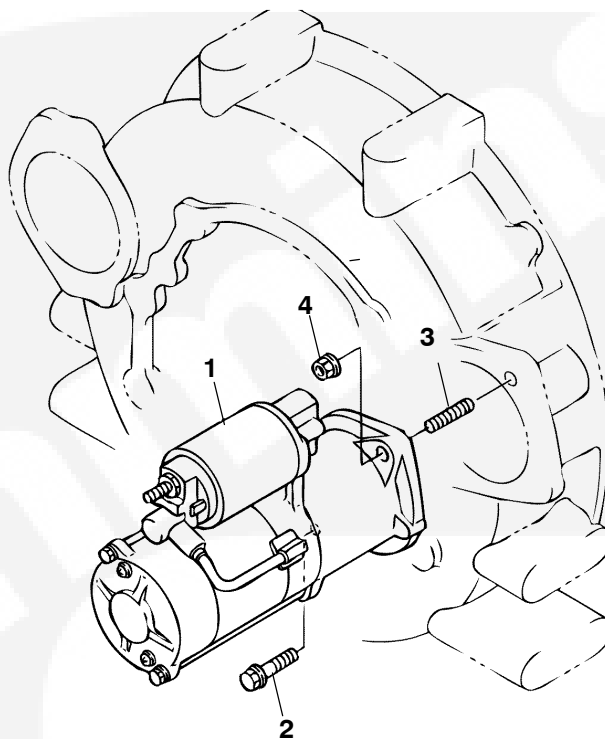

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Starter Assy	2	800-6419	1	Bolt, Flange
	191-2422	1	12V	3	520-2674	1	Stud
	191-2423	1	24V	4	860-2084	1	Nut, Flanged




Starter Components (12V and 24V)

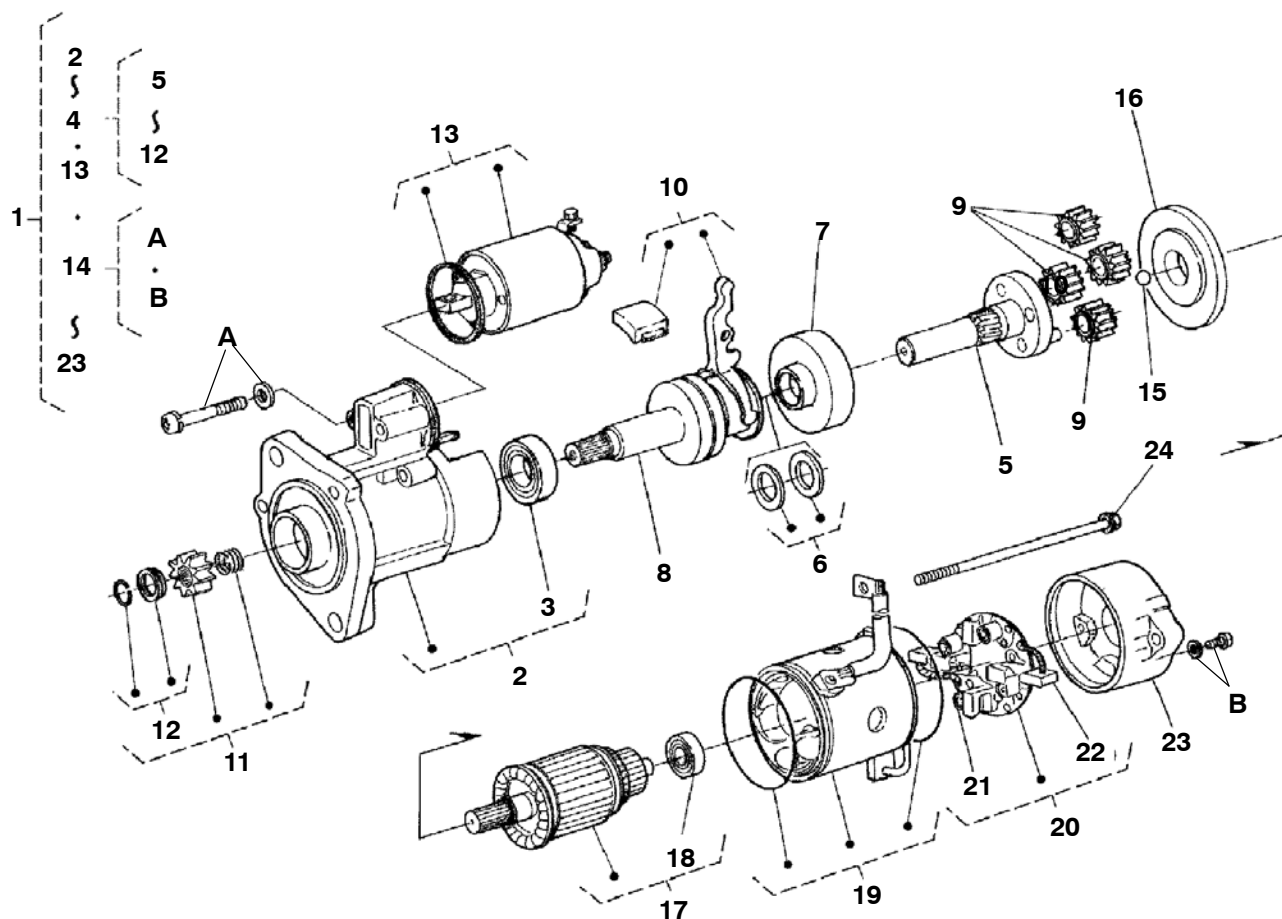

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Assy., Starter	14	803-2014	1	Set, Screw
	191-2422	1	12V	15	191-2447	1	Ball
	191-2423	1	24V	16	191-2443	1	Packing, Set
2			Bracket Assy., Front	17			Assy. Armature
	191-2428	1	12V		191-2425	1	12V
	191-2431	1	24V		191-2426	1	24V
3	510-0235	1	Set, Bearing	18	510-0236	1	Bearing
4			Shaft Assy., Clutch	19			Assy Yoke
	191-2440	1	12V		191-2435	1	12V
	191-2441	1	24V		191-2436	1	24V
5	191-2442	1	Shaft Assy., Gear	20			Holder Assy., Brush
6	526-2345	1	Set, Washer		212-1311	1	12V
7			Set, Internal Gear		212-1312	1	24V
	507-0022	1	12V	21	506-0044	4	Brush, Spring
	507-0023	1	24V	22			Brush
8	190-0887	1	Clutch, Over Running		191-2429	2	12V
9	507-0015	4	Assy. Gear		191-2430	2	24V
10	191-2444	1	Assy Lever, Set	23	191-2439	1	Bracket Assy., Rear
11	191-2445	1	Set, Pinion	24	800-6426	1	Set, Bolt
12	518-0770	1	Set, Stopper				
13			Switch Assy., Magnetic				
	307-3124	1	12V				
	307-3125	1	24V				

Main Bearing Housing

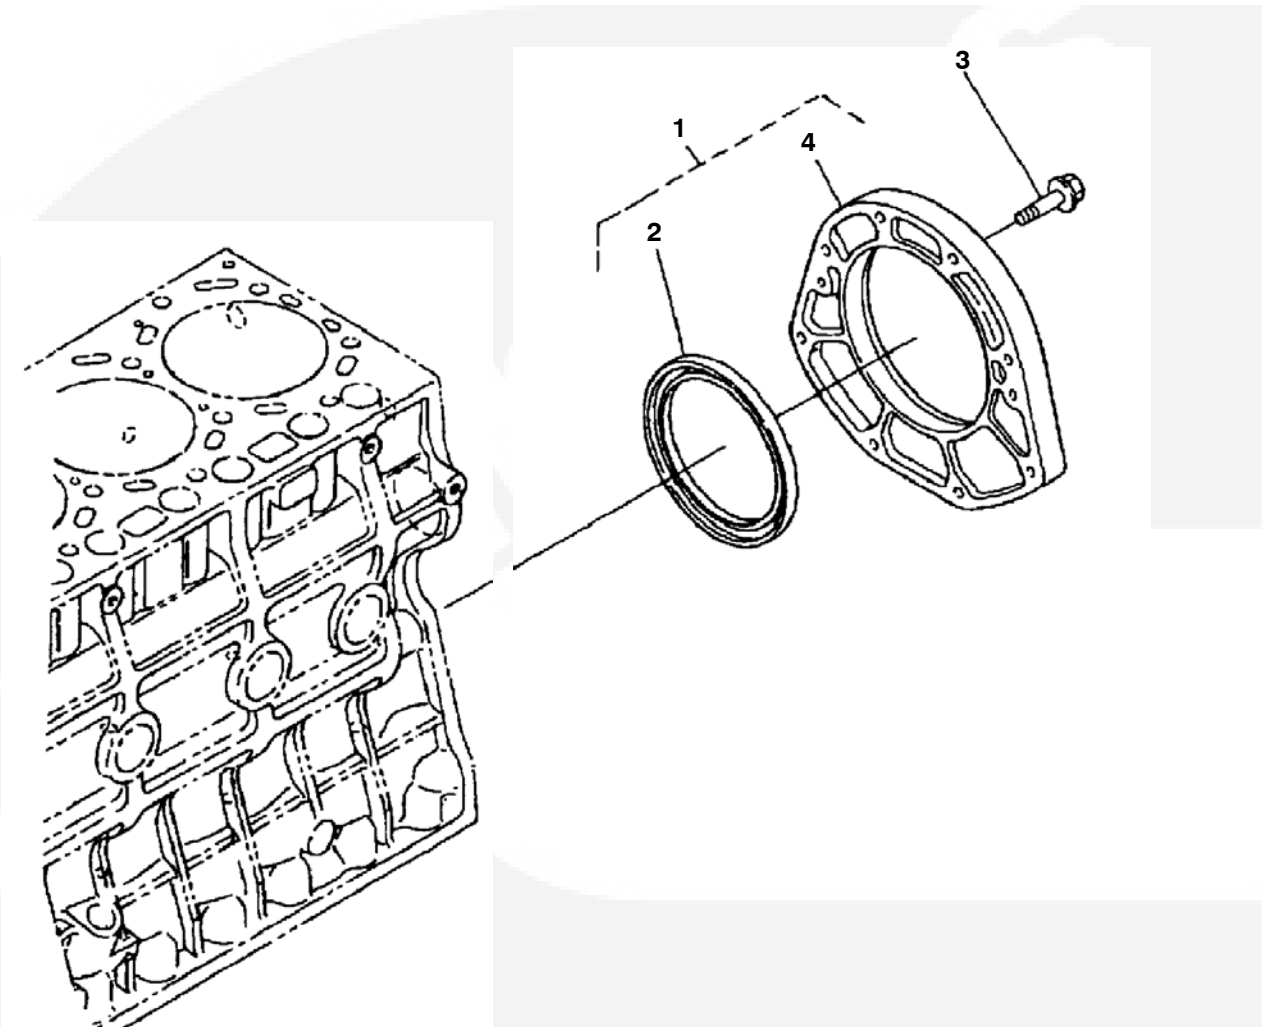


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	101-0851	1	Assy Cover, Bearing Case
2	509-0460	1	Seal, Oil

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	800-6334	8	Bolt, Flange
4	101-0852	1	Cover, Bearing Case




Oil Gauge

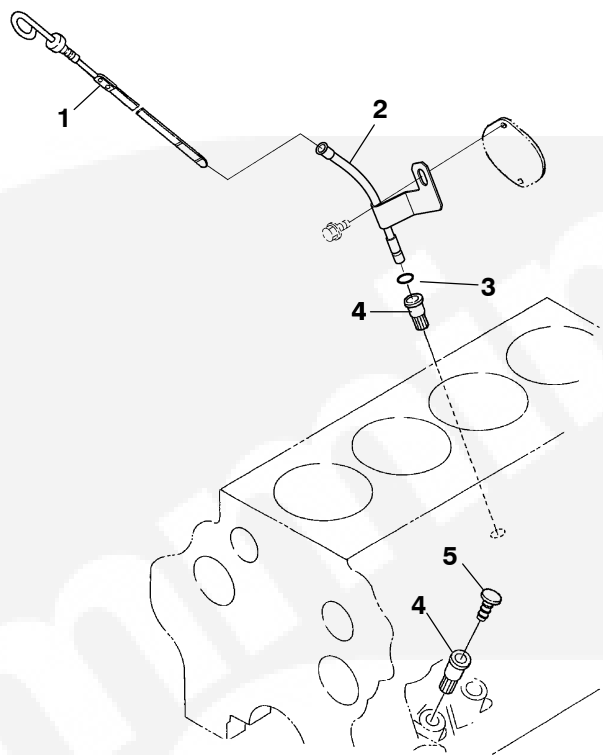

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	A030U213	1	Engine, Diesel (not shown)	3	A006A539	1	*Seal, O'Ring
	A030U215	1	Engine, Diesel (not shown)	4	123-2331	2	Guide, Oil Gauge
	A030X276	1	Kit, Dipstick	5	517-0371	1	Plug, Oil Gauge
1	A030X272	1	*Dipstick	*Parts included in Dipstick Kit.			
2	A030X274	1	*Support Tube				




Oil Cooler

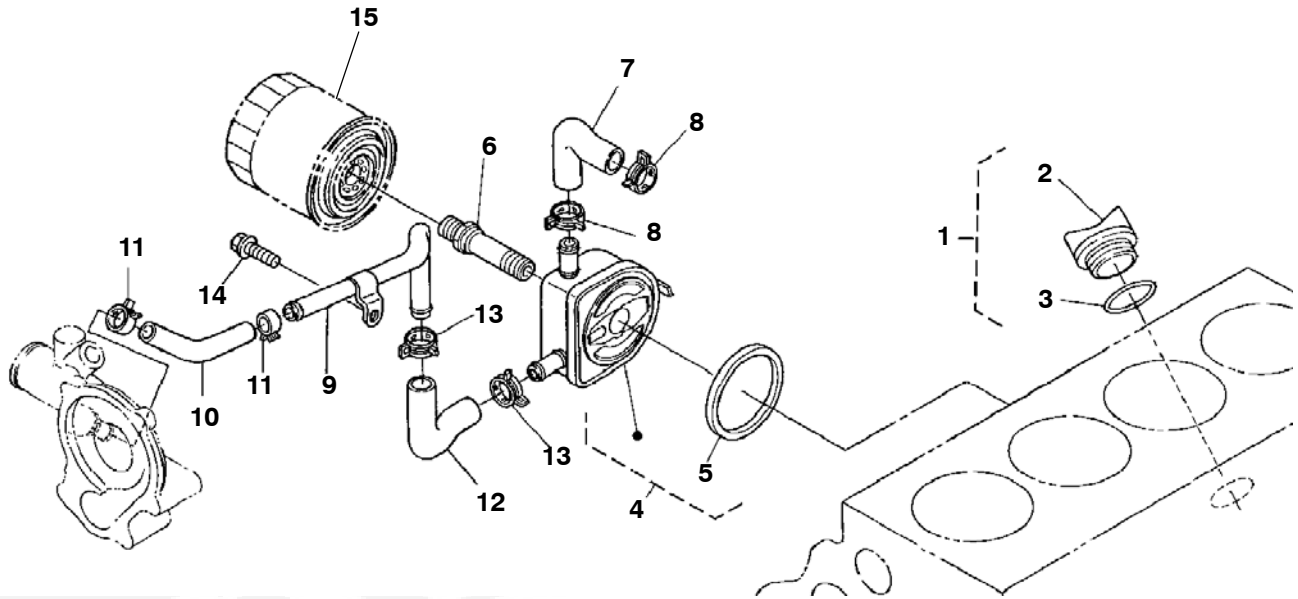

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	123-2328	1	Plug Assy., Oil Filler (Includes Parts Marked #)	9	130-7421	1	Pipe, Oil Cooler
2	123-2299	1	#Plug, Oil Filler	10	503-2903	1	Pipe, Oil Cooler
3	509-0414	1	#O'Ring	11	185-6722	2	Clamp, Hose
4	102-1533	1	Cooler Assy., Oil (Includes Housing and Gasket)	12	503-2904	1	Pipe, Oil Cooler
5	509-0468	1	Gasket, Oil Cooler	13	185-6722	2	Clamp, Hose
6	122-0907	1	Joint	14	185-2826	1	Bolt, Flange
7	503-2902	1	Pipe, Oil Cooler	15	122-0906	1	Filter, Oil
8	185-6722	2	Clamp, Hose				

- Parts included in Plug Assy.


Oil Pan

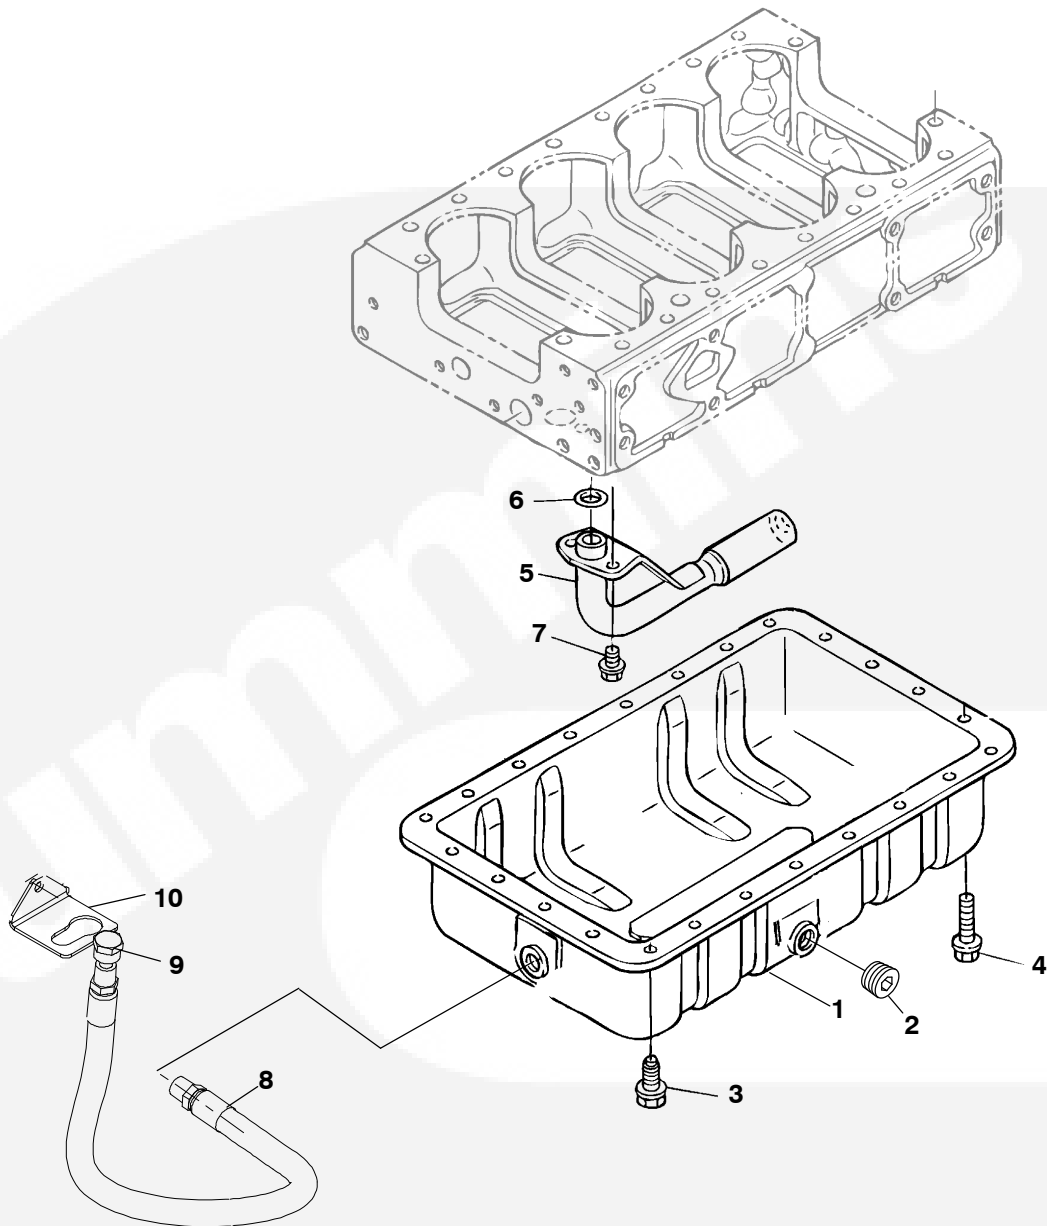

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	102-1532	1	Comp, Oil Pan
2	181-9230	1	Plug
3	800-6425	20	Bolt, Oil Pan
4	800-6416	4	Bolt, Flange
5	120-1368	1	Pickup, Oil


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	509-0464	1	O'Ring
7	185-2826	2	Bolt
8	501-0910	1	Hose Assy
9	502-1123	1	Cap, Pipe
10	120-1365-03	1	Bracket, Oil Drain

Governor Mounting

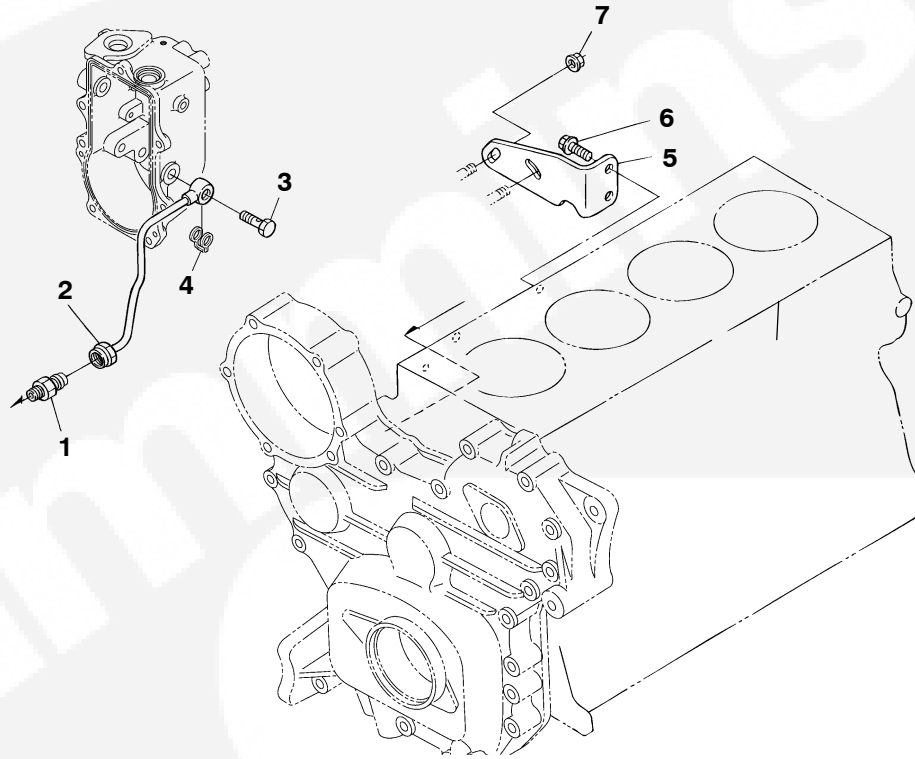

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-1603	1	Joint , Union	5	147-0913	1	Bracket, Pump
2	123-2336	1	Assy Pipe I P Oil	6	185-2826	2	Bolt, Flange
3	502-1608	1	Bolt, Eye Joint	7	185-7134	2	Nut, Flange
4	509-0474	1	Gasket				

Electronic Governor Actuator

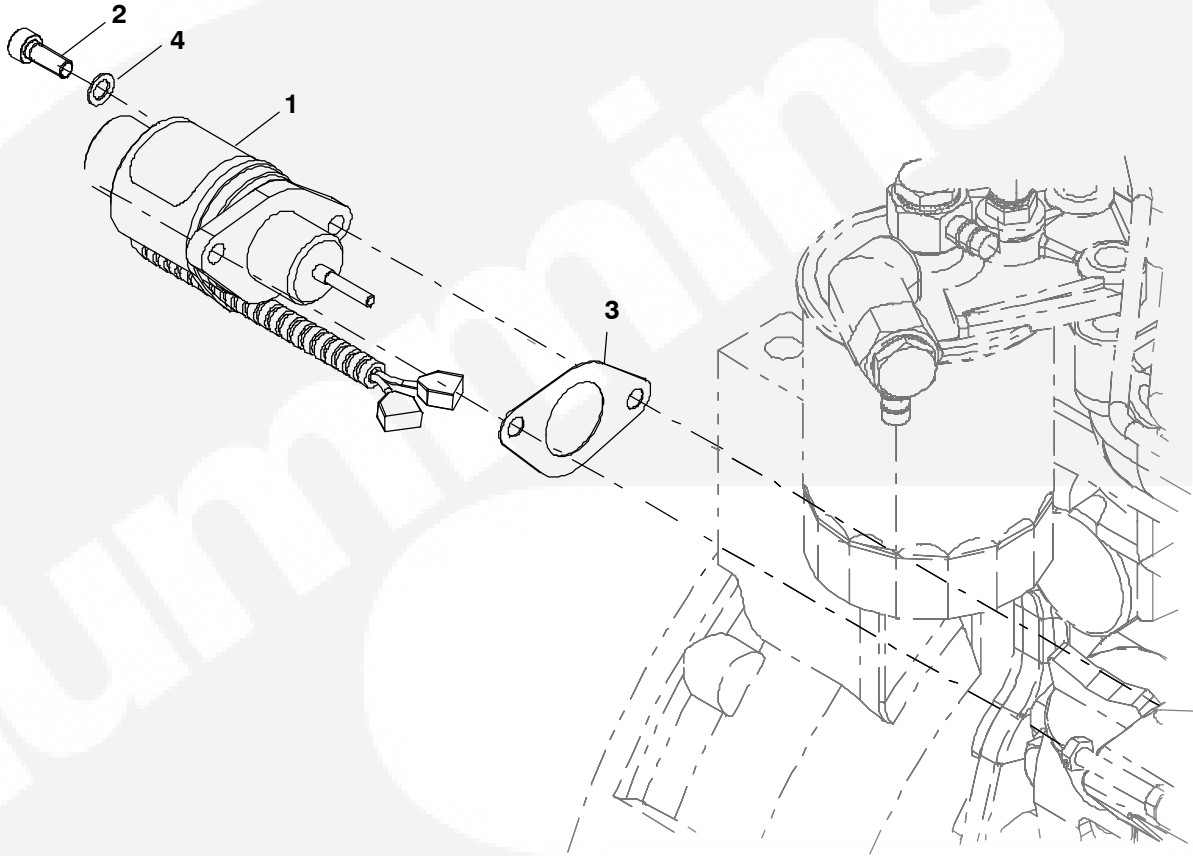


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	306-5289-01	1	Actuator 12V
	306-5289-02	1	24V
2	725-1028	2	Bolt, Hex Socket Head (M6 x 1 x 20mm)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	150-2918	1	Gasket
4	526-0063	2	Washer, Flat (1/2")




Mechanical Governor

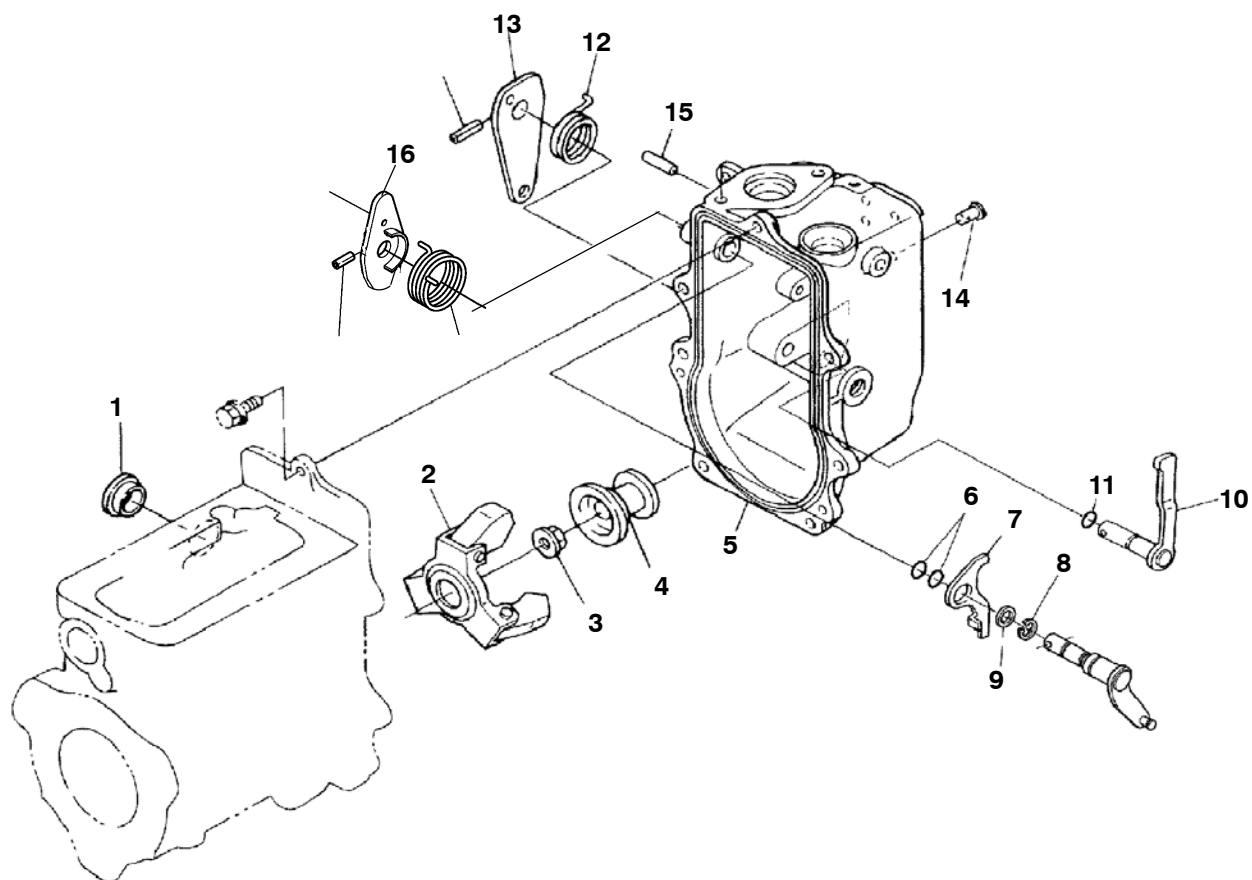

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2905	1	Cover, Governor Rod	9	185-6025	1	Washer, Rocker Arm Shaft
2	150-2903	1	Weight, Governor	10	150-2902	1	Assy Lever, Engine Stop
3	860-2084	1	Nut, Flange	11	184-0017	1	O'Ring
4	510-0232	1	Sleeve, Governor	12	506-0049	1	Spring, Return
5	150-2906	1	Housing, Governor	13	306-5250	1	Lever, Engine Stop
6	184-0017	2	O'Ring	14	516-2113	1	Pin, Start Spring
7	306-5251	1	Lever, Stop	15	516-2124	1	Pin, Straight
8	518-0765	1	Circular Clip, Ex	16	150-2919	1	Lever, Speed Control


Mechanical Governor Fork Lever

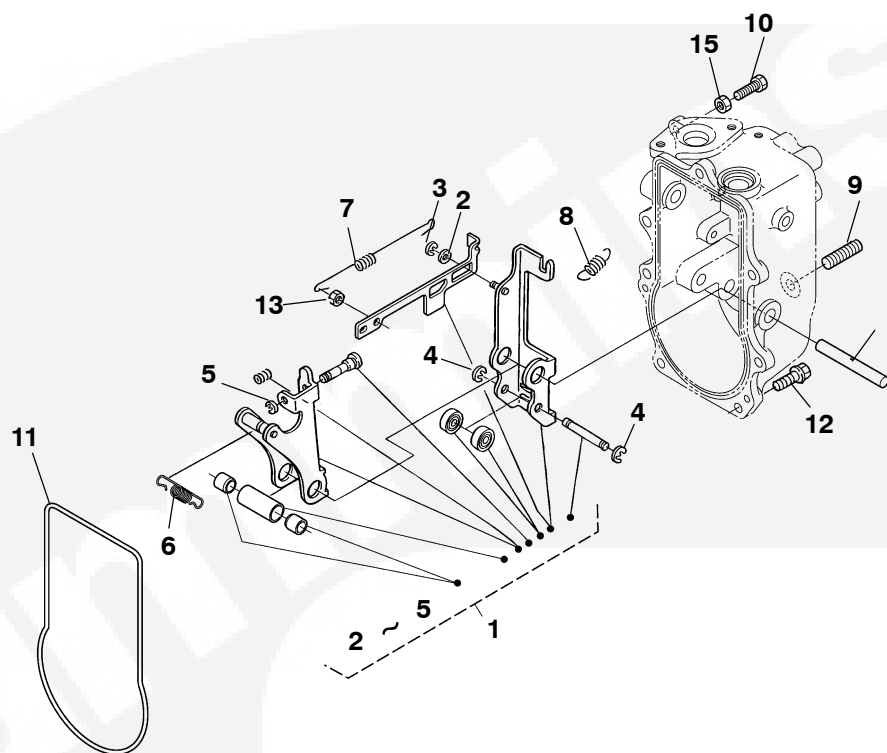

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2900	1	Assy Fork, Lever (Includes Parts Marked*)	10	185-4146	2	Stud
2	185-5145	1	*Washer, Plain	11	150-2904	1	Gasket, Governor Housing
3	518-0763	1	*Circular Clip Ex	12	800-6305	7	Bolt, Flange
4	185-2977	2	*Circular Clip Ex	13	860-2087	1	Nut, Lock
5	185-7090	1	*Circular Clip Ex	14	181-9205	1	Bolt
6	150-2907	1	Shaft, Fork Lever	15	181-9013	1	Nut
7	506-0047	1	Spring, Governor				
8	506-0046	1	Spring, Start				
9	506-0045	1	Spring, Stop Lever				


* - All parts marked included in Assembly.

Mechanical Governor Adjusting Bolt

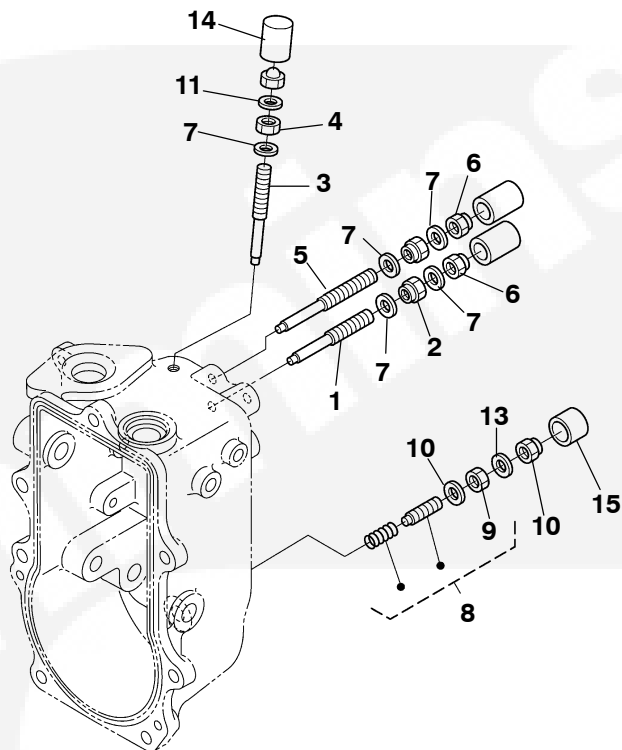


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	150-2910	1	Bolt Adjusting	9	185-2180	1	Nut
2	185-6931	1	Nut, Locking	10	185-2338	1	Gasket
3	150-2909	1	Bolt, Adjusting	11	185-2284	1	Gasket
4	185-6484	1	Nut	12	185-5681	1	Nut
5	150-2908	1	Bolt, Adjusting	13	185-2338	1	Gasket
6	185-6931	1	Nut, Locking	14	185-6930	1	Cap
7	860-2075	2	Nut	15	185-5682	1	Cap
8	185-2284	5	Gasket				

Injection Pump

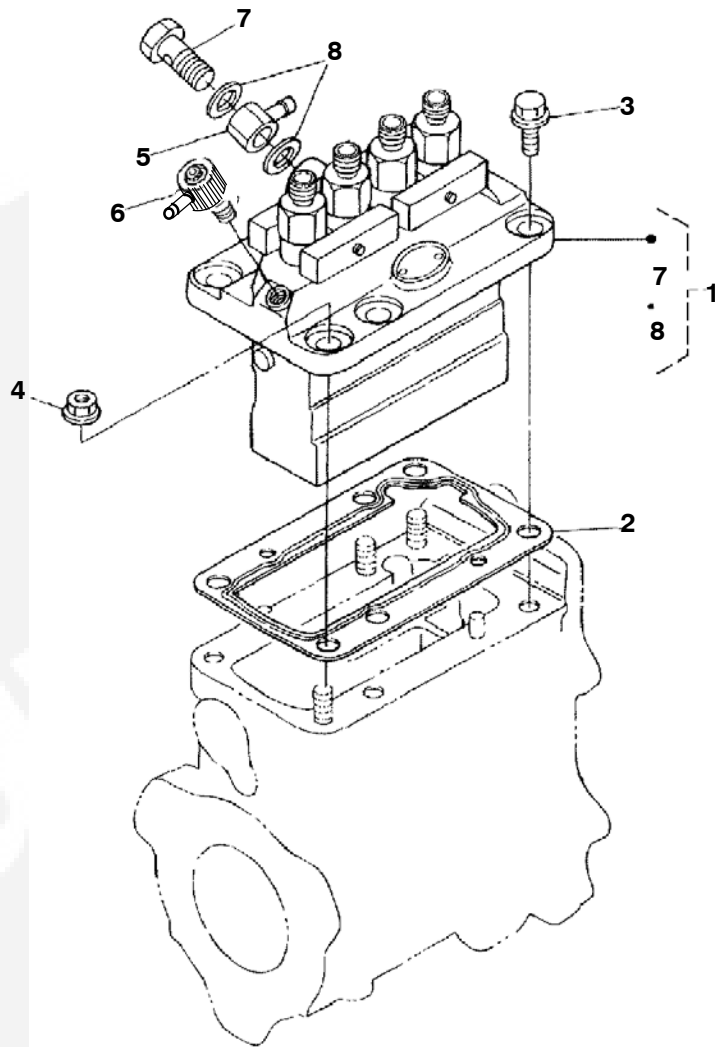


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	147-0907	1	Pump, Injection	5	185-5980	1	Joint, Eye
2	147-0910	1	Shim	6	505-2258	1	Pipe, Adapter
3	800-6410	3	Bolt, Flange	7	502-1609	1	Screw, Hollow
4	185-7134	3	Bolt	8	185-6154	1	Gasket

Fuel Injection

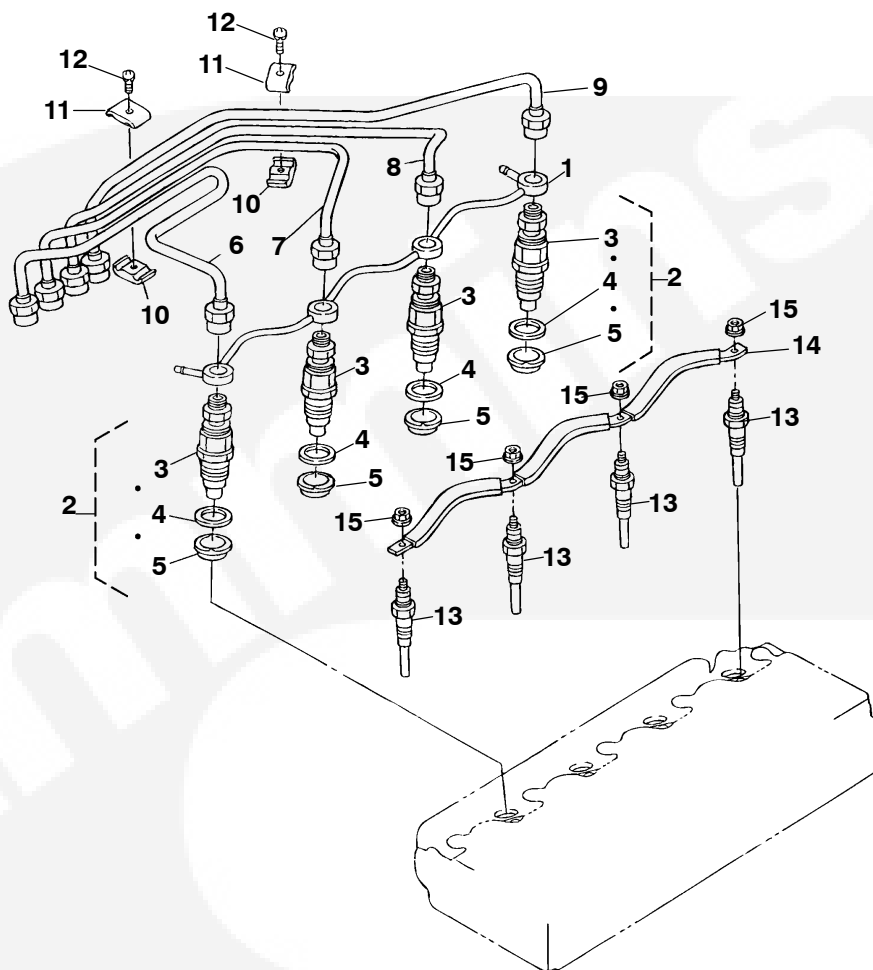


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	501-0981	1	Assy Pipe, Over Flow	10	185-5612	3	Clamp, Pipe
2	147-0909	4	Kit, Holder Nozzle	11	185-5613	3	Clamp, Pipe
3	147-0905	4	Assy Holder, Nozzle	12	185-2385	3	Screw, with Washer
4	185-5337	4	Gasket	13			Plug, Glow
5	185-5985	4	Seal, Heat		333-0745	4	12V
6	501-0982	1	Pipe, Injection		333-0746	4	24V
7	501-0983	1	Pipe, Injection	14	337-3926	1	Cord, Glow Plug
8	501-0984	1	Pipe, Injection	15	185-5615	4	Nut, Flange
9	501-0985	1	Pipe, Injection				

Nozzle Holder

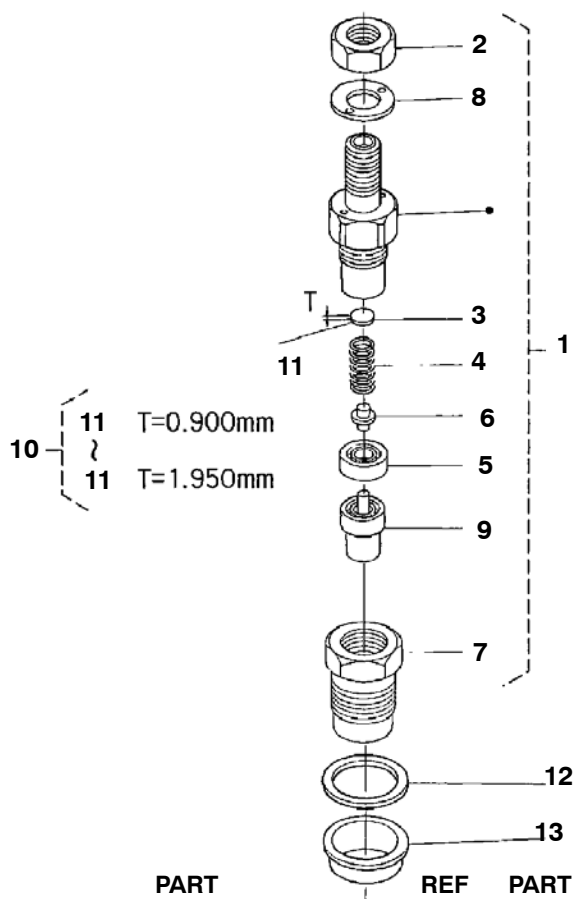

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	147-0909	4	Kit Holder, Nozzle (Includes Assembly, Gasket and Heat Seal)		185-5380	4	1.300mm
1	147-0905	4	Assy Holder, Nozzle		185-5381	4	1.325mm
2	185-5616	4	Nut		185-5382	4	1.350mm
3	185-5364	4	Washer, Adjusting		185-5383	4	1.375mm
4	506-0048	4	Spring, Nozzle		185-5384	4	1.400mm
5	185-5618	4	Piece, Distance		185-5385	4	1.425mm
6	185-5619	4	Push, Rod		185-5386	4	1.450mm
7	185-6825	4	Nut, Nozzle		185-5387	4	1.475mm
8	185-5621	4	Washer		185-5388	4	1.500mm
9	147-0914	4	Piece, Nozzle		185-5389	4	1.525mm
10	185-5363	4	Assy Washer, Adjust		185-5390	4	1.550mm
11			Washer, Adjusting		185-5391	4	1.575mm
	185-5364	4	0.900mm		185-5392	4	1.600mm
	185-5365	4	0.925mm		185-5393	4	1.625mm
	185-5366	4	0.950mm		185-5394	4	1.650mm
	185-5367	4	0.975mm		185-5395	4	1.675mm
	185-5368	4	1.000mm		185-5396	4	1.700mm
	185-5369	4	1.025mm		185-5397	4	1.725mm
	185-5370	4	1.050mm		185-5398	4	1.750mm
	185-5371	4	1.075mm		185-5399	4	1.775mm
	185-5372	4	1.100mm		185-5400	4	1.800mm
	185-5373	4	1.125mm		185-5401	4	1.825mm
	185-5374	4	1.150mm		185-5402	4	1.850mm
	185-5375	4	1.175mm		185-5403	4	1.875mm
	185-5376	4	1.200mm		185-5404	4	1.900mm
	185-5377	4	1.225mm		185-5405	4	1.925mm
	185-5378	4	1.250mm		185-5406	4	1.950mm
	185-5379	4	1.275mm	12	185-5337	4	Gasket
				13	185-5985	4	Seal, Heat


Injection Pump Housing

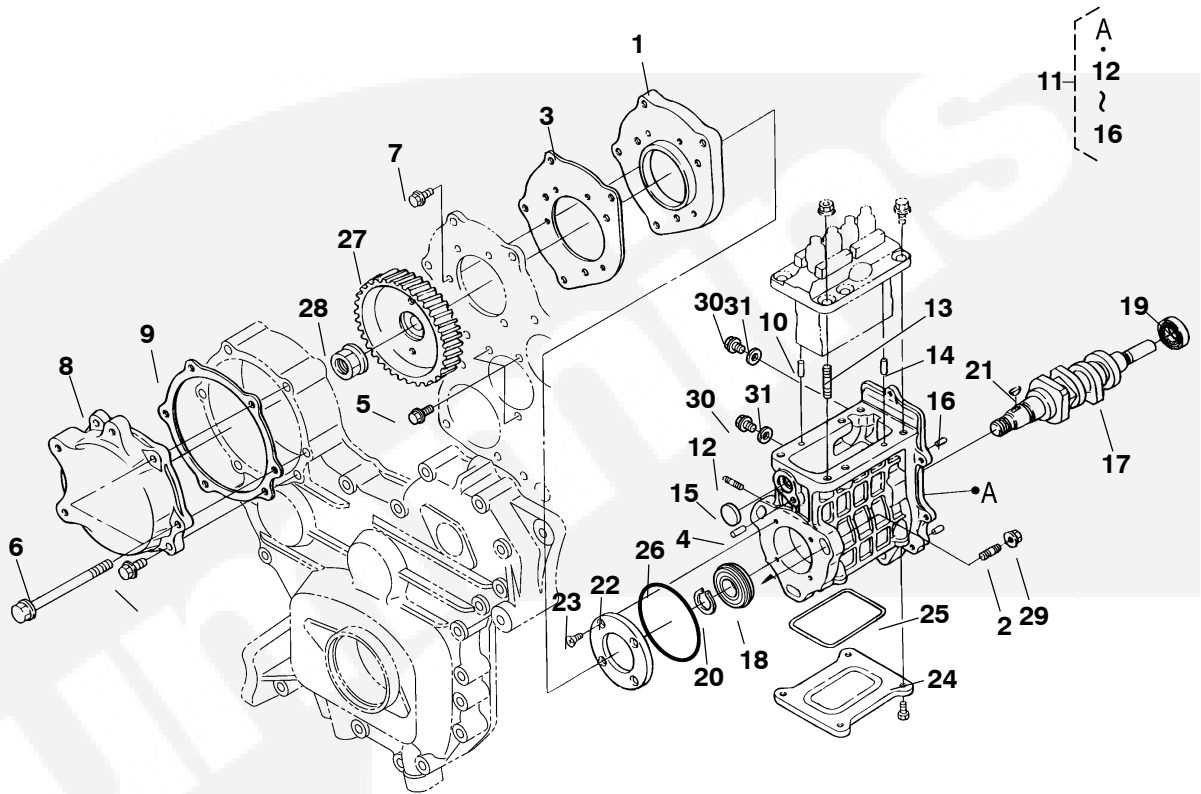

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	147-0911	1	Base, Injection Pump	18	510-0240	1	Bearing, Ball
2	520-2678	3	Stud	19	185-4710	1	Bearing, Ball
3	103-0839	1	Gasket, Injection Pump Base	20	185-2370	1	Circular Clip, External
4	185-3082	1	Pin, Straight	21	185-2759	1	Key, Woodruff
5	185-2826	3	Bolt, Flanged	22	510-0233	1	Stopper, Fuel Camshaft
6	800-6410	1	Bolt, Flanged	23	814-2158	4	Screw, Counter Sunk
7	800-6414	5	Bolt, Flanged	24	149-2818	1	Cover, Fuel Camshaft
8	800-6408	3	Bolt, Flanged	25	149-2820	1	Gasket, Shaft Cover
9	103-0837	1	Cover, Injection Pump	26	147-0908	1	Gasket, Injection Pump
10	103-0838	1	Gasket, Injection Pump Cover	27	507-0019	1	Gear, Injection Pump
11	147-0912	1	Housing Assy, Injection Pump (Includes Part Marked *)	28	860-2088	1	Nut, UBS
12	185-7425	2	*Stud	29	185-7134	3	Nut, Flanged
13	185-6048	3	*Stud	30	185-2826	2	Bolt, Flanged
14	185-2350	2	*Pin, Straight	31	185-2338	2	Gasket
15	517-0405	1	*Plug, Injection Pump Housing				
16	516-2119	2	*Pin, Straight				
17	105-0747	1	Camshaft, Fuel				

* - All Parts Included in Injection Pump Housing Assembly.


Gearcase

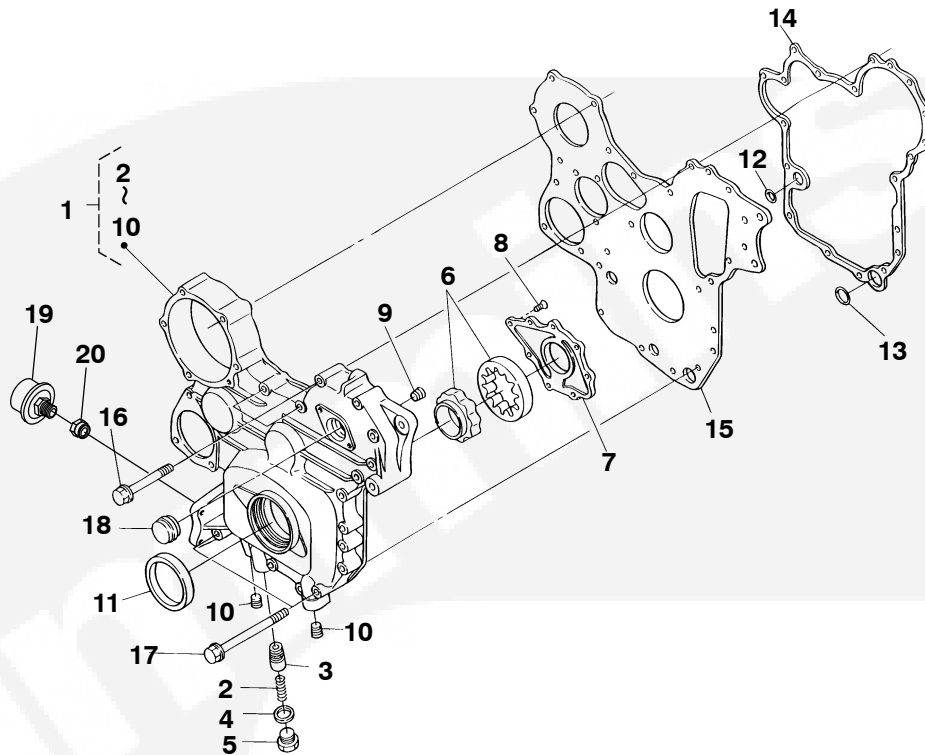

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	103-0836	1	Assy Case, Gear	14	101-0849	1	Gasket, Crankcase
2	506-0042	1	Spring	15	319-6748	1	Plate, Gear Case
3	504-0309	1	*Valve, Relief	16	800-6335	13	Bolt, Flange
4	185-5495	1	*Gasket	17	800-6414	2	Bolt, Flange
5	505-2384	1	*Plug	18	185-7216	1	Cover, Gear Case
6	120-1366	1	*Assy Rotor, Oil Pump	19			Sender, Oil Pressure
7	120-1367	1	*Cover, Oil Pump		193-0244	1	Neg Gnd
8	814-2158	8	*Screw, Countersunk		193-0430-01	1	ISO Gnd
9	505-2380	1	*Plug	20	502-0029-03	1	Bushing, Reducer
10	505-2383	2	Plug				
11	509-0461	1	Seal, Oil				
12	509-0463	1	O'Ring				
13	509-0465	1	O'Ring				


* - Parts Included in Gearcase Assy

Cylinder Head Cover

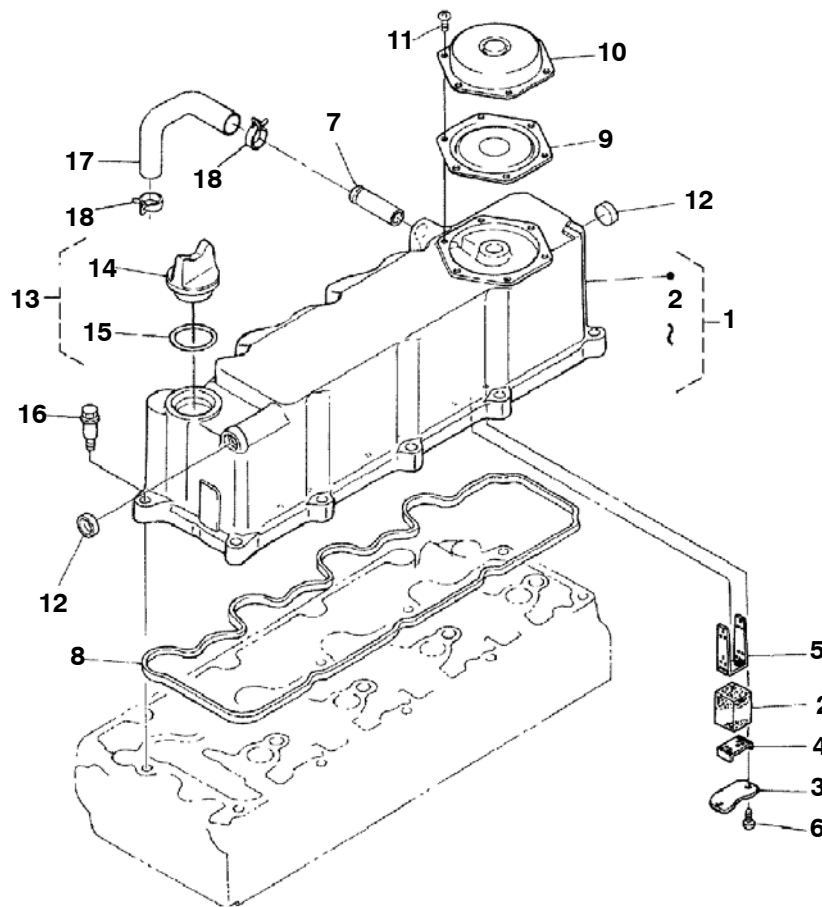

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	115-0523	1	Cover, Cylinder Head	10	123-2333	1	Cover, Breather
2	123-2327	3	Element, Breather	11	819-1171	6	Screw, Pan Head
3	123-2334	3	Shield, Breather	12	517-0402	2	Cap, Sealing
4	123-2337	3	Plate, Breather Element	13	123-2328	1	Assy Plug, Oil Filler
5	123-2338	3	Plate, Breather Element	14	123-2299	1	Plug, Oil Filler
6	819-1170	6	Screw, Pan Head	15	509-0414	1	O'Ring
7	185-6499	1	Joint, Breather Pipe	16	800-6403	10	Bolt
8	115-0525	1	Gasket, Head Cover	17	123-2335	1	Tube, Breather
9	123-2332	1	Comp., Valve Breather	18	503-2901	2	Band, Pipe


Intake

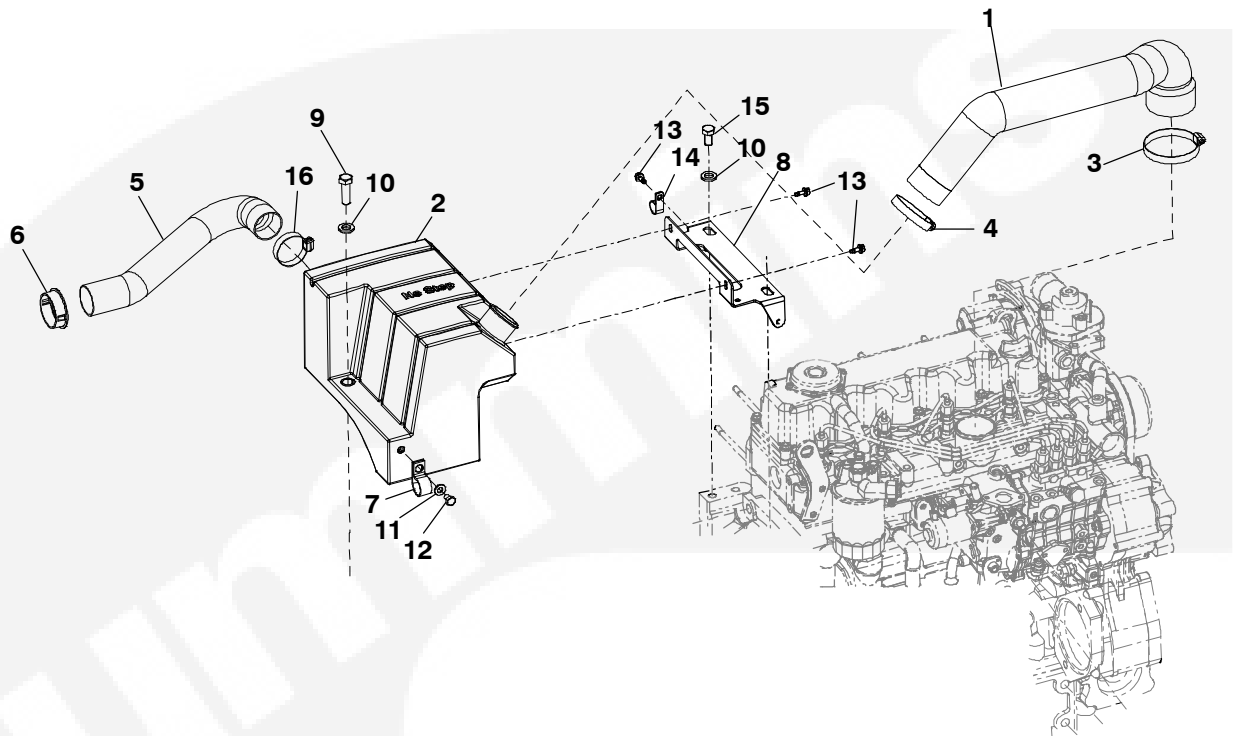

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-2782	1	Hose, Intake
2	140-3998	1	Resonator, Air Intake
3	503-1144	1	Clamp, Hose
4	503-1142	1	Clamp, Hose
5	503-2846-01	1	Hose, Intake
6	508-1278	1	Bushing (Nylon)
7	518-0548-35	1	Clamp, Hose
8	140-4025-03	1	Bracket, Air Silencer
9	800-0092-01	1	Screw, Hex Head Cap (1/2-13NC x1.5mm)
10			Washer, Flat (M12)
	526-0399-64	19	MDKBT and MDKBU
	526-0399-64	11	MDKBT and MDKBU W/PTO
11	526-0399-41	1	Washer, Flat DAC


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12	800-3017-17	1	Screw, Hex Head Cap (M8 x 1.25 x 12mm)
13	800-6395-01	4	Screw, Hex Head SEMS (M6 x 1.0 x 16mm)
14	518-0720	2	Clamp, Loop (3/4")
15	800-3025-01	2	Screw, Hex Head Cap (M12 x1.25 x 20mm)
16	503-1139	1	Clamp, Hose

Intake Manifold

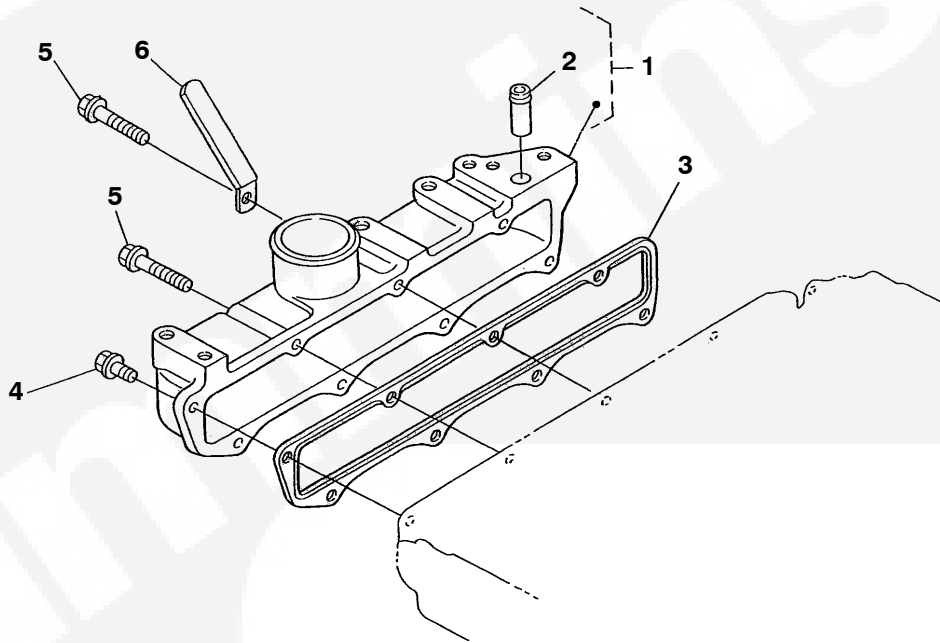


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	154-3232	1	Assy Manifold, Intake	4	800-6333	5	Bolt, Flange
2	185-6499	1	Joint, Breather	5	800-6413	3	Bolt, Flange
3	154-3225	1	Gasket	6	518-0771	1	Clamp, Cord

Water Outlet Flange

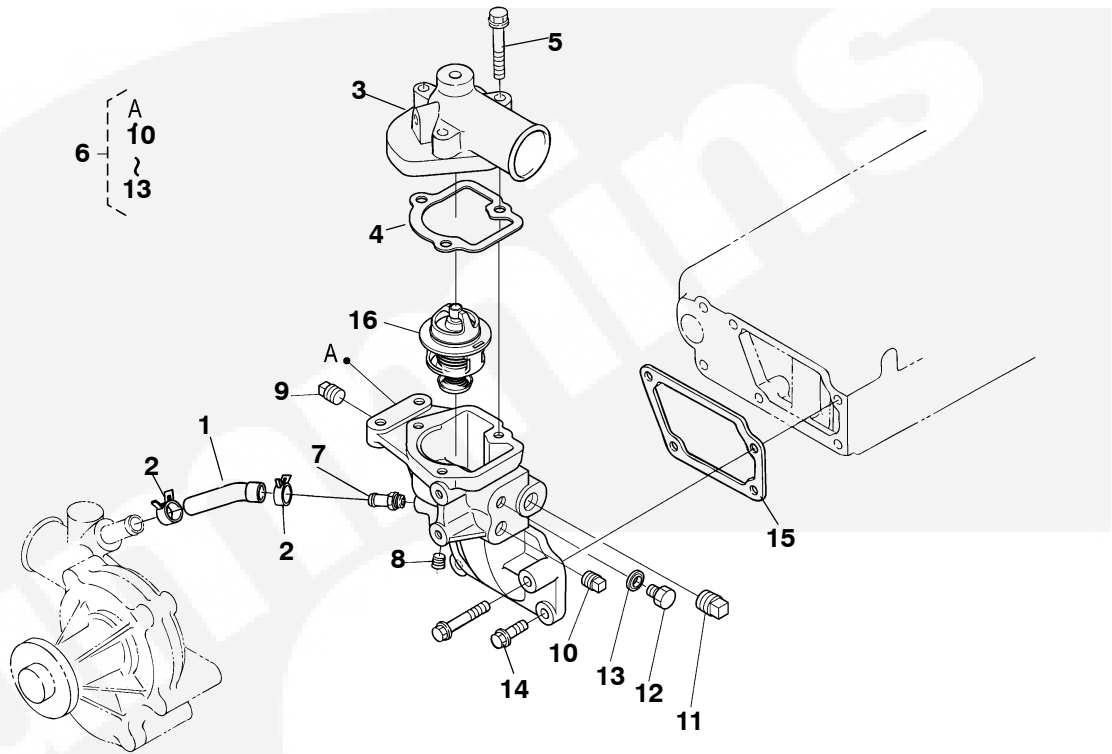


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-2905	1	Pipe, Water Return	9	185-6481	1	Plug
2	185-6722	2	Clamp, Hose	10	185-5826	1	Plug
3	130-7417	1	Cover, Thermostat	11	505-2378	1	Plug
4	130-7354	1	Gasket	12	505-2381	1	Plug, Drain
5	800-6411	3	Bolt, Flange	13	185-2343	1	Gasket
6	130-7416	1	Comp. Flange, Water	14	800-6410	3	Bolt, Flange
7	502-1604	1	Joint, Water Pipe	15	130-7361	1	Gasket, Water Flange
8	505-2379	1	Plug	16	130-7355	1	Assy Thermostat

Water Pump Components

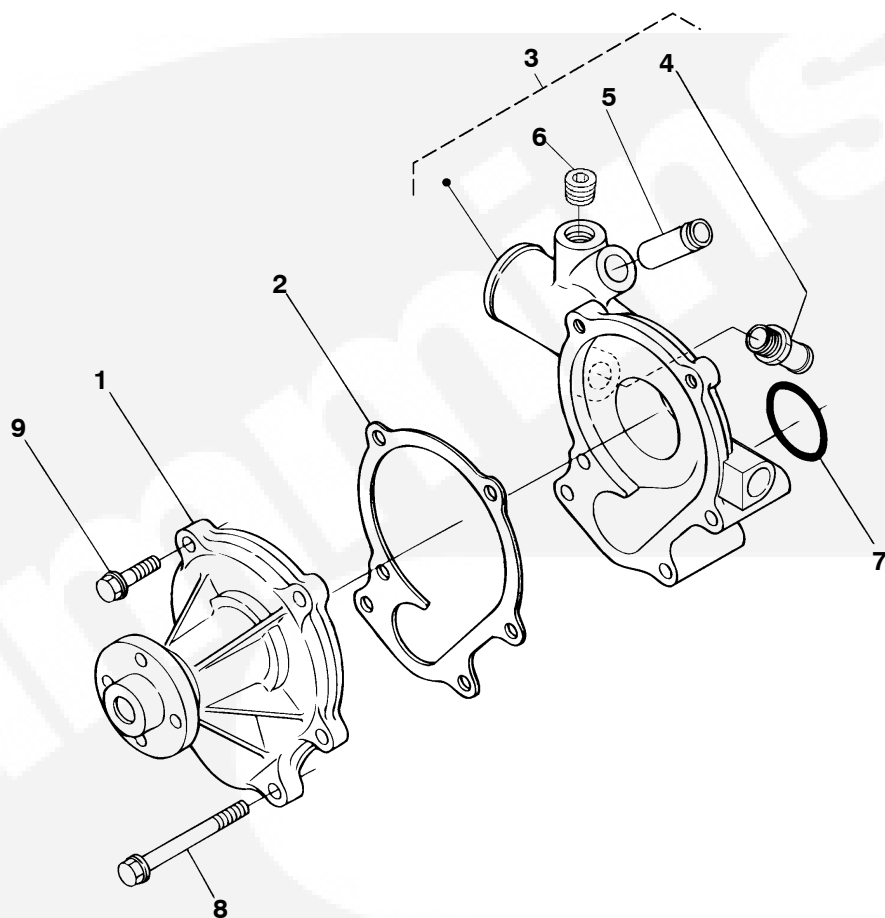

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	132-0485	1	Pump Assy., Water (Includes Cover, Seal and Impeller)	5	185-6499	1	*Joint, Breather Pipe
2	132-0486	1	Gasket, Water Pump	6	185-6481	1	*Plug
3	132-0488	1	Support Assy., Water Pump (Includes Parts Marked*)	7	509-0466	1	*O'Ring
4	502-1604	1	*Joint, Water Pipe	8	800-6412	4	Bolt, Flange
				9	800-6334	1	Bolt, Flange


Alternator

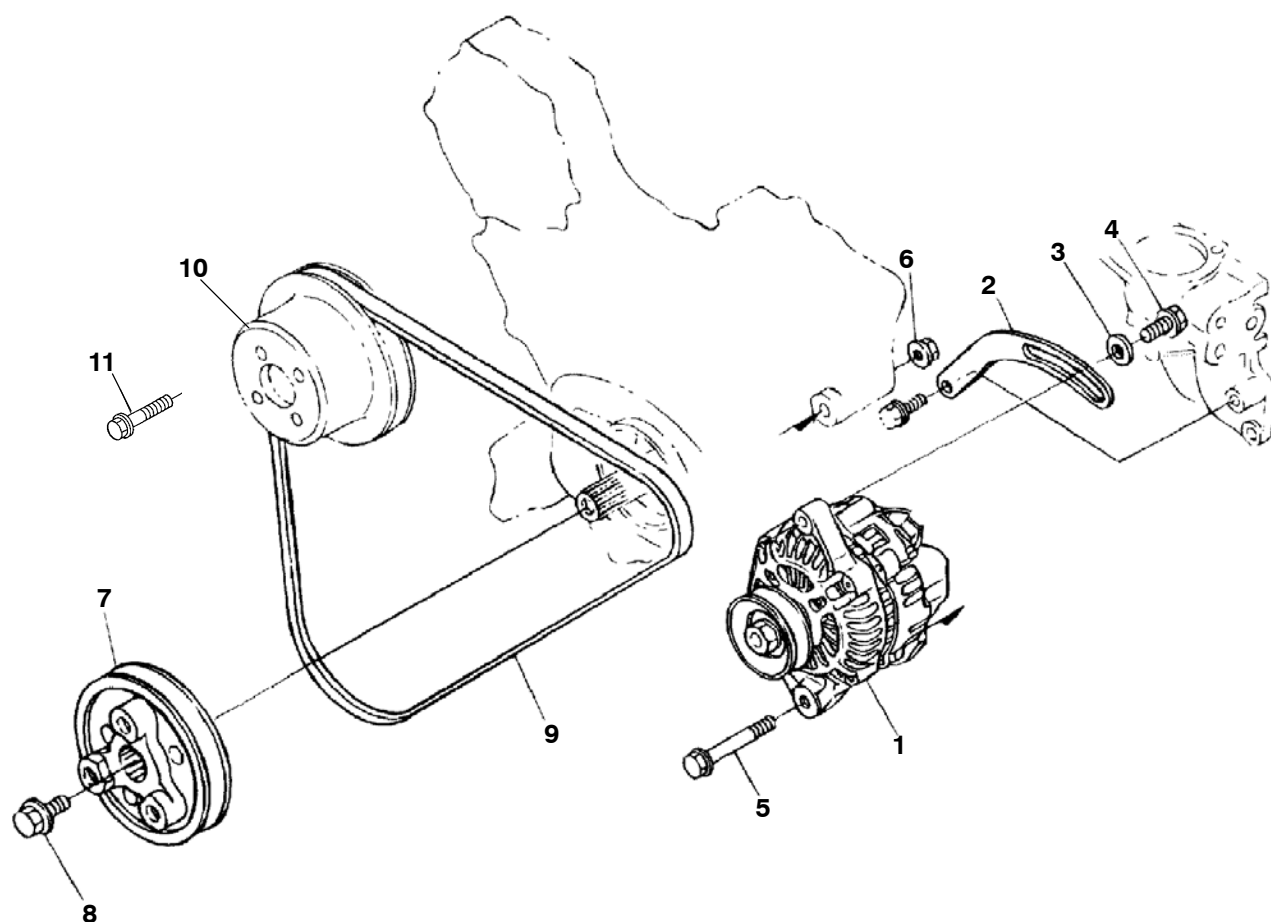

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-2420	1	Alternator, Complete
	191-2421	1	12V
	191-2421	1	24V
2	191-2427	1	Bracket, Alternator
3	185-6786	1	Washer, Plain
4	800-6410	1	Bolt, Flange
5	800-6421	1	Bolt, Flange


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	860-2084	1	Nut, Flange
7	512-0368	1	Pulley, Fan Drive
8	800-6402	1	Bolt
9	511-0237	1	Belt, V
10	512-0369	1	Pulley, Fan
11	185-2826	4	Bolt, Flange

Alternator Components

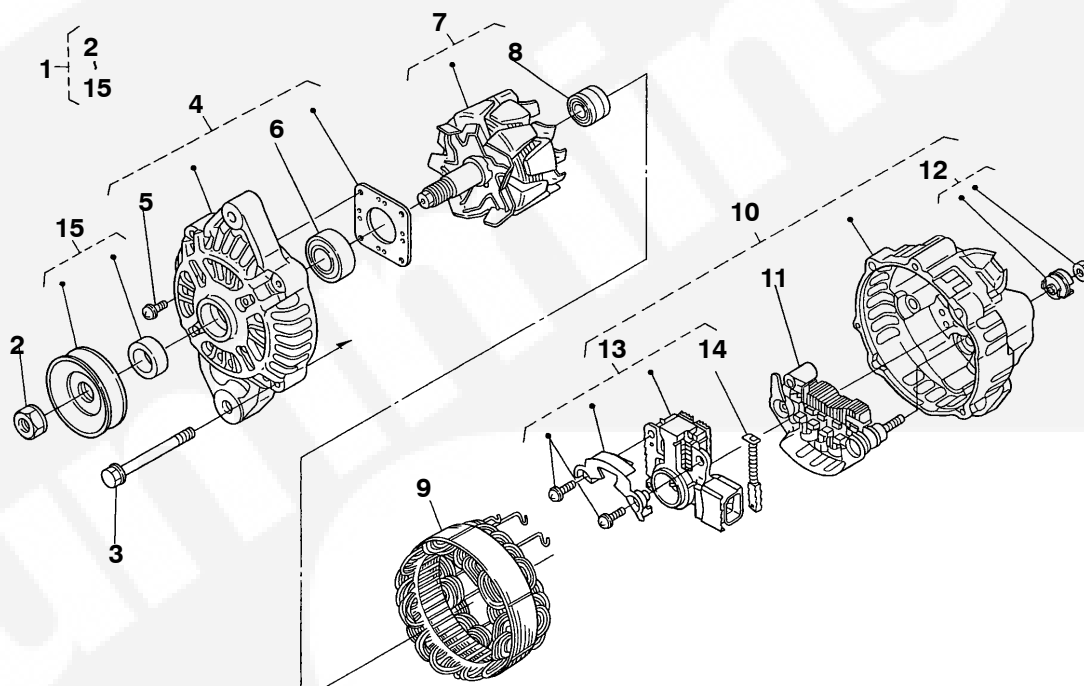

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Alternator, Complete (No Components Available)	10			Assy Bracket, Rear
	191-2420	1	12V		191-2437	1	12V
	191-2421	1	24V		191-2438	1	24V
2	860-2082	1	Nut	11			Assy Rectifier
3	800-6427	1	Set, Bolt		357-0156	1	12V
4			Assy Bracket, Front		357-0157	1	24V
	191-2432	1	12V	12	860-2089	1	Set, Nut
	191-2433	1	24V	13			Set, Regulator
5	800-6428	1	Set, Bolt		305-1040	1	12V
6	510-0238	1	Bearing		305-1041	1	24V
7			Assy Rotor	14	191-2446	1	Set, Brush
	201-3655	1	12V	15	512-0367	1	Assy Pulley
	201-3656	1	24V				
8	510-0237	1	Bearing				
9			Assy Stator				
	191-2433	1	12V				
	191-2434	1	24V				


Alternator (ISO Ground)

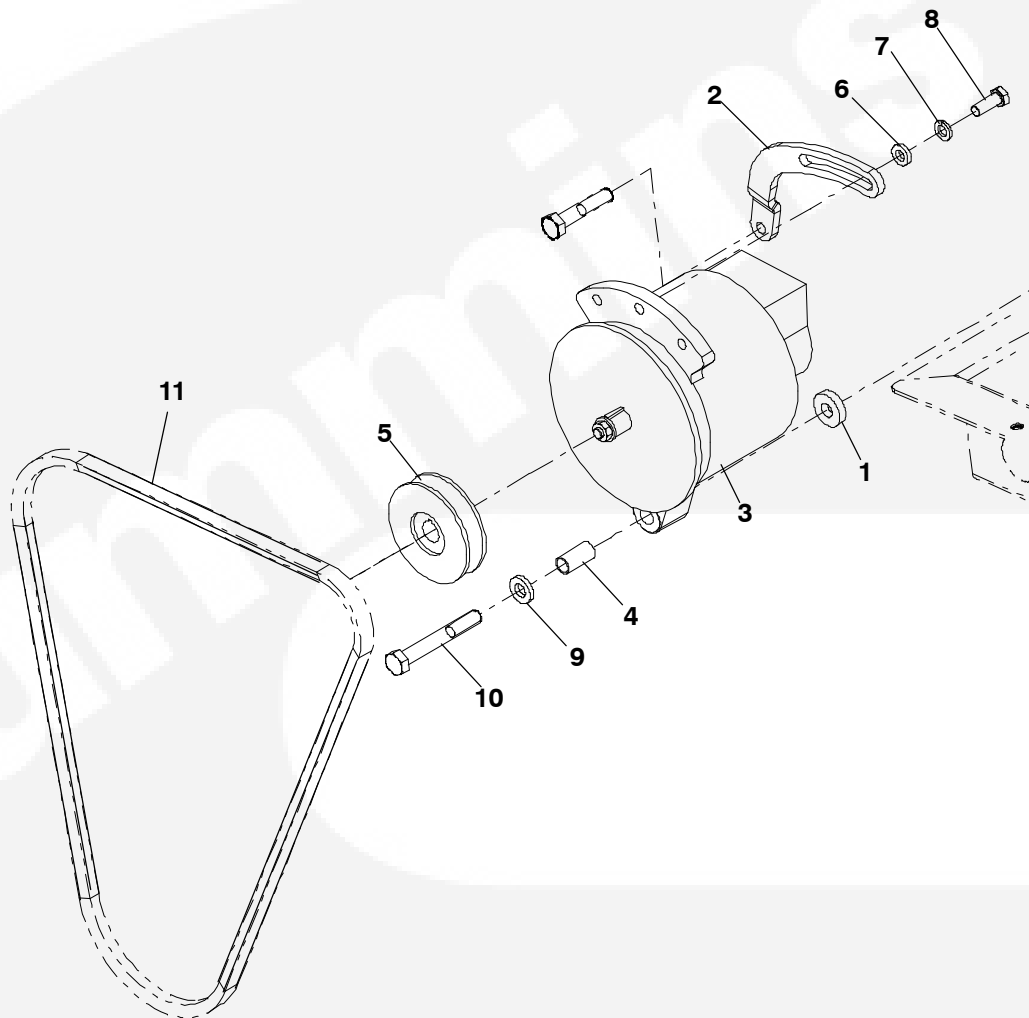

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	191-2409-02	1	Spacer, Alternator
2	191-2410-03	1	Bracket, Alternator
3	191-2169-02	1	12V ISO Ground
	191-2169-01	1	24V ISO Ground
4	191-2411	1	Spacer, Alternator
5	191-2170	1	Pulley, Alternator
6	526-0045	1	Washer, (5/10'')

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	850-0045	1	Washer Split Locking (5/16'')
8	800-0027	1	Screw, Hex Head Cap (5/16-18 x .81mm)
9	526-0174	1	Washer, Flat (3/4'')
10	800-2096	1	Screw, Hex Head Cap (M10 x 1.5 x 75mm)
11	511-0237	1	Belt, V

Fuel Filter

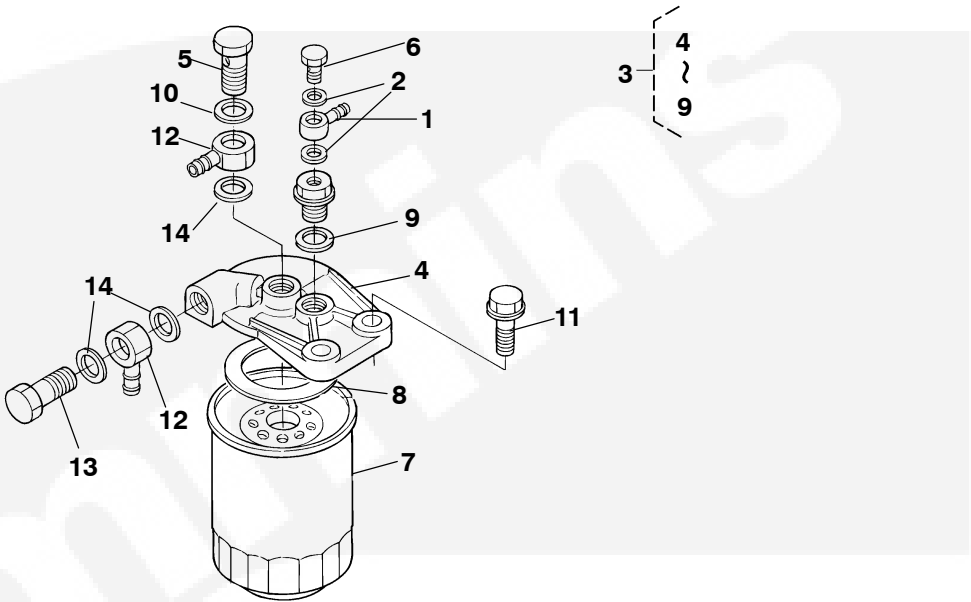


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	502-1602	1	Joint, Pipe	9	509-0471	1	*Gasket
2	185-2338	2	Gasket	10	509-0472	1	*Gasket
3	149-2819	1	Assy Filter, Fuel (Includes Parts Marked*)	11	800-6418	2	Bolt, Flanged
4	149-2817	1	*Cover	12	185-5980	2	Joint, Eye
5	502-1606	1	*Bolt, Joint	13	502-1606	1	Bolt, Joint
6	502-1599	1	*Connector	14	509-0472	4	Gasket
7	502-1611	1	*Connector				
8	149-2804	1	*Element, Fuel Filter				

* - All parts included in Fuel Filter Assembly.




Fuel Supply

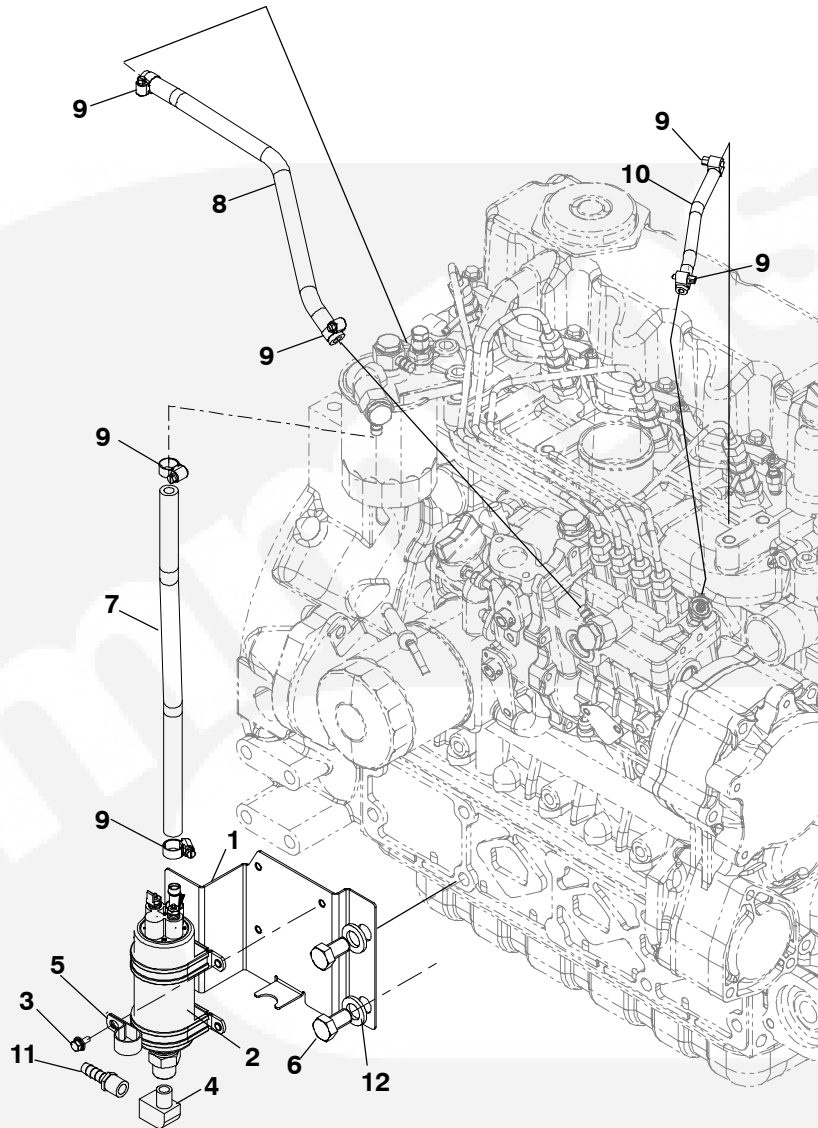


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	149-2654	1	Kit, Adapter Fuel (5/16 ID Hose)	6	800-3025-01	4	Screw, Hex Head Cap (M12 x 1.25 x 20mm)
	149-2645	1	Kit, Fuel Adapter (5/16 ID Hose)	7	503-2788-01	1	Hose, Fuel
	149-2655	1	Kit, Fuel Adapter (3/8 ID Hose)	8	503-2788-02	1	Hose, Fuel
	149-2612	1	Kit, Fitting Adapter	9	503-2309	6	Clamp, Hose
	149-2073	1	Kit, Fuel Filter	10	503-2787-01	1	Hose, Fuel
1	149-2765-03	1	Bracket, Fuel Pump	11	502-1218	1	Connector, Hose
2			Pump, Electric Fuel	12	526-0399-64	4	Washer, Flat (M12)
	149-2783-01	1	12V				
	149-2783-02	1	24V				
3	821-6001-02	4	Screw, Hex Head Sems (M5 x 0.8 x 10mm)				
4	502-0054	1	Elbow, Street Pipe				
5	518-0720	1	Clamp, Loop				

Fuel Transfer Lines (Front)

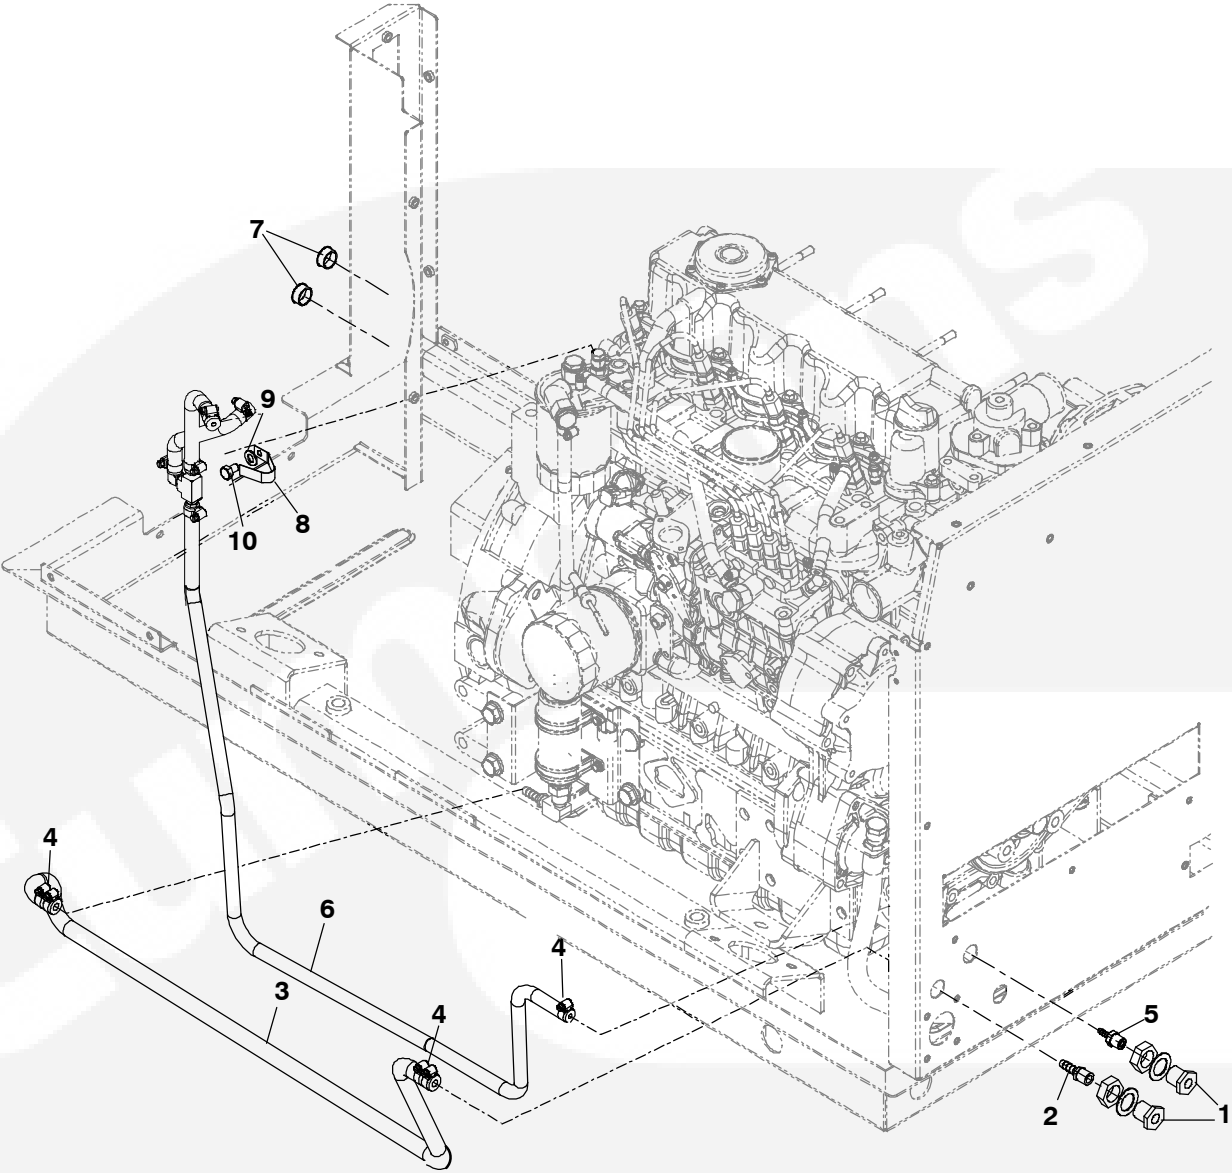

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	502-1133	2	Coupling, Anchor	7	517-0136-01	2	Plug, Hole
2	502-1218	1	Connector, Hose	8	518-0757	1	Clip, Retainer
3	503-2788-03	1	Hose, Fuel	9	526-0399-60	1	Washer, Flat
4	503-2309	4	Clamp, Hose	10	800-3017-17	1	Screw, Hex Head Cap (M8 x 1.25 x 12mm)
5	502-1584	1	Connector, Hose (1/4-NPT x 3/16 Hose)				
6	503-2837-01	1	Hose, Fuel (Return)				


Fuel Transfer Lines (Rear)

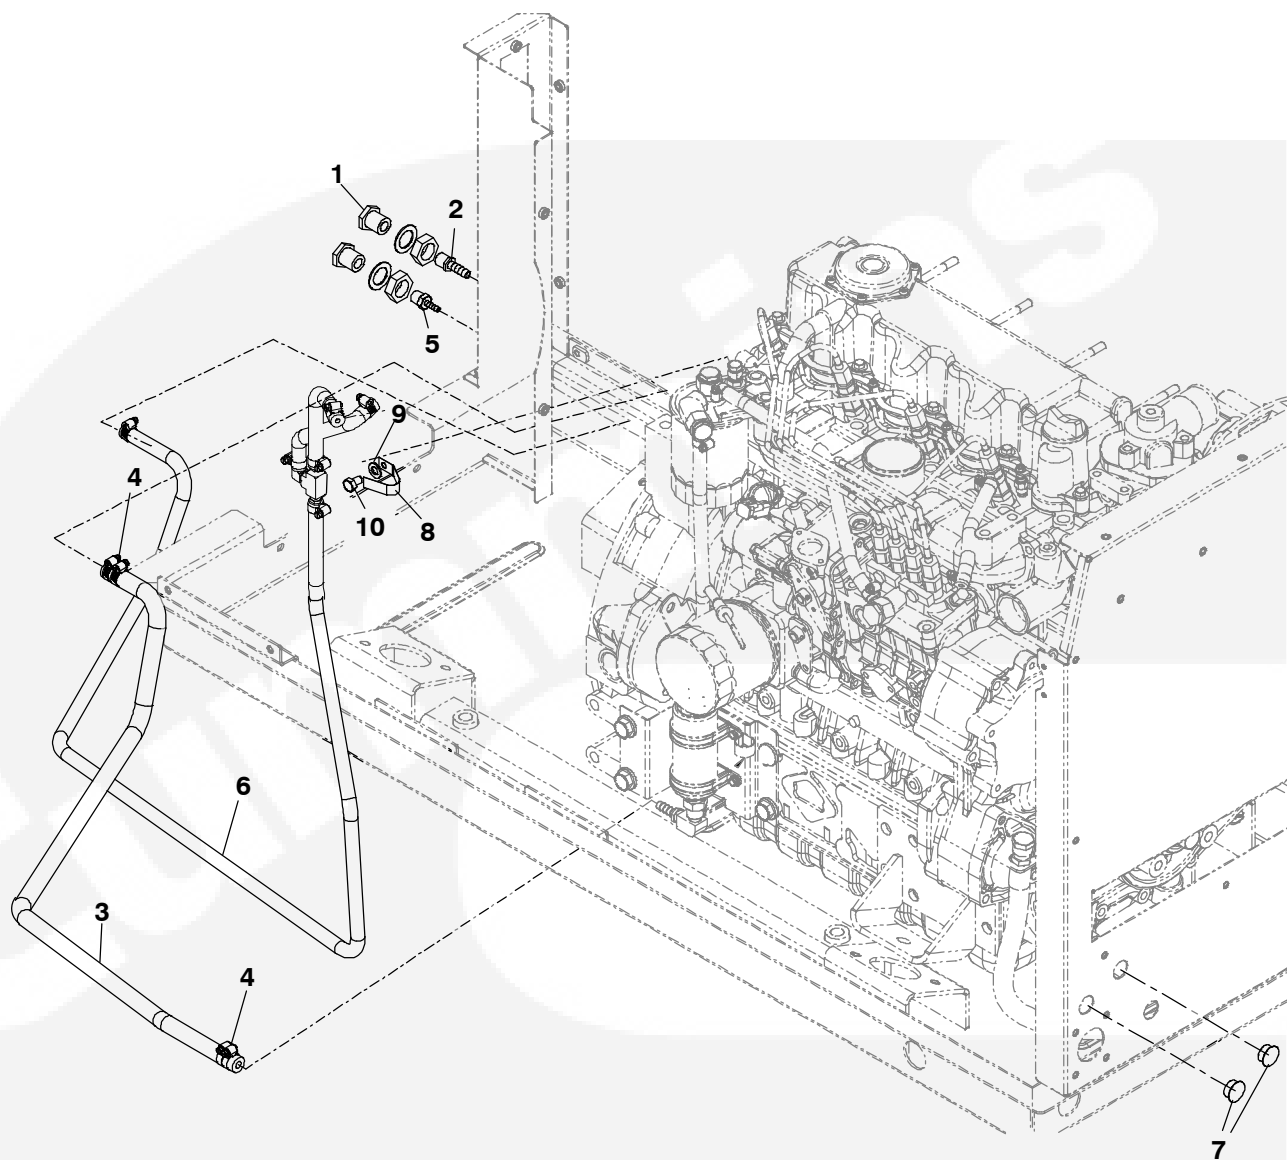

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	502-1133	2	Coupling, Anchor
2	502-1218	1	Connector, Hose
3	503-2788-03	1	Hose, Fuel
4	503-2309	4	Clamp, Hose
5	502-1584	1	Connector, Hose
6	503-2837-01	1	Hose, Fuel (Return)

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
7	517-0136-01	2	Plug, Bulkhead Hole
8	518-0757	1	Clip, Retainer
9	526-0399-60	1	Washer, Flat
10	800-3017-17	1	Screw, HEx Head Cap (M8 x 1.25 x 12mm)

Remote Water Separator

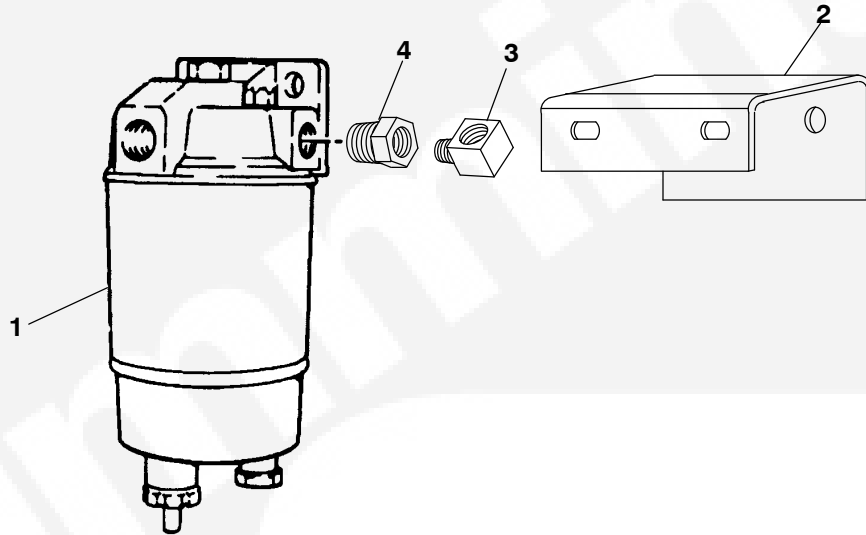


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	149-2073	1	Kit, Remote Fuel/Water Separator
1	149-1908-05	1	Separator, Fuel/Water (See Separate Page for Components)
2	149-2041-03	1	Bracket, Separator Mounting

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
3	502-0020	1	Elbow, Street 90Degrees
4	502-0029	2	Bushing, Pipe

* - All Parts Included In Kit.




Water Separator Components

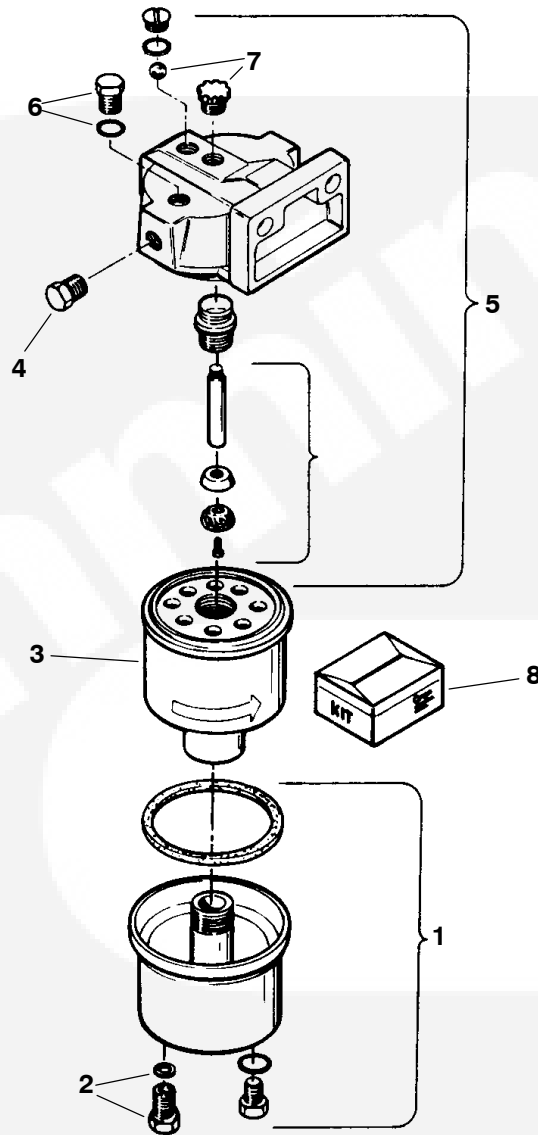

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	149-1908-05	1	Kit Separator, Water	6	149-1952	1	Plug, Vent (Includes O-Ring)
1	149-2046	1	Kit, Metal Bowl Replacement (Includes Plug, O-Rings and Drain Assy)	7	149-2047	1	Pump Assy (Includes Plunger, Retainer, Shaft, Check Ball, Knob and Screw)
2	149-1953	1	Drain Assy (Includes Knob and Seal)	8	149-2045	1	O'Ring Kit (Includes Seal and Plunger)
3	149-1914-05	1	Element (Includes Seals)				
4	502-0153	1	Plug, Hex (1/4")				
5	149-1949	1	Head Assy, Replacement (Includes Vent Plug, O-Rings, Seal, Cap, Tube and Pump Assy)				

* - All Parts Included In Separator Kit.

Break Siphon MDKBT, MDKBU

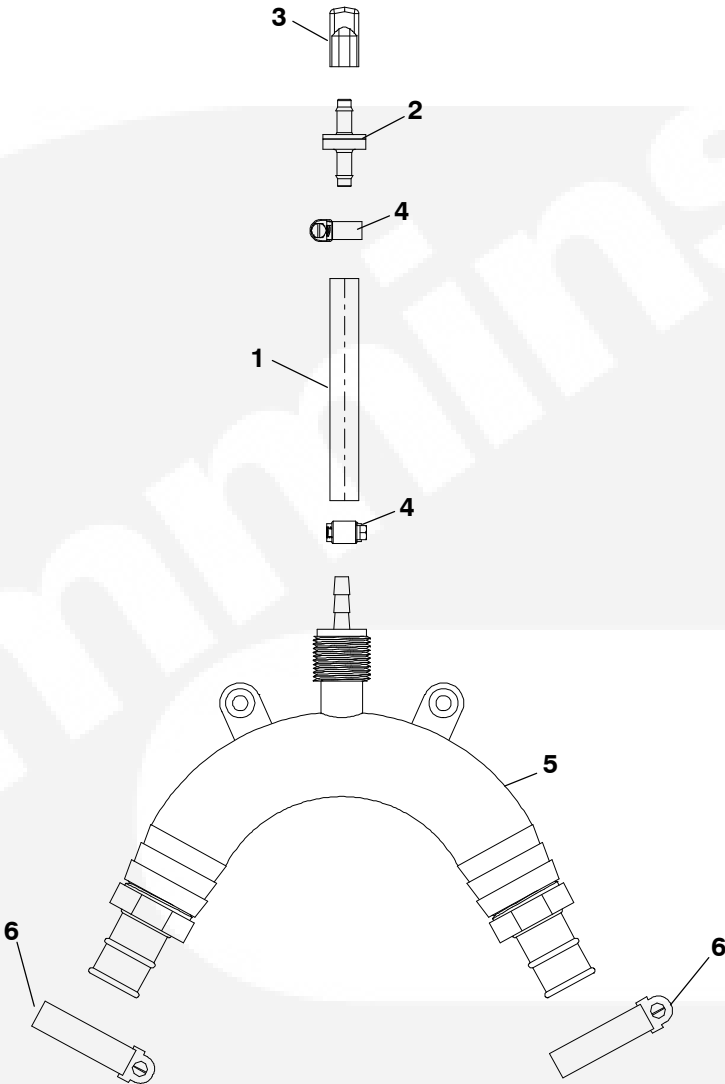


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-0877-01	1	Kit, Siphon Break
1	503-2728-01	1	Hose, Coolant
2	504-0223	1	Valve, Check
3	502-1425-02	1	Cap, Tube
4	503-2309	2	Clamp, Hose
5	502-1451-01	1	Connector, Hose

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	503-1138	2	Clamp, Hose
7	508-1039	2	Edging
8	508-1203	2	Grommet (Boot)

* - All Parts Included In Kit But Not All Shown.




Heat Exchanger

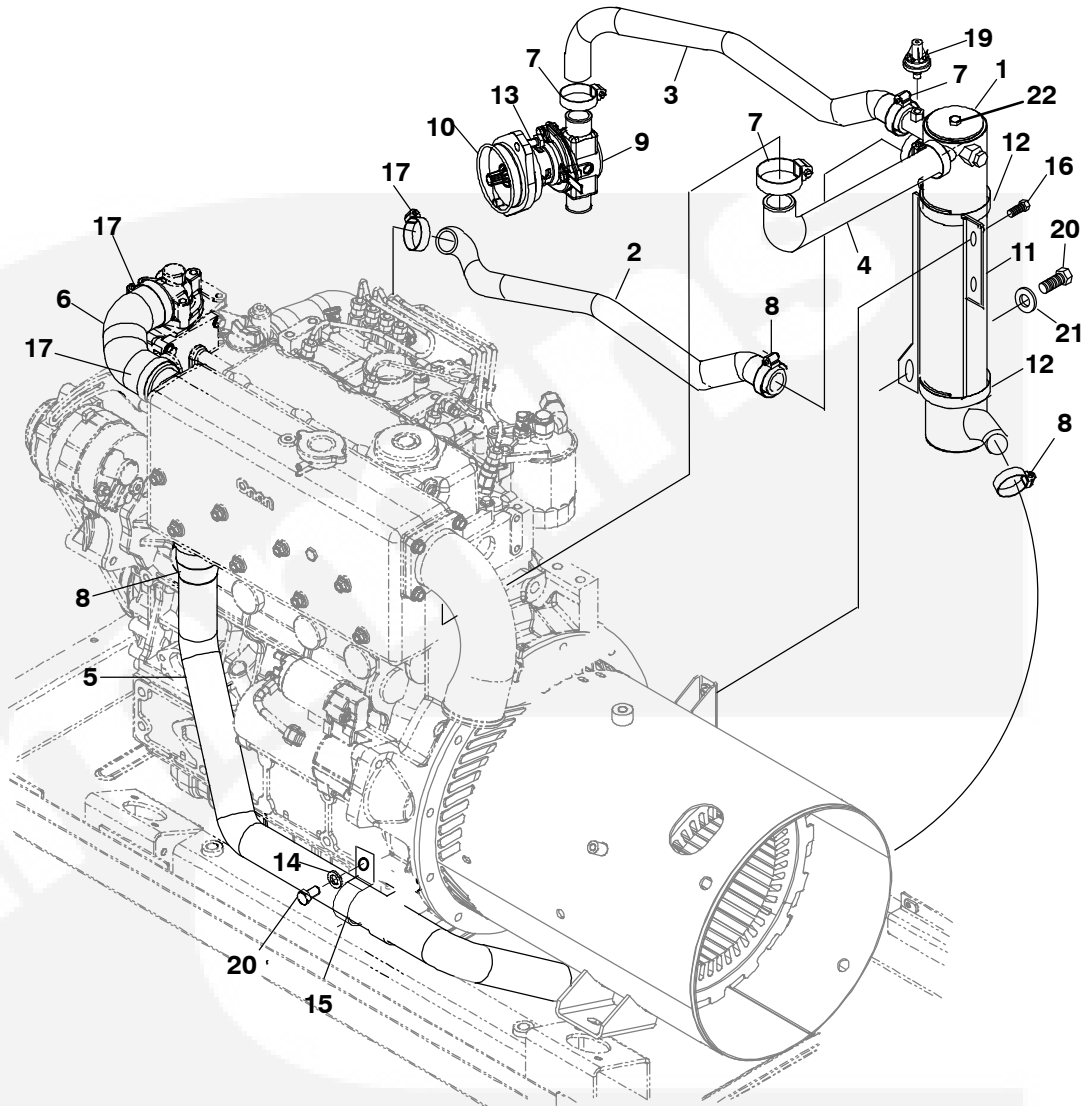

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	300-4686	1	Kit, Low Coolant Sender	11	130-7069-03	1	Bracket, Heat Exchanger
1	130-6733-02	1	Exchanger, Heat	12	503-1872-05	2	Clamp, Hose
	130-7315	1	*Gasket (not shown)	13	800-6085	2	Hex, Head Cap (M1 x 1.5 x 20mm)
	130-7314	1	*Cover (not shown)				
	509-0456	1	*Seal, O'Ring (not shown)	14	526-0399-64	2	Flat, Washer (M12)
	504-0017	1	*Cock, Drain (not shown)	15	518-0746	1	Clamp, Loop Heat Exchange
	502-0153	1	*Plug, Pipe (not shown)	16	821-6003-01	2	Screw, Hex Head Sims (M8 x 1.25 x 16mm)
2	503-2871	1	Hose, Coolant (Wet and Dry)	17	503-1140	4	Clamp, Hose (Cover)
3			Hose, Water	18			Clamp, Hose (Cover, Not Shown)
	503-2716	1	(Spec A-B)		503-2823	10	Wet
	A030R884	1	(Spec C)		503-2823	8	Dry
4	503-2717	1	Hose, Water	19	309-0667	1	Switch, Pressure
5	503-2715	1	Hose, Coolant	20	800-3025-01	2	Screw, Hex Head Cap (M12 x 1.25 x 20mm)
6	503-2843	1	Hose, Coolant	21	526-3699-64	2	Washer, Flat (M12)
7	503-1138	2	Clamp, Hose	22	800-6394	1	*Screw, Hex Head (3/8 x16)
8	503-1139	3	Clamp, Hose				
9			Pump, Water				
	132-0464	1	(Spec A-B)				
	A032Y747	1	(Spec C)				
10	509-0450	1	O'Ring, Seal				


*Parts included in Heat Exchanger.

Keel Cooling (Wet Exhaust)

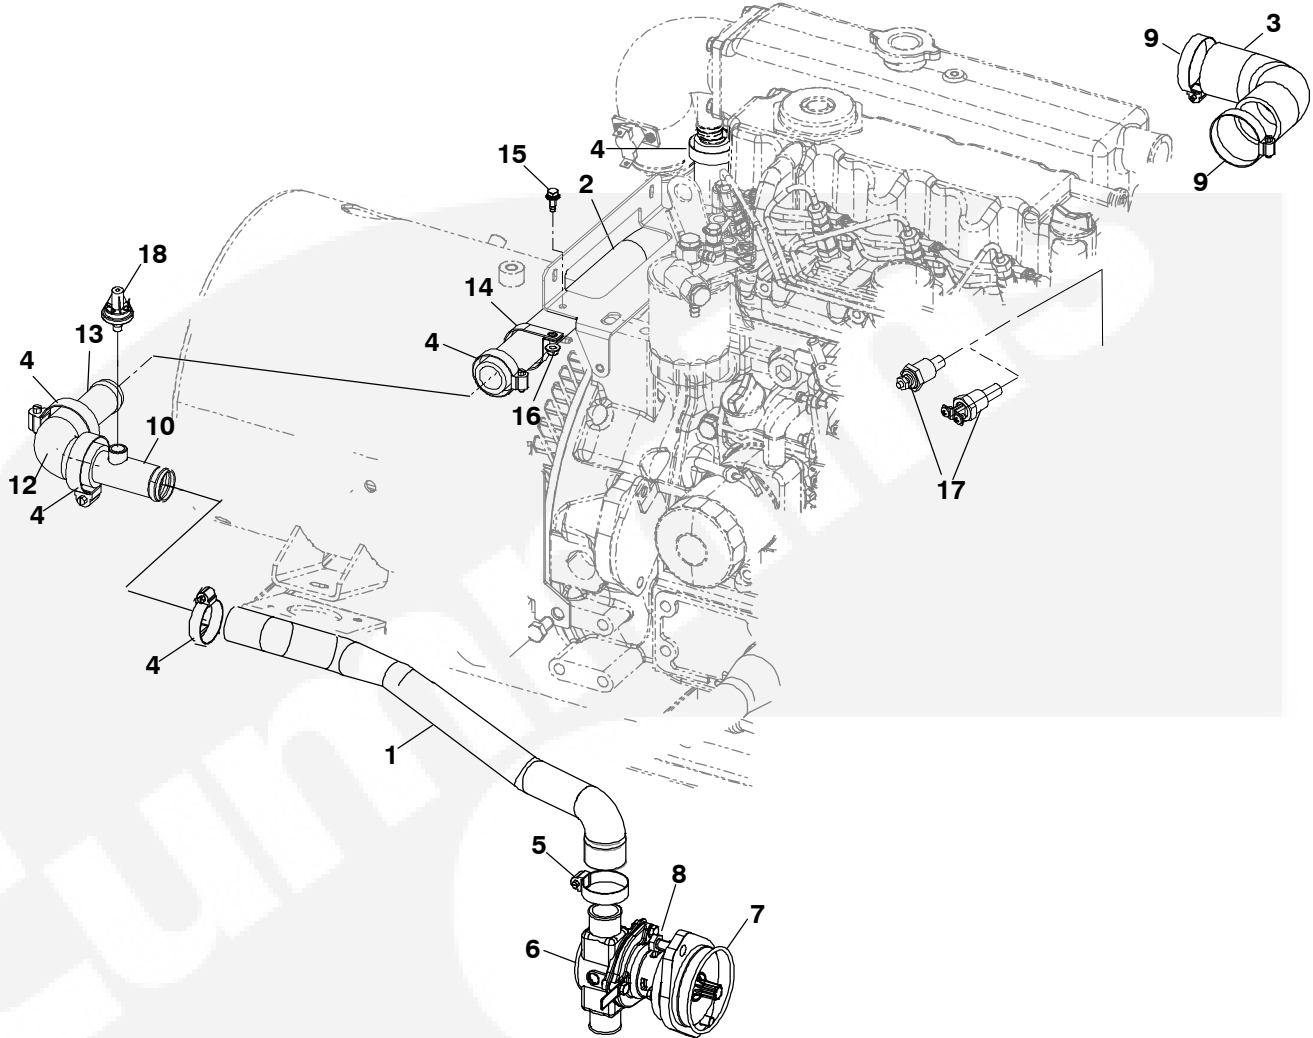

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-2716	1	Hose, Water (Spec A-B)	503-2823	8	Wet	
	A030R884	1	(Spec C)	503-2823	2	Dry	
2	503-2717	1	Hose, Water	12	503-2872	1	Elbow, Hose
3	503-2843	1	Hose, Coolant	13	130-4803-02	1	Tube, Water
4	503-1137	5	Clamp, Hose	14	518-0548-44	1	Clamp, Hose
5	503-1138	1	Clamp, Hose	15	800-6395-01	1	Screw, Hex Head (M6 x 1 x 16mm)
6	132-0464	1	Pump, Water (Spec A-B)	16	870-2065-02	1	Nut, HEx Flanged (M6)
	A032Y747	1	(Spec C)	17	193-0318	1	Sender, Water Temperature
7	509-0450	1	O'Ring, Seal		193-0457-01	1	Neg Gnd
8	815-0600	2	Screw, Hex Head Cap (M10 x 1.25 x 25mm)		309-0667	1	ISO Gnd
9	503-1140	2	Clamp, Hose(Wet and Dry)				Switch, Pressure
10	130-5387-01	1	Tube, Low Pressure				
11			Clamp, Hose				

Sea Water Pump (Spec A-B)

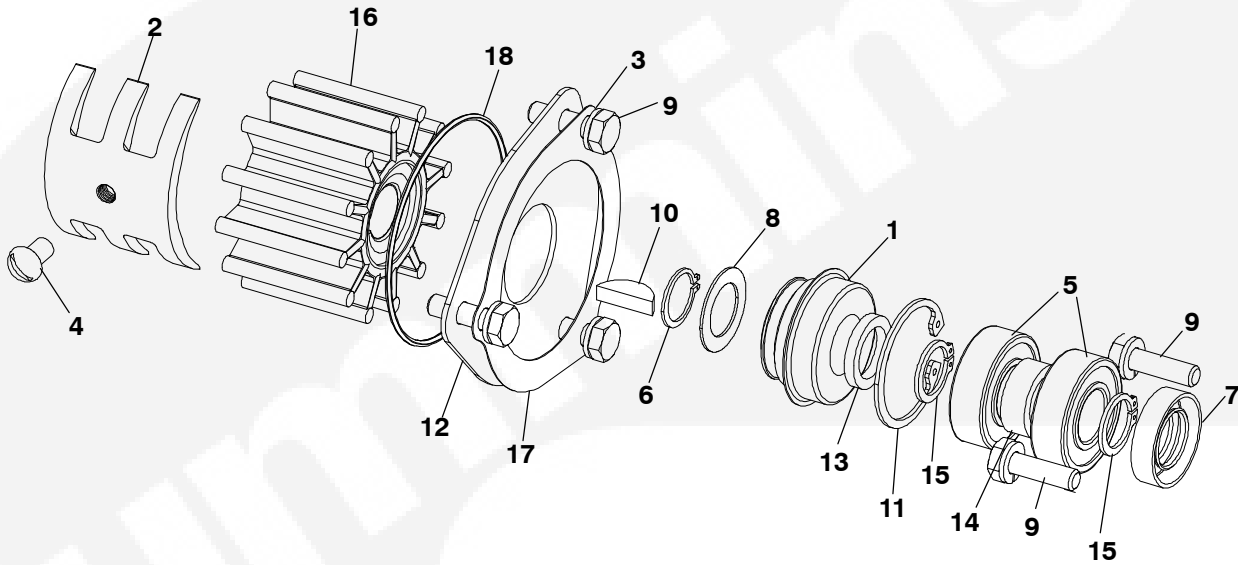


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1316	1	Kit, Pump Repair (Minor, Includes Parts Marked *)	10	132-0391	1	Key
	132-0283	1	Kit, Impeller Service (Includes Parts Marked +)	11	132-0392	1	Ring, Retaining
	541-1317	1	Kit, Pump Repair (Major Includes All Parts Below)	12	132-0473	1	Spacer, Water Pump
1	509-0459	1	+ Seal, Shaft	13	132-0470	1	Slinger, Water Pump
2	132-0474	1	Wear, Sleeve	14	132-0469	1	Spacer, Water Pump
3	850-2089	7	Washer, Spring Locking	15	519-0745	2	Ring, Retaining
4	812-1158	1	Screw, Round Head Slotted	16	132-0348	1	+*Impeller, Water Pump
5	510-0230	2	Bearing, Ball	17	132-0472	1	+*Gasket, Water Pump
6	132-0393	1	Ring, Retaining	18	132-0293	1	+*Gasket, Water Pump
7	509-0447	1	Seal, Shaft				
8	132-0368	1	Washer				
9	800-6384	7	Screw, Hex Head				

All parts included in Major Repair Kit only.

* - Pump Repair Kit Includes Impeller and Gaskets.

+ - Impeller Service Kit Includes Impeller Gaskets and Shaft Seal.

Sea Water Pump (Spec C)

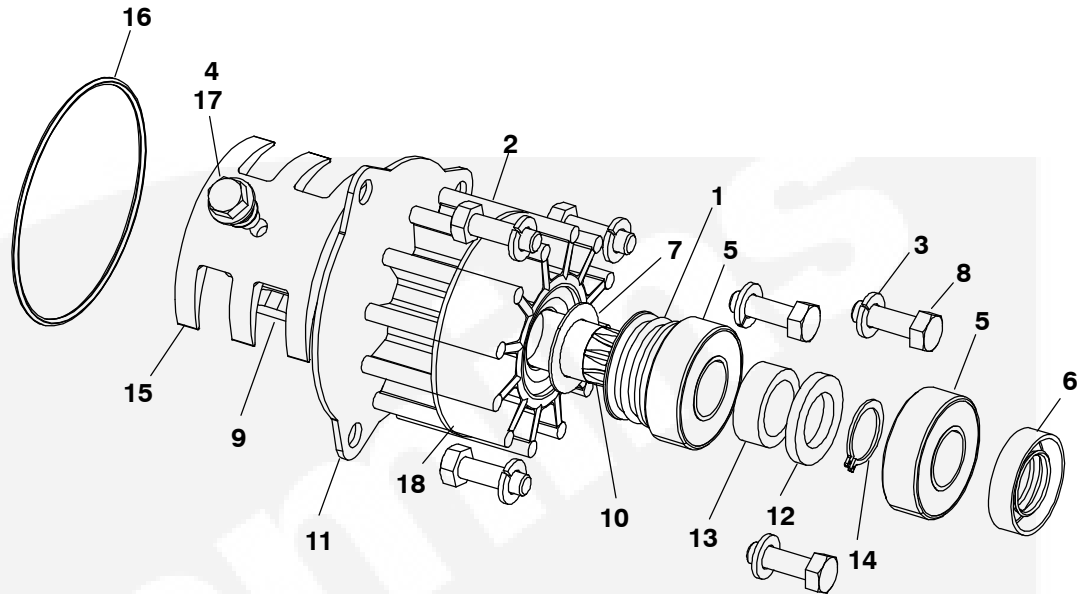


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1521	1	Kit, Impeller Service (Includes Parts Marked +)	11	A029U684	1	# Cover, Plate
	A032Y864	1	Kit, Pump Repair (Major Includes All Parts marked #)	12	A032Y754	1	# Spacer
1	132-0387	1	# Seal, Shaft	13	A034U624	1	# Spacer, Water Pump
2	132-0499	1	+ # Impeller-Water Pump	14	132-0393	2	# Ring, Retaining
3	850-2089	6	Washer, Spring Locking	15	132-0388	1	# Cam
4	A029U693	1	# Screw, Hex Head	16	132-0293	1	+ # Gasket, Water Pump
5	132-0364	2	# Bearing, Ball	17	A029U695	1	# Seal, O Ring
6	A035R404	1	# Seal, Shaft	18	A029U686	1	# Plate, Bearing
7	132-0368	1	# Washer				
8	A034T924	6	Screw, Hex Head				
9	132-0391	1	# Key				
10	A034U626	1	Shaft				

All parts included in Major Repair Kit only.


+ - Impeller Service Kit Includes Impeller Gaskets and Shaft Seal.

Auxiliary Drive (Sea Water Pump)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	132-0490	1	Pump, Comp. Base Hydraulic	7	800-6414	3	Bolt, Flange
2	507-0018	1	Gear, Hydraulic Pump Drive	8	132-0487	1	Cover, Hydraulic Pump
3	185-3095	2	Ball, Bearing	9	509-0450	1	O'Ring (Dry Exhaust)
4	518-0768	1	Circular Clip, Internal	10	800-6085	2	Bolt, Flange(Dry Exhaust)
5	518-0767	1	Circular Clip, External	11	103-0840	1	Cover, Hydraulic Pump (Dry Exhaust)
6	509-0467	2	O'Ring				

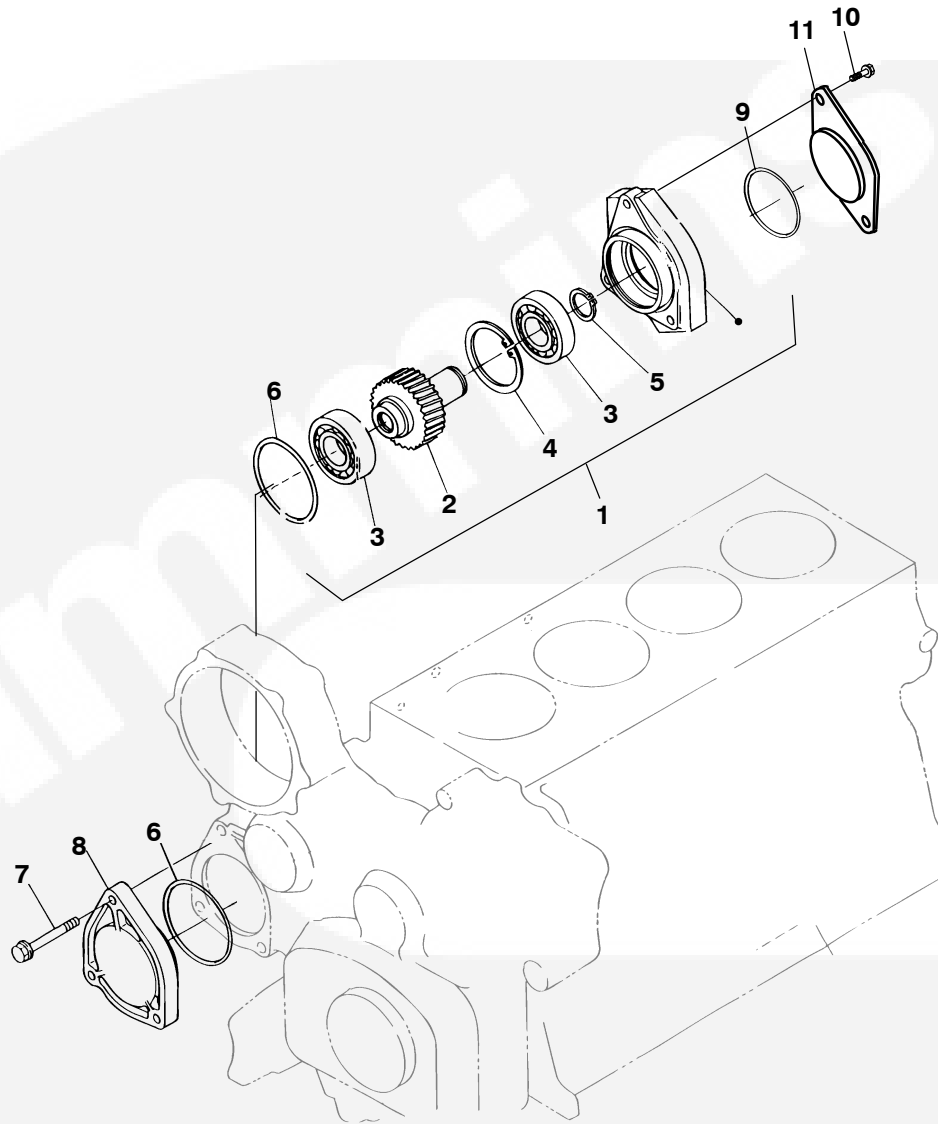


Water Inlet

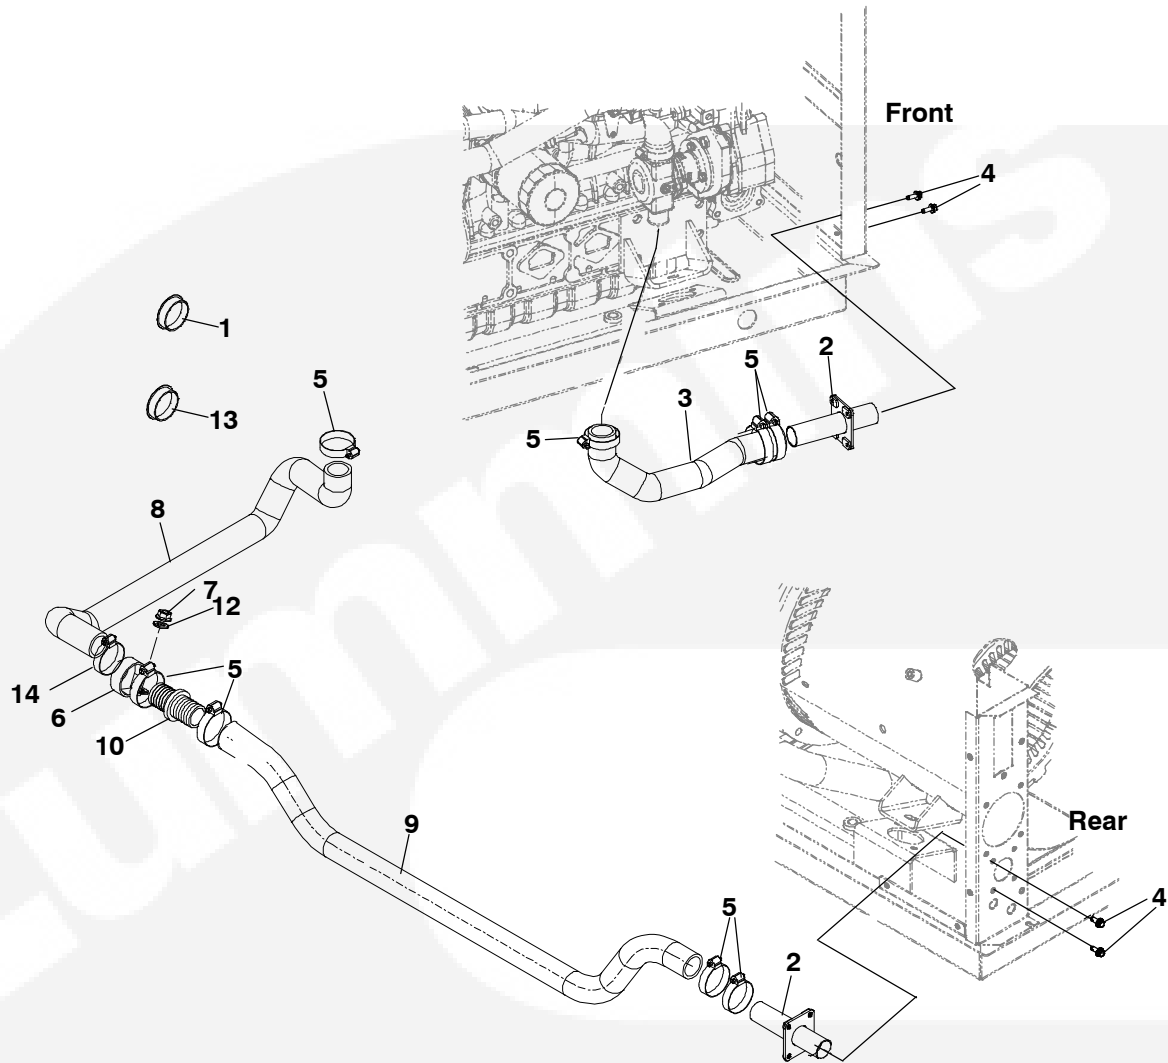

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1392-01	1	Kit, Hose (Includes Instruction and Water Hose, Front)	8	503-2793	1	(M8 x 1.25mm)
	541-1392-02	1	Kit, Hose (Includes Parts Mark*)	9	503-2814	1	*Hose, Water (Rear)
1	517-0138-06	1	Plug, Hole (Front and Rear Housed, 1.50")	10	502-1583	1	*Connector, Hose (Rear)
2			Bulkhead, Connector	11			Clamp, Hose (Cover Not Shown)
	405-9475	1	(Spec A-B)		503-2823	3	Front
	A035K689	1	(Spec C)		503-2823	5	Rear
3	503-2792	1	Hose, Water (Front)	12	526-0399-60	1	Washer, Flat (M8)
	A034W700	1	(Spec A-B)	13	517-0131-02	1	Plug, Hole
			(Spec C)	14		1	Clamp, Loop
4	800-6395-01	4	Screw, Hex Head Sems (M6 x 1.0 x 16mm)		518-0752	1	(Spec A-B)
5			Clamp, Hose		A001G912	1	(Spec C)
	503-1138	3	Front				
	503-1138	5	Rear				
6	518-0747	1	Clamp, Loop				
7	870-2065-03	1	Nut, Hex Head Flange				

* - Includes Hoses Connector and Clamps.


Coolant Recovery

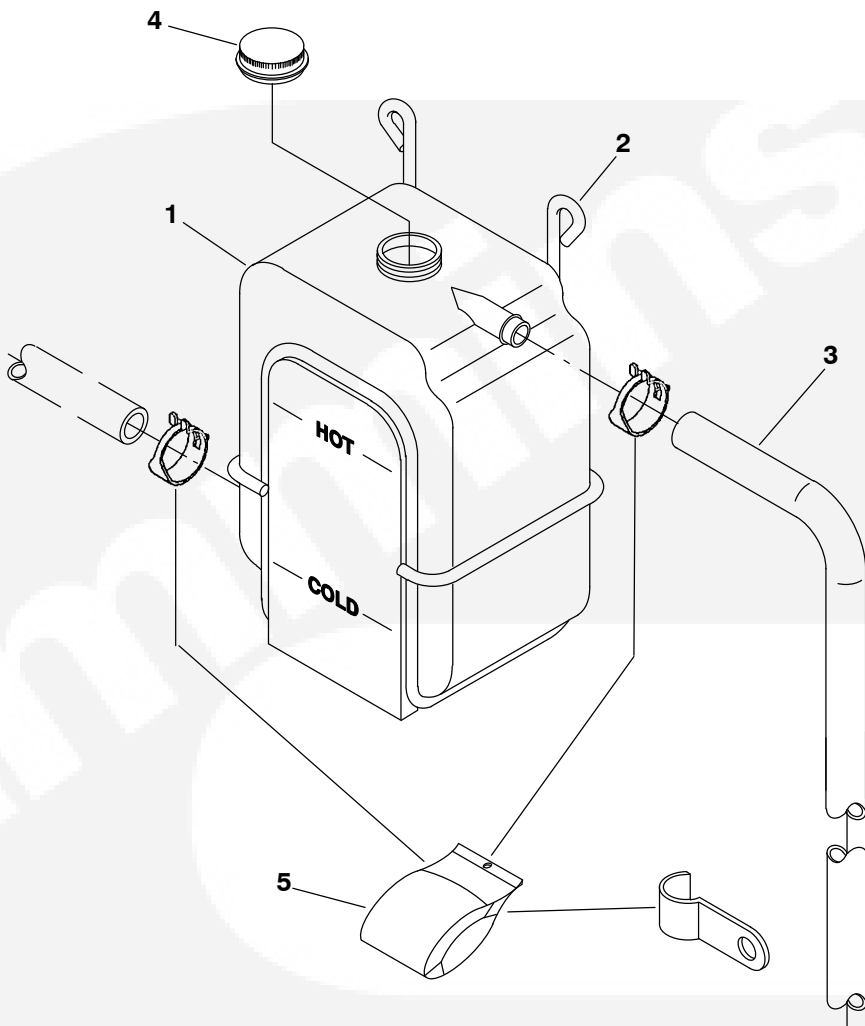

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	130-3574	1	Kit, Coolant Recovery (Instructions Included)	5	130-3573	1	Hardware Package (Includes Mounting Hardware)
1	130-3570	1	Tank, Coolant Recovery	* - All Parts Included In Kit.			
2	130-3571	1	Hanger, Tank				
3	503-1692	1	Hose (5/16 I.D. x 120" Lg.)				
4	130-3572	1	Cap, Tank				



PTO

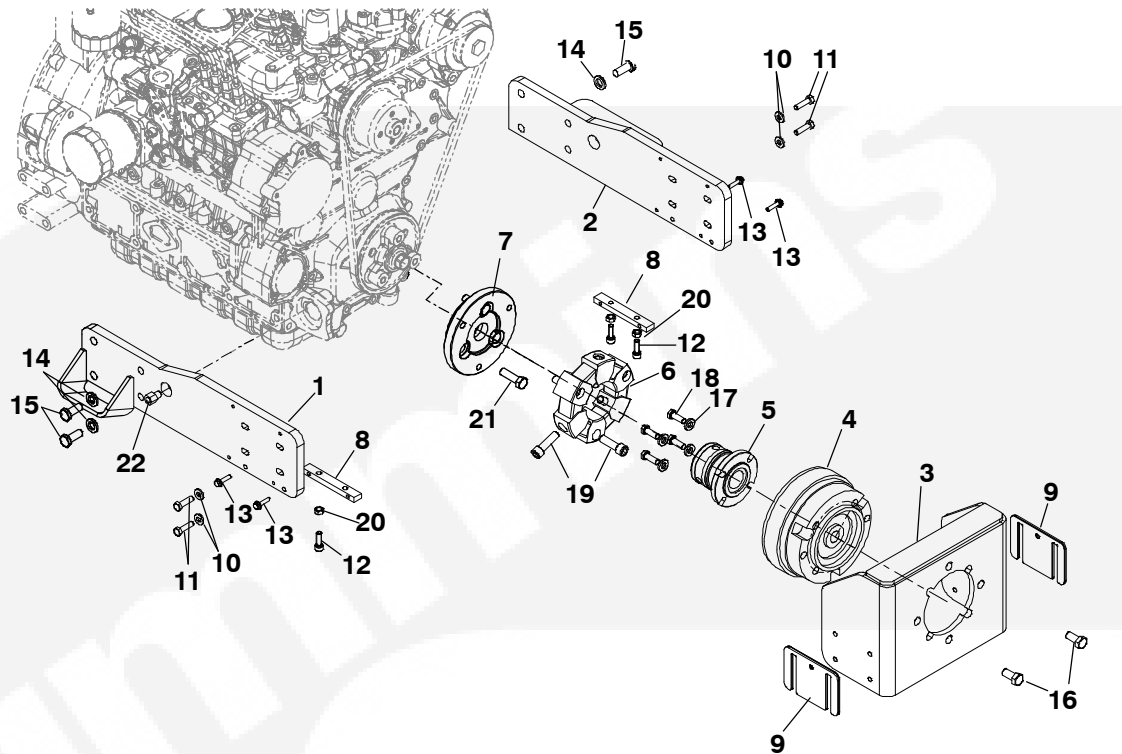


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1275-01	1	Kit, PTO (12V)
	541-1275-02	1	Kit, PTO (24V)
1	190-0856-02	1	Bracket, PTO (Right)
2	190-0855-02	11	Bracket, PTO (Left)
3	190-0857-02	1	Bracket, Clutch
4			Clutch
	190-0729-01	1	12V
	190-0729-02	1	24V
5	190-0767-02	1	Adapter, Coupling
6	190-0768	1	Coupling, Flexible
7	190-0858-02	1	Adapter, Coupling
8	190-0766-03	2	Bracket, Mounting Pad
9			Shim, PTO
	190-0771-02	AR	12GA
	190-0771-04	AR	14GA
	190-0771-06	AR	20GA
10	526-0451	8	Washer, Flat
11	800-3017-21	8	Screw, Hex Head Cap (M8 x 1.25 x 30mm))
12	815-0916	4	Screw, Socket Head

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	821-2035	4	Screw, Locking Flange (M6 x 1.25 x 30mm))
14	526-0399-64	8	Washer, Flat (M12)
15	800-3032	8	Screw, Hex Head Cap (M12 x 1.25 x 30mm)
16	800-0090	2	Screw, Hex Head (1/2-13 x 1.00)
17	526-0174	4	Washer, Flat (3.4 10GA)
18	801-1050	4	Screw, Hex Head (3/8-24NC x 1.00)
19	725-1103	6	Screw, Socket Head Cap (M12 x 1.75 x 40mm)
20	862-0026-55	4	Nut, Hex (M8 x 1.25mm)
21	800-3027	3	Screw, Hex Head Cap (M12 x 1.25 x 40mm)
22	505-1503	1	Adapter, Pipe

*- Kits Include all parts noted.

Exhaust Manifold

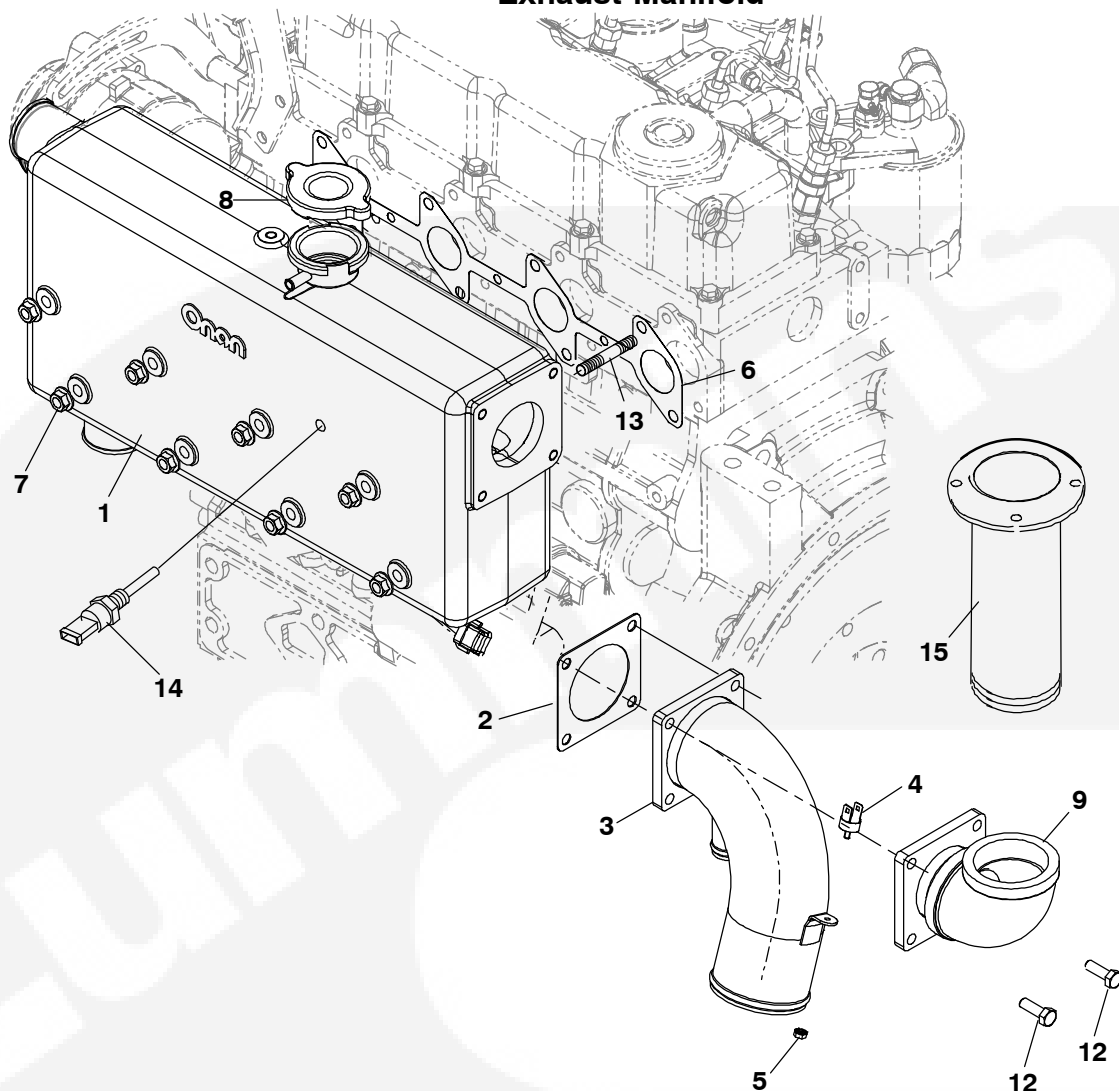


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1281	1	Kit, Exhaust (Parts Marked*)	10	332-1571	1	Terminal, Tab Adapter
	541-1282	1	Kit, Exhaust (Parts Marked+)	11	898-0972	3"	Sleeving, Insulation(.50")
	541-1272-01	1	Kit, Exhaust (Parts Marked^)	12	800-3017-19	4	Screw, Hex Head Cap (M8 x 1.25 x 25mm)
	541-1272-02	1	Kit, Exhaust (Includes Gasket Hole Plug, Adapter)	13	520-2679	8	Stud
1	154-3197	1	Manifold Assy. (Exhaust)	14	193-0468	1	Sender, Low Coolant
2	155-4486	1	Gasket, Exhaust	15	155-4586-02	1	Adapter
3	155-4487-02	1	Elbow, Exhaust (Wet)				
4	309-0597-03	1	Switch, Temperature (Wet)				
5	870-0221-01	1	Nut, Hex W/ET (#8-32)				
6	155-4599	1	Gasket, Exhaust				
7	870-2065-03	8	Nut, Hex Flanged (M8)				
8	130-3721	1	Cap, Radiator				
9	155-4584-02	1	^ Elbow, Exhaust (Dry)				

* - Includes Rear Exhaust Hose

+ - Includes Front Exhaust Hose


^ - Includes Exhaust Elbow. Kit 541-1272-02 Includes Hole Plug, Gasket and Adapter 155-4586-02.

Bulkhead Exhaust

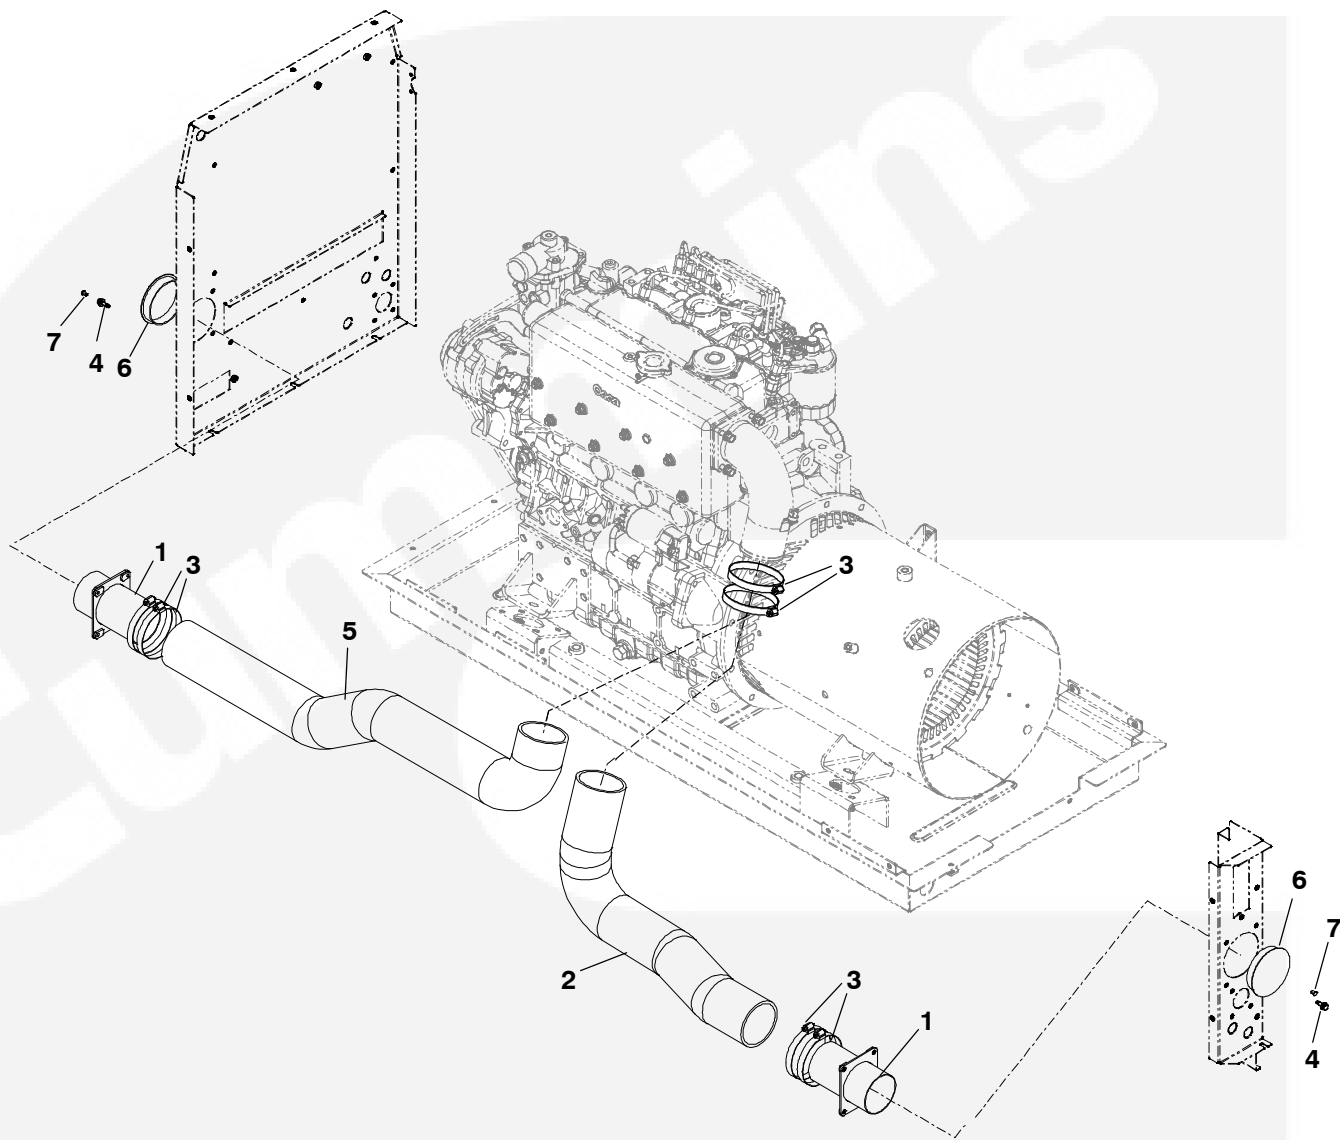


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-9473	1	Bulkhead Assy.	5	503-2774	1	Hose, Exhaust (Front)
2	503-2773	1	Hose, Exhaust (Rear)	6	517-0393	1	Plug, Hole Housed
3	503-1872-06	4	Clamp, Hose	7	517-0131-02	4	Plug, Hole Housed
4	800-6395-01	4	Screw, Hex Head				

Water Separator, Muffler

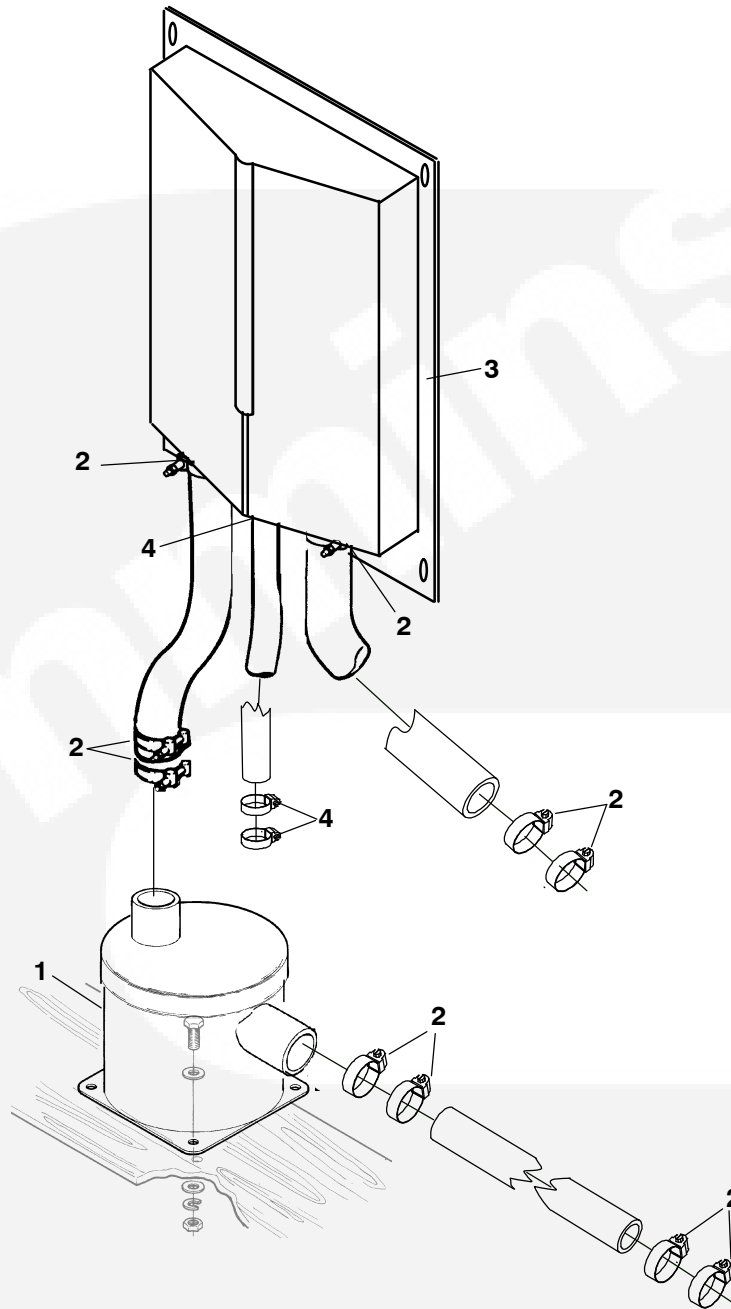

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1270	1	Kit, Muffler, Separator (Includes Parts Marked *)	2			Clamp, Hose
	541-1274	1	Kit, Exhaust (Water Separator) (Includes Parts Marked +)	503-1872-06	6	+	Muffler Kit
1	155-4641	1	*Muffler, Marine	503-1872-06	4	*	Separator Kit
				3	130-7343	1	+ Separator, Water
				4	503-1872-02	4	+ Clamp, Hose

Isolated Ground

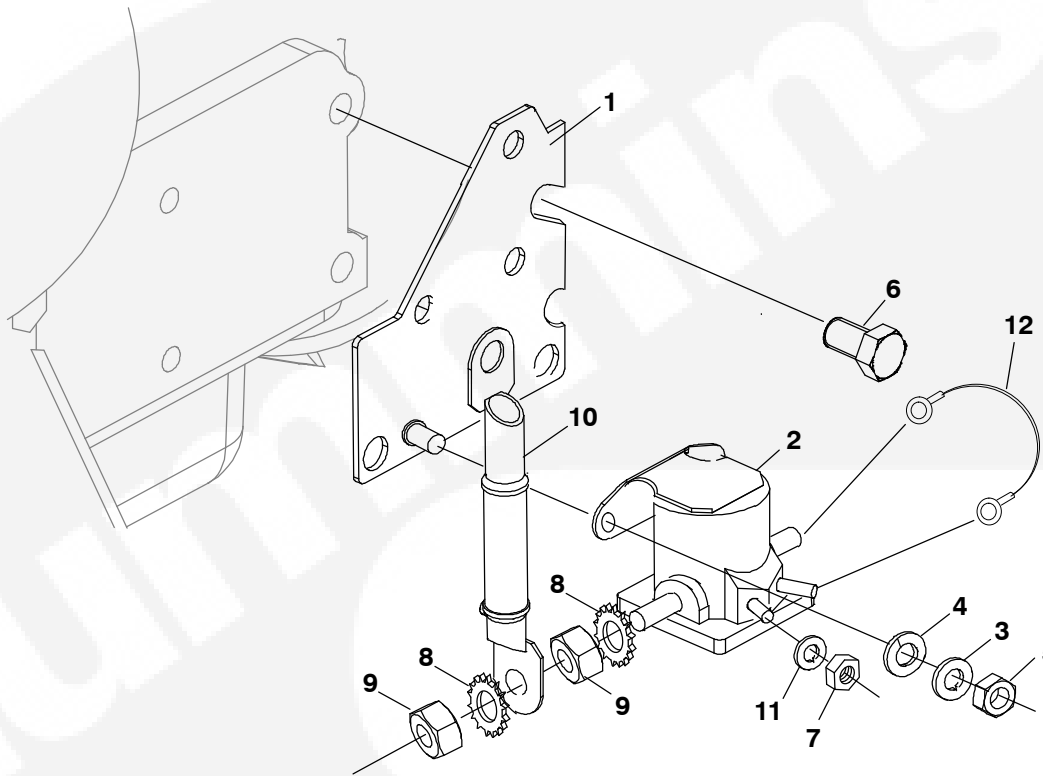


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	333-0732-02	1	Bracket, Solenoid
2			*Relay, Solenoid
	307-1617	1	12V
	307-2656	1	24V
3	526-0399-58	2	Washer, Flat (M6)
4	850-0114-53	2	Washer, Split Lock (M6)
5	862-0026-54	2	Nut, Hex (M6)
6	800-3025-01	3	Screw, Hex Head Cap (M12 x 1.25 x 20)
7	870-0131-01	2	Nut, ET Hex (#10-32) (12V)

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
8	853-0016	2	Washer, ET Lock (5/16")
9	862-0026-30	2	Nut, Hex (5/16-24)
10	338-4200-02	1	Harness, Ground
11	853-0016	2	Washer (5/16)
12	226-4976	1	Cable, Jumper

* - Relay Solenoid ties to B- and K9-1 Isolated Ground Harness (338-4200-01)


Mounting Base

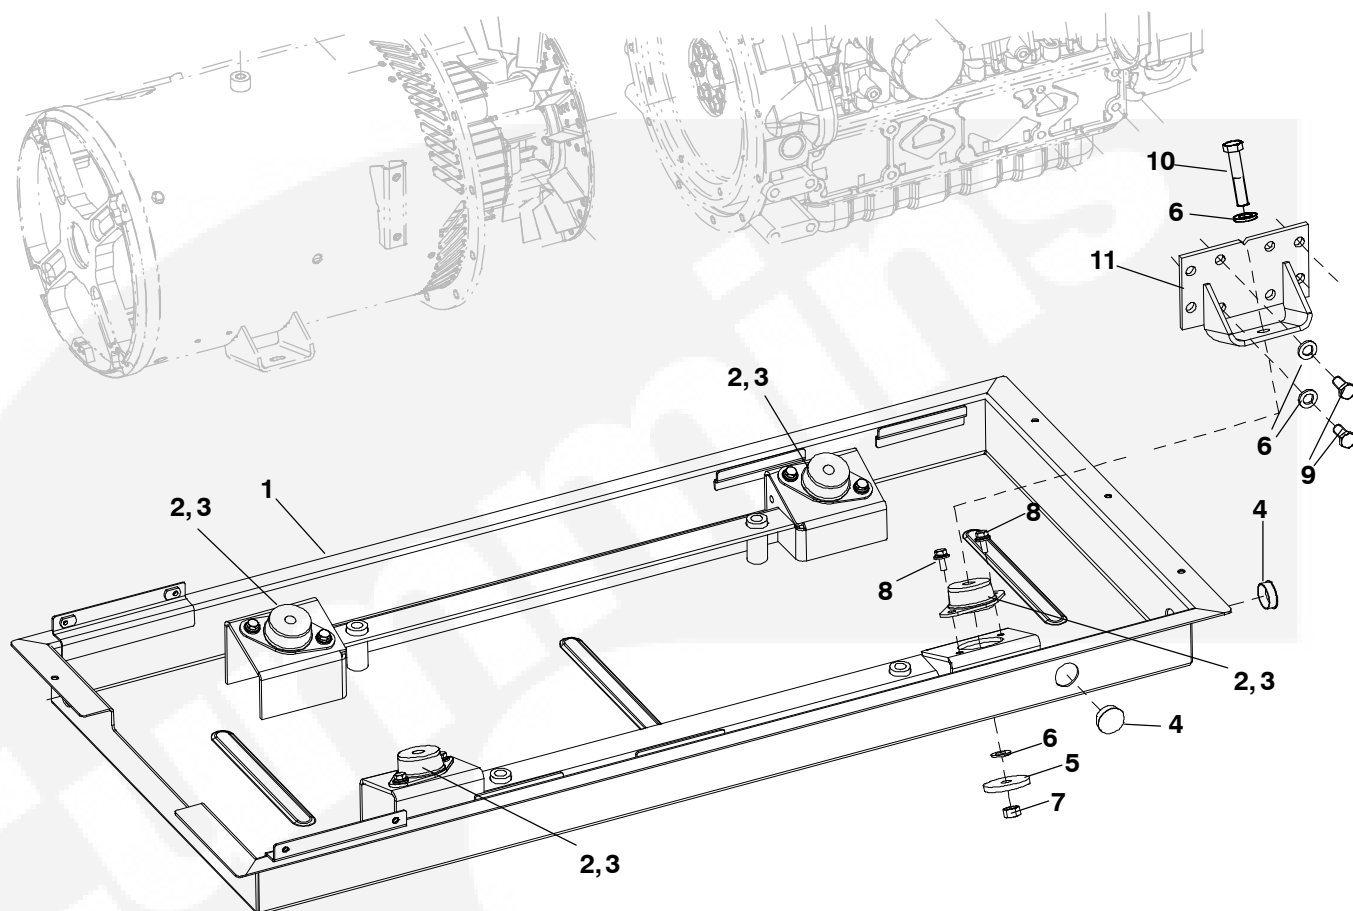

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	403-6043-02	1	Assy, Drip Pan	4	517-0138-04	3	Plug, Hole
2			Isolator, Mounting Without PTO	5	526-0172	4	Washer, Flat
	402-0676-01	4	MDKBT (*Front and Rear)	6			Washer, Flat (M12)
	402-0676-01	2	MDKBU (*Front Only)		526-0399-64	19	Without PTO
			With PTO		526-0399-64	11	With PTO
	402-0676-01	2	MDKBT (Rear Only)	7	860-2010	4	Nut, Hex (M12 x .75mm)
	402-0676-01	2	MDKBU (Rear Only)	8	821-6003-01	8	Screw, Hex Head Sems (M8 x 1.25 x 16mm)
3			Isolator, Mounting Without PTO	9	800-3033	8	Screw, Hex Head Cap (M12 x 1.25 x 25mm)
	403-3955	0	MDKBT (Not Used)	10	800-2118	1	Screw, Hex Head Cap (M12x 1.75 x 60mm)
	403-3955	2	MDKBU (Rear Only)	11	403-6064-02	1	Mount, Engine
			With PTO				
	403-3955	2	MDKBT (*Front Only)				
	403-3955	2	MDKBU (*Front Only)				

*_Facing engine end is considered the front of the unit.

Belt Guard

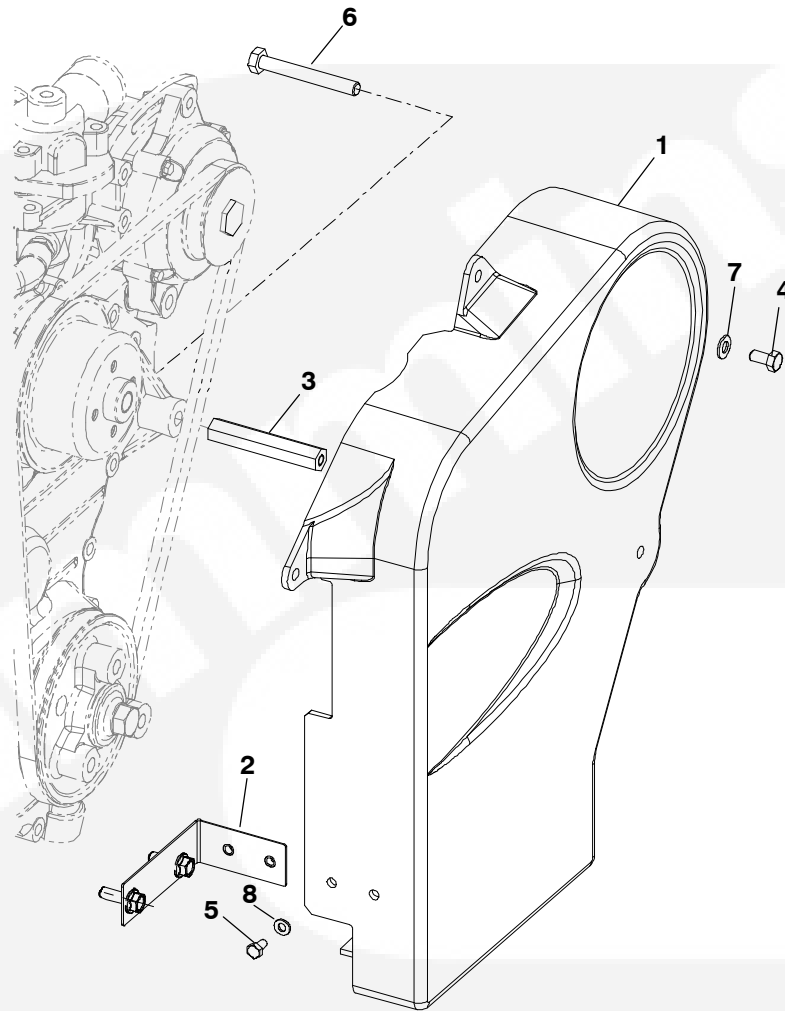

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1280-01	1	Kit Guard, Belt (Includes Parts Marked *)
1	130-6958-01	1	*Guard, Belt
2	130-7038-03	1	*Bracket, Fan Guard
3	130-7127	1	*Spacer, Guard
4	800-3017-17	4	*Screw, Hex Head Sems (M8 x 1.25 x 12mm)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	800-3017-02	2	*Screw, Hex Head Sems (M6 x 1 x 12mm)
6	800-3017-50	1	*Screw, Hex Head Cap (M10 x 1.5 x 90mm)
7	526-0399-60	4	*Washer, Flat
8	526-0399-58	2	*Washer, Flat
9	98-4798-01	1	*Label, Warning


All parts are for Unhoused Units Only.

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The parts are numbered as follows:

- 1**: A small pin or screw used to secure the top cover (9) to the main housing.
- 2**: A small bracket or plate used to secure the bottom cover (11) to the main housing.
- 3**: A long pin or screw used to secure the top cover (9) to the main housing.
- 4**: A small pin or screw used to secure the bottom cover (11) to the main housing.
- 5**: A small pin or screw used to secure the bottom cover (11) to the main housing.
- 6**: A small pin or screw used to secure the bottom cover (11) to the main housing.
- 7**: A small pin or screw used to secure the bottom cover (11) to the main housing.
- 8**: A rectangular plate or cover used to secure the bottom cover (11) to the main housing.
- 9**: The main housing or pump body.
- 10**: A small pin or screw used to secure the bottom cover (11) to the main housing.
- 11**: The bottom cover or base plate.


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
7	800-6395-01	8	*Screw, Hex Head Sems Stainless (M6 x 1.00 x 16mm)
8	190-0865-03	1	*Guard, Coupling
9	130-6958-02	1	*Guard, Belt
10	526-0399-60	2	*Washer, Flat
11	526-0399-58	4	*Washer, Flat

Generator Housing

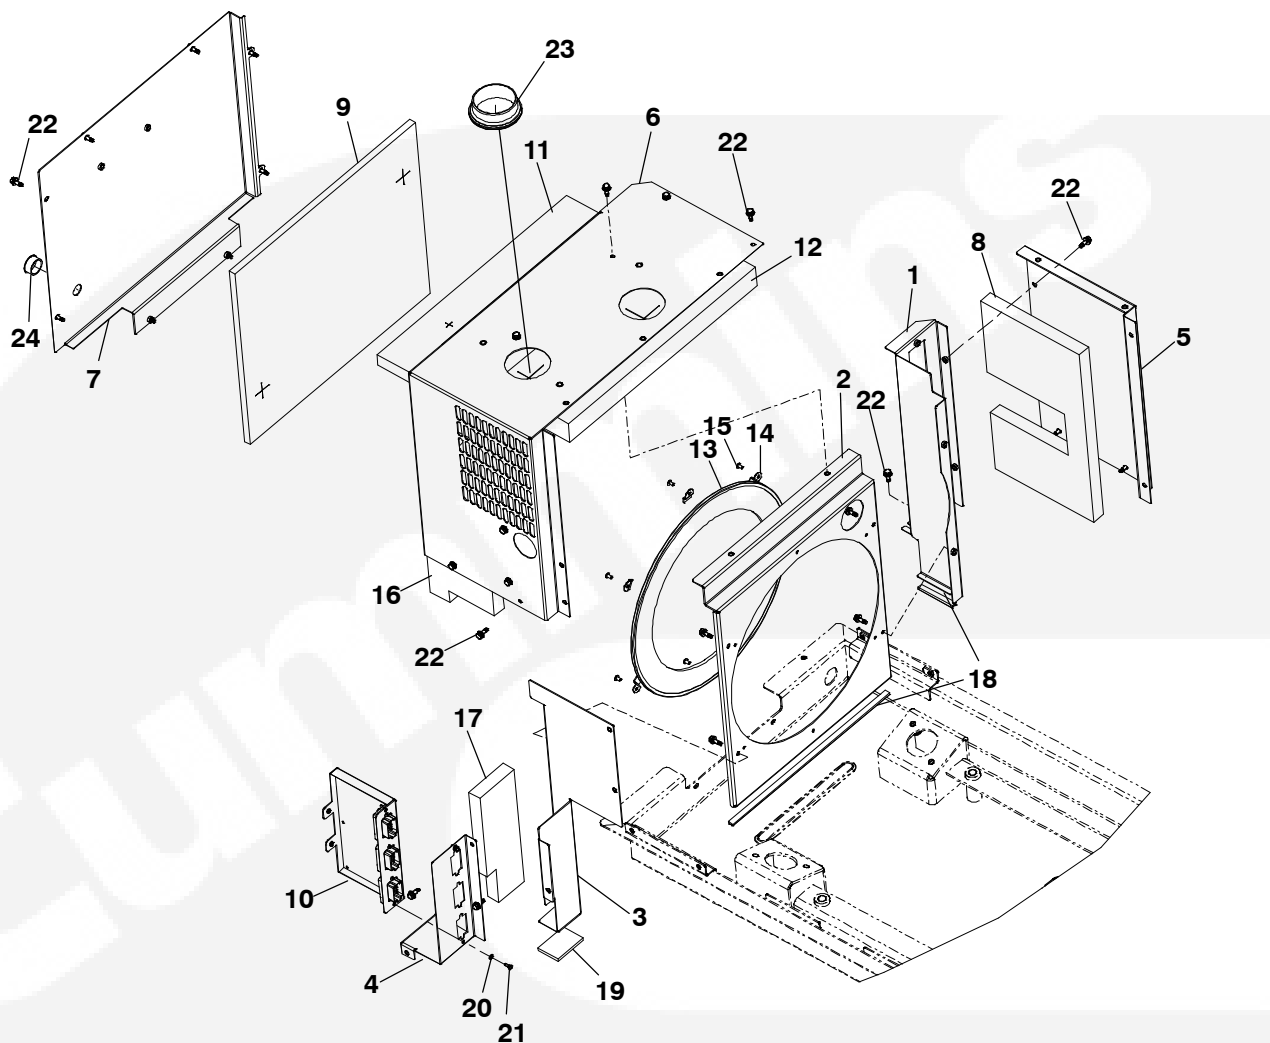

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	405-9299-03	1	Panel, Housing	14	134-5299-02	6	Bracket, Fan HSG
2	405-9308-03	1	Panel, Air Baffle	15	818-0231-01	6	Rivet, Pop
3	405-9307-03	1	Panel, Air Baffle	16	405-9554	1	Insulation, Panel
4	405-9707-03	1	Panel, Access	17	405-6919-03	1	Insulation, Panel
5	405-9508-03	1	Panel, Enclosure	18	895-0395	19"	Seal, Weather
6	405-9300-03	1	Panel, Enclosure	19	405-9841	1	Insulation, Panel
7	405-9301-03	1	Cover, Enclosure (Rear)	20	526-2050	2	Washer, Flat (M4)
8	405-9552	1	Insulation, Panel	21	800-3042	2	Screw, Hex Head Sems (M4 x 0.7 x 10mm)
9	405-9553	1	Insulation, Cover	22	800-6395-01	29	Screw, Hex Head Sems (M6 x 1 x 16mm)
10	327-1450	1	PCB Assy, Control	23	508-1152	2	Grommet, Rubber
11	405-9559	1	Insulation, Panel	24	517-0136-01	2	Plug, Hole
12	405-9558	1	Insulation, Panel				
13	509-0368	1	Seal, Brush				


Battery Harness (Front Bulkhead)

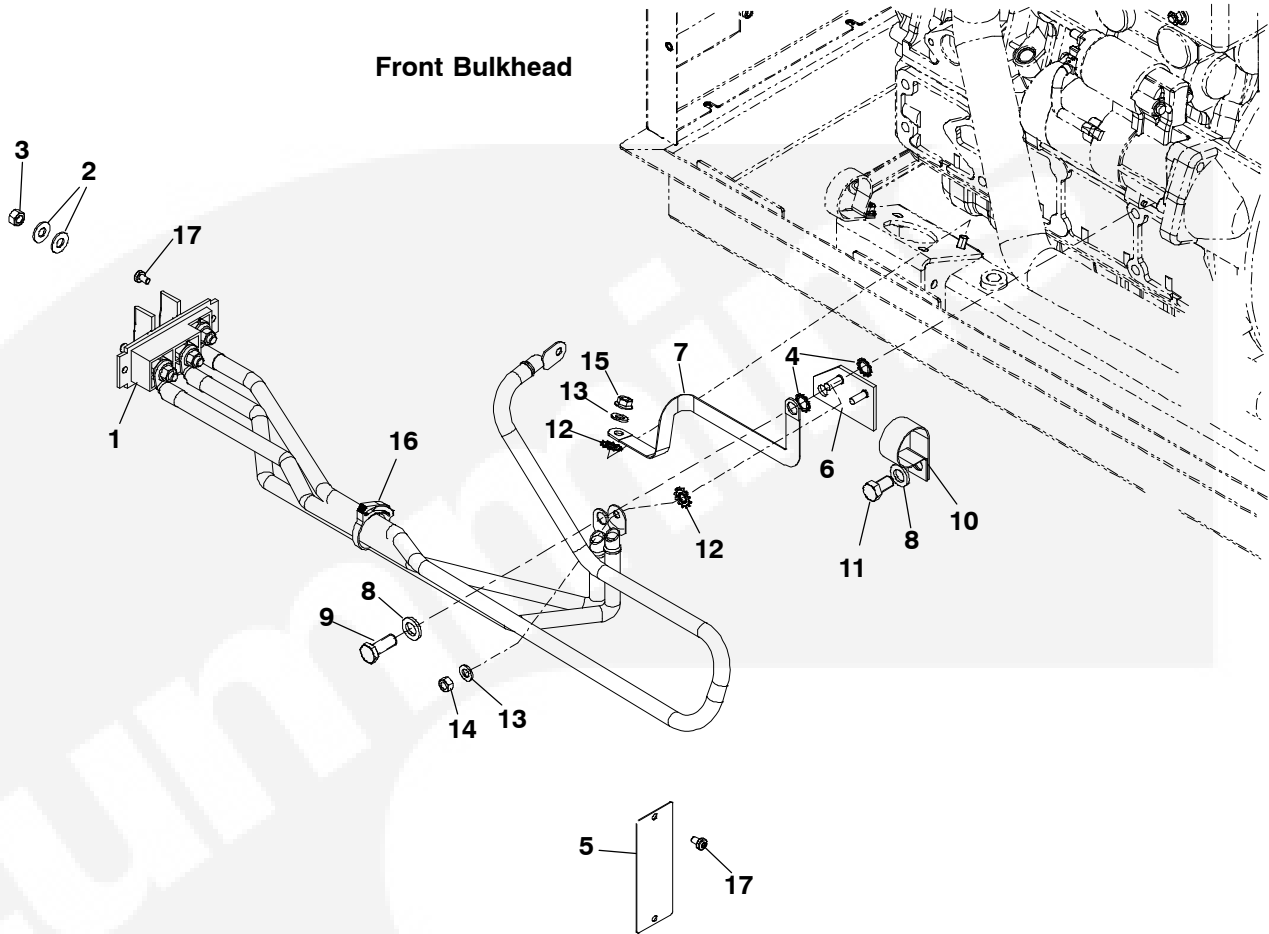

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	332-3771	1	Kit, Terminal Boot (Includes Insulated Terminal Black and Red)
1	338-4623-01	1	Harness, Battery
2	526-0029	6	Washer, Flat (1/2")
3	862-0003	3	Nut, Hex Head Hvy (3/8-16UNC)
4			Washer, ET Locking (M12)
	853-2012	2	Neg
	853-2012	1	ISO
5	405-9764-02	1	Cover, Access (Housed Only)
6	337-2784-02	1	Bar Assy, Bus (Neg Gnd)
7	337-2785	1	Strap, Bond
8	526-0399-64	2	Washer, Flat (M12)
9	800-3032	1	Screw, Hex Head Cap (M12 x 1.25 x 30mm)
10	518-0548-43	1	Clamp, Hose

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
11	800-3025-01	1	Screw, Hex Head Cap (M12 x 1.25 x 20mm)
12			Washer, ET Lock (5/16")
	856-0008	2	Neg
	856-0008	1	ISO
13			Washer, Flat (M8)
	526-0399-60	2	Neg
	526-0399-60	1	ISO
14	871-0025	1	Nut, HB Full (5/16-18) (Neg Ground)
15	870-2065-03	1	Nut, Hex Head Flanged (M8 x 1.25)
16	503-2865-13	1	Clamp, Hose
17	823-1002-03	4	Screw, Pan Head Mach Torx (M6 x 1.00 x 10mm)


Battery Harness (Rear Bulkhead)

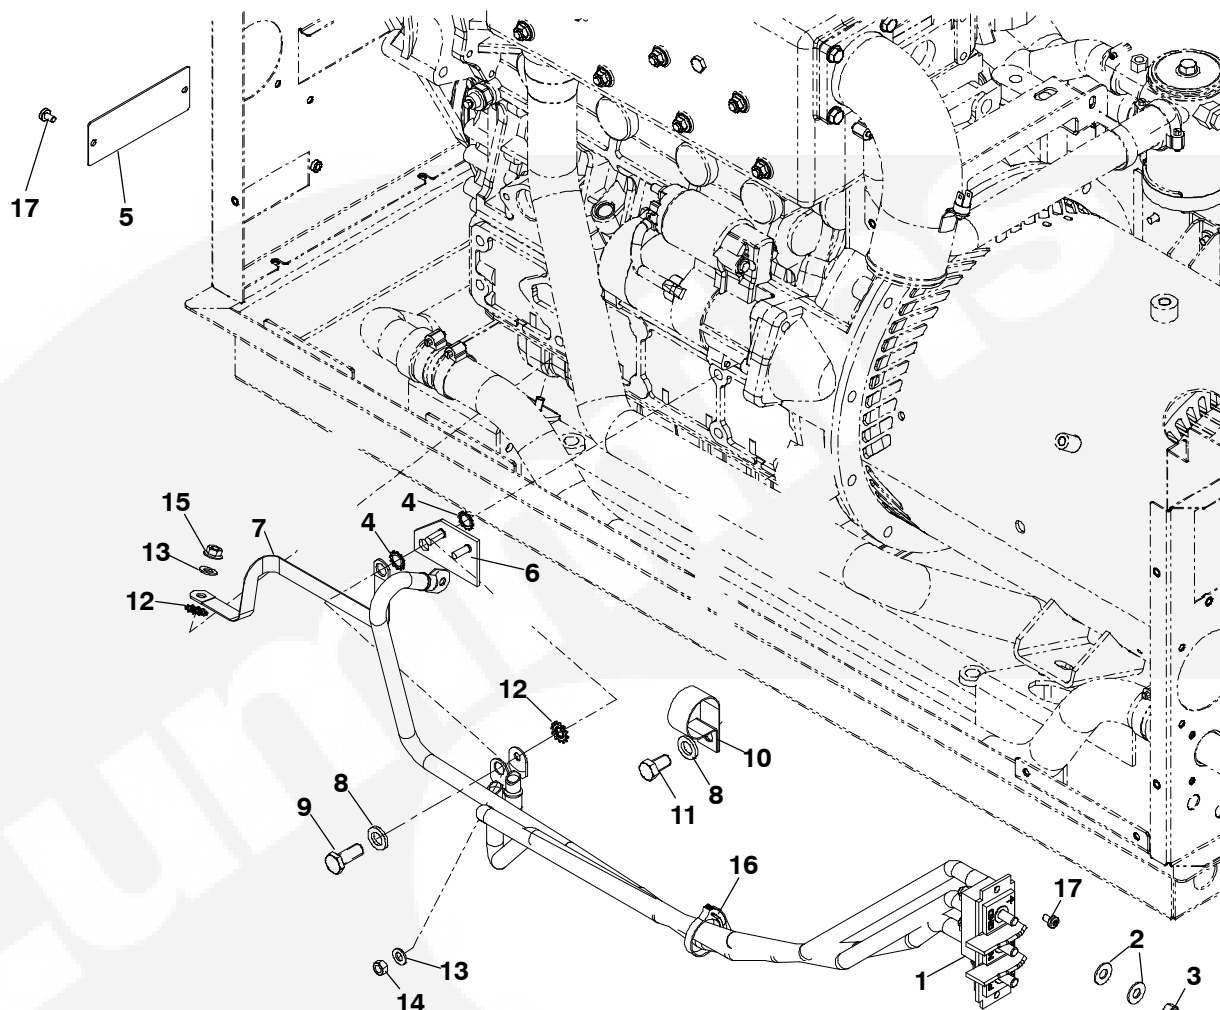

Front Bulkhead

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	338-4623-01	1	Harness, Battery	12			Washer, ET Lock (5/16")
2	526-0029	6	Washer, Flat (1/2")		856-0008	2	Neg
3	862-0003	3	Nut, Hex Head Hvy (3/8-16UNC)		856-0008	1	ISO
4			Washer, ET Locking (M12)	13			Washer, Flat (M8)
	853-2012	2	Neg		526-0399-60	2	Neg
	853-2012	1	ISO		526-0399-60	1	ISO
5	405-9764-02	1	Cover, Access (Housed Only)	14	871-0025	1	Nut, HB Full (5/16-18) (Neg Ground)
6	337-2784-02	1	Bar Assy, Bus (Neg Gnd)	15	870-2065-03	1	Nut, Hex Head Flanged (M8 x 1.25)
7	337-2785	1	Strap, Bond	16	503-2865-13	1	Clamp, Hose
8	526-0399-64	2	Washer, Flat (M12)	17	823-1002-03	4	Screw, Pan Head Mach Torx (M6 x 1.00 x 10mm)
9	800-3032	1	Screw, Hex Head Cap (M12 x 1.25 x 30mm)				
10	518-0548-43	1	Clamp, Hose				
11	800-3025-01	1	Screw, Hex Head Cap (M12 x 1.25 x 20mm)				


Engine Sound Shield

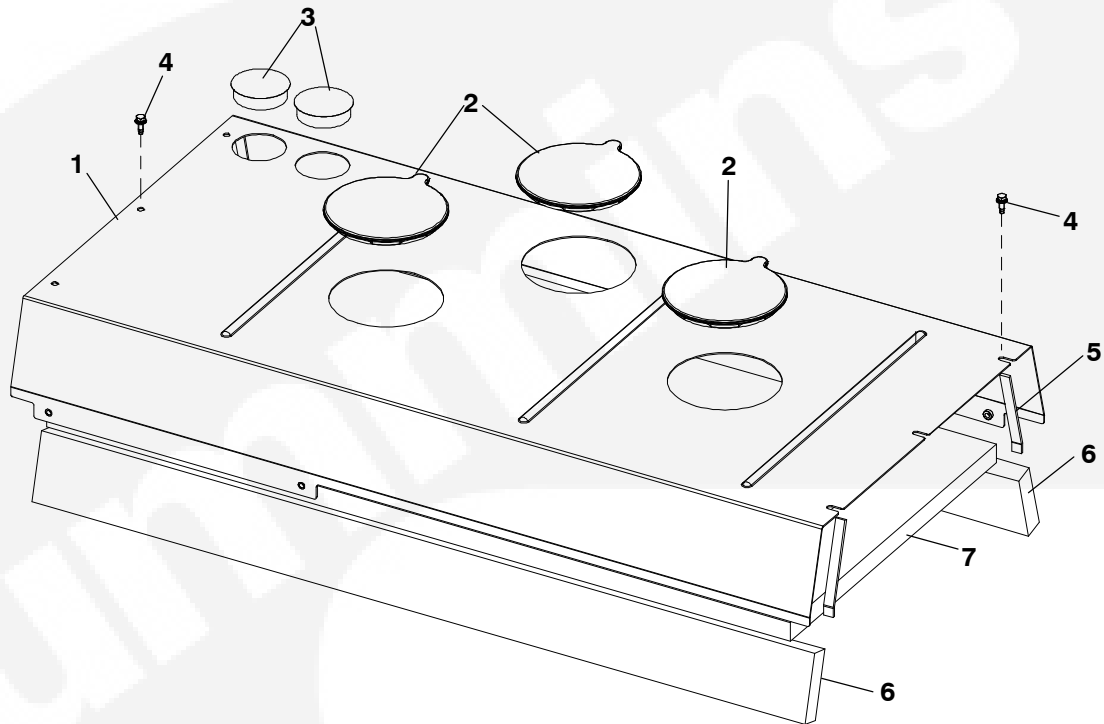

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	541-1279	1	Kit, Sound Shield (Includes Complete Sound Shield Enclosure for Engine)	5	405-9560	4	Gasket, Enclosure
1	405-9331-03	1	Panel, Roof	6	405-9567	2	Insulation, Roof
2	405-7257	3	Cover, Access	7	405-9548	1	Insulation, Roof
3	517-0392-23	2	Plug, Hole				
4	800-6395-01	6	Screw, Hex Head Sems Stainless (M6 x 1.0 x 16mm)				

* - Kit Includes Insulated Roof, Doors, Sides and Ends.


Engine Panel Sound Shield

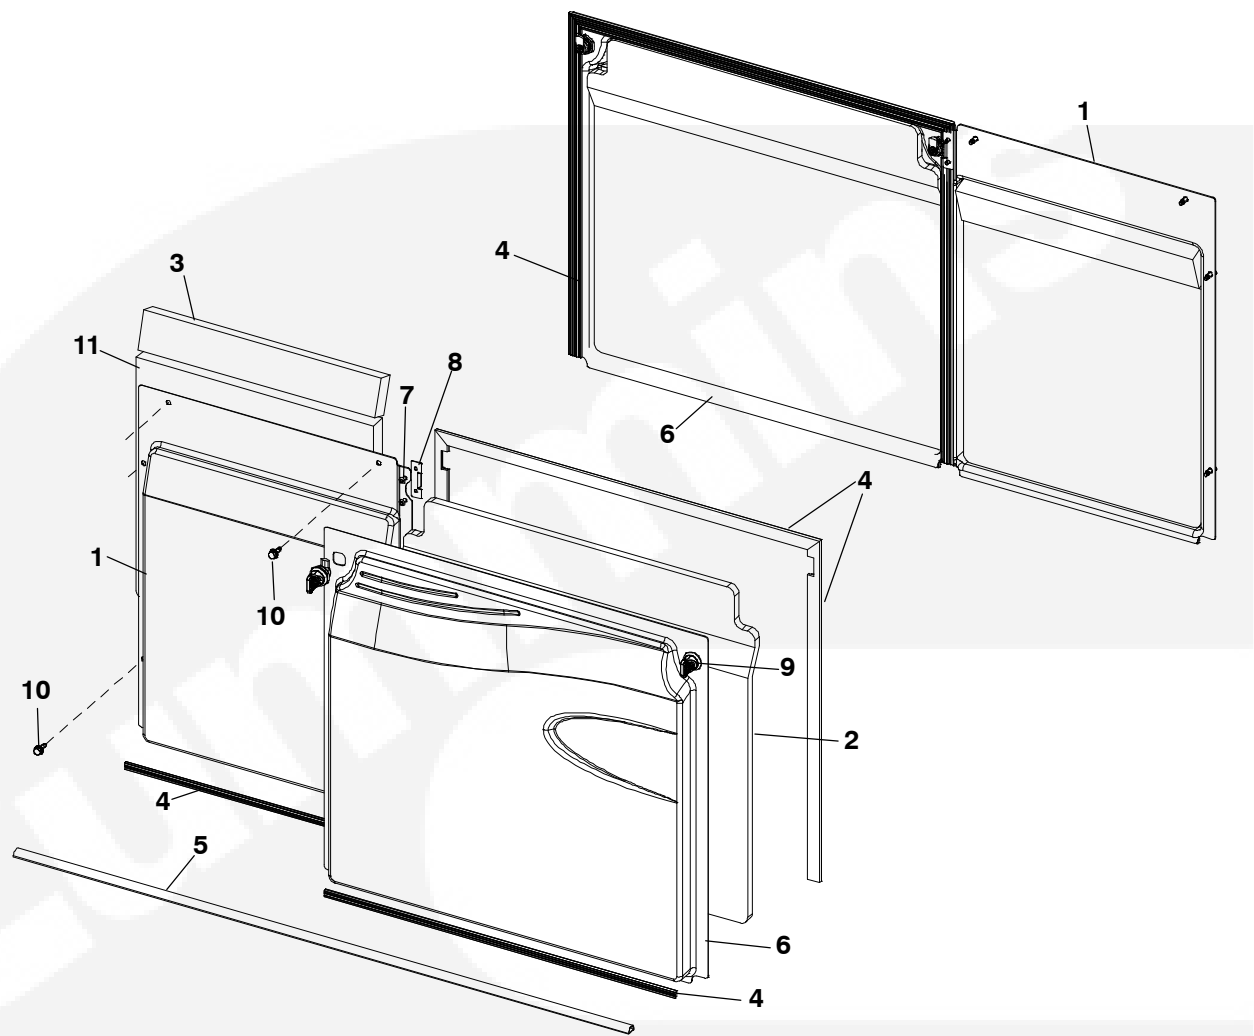

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	405-9752-03	2	Panel, Access	8	A030F179		Rivet, Pop
2	405-9568	2	Insulation, Door	8	406-1032	2	Catch, Door
3	405-6993-02	2	Insulation, Sound	9		4	Latch, Door
4	895-0395	17.6'	Seal, Weather		406-0958		Latch, Door
5	895-0411	2.8'	Seal, Weather		A030B824		Latch, Door
6	405-9751-03	2	Door	10	800-6395-01	8	Screw, Hex Head Sems (M6 x 1 x 16mm)
7		4	Rivet, Pop	11	405-6995-02	2	Insulation, Sound
	818-0231-01		Rivet, Pop				




Engine Panel Sound Shield (Front and Rear without PTO)

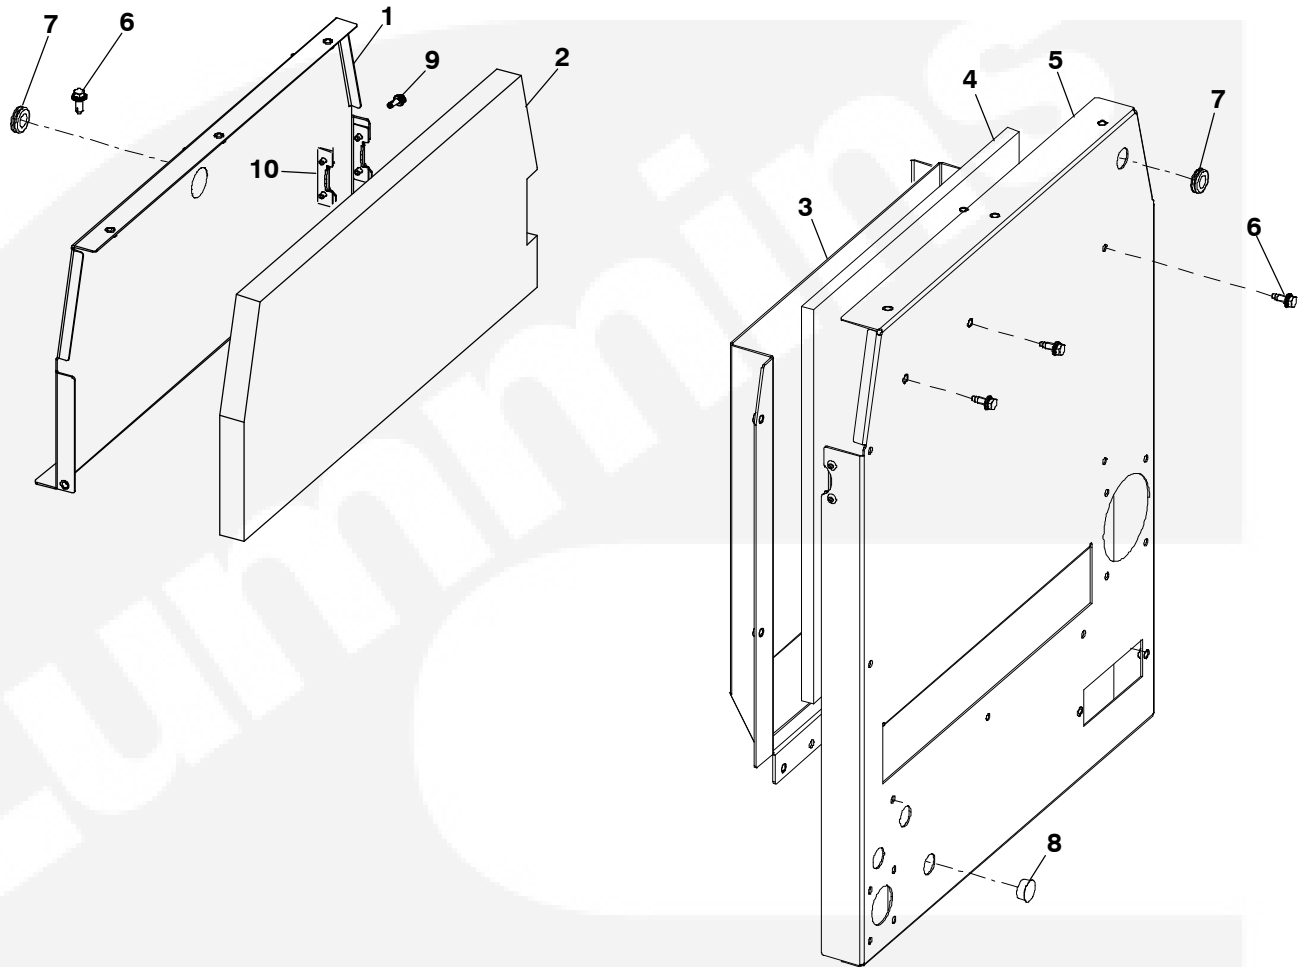

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1	405-9336-03	1	Panel, Roof (End)
2	405-9547	1	Installation Roof (End)
3	405-9517-03	1	Panel, Duct
4	405-9732	1	Insulation, Duct
5	405-9315-03	1	Panel, Enclosure (Front)
6	800-6395-01	12	Screw, Hex Head Cap Stainless (M6 x 1.0 x 16mm)

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
7	508-0021	2	Grommet, Rubber
8	517-0136-01	1	Plug, Hole
9	818-0231-01	4	Rivet, Pop
10	406-1032	2	Catch, Door

Engine Panel Sound Shield (Front w/PTO)

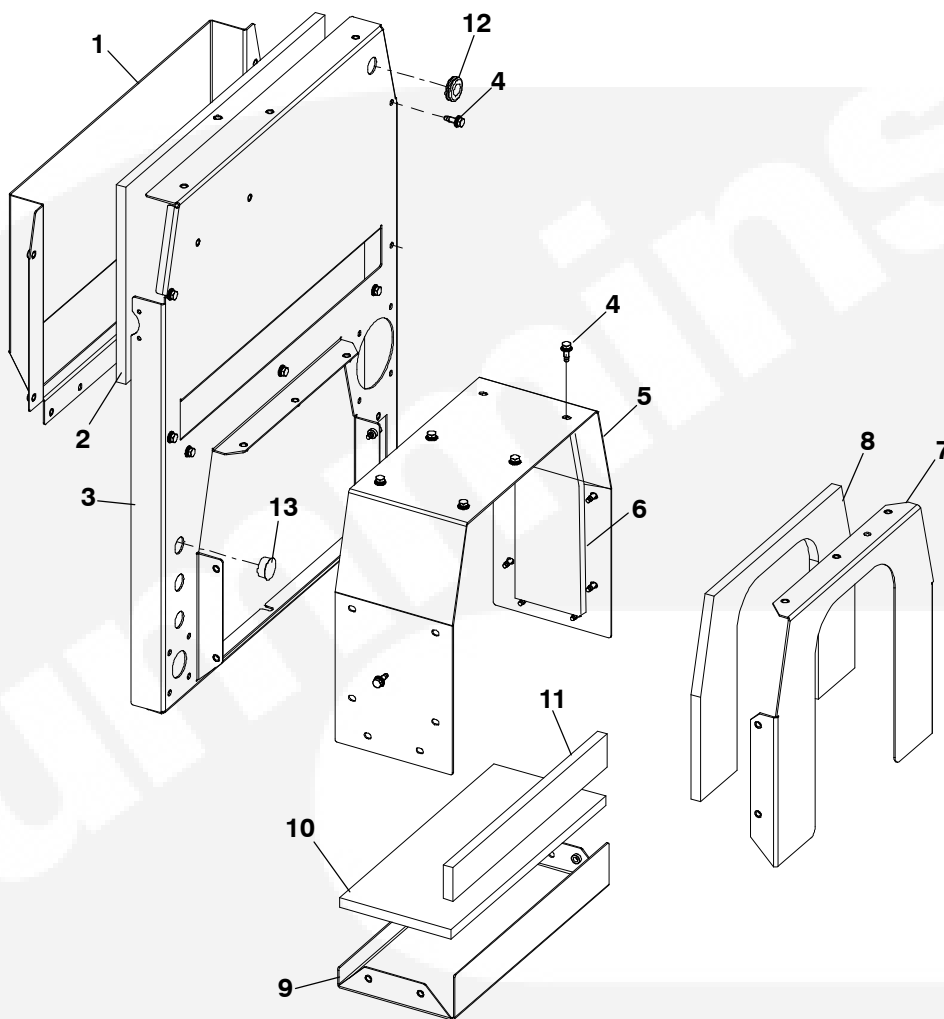


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	541-1395	1	Kit, Sound Shield (Includes PTO End Parts)	7	190-0864-03	1	Guard, PTO
1	405-9507-03	1	Panel, Duct	8	405-9562	1	Insulation, Sound
2	405-9731	1	Insulation, Duct	9	190-0862-03	1	Guard, PTO
3	405-9314-03	1	Panel, Enclosure	10	405-9563	1	Insulation, Sound
4	800-6395-01	25	Screw, Hex Head Sems Stainless (M6 x1 x 16mm)	11	405-9564	1	Insulation, Sound
5	190-0861-03	1	Guard, Coupling (PTO)	12	508-0021	2	Grommet, Rubber
6	405-9561	1	Insulation, Sound	13	517-0136-01	1	Plug, Hole

* - All Parts On This Page Included In Kit.

“Blank Sheet”



Generator

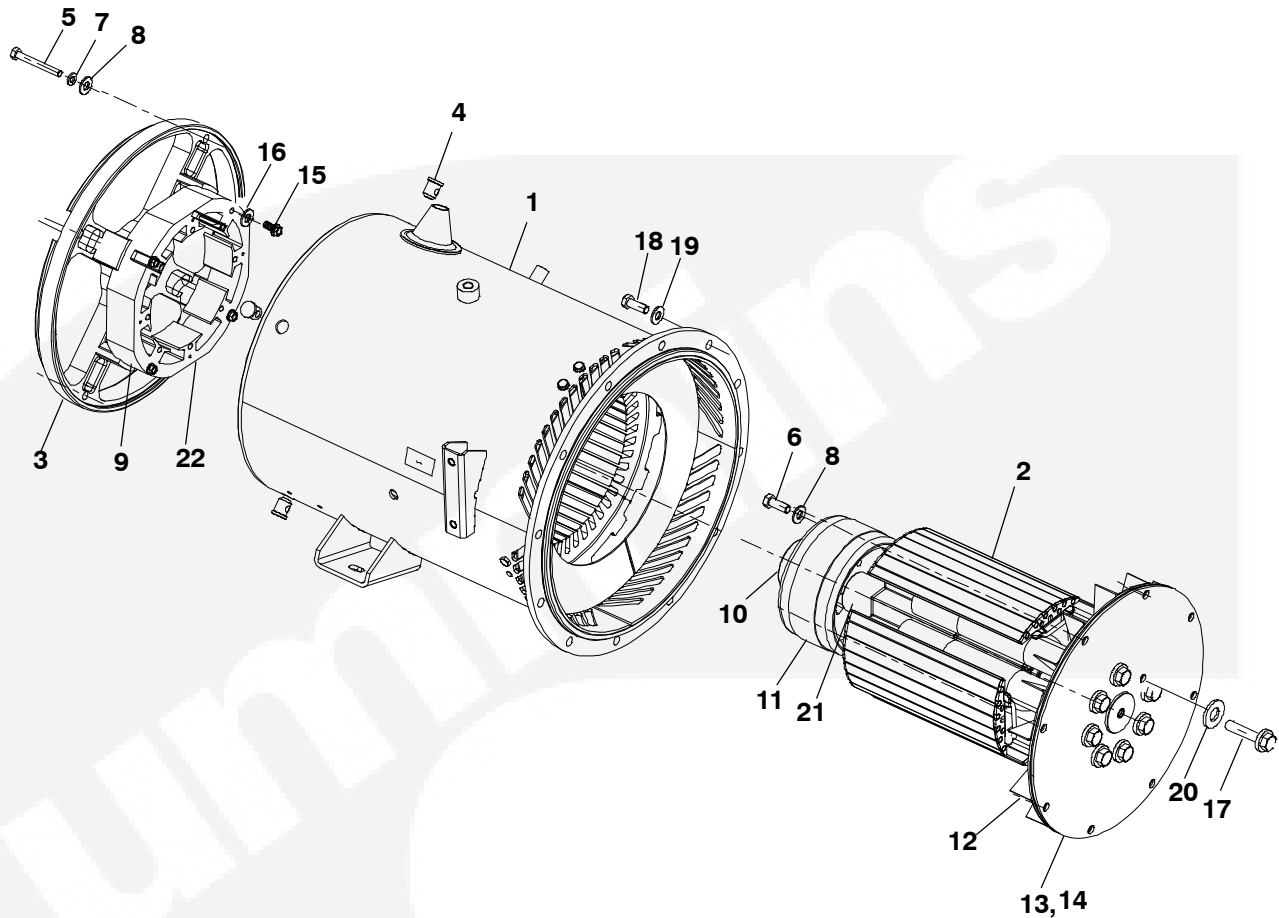

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
---------	----------	----------	------------------


1	300-4434	1	Kit, Generator Heater
			12V
	300-4435	1	24V
			Stator, Generator
			(Includes Grommet)
			Single, Phase
	220-4671-06	1	MDKBT
	220-4671-07	1	MDKBU
			Three Phase
			MDKBT
2	220-4672-06	1	MDKBT
	220-4672-07	1	MDKBU
			Rotor Assy, Generator
			(Includes Parts Marked *)
3	201-3641-06	1	MDKBT
	201-3641-07	1	MDKBU
3	211-0465-02	2	Endbell
4	232-3206-02	4	Retainer, Endbell
5	800-0310-27	4	Screw, Hex Head Cap (.312-16 x 2.50")
6	800-0310-36	4	Screw, Hex Head Cap (.375-16 x 1.00")
7	850-0114-06	4	Washer, Locking (.31")
8	526-0399-42	4	Washer, Flat (.38")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
---------	----------	----------	------------------

9	323-1623	1	Connector, Plug
10	510-0112	1	Bearing, Ball
11	201-3642-02	1	Rotor, Wound (Excitor)
12	205-0229-02	1	Generator, Fan
13	232-3826-02	1	Spacer
14	232-3945	1	Drive, Disk
15	815-0935	4	Screw, Hex Flanged (.250")
16	853-0013	4	Washer, Locking ET (.250")
17	800-3017-52	8	*Screw, Hex Head Cap (M12 x 1.75 x 20mm)
18	815-0600	12	Screw, Hex Head Cap (.375-16 x 1.00")
19	526-0399-62	12	Washer, Flat (M10)
20	526-0399-73	8	Washer, (M12)
21	232-3815-04	1	Hub, Drive
	358-0069	1	*Diode (Not Shown)
	358-0070	1	*Diode (Not Shown)
22	220-4413-02	1	Stator (Exciter)

* - Parts Included in Generator Rotor Assy.+
 - Heater Clamp Cover and Hardware Included
 In Heater Kits.


Control Box

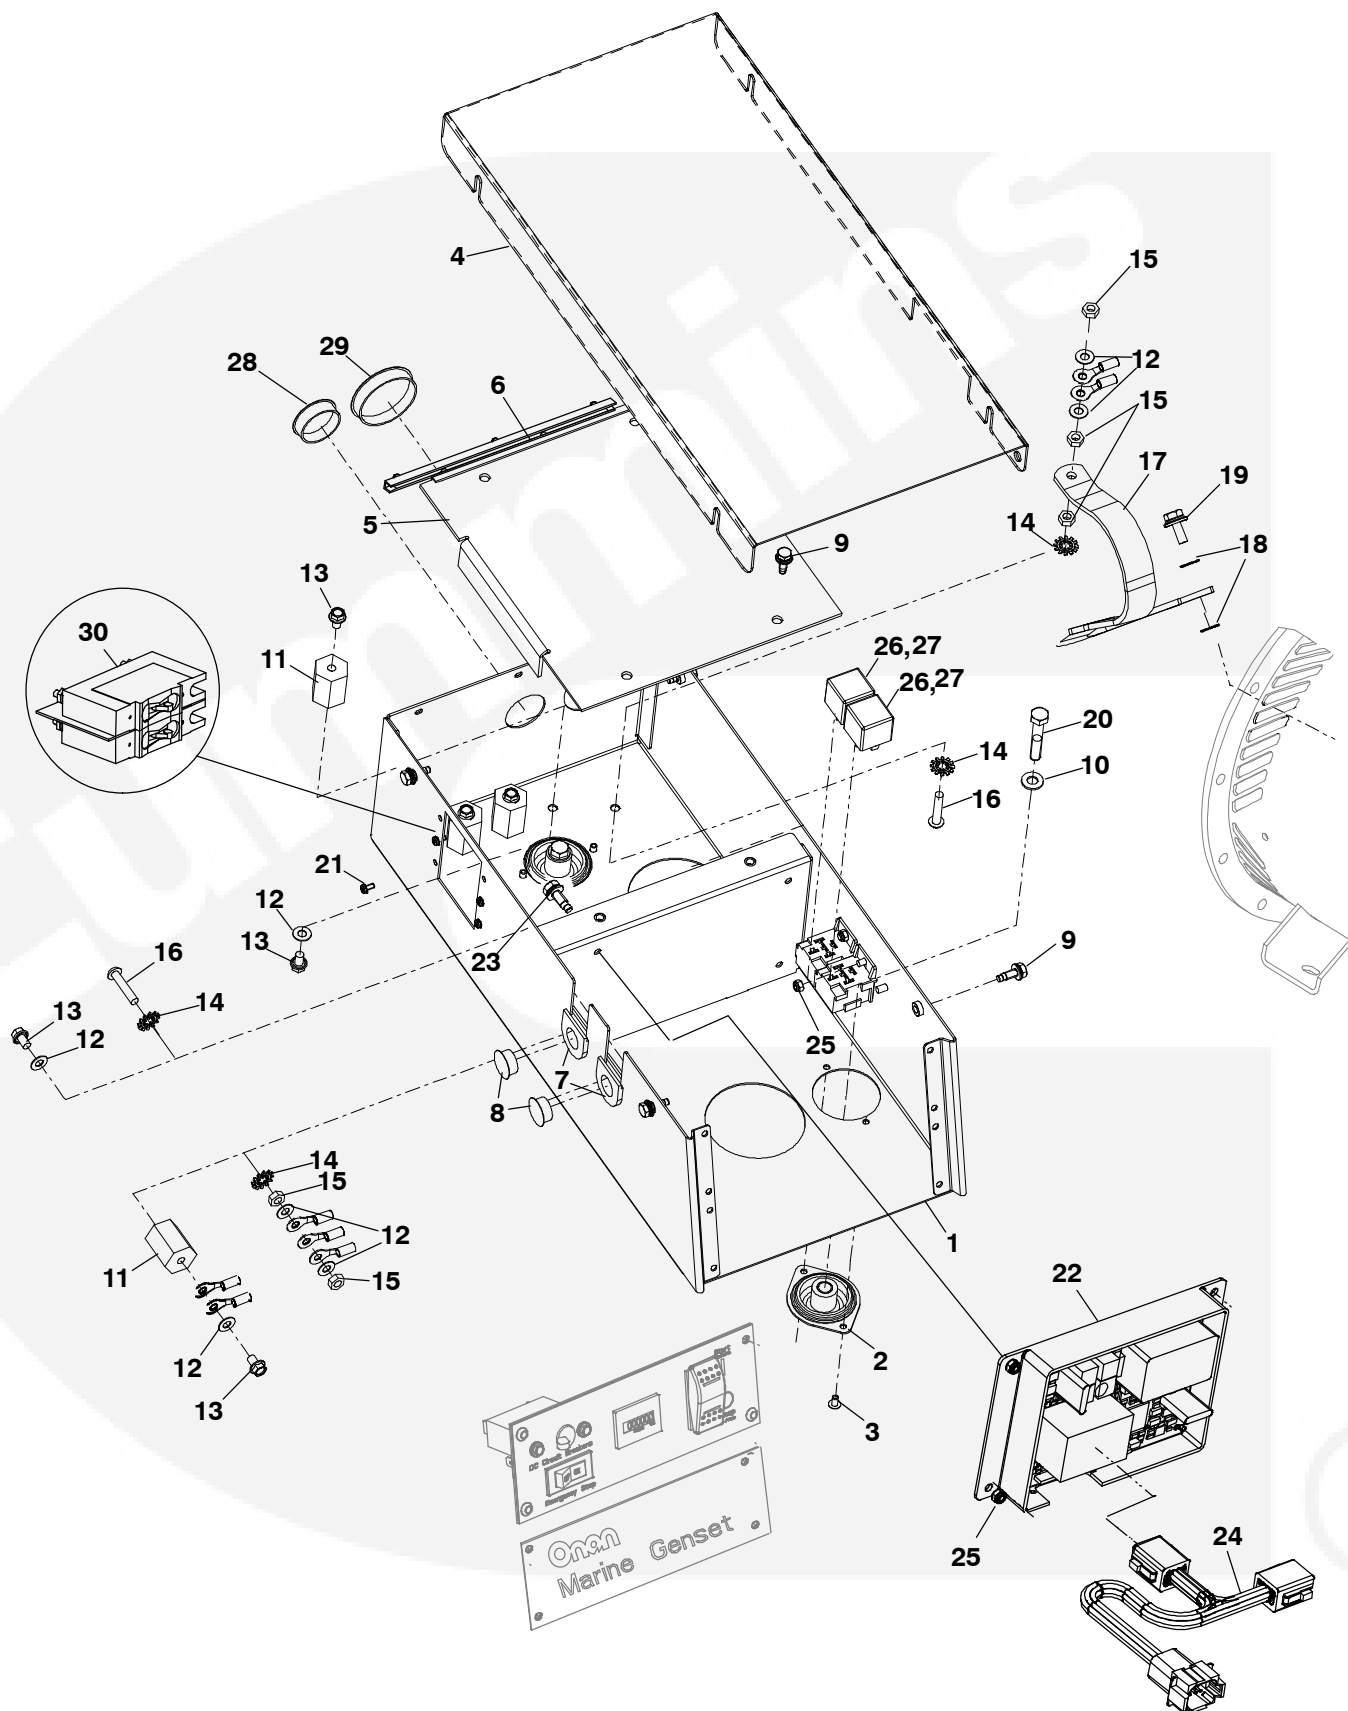

Control Box


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	541-1195-03	1	Kit, PCB (J1939 No Cover)	23	800-6002	4	Screw, Hex Head Sems (M5 x .8 x 10mm)
	541-1195-04	1	Kit, PCB (SmartCraft No Cover)				J1939 /Smartcraft
1	319-6227-03	1	Control, Box	24	338-4491	1	Harness, Accessory
2	402-0681-01	3	Isolation, Vibration				J1939/Smartcraft
3	818-0231-01	6	Rivet, Pop	25			Nut, Nylon Locking (M5)
4	319-6228-03	1	Cover, Box		870-2062	2	Neg/Iso Gnd 1-3 Phase 12 and 24v
5	319-4404	1	Cover		870-2062	4	J1939 /Smartcraft
6	332-3750	1	Guide, Card	26	307-2767	2	Relay, SPDT (12V)
7	508-1105	2	Grommet, Remote	27	307-2819	2	Relay, SPDT (24V)
8	517-0136	2	Plug, Hole	28	517-0138-05	1	Plug, Hole
9	800-6395-01	6	Screw, Hex Head Cap (M6 x 1 x 16mm)	29	517-0138-08	1	Plug, Hole
10	526-2100	3	Washer, Flat (M8)	30			Circuit, Breaker MDKBT
11			Standoff, Insulation		320-1689-18	1	100 Amps 2 Pole
	332-2370	2	Single Phase Neg 12V-24V		320-2332-01	1	115 Amps 2 Pole
	332-2370	3	Three Phase Neg/ISO 12V-24V		320-1891-10	1	50 Amps 3 Pole
			Three Phase ISO 12V-24V		320-1836-12	1	70 Amps 3 Pole
12	332-2370	4	Washer, Flat (6.75 ID)		320-1836-13	1	75 Amps 3 Pole
	526-0052	6	Single Phase Neg 12V-24V		320-1836-14	1	80 Amps 3 Pole
	526-0052	7	Three Phase Neg 12V-24V		320-1836-15	1	85 Amps 3 Pole
	526-0052	8	Single Phase ISO 12V-24V		320-1836-16	1	90 Amps 3 Pole
	526-0052	9	Three Phase ISO 12V-24V		320-1836-17	1	95 Amps 3 Pole
13			Screw, Hex Flange (1/4-20 x 3/8")		320-1836-18	1	100 Amps 3 Pole
	821-0009	4	Single Phase Neg 12V-24V				MDKBU
	821-0009	6	Three Phase Neg 12V-24V		320-1689-18	1	100 Amps 2 Pole
	821-0009	8	Three Phase ISO 12V-24V		320-1891-10	1	50 Amps 3 Pole
14	856-0006	4	Washer, ETIT Locking (1/4)		320-1891-11	1	55 Amps 3 Pole
15	871-0016	5	Nut, Hex (.25-20UNC)		320-2332-01	1	115 Amps 2 Pole
16	810-0155	2	Screw, Round, Head (.25-20UNC 1.25")		320-2332-02	1	125 Amps 2 Pole
17	337-2795	1	Strap, Bond		320-1836-15	1	85 Amps 3 Pole
18	853-0016	2	Washer, ET Lock (5/16")		320-1836-16	1	90 Amps 3 Pole
19	821-6003-01	1	Screw, Hex Head Cap (M8 x 1.25 x 16mm)		320-1836-17	1	95 Amps 3 Pole
20	800-6062	3	Screw, Hex Head Cap (M8 x 1.25 x 45mm)		320-1836-18	1	100 Amps 3 Pole
21			Screw, XREC Pan Head (6-32 x .312")		320-1836-19	1	110 Amps 3 Pole
	815-0550-03	4	Single Phase	* - Included In PCB Kits, PCB Assembly, Accessory Harness Instructions and Hardware.			
	815-0550-03	6	Three Phase				
22			Assy, NIM PCB				
	327-1659-01	1	NIM /J1939				
	327-1659-02	1	NIM /Smartcraft				

Control Panel Components

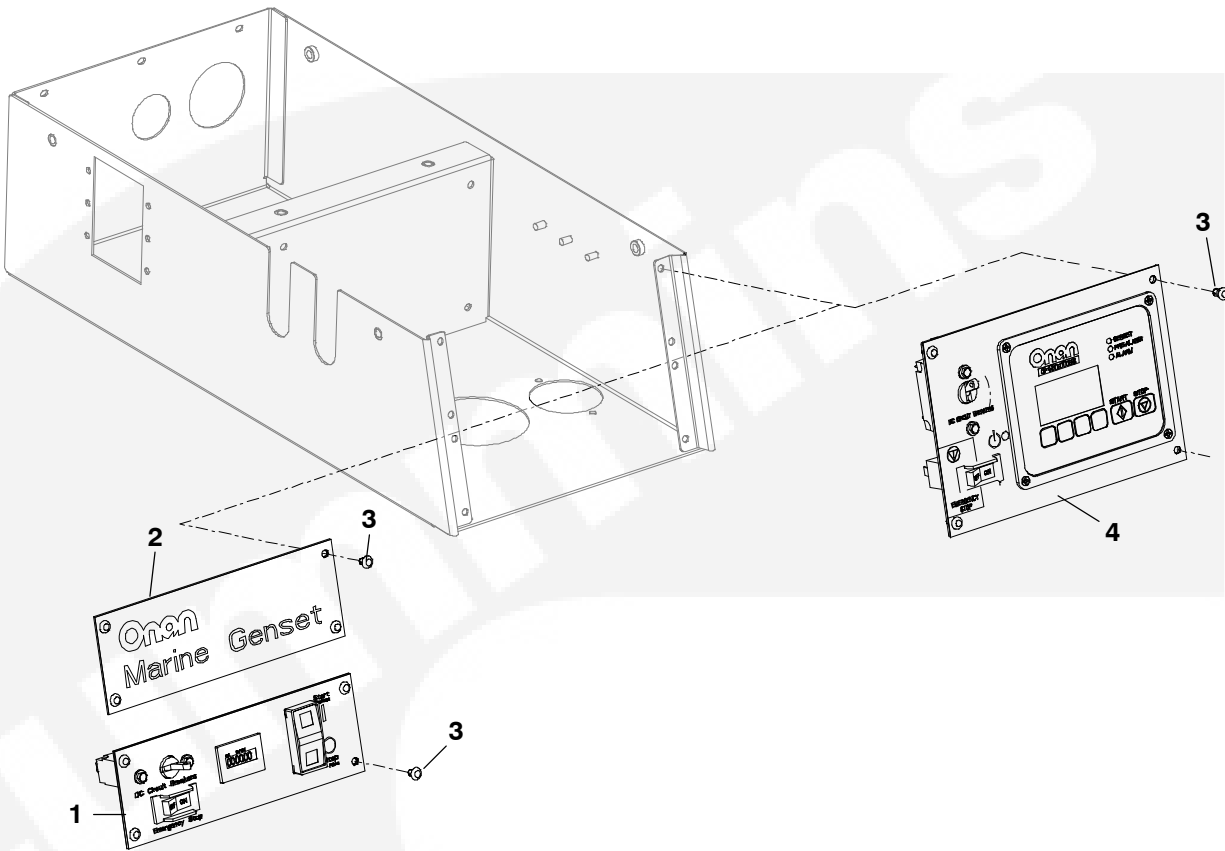

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	300-5476-09	1	Assy Panel, Engine 12V
	300-5476-10	1	24V
2	300-5474	1	Assy Panel, Blank (Std)
3	818-1150-03	8	Rivet, Drive Plastic (Std) Standard
	818-1150-03	4	eSDD
4	300-5944-01	1	Assy Control (eSDD) (See NIM Option Page)


Control Panel Kit

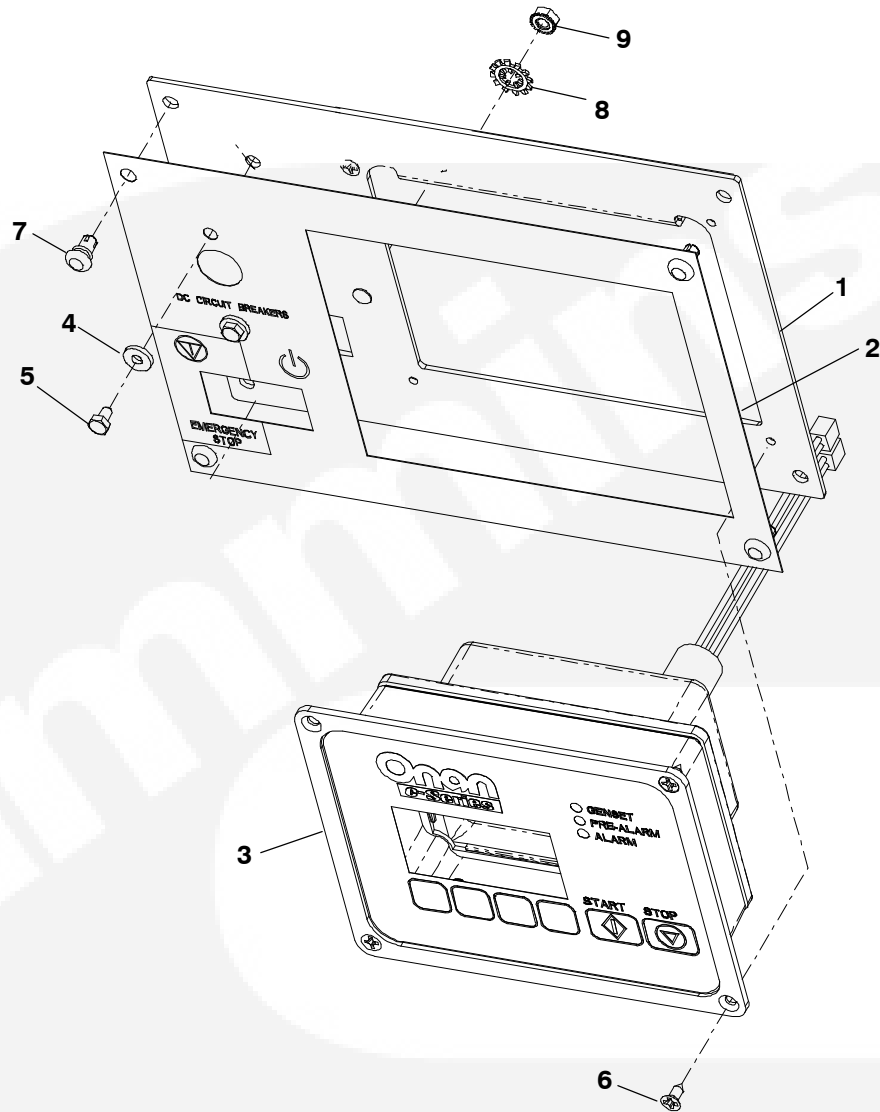

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	541-1130	1	Kit, Control (Includes Instruction Sheet Control and Screws)	6	814-2155-01	4	Screw, Flat Head XREC (M3.5 x 9.5mm)
1	319-5544-02	1	Panel, Display	7	818-1150-03	4	Rivet, Driver
2	98-8323	1	Label, Information (Display)	8	856-0003	1	Washer, ETITE Locking (#10)
3	300-6018	1	Assy, Control	9	870-0131	1	Nut, Sems ET (#10-32)
4	526-0399-05	2	Washer, Flat DAC (#6)				
5	800-0309-10	2	Screw, Hex Head Mach (#6-32UNC x .250Lg)				

* - Also includes Instruction sheet 000C-0671.

Control Panel Components (Breaker Switch Option)

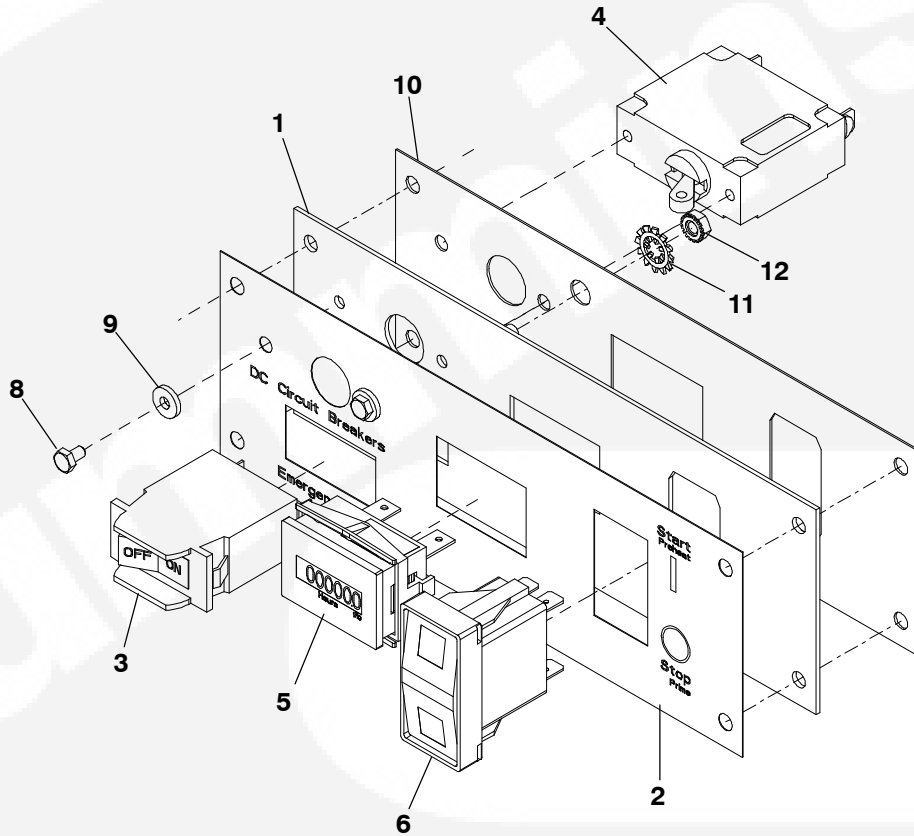


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
			Assy, Engine Panel (All Parts Included)
	300-5476-09	1	12V
	300-5476-10	1	24V
1	319-4368-06	1	Panel, Control
2	98-7781	1	Label, Control
3	320-2361	1	Breaker, Circuit (15 Amp)
4	320-2362	1	Breaker, Circuit (50 Amp)
5	302-2048	1	Meter, Hour
6			Switch, Rocker SPDT
	308-1218	1	12VDC
	308-1219	1	24VDC

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
7	338-4790	1	Harness, Control
8	800-0309-10	2	Screw, Hex Head (6-32 x 1/4")
9	526-0399-05	2	Washer, Flat (#6)
10	319-4467-02	1	Panel, Control (Ground)
11	856-0003	1	Washer, EIT Lock (#10)
12	870-0131	1	Nut, Sems EIT

* - See Control Box for Location.

Remote Control Panel

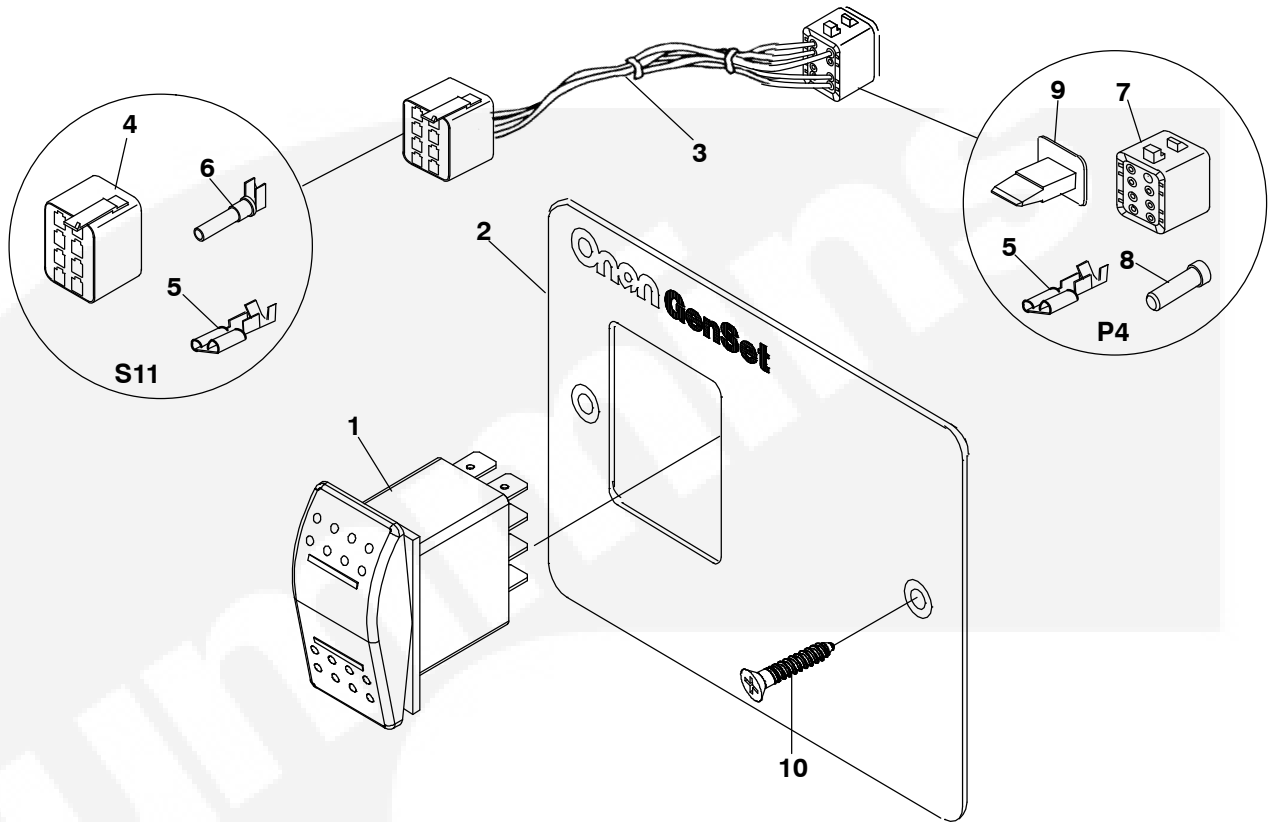

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
			Kit, Remote Switch Harness (Includes Parts Marked +)	6	323-1492	6	*Terminal, Socket
	541-0941-01	1	12V	7	323-1541	1	*Plug, (8 Pin)
	541-0941-02	1	24V	8	323-1491	3	*Plug, Seal
			Kit, Panel Remote (Includes Parts Marked #)	9	323-1543	1	*Wedge, Plug (8 Pin)
	300-5725-01	1	12V	10	815-0910	2	#Screw, Wood (#6 x 1)
	300-5725-02	1	24V	11	98-8092	1	+Label, Instructions
1			#+Switch, Rocker (S11)	12	98-8081	1	#+Label, Warning
	308-1101	1	12V				
	308-1102	1	24V				
2	319-4996	1	#Panel, Remote (Includes Printing)				
3	338-3988	1	#+Harness, Remote Panel (Includes Parts Marked *)				
4	308-1019	1	*Connector, Switch (S11)				
5	332-2890	6	*Terminal, Receptacle (.25")				


- Parts Included in Remote Panel.

+ - Parts Included in Remote Switch Harness. Instructions included in Kits only

“Blank Sheet”




Control Harness

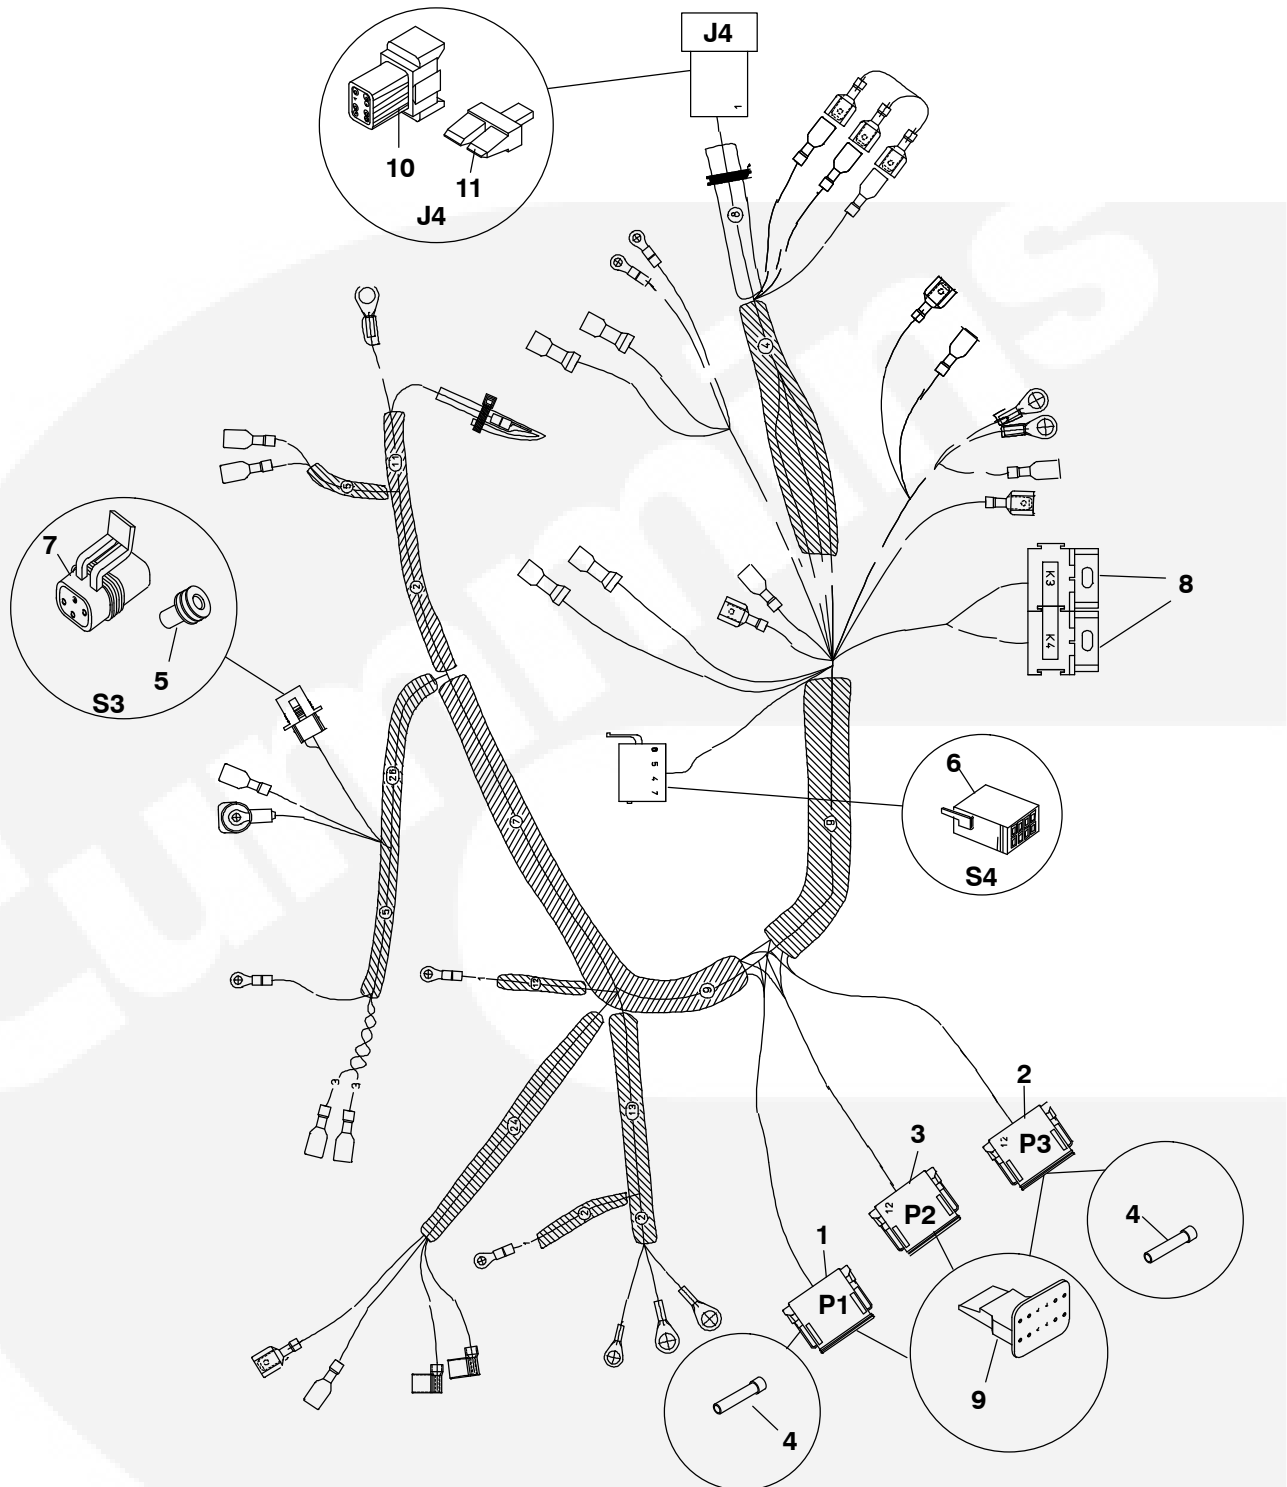


REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
	338-4790	1	Harness, Control	7	323-1765	1	Connector, Housing 4 Pin (S3)
1	323-1582-06	1	Plug (12 Pin, Black P1)	8	323-1563	1	Socket, Relay
2	323-1582-05	1	Plug (12 Pin, Gray P2)	9	323-1583	3	Plug, Wedge 12 Pin, P1, P2, P3
3	323-1582-07	1	Plug (12 Pin, Green P3)	10	323-1542	2	Connector, Receptacle 8 Pin (J4, J8)
4	323-1591	AR	Plug (P1)	11	323-1544	2	Receptacle, Wedge(J4, J8)
5	323-1708	AR	Seal,Cable(S3)				
6	308-1019	1	Switch, Connector (S4)				

Wiring Harnesses

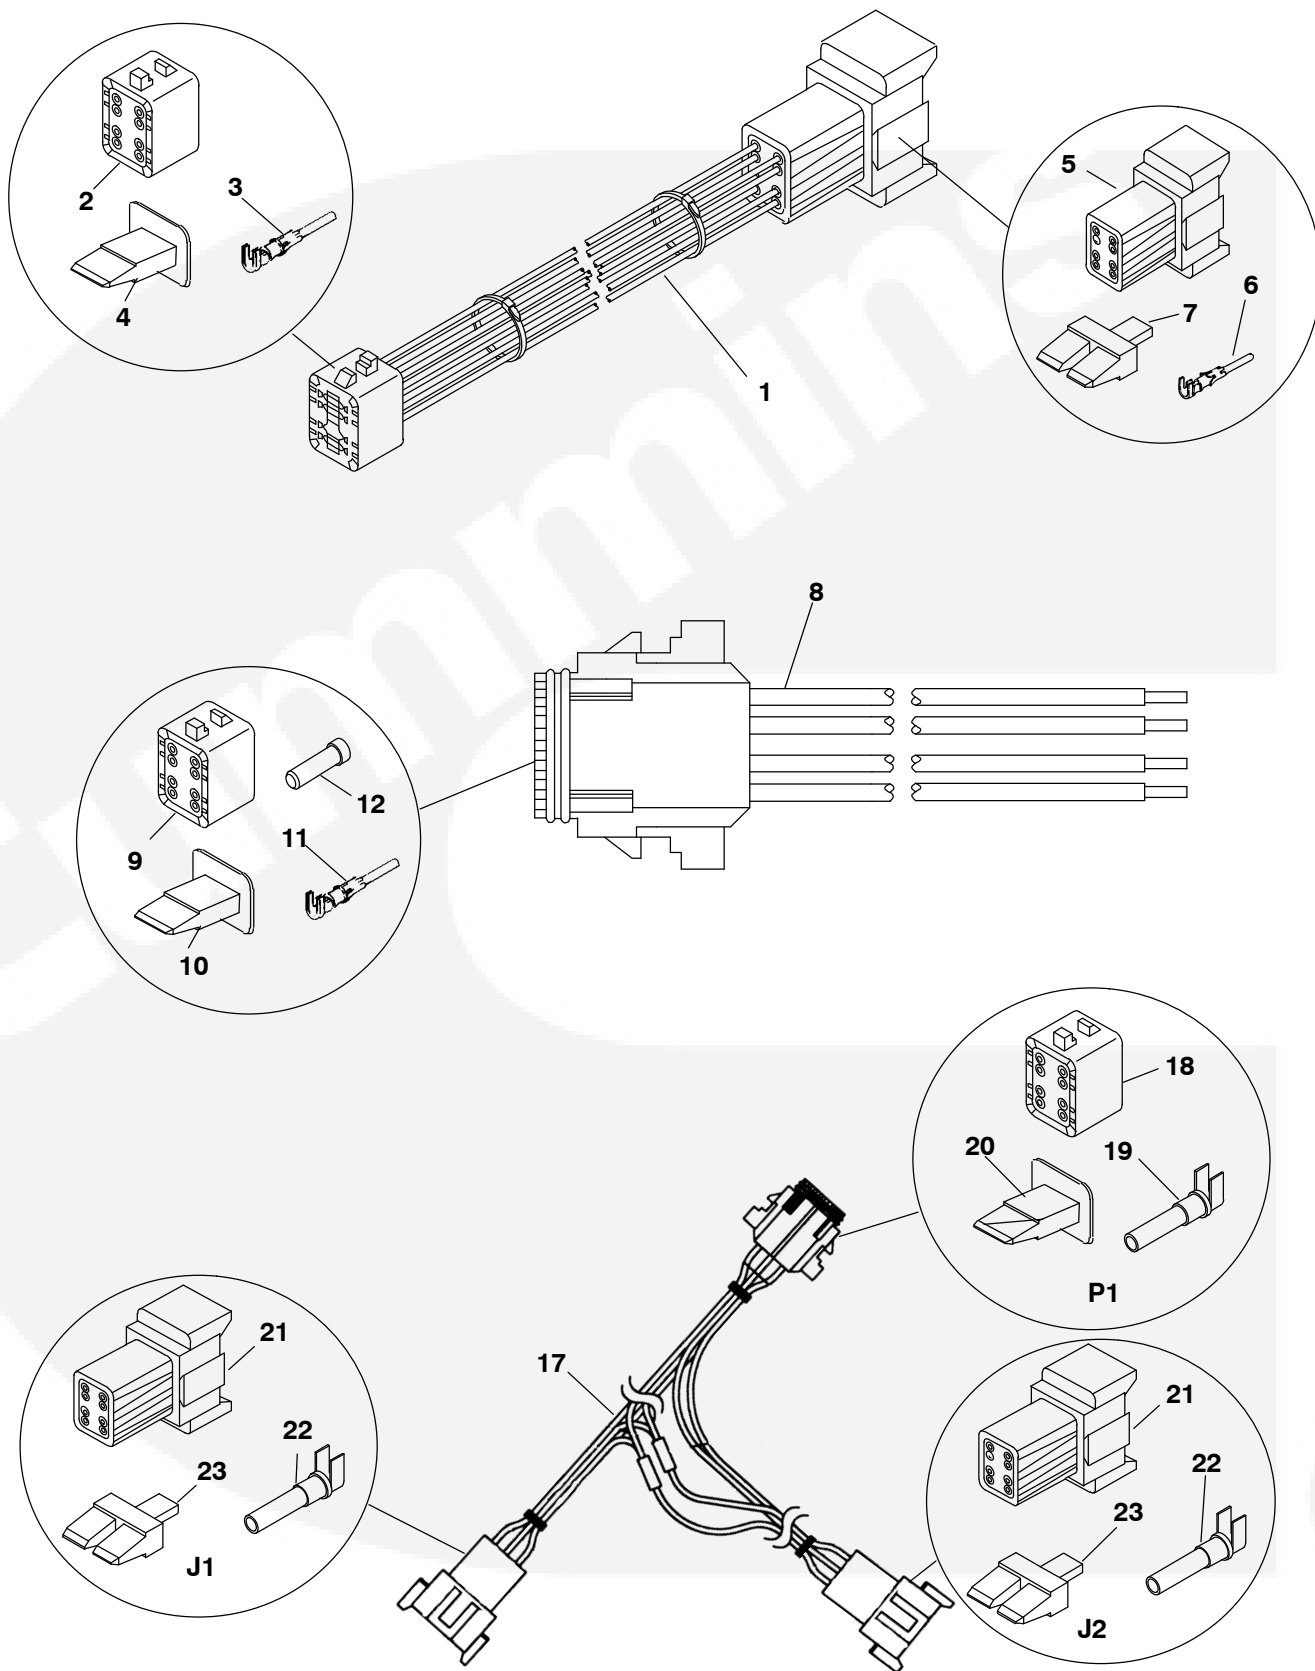

Wiring Harnesses

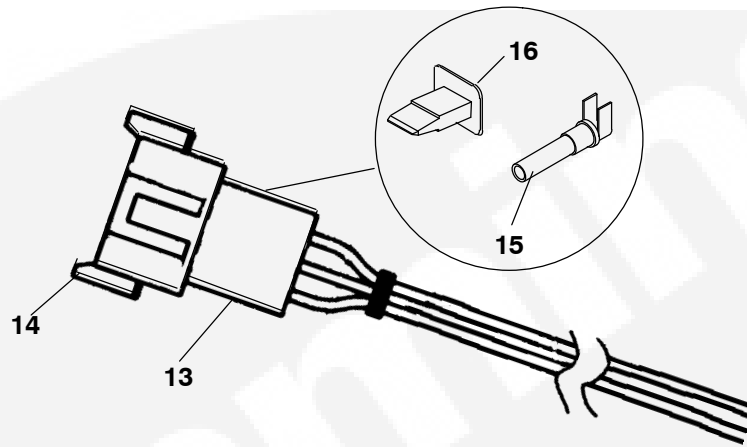

REF NO.	PART NO.	QTY. USED	PART DESCRIPTION	REF NO.	PART NO.	QTY. USED	PART DESCRIPTION
1			Harness, Remote Extension (Includes Parts Marked #)	13	338-4017	1	Harness, Pigtail (Includes Parts Marked @)
	338-3167	1	15 feet	14	323-1542	1	@Connector, Receptacle (8 Pin)
	338-3168	1	25 feet	15	323-1491	AR	+Terminal, Pin
	338-3169	1	45 feet	16	323-1544	2	@Wedge, Lock (8 Pin)
	338-3169-01	1	75 feet				
	338-3169-02	1	100 feet	17	338-4016	1	Harness, Junction (Includes Parts Marked +)
	338-3169-03	1	150 feet				
2	323-1541	1	#Plug (8 Pin)	18	323-1541	1	±°Plug, Connector (8 Pin)
3	323-1492	8	#Terminal, Socket	19	323-1492	AR	±°Terminal, Socket
4	323-1543	1	#Wedge, Plug (8 Pin)	20	323-1543	1	±°Wedge, Plug (8 Pin)
5	323-1542	1	#Receptacle, (8 Pin)	21	323-1542	2	+Connector, Receptacle (8 Pin)
6	323-1491	8	#Terminal, Pin	22	323-1491	AR	@Terminal, Pin
7	323-1544	1	#Wedge, Receptacle (8 Pin)	23	323-1544	2	+Wedge, Lock, Receptacle (8 Pin)
8	338-4223	1	Harness, Remote Panel				
9	323-1541	1	Plug (8 Pin)				
10	323-1543	1	Wedge, Plug (8Pin)				
11	323-1492	AR	Terminal, Socket				
12	323-1591	AR	Plug, Seal				

– Parts Included in Remote Extension Harness.
 * – Parts Included in Custom Pigtail Harness.
 ° – Parts Included in Adapter Harness.
 .+ – Parts Included in Junction Harness.
 .@ – Parts Included in Pigtail Harness.

Labels, Kits

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
	98-8601	1	Label, Information (Housed Includes Parts Marked *)		98-8602	1	Label, Information (Housed w/ PTO, Includes Parts Marked ^)
	98-8567	1	Label, Information Includes Parts Marked +)		98-8569	1	Label, Information
	98-8597	1	+ Label, Information Ground		98-8563	1	Label, Information (Housed)
	98-8594	1	+ Label, Warning (Unhoused)		98-8566-02	1	^ Label, Information (Housed w/ PTO)
	98-8603	1	+ Label, Information		98-8566-01	1	^ Label, Information (Housed w/ PTO)
	98-8590	1	+ Label, Danger		100-3478-60	1	Kit, Cruise Includes All of The Following Items:
	98-8599	1	+ Label, Warning		149-2804	2	Filter, Fuel
	98-8608	1	+ Label, Information (Service)		122-0906	2	Filter, Oil
	98-8592	1	+ Label, Warning		541-1316	2	Kit Pump, Service
	98-7850	2	Label, Onan E-QD (Housed)		511-0237	2	Belt
	98-8600	1	*Label, Information (Oil Fill Housed)		130-4434	2	Pencil, Zinc
	98-7869	4	*Label, Warning (Housed)		417-0233	2	Box, Cruise Kits
	98-8596	2	*Label, Information (Lifting) (Housed)		300-5725-01	1	Kit, Remote Panel
	98-8595	1	*Label, Information (Coolant) (Housed)		300-5725-02	1	Kit, Remote Panel
			Label, Information (No Step)		332-3771	1	Kit, Terminal Boot
	98-8593	2	+ Housed		541-0941-01	1	Kit, Remote Switch
	98-8593	1	* Unhoused		541-0941-02	1	Kit, Remote Switch
			Label, Warning (Coolant)				
	98-8591	2	+ Housed				
	98-8591	1	* Unhoused				

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
098-4798-01, 58		103-0840, 49		114-0421, 9		130-4434, 79	
098-7781, 73		104-2080, 9		114-0422, 9		130-4803-02, 46	
098-7850, 79		104-2081, 9		114-0423, 9		130-5387-01, 46	
098-7869, 79		104-2082, 9		114-0424, 9		130-6733-02, 45	
098-8081, 74		104-2083, 9		114-0425, 9		130-6958-01, 58	
098-8092, 74		104-2084, 9		115-0519, 11		130-6958-02, 59	
098-8323, 72		104-2085, 9		115-0520, 11		130-7038-03, 58 , 59	
098-8563, 79		104-2086, 9		115-0521, 11		130-7069-03, 45	
098-8566-01, 79		104-2087, 9		115-0522, 11		130-7127, 58 , 59	
098-8566-02, 79		104-2088, 9		115-0523, 30		130-7314, 45	
098-8567, 79		104-2089, 12		115-0524, 11		130-7315, 45	
098-8569, 79		104-2090, 12		115-0525, 30		130-7343, 55	
098-8590, 79		104-2091, 13		115-0526, 11		130-7354, 33	
098-8591, 79		104-2092, 9		115-0527, 10		130-7355, 33	
098-8592, 79		104-2093, 13		120-1365-03, 19		130-7361, 33	
098-8593, 79		104-2094, 13		120-1366, 29		130-7416, 33	
098-8594, 79		104-2095, 13		120-1367, 29		130-7417, 33	
098-8595, 79		104-2096, 9		120-1368, 19		130-7421, 18	
098-8596, 79		105-0746, 10		120-1369, 10		132-0283, 47	
098-8597, 79		105-0747, 28		122-0906, 18 , 79		132-0293, 47 , 48	
098-8599, 79		105-0748, 10		122-0907, 18		132-0348, 47	
098-8600, 79		110-3948, 11		123-2299, 18 , 30		132-0364, 48	
098-8601, 79		110-3959, 11		123-2327, 30		132-0368, 47 , 48	
098-8602, 79		110-3960, 11		123-2328, 18 , 30		132-0387, 48	
098-8603, 79		110-3975, 11		123-2331, 17		132-0388, 48	
098-8608, 79		110-3976, 8		123-2332, 30		132-0392, 47	
100-3478-60, 79		110-3977, 7		123-2333, 30		132-0393, 47 , 48	
100-3895-01, 7		110-3978, 8		123-2334, 30		132-0464, 45 , 46	
100-3895-02, 7		110-3979, 8		123-2335, 30		132-0469, 47	
101-0849, 29		110-3980, 7		123-2336, 20		132-0470, 47	
101-0851, 16		110-3982, 11		123-2337, 30		132-0472, 47	
101-0852, 16		110-3983, 11		123-2338, 30		132-0473, 47	
102-1532, 19		110-3984, 11		130-3570, 51		132-0474, 47	
102-1533, 18		110-3985, 8		130-3571, 51		132-0485, 34	
103-0836, 29		110-3986, 8		130-3572, 51		132-0486, 34	
103-0837, 28		112-0310, 9		130-3573, 51		132-0487, 49	
103-0838, 28		112-0311, 9		130-3574, 51		132-0488, 34	
103-0839, 28		112-0312, 9		130-3721, 53		132-0490, 49	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
132-0499, 48		150-2904, 23		185-2826, 10 , 12 , 18 ,		185-5393, 27	
134-5299-02, 60		150-2905, 22		19 , 20 , 28 , 35		185-5394, 27	
140-3998, 31		150-2906, 22		185-2977, 23		185-5395, 27	
140-4025-03, 31		150-2907, 23		185-3082, 28		185-5396, 27	
147-0905, 26 , 27		150-2908, 24		185-3095, 49		185-5397, 27	
147-0907, 25		150-2909, 24		185-4146, 23		185-5398, 27	
147-0908, 28		150-2910, 24		185-4710, 28		185-5399, 27	
147-0909, 26 , 27		150-2918, 21		185-5145, 23		185-5400, 27	
147-0910, 25		150-2919, 22		185-5337, 26 , 27		185-5401, 27	
147-0911, 28		154-3197, 53		185-5363, 27		185-5402, 27	
147-0912, 28		154-3225, 32		185-5364, 27		185-5403, 27	
147-0913, 20		154-3232, 32		185-5365, 27		185-5404, 27	
147-0914, 27		155-4486, 53		185-5366, 27		185-5405, 27	
149-1908-05, 42 , 43		155-4487-02, 53		185-5367, 27		185-5406, 27	
149-1914-05, 43		155-4584-02, 53		185-5368, 27		185-5495, 29	
149-1949, 43		155-4586-02, 53		185-5369, 27		185-5502, 7 , 8	
149-1952, 43		155-4599, 53		185-5370, 27		185-5612, 26	
149-1953, 43		155-4641, 55		185-5371, 27		185-5613, 26	
149-2041-03, 42		181-9013, 23		185-5372, 27		185-5615, 26	
149-2045, 43		181-9205, 23		185-5373, 27		185-5616, 27	
149-2046, 43		181-9230, 19		185-5374, 27		185-5618, 27	
149-2047, 43		184-0017, 22		185-5375, 27		185-5619, 27	
149-2073, 39 , 42		185-2077, 11		185-5376, 27		185-5621, 27	
149-2612, 39		185-2180, 24		185-5377, 27		185-5681, 24	
149-2645, 39		185-2188, 8		185-5378, 27		185-5682, 24	
149-2654, 39		185-2233, 7 , 8		185-5379, 27		185-5798, 7	
149-2655, 39		185-2284, 24		185-5380, 27		185-5826, 33	
149-2765-03, 39		185-2338, 7 , 24 , 28 , 38		185-5381, 27		185-5840, 7	
149-2783-01, 39				185-5382, 27		185-5841, 7	
149-2783-02, 39		185-2343, 33		185-5383, 27		185-5842, 7	
149-2804, 38 , 79		185-2350, 28		185-5384, 27		185-5845, 7	
149-2817, 38		185-2353, 9		185-5385, 27		185-5861, 8	
149-2818, 28		185-2354, 10		185-5386, 27		185-5863, 11	
149-2819, 38		185-2370, 28		185-5387, 27		185-5900, 10	
149-2820, 28		185-2385, 26		185-5388, 27		185-5924, 12	
150-2900, 23		185-2412, 8		185-5389, 27		185-5980, 25 , 38	
150-2902, 22		185-2413, 7		185-5390, 27		185-5985, 26 , 27	
150-2903, 22		185-2759, 28		185-5391, 27		185-6016, 11	
				185-5392, 27			

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
185-6017, 11		190-0861-03, 66		191-2447, 15		306-5250, 22	
185-6019, 11		190-0862-03, 66		193-0244, 29		306-5251, 22	
185-6025, 22		190-0864-03, 66		193-0318, 46		306-5289-01, 21	
185-6029, 11		190-0865-03, 59		193-0430-01, 29		306-5289-02, 21	
185-6030, 11		190-0866-03, 59		193-0457-01, 46		307-1617, 56	
185-6033, 8		190-0887, 15		193-0468, 53		307-2656, 56	
185-6048, 28		191-2169-01, 37		201-3641-06, 68		307-2767, 70	
185-6154, 25		191-2169-02, 37		201-3641-07, 68		307-2819, 70	
185-6481, 33 , 34		191-2170, 37		201-3642-02, 68		307-3124, 15	
185-6484, 24		191-2409-02, 37		201-3655, 36		307-3125, 15	
185-6499, 30 , 32 , 34		191-2410-03, 37		201-3656, 36		308-1019, 74 , 76	
185-6580, 7		191-2411, 37		205-0229-02, 68		308-1101, 74	
185-6695, 11		191-2420, 35 , 36		211-0465-02, 68		308-1102, 74	
185-6722, 18 , 33		191-2421, 35 , 36		212-1311, 15		308-1218, 73	
185-6749, 11		191-2422, 14 , 15		212-1312, 15		308-1219, 73	
185-6786, 35		191-2423, 14 , 15		220-4413-02, 68		309-0597-03, 53	
185-6825, 27		191-2425, 15		220-4671-06, 68		309-0667, 45 , 46	
185-6856, 7		191-2426, 15		220-4671-07, 68		319-4368-06, 73	
185-6930, 24		191-2427, 35		220-4672-06, 68		319-4404, 70	
185-6931, 24		191-2428, 15		220-4672-07, 68		319-4467-02, 73	
185-7090, 23		191-2429, 15		226-4976, 56		319-4996, 74	
185-7134, 20 , 25 , 28		191-2430, 15		232-3206-02, 68		319-5544-02, 72	
185-7166, 7		191-2431, 15		232-3815-04, 68		319-6227-03, 70	
185-7216, 29		191-2432, 36		232-3826-02, 68		319-6228-03, 70	
185-7300, 11		191-2433, 36		232-3945, 68		319-6748, 29	
185-7425, 28		191-2434, 36		300-4434, 68		320-1689-18, 70	
190-0729-01, 52		191-2435, 15		300-4435, 68		320-1836-12, 70	
190-0729-02, 52		191-2436, 15		300-4686, 45		320-1836-13, 70	
190-0766-03, 52		191-2437, 36		300-5474, 71		320-1836-14, 70	
190-0767-02, 52		191-2438, 36		300-5476-09, 71 , 73		320-1836-15, 70	
190-0768, 52		191-2439, 15		300-5476-10, 71 , 73		320-1836-16, 70	
190-0771-02, 52		191-2440, 15		300-5725-01, 74 , 79		320-1836-17, 70	
190-0771-04, 52		191-2441, 15		300-5725-02, 74 , 79		320-1836-18, 70	
190-0771-06, 52		191-2442, 15		300-5944-01, 71		320-1836-19, 70	
190-0855-02, 52		191-2443, 15		300-6018, 72		320-1891-10, 70	
190-0856-02, 52		191-2444, 15		302-2048, 73		320-1891-11, 70	
190-0857-02, 52		191-2445, 15		305-1040, 36		320-2332-01, 70	
190-0858-02, 52		191-2446, 36		305-1041, 36		320-2332-02, 70	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
320-2361, 73		338-3988, 74		405-9552, 60		502-1425-02, 44	
320-2362, 73		338-4016, 78		405-9553, 60		502-1451-01, 44	
323-1491, 74 , 78		338-4017, 78		405-9554, 60		502-1583, 50	
323-1492, 74 , 78		338-4200-02, 56		405-9558, 60		502-1584, 40 , 41	
323-1541, 74 , 78		338-4223, 78		405-9559, 60		502-1599, 38	
323-1542, 76 , 78		338-4491, 70		405-9560, 63		502-1602, 38	
323-1543, 74 , 78		338-4623-01, 61 , 62		405-9561, 66		502-1603, 20	
323-1544, 76 , 78		338-4790, 73 , 76		405-9562, 66		502-1604, 7 , 33 , 34	
323-1563, 76		357-0156, 36		405-9563, 66		502-1606, 38	
323-1582-05, 76		357-0157, 36		405-9564, 66		502-1608, 20	
323-1582-06, 76		358-0069, 68		405-9567, 63		502-1609, 25	
323-1582-07, 76		358-0070, 68		405-9568, 64		502-1611, 38	
323-1583, 76		402-0676-01, 57		405-9707-03, 60		503-1137, 46	
323-1591, 76 , 78		402-0681-01, 70		405-9731, 66		503-1138, 44 , 45 , 46 , 50	
323-1623, 68		403-3955, 57		405-9732, 65		503-1139, 31 , 45	
323-1708, 76		403-6043-02, 57		405-9751-03, 64		503-1140, 45 , 46	
323-1765, 76		403-6064-02, 57		405-9752-03, 64		503-1142, 31	
327-1450, 60		403-6089-03, 13		405-9764-02, 61 , 62		503-1144, 31	
327-1659-01, 70		405-6919-03, 60		405-9841, 60		503-1692, 51	
327-1659-02, 70		405-6993-02, 64		406-0958, 64		503-1872-02, 55	
332-1571, 53		405-6995-02, 64		406-1032, 64 , 65		503-1872-05, 45	
332-2370, 70		405-7257, 63		406-1170, 10		503-1872-06, 54 , 55	
332-2890, 74		405-9299-03, 60		406-1171, 10		503-2309, 39 , 40 , 41 , 44	
332-3750, 70		405-9300-03, 60		417-0233, 79		503-2715, 45	
332-3771, 61 , 79		405-9301-03, 60		501-0910, 19		503-2716, 45 , 46	
333-0732-02, 56		405-9307-03, 60		501-0981, 26		503-2717, 45 , 46	
333-0745, 26		405-9308-03, 60		501-0982, 26		503-2728-01, 44	
333-0746, 26		405-9314-03, 66		501-0983, 26		503-2773, 54	
337-2784-02, 61 , 62		405-9315-03, 65		501-0984, 26		503-2774, 54	
337-2785, 61 , 62		405-9331-03, 63		501-0985, 26		503-2782, 31	
337-2795, 70		405-9336-03, 65		502-0020, 42		503-2787-01, 39	
337-3926, 26		405-9473, 54		502-0029, 42		503-2788-01, 39	
338-3167, 78		405-9475, 50		502-0029-03, 29		503-2788-02, 39	
338-3168, 78		405-9507-03, 66		502-0054, 39		503-2788-03, 40 , 41	
338-3169, 78		405-9508-03, 60		502-0153, 43 , 45		503-2792, 50	
338-3169-01, 78		405-9517-03, 65		502-1123, 19		503-2793, 50	
338-3169-02, 78		405-9547, 65		502-1133, 40 , 41		503-2814, 50	
338-3169-03, 78		405-9548, 63		502-1218, 39 , 40 , 41			

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
503-2823, 45 , 46 , 50		507-0018, 49		510-0241, 12		518-0757, 40 , 41	
503-2837-01, 40 , 41		507-0019, 28		510-0242, 12		518-0761, 9	
503-2843, 45 , 46		507-0020, 9		510-0243, 10		518-0763, 23	
503-2846-01, 31		507-0021, 13		510-0244, 9		518-0765, 22	
503-2865-13, 61 , 62		507-0022, 15		511-0237, 35 , 37 , 79		518-0766, 11	
503-2871, 45		507-0023, 15		512-0367, 36		518-0767, 49	
503-2872, 46		508-0021, 65 , 66		512-0368, 35		518-0768, 49	
503-2901, 30		508-1039, 44		512-0369, 35		518-0769, 10	
503-2902, 18		508-1105, 70		515-0321, 12		518-0770, 15	
503-2903, 18		508-1152, 60		516-2113, 22		518-0771, 32	
503-2904, 18		508-1203, 44		516-2116, 7		519-0745, 47	
503-2905, 33		508-1278, 31		516-2117, 7		520-2674, 14	
504-0017, 45		509-0368, 60		516-2118, 10		520-2678, 28	
504-0223, 44		509-0414, 18 , 30		516-2119, 28		520-2679, 53	
504-0309, 29		509-0447, 47		516-2122, 7		526-0029, 61 , 62	
504-0310, 7		509-0450, 45 , 46 , 49		516-2123, 7		526-0045, 37	
505-1503, 52		509-0456, 45		516-2124, 22		526-0052, 70	
505-2258, 25		509-0459, 47		517-0131-02, 50 , 54		526-0063, 21	
505-2371, 7		509-0460, 16		517-0136, 70		526-0172, 57	
505-2378, 33		509-0461, 29		517-0136-01, 40 , 41 , 60 , 65 , 66		526-0174, 37 , 52	
505-2379, 33		509-0463, 29		517-0138-04, 57		526-0399-05, 72 , 73	
505-2380, 29		509-0464, 19		517-0138-05, 70		526-0399-41, 31	
505-2381, 33		509-0465, 29		517-0138-06, 50		526-0399-42, 68	
505-2383, 29		509-0466, 34		517-0138-08, 70		526-0399-58, 56 , 58 , 59	
505-2384, 29		509-0467, 49		517-0371, 17		526-0399-60, 40 , 41 , 50 , 58 , 59 , 61 , 62	
506-0042, 29		509-0468, 18		517-0392-23, 63		526-0399-62, 68	
506-0043, 11		509-0471, 38		517-0393, 54		526-0399-64, 31 , 39 , 45 , 52 , 57 , 61 , 62	
506-0044, 15		509-0472, 38		517-0402, 30		526-0399-73, 13 , 68	
506-0045, 23		509-0474, 20		517-0404, 7		526-0451, 52	
506-0046, 23		510-0112, 68		517-0405, 28		526-2050, 60	
506-0047, 23		510-0230, 47		517-0406, 11		526-2100, 70	
506-0048, 27		510-0232, 22		518-0548-35, 31		526-2343, 11	
506-0049, 22		510-0233, 28		518-0548-43, 61 , 62		526-2345, 15	
507-0013, 10		510-0235, 15		518-0548-44, 46		526-3699-64, 45	
507-0014, 10		510-0236, 15		518-0720, 31 , 39		541-0877-01, 44	
507-0015, 15		510-0237, 36		518-0746, 45		541-0941-01, 74 , 79	
507-0016, 10		510-0238, 36		518-0747, 50			
507-0017, 9		510-0240, 28		518-0752, 50			

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
541-0941-02, 74 , 79		800-3017-52, 68		800-6425, 19		860-2075, 24	
541-1130, 72		800-3025-01, 31 , 39 , 45 , 56 , 61 , 62		800-6426, 15		860-2082, 36	
541-1195-03, 70		800-3027, 52		800-6427, 36		860-2084, 14 , 22 , 35	
541-1195-04, 70		800-3032, 52 , 61 , 62		800-6428, 36		860-2087, 23	
541-1270, 55		800-3033, 57		800-6429, 11		860-2088, 28	
541-1272-01, 53		800-3042, 60		801-1050, 52		860-2089, 36	
541-1272-02, 53		800-6002, 70		803-2013, 11		862-0003, 61 , 62	
541-1274, 55		800-6062, 70		803-2014, 15		862-0026-30, 56	
541-1275-01, 52		800-6085, 45 , 49		810-0155, 70		862-0026-54, 56	
541-1275-02, 52		800-6305, 23		812-1158, 47		862-0026-55, 52	
541-1279, 63		800-6333, 32		814-2155-01, 72		870-0131, 72 , 73	
541-1280-01, 58		800-6334, 16 , 34		814-2158, 28 , 29		870-0131-01, 56	
541-1280-02, 59		800-6335, 10 , 29		815-0550-03, 70		870-0221-01, 53	
541-1281, 53		800-6384, 47		815-0600, 46 , 68		870-2062, 70	
541-1282, 53		800-6392, 13		815-0910, 74		870-2065-02, 46	
541-1316, 47 , 79		800-6394, 45		815-0916, 52		870-2065-03, 50 , 53 , 61 , 62	
541-1317, 47		800-6395-01, 31 , 46 , 50 , 54 , 59 , 60 , 63 , 64 , 65 , 66 , 70		815-0935, 68		871-0016, 70	
541-1392-01, 50		800-6402, 35		818-0231-01, 60 , 64 , 65 , 70		871-0025, 61 , 62	
541-1392-02, 50		800-6403, 30		818-1150-03, 71 , 72		895-0395, 60 , 64	
541-1395, 66		800-6405, 7		819-1170, 30		895-0411, 64	
541-1402, 9		800-6406, 9		819-1171, 30		898-0972, 53	
541-1403, 9		800-6407, 8		821-0009, 70			
541-1521, 48		800-6408, 28		821-2035, 52			
725-1028, 21		800-6410, 25 , 28 , 33 , 35		821-6001-02, 39		A	
725-1103, 52		800-6411, 33		821-6003-01, 45 , 57 , 70		A001G912, 50	
800-0027, 37		800-6412, 34				A006A539, 17	
800-0090, 52		800-6413, 32		823-1002-03, 61 , 62		A029U684, 48	
800-0092-01, 31		800-6414, 28 , 29 , 49		850-0045, 37		A029U686, 48	
800-0309-10, 72 , 73		800-6416, 19		850-0114-06, 68		A029U693, 48	
800-0310-27, 68		800-6417, 13		850-0114-53, 56		A029U695, 48	
800-0310-36, 68		800-6418, 7 , 38		850-2089, 47 , 48		A030B824, 64	
800-2096, 37		800-6419, 14		853-0013, 68		A030F179, 64	
800-2118, 57		800-6420, 11		853-0016, 56 , 70		A030R884, 45 , 46	
800-3017-02, 58 , 59		800-6421, 35		853-2012, 61 , 62		A030U213, 17	
800-3017-17, 31 , 40 , 41 , 58 , 59		800-6422, 13		856-0003, 72 , 73		A030U215, 7 , 17	
800-3017-19, 53		800-6423, 13		856-0006, 70		A030X272, 17	
800-3017-21, 52				856-0008, 61 , 62		A030X274, 17	
800-3017-50, 58 , 59				860-2010, 57		A030X276, 17	

Numerical Index

<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>	<u>Part No.</u>	<u>Page</u>
A032Y747,	45 , 46						
A032Y754,	48						
A032Y864,	48						
A034T924,	48						
A034U624,	48						
A034U626,	48						
A034W700,	50						
A035K689,	50						
A035R404,	48						

Cummins **Onan**

Cummins Power Generation

1400 73rd Ave. NE
Minneapolis, MN 55432 USA

Phone 1 763 574 5000

Toll-free 1 800 888 6626

Fax 1 763 574 5298

Email www.cumminsonan.com/contact
www.cumminsonan.com

Cummins®, Onan®, the "C" logo, and "Performance you rely on." are trademarks of Cummins Inc.

©2013 Cummins Power Generation, Inc. All rights reserved.

