



NTA2

Spec E

DFCB

Spec A & E

Generator Set

Parts Catalog

World Wide Parts & Service

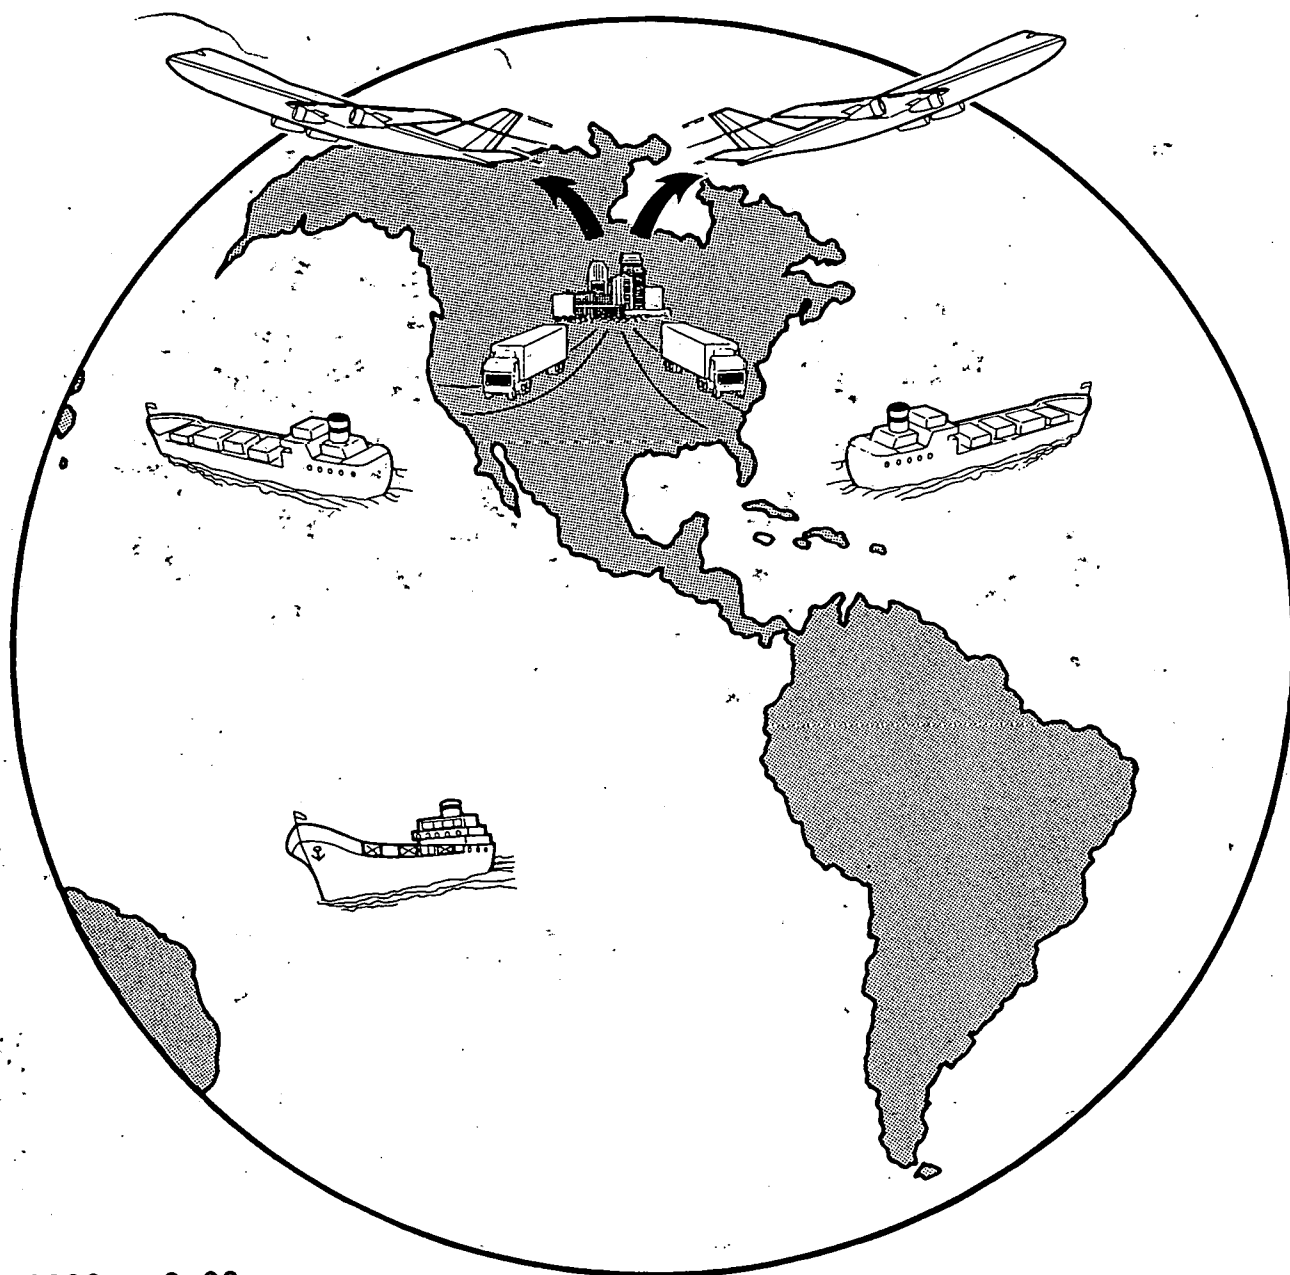


TABLE OF CONTENTS

MODEL IDENTIFICATION TABLE.....	ii
---------------------------------	----

INTRODUCTION & GENERAL INFORMATION	I
--	---

ENGINE SECTION

ENGINE SECTION TABLE OF CONTENTS	1-1
--	-----

HOUSING SECTION

HOUSING SECTION TABLE OF CONTENTS.....	2-1
--	-----

CONTROL SECTION

CONTROL SECTION TABLE OF CONTENTS	3-1
---	-----

GENERATOR SECTION

GENERATOR SECTION TABLE OF CONTENTS	4-1
---	-----

SOURCE CODE SECTION

SOURCE CODES FOR MANUFACTURERS & SUPPLIERS	5-1
--	-----

MODEL IDENTIFICATION TABLE

ENGINE MODEL	GENERATOR SET IDENTIFICATION		NEWAGE GENERATOR	HERTZ	RPM	BATTERY VOLTAGE
	CUMMINS POWER SYSTEM	ONAN POWER SYSTEM				
NTA855-G2	275 NTA2/xxxxx E	275DFCB/xxxxx A	HC434E, HC434F & HC534C	50	1500	24 VDC
NTA855-G2	300 NTA2/xxxxx E	300DFCB/xxxxx A	HC434E, HC434F & HC534C	60	1800	24 VDC

INTRODUCTION

FORWARD

This Service Parts Catalog provides identification of the Maintenance, Service or Repair parts for the Product(s) identified in the Model Identification Table. The Catalog is divided into sections applicable to the Major Sections of the Product, and Section Table of Contents are provided for your convenience.

ILLUSTRATIONS

The illustrations in the Parts Catalog are arranged in groups of related items, and each part or assembly is identified by a Reference Number shown in the illustration. All parts illustrated are typical, and unless otherwise mentioned in the description column, the parts are interchangeable between models. These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The RIGHT and LEFT sides of a Generator Set are determined by FACING the FRONT of the Set (Engine Radiator End).

PART NUMBERS

Dual Part Number columns are used. The first column contains the CENTRAL PARTS DISTRIBUTION CENTER Part Number; the second (SOURCE) column provides for identification of an alternate source for the part. The alternate source may be a Manufacturer, Supplier or Subsidiary of this Corporation. The Manufacturer/Supplier is assigned Identifying Letter(s) which are found in the third (CODE) column. A List of Manufacturers and Suppliers with their address, phone numbers, etc. are located in a separate section of this Parts Catalog.

REPLACEMENT ENGINE PARTS

The Models with engines supplied by a separate Engine Manufacturer will have only those external engine components added or modified during the Assembly of these Models. Most General Maintenance Parts and some engine optional features may be identified in this Parts Catalog. For internal engine parts and components not covered herein; refer to the applicable Manufacturer's engine Parts Catalog. The engine Manufacturer will be listed in the Manufacturer & Supplier (SOURCE CODE) Section.

INTRODUCTION

-cont.-

MODEL IDENTIFICATION

The Model Table provides identification of the Product(s) which this Service Parts Catalog covers. Some Tables may include an Engine Identifier along with the Generator Set Identifier when the Manufacturer of the Engine is a Supplier of Engine Replacement Parts.

SAMPLE ENGINE IDENTIFIERS

4A2.3GS/GC1	6CTA8.3GC/GS1	KTTA50GS/GC1
6AT3.4GS/GC1	KTTA19GS/GC1	NT855GS/GC4
4BT3.9GS/GC1	KTA38GS/GC1	NTTA855GS/GC2
6CT8.3GS/GC1	KTA50GS/GC3	VTA28GS/GC3

SAMPLE MODEL IDENTIFIERS

When Engine Identifiers are used, the Model Identifier will also be located on the Nameplate. It is referred to as ID. NO. The sample Nameplate below has an arrow which points to the ID. NO. Location. Normally the MODEL Identifier follows the MODEL on the nameplate.

GEN SET IDENTIFIER SAMPLES

60	DGBA	Z	/13756	A
175	CTA	62	/32476	C
200	NT	4	/29876	E
250	DMBC	/	1	B
1250	KTA	53	/32069	D

Kilowatt Size

Model Ident Letters

Voltage Code(s) or Model
Ident Numbers

Specification Letter
Designates Major Changes

Specification Number: No. 1
is Standard; others designate
Variations or Special Features

AC Generator Set Model _____

kw	kva	pf
class of insulation	amps	voltage
field amp max	field voltage max	
generator model no.		
voltage regulator model no.		
ID no.		
generator set serial no.		
BS5000 NEMA		

INTRODUCTION

-cont-

PRODUCT SERIAL NUMBER IDENTIFICATION

A Serial number is assigned to all Models or Products and is located on the nameplate for that product. The current Serial Number System of identification is as follows:

Month of Manufacture: A = Jan, B = Feb, etc.	B	89	7	123456	Assigned Six Digit Serial No.
Year of Manufacture: 1989					Assembly Plant Code Number

SAFETY PRECAUTIONS


The following symbols are used in Parts Catalogs to alert users to the potentially dangerous conditions relating to maintenance of the equipment and replacement of parts. Please read and observe.



This symbol warns of immediate hazards which will result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS:

WARNING

CONTACT WITH USED ENGINE OILS HAS BEEN IDENTIFIED BY A UNITED STATES FEDERAL AGENCY AND SOME USA STATE AGENCIES AS CAUSING CANCER or REPRODUCTIVE TOXICITY. WHEN CHECKING OR CHANGING ENGINE OILS TAKE ALL NECESSARY PRECAUTIONS NOT TO INGEST, BREATHE THE FUMES OR CONTACT THE USED OIL!

WARNING

CONTACT WITH ASBESTOS HAS BEEN IDENTIFIED BY A UNITED STATES FEDERAL AGENCY AND SOME USA STATE AGENCIES AS CAUSING CANCER or REPRODUCTIVE TOXICITY. WHEN HANDLING ENGINE GASKETS TAKE ALL NECESSARY PRECAUTIONS NOT TO INGEST, BREATHE OR CONTACT THE DUST FROM THE GASKETS! USE ADEQUATE VENTILATION AND WEAR PROTECTIVE GLOVES, MASKS AND CLOTHING!

WARNING


CONTACT WITH BENZENE and LEAD, FOUND IN GASOLINES, FUEL ADDITIVES AND SOLVENTS HAS BEEN IDENTIFIED BY A UNITED STATES FEDERAL AGENCY AND SOME USA STATE AGENCIES AS CAUSING CANCER or REPRODUCTIVE TOXICITY. WHEN CHECKING, DRAINING OR ADDING GASOLINE AND FUEL ADDITIVES, OR USING SOLVENTS TAKE ALL NECESSARY PRECAUTIONS NOT TO INGEST, BREATHE THE FUMES, OR CONTACT THE LIQUIDS. USE ADEQUATE VENTILATION AND WEAR PROTECTIVE GLOVES, MASKS AND CLOTHING!

TABLE OF CONTENTS
ENGINE SECTION

EXTERNAL COMPONENTS - LEFT SIDE 1-3

EXTERNAL COMPONENTS - RIGHT SIDE 1-5

EXTERNAL COMPONENTS
LEFT SIDE

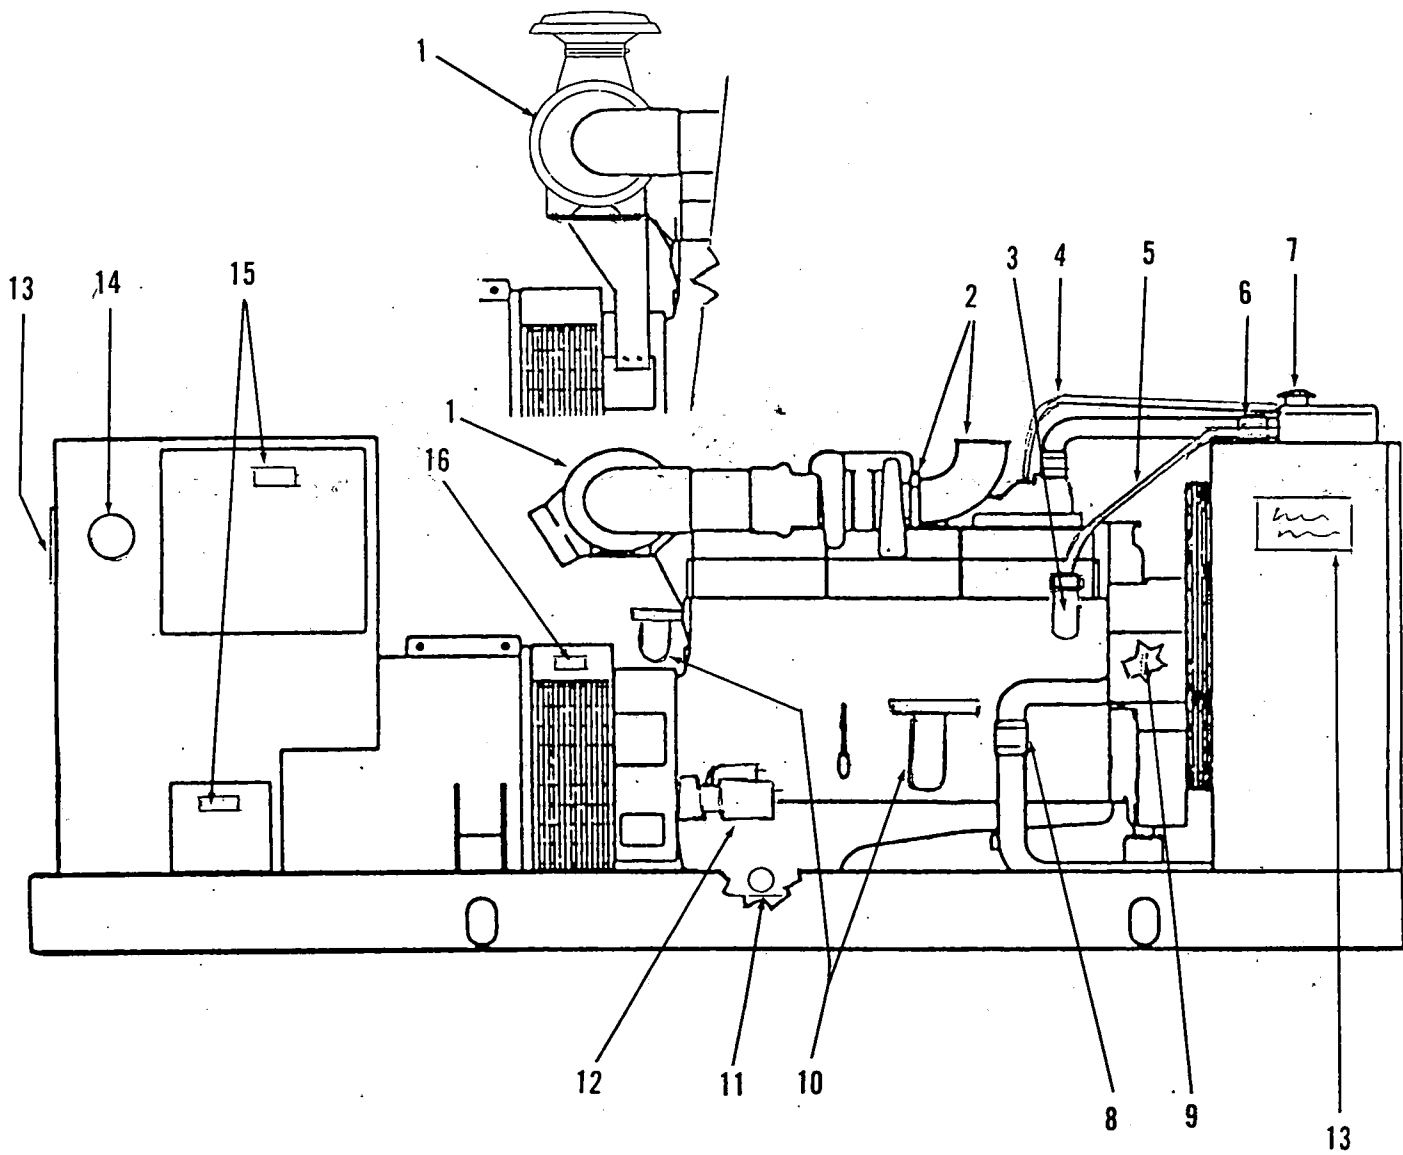

EXTERNAL COMPONENTS LEFT SIDE


REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1					Air Cleaner Group
	140-2389			1	Air Cleaner - Standard (Includes Element)
	140-2391			1	Element - Air Cleaner (Standard)
	140-2390			1	Air Cleaner - Heavy Duty (Includes Elements)
	140-2392			1	Element, Air Cleaner - Primary
	140-2393			1	Element, Air Cleaner - Safety
	140-1548			1	Indicator, Service
	140-1545			1	Hood, Air Inlet (Used on Heavy Duty Air Cleaner)
2					Exhaust Group
	503-1575	186917	CE	1	Clamp, V
	155-1241	190351	CE	1	Elbow, Exhaust - Plain Outlet
	155-2409			1	Elbow, Exhaust - Threaded Outlet (5 NPT)
	155-2281	203432	CE	1	Elbow, Exhaust - Flanged Outlet
	155-2287-02	3036377	CE	1	Gasket, Flange (used with 155-2281 Elbow)
3					Filter, Water - W/Corrosion Inhibiting Chemical DCA4
	130-3537	3315116	CE	1	Service
	130-3541	3318318	CE	1	Pre-Charging
4	501-0551			1	Line, Fuel - Flexible (Bypass line)
5	503-1467-07			1	Hose, Rubber (3/4"ID x 33"LG) Radiator to Filter Housing.
					Attaching Parts for Hose
	503-0189			2	Clamp, Hose
	505-0022			1	Bushing, Reducer (1 NPT x 1/2 NPT)
	502-0827			1	Adapter, Pipe to Hose, Barbed (1/2 NPT)

6	503-1679-02			2	Hose, Rubber - Upper
					Attaching Parts for Hose
	503-0999			4	Clamp, Hose - T-Bolt Type

7	130-3721			1	Cap, Radiator - 7# PSI
8	505-1414-01			2	Hose, Rubber - Lower
					Attaching Parts for Hose
	503-0998			4	Clamp, Hose - T-Bolt Type

9					Alternator Group
	191-0781			1	Pulley, Alternator - Single Groove (Use with 35 AMP Alternator)
	191-0688	70D44854B13	MO	1	Alternator - 24 VDC, 35 AMP (Less Pulley, Includes Voltage Regulator)
	191-1635	8RF3080F	MO	1	Regulator, Voltage - 24 VDC (Used on 35 AMP Alternator)
	511-0084			1	Belt, Drive - 35 AMP Alternator
	130-3176-02			1	Pulley, Alternator - Multi Groove (Use with 75 AMP Alternator)
	191-1926-02	70D44970S02	MO	1	Alternator - 24 VDC, 75 AMP (Less Pulley, Includes Voltage Regulator)
		BRG3032	MO	1	Regulator, Voltage - 24 VDC (used on 75 AMP Alternator)
	511-0156			2	Belt, Drive - 75 AMP Alternator
10					Oil Filter Group
		3318853	CE	1	Lube & Bypass Filter (Latest Style Used In Engine Manufacturing)
	122-0755	3313279	CE	2	Lube Filter (Former Style Used In Engine Manufacturing)
	122-0526	3304232	CE	1	Bypass Filter (Former Style Used In Engine Manufacturing)
11					Oil Drain Group
	505-0185			2	Nipple, Pipe - Half (1/2 NPT x 1-1/2")
	503-0197			2	Clamp, Hose
	503-0098		AR		Hose, Rubber - Bulk (sold by Foot)
	504-0011			1	Valve, Gate (1/2 NPT)
	505-0100			2	Nipple, Pipe - Close (1/2 NPT x 1-1/4")
	505-0040			1	Elbow, Pipe - 90 DEG (1/2 NPT)
12					Starter Group
	191-1858	3021036	CE	1	Starter - 24VDC, Standard
	191-1588			1	Starter - 24VDC, Heavy Duty
	416-0632			1	Cable, Starter - Ground (14 1/2" Lg)
	416-0446			1	Cable, Battery - Jumper (12 1/2" Lg)
	416-0619			1	Cable, Battery - Negative (18" Lg)
	416-0444			1	Cable, Battery - Positive (44" Lg)
13					Decal - Model Identification
	98-6108-03			2	ONAN GEN SET
	98-6111-03			2	CUMMINS GEN SET
	98-6139-03			2	CUMMINS ONAN GEN SET
14	98-4500			1	Decal "PROTOTYPE TESTED"
15	98-5347			2	Decal - Danger "HIGH VOLTAGE"
16	98-5842			1	Decal - Warning "DO NOT LIFT BY FAN, ETC."

EXTERNAL COMPONENTS
RIGHT SIDE

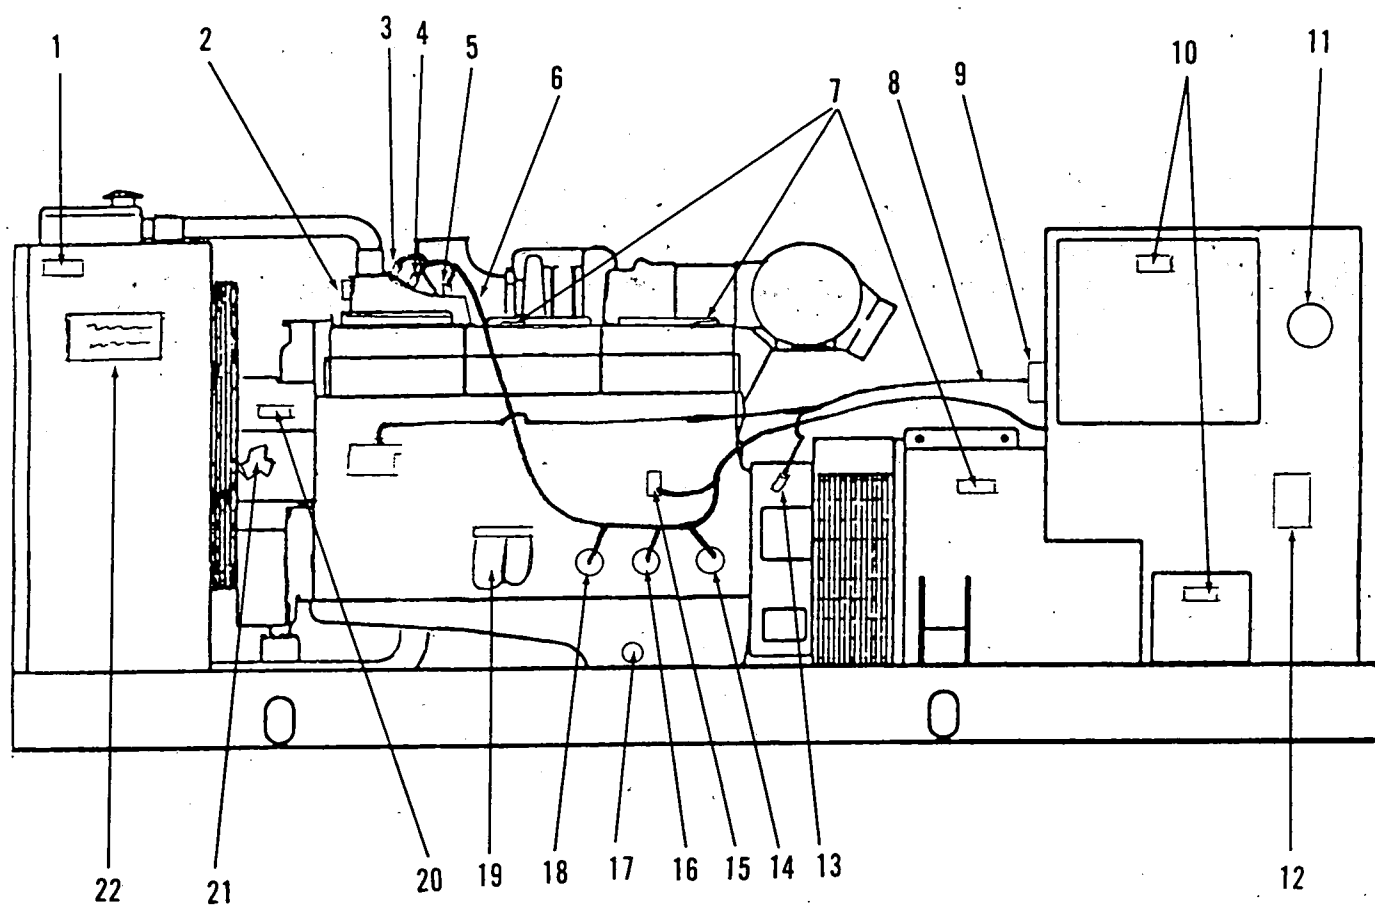

EXTERNAL COMPONENTS RIGHT SIDE

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	98-4730			1	Decal - Caution "10 PSI HOT WATER SYSTEM"
2	309-0269			1	Switch, Thermostatic - Low Engine Temperature
	900-0062			1	Attaching Parts for Switch
	850-0050			1	Screw, Cap - Hex Head (3/8-16 x 4")
				1	Washer, Lock - Spring (3/8")

3	309-0437			1	Switch, Thermostatic - High Water Temperature (SHUTDOWN)
	505-0117			1	Attaching Parts for Switch
	505-0021			1	Bushing, Reducer - Flush (1/2 NPT x 3/8 NPT)
				1	Bushing, Reducer - Hex (3/4 NPT x 1/2 NPT)

4	193-0375			1	Sender, Water Temperature
	505-0021			1	Attaching Part for Sender
				1	Bushing, Reducer - Hex (3/4 NPT x 1/2 NPT)

5	309-0179			1	Switch, Thermostatic - High Water Temperature (PRE-ALARM)
	505-0117			1	Attaching Part for Switch
				1	Bushing, Reducer - Flush (1/2 NPT x 3/8 NPT)


6	338-2436			1	Harness, Wiring - Engine to Control (Includes Replaceable Items)
	323-1306			1	Housing, Connector - 8 Pin (Less Pins)
	323-1200			8	Pin, Contact
	323-1304			1	Housing, Connector - 6 Pin (Less Pins)
	323-1200			6	Pin, Contact
7	98-5822			3	Decal - Warning "DO NOT USE LIFTING POINT, ETC."
8	338-2444			1	Harness, Wiring - Electronic Governor
9	151-0637			1	Control, Governor
10	98-5347			2	Decal - Danger "HIGH VOLTAGE"
11	98-4500			1	Decal "PROTOTYPE TESTED"
12	98-5759			2	Decal - Warning "HAZARDOUS VOLTAGE"
13	151-0411			1	Pickup, Magnetic
14	193-0244			1	Sender, Pressure - Oil
15	332-1292			1	Terminal Assembly (Includes Replaceable Items a thru c)
	900-0270			1	Attaching Parts for Terminal Board
	856-0010			2	Screw, Cap - Hex Head (3/8-24 x 5/8")
				2	Washer, Lock - EIT (3/8")

a	809-0035			1	Screw, Tapping - Round Head (#8 x 3/4")
b	508-0015			1	Washer, Insulating
c	870-0196			1	Nut, Insulated
d	332-1281			1	Board, Terminal
16	309-0561			1	Switch, Pressure - Oil, 14# PSI (SHUTDOWN) With Dual Terminals
17					Heater, Oil - 300 Watt
	333-0407-02	167619	CE	1	120 VAC
	333-0407-04	167621	CE	1	240 VAC
	333-0407-05	3000214	CE	1	480 VAC
18	309-0272			1	Switch, Pressure - Oil, 20# PSI (PRE-ALARM)
19					Fuel System Components
	149-2200	3308636	CE	2	Filter, Fuel/Water Separator (Optional to Standard Filter)
	149-2249	156172	CE	2	Filter, Fuel with Drain Plug
	501-0084			1	Line, Fuel - Flexible (Fuel In)
	501-0216			1	Line, Fuel - Flexible (Fuel Out)
20	98-4798			2	Decal - Warning "CAUTION MOVING PARTS, BELTS, ETC."
21	511-0160			2	Belt, Drive - V (Fan)
22					Decal - Model Identification
	98-6108-03			2	ONAN GEN SET
	98-6111-03			2	CUMMINS GEN SET
	98-6139-03			2	CUMMINS ONAN GEN SET

TABLE OF CONTENTS
HOUSING SECTION

CHASSIS COMPONENTS	2-3
SET HOUSING COMPONENTS	2-5


CHASSIS COMPONENTS

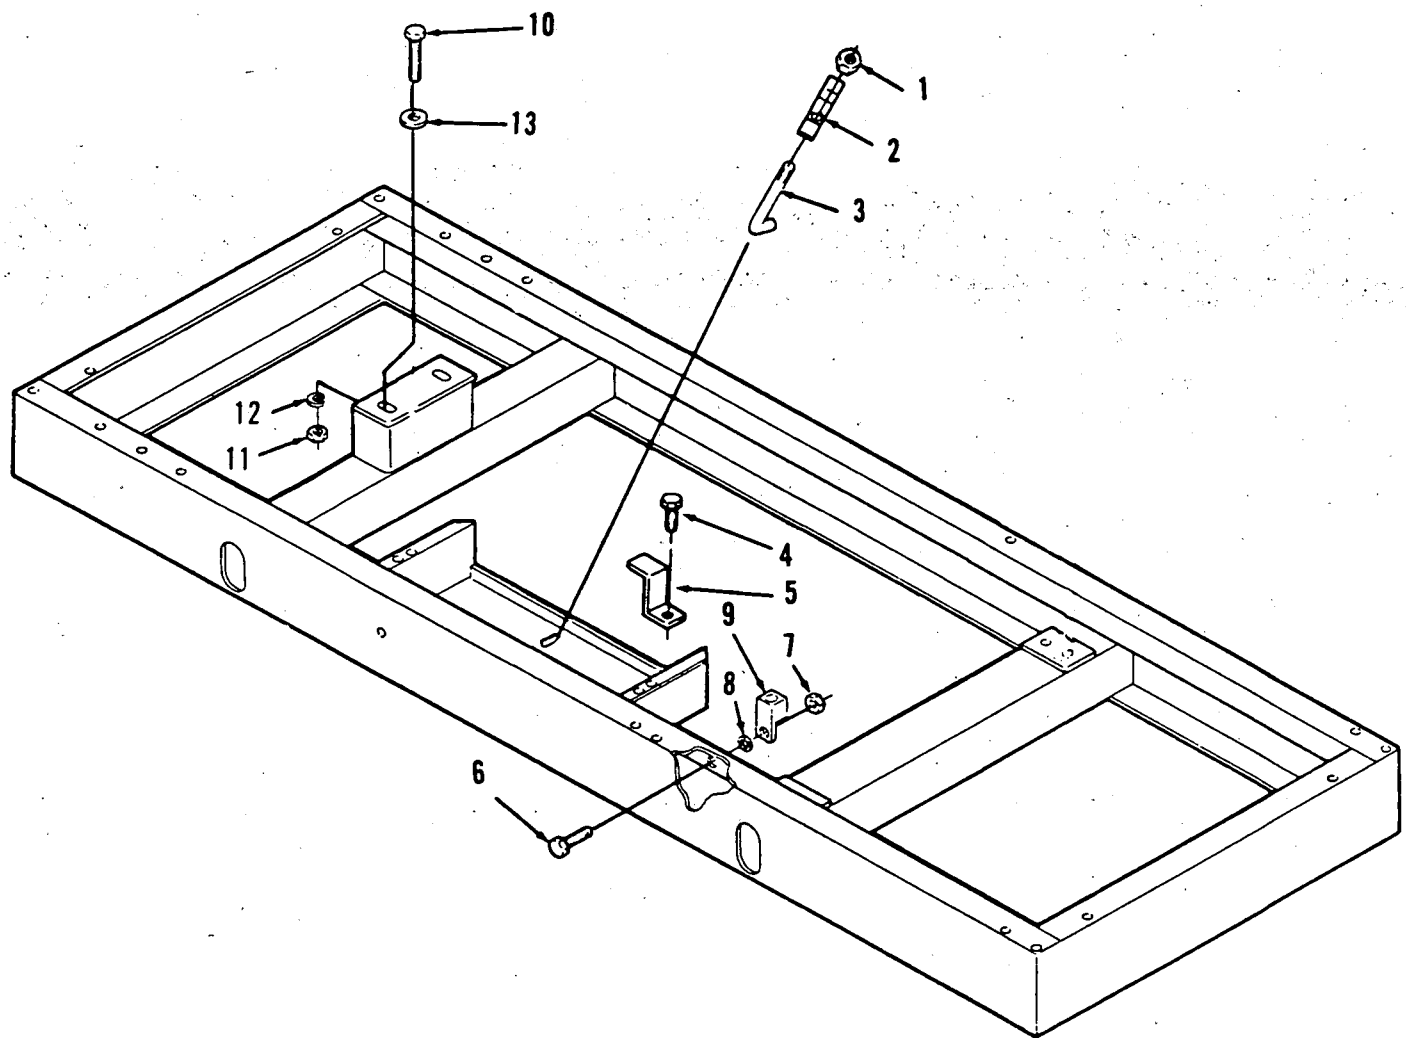

CHASSIS COMPONENTS

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	870-0212			1	Nut, Self-locking - Hex Washer Head (1/4-20)
2	416-0854			1	Bracket, Holddown - Battery
3	416-0853			1	J-Bolt - Battery Holddown
4	800-0048			2	Screw, Cap - Hex Head (3/8-16 x 3/4")
5	416-0850			2	Bracket, Angle - Battery Holddown
6	800-0026			1	Screw, Cap - Hex Head (5/16-18 x 3/4")
7	870-0257			1	Nut, Self-locking - Hex Washer Head (5/16-18)
8	856-0026			1	Washer, Lock - EIT (5/16")
9	332-1473			1	Lug, Terminal - Solderless
10	800-0138			2	Screw, Cap - Hex Head (5/8-11 x 3")
11	860-0007			2	Nut, Hex (5/8-11)
12	850-0070			2	Washer, Lock - Spring (5/8")
13	526-0198			2	Washer, Flat (5/8"ID)

SET HOUSING COMPONENTS

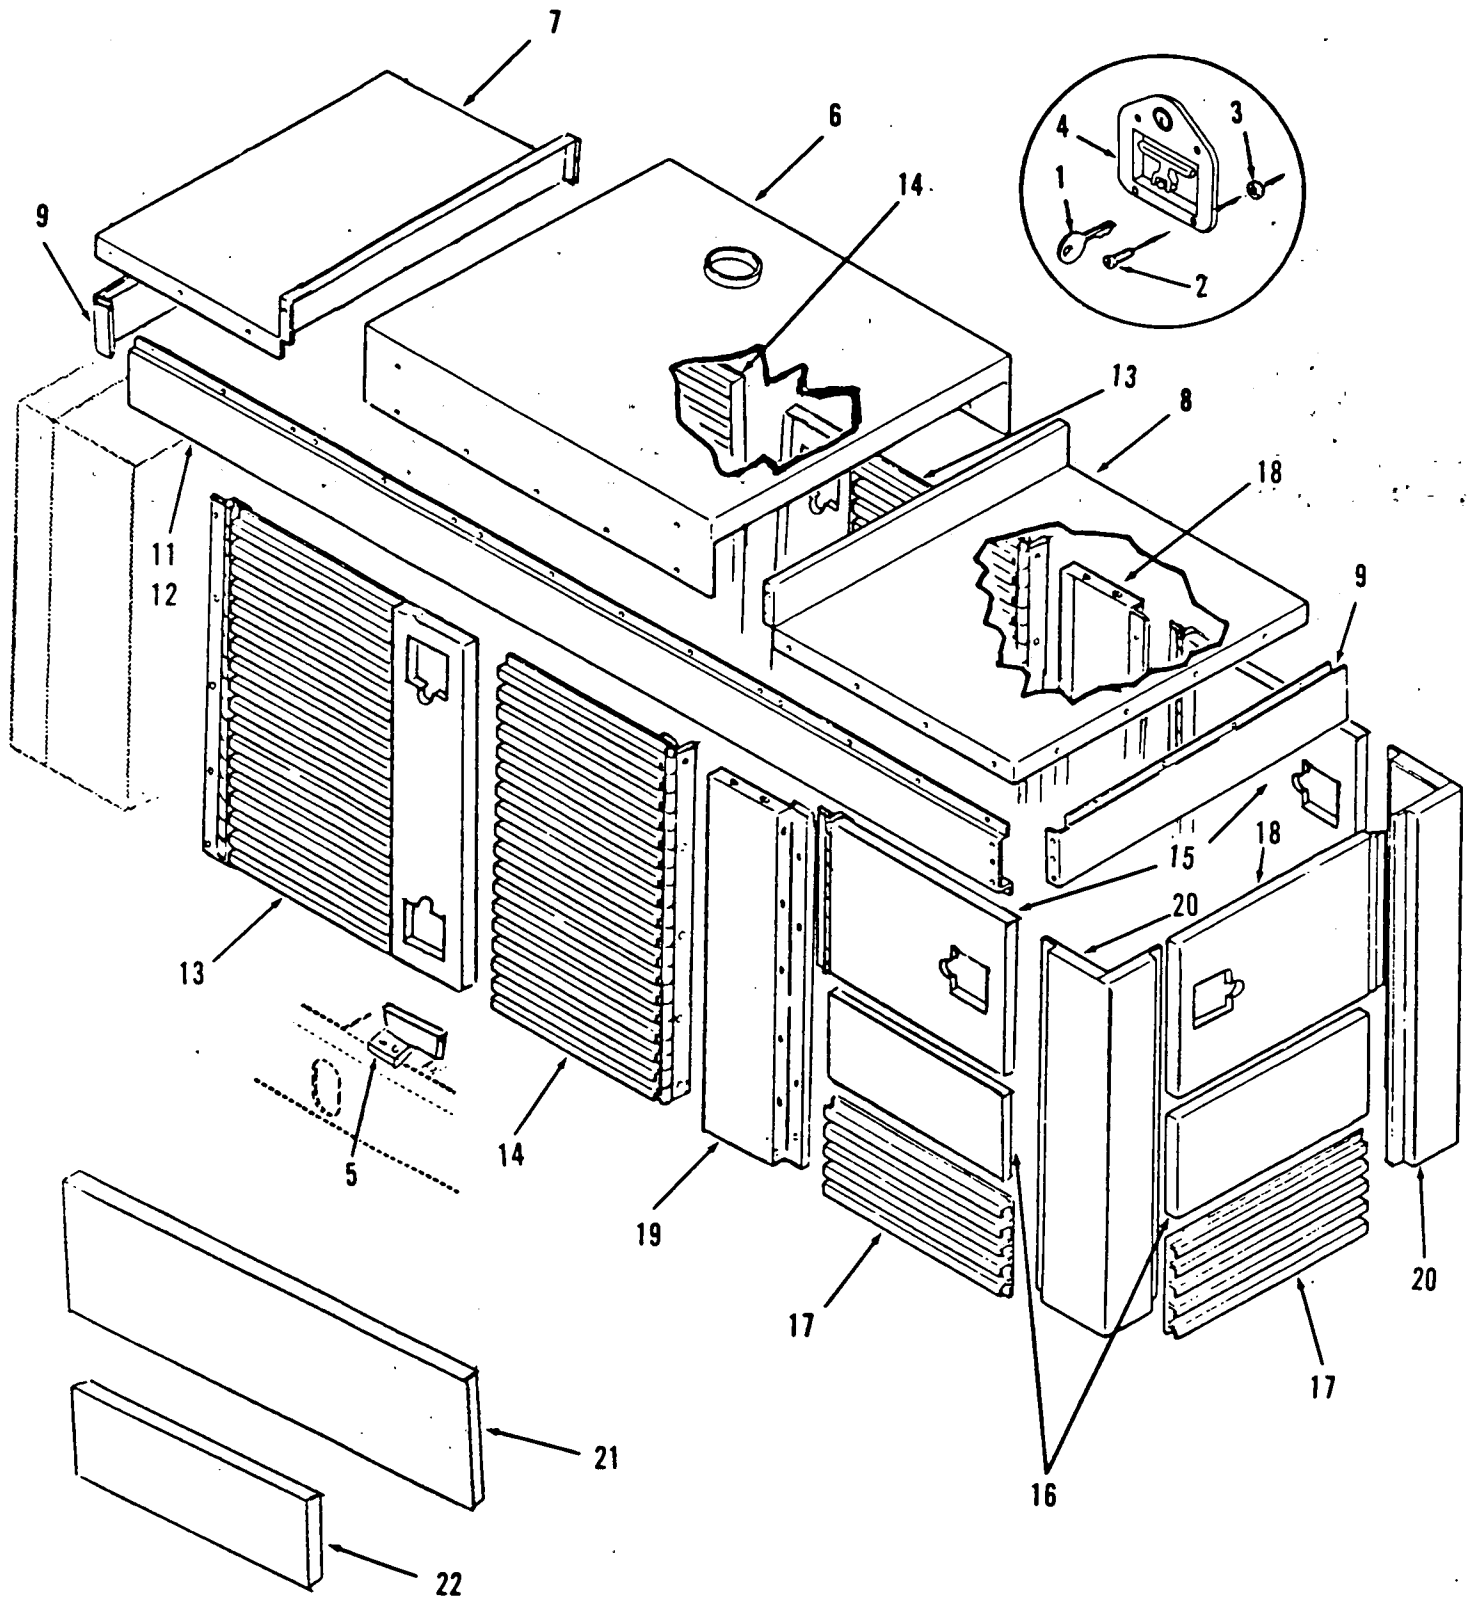

SET HOUSING COMPONENTS

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	406-0565		AR	Key	
2	815-0607		28	Screw, Machine - Oval Head (#8-32 x 3/8")	
3	870-0235		28	Nut, Self-locking - Hex Head (#8-32)	
4	406-0626		7	Handle, Door (Includes Key)	
5	405-3980		2	Stop	
				Attaching Parts for Stop	
	815-0236		4	Screw, Thread Cutting - Hex Head (5/16-18 x 5/8")	Note 1.
	821-0016		4	Screw, Self-locking - Hex Washer Head (5/16-18 x 3/4")	
6	405-4114		1	Roof, Housing - Center	Note 2.
				Attaching Parts for Center Roof	
	816-0098		16	Bolt, Carriage (5/16-18 x 5/8")	
	870-0257		16	Nut, Self-locking - Hex Washer Head (5/16-18)	
7	405-4113		1	Roof, Housing - Front	
				Attaching Parts for Front Roof	
	816-0098		10	Bolt, Carriage (5/16-18 x 5/8")	
	870-0257		10	Nut, Self-locking - Hex Washer Head (5/16-18)	
8	405-4114		1	Roof, Housing - Rear	
				Attaching Parts for Rear Roof	
	816-0098		14	Bolt, Carriage (5/16-18 x 5/8")	
	870-0257		14	Nut, Self-locking - Hex Washer Head (5/16-18)	
9	405-4117		1	End Cap, Housing - Rear	
				Attaching Parts for Rear End Cap	
	816-0098		6	Bolt, Carriage (5/16-18 x 5/8")	
	870-0257		6	Nut, Self-locking - Hex Washer Head (5/16-18)	
10	405-4116		1	End Cap, Housing - Front	
				Attaching Parts for Front End Cap	
	816-0098		6	Bolt, Carriage (5/16-18 x 5/8")	
	870-0257		6	Nut, Self-locking - Hex Washer Head (5/16-18)	
11	405-4118-01		1	Rail, Housing - Side	
12	405-4118-02		1	Rail, Housing - Side (Not Illustrated)	Note 2.
				Attaching Parts for Side Rails	
	821-0029		14	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")	
	870-0281		14	Nut, Self-locking - Hex with Washer (3/8-16)	
13	405-4119		2	Door, Housing - with Louvers & Lock Opening	Note 2.
				Attaching Parts for Door	
	819-1102		10	Screw, Machine - Pan Head (5/16-18 x 1/2")	
14	405-4108		2	Door, Housing - with Louvers	
				Attaching Parts for Door	
	819-1102		10	Screw, Machine - Pan Head (5/16-18 x 1/2")	
15	405-4107		2	Door, Housing - Side	
				Attaching Parts for Side Doors	
	819-1102		6	Screw, Machine - Pan Head (5/16-18 x 1/2")	
16	405-4112		3	Panel, Housing - Center	
				Attaching Parts for Panels	
	821-0014		12	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")	
	870-0257		12	Nut, Self-locking - Hex Washer Head (5/16-18)	
17	405-4104		3	Grille, Housing - Air Inlet	
				Attaching Parts for Grilles	
	821-0014		12	Screw, Self-locking - Hex Washer Head (5/16-18 x 1/2")	
18	405-4106		1	Door, Housing - Control Access	
				Attaching Parts for Door	
	819-1102		3	Screw, Machine - Pan Head (5/16-18 x 1/2")	
19	405-4110		2	Post, Housing - Center	
				Attaching Parts for Center Posts	
	821-0029		4	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")	
20	405-4111		2	Post, Housing - Corner	
				Attaching Parts for Corner Posts	
	821-0029		8	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")	
21	128-0117		4	Sheet, Insulation - Special (1/4" x 7 3/4" x 40")	Note 2.
22	128-0118		1	Sheet, Insulation - Special (1/4" x 5 3/4" x 24")	Note 2.


NOTES: 1. Thread Cutting Screw Not recommended as replacement, use 821-0016.

2. Special Insulation Foam Sheets used for Heat Shielding, They are NOT supplied as part of the Roof or Rails, etc.

TABLE OF CONTENTS
CONTROL SECTION

GENERATOR SET CONTROL - Installation of	3-3
ENGINE CONTROL PANEL COMPONENTS	3-5
TACHOMETER - Installation Of	3-7
OIL TEMP GAUGE - Installation of	3-9
EMERGENCY STOP SWITCH - Installation of	3-11
ENGINE MONITOR BOARD - Installation Of	3-13
ALARM RELAY MODULES - Installation Of.....	3-15
RUN RELAYS - Installation of	3-17
TIME DELAY START/STOP - Installation Of	3-19
ELECTRONIC OVERSPEED MODULE - Installation of	3-21
GENERATOR CONTROL PANEL COMPONENTS	3-23
AMMETER & CURRENT TRANSFORMER - Installation Of	3-25
WATTMETER - Installation Of	3-27
VOLTAGE REGULATOR - Installation of	3-29
CONTROL SPACE HEATER - Installation Of	3-31
AUX TERMINAL BLOCK - Installation Of	3-32
CONTROL BOX & MOUNTING COMPONENTS	3-33

GENERATOR SET CONTROL
Installation Of

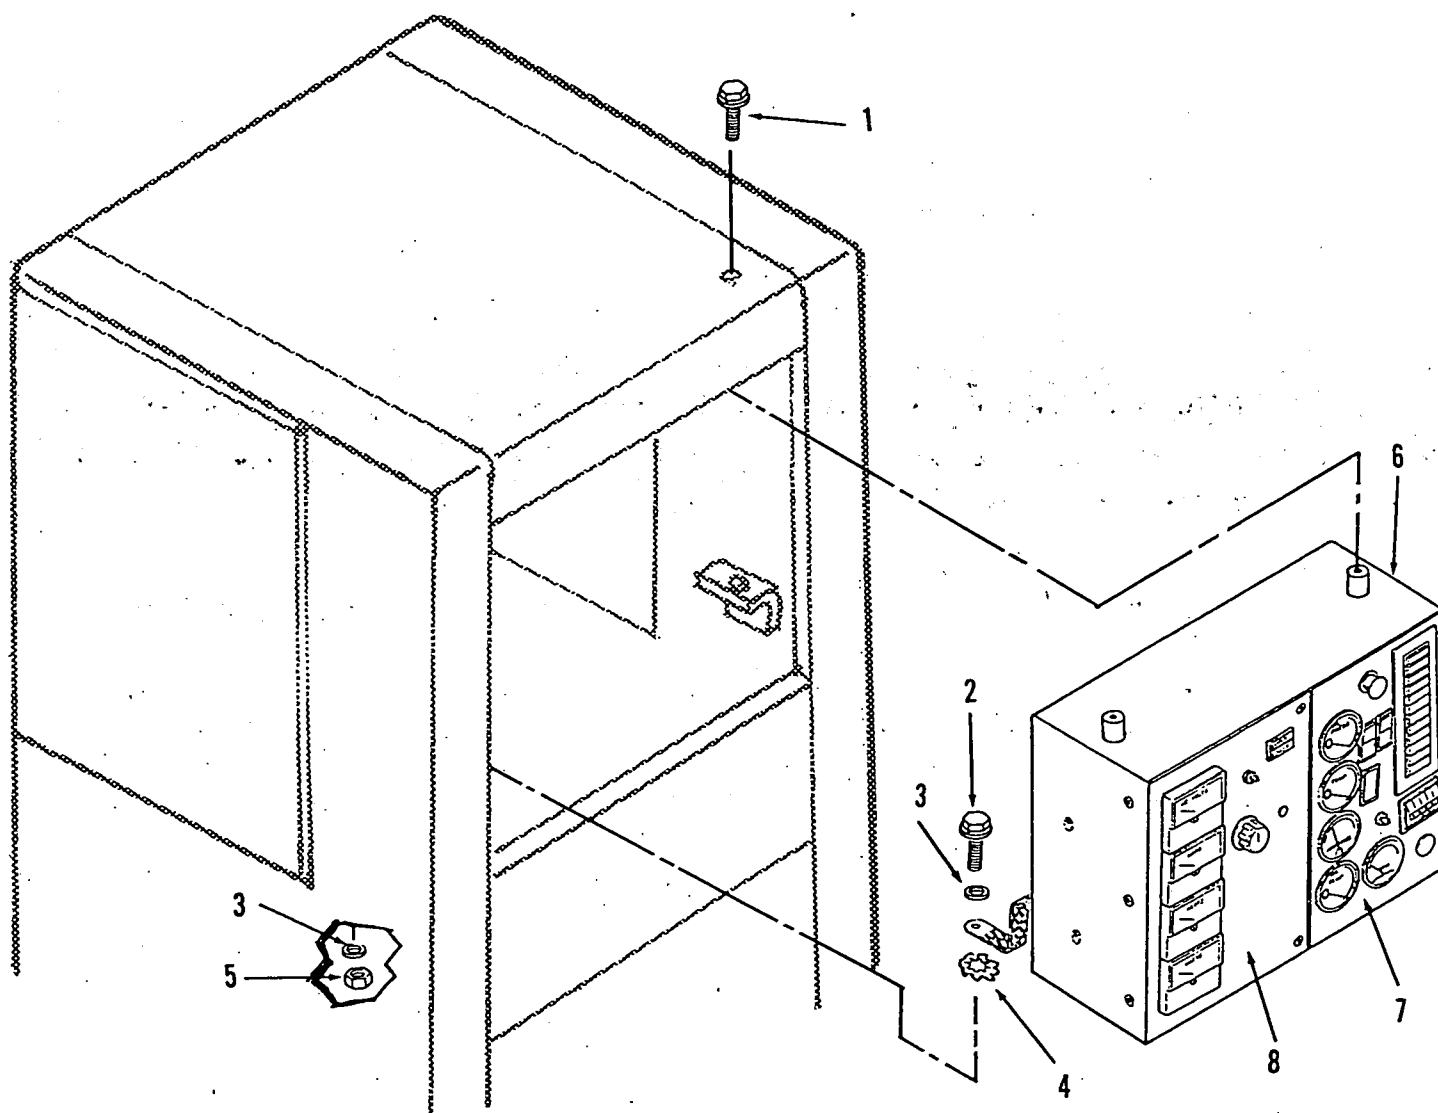


GENERATOR SET CONTROL **Installation Of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	821-0014			1	Screw, Self-Locking - Hex Washer Head (5/16-18 x 1/2")
2	821-0018			1	Screw, Self-Locking - Hex Washer Head (1/4-20 x 5/8")
3	526-0018			2	Washer, Flat (1/4")
4	856-0006			1	Washer, Lock - EIT (1/4")
5	870-0212			1	Nut, Self-Locking - Hex (1/4-20)
6	NOTE 1			REF	Control, Generator Set (See Control Section Illustrations and Parts Lists For Replaceable Components)
7	NOTE 1			REF	Engine Control Panel (See Separate Illustration for Components)
8	NOTE 1			REF	Generator Control Panel (See Separate Illustration for Components)

NOTE 1. Not Stocked For Sale at the Central Parts Distribution Center.


ENGINE CONTROL PANEL COMPONENTS

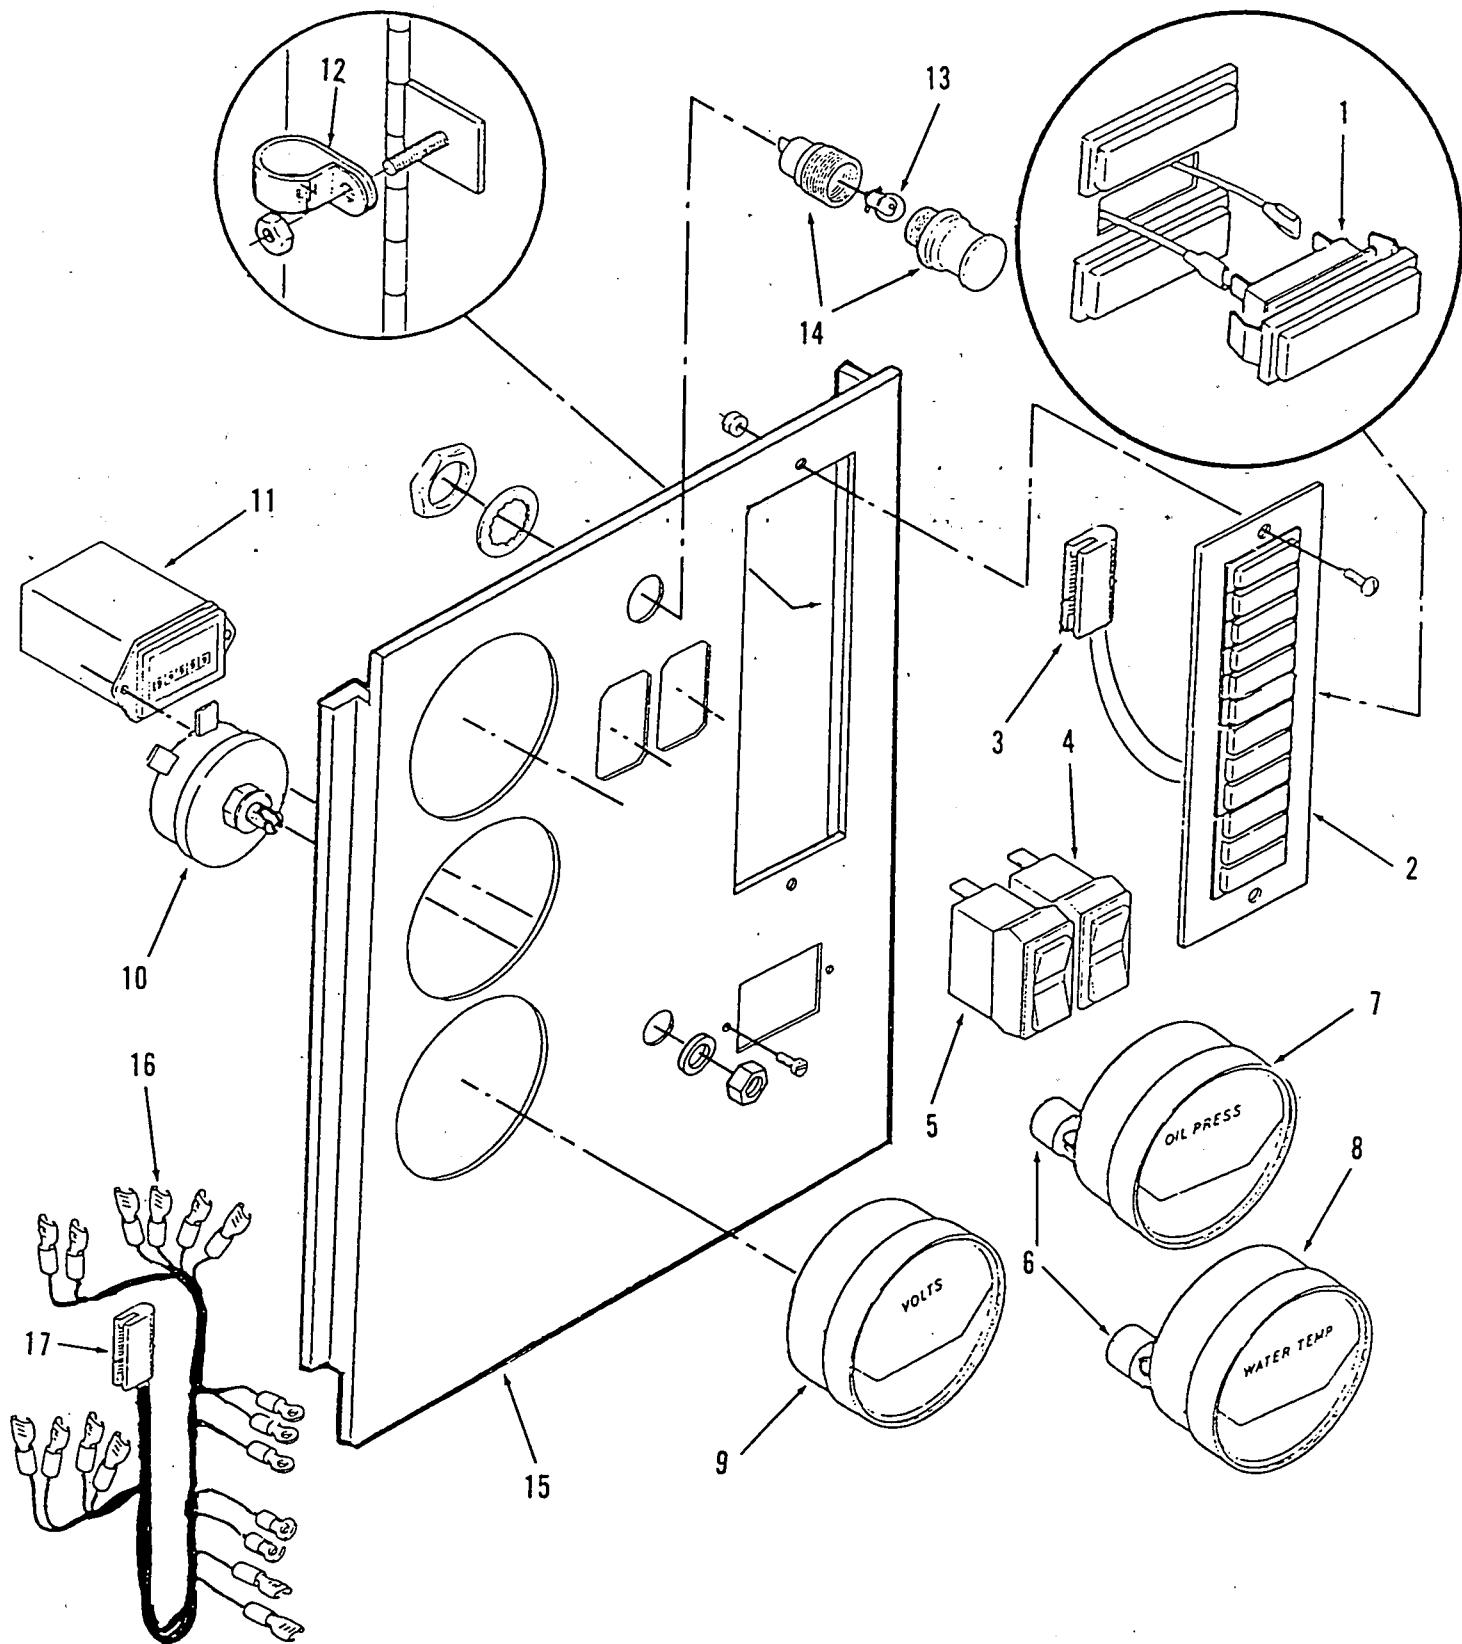

ENGINE CONTROL PANEL COMPONENTS

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	322-0369-03			1	Lamp, Incandescent - 1/3 Watt, 28 Volts DC
2					Module, Indicator - Fault (A12) (Includes Connector Housing)
	322-0359-02			1	7 Light Module
	322-0360-02			1	12 Light Module
					Attaching Parts for Fault Module
	815-0385			2	Screw, Machine - Round Head (#6 - 32 x 1/2")
	870-0183			2	Nut, Self-Locking - ET Hex Washer Head (#6 - 32)
3	323-1310			1	Housing, Conn - 13 Pin (J3) (Less Contact Pins)
	323-1302			13	Contact, Pin
4	308-0785			1	Switch, Push - Reset/Panel Lamp (S11)
5	308-0784			1	Switch, Push - Run/Stop/Remote (S12)
6	193-0250			2	Resistor, Gauge (R12)
7	193-0352			1	Gauge, Pressure - Oil, 12 VDC (M11)
8	193-0351			1	Gauge, Temp - Water, 12 VDC (M12)
9	302-1642			1	Voltmeter, DC (M13)
10	151-0402			1	Potentiometer - Speed Control (R11)
11	302-0885			1	Meter, Running Time (M14)
					Attaching Parts for Meter
	815-0385			2	Screw, Machine - Round Head (#6 - 32 x 1/2")
	870-0183			2	Nut, Self-Locking - ET Hex Washer Head (#6 - 32)
12	332-0052			1	Clamp, Loop
					Attaching Parts for Clamp
	870-0131			2	Nut, Self-Locking - with ET Lockwasher (#10 - 32)
13	322-0017			1	Lamp, Incandescent - 28 VDC (DS11)
14	322-0361			1	Holder, Lamp
15	301-9055-02			1	Panel, Control - 3 Gauge Holes
16	338-2277			1	Harness Assembly, Wiring - DC (Includes Connector Housing)
17	323-1308			1	Housing, Conn - 12 Pin (J4) (Less Contact Pins)
	323-1302			12	Contact, Pin
18	98-5219			1	Decal - Panel Front (Not Illustrated)
19	98-5220			1	Decal - Panel Rear (Not Illustrated)

TACHOMETER Installation Of

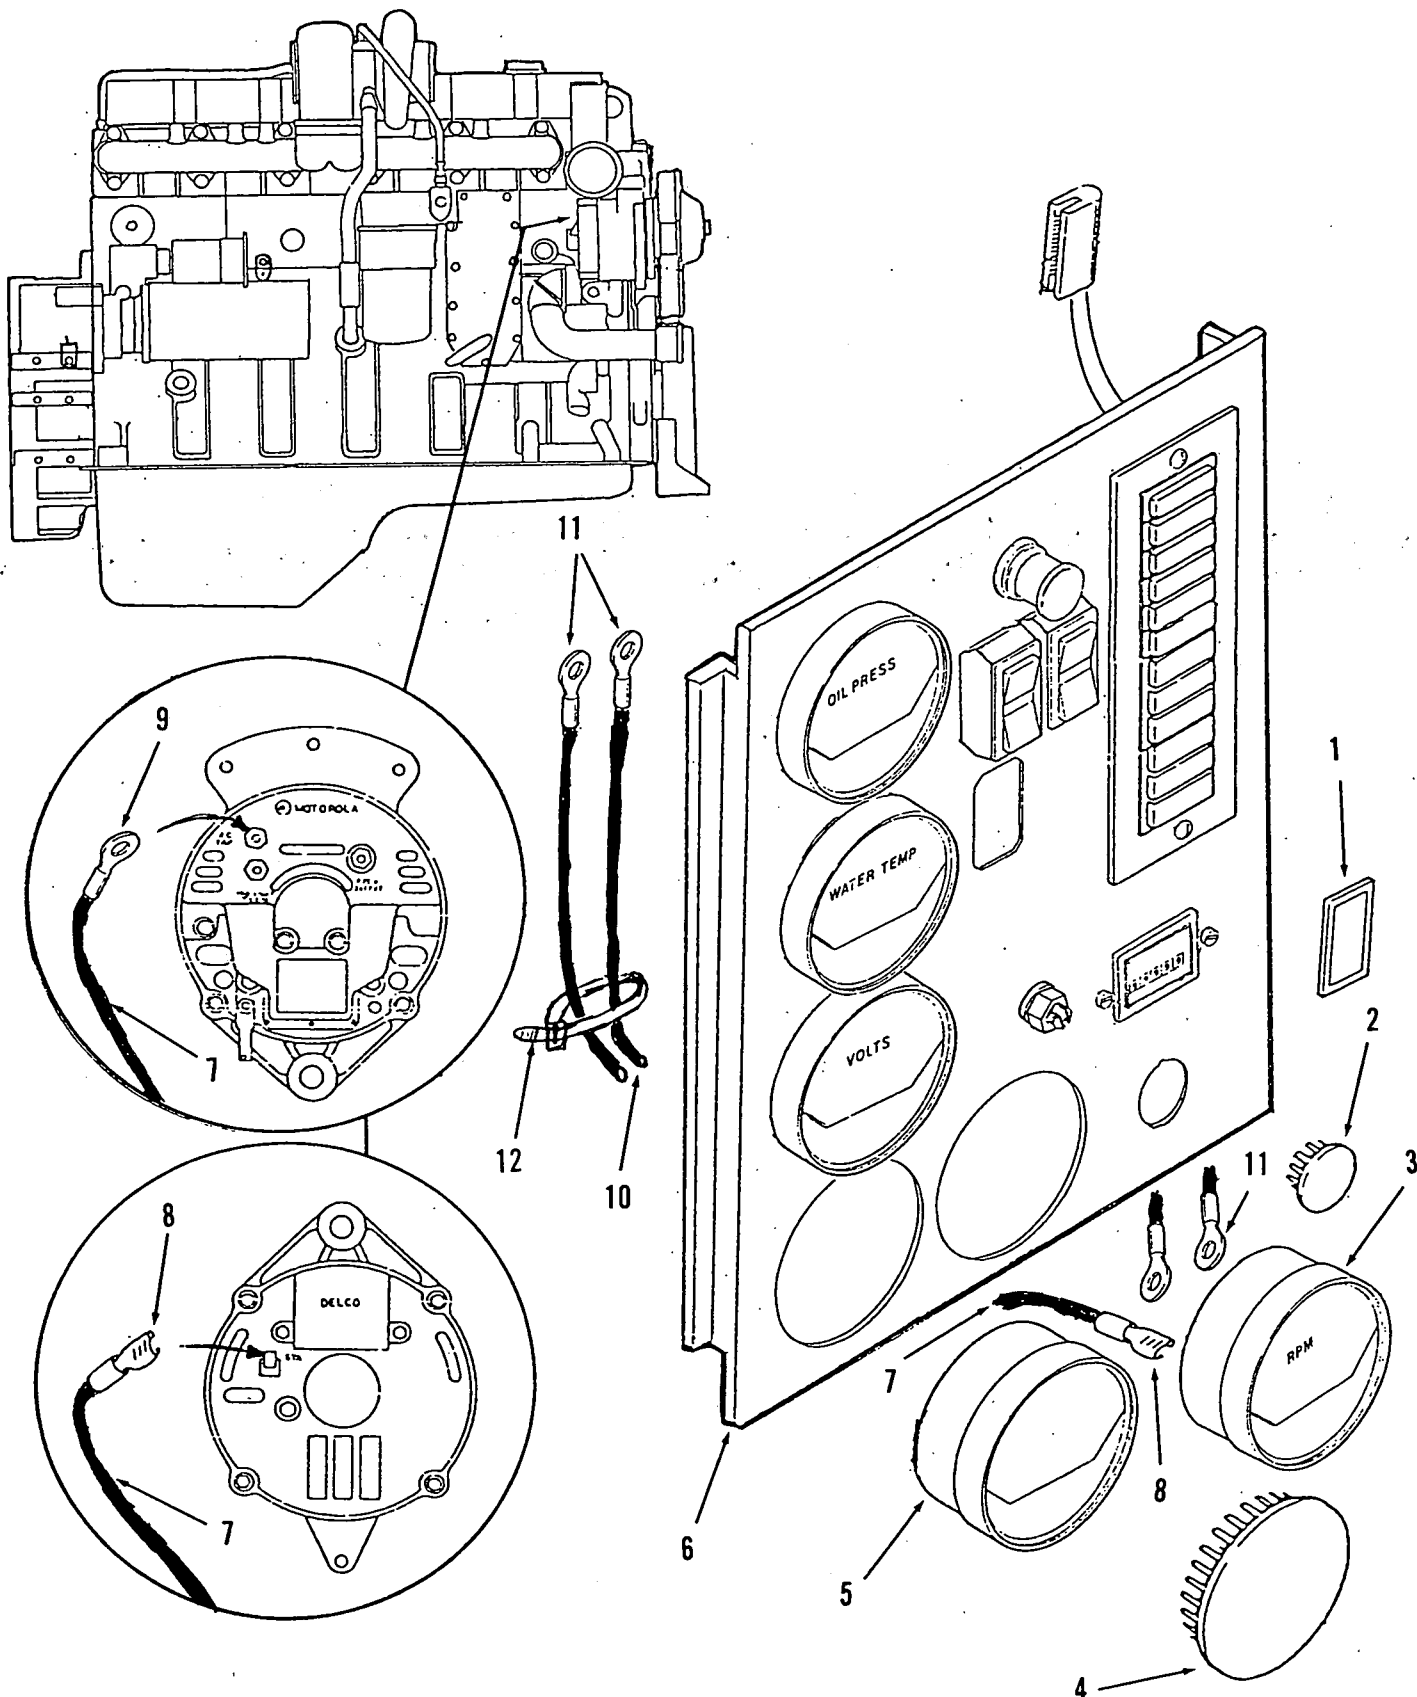


TACHOMETER Installation Of

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	301-6257			1	Cover - Blank Switch
2	517-0137			1	Plug, Dot Button
3	302-1873-01			1	Tachometer (M16) [NOTE 1]
4	517-0131			1	Plug, Dot Button (Option in lieu of Blank Meter)
5	302-1723			1	Meter, Blank (Option in lieu of Dot Button Plug)
6	301-9055-01			1	Panel, Control
7	NOTE 2			AR	Wire, Electrical - 16 AWG, Insulated
8	332-1993			2	Terminal, Faston, .25 - 14-16 AWG Gauge Wire
9	332-0807			1	Terminal, Wire - Ring #10, 16-18 AWG Gauge Wire
10	NOTE 2			AR	Wire, Electrical - 20 AWG, Insulated
11	332-0147			4	Terminal, Wire - Ring #10, 18-20 AWG Gauge Wire
12	332-1445			3	Tie, Cable
18	98-5219			1	Decal - Panel Front (Not Illustrated)
19	98-5220			1	Decal - Panel Rear (Not Illustrated)

NOTES:

1. Tachometer comes with a 12 volt bulb and socket which must be discarded as meter illumination is provide by a front panel light. Caution, correct hookup per instruction sheet is necessary as the tachometer is used on both 12 VDC and 24 VDC electrical systems.
2. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.

OIL TEMPERATURE GAUGE Installation Of

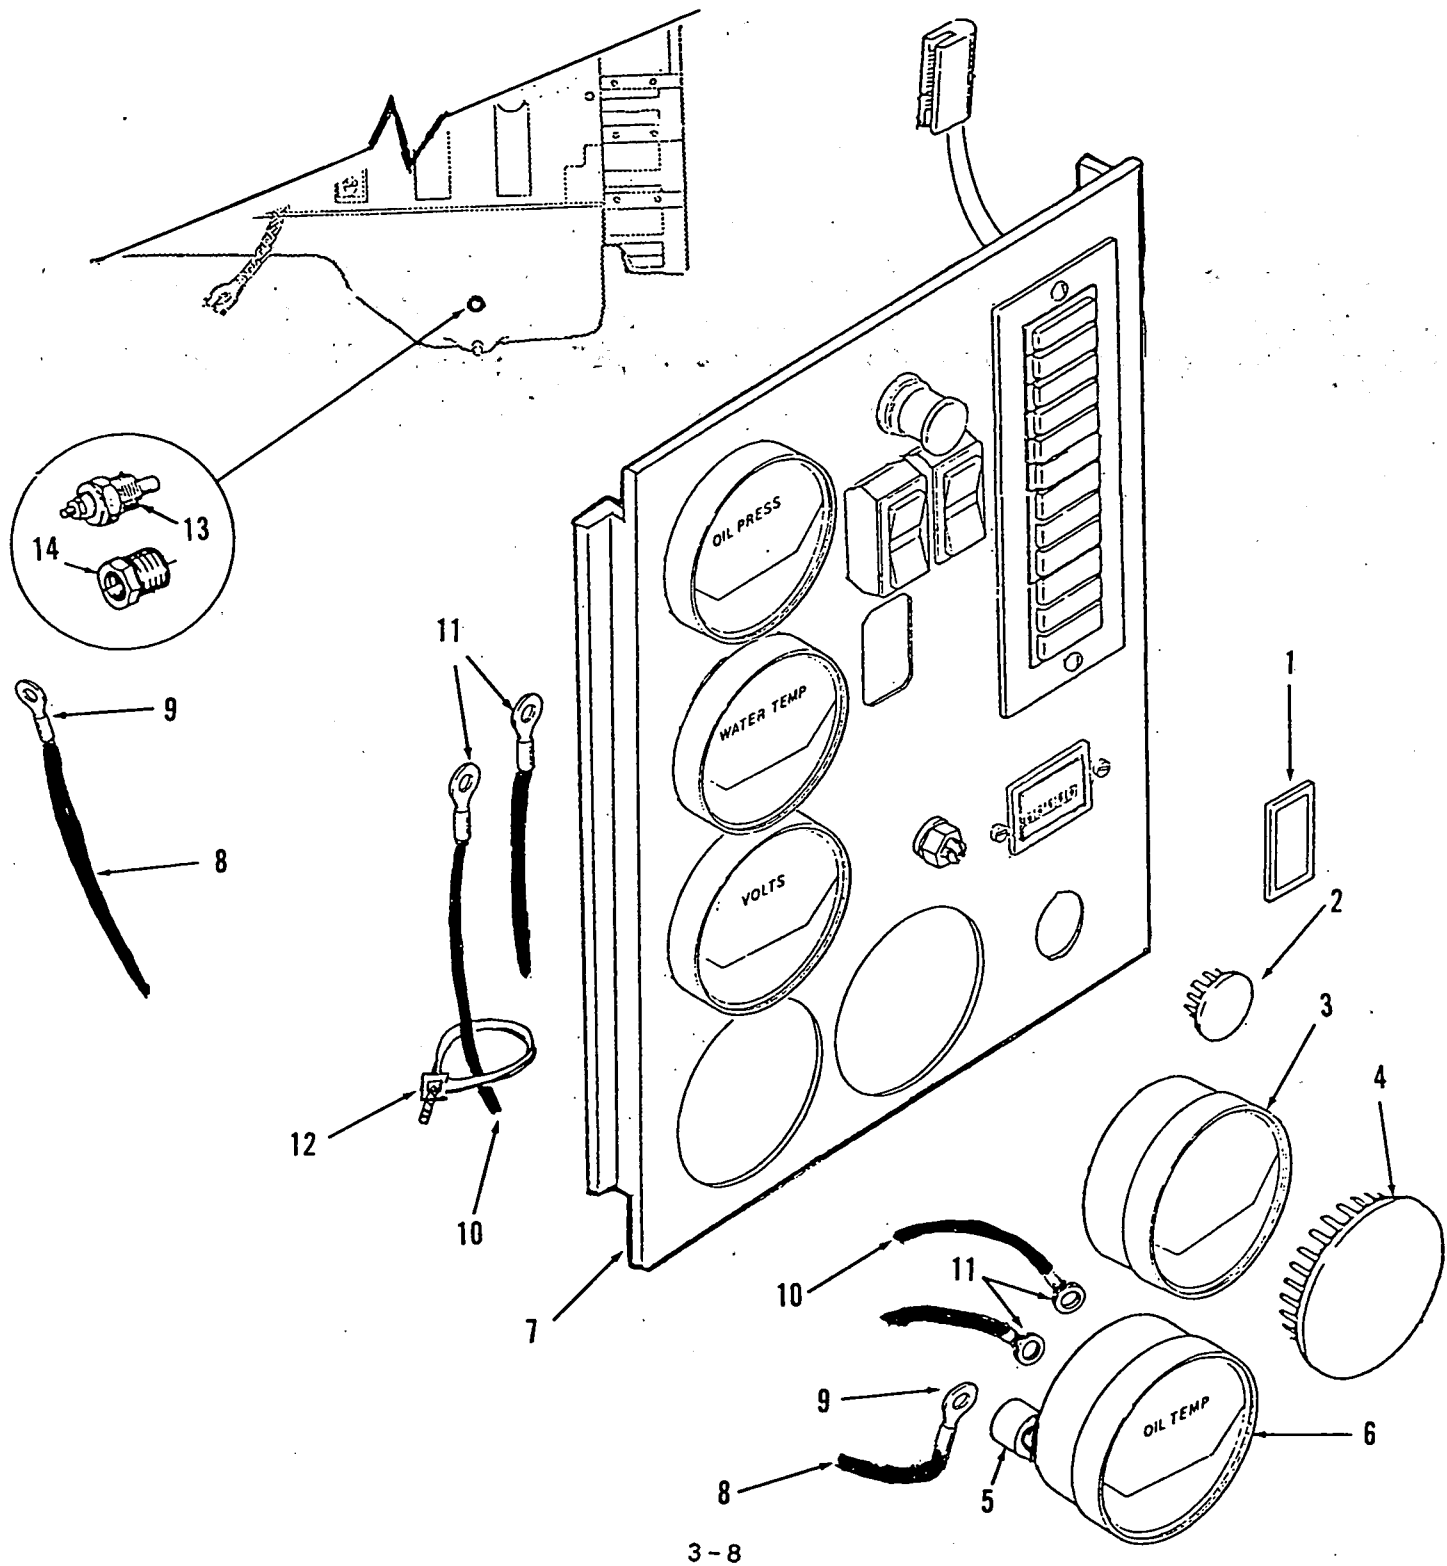


OIL TEMPERATURE GAUGE Installation Of

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	301-6257			1	Cover - Blank Switch
2	517-0137			1	Plug, Dot Button
3	302-1723			1	Meter, Blank (Option in lieu of Dot Button Plug)
4	517-0131			1	Plug, Dot Button (Option in lieu of Blank Meter)
5	193-0250			1	Resistor, Gauge
6	193-0330			1	Gauge - Oil Temperature
7	301-9055-01			1	Panel, Control
8	NOTE 1			AR	Wire, Electrical - 16 AWG, Insulated
9	332-0807			2	Terminal, Wire - Ring #10, 16-18 AWG Gauge Wire
10	NOTE 1			AR	Wire, Electrical - 20 AWG, Insulated
11	332-0147			4	Terminal, Wire - Ring #10, 18-20 AWG Gauge Wire
12	332-1445			2	Tie, Cable
13	193-0353			1	Sender, Temperature - Oil (E4)
14	505-0151			1	Bushing, Reducer (1/2 NPTF x 1/8 NPTF)
18	98-5219			1	Decal - Panel Front (Not Illustrated)
19	98-5220			1	Decal - Panel Rear (Not Illustrated)

NOTES:

1. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.

EMERGENCY STOP SWITCH
Installation Of

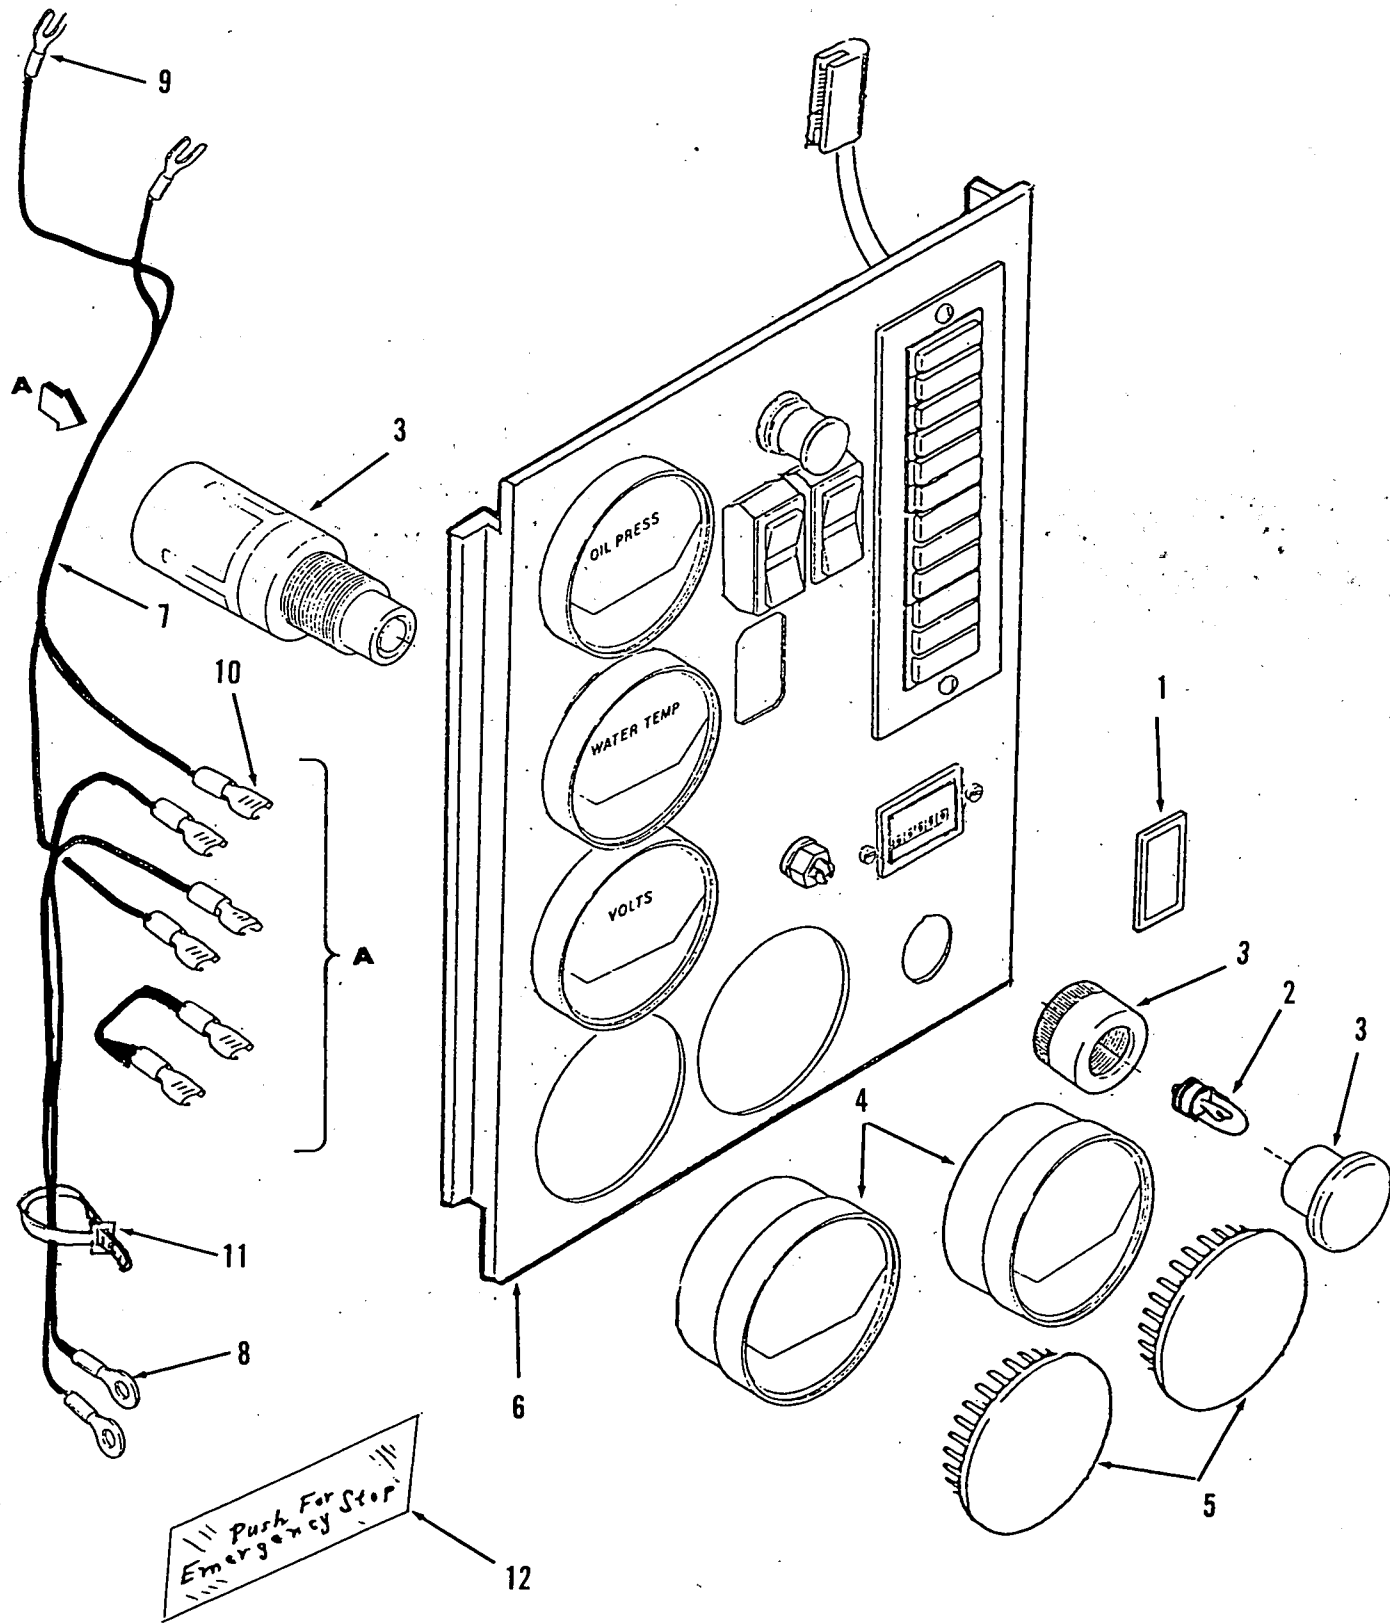


EMERGENCY STOP SWITCH **Installation Of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	301-6257			1	Cover - Blank Switch
2	322-0223			1	Lamp, Incandescent - 28 VDC, MSCP .34
3	308-0853			1	Switch, Push (Includes replaceable bulb)
4	302-1723			2	Meter, Blank (Option in lieu of Dot Button Plug)
5	517-0131			2	Plug, Dot Button (Option in lieu of Blank Meter)
6	301-9055-01			1	Panel, Control
7	NOTE 1		AR		Wire, Electrical - 20 AWG, Insulated
8	332-0804			2	Terminal, Wire - Ring .25, 18-20 AWG Gauge Wire
9	332-1673			2	Terminal, Wire - Spade, #6; 18-20 AWG Gauge Wire
10	332-1477			6	Terminal, Wire - Faston, .25, 18-20 AWG Gauge Wire
11	332-1445			4	Tie, Cable
12	98-5662			1	Decal "Push For Emergency Stop"
18	98-5219			1	Decal - Panel Front (Not Illustrated)
19	98-5220			1	Decal - Panel Rear (Not Illustrated)

NOTES:

1. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.


ENGINE MONITOR BOARD
Installation Of

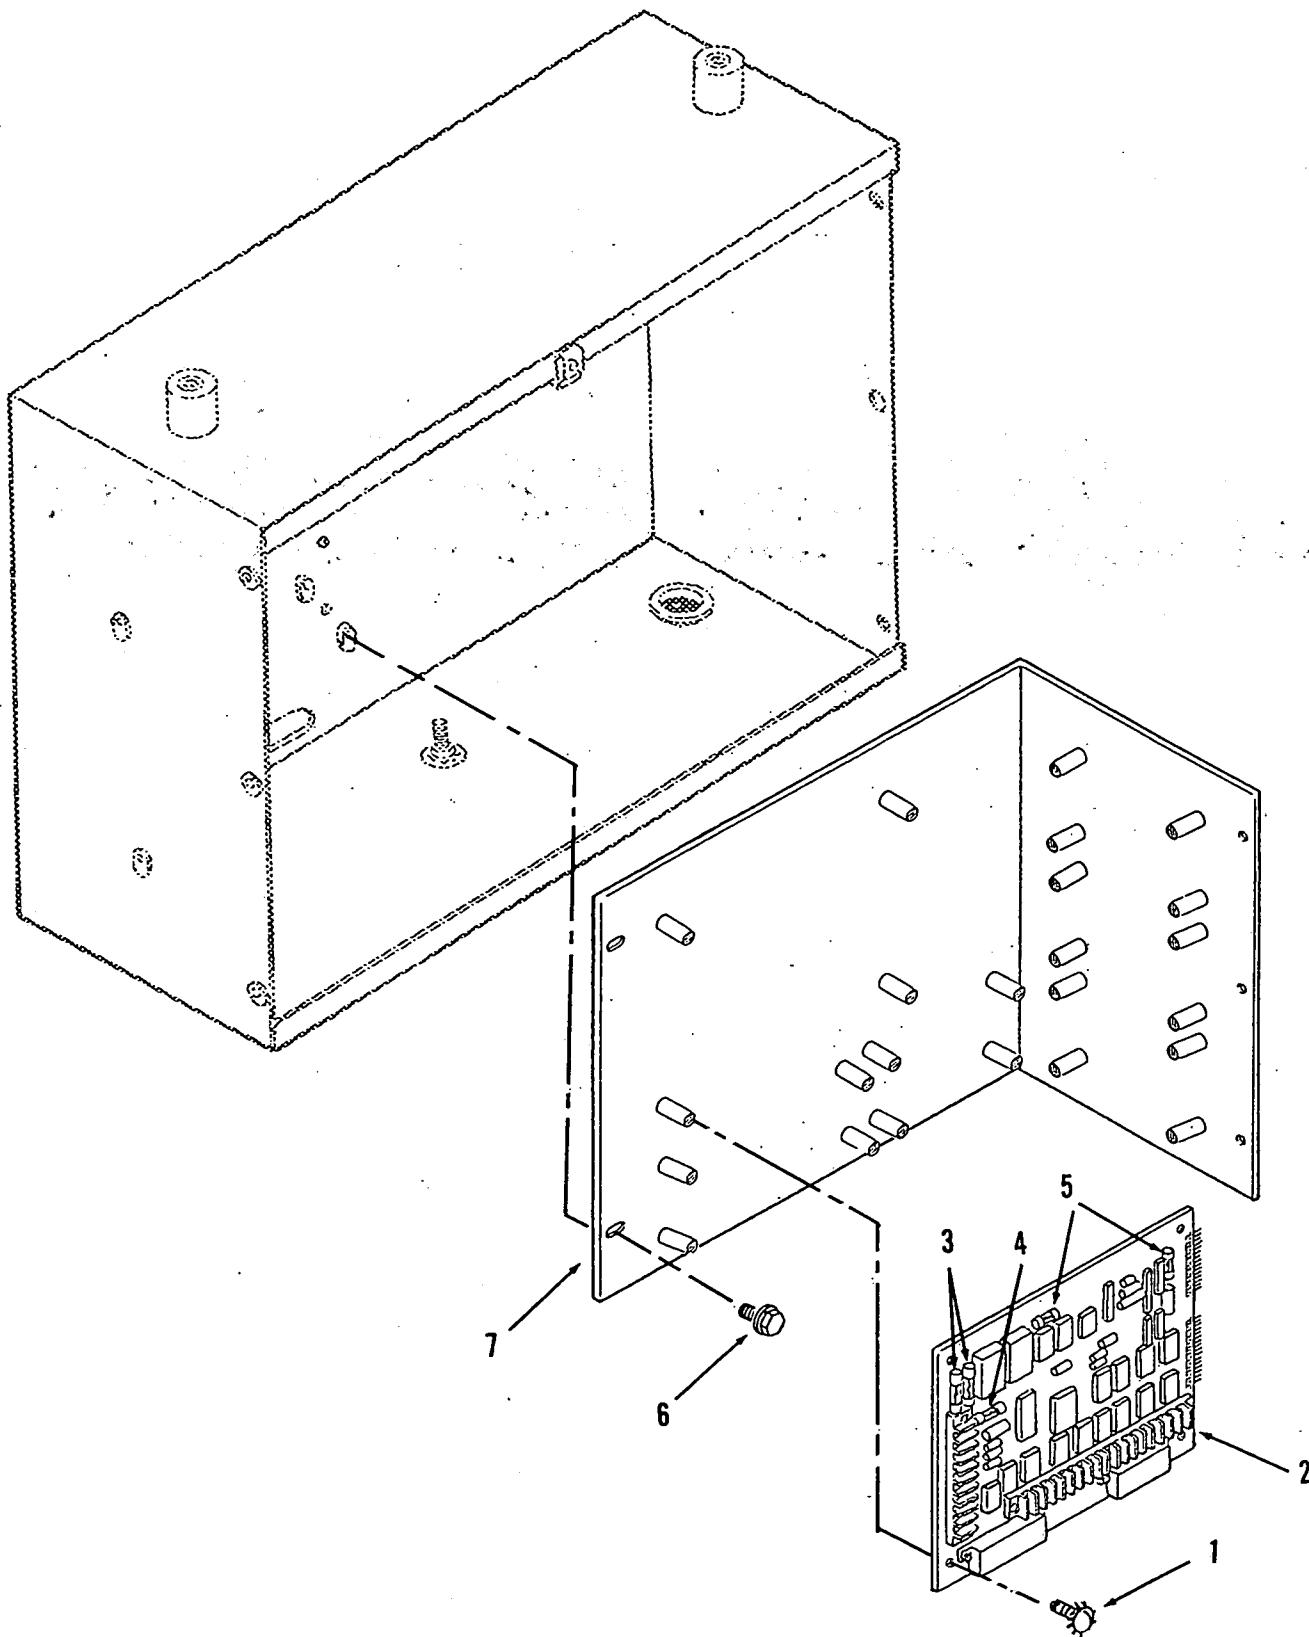

ENGINE MONITOR BOARD Installation Of

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	815-0544			4	Screw, Machine - Round Head With IT Lock Washer (#6-32 x 1/2")
2	300-2810			1	Board - Engine Monitor (A11) (Includes Fuses)
	300-2812			1	24 VDC, 7 Light
3	321-0270			1	24 VDC, 12 Light
4	321-0231			2	Fuse, Cartridge - 20 Amp (F1, F2)
5	321-0094			1	Fuse, Cartridge - 15 Amp (F3)
6	821-0004			2	Fuse, Cartridge - 5 Amp (F4, F5)
7	301-8851			4	Screw, Self-locking - Hex Washer Head (#10-32 x 5/16")
				1	Bracket, Mounting

ALARM RELAY MODULES
Installation Of

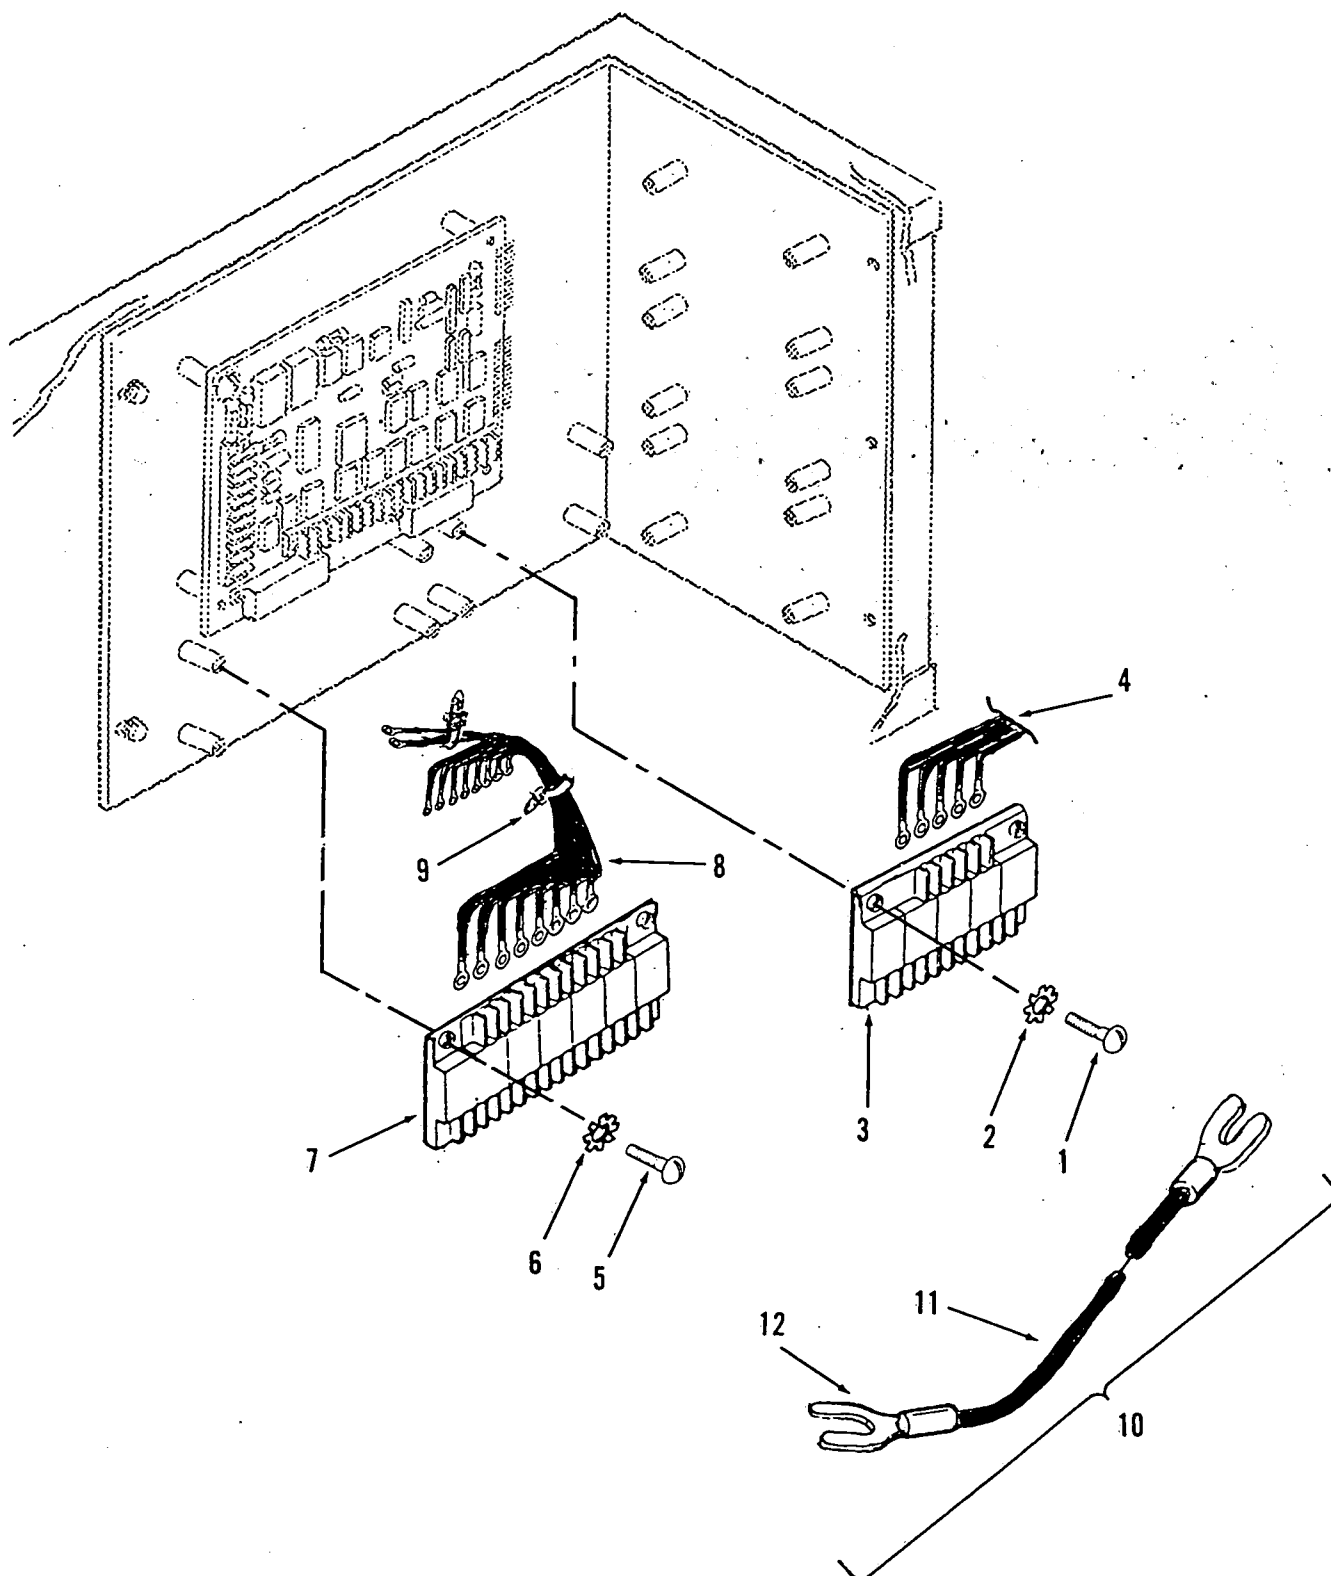


ALARM RELAY MODULES **Installation Of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	812-0063			4	Screw, Machine - Round Head (#6-32 x 1/2)
2	853-0003			4	Washer, Lock - External Tooth (#6)
3	300-2856			1	Module, Alarm Relay - 24 VDC, A14 (5 Relays)
4	338-1836			1	Harness, Wiring (A14 to A11)
5	812-0063			4	Screw, Machine - Round Head (#6-32 x 1/2)
6	853-0003			4	Washer, Lock - External Tooth (#6)
7	300-2863			1	Module, Alarm Relay - 24 VDC, A13 (7 Relays)
8	338-1835			1	Harness, Wiring (A13 to A11)
9	332-1445			4	Tie, Cable
10	NOTE 1			1	Lead, Electrical (A13 to A14)
11	NOTE 2			AR	Wire, Electrical - 20 AWG, Insulated
12	332-1673			2	Terminal, Wire - Forked, 18-20 Gauge

NOTES:

1. Electrical Leads Not Stocked for Sale in Central Parts Distribution Center.
2. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.

RUN RELAYS
Installation Of

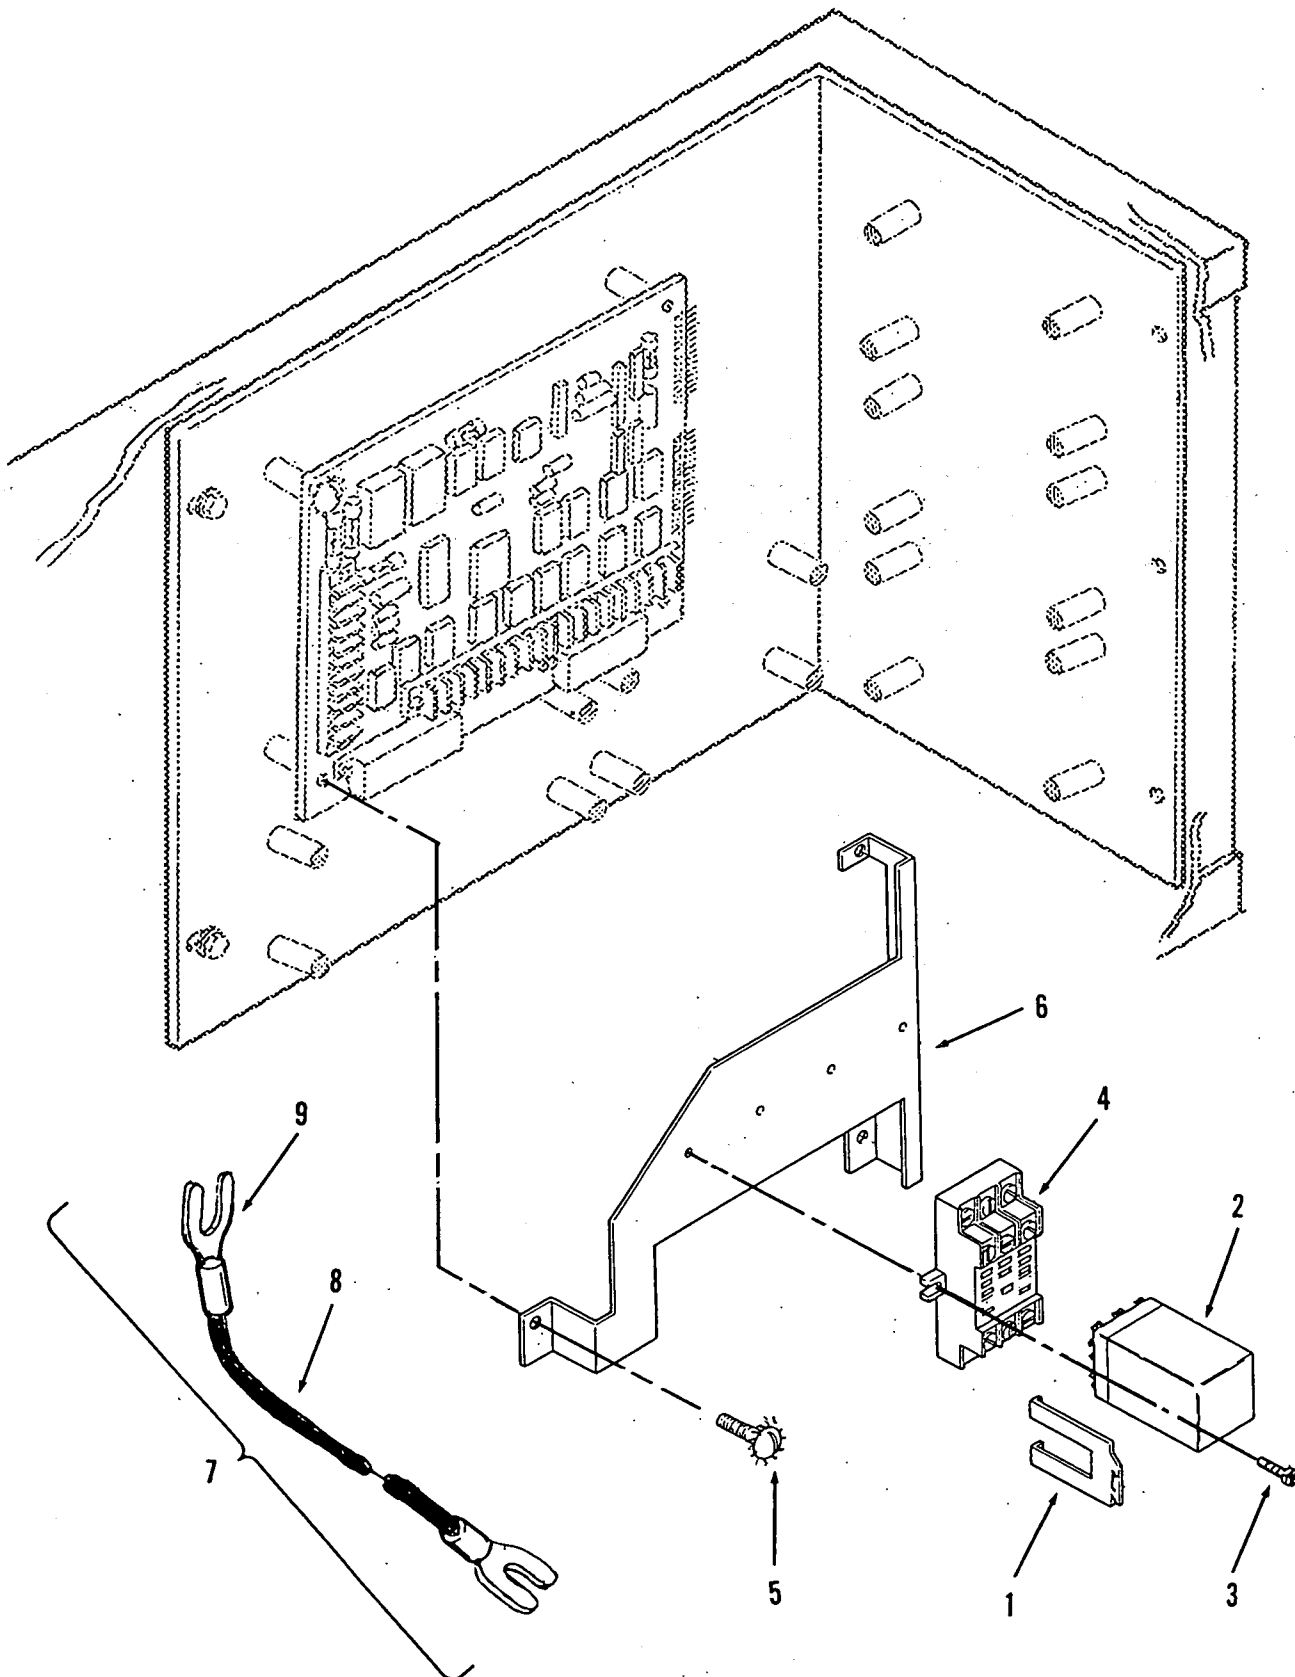


RUN RELAYS **Installation Of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	307-1987			6	Clip, Relay
2	307-1056			3	Relay, 24 VDC
3	815-0388			6	Screw, Machine - Pan Head, Cross-Recessed Drive (#6-32 x 1/2")
4	323-0804			3	Socket, Relay
5	815-0544			3	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
6	319-0447			1	Bracket, Mounting - Relay
7	NOTE 1		REF		Lead(s), Electrical
8	NOTE 2		AR		Wire, Electrical - 20 AWG, Insulated
9	332-1673		AR		Terminal, Wire - Forked, 18-20 Gauge

NOTES:

1. Electrical Leads Not Stocked for Sale in Central Parts Distribution Center.
2. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.

TIME DELAY START/STOP MODULE
Installation Of

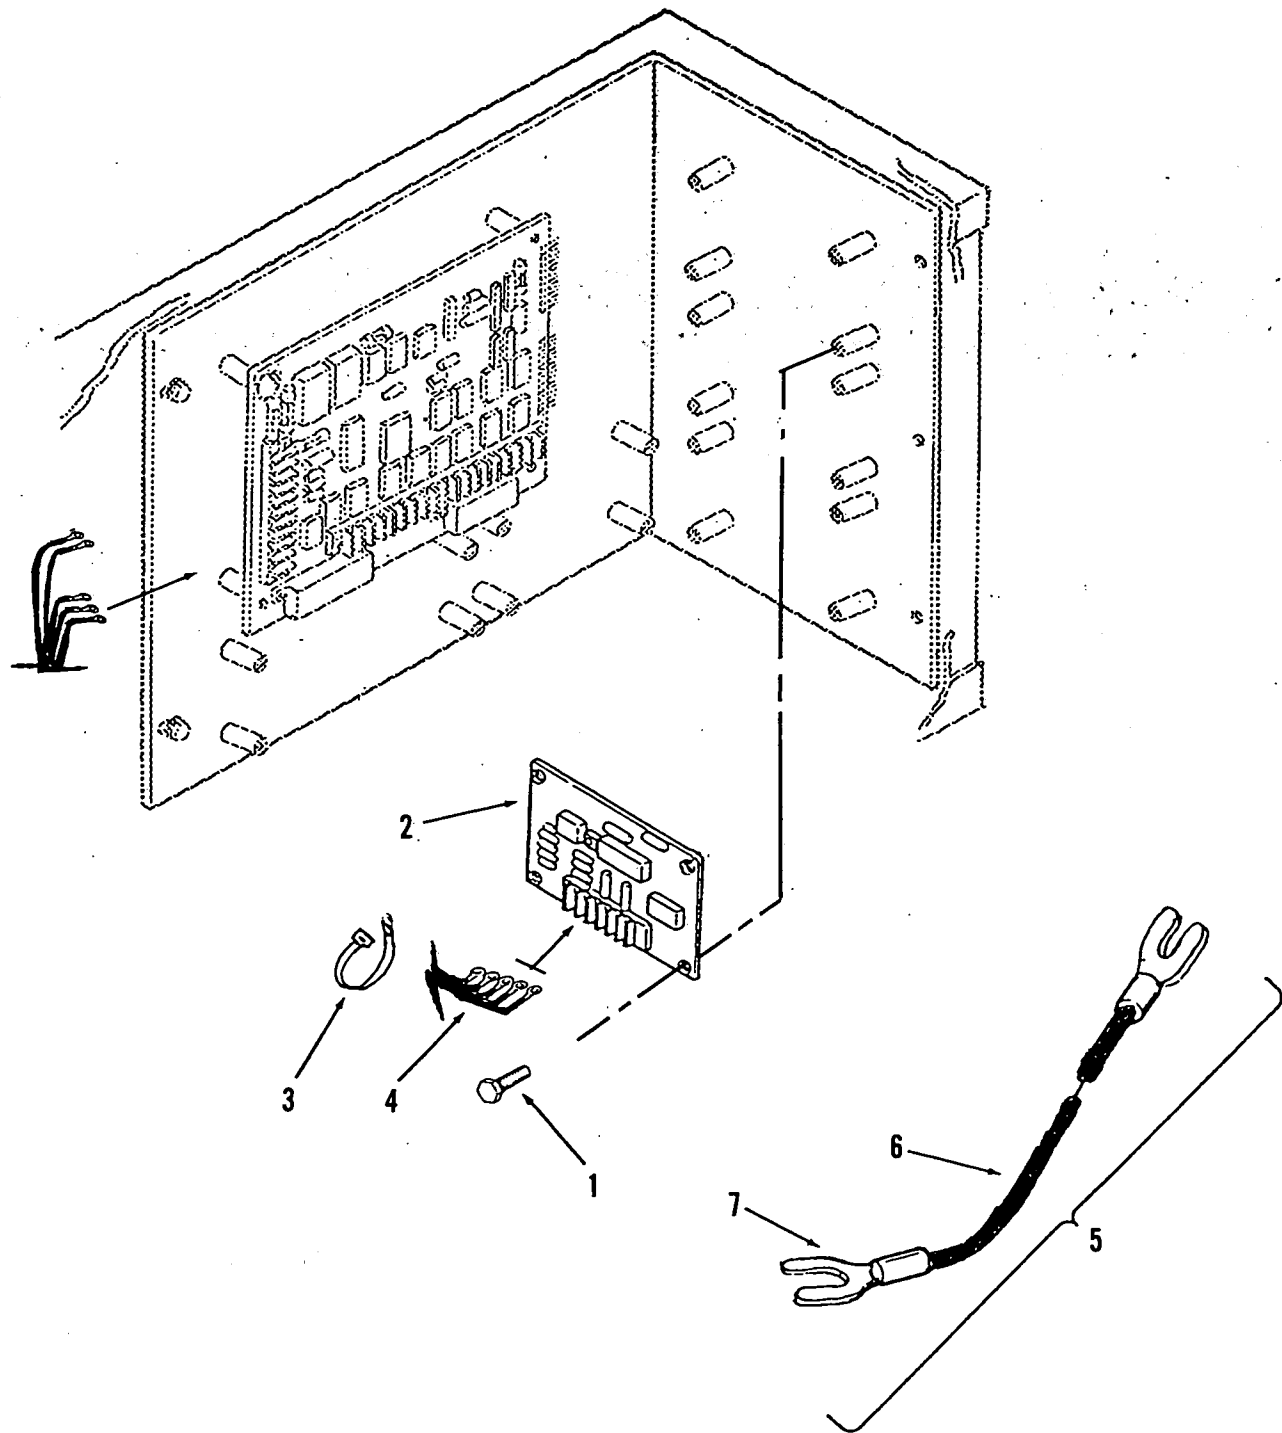


TIME DELAY START/STOP MODULE **Installation Of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	815-0544			4	Screw, Cap - Hex Head with ET Lockwasher (#6-32 x 1/2)
2	300-2899			1	Module, Time Delay Start/Stop - 24 VDC, A15 (5 Relays)
3	332-1445			3	Tie, Cable
4	338-1904			1	Harness, Wiring (A15 to A11)
5	NOTE 1			1	Lead, Electrical (A15 to A11)
6	NOTE 2		AR		Wire, Electrical - 20 AWG, Insulated
7	332-1673			2	Terminal, Wire - Forked, 18-20 Gauge

NOTES:

1. Electrical Leads Not Stocked for Sale in Central Parts Distribution Center.
2. Electrical Wire Not Stocked for Sale in Central Distribution Parts Center; Obtain locally as needed.


**ELECTRONIC OVERSPEED MODULE
Installation Of**

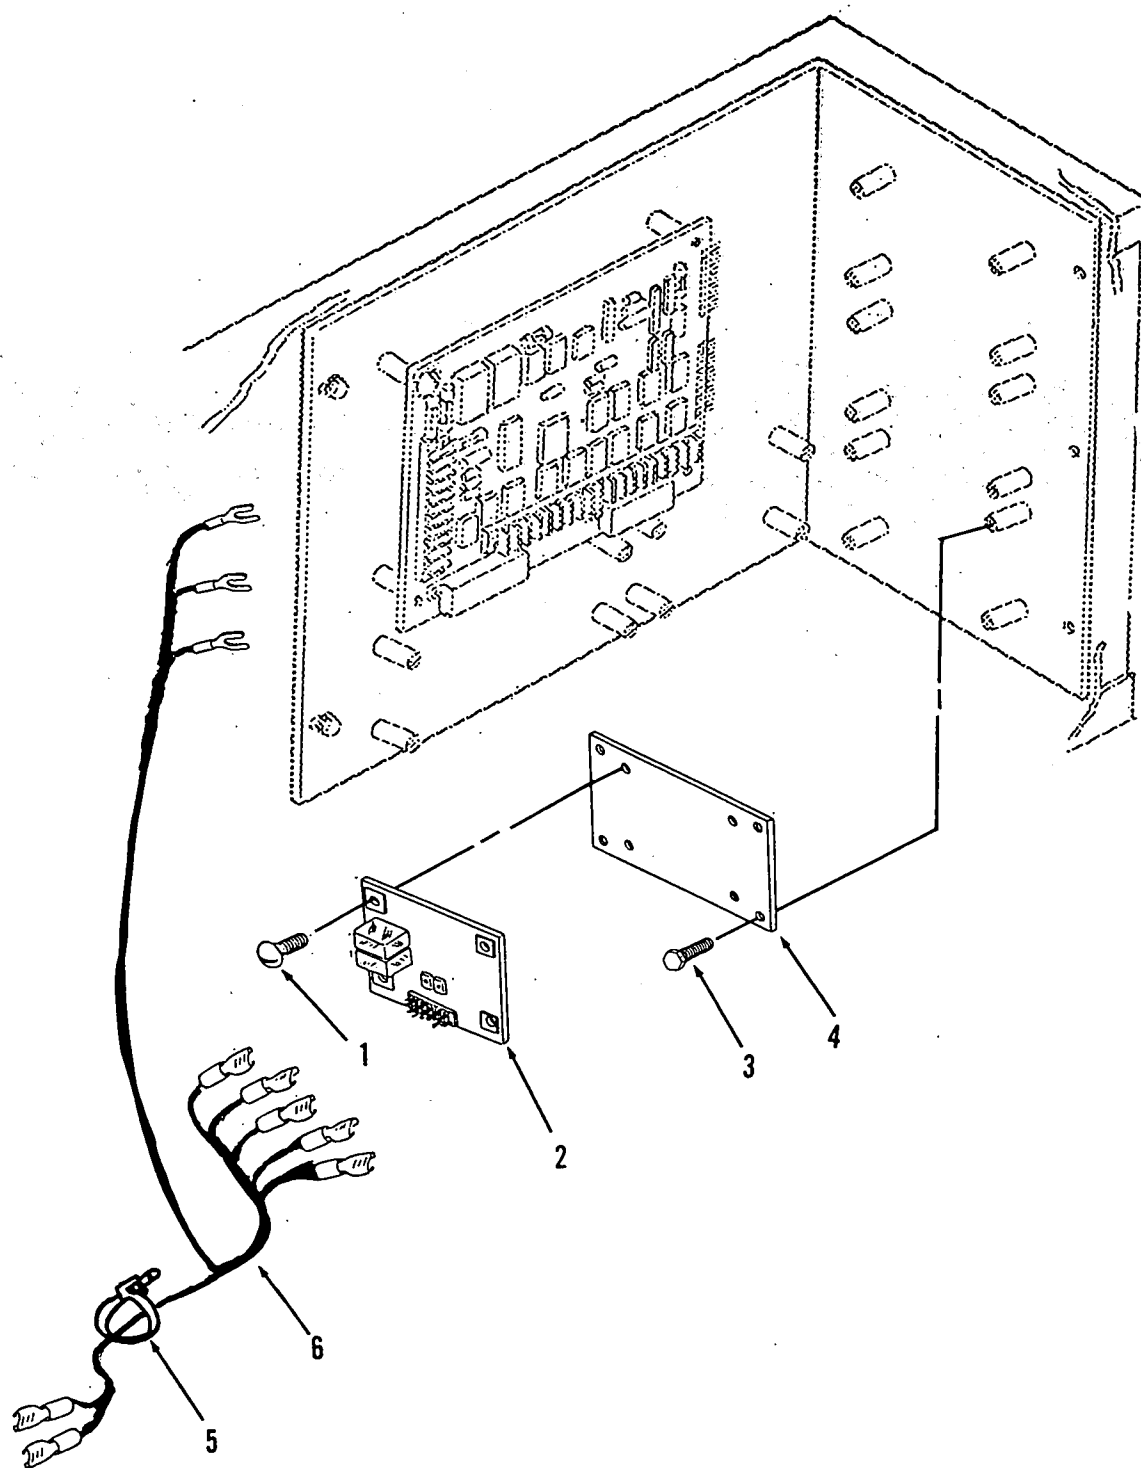

ELECTRONIC OVERSPEED MODULE Installation Of

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	812-0084			4	Screw, Machine - Round Head (#8-32 x 1/2")
2	305-0818-02	E000-21002	NE		Module, Overspeed - 24 VDC (Frequency Detection Module)
3	815-0544			4	Screw, Cap - Hex Head with ET Lockwasher (#6-32 x 1/2)
4	319-0754			1	Plate, Mounting - Module
5	332-1445			10	Tie, Cable
6	338-2493			1	Harness, Wiring (A16 to A11 and AUX-P2,P3)


GENERATOR CONTROL PANEL COMPONENTS

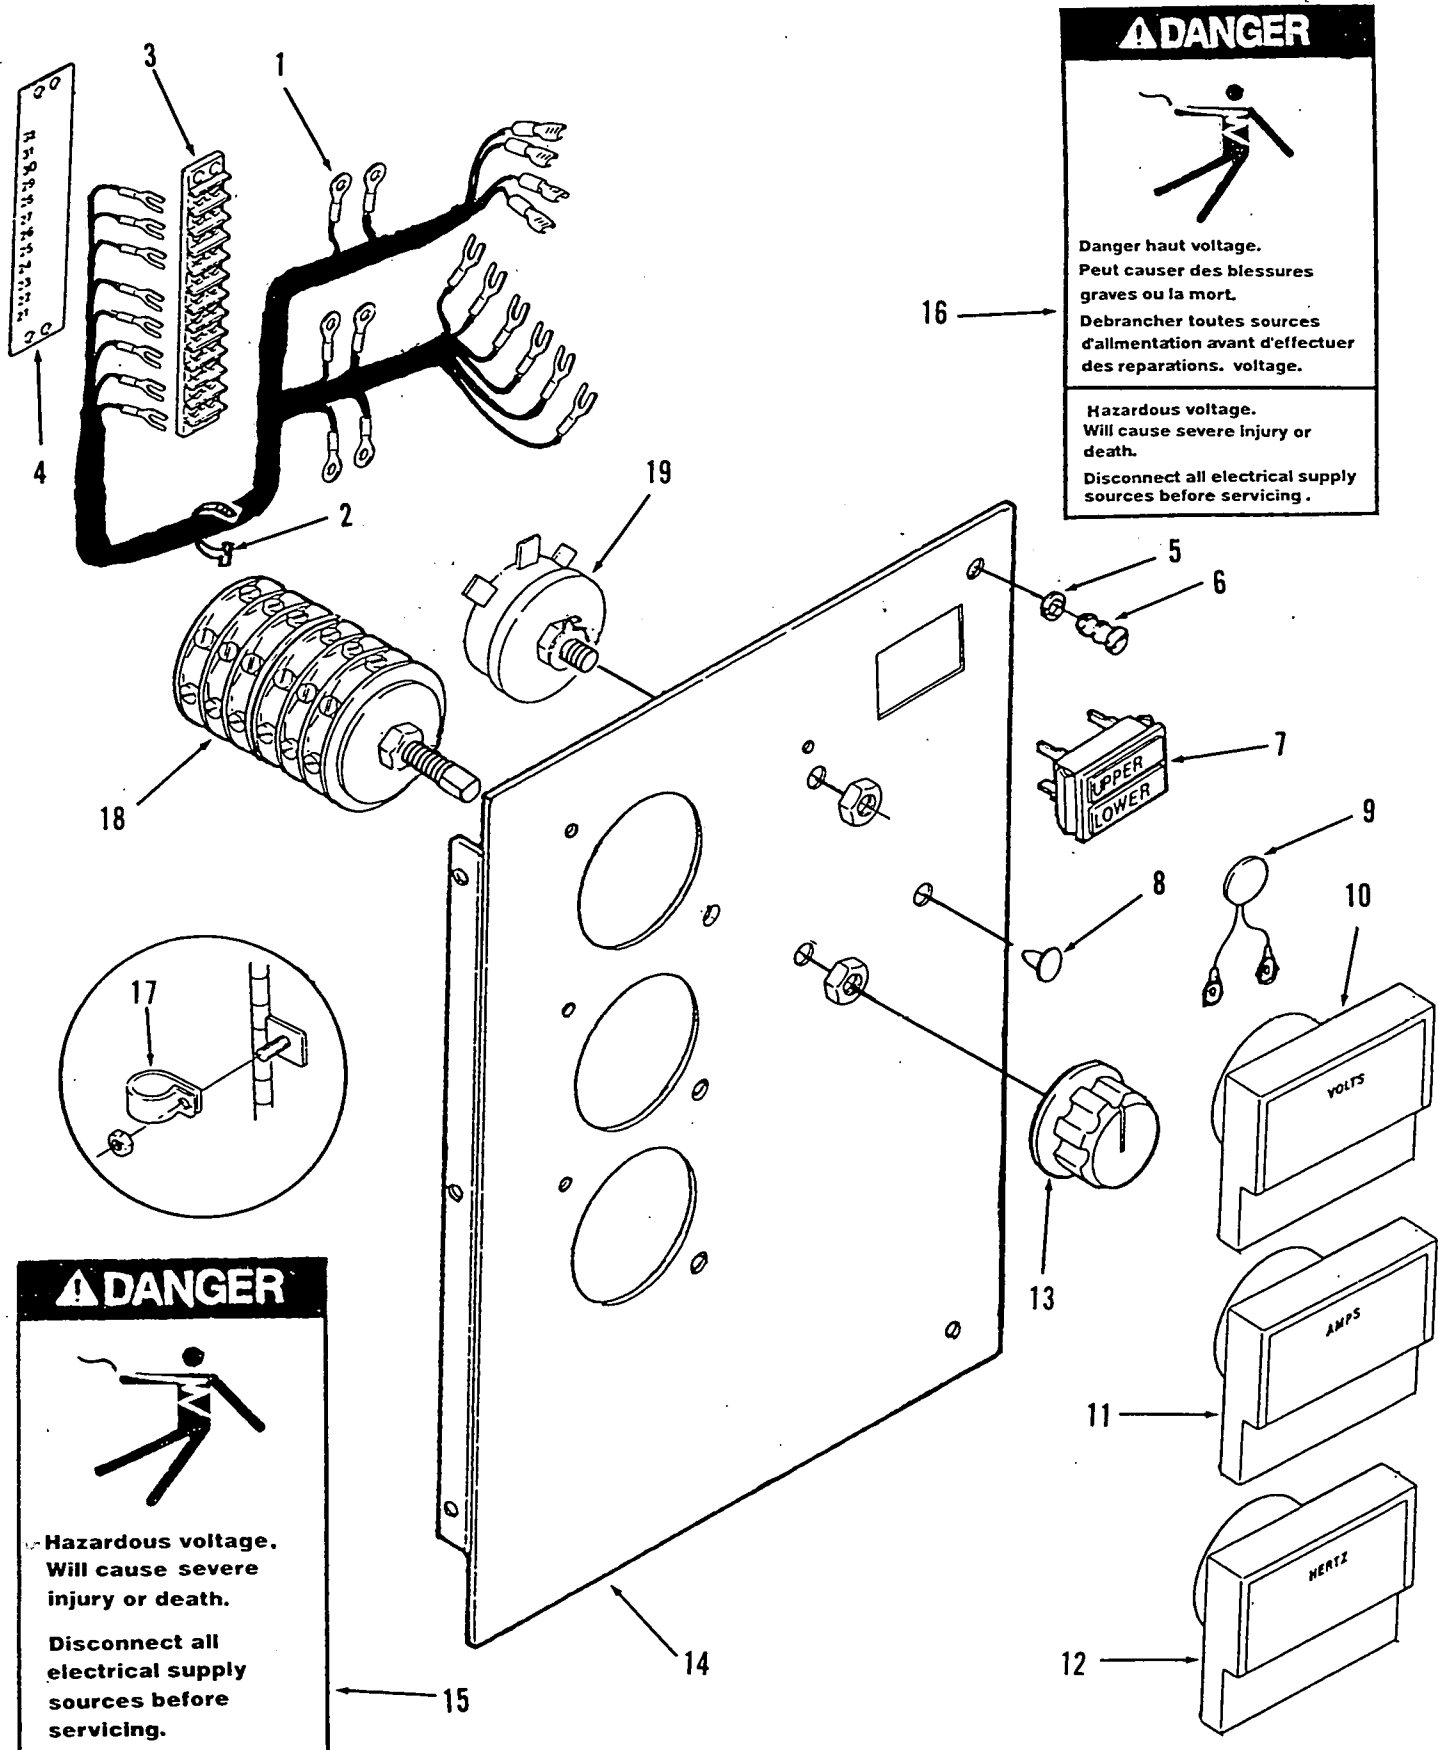

GENERATOR CONTROL PANEL COMPONENTS

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	338-2278			1	Harness, Wiring - AC (Includes Terminal Block & Cable Ties) [Used only with meters] Attaching Parts for AC Wiring Harness
	812-0065			2	Screw, Machine - Round Head (#6-32 x 5/8")
2	332-1445			44	Tie, Cable (Part of Wiring Harness)
3	332-0607			1	Block, Terminal (TB1)
4	332-2723			1	Strip, Marker
5	406-0334			2	Clip, Retaining - Turnbutton Fastener
6	406-0333			2	Stud, Fastener - Turnbutton
7	322-0363			1	Light, Indicator - Dual (DS21, DS22)
8	517-0131			1	Plug, Dot Button
9	355-0093			1	Capacitor (Used accross Voltmeter Terminals on some Sets)
10					Voltmeter (M21)
	302-1148			1	Dual Scale 0-300/0-600V
	302-1753			1	Single Scale 0-750V
11			REF		Ammeter (M22) See Current Transformer & Ammeter Installation Figure for Parts)
12	302-1720			1	Meter, Frequency (M23)
13	303-0032			1	Knob
14					Panel, Control (Blank - No Decals)
	301-9054-02			1	3 Meter Holes
	301-9054-03			1	No Meter Holes
	821-0004				Attaching Parts Panel to Control Box
				3	Screw, Self-Locking-Hex Washer Head (#10-32 x 5/16")
15	98-5387			2	Decal - Warning (English) Located on Panel Front & Rear
16	98-5724			2	Decal - Warning (French/English)
17	332-0052			1	Clamp, Loop
					Attaching Parts for Loop Clamp
	870-0131			1	Nut, Self-Locking - with ET Lockwasher (#10-32)
18	308-0882			1	Switch, Rotary (S21)
19			REF		Potentiometer (R21) See Voltage Regulator Installation Figure for Parts)
20					Decals (Not Illustrated)
	98-5316			1	Decal - Panel Front Markings (Control Without Meters)
	98-5298			1	Decal - Panel Front Markings (Control With Meters)
	98-5299			1	Decal - Panel Rear Markings (All Control Panels)

AMMETER & CURRENT TRANSFORMER
INSTALLATION OF

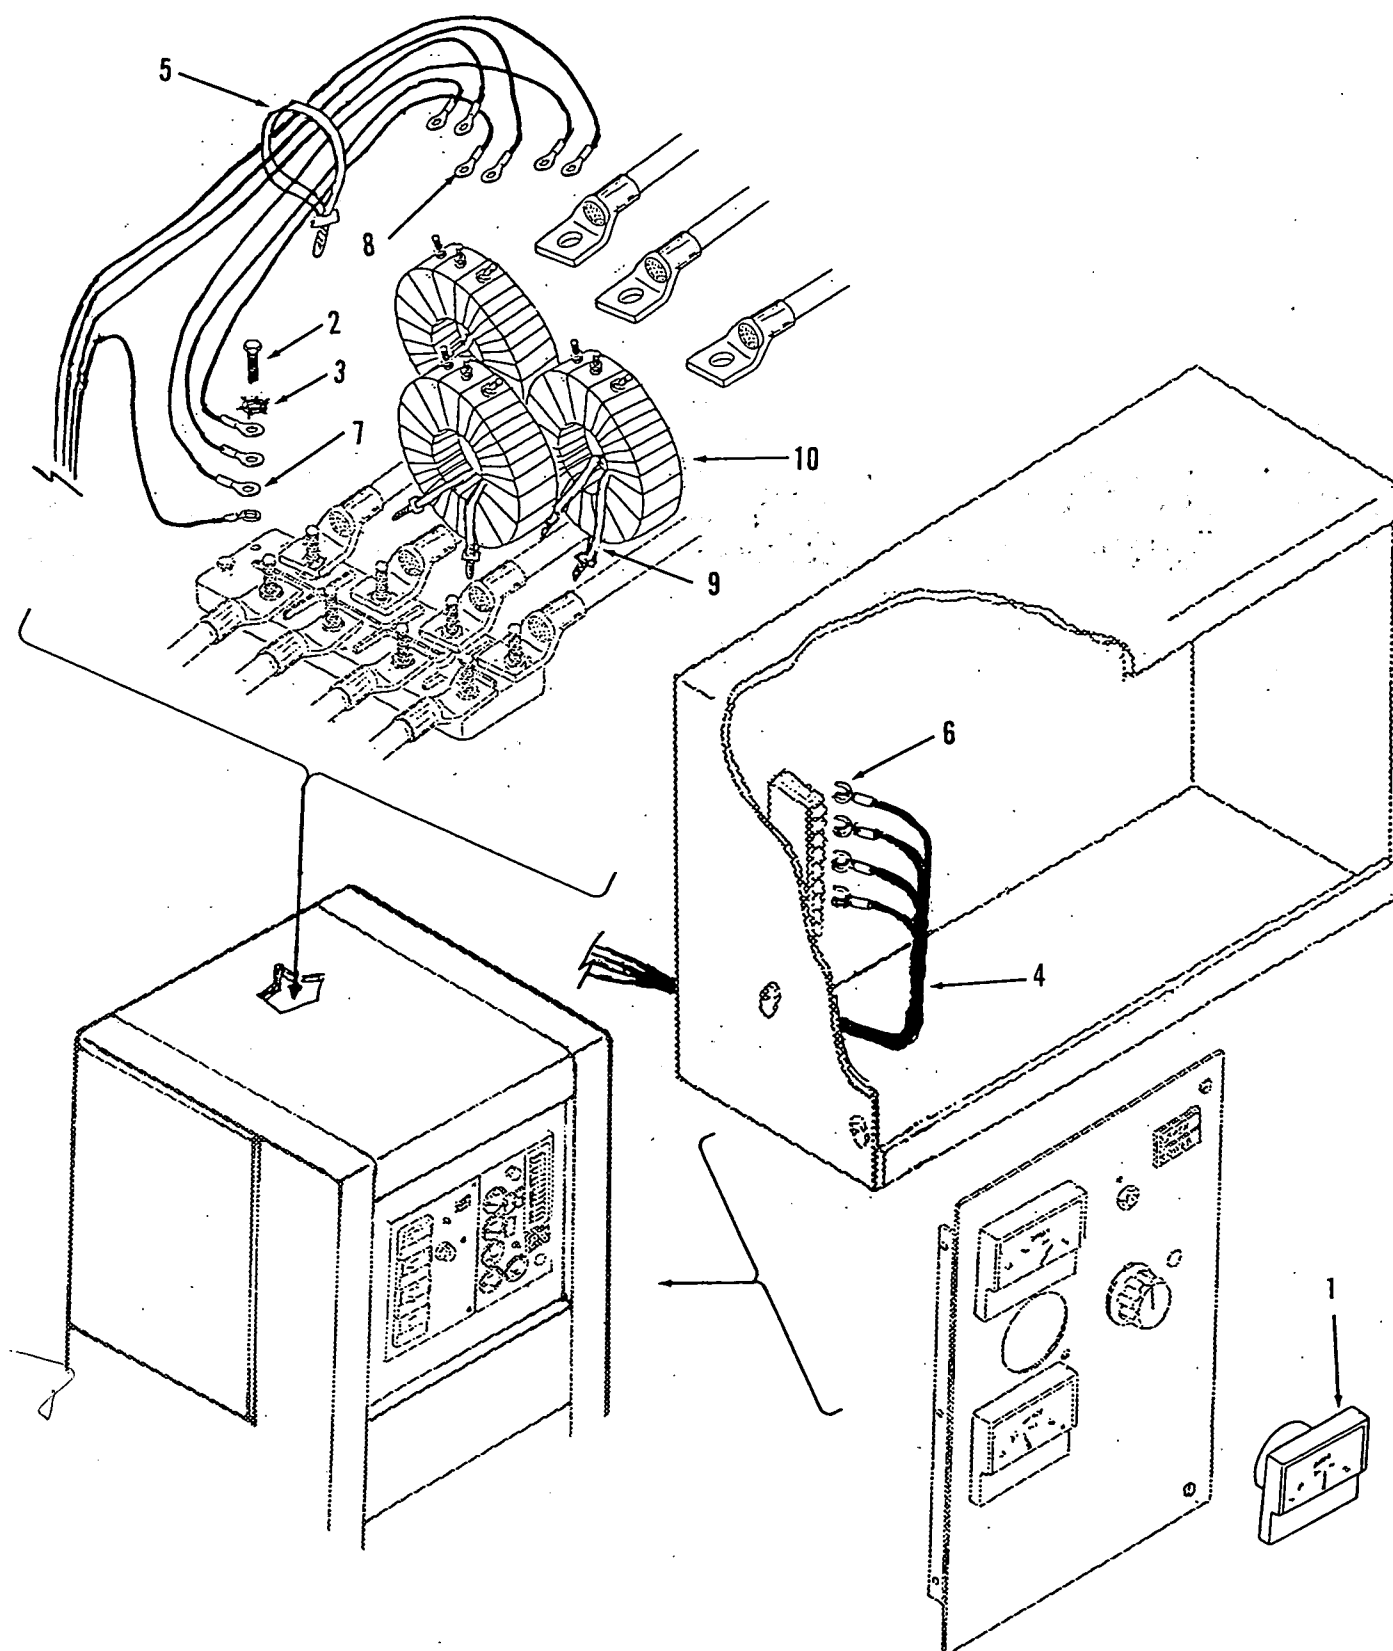


AMMETER & CURRENT TRANSFORMER INSTALLATION OF

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	302-1727			1	Ammeter (M22) Scale in Amps as Indicated
	302-1728			1	0-500/0-1000 (600 VAC Application)
				1	0-600/0-1200 (120-480 VAC Application)
2	800-2060	016-40820	NE	1	Screw, Cap - Hex Head (M8-1.25 x 35MM)
3	856-0008			2	Washer, Lock - EIT (5/16")
4	332-0942			6	Tie, Cable
5	338-1980			1	Harness, Wiring
6	332-1279			4	Terminal, Lug - Forked (No. 6 Screw)
7	332-0151			4	Terminal, Lug - Ring (5/16" Screw)
8	332-0806			6	Terminal, Lug - Ring (No. 8 Screw)
9	332-1389			6	Tie, Cable
10					Transformer, Current (Turn Ratio Listed)
	302-1794-09			3	500/5,1000/5 (600 VAC Application)
	302-1794-10			3	600/5,1200/5 (120-480 VAC Application)

NOTE: Phantom Items on Control Panel are Identified in Applicable Generator Control Panel Component Illustration and Phantom Item Associated with Current Transformer are Identified in the Applicable Terminal Block Installation Illustration.

WATTMETER INSTALLATION OF

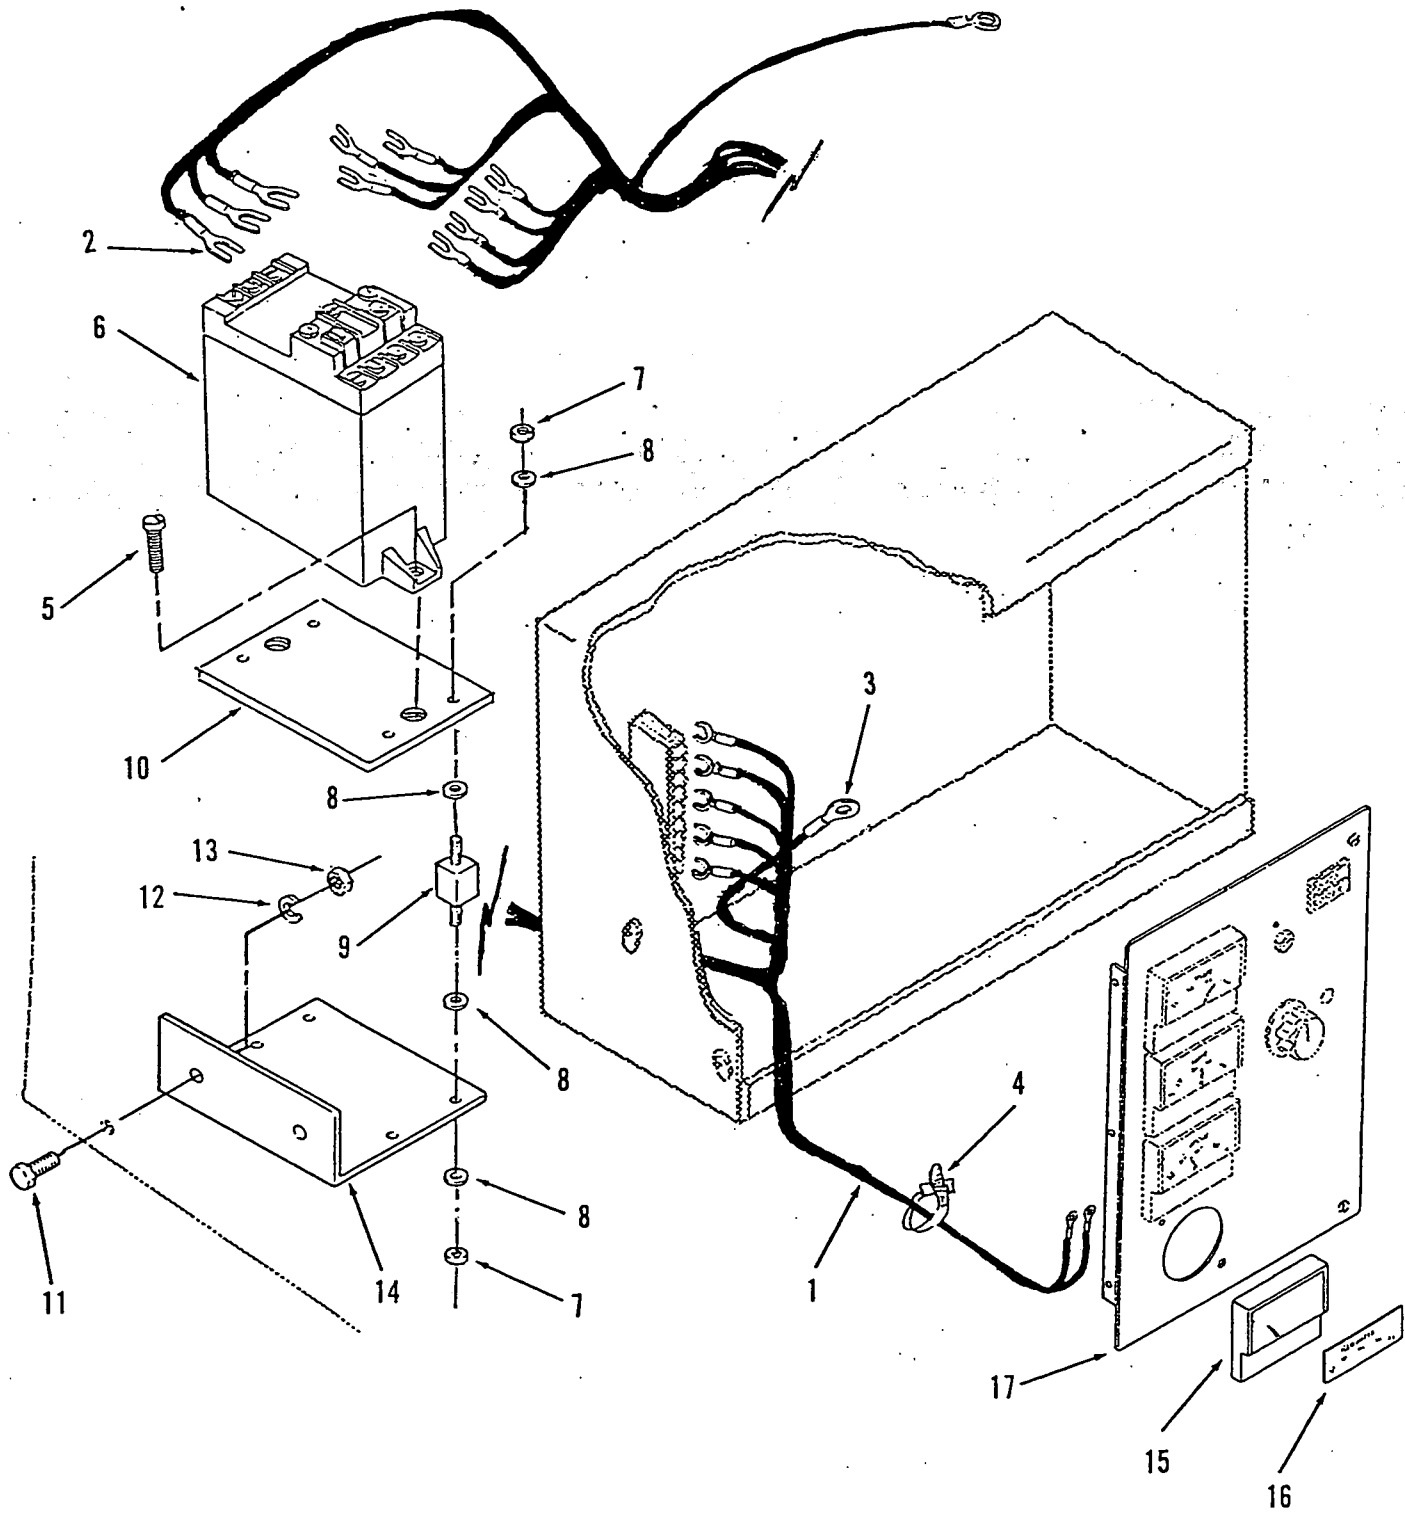


WATTMETER INSTALLATION OF

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1					Harness, Wiring
	338-1936		1	1	Three Phase "WYE" Connected Generators
	338-2479		1	1	Three Phase "DELTA" Connected Generators
	338-2478		1	1	120/240 VAC "SINGLE PHASE" Connected Generators
2	332-1279		11	11	Terminal, Lug - Forked (For No. 6 Screw Mounting)
3	332-0897		4	4	Terminal, Lug - Ring (1/4" Screw Mounting)
4	332-0942		14	14	Tie, Cable
5	813-0102		2	2	Screw, Machine - Round Head (#10-32 x 5/8")
6					Transducer, Watt
	302-1833-01		1	1	Three Phase "WYE" Connected Generators
	302-1833-05		1	1	Three Phase "DELTA" Connected Generators
	302-1833-04		1	1	120/240 VAC "SINGLE Phase" Connected Generators
7	860-0008		8	8	Nut, Hex (#8-32)
8	856-0002		16	16	Washer, Lock - EIT (#8)
9	402-0354		4	4	Mount, Shock
10	319-0030		1	1	Plate, Support - Transducer
11	821-0017		2	2	Screw, Self-locking - HWH (5/16-18 x 1/2")
12	850-0045		2	2	Washer, Lock - Spring (5/16")
13	862-0014		2	2	Nut, Hex (5/16-18)
14	301-6987		1	1	Bracket, Mounting
15	302-1722		1	1	Meter, Watt (Less Dial)
16					Dial, Wattmeter
	302-1721-09		1	1	Scale 0-250 kW
	302-1721-10		1	1	Scale 0-300 kW
17	301-9054-01		1	1	Panel, Control

NOTE: Phantom Items on Control Panel are identified in applicable Generator Control Panel Component Illustration or applicable Meter Installation Illustration.


VOLTAGE REGULATOR Installation of

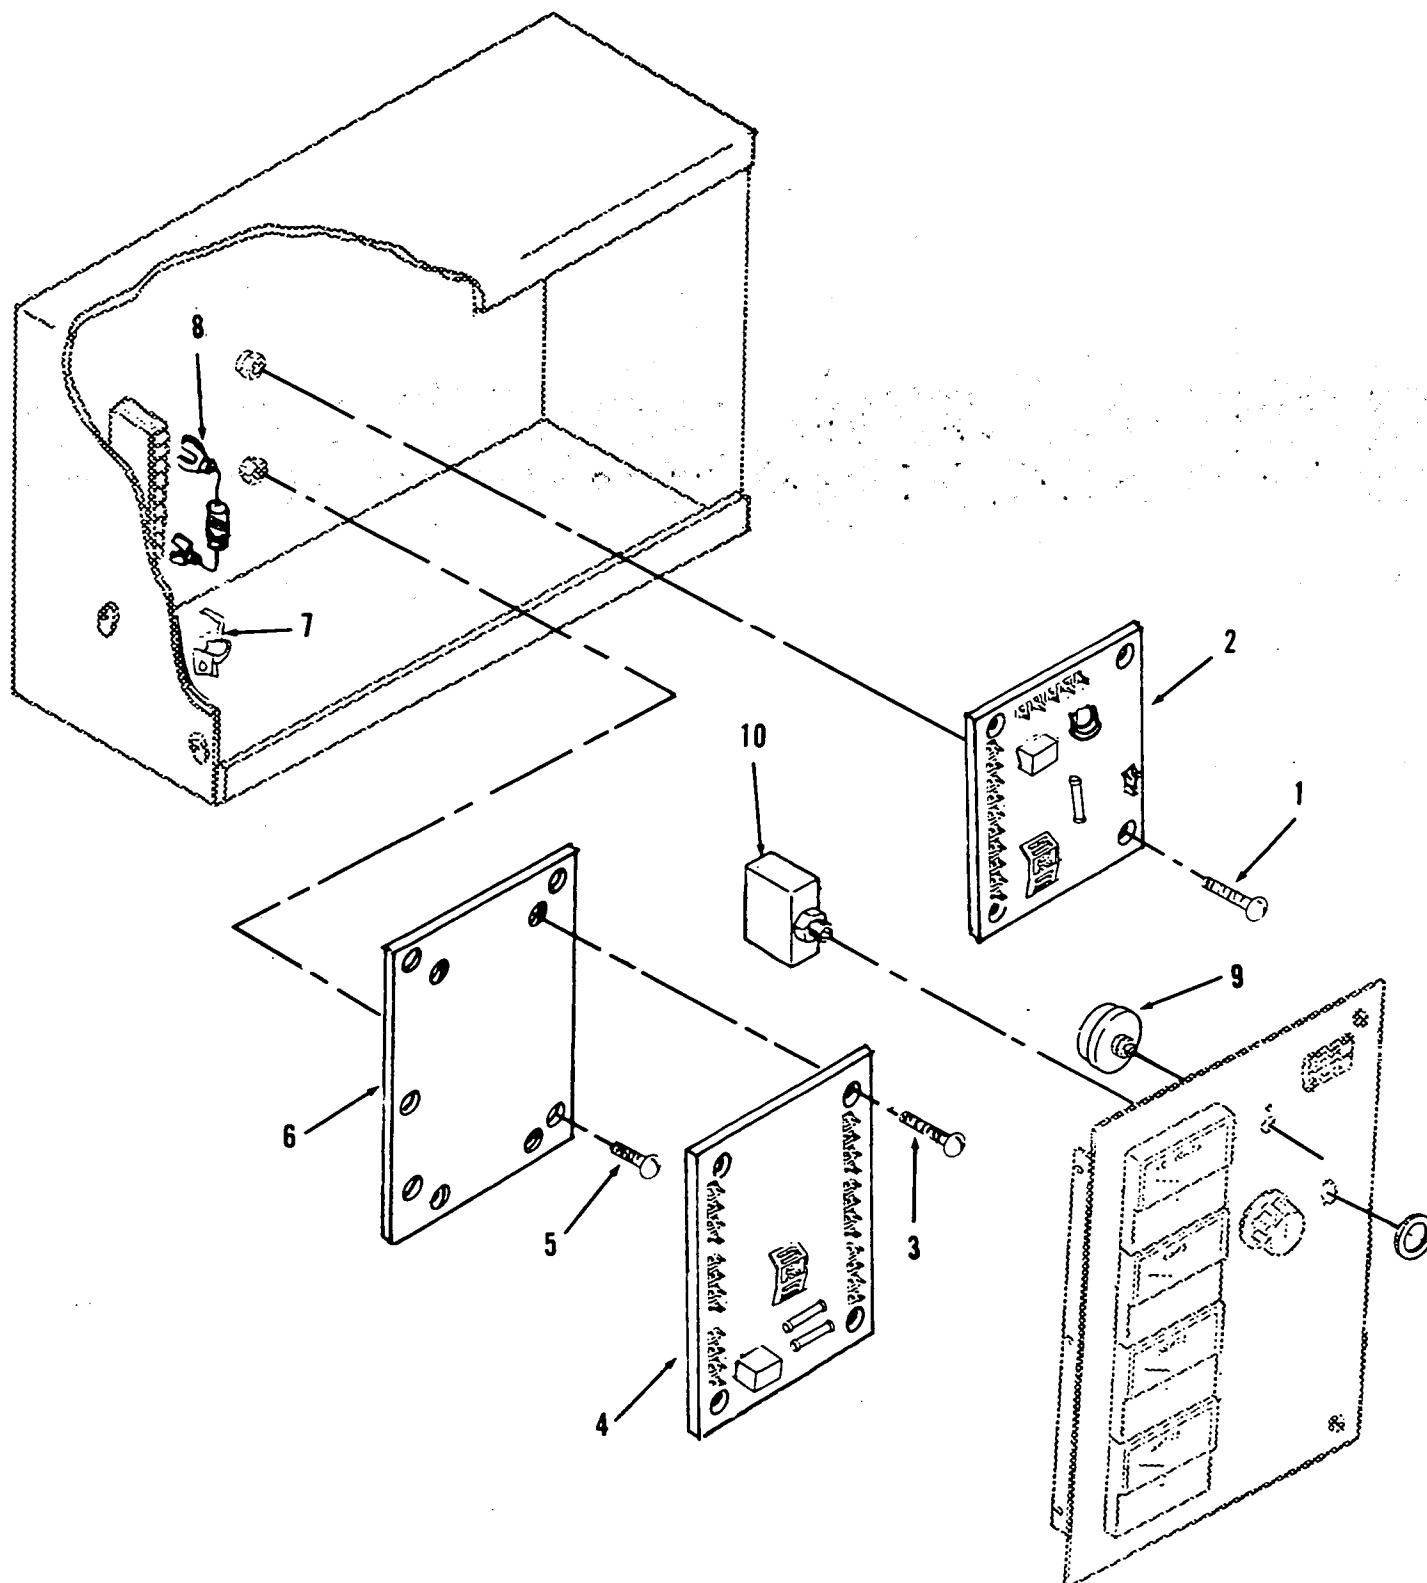

VOLTAGE REGULATOR **Installation of**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	812-0084			4	Screw, Machine - Round Head (#8-32 x 1")
2	305-0824	E000-24030	NE	1	Regulator, Voltage (Model SX440)[NOT USE WITH PMG GENERATORS]
3	815-0218			4	Screw, Machine - Round Head (#6-32 x 1")
4	305-0823	E000-23210	NE	1	Regulator, Voltage (Model MX321) [USED WITH PMG GENERATORS]
5	815-0544			6	Screw, Machine - Round Head (#6-3 x 1/2")
6	319-0652			1	Plate, Mounting - Voltage Regulator
7	331-1043			1	Jumper, Terminal
8	350-1222			1	Resistor and Terminal Assembly
	350-0991			1	Resistor, Fixed (1.5K Ohms +5%)
	332-1673			2	Terminal, Lug - Forked (No. 6 Spade)
9					Potentiometer (Not used on all Sets)
	303-0261			1	1.5K Ohms +10% (Used with SX440 Voltage Regulator)
	303-0285			1	5K Ohms +10% (Used with MX321 Voltage Regulator)
10					Circuit Breaker - Field Current (Select as Applicable)
	320-1688-01			1	5 AMP, 240VAC/50VDC
	320-1688-02			1	5 AMP, 240VAC/50VDC, with AUX Terminals


CONTROL SPACE HEATER
Installation Of

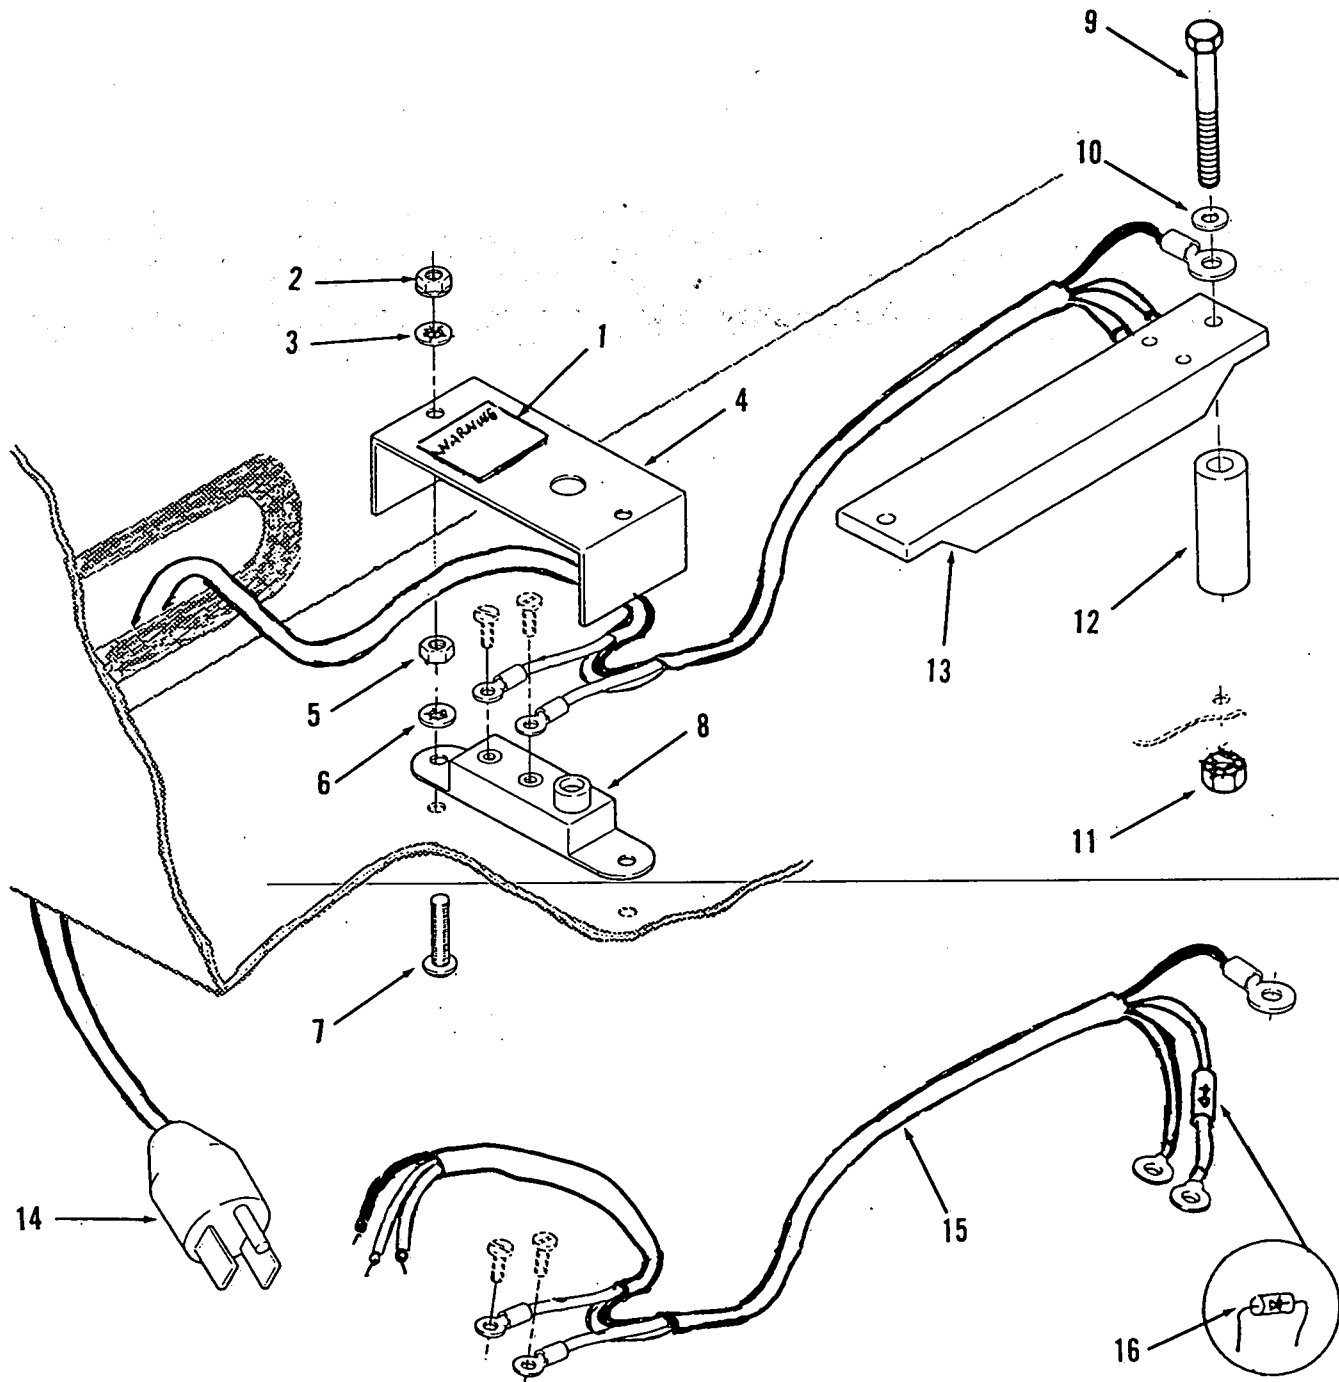

CONTROL SPACE HEATER Installation Of


REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	98-3232			1	Decal - Warning (Shock Hazard)
2	870-0183			2	Nut, Self-locking - HEX (#6-32)
3	854-0006			2	Washer, Lock - IT (#6)
4	301-1886			1	Cover
5	860-0006			1	Nut, Hex (#6-32)
6	854-0006			2	Washer, Lock - IT (#6)
7	812-0070			2	Screw, Machine - Round Head (#6-32 x 1-1/4")
8	309-0128			1	Thermostat - Adjustable
9	800-0034			2	Screw, Cap - Hex Hd (5/16-18 x 2-1/4")
10	526-0113			2	Washer, Flat (5/16")
11	870-0257			2	Nut, Self-locking - Hex (5/16-18)
12	130-1107			2	Spacer
13					Heater, Electrical
	333-0151			1	75 Watt, 120 VAC
	333-0378			1	150 Watt, 240 VAC
14	335-0161			1	Cable, Electrical - 120 VAC Application
15	338-2121			1	Harness, Wiring with Diode, Less Plug (240 VAC Application)
16	357-0013			1	Diode

AUX TERMINAL BLOCK Installation of

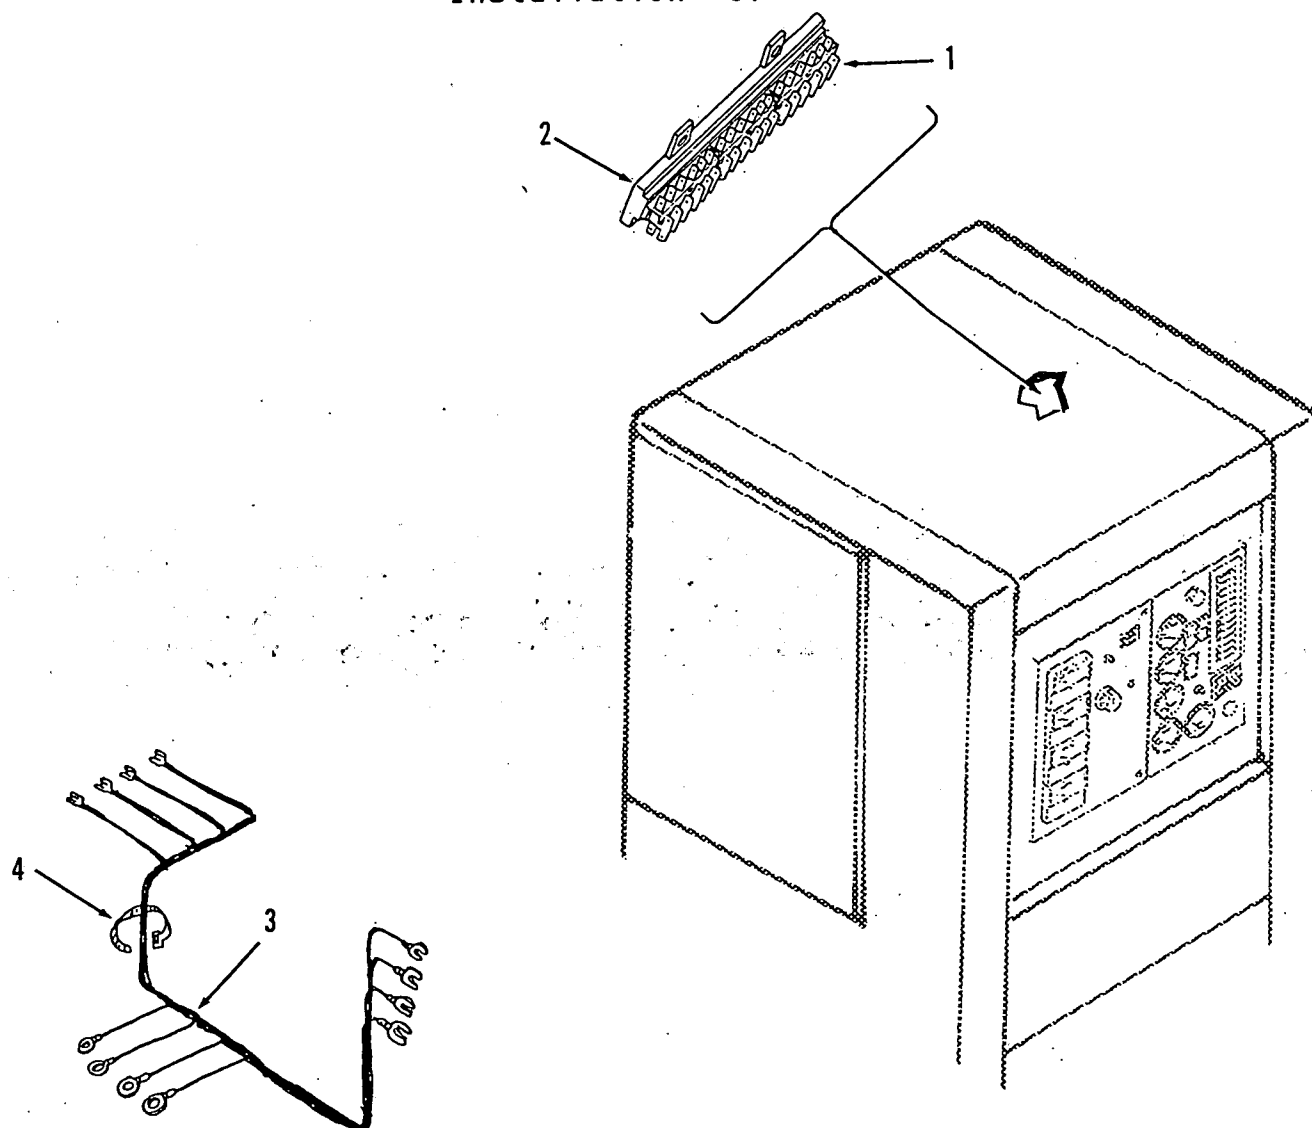

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1		130-20102	NE	1	Base, Terminal
2		E00-10005	NE	3	Block, Terminal - AUX
	812-0085			3	Attaching Parts for AUX Base & Terminal Blocks
	850-0025			3	Screw, Machine - Round Head (#8-32 x 1-1/8")
	870-0221			3	Washer, Lock - Spring (1/8")
	338-2491			3	Nut, Hex (#8-32))
3				1	Harness, Wiring - AC AUX
4	332-1445			4	Tie, Cable

CONTROL BOX & MOUNTING COMPONENTS

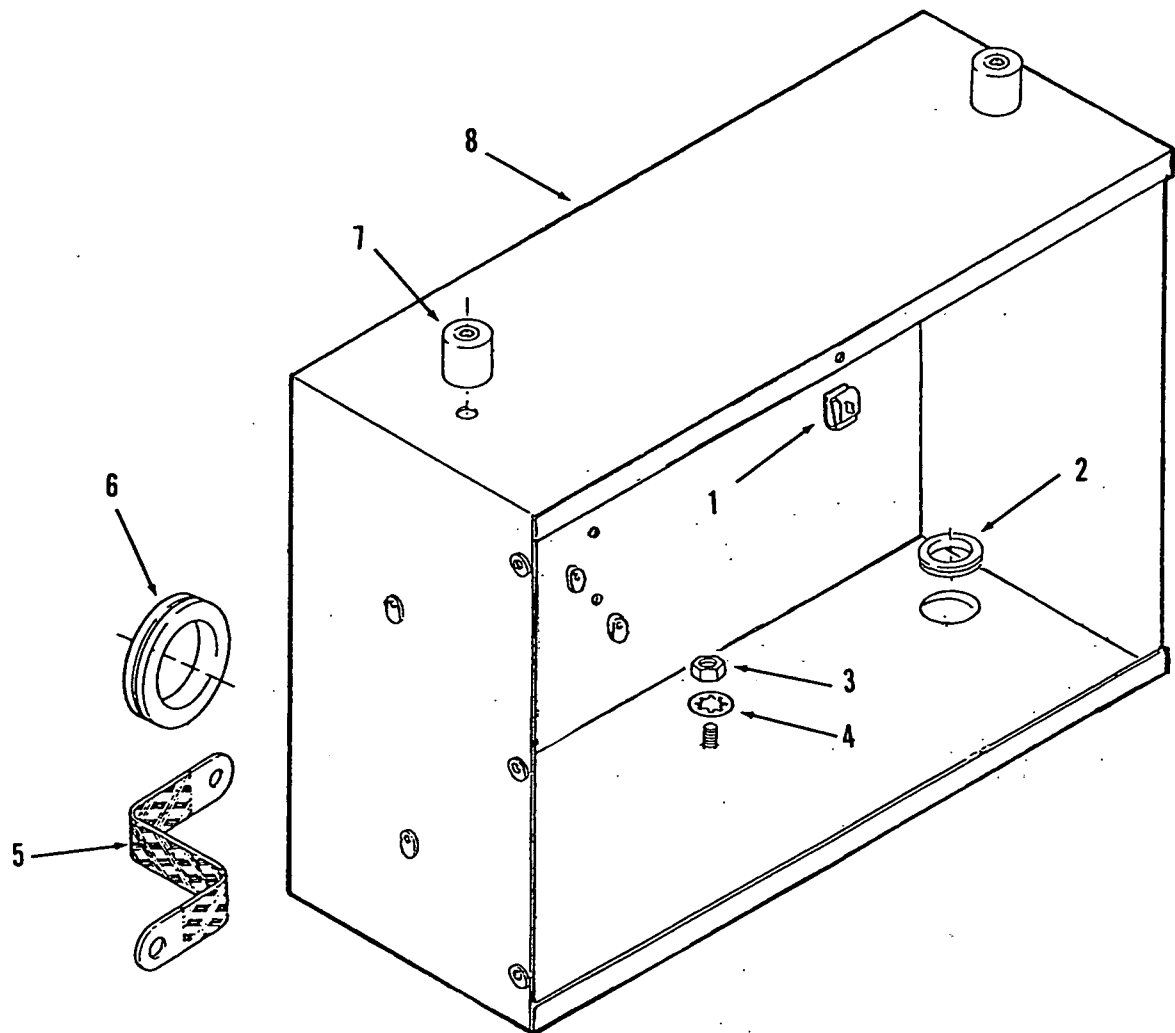

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	406-0332			2	Receptacle, Turnbutton Fastener
2	508-0001			1	Grommet 3/4" DIA
3	871-0015			2	Nut, Hex (1/4-20) Ground Stud
4	853-0013			2	Washer, Lock - ET (1/4") Ground Stud
5	337-0049			1	Strap, Electrical (Ground)
	800-0024			1	Attaching Parts for Ground Strap
	856-0008			1	Screw, Cap - Hex Head (5/16-18 x 1/2")
6	508-0051			1	Washer, Lock - EIT (5/16")
7	402-0527			1	Grommet 2" DIA
				4	Mount, Vibration
	800-0045			4	Attaching Parts for Vibration Mounts
	850-0045			4	Screw, Cap - Hex Head (5/16-18 x 3/8")
8	301-8065			4	Washer, Lock - Spring (5/16")
				1	Box, Control

**TABLE OF CONTENTS
GENERATOR SECTION**

GENERATOR DATA TABLE	4-3
GENERATOR HC434 - Installation of	4-4
GENERATOR HC434 - Components	4-5
GENERATOR HC534 - Installation of	4-6
GENERATOR HC534 - Components	4-7
PERMANENT MAGNET EXCITER - HC434 Gen - Installation of	4-8
PERMANENT MAGNET EXCITER - HC534 Gen - Installation of	4-9


**GENERATOR TABLE
FOR
300 kW 60 Hertz Sets**

ONAN/CUMMINS IDENTIFICATION NUMBER	NEWAGE MODEL IDENTIFICATION NUMBER/LETTER	GEN ADPTR SAE	GEN DISK SAE	APPLICATION DATA VOLTAGES AT AMBIENT TEMPS	SPECIAL FEATURES		
					CSA CERT.	RTD EQUIPED	RAIN LOUVERS
249-0169-01	HC534C-311-D41-4067	1	14	190-480V 80°C	YES	NO	NO
249-0169-05	HC534C-311-D41-4067	1	14	190-480V 80°C	YES	YES	YES
249-0168-05	NOT AVAILABLE	1	14	190-480 V			
249-0179-05	HC434F-311-D41-4071	1	14	105°C	YES	NO	NO
249-0168-10	NOT AVAILABLE	1	14	190-480 V			
249-0179-10	HC434F-311-D41-4071	1	14	105°C	YES	YES	YES
249-0168-04	NOT AVAILABLE	1	14	190-480 V			
249-0179-04	HC434E-311-D41-4070	1	14	125°C	YES	NO	NO
249-0168-09	NOT AVAILABLE	1	14	190-480 V			
249-0179-09	HC434E-311-D41-4070	1	14	125°C	YES	YES	YES
249-0168-04	NOT AVAILABLE	1	14	480V Only			
249-0179-04	HC434E-311-D41-4070	1	14	125°C	YES	NO	NO
249-0168-09	NOT AVAILABLE	1	14	480V Only			
249-0179-09	HC434E-311-D41-4070	1	14	125°C	YES	YES	YES
249-0171-04	NOT AVAILABLE	1	14	600V Only			
249-0180-04	HC434E-007-D41-4070	1	14	105°C	YES	NO	NO
249-0171-09	NOT AVAILABLE	1	14	600V Only			
249-0180-09	HC434E-007-D41-4070	1	14	105°C	YES	YES	YES

**GENERATOR TABLE
FOR
275 kW 50 Hertz Sets**

ONAN/CUMMINS IDENTIFICATION NUMBER	NEWAGE MODEL IDENTIFICATION NUMBER/LETTER	GEN ADPTR SAE	GEN DISK SAE	APPLICATION DATA VOLTAGES AT AMBIENT TEMPS	SPECIAL FEATURES		
					CSA CERT.	RTD EQUIPED	RAIN LOUVERS
249-0169-01	HC534C-311-D41-4067	1	14	190-460V 80°C	YES	NO	NO
249-0169-05	HC534C-311-D41-4067	1	14	190-460V 80°C	YES	YES	YES
249-0168-05	NOT AVAILABLE	1	14	190-460 V			
249-0179-05	HC434F-311-D41-4071	1	14	105°C	YES	NO	NO
249-0168-10	NOT AVAILABLE	1	14	190-460 V			
249-0179-10	HC434F-311-D41-4071	1	14	105°C	YES	YES	YES
249-0168-05	NOT AVAILABLE	1	14	190-460 V			
249-0179-05	HC434F-311-D41-4071	1	14	125°C	YES	NO	NO
249-0168-10	NOT AVAILABLE	1	14	190-460 V			
249-0179-10	HC434F-311-D41-4071	1	14	125°C	YES	YES	YES
249-0168-04	NOT AVAILABLE	1	14	460V Only			
249-0179-04	HC434E-311-D41-4070	1	14	125°C	YES	NO	NO
249-0168-09	NOT AVAILABLE	1	14	460V Only			
249-0179-09	HC434E-311-D41-4070	1	14	125°C	YES	YES	YES

**GENERATOR
HC434 MODELS
Installation Of**

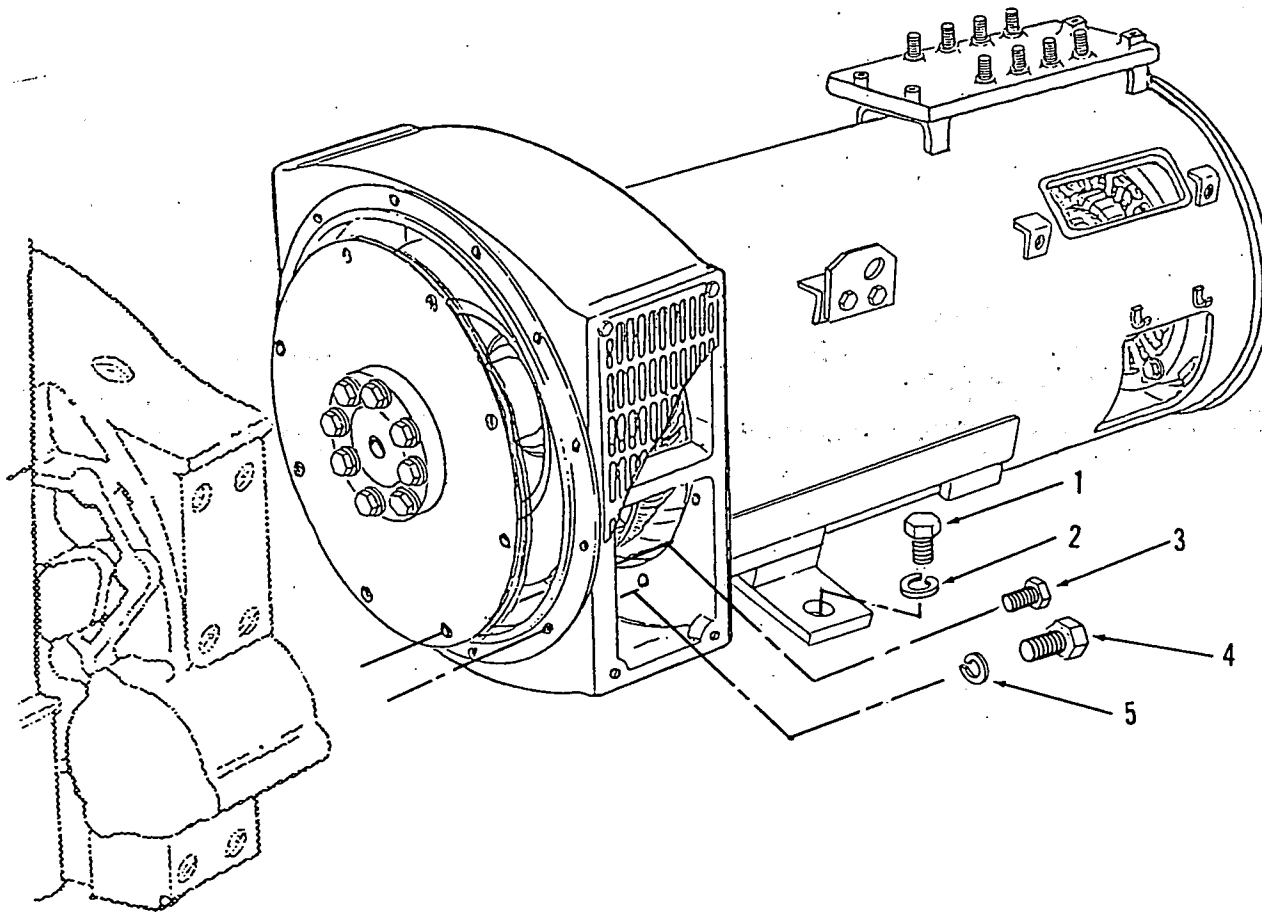

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
------------	------------------	--------------------	------------------	-------------	---------------------

Generators with SAE 1 Adapter/ SAE 14 Drive Disc (See Separate Page for Servicable Components)					
1	800-0134			2	Screw, Cap - Hex Head (1 - 8 x 2")
2	850-0086			2	Washer, Lock - Spring (1")
3	805-0032			8	Bolt, Place - Hex Head, Grade 8 (1/2-13 x 1-1/2")
4	800-0204			12	Screw, Cap - Hex Head (7/16-14 x 1-1/2")
5	850-0104			12	Washer, Lock - Spring 7/16")

**GENERATOR
HC434 MODELS
SERVICABLE COMPONENTS**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
GENERATOR STATOR GROUP					
Note 1	Note 3		NE	1	Stator, Generator (Main Stator; No Servicable Components)
GENERATOR END BELL GROUP					
Note 1	Note 3		NE	1	End Bell Assembly (Includes Exciter Stator, Bearing Caps and End Bell)
Attaching Parts End Bell to Stator					
800-2088	016-40920		NE	8	Screw, Cap - Hex Head (M10 x 35mm)
850-2010	028-31509		NE	8	Washer, Lock - Spring (M10)
-----*					
Note 1	Note 2		NE	1	End Bell, Generator
220-4248	462-12400		NE	1	Stator, Exciter
Attaching Parts for Stator					
800-2043	015-41613		NE	6	Screw, Cap - Hex Head (M6 x 65mm)
850-2006	028-31507		NE	6	Washer, Lock - Spring (M6)
-----*					
232-3519	458-12970		NE	1	Cap, Bearing - Outer
Attaching Parts for Outer Cap					
800-2528	016-40919		NE	4	Screw, Cap - Hex Head (M10 x 30mm)
850-2010	028-31509		NE	4	Washer, Lock - Spring (M10)
-----*					
232-3518	458-12960		NE	1	Cap, Bearing - Inner
Attaching Parts for Inner Cap					
800-2528	016-40919		NE	4	Screw, Cap - Hex Head (M10 x 30mm)
850-2010	028-31509		NE	4	Washer, Lock - Spring (M10)
-----*					
GENERATOR ROTOR GROUP					
Note 1	Note 3		NE	1	Rotor, Generator (Main Rotor, Exciter Rotor, Bearing, etc.)
Note 1	Note 3		NE	1	Rotor Assy, Exciter (Includes Rectifier Assembly and Wound Rotor)
201-3454	458-22800		NE	1	Rotor, Exciter - Wound
357-0093	362-12800		NE	1	Rectifier Assembly (Includes Diodes and Varistor)
Attaching Parts for Rectifier Assembly					
800-2043	016-41613		NE	4	Screw, Cap - Hex Head (M6 x 65mm)
850-2006	028-31507		NE	4	Washer, Lock - Spring (M6)
526-2080	029-62101		NE	4	Washer, Flat (M6)
-----*					
249-0240	450-11760		NE	1	Varistor
249-0238	364-10850		NE	3	Diode - Reverse
249-0239	364-10840		NE	3	Diode - Forward
Attaching Parts for Diodes					
860-2006	027-41206		NE	6	Nut, Hex (M5)
850-2005	028-31506		NE	6	Washer, Lock - Spring (M5)
-----*					
518-0018	050-11047		NE	1	Ring, Retaining (Circlip)
515-0300-01	054-10121		NE	1	Key, Machine
510-0168	051-01036		NE	1	Bearing, Ball

PMG GROUP


See Separate page for Servicable Components

NOTE 1. NOT STOCKED OR SOLD BY THE CENTRAL PARTS DISTRIBUTION CENTER!

NOTE 2. NOT STOCKED FOR SALE BY NEWAGE INTERNATIONAL. REPLACEMENT ORDER MAY HAVE A LONG LEAD TIME.

NOTE 3. NOT STOCKED OR SOLD BY NEWAGE INTERNATIONAL: FOR REPLACEMENT ORDER A COMPLETE GENERATOR BY CONTACTING NEAREST NEWAGE DISTRIBUTION CENTER AND SUPPLY THE COMPLETE GENERATOR MODEL AND SERIAL NUMBER FROM THE GENERATOR DATA PLATE OR THE CUMMINS/ONAN PART NUMBER FROM THE GENERATOR SET IDENTIFICATION PLATE.

**GENERATOR
HC534 MODELS
Installation Of**

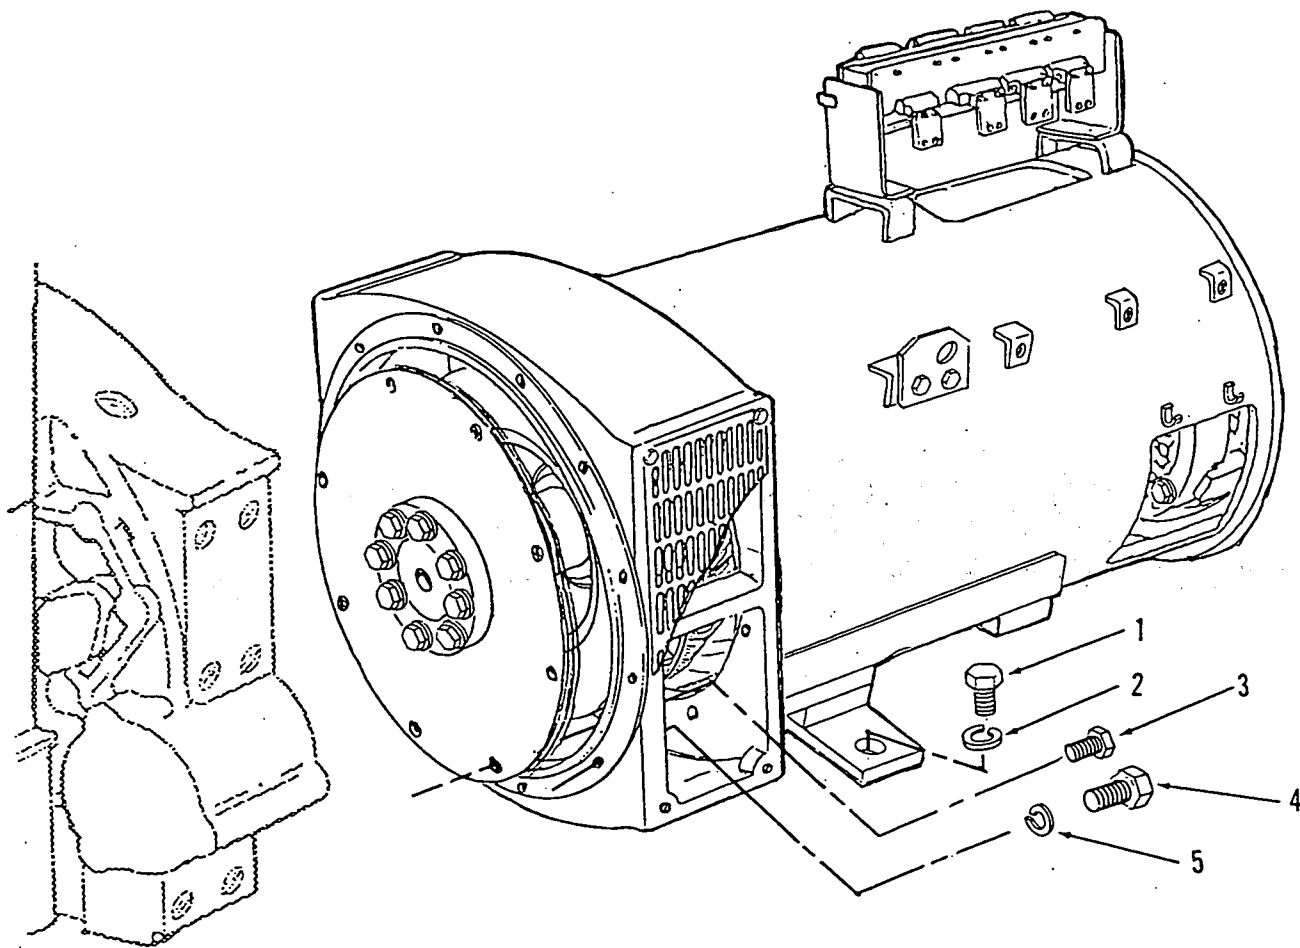

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
Generators with SAE 1 Adapter/ SAE 14 Drive Disc (See Separate Page for Servicable Components)					
1	800-0134			2	Screw, Cap - Hex Head (1 - 8 x 2")
2	850-0086			2	Washer, Lock - Spring (1")
3	805-0032			8	Bolt, Place - Hex Head, Grade 8 (1/2-13 x 1-1/2")
4	800-0204			12	Screw, Cap - Hex Head (7/16-14 x 1-1/2")
5	850-0104			12	Washer, Lock - Spring 7/16")

**GENERATOR
HC534 MODELS
SERVICABLE COMPONENTS**

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
GENERATOR STATOR GROUP					
Note 1	Note 3		NE	1	Stator, Generator (Main Stator; No Servicable Components)
GENERATOR END BELL GROUP					
Note 1	Note 3		NE	1	End Bell Assembly (Includes Exciter Stator, Bearing Caps, and End Bell)
					Attaching Parts End Bell to Stator
800-2088	016-40920		NE	8	Screw, Cap - Hex Head (M10 x 35mm)
850-2010	028-31509		NE	8	Washer, Lock - Spring (M10)
-----*					
Note 1	Note 2		NE	1	End Bell, Generator
220-4248	462-12400		NE	1	Stator, Exciter
					Attaching Parts for Stator
800-2043	015-41613		NE	6	Screw, Cap - Hex Head (M6 x 65mm)
850-2006	028-31507		NE	6	Washer, Lock - Spring (M6)
-----*					
232-3519	458-12970		NE	1	Cap, Bearing - Outer
					Attaching Parts for Outer Cap
800-2091	016-40923		NE	4	Screw, Cap - Hex Head (M10 x 50mm)
850-2010	028-31509		NE	4	Washer, Lock - Spring (M10)
-----*					
232-3518	458-12960		NE	1	Cap, Bearing - Inner
					Attaching Parts for Inner Cap
800-2528	016-40919		NE	4	Screw, Cap - Hex Head (M10 x 30mm)
850-2010	028-31509		NE	4	Washer, Lock - Spring (M10)
-----*					
GENERATOR ROTOR GROUP					
Note 1	Note 3		NE	1	Rotor, Generator (Main Rotor, Exciter Rotor, Bearing, etc.)
Note 1	Note 3		NE	1	Rotor Assy, Exciter (Includes Rectifier Assembly and Wound Rotor)
249-0522	462-23400		NE	1	Rotor, Exciter - Wound
357-0093	362-12800		NE	1	Rectifier Assembly (Includes Diodes and Varistor)
					Attaching Parts for Rectifier Assembly
800-2043	016-41613		NE	4	Screw, Cap - Hex Head (M6 x 65mm)
850-2006	028-31507		NE	4	Washer, Lock - Spring (M6)
526-2080	029-62101		NE	4	Washer, Flat (M6)
-----*					
249-0240	450-11760		NE	1	Varistor
249-0238	364-10850		NE	3	Diode - Reverse
249-0239	364-10840		NE	3	Diode - Forward
					Attaching Parts for Diodes
860-2006	027-41206		NE	6	Nut, Hex (M5)
850-2005	028-31506		NE	6	Washer, Lock - Spring (M5)
-----*					
518-0018	050-11047		NE	1	Ring, Retaining (Circlip)
515-0300-01	054-10121		NE	1	Key, Machine - Frame 3,4,5
510-0168	051-01036		NE	1	Bearing, Ball

PMG GROUP


See Separate page for Servicable Components

NOTE 1. NOT STOCKED OR SOLD BY THE CENTRAL PARTS DISTRIBUTION CENTER!

NOTE 2. NOT STOCKED FOR SALE BY NEWAGE INTERNATIONAL. REPLACEMENT ORDER MAY HAVE A LONG LEAD TIME.


NOTE 3. NOT STOCKED OR SOLD BY NEWAGE INTERNATIONAL: FOR REPLACEMENT ORDER A COMPLETE GENERATOR BY CONTACTING NEAREST NEWAGE DISTRIBUTION CENTER AND SUPPLY THE COMPLETE GENERATOR MODEL AND SERIAL NUMBER FROM THE GENERATOR DATA PLATE OR THE CUMMINS/ONAN PART NUMBER FROM THE GENERATOR SET IDENTIFICATION PLATE.

**GENERATOR
HC434 MODELS
PERMANENT MAGNET EXCITER
Installation Of**

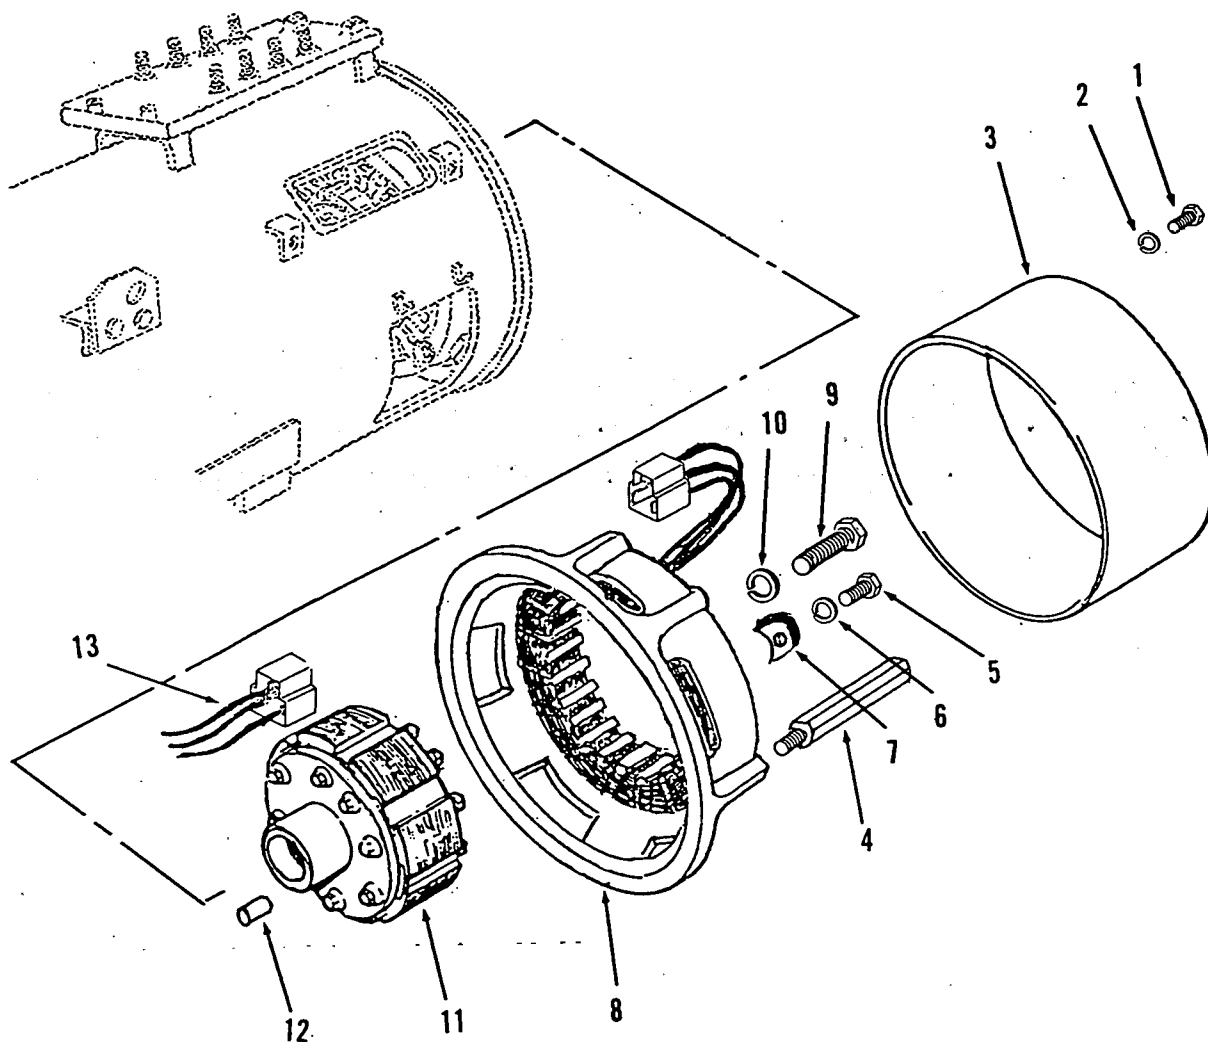

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	800-2004	016-40614	NE	3	Screw, Cap - Hex Head (M5 x 12mm)
2	850-2005	028-31506	NE	3	Washer, Lock - Spring (M5)
3	234-0890	450-11901	NE	1	Cover, PMG
4	232-3527	450-13340	NE	3	Pillar, Threaded
5	800-2056	016-40816	NE	4	Screw, Cap - Hex Head (M8 x 16mm)
6	850-2008	028-31508	NE	4	Washer, Lock - Spring (M8)
7	232-3526	150-10710	NE	4	Clamp, PMG Stator
8	220-4249	450-17400	NE	1	Stator and Frame, PMG
9	815-0761	350-14950	NE	1	Bolt, Hex Head (M10 x 110mm)
10	850-2010	028-31509	NE	1	Washer, Lock Spring (M10)
11	201-3455	450-21300	NE	1	Rotor, PMG
12	516-0228	054-20505	NE	1	Pin, Dowel (M5 x 120mm)
13	249-0642	450-22000	NE	1	Harness, Wiring (Universal Replacement) PMG to AUX Terminal Strip

**GENERATOR
HC534 MODELS
PERMANENT MAGNET EXCITER
Installation Of**

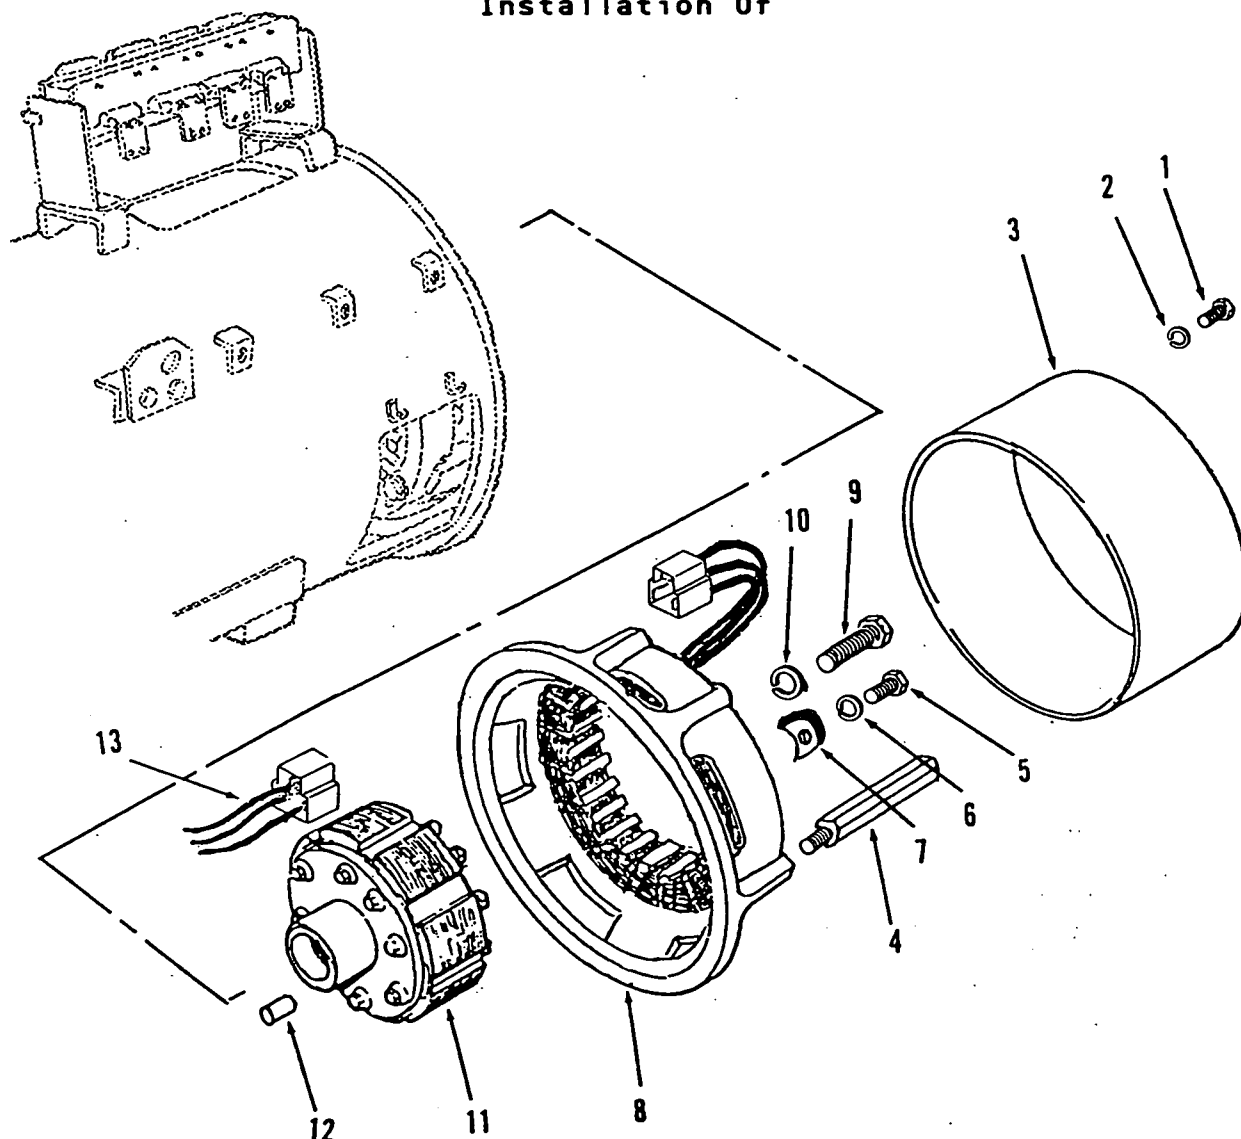

REF NO.	CPDC PART NO.	SOURCE PART NO.	C O D E	QTY USED	PART DESCRIPTION
1	800-2004	016-40614	NE	3	Screw, Cap - Hex Head (M5 x 12mm)
2	850-2005	028-31506	NE	3	Washer, Lock - Spring (M5)
3	234-0890	450-11901	NE	1	Cover, PMG
4	232-3527	450-13340	NE	3	Pillar, Threaded
5	800-2056	016-40816	NE	4	Screw, Cap - Hex Head (M8 x 16mm)
6	850-2008	028-31508	NE	4	Washer, Lock - Spring (M8)
7	232-3526	150-10710	NE	4	Clamp, PMG Stator
8		450-26400	NE	1	Stator and Frame, PMG
9	249-0495	450-13330	NE	1	Bolt, Hex Head
10	850-2010	028-31509	NE	1	Washer, Lock Spring (M10)
11	249-0644	450-23900	NE	1	Rotor, PMG
12	516-0228	054-20505	NE	1	Pin, Dowel (M5 x120mm)
13	249-0642	450-22000	NE	1	Harness, Wiring (Universal Replacement) PMG to AUX Terminal Strip

DFLD
737
9

TABLE OF CONTENTS
SOURCE CODE SECTION

MANUFACTURERS 5-2

SOURCES 5-3

MANUFACTURERS

LOCATION

TELEPHONE

CUMMINS/ONAN POWER SYSTEMS
1400 73rd Avenue N.E.
Minneapolis, Minnesota, USA
55432

Telephone: 612-574-5000
Telex: 275477
Fax: 612-574-5298

CUMMINS ENGINE COMPANY, INC.
Columbus, Indiana, USA
47202-3005

NEWAGE ENGINEERS LIMITED
P.O. Box 17
Barnack Road
Stamford, Lincolnshire, England
PE9 2NB

Telephone: 0780-62552
Telex: 32268
Cables: "Newage" Stamford

SOURCES

C
O
D
E

	<u>LOCATION</u>	<u>TELEPHONE</u>
CE	CUMMINS ENGINE COMPANY, INC. Columbus, Indiana, USA 47202-3005	
MO	(FORMERLY MOTOROLA ALTERNATORS) DISTRIBUTION DIVISION OF PRESTOLITE ELECTRIC INC. 2101 South Arlington Heights Road Suite 180 Arlington Heights, Illinois, USA 60005	Telephone: 312-952-0445
NE	NEWAGE ENGINEERS LIMITED P.O. Box 17 Barnack Road Stamford, Lincolnshire, England PE9 2NB	Telephone: 0780-62552 Telex: 32268 Cables: "Newage" Stamford
	NEWAGE ENGINEERS PTY. LIMITED 2A Parkes Street, Thornleigh New South Wales 2120 , Australia	Telephone: Sydney 8751933 Telex: 26686
	NEWAGE EQUIPMENT LIMITED P.O.Box 427, Islington, Ontario, Canada M9A 4X4	Telephone: 416-259-3741 Telex: 06-967676
	NEWAGE ENGINEERS G.m.b.H. Archenholzstr 69,2000 Hamburg 74, West Germany	Telephone: 040-712-20-44/45 Telex: 2174397
	P.T. NEWAGE ENGINEERS INDONESIA P.O. Box 70/JAT Ji. Pulogadung 21 Kawasan Industri Pilogadung Jakarta 13001 Indonesia	Telephone: 486654 Telex: 49204 NEWIND IA
	NEWAGE ITALIA S.r.l. Viale Fulvio Testi 56 20125 Milan, Italy	Telephone: 6420-868/64-36-602 Telex: 330541
	NEWAGE NORGE A/S Staalfjera 12 Oslo 9, Norway	Telephone: 25-1635 Telex: 18835

SOURCES

C
O
D
E

LOCATION

TELEPHONE

NEWAGE (FAR EAST) PTE LIMITED

Ghim Moh P.O. Box 1016

Singapore 1027

Telephone: 7776203

Telex: 33404

STAMFORD IBERICA S.A.

Paseo de la Castellano 62

Madrid 1, Spain

Telephone: 261-8558/8566

Telex: 43551

NEWAGE LIMITED

P.O. Box 103

3 Independence Court

Folcroft Industrial Park

Folcroft, Pennsylvania, USA

19032

Telephone: 215-534-9500

Telex: 845276



1400 73rd Avenue N.E.
Minneapolis, Mn 55432

Central Parts Distribution Center

6600 West Broadway
Brooklyn Park, MN 55428
Phone 612-574-8100
Fax 612-574-8180
Telex 282866

World Wide Parts & Service

