

Onan

RV GenSet

Operator's Manual

KV

MicroLite™ 2800 Series



Printed in U.S.A.

981-0136

6-93

Table of Contents

TITLE	PAGE
SAFETY PRECAUTIONS	ii, iii
INTRODUCTION	1
About This Manual	1
Model Identification	1
Component Locations	2
CONTROL PANEL	3
Standard Control Panel	3
Remote Control Panel (Optional)	4
PRE-START CHECKS	5
Engine Oil	5
Exhaust Check	6
Fuel Check	6
General Inspection	6
STARTING AND STOPPING	7
Starting Procedure	7
Stopping	8
WATTAGE REQUIREMENTS	9
AC Wattage Capacity	9
DC Power	10
OPERATING RECOMMENDATIONS	11
Break-In Procedure	11
Operating in Hot or Cold Weather	11
High Altitude	12
Operating in Dusty Conditions	12
Generator Set Exercise	12
MAINTENANCE SCHEDULE	13
MAINTENANCE PROCEDURES	14
General Inspection	14
Oil Change	15
Battery Care	17
Air Filter Replacement	18
Spark Plug	18
Spark Arrester Service	19
Gasoline Fuel Filter	20
GENERATOR SET STORAGE	21
TROUBLESHOOTING	22
HOW TO OBTAIN SERVICE	23
SPECIFICATIONS	24
MAINTENANCE RECORD	25

Safety Precautions

Before operating the generator set, read the Operator's Manual and become familiar with it and the equipment. Safe and efficient operation can be achieved only if the unit is properly operated and maintained. Many accidents are caused by failure to follow fundamental rules and precautions.

The following symbols, found throughout this manual, alert you to potentially dangerous conditions to the operator, service personnel, or the equipment.

⚠ DANGER *This symbol warns of immediate hazards which will result in severe personal injury or death.*

⚠ WARNING *This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.*

⚠ CAUTION *This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.*

Read and observe each of the following safety precautions.

FUEL AND FUMES ARE FLAMMABLE

Fire, explosion, and personal injury can result from improper practices.

- Do not smoke or allow an open flame or spark-producing equipment near the generator set or fuel tank.
- Inspect the fuel lines and connections daily for leaks per the maintenance schedule.

EXHAUST GASES ARE DEADLY

- Never sleep in the vehicle with the generator set running unless vehicle is equipped with an operating carbon monoxide detector.

- Inspect exhaust system daily for leaks per the maintenance schedule. Do not use engine cooling air to heat a compartment.
- Never operate the generator set inside a building or in an area where exhaust gases could accumulate, such as near a wall or snow bank, or in high grass. When parking, make sure the exhaust outlet is not obstructed. Make sure the generator set is well ventilated.

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Disconnect the negative (–) cable at the starting battery before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms on the ground or over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling electrical equipment.
- Use extreme caution when working on electrical components. High voltages can cause injury or death.
- Tag remote or open switches to avoid accidental closure or starting.
- **DO NOT CONNECT GENERATOR SET DIRECTLY TO ANY BUILDING ELECTRICAL SYSTEM.** Hazardous voltages can flow from the generator set into the utility line. This creates a potential for electrocution or property damage. Connect only through an approved device and after building main switch is open. Consult an electrician in regard to emergency power use.

MOVING PARTS CAN CAUSE SEVERE PERSONAL INJURY OR DEATH

- Before starting work on the generator set, disconnect negative (–) cable at the battery. This will prevent accidental arcing or starting.
- Keep your hands away from moving parts.
- Make sure that fasteners on the generator set are secure. Tighten supports and clamps, keep guards in position over fans, etc.
- Do not wear loose clothing or jewelry while working on generator sets, because they can become caught in moving parts. Jewelry can short out electrical contacts and cause shock or burning.
- If adjustment must be made while the unit is running, use extreme caution around hot manifolds, moving parts, etc.

GENERAL SAFETY PRECAUTIONS

- Wear safety glasses and protective clothing when servicing batteries. **DO NOT SMOKE** while servicing batteries. Lead-acid batteries emit a highly explosive hydrogen gas that can be ignited by electrical arcing or by smoking.
- Have a fire extinguisher rated ABC nearby. Maintain extinguisher properly and become familiar with its use.

- Benzene and lead, found in some gasoline, have been identified by some state and federal agencies as causing cancer or reproductive toxicity. When checking, draining or adding gasoline, take care not to ingest, breathe the fumes, or contact gasoline.
- Used engine oils have been identified by some state or federal agencies as causing cancer or reproductive toxicity. When checking or changing engine oil, take care not to ingest, breathe the fumes, or contact used oil.
- Remove all unnecessary grease and oil from the unit. Accumulated grease and oil can cause overheating and engine damage, which presents a potential fire hazard.
- Do not store anything in the generator set compartment such as oil or gas cans, oily rags, chains, wooden blocks, portable propane cylinders, etc. A fire could result or the generator set operation (cooling, noise and vibration) may be adversely affected. Keep the compartment floor clean and dry.
- Do not work on this equipment when mentally or physically fatigued, or after consuming any alcohol or drug that makes the operation of equipment unsafe.

RGA-OP1

Introduction

ABOUT THIS MANUAL

This manual covers operation and maintenance for the MicroLite™ (KV) generator set (referred to as genset). Study this manual carefully and comply with each of the warnings and cautions. The owner is responsible for maintaining the genset according to the maintenance schedule. Using the genset properly and performing regular maintenance can result in longer genset life, better performance, and safer operation.

The Operating Recommendations section covers the break-in procedure and the effects of high altitude and variations in climate. The Wattage Requirements section describes the wattage capacity of the genset and lists typical wattage use of common appliances and tools. Familiarize yourself, and others who will operate this set, with this information.

MicroLite is a trademark of the Onan Corporation.

This manual also covers genset storage, basic troubleshooting, maintenance, how to obtain service, and specifications for the generator set. Keep this manual and the Installation manual (981-0604) with the other vehicle manuals.

MODEL IDENTIFICATION

Always use the complete model and serial number when contacting an Onan[®] dealer or distributor for parts, service or product information. The model number (which includes the specification number) and the serial number are printed on the nameplate located behind the access cover (Figure 1).

To make the model and serial number easy to find when you need them, record all of the numbers that appear in the model number and serial number area on the Onan nameplate. Fill in the area provided in Figure 1. It is important to record every number and letter in order to identify the set correctly.

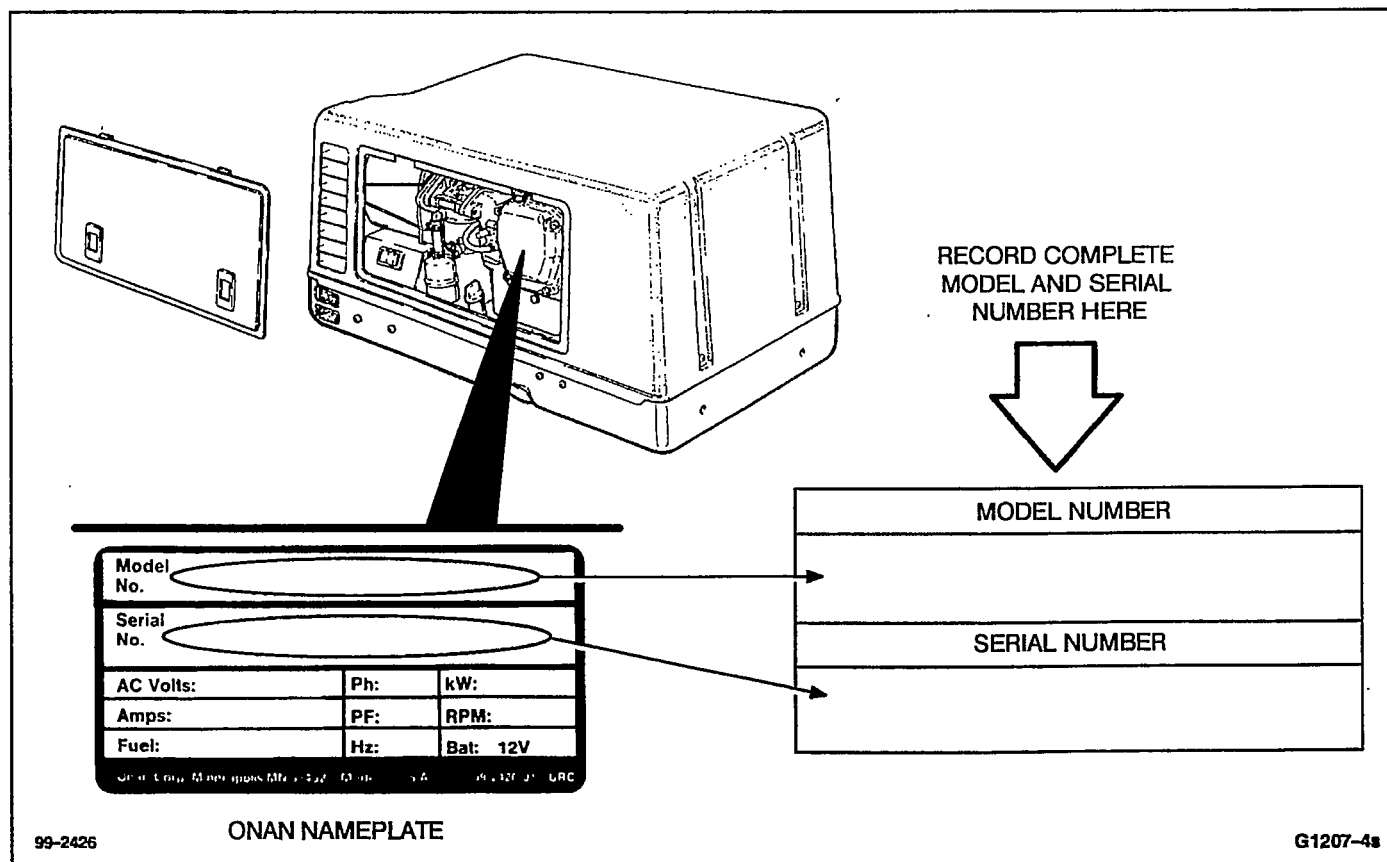


FIGURE 1. MODEL IDENTIFICATION

COMPONENT LOCATIONS

The standard control panel and routine maintenance items are located behind the access cover (Figure 2).

To remove the access cover: Slide the latches up and pull the cover outward from the bottom. Lower the cover to remove it from the housing.

To secure the access cover: Position the tabs on the top of the access cover in the openings on the housing. Slide the latches up and push the bottom of the cover in place. Hold the cover in place firmly while releasing the latches to secure the cover.

⚠WARNING Operation of the genset with the access cover removed can result in severe personal injury or equipment damage. Hot components are exposed when the access cover is removed and genset cooling air does not circulate properly. Do not operate the genset with the access cover removed.

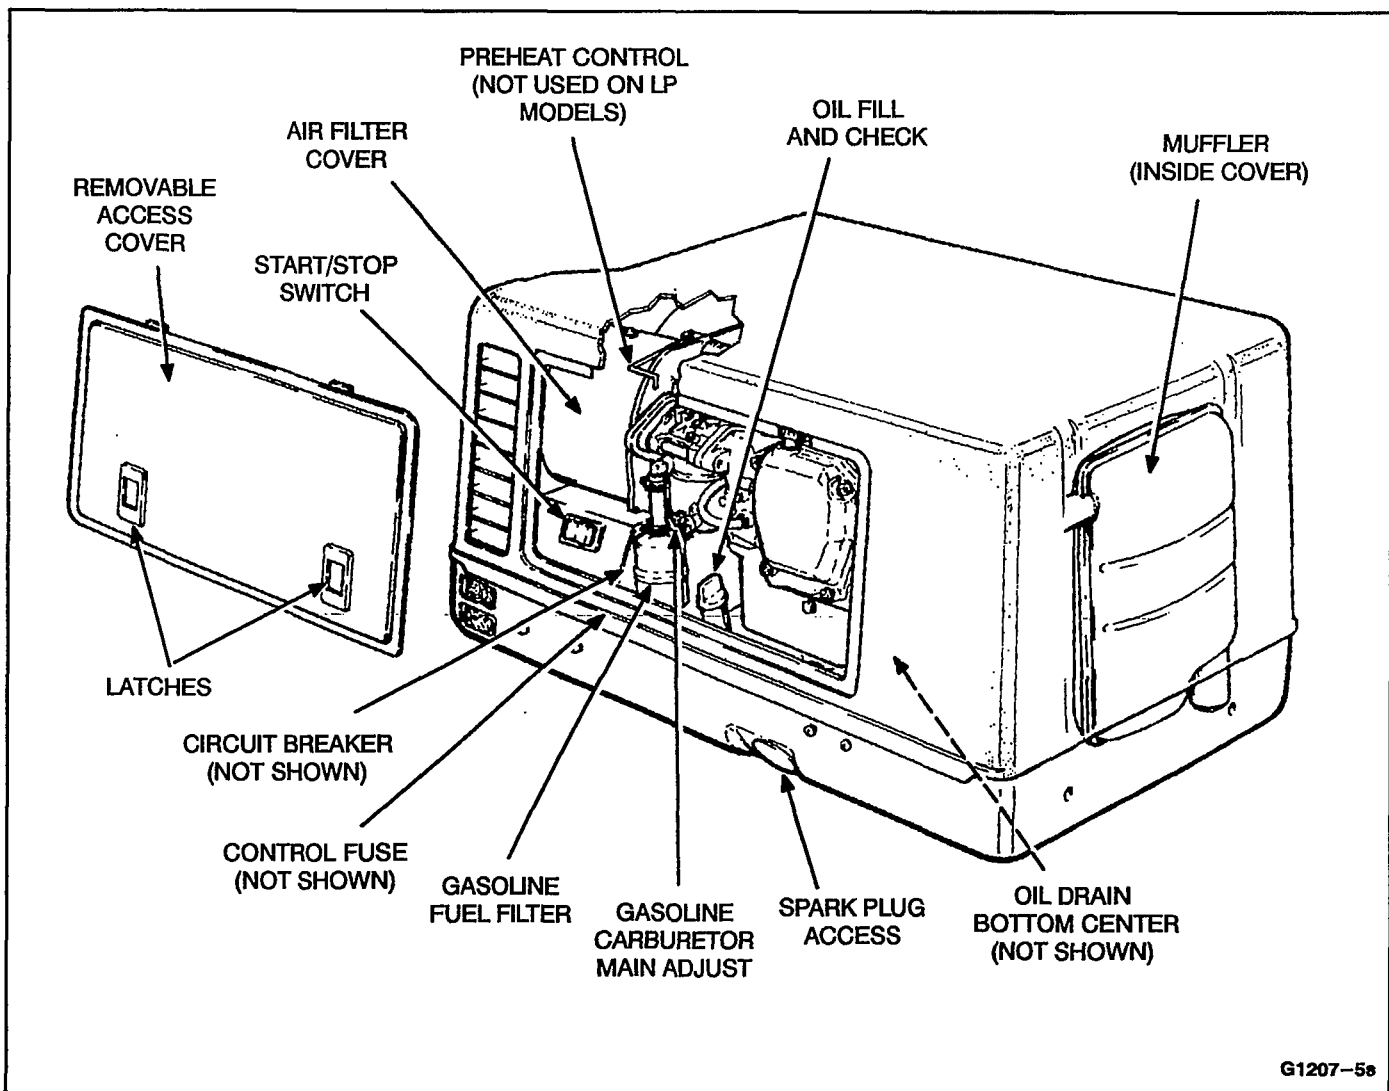


FIGURE 2. MICROLITE KV COMPONENT LOCATIONS

Control Panel

This section describes the features of the standard genset mounted control panel, and the optional remote mounted control panel.

STANDARD CONTROL PANEL

The standard control panel is located behind the access cover in the genset (Figure 3). The standard control is used for starting and stopping the set from the genset compartment.

Control Component Descriptions

Start/Stop Switch: Starts and stops the set. The set can also be operated from an optional remote control (if equipped).

Control Fuse: Provides protection for the control wiring and remote wiring from a short circuit.

Line Circuit Breaker: Protects the generator from a short circuit or an overloaded circuit. If the breaker opens (trips), remove the electrical load from the genset before resetting the circuit breaker.

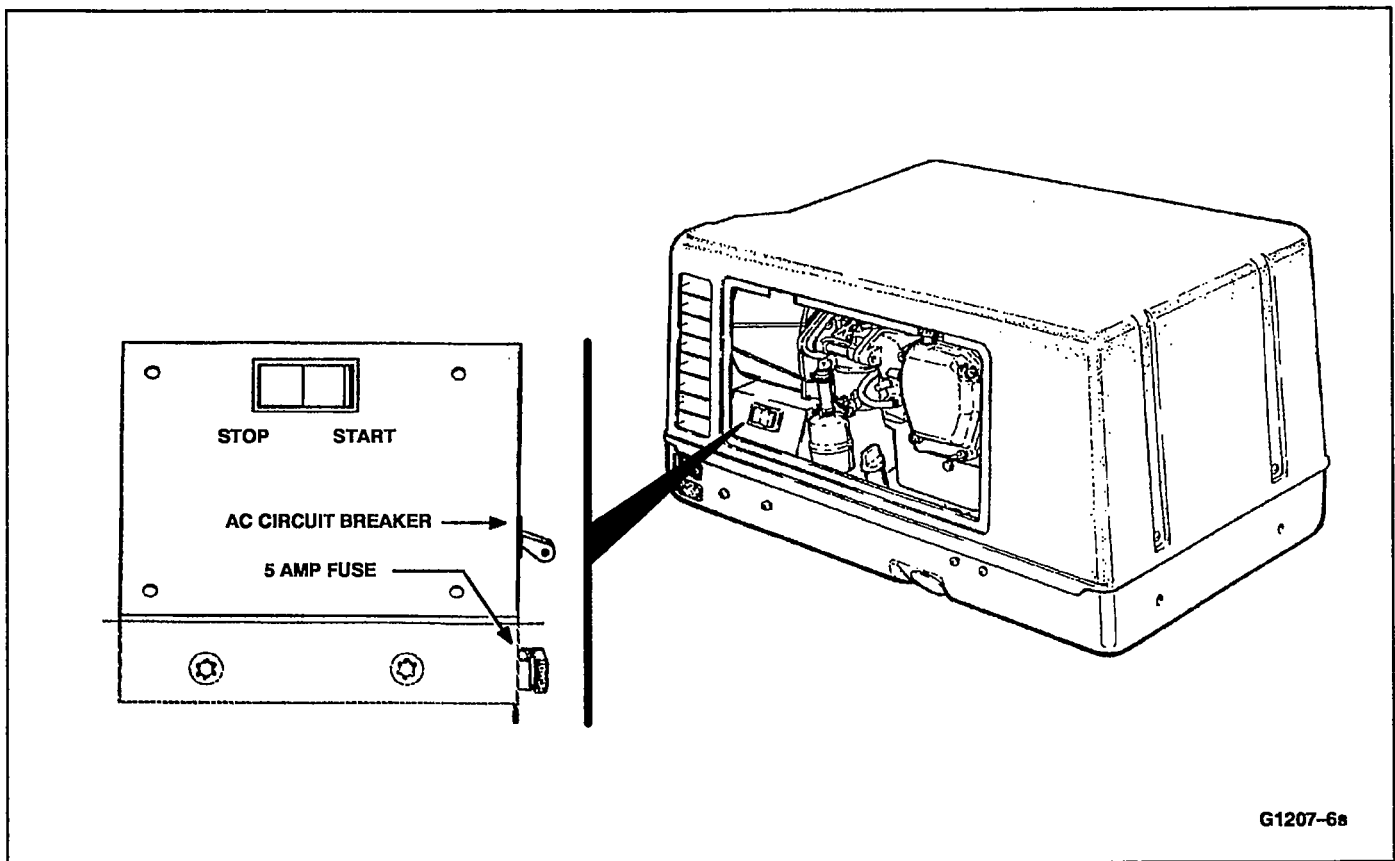


FIGURE 3. STANDARD CONTROL PANEL

REMOTE CONTROL PANEL (OPTIONAL)

The optional remote control enables the genset to be operated from inside the RV living quarters or driver's compartment. Two remote control panels are available: the Standard Remote Control and the Deluxe Remote Control (Figure 4). The control features for these two models are described below.

Standard Remote Control: This model has a start/stop switch with an indicator lamp that lights when the set is running.

Deluxe Remote Control: This model has the same features as the Standard Remote Control plus a running time meter and a battery condition meter.

The Running Time Meter indicates the total operating hours on the genset. Use this meter to keep a record of periodic maintenance.

The Battery Condition Meter indicates the condition of the battery and the battery charging circuit. The indicator should remain in the normal zone. If it reads consistently high or low, contact an Onan service center for assistance.

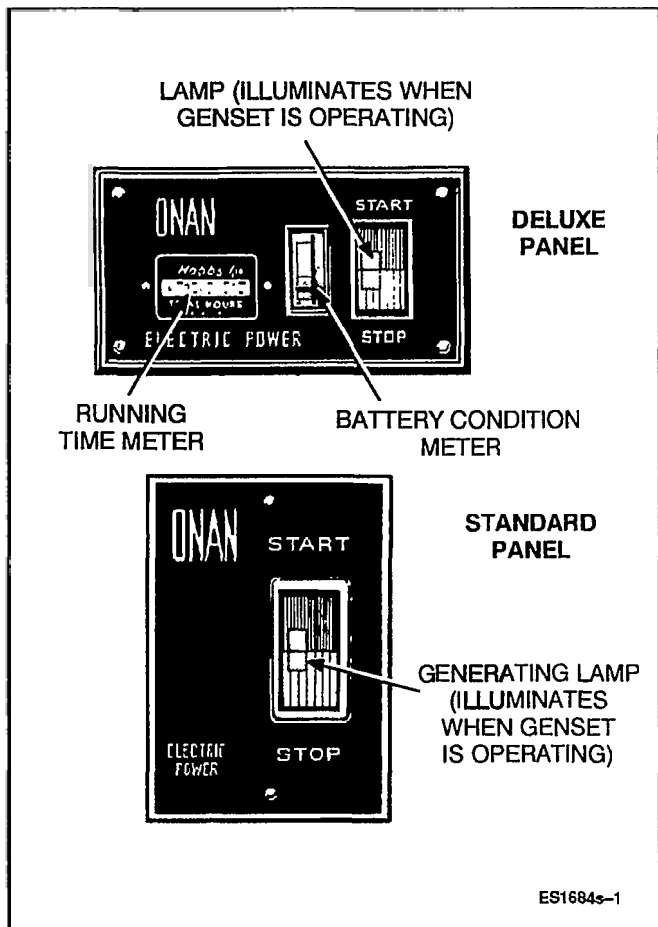


FIGURE 4. REMOTE CONTROL PANELS

Pre-Start Checks

ENGINE OIL

Check the engine oil level before each genset operation. If oil needs to be added between changes, use the same brand because different brands might not be compatible when mixed. Be careful not to overfill the crankcase. Overfilling will cause the oil to foam, resulting in engine shutdown.

Use premium quality motor oil with the API (American Petroleum Institute) designation SG on the container.

Checking Engine Oil Level

Make sure that the genset is level and that it has cooled down. Do not check the oil level while the genset is running.

⚠ WARNING *Hot oil can cause severe personal injury. Do not check the oil level while the genset is running because hot oil could blow out of the oil fill tube causing burns.*

1. Remove the oil level indicator and wipe it with a clean rag (Figure 5).
2. Insert the oil level indicator into the oil filler neck. Do NOT screw oil cap down.
3. Remove oil level indicator and check the oil level on the indicator stem.
4. If needed, add oil very slowly until the full mark is reached.
5. Insert the oil level indicator into the filler neck and screw in securely to prevent oil leakage.

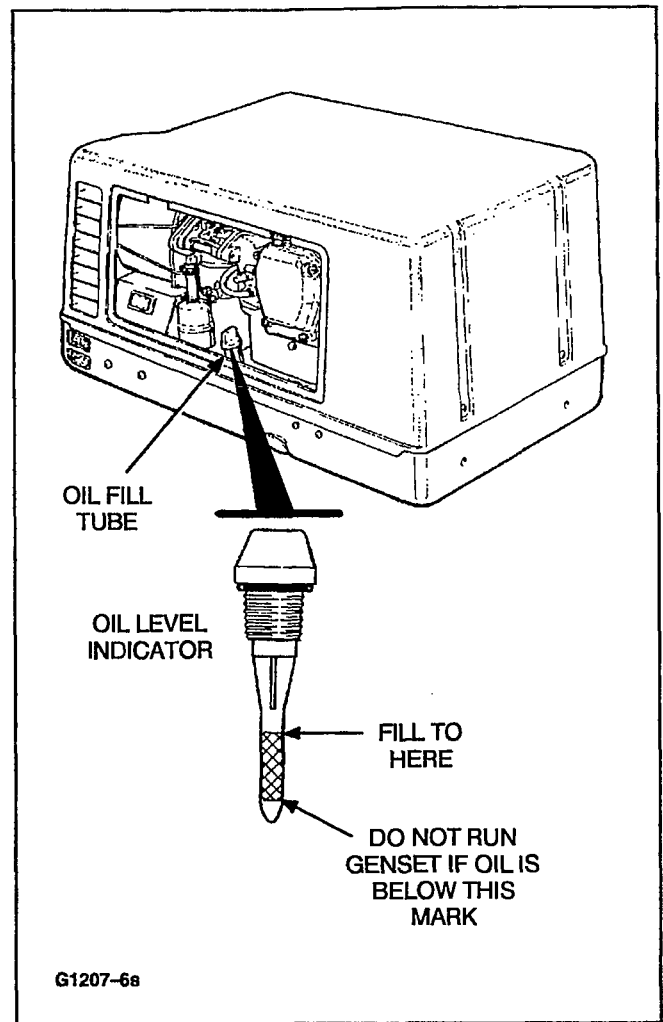


FIGURE 5. OIL LEVEL CHECK

EXHAUST CHECK

Thoroughly inspect the exhaust system for leaks or corrosion. Have any problems repaired before operating the genset.

⚠ WARNING *Exhaust gas presents the hazard of severe personal injury or death. Make certain that all exhaust components are operational and that there are no exhaust leaks.*

Do not start the set if exhaust gases will not effectively expel away from the vehicle. Be aware that any vent, window or opening that is not permanently sealed from the vehicle living space can be an avenue for carbon monoxide.

⚠ WARNING *Exhaust gases can cause severe personal injury or death. Never operate the genset unless the exhaust outlet is clear of walls, snow banks, or any obstructions that can prevent exhaust gases from dissipating. Never operate any exhaust fan in the vehicle when the genset is running; an exhaust fan can draw exhaust gas into the vehicle. The exhaust outlet must extend a minimum of 1 inch (25.4 mm) beyond the perimeter of the vehicle.*

FUEL CHECK

Carefully inspect the fuel system for leaks, cracked fuel lines, or corroded fittings. Have any problems repaired immediately.

⚠ WARNING *Gasoline presents the hazard of fire or explosion that can result in severe personal injury or death. Make sure that there are no fuel leaks. Do not smoke or allow any flame, spark, pilot light, arc-producing equipment or other ignition source near the fuel system. Keep a type ABC fire extinguisher nearby.*

Make sure that the fuel tank is full and that the fuel line supply valve (if equipped) is open.

Gasoline fuels deteriorate over time causing fuel system corrosion and the formation of gum and varnish-like deposits. Fuel deposits cause hard starting and rough engine operation. If the genset will not be operated for more than 120 days, a fuel

preservative and stabilizer should be used to protect the fuel system (refer to the *Generator Set Storage* section).

Recommended Fuel

Use clean, fresh regular unleaded gasoline. Regular leaded gasoline can also be used; however, leaded gasolines cause increased engine deposits and shorter spark plug life.

Gasoline that is blended with alcohol (gasohol) can be used if it contains the correct mixtures and additives as follows:

Ethanol Blend: This fuel must not contain more than 10 percent ethanol.

Methanol Blend: This fuel must not contain more than 5 percent methanol and it must contain cosolvents and corrosion inhibitors for methanol.

LPG Models: Use clean, fresh commercial propane or HD-5 grade liquid propane gas in a mixture of at least 90 percent propane. Propane fuels other than HD-5 can contain more than 2.5 percent butane, which can result in poor fuel vaporization and poor engine starting in low ambient temperatures (below 32°F or 0°C).

A manual shutoff valve must be mounted on the propane fuel supply tank. This supply tank valve must be opened fully when operating the genset so the flow valve will close with a broken propane fuel line.

GENERAL INSPECTION

Check the genset for damaged or loose parts. Make sure the air inlet and outlet areas are not blocked. Investigate any abnormal operating noises. Make sure that the genset is securely mounted in its compartment or under-floor housing.

Check to see that the vehicle is not parked in high grass or brush.

⚠ WARNING *Do not operate the genset when the vehicle is parked in high grass or brush. Hot exhaust can ignite grass or brush resulting in a fire, which can cause severe personal injury or death.*

Starting and Stopping

⚠ WARNING

EXHAUST GAS IS DEADLY!

Exhaust gases contain carbon monoxide, an odorless and colorless gas. Carbon monoxide is poisonous and can cause unconsciousness and death. Symptoms of carbon monoxide poisoning can include:

- Dizziness
- Nausea
- Headache
- Weakness and Sleepiness
- Throbbing in Temples
- Muscular Twitching
- Vomiting
- Inability to Think Coherently

IF YOU OR ANYONE ELSE EXPERIENCE ANY OF THESE SYMPTOMS, GET OUT INTO THE FRESH AIR IMMEDIATELY. If symptoms persist, seek medical attention. Shut down the unit and do not operate until it has been inspected and repaired.

Never sleep in the vehicle with the generator set running unless the vehicle interior is equipped with an operating carbon monoxide detector. Protection against carbon monoxide inhalation also includes proper exhaust system installation and visual and audible inspection of the complete exhaust system at the start of each generator set operation.

STARTING PROCEDURE

Perform each of the checks described in the *Pre-Start Checks* section before starting the genset. The genset can be started and stopped from the standard control panel on the genset or from an optional remote control panel inside the vehicle.

Make certain that the vehicle AC distribution panel breakers are off (open). Place the output switching device on the vehicle (if present) in the "Utility" position.

⚠ CAUTION *Contact with hot engine parts can cause severe burns. Use caution when starting or stopping the genset from the standard set mounted control panel. The access cover should always be mounted on the genset during operation.*

1. Turn air conditioners and large electrical loads off. (Open the fuel supply valve on LPG fueled models.)
2. Hold the Start/Stop switch in the START position (Figure 6). Release the switch when the genset starts.

(On the remote control Start/Stop switch, starting is indicated by a steady glow from the lamp on the switch.)

Release the switch after 10 seconds if the engine does not start. Wait 30 seconds before repeating the start procedure.

⚠ CAUTION *Cranking the starter for longer than 10 seconds can overheat and damage the starter. If the engine does not start after 10 seconds, release the Start/Stop switch and wait 30 seconds before repeating the start procedure.*

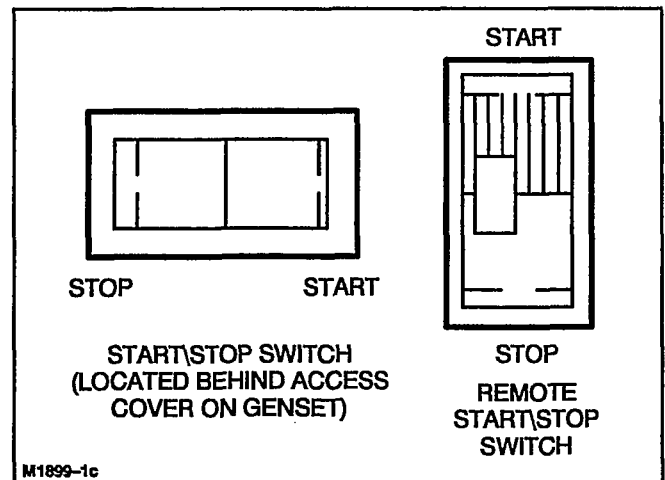


FIGURE 6. START/STOP SWITCH

-
3. Let the genset warm up for a few minutes before connecting a load. Make sure that the genset is running smoothly and that there are no fuel or exhaust leaks.

See the *Wattage Requirements* section to determine how much wattage (electrical load) can be used with the genset.

If the engine stops running shortly after starting, check to see if the oil level is too high or too low. Make sure that the access cover is securely installed during operation.

STOPPING

1. Turn off air conditioners and large electrical loads before stopping the genset to allow it to cool down.
2. Let the genset run three to five minutes with no load. Failure to let the genset cool down can cause engine run-on or backfire.
3. Push the Start/Stop switch to the STOP position. (Close the fuel supply valve on LPG fueled models.)

If the genset can be started or stopped from the set mounted control but not from the remote control, contact an Onan service center for assistance. Refer to the *How to Obtain Service* section.

Wattage Requirements

AC WATTAGE CAPACITY

The 120-volt AC power from the genset can be used to power appliances and other electrical equipment. (Appliances and other electrical equipment are referred to as "electrical loads" or "loads" when they are connected to the genset.)

A 25-amp circuit breaker (2.8 model), located on the genset mounted control panel, protects the generator from an overloaded circuit. An overloaded circuit occurs when too many appliances, tools, lights, etc., are operated at the same time.

Connecting a Load

To determine the maximum amount of electrical appliances or loads that can be used at one time, follow these steps:

1. Determine the maximum amount of wattage that can be used with the genset, refer to the kW rating (kilowatt rating) on the Onan nameplate (Figure 1).

A kilowatt equals one thousand watts. If the nameplate shows a rating of 2.8 kW, that equals 2,800 watts.

2. Check the wattage usage of each item that you plan to connect to the genset. Table 1 lists typical wattages for common electrical appliances. Look at the appliance nameplate to obtain the actual wattage for each item.
3. Add the wattages of each of the loads that will be operated at the same time. Make sure that the total wattage does not exceed the genset rating (2800 watts).

Example: In our example we will use a 13,500 BTU air conditioner with a nameplate wattage of 1,800 watts. In addition, a few common appliances are used as follows:

Air Conditioner	1800 Watts
Converter	500 Watts
Television	300 Watts
Total	2600 Watts

4. Start the genset and allow it to warm up for a few minutes before adding any electrical loads.

Make sure that each of the appliances and tools are properly grounded and that power cords and equipment are in good working condition before connecting them to the genset.

⚠WARNING *Electrical shock can cause severe personal injury or death. Appliances should be in good working condition and be properly grounded to provide additional protection from electrical shock.*

TABLE 1. APPROXIMATE POWER USAGE
OF COMMON APPLIANCES

Appliance or Tool	Approximate Wattage Usage
Air Conditioner	1600-2000
Battery Charger	Up to 800
Coffee Percolator	550-750
Converter	300-500
Electric Blanket	50-200
Electric Broom	200-500
Electric Drill	250-750
Electric Frying Pan or Wok . . .	1000-1500
Electric Iron	500-1200
Electric Stove (Per Element) . .	350-1000
Electric Water Heater	1000-1500
Hair Dryer	800-1500
Microwave Oven	1000-1500
Radio	50-200
Refrigerator	600-1000
Space Heater	1000-1500
Television	200-600

See text for starting appliances with motors

Appliances with Motors

Appliances with motors consume more power during start-up than they do when they are operating at normal speed. (Some motors draw up to three times their operating power during start-up.) If you plan to use an appliance with a motor (like the air conditioner or refrigerator), turn it on before starting other appliances. Once the motor is running at normal speed, additional appliances can be added.

Circuit Breakers

Circuit breakers on the electrical distribution panel in the vehicle or on the genset control will trip (open) if the load exceeds the circuit breaker current rating. This can be caused by using too many appliances at one time or by a short in an electrical circuit or appliance.

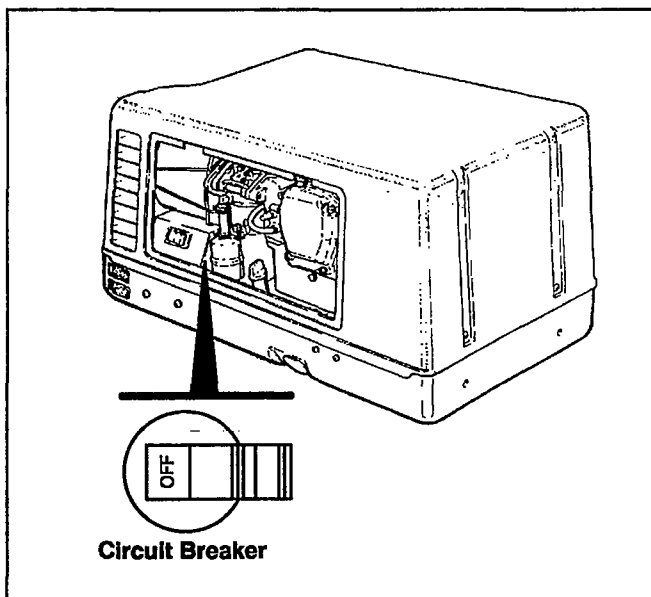


FIGURE 7. SET MOUNTED CIRCUIT BREAKER

The genset will continue to run after a circuit breaker trips. Turn off all of the appliances and other electrical loads, then reset the breaker (Figure 7). If the circuit breaker trips again, a short circuit in the wiring is indicated. Turn off the genset and contact a qualified electrician for assistance.

If the circuit breaker does not trip, turn on only as many appliances as the circuit breaker size will allow (see *Connecting a Load* in this section). If the

circuit breaker trips again, a defective appliance or circuit breaker is indicated.

Connection to Utility Power

Connect utility power (power from a commercial source such as a plug-in outlet) only through an approved switching device to protect against the possibility of generator power connecting to the utility power.

⚠ WARNING *Connecting the genset directly to the public utility or any other power system can cause electrocution, damage to equipment, or fire. Hazardous voltages can flow from the genset into the utility line. An approved switching device must be used to prevent interconnections.*

High Altitude Operation

Operating the genset at a high altitude will lower the output power of the genset and decrease fuel efficiency. Refer to the *Operating Recommendations* section for high altitude carburetor adjustments.

Maximum power decreases about 3.5 percent for each 1,000 feet (305 m) above the rated altitude of 500 feet (152 m). When operating the genset at an altitude above 500 feet, calculate the loss of power to determine maximum power capacity.

Example: Operation at 4,500 feet (1371 m), or 4,000 (1,219 m) feet above the rated altitude will result in a power loss of 14 percent or 392 watts: $0.14 \times 2,800 \text{ watts (set rated power)} = 392 \text{ watts}$. Subtract 392 watts from the set rated power of 2,800 watts and the maximum power at 4,500 feet is 2,408 watts.

DC POWER

A 12-volt DC output (one ampere maximum) from the generator is used to prevent discharge of the genset starting battery during genset operation. The battery is normally charged by the converter/charger in the vehicle, not by the genset DC power. The battery is charged when the genset is running or when the vehicle is plugged into utility power.

Operating Recommendations

BREAK-IN PROCEDURE

Perform the following break-in procedure to prevent glazing of the engine cylinder and reduce oil consumption.

1. Start the genset and apply a load of 50 percent of its wattage capacity (1400 watts). Run the set with this load for two hours. Refer to Table 1 for the wattage usage of common appliances and tools.
2. Increase the wattage load to 75 percent capacity (2100 watts) and run the set for another two hours.
3. Disconnect the load and allow the genset to run for 3 minutes. Operating the genset without a load allows the genset to cool down before stopping.
4. Change the engine crankcase oil after the first 20 hours of operation. Change the engine oil every 100 hours after the initial oil change.

OPERATING IN HOT OR COLD WEATHER

Hot Weather

Make certain that nothing blocks the airflow to and from the genset. See that the set is maintained according to the *Maintenance Schedule* and keep the engine clean.

Cold Weather

Use the correct oil weight for cold weather conditions. See the *Recommended Engine Oil* section for oil recommendations. Change the oil after the engine has been warmed up. If a sudden temperature change occurs and the oil is not the correct weight, change the oil.

Gasoline fueled gensets are equipped with a pre-heat lever. At temperatures below 40°F (4°C), push in the carburetor air preheater lever to the WINTER position. The lever is located on the outside of the air cleaner housing (see Figure 8). At temperatures above 70°F (21°C), pull out the preheater lever to the SUMMER position. At temperatures between 40°F (4°C) and 70°F (21°C), the preheater may be left in either position.

⚠ CAUTION *Operation of the preheater when temperatures are above 70°F (21°C) may cause erratic operation, and may result in reduced engine power and reduced engine life. For this reason, leave the preheater in the SUMMER position when temperatures are above 70°F (21°C).*

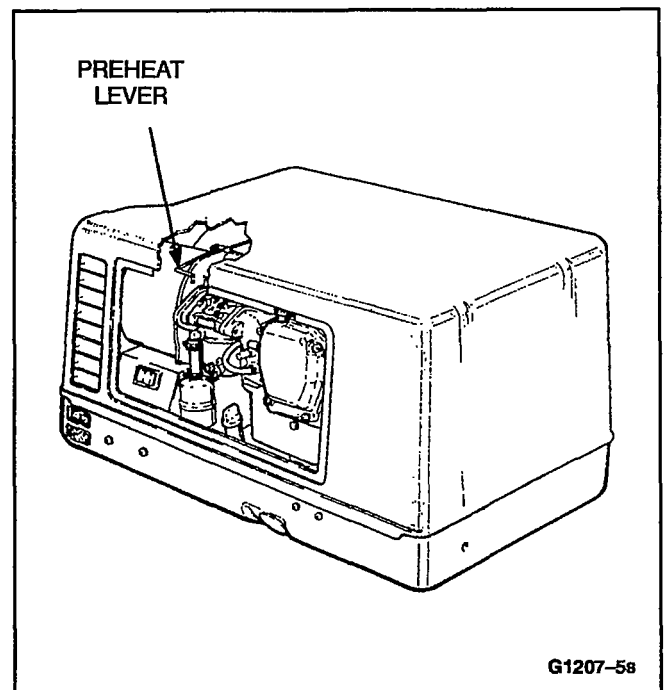


FIGURE 8. PREHEAT LEVER

HIGH ALTITUDE

Performance will decrease and fuel consumption will increase at high altitudes due to a rich air-fuel mixture. If operation is inhibited by high altitude (above 2000 feet or 610 m), adjust the carburetor main fuel adjustment limiter cap for a slightly leaner fuel mixture. See Figure 9. Return the adjustment screw to the original setting before operating the set at lower altitudes or performance problems can occur due to a lean air-fuel mixture.

⚠ CAUTION *Operating the genset with a lean air-fuel setting at low altitudes can cause power loss, overheating and engine damage. Return the carburetor main fuel adjustment to its original setting before operating the genset at low altitudes.*

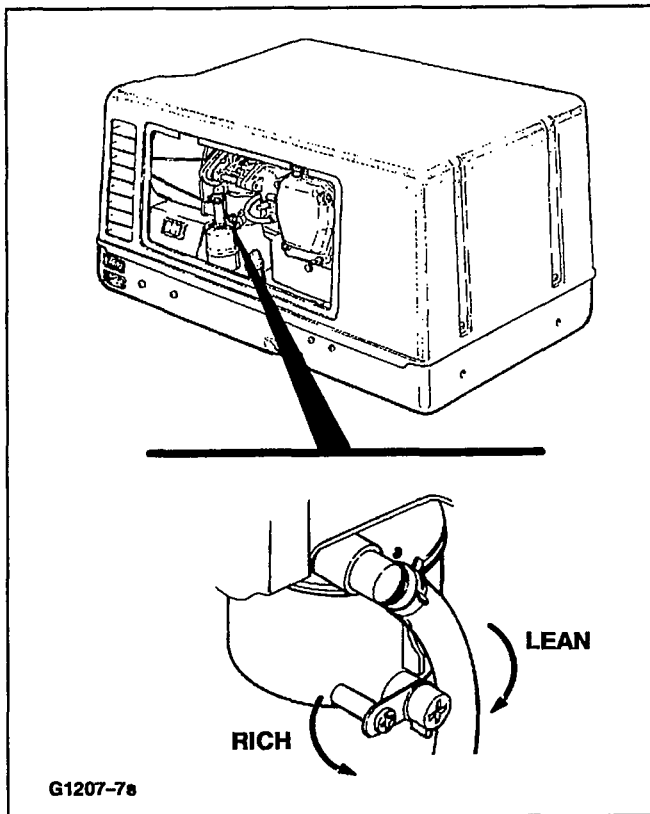


FIGURE 9. CARBURETOR ALTITUDE ADJUSTMENT

OPERATING IN DUSTY CONDITIONS

1. Keep the genset air inlet and outlet areas free of debris.
2. Service the air cleaner frequently.
3. Increase the engine crankcase oil change interval to every 50 operating hours.
4. Keep the engine oil in a dust-tight container.

GENERATOR SET EXERCISE

Infrequent operation of the genset can allow harmful moisture to condense in the engine. Moisture accumulates because the engine does not run often enough to reach normal operating temperature. Also fuel in the carburetor will evaporate and leave deposits that can cause hard starting and unstable running.

To prevent harmful moisture accumulation and fuel deposits, run the genset at 50 percent capacity (1400 watts) for two hours every four weeks. A long exercise period is preferable to several short periods.

Maintenance Schedule

Following the maintenance schedule and using the genset properly will result in longer genset life, better performance, and safer operation. Perform each maintenance procedure at the time period indicated or after the number of operating hours indicated, whichever comes first. Refer to the following *Maintenance Procedures* section for instructions.

Consult an Onan service center if the genset will be subjected to extremely hot or dusty conditions to

develop a more frequent maintenance schedule. Log all service and maintenance for warranty support (see the *Maintenance Record* section).

⚠ WARNING *Accidental starting of the genset during maintenance can cause severe personal injury or death. Disconnect both genset starting battery cables, before performing maintenance. Remove the negative (–) cable first to reduce the risk of arcing.*

TABLE 2. PERIODIC MAINTENANCE SCHEDULE

SERVICE THESE ITEMS	SERVICE INTERVAL				
	Daily or Every 8 hours	Every 100 Hours	Every 150 Hours	Every 500 Hours	P A G E
Inspect Set	x ¹				14
Check Oil Level	x				5
Change Crankcase Oil		x ²			15
Clean Spark Arrester		x ³			19
Clean and Check Battery		x			17
Replace Air Filter			x ⁴		18
Clean Spark Plug				x ⁵	18
Change Fuel Filter (Gasoline)				x ⁵	20
Clean and Adjust Carburetor				x ⁶	–
Inspect and Leak Test the LPG System				x ⁶	–

1. Check for oil, fuel and exhaust system leaks. Check exhaust system audibly and visually with the genset running. Temporarily remove the access cover to check muffler. Shut off the genset and repair any leaks immediately. Replace corroded exhaust and fuel line components before leaks occur.
2. Perform after the first 20 hours of operation on new sets.
3. Clean the spark arrester every 50 hours.
4. Replace more often in dusty conditions.
5. Service sooner if performance problems occur.
6. Have the Onan service center perform.

Maintenance Procedures

GENERAL INSPECTION

Inspect the genset daily or after every eight hours of operation, whichever comes first. Perform the following exhaust, fuel, and electrical systems checks. Also check the mechanical condition of the genset and its mounting fasteners.

Exhaust System

Examine the exhaust system for leaks. Inspect the genset compartment for holes that might allow exhaust gas to enter the vehicle. If the genset compartment has holes to the interior of the vehicle, or if the exhaust system has a leak or sounds louder than usual, do not operate the genset until the problem is corrected. Also check to see that the exhaust outlet extends 1 inch (25.4 mm) beyond the perimeter of the vehicle.

Replace worn, damaged, or corroded exhaust components before leaks occur.

⚠ WARNING *Exhaust gas presents the hazard of severe personal injury or death. If there are any exhaust leaks, do not operate the set. Have the exhaust system repaired before operating the genset.*

Fuel System

With the genset running, check the fuel supply line, fuel filter, and fuel system fittings for leaks. Check the flexible fuel hose section for cuts, cracks, or abrasions, and make sure the fuel line does not rub against anything. Replace worn or hardened fuel line components before leaks occur.

⚠ WARNING *Fuel presents the hazard of fire or explosion that can result in severe personal injury or death. If any leaks are detected, have them corrected immediately.*

DC Electrical System

With the genset off, check the battery terminals for clean and tight connections. Loose or corroded connections create resistance that can impede starting. Clean and reconnect corroded or loose battery cables. Remove the negative (–) battery cable first and install it last to reduce the risk of arcing.

⚠ WARNING *Batteries present the hazard of explosion that can result in severe personal injury. Do not smoke or allow any flame, spark, pilot light, arc-producing equipment or other ignition sources around the battery area. Do not disconnect battery cables while the genset is cranking or running because explosive battery gases could be ignited.*

Mechanical

Check for any signs of mechanical damage. Start the set and listen for any unusual noises that may indicate mechanical problems. Have any problems corrected immediately.

Check the mounting fasteners to make sure the genset is secure in its compartment. If an under-floor housing is used, make sure that the set is secured to the housing. Check the condition of the housing components and make sure they are secure to the vehicle.

Check to see that the genset air inlet and outlet areas are not blocked with debris.

Clean the genset whenever dust and dirt begin to accumulate. Dust and dirt can usually be removed with a damp cloth. Steam cleaning may be needed to remove road contaminants. Do not clean the genset while the engine is running. Protect the generator, air cleaner, control panel, and electrical connections from cleaning solvents. Cleaning solvents can damage electrical connectors.

OIL CHANGE


In dusty or dirty conditions, change the engine oil more frequently than the interval specified in the maintenance schedule. Figure 10 shows the location of the oil drain, oil filler neck and oil level indicator.

⚠ WARNING *Hot oil can cause severe burns if spilled or splashed on skin. Keep fingers and hands clear when removing the oil drain plug, and wear protective clothing.*

1. Place a pan under the oil drain plug. Run the engine until it is warm, then shut it off.
2. Remove the oil level indicator.
3. Unscrew the oil plug and allow all of the oil to drain from the engine.

4. Install the oil plug and tighten it securely to prevent an oil leak.
5. Use a premium quality motor oil. The engine oil capacity is 1 quart (0.95 liters). See the following Recommended Engine Oil section to select the proper weight oil.
6. Pour the oil into the oil filler neck slowly. Check the oil level by inserting the oil level indicator into the filler neck. Do NOT screw the oil level indicator in. Add oil until the full mark is reached.
7. Insert the oil level indicator in the fill tube and screw it in securely to prevent oil leakage.

Used oil is harmful to the environment if it is not disposed of properly. Pour used oil into a sealed container and deliver it to the nearest recycling center or automotive service station.

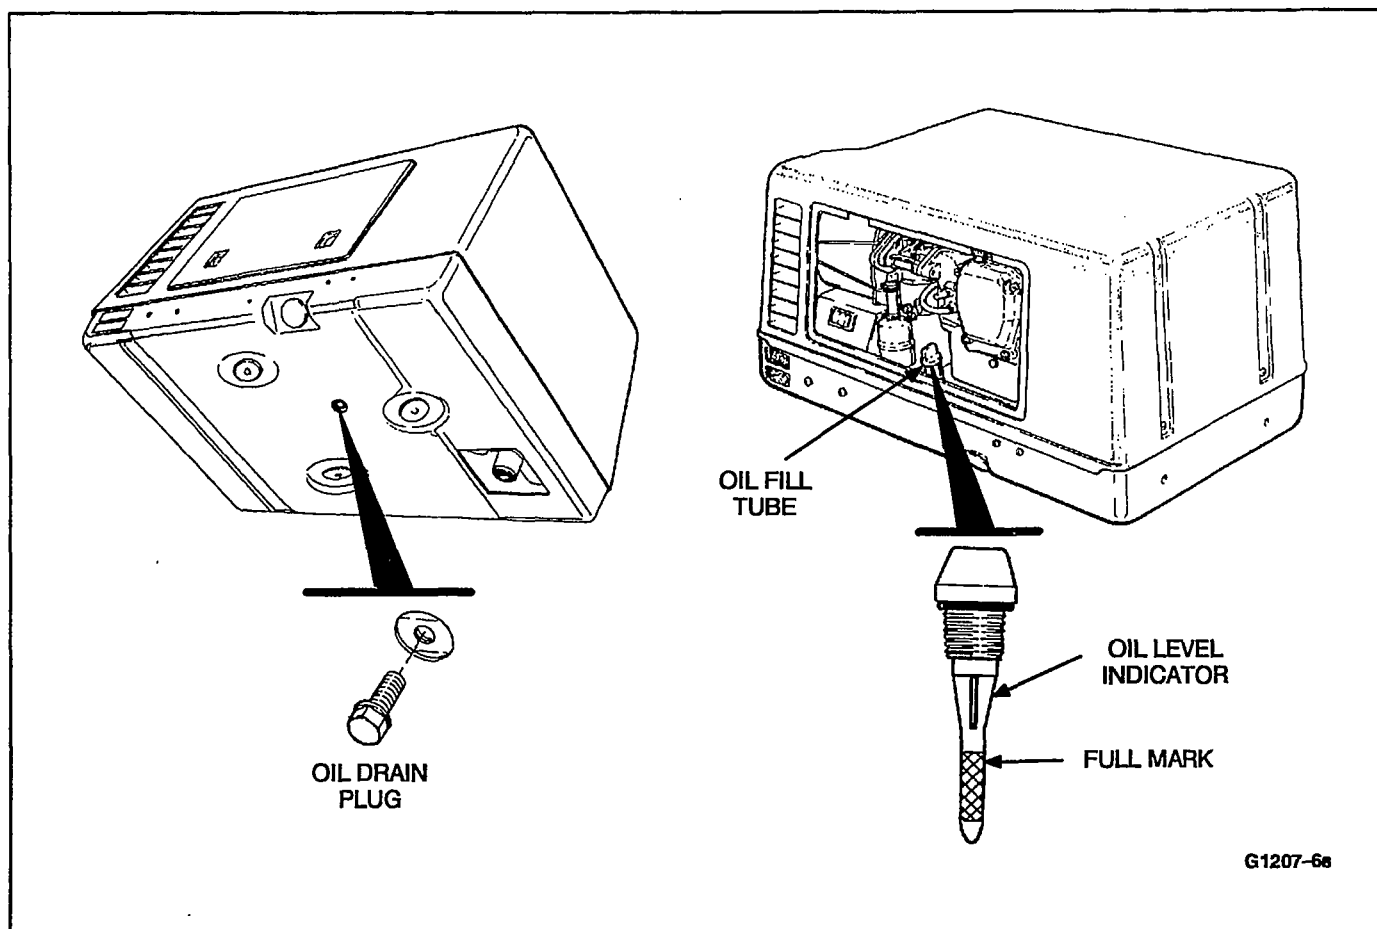

G1207-6a

FIGURE 10. OIL CHANGE

Recommended Engine Oil

Use premium quality motor oil with the API (American Petroleum Institute) designation SG on the container. Figure 11 shows the recommended oil weight for the temperature range that the genset will be operated in. Make sure the engine oil weight is correct for the expected temperature range.

The engine oil capacity is 1 quart (0.95 liters).

Oil consumption may be higher with a multigrade oil than with a single-grade oil. For this reason, single-grade oils are preferable unless wide temperature variations are anticipated.

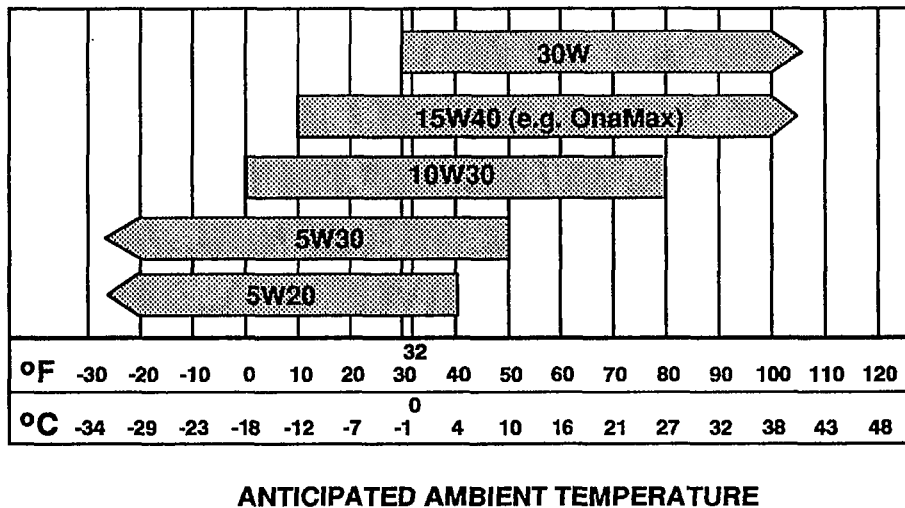


FIGURE 11. OIL VISCOSITY SELECTION Vs. AMBIENT TEMPERATURE RANGE

BATTERY CARE

Service the battery at the intervals shown in the maintenance schedule. Check the electrolyte level more frequently during hot weather.

⚠ WARNING *Batteries present the hazard of explosion that can result in severe personal injury. Do not smoke or allow any flame, spark, pilot light, arc-producing equipment or other ignition sources around the battery area. Do not disconnect battery cables while the genset is cranking or running because explosive battery gases could be ignited.*

⚠ WARNING *Battery electrolyte can cause severe eye damage and burns to the skin. Wear goggles, rubber gloves and a protective apron when working with batteries.*

1. Keep the battery case clean and dry.
2. Make certain that the battery cable connections are clean and tight. Use a terminal puller tool to remove the battery cables.
3. Identify the cable as positive (+) or negative (–) before making the battery connections. Always remove the negative (–) cable first and connect it last, to reduce the risk of arcing.
4. To remove corrosion from the battery terminals, wash the terminals with an ammonia solution or a solution consisting of 1/4 pound (about 100 grams) of baking soda in 1 quart (about 1 liter) of water. Be sure the vent plugs are tight to prevent cleaning solution from entering the cells. After cleaning, flush the outside of the battery and the surrounding areas with clean water.

5. Maintain the electrolyte level by adding distilled water. Fill each cell to the split-level marker in the battery. The water component of the electrolyte evaporates, but the sulfuric acid component remains. For this reason, add water, not electrolyte to the battery.
6. Use a battery hydrometer to check the specific gravity of the electrolyte in each battery cell (Figure 12). Charge the battery if the specific gravity measures less than 1.215. Do not overcharge the battery. Stop charging the battery when the electrolyte specific gravity reaches 1.260, at approximately 80° F (27° C).

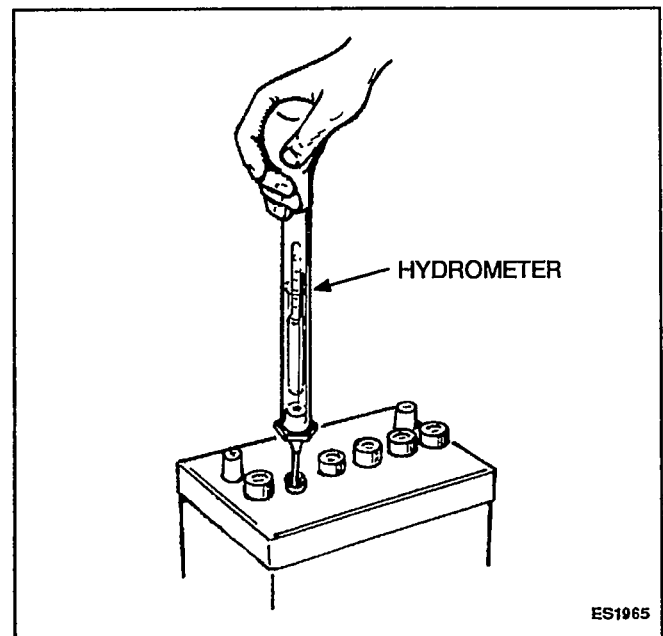


FIGURE 12. BATTERY CHECK

AIR FILTER REPLACEMENT

In dusty conditions, change the air filter more frequently to prevent equipment damage. Use a genuine Onan replacement filter only. Contact the nearest Onan dealer or distributor for replacement filters.

To change the filter, lift the filter cover out of the scroll housing and pull the filter retainer straight out. See Figure 13.

Install new filter with the open end of the filter facing the carburetor, as shown in Figure 13.

⚠ CAUTION *Incorrect replacement of service parts can result in damage to equipment. Use genuine Onan replacement air filters only.*

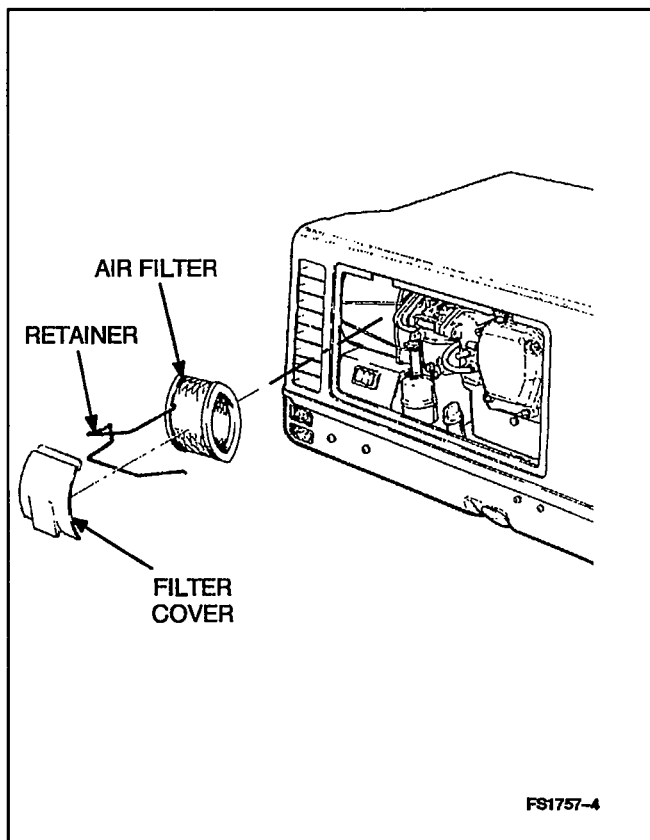


FIGURE 13. REPLACING THE AIR FILTER

SPARK PLUG

The genset has one spark plug. The plug must be in good condition for proper engine starting and performance. A spark plug with heavy combustion deposits can cause the genset to misfire, operate erratically, or stop when a load is applied.

The spark plug can be removed through the access access hole in the base pan (Figure 14). Inspect and regap the plug. Replace the spark plug if it is discolored or fouled.

- Black deposits indicate a rich mixture.
- A wet plug indicates misfiring.
- A badly or frequently fouled plug indicates the need for a major tune-up.

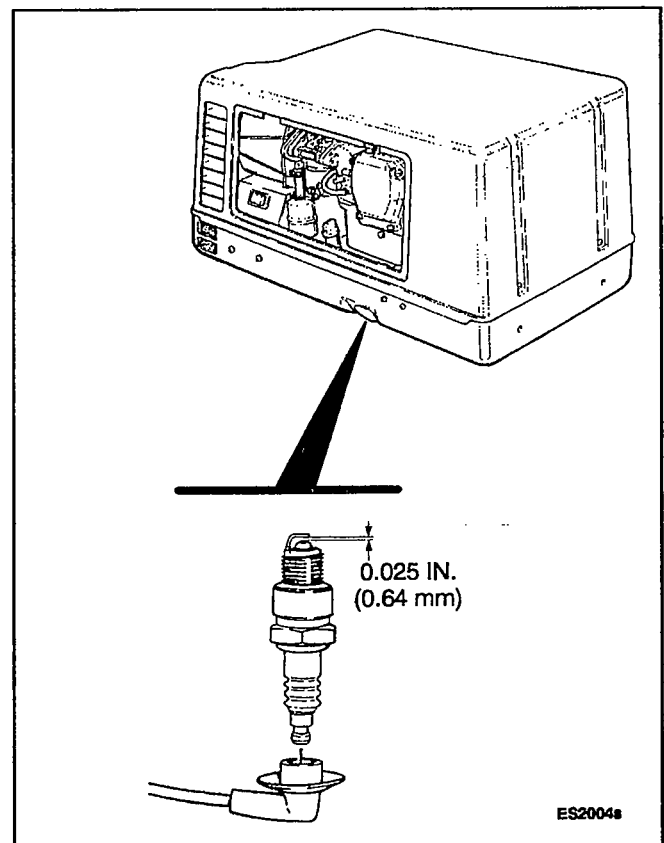


FIGURE 14. SETTING SPARK PLUG GAP

SPARK ARRESTER SERVICE

⚠ WARNING A hot exhaust system can cause severe burns. Allow the genset to cool down before servicing the muffler.

The spark arrester requires periodic cleaning for maximum genset performance and to meet U.S. Forest Service requirements.

Spark Arrester Cleaning Procedure:

1. Loosen the U-bolt clamp securing the exhaust pipe to the exhaust tube on the genset (Figure 15). Disconnect the exhaust pipe from the exhaust tube.
2. Remove the mounting screw that secures the exhaust tube to the muffler outlet tube.
3. Remove the exhaust tube and inspect the spark arrester screen inside the exhaust tube for damage and clogging. Replace it if damaged.
4. To clean, lightly tap the screen, then remove any remaining deposits with a wire brush. A commercial solvent can be used to loosen deposits (carefully follow the manufacturer's instruction and safety precautions). Allow the screen to dry before reinstalling.
5. Reinstall the exhaust tube with the mounting screw. Secure the exhaust pipe with the U-bolt clamp.

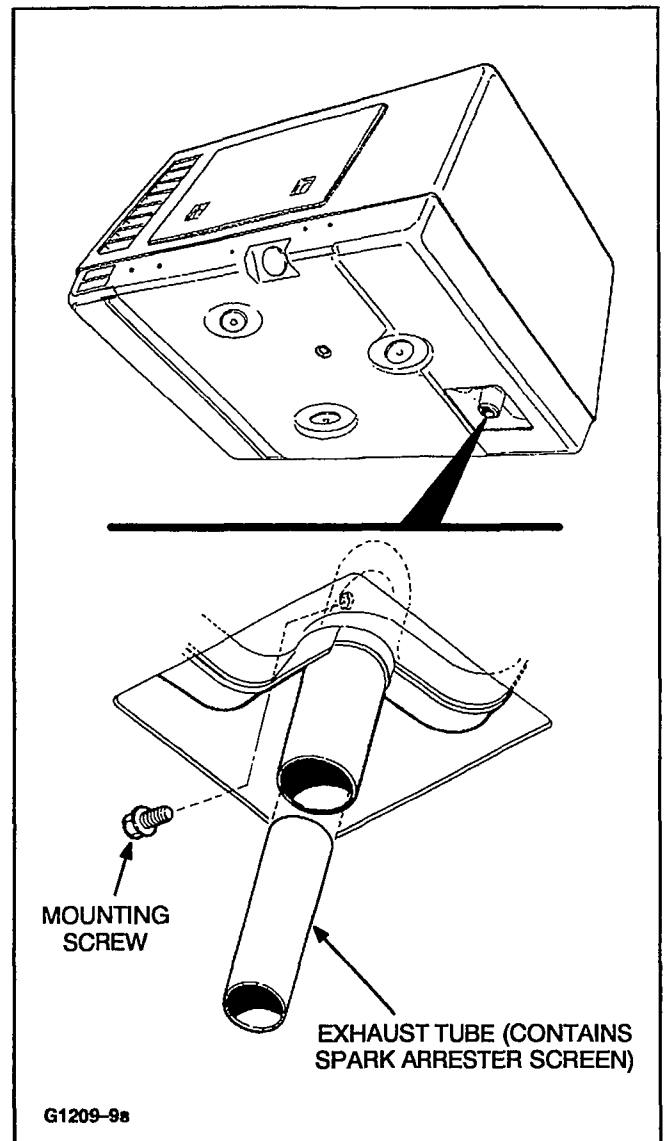


FIGURE 15. SPARK ARRESTER CLEANING

GASOLINE FUEL FILTER

Change the fuel filter at the interval recommended in the maintenance schedule, or if performance problems occur and bad fuel is suspected. Disconnect the electrical loads from the genset. Shut off the fuel supply valve (if equipped) and let the set run until it is out of fuel. Allow the genset to cool down before replacing the fuel filter. Plug fuel lines to prevent fuel and fumes from escaping. Refer to Figure 16.

⚠ WARNING *Fuel presents the hazard of fire or explosion that can cause severe personal injury or death. Do not permit any flame, spark, pilot light, lit cigarette, or other ignition source near the fuel system. Keep a type ABC fire extinguisher nearby.*

⚠ CAUTION *Incorrect replacement of service parts can result in damage to equipment. Use genuine Onan replacement fuel filters only.*

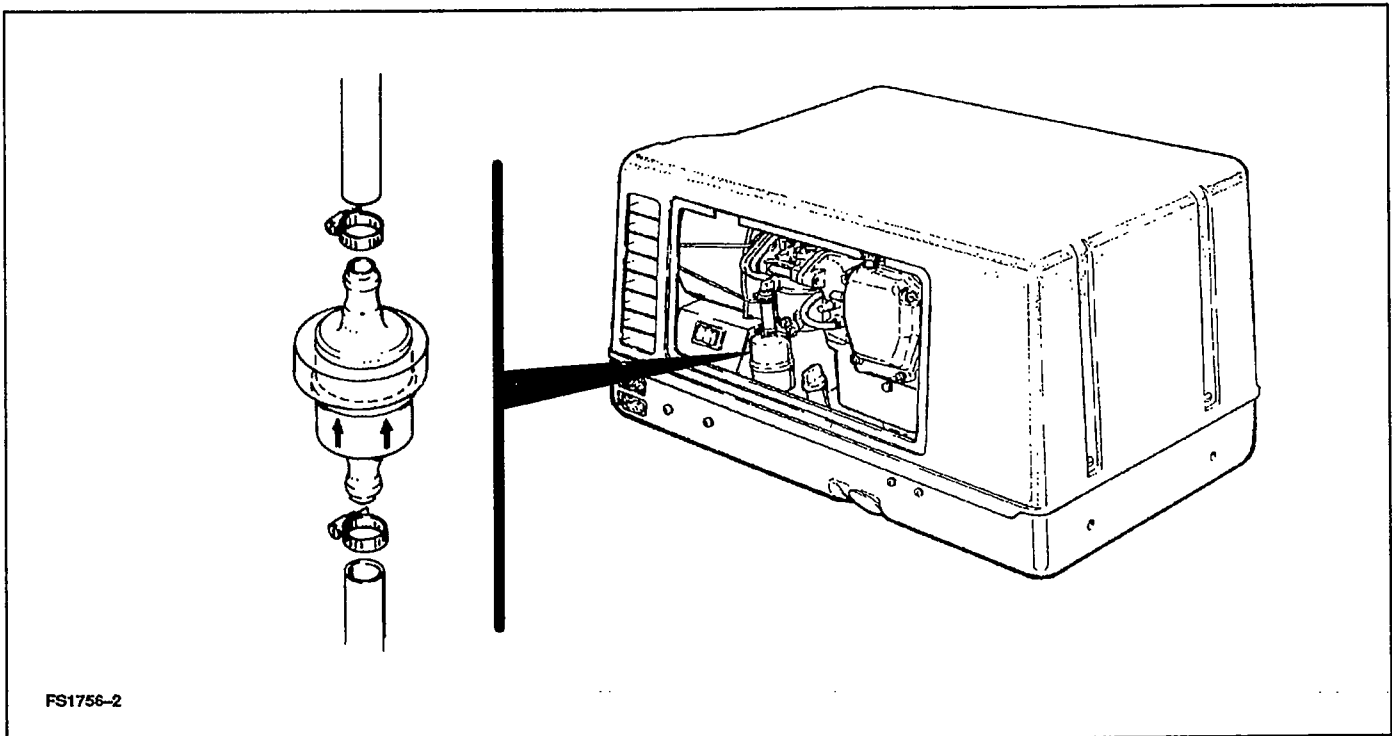


FIGURE 16. FUEL FILTER SERVICE

Generator Set Storage

- Perform this storage procedure if the genset cannot be exercised regularly and will not be in use for more than 120 days. Failure to provide out-of-service protection can result in difficult starting, rough engine operation and reduced engine life.

Generator Set Storage Procedure

1. Fill the fuel tank(s) with fresh fuel and add a fuel preservative and stabilizer, such as Ona-Fresh™, to the fuel supply. Follow the label instructions for using the fuel additive. Run the set at 50 percent load (1400 watts) for 10 minutes.

⚠ WARNING *Fuel additives can cause a risk of personal injury or death. Fuel additives are caustic and flammable, read and carefully follow manufacturer's instructions.*

2. Disconnect the load, switch the AC breaker OFF (Figure 3-1) and stop the genset.

⚠ WARNING *Fuel presents the hazard of fire or explosion that can cause severe personal injury or death. Do not permit any flame, spark, pilot light, lit cigarette, or other ignition source near the fuel system. Keep a type ABC fire extinguisher nearby.*

3. Remove the air filter. Restart the genset at the set mounted control. Spray a fogger, such as OnaGard™, into the carburetor intake. Follow the label instructions for using the fogger. Stop the genset and close the fuel supply valve (if equipped).
4. Replace the air filter if it is dirty. Reassemble the air filter and housing to the genset.
5. Drain the crankcase oil when the genset has cooled (see Oil Change in the *Maintenance Procedures* section). Refill the crankcase and attach a tag indicating oil weight.

OnaFresh and OnaGard are trademarks of Onan Corporation.

⚠ WARNING *Hot oil can cause severe burns if spilled or splashed on skin. Wear protective clothing. Keep fingers and hands clear when removing oil drain plug.*

6. Disconnect the cables from the starting battery. Remove the negative (–) cable first to reduce the risk of arcing.

Returning the Generator Set to Operation

1. Inspect the genset (see the *Maintenance Procedures* section).
2. Check the engine oil level. Check the oil tag on the genset to verify that the oil weight is still correct for the existing temperature range.
3. Clean and check the battery. Measure the specific gravity and verify that the electrolyte level is filled up to the split ring. Reconnect the battery cables. Connect the negative (–) cable last to reduce the risk of arcing.

⚠ WARNING *Battery electrolyte can cause severe eye damage and burns to the skin. Wear goggles, rubber gloves, and a protective apron when working with batteries.*

⚠ WARNING *Batteries present the hazard of explosion that can result in severe personal injury. Do not smoke or allow any spark, flame, pilot light, arc-producing equipment or other ignition sources around the battery area.*

4. Open the fuel supply valve (if equipped) or unplug and reconnect the fuel line.
5. Start the genset from the set mounted control. Initial startup may be slow, due to oil in the cylinder. Smoke and rough operation will occur until the oil in the cylinder is burned off. If the engine does not start, clean or replace the spark plug.

Troubleshooting

The following chart is a basic troubleshooting guide. If these recommendations fail to resolve the problem, contact an authorized Onan service center.

⚠WARNING *Many troubleshooting procedures present hazards that can result in severe personal injury or death. Only qualified service personnel with knowledge of fuels, electricity, and machinery hazards should perform service procedures. Review safety precautions on pages II and III.*

⚠WARNING *A hot genset can cause severe burns. Always allow the genset to cool down before performing any maintenance or service procedures.*

TABLE 3. TROUBLESHOOTING GUIDE

Problem	Probable Cause	Solution
FAILS TO CRANK	<ol style="list-style-type: none"> 1. Low battery. 2. Poor battery connection. 3. Blown fuse. 	<ol style="list-style-type: none"> 1. Check battery electrolyte level. 2. Clean and tighten all battery cable connections. 3. Replace fuse on control panel.
CRANKS SLOWLY	<ol style="list-style-type: none"> 1. Low battery. 2. Bad battery connection. 3. Oil is too heavy. 4. Electrical load connected. 	<ol style="list-style-type: none"> 1. Check battery electrolyte level. 2. Clean and tighten all battery and cable connections. 3. Replace with lighter oil. 4. Disconnect load while starting.
CRANKS BUT WON'T START	<ol style="list-style-type: none"> 1. Fuel below genset pickup level in tank. 2. Fuel supply shutoff valve closed. 3. Carbon deposits on spark plug. 4. Low oil level. 	<ol style="list-style-type: none"> 1. Add fuel. 2. Fully open fuel supply valve. 3. Remove spark plug and clean. 4. Add oil if necessary.
EXHAUSTING BLACK SMOKE	<ol style="list-style-type: none"> 1. Rich fuel mixture. 2. Dirty air filter. 3. Choke stuck or out of adjustment. 	<ol style="list-style-type: none"> 1. Turn main fuel adjustment in (cw) 1/8 turn (location of adjustment is shown in Figure 9, page 12). 2. Replace air filter. 3. Contact an Onan service center.
UNIT RUNS THEN STOPS OR STOPS WHEN DRIVING AROUND A CORNER	<ol style="list-style-type: none"> 1. Low on fuel. 2. Low oil level. 3. Excess oil. 	<ol style="list-style-type: none"> 1. Refill fuel tank. 2. Add oil if necessary. 3. Reduce engine oil level.
UNIT RUNS THEN SURGES	<ol style="list-style-type: none"> 1. Loose or defective spark plug lead. 2. Ignition coil, wiring, or control components defective. 3. Faulty spark plug. 4. Governor out of adjustment. 5. Combustion air preheat malfunction. 	<ol style="list-style-type: none"> 1. Check security of spark plug lead at spark plug and ignition coil. 2. Contact an Onan service center. 3. Remove and clean or replace 4. Contact an Onan service center. 5. Check the summer/winter preheat position (Figure 8, Page 11)
CIRCUIT BREAKER TRIPS (GENSET CONTINUES TO OPERATE)	<ol style="list-style-type: none"> 1. Overloaded circuit. 2. Hot weather increasing load. 	<ol style="list-style-type: none"> 1. Remove a portion of the load. 2. Air conditioners and other appliances consume more power in hot weather, remove some of the load.

How to Obtain Service

Locating Service Assistance

When your generator set needs parts or service, contact the nearest authorized dealer or distributor. Onan Parts and Service representatives are factory-trained to handle all of your service needs. Locate the nearest authorized distributor as follows:

1. Check the North American Sales and Service Directory (F-118) supplied with your Onan RV genset. This directory lists authorized distributors who will assist you in locating the nearest authorized dealer.

-OR-

2. Consult the Yellow Pages. Typically, our distributors are listed under:

GENERATORS-ELECTRIC,
ENGINES-GASOLINE OR DIESEL, OR
RECREATIONAL VEHICLES-EQUIPMENT,
PARTS AND SERVICE.

-OR-

3. For the name of your local Cummins/Onan or Onan-only distributor in the United States or Canada, call 1-800-888-ONAN (this automated service utilizes touch-tone phones only). By entering your area code and the first three digits of your local telephone number, you will receive the name and telephone number of the nearest distributor.

If you need additional assistance, please call Onan Corporation, 1-612-574-5000, 7:30 AM to 4:00 PM, Central Standard Time, Monday through Friday.

You can obtain an individual directory of authorized RV servicing dealers by calling Onan at 1-800-888-ONAN or by writing to Onan ("Attn: Marketing") at the address listed on the rear cover. Please ask for: RV Sales and Service Directory F-919.

Scheduling Service

1. Before calling for service, have the following information available:

The complete Onan product model number and serial number (see Model Identification on page 1)

Date of purchase

Nature of the problem

2. Contact the authorized dealer or distributor nearest you to explain the problem and make an appointment for service.
3. If you have difficulty in arranging for service or resolving a problem, please contact the dealer coordinator or service manager at the nearest Cummins/Onan distributor for assistance.

⚠ WARNING

INCORRECT SERVICE OR PARTS REPLACEMENT CAN RESULT IN SEVERE PERSONAL INJURY, DEATH, AND/OR EQUIPMENT DAMAGE. SERVICE PERSONNEL MUST BE QUALIFIED TO PERFORM ELECTRICAL AND/OR MECHANICAL SERVICE.

Specifications

GASOLINE MODELS	2.0 KV	2.8 KV
GENERATOR DETAILS		
Type	Onan, Revolving Field, 2-Pole	Onan, Revolving Field, 2-Pole
Frequency (Hertz)	50	60
Power (Watts)	2000	2800
Voltage	220	120
Current (Amperes)	9.1	23.3
ENGINE DETAILS		
Engine	Onan GH-200	Onan GH-200
Fuel	Gasoline	Gasoline
Engine Oil Capacity	1 qt (0.95 L)	1 qt (0.95 L)
Battery Requirements:		
Battery Size	12-Volt	12-Volt
Cold Cranking Amps	360	360
Spark Plug Gap	0.025 in. (0.64 mm)	0.025 in. (0.64 mm)
Average Fuel Consumption:		
No Load	0.2 gph (0.8 L/h)	0.2 gph (0.8 L/h)
Half Load	0.23 gph (0.09 L/h)	0.3 gph (1.1 L/h)
Full Load	0.4 gph (1.5 L/h)	0.43 gph (1.6 L/h)

LPG MODELS	2.0 KV	2.5 KV
GENERATOR DETAILS		
Type	Onan, Revolving Field, 2-Pole	Onan, Revolving Field, 2-Pole
Frequency (Hertz)	50	60
Power (Watts)	2000	2500
Voltage	220	120
Current (Amperes)	9.1	20.8
ENGINE DETAILS		
Engine	Onan GH-200	Onan GH-200
Fuel	LPG	LPG
Engine Oil Capacity	1 qt (0.95 L)	1 qt (0.95 L)
Battery Requirements:		
Battery Size	12-Volt	12-Volt
Cold Cranking Amps	360	360
Spark Plug Gap	0.025 in. (0.64 mm)	0.025 in. (0.64 mm)
Average Fuel Consumption:		
No Load	0.2 gph (0.8 L/h)	0.2 gph (0.8 L/h)
Half Load	0.3 gph (1.14 L/h)	0.34 gph (1.29 L/h)
Full Load	0.45 gph (1.7 L/h)	0.55 gph (2.08 L/h)

The 60 Hertz models are listed by C.S.A. and the U.S. Testing Company.

Maintenance Record

Keep a record of all periodic and unscheduled maintenance. Record the service date and the number of operating hours from the optional hour meter (if equipped).

Refer to the Maintenance Schedule on page 13 for the time interval between maintenance procedures. Record the name and address of your Onan service center and keep all of your service receipts.

[illegible]

Record the name, address, and phone number of your authorized Onan service center.

Notes

Notes

Notes



Onan Corporation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
1-800-888-ONAN
612-574-5000 International Use
Telex: 275477
Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation