


Onan

GenSet

Standard Repair Times

BGD, NHD

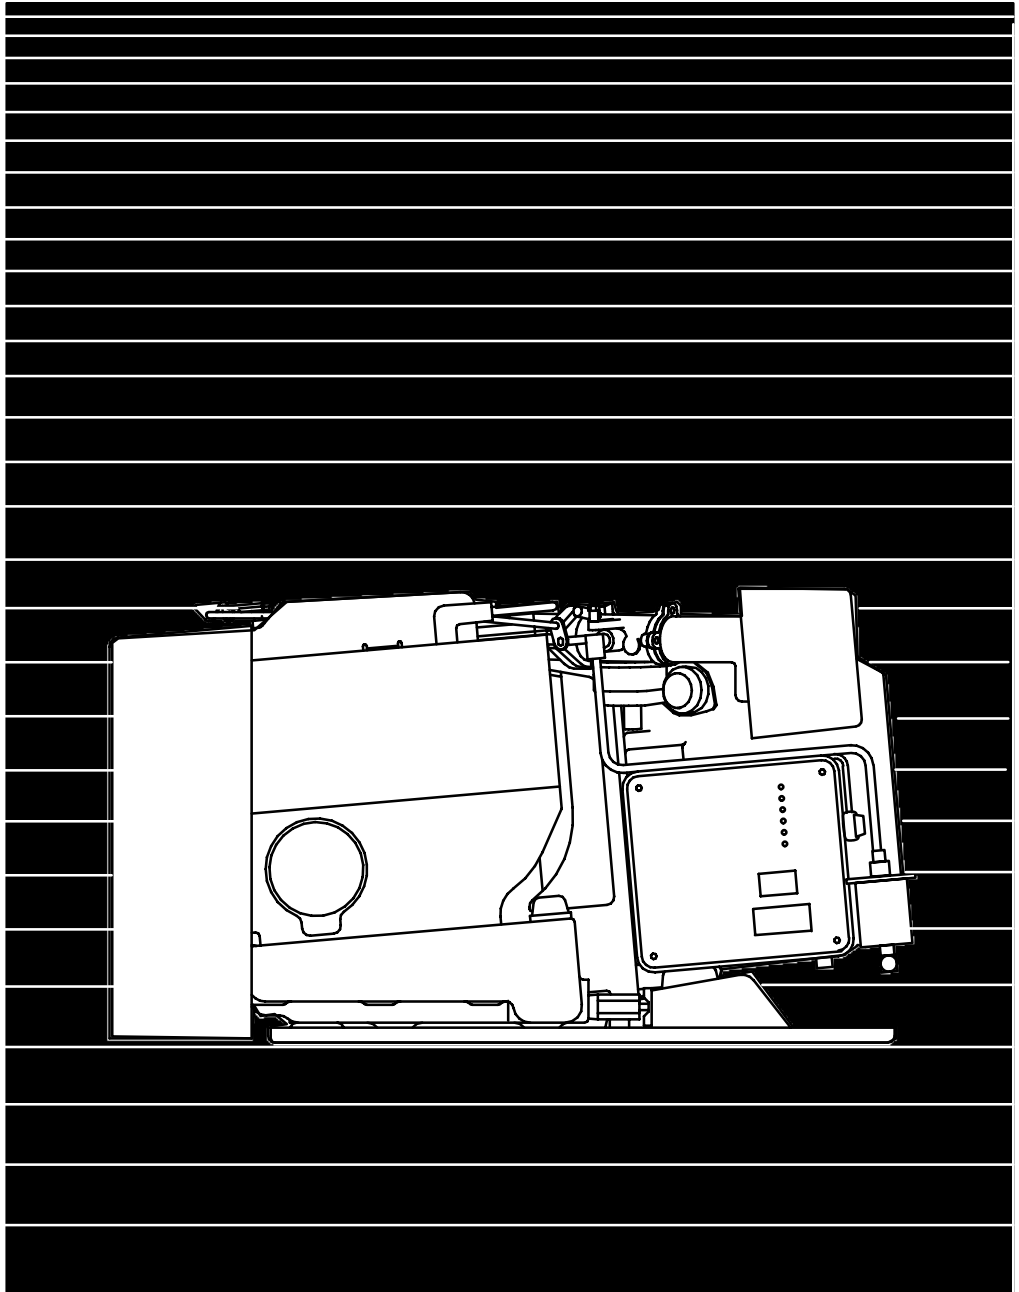

Printed in U.S.A. 2-97

900-0607

Table of Contents

	Page
Foreword	i
Standard Repair Times	ii
How Standard Repair Times are Developed	v
Productive Repair Time	vi
Time Allowances	vi
Group 00 – Complete Engine	1
Administrative Time	2
Engine	2
Generator Set, Mobile	3
Troubleshoot	3
Group 01 – Cylinder Block	7
Block, Short	8
Connecting Rod	8
Crankshaft	9
Crankshaft Seal, Front	10
Crankshaft Seal, Rear	10
Gear Cover	10
Gear Cover Gasket	11
Gear, Camshaft	11
Gear, Crankshaft	11
Piston	12
Piston Rings	12
Group 02 – Cylinder Head	15
Cylinder Head	16
Cylinder Head Gasket	16
Valve Guides	16
Valves	17
Group 03 – Rocker Levers	19
Breather Valve	20
Valves	20
Group 04 – Cam Follower	21
Valve Tappets	22
Group 05 – Fuel System	23
Carburetor	24
Choke, Carburetor	25
Fuel Pump, Electrical	25

Group 07 – Lubricating Oil System	27
Lubricating Oil And Filter	28
Oil Base	28
Oil By-Pass	28
Oil Filter, Full Flow	28
Oil Pickup Cup And Tube	29
Oil Pump	29
Group 10 – Intake Air System	31
Air Cleaner Element	32
Intake Manifold	32
Group 11 – Exhaust System	33
Exhaust Manifold	34
Exhaust Manifold Gaskets	34
Group 13 – Electrical Equipment	35
Ignition Coil	36
Ignition Module/Trigger Ring	36
Spark Plug	36
Spark Plug Wires	36
Starter Motor	36
Stator, Battery Charging	37
Voltage Regulator DC	37
Group 8 – Mounting Adaptations	39
Flywheel	40
Group 9 – Miscellaneous	41
Muffler	42
Group 22 – Generator	43
Brush Block	44
Brushes	44
Generator Bearing	44
Main Rotor	45
Main Stator	45
Group 23 – Generator Control	47
AC Circuit Breaker	48
AC Voltage Regulator	48
Hourmeter	48
PCB Control Board	48
Relay	48
Start Stop Switch	48

Foreword

The Standard Repair Times (SRT) in this manual represent the time required to perform service repairs on Onan Engine and Generator Sets. These times are representative of an average mechanic in a typical dealer or distributorship using the prescribed hand tools, equipment, and all available service tools and equipment required to perform quality repairs and do all necessary testing.

The use of this manual will:

- Encourage uniform terminology throughout the Cummins/Onan organization
- Standardize Repair Order job description write-ups
- Provide shop managers with a guide for establishing flat rate quotations
- Serve as a basis for Onan Corporation, Inc. to establish its warranty labor obligations

Reporting of errors, omissions, and recommendations for improving this publication is encouraged. Send your suggestions or comments to:

Onan Corporation

1400 73rd Avenue NE
Minneapolis, MN 55432

Attn: Service Department

General Information

Standard Repair Times (SRT) are lists of work tasks (procedures) and the time required to perform those tasks. The procedures list the work tasks required to be sure an engine or generator set is ready to return to service at the lowest possible cost to the customer. A Standard Repair Time is equitable when the repair described in the procedure can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair on the same model, in the same application at least once. Those SRT that a particular mechanic performs more frequently will often require less time than the standard. Conversely, those SRT that a particular mechanic does not frequently perform may require more time than the standard. Several of the procedures may be required to accurately depict all the work actually performed to return a particular engine or generator set to service because the repair of a particular engine or generator set is often unique in light of the complaint, failure model, progressive damage, condition of the parts and customer desires. To allow for differences in the time required to perform a repair because of interference by the application, a Service Accessibility Code Scheme has been created.

Types of Standard Repair Times

There are three types of SRT. Most often at least one of each type is necessary to accurately depict the repair. The three types are:

- Administrative
- Troubleshooting
- Repair

Administrative SRT

Administrative SRT are intended to provide time to move the vehicle engine or generator set to and from the work area, fill out the repair order, record SRT used, etc. It is intended that an administrative SRT be used only once for each repair order. There are two administrative SRT found in this manual in Group 00 – Complete Engine. One of the administrative SRT is to be used when the repair takes place in a shop operated by the repairing location. The other administrative SRT is to be used when the repair takes place away from the shop operated by the repairing location (road repairs). The time for the road repair administrative SRT is greater to allow for loading and unloading tools, equipment, parts, etc. from the service truck.

Troubleshooting SRT

Troubleshooting SRT are found only in Group 00 – Complete Engine. These SRT are intended to be used when diagnosing and analyzing engine, generator set or component failures. Troubleshooting SRT are broken down in to logical numbered steps. The time for each step is cumulative with successive steps, including the time for the appropriate preceding step(s). Some troubleshooting SRT contain time to remove and install components to perform the check(s) listed. Most do not. If a troubleshooting SRT does **NOT** include required component removal and installation, it is intended that the SRT for the removal and installation of that component be in addition to the troubleshooting SRT. Refer to the following example:

Procedure Number	Procedure Description	SRT Hours
00-055	Troubleshoot – Lubricating Oil Consumption Excessive Includes:	
-01	- Check: – Oil consumption report – For external oil leaks – For overfilled oil pan – Oil specifications – For fuel contamination – Oil change interval – For engine oil in torque converter	0.4
-02	- Perform checks in Step 01 - Check: – Oil temperature – Air compressor oil consumption – Turbocharger seal – Crankcase blowby	1.0

In the above example, the time required to perform the checks in Step 01 is 0.4 hour. If the problem is not located while performing the checks in Step 01, an additional 0.6 hour is allowed to perform the checks in Step 02 for a total of 1.0 hour. The total troubleshooting time appropriate is the time indicated in the column directly in line with the final step required to locate the problem. The step required to locate the problem may or may not be the last step shown in the troubleshooting SRT. Each step contains information as to which steps are included.

Repair SRT

Repair SRT make up the majority of this manual. These are the SRT that cover the actual repair work. The time shown on the same line as the SRT code and title is the total time for that SRT.

Standard Repair Combined Times

Standard Repair Combined Times (SRCT) provide for the combining of the three types of SRT under one code so that, if appropriate, the user can identify the work performed with fewer SRT codes.

Manual Organization

SRT Coding System

Each SRT has a unique code so that SRT data can be computerized. The numbering system used is common to all the SRT manuals for all Onan engines and generator sets. The portion of the system shown in the manual contains three segments:

“Group Number” XX	“Procedure Number” XXX	“Step Number” XX
Group Numbers		Procedure Numbers
Group numbers (the first two digits in the SRT code) are used to identify major engine components. The following list explains the group numbers used in SRT manuals:		The procedure number consists of three digits. The first digit provides guidance as to the category of the repair. The second and third digits, shown as XX in the following list, are sequential numbers or alpha within the category.

Group Number	Contents of Group	Specific Repair Number	Description of Category
00	Complete Engine or Generator Set		
01	Cylinder Block	0XX	Troubleshooting
02	Cylinder Head		ONLY in Group 00
03	Rocker Levers	1XX	Remove and Install
04	Cam Followers/Tappets	2XX	Rebuild
05	Fuel System	3XX	Replace
06	Injectors and Fuel Lines	4XX	Clean and Visually Check or Inspect for Reuse
07	Lubricating Oil System		
08	Cooling System	5XX	Machine/Ream/Dowel/ Sleeve
09	Drive Units		Modify/Cut/Lap
10	Intake Air System		Adjust/Calibrate
11	Exhaust System	6XX	
12	Air (Compressed) System		
13	Electrical Equipment	7XX	Test
14	Engine or Generator Set Testing		
15	Instruments and Controls		
16	Mounting Adaptations		
17	Miscellaneous	9XX	(SRCT in Group 99) General/Miscellaneous
22	Hardware		
25	Generator Components		
26	Generator Control Components		
27	Transfer Switches		
99	SRCT		

Step Numbers

While all SRT codes will contain a Group and Procedure number, only those procedures that are broken down into steps have step numbers. The step numbers are sequential within a SRT.

General

There is an alphabetic index in the back of the manual. Within a particular group the procedures are arranged in alphabetical order by title, thus are not in code numeric order.

There is also a numerical index in which the procedures are arranged in numeric order and not in alphabetical order.

Within a procedure, the user will note that some lines are indented. This indentation is intended to indicate that the sub-tasks are part of the task under which they are indented.

How Standard Repair Times are Developed

Cummins/Onan SRT Objectives and Philosophy

The objective of Cummins/Onan SRT program is to provide credible and equitable labor time standards and procedures to the worldwide Cummins/Onan service network.

A SRT is credible when the procedure accurately depicts the work that **must** be performed to accomplish a quality engine or generator set repair.

A SRT is equitable when it can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair at least once.

To establish credible and equitable SRT with sufficient flexibility to account for differences in complaints, failures, progressive damage, customer desires, etc., SRT have been structured using the following considerations:

- What must ALWAYS be done to the engine or generator set to perform the work.
- What MAY have to be done to the engine or generator set parts dependent on their condition.
- What MAY have to be removed to access the engine or generator set.
- How difficult it is for the mechanic to reach the engine or generator set even after interfering application hardware has been removed.

While the most frequent use of SRT information is the Onan Warranty System, it is Onan's intent that the SRT be applicable to repairs conducted for any customer.

As SRT are developed, it is assumed:

- That all the required tools, equipment, and supplies are available in sufficient quantity and in operating condition.
- That required Onan Service Manuals are available to the mechanic are being used.
- That the correct parts are available when the mechanic needs them.

How Times are Developed

SRT are developed from time studies conducted in the field and Onan Technical Service Personnel. Technical Service Representatives create a comprehensive list of all the work elements or tasks required to perform specific repairs. Field studies are analyzed to find these same work elements or tasks and determine the time required for each. The time for work elements or tasks that are not included in the field time studies is determined by conducting free engine or generator set studies or by estimation using similar elements from existing time studies. A time is determined for each element of the procedure. The time for all elements is then totaled to establish the total productive repair time.

Productive Repair Time

Productive Repair Time is described as the actual time involved doing productive work, such as: removing, disassembling, cleaning, inspecting, machining, installing and adjusting parts or components. In addition, the following operations are considered to be productive work for inclusion in a SRT:

- Clock on and off the job or repair order, including shift changes.
- Move vehicle, engine or generator set to and from the work area.
- Move tool box to the work area.
- Obtain tools from tool box, wipe and put away after use.
- Refer to service manuals.
- Obtain, unpack and clean replacement parts as necessary.
- Package and mark parts removed as necessary for warranty or local consumer laws.
- Operate engine or generator set to check for proper operation.
- Clean work area at completion of shift or repair.
- Properly dispose of used engine fluids such as oil and coolant.
- Write summary of work performed at completion of repair or work shift.
- Help from another mechanic (time for one man to complete the task times two).

Time Allowances

After the total productive time is established, an additional allowance of 15 percent is added to cover the following:

- Personal time of 5 percent for:
 - Scheduled rest breaks
 - Personal phone calls
 - Restroom breaks
 - Shift changes
- Supplementary time of 10 percent to cover normal work interruptions:

- Seized or hard turning fasteners
- Extra time for extremely dirty equipment
- Excessive waiting time for replacement parts
- Brief assistance to other mechanics (less than 5 minutes)
- Routine maintenance (not repair) of shop equipment
- Obtain consumable supplies
- Technical consultation with shop supervision

The following is an example of how the allowances are calculated to establish the SRT for a procedure where the productive time is 208.7 minute (3.48 hr):

Allowance Type	Allowance Percent (%)	Time (Minutes)
Productive Repair Time	100	208.7
Personal	5	10.4
Supplementary	10	20.9
TOTAL	115	240.0

Published Standard Repair Time = 4.0 hours

Work Not Included in A SRT

For almost every complete repair there will be one SRT that contains most of the work performed. This is sometimes called a base repair. For example, repairing an engine for high oil consumption often requires use of the SRT title Piston and Rings – Remove and Install. This SRT contains most of the time appropriate for the repair, so it is the base repair. There can be work required that is **not** part of this base SRT. This does not mean that the other work is non-productive, rather that other work is **NOT** required EVERY TIME the pistons and rings are removed and installed. More often than not, this other work is covered by another SRT. If the other work is **not** included in the base repair or in another SRT, the work is probably still productive work required for that particular repair.

Non-Productive Work

Analysis of past SRT time studies reveals the following general types of work that were not considered to be productive:

- Waiting on camshaft gears to heat and cool
- Waiting on another mechanic to finish using special tools or shop equipment
- Hunting for misplaced parts
- Repairing shop equipment
- Sorting through capscrews, to find the correct length, that were all thrown together into one basket during disassembly
- Repairing customer supplied components
- Salvaging parts or tools that have been damaged from improper handling or lack of correct tools

- Clearing off tables, parts carts, parts racks etc. left dirty or loaded with parts from previous repairs on other equipment
- Rework caused by installation of incorrect parts or incorrect installation of correct parts
- Fabrication or modification of special tools or equipment because the correct tools or equipment are not available
- Visiting during non–break time
- Conducting business with tool vendors
- Waiting on other mechanics to provide required help
- Waiting on parts clerk to fill orders for other mechanics
- Unnecessary inspection of new parts
- “Hot Setting” valves and injectors when not required
- Repairs to application hardware
- Rework resulting from failure to follow recommended service practices
- Performing work that is **not** part of the repair order or helping another mechanic

Service Accessibility Codes

Service repairs are affected by engine or generator set accessibility. The more difficult the accessibility, the longer it will take to complete the tasks given in the SRT procedure. Accessibility for a particular application is determined by reviewing the application and rating the degree of difficulty for performing the 20 most common repairs. Four codes (A, B, C and D) are used to classify the degree of difficulty for the service accessibility of a specific model or type of equipment. An “A” accessibility code indicates the engine or generator set is easily accessible. A “D” code indicates the application does not make the engine or generator set as easily accessible, thus the highest degree of difficulty relative to SRT standards. A “S” code is included for special or specific repairs not covered in the other four classifications. The “R” code indicates the repair is completed with the component, engine or generator set removed from the application.

“A” Accessibility Rating

1. Engine or generator sets mounted in equipment where 90 percent of the work can be performed while standing on the ground, shop floor, or flat work deck.
2. Engine or generator set can be accessed without removing any doors or panels.
3. Interfering application hardware can all be removed.
4. Clearance is sufficient for hands, wrenches, and drain and fill operations, making visual checks and room to stand and work.

“B” Accessibility Rating

1. Engine or generator set mounted in equipment where 70 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine can be gained by removing access panels or doors.

3. On 80 percent of the operations, interfering application hardware can be removed.
4. On 80 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“C” Accessibility Rating

1. Engine or generator set mounted in equipment where 50 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set can be gained by removing the hood, structural members (bolted in) or sheet metal panels.
3. On 60 percent of the operations, interfering application hardware can be removed.
4. On 60 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“D” Accessibility Rating

1. Engine or generator set mounted in equipment where 25 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set is limited due to interference from permanently mounted structural members, sheet metal or crossmembers.
3. On 40 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and limited room to stand and work.

Standard Repair Combined Times (SRCT)

SRCT are the combination of some of the SRT in the manual within a distinctive code. These SRCT are based on field input of SRT that are most frequently used in combination to describe the most common field repairs on this engine.

Use of SRCT can reduce the amount of time required to determine the labor standard for a specific complete engine or generator set repair. The use of SRCT will also reduce the number of codes required when completing a warranty claim or customer invoice.

SRCT are intended to supplement, NOT replace, SRT. One SRCT code can be used instead of several SRT codes.

It is intended that other appropriate SRT can be used to supplement a SRCT as long as the work does not overlap. If there is overlapping work, do **not** use a SRCT.

How To Use This Manual

1. Determine the actual work performed:

- Obtain this information from the work description on the repair order.

2. Determine the Accessibility Code:

- Determine the application from the repair order.
- Look in the “Accessibility Code Listing” on page to determine the accessibility code for the application involved in the repair. If the application is not shown, assume the accessibility code is “B”.
- Write down the code.

3. Determine applicable SRCT:

- Find the Contents Page for Group 99 – Standard Repair Combined Times.
- Compare the titles to the work performed to determine if a SRCT will apply.
- If there is a SRCT that seems to apply, find that SRCT and compare the SRT within the SRCT to the work performed. If you are not sure of the work included in the SRT, read that SRT and compare the procedure listing with the work performed.
- If a SRCT applies to all or part of the work performed, find the column that contains the same accessibility code determined in Step 2 above.
- Move down the column to the line containing the SRCT code and title and pick out the appropriate time.
- If all the work in the SRCT is performed and additional steps were taken, use the SRCT and continue to Step 4 to cover the additional work.
- If there is NOT an appropriate SRCT, move to Step 4.

4. Determine the appropriate repair SRT:

- Use the information from the repair order to identify the parts involved.
- Use the contents page at the front of the manual or the alphabetical index in the back of the manual to determine the appropriate SRT group for the parts and/or work involved.
- Find the contents page for that group.
- Read the contents page for procedure titles that seem to correspond to the work performed.

- Find the SRT within the group.
- Read the SRT procedure listing to determine the work included.
- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- Repeat the steps in this paragraph until you have determined a SRT for all the work performed.

5. Determine the appropriate troubleshooting SRT:

- Read the repair order to determine what troubleshooting work was performed.
- Find the contents page for Group 00.
- Read the contents page for procedure to determine the work included in each step.
- If the work performed and the work included in the troubleshooting SRT are the same, all or in part, determine and record the time of the SRT step. Remember that troubleshooting SRT are cumulative.

6. Determine the appropriate miscellaneous SRT:

- Read the repair order to determine if any application hardware was removed and installed in order to access the engine or generator set.
- Find the contents page for Group 17.
- Read the contents page for procedure titles that seem to correspond to the work performed.
- Find the SRT within the group.
- Read the SRT procedure to determine the work included in the SRT.
- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- If the work required to application hardware is not given in the SRT manual, determine the time for ONLY this work from the repair order. Record the time for possible use as “99–999” or “Non–SRT Time”.

7. Determine the appropriate administrative SRT:

- Both of the administrative SRT are shown at the beginning of Group 00.
- Determine the appropriate SRT.
- Record the time.

8. Determine the total appropriate SRT time:

- Check to be sure that there is no duplication of tasks within the SRT procedures selected. If there is work duplicated by some of those selected, use other information contained in the manual to reduce the time of one of the SRT accordingly. If the information is not available, make an estimate.
- Total all the times obtained during performance of Steps 2 through 7.

Standard Repair Times Review Procedure

Onan Corporation makes every effort to be sure the SRT published in this manual are credible and equitable. It will be necessary to review the published times when one or more of the following changes occur:

- Design changes to special service tools or equipment required to perform the repair
- Changes to the repair procedure

A formal SRT review procedure is available for any Cummins/Onan Authorized Repair Location that believes the SRT shown in this manual are incorrect.

To be sure prompt attention and an accurate appraisal is given to your request, the following guidelines must be met:

1. Be sure the technician has followed all the procedures and used all the service tools referred to in the appropriate service manuals.
2. Be sure a journeyman technician performed the repair, one who has completed the repair a sufficient number of times to become familiar with the procedure.
3. Be sure all the SRT, including supplemental SRT, appropriate for the repair are being used.
4. Include as much detail as possible about the specific repair.

NOTE: It is **NOT** the intent of this procedure to provide a forum for appealing or disputing the amount of time or the SRT judged appropriate on a particular warranty claim. Communication of this sort **must** follow the processes shown in the Onan Warranty Administration Manual.

5. Provide photographs of the installation.
6. Provide copies of all repair orders applicable to the SRT involved, the technicians time cards, and any other information related to the repair that will aid in the review process.
7. Be sure to provide the correct name of the repairing location, a phone number, and point of contact.

Company Action

Upon receipt of the request for an SRT review, the following action will be taken:

1. The person signing the request will be contacted to acknowledge the receipt of the request.
2. All the information provided will be analyzed and compared with the history files of the specific operation.
3. All information will be analyzed to determine if an error has been made in the procedure, the operations description, or the published repair time.
4. If it is determined the published repair time is incorrect, additional studies/analysis will be performed to establish the correct time. The requester will be notified of the results, and the results will be published in the next SRT update.
5. If it is determined that the time and procedure is correct, recommendations and assistance will be offered as needed.

Group 00 – Complete Engine

Contents

	Page
Administrative Time	2
Open/Close Repair Order (Shop)	2
Engine	2
Rebuild (Gas Engine)	2
Generator Set, Mobile	3
Remove And Install	3
Troubleshoot	3
Eng Cranks But Will Not Start (Genset)	3
Engine Overfueling (Genset)	4
Engine Unstable (Hunts) (Genset)	4
Engine Will Not Crank (Genset)	4
High/Low AC Output (Genset)	5
Starts But Stops When Switch Released	5

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-901 Administrative Time – Open/Close Repair Order (Shop) <i>Includes:</i> <ul style="list-style-type: none"> - Clock on and off the job - Move equipment to and from work area - Clean work area and write repair at the end of <ul style="list-style-type: none"> - each shift and when job has been completed - Record the following: <ul style="list-style-type: none"> - Generator Set model number - Generator Set serial number - Customer name and address - Original date of purchase - Hours of operation 	0.4	-	-	-	-	-
00-203 Engine – Rebuild (Gas Engine) <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect <ul style="list-style-type: none"> - Governor linkage - Electrical wiring - Remove and install <ul style="list-style-type: none"> - Housings - Flywheel and stator - Starter - Intake manifold - Exhaust manifold - Cylinder heads - Oil base - Oil filter and adapter - Gearcase cover - Piston and piston rings - Connecting rods - Crankshaft - Camshaft - Valve assembly 	-	-	10.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 00-203 Engine – Rebuild (Gas Engine) <ul style="list-style-type: none"> - Tappets - Bearings - Oil seals - Oil pump - Generator end - Generator control - Hone or bore cylinder - Test run engine 	-	-	10.0	-	-	-
00-1AA Generator Set, Mobile – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Main leads and associated wiring - Fuel lines - Exhaust systems - Remove and install - Generator set from mounting location - Test run for proper operation 	-	-	2.0	-	-	-
00-022 Troubleshoot – Eng Cranks But Will Not Start (Genset) <ul style="list-style-type: none"> -01 – Check: <ul style="list-style-type: none"> - Spark plugs - Ignition coil - Ignition module -02 – Perform checks in step 01 - Check: <ul style="list-style-type: none"> - Fuel supply - Fuel supply valve - Fuel supply fittings - Fuel pump - Carburetor choke 	-	-	-	-	-	-
	-	-	0.4	-	-	-
	-	-	0.8	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-022 Troubleshoot – Eng Cranks But Will Not Start (Genset)	-	-	-	-	-	-
- Carburetor adjustments						
-03 - Perform checks in step 02	-	-	1.0	-	-	-
- Check:						
- PCB control board connections						
- PCB control board						
00-0AC Troubleshoot – Engine Overfueling (Genset)	-	-	-	-	-	-
-01 - Check:	-	-	0.4	-	-	-
- Spark plugs						
- Fuel pressure at carburetor						
- Vacuum pull-off						
- Electric choke heater						
-02 - Perform checks in step 01	-	-	0.6	-	-	-
- Check:						
- Governor adjustments						
- Carburetor adjustments						
-03 - Perform checks in step 02	-	-	1.0	-	-	-
- Check:						
- Ignition coil						
- Ignition module						
00-041 Troubleshoot – Engine Unstable (Hunts) (Genset)	-	-	-	-	-	-
-01 - Check:	-	-	0.3	-	-	-
- Fuel supply						
- Fuel Lines for leakage						
- Loose wire connection						
-02 - Perform checks in step 01	-	-	0.9	-	-	-
- Check:						
- Governor linkage for binding						
- Governor adjustments						

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes					
		R	A	B	C	D	Special S
Procedure Number and Description							
(continued from previous page)							
00-041	Troubleshoot – Engine Unstable (Hunts) (Genset)	-	-	-	-	-	-
	– Carburetor adjustments						
00-0AA	Troubleshoot – Engine Will Not Crank (Genset)	-	-	-	-	-	-
-01	– Check:	-	-	0.4	-	-	-
	– Low battery voltage						
	– Terminal connection–loose or dirty						
	– Battery cable size						
	– Starter drive engagement						
-02	– Perform checks in step 01	-	-	0.8	-	-	-
	– Check:						
	– Remote control						
	– Connections on PCB control board						
	– Start solenoid						
	– Starter						
00-0AD	Troubleshoot – High/Low AC Output (Genset)	-	-	-	-	-	-
-01	– Check:	-	-	0.6	-	-	-
	– Broken or loose wires						
	– Voltage regulator						
	– Transformer regulator						
	– Engine speed						
	– Voltage adjustment pot setting						
-02	– Perform checks in step 01	-	-	1.0	-	-	-
	– Check:						
	– Main rotor						
	– Main stator						
00-0AB	Troubleshoot – Starts But Stops When Switch Released	-	-	-	-	-	-
-01	– Check:	-	-	0.3	-	-	-
	– Oil level						
	– Oil pressure switch						

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>00-0AB Troubleshoot – Starts But Stops When Switch Released</p> <ul style="list-style-type: none"> - Choke element - Engine speed <p>-02 - Perform checks in step 01</p> <ul style="list-style-type: none"> - Check: <ul style="list-style-type: none"> - PMG output - PMG stator - Flywheel <p>-03 - Perform checks in step 02</p> <ul style="list-style-type: none"> - Check: <ul style="list-style-type: none"> - All electrical connections - AC voltage regulator - PCB control board <p>-04 - Perform checks in step 03</p> <ul style="list-style-type: none"> - Check: <ul style="list-style-type: none"> - Main rotor - Main stator 	-	-	-	-	-	-
	-	-	0.5	-	-	-
	-	-	0.5	-	-	-
	-	-	1.0	-	-	-

Group 01 – Cylinder Block

Contents

	Page
Block, Short	8
Replace	8
Connecting Rod	8
Remove And Install	8
Crankshaft	9
Crankshaft Seal, Front	10
Replace	10
Crankshaft Seal, Rear	10
Replace (Horizontal)	10
Gear Cover	10
Remove And Install	10
Gear Cover Gasket	11
Replace	11
Gear, Camshaft	11
Remove And Install	11
Gear, Crankshaft	12
Piston	12
Remove And Install, All	12
Piston Rings	12
Replace	12

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-311 Block,Short – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring - Drain oil and remove filter - Remove and install - External accessories - Generator end - Generator control - Housings - Fuel lines - Exhaust system - Intake manifold - Starter - Flywheel and stator - Cylinder heads - Gearcase cover - Oil base - Oil pump - Oil filter and adapter - Oil pickup tube and cup - Install - Short block assy - New gaskets - Torque to proper spec - Fill oil pan with oil - Test run unit 	-	-	8.0	-	-	-
01-1AA Connecting Rod – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring 	-	-	4.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-1AA Connecting Rod – Remove And Install</p> <ul style="list-style-type: none"> - Remove and install <ul style="list-style-type: none"> - Housings - Intake manifold - Exhaust system - Cylinder head - Oil base - Connecting rod and piston - Clean and visually inspect <ul style="list-style-type: none"> - Crankshaft - Test run unit 	-	-	4.0	-	-	-
<p>01-112 Crankshaft – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect <ul style="list-style-type: none"> - Governor linkage - Electrical wiring - Remove and install <ul style="list-style-type: none"> - Housings - Flywheel and stator - Starter - Intake manifold - Exhaust manifold - Cylinder heads - Oil base - Gearcase cover - Pistons - Connecting rods - Crankshaft - Crankshaft gear - Bearings - Oil seals - Generator end - Generator control 	-	-	8.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
01-112 Crankshaft – Remove And Install – Test run engine	-	-	8.5	-	-	-
01-304 Crankshaft Seal, Front – Replace <i>Includes:</i> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Flywheel and stator – Gearcase cover – Oil seal – Test run engine	-	-	2.0	-	-	-
01-308 Crankshaft Seal,Rear – Replace (Horizontal) <i>Includes:</i> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Sheetmetal – Bearing plate – Generator end – Generator control – Oil seal – Test run engine	-	-	3.0	-	-	-
01-121 Gear Cover – Remove And Install <i>Includes:</i> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings	-	-	2.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
(continued from previous page)						
01-121 Gear Cover – Remove And Install <ul style="list-style-type: none"> – Flywheel and stator – Gearcase cover – Test run engine 	-	-	2.5	-	-	-
01-3AB Gear Cover Gasket – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Flywheel and stator – Gearcase cover – Test run unit 	-	-	3.0	-	-	-
01-107 Gear, Camshaft – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Flywheel and stator – Cylinder heads – Oil base – Gearcase cover – Gearcase cover gasket – Camshaft – Valve assembly – Replace head gaskets – Torque cylinder head – Test run unit 	-	-	3.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-114 Gear, Crankshaft – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring - Remove and install - Housings - Flywheel and stator - Gearcase cover - Crankshaft gear - Test run engine 	-	-	2.5	-	-	-
01-140 Piston – Remove And Install, All <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring - Remove and install - Housings - Intake manifold - Exhaust manifold - Cylinder heads - Oil base - Pistons - Connecting rods - Bearings - Oil seals - Hone or bore cylinders - Adjust valve lash - Test run unit 	-	-	4.5	-	-	-
01-3AC Piston Rings – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage 	-	-	4.8	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-3AC Piston Rings – Replace</p> <ul style="list-style-type: none"> - Electrical wiring - Remove and install - Housings - Intake manifold - Exhaust manifold - Cylinder heads - Oil base - Pistons - Piston rings - Hone or bore cylinders - Adjust valve lash - Test run unit 	-	-	4.8	-	-	-

Group 02 – Cylinder Head

Contents

	Page
Cylinder Head	16
Remove And Install	16
Cylinder Head Gasket	16
Replace	16
Valve Guides	16
Valves	17
Grind	17

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-104 Cylinder Head – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Housings - Cylinder heads - Scraping carbon from - Cylinder heads - Tops of pistons - Around valves and ports - Replace head gasket - Torque cylinder heads - Test run unit 	-	-	1.5	-	-	-
02-3AA Cylinder Head Gasket – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Remove and Install - Housings - Cylinder head - Scrap carbon from - Cylinder head - Tops of piston - Around valves and ports - Troque to proper spec - Test run unit 	-	-	1.8	-	-	-
02-302 Valve Guides – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring - Remove and install - Housings - Intake manifold - Cylinder heads - Valve assembly 	-	-	2.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 02-302 Valve Guides – Replace – Adjust valve lash – Test run unit	-	-	2.0	-	-	-
02-513 Valves – Grind <i>Includes:</i> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Intake manifold – Cylinder heads – Valve assembly – Refinish valve seats – Grind valves – Clean and visually inspect – Springs – Adjust valve lash – Test run unit	-	-	2.5	-	-	-

Group 03 – Rocker Levers

Contents

	Page
Breather Valve	20
Service	20
Valves	20
Adjust, All	20

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
03-801 Breather Valve – Service <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Fuel line - Electrical wiring - Remove and install - Intake manifold - Exhaust manifold - Breather cap assembly - Clean and visually inspect - Baffle - Breather valve 	-	-	1.0	-	-	-
03-603 Valves – Adjust, All <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Electrical wiring - Governor linkage - Remove and install - Intake manifold - Valve covers - Adjust valve lash - Test run unit 	-	-	1.0	-	-	-

Group 04 – Cam Follower

Contents

	Page
Valve Tappets	22
Remove And Install	22

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
04-118 Valve Tappets – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Governor linkage - Electrical wiring - Remove and install - Housings - Intake manifold - Exhaust manifold - Cylinder heads - Valve assembly - Adjust valve lash - Test run unit 	-	-	2.0	-	-	-

Group 05 – Fuel System

Contents

	Page
Carburetor	24
Adjust	24
Rebuild	24
Remove And Install	24
Choke, Carburetor	25
Replace	25
Fuel Pump, Electrical	25
Remove And Install	25

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
05-6AA Carburetor – Adjust <i>Includes:</i> <ul style="list-style-type: none"> - Adjust - Throttle stop - Main jet - Idle jet - (1995 C.A.R.B. engines have tamper proof carburetor) - Test run unit 	-	-	0.3	-	-	-
05-214 Carburetor – Rebuild <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Air cleaner assembly - Intake manifold - Carburetor - Clean and visually inspect - Carburetor - Install replacement parts as needed - Adjust - Throttle stop - Main jet - Idle jet - (1995 C.A.R.B. engines have tamper proof carburetor) - Test run unit 	-	-	1.0	-	-	-
05-118 Carburetor – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Air cleaner assembly - Intake manifold - Carburetor - Adjust - Throttle stop 	-	-	0.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 05-118 Carburetor – Remove And Install <ul style="list-style-type: none"> - Main jet - Idle jet - (1995 C.A.R.B. engines have tamper proof carburetor) - Test run unit 	-	-	0.5	-	-	-
05-3AA Choke, Carburetor – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Choke assembly - Adjust choke - Test run unit 	-	-	0.5	-	-	-
05-1AC Fuel Pump, Electrical – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Fuel lines - Remove and install - Fuel pump - Check - Fuel lines for leaks - Test run unit 	-	-	0.5	-	-	-

Group 07 – Lubricating Oil System

Contents

	Page
Lubricating Oil And Filter	28
Change	28
Oil Base	28
Remove And Install (Horizontal)	28
Oil By-Pass	28
Inspect And Reuse (Horizontal)	28
Oil Filter, Full Flow	29
Replace	29
Oil Pickup Cup And Tube	29
Remove And Install (Hor)	29
Oil Pump	29
Remove And Install	29

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
07-801 Lubricating Oil And Filter – Change <i>Includes:</i> <ul style="list-style-type: none"> – Drain and fill oil base – Remove and install filter – Fill filter and engine with oil – Check for oil leaks – Test run unit 	-	-	0.4	-	-	-
07-109 Oil Base – Remove And Install (Horizontal) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Oil base gasket – Test run unit 	-	-	1.5	-	-	-
07-410 Oil By-Pass – Inspect And Reuse (Horizontal) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Remove and install – Oil by-pass bolt – Washer – By-pass spring – By-pass plunger – Clean and visually inspect – Bore – Plunger – Spring – Test run unit 	-	-	0.4	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
07-301 Oil Filter, Full Flow – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Oil filter – Rubber filter gasket – Fill oil pan – Check for oil leaks – Test run unit 	-	-	0.2	-	-	-
07-114 Oil Pickup Cup And Tube – Remove And Install (Hor) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Oil base – Oil pump and pickup – Test run unit 	-	-	2.5	-	-	-
07-113 Oil Pump – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Governor linkage – Electrical wiring – Remove and install – Housings – Flywheel and stator – Oil base – Gearcase cover – Oil pump – Test run unit 	-	-	2.0	-	-	-

Group 10 – Intake Air System

Contents

	Page
Air Cleaner Element	32
Replace	32
Intake Manifold	32
Remove And Install	32

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
10-301 Air Cleaner Element – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Air cleaner cover – Air element – Test run unit 	-	-	0.2	-	-	-
10-129 Intake Manifold – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect – Electrical wiring – Remove and install – Intake manifold – Carburetor – Gaskets – Test run unit 	-	-	0.5	-	-	-

Group 11 – Exhaust System

Contents

	Page
Exhaust Manifold	34
Replace	34
Exhaust Manifold Gaskets	34
Replace	34

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
11-3AA Exhaust Manifold – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Exhaust manifold – Muffler and pipes – Gaskets – Check for exhaust leaks – Test run unit 	-	-	1.0	-	-	-
11-304 Exhaust Manifold Gaskets – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install – Exhaust manifold – Muffler and pipes – Gaskets – Check for exhaust leaks – Test run unit 	-	-	0.6	-	-	-

Group 13 – Electrical Equipment

Contents

	Page
Ignition Coil	36
Remove And Install	36
Ignition Module/Trigger Ring	36
Remove And Install	36
Spark Plug	36
Remove And Install	36
Spark Plug Wires	36
Remove And Install	36
Starter Motor	36
Remove And Install	36
Stator, Battery Charging	37
Remove And Install	37
Voltage Regulator DC	37
Replace	37

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
13-116 Ignition Coil – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Electrical wiring - Remove and install - Ignition coil - Test run unit 	-	-	0.5	-	-	-
13-117 Ignition Module/Trigger Ring – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Electrical wiring - Remove and install - Generator rotor - Generator stator and housing - Ignition module - Trigger ring - Test run unit 	-	-	2.5	-	-	-
13-109 Spark Plug – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Spark plug wires - Test run unit 	-	-	0.3	-	-	-
13-119 Spark Plug Wires – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Spark plug wires - Test run unit 	-	-	0.3	-	-	-
13-104 Starter Motor – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Electrical wiring 	-	-	0.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>13-104 Starter Motor – Remove And Install</p> <ul style="list-style-type: none"> - Remove and install - Housings - Starter motor - Test run unit <p>13-1AA Stator,Battery Charging – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and Connect - Electrical wiring - Remove and Install - Housings - Flywheel and stator - Test run unit <p>13-3AA Voltage Regulator DC – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and Connect - Electrical wiring - Remove and Install - Voltage regulator - Test run unit 	-	-	0.5	-	-	-
	-	-	1.5	-	-	-
	-	-	0.5	-	-	-

Group 16 – Mounting Adaptations

Contents

	Page
Flywheel	40
Remove And Install	40

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
16-103 Flywheel – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Housings - Flywheel - Test run unit 	-	-	0.6	-	-	-

Group 17 – Miscellaneous

Contents

	Page
Muffler	42
Remove And Install	42

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
17-131 Muffler – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Remove and install - Exhaust manifold - Muffler and pipes - Gaskets - Check for exhaust leaks - Test run unit 	-	-	0.4	-	-	-

Group 25 – Generator

Contents

	Page
Brush Block	44
Replace	44
Brushes	44
Replace	44
Generator Bearing	44
Replace	44
Main Rotor	45
Remove And Install	45
Main Stator	45
Remove And Install	45

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
25-3AA Brush Block – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Remove and Install - Air cleaner housing - Brush block cover - Brush block - Test for proper operation 	-	-	0.3	-	-	-
25-3AB Brushes – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Remove and install - Air cleaner housing - Brush block cover - Brush block - Brushes - Test for proper operation 	-	-	0.3	-	-	-
25-3AC Generator Bearing – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Main leads and associated wiring - Drain engine oil and remove filter - Remove and Install - Brush block cover - Brush block - Vibration isolators - Stator housing - Rotor - Bearing - Apply adhesive and allow for curing time 	-	-	2.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
(continued from previous page)						
25-3AC Generator Bearing – Replace – Test for proper operation	-	-	2.5	-	-	-
25-1AA Main Rotor – Remove And Install <i>Includes:</i> – Disconnect and connect: – Battery cables – Main leads and associated wiring – Drain engine oil and remove filter – Remove and install – Brush block cover – Brush block – Vibration isolators – Stator housing – Rotor – Test run for proper operation	-	-	2.0	-	-	-
25-1AB Main Stator – Remove And Install <i>Includes:</i> – Disconnect and connect: – Battery cables – Main leads and associated wiring – Drain engine oil and remove filter – Remove and install – Brush block cover – Brush block – Vibration isolators – Stator housing – Stator – Test for proper operation	-	-	2.3	-	-	-

Group 26 – Generator Control

Contents

	Page
Ac Circuit Breaker	48
Replace	48
Ac Voltage Regulator	48
Replace	48
Hourmeter	48
Replace	48
PCB Control Board	48
Replace	48
Relay	49
Replace	49
Start Stop Switch	49
Replace	49

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
26-3AE Ac Circuit Breaker – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cable - Remove and install - Control panel assembly - Circuit breaker - Test run for proper operation 	-	-	0.3	-	-	-
26-3AA Ac Voltage Regulator – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Remove and install - Voltage regulator - Test using proper test tools - Test run for proper operation 	-	-	0.3	-	-	-
26-3AK Hourmeter – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Remove and install - Control panel assembly - Hourmeter - Test run for proper operation 	-	-	0.3	-	-	-
26-3AB PCB Control Board – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect - Battery cables - Remove and install - Control panel assembly - PCB control board - Test with proper test tools 	-	-	0.3	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 26-3AB PCB Control Board – Replace – Test run for proper operation	-	-	0.3	-	-	-
26-3AL Relay – Replace <i>Includes:</i> – Disconnect and connect – Battery cables – Remove and install – Control panel assembly – Relay – Test run for proper operation	-	-	0.3	-	-	-
26-3AJ Start Stop Switch – Replace <i>Includes:</i> – Disconnect and connect – Battery cables – Remove and install – Control panel assembly – Start stop switch – Test run for proper operation	-	-	0.3	-	-	-

A

AC Circuit Breaker, Replace, 48
AC Voltage Regulator, Replace, 48
Administrative Time, Open/Close Repair Order (Shop), 2
Air Cleaner Element, Replace, 32

B

Block, Short, Replace, 8
Breather Valve, Service, 20
Brush Block, Replace, 44
Brushes, Replace, 44

C

Carburetor
 Adjust, 24
 Rebuild, 24
 Remove And Install, 24
Choke, Carburetor, Replace, 25
Connecting Rod, Remove And Install, 8
Crankshaft, Remove And Install, 9
Crankshaft Seal, Front, Replace, 10
Crankshaft Seal, Rear, Replace (Horizontal), 10
Cylinder Head, Remove And Install, 16
Cylinder Head Gasket, Replace, 16

E

Engine, Rebuild (Gas Engine), 2
Exhaust Manifold, Replace, 34
Exhaust Manifold Gaskets, Replace, 34

F

Flywheel, Remove And Install, 40
Fuel Pump, Electrical, Remove And Install, 25

G

Gear Cover, Remove And Install, 10
Gear Cover Gasket, Replace, 11
Gear, Camshaft, Remove And Install, 11
Gear, Crankshaft, Remove And Install, 12
Generator Bearing, Replace, 44
Generator Set, Mobile, Remove And Install, 3

H

Hourmeter, Replace, 48

I

Ignition Coil, Remove And Install, 36
Ignition Module/Trigger Ring, Remove And Install, 36
Intake Manifold, Remove And Install, 32

L

Lubricating Oil And Filter, Change, 28

M

Main Rotor, Remove And Install, 45
Main Stator, Remove And Install, 45
Muffler, Remove And Install, 42

O

Oil Base, Remove And Install (Horizontal), 28
Oil By-Pass, Inspect And Reuse (Horizontal), 28
Oil Filter, Full Flow, Replace, 29
Oil Pickup Cup And Tube, Remove And Install (Hor), 29
Oil Pump, Remove And Install, 29

P

PCB Control Board, Replace, 48
Piston, Remove And Install, All, 12

Piston Rings, Replace, 12

R

Relay, Replace, 49

S

Spark Plug, Remove And Install, 36

Spark Plug Wires, Remove And Install, 36

Start Stop Switch, Replace, 49

Starter Motor, Remove And Install, 36

Stator, Battery Charging, Remove And Install, 37

T

Troubleshoot

Eng Cranks But Will Not Start (Genset), 3

Engine Overfueling (Genset), 4

Engine Unstable (Hunts) (Genset), 4

Engine Will Not Crank (Genset), 5

High/Low AC Output (Genset), 5

Starts But Stops When Switch Released, 5

V

Valve Guides, Replace, 16

Valve Tappets, Remove And Install, 22

Valves

Adjust, All, 20

Grind, 17

Voltage Regulator DC, Replace, 37

Request for SRT review

Distributor/Dealer Data		
Distributor/Dealer	Phone No.	
Address		
City	State	Zip Code
Country		

My experience has indicated the following repair procedures require more time:

Procedure Data			
SRT Number	Procedure Discription	Published time Hrs.	Suggested time Hrs.
Total Hours			

Generator Set Model
Transfer Switch Model
Repair Date
Technician Name

Describe how repair was performed:

Signature _____ Title _____

Mail to: Onan Corporation
 Service Department
 1400 73rd Avenue NE
 Minneapolis, MN 55432

Onan

Cummins Power Generation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
763-574-5000
Fax: 763-528-7229

Cummins and Onan are registered trademarks of Cummins Inc.



Redistribution or publication of this document
by any means, is strictly prohibited.