

**Caution: This document contains mixed page sizes (8.5 x 11 or 11 x 17), which may affect printing. Please adjust your printer settings according to the size of each page you wish to print.**



# **Service Manual**

## **YB**

### **Generator**

**YB Generator  
with Torque Match-2™ Regulator**

---

# Safety Precautions

---

The following symbols in this manual highlight conditions potentially dangerous to service personnel, or equipment. Read this manual carefully. Know when these conditions can exist. Then take necessary steps to protect personnel as well as equipment.

**⚠ DANGER** *This symbol warns of immediate hazards which will result in severe personal injury or death.*

**⚠ WARNING** *This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.*

**⚠ CAUTION** *This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.*

## PROTECT AGAINST MOVING PARTS

Avoid moving parts of the unit. Avoid use of loose jackets, shirts or sleeves due to danger of becoming caught in moving parts.

Make sure all nuts and bolts are secure. Keep power shields and guards in position.

If you must make adjustments while the unit is running, use extreme caution around hot manifolds, moving parts, etc.

**⚠ WARNING**

## EXHAUST GAS IS DEADLY!

**Exhaust gases contain carbon monoxide, an odorless and colorless gas formed during the combustion of hydrocarbon fuels. Carbon monoxide is poisonous and can cause unconsciousness and death. Symptoms of carbon monoxide poisoning are the following:**

- Inability to Think Coherently
- Vomiting
- Muscular Twitching
- Throbbing in Temples
- Dizziness
- Headache
- Weakness and Sleepiness

**If you or anyone else experience any of these symptoms, shut down the unit and get out into the fresh air immediately. If symptoms persist, seek medical attention. DO NOT OPERATE THE UNIT UNTIL IT HAS BEEN INSPECTED AND REPAIRED.**

**The best protection against carbon monoxide inhalation is proper installation and regular, frequent visual and audible inspections of the complete exhaust system.**

Do not work on this equipment when mentally or physically fatigued.

## GUARD AGAINST ELECTRIC SHOCK

Disconnect electric power before removing protective shields or touching electrical equipment. Use rubber insulative mats placed on dry wood platforms over floors that are metal or concrete when around electrical equipment. Do not wear damp clothing (particularly wet shoes) or allow skin surfaces to be damp when handling electrical equipment.

Disconnect batteries to prevent accidental engine start. Jewelry is a good conductor of electricity and should be removed before working on electrical equipment.

Use extreme caution when working on electrical components. High voltages cause injury or death.

Follow all state and local codes. To avoid possible personal injury or equipment damage, a qualified electrician or an authorized service representative must perform installation and all service.

# Table of Contents

---

SECTION	TITLE	PAGE
	<b>SAFETY PRECAUTIONS</b> .....	ii
1	<b>INTRODUCTION</b> .....	11
	About This Manual .....	11
	Test Equipment .....	11
	How to Obtain Service .....	11
2	<b>GENERATOR AND VOLTAGE REGULATOR</b> .....	2-1
	Generator Description .....	2-1
	Generator Operation .....	2-6
	Voltage Regulator Description .....	2-6
	Voltage Regulator Adjustments .....	2-7
3	<b>GENERATOR/REGULATOR TROUBLESHOOTING</b> .....	3-1
	Control Locations .....	3-1
	Preparation .....	3-1
	Troubleshooting Procedures .....	3-1
	Flow Chart A. No. AC Output Voltage at Rated Engine Speed .....	3-2
	Flow Chart B. Unstable Voltage, Engine Speed Stable at Rated Speed .....	3-3
	Flow Chart C. Output Voltage Too High or Too Low .....	3-3
	Flow Chart D. Exciter Field Breaker Trips .....	3-4
	Flow Chart E. Unbalanced Generator Output Voltage .....	3-5
	Flow Chart F. No AC Output To Load .....	4-1
4	<b>GENERATOR/REGULATOR TESTS/ADJUSTMENTS</b> .....	4-1
	(A) Testing AC Residual Voltage .....	4-1
	(B) Flashing the Field .....	4-1
	(C) Voltage Regulator VRAS-2 Replacement .....	4-2
	(D) Testing Rotating Rectifiers (Diodes) .....	4-2
	(E) Testing Exciter Stator .....	4-3
	(F) Testing Exciter Rotor .....	4-3
	(G) Testing Generator Stator .....	4-4
	(H) Testing Generator Rotor .....	4-5
	(J) Wiring Harness Check .....	4-5
	(K) Voltage Regulator VRAS-2 Adjustment .....	4-5
	(L) Reconnection .....	4-6
	(M) Generator Voltage Adjust (R21) .....	4-6
	(N) Testing Circuit Breaker .....	4-6
5	<b>GENERATOR DISASSEMBLY ASSEMBLY</b> .....	5-1
	Generator Disassembly .....	5-1
	Generator Assembly .....	5-3
6	<b>WIRING DIAGRAMS</b> .....	6-1



# Section 1. Introduction

## ABOUT THIS MANUAL

This manual provides troubleshooting and repair information regarding the Onan series YB generator in connection with a Torque Match-2 (VRAS-2) voltage regulator. For further operation, service, and troubleshooting information regarding engine or controller components, refer to support manuals specific to your generator set.

Study all manuals carefully and observe all warnings and cautions found on page ii and throughout this manual. Knowing your generator set, using it properly, and following a regular maintenance schedule will result in longer unit life, better performance, and safer operation.

Repair information in this manual for printed circuit board components other than fuses is not extensive as solid state printed circuit boards lend themselves more to replacement than repair. Application of meters or hot soldering irons to printed circuit boards by other than qualified personnel can cause unnecessary and expensive damage. Repair of the printed circuit boards is not recommended except by the factory.

**⚠ CAUTION** *High voltage testing or high potential (or Megger) testing of generator windings can cause damage to solid state components. Isolate these components before testing.*

## TEST EQUIPMENT

Most of the test procedures in this manual can be performed with an AC-DC multimeter such as a Simpson Model 260 VOM or a digital VOM. Some other instruments to have available are:

- Onan Multitester
- Jumper Leads
- AC Voltmeter
- DC Voltmeter
- Frequency Meter
- Wheatstone or Kelvin Bridge

See Onan Tool Catalog 900-0019.

## HOW TO OBTAIN SERVICE

In the event the generator requires servicing beyond the scope of information contained in this manual, contact an Onan Distributor for assistance. Onan factory trained Parts and Service representatives are ready to handle all your service needs.

When contacting an Onan Distributor, always supply the complete Model number and Serial number as shown on the Onan nameplate. The Onan nameplate is located on the side of the generator control box.

**Onan**

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

Important - Give above no.'s when ordering parts

Service Rating: \_\_\_\_\_

Hertz: \_\_\_\_\_ RPM: \_\_\_\_\_

Single Phase		kW		KVA	

Three Phase		kW		KVA	
Volts:	110/190	110/220	115/200	115/230	120/208
Amps:	120/240	127/220	139/240	220/380	230/400
	240/416				
	240/480	254/440	277/480	347/600	115/230 1Ø
					120/240 1Ø

For Elec \_\_\_\_\_ PF: \_\_\_\_\_ Bat.: \_\_\_\_\_

Eqpt Only

Insul - NEMA Class **F** Amb 40°C

Onan Corp  
Minneapolis Mn  
55432 USA  
Made in USA 99-1034

M-1641

FIGURE 1-1. ONAN NAMEPLATE

## ⚠ WARNING

**INCORRECT INSTALLATION, SERVICE, OR REPLACEMENT OF PARTS CAN RESULT IN SEVERE PERSONAL INJURY AND/OR EQUIPMENT DAMAGE. SERVICE PERSONNEL MUST BE QUALIFIED TO PERFORM ELECTRICAL AND MECHANICAL COMPONENT INSTALLATION.**



# Section 2. Generator and Voltage Regulator

## GENERATOR DESCRIPTION

The Onan series YB generator is a broad range, four pole, revolving field, brushless, 3 phase unit available in both 50 or 60 Hz. The generator rotor is directly coupled to the engine flywheel with a flexible drive disc. Engine speed determines generator frequency. A centrifugal blower (on the drive disc) circulates discharged air through an outlet in the blower end. See Figure 2-1.

As specified in Voltage/Current Options, Table 2-1. Voltage Code 17 and 517 generators are reconnectable to provide the listed voltage options. Output rating is 0.8 PF.

The broad range characteristic of the generator is that it can be operated continuously in a range of 120-to 139- volts per element and still maintain the same kilowatt output.

The wires from the generator are connected to a bus-bar system, Figures 2-2 and 2-3. By using reconnection bars, the Table 2-1; Code 17 or 517 voltage options may be obtained.

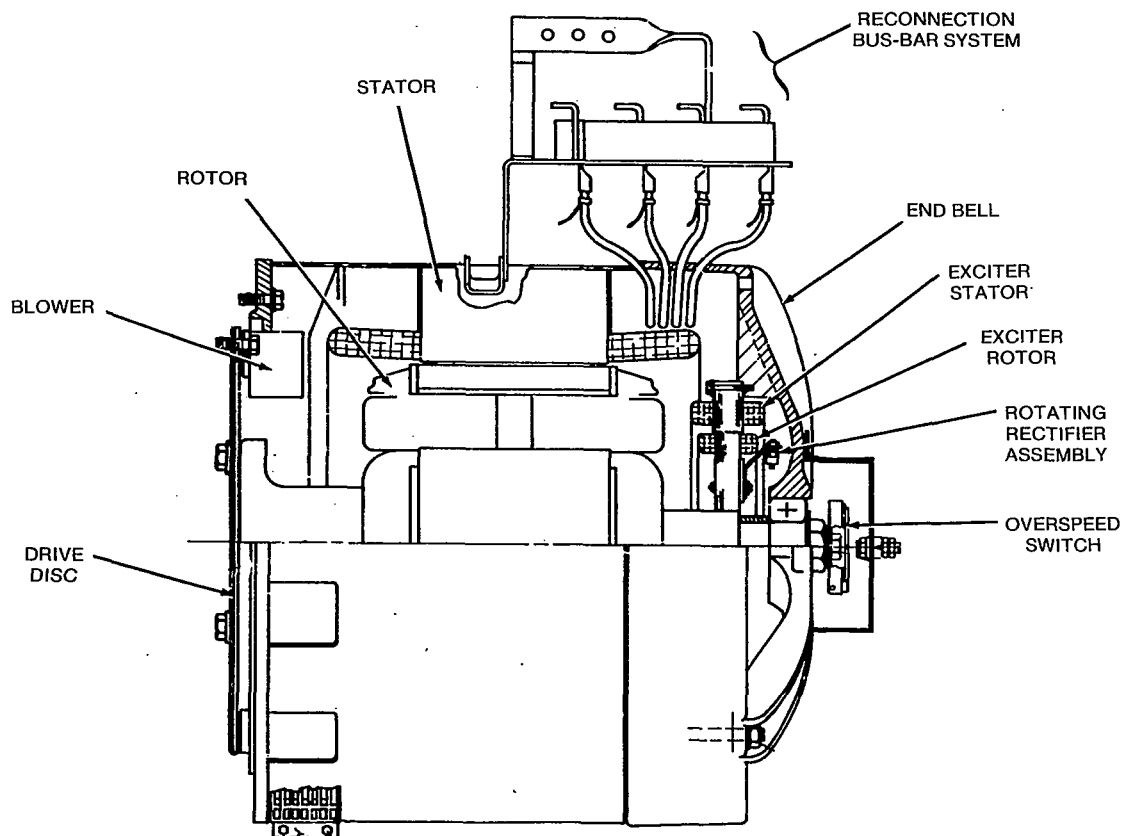


FIGURE 2-1. YB GENERATOR



TABLE 2-1. YB VOLTAGE/CURRENT OPTIONS

VOLTAGE	FREQ.	MAXIMUM CURRENT (AMPERES)						PARALLEL WYE	SERIES WYE	SERIES DELTA
		200 kW	230 kW	250 kW	275 kW	300 kW	350 kW			
<b>CODE 17</b>										
120/208	60 Hz	694	798	867	954	1041	1214	x		
127/220	60 Hz	656	755	820	902	984	1148	x		
139/240	60 Hz	601	692	752	827	902	1052	x		
240/416	60 Hz	347	399	434	477	520	607		x	
254/440	60 Hz	328	377	410	451	492	574		x	
277/480	60 Hz	301	346	376	413	451	526		x	
<b>CODE 5D*</b>										
120/240	60 Hz	601	692	752	827	902	1052			x
<b>CODE 6D*</b>										
240/480	60 Hz	301	346	376	413	451	526			x
<b>CODE 7*</b>										
220/380	60 Hz	380	437	475	522	570	655		x	
<b>CODE 9X*</b>										
347/600	60 Hz	241	277	301	331	361	421		x	
<b>CODE 31</b>										
110/190	60 Hz	760	874	950	1045	1140	1330	x		
115/200	60 Hz	722	830	902	992	1083	1263	x		
120/208	60 Hz	694	798	867	954	1041	1214	x		
127/220	60 Hz	656	755	820	902	984	1148	x		
220/380	60 Hz	380	437	475	522	570	665		x	
230/400	60 Hz	361	415	451	496	541	632		x	
240/416	60 Hz	347	399	434	477	520	607		x	
254/440	60 Hz	328	377	410	451	492	574		x	
		MAXIMUM CURRENT (AMPERES)								
		165 kW	190 kW	200 kW	230 kW	275 kW	290 kW			
<b>CODE 517</b>										
110/190	50 Hz	626	723	760	874	1045	1102	x		
115/200	50 Hz	595	687	722	830	992	1046	x		
120/208	50 Hz	572	661	694	798	954	1006	x		
127/220	50 Hz	541	625	656	755	902	951	x	x	
220/380	50 Hz	313	362	380	437	522	551		x	
230/400	50 Hz	297	344	361	415	496	523		x	
240/416	50 Hz	286	330	347	399	477	503		x	
254/440	50 Hz	270	312	328	377	451	476		x	
<b>CODE 523*</b>										
200/346	50 Hz	344	396	417	480	574	605		x	

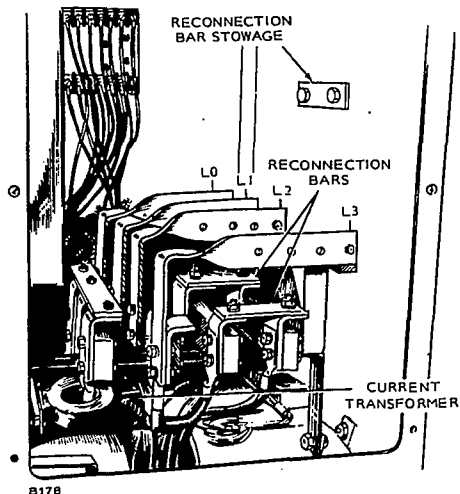


FIGURE 2-2. RECONNECTION SYSTEM

NAMEPLATE VOLTAGE CODE		VOLTAGE		PHASE		FREQUENCY		GENERATOR CONNECTION	GENERATOR CONNECTION SCHEMATIC DIAGRAM	GENERATOR CONNECTION WIRING DIAGRAM
5D	120/240	3	60	SERIES DELTA						
6D	240/480	3	60							
17	120/208	3	60	PARALLEL WYE						
	127/220	3	60							
	139/240	3	60							
517	110/190	3	50							
	115/200	3	50							
	120/208	3	50							
	127/220	3	50							
7	220/380	3	60	SERIES WYE						
	240/416	3	60							
17	254/440	3	60							
	277/480	3	60							
	220/380	3	50							
517	230/400	3	50							
	240/416	3	50							
	254/440	3	50							
523	200/346	3	50							
9X	347/600	3	60	SERIES WYE						

NOTE: This figure is for reference only. Refer to electrical schematic specific to your generator for further connection information.

FIGURE 2-3. OPTIONAL VOLTAGE CONNECTIONS

AC output leads extending from the stator housing are tapped with control wires (leads; 4,7,8,9 and 10). These control wires are routed into the control box and used for control input and metering, Figure 2-4.

The brushless exciter stator mounts in the end bell while the exciter rotor and its rotating rectifier assemblies mount on the generator rotor shaft. Within the endbell, leads F1+ and F2- from the exciter stator winding are connected to the output terminals of the voltage regulator, Figure 2-4.

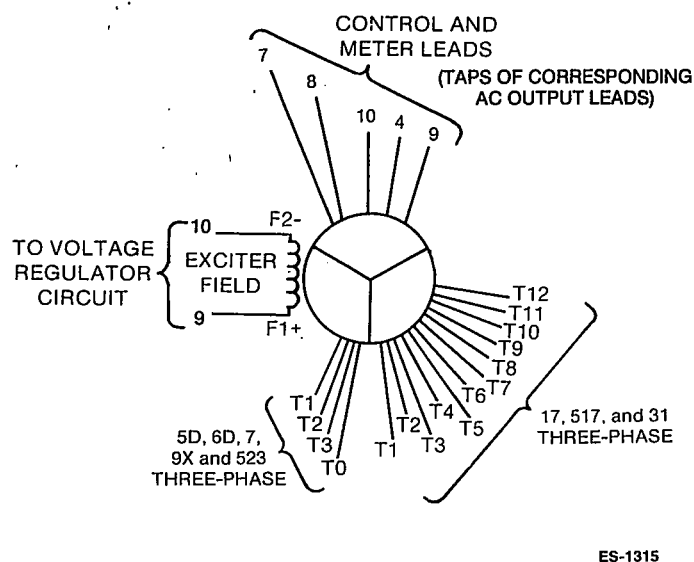


FIGURE 2-4. GENERATOR SCHEMATIC (COMPOSITE)

### Optional Circuit Breaker

Depending on site specifications and any applicable code requirements, an optional circuit breaker may be mounted on the side of generator housing.


All Onan supplied circuit breakers are thermal and magnetic trip type. Depending on customer requirements, the circuit breaker may also include shunt trip and remote alarm connections. Review the following and refer to Figure 2-5.

- Generator set output is connected to the load through the circuit breaker.
- When an overload or short circuit occurs on any one conductor, a common trip bar will disconnect all three conductors.


- The thermal trip action of the circuit breaker is accomplished by bimetal strips (inside breaker). A sustained overcurrent condition will cause a thermal reaction of the bimetal, and thereby trip the breaker. Response of the bimetal is proportional to current; high current - fast response, low current - slow response. This action provides a time delay for normal inrush current and temporary overload conditions (i.e., motor starting).
- The magnetic trip action of the circuit breaker is caused by an electromagnet which partially surrounds the internal bimetal strips. In the event of a short circuit, the high current through the electromagnet will attract the bimetal armature and trip the breaker. Some circuit breaker models provide front-adjustability of the magnetic trip action. These adjusters are normally set at the factory at the high position, but provide for individual conductor settings to suit customer requirements.
- The shunt trip mechanism (if equipped) consists of a solenoid tripping device mounted in the circuit breaker and external lead connections for remote signaling. A momentary signal to the solenoid coil will cause the breaker to trip.

This feature is available in AC and DC voltages, and is normally installed at the factory to meet customer requirements. For paralleled generator set installations, the shunt trip mechanism is most often connected to a common fault shutdown circuit of the generator set; in order to quickly disconnect the set from the load during a fault shutdown and thereby avoid a reverse power condition. Refer to site requirements for further information regarding the intended use of this feature.

- Auxiliary contacts (if equipped) consist of a set of contacts (one normally-open, and one normally-closed) intended for local or remote annunciation of breaker status. Refer to site requirements and proper wiring diagram for further information.
- The trip actuator is for periodic exercise of the breaker to clean and maintain its proper operation. Rotating this actuator mechanically simulates overcurrent tripping through actuation of linkages not operated by the On/Off handle. Refer to Section 4 Tests/Adjustments for further information.
- Operation of the circuit breaker is determined by site-established procedures. In emergency standby installations, the circuit breaker is most often placed to the On position, and is intended for safety trip actuation in the event of a fault condition. When the breaker is caused to trip open, operator action is required; firstly, to investigate the cause of the trip and perform remedial steps required (see Troubleshooting), and secondly, the circuit breaker handle must be placed to the Reset position and then to On to reclose the breaker. Refer to Troubleshooting, and Tests/Adjustment sections for further information.

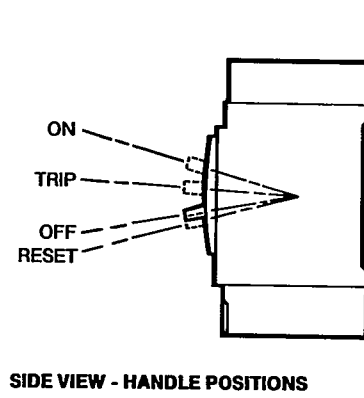

ES-1564-1

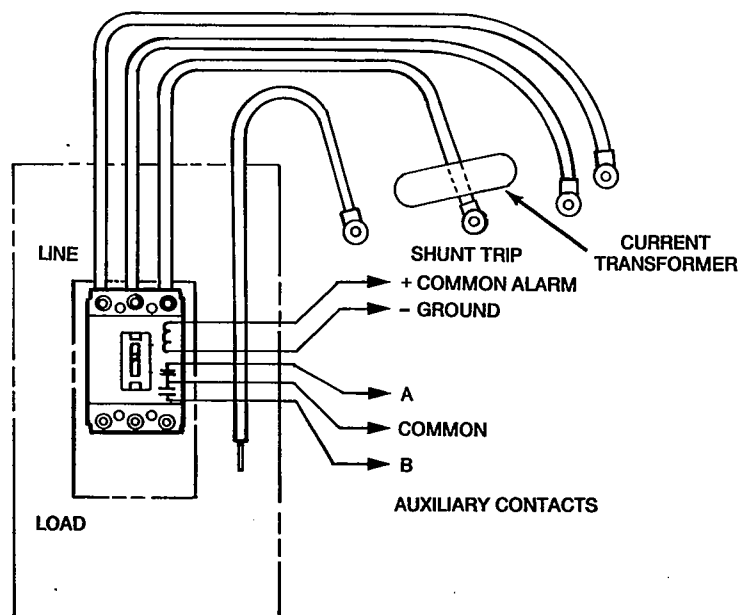

ES-1564-2

**FIGURE 2-5. OPTIONAL CIRCUIT BREAKER**

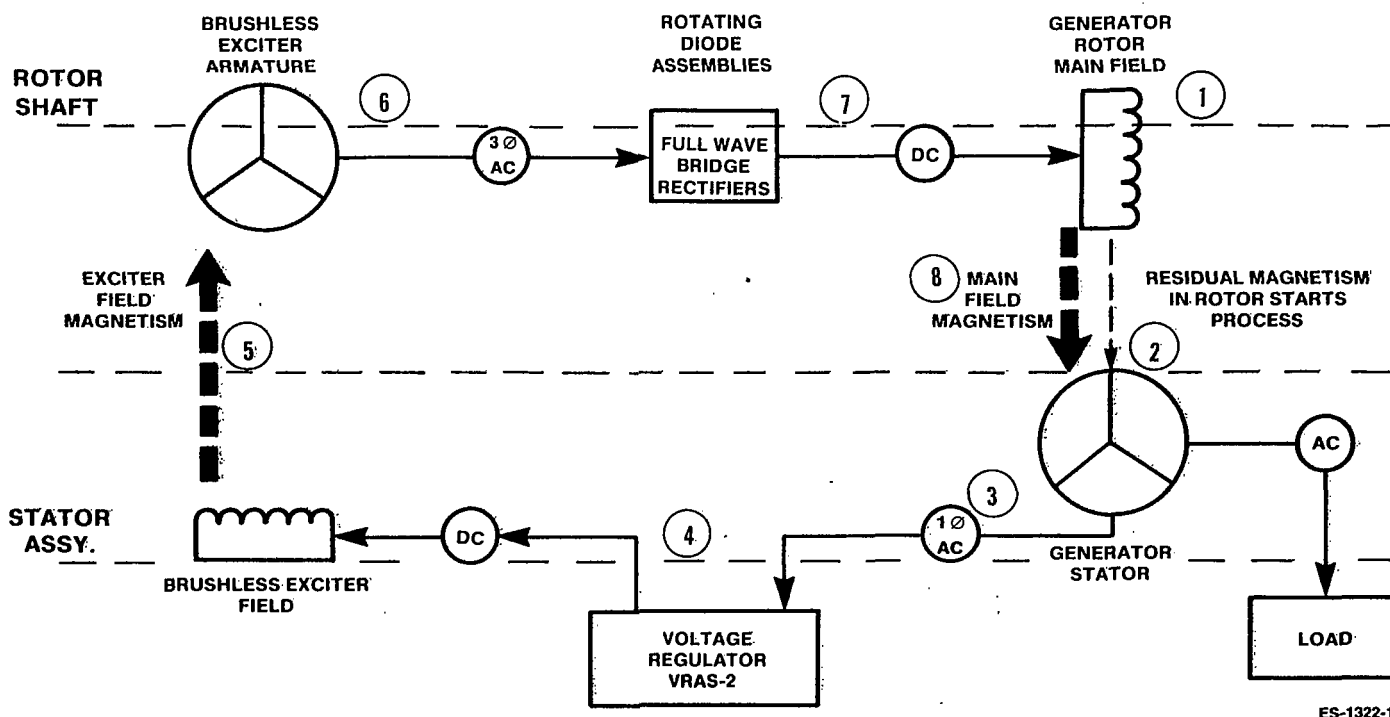


FIGURE 2-6. EXCITATION BLOCK DIAGRAM

## GENERATOR OPERATION

With the generator directly coupled to the engine fly-wheel, full rated output voltage is accomplished in a matter of seconds. The following briefly describes generator operation and voltage regulator interaction, in reference to Figure 2-6.

Refer to Voltage Regulator Description for further specifics regarding regulator operating modes.

1. Demand for power starts the engine, thereby turning the generator rotor.
2. Residual magnetism in the rotor main field, induces voltage in the main stator.
3. Single-phase AC voltage is taken from the main stator winding and fed to the Torque Match-2 Voltage Regulator (VRAS-2) as a reference voltage.
4. The voltage regulator compares the input with preset requirements, rectifies AC to DC, and sends a DC voltage to the exciter field.
5. The exciter stator field induces voltage in the exciter rotor.
6. Three-phase AC voltage is tapped from the exciter and fed to the rotating full-wave bridge rectifiers.
7. DC voltage from the rotating rectifiers is fed to the main field of the generator rotor.
8. The main field continues to build until rated (or preset) voltage is reached.

## VOLTAGE REGULATOR DESCRIPTION

The design of the Torque Match-2 Voltage Regulator (VRAS-2) provides switch selections that alter its sensing and command signals in order to achieve maximum operating performance in a variety of generator sizes and applications. Review the following, then refer to Voltage Regulator Adjustments for switch locations and settings specific to your generator set model.

### Operating Modes

**Torque-Matching:** In most applications, in order for the generator set to accept the application of a large momentary overload, such as motor starting, matching the torque characteristics of the engine and generator is required.

Because of the differences in engine characteristics, different torque matching may be used for various engine/generator combinations. The switch-selectable design of the VRAS-2 provides Onan the flexibility to test and set the torque-matching function to best suit each engine/generator configuration.

When set to the proper torque-matching switch settings, the VRAS-2 voltage regulator is able to maintain output voltage, within reasonable limits, by reducing the voltage just enough to take full advantage of the engine's full available power under transient conditions and prevent an unstable response.

**Non-Torque-Matching:** Even though the voltage regulator can also be switch-selected to a non-torque-matching constant voltage mode, independent of engine speed, this mode will not prevent the generator set from stalling during momentary overload conditions, and is not recommended for use. Consult an Onan service representative before selecting this voltage regulation mode to ensure that load demands specific to your installation would not cause an unstable operation of the generator set.

### Operating Stability

Because of the differences in exciter and main field time constants, different gain compensation is required for the various generator sizes and applications. The VRAS-2 voltage regulator is switch-selectable to a kW range of operation that best suits the generator set application.


## VOLTAGE REGULATOR ADJUSTMENTS

The VRAS-2 Voltage Regulator is shown in Figure 2-7. There are three switches that require actuation and two potentiometers on the voltage regulator as follows:

- Switch S1 - Selects the overall range of operation for the regulator. Refer to Table 2-2.
- Switches S2 and S3 - Determine the mode of regulation (Torque-Matched, or Non-Torque-Matched). Refer to Table 2-2.
- Potentiometer R32 - Provides adjustability to increase or decrease generator voltage to achieve proper setting.
- Potentiometer R34 - Is adjusted at the factory to set the frequency breakpoint, and does not require further adjustment.

**TABLE 2-2. VRAS-2 SWITCH SETTINGS**

GENSET kW RATING	STABILITY RANGE		REGULATION MODE								
			60 HZ TORQUE-MATCHING			50 Hz TORQUE-MATCHING			NON- TORQUE-MATCHING		
	S1-1	S1-2	S2	S3-1	S3-2	S2	S3-1	S3-2	S2	S3-1	S3-2
200-350	ON	ON	POS 2	OFF	ON	POS 2	ON	ON	POS 2	OFF	OFF

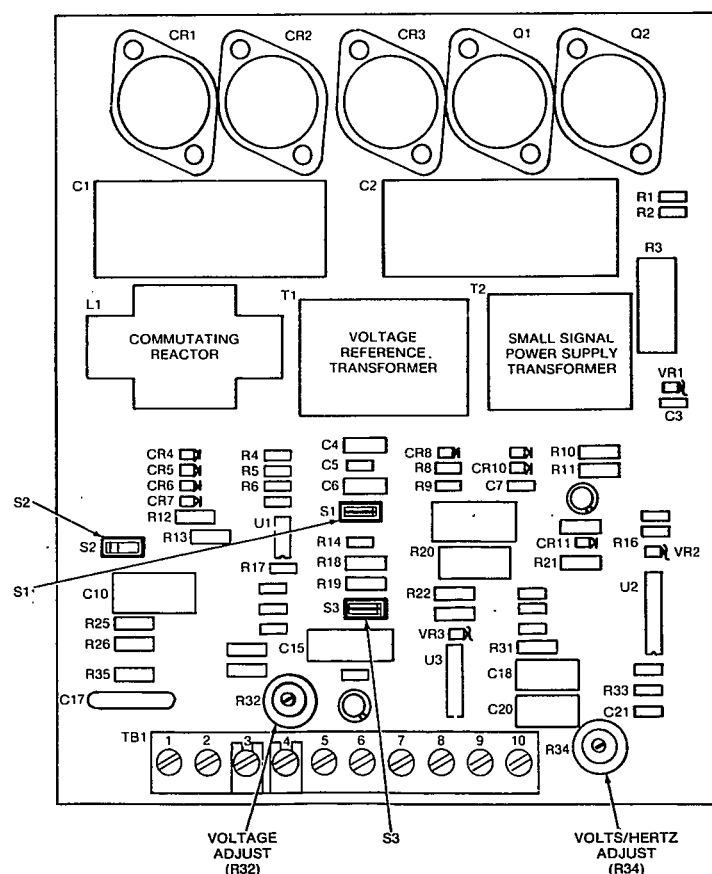

TB1-2, -3 AC INPUT VOLTS  
 TB1-3, -4 CROSS-CURRENT COMPENSATION  
 TB1-7, -8 VOLTAGE ADJUSTING RHEOSTAT  
 TB1-9, -10 EXCITER FIELD  
 F1 — TB1-9  
 F2 — TB1-10

ES-1565

**FIGURE 2-7. VOLTAGE REGULATOR**



# Section 3. Generator/Regulator Troubleshooting

## CONTROL LOCATIONS

Review the following listing of component parts involved in generator troubleshooting. Because, the following Troubleshooting Flow Charts will only be calling them by name and not location.

**Generator Set Output Circuit Breaker:** Mounted on outside of generator control/output box housing.

**Voltage Regulator - VRAS-2:** Inside control box.

**Terminal Board TB21:** Inside control box.

**Field Breaker CB21:** On AC control box door.

**Current Transformer CT21, 22, and 23.** Inside output box, behind control box.

**Reconnection Bus-Bar System:** Inside output box, behind control box.

**Rotating Rectifiers:** Inside generator, on exciter rotor.



**Accidental generator set starting can result in severe personal injury or death during service procedures. Disconnect battery cable before performing any checks on generator.**

## PREPARATION

A few simple checks and a proper troubleshooting procedure can locate the probable source of trouble and cut down service time.

1. Check all modifications, repairs, and replacements performed since the last satisfactory operation of the set to ensure that all generator leads are correctly connected. A loose wire connection overlooked when installing a replacement part could cause problems, as could an incorrect connection, an opened circuit breaker, or a loose connection on a printed circuit board. A thorough visual check can quickly eliminate these potential problems.
2. Visually inspect the components of Voltage Regulator VRAS-2. Look for dust, dirt, or moisture and cracks in the printed solder conductors. Burned resistors and arcing tracks are readily identifiable. Do not mark on PC boards with a pencil; graphite lines conduct and can cause leakage or short circuits between components.
3. Visually inspect the exciter rotor assembly for burned components, broken wires, loose connections, and carbon tracks caused by arcing between parts or between parts and ground. Also check for shorted paths between terminals caused by dust, dirt, and moisture.

Unless absolutely sure that panel instruments are accurate, use portable test meters for troubleshooting.



**To prevent meter damage, ohmmeter checks must be made with the unit stopped.**

## TROUBLESHOOTING PROCEDURES

The information in this section is divided into Troubleshooting Flow Charts as follows:

- A. No AC Output Voltage at Rated Engine Speed.
- B. Unstable Output Voltage, Engine Speed Stable at Rated Speed.
- C. Output Voltage Too High or Low.
- D. Exciter Field Breaker Trips.
- E. Unbalanced Generator Output Voltage.
- F. No AC Output Through Set Mounted Circuit Breaker.

To troubleshoot a problem, determine the problem and then refer to the appropriate troubleshooting flow chart. Start at the upper left-hand corner of chart, and answer all the questions with either a YES or NO. Follow the chart until the problem is found, performing the referenced Adjustment and Test Procedures following the flow charts.

The referenced components in the flow charts and in the Adjustment and Test Procedures can be found on the electrical schematic in Figure 3-1, and on assembly and wiring diagrams.

This figure is for reference only. Use electrical schematic specific to your application when troubleshooting.


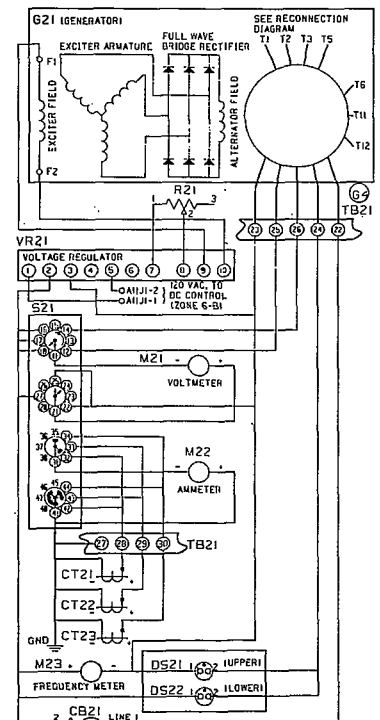



FIGURE 3-1. ELECTRIC SCHEMATIC  
(Includes Detector AC Meter Option)



## FLOW CHART A. NO AC OUTPUT VOLTAGE AT RATED ENGINE SPEED

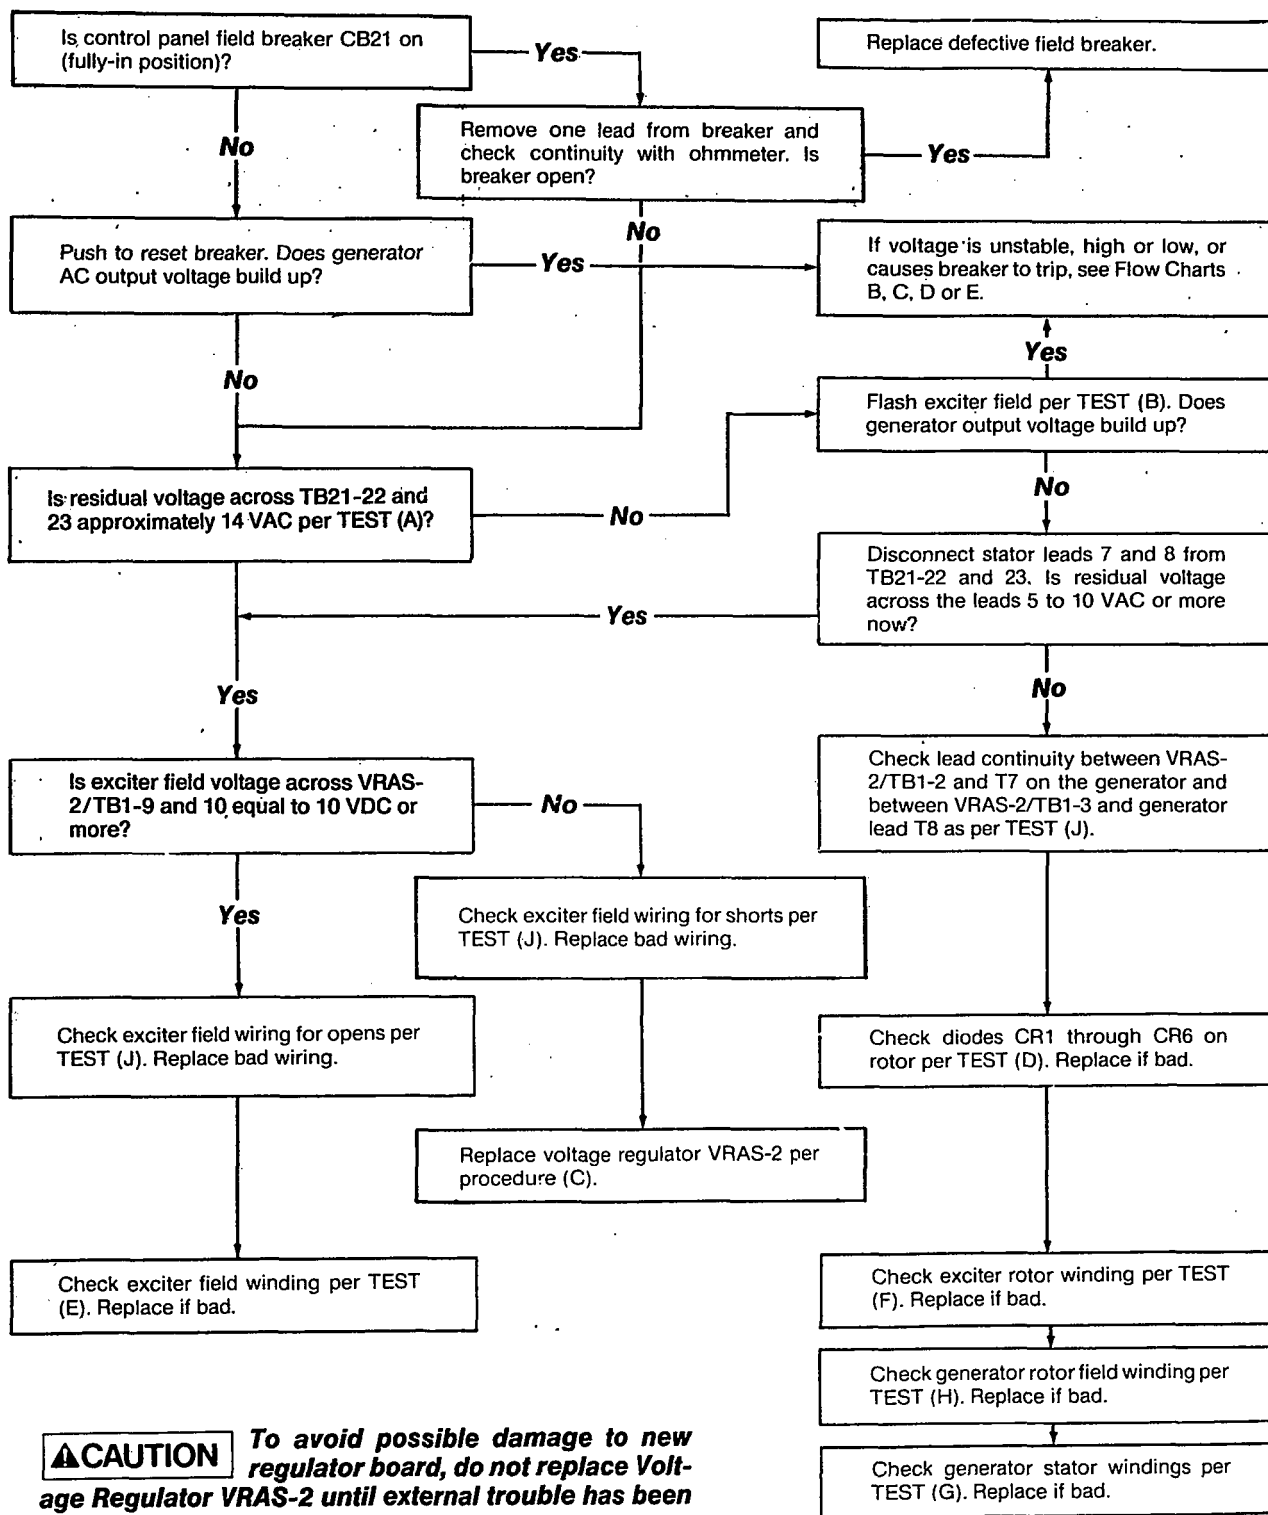


## FLOW CHART B. UNSTABLE VOLTAGE, ENGINE SPEED STABLE AT RATED SPEED.

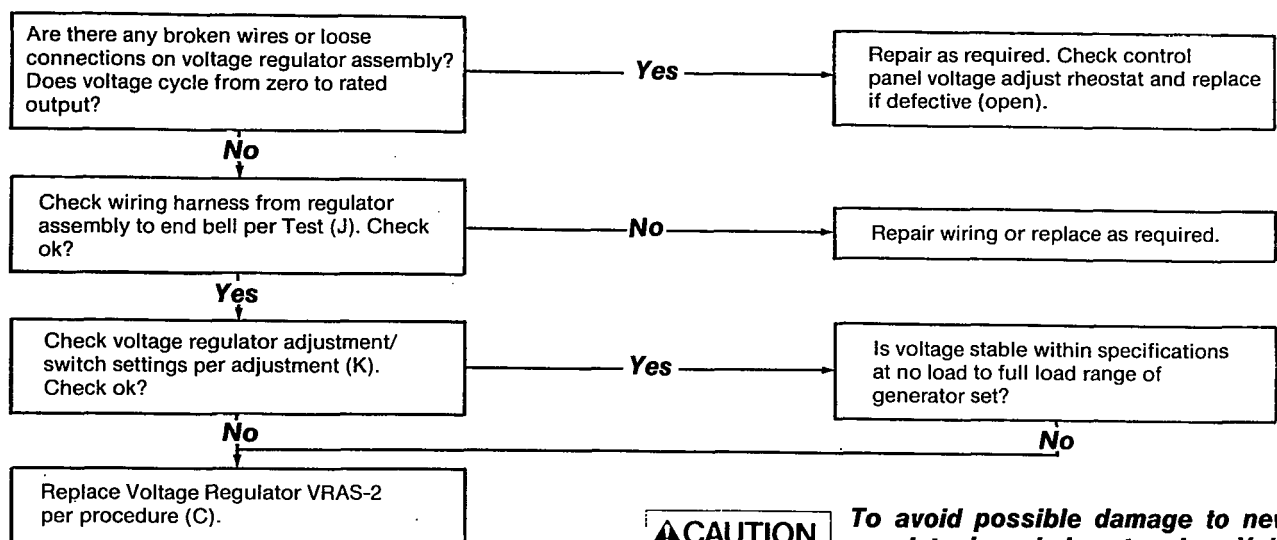


**⚠ CAUTION** To avoid possible damage to new regulator board, do not replace Voltage Regulator VRAS-2 until external trouble has been corrected.

## FLOW CHART C. OUTPUT VOLTAGE TOO HIGH OR LOW.

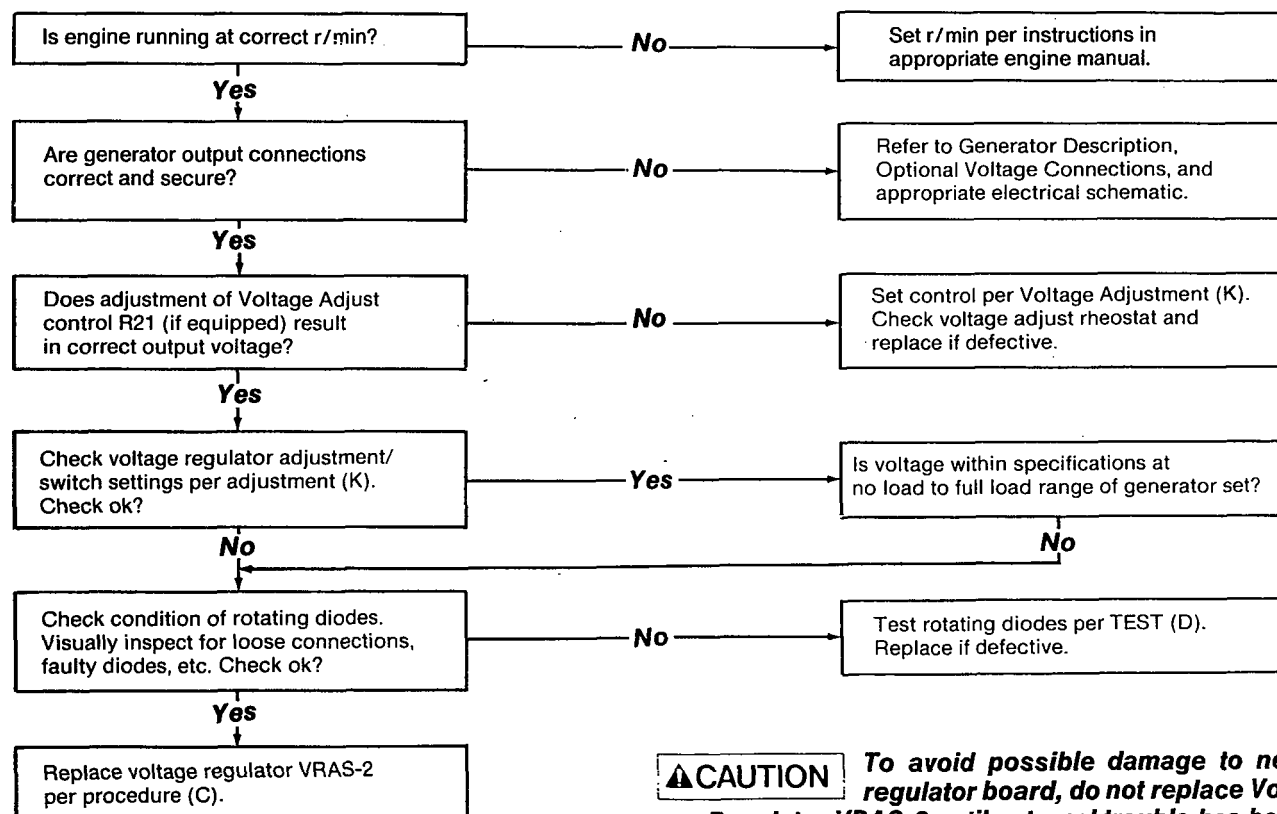


**⚠ CAUTION** To avoid possible damage to new regulator board, do not replace Voltage Regulator VRAS-2 until external trouble has been corrected.

## FLOW CHART D. EXCITER FIELD BREAKER TRIPS.

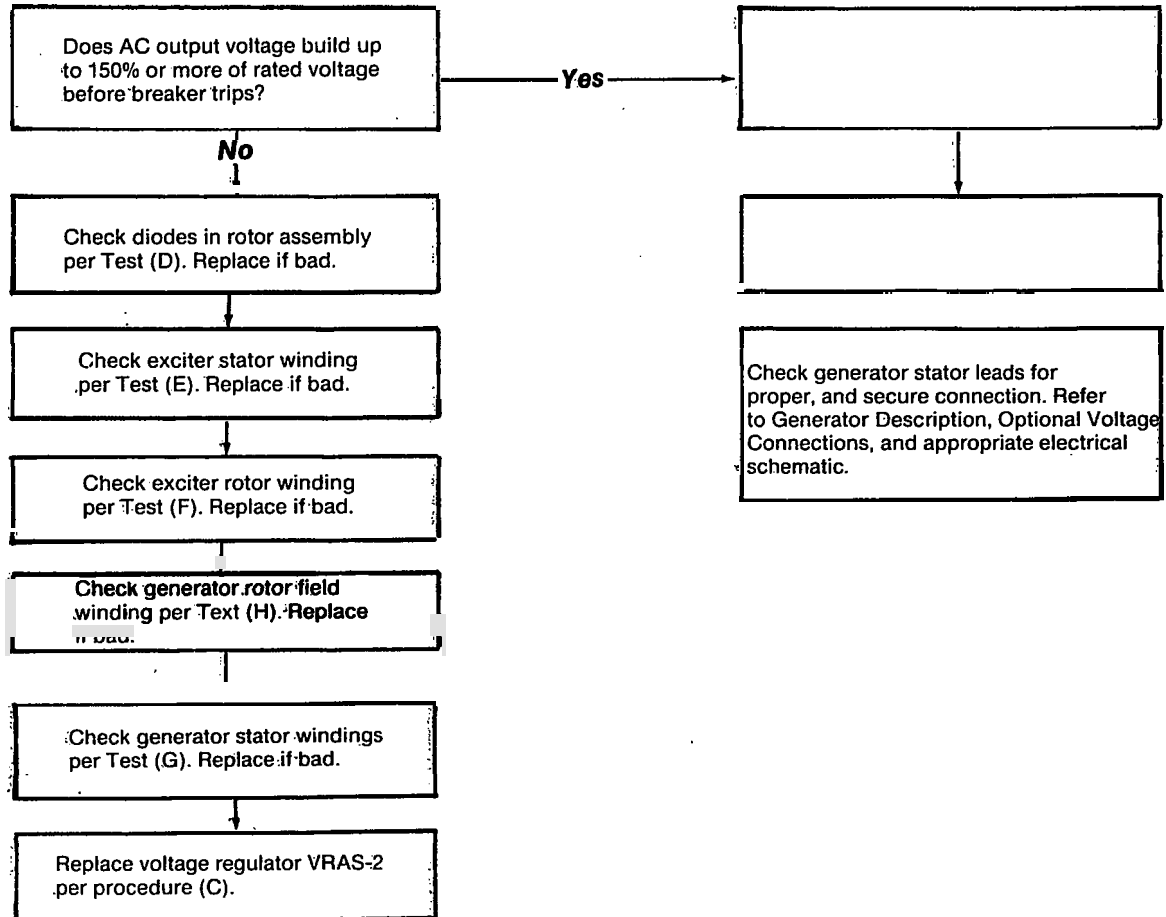


**⚠ CAUTION** *To avoid possible damage to new regulator board, do not replace Voltage Regulator VRAS-2 until external trouble has been corrected.*

## FLOW CHART E. UNBALANCED GENERATOR OUTPUT VOLTAGE

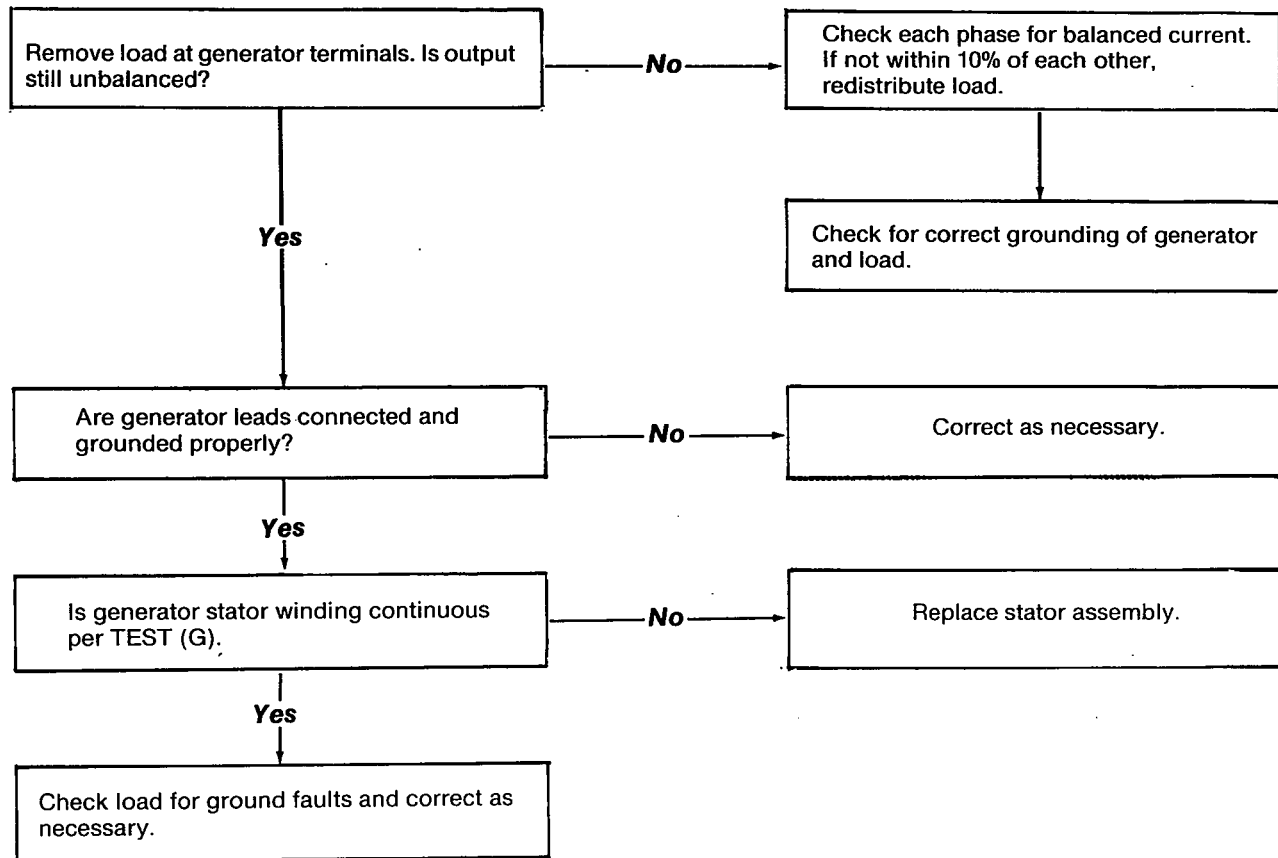

## FLOW CHART F. NO AC OUTPUT THROUGH SET MOUNTED CIRCUIT BREAKER.

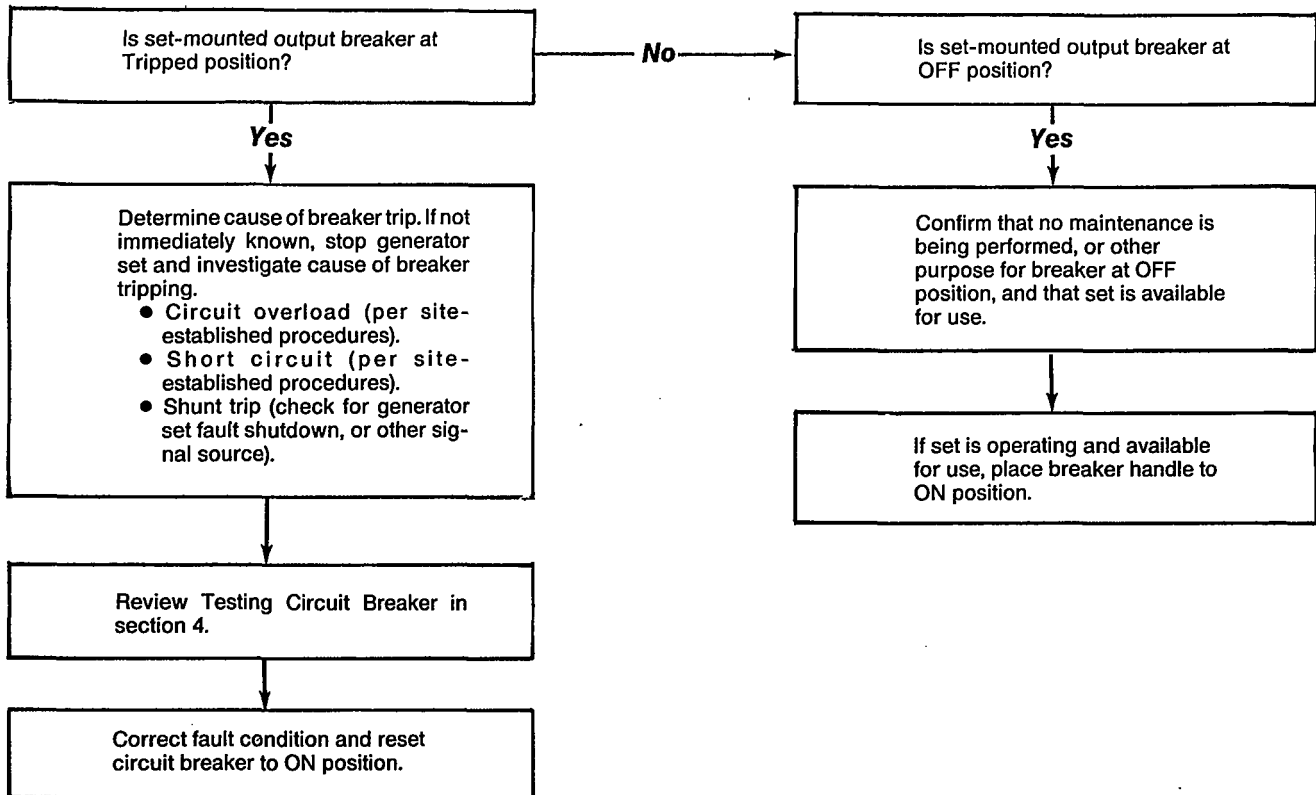

# Section 4. Generator/Regulator Tests/Adjustments

All of the following adjustments and tests can be performed without disassembly of the generator. They should be used for testing generator and regulator components in conjunction with the troubleshooting flow charts. All ohmmeter tests must be made with the unit stopped to prevent meter damage.

## (A)

### TESTING AC RESIDUAL VOLTAGE

Generator residual AC voltage should be checked first if there is no AC power output. A good place to check is at terminal block TB21, across terminals 22 and 23. Residual voltage should be approximately 14 VAC (no-load) at normal operating r/min. If none, flash the field following the instructions in Test B.

If residual voltage is present at TB21, then check the continuity of circuit breaker CB21. If CB21 is ok, proceed to voltage regulator VRAS-2 and check for residual voltage between terminal numbers 2 and 3. If none, check continuity between these points with the GenSet shut down.

## (B)

### FLASHING THE FIELD

If output voltage does not build up, it may be necessary to restore residual magnetism by flashing the field. This requires a 6-volt battery and a 12-amp 300-volt diode wired as shown in Figure 4-1.

A 3-volt source will also work, as will a 12- or 24-volt source. However, if a 12- or 24-volt source is used, a 2-watt, 20- or 40-ohm resistor, respectively, must be in series with the diode to drop the voltage to 6-volts.

Flashing the field can be accomplished with generator set operating or not. Either of the following procedures should be sufficient to restore residual magnetism.

#### With GenSet in Operation

1. Start the GenSet and operate at normal r/min.
2. Touch the positive battery lead to TB1-9 of VRAS-2, and the negative lead to TB1-10. Hold the leads in place just long enough for the voltage to build up to the normal operating level, then remove the leads.

3. Check generator voltage, and shut down GenSet. Restart GenSet, and run at no load. Unit must build up voltage without field flashing. If it does not, shut down set and perform continuity check of all related wiring.

#### With GenSet Shut Down

1. Touch the positive battery lead to TB1-9 and the negative lead to TB1-10 of VRAS-2.
2. Hold the leads in place for no longer than 5 seconds.
3. Start GenSet and run at no load. Unit must build up voltage without field flashing. If it does not, shut down GenSet and perform continuity check of all related wiring.

#### CAUTION

**Incorrect field flashing procedures can damage regulator. Do not maintain field flash connection to exciter circuit longer than 5 seconds.**

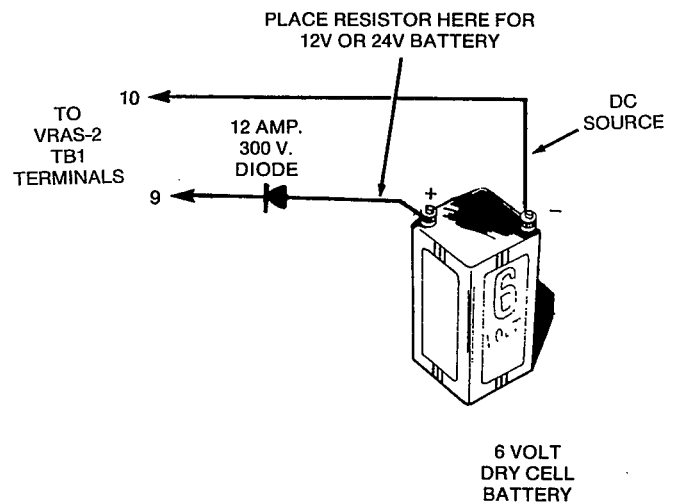


FIGURE 4-1. FIELD FLASHING CIRCUIT

## (C)

### VOLTAGE REGULATOR VRAS-2 REPLACEMENT

Use the following procedure for replacing the voltage regulator assembly:


1. Stop the engine, and disconnect starter batteries.
2. Disconnect, and if necessary label the wires from VRAS-2/TB1. Refer to AC control wiring diagram.
3. Remove the mounting screws, replace old VRAS-2 with new, and secure in place with mounting screws.
4. Reconnect wires removed in step 2 to proper terminals.
5. Perform voltage regulator adjustment/switch settings for specific voltage and method of regulation desired per procedure (K).

## (D)

### TESTING ROTATING RECTIFIERS (DIODES)

The six diodes mount on the rotating exciter assembly are tested as follows:

1. Disconnect one diode at a time (Figure 4-2) by removing diode from heatsink.
  - A. Use proper size wrenches to hold the diode body while removing the nut.
  - B. Push the diode free of the heatsink mounting hole.

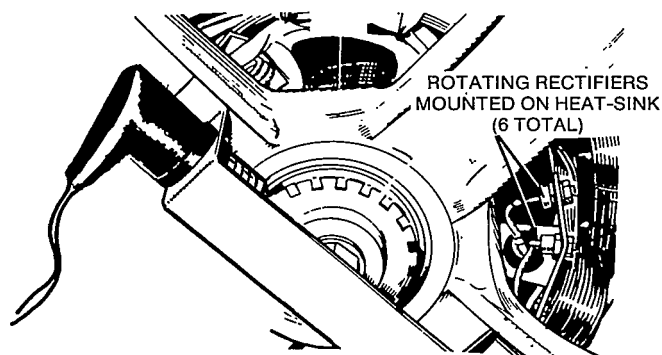

USE 24-IN-LB (2.7 N•m) TORQUE WHEN REPLACING NUTS OF F1+ and F2-, CR1, CR2, CR3, CR4, CR5 and CR6

FIGURE 4-2. DIODE ASSEMBLY



**Excessive dust or dirt on diodes and other components will cause overheating and eventually failure. Keep these assemblies clean!**

2. Test that diode before proceeding to the next one.

- A. Use an accurate ohmmeter to check the resistance of the diode. Connect one lead to the flag of the diode and the other lead to the stud. See Figure 4-3. Observe reading.
- B. Now reverse leads and again observe reading. A good diode should have a much higher reading in one direction than the other. If both readings are high, or if both readings are low, diode is defective and must be replaced with a new, identical part.

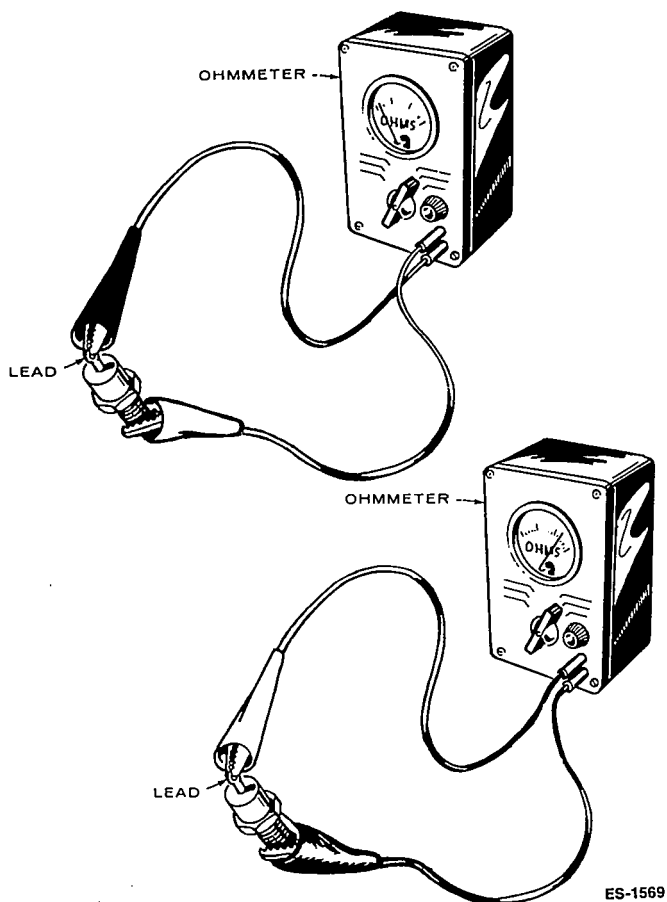


FIGURE 4-3. TESTING DIODES

3. To replace diodes, use the following procedure:
  - A. Unsolder leadwires of defective diodes from flag terminals.
  - B. Insert new diode into heatsink mounting hole. Using nut and washer provided, secure diode to heatsink.
  - C. Use proper size wrenches to hold the diode body while tightening the nut. Torque diodes on rotating exciter assembly to 24 in-lb (2.7 N•m).
  - D. Solder leadwires to new diode flag terminals.



**Excessive heat on these rectifiers (diodes) will destroy them. Use a 40 watt soldering iron. Hold a needlenose pliers between diode and soldering point to prevent destructive heating.**

## (E)

### TESTING EXCITER STATOR

#### Testing for Grounds

Using an ohmmeter, R x 100 scale, measure the insulation resistance between either lead F1 or F2 and the laminations (Figure 4-4). A reading of less than one megohm indicates a ground.

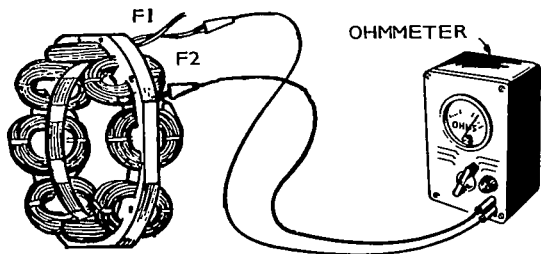


FIGURE 4-4. TESTING EXCITER FIELD

#### Testing Winding Resistance

Measure coil resistance between leads F1 and F2 with an ohmmeter, scale F x 1. See Figure 4-5. Resistance should be approximately 14.8 to 18.2 ohms at 20°C (68°F).

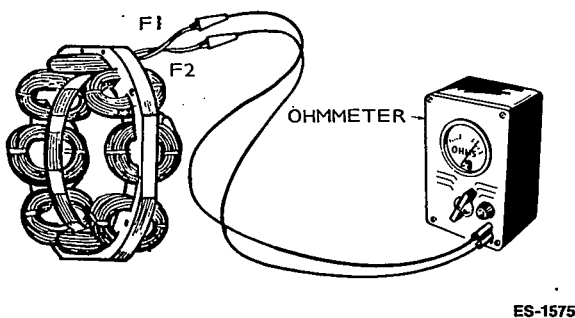


FIGURE 4-5. TESTING EXCITER FIELD

## (F)

### TESTING EXCITER ROTOR

#### Testing for Grounds

Remove diodes CR1, CR2, CR3, CR4, CR5, and CR6 from diode heat sink assemblies. Using an ohmmeter, R x 100 scale, measure insulation resistance between any of the leads and the laminations (exclude the diodes from the test circuit). See Figure 4-6. A reading of less than infinity indicates a ground.

#### Testing Winding Resistance

Using a Kelvin Bridge meter, measure resistance between leads pairs T1-T2, T2-T3, and T1-T3. Resistance should be approximately 0.46 to 0.61 ohms at 20°C (68°F).

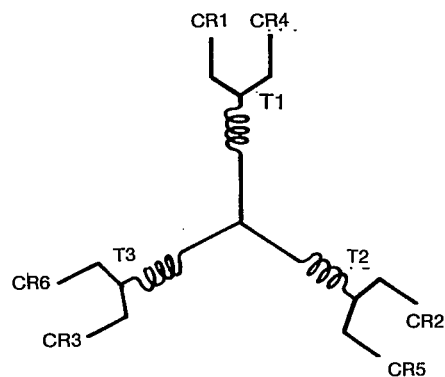


FIGURE 4-6. TESTING EXCITER ARMATURE



## (G)

### TESTING GENERATOR STATOR

#### Testing for Grounds

Before testing stator, disconnect control wire 4, 7, 8, 9, and 10 from TB21. Isolate from ground and each other.

Connect all stator output leads (T1-T12) together. Use an ohmmeter set on the R x 100 scale and measure the insulation resistance between these windings and the stator frame. A reading of less than one megohm indicates a ground. Field circuit breaker can be either open or closed for this test.

#### Testing for Shorts

To check for shorts between individual windings, first refer to electrical schematic to determine individual coil lead wires (T1-T4, T7-T10, etc.) Be sure to disconnect the instrumentation leads and stator leads T4, T7, T8, T9, and T10. Connect an ohmmeter, R x 100 scale, to one lead of a stator winding, and the other ohmmeter lead to all other stator leads connected together. Except, leaving the other end of coil winding being tested, open.


Example:

- Ohmmeter lead to: T1 coil winding lead.
- Ohmmeter lead to: T9,12,7,10,2,5,3,6,8, and 11 connected together.
- Coil windings lead T4: Open

A reading of less than infinity indicates a short. Repeat until all six coils have been tested.

Measure resistance of windings using a Kelvin Bridge meter. Refer to Figure 4-7 and Table 4-1. If any windings are shorted, open, or grounded, replace the stator assembly. Before replacing the assembly, check the leads for broken wires or damaged insulation.

Stator output leads T4, T7, T8, T9 and T10 are interconnected (within the stator) to five stranded #10 aircraft control wires. These wires are labeled 4,7,8,9, and 10 respectively and terminate at TB21 (terminals 22-26).

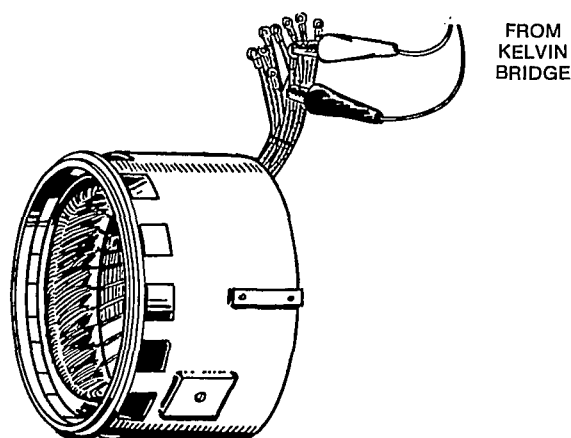

ES-1572

FIGURE 4-7. TESTING STATOR WINDINGS

TABLE 4-1. RESISTANCE VALUES FOR STATORS

All resistances should be within the values shown at 20°C (68°F). Use an accurate instrument such as a Kelvin Bridge for this test. Test between the following coil leads:

T1-T4  
T9-T12

T7-T10  
T2-T5

T3-T6  
T8-T11

50 Hz		60 Hz	
kW RATING	RESISTANCE Ohms (±10%)	kW RATING	RESISTANCE Ohms (±10%)
165	0.0077	200	0.0065
190	0.0071	230	0.0059
200	0.0058	250	0.0045
230	0.0043	275	0.0031
275	0.0034	300	0.0031
290	0.0034	350	0.0025


## (H)

### TESTING GENERATOR ROTOR

#### Testing for Grounds

Use an ohmmeter (R x 100 scale) and measure as follows:

1. Disconnect F1 and F2 rotor leads from the rotating diodes.
2. Measure between either lead and the rotor shaft (Figure 4-8).
3. A reading of less than one megohm indicates a ground.

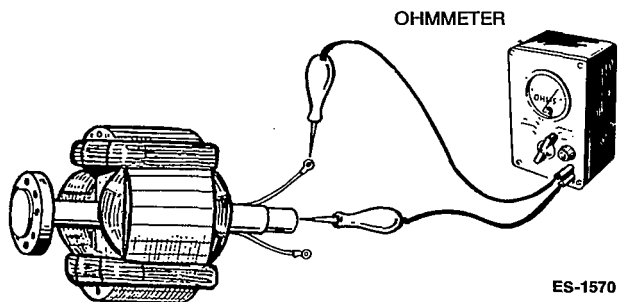

CONTACT ONE PROD TO EACH OF THE FIELD LEADS AND THE OTHER PROD TO THE ROTOR SHAFT. IF ROTOR IS GOOD THERE SHOULD BE NO READING ON OHMMETER.

FIGURE 4-8. TESTING ROTOR FOR GROUNDS


#### Testing for an Open Circuit

1. Disconnect and test between F1 and F2 leads (Figure 4-9).
2. Refer to resistance values given in the following table.

TABLE 4-2. ROTOR RESISTANCES

50 Hz		60 Hz	
kW RATING	RESISTANCE Ohms (±10%)	kW RATING	RESISTANCE Ohms (±10%)
165	1.90	200	1.90
190	2.04	230	2.04
200	2.17	250	2.17
230	2.46	275	2.46
275	2.69	300	2.46
290	2.69	350	2.69

3. Replace the rotor if it is grounded or has an open or short.

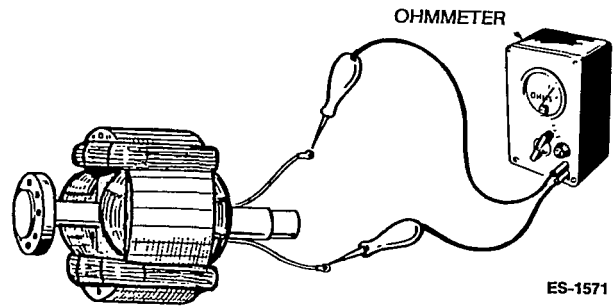

CONTACT ONE PROD TO ONE FIELD LEAD AND THE SECOND PROD TO THE OTHER FIELD LEAD

FIGURE 4-9. TESTING ROTOR FOR AN OPEN CIRCUIT

## (J)

### WIRING HARNESS CHECK

Carefully check wiring harnesses as follows:

1. Inspect all wires for breaks, loose connections, and reversed connections. Refer to applicable wiring diagram.
2. Remove wires from terminals at each end and using an ohmmeter, check wire end to end for continuity or opens.
3. Using an ohmmeter, check each wire against each of the other wires for possible shorts or insulation breaks under areas covered by wrapping material.
4. Reconnect or replace wires according to applicable wiring diagram.

## (K)

### VOLTAGE REGULATOR (VRAS-2) ADJUSTMENT

After replacement, voltage regulator VRAS-2 adjustment is performed as follows:

1. Open controller panel doors.

**⚠ WARNING** High voltages in the control present an electrical shock hazard which can cause severe personal injury or death. Proceed with care!

3. Refer to Figure 2-7 Voltage Regulator for proper Stability Range (S1) and Mode Selection (S2 and S3) switch settings.
4. Ensure that all connections are proper and secure.
5. **Controller with Detector AC meter option:** Refer also to adjustment (M).

**Controller without Detector AC meter option:** Connect an accurate voltmeter to VRAS-2/TB1-2 and -3 terminals.

6. Start generator set.
7. Using a screwdriver, turn R32 potentiometer on printed circuit board VRAS-2 to increase or decrease the voltage as required to achieve proper setting. Observe voltmeter while making adjustment. Set voltage with no load connected to generator. (Example: For a 120/240 volt connection, set at no-load voltage for approximately 246 volts). If voltage is unstable or tends to hunt, refer to troubleshooting section.
8. Stop generator set, and prepare all installation and generator set controls for operation readiness.

## Regulator Specifications

### Input Power

Input voltage across terminals 2 and 4:  
208 to 240 volts RMS  $\pm 10\%$ ,  
depending on wiring configuration  
Input frequency: 45 to 65 Hz  
Maximum burden: 800 VA

### Output Power

Continuous Rating: 3.0A  
One minute rating: 6.5A (in current limit)  
Current limit: 6.5A  $\pm 0.75A$

### Minimum Field Resistance

0.6 ohms @ 25° C copper winding exciter

### Regulator Sensing

Single-phase average voltage directly proportional to generator frequency to breakpoint. Independent of frequency after breakpoint. Nominally set to 59 Hz (49 Hz for 50 Hz sets).

### Operating Temperature

-40° to +80° C (-40° to 176°F)

## (L)

## RECONNECTION

Figure 2-3 shows the reconnection possibilities for the YB series generators. When reconnecting bus-bars for a different voltage, be sure to set the switches on the voltage regulator to conform to the mode of regulation and stability range for the new configuration. Refer to Figure 2-7.

## (M)

## GENERATOR VOLTAGE ADJUST (R21)

The following procedure pertains to generator sets equipped with Detector AC option only.

1. Start generator set.
2. Prepare installation equipment for Test Without Load.

3. Operate Phase Selector switch to read generator output current and voltage, while performing the following steps:

- A. Insert a screwdriver into the Voltage Adjust control on the front of the generator set control and carefully loosen the locking nut.
- B. Slowly turn the screwdriver clockwise to increase voltage, or counterclockwise to decrease voltage.
- C. When set at correct voltage, tighten the locking nut. Be careful not to change adjustment.

If correct voltage cannot be attained by R21 adjustment refer to VRAS-2 adjustment procedure (K).

Observe that ammeter does not register any output current. If output current is observed on the ammeter, contact an Onan representative.

4. Move the Phase Selector switch to the Off position.
5. Stop generator set, and prepare all installation and generator set controls for operation readiness.

## (N)

## TESTING CIRCUIT BREAKER

### General

Common maintenance practices is normally all the attention the circuit breaker should require. Such as periodic exercise of breaker, and checking conductor connections cleanliness and security. Circuit breaker options vary by customer requirements. Review the Optional Circuit Breaker description in Section 2 and perform the following checks and adjustment as applicable to your specific breaker model.

When performing tests and adjustments of the circuit breaker, remove the generator set from available service by placing the Remote-Stop-Run switch to Stop position and disconnect the battery negative (-) cable to avoid accidental start-up of unit.

**⚠ WARNING** *Accidental generator set starting can result in severe personal injury or death during service procedures. Place the Remote-Stop-Run switch to Stop position, and disconnect battery cable before performing circuit breaker tests and adjustments.*

**Exercising Breaker:** Actuate the breaker handle to the ON and OFF positions several times. If the breaker is equipped with a Trip Test button, the breaker should be tripped, reset and actuated to ON several times. This will remove any dust accumulation on the mechanism and latch surfaces.

**Checking Insulation Resistance:** Disconnect the load and line conductors from the breaker, and place the breaker to the ON position. Using an ohmmeter (R x 10K scale), measure the insulation resistance between each pole and ground. Tests should be made between phases of opposite polarity as well as current carrying parts of the circuit breaker to ground. Also, a test should be made between the line and load terminals with the breaker in the OFF position. A resistance reading of less than one megohm indicates a ground. Investigation should be made for possible contamination on the case surfaces of the breaker.

**Checking Contact Resistance:** Extensive operations of the breaker under load conditions may cause deterioration of the contacts. Testing for contact deterioration can be accomplished by performing a resistance check or voltage drop check across the breaker poles.

1. Resistance Check.

- A. Isolate the breaker by placing the Remote-Stop-Run switch to Stop position, disconnecting the generator set starting battery, and disconnecting the line and load wires from circuit breaker.
- B. Place circuit breaker handle to ON position.
- C. Check resistance values across each pole (line to load).
- D. Resistance readings should be relatively equal for all three phases.

2. Voltage Drop Check.

- A. Ensure that line and load wire connections are proper and secure.
- B. Start generator set.
- C. Place breaker handle to Reset and then to ON position.
- D. Perform voltage check at line connection then load connection.
- E. Compare the voltage drop readings across each pole. The comparisons should show each poles voltage drop as being only slight variation. And also the comparisons of phase to phase should be relatively equal. Unequal or excessive millivolt drops across a complete breaker can be an indication of contaminated contacts or loose connections.

**Checking Shunt-Trip Operation:** The shunt-trip feature is available in varying AC or DC voltages. Proper circuit breaker model is selected and installed at the factory to meet customer requirements.

To check shunt-trip operation, perform the following:

1. Refer to original equipment order, installation wiring diagrams, and unit wire routing to identify and confirm proper AC or DC signal source connections.
2. Check that wire connections are secure.
3. Place circuit breaker to ON position.
4. Apply appropriate signal voltage (DC: 12-, 24-volts, etc.; or AC: 120/240-, 480-volts). The shunt-trip solenoid should energize, and trip open the breaker.
5. If breaker did not trip open, remove signal source and perform continuity check of interconnect wiring and shunt-trip solenoid lead wires. Replace interconnect wiring if defective. Replace shunt-trip solenoid if found to be shorted or open. Contact Onan distributor for assistance.

**Checking Auxiliary Contacts:** If equipped, the circuit breaker will have three leads for wiring interconnect of a set of internal contacts (form C; 1 -normally-open, and 1 - normally-closed). This feature provides for remote annunciator connections. Review installation wiring diagrams for specifics of interconnect. Perform continuity checks of wiring with breaker at ON and OFF position to confirm proper lead selection for interconnect. Replace internal contact circuits if shorted or open. Contact an Onan distributor for assistance.

**Adjusting Magnetic Trip Operation:** If equipped with front-adjustable magnetic trip controls, the short circuit protection feature for each pole of the circuit breaker can be adjusted equally or individually to best suit customer requirements. Any current surge above the trip settings will actuate the trip mechanism. These adjusters are set equally to the high position at the factory. Consult on-site requirements and adjust to proper position.



# Section 5. Generator Disassembly / Assembly

## GENERATOR DISASSEMBLY

1. Disconnect the negative (-) battery cable to prevent accidental starting of the generator set while servicing.

**⚠ WARNING** *Accidental starting of the generator set during this procedure presents the hazard of severe personal injury or death. Make sure to disconnect the negative battery cable before beginning.*

2. Remove housing side panels as necessary to disconnect and remove load wires.
3. Disconnect lead wires from the control box. Check wire markings for legibility to ease assembly. Arrange leads so they can be withdrawn easily from the control box.

Disconnect all engine and generator control wire leads from inside control box as follows:

### DC Wiring

- A11/TB1-8, -10, and terminals -1 through -7 as required.
- Unplug A11/J1, and J2.
- Unplug P5, P6 (battery charge connections).

### AC Wiring

- VRAS-2/TB1-9, and -10.
- TB21-22 to -30.

4. Withdraw the DC and AC control lead wires from rear of control box. Ensure that all leads are disconnected and removed from control box.
5. Remove generator air inlet grille and end bell cover. Then remove the overspeed switch/sensor and bracket from the end bell and rotor shaft. See Figures 5-1 and 5-2.
6. Attach a sling and hoist to the control cabinet. Loosen fasteners securing the control housing to stator assembly. Remove control housing from generator and set to rest on smooth floor.
7. Block the rear of the engine in place by supporting the flywheel housing. Remove capscrews securing the generator mounting bracket to the skid base. Remove the generator air outlet screen.
8. Attach a sling and hoist to the end bell. Loosen fasteners that secure the end bell to the stator assembly (includes exciter stator assembly). Set to rest (lay flat) on wooden blocks so not to damage exciter stator or end bearing.

**⚠ WARNING** *To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.*




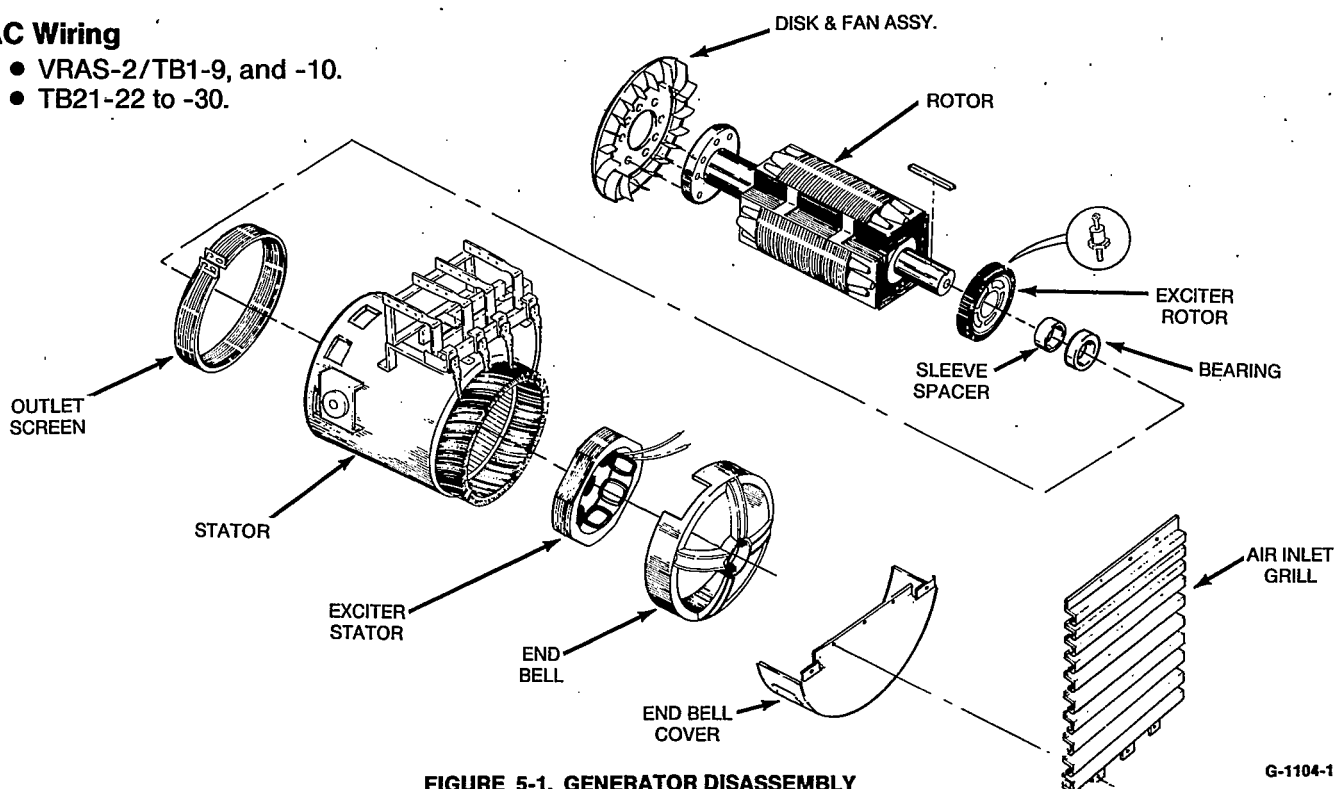


FIGURE 5-1. GENERATOR DISASSEMBLY

G-1104-1

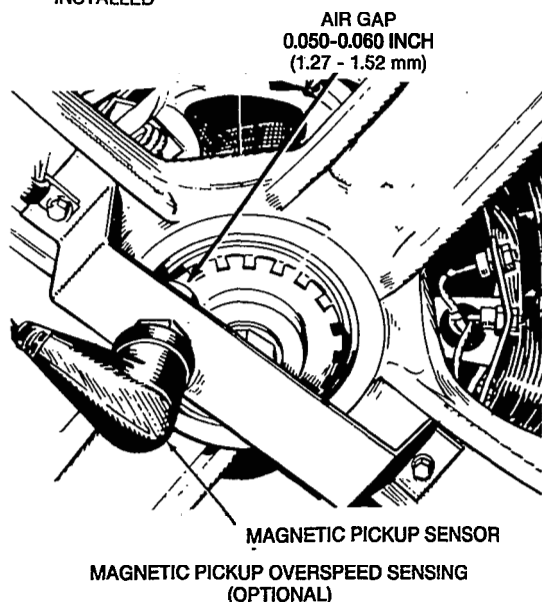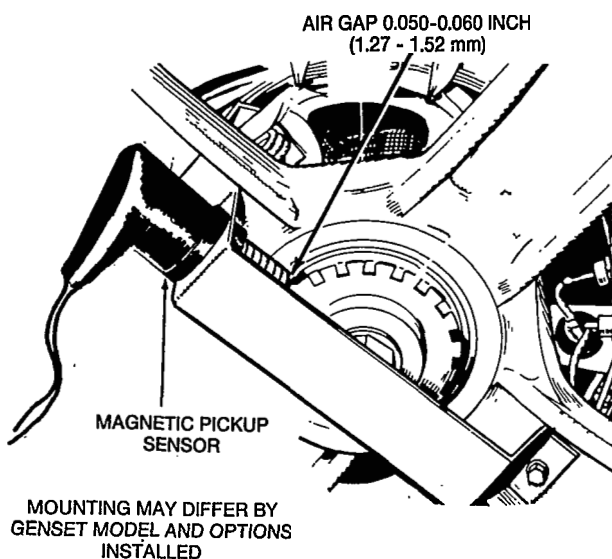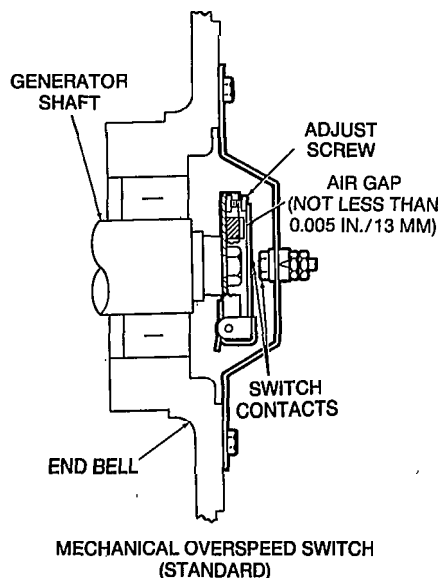


**FIGURE 5-2. OVERSPEED SWITCH, AND  
MAGNETIC PICKUP SENSOR**

9. Attach a sling and hoist to the stator assembly. Tension hoist sufficiently to take weight of stator. Remove the capscrews securing the stator assembly to the engine flywheel housing. Remove stator assembly clear of rotor.

**▲WARNING** *To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.*

**▲CAUTION** *Do not allow the rotor to hang unsupported for any extended period. Otherwise, drive disk damage can occur.*

10. Install support under rotor when stator is clear of rotor, Figure 5-3. Set stator assembly to rest on clean surface, and block up to prevent from rolling.

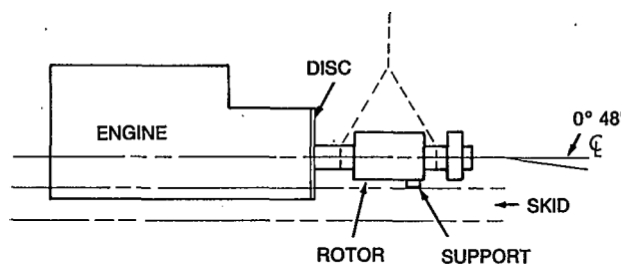

**FIGURE 5-3. ROTOR REMOVAL**

11. Attach a sling and hoist to rotor assembly: Tension hoist to take weight of rotor.

**▲WARNING** *To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.*

12. Remove capscrews securing the drive disk to engine flywheel, and remove rotor assembly from engine. Set the rotor on wooden blocks so fan is not supporting any of the rotor weight.
13. Perform thorough tests of all generator components while generator is disassembled. See Section 4. Refer to parts manual for replaceable parts and assemblies.

## GENERATOR ASSEMBLY

1. If any diodes require replacement, refer to Section 4, test and adjustment (D).
2. Assemble the exciter rotor, sleeve spacer and bearing onto rotor shaft. Install the modified hex head bolt, lock washer, and flat washer. Tighten bolt to a torque of 60 to 70 ft-lb (81 to 95 N•m).
3. Assemble the drive disk onto rotor hub. Tighten the capscrews to a torque of 200 to 240 ft-lb (271 to 325 N•m).
4. Attach a sling and hoist to the rotor assembly and mount the drive disk, flat washers (if required), and blower onto engine flywheel. See Figure 5-1. Tighten the capscrews to a torque of 110 to 120 ft-lb (149 to 162 N•m).

### **▲WARNING**

***To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.***

5. Place a support under rotor (Figure 5-3).

### **▲CAUTION**

***Do not allow the rotor to hang unsupported for any extended period. Otherwise, drive disk damage can occur.***

6. Attach a sling and hoist to the stator assembly. Place stator in position over free end of rotor, and remove support from beneath rotor.

### **▲WARNING**

***To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.***

7. Guide the stator over rotor assembly and fasten to engine flywheel housing. Tighten the stator mounting capscrews to a torque of 45 to 55 ft-lb (61 to 75 N•m).
8. Attach a sling and hoist to the end bell assembly (includes exciter stator assembly). Apply a layer of Molykote grease, Onan #524-0118 on end bell bearing bore before mounting over bearing. Fasten end bell to stator. Tighten capscrews to a torque of 55 to 65 ft-lb (75 to 88 N•m).

### **▲WARNING**

***To prevent personal injury, use adequate lifting devices to support heavy components. Keep hands and feet clear while lifting.***

9. Refer to Figure 5-2. Mount and adjust Mechanical Overspeed Switch or mount and adjust Magnetic Overspeed Sensor. Set to proper air gap.
10. Install the generator air screen.
11. Attach sling and hoist to the control housing assembly. Mount in position over generator and secure fasteners.
12. Reconnect generator output leads to load connections, and all control wire leads and plug-ins to proper terminals or plug-in jacks. Refer to proper wiring diagram, and Voltage Connections, Figure 2-3.
13. Verify that all connections are proper and secure and then install the generator output box cover, air inlet grille and end bell cover. Secure all fasteners.
14. Connect the negative (-) battery cable and test the generator for operation.





# Section 6.


## Wiring Diagrams

---

WIRING DIAGRAM	DRAWING NUMBER	PAGE
GenSet AC Control (with meter option) .....	612-6269	6-2/3
GenSet AC Control (without meter option) .....	612-6270	6-4/5
GenSet AC Control (voltage code 9X) .....	612-6414	6-6

1


SEE DC WIRING DIAGRAM ZONE 5-B,C,D

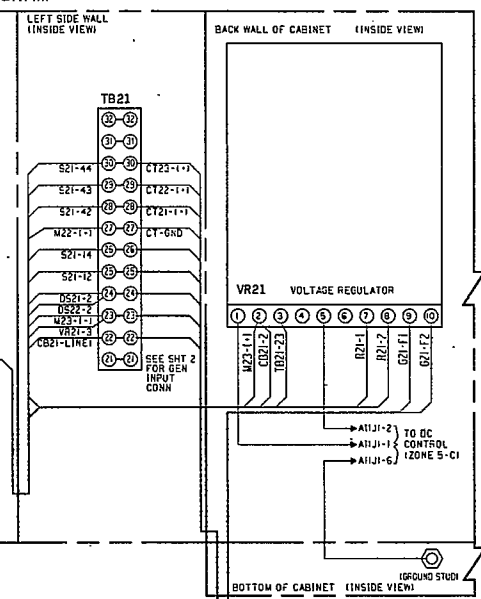

PAGE 151									
QTY	REF	DESG	PART NO	QTY	U	DESCRIPTION	QTY	U	DATE
1	801-0065	1	1	52N 100-154-6	1	2	1	2	
2	402-0037	1	1	402-0037	1	2	1	2	
3	300-0025	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
4	950-0024	1	1	WASHER-1/4 15/16"	1	2	1	2	
5	83C-0001	1	1	GRUOMET 13/16"	1	2	1	2	
6	508-0038	1	1	GRUOMET 12/1"	1	2	1	2	
7	406-0331	1	2	RECEP-FACLE-FAS-FENER	1	2	1	2	
8	406-0333	1	2	CLIP-FAS-FENER	1	2	1	2	
9	406-0334	1	2	WASHER-1/4 15/16"	1	2	1	2	
10	332-0062	1	2	SLIP-WRE 15/16"	1	2	1	2	
11	870-0-31	1	1	VOL-4-4X WET 0-32	1	2	1	2	
12	871-00-31	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
13	953-00-31	1	1	WASHER-ET 1/4 15/16"	1	2	1	2	
14	337-0049	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
15	800-0008	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
16	956-0004	1	1	WASHER-ET 1/4 15/16"	1	2	1	2	
17	8-0-0037	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
20	82-0054	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
21	83-0054	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
22	96-3289	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
23	89-3283	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
25	336-18-31	1	1	WASHER-AC 1/4"	1	2	1	2	
29	002-0020	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
30	012-0021	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
31	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
32	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
33	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
34	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
35	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
36	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
37	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
38	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
39	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
40	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
41	022-0062	1	1	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
42	812-0065	1	2	SCREW-10-16-3/8 X 3/8"	1	2	1	2	
43	VR21	REF		VOL-AGE RED-1/4"	1	2	1	2	
44	VR30	REF		ABEL-DANGER	1	2	1	2	
45	546-2005	1	2	PARTS LIST-AC 1/4"	1	2	1	2	

NOTES:

1. ALL COMPONENTS SHOWN IN THE DISASSEMBLED POSITION.
2. ILLUSTRATION NUMBERS REFER TO DRAWING 539-574-10
3. LOCATE ONE HAZARD LABEL ON EXTERIOR AND ONE ON INTERIOR OF LEFT SIDE DOOR IN ANY READILY VISIBLE AREA AVAILABLE

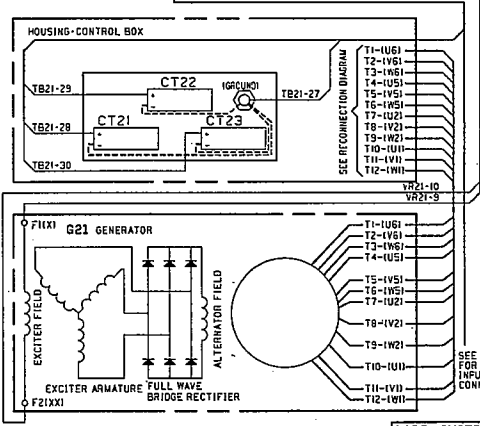



DASH NUMBERS	-51	-52	-53	-54	-55	-56	-57
QTY 1 I C721-23	302-1794-08 13	302-1794-09 13	302-1794-10 13	302-1794-11 13	302-1794-12 13	302-1794-13 13	302-1794-14 13
M32	302-1726	302-1727	302-1728	302-1729	302-1799	302-1799	302-1800
AMMETER SCALE 14221	10-400,0-8001	10-500,0-10003	10-600,0-1200	10-750,0-15001	10-1000,0-20003	10-1500,0-30001	10-2000,0-40001

DASH NUMBERS	-51	-52	-53	-54	-55	-56	-57
QTY 1 I C721-23	302-1794-08 13	302-1794-09 13	302-1794-10 13	302-1794-11 13	302-1794-12 13	302-1794-13 13	302-1794-14 13
M32	302-1726	302-1727	302-1728	302-1729	302-1799	302-1799	302-1800
AMMETER SCALE 14221	10-400,0-8001	10-500,0-10003	10-600,0-1200	10-750,0-15001	10-1000,0-20003	10-1500,0-30001	10-2000,0-40001


[illegible]



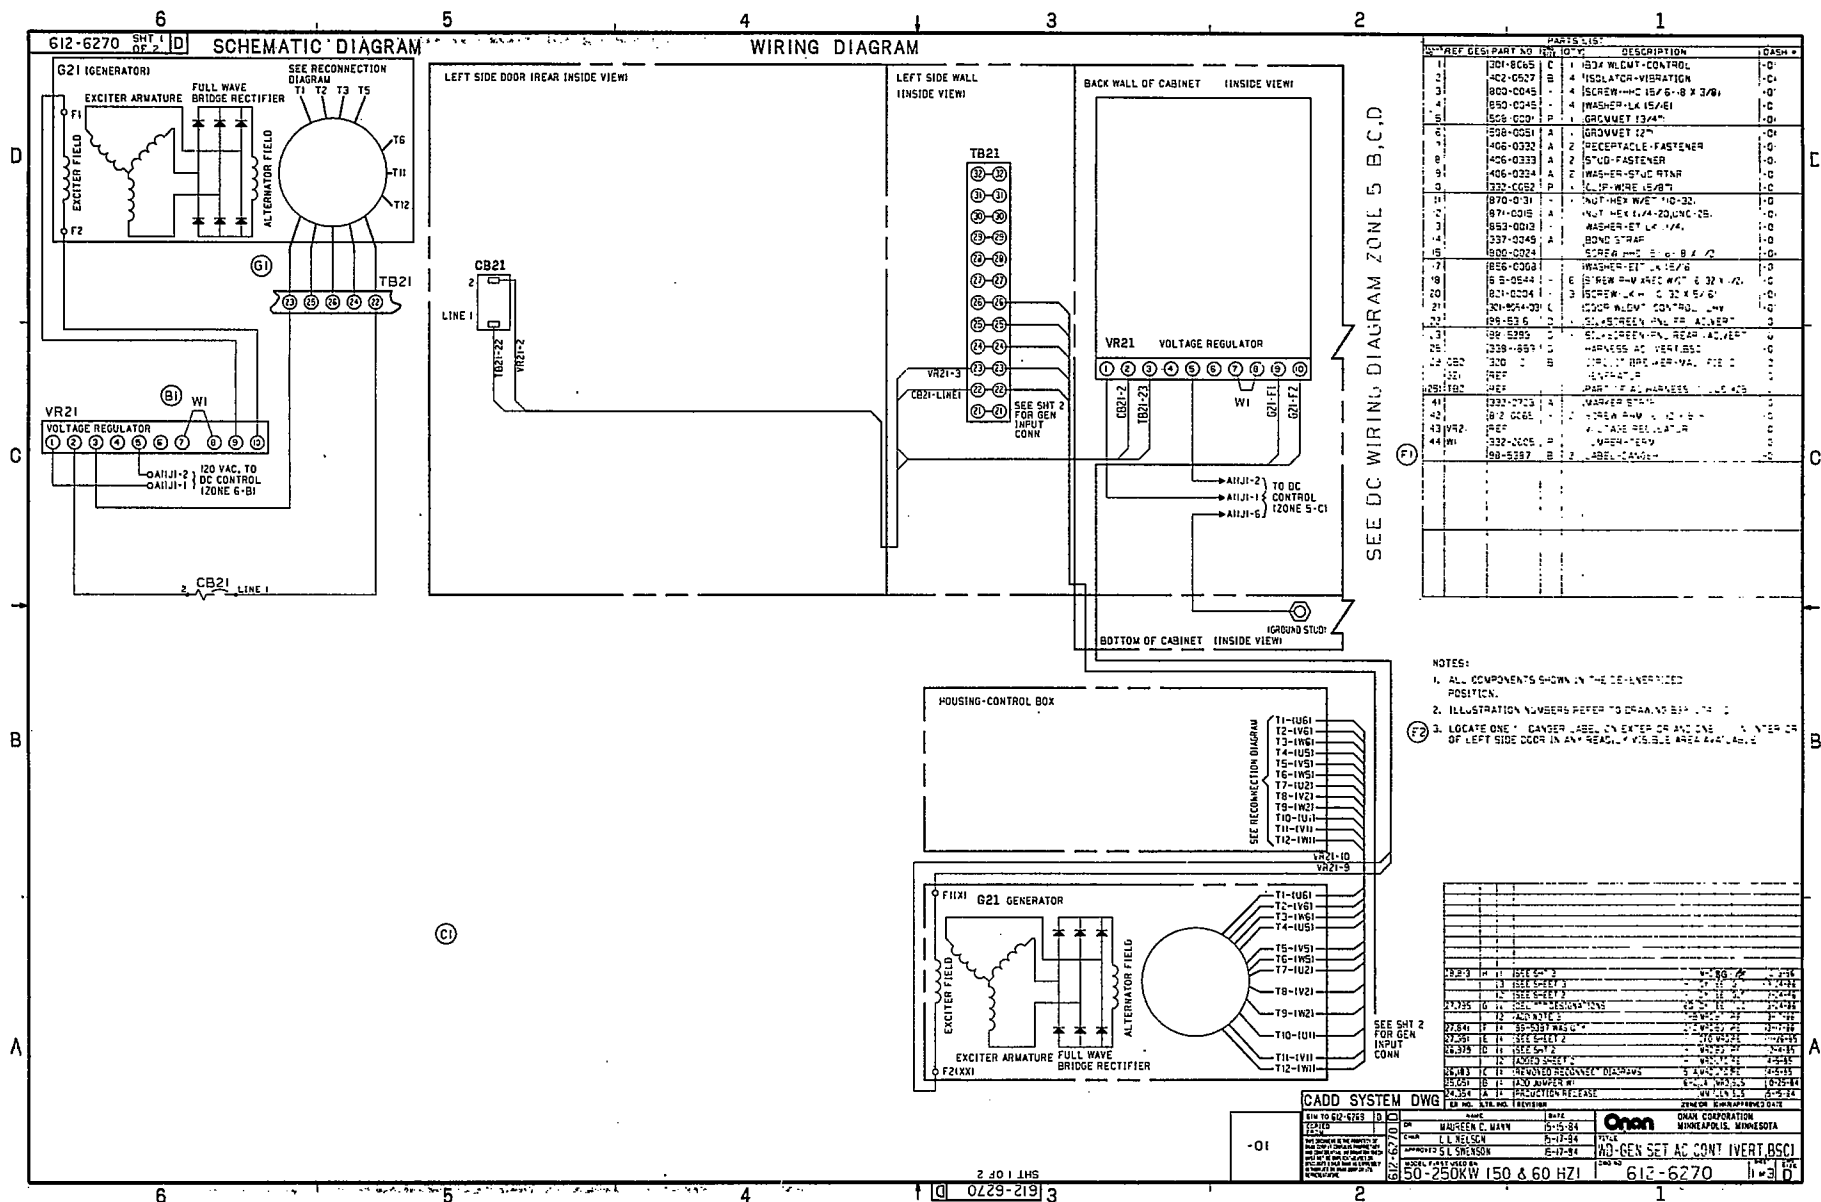

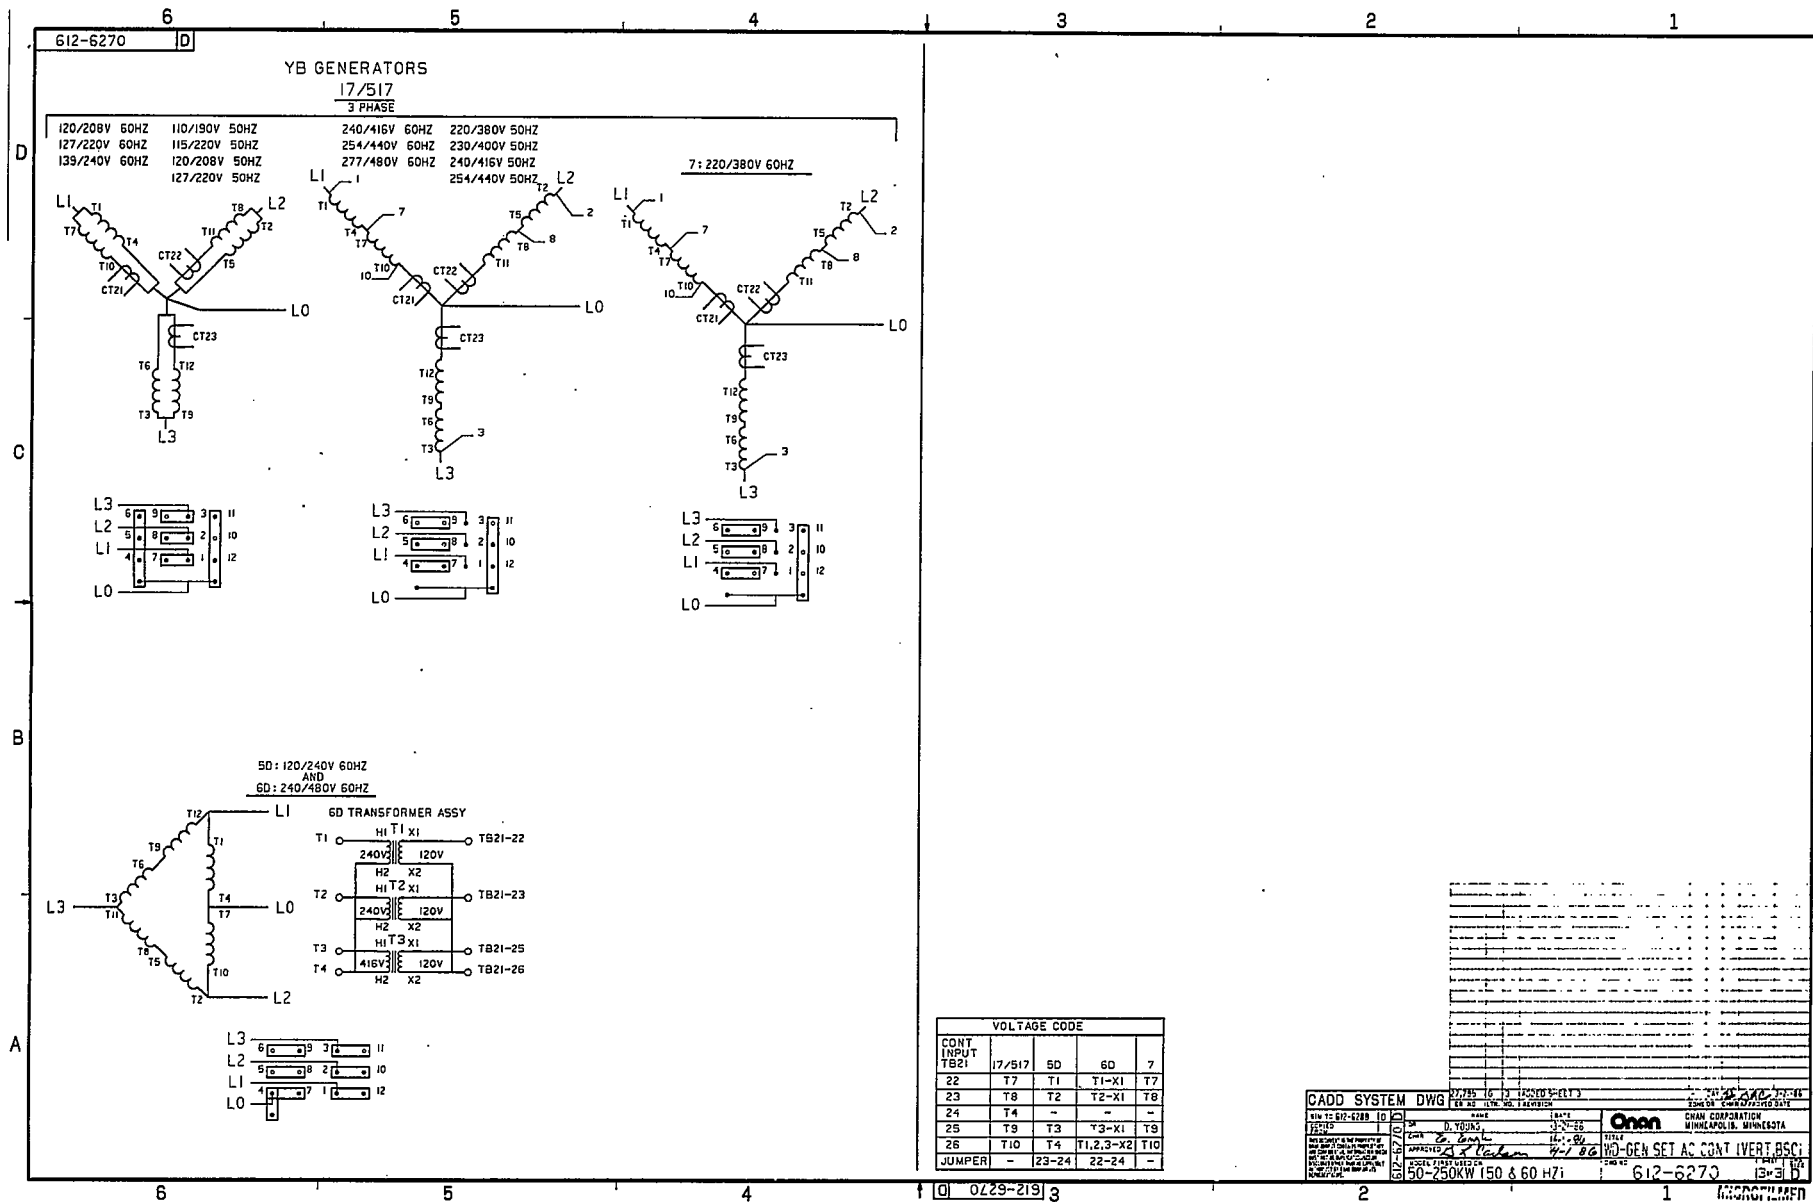

## WIRING DIAGRAM

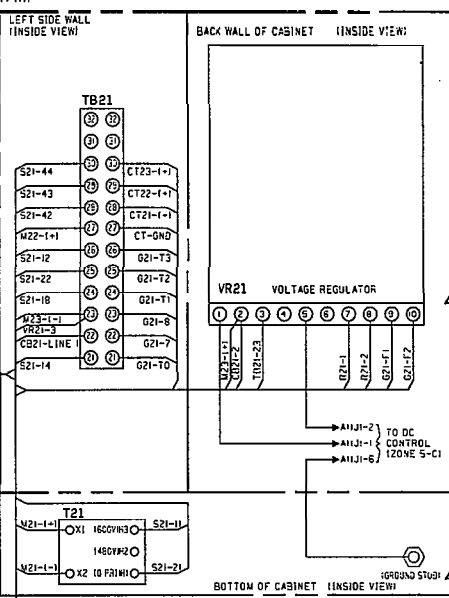

SEE DC WIRING DIAGRAM ZONE 5 B,C,D


	1	30-6065	C	SGN.WLWV-CONTRACT	ALL
	2	402-6527	B	1 SQ. A "CR-VIBRATION"	ALL
	3	802-6045	-	2 SCREEN-HC 1/2" X 8 X 3/8 I	ALL
	4	852-6045	-	4 WASH-ER 1/4" X 5/8 I	ALL
	5	852-6045	-	2 WASH-ER 1/4" X 5/8 I	ALL
	6	50R-605	A	GRUWET 12"	ALL
	7	406-6352	A	2 RECEPTACLE-FASTENER	ALL
	8	406-6353	A	2 "J" U-FASTENER	ALL
	9	406-6354	A	2 WASH-ER STD 7/8"	ALL
	10	333-6052	B	1 WASH-ER 1/4" X 5/8 I	ALL
	11	870-635	-	1 WASH-ER 1/4" X 5/8 I	ALL
	12	67-6069	A	1 WASH-ER 1/4" X 5/8 I	ALL
	13	853-630	-	1 WASH-ER 1/4" X 5/8 I	ALL
	14	337-6049	A	1 WASH-ER 1/4" X 5/8 I	ALL
	15	852-6344	-	1 WASH-ER 1/4" X 5/8 I	ALL
	16	852-6344	-	1 WASH-ER 1/4" X 5/8 I	ALL
	17	6-5-2544	-	1 WASH-ER 1/4" X 5/8 I	ALL
	18	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	19	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	20	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	21	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	22	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	23	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	24	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	25	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	26	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	27	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	28	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	29	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	30	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	31	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	32	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	33	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	34	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	35	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	36	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	37	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	38	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	39	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	40	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	41	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	42	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	43	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	44	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	45	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	46	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	47	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	48	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	49	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	50	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	51	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	52	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	53	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	54	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	55	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	56	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	57	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	58	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	59	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	60	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	61	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	62	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	63	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	64	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	65	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	66	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	67	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	68	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	69	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	70	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	71	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	72	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	73	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	74	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	75	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	76	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	77	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	78	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	79	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	80	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	81	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	82	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	83	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	84	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	85	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	86	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	87	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	88	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	89	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	90	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	91	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	92	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	93	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	94	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	95	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	96	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	97	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	98	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	99	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL
	100	87-6054	-	1 WASH-ER 1/4" X 5/8 I	ALL

(C)  
(B)

AIN ARMATURE CONNECTION  
DIAGRAM

347/600V 60HZ

The diagram illustrates the AIN armature connection for a 347/600V 60Hz system. It features a three-phase star (Y) connection of the armature windings. The terminals are labeled T1, T2, and T3. The line-to-line voltages are indicated as CT21, CT22, and CT23. The line-to-neutral voltages are indicated as L1, L2, and L3. The neutral point is labeled L0. The diagram shows the internal connections between the terminals and the neutral point, with a central point labeled 'O'.

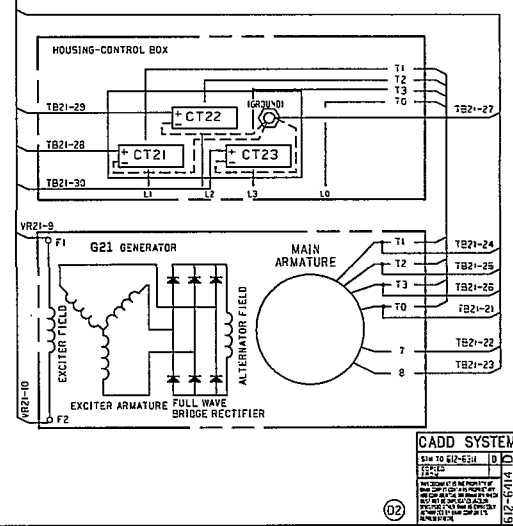[illegible]







Onan Corporation  
1400 73rd Avenue N. E.  
Minneapolis, MN 55432  
612-574-5000  
Telex: 275477  
Fax: 612-574-8087

Onan is a registered trademark of Onan Corporation