

Standard Repair Times

AUX DKX Series

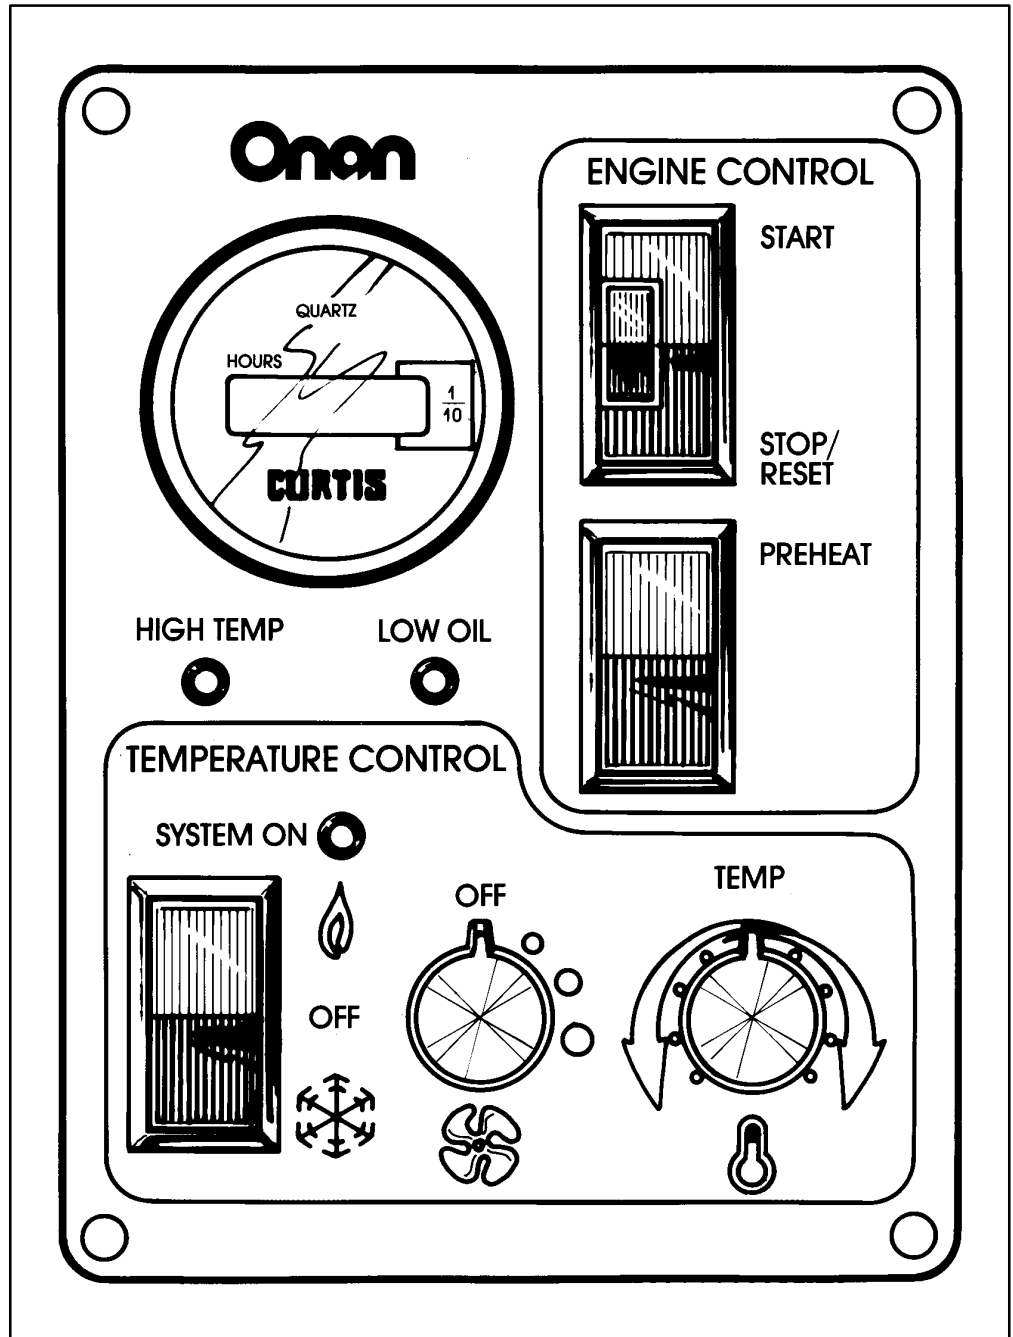


Table of Contents

	Page
Foreword	i
Standard Repair Times	ii
How Standard Repair Times are Developed	v
Productive Repair Time	vi
Time Allowances	vi
Group 00 – Complete Engine	1
Administrative Time	2
Auxiliary Power Unit	2
Engine	2
Troubleshoot	5
Troubleshoot–Excess White Smoke At Start	11
Group 01 – Cylinder Block	13
Camshaft	14
Camshaft, Fuel	14
Connecting Rod	15
Connecting Rod Bearings	16
Crankshaft	16
Crankshaft Seal, Front	18
Crankshaft Seal, Rear	18
Gear Cover	19
Gear Cover Gasket	19
Gear, Crankshaft	20
Piston	20
Piston Rings	21
Group 02 – Cylinder Head	23
Cylinder Head	24
Cylinder Head Gasket	24
Valve Guides	25
Valves	26
Group 03 – Rocker Levers	29
Valves	30
Group 04 – Cam Follower	31
Valve Tappets	32
Group 05 – Fuel System	33
Fuel Pump, Electrical	34
Pump, Injection	34

Group 06 – Injectors	35
Fuel Filter, Spin-On Type	36
Injectors	36
Group 07 – Lubricating Oil System	37
Lubricating Oil And Filter	38
Oil Base	38
Oil By-Pass	38
Oil Filter, Full Flow	39
Oil Pickup Cup And Tube	39
Oil Pump	40
Group 08 – Cooling System	41
Bypass Thermostat	42
Bypass Thermostat Hose	42
Coolant Thermostat	42
Cooling System	43
Fan And Alternator Belt	43
Fan Cooling	43
Lower Radiator Hose	44
Upper Radiator Hose	44
Water Pump	44
Group 10 – Intake Air System	47
Air Cleaner Element	48
Intake Manifold	48
Group 11 – Exhaust System	49
Exhaust Manifold	50
Exhaust Manifold Gaskets	50
Group 13 – Electrical Equipment	51
Alternator	52
Alternator Mtg Bracket 90 Amp	52
Glow Plugs	52
Starter Motor	52
Group 16 – Mounting Adaptations	55
Flywheel	56

Group 17 – Miscellaneous	57
Air Conditioning	58
Air Conditioning Compressor	58
Air Conditioning Compressor Belt	58
Binary Switch	59
Condenser Radiator	59
Enclosure	59
Engine Mounting Bracket, Front	60
Exhaust Tube	60
Muffler	60
Receiver Drier	61
Refrigeration Hoses	61
Vibration Isolators	61
Group 26 – Generator Control	63
Aux Power Unit Wiring Harness	64
Control Wiring Harness	64
PCB Control Board	64
Start Solenoid	64
Stop Solenoid	65

Foreword

The Standard Repair Times (SRT) in this manual represent the time required to perform service repairs on Onan Engine and Generator Sets. These times are representative of an average mechanic in a typical dealer or distributorship using the prescribed hand tools, equipment, and all available service tools and equipment required to perform quality repairs and do all necessary testing.

The use of this manual will:

- Encourage uniform terminology throughout the Cummins/Onan organization
- Standardize Repair Order job description write-ups
- Provide shop managers with a guide for establishing flat rate quotations
- Serve as a basis for Onan Corporation, Inc. to establish its warranty labor obligations

Reporting of errors, omissions, and recommendations for improving this publication is encouraged. Send your suggestions or comments to:

Onan Corporation

1400 73rd Avenue NE
Minneapolis, MN 55432

Attn: Service Department

General Information

Standard Repair Times (SRT) are lists of work tasks (procedures) and the time required to perform those tasks. The procedures list the work tasks required to be sure an engine or generator set is ready to return to service at the lowest possible cost to the customer. A Standard Repair Time is equitable when the repair described in the procedure can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair on the same model, in the same application at least once. Those SRT that a particular mechanic performs more frequently will often require less time than the standard. Conversely, those SRT that a particular mechanic does not frequently perform may require more time than the standard. Several of the procedures may be required to accurately depict all the work actually performed to return a particular engine or generator set to service because the repair of a particular engine or generator set is often unique in light of the complaint, failure model, progressive damage, condition of the parts and customer desires. To allow for differences in the time required to perform a repair because of interference by the application, a Service Accessibility Code Scheme has been created.

Types of Standard Repair Times

There are three types of SRT. Most often at least one of each type is necessary to accurately depict the repair. The three types are:

- Administrative
- Troubleshooting
- Repair

Administrative SRT

Administrative SRT are intended to provide time to move the vehicle engine or generator set to and from the work area, fill out the repair order, record SRT used, etc. It is intended that an administrative SRT be used only once for each repair order. There are two administrative SRT found in this manual in Group 00 – Complete Engine. One of the administrative SRT is to be used when the repair takes place in a shop operated by the repairing location. The other administrative SRT is to be used when the repair takes place away from the shop operated by the repairing location (road repairs). The time for the road repair administrative SRT is greater to allow for loading and unloading tools, equipment, parts, etc. from the service truck.

Troubleshooting SRT

Troubleshooting SRT are found only in Group 00 – Complete Engine. These SRT are intended to be used when diagnosing and analyzing engine, generator set or component failures. Troubleshooting SRT are broken down in to logical numbered steps. The time for each step is cumulative with successive steps, including the time for the appropriate preceding step(s). Some troubleshooting SRT contain time to remove and install components to perform the check(s) listed. Most do not. If a troubleshooting SRT does **NOT** include required component removal and installation, it is intended that the SRT for the removal and installation of that component be in addition to the troubleshooting SRT. Refer to the following example:

Procedure Number	Procedure Description	SRT Hours
00-055	Troubleshoot – Lubricating Oil Consumption Excessive Includes:	
-01	- Check: – Oil consumption report – For external oil leaks – For overfilled oil pan – Oil specifications – For fuel contamination – Oil change interval – For engine oil in torque converter	0.4
-02	- Perform checks in Step 01 - Check: – Oil temperature – Air compressor oil consumption – Turbocharger seal – Crankcase blowby	1.0

In the above example, the time required to perform the checks in Step 01 is 0.4 hour. If the problem is not located while performing the checks in Step 01, an additional 0.6 hour is allowed to perform the checks in Step 02 for a total of 1.0 hour. The total troubleshooting time appropriate is the time indicated in the column directly in line with the final step required to locate the problem. The step required to locate the problem may or may not be the last step shown in the troubleshooting SRT. Each step contains information as to which steps are included.

Repair SRT

Repair SRT make up the majority of this manual. These are the SRT that cover the actual repair work. The time shown on the same line as the SRT code and title is the total time for that SRT.

Standard Repair Combined Times

Standard Repair Combined Times (SRCT) provide for the combining of the three types of SRT under one code so that, if appropriate, the user can identify the work performed with fewer SRT codes.

Manual Organization

SRT Coding System

Each SRT has a unique code so that SRT data can be computerized. The numbering system used is common to all the SRT manuals for all Onan engines and generator sets. The portion of the system shown in the manual contains three segments:

“Group Number” XX	“Procedure Number” XXX	“Step Number” XX
Group Numbers		Procedure Numbers
Group numbers (the first two digits in the SRT code) are used to identify major engine components. The following list explains the group numbers used in SRT manuals:		The procedure number consists of three digits. The first digit provides guidance as to the category of the repair. The second and third digits, shown as XX in the following list, are sequential numbers or alpha within the category.

Group Number	Contents of Group	Specific Repair Number	Description of Category
00	Complete Engine or Generator Set		
01	Cylinder Block	0XX	Troubleshooting
02	Cylinder Head		ONLY in Group 00
03	Rocker Levers	1XX	Remove and Install
04	Cam Followers/Tappets	2XX	Rebuild
05	Fuel System	3XX	Replace
06	Injectors and Fuel Lines	4XX	Clean and Visually Check or Inspect for Reuse
07	Lubricating Oil System		
08	Cooling System	5XX	Machine/Ream/Dowel/ Sleeve
09	Drive Units		Modify/Cut/Lap
10	Intake Air System		Adjust/Calibrate
11	Exhaust System	6XX	
12	Air (Compressed) System		
13	Electrical Equipment	7XX	Test
14	Engine or Generator Set Testing		
15	Instruments and Controls		
16	Mounting Adaptations		
17	Miscellaneous	9XX	(SRCT in Group 99) General/Miscellaneous
22	Hardware		
25	Generator Components		
26	Generator Control Components		
27	Transfer Switches		
99	SRCT		

Step Numbers

While all SRT codes will contain a Group and Procedure number, only those procedures that are broken down into steps have step numbers. The step numbers are sequential within a SRT.

General

There is an alphabetic index in the back of the manual. Within a particular group the procedures are arranged in alphabetical order by title, thus are not in code numeric order.

There is also a numerical index in which the procedures are arranged in numeric order and not in alphabetical order.

Within a procedure, the user will note that some lines are indented. This indentation is intended to indicate that the sub-tasks are part of the task under which they are indented.

How Standard Repair Times are Developed

Cummins/Onan SRT Objectives and Philosophy

The objective of Cummins/Onan SRT program is to provide credible and equitable labor time standards and procedures to the worldwide Cummins/Onan service network.

A SRT is credible when the procedure accurately depicts the work that **must** be performed to accomplish a quality engine or generator set repair.

A SRT is equitable when it can be performed in a period of time less than or equal to the standard by a journeyman mechanic after he/she has performed that repair at least once.

To establish credible and equitable SRT with sufficient flexibility to account for differences in complaints, failures, progressive damage, customer desires, etc., SRT have been structured using the following considerations:

- What must ALWAYS be done to the engine or generator set to perform the work.
- What MAY have to be done to the engine or generator set parts dependent on their condition.
- What MAY have to be removed to access the engine or generator set.
- How difficult it is for the mechanic to reach the engine or generator set even after interfering application hardware has been removed.

While the most frequent use of SRT information is the Onan Warranty System, it is Onan's intent that the SRT be applicable to repairs conducted for any customer.

As SRT are developed, it is assumed:

- That all the required tools, equipment, and supplies are available in sufficient quantity and in operating condition.
- That required Onan Service Manuals are available to the mechanic are being used.
- That the correct parts are available when the mechanic needs them.

How Times are Developed

SRT are developed from time studies conducted in the field and Onan Technical Service Personnel. Technical Service Representatives create a comprehensive list of all the work elements or tasks required to perform specific repairs. Field studies are analyzed to find these same work elements or tasks and determine the time required for each. The time for work elements or tasks that are not included in the field time studies is determined by conducting free engine or generator set studies or by estimation using similar elements from existing time studies. A time is determined for each element of the procedure. The time for all elements is then totaled to establish the total productive repair time.

Productive Repair Time

Productive Repair Time is described as the actual time involved doing productive work, such as: removing, disassembling, cleaning, inspecting, machining, installing and adjusting parts or components. In addition, the following operations are considered to be productive work for inclusion in a SRT:

- Clock on and off the job or repair order, including shift changes.
- Move vehicle, engine or generator set to and from the work area.
- Move tool box to the work area.
- Obtain tools from tool box, wipe and put away after use.
- Refer to service manuals.
- Obtain, unpack and clean replacement parts as necessary.
- Package and mark parts removed as necessary for warranty or local consumer laws.
- Operate engine or generator set to check for proper operation.
- Clean work area at completion of shift or repair.
- Properly dispose of used engine fluids such as oil and coolant.
- Write summary of work performed at completion of repair or work shift.
- Help from another mechanic (time for one man to complete the task times two).

Time Allowances

After the total productive time is established, an additional allowance of 15 percent is added to cover the following:

- Personal time of 5 percent for:
 - Scheduled rest breaks
 - Personal phone calls
 - Restroom breaks
 - Shift changes
- Supplementary time of 10 percent to cover normal work interruptions:
 - Seized or hard turning fasteners
 - Extra time for extremely dirty equipment
 - Excessive waiting time for replacement parts
 - Brief assistance to other mechanics (less than 5 minutes)
 - Routine maintenance (not repair) of shop equipment

- Obtain consumable supplies
- Technical consultation with shop supervision

The following is an example of how the allowances are calculated to establish the SRT for a procedure where the productive time is 208.7 minute (3.48 hr):

Allowance Type	Allowance Percent (%)	Time (Minutes)
Productive Repair Time	100	208.7
Personal	5	10.4
<u>Supplementary</u>	<u>10</u>	<u>20.9</u>
TOTAL	115	240.0

Published Standard Repair Time = 4.0 hours

Work Not Included in A SRT

For almost every complete repair there will be one SRT that contains most of the work performed. This is sometimes called a base repair. For example, repairing an engine for high oil consumption often requires use of the SRT title Piston and Rings – Remove and Install. This SRT contains most of the time appropriate for the repair, so it is the base repair. There can be work required that is **not** part of this base SRT. This does not mean that the other work is non-productive, rather that other work is **NOT** required EVERY TIME the pistons and rings are removed and installed. More often than not, this other work is covered by another SRT. If the other work is **not** included in the base repair or in another SRT, the work is probably still productive work required for that particular repair.

Non-Productive Work

Analysis of past SRT time studies reveals the following general types of work that were not considered to be productive:

- Waiting on camshaft gears to heat and cool
- Waiting on another mechanic to finish using special tools or shop equipment
- Hunting for misplaced parts
- Repairing shop equipment
- Sorting through capscrews, to find the correct length, that were all thrown together into one basket during disassembly
- Repairing customer supplied components
- Salvaging parts or tools that have been damaged from improper handling or lack of correct tools
- Clearing off tables, parts carts, parts racks etc. left dirty or loaded with parts from previous repairs on other equipment
- Rework caused by installation of incorrect parts or incorrect installation of correct parts
- Fabrication or modification of special tools or equipment because the correct tools or equipment are not available

- Visiting during non–break time
- Conducting business with tool vendors
- Waiting on other mechanics to provide required help
- Waiting on parts clerk to fill orders for other mechanics
- Unnecessary inspection of new parts
- “Hot Setting” valves and injectors when not required
- Repairs to application hardware
- Rework resulting from failure to follow recommended service practices
- Performing work that is **not** part of the repair order or helping another mechanic

Service Accessibility Codes

Service repairs are affected by engine or generator set accessibility. The more difficult the accessibility, the longer it will take to complete the tasks given in the SRT procedure. Accessibility for a particular application is determined by reviewing the application and rating the degree of difficulty for performing the 20 most common repairs. Four codes (A, B, C and D) are used to classify the degree of difficulty for the service accessibility of a specific model or type of equipment. An “A” accessibility code indicates the engine or generator set is easily accessible. A “D” code indicates the application does not make the engine or generator set as easily accessible, thus the highest degree of difficulty relative to SRT standards. A “S” code is included for special or specific repairs not covered in the other four classifications. The “R” code indicates the repair is completed with the component, engine or generator set removed from the application.

“A” Accessibility Rating

1. Engine or generator sets mounted in equipment where 90 percent of the work can be performed while standing on the ground, shop floor, or flat work deck.
2. Engine or generator set can be accessed without removing any doors or panels.
3. Interfering application hardware can all be removed.
4. Clearance is sufficient for hands, wrenches, and drain and fill operations, making visual checks and room to stand and work.

“B” Accessibility Rating

1. Engine or generator set mounted in equipment where 70 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine can be gained by removing access panels or doors.
3. On 80 percent of the operations, interfering application hardware can be removed.
4. On 80 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“C” Accessibility Rating

1. Engine or generator set mounted in equipment where 50 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set can be gained by removing the hood, structural members (bolted in) or sheet metal panels.
3. On 60 percent of the operations, interfering application hardware can be removed.
4. On 60 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and room to stand and work.

“D” Accessibility Rating

1. Engine or generator set mounted in equipment where 25 percent of the work can be performed while standing on the ground, shop floor or flat work deck.
2. Access to the engine or generator set is limited due to interference from permanently mounted structural members, sheet metal or crossmembers.
3. On 40 percent of the operations, clearance is sufficient for hands, wrenches, service tools, drain and fill operations, making visual checks and limited room to stand and work.

Standard Repair Combined Times (SRCT)

SRCT are the combination of some of the SRT in the manual within a distinctive code. These SRCT are based on field input of SRT that are most frequently used in combination to describe the most common field repairs on this engine.

Use of SRCT can reduce the amount of time required to determine the labor standard for a specific complete engine or generator set repair. The use of SRCT will also reduce the number of codes required when completing a warranty claim or customer invoice.

SRCT are intended to supplement, NOT replace, SRT. One SRCT code can be used instead of several SRT codes.

It is intended that other appropriate SRT can be used to supplement a SRCT as long as the work does not overlap. If there is overlapping work, do **not** use a SRCT.

How To Use This Manual

1. Determine the actual work performed:

- Obtain this information from the work description on the repair order.

2. Determine the Accessibility Code:

- Determine the application from the repair order.
- Look in the “Accessibility Code Listing” on page to determine the accessibility code for the application involved in the repair. If the application is not shown, assume the accessibility code is “B”.
- Write down the code.

3. Determine applicable SRCT:

- Find the Contents Page for Group 99 – Standard Repair Combined Times.
- Compare the titles to the work performed to determine if a SRCT will apply.
- If there is a SRCT that seems to apply, find that SRCT and compare the SRT within the SRCT to the work performed. If you are not sure of the work included in the SRT, read that SRT and compare the procedure listing with the work performed.
- If a SRCT applies to all or part of the work performed, find the column that contains the same accessibility code determined in Step 2 above.
- Move down the column to the line containing the SRCT code and title and pick out the appropriate time.
- If all the work in the SRCT is performed and additional steps were taken, use the SRCT and continue to Step 4 to cover the additional work.
- If there is NOT an appropriate SRCT, move to Step 4.

4. Determine the appropriate repair SRT:

- Use the information from the repair order to identify the parts involved.
- Use the contents page at the front of the manual or the alphabetical index in the back of the manual to determine the appropriate SRT group for the parts and/or work involved.
- Find the contents page for that group.
- Read the contents page for procedure titles that seem to correspond to the work performed.
- Find the SRT within the group.
- Read the SRT procedure listing to determine the work included.

- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- Repeat the steps in this paragraph until you have determined a SRT for all the work performed.

5. Determine the appropriate troubleshooting SRT:

- Read the repair order to determine what troubleshooting work was performed.
- Find the contents page for Group 00.
- Read the contents page for procedure to determine the work included in each step.
- If the work performed and the work included in the troubleshooting SRT are the same, all or in part, determine and record the time of the SRT step. Remember that troubleshooting SRT are cumulative.

6. Determine the appropriate miscellaneous SRT:

- Read the repair order to determine if any application hardware was removed and installed in order to access the engine or generator set.
- Find the contents page for Group 17.
- Read the contents page for procedure titles that seem to correspond to the work performed.
- Find the SRT within the group.
- Read the SRT procedure to determine the work included in the SRT.
- If the work performed and the work included in the SRT are the same, all or in part, determine and record the time.
- If the work required to application hardware is not given in the SRT manual, determine the time for ONLY this work from the repair order. Record the time for possible use as “99–999” or “Non–SRT Time”.

7. Determine the appropriate administrative SRT:

- Both of the administrative SRT are shown at the beginning of Group 00.
- Determine the appropriate SRT.
- Record the time.

8. Determine the total appropriate SRT time:

- Check to be sure that there is no duplication of tasks within the SRT procedures selected. If there is work duplicated by some of those selected, use other information contained in the manual to reduce the time of one of the SRT accordingly. If the information is not available, make an estimate.
- Total all the times obtained during performance of Steps 2 through 7.

Standard Repair Times Review Procedure

Onan Corporation makes every effort to be sure the SRT published in this manual are credible and equitable. It will be necessary to review the published times when one or more of the following changes occur:

- Design changes to special service tools or equipment required to perform the repair
- Changes to the repair procedure

A formal SRT review procedure is available for any Cummins/Onan Authorized Repair Location that believes the SRT shown in this manual are incorrect.

To be sure prompt attention and an accurate appraisal is given to your request, the following guidelines must be met:

1. Be sure the technician has followed all the procedures and used all the service tools referred to in the appropriate service manuals.
2. Be sure a journeyman technician performed the repair, one who has completed the repair a sufficient number of times to become familiar with the procedure.
3. Be sure all the SRT, including supplemental SRT, appropriate for the repair are being used.
4. Include as much detail as possible about the specific repair.

NOTE: It is **NOT** the intent of this procedure to provide a forum for appealing or disputing the amount of time or the SRT judged appropriate on a particular warranty claim. Communication of this sort **must** follow the processes shown in the Onan Warranty Administration Manual.

5. Provide photographs of the installation.
6. Provide copies of all repair orders applicable to the SRT involved, the technicians time cards, and any other information related to the repair that will aid in the review process.
7. Be sure to provide the correct name of the repairing location, a phone number, and point of contact.

Company Action

Upon receipt of the request for an SRT review, the following action will be taken:

1. The person signing the request will be contacted to acknowledge the receipt of the request.
2. All the information provided will be analyzed and compared with the history files of the specific operation.
3. All information will be analyzed to determine if an error has been made in the procedure, the operations description, or the published repair time.
4. If it is determined the published repair time is incorrect, additional studies/analysis will be performed to establish the correct time. The requester will be notified of the results, and the results will be published in the next SRT update.
5. If it is determined that the time and procedure is correct, recommendations and assistance will be offered as needed.

Group 00 – Complete Engine

Contents

	Page
Administrative Time	2
Open/Close Repair Order (Shop)	2
Auxiliary Power Unit	2
Remove And Install	2
Engine	2
Rebuild	2
Remove And Install	4
Replace	4
Troubleshoot	5
Battery Not Charging	5
Continuous Sleeper Air Conditioning	5
Continuous Sleeper Heat	5
Coolant Loss (External)	6
Coolant Temp Above Normal	6
Coolant Temp Below Normal	6
Eng Starts But Will Not Keep Running	7
Eng Will Not Crank Or Cranks Slowly	7
Engine Cranks But Will Not Start	8
Engine Run Indicator Not Working	8
Engine Surges	8
Engine Will Not Shut Off	9
Excessive Exhaust Smoke Under Load	9
Glow Plugs Will Not Operate	9
Hour Meter Not Working	10
No Sleeper Air Conditioning	10
No Sleeper Heat	11
Troubleshoot–Excess White Smoke At Start	11
Up (Cold)	11
Up (Warm)	11

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-901 Administrative Time – Open/Close Repair Order (Shop) <i>Includes:</i> <ul style="list-style-type: none"> - Clock on and off the job - Move equipment to and from work area - Clean work area and write repair at the end of <ul style="list-style-type: none"> - each shift and when job has been completed - Record the following: <ul style="list-style-type: none"> - Generator Set model number - Generator Set serial number - Customer name and address - Original date of purchase - Hours of operation 	0.4	-	-	-	-	-
00-1AD Auxiliary Power Unit – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect <ul style="list-style-type: none"> - Battery cables - Main leads and associated wiring - Fuel lines - Exhaust systems - Coolant lines - Refrigerant lines - Remove and install <ul style="list-style-type: none"> - Power unit from mounting location - Test run for proper operation 	-	-	2.0	-	-	-
00-201 Engine – Rebuild <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect <ul style="list-style-type: none"> - Battery cables - Wiring harness - Fuel lines - Coolant hoses 	-	-	9.4	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>00-201 Engine – Rebuild</p> <ul style="list-style-type: none"> - Drain and fill engine fluids - Recover and recharge refrigerant - Remove and install <ul style="list-style-type: none"> - Covers and brace - Engine - Air cleaner or silencer - Belt and fan guards - Fan and pulley - Alternator - Water pump - Rear bearing plate assy - Flywheel - Radiator - Fuel lines - Fuel pump - Stop solenoid - Speed control assy - Starter - Intake manifold - Oil pan - Exhaust manifold - Injection pump - Valve cover and rocker assy - Tappets - Cylinder head - Injection pump cover - Governor spring - Gearcase cover - Oil filter - Idler gear - Camshaft lock - Piston and connecting rods - Fork lever assy 	-	-	9.4	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
00-201 Engine – Rebuild (continued from previous page) <ul style="list-style-type: none"> - Fuel camshaft - Crankshaft - Camshaft - Bearings - Oil seals - Oil pump - Hone or bore cylinders - Adjust valve lash - Refill oil and coolant - Test run unit 	-	-	9.4	-	-	-
00-101 Engine – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Cooling system drain and refill - Recover and recharge refrigerant - Disconnect and connect <ul style="list-style-type: none"> - Battery cables - Wiring harness - Fuel lines - Coolant lines - Exhaust system - Remove and Install <ul style="list-style-type: none"> - Covers and brace - Cooling fan - Alternator - Test run for proper operation 	-	-	4.5	-	-	-
00-3AA Engine – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Cooling system drain and refill - Recover and recharge refrigerant - Disconnect and connect <ul style="list-style-type: none"> - Battery cables - Wiring harness 	-	-	6.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-3AA Engine – Replace <ul style="list-style-type: none"> – Fuel lines – Coolant lines – Exhaust system – Remove and Install – Covers and brace – Cooling fan – Alternator – Test run for proper operation 	-	-	6.0	-	-	-
00-0AS Troubleshoot – Battery Not Charging	-	-	-	-	-	-
-01 – Check <ul style="list-style-type: none"> – Battery connections – Battery condition – Alternator connections 	-	-	0.5	-	-	-
-02 – Perform checks in step 01 <ul style="list-style-type: none"> – Inspect – Alternator 	-	-	0.7	-	-	-
00-0AW Troubleshoot – Continuous Sleeper Air Conditioning <i>Includes:</i> <ul style="list-style-type: none"> – Check – Temperature control switch – System switch – Thermistor – Coolant solenoid valves – Temperature control module 	-	-	1.0	-	-	-
00-0AU Troubleshoot – Continuous Sleeper Heat <i>Includes:</i> <ul style="list-style-type: none"> – Check – Temperature control switch – System switch – Thermistor 	-	-	1.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
(continued from previous page)						
00-0AU Troubleshoot – Continuous Sleeper Heat	-	-	1.0	-	-	-
– Coolant solenoid valves						
– Temperature control module						
00-010 Troubleshoot – Coolant Loss (External)	-	-	-	-	-	-
-01 – Check:	-	-	0.4	-	-	-
– Coolant level						
– Cracked or leaking hoses						
– Loose hose clamps						
– Radiator for leaks						
– Coolant in oil						
-02 – Preform checks in step 01	-	-	1.0	-	-	-
– Check:						
– Pressure test coolant system						
– Run generator set and check for leaks						
00-014 Troubleshoot – Coolant Temp Above Normal	-	-	1.0	-	-	-
<i>Includes:</i>						
– Check:						
– Coolant level						
– High engine temp switch						
– Winter door position						
– Fan belt condition						
– Fan belt tension						
– Fan condition						
– Radiator for plugging						
00-015 Troubleshoot – Coolant Temp Below Normal	-	-	-	-	-	-
-01 – Check	-	-	1.0	-	-	-
– Engine coolant level						
– Winter door position						
– Fan condition						
– Radiator for plugging						
-02 – Perform checks in step 01	-	-	1.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-015 Troubleshoot – Coolant Temp Below Normal – Check – Thermostat	-	-	-	-	-	-
00-037 Troubleshoot – Eng Starts But Will Not Keep Running	-	-	-	-	-	-
-01 – Check – Shut down indicators – Fuel level – Oil level – Battery voltage	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Inspect – Fuel pump – Oil pressure switch – Stop solenoid adjustment – High engine temperature switch – Speed sensor – Start stop switch – Control board	-	-	1.0	-	-	-
00-044 Troubleshoot – Eng Will Not Crank Or Cranks Slowly	-	-	-	-	-	-
-01 – Check – Battery condition – Battery connections loose or dirty – Battery cable size – F1 fuse	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Inspect – Starter – Start stop switch – Remote connections – Start relay	-	-	1.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-040 Troubleshoot – Engine Surges	-	-	-	-	-	-
-02 – Perform checks in step 01 – Check – Governor linkage for binding – Governor adjustments	-	-	1.0	-	-	-
00-045 Troubleshoot – Engine Will Not Shut Off	-	-	-	-	-	-
-01 – Check – Broken or loose wires	-	-	0.4	-	-	-
-02 – Perform checks in step 01 – Inspect – Start stop switch – Stop solenoid – Control board	-	-	1.0	-	-	-
00-046 Troubleshoot – Excessive Exhaust Smoke Under Load	-	-	-	-	-	-
-01 – Check: – Intake air restrictions – Fuel filter restrictions – Valve settings	-	-	0.8	-	-	-
-02 – Perform checks in step 01 – Check: – Injection pump timing	-	-	1.5	-	-	-
00-0AP Troubleshoot – Glow Plugs Will Not Operate	-	-	-	-	-	-
-01 – Check – Battery condition – Battery connections loose or dirty – Battery cable size – F1 fuse – CB1 breaker	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Inspect	-	-	1.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-0AP Troubleshoot – Glow Plugs Will Not Operate – Pre-heat switch – Glow plug relay – Glow plugs – Control board	-	-	-	-	-	-
00-0AR Troubleshoot – Hour Meter Not Working	-	-	-	-	-	-
-01 – Check – Broken or loose wires – Run indicator operation	-	-	0.3	-	-	-
-02 – Perform checks in step 01 – Inspect – Control board	-	-	1.0	-	-	-
00-0AV Troubleshoot – No Sleeper Air Conditioning	-	-	-	-	-	-
-01 – Check – Winter door position – Broken or loose wires – Air inlet at evaporator for restriction – Condenser for air restriction – Compressor belt	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Inspect – Temperature control switch – Fan speed switch – System switch – Thermistor – Fan motor and blower wheel – Coolant solenoid valves – Temperature control module – Compressor clutch relay – Compressor clutch	-	-	1.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
00-0AT Troubleshoot – No Sleeper Heat	-	-	-	-	-	-
-01 – Check – Coolant level – Winter door position – Broken or loose wires – Air inlet at heater for restriction – Coolant hoses for kinks	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Inspect – Temperature control switch – Fan speed switch – System switch – Thermistor – Fan motor and blower wheel – Coolant solenoid valves – Temperature control module	-	-	1.5	-	-	-
00-048 Troubleshoot–Excess White Smoke At Start – Up (Cold)	-	-	-	-	-	-
-01 – Check: – Glow plugs – Valve settings	-	-	0.5	-	-	-
-02 – Perform checks in step 01 – Check: – Injection pump timing – Compression	-	-	1.5	-	-	-
00-047 Troubleshoot–Excess White Smoke At Start – Up (Warm)	-	-	-	-	-	-
-01 – Check: – Glow plugs – Valve settings	-	-	0.8	-	-	-
-02 – Perform checks in step 01	-	-	1.8	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>00-047 Troubleshoot-Excess White Smoke At Start - Up (Warm)</p> <ul style="list-style-type: none"> - Check: <ul style="list-style-type: none"> - Injection pump timing - Compression 	-	-	-	-	-	-

Group 01 – Cylinder Block

Contents

	Page
Camshaft	14
Replace	14
Camshaft, Fuel	14
Remove And Install	14
Connecting Rod	15
Remove And Install	15
Connecting Rod Bearings	16
Replace	16
Crankshaft	16
Remove And Install	16
Crankshaft Seal, Front	18
Replace	18
Crankshaft Seal, Rear	18
Replace (Horizontal)	18
Gear Cover	19
Remove And Install	19
Gear Cover Gasket	19
Replace	19
Gear, Crankshaft	20
Remove And Install	20
Piston	20
Remove And Install, All	20
Piston Rings	21
Replace	21

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
01-3AE Camshaft – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses - Drain and refill engine fluids - Recover and recharge refrigerant - Remove and install Covers and brace Engine Fan assembly and belts Crankshaft pulley Injection pump cover Governor spring Speed control plate Gearcase cover Idler gear Camshaft lock Valve cover and rocker assembly Injection lines Cylinder head Camshaft and gear - Prime and bleed fuel system - Test run unit 	-	-	7.9	-	-	-
01-1AC Camshaft, Fuel – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses 	-	-	6.7	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-1AC Camshaft, Fuel – Remove And Install</p> <ul style="list-style-type: none"> - Drain and refill engine fluids - Recover and recharge refrigerant - Remove and install <p>Covers and brace Engine Fan assembly and belts Crankshaft pulley Injection pump cover Governor spring Speed control plate Injection pump Gearcase cover Idler gear Fork lever assembly Fuel camshaft stopper Fuel camshaft</p> <ul style="list-style-type: none"> - Prime and bleed fuel system - Test run unit 	-	-	6.7	-	-	-
<p>01-1AA Connecting Rod – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect <p>Battery cables Wiring harness Fuel lines Coolant hoses</p> <ul style="list-style-type: none"> - Drain and refill engine fluids - Recover and recharge refrigerant - Remove and install <p>Covers and brace Engine Oil pan Valve cover and rocker assy</p>	-	-	6.6	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-1AA Connecting Rod – Remove And Install</p> <p>Injection lines Cylinder head Piston and connecting rods Piston rings Wrist pin and keepers Bearings</p> <ul style="list-style-type: none"> - Clean and visually inspect crankshaft - Hone or bore cylinders - Adjust valve lash - Test run unit 	-	-	6.6	-	-	-
<p>01-3AF Connecting Rod Bearings – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect <p>Battery cables Wiring harness Fuel lines Coolant hoses</p> <ul style="list-style-type: none"> - Drain and fill engine fluids - Recover and recharge refrigerant - Remove and install <p>Covers and brace Engine Oil pan Bearings</p> <ul style="list-style-type: none"> - Clean and visually inspect crankshaft - Test run unit 	-	-	7.4	-	-	-
<p>01-112 Crankshaft – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect <p>Battery cables Wiring harness Fuel lines</p>	-	-	8.8	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-112 Crankshaft – Remove And Install</p> <ul style="list-style-type: none"> Coolant lines – Drain and refill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Engine Flywheel Rear bearing plate assy Fan assy Belts and pulley Fan guard Alternator Water pump Radiator Oil pan Injection lines Air cleaner or silencer Valve cover and rocker assy Tappets Cylinder head Injection pump cover Governor spring Speed control plate Gearcase cover Oil filter Idle gear Piston and connecting rod Connecting rod bearings Main bearings Crankshaft Oil seals Oil pump – Adjust valve lash 	-	-	8.8	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 01-112 Crankshaft – Remove And Install – Clean and inspect cylinder bores – Test run unit	-	-	8.8	-	-	-
01-304 Crankshaft Seal, Front – Replace <i>Includes:</i> – Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Remove and install Covers and brace Fan assembly and belts Crankshaft pulley Oil seal – Test run unit	-	-	2.8	-	-	-
01-308 Crankshaft Seal, Rear – Replace (Horizontal) <i>Includes:</i> – Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and fill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Engine Rear bearing plate assy Flywheel Oil seal – Test run unit	-	-	5.3	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page)						
01-308 Crankshaft Seal, Rear – Replace (Horizontal)	-	-	5.3	-	-	-
01-121 Gear Cover – Remove And Install	-	-	2.4	-	-	-
<i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses - Drain and refill engine fluids - Remove and install Covers and brace Fan assembly and belts Crankshaft pulley Injection pump cover Governor spring Speed control plate Gearcase cover - Test run unit 						
01-3AB Gear Cover Gasket – Replace	-	-	2.9	-	-	-
<i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Coolant hoses Fuel lines - Drain and refill engine fluids - Remove and install Covers and brace Belt and fan guards Fan and pulley Radiator Speed control assy Injection pump cover 						

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-3AB Gear Cover Gasket – Replace</p> <ul style="list-style-type: none"> Governor spring Gearcase cover Gearcase cover gasket Crankshaft pulley – Adjust governor – Test run unit 	-	-	2.9	-	-	-
<p>01-114 Gear, Crankshaft – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Remove and install Covers and brace Fan assembly and belts Crankshaft pulley Injection pump cover Governor spring Speed control plate Gearcase cover Idler gear Oil pump Crankshaft gear – Test run unit 	-	-	2.5	-	-	-
<p>01-140 Piston – Remove And Install, All</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Wiring harness Fuel lines 	-	-	8.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-140 Piston – Remove And Install, All</p> <p>Coolant hoses</p> <ul style="list-style-type: none"> – Drain and fill engine fluids – Recover and recharge refrigerant – Remove and install <p>Covers and brace</p> <p>Engine</p> <p>Injection lines</p> <p>Oil pan</p> <p>Valve cover and rocker assy</p> <p>Cylinder head</p> <p>Piston and connecting rods</p> <p>Piston rings</p> <p>Bearings</p> <ul style="list-style-type: none"> – Clean and visually inspect crankshaft – Hone or bore cylinders – Adjust valve lash – Refill oil and coolant – Test run unit 	-	-	8.0	-	-	-
<p>01-3AC Piston Rings – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect <p>Battery cables</p> <p>Wiring harness</p> <p>Fuel lines</p> <p>Coolant hoses</p> <ul style="list-style-type: none"> – Drain and fill engine fluids – Recover and recharge refrigerant – Remove and install <p>Covers and brace</p> <p>Engine</p> <p>Injection lines</p> <p>Oil pan</p>	-	-	7.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>01-3AC Piston Rings – Replace</p> <ul style="list-style-type: none"> Valve cover and rocker assy Cylinder head Piston and connecting rods Piston rings Bearings – Hone or bore cylinders – Adjust valve lash – Refill oil and coolant – Test run unit 	-	-	7.5	-	-	-

Group 02 – Cylinder Head

Contents

	Page
Cylinder Head	24
Remove And Install	24
Cylinder Head Gasket	24
Replace	24
Valve Guides	25
Replace	25
Valves	26
Grind	26

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-104 Cylinder Head – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses - Drain and refill engine fluids - Remove and install Covers and brace Valve cover and rocker assy Injection lines Cylinder head Cylinder head gasket - Scraping carbon from Cylinder head Tops of pistons Around valves and ports - Adjust valve lash - Torque cylinder head - Test run unit 	-	-	0.9	-	-	-
02-3AA Cylinder Head Gasket – Replace <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses - Drain and refill engine fluids - Remove and install Covers and brace Valve cover and rocker assy Injection lines 	-	-	0.9	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>02-3AA Cylinder Head Gasket – Replace</p> <p>Cylinder head Cylinder head gasket – Scraping carbon from Cylinder head Tops of pistons Around valves and ports – Adjust valve lash – Torque cylinder head – Test run unit</p>	-	-	0.9	-	-	-
<p>02-302 Valve Guides – Replace</p> <p><i>Includes:</i></p> <p>– Disconnect and connect Battery cables Wiring harness Fuel lines – Drain and refill engine fluids – Remove and install Covers and brace Coolant hoses Fan Belt and belt guards Valve cover and rocker assy Injection lines Injectors Cylinder head Exhaust manifold Intake manifold Valve guides – Remove valves from head Caps Spring collet Spring retainer and spring</p>	-	-	6.7	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>02-302 Valve Guides – Replace</p> <p>Stem seal</p> <p>Valve</p> <ul style="list-style-type: none"> – Scrapping carbon from Cylinder head Tops of pistons Around valves and ports – Refinish valve seats – Grind valves – Adjust valve lash – Torque cylinder head – Test run unit 	-	-	6.7	-	-	-
<p>02-513 Valves – Grind</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Wiring harness Fuel lines – Drain and refill engine fluids – Remove and install Covers and brace Coolant hoses Valve cover and rocker assy Injection lines Injectors Cylinder head Exhaust manifold Intake manifold – Remove valves from head Caps Spring collet Spring retainer and spring Stem seal 	-	-	5.1	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
02-513 Valves – Grind (continued from previous page) Valve – Scrapping carbon from Cylinder head Tops of pistons Around valves and ports – Refinish valve seats – Grind valves – Adjust valve lash – Torque cylinder head – Prime and bleed fuel system – Test run unit	-	-	5.1	-	-	-

Group 03 – Rocker Levers

Contents

	Page
Valves	30
Adjust, All	30

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
03-603 Valves – Adjust, All <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install Covers and brace Valve cover – Adjust valve lash – Test run unit 	-	-	1.4	-	-	-

Group 04 – Cam Follower

Contents

	Page
Valve Tappets	32
Remove And Install	32

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>04-118 Valve Tappets – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Wiring harness Fuel lines - Drain and refill engine fluids - Remove and install Covers and brace Coolant hoses Valve cover and rocker assy Injection lines Cylinder head Tappets - Scrapping carbon from Cylinder head Tops of pistons Around valves and ports - Adjust valve lash - Torque cylinder head - Test run unit 	-	-	4.1	-	-	-

Group 05 – Fuel System

Contents

	Page
Fuel Pump, Electrical	34
Remove And Install	34
Pump, Injection	34
Remove And Install	34

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
05-1AC Fuel Pump, Electrical – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Fuel lines - Remove and install Fuel filter Fuel pump - Check Fuel lines for leaks - Prime and bleed fuel system - Test run unit 	-	-	1.0	-	-	-
05-102 Pump, Injection – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables Fuel lines - Remove and install Covers and brace Stop solenoid linkage Injection lines Intake manifold Injection pump cover Injection pump - Prime and bleed fuel system - Check and adjust timing - Adjust stop solenoid - Test run unit 	-	-	1.8	-	-	-

Group 06 – Injectors

Contents

	Page
Fuel Filter, Spin-On Type	36
Replace	36
Injectors	36
Remove And Install	36

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
06-303 Fuel Filter, Spin-On Type – Replace <i>Includes:</i> – Remove and replace Fuel filter	-	-	0.3	-	-	-
06-149 Injectors – Remove And Install <i>Includes:</i> – Disconnect and connect Battery cables – Remove and install Covers and brace Injection lines Over flow rail Injector – Bleed injection lines – Test run unit	-	-	0.8	-	-	-

Group 07 – Lubricating Oil System

Contents

	Page
Lubricating Oil And Filter	38
Change	38
Oil Base	38
Remove And Install (Horizontal)	38
Oil By-Pass	38
Inspect And Reuse (Horizontal)	38
Oil Filter, Full Flow	39
Replace	39
Oil Pickup Cup And Tube	39
Remove And Install (Hor)	39
Oil Pump	40
Remove And Install	40

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
07-801 Lubricating Oil And Filter – Change <i>Includes:</i> <ul style="list-style-type: none"> – Drain and fill oil base – Remove and install filter – Fill filter and engine with oil – Check for oil leaks – Test run unit 	-	-	0.5	-	-	-
07-109 Oil Base – Remove And Install (Horizontal) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Engine Dipstick Oil drain assembly Oil pan Oil pan gasket – Check for oil leaks – Test run unit 	-	-	4.9	-	-	-
07-410 Oil By-Pass – Inspect And Reuse (Horizontal) <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Wiring harness Coolant hoses – Drain and refill engine fluids – Remove and install Covers and brace 	-	-	1.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>07-410 Oil By-Pass – Inspect And Reuse (Horizontal)</p> <p>Oil by-pass valve O-ring Belt and belt guards – Clean and visually inspect Bore O-ring Valve assy – Test run unit</p>	-	-	1.5	-	-	-
<p>07-301 Oil Filter, Full Flow – Replace</p> <p><i>Includes:</i></p> <p>– Remove and install Oil filter Rubber filter gasket – Fill oil pan – Check for oil leaks – Test run unit</p>	-	-	0.4	-	-	-
<p>07-114 Oil Pickup Cup And Tube – Remove And Install (Hor)</p> <p><i>Includes:</i></p> <p>– Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Engine Dipstick Oil drain assembly Oil pan</p>	-	-	5.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>07-114 Oil Pickup Cup And Tube – Remove And Install (Hor)</p> <p>Oil pan gasket Oil pickup cup O-ring – Check for oil leaks – Test run unit</p>	-	-	5.0	-	-	-
<p>07-113 Oil Pump – Remove And Install</p> <p><i>Includes:</i></p> <p>– Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Fan Belt and belt guards Injection pump cover Governor spring Speed control assy Crankshaft pulley Gearcase cover Idler gear Oil pump drive gear Oil pump – Test run unit</p>	-	-	2.5	-	-	-

Group 08 – Cooling System

Contents

	Page
Bypass Thermostat	42
Remove And Install	42
Bypass Thermostat Hose	42
Remove And Install	42
Coolant Thermostat	42
Remove And Install	42
Cooling System	43
Bleed Air	43
Drain And Fill	43
Fan And Alternator Belt	43
Replace	43
Fan Cooling	43
Remove And Install (Guards Removed)	43
Lower Radiator Hose	44
Replace	44
Upper Radiator Hose	44
Replace	44
Water Pump	44
Rebuild	44
Remove And Install	45

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
08-1AC Bypass Thermostat – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Cooling system drain and refill – Disconnect and connect Battery cables Fuel lines Coolant lines <ul style="list-style-type: none"> – Remove and install Covers and brace Cooling fan Fuel filter assembly Fuel pump Bypass thermostat hoses <ul style="list-style-type: none"> – Test run for proper operation 	-	-	2.5	-	-	-
08-101 Bypass Thermostat Hose – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Cooling system drain and refill – Disconnect and connect Battery cables Fuel lines Coolant lines <ul style="list-style-type: none"> – Remove and install Covers and brace Cooling fan Fuel filter assembly Fuel pump Bypass thermostat <ul style="list-style-type: none"> – Test run for proper operation 	-	-	2.5	-	-	-
08-104 Coolant Thermostat – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables <ul style="list-style-type: none"> – Drain and refill engine fluids 	-	-	1.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
		R	A	B	C	D
(continued from previous page)						
08-104 Coolant Thermostat – Remove And Install – Remove and install Covers and brace Coolant hoses Thermostat cover Thermostat cover gasket – Test run unit	-	-	1.0	-	-	-
08-9AA Cooling System – Bleed Air <i>Includes:</i> – See service manual for proper procedure	-	-	0.3	-	-	-
08-107 Cooling System – Drain And Fill <i>Includes:</i> – Drain and refill cooling system – Visually check radiator cap – Test run for proper operation	-	-	0.3	-	-	-
08-301 Fan And Alternator Belt – Replace <i>Includes:</i> – Disconnect and connect Battery cables – Remove and install Covers and brace Air conditioning compressor belt Fan Guard Cooling fan – Test run for proper operation	-	-	1.4	-	-	-
08-114 Fan Cooling – Remove And Install (Guards Removed) <i>Includes:</i> – Disconnect and connect Battery cables – Remove and install Covers and brace	-	-	0.9	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>08-114 Fan Cooling – Remove And Install (Guards Removed)</p> <p>Air conditioning compressor belt Fan Guard Cooling fan</p> <ul style="list-style-type: none"> – Test run for proper operation 	-	-	0.9	-	-	-
<p>08-310 Lower Radiator Hose – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Drain and refill engine fluids – Remove and install <p>Hose clamps Hose</p> <ul style="list-style-type: none"> – Check for water leaks – Test run unit 	-	-	0.8	-	-	-
<p>08-311 Upper Radiator Hose – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Drain and refill engine fluids – Remove and install <p>Hose clamps Hose</p> <ul style="list-style-type: none"> – Check for water leaks – Test run unit 	-	-	0.9	-	-	-
<p>08-209 Water Pump – Rebuild</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> – Clean and visually inspect <p>Pump housing Pump shaft flange Hose adapter</p> <ul style="list-style-type: none"> – Replace <p>Shaft and bearing Seal Impeller</p>	-	-	1.4	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 08-209 Water Pump – Rebuild Pump gasket – Check for water leaks – Test run unit	-	-	1.4	-	-	-
08-130 Water Pump – Remove And Install <i>Includes:</i> – Disconnect and connect Battery cables Coolant hoses – Drain and refill engine fluids – Remove and install Covers and brace Fan and belt Pulley Water pump – Test run unit	-	-	2.4	-	-	-

Group 10 – Intake Air System

Contents

	Page
Air Cleaner Element	48
Replace	48
Intake Manifold	48
Remove And Install	48

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
10-301 Air Cleaner Element – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install Cover and brace Filter element – Test run unit 	-	-	0.5	-	-	-
10-129 Intake Manifold – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install Covers and brace Air cleaner Intake manifold Intake manifold gaskets – Test run unit 	-	-	0.5	-	-	-

Group 11 – Exhaust System

Contents

	Page
Exhaust Manifold	50
Replace	50
Exhaust Manifold Gaskets	50
Replace	50

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
11-3AA Exhaust Manifold – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install Exhaust pipe Exhaust manifold Exhaust manifold gasket – Check to exhaust leaks – Test run unit 	-	-	0.7	-	-	-
11-304 Exhaust Manifold Gaskets – Replace <i>Includes:</i> <ul style="list-style-type: none"> – Remove and install Exhaust pipe Exhaust manifold Exhaust manifold gasket – Check to exhaust leaks – Test run unit 	-	-	0.7	-	-	-

Group 13 – Electrical Equipment

Contents

	Page
Alternator	52
Remove And Install	52
Alternator Mtg Bracket 90 Amp	52
Remove And Install	52
Glow Plugs	52
Remove And Install	52
Starter Motor	52
Remove And Install	52

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
13-101 Alternator – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Electrical wiring – Remove and install Covers and brace – Test run for proper operation 	-	-	1.0	-	-	-
13-102 Alternator Mtg Bracket 90 Amp – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Electrical wiring – Remove and install Covers and brace Alternator Alternator mountin bracket – Test run for proper operation 	-	-	1.5	-	-	-
13-114 Glow Plugs – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Electrical wiring – Remove and install Covers and brace Glow plugs – Test run unit 	-	-	0.6	-	-	-
13-104 Starter Motor – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables 	-	-	2.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>13-104 Starter Motor – Remove And Install</p> <p>Wiring harness</p> <p>– Remove and install</p> <p>Covers and brace</p> <p>Muffler clamp</p> <p>Exhaust tube</p> <p>Alternator</p> <p>Exhaust manifold</p> <p>Starter</p> <p>– Test run for proper operation</p>	-	-	2.0	-	-	-

Group 16 – Mounting Adaptations

Contents

	Page
Flywheel	56
Remove And Install	56

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
16-103 Flywheel – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> – Disconnect and connect Battery cables Wiring harness Fuel lines Coolant hoses – Drain and refill engine fluids – Recover and recharge refrigerant – Remove and install Covers and brace Engine Flywheel – Test run unit 	-	-	4.2	-	-	-

Group 17 – Miscellaneous

Contents

	Page
Air Conditioning	58
Recover And Recharge Refrigerant	58
Air Conditioning Compressor	58
Remove And Install	58
Air Conditioning Compressor Belt	58
Remove And Install	58
Binary Switch	59
Remove And Install	59
Condenser Radiator	59
Remove And Install	59
Enclosure	59
Replace	59
Engine Mounting Bracket, Front	60
Remove And Install	60
Exhaust Tube	60
Remove And Install	60
Muffler	60
Remove And Install	60
Receiver Drier	61
Remove And Install	61
Refrigeration Hoses	61
Remove And Install	61
Vibration Isolators	61
Remove And Install	61

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
17-103 Air Conditioning – Recover And Recharge Refrigerant <i>Includes:</i> <ul style="list-style-type: none"> - Recover refrigerant to proper container - Evacuate system - Charge system - Run and check for leaks - Test run for proper operation 	-	-	0.7	-	-	-
17-101 Air Conditioning Compressor – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Cooling system drain and refill - Recover and recharge refrigerant - Disconnect and connect Battery cable Coolant lines Refrigerant lines <ul style="list-style-type: none"> - Remove and install Covers and brace Fan and alternator belt Compressor belt Alternator Exhaust tube <ul style="list-style-type: none"> - Test run for proper operation 	-	-	3.5	-	-	-
17-156 Air Conditioning Compressor Belt – Remove And Install <i>Includes:</i> <ul style="list-style-type: none"> - Disconnect and connect Battery cables <ul style="list-style-type: none"> - Remove and install Covers and brace <ul style="list-style-type: none"> - Adjust belt tension - Test run for proper operation 	-	-	0.6	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>17-1AH Binary Switch – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect Binary switch wires - Remove and install Covers and brace Binary switch - Test run for proper operation 	-	-	0.5	-	-	-
<p>17-102 Condenser Radiator – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Cooling system drain and refill - Recover and recharge refrigerant - Disconnect and connect Battery cable Coolant lines Refrigerant lines - Remove and install Covers and brace Fan and alternator belt Compressor belt Alternator Cooling fan and guard Exhaust tube Exhaust manifold Starter motor - Test run for proper operation 	-	-	5.1	-	-	-
<p>17-3AA Enclosure – Replace</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Cooling system drain and refill - Recover and recharge refrigerant - Disconnect and connect Battery cables Main leads and associated wiring 	-	-	8.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>17-3AA Enclosure – Replace</p> <p>Fuel lines</p> <p>Coolant lines</p> <p>Refrigerant lines</p> <p>Exhaust system</p> <p>– Remove and install</p> <p>Enclosure</p> <p>– Test run for proper operation</p>	-	-	8.0	-	-	-
<p>17-1AE Engine Mounting Bracket, Front – Remove And Install</p> <p><i>Includes:</i></p> <p>– Cooling system drain and refill</p> <p>– Recover and recharge refrigerant</p> <p>– Disconnect and connect</p> <p>Battery cable</p> <p>Coolant lines</p> <p>Refrigerant lines</p> <p>– Remove and install</p> <p>Covers and brace</p> <p>Fan and alternator belt</p> <p>Compressor belt</p> <p>Alternator</p> <p>Exhaust tube</p> <p>– Test run for proper operation</p>	-	-	4.0	-	-	-
<p>17-1AA Exhaust Tube – Remove And Install</p> <p><i>Includes:</i></p> <p>– Disconnect and connect</p> <p>Battery cables</p> <p>– Remove and install</p> <p>Covers and brace</p> <p>Muffler clamp</p> <p>– Test run for proper operation</p>	-	-	0.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>17-131 Muffler – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Remove and install Hanger bracket and clamps Muffler and pipes Gaskets - Check for exhaust leaks - Test run unit 	-	-	0.5	-	-	-
<p>17-1AG Receiver Drier – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect Binary switch wires - Remove and install Covers and brace Binary switch - Test run for proper operation 	-	-	1.2	-	-	-
<p>17-1AF Refrigeration Hoses – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Recover and charge refrigerant - Disconnect and connect Battery cables - Remove and install Covers and brace Fan and alternator belt Alternator - Test run for proper operation 	-	-	1.3	-	-	-
<p>17-1AB Vibration Isolators – Remove And Install</p> <p><i>Includes:</i></p> <ul style="list-style-type: none"> - Disconnect and connect Battery cables - Remove and install Covers and brace 	-	-	1.0	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
(continued from previous page) 17-1AB Vibration Isolators – Remove And Install Lift set off of mounts Engine mounts – Test run unit	-	-	1.0	-	-	-

Group 26 – Generator Control

Contents

	Page
Aux Power Unit Wiring Harness	64
Remove And Install	64
Control Wiring Harness	64
Remove And Install	64
PCB Control Board	64
Replace	64
Start Solenoid	64
Replace	64
Stop Solenoid	65
Replace	65

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
26-1AF Aux Power Unit Wiring Harness – Remove And Install <i>Includes:</i> – Disconnect and connect Battery cables Wiring – Remove and install Wiring harness – Test run unit	-	-	1.0	-	-	-
26-1AG Control Wiring Harness – Remove And Install <i>Includes:</i> – Disconnect and connect Battery cables Wiring – Remove and install Wiring harness – Test run unit	-	-	2.0	-	-	-
26-3AB PCB Control Board – Replace <i>Includes:</i> – Disconnect and connect Battery cables Control board wiring – Remove and install Covers and brace Control board – Test run unit	-	-	0.5	-	-	-
26-3AC Start Solenoid – Replace <i>Includes:</i> – Disconnect and connect Battery cables Wiring – Remove and install	-	-	1.5	-	-	-

Standard Repair Times	Removed From Chassis	In-Chassis Service Accessibility Codes				
Procedure Number and Description	R	A	B	C	D	<u>Special</u> S
<p>(continued from previous page)</p> <p>26-3AC Start Solenoid – Replace Covers and brace Muffler clamp Exhaust tube Start solenoid – Test run for proper operation</p>	-	-	1.5	-	-	-
<p>26-3AM Stop Solenoid – Replace <i>Includes:</i> – Disconnect and connect Battery cables Solenoid wiring – Remove and install Stop solenoid – Adjust linkage – Test run for proper operation</p>	-	-	0.5	-	-	-

A

- Administrative Time, Open/Close Repair Order (Shop), 2
- Air Cleaner Element, Replace, 48
- Air Conditioning, Recover And Recharge Refrigerant, 58
- Air Conditioning Compressor, Remove And Install, 58
- Air Conditioning Compressor Belt, Remove And Install, 58
- Alternator, Remove And Install, 52
- Alternator Mtg Bracket 90 Amp, Remove And Install, 52
- Aux Power Unit Wiring Harness, Remove And Install, 64
- Auxiliary Power Unit, Remove And Install, 2

B

- Binary Switch, Remove And Install, 59
- Bypass Thermostat, Remove And Install, 42
- Bypass Thermostat Hose, Remove And Install, 42

C

- Camshaft, Replace, 14
- Camshaft, Fuel, Remove And Install, 14
- Condenser Radiator, Remove And Install, 59
- Connecting Rod, Remove And Install, 15
- Connecting Rod Bearings, Replace, 16
- Control Wiring Harness, Remove And Install, 64
- Coolant Thermostat, Remove And Install, 42
- Cooling System
 - Bleed Air, 43
 - Drain And Fill, 43
- Crankshaft, Remove And Install, 16
- Crankshaft Seal, Front, Replace, 18
- Crankshaft Seal, Rear, Replace (Horizontal), 18
- Cylinder Head, Remove And Install, 24
- Cylinder Head Gasket, Replace, 24

E

- Enclosure, Replace, 59
- Engine
 - Rebuild, 2
 - Remove And Install, 4
 - Replace, 4
- Engine Mounting Bracket, Front, Remove And Install, 60
- Exhaust Manifold, Replace, 50
- Exhaust Manifold Gaskets, Replace, 50
- Exhaust Tube, Remove And Install, 60

F

- Fan And Alternator Belt, Replace, 43
- Fan Cooling, Remove And Install (Guards Removed), 43
- Flywheel, Remove And Install, 56
- Fuel Filter, Spin-On Type, Replace, 36
- Fuel Pump, Electrical, Remove And Install, 34

G

- Gear Cover, Remove And Install, 19
- Gear Cover Gasket, Replace, 19
- Gear, Crankshaft, Remove And Install, 20
- Glow Plugs, Remove And Install, 52

I

- Injectors, Remove And Install, 36
- Intake Manifold, Remove And Install, 48

L

- Lower Radiator Hose, Replace, 44
- Lubricating Oil And Filter, Change, 38

M

- Muffler, Remove And Install, 60

O

- Oil Base, Remove And Install (Horizontal), 38

Oil By-Pass, Inspect And Reuse (Horizontal), 38
Oil Filter, Full Flow, Replace, 39
Oil Pickup Cup And Tube, Remove And Install (Hor), 39
Oil Pump, Remove And Install, 40

P

PCB Control Board, Replace, 64
Piston, Remove And Install, All, 20
Piston Rings, Replace, 21
Pump, Injection, Remove And Install, 34

R

Receiver Drier, Remove And Install, 61
Refrigeration Hoses, Remove And Install, 61

S

Start Solenoid, Replace, 64
Starter Motor, Remove And Install, 52
Stop Solenoid, Replace, 65

T

Troubleshoot
Battery Not Charging, 5
Continuous Sleeper Air Conditioning, 5
Continuous Sleeper Heat, 5
Coolant Loss (External), 6
Coolant Temp Above Normal, 6

Coolant Temp Below Normal, 6
Eng Starts But Will Not Keep Running, 7
Eng Will Not Crank Or Cranks Slowly, 7
Engine Cranks But Will Not Start, 8
Engine Run Indicator Not Working, 8
Engine Surges, 8
Engine Will Not Shut Off, 9
Excessive Exhaust Smoke Under Load, 9
Glow Plugs Will Not Operate, 9
Hour Meter Not Working, 10
No Sleeper Air Conditioning, 10
No Sleeper Heat, 11

Troubleshoot–Excess White Smoke At Start
Up (Cold), 11
Up (Warm), 11

U

Upper Radiator Hose, Replace, 44

V

Valve Guides, Replace, 25
Valve Tappets, Remove And Install, 32
Valves
Adjust, All, 30
Grind, 26
Vibration Isolators, Remove And Install, 61

W

Water Pump
Rebuild, 44
Remove And Install, 45

Request for SRT review

Distributor/Dealer Data		
Distributor/Dealer	Phone No.	
Address		
City	State	Zip Code
Country		

My experience has indicated the following repair procedures require more time:

Procedure Data			
SRT Number	Procedure Discription	Published time Hrs.	Suggested time Hrs.
Total Hours			

Generator Set Model
Transfer Switch Model
Repair Date
Technician Name

Describe how repair was performed:

Signature _____ Title _____

Mail to: Onan Corporation
 Service Department
 1400 73rd Avenue NE
 Minneapolis, MN 55432

Onan

Cummins Power Generation
1400 73rd Avenue N.E.
Minneapolis, MN 55432
763-574-5000
Fax: 763-528-7229

Cummins and Onan are registered trademarks of Cummins Inc.



Redistribution or publication of this document
by any means, is strictly prohibited.